

**Supplement**  
**For Unimode 200 Manual**  
**(Doc.#50101 Rev. C)**

Document 50398 Rev A 12/4/95 ECN 95-539

*The information in this supplement replaces page 91 of the Unimode 200 Manual, Document #50101 Rev. C, dated 3/9/95. The default password to enter the programming mode was shown to be '06321'. The correct default password is **'63210'**.*

# APPENDIX F: SCREEN OPTIONS FLOWCHART

