Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

REV 17b



1.51 CU. FT. ELECTRONIC SAFE



To ensure security of your safe, Union Safe Company does NOT provide replacement keys.

Visit our website at: http://www.harborfreight.com Email our technical support at: productsupport@harborfreight.com

62977

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright® 2015 by Harbor Freight Tools®. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein.

Tools required for assembly and service may not be included.

AWARNING

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

Specifications

External Dimensions	14" L x 13" W x 22-3/4" H
Batteries	4 C (included)
Weight	76 lb

IMPORTANT SAFETY INFORMATION

Installation Precautions

- Verify that installation surface has no hidden utility lines before drilling or driving screws.
- Wear ANSI-approved safety goggles during installation.
- 3. Mount securely before use.
- 4. Install only according to these instructions. Improper installation can create hazards.
- 5. Keep installation area clean and well lit.

- 6. Keep bystanders out of the area during installation.
- 7. Do not install when tired or when under the influence of alcohol, drugs or medication.
- 8. Use an assistant when moving safe.
- Only install Safe on a stable, level, clean and dry vertical or horizontal surface that is capable of supporting the weight of Safe and its contents.

Use Precautions

- Keep closed and locked whenever unattended. RISK OF CHILD ENTRAPMENT AND SUFFOCATION. Check inside before closing. Do not allow children to play with or near safe. Keep keys and codes away from children.
- 2. Keep clear of door when closing.
- Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
- 4. Use as intended only.
- Inspect before every use; do not use if parts are loose or damaged.
- Maintain product labels and nameplates.
 These carry important safety information.
 If unreadable or missing, contact
 Harbor Freight Tools for a replacement.

- Do not store Keys inside of the Safe.
 Place the keys in a secure location outside of the safe.
- WARNING: The brass components of this product contain lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. (California Health & Safety Code § 25249.5, et seq.)
- 9. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.
- 10. The Safe is not fireproof.


NOTE: Harbor Freight Tools is not responsible for the loss of any property stored within this safe due to theft, fire, or any other circumstance.





Read the entire Important Safety Information section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Functions

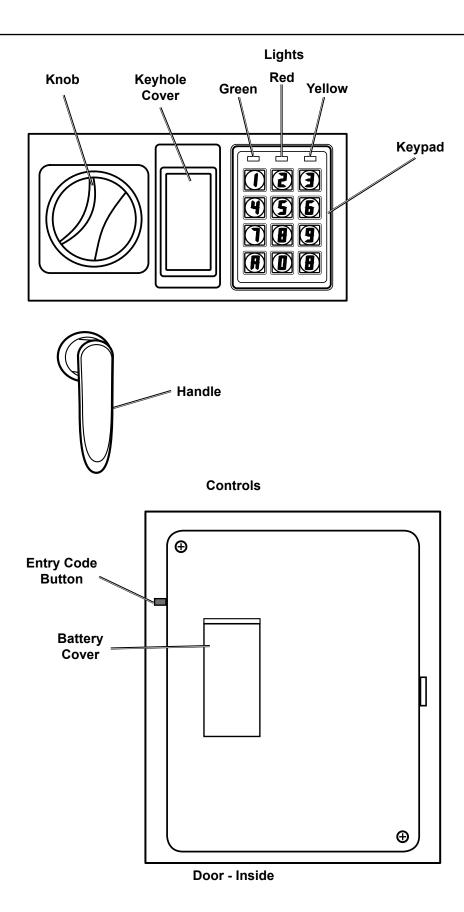

Note: Set up and test Safe before Installation.

Open Safe with Key

Note: Do not store Keys inside Safe. Opening with Key may be necessary when replacing batteries or if Entry Code is forgotten.

Store Keys in secure place outside of Safe.

1. Remove Keyhole Cover.

- 2. Insert Key and turn counterclockwise.
- 3. Turn Knob clockwise, then turn Handle clockwise and open Door.
- 4. Remove Key and replace Keyhole Cover.

Install/Replace Batteries

- 1. Remove Battery Cover.
- Install batteries (sold separately). Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
- Replace Battery Cover.
 Leave door open until Entry Code is set.

Note: Red light will illuminate when batteries need to be replaced.

Set/Reset Entry Code

Note: Leave door open while setting Entry Code. Write down Entry Code and store in secure place outside of safe.

- 1. Press and hold Entry Code Button until Safe beeps and Yellow light illuminates.
- 2. Within 15 seconds, enter an Entry Code up to 8 digits on Keypad, followed by either A or B.
 - a. Code has been accepted when Safe beeps.
 - b. Code has not been accepted if Yellow light turns off without beeping.

Lock Safe

AWARNING

Keep closed and locked whenever unattended. Check inside before closing. Do not allow children to play with or near safe. Keep keys and codes away from children. Close Door, turn Handle counterclockwise, then turn Knob counterclockwise.

Open Safe with Entry Code

- Enter Entry Code. Safe will beep twice and Green light will illuminate.
- 2. Turn Knob clockwise, then turn Handle clockwise and open Door.

Note: Safe will automatically lock if not opened within a few seconds of accepting Entry Code.

Note: Keypad will disable for 10 seconds if Entry Code is entered incorrectly three times in a row.

Installation



Read the entire Important Safety Information section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Safe can be mounted to floor, against wall or on wheels.

Installing to Floor or Against Wall

<u>WARNING!</u> Verify that installation surface has no hidden utility lines before drilling or driving screws.

- Only install Safe on a stable, level, clean and dry surface capable of supporting the weight of Safe and its contents.
- 2. Remove liner from Safe.
- Locate mounting holes on bottom of Safe for floor installation.

- 4. Locate mounting holes on back of Safe for installation against wall.
- 5. Using the Safe as a template, mark locations of mounting holes on mounting surface.
- Secure Safe with fasteners appropriate for the mounting surface, which are rated to support the weight of the Safe and its contents.
- 7. Replace liner.

Installing Wheels

- 1. Empty, close and lock Safe.
- 2. Tip Safe on its side.
- 3. Install four Wheels using Axles, Washers, and Cotter Pins according to **Figure A.**
- 4. Return Safe to upright position.
- 5. Move empty Safe to desired location.

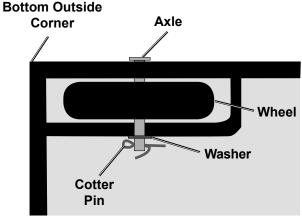


Figure A



Maintenance

- Protect Safe from moist or wet conditions.
 Moisture may cause electronic damage in the keypad or corrosion of the steel.
- 2. Occasionally wipe the safe and keypad clean with a soft dry cloth or brush.
- 3. Do not get any oil or other liquids on or near the electronic mechanism.
- If key lock sticks, use graphite lubricant, such as pencil lead. Rub pencil lead over Key, then insert Key and turn back and forth. Repeat until lock moves freely.

Record Serial Number Here:	

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available for this item.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

REV 16I



1.51 CU. FT. ELECTRONIC SAFE



To ensure security of your safe, Union Safe Company does NOT provide replacement keys.

Visit our website at: http://www.harborfreight.com Email our technical support at: productsupport@harborfreight.com

62977

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright® 2015 by Harbor Freight Tools®. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.

Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein.

Tools required for assembly and service may not be included.

AWARNING

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

Specifications

External Dimensions	14" L x 13" W x 22-3/4" H
Batteries	4 C (included)
Weight	76 lb

IMPORTANT SAFETY INFORMATION

Installation Precautions

- Verify that installation surface has no hidden utility lines before drilling or driving screws.
- Wear ANSI-approved safety goggles during installation.
- 3. Mount securely before use.
- 4. Install only according to these instructions. Improper installation can create hazards.
- 5. Keep installation area clean and well lit.

- 6. Keep bystanders out of the area during installation.
- 7. Do not install when tired or when under the influence of alcohol, drugs or medication.
- 8. Use an assistant when moving safe.
- Only install Safe on a stable, level, clean and dry vertical or horizontal surface that is capable of supporting the weight of Safe and its contents.

Use Precautions

- Keep closed and locked whenever unattended. RISK OF CHILD ENTRAPMENT AND SUFFOCATION. Check inside before closing. Do not allow children to play with or near safe. Keep keys and codes away from children.
- 2. Keep clear of door when closing.
- Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
- 4. Use as intended only.
- Inspect before every use; do not use if parts are loose or damaged.
- Maintain product labels and nameplates.
 These carry important safety information.
 If unreadable or missing, contact
 Harbor Freight Tools for a replacement.

- Do not store Keys inside of the Safe.
 Place the keys in a secure location outside of the safe.
- WARNING: The brass components of this product contain lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. (California Health & Safety Code § 25249.5, et seq.)
- 9. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.
- 10. The Safe is not fireproof.


NOTE: Harbor Freight Tools is not responsible for the loss of any property stored within this safe due to theft, fire, or any other circumstance.





Read the entire Important Safety Information section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Functions

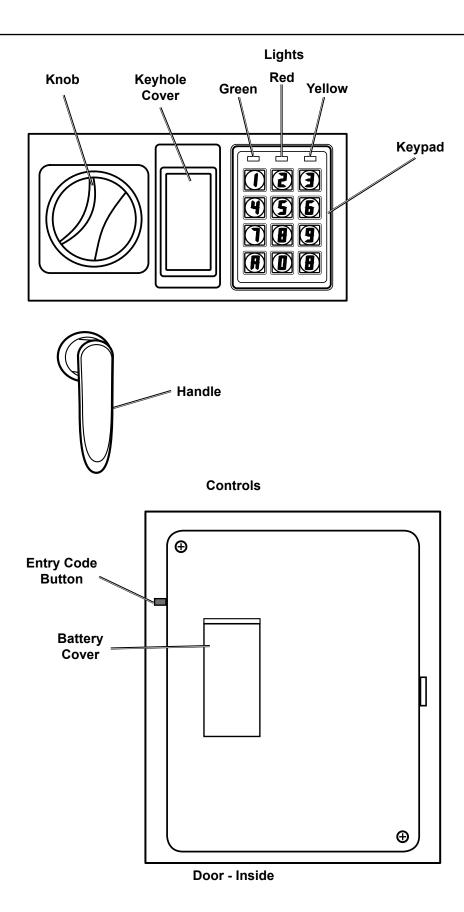

Note: Set up and test Safe before Installation.

Open Safe with Key

Note: Do not store Keys inside Safe. Opening with Key may be necessary when replacing batteries or if Entry Code is forgotten.

Store Keys in secure place outside of Safe.

1. Remove Keyhole Cover.

- 2. Insert Key and turn counterclockwise.
- 3. Turn Knob clockwise, then turn Handle clockwise and open Door.
- 4. Remove Key and replace Keyhole Cover.

Install/Replace Batteries

- 1. Remove Battery Cover.
- Install batteries (sold separately). Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
- 3. Replace Battery Cover.

 Leave door open until Entry Code is set.

Note: Red light will illuminate when batteries need to be replaced.

Set/Reset Entry Code

Note: Leave door open while setting Entry Code. Write down Entry Code and store in secure place outside of safe.

- 1. Press and hold Entry Code Button until Safe beeps and Yellow light illuminates.
- 2. Within 15 seconds, enter an Entry Code up to 8 digits on Keypad, followed by either A or B.
 - a. Code has been accepted when Safe beeps.
 - b. Code has not been accepted if Yellow light turns off without beeping.

Lock Safe

AWARNING

Keep closed and locked whenever unattended. Check inside before closing. Do not allow children to play with or near safe. Keep keys and codes away from children. Close Door, turn Handle counterclockwise, then turn Knob counterclockwise.

Open Safe with Entry Code

- 1. Enter Entry Code (Master or User). Safe will beep twice and Green light will illuminate.
- Turn Knob clockwise, then turn Handle clockwise and open Door.

Note: Safe will automatically lock if not opened within a few seconds of accepting Entry Code.

Note: Keypad will disable for 10 seconds if Entry Code is entered incorrectly three times in a row.

Installation



Read the entire Important Safety Information section at the beginning of this document including all text under subheadings therein before set up or use of this product.

Safe can be mounted to floor, against wall or on wheels.

Installing to Floor or Against Wall

<u>WARNING!</u> Verify that installation surface has no hidden utility lines before drilling or driving screws.

- Only install Safe on a stable, level, clean and dry surface capable of supporting the weight of Safe and its contents.
- 2. Remove liner from Safe.
- Locate mounting holes on bottom of Safe for floor installation.

- 4. Locate mounting holes on back of Safe for installation against wall.
- 5. Using the Safe as a template, mark locations of mounting holes on mounting surface.
- Secure Safe with fasteners appropriate for the mounting surface, which are rated to support the weight of the Safe and its contents.
- 7. Replace liner.

Installing Wheels

- 1. Empty, close and lock Safe.
- 2. Tip Safe on its side.
- 3. Install four Wheels using Axles, Washers, and Cotter Pins according to **Figure A.**
- 4. Return Safe to upright position.
- 5. Move empty Safe to desired location.

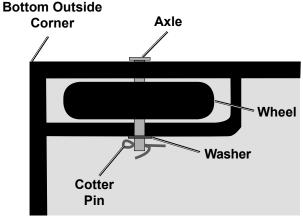


Figure A



Maintenance

- Protect Safe from moist or wet conditions.
 Moisture may cause electronic damage in the keypad or corrosion of the steel.
- 2. Occasionally wipe the safe and keypad clean with a soft dry cloth or brush.
- 3. Do not get any oil or other liquids on or near the electronic mechanism.
- If key lock sticks, use graphite lubricant, such as pencil lead. Rub pencil lead over Key, then insert Key and turn back and forth. Repeat until lock moves freely.

Record Serial Number Here:	

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available for this item.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

