

Owner's Manual & Safety Instructions

Save This Manual Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

REV 17a

UNION[™]
SAFE COMPANY

ELECTRONIC HANDGUN SAFE



⚠ DANGER

To prevent serious injury and DEATH:

1. Leaving gun unsecured MAY RESULT IN CRIMINAL CHARGES.
2. Even when stored in gun safe, use gun-lock to disable gun.
3. Unload gun completely, including chamber, before storing.
4. Separate gun safe keys from other keys.
5. Lock up guns and ammunition separately out of children's reach and out of sight.

Batteries sold separately.
To ensure security of your safe, Bunker Hill Security does NOT provide replacement keys. Gun, currency, and passport not included.

Visit our website at: <http://www.harborfreight.com>
Email our technical support at: productsupport@harborfreight.com

62984

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.


Copyright© 2015 by Harbor Freight Tools®. All rights reserved.

No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

⚠ WARNING

**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**

Specifications

Overall dimensions	11" L x 8-1/8" W x 5-1/2" H
External Power Socket	3.5mm, 6VDC
Factory Code	

This gun safe meets the California DOJ requirements.

Important Safety Information

Installation Precautions

1. Verify that installation surface has no hidden utility lines before drilling or driving screws.
2. Wear ANSI-approved safety goggles during installation.
3. Install only according to these instructions. Improper installation can create hazards.
4. Keep installation area clean and well lit.
5. Keep bystanders out of the area during installation.
6. Do not install when tired or when under the influence of alcohol, drugs, or medication.
7. Place the Safe on correct surface. Only use this Safe on a stable, level, clean and dry surface that is capable of sustaining the load.

Use Precautions

1. **Unload gun completely, including chamber, before storing.**
 2. **Lock up guns and ammunition separately out of children's reach and out of sight.**
 3. **Even when stored in gun safe, use gun-lock to disable gun.**
 4. **Separate gun safe keys from other keys.**
 5. **Leaving gun unsecured may result in criminal charges.**
 6. **Do not allow children to play with or near safe. Keep keys and codes away from children.**
 7. Keep clear of Door when closing.
 8. Position batteries in proper polarity and do not install batteries of different types, charge levels, or capacities together.
 9. Use as intended only.
 10. Inspect before every use; do not use if parts are loose or damaged.
 11. Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
 12. Do not store Keys inside of the Safe. **Place the emergency keys in a location outside of the safe making sure they are in a secure location that you can find.**
 13. **WARNING:** The brass components of this product contain lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. (California Health & Safety Code § 25249.5, *et seq.*)
 14. The shelf or wall the Safe is placed on must support the weight of the Safe and its load.
 15. The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.
 16. The Safe is neither water nor fire proof.
- NOTE:** Harbor Freight Tools is not responsible for the loss or misuse of any property stored within this safe due to theft, fire, or any other circumstance.

Installation



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

Mounting

1. The mounting location must be able to support the weight of both the safe and its contents.
 - a. Screw through the holes in the bottom of the Safe and into the drawer bottom.
 - b. If the screws included with the Safe are too long, replace them with the appropriate length wood screws (not supplied) for the intended mounting surface.
2. Remove felt pad from inside of safe.
3. Using the holes in the bottom of the Safe as a template, lay the Safe in the desired location and drill all four pilot holes.
4. Once the pilot holes have been drilled, secure the Safe with the supplied 1-1/2" wood screws.
5. Place the supplied felt pad in the Safe so as to cover the Safe bottom and mounting screws.

Batteries

1. Remove the cover from the battery compartment, found on the ceiling of the safe.
2. Insert four AA batteries, taking note of the proper polarity.
3. Replace the battery cover.
4. When low battery is indicated, change the batteries.

Note: Low battery is indicated by the safe beeping four times whenever the door is opened, and by the indicator light flashing red.



Functions

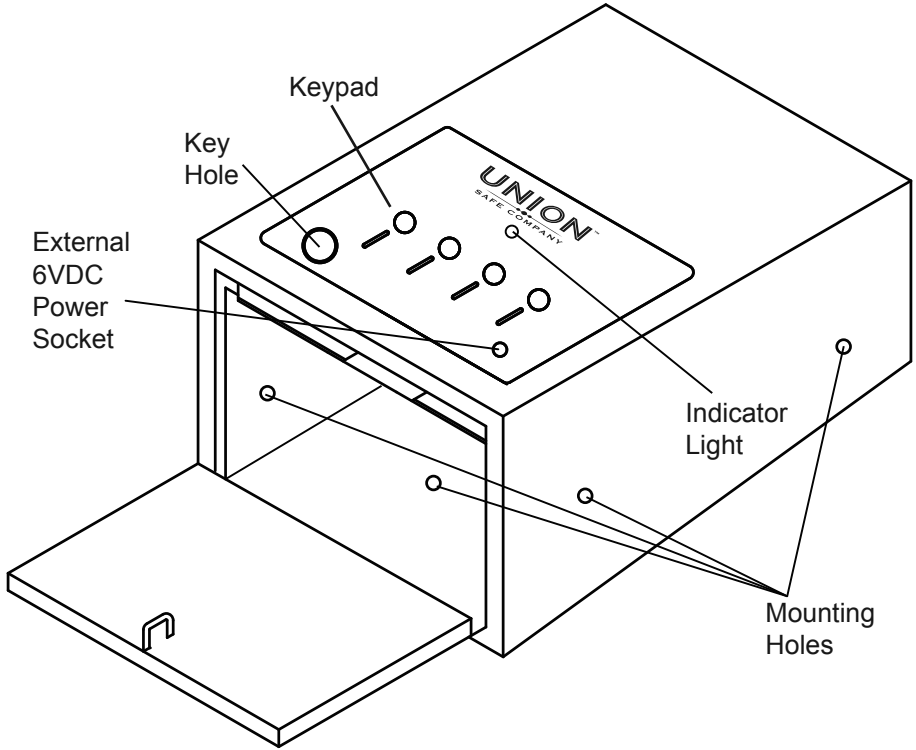


Figure A

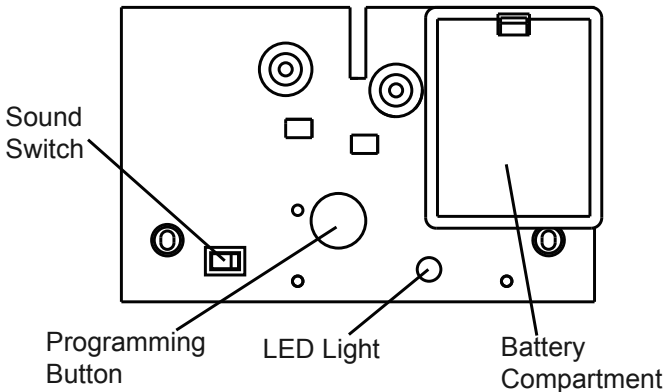


Figure B: Underside of Key Pad (inside safe)

Operation



Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

⚠ DANGER

To prevent serious injury and DEATH from accidental firearm discharge:

1. Unload gun completely, including chamber, before storing.
2. Lock up guns and ammunition separately out of children's reach and out of sight.
3. Even when stored in gun safe, use gun-lock to disable gun.
4. Separate gun safe keys from other keys.
5. Leaving gun unsecured may result in criminal charges.

Open Safe Using Emergency Keys

1. Insert the Key into the Key Hole (see Figure A), and turn.
 2. The door will fall open.
 3. Close the door by pushing up and in, until a click is heard.
- NOTICE:** Do not store your keys in the safe.

Set the Combination Code

Note: The safe will accept only 5-digit codes.

1. Open the door using the key or factory code (●●●●●).
2. Press the programming button (see Figure B).
3. Enter the new 5-digit code.
4. When the safe has accepted the new code, two beeps will be heard and the indicator light (See Figure A) will flash twice.

Note: If no feedback is given, the code has not been accepted.

Entering the Wrong Combination

1. If the wrong combination is entered, the safe will beep three times.
2. If the wrong combination is entered 3 consecutive times, the safe will go into Lock-Down Mode for 45 seconds.
3. After 45 seconds, the safe will resume normal operation.

Note: During Lock-Down Mode, the safe will beep, the LED light (See Figure B) will flash, and the keypad (see Figure A) will be disabled. The safe may still be opened with the key override.

Light and Sound

1. The LED interior light will automatically illuminate for 10 seconds when the door is opened with the combination code. It will then shut off.
2. To turn the light back on, re-enter the combination code.
3. To turn the audible beeps on or off, toggle the Sound Switch. See Figure B.

Maintenance and Servicing



Procedures not specifically explained in this manual must be performed only by a qualified technician.

1. **BEFORE EACH USE**, inspect the general condition of the Safe. Check for loose screws, misalignment or binding of moving parts, cracked or broken parts, damaged electrical wiring, and any other condition that may affect its safe operation.
2. **PERIODICALLY** clean external surfaces of the Safe with a clean cloth.
3. To extend battery life, the safe may be plugged into a power outlet through an external 6VDC power adaptor with a standard 3.5mm tip (not included). To do so, use the external 6VDC power socket (Figure A).

Record Serial Number Here:

Note: If product has no serial number, record month and year of purchase instead.

Note: Replacement parts are not available for this item.

Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

