

SILICONE | USB Keyboard with Touchpad



Introduction

Thank you for choosing Xcellon.

Congratulations on the purchase of your new Xcellon KSW-10 USB Silicone Keyboard. This keyboard features a water resistant and washable design, with an integrated touch pad that replaces a standard two-button mouse. The keyboard also boasts 12 media keys that launch your web browser, email client, and control the primary functions of your media player.

Connecting the Keyboard

To connect your keyboard, plug the USB cable into an available USB port on your computer, and wait for your computer to recognize the device – it may take a few seconds. To disconnect your keyboard, unplug it from the USB port.

Media Keys

The Media keys are a shortcut to your default web browser, Microsoft Outlook, and Windows Media Player; they also control basic playback of Windows Media Player. To use the media keys, press Fn + corresponding F key.

Combination	Function	Notes
Fn + F1	Launch Windows Media Player	
Fn + F2	Volume up	Works only in Windows Media Player
Fn + F3	Volume down	Works only in Windows Media Player
Fn + F4	Mute volume	Works only in Windows Media Player
Fn + F5	Previous track	Works only in Windows Media Player
Fn + F6	Next track	Works only in Windows Media Player
Fn + F7	Play/pause	Works only in Windows Media Player
Fn + F8	Stop	Works only in Windows Media Player
Fn + F9	Launch default web browser	<ul style="list-style-type: none">• Launches the home page in a new tab (Firefox) or window (IE, Chrome, and Safari) or a new blank tab (Opera) when the default browser is already open in the background• Launches the home page in the current tab when any web browser is in the foreground
Fn + F10	Launch Microsoft Outlook	Launches Opera Mail when Opera browser is in the foreground
Fn + F11	Launch My Computer	
Fn + F12	Toggle favorites tab/refresh page (see notes)	<ul style="list-style-type: none">• Firefox and Internet Explorer: toggles the favorites tab• Safari: refreshes the page• Not compatible with Chrome or Opera

Caps, Numeric, and Scroll Lock

To toggle the caps, numeric, and scroll lock functions, press the Caps Lock, Num Lock, or Scroll Lock keys. The caps lock function sets your keyboard to type in all uppercase letters. Numeric lock engages the numeric keypad (see Numeric Keypad chapter). Scroll lock lets you use the directional arrow keys to scroll around the screen. When caps, numeric, or scroll lock are engaged, the corresponding red light on the right side of the keyboard will glow.

Note: not all programs support Scroll Lock.

Numeric Keypad

Most keys on the numeric keypad serve two functions.

Combination	Function	Notes
Shift + 0	Insert	
Shift + 1	End	Same function when numeric lock is off
Shift + 2	Down directional arrow	Same function when numeric lock is off
Shift + 3	Page down	Same function when numeric lock is off
Shift + 4	Left directional arrow	Same function when numeric lock is off
Shift + 6	Right directional arrow	Same function when numeric lock is off
Shift + 7	Home	Same function when numeric lock is off
Shift + 8	Up directional arrow	Same function when numeric lock is off
Shift + 9	Page up	Same function when numeric lock is off
Shift + .	Delete	Not backspace

Touchpad

Slide your finger around the touchpad to move the onscreen cursor. Double-tap your finger to double-click like on a conventional mouse. The left and right buttons below the touchpad function correspond to the left and right mouse buttons.

System Requirements

- Windows 7, Vista, XP, 2000, ME, 98
- One (1) available USB port

WARRANTY: Xcellon provides a limited warranty that this product is free from defects in materials and workmanship to original purchaser under normal use for a period of one (1) year from the original purchase date. Xcellon's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, XCELLON MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. To obtain a replacement during the time of this warranty please return the defective item with proof of purchase along with an RMA number to the place of purchase. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



www.Xcellongear.com

Copyright © 2012 Gradus Group