

Aspire one Series

Application Manual

Copyright © 2008. Acer Incorporated.
All Rights Reserved.

Aspire one Series Quick Guide
Original Issue: 06/2008

This company makes no representations or warranties, either express or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose. Any liability for errors (such as typos or factual errors, etc.) contained in this publication is excluded.

Changes may be made periodically to the information in this publication without obligation to notify any person of such revisions or changes. Such changes will be incorporated in new editions of this manual or supplementary documents and publications. This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the model number, serial number, purchase date and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your computer. All correspondence concerning your unit should include the serial number, model number and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronically, mechanically, by photocopy, recording or otherwise, without the prior written permission of Acer Incorporated.

Aspire one Series Notebook PC

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

Acer and the Acer logo are registered trademarks of Acer Incorporated. Other companies' product names or trademarks are used herein for identification purposes only and belong to their respective companies.

First things first

We would like to thank you for making an Acer notebook your choice for meeting your mobile computing needs.

Your guides

To help you use your Acer notebook, we have designed a set of guides*:

The Application Manual introduces you to the basic features and functions of your new computer. For more on how your computer can help you to be more productive, please refer to the AcerSystem User Guide. This guide contains detailed information on such subjects as system utilities, data recovery, expansion options and troubleshooting. In addition it contains warranty information and the general regulations and safety notices for your notebook. It is available in Portable Document Format (PDF) and comes preloaded on your notebook. Information for your safety and comfort.\



Note: Viewing the file requires Adobe Reader. If Adobe Reader is not installed on your computer, clicking on AcerSystem User Guide will run the Adobe Reader setup program first. Follow the instructions on the screen to complete the installation. For instructions on how to use Adobe Reader, access the Help and Support menu.

Please understand that due to its nature, the Quick Guide as well as the Application Manual will occasionally refer to functions or features which are only contained in certain models of the series, but not necessarily in the model you purchased. Such instances are marked in the text with language such as "only for certain models".



*** IMPORTANT NOTICE:** Please note that the guides mentioned herein, whether in printed or electronic form, are for your reference only and except as provided in the specific warranty information contained in the AcerSystem User Guide nothing contained in these guides shall constitute a representation or warranty by Acer with regard to the product you purchased. Acer expressly disclaims any liability for errors contained in the guides.

Safety instructions

Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions marked on the product.

Turning the product off before cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

CAUTION for plug as disconnecting device

Observe the following guidelines when connecting and disconnecting power to the power supply unit:

Install the power supply unit before connecting the power cord to the AC power outlet.

Unplug the power cord before removing the power supply unit from the computer.

If the system has multiple sources of power, disconnect power from the system by unplugging all power cords from the power supplies.

CAUTION for Accessibility

Be sure that the power outlet you plug the power cord into is easily accessible and located as close to the equipment operator as possible. When you need to disconnect power to the equipment, be sure to unplug the power cord from the electrical outlet.

CAUTION for Listening

To protect your hearing, follow these instructions.

- Increase the volume gradually until you can hear clearly and comfortably.
- Do not increase the volume level after your ears have adjusted.
- Do not listen to music at high volumes for extended periods.
- Do not increase the volume to block out noisy surroundings.
- Decrease the volume if you can't hear people speaking near you.

Warnings

- Do not use this product near water.
- Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged.
- Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.

- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind onto or into the product.
- To avoid damage of internal components and to prevent battery leakage, do not place the product on a vibrating surface.
- Never use it under sporting, exercising, or any vibrating environment which will probably cause unexpected short current or damage rotor devices, HDD, Optical drive, and even exposure risk from lithium battery pack.

Using electrical power

- This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- Do not allow anything to rest on the power cord. Do not locate this product where people will walk on the cord.
- If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension cord ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.
- Do not overload a power outlet, strip or receptacle by plugging in too many devices. The overall system load must not exceed 80% of the branch circuit rating. If power strips are used, the load should not exceed 80% of the power strip's input rating.
- This product's AC adapter is equipped with a three-wire grounded plug. The plug only fits in a grounded power outlet. Make sure the power outlet is properly grounded before inserting the AC adapter plug. Do not insert the plug into a non-grounded power outlet. Contact your electrician for details.



.....

Warning! The grounding pin is a safety feature. Using a power outlet that is not properly grounded may result in electric shock and/or injury.



.....

Note: The grounding pin also provides good protection from unexpected noise produced by other nearby electrical devices that may interfere with the performance of this product.

- Use the product only with the supplied power supply cord set. If you need to replace the power cord set, make sure that the new power cord meets the following requirements: detachable type, UL listed/CSA certified, type SPT-2, rated 7 A 125 V minimum, VDE approved or its equivalent, 4.6 meters (15 feet) maximum length.

Product servicing

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.

Unplug this product from the wall outlet and refer servicing to qualified service personnel when:

- the power cord or plug is damaged, cut or frayed
- liquid was spilled into the product
- the product was exposed to rain or water
- the product has been dropped or the case has been damaged
- the product exhibits a distinct change in performance, indicating a need for service
- the product does not operate normally after following the operating instructions



.....

Note: Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.

Guidelines for safe battery usage

This notebook uses a Lithium-ion battery. Do not use it in a humid, wet or corrosive environment. Do not put, store or leave your product in or near a heat source, in a high temperature location, in strong direct sunlight, in a microwave oven or in a pressurized container, and do not expose it to temperatures over 60°C (140°F). Failure to follow these guidelines may cause the battery to leak acid, become hot, explode or ignite and cause injury and/or damage. Do not pierce, open or disassemble the battery. If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately. For safety reasons, and to prolong the lifetime of the battery, charging will not occur at temperatures below 0°C (32°F) or above 40°C (104°F).

The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the operation time becomes noticeably shorter than normal, buy a new battery. Use only Acer approved batteries, and recharge your battery only with Acer approved chargers designated for this device.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

The capacity and lifetime of the battery will be reduced if the battery is left in hot or cold places, such as in a closed car in summer or winter. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is especially limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Wireless devices may be susceptible to interference from the battery, which could affect performance.

Potentially explosive environments

Switch off your device in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the notebook near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders. Do not switch the notebook on when wireless phone use is prohibited or when it may cause interference or danger.

Replacing the battery pack

The notebook uses lithium batteries. Replace the battery with the same type as that which came bundled with your product. Use of another battery may present a risk of fire or explosion.



.....

Warning! Batteries may explode if not handled properly. Do not disassemble or dispose of them in fire. Keep them away from children. Follow local regulations when disposing of used batteries.

Telephone line safety

- Disconnect all telephone lines from the equipment when not in use and/or before servicing.
- To avoid the remote risk of electric shock from lightning, do not connect the telephone line to this equipment during lightning or thunderstorms.



.....

Warning! For safety reasons, do not use non-compliant parts when adding or changing components. Consult your reseller for purchase options.

Additional safety information

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

Operating environment



Warning! For safety reasons, turn off all wireless or radio transmitting devices when using your laptop under the following conditions. These devices may include, but are not limited to: wireless lan (WLAN), Bluetooth and/or 3G.

Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used normally, and it and its antenna are positioned at least 1.5 centimeters (5/8 inches) away from your body (refer to the figure below). It should not contain metal and you should position the device the above-stated distance from your body. To successfully transmit data files or messages, this device requires a good quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure that the above separation distance instructions are followed until the transmission is completed. Parts of the device are magnetic. Metallic materials may be attracted to the device, and persons with hearing aids should not hold the device to the ear with the hearing aid. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF transmissions..

Pacemakers. Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between wireless devices and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should do the following:

- Always keep the device more than 15.3 centimeters (6 inches) from the pacemaker
- Not carry the device near your pacemaker when the device is switched o. If you suspect interference, switch off your device, and move it.

Hearing aids. Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer, or its representative, of your vehicle or any equipment that has been added. Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed, and the air bag inflates, serious injury could result. Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust or metal powders.

Emergency calls

Warning: You cannot make emergency calls through this device. To make an emergency call you shall dial out through your mobile phone or other telephone call system.

Disposal instructions

Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle. For more information on the Waste from Electrical and

Electronics Equipment (WEEE) regulations, visit <http://global.acer.com/about/sustainability.htm>



Mercury advisory

For projectors or electronic products containing an LCD/CRT monitor or display: Lamp(s) inside this product contain mercury and must be recycled or disposed of according to local, state or federal laws. For more information, contact the Electronic Industries Alliance at www.eiae.org. For lamp-specific disposal information, check www.lamprecycle.org.





ENERGY STAR

ENERGY STAR is a government program (public/private partnership) that gives people the power to protect the environment in a cost effective way and without sacrificing quality or product features. Products that earn the ENERGY STAR prevent greenhouse gas emissions by meeting strict energy efficiency guidelines set by the US Environmental Protection Agency (EPA) and the US Department of Energy (DOE). In the average home, 75% of all electricity used to power home electronics is consumed while the products are turned off. ENERGY STAR qualified home electronic products in the off position use up to 50% less energy than conventional equipment. More information refers to <http://www.energystar.gov> and <http://www.energystar.gov/powermanagement>.



Note: The statement above is applicable only to Acer notebooks with an ENERGY STAR sticker located in the bottom right-hand corner of the palm rest.

As an ENERGY STAR partner, Acer Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

This product has been shipped enabled for power management:

- Activate display' Sleep mode within 15 minutes of user inactivity.
- Activate computer's Sleep mode within 30 minutes of user inactivity.
- Wake the computer from Sleep mode by pushing power button.

Tips and information for comfortable use

Computer users may complain of eyestrain and headaches after prolonged use. Users are also at risk of physical injury after long hours of working in front of a computer. Long work periods, bad posture, poor work habits, stress, inadequate working conditions, personal health and other factors greatly increase the risk of physical injury.

Incorrect computer usage may lead to carpal tunnel syndrome, tendonitis, tenosynovitis or other musculoskeletal disorders. The following symptoms may appear in the hands, wrists, arms, shoulders, neck or back:

- numbness, or a burning or tingling sensation
- aching, soreness or tenderness
- pain, swelling or throbbing
- stiffness or tightness
- coldness or weakness

If you have these symptoms, or any other recurring or persistent discomfort and/or pain related to computer use, consult a physician immediately and inform your company's health and safety department.

The following section provides tips for more comfortable computer use.

Finding your comfort zone

Find your comfort zone by adjusting the viewing angle of the monitor, using a footrest, or raising your sitting height to achieve maximum comfort. Observe the following tips:

- refrain from staying too long in one fixed posture
- avoid slouching forward and/or leaning backward
- stand up and walk around regularly to remove the strain on your leg muscles
- take short rests to relax your neck and shoulders
- avoid tensing your muscles or shrugging your shoulders
- install the external display, keyboard and mouse properly and within comfortable reach
- if you view your monitor more than your documents, place the display at the center of your desk to minimize neck strain

Taking care of your vision

Long viewing hours, wearing incorrect glasses or contact lenses, glare, excessive room lighting, poorly focused screens, very small typefaces and low-contrast displays could stress your eyes. The following sections provide suggestions on how to reduce eyestrain.

Eyes

- Rest your eyes frequently.
- Give your eyes regular breaks by looking away from the monitor and focusing on a distant point.
- Blink frequently to keep your eyes from drying out.

Display

- Keep your display clean.
- Keep your head at a higher level than the top edge of the display so your eyes point downward when looking at the middle of the display.
- Adjust the display brightness and/or contrast to a comfortable level for enhanced text readability and graphics clarity.
- Eliminate glare and reflections by:
 - placing your display in such a way that the side faces the window or any light source
 - minimizing room light by using drapes, shades or blinds
 - using a task light
 - changing the display's viewing angle
 - using a glare-reduction filter
 - using a display visor, such as a piece of cardboard extended from the display's top front edge
- Avoid adjusting your display to an awkward viewing angle.
- Avoid looking at bright light sources, such as open windows, for extended periods of time.

Developing good work habits

Develop the following work habits to make your computer use more relaxing and productive:

- Take short breaks regularly and often.
- Perform some stretching exercises.
- Breathe fresh air as often as possible.
- Exercise regularly and maintain a healthy body.



.....
Warning! We do not recommend using the computer on a couch or bed. If this is unavoidable, work for only short periods, take breaks regularly, and do some stretching exercises.



.....
Note: For more information, please refer to "**Regulations and safety notices**" on page 56 in the **Application Manual**.

First things first	iii
Your guides	iii
Safety instructions	iv
Additional safety information	viii
Operating environment	viii
Medical devices	viii
Vehicles	ix
Potentially explosive environments	ix
Emergency calls	ix
Disposal instructions	ix
Tips and information for comfortable use	xi
Get to know your system	1
Get to know the applications	2
Connect	2
Work	2
Fun	3
Files	3
Settings	4
For system security	5
Setting your system password	5
Using passwords for BIOS	6
For advanced wireless connection setting	7
Acer Communication Suite	11
Aspire oneMail	11
Messenger	37
Using the keyboard	50
Lock keys and embedded numeric keypad	50
Hotkeys	51
Special keys	52
Frequently asked questions	53
Requesting service	55
Regulations and safety notices	56
FCC notice	56
Laser compliance statement	57
LCD pixel statement	58
Radio device regulatory notice	58
General	58
European Union (EU)	58
The FCC RF safety requirement	59
Canada — Low-power license-exempt radio communication devices (RSS-210)	60
LCD panel ergonomic specifications	61

Contents

Get to know your system

The home screen makes it easy for you to access frequently used functions and manage your new Acer system. It provides access to the following utilities:



Note: The following content is for general reference only. Actual product specifications may vary.

- 1 **Connect:** Browse the Internet, engage in video chats, send/receive email and share photos anytime, anywhere.
- 2 **Work:** Enhance your mobile productivity with useful professional tools.
- 3 **Fun:** Enjoy games and multimedia while on the move.
- 4 **Files:** Organize and access your data and multimedia files easily
- 5 **Settings:** Adjust system settings for optimum performance and set passwords to protect your files.

 


For more information, click **Help**.

Get to know the applications


Please refer to each application's help file for detailed information and instructions on use.

Connect

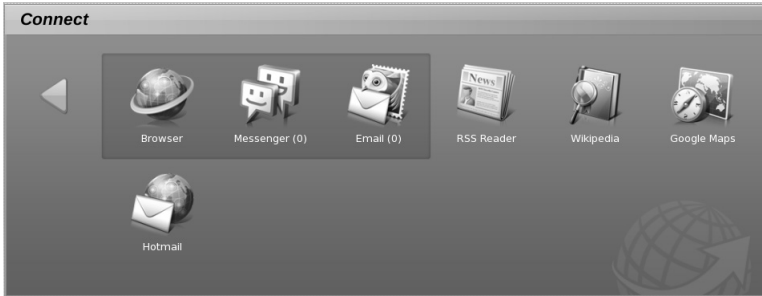

- **Browser:** Surf the Internet for information and entertainment.
- **Messenger:** Chat with friends and family who use today's popular chat programs.
- **Email:** Stay in touch via email from this easy-to-use email client.
- **RSS Reader:** Stay up to date with your favourite blogs and news sources.
- **Wikipedia:** Learn from the free, online Wikipedia encyclopedia.
- **Google Maps:** Use Google Maps for easy navigation.
- **Hotmail:** Launch Hotmail.

 Work

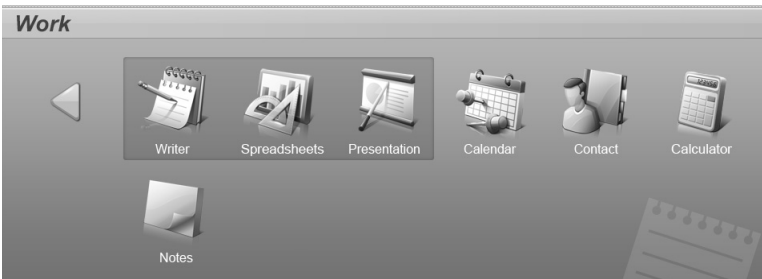

- **Writer:** Create and edit text-based documents.
- **Spreadsheets:** Calculate numbers and analyze data in spreadsheets.
- **Presentations:** Prepare and edit presentations.
- **Calendar:** Manage your schedule and keep track of your appointments.

 
- **Contacts:** Arrange your contacts for easy reference.
- **Calculator:** Perform basic calculations.
- **Notes:** Write quick, convenient little reminders.

Fun



- **Media Master:** Enjoy audio-visual files and entertainment.
- **Photo Management:** View and manage your photos.
- **Games:** Play games to relax.
- **Webcam:** Capture photos and videos with ease.
- **Paint:** Create or alter picture files.

Files

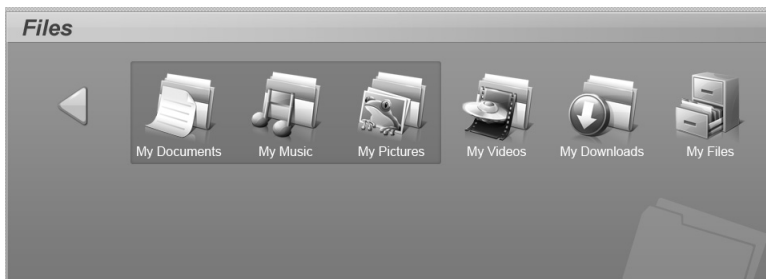

- **My Documents:** Find and manage your documents.
- **My Music:** Find and manage your music.
- **My Pictures:** Find and manage your images.
- **My Videos:** Find and manage your videos.
- **My Downloads:** Find and manage your downloaded files.
- **My Files:** Find and manage your files. Insert an SD card into the Storage Expansion Slot to increase your available storage.

Settings



- **Display:** Adjust resolution, external display and screensaver settings for the right look.
- **Power Center:** Adjust power settings to save energy.
- **Network Center:** Connect to the Internet via LAN or wireless.
- **Audio:** Adjust volume settings for the best sound.
- **System:** View system device information and settings.
- **Date & Time:** Set your computer's date and time.
- **Touchpad:** Adjust touchpad settings.
- **Live Update:** Add or remove programs from your computer.
- **Printer:** Connect to a USB printer to print your documents or photos.
- **Input Language:** Set up alternative input languages.
- **User Password:** Set up or change your password.

For system security

You must set your password which is also known as system password. You may also set your BIOS password to enhance the system protection.

There are 3 levels of password protection you may chose to enable or disable:


- Screen saver
- Sleep mode
- System power on

Setting your system password

- 1 Click the **Settings** tab.



- 2 Click **User Password**.

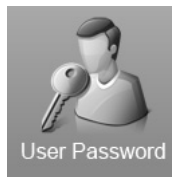

- 3 You will see this dialog. Click on **Change Password**.



- 4 In the Query dialog box, type in and confirm your password in the appropriate boxes. Your password should have a minimum of 4 and a maximum of 12 characters.



- 5 Click **OK** to set the password.

Using passwords for BIOS

Passwords protect your computer from unauthorized access. Setting these passwords creates several different levels of protection for your computer and data:

- Supervisor Password prevents unauthorized entry into the BIOS utility. Once set, you must enter this password to gain access to the BIOS utility.
- User Password secures your computer against unauthorized use. Combine the use of this password with password checkpoints on boot-up and resume from Hibernation for maximum security.
- Password on Boot secures your computer against unauthorized use. Combine the use of this password with password checkpoints on boot-up and resume from Hibernation for maximum security.



Important! Do not forget your Supervisor Password! If you forget your password, please get in touch with your dealer or an authorized service center.

Entering passwords


When a password is set, a password prompt appears in the center of the display screen.


- When the Supervisor Password is set, a prompt appears when you press <F2> to enter the BIOS utility at boot-up.
- Type the Supervisor Password and press <Enter> to access the BIOS utility. If you enter the password incorrectly, a warning message appears. Try again and press <Enter>.
- When the User Password is set and the password on boot parameter is enabled, a prompt appears at boot-up.
- Type the User Password and press <Enter> to use the computer. If you enter the password incorrectly, a warning message appears. Try again and press <Enter>.




Important! You have three chances to enter a password. If you fail to enter the password correctly after three tries, the system halts. Press and hold the power button for four seconds to shut down the computer. Then turn on the computer again, and try again.

For advanced wireless connection setting

- (1) Please switch on the wireless LAN using the switch on the front of your *Aspire one*.
- (2) Click the  icon on your system tray and choose the wireless access point you want to connect, or select **Connection Management**.
- (3) Click **New** to show the list of available network type.

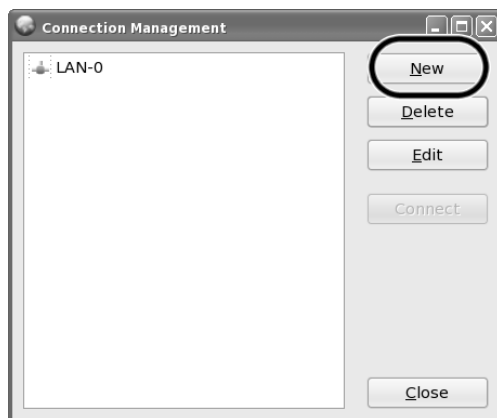

 (4) Select **WLAN** and click **Next**.

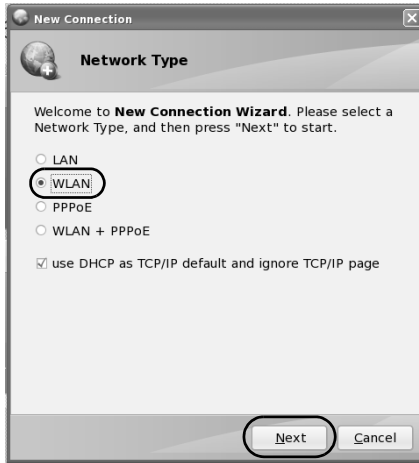

(5) Click **Select**.



- (6) Choose the wireless access point you want to connect to and click **OK**.



- (7) Click **Next**.



- (8) Check **Connect after finish** and select **Finish**.



- (9) You are now connected, click **Close** to exit Connection Management.



Acer Communication Suite

Aspire oneMail

Getting Started

Welcome to Aspire oneMail

Aspire oneMail is an email client application that is part of the Acer Communication Suite.. It provides simple ways to communicate with mail senders and mail recipients, and integrates the functionalities of RSS reader, contacts and calendar.

Email

Setup an account

- 1 Select **Tools** -> **Account...** in the Aspire oneMail menu bar.



- 2 Select **Add...** in the accounts dialog box.
- 3 Enter your account name, e.g., my email.
- 4 Enter your email address, e.g., my_email@myhost.com.
- 5 Enter your email password (Password displayed as * for security)
- 6 Press **Next**.
 - a Aspire oneMail will check and verify that your account name exists in the database.

- b** If your account name does not exist, do the following:

The screenshot shows a window titled "Add account" with a sub-tab "Server Information". It contains the following fields and options:

- Email address: [text input]
- Username: [text input]
- Password: [password input]
- Incoming server type: POP3 (dropdown menu)
- Incoming mail (POP3): plus.pop.mail.yahoo.com [text input] 995 [port input]
- The server requires a secure connection (SSL)
- Outgoing mail (SMTP): plus.smtp.mail.yahoo.com [text input] 465 [port input]
- The server requires a secure connection (SSL)
- Outgoing server requires authentication

At the bottom right, there are "Next >" and "Cancel" buttons.

- (1) Enter your user name, e.g., my email.
- (2) Select **Incoming server type**, e.g., POP3.
- (3) Enter server name in the **Incoming mail/Outgoing mail** fields, e.g., myhost.com.
- (4) Enter port of server in the **port** field, e.g., 110, 25.
- (5) Enable **SSL** checkbox if the server needs SSL connection.
- (6) Enable **Authentication** checkbox if outgoing server requires authentication.
- (7) Press **Next**.

Setup an account to access Lotus Domino webmail

- 1 Select **Tools** -> **Account...** in the Aspire oneMail menu bar.
- 2 Select **Add...** in the Accounts dialog box.
- 3 Enter your account name, e.g., my email.
- 4 Enter your email address, e.g., my_email@myhost.com
- 5 Enter your email password (Password displayed as * for security).
- 6 Press **Next**.

- 7 Enter your user name, e.g., my email.
- 8 Select Incoming server type, e.g., Domino Web Access (IBM Notes Web)
- 9 Enter the Domino Web Access URL, e.g., http://myhost.com/mail/memail.nsf.
- 10 Press **Next**.

Setup an account to access Microsoft Exchange webmail

- 1 Select **Tools** -> **Account...** in the Aspire oneMail menu bar.
- 2 Select **Add...** in Accounts dialog.
- 3 Enter your account name, e.g., my email.
- 4 Enter your email address, e.g., my_email@myhost.com
- 5 Enter your email password (Password displayed as * for security).
- 6 Press **Next**.
- 7 Enter your user name, e.g., my email.
- 8 Select Incoming server type, e.g., Exchange Web Access (Microsoft Exchange).
- 9 Enter the Exchange URL, e.g., http://myhost.com/exchange.
- 10 Press **Next**.

 
Read mail

Double click an email to view its contents. Click on the arrowhead icon to view message details and the clip icon to see a list of attachments. Use the **Previous** and **Next** buttons to navigate your email, and **View** -> **Zoom-in/Zoom-out** to zoom-in or zoom-out on email contents.




Download an attachment

Click on a gray attachment icon to download an attachment individually, or select download all to download all attachments. Select Save to directory to save attachments to a user-specified directory.

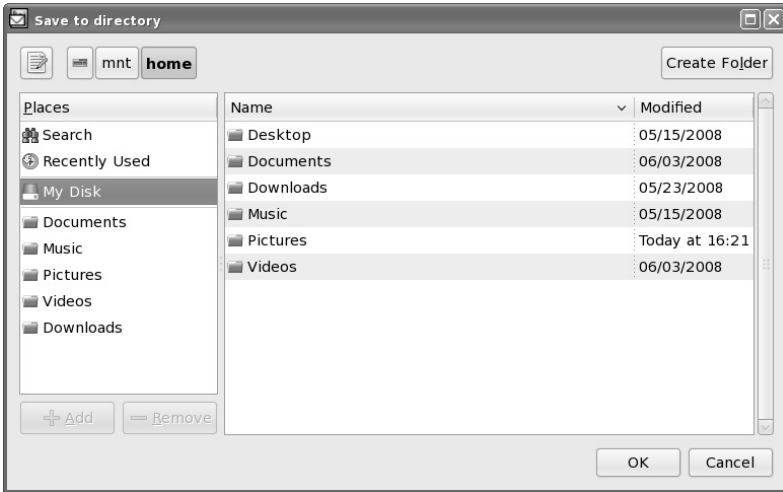

Write mail

- Press the **New** button to open mail edit view.

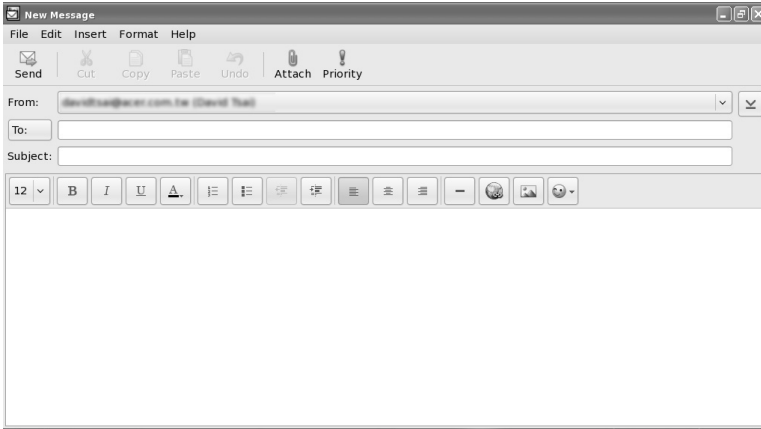


- Press the **Attach** button to add an attachment.
- Press the **Priority** button to add delivery priority to the email.
- Click the arrowhead icon to view the detail fields that you can add to your email.

- Select **Insert -> Picture** to insert an image to your email.
- Press the **emoticons** button and select an emoticon to insert to your email.

Search mail

 Enter key words or sentences in the **Search** field located on the right of the Aspire oneMail screen. The search engine will display matching emails in mail list view.

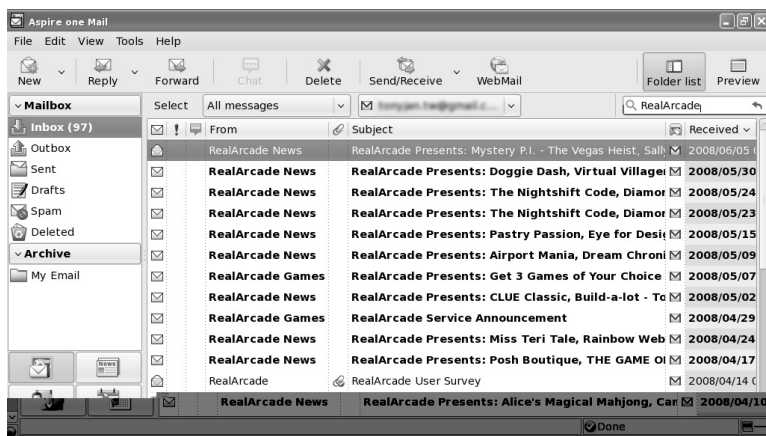

Sort mail

Select a reference item in **View -> Sort by** to sort your mailbox.

Manage mail

- Delete mail
To delete mail, right click and select **Delete**; Select and type Del on keyboard; Or select and click the Delete button.
- Move mail
Drag and drop the selected mail to a specific folder or archive located on the left side of the Aspire oneMail screen (or select mail and **Edit -> Move** to folder...).
- Mark Mail as Read/Unread
Select a mail, right click and select **Mark as Read/Unread**.
- Show specific kind of mail
Select **View -> Show messages only -> All messages/High-priority messages/Unread messages**.

Show mail from a single account

Use the account selection combo box in mail list view to show mail from all accounts or mail from a single account. (Default will show mail from all accounts)

Switch screen layout

You can show/hide the folder list and preview pane by clicking on the **Folder list** and **Preview** button. Drag the pane to adjust the size of the folder list or preview pane.



Manage mail accounts

 
Select Accounts Manager from the **Tools -> Account...** menu. Select **Add...** from the Accounts Manager window to add your email account; Select **Remove** to delete an account without deleting received mail; **Enable/disable** an account using the checkbox; And select **Properties** to change account properties. If you

prefer to send mail through a specific account, use the **Set as default** button to set the default mail account.



Set mail filter

Use filters to filter out unwanted email. You can setup filters by selecting one of the following options from **Tools -> Filter...**

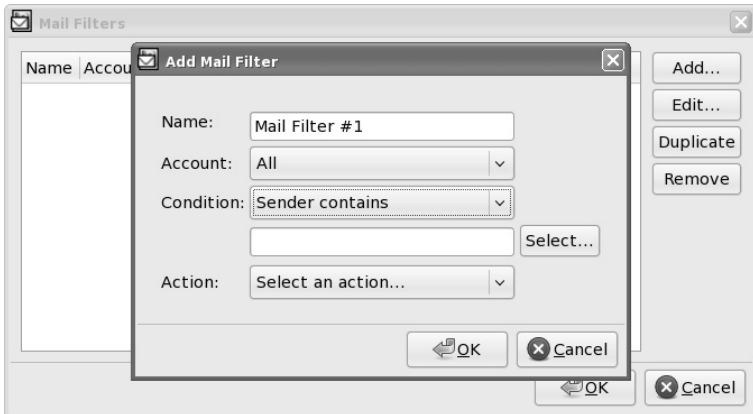

- I want to receive all messages (no filters)...
If there are no filter settings in the **Mail Filters** window, then all mail will be received.
- I want to filter messages from a certain sender...
 - 1 Click **Add...** to create a mail filter.
 - 2 Select **Sender's address contains** in the Condition field.
 - 3 You can enter the keyword(s) to filter by -- all words will be matched. Or, you can click the **Select...** button to choose one of your contacts.
- I want to filter messages matching a certain subject...
 - 1 Click **Add...** to create a mail filter.
 - 2 Select **Subject contains** in the Condition field.
 - 3 You can enter the keyword(s) to filter by -- all words will be matched. You can choose actions from the **Select action...** field after setting some filter criteria. The actions are **Don't download**, **Move to Spam**, or **Download only**.

Don't download

- If you select this action, all of the messages matching the conditions are not downloaded. The messages that do not match are downloaded to your Inbox folder.

Move to Spam

- If you select this action, all the messages matching the conditions are put into the Spam folder. The messages that do not match are downloaded to your Inbox folder.

Download only

- If you select this action, all the messages matching the conditions are put into the Inbox folder. The messages that do not match are put in the Spam folder.
- Name your filters for easy management.
- If you want to temporarily disable a filter, un-toggle the check box in front of the filter.

Set schedule to regularly check new mail

Select the feature in **Tools** -> **Options...** and the **Options** dialog will be shown. Toggle the check box before the **Regularly check messages every:** option to

enable this function, and select a time interval to check mail: **5 min.**, **15 min.**, **30 min.**, **1 hr.**, **4 hr.**, **12 hr.**, and **24 hr.**...



Set day to automatically delete mail

Select the feature in **Tools -> Options...** and the **Options** dialog will be shown. Toggle the check box before the **Remove local messages after day(s)** to enable this function, and set how many days received mail is kept. The choices are 1 day to 30 days.

Set to automatically download attachment

Select the feature in **Tools -> Options...** and the **Options** dialog will be shown. Choose **Full message including attachments** to download attachments automatically. The default setting is **Message header and body**.

Set mail signature

Select the feature in **Tools -> Options...** and the **Options** dialog will be shown. Create and edit a signature for your outgoing messages by clicking the **Signatures...** button. Toggle the check box before **Add signature to all outgoing messages** to add your custom signature automatically to all outgoing mail. If

you toggle the check box before **Don't add signature to Replies and Forwards**, the signature will only be added only to new mail.



Online chat with mail sender

If you have added a contact using his/her email and IM address, an IM status icon is displayed on the mail list to indicate his/her online status.

You can chat with the mail sender by following these steps:

- 1 On the mail preview pane, right click the mail sender.
- 2 On the popup menu, choose **Chat with**.
- 3 The chat dialog will pop up and you can chat with him/her now.

Add mail sender to Contacts address book

You can add a mail sender to your Contacts address book by using one of the following steps:

1. Click the contact picture on the mail preview pane.

2. Right click the mail in mail list, and the **Add sender to Contacts** option will be shown on the popup menu.

Skunk Studios Newsletter

General Details Address

First name: Nickname: Skunk Studios N

Middle name: Title:

Last name: Addressbook: General

Email

Home: Work:

IM

MSN: Yahoo:

Google: AIM:

Phone

Home: Mobile:

Work: Fax:

OK Cancel

Contacts

Add a contact

- 1 Choose **File** -> **New** -> **Contact** from the menu bar
Or, click the **New** button and select **Contact** from the pop-up menu
Or, right-click on Contact List and select **New contact** from the menu.
- 2 Enter the details of the contact you want to add on the **Contact Editor** page.

- 3 Fill out at least one of the following to create the contact: **First name**, **Middle name**, **Last name**, or **Nickname**.

The screenshot shows a 'New Contact' dialog box with the following fields and sections:

- General Tab:**
 - First name:
 - Middle name:
 - Last name:
 - Nickname:
 - Title:
 - Addressbook:
 - Photo placeholder:
- Email:**
 - Home:
 - Work:
- IM:**
 - MSN:
 - Google:
 - Yahoo:
 - AIM:
- Phone:**
 - Home:
 - Work:
 - Mobile:
 - Fax:

Buttons: OK, Cancel

Set contact picture

 
- 1 Open the **Contact Editor** page.
- 2 Click the **photo zone** on the **General** page, and choose a contact picture in photo chooser
Or, right-click the **photo zone** in **General** page, and select **Change picture...** to set contact picture.
- 3 Select **Remove picture** to set the contact picture as default photo.

Manage contacts

- Edit contact/group
 - a Select the contact you want to edit.
 - b Double-click the contact/group on the Contact List
Or, Choose **File** -> **Open**
Or, right-click on Contact List and select **Open**.
 - c The contact/group editor will pop up. Edit your contact.
- Address book
 - a Contact/groups are separated into 6 address books : **General, Family, Friends, Office, School** and **VIP**
 - b All contacts and groups are shown in the **All Contacts** address book.
- Move contacts/group

- a** Select the contacts/groups you want to move to another address book.
 - b** Choose **Edit -> Move to folder** from the menu bar and select the destination address book from the submenu
Or, right-click on Contact List, select the **Move to folder** option, and choose the destination address book from the submenu.
 - c** The contacts/groups will be moved.
 - d** You also can also drag-and-drop a contact/group from the Contact List to the destination address book.
- Copy contacts/group
 - a** Select the contacts/groups you want to copy to another address book.
 - b** Choose **Edit/Copy to folder** in menu bar and select the destination address book in the submenu
Or, right-click on Contact List, select the **Copy to folder** option, and choose the destination address book from the submenu.
 - c** The contacts/groups will be copied.
- Sort
 - a** Choose **View/Sort by**
Or, click the Contact List title bar directly.
 - b** Sorting options include: **contact/group type, IM status, Name, Email, Phone** and **Birthday**.
 - c** Use **View/Sort by** and select **Sort ascending** or **Sort descending** to sort in ascending or descending order.
- Delete contacts/group
 - a** Select the contacts/groups you want to delete.
 - b** Choose **Edit/Delete** from menu bar
Or, click the **Delete** button
Or, right-click on Contact List and select **Delete**.
 - c** The selected contacts/groups will be deleted.
- Mail to contacts
 - a** Select the contacts/group you want to mail to.
 - b** Choose **File/Send email**
Or, click the **Mail** button
Or, right-click on Contact List and select **Mail to**.

- c 3.The mail addresses of the contacts/group members will be filled in the **To** field of a new mail editor window.

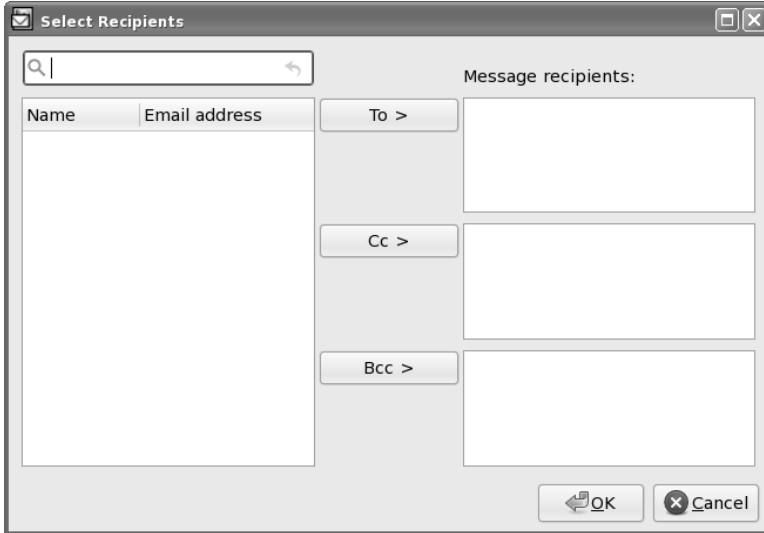


- Chat to contacts
 - a Log in to Acer IM.
 - b The IM status of the contact will be shown on Contact List.
 - c Select the contact you want to chat with. (The contact must have an IM account and be online)
 - d Choose **File** -> **Send IM**
Or, click the **Chat** button
Or, right-click on Contact List and select **Chat with**

- e A chat dialog with this contact will pop up.



- Import contact vCard
 - a Choose **File** -> **Import...**
 - b Select the vCard you want to import from the **vCard chooser** dialog.

 - c Click **Import** and wait for the import to complete. The vCards you selected will be imported into the ACS Contact List and saved in the **General** address book.

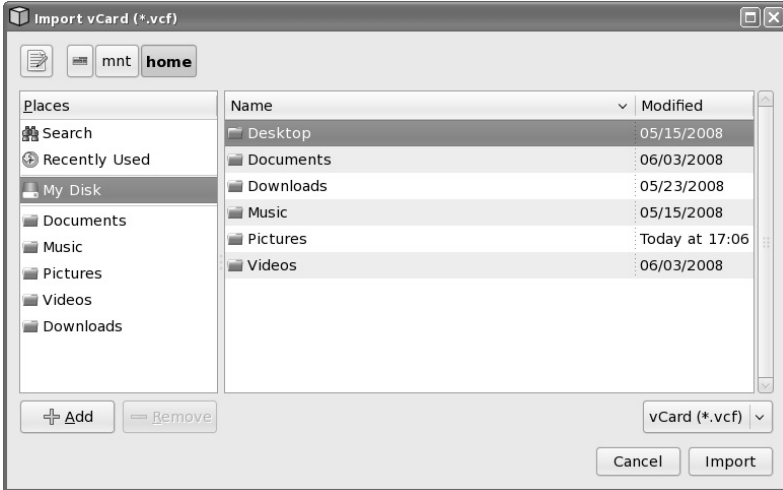

- Export contact vCard
 - Export selected contacts
 - (1) Select contacts/group you want to export.
 - (2) Choose **File/Export** selected...
Or, right-click on Contact List and select **Export as vCard**.
 - (3) Select the export destination folder.
 - (4) Click **Export** and the contacts/group members will be exported.
 - Export all contacts from a specific address book
 - (1) Select the address book you want to export.
 - (2) Choose **File -> Export all...**
Or, right-click on Address Book List and select **Export**.
 - (3) Select the export destination folder.
 - (4) Click **Export** and all contacts/group members belonging to the address book will be exported.

 
Calendar

Set an appointment

You can set an appointment in several ways:


- Create an event from the calendar display view

- a** Double-click on **day view**, **week view** or **month view** - this will bring you to a **New Appointment** dialog.

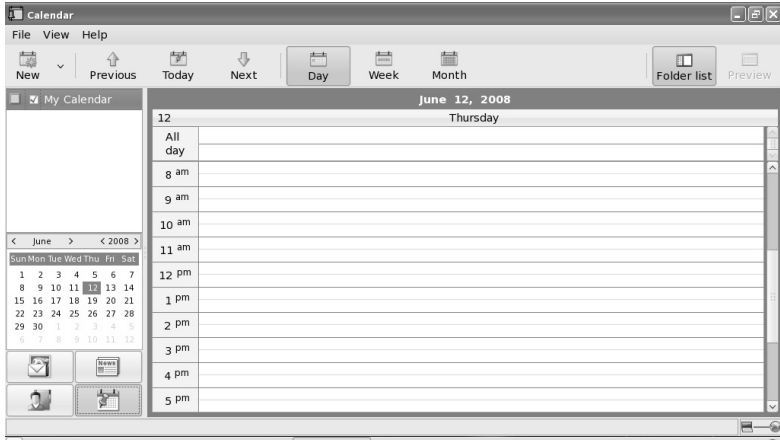

- b** Enter your appointment subject.
c Enter your appointment location.
d Select which calendar folder to save the appointment.
e Edit the start and end time
f If you want to set the appointment to an all day event, you can toggle the **all day event** check box.
g Modify alarm time.
h Edit appointment content.

 - i Click the **Save/Close** button on the tool bar to save the appointment to your calendar.

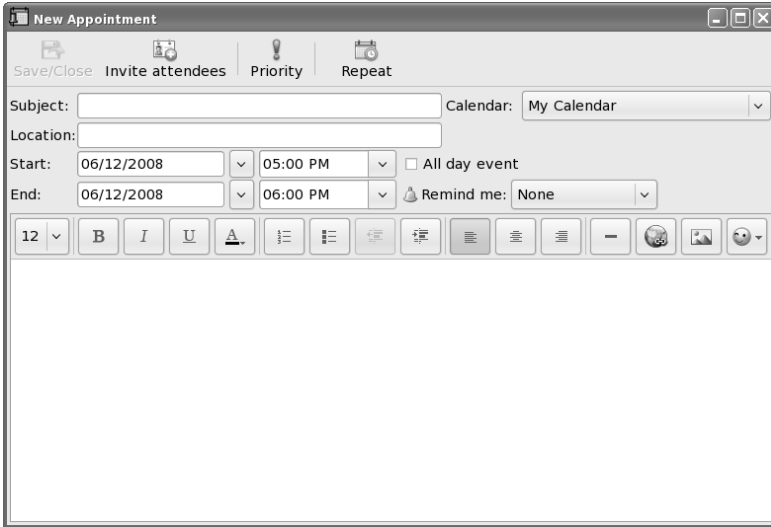

- Create an event from the tool bar
 - a Click the **New** button on the tool bar to open the **New Appointment** dialog.
 - b Enter your appointment subject.
 - c Enter your appointment location.
 - d Select which calendar folder to save the appointment.
 - e Edit the start and end time.
 - f If you want to set the appointment to an all day event, you can toggle the **all day event** check box.
 - g Modify alarm time.
 - h Edit appointment content.
 - i Click the **Save/Close** button on the tool bar to save the appointment to your calendar.
- Create an event from the application menu
 - a Click **File -> New -> Appointment** or **File -> New -> All day event** on the application menu and this will open a **New Appointment** dialog.
 - b Enter your appointment subject.
 - c Enter your appointment location.
 - d Select which calendar folder to save the appointment.
 - e Edit the start and end time.

 
- f** If you want to set the appointment to an all day event, you can toggle the **all day event** check box.
- g** Modify alarm time.
- h** Edit appointment content.
- i** Click the **Save/Close** button on the tool bar to save the appointment to your calendar.
- Set a repeat appointment
 - a** Click the **Recurrence** button in the **New Appointment** dialog.
 - b** Toggle the **This appointment repeats** check box to set it as a repeat appointment.
 - c** Select between **Daily, Weekly, By weekday, Monthly** or **Yearly** to set recurrence pattern.
 - d** Edit the start and end date to set the recurrence range.
 - e** Click the **OK** button to save recurrence rules to the appointment.

Switch calendar views


The Acer calendar displays **day, week,** and **month** view layouts for you to view calendar information. To switch calendar views, just click on the **day, week,** and **month** button on the calendar main page.

- Day view
 - a** To use day view, click on the **Day** button on the calendar main page. The day view will show appointments for one day.
 - b** Click the **Previous** or **Next** button on the calendar main page to view appointments from the previous or next day.
 - c** Click the **Today** button on the calendar main page to return to the current day.
 - d** Click date on the mini-calendar displayed at the bottom-left of the calendar to view a specific day.
- Week view
 - a** To use week view, click on the **Week** button on the calendar main page. The week view will show appointments for one week.
 - b** Click the **Previous** or **Next** button on the calendar main page to view appointments from the previous or next week.
 - c** Click the **Today** button on the calendar main page to return to the current week.

- d** Click date on the mini-calendar displayed at the bottom-left of the calendar to view a specific week.

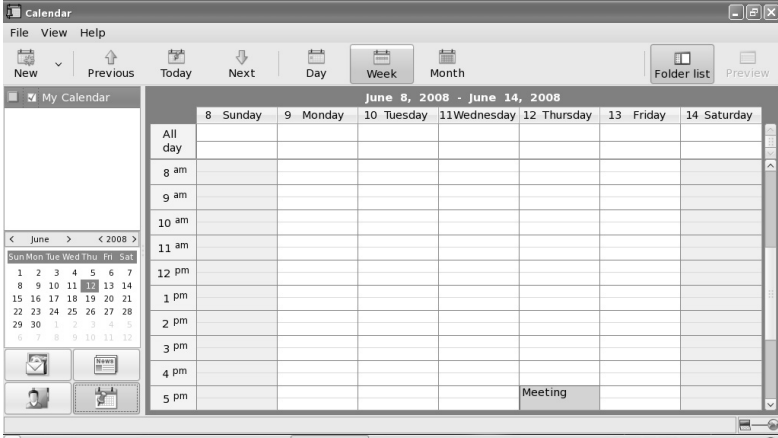

- **Month view**
 - a** To use month view, click on the **Month** button on the calendar main page. The month view will show appointments for one month.
 - b** Click the **Previous** or **Next** button on the calendar main page to view appointments from the previous or next month.
 - c** Click the **Today** button on the calendar main page to return to the current month.
Click date on mini-calendar displayed at the bottom-left of the calendar to view a specific month.

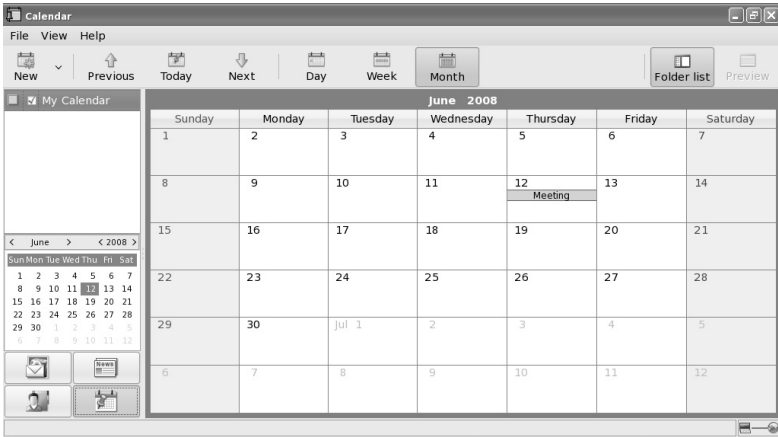 

Appointment Notification

- 1 Modify the alarm time on the **New Appointment** dialog.
- 2 The Acer Calendar provides the following values for you to set alarm time: **None, 0 minutes, 5 minutes, 15 minutes, 30 minutes, 1 hour, 2 hours, 3 hours, 4 hours, 5 hours, 6 hours, 12 hours, 18 hours, 1 day, 2 days, 3 days, 5 days, 1 week and 2 weeks.**

Manage your calendar

You can move an appointment between calendars and show/hide appointments for specific calendars.

- How to move an appointment to a different calendar:
 - a** Right-click on the event.
 - b** Click on **Move to calendar** -> **Calendar Name** on the context menu.
 - c** The appointment will be moved to the calendar you select.
- How to show/hide appointments for specific calendar:
 - a** Enable the checkbox on calendar list view to show appointments.
 - b** Disable the checkbox on calendar list view to hide appointments.

Create a new calendar

 
You can create a new calendar in several ways:

- Create a new calendar from the calendar list view
 - a** Right-click on calendar list view.
 - b** Click on **New calendar** in the context menu.
 - c** Enter calendar name.
- Create a new calendar from the tool bar
 - a** Click down-arrow button at the right side of the **New** button on the tool bar.
 - b** Click **calendar** on the context menu
 - c** Enter calendar name.
- Create a new calendar from the application menu
 - a** Click **File** -> **New** -> **Calendar** on application menu.
 - b** Enter calendar name.

Import iCalendar

- 1 Click **File** -> **Import** on the application menu to open a **New Appointment** dialog.
- 2 Select an iCalendar file (*.ics), and click **Import**.

- 3 If you want to import an iCalendar file as a new calendar, select **Import as a new calendar** and click **Next**. (The new calendar name will be set as the iCalendar file name)
If you want to import an iCalendar file into an existing calendar, select **Import into an existing calendar** and click **Next**.
- 4 If the calendar was imported successfully, a dialog will display a **Congratulations** message.

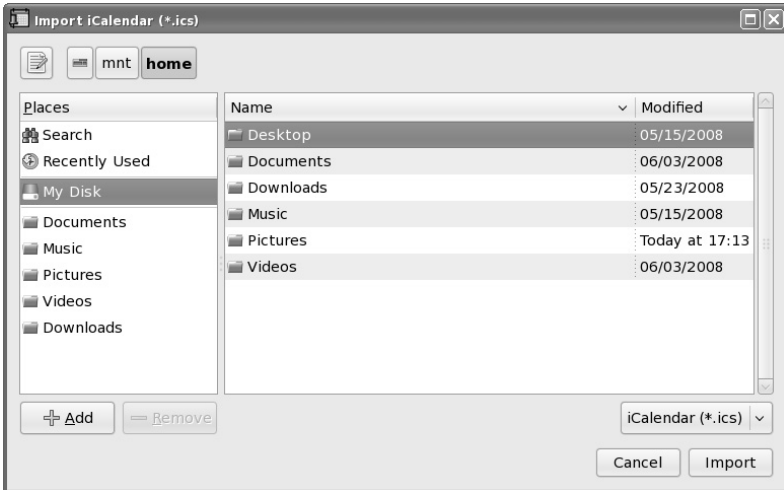

Export iCalendar


Acer Calendar provides two modes for exporting your iCalendar.

- Export all calendars to Calendar format
 - a** Click **File** -> **Export all...** the on application menu.
 - b** Select the file path that you want to export to, and click **Export**.
 - c** If the calendar was imported successfully, a dialog will display a **Congratulations** message.
- Export a single calendar to iCalendar format
 - a** Right-click the calendar that you want to export in calendar list view.
 - b** Select the file path that you want to export to, and click **OK**.
 - c** If the calendar was exported successfully, a dialog will display a **Congratulations** message.



.....
Note: The file name of the exported calendar will be set to the name of the calendar folder.


RSS

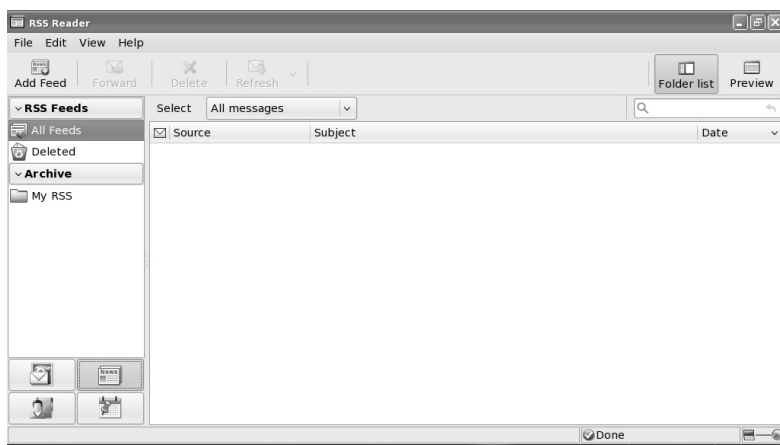

Subscribe to an RSS feed

- 1 Launch RSS Reader.
(If you have launched the Email/Contact/Calendar application, just switch to RSS view)
- 2 Press the **ADD feed** button.
- 3 Enter the feed URL and press **Next**.
- 4 RSS reader will start to verify the feed URL.

 - 5 After the verifying procedure is complete, RSS reader will start to receive updates from the new feed.

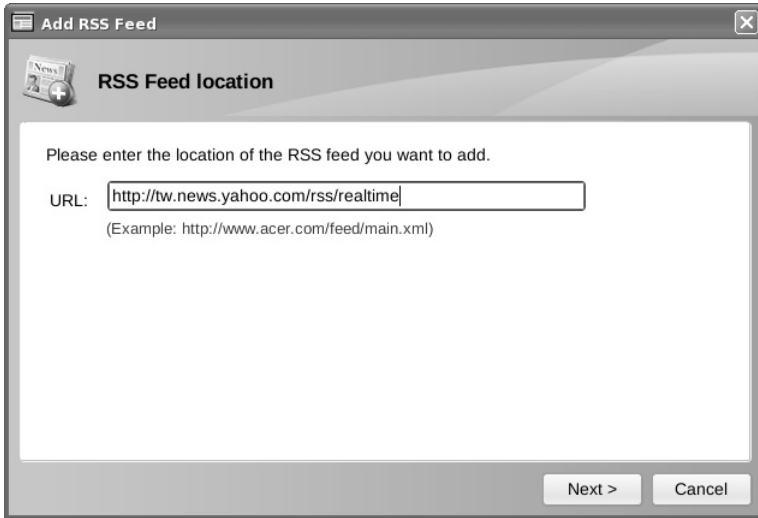

Set full download mode

- 1 On the feeds list, click your right mouse button.
- 2 In the popup menu, choose **Properties**.
- 3 In the **Properties** dialog, enable the **Download full article as an .html attachment** option.

Search RSS

Like email, you can search for specific RSS news by entering one or more keywords in the search field.

Sort RSS

Like email, you can sort the RSS news by clicking the sort column in news list view.

Frequently Asked Questions

How many email accounts can I add?

Aspire oneMail supports up to six email accounts.

What mail access protocols does Aspire oneMail support?

Aspire oneMail supports POP3, IMAP4, SMTP, Exchange 2000/2003 servers and Lotus Notes (Domino) R6.5/R7. For Exchange you will need Exchange Web Access capability enabled by your MIS. For Notes accounts you will need Domino Web Access with an official IBM mail template enabled by your MIS.

Why can't I retrieve all mail after setting up the account?

Increasingly, mail boxes offer up to several GBs of storage space. To avoid long download times and limit the amount of available storage occupied on your Aspire one notebook, Aspire oneMail automatically downloads only part of the mail on your mail server.

For Notes or Exchange accounts, oneMail will download the last 7 days' mail; for IMAP it will download the latest 100 mails; for POP3 it will download all mail by default.

For all accounts, Aspire oneMail will only receive mail from the **Inbox** of your mail account.

We suggest using an internet browser to sign in to your mail website if you wish to view all your mail.

Does Aspire oneMail support server mail synchronization?

Aspire oneMail does not support mail synchronization. It only retrieves mail from the Inbox of your account. We suggest using an internet browser to sign in to your mail website if you wish to view all your mail.

Does Aspire oneMail support SMIME or mail encryption and decryption?

Aspire oneMail does not support SMIME. Encrypted mail will display the sender and subject only.

Lotus Notes mail account limitations

- 1 Global address book and group name not supported.
- 2 Non-standard mail type messages, e.g. Invitation (created in Calendar), Return Receipt, Tracking Request, ToDo, and other messages from enterprise backend services are not supported.
- 3 Aspire oneMail accesses Lotus Notes Mail via the Domino Web Access (also called iNotes or Notesweb) interface. The mail contents received will be similar to the contents that you can see via Domino Web Access. In some cases the mail content shown via web access and the Lotus Notes Client is different.
- 4 Aspire oneMail can not support embedded images in outgoing mail. The image will be handled as an attachment.

Why does Aspire oneMail show the Notes account I added is not supported?

You can use Aspire oneMail to receive messages via Domino Web Access only. Aspire oneMail supports the iNotes protocols which are the Domino Web Access R6 template in Lotus Domino Server R6.5 and Domino Web Access R6/R7 template in Lotus Domino Server R7.

Please contact your MIS and make sure your template is DWA7, iNotes6 or iNotes5. Also, ensure the Domino Directory (names.nsf) of your mail server is functioning properly.

How do I access the Global Address Book in my Exchange or Domino server?

Aspire oneMail does not support the Global Address Book and Calendar in Exchange and Domino servers.

When I enable **Download full articles as an .html attachment** in the RSS reader, the attachment content is different from the web site.

Because the web page data may contain complex sources and scripts, some content may not be shown correctly. You should click the link in the RSS content to launch your internet browser and view the full content.

Why can't I view the embedded images in my mail?

There are many formats of email with embedded images, leading different mail clients and servers to have compatibility issues. Aspire oneMail saves embedded images as attachments. You can view the embedded images from the attachments created.

Why can't I add my Gmail account? The message shows that the account doesn't exist.

POP3 and IMAP access to Gmail are disabled by default. You must enable POP3 or IMAP access in your Gmail account. Launch your internet browser to sign into Gmail and change your settings to enable IMAP access or POP3 download. After IMAP access or POP3 download is enabled, you can set up your account in Aspire oneMail.

Why can't I add my Yahoo! Mail account to Aspire oneMail?

You can use Aspire oneMail to access Yahoo! Mail accounts in many countries. But you may need a paid-for Yahoo! Mail Plus account if your mail account is based in Taiwan, China or the US. You should contact Yahoo! Mail for details.

Messenger

Get Started

Welcome to Messenger

Acer IM lets you log-in to multiple messaging services at the same time, making it easy for you to stay in touch. Click **Add Account...** to set up your accounts.

Add an IM account

- 1 Press **Add account...** on the application main window.
- 2 Choose an IM service type, e.g., MSN Messenger.
- 3 Enter your IM account, e.g., your_account@mail_server.
- 4 Enter your password.
- 5 Click on **OK** button.



The screenshot shows a dialog box titled "Add Account" with a close button (X) in the top right corner. The dialog contains the following elements:

- IM service:** A dropdown menu with "MSN Messenger" selected.
- Email:** A text input field with the placeholder text "e.g. your account@mail server".
- Password:** A text input field.
- Remember my password**
- OK** and **Cancel** buttons at the bottom right.

Sign in

- Method 1:
 - a Select the accounts you want to sign in to from the application main window.
 - b Click the **Sign in** button.
- Method 2:
 - a Press **Accounts** -> **Account settings...**
 - b Select the account you wish to sign in to.
 - c Click the **Sign in** button.

Sign out

- Method 1:
 - a** Press **Accounts** -> **Sign out (all)**
- Method 2:
 - a** Press **Accounts** -> **Account settings...**
 - b** Select the account you wish to sign out from.
 - c** Click the **Sign out** button.

Manage display information

- 1 Press the **icon area** on the application main window.
- 2 Choose an image file to use.

Edit nickname and description

- 1 Press <**Enter your nickname**> or <**Enter your personal message**>.
- 2 Enter your nickname or personal message.

Edit Account

General

IM service: ▼

Email:

Password:

Remember my password

Display information

Use global display information

Show default picture

Display name:

Personal message:

Status: ▼

Switch IM presence status

- 1 Click on the **status area**.
- 2 Choose a new status from drop down menu.

Conversation



Chat to contact

- 1 Double click on a contact in contact list view to start a new chat window.
- 2 Enter text in the input area.

- 3 Press **Enter** on your keyboard or click the send button to send your message.



Send an emoticon

- 1 Click the insert emoticon tool button to expand the emoticon panel.
- 2 Select an emoticon and click it to insert at cursor.

Initiate a chat room

 
- 1 To create a chat room from one-to-one chat, click **Actions** -> **Invite other contacts**.
- 2 Choose the contacts to invite and press **OK**.
- 3 A new chat room will be created and users automatically switched to that chat room.

Video Call

- 1 To start a video call, click **Actions** -> **Video** -> **Start a video call** to send an invitation.
Or, click the **video tool** button and press **start a video call**.
- 2 When a contact invites you to start a video call, you can press **accept** to start, or **reject** to cancel the invitation on the pop up dialog.

View a contact's webcam video

- 1 To view a contact's webcam video, click **Actions** -> **Video** -> **View a contact's webcam** to send an invitation.
Or, click the **video tool** button and press **View a contact's webcam**.
- 2 When your contact invites you to view his/her webcam, you can press **accept** to view, or **reject** to cancel the invitation on the popup dialog.

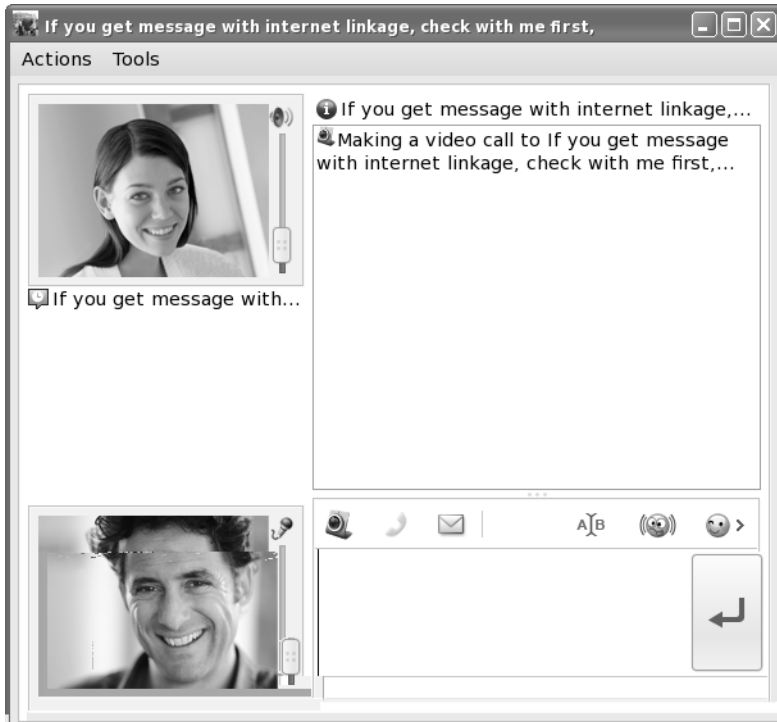

Show webcam video to contact

- 1 To show your webcam video to a contact, click **Actions -> Video -> Show my webcam** to send an invitation.
Or, click **video tool** button and press **Show my webcam**.
- 2 When your contact invites you to share your webcam video, you can press **accept** to share, or **reject** to cancel the invitation on the popup dialog.

Voice Call

- 1 To start a voice call, click **Actions->Voice call** to send invitation.
Or, click the **voice tool** button
- 2 When your contact invites you to start a voice call, you can press **accept** to start, or **reject** to cancel the invitation on the popup dialog.

Transfer file to contact

- 1 Choose the contact you want to send a file to.
- 2 Double-click or press Enter to open the chat dialog.
- 3 Press **Actions** on the top tool bar.
- 4 Press **Send file...**
- 5 Use the file chooser to select the file you want to send.
- 6 Press **Open** to start the file transfer.
- 7 You can press **Stop** to stop the file transfer at any time.



Receive file from contact

- 1 A notification dialog will pop up to inform you that someone wants to send files to you.

- 2 Press **Cancel** to reject it or **Accept** to accept it.
- 3 Use the file chooser to rename the file and select a directory you want to save the file in.
- 4 Press **Save** to start receiving the file.
- 5 You can press **Stop** to stop the file transfer at any time.

 
Manage file transfer

- 1 Press **Tools** on the top menu bar in the application main window or chat dialog
- 2 Press **File Transfer Manager...**
- 3 The **File Transfer Manager** records all file transfers.
- 4 You can press **Stop** to stop the file transfers in-process.
- 5 You can press **Open** to open the transferred file with a system default application.
- 6 You can press **Clear** to clear the file transfer item.
- 7 You also can press **Clear complete transfers** to clear all completed transfers.

Manage conversation history

- 1 Press **Tools** on the top menu bar in application main window
- 2 Select **Options...**
- 3 Switch to the **Messages** tag.
- 4 Turn on the option **Automatically keep a history of each conversation.**
- 5 If you desire, you can also turn on the option **Show my last conversation in new conversation window.**

- 6 Press **Ok**.

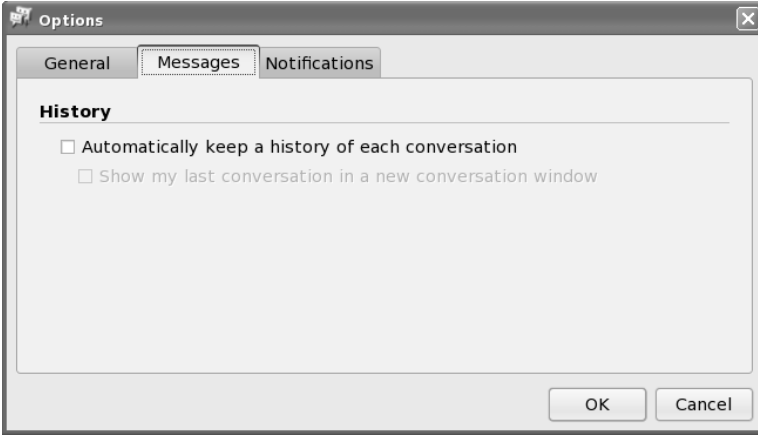

- 7 After the setting up conversation history, press **Actions** on the top menu bar in the chat dialog and select **View history**.
- 8 You can enter keyword(s) in the search area.
- 9 You can press **Delete** to delete the conversation history with this contact.

Block messages from strangers

 
- 1 Press **Tools** on the top menu bar in application main window.
- 2 Select **Options...** and press it.
- 3 In the **Contact** field under the **General** tag, turn on the option **Only people in my contact list can send me messages**.
- 4 Press **Ok**.

Manage contact list

Add a contact

- 1 Press **Contacts** in the menu bar.
- 2 Press **Add a contact**.
- 3 Select a contact.
- 4 Edit the contact name.
- 5 Choose a group.

- 6 Press OK.

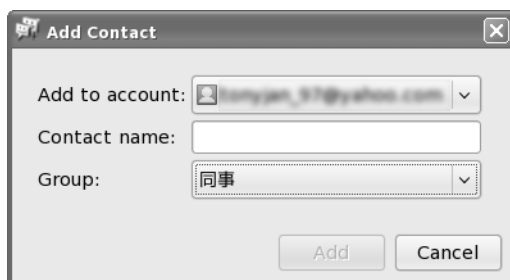

Block a contact

- 1 Choose a contact you want to block.
- 2 Press **Contacts** in the menu bar.
- 3 Press **Block a contact**.

Delete a contact

- 1 Choose a contact you want to delete from the contact list.
- 2 Press **Contacts** in the menu bar.
- 3 Make sure you really want to delete him/her, and press **Delete Contact**.

Group contacts

- 1 Choose the group you want to edit in the contact list.
- 2 Press **Contacts** in the menu bar.
- 3 Press **Edit a group**.

- 4 Select a contact you wish to add to the group.



View online contacts

- 1 Press **Contacts** in the menu bar.
- 2 Select **Filter contacts**.
- 3 Press **Online contacts only**.

Show all contacts

- 1 Press **Contacts** in the menu bar.
- 2 Select **Filter contacts**.
- 3 Press **Show all contacts**.

Show contact by IM account

- 1 Press **account switcher** in the main window.
- 2 Select your account.

Sort contacts

- 1 Press **Contacts** in the menu bar.
- 2 Select **Sort contacts**.
- 3 Select the sorting type: **by Group, by Status, or by IM service**.

Filter contacts

- 1 Press **Contacts** in the menu bar.
- 2 Select **Filter contacts**.
- 3 Select the filter type: **Show all contacts** or **Online contacts only**.

Emoticon

Save an emoticon

- 1 Right-click on your contact's custom emoticon.
- 2 Press **Add** to save the emoticon.
- 3 Modify the keyboard shortcut of the emoticon and add it to your favorite emoticons list.
- 4 Press **Ok** to finish saving.

Manage emoticons

- 1 Press **Tools** on the top menu bar and select **Emoticons...** or press **Insert emoticons** on the tool bar in the chat dialog, and press **Edit** to enter the emoticon manager.
- 2 Press **Create** to create a new emoticon.
- 3 Press **Browse** to select the new emoticon you want to add.
- 4 Press **Remove** to remove the emoticon you select.
- 5 Press **Modify** to modify the emoticon you select.
- 6 Press **Pin >** to add the emoticon you select to your favorite emoticons list.
- 7 Press **< Unpin** to remove the emoticon you select from your favorite emoticons list.
- 8 Press **Close** to exit the emoticon manager.

Frequently Asked Questions

How many messenger accounts can I add?

The messenger supports up to five accounts.

What functions does this Messenger support?

- 1 If your friends are using Microsoft MSN/Windows Live Messenger:
You can use the Aspire one Messenger to have text chats, video and voice calls, or transfer files.
Other functions are limited:
 - Personal information (e.g. Nickname, Picture, description) sync with

server is not supported (this function was added in MSN 8.1 and 8.5.)

- Shared folders, voice clips, sending handwritten messages, winks, shared backgrounds, games, remote help and other add-on features are not supported.
- 2 If your friends are using Yahoo! Messenger:
You can use the Aspire one Messenger to have text chats, transfer files and share webcam.
Other functions are limited:
 - Personal information (e.g. picture) sync with server is not supported.
 - Sharing channels, pictures, music and voice calls are not supported.
 - 3 If your friends are using Google Talk:
You can use the Aspire one Messenger to have text chats, voice calls or transfer files.
Other functions are limited:
 - Personal information (e.g. picture) sync with server is not supported.
 - Voice calls to non-English versions of Google Talk may not work.
 - 4 If your friends are using AIM:
You can use the Aspire one Messenger to have text chats with friends on AIM.
Other functions are limited:
 - Buddy info and profile, text message (SMS), video and voice calls, sending files and expressions are not supported.

Note on continuing support

MSN Messenger/Windows Live Messenger, Yahoo! Messenger, Google Talk, and AIM services are the property of Microsoft, Yahoo!, Google, and AOL respectively. Interaction with the Aspire one Messenger may be terminated at any time.

Why I can't send my message?

Generally, text length is limited to 4096 bytes (e.g. 4096 English letters). However, different instant message services have different message length limitations. If you enter too much text, the instant message server will not allow the message. You will be informed that the message you want to send is too long.

Why does sending a file fail?

- 1 This may be caused by an unstable network environment - either yours or your contact's. Wait a few minutes and try again.
- 2 There may be compatibility problems between your IM client and your contact's. The IM clients from Microsoft, Google, Yahoo! and AIM are updated frequently. The Aspire one Messenger will be updated regularly.

Use the on-line update mechanism to check for a new Aspire one Messenger version.

Why can't Messenger sign in to my IM services?

This may be due to the following reasons:

- Account error. Please double check the account and password.
- Your network manager has blocked the IP and ports for MSN, Yahoo! Messenger, Google Talk, and AIM.
- Server is temporarily unavailable. Please wait a bit and try again.

Why weren't my offline messages delivered?

MSN Messenger/Windows Live Messenger, Yahoo!, Google Talk and AIM support offline messages, but this function is not guaranteed due to the risks of network instability and incompatibility between messenger clients. You're encouraged to use email to ensure delivery of important messages.

Why I can't see my Yahoo buddy's webcam?

Yahoo webcam sharing needs your buddy to share his/her webcam first. Ask your buddy to enable webcam sharing for you.

Why can't I have webcam conversations with more than one contact at a time?

To ensure high-quality transmission, the Aspire one Messenger supports only one video call, voice call or webcam sharing session at any time. That means if you are in a video call with your MSN buddy, you won't be able to see your Yahoo buddy's webcam or make a voice call to your Google Talk buddy.

Why doesn't the Aspire one Messenger show the correct presence status?

This may be caused by an unknown synchronization problem between the server and client. Please sign out of the account and sign in again to synchronize the status.

My contact sent me a message to download a new MSN client, but it failed to install.

The official MSN Messenger or Windows Live Messenger clients from Microsoft can only run on Windows. Your Aspire one is a Linux-based computer and cannot run the Windows applications.

Using the keyboard

Your *Aspire one* has a close-to-full-sized keyboard and an embedded numeric keypad, separate cursor, lock, function and special keys.

Lock keys and embedded numeric keypad

The keyboard has three lock keys which you can toggle on and off.



Lock key	Description
Caps Lock	When Caps Lock is on, all alphabetic characters typed are in uppercase.
Num Lock <Fn> + <F11>	When Num Lock is on, the embedded keypad is in numeric mode. The keys function as a calculator (complete with the arithmetic operators +, -, *, and /). Use this mode when you need to do a lot of numeric data entry. A better solution would be to connect an external keypad.
Screen Lock <Fn> + <F12>	Lock the screen when you leave your computer. A password is needed to unlock the computer.

The embedded numeric keypad functions like a desktop numeric keypad. It is indicated by small characters located on the upper right corner of the keycaps. To simplify the keyboard legend, cursor-control key symbols are not printed on the keys.










Desired function	Num Lock on	Num Lock off
Number keys on embedded keypad	Type numbers in a normal manner.	
Main keyboard keys	Hold <Fn> while typing letters on embedded keypad.	Type the letters in a normal manner.

Hotkeys

The computer employs hotkeys or key combinations to access most of the computer's controls like screen brightness and volume output.

To activate hotkeys, press and hold the **<Fn>** key before pressing the other key in the hotkey combination.



Hotkey	Icon	Function	Description
<Fn> + <F4>		Sleep	Puts the computer in Sleep mode.
<Fn> + <F5>		Display toggle	Switches display output between the display screen, external monitor (if connected) and both.
<Fn> + <F6>		Screen blank	Turns the display screen backlight off to save power. Press any key to return.
<Fn> + <F7>		Touchpad toggle	Turns the internal touchpad on and off.
<Fn> + <F8>		Speaker toggle	Turns the speakers on and off.
<Fn> + <↑>		Brightness up	Increases the screen brightness.
<Fn> + <↓>		Brightness down	Decreases the screen brightness.
<Fn> + <△>		Volume up	Increases the sound volume.
<Fn> + <▽>		Volume down	Decreases the sound volume.

Special keys

You can locate the Euro symbol and the US dollar sign in the upper-center and/or bottom-right of your keyboard.



The Euro symbol

- 1 Open a text editor or word processor.
- 2 Hold **<Alt Gr>** and then press the **<5>** key at the upper-center of the keyboard.



Note: Some fonts and software do not support the Euro symbol.

The US dollar sign

- 1 Open a text editor or word processor.
- 2 Hold **<Shift>** and then press the **<4>** key at the upper-center of the keyboard.



Note: This function varies according to the language settings.

Frequently asked questions

The following is a list of possible situations that may arise during the use of your computer. Easy solutions are provided for each one.

I turned on the power, but the computer does not start or boot up.

Look at the power indicator:

- If it is not lit, no power is being supplied to the computer. Check the following:
 - If you are using on the battery, it may be low and unable to power the computer. Connect the AC adapter to recharge the battery pack.
 - Make sure that the AC adapter is properly plugged into the computer and to the power outlet.

Nothing appears on the screen.

The computer's power management system automatically blanks the screen to save power. Press any key to turn the display back on.

If pressing a key does not turn the display back on, three things might be the cause:

- The brightness level might be too low. Press **<Fn> + <D>** (increase) to adjust the brightness level.
- The display device might be set to an external monitor. Press the display toggle hotkey **<Fn> + <F5>** to toggle the display back to the computer.
- If the Sleep indicator is lit, the computer is in Sleep mode. Press and release the power button to resume.

No audio is heard from the computer.

Check the following:

- The volume may be muted. In Linpus Linux, look at the volume control (speaker) icon on the taskbar. If it is crossed-out, click on the icon and deselect the **Mute all** option.
- The volume level may be too low. In Linpus Linux, look at the volume control icon on the taskbar. You can also use the volume control buttons to adjust the volume. See **"Hotkeys" on page 51** for more detail.
- If headphones, earphones or external speakers are connected to the line-out port on the computer, the internal speakers automatically turn off.

The keyboard does not respond.

Try attaching an external keyboard to a USB port on the computer. If it works, contact your dealer or an authorized service center as the internal keyboard cable may be loose.

The printer does not work.

Check the following:

- Make sure that the printer is connected to a power outlet and that it is turned on.
- Make sure that the printer cable is connected securely to the computer's USB port and the printer.

I want to restore my computer to its original settings using a recovery disc.

The Recovery disc will help you to restore the hard drive with the original software content that was installed when you purchased your notebook. Follow the steps below to rebuild your hard drive. Your drive will be reformatted and all data will be erased. **It is important to back up all data files before you use this option.**

- 1 Press the power button to turn the system on.
- 2 Press **F2** during the Power-On Self-Test (when the Acer logo is displayed on screen after bootup) to enter BIOS Setup.
- 3 Select the **Boot** menu.
- 4 Refer to onscreen instructions to set the first device to any bootable optical disc drive.
- 5 Insert the Recovery disc into the selected optical disc drive.
- 6 Select **Exit Saving Changes** from the **Exit** menu or press **F10**.
- 7 Follow the onscreen instructions to complete the installation process.
- 8 Restart your computer. Linpus Linux installation will finish.

How do I upgrade to the latest version of Firefox?

- 1 Go to <http://rpm.pbone.net/>
- 2 Type **Firefox** in the search bar
- 3 Look for Fedora 6 package



Note: There are multiple Firefox RPM packages you can choose from. For example, to upgrade to Firefox 2.0.0.11, you can search for **firefox-2.0.11-1.fc8.remi.i386.rpm** package and download.

- 4 After downloading, run `rpm -Uvh firefox-2.0.0.11-1.fc6.remi.i386.rpm` (in Konsole).

You should have successfully upgraded your Firefox.

Requesting service

International Travelers Warranty (ITW)

Your computer is backed by an International Travelers Warranty (ITW) that gives you security and peace of mind when traveling. Our worldwide network of service centers are there to give you a helping hand.

An ITW passport comes with your computer. This passport contains all you need to know about the ITW program. A list of available, authorized service centers is in this handy booklet. Read this passport thoroughly.

Always have your ITW passport on hand, especially when you travel, to receive the benefits from our support centers. Place your proof-of-purchase in the flap located inside the front cover of the ITW passport.

If the country you are traveling in does not have an Acer-authorized ITW service site, you can still get in contact with our offices worldwide. Please consult <http://global.acer.com>.

Before you call

Please have the following information available when you call Acer for online service, and please be at your computer when you call. With your support, we can reduce the amount of time a call takes and help solve your problems efficiently. If there are error messages or beeps reported by your computer, write them down as they appear on the screen (or the number and sequence in the case of beeps).

You are required to provide the following information:

Name: _____

Address: _____

Telephone number: _____

Machine and model type: _____

Serial number: _____

Date of purchase: _____

Regulations and safety notices

FCC notice

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

Notice: Peripheral devices

Only peripherals (input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this equipment. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this computer.

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users

This Class B digital apparatus complies with Canadian ICES-003.

Remarque à l'intention des utilisateurs canadiens

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for EU countries

Hereby, Acer, declares that this notebook PC series is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. (Please visit <http://global.acer.com/products/notebook/reg-nb/index.htm> for complete documents.)

Compliant with Russian regulatory certification



ME61

Laser compliance statement

The CD or DVD drive used with this computer is a laser product.

The CD or DVD drive's classification label (shown below) is located on the drive.

CLASS 1 LASER PRODUCT

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.

APPAREIL A LASER DE CLASSE 1 PRODUIT

LASERATTENTION: RADIATION DU FAISCEAU LASER INVISIBLE EN CAS D'OUVERTURE. EVITER TOUTE EXPOSITION AUX RAYONS.

LUOKAN 1 LASERLAITE LASER KLASSE 1

VORSICHT: UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET NICHT DEM STRAHL AUSSETZEN

PRODUCTO LÁSER DE LA CLASE I

ADVERTENCIA: RADIACIÓN LÁSER INVISIBLE AL SER ABIERTO. EVITE EXPONERSE A LOS RAYOS.

ADVARSEL: LASERSTRÅLING VED ÅBNING SE IKKE IND I STRÅLEN.

VARO! LAVATTAESSA OLET ALTTIINA LASERSÄTEILYLLE.

WARNING: LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD ÄLÅ TUIJOTA SÄTEESEENSTIRRA EJ IN I STRÅLEN

WARNING: LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNADSTIRRA EJ IN I STRÅLEN

ADVARSEL: LASERSTRÅLING NÄR DEKSEL ÅPNESSTIRR IKKE INN I STRÅLEN

LCD pixel statement

The LCD unit is produced with high-precision manufacturing techniques. Nevertheless, some pixels may occasionally misfire or appear as black or red dots. This has no effect on the recorded image and does not constitute a malfunction.

Radio device regulatory notice



Note: Below regulatory information is for models with wireless LAN and / or Bluetooth only.

General

This product complies with the radio frequency and safety standards of any country or region in which it has been approved for wireless use. Depending on configurations, this product may or may not contain wireless radio devices (such as wireless LAN and/or Bluetooth modules). Below information is for products with such devices.

European Union (EU)

R&TTE Directive 1999/5/EC as attested by conformity with the following harmonized standard:

- **Article 3.1(a) Health and Safety**
 - EN60950-1:2001+ A11:2004
 - EN50371:2002
- **Article 3.1(b) EMC**
 - EN301 489-1 V1.4.1
 - EN301 489-3 V1.4.1
 - EN301 489-17 V1.2.1
- **Article 3.2 Spectrum Usages**
 - EN300 220-3 V1.1.1
 - EN300 328 V1.6.1
 - EN300 440-2 V1.1.2
 - EN301 893 V1.2.3



List of applicable countries

EU member states as of May 2004 are: Belgium, Denmark, Germany, Greece, Spain, France, Ireland, Italy, Luxembourg, the Netherlands, Austria, Portugal, Finland, Sweden, United Kingdom Estonia, Latvia, Lithuania, Poland, Hungary, Czech Republic, Slovak Republic, Slovenia, Cyprus and Malta. Usage allowed in the countries of European Union, as well as Norway, Switzerland, Iceland and Liechtenstein. This device must be used in strict accordance with the regulations and constraints in the country of use. For further information, please contact local office in the country of use.


The FCC RF safety requirement

The radiated output power of the wireless LAN Mini PCI Card and Bluetooth card is far below the FCC radio frequency exposure limits. Nevertheless, the notebook PC series shall be used in such a manner that the potential for human contact during normal operation is minimized as follows:

- 1 Users are requested to follow the RF safety instructions on wireless option devices that are included in the user's manual of each RF option device.



Caution: To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm (8 inches) must be maintained between the antenna for the integrated wireless LAN Mini PCI Card built in to the screen section and all persons.

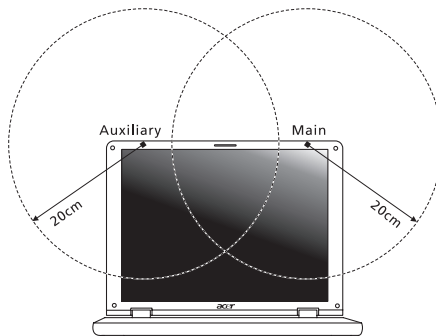

Note: The Acer wireless Mini PCI adapter implements a transmission diversity function. The function does not emit radio frequencies simultaneously from both antennas. One of the antennas is selected automatically or manually (by users) to ensure good quality radiocommunication.

- 2 This device is restricted to indoor use due to its operation in the 5.15 to 5.25 GHz frequency range. FCC requires this product to be used indoors for the frequency range 5.15 to 5.25 GHz to reduce the potential for harmful interference to co-channel Mobile Satellite systems.
- 3 High power radar are allocated as primary users of the 5.25 to 5.35 GHz and 5.65 to 5.85 GHz bands. These radar stations can cause interference with and/or damage this device.
- 4 An improper installation or unauthorized use may cause harmful interference to radio communications. Also any tampering of the internal antenna will void the FCC certification and your warranty.

Canada — Low-power license-exempt radio communication devices (RSS-210)

- a Common information
Operation is subject to the following two conditions:
 1. This device may not cause interference, and
 2. This device must accept any interference, including interference that may cause undesired operation of the device.
 - b Operation in 2.4 GHz band
To prevent radio interference to the licensed service, this device is intended to be operated indoors and installation outdoors is subject to licensing.
 - c Operation in 5 GHz band
- The device for the band 5150-5250 MHz is only for indoor usage to reduce potential for harmful interference to co-channel Mobile Satellite systems.
 - High power radars are allocated as primary users (meaning they have priority) of 5250-5350 MHz and 5650-5850 MHz and these radars could cause interference and/or damage to LELAN (Licence-Exempt Local Area Network) devices.

LCD panel ergonomic specifications

Design viewing distance	500 mm
Design inclination angle	0.0°
Design azimuth angle	90.0°
Viewing direction range class	Class IV
Screen tilt angle	85.0°
Design screen illuminance	<ul style="list-style-type: none"> • Illuminance level: [250 + (250cosα)] lx where $\alpha = 85^\circ$ • Color: Source D65
Reflection class of LCD panel (positive and negative polarity)	<ul style="list-style-type: none"> • Ordinary LCD: Class I • Protective or Acer CrystalBrite™ LCD: Class III
Image polarity	Both
Reference white:	<ul style="list-style-type: none"> • Yn
Pre-setting of luminance and color temperature @ 6500K (tested under BM7)	<ul style="list-style-type: none"> • u'n • v'n
Pixel fault class	Class II