

 
BRINKS TIMERS

44-1010

Digital Timer

Warning

- The unit is to be connected to a 120V, 60Hz power source only.
- Capacity: 15A (1875 W) Resistive (General Purpose); 4A, (500 W) Tungsten (Lighting). **Do Not Exceed Capacity.**
- Do not attempt to disassemble the unit. There are no serviceable parts inside.
- The timer is for indoor use only.
- **PLEASE READ THROUGH THE INSTRUCTIONS BEFORE USING.**

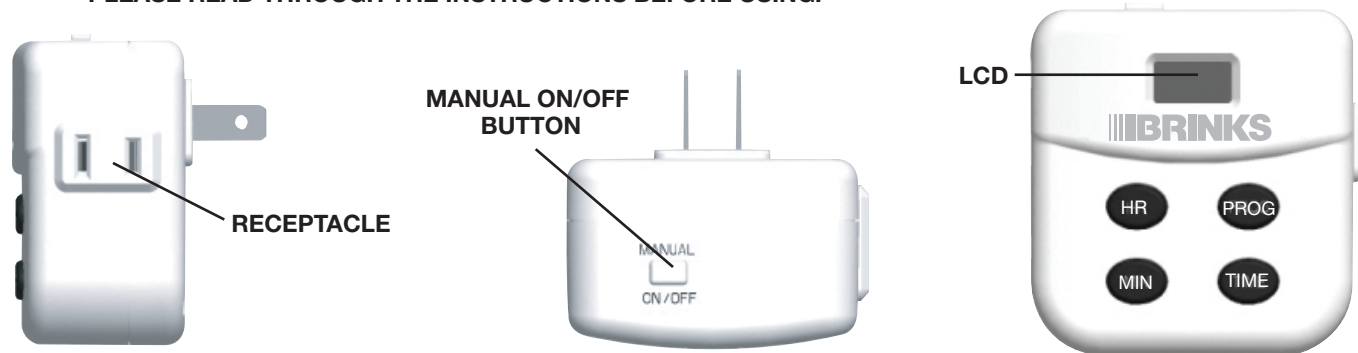

Features

- Program repeats daily.
- Manual override On/Off button.
- The timer uses an internal, rechargeable battery for backup in case of power failure.

Rechargeable Battery

- The timer uses an internal, rechargeable battery for backup in case of power failure.
- The timer has to be plugged in for only 5 minutes before the battery is charged enough to program the timer while it is unplugged.
- The battery backup is effective for up to 7 days after a power failure if it is fully charged.

NOTE: While operating on battery power, the LCD will eventually become blank, but the internal clock will still keep the time, and the program settings will be stored as long as the battery has a charge.

Setting the Time

- When the timer is plugged into the outlet or the timer's battery is charged, the display will flash "12:00 AM" (FIG 1). Press the "HR" & "MIN"(hour/minute) buttons (FIG 2) respectively to set up the correct time. Hold down the buttons for rapid increments. Once the correct time is displayed, press the "TIME" button to lock the settings. The ":" sign starts flashing and other displays stay solid.
- In order to adjust the time after initialization, press and hold the "TIME" button for one second to get in the time setting screen and repeat the above steps to set the new time.



FIG 1



FIG 2

Timer Program Setting

- Press and hold the "PROG" button for more than 1 second or until the display starts flashing (FIG 3). "ON" indicates activation of timer function.

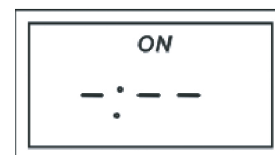 


FIG 3



FIG 4



FIG 5

- Press the "HR" & "MIN" buttons respectively to set up the time of day for the timer to be TURNED ON or ACTIVATED. (FIG 4 shows 6 PM as an example). Hold down the "HR" & "MIN" buttons for rapid increments.
- After setting up the activation time, press the "PROG" button again to set the time for the timer to be TURNED OFF or DEACTIVATED. The display changes from "ON" to "OFF" (FIG 5). Repeat these procedures above to set up the OFF time. (For example, in FIG 5, the timer will be turned off at 10:30 PM)
- To remove the programmed times, enter "0:00" for both the ON and OFF times. The timer can only then be controlled by the "Manual ON/OFF" button.
- To exit the programming screen, press the "TIME" button once.
- Plug the timer into a wall socket and push the "Manual ON/OFF" button to OFF if you have not done so. If the "Manual ON/OFF" button is turned ON, the unit will act as a regular wall socket to the appliance connected to it.

Manual ON/OFF Button

- The "Manual ON/OFF" button is located on the left of the top surface of the unit and when pressed will cycle the unit between ON and OFF.
- If the Manual ON/OFF setting is turned ON, the unit will act as a regular wall socket. Manually turning the unit ON or OFF will not deactivate the Timer Program. The next programmed action will override the manual setting unless the programmed ON/OFF times are each set to 0:00 (see Time Program Setting above).

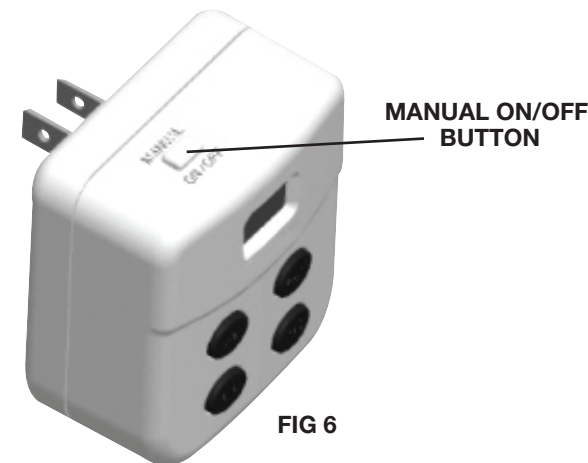 


FIG 6

WARRANTY

This product is warranted to be free from defects in material and workmanship for the life of the product. If a defect in material or workmanship occurs, call 1-800-562-5625 for instructions on how to have the defective product repaired or replaced free of charge.

LIMITATIONS

- This warranty only covers the timer unit and is not extended to other components or equipment that is used in conjunction with the product.
- This warranty is extended to the original purchaser of the product. A purchase receipt or other approved proof of purchase is required before warranty service will be rendered.
- Unauthorized service or modification to this product or any furnished component will void the warranty in its entirety.
- THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY PARTICULAR PURPOSE OR USE, AND SPECIFICALLY IN LIEU OF ALL SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO ANY LOSS OF BUSINESS OR PROFITS, WHETHER OR NOT FORESEEABLE) RESULTING FROM THE USE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.

Some states or provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply.

- This warranty gives you specific rights, and you may also have other rights that vary from state to state.

NOT COVERED

- Failure of the product as a result of an accident, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship.
- Damaged caused by electronic equipment plugged into the timer.
- Reimbursement for inconvenience, installation, setup time, loss of use, or unauthorized service.
- Special, indirect, incidental or consequential damages.