



# Compatible Android Devices

## Acer

DA241HL– DA241HL  
A211– picasso\_e2  
A701– picasso\_mf  
DA222HQL– da2  
A110– a110  
G100W– maya  
Picasso– ventana  
B1-711– B1-711  
A510– picasso\_m  
Iconia Tab A100 (VanGogh)– vangogh  
B1-A71– B1-A71  
G1-715– G1-715  
Picasso– picasso  
A1-811– mango  
B1-710– B1-710  
DA220HQL– DA220HQL  
A200– picasso\_e

## Anydata

Coby MID7065– MID7065  
Pendo PNDPP48GP– PNDPP48GP  
LePanII– LePanII\_wifi  
Vivitar Camelio Tablet– PI070H04CA  
Zeki TBDG773– TBDG773  
iCraig CMP749– CMP749  
Coby MID8065– MID8065  
Auchan MID7317CP Tablet – MID7317CP  
iCraig CMP748– CMP748  
ematic EGP010– EGP010  
Marquis Tablet– marquis\_tablet  
Eviant MT8000– PDM829MD  
essentieb ST8003/FT8001 Tablet– M805ND  
ematic EGS004– EGS004  
Grundig GR-TB10S Tablet– GR-TB10S  
Prestigio PMT5877C– PMT5877C  
COBY MID7055– MID7055  
Carrefour CT720 / Emdoor EM63 Tablet– EM63  
HKC P778A– HKCP778A

Carrefour CT710– M755ND  
DOTPAD DP3D8 / Gadmei– E8-3D  
Vivitar XO Tablet– PI070H08XO  
Proscan PLT7777– AMLMID710K  
Monster M7 Tablet– MONSTERM7  
Nextbook Next7P12– M727MC  
Coby MID1065– MID1065  
HKC P776A– P776A  
Insignia NS-13T001 Tablet– oracle  
Nextbook NX007HD Tablet– M7000ND  
Proscan PLT7223G– PLT7223G  
Leader I10A-LE– I10A-LE  
Prestigio PMT7287C3G– PMT7287C3G  
Lazer MD7305 Tablet / AMTC– MD7305  
ematic EGS102– EGS102  
Nextbook NX008HD8G Tablet– M8000ND  
RCA RCT6078W2– AMLEM62  
D2-721G– D2-721G  
DOPO GMS-718 Tablet / Discovery– DT088  
TecToy TT-2500– AML757ND  
D2-727G– D2-727  
Proscan PLT8223G– PLT8223G  
Mach\_Speed Trio G2 Tablet– Trio\_Stealth\_G2  
HKC P886A– P886A  
HCL ME TABLET PC U2– M712MC  
Visual Land Prestige 7D– PRO7D  
Digix TAB-840\_G– TAB-840\_G  
HS\_7DTB14– HS\_7DTB14  
Nextbook NX008HI Tablet / Carrefour CT810– M909NP  
HKC P774A– P774A  
Nextbook Next7D12 Tablet– M757ND  
ematic EGP008– EGP008

## Archos

Archos 101 Platinum– A101PL  
Archos 97 Carbon– A97C  
Archos 97b Platinum– AC97BPL  
ARCHOS 80G9– A80S  
Archos GamePad 2– A70GP2  
Archos 70 Titanium– A70TI  
70b Titanium– A70BTI  
Archos 80 Titanium– A80TI  
Tesco Hudl HT7S3– ht7s3  
Archos 80 XS– A80XSK  
Archos ChefPad– A97CFP  
Archos 80 G9– A80

Archos 70it 2– A70it2  
Archos 97 Xenon– A97XE  
Archos 80 Cobalt– A80CO  
Kuno– KUNO4  
Archos GamePad– A70GP  
Archos 101 Internet Tablet– A101S  
Archos 97 Cobalt– AC97CO  
Archos 97 Titanium HD– A97TIHD  
Archos 80 Xenon– A80XE  
Auchan Qilive8– QiLive8  
Archos 97 Platinum– A97PL  
Auchan Qilive97– QiLive97  
Auchan Selecline 10– SELECLINE10  
Archos 80 Carbon– AC80CA  
Archos 101 XS– A101XS  
Archos 80 Platinum– A80PL  
Archos 70 Cobalt– AC70CO  
Archos 80 Childpad– A80CHP  
Archos 101 Titanium– A101TI  
Archos 97B Titanium– A97BTI  
Archos 101 G9– A101  
Archos FamilyPad 2– A133FP2  
Archos 80b Platinum– A80BPL  
technika8– tsc80  
Auchan Qilive97R– QiLive97R  
Auchan Qilive8QC– QiLive8QC

## Asus

ASUS Transformer Pad TF600T– TF600T  
ASUS Transformer Pad TF300T– TF300T  
ASUS MeMO Pad Smart 10– ME301T  
PadFone-T004– ASUS-A86  
ME171– EP71  
TF700T– TF700T  
Eee Pad– EeePad  
Eee Pad TF101– TF101  
ASUS Fonepad ME371MG– ME371MG  
ASUS Transformer Book Trio– TX201LA  
ASUS Transformer AiO P1801– P1801-T  
Eee Pad Slider– SL101  
K00F– K00F  
MeMo Pad HD 7– K00U  
PadFone Infinity– ASUS-A80  
PadFone 2– A68  
K00L– K00L  
ASUS Transformer Pad TF502T– TF502T

Eee Pad TF101-WiMAX– TF101-WiMAX  
ASUS Transformer Pad TF300TG– TF300TG  
Asus Fonepad 7– K00E  
ASUS MeMo Pad ME302C– ME302C  
Transformer Pad Infinity– K00C  
ME172V– me172v  
ASUS Transformer Pad TF300TL– TF300TL  
ME173X– ME173X  
ASUS Transformer Pad Infinity– TF700KL  
ASUS ETBW11AA– ETBW11AA  
Transformer TF101G– TF101G  
Eee Pad Transformer Prime– TF201  
ME302KL– ME302KL  
Barnes and Noble  
NOOK® HD– hummingbird  
NOOK® HD+– ovation

## Dell

Venue 7– thunderbird  
Dell Streak 7– streak7  
Venue 8– yellowtail  
Dell Streak 10 Pro– Streak10Pro  
Streak– streak

## Digi-In

S221C3A– MMD\_WW  
SAT2242 WorkTab – ADP\_WW  
EMATICEGS109– EGS109  
HANNSpree HSG1279 – HANNSpad  
Allfine PC1038Q– fine10\_Joy  
SMARTAB ST700 – ST700  
Danew Dslide 1013– DSlide1013  
Hipstreet HS-10DTB8– HS-10DTB8  
Prestige PRO10D– PRO10D  
MegaFon MT3A– MT3A  
Ncredible NV8– NV8  
Prestige 7G– Prestige-7G  
Carrefour CT820– M878LP  
NB07– NB07  
Allfine M721– 86S  
A2272PWHT– AOC\_WW  
Enspert  
Carrefour CT1010– Carrefour  
ITP-S100WD– illuminus  
ESP\_E301VE– ESP\_E301

E-TAB– E-TAB

## Foxconn International Holdings Limited

ICRAIG CMP 759– Omega7  
SAKAISIO FP-U320-711-WWAN– U320-3G  
Zeki TBQC1063B– TBQC1063B  
Carrefour CT1020W– M1010FP  
Ematic EGQ307– EGQ307  
RCA RCT6378W2– RCT6378W2  
Zeki TBDG1073– TBDG1073  
ICRAIG CMP 756– Omega9  
Digital2 Deluxe– nuclear-D2\_Deluxe  
Ematic ETH102– ETH102  
oioo Model 2– wecct  
SAKAISIO FP-U320-711-WIFI– U320-WF  
IN610– MG2  
FE6– FE6  
InFocus NewTab F1– f1  
MUSN-T800– t800  
ViewPad7X– viewpad7x  
Polaroid A/S7– wing-AS7  
RCA RCT6077W2– RCT6077W2  
Ematic EGS017– EGS017  
RCA RCS13101T– RCS13101T  
RCA RCT6077W22– RCT6077W22  
RCA RCT6691W3– RCT6691W3  
iView 778TPC– 778TPC  
Camangi-Mangrove7– mangrove7  
Trio MST711– nuclear-MST711  
iView 920TPC– 920TPC  
DOPO GS-918– GS\_918  
VENSTAR2050– VENSTAR2050  
Cherry-MUSN-T800– musn-t800  
MachSpeed TrioStealth-7 – TrioStealth-7  
Polaroid A/S10– wing-AS10  
Polaroid V7– nuclear-M7021  
Polaroid A/S8– wing-AS8

## Fujitsu

F-02F– F02F  
ARROWS Tab FJT21– FJT21\_jp\_kdi  
STYLISTIC M350/CA2– M350  
ARROWS Tab LTE F-01D– blaze\_tablet  
STYLISTIC M532– mx532

ARROWS Tab F-05E– F05E  
STYLISTIC MH350– MH350  
STYLISTIC M702– M702  
ARROWS Tab Wi-Fi FAR70B– FAR70B

## Funai Electric

ALM-001J– smdkv210

## Gigabyte

LUXYA MID704DC Tablet / Bitmore Tab770– MY7317P  
AMTC MD7008– MD7008A  
AMTC MD7081– MD7081A  
mexico– Lanix  
MachSpeed Trio Stealth\_8 Tablet– D\_8AL  
PROSCAN PLT1066 / MAG MAGPAD / TEAC TEACTAB /  
DOPO GS-1008– MID1005\_K  
MachSpeed Trio Stealth\_10 Tablet– D\_10AL  
TB100– TB100  
Hipstreet 9DTB7 / Lazer MY9308P– AMLMY9308P  
THOMSON PRIMO7 Tablet– PRIMO7  
HKC A79 Tablet– EM62  
Audiovox T852 Tablet– MID30801  
PHP-S231C4AFD– G3SMNTS23  
MachSpeed Trio Stealth\_9 Tablet– D\_9AL  
THOMSON PRIMO8 Tablet– AMLMY8306P  
PIONEER R1– RCK8726Y703H  
PROSCAN PLT8235G Tablet– MID807\_K  
Bitmore Tab870– Tab870  
Nobis NB09– M9025  
RCA DAA730R / RCA DAA738R– MD7081  
TM105A– TM105A  
AOC-A2472PW4T– G3SMNTA24  
TM75A– TM75A  
Zeki TBDG874 Tablet– TBDG874B  
TM75A-V– TM75A-V  
Lazer MD1005 Tablet– MD1005  
ENVIZEN DIGITAL V917G– GK-MID9022  
Audiovox T752 Tablet– AD7L  
TM105– TM105  
P102g– P102g  
AMTC MD1001 Tablet– MD1001  
essentielb ST7001 Tablet– ST7001  
TMAX TM9S775– MID908A-K  
ODYS UNO X8– UNO\_X8  
DigitalStream DWA1015D Tablet– DWA1015D

## Google

XOOM– stingray  
Nexus 7– deb  
XOOM– wingray  
Nexus 7– tilapia  
Nexus 7– flo  
Nexus 10– manta  
Nexus 7– grouper

## HP

Tablet 10– balsa  
Slate21– phobos  
Slate8 Pro– fig  
7 Tablet– Mesquite  
Slate7 Plus– birch  
Slate 10 HD– bonsai10  
Slate 7 HD– bonsai7  
Slate 7 Extreme– olive  
HP Slate 7– pine  
HP SlateBook 10 x2 PC– 3645

## HTC

Puccini– puccinilte  
HTC\_P515E– expresskt  
HTC Flyer– express  
Flyer– flyer

## Haier

PADCT1010W– PADCT1010W  
INGO-TAB– INGO-TAB  
HG-9041– HG-9041  
GF88– I7A-LE  
TAB-700– TAB\_700  
D2-751G– d2PAD  
HomeSurf742\_AT7003– HomeSurf742\_AT7003  
D2-927G– D2-927G  
PAD712– PAD712  
AT7003– AT7003

## Hisense

F270BW– F270BW  
M470BSG– m470bsg  
HS-M170AT– TP9101  
M470BSA– m470  
M370BW– m370  
WM8– wm8980s  
M470BSD– m470bsd  
NBX-T7014– E270BSA  
W270BD– W270BD  
M470BSE– m470bse  
M1101AT– TP9102  
G1– G1  
M3101BW– m3101  
M470BSS– m470bss  
F5070– mt8389  
G2-3GP– G2-3GP  
Hon Hai Precision Industry Co., Ltd.  
PocketBook A7– EP5A\_wifi  
PocketBook A10– EP10\_wifi  
Cisco CP-DX650– CP-DX650

## Huawei

A01HW– hwS7-901w  
IDEOS S7 Slim– qsd8k\_slim  
HUAWEI MediaPad– hws7300c  
T801– hwt801  
Mate– hwmt1-t00  
HUAWEI MediaPad– hws7300u  
HUAWEI MediaPad– hws7300w  
dtab01– dtab01  
S7– hws7601w  
MediaPad 7 Lite– hws7930w  
IDEOS S7– qsd8k\_s7  
S7– hws7601c  
MediaPad 10 FHD– hws10101w  
S7– hws7701u  
Vogue7– hws7601u  
S10– hws10103l  
S10– hws10201l  
MediaPad Youth– hws7701w  
MediaPad7– hws7601us  
T102– hwt102  
MediaPad 10 FHD– hws10101u  
S7– hws7951w  
MediaPad 7 Lite– hws7930u

T802– hwt802

## Intel

AQ710A– Salitpa

## Kobo

Arc 7– lbp8

Vox– pegasus

Arc 10HD– macallan

Arc– zeus

## LG

Optimus Pad– lu6900

## LGE

LG-V900– v900aus

Optimus Pad– v901tr

Optimus Pad– v909

Optimus Pad– v909mkt

Optimus Pad– v901kr

Optimus Pad– l06c

Optimus Pad– v905r

Optimus Pad– v900

Optimus Pad– v901ar

LG G PAD 8.3– awifi

VU3– vu3

Optimus Pad– v900asia

LG-V901– v901tw

Lenovo Mobile

Show all 42

IdeaTab A2107A-H– lenovo75\_a2\_ics

B8000-F– B8000

ThinkPad Tablet– 18382AU

LIFETAB E7310– LIFETAB\_E7310

PC-TE510N1B– LaVieTab

Lenovo S930– S930

IdeaTab A2107A-H– a2\_3g\_data

IdeaTabV2010A– santiago

A1000– A1000F

IdeaTab S2007A-H– msm8660\_surf

IdeaTab K2110A-F– K2110A-F

LIFETAB E7316– LIFETAB\_E7316

IdeaTab A1020– A1020T

IdeaTab A5000– A5000E

IdeaTabS2109A-F– S2109A

IdeaTab S6000– S6000

A2107A– A2107A-H

LIFETAB E10310– LIFETAB\_E10310

A1000L– A1000LF

IdeaTabA2207A-H– A2207A-H

A10– A10

B6000-F– B6000

A1\_07– A1\_07

LIFETAB E10316– LIFETAB\_E10316

SmartTabII7– SmartTabII7

LIFETAB\_S9512– LIFETAB\_S9512

PC- TS507N1S– PC-TS507N1S

PC-TE307N1W– PC-TE307N1W

MD\_LIFETAB\_P9516– MD\_LIFETAB\_P9516

IdeaTab A2107A-F– a2\_wifi\_row

IdeaTabS2110AH– msm8960

S5000– S5000

Indigo– Indigo

A1000-G– A1000G

Lenovo N308– SmartAIO

IdeaTabV2007A– sanpaolo

IdeaTabA2109A– A2109A

IdeaTab A1010– A1010T

S6000L– S6000L

A3000– A3000

A2107A-H– lenovo75\_a2\_att\_ics

Lenovo S930\_ROW– S930\_ROW

## MSI

Primo73– N71J

Primo76– N728

Primo81– N821

Primo81– Primo81

## Micromax

P275– P275

P300– crane-M701C\_mmx

Motorola

Show all 8

XOOM– wifi\_hubble

XOOM– umts\_hubble

MZ505– Graham

XOOM– umts\_everest

Droid X– cdma\_shadow  
MZ616– pasteur  
XOOM 2 ME– fleming  
MZ505– graham\_wifi

## NEC

LifeTouch B– LTB019W  
LifeTouch L– LTTLA32  
AGT10– AGT10  
LifeTouch W– LifeTouch\_W1  
D000-000002-W01– LT-W1\_1  
LifeTouch Note– LTNA7  
LifeTouch B– LTB019G  
LifeTouch Note– LTNA7F  
MEDIAS TAB N-06D– N-06D  
LifeTouch B– LTB018  
LifeTouch W– LT-W1\_2  
LifeTouch Note– D000000011N  
LifeTouch L– D000000023  
MEDIAS TAB UL N-08D– N-08D  
LifeTouch S– LifeTouch\_D7  
LifeTouch L– LTTLA16  
LifeTouch B– LTB028  
LifeTouch B– LTB013  
LifeTouch S– LifeTouch\_D1  
LifeTouch Note– D000000010N

## NVidia

TegraNote– tegranote

## Panasonic Corporation

JT-B1– B1  
JT-H580VT– H580VT\_A  
FZ-A1B– toughpad  
SV-ME1000– K1  
UN-W700– F1  
JT-H581VT– H581VT\_A

## Panasonic Mobile Communications

P-08D– P-08D

## Pantech

AT1– at1  
PantechP4100– pororo

## Pegatron

Android Tablet PC– DukeWifi  
Android Tablet PC– Duke3G  
chagall– chagall  
MaxilQ– MaxilQ  
Getac Z710– z710  
Cintiq Companion Hybrid 13HD–  
CintiqCompanionHybrid13HD  
Olipad– OP111  
Harris 12131-1000– msm8660\_cougar  
Android Tablet PC– TabletPC

## Philips Electronics

PI7100/93– PI7100\_93  
PI3100/93– PI3100\_93  
PI2000– PI2000  
PI3100Z3/93– PI3100Z3\_93  
PI3100/98– PI3100\_98  
T8 PI7000– Tablet\_8  
PI3900/98– PI3900\_98  
PI3900/58– PI3900\_58  
PI3900– T7p\_Duo\_93  
PI3100/51– PI3100\_51  
Philips\_PI5000– Philips\_PI5000  
PI3900/51– PI3900\_51

## Positivo

YPY\_10FTB– YPY\_10FTB  
Positivo YPY7 wifi– YPY\_07STA  
Positivo YPY7 3G– YPY\_07FTA  
Positivo Ypy AB10E– YPY\_AB10EC  
Positivo YPY7 3G– TB07FTA  
Positivo Mini– mini  
YPY\_10STB– YPY\_10STB  
YPY 10 3G– YPY\_10FTA  
Ypy L1000– YPY\_L1000  
YPY\_TQ7– YPY\_TQ7  
Positivo YPY7 wifi– TB07STA  
Ypy AB10DP– YPY\_AB10DP

YPY\_AB7K– YPY\_AB7K  
Ypy AB10E– YPY\_AB10E  
Positivo YPY AB7– YPY\_AB7  
YPY\_07STB– YPY\_07STB  
Ypy Kids– YPY\_L700  
Ypy L1050– YPY\_L1050  
YPY\_07FTB– YPY\_07FTB

## Quanta Corporation

Le Pan TC1010– FG6A-LP  
Le Pan TC802A– UY8  
VSD221– VSD221  
Nirvana\_Tablet– Nirvana\_Tablet  
Lifetab P9514– LIFETAB\_P9514  
MiSS– MiSS  
NEOS– Wenu  
VSD220– VSD220  
M363/P– UY1  
Ellipsis 7– QMV7A  
eye3– UY3-PCW  
TA1013– nk1  
FaceVSION OC1020A– OC1020A  
CT2200– CT2200  
Gigaset QV1030– FG6Q  
FT103– FT103  
VSD241 Smart Display– VSD241  
INFINITY G NK2– infinity\_g  
OP110– OP110

## SHARP

A01SH– A01SH  
RW107– RW107  
EB-A71GJ– EB-A71GJ  
AQUOS PAD SHT21– SHT21  
AQUOS PAD SH-08E– SH-08E  
EB-WX1GJ/EB-W51GJ– Galapagos  
SK Telesys  
ITP-E410W– willow  
T720– T720  
ITP-R208W– rk30sdk

## Samsung

Galaxy Tab2 7.0 – espressovzw  
Galaxy MEGA– meliuslte

Galaxy Note 10.1– p4notewifi  
Galaxy Tab 8.9– SHV-E140L  
Galaxy Note 10.1– p4noteltevzw  
Galaxy Tab3 8.0– lt01wifi  
Galaxy Note 10.1– lt03lteskt  
Galaxy Tab 10.1– GT-P7503  
Galaxy Note 10.1– p4noterf  
GT-P7320T– GT-P7320T  
Galaxy Tab 7.7– SCH-I815  
Galaxy Note 10.1– p4notewifiktt  
Galaxy Note 10.1– p4notewifiany  
Galaxy Tab2 7.0– espressowifi  
Galaxy Tab 8.9– SGH-I957R  
Galaxy Mega 6.3– meliusltespr  
Galaxy Tab 10.1– GT-P7500D  
Galaxy Tab– GT-P1000N  
Galaxy Tab3– lt01lte  
GT-P7300B– GT-P7300B  
GT-P6200L– GT-P6200L  
Galaxy Tab2 10.1– espresso10rf  
Galaxy Tab3 8.0 – lt02lduwifi  
Galaxy Tab 10.1– SC-01D  
Galaxy Tab 8.9– SHW-M305W  
Galaxy Tab– SCH-I800  
Galaxy Tab– GT-P1000M  
Galaxy Note– SHV-E160S  
Galaxy Note 10.1 2014 Edition– lt03wifikx  
Galaxy Note 10.1– p4noteltektt  
Galaxy Tab 7.7– GT-P6800  
Galaxy Tab2 10.1 – espresso10can  
Galaxy Mega– meliuslteskt  
Galaxy Tab– GT-P1000  
SHV-E150S– SHV-E150S  
Galaxy Tab– GT-P1000R  
Galaxy Note– SGH-I717D  
Galaxy Tab3 10.1– santos103g  
Galaxy Note 10.1– lt03ltektt  
GT-N7000B– GT-N7000B  
Galaxy Tab3 7.0 – lt02ltespr  
Galaxy Note 10.1– p4notelteskt  
Galaxy Note 10.1– p4noterfktt  
Galaxy Tab– SHW-M180K  
Galaxy Note 10.1– p4noteltelgt  
Galaxy Tab 10.1– SHW-M380K  
Galaxy Mega 6.3– melius3gduosctc  
Galaxy Tab 10.1 N– GT-P7511  
Galaxy Tab 7.0 Plus– SGH-T869  
Galaxy Tab 10.1– SHW-M300W

Galaxy Tab 7.7 Plus– SC-01E  
Galaxy Tab 8.9– SGH-I957D  
Galaxy Tab3– It02wifi  
Galaxy Tab 7.0 Plus– SHW-M430W  
Galaxy Mega– meliusltecan  
Galaxy Tab3 Kids– It02kidswifi  
Galaxy Tab 8.9– SHV-E140K  
GT-P7500R– GT-P7500R  
Galaxy Tab 7.0– SPH-P100  
Galaxy Tab3– It023g  
Galaxy Note 8.0– konaltecان  
Galaxy Tab 8.9– GT-P7310  
Galaxy Tab2 10.1– espresso10wifi  
Galaxy Mega 6.3– meliusltekt  
Galaxy Note– SHV-E160L  
Galaxy Mega– melius3g  
Galaxy Tab2 10.1 – espresso10vzw  
Galaxy Tab3 8.0– It02lte  
GT-P7500M– GT-P7500M  
Galaxy Note 10.1 2014 Edition– It033g  
Galaxy Tab 10.1– SCH-I905  
Galaxy Note– SGH-I717R  
Galaxy Tab3 10.1– santos10lte  
Galaxy Mega 6.3– meliuslteigt  
Galaxy Note– GT-I9220  
Galaxy Tab– SHW-M180W  
Galaxy Tab 8.9– SHV-E140S  
Galaxy Mega– meliuslteatt  
Galaxy Tab3 7.0 – It02lteatt  
Galaxy Note– SHV-E160K  
Galaxy Tab2 10.1 – espresso10spr  
Galaxy Tab 7.7– GT-P6810  
Galaxy Tab 10.1 v– p3  
Galaxy Note 10.1 2014 Edition– It03lte  
Galaxy Tab 7.0 Plus– GT-P6200  
Galaxy Note– GT-N7000  
Galaxy Note– SC-05D  
Galaxy Mega 6.3– meliuslteusc  
Galaxy Tab3 8.0– It013g  
Galaxy Tab3 10.1– santos10wifi  
Galaxy Note 10.1– p4notewifiww  
Galaxy Tab 10.1– SHW-M380W  
Galaxy Note 8.0– kona3g  
Galaxy Note 10.1– p4notewifi43241any  
Galaxy Note 10.1– p4notelte  
Galaxy Mega 6.3– meliuslteMetroPCS  
Galaxy Tab 10.1– SHW-M380S  
Galaxy Note– SGH-I717M

Galaxy Note– SGH-I717  
Galaxy Tab 8.9– SGH-I957M  
Galaxy Tab2 7.0– espressorf  
Galaxy Note 10.1 2014 Edition– It03wifi  
Galaxy Tab 7.0 Plus– SC-02D  
SGH-I987– SGH-I987  
Galaxy Tab 10.1– GT-P7500  
Galaxy Tab 10.1– SGH-T859  
Galaxy Tab 8.9– GT-P7320  
Galaxy Tab– GT-P1000L  
Galaxy Tab3– It023gdtv  
Galaxy Note 10.1– It03lteigt  
Galaxy Tab2 10.1 – espresso10att  
Galaxy Tab3 7.0 – It02wifilgt  
Galaxy Tab– SHW-M180L  
Galaxy Tab– GT-P1013  
Galaxy Note 8– konalteatt  
Galaxy Tab 7.0 Plus– GT-P6201  
Galaxy Tab– GT-P1000T  
Galaxy Tab 7.0 Plus– GT-P6210  
Galaxy Tab 8.9– SCH-P739  
Galaxy Tab– SC-01C  
Galaxy Note 8.0– konawifi  
Galaxy Tab 8.9– SGH-I957  
Galaxy Note 10.1 2014 Edition– It03wifuiue  
Galaxy Tab 8.9– GT-P7300  
Galaxy Note– GT-I9228  
Galaxy Note 10.1– p4notelteusc  
Galaxy Note 10.1– p4noteltespr  
Galaxy Tab2 10.1 – espresso10tmo  
Galaxy Tab– SGH-T849  
Galaxy Tab 7.0 Plus– GT-P6211  
Galaxy Tab– SMT-i9100  
Galaxy Tab– SHW-M180S  
Galaxy Note– SCH-i889  
SHW-M480S– p4noterfskt  
Galaxy Tab3– It01wifikx  
Galaxy Note 8.0– konalte  
GT-P7500V– GT-P7500V  
Galaxy Tab– GT-P1010  
GT-P3108– espressorfcmcc  
Galaxy Tab 10.1 N– GT-P7501  
Galaxy Note 8.0– konawifianny

Sanyo

Benesse– 40TL04

Benesse– 31TL04

## Sony

SGPT13– txs03

Tablet S– nbx03

Sony Tablet P– nbx02

## Sony Ericsson

Xperia Z Ultra– C6806

Xperia Tablet Z– SGP351

Xperia Tablet Z– SGP311

Xperia Z Ultra– C6843

Xperia Tablet Z– SO-03E

Xperia Z Ultra– C6802

## Sumitomo Electric Networks

Hikari-iFrame/WDPF-703SE– dhe1100

## TCT Mobile Limited (Alcatel)

ONE TOUCH EVO7HD– E710

onetouch EVO7– EVO7

OP070– OP070

TAB 7 DUAL CORE– T017

ONE TOUCH TAB 7– T011

onetouch T60– T60

TAB 7 DUAL CORE– T015

ONE TOUCH TAB 8HD– T021

ONE TOUCH EVO8HD– E720

one touch T20– T20

ONE TOUCH TAB 7HD– T016

Technicolor

T-Hub2– omap4\_WT3

Teleepoch

Essentiel B SmartTab 1002– T9660R

## Toshiba Corporation

JPN:REGZA Tablet AT500 Other countries:TOSHIBA

AT300– tostab11BA

AT10LE-A/AT15LE-A/AT10PE-A/AT15PE-A (Japan:

AT703)– tostab12BA

Hikari-iFrame/WDPF-703TI– WDPF-703TI

JP:REGZA Tablet AT570 Others:TOSHIBA AT270–  
tostab11BS

LT170– tostabg1

JPN:REGZA Tablet AT830 Other countries:TOSHIBA

AT330– tostab11BT

AT10-A/AT15-A (Japan: AT503)– tostab12BL

DB50– tosebook01

AT7-A– tost7t

Thrive 7– tostab04

AT200– tostab05

AT100– tostab03

## Vizio, Inc.

VTAB1008– VTAB1008

## ZTE

V66– V66

ZTE V70– ZTE-V70

V96A– V96A

SmartTab10– V11A

ZTE-T T98– cardhu

V55– V55

T77– T77

V68– V68

V72A– ZTE-V72A

SmartTab7– V71A

ZTE V9A– v9plus

K75– crane-zte7

V9S– V9S

MT7A– V72

## iRlver

ILT-MX100– smdkc110

Wow TAB +- itq701

WOW Tab+(ITQ1000)– itq1000

MM3201– mm3201

DMT580D– m805\_892x

Wow(Window of the world)– itq700

Insignia Flex 10.1– ns\_14t004

i-mobile i-note WiFi 1.1– M1703

INSIGNIA NS-14T002– ns\_14t002

WPT005– wikipad

W1011A– w1011a

Cybook Tablet– cybtt10\_bk

TrekStor torino tab 7– torino7

## Unknown

|                                |                        |
|--------------------------------|------------------------|
| wmid                           | msm7627a_fw8937        |
| crane-G11                      | t8e                    |
| f02ref                         | nuclear-a702           |
| rk29sdk                        | V1                     |
| nuclear-t53                    | tq03                   |
| PMP5097CPRO                    | nuclear-sy777          |
| crane-m868a-tv20               | nuclear-D50-sc3038n    |
| SGP321                         | rks753sdk              |
| Gpad                           | unknown                |
| ctb                            | A1107                  |
| PMP3670B                       | PMP5770D               |
| sugar-ref001                   | fiber-onda978q9        |
| crane                          | nuclear-evb            |
| PTAB7200                       | crane-anpei            |
| MW0712                         | rk31sdk                |
| nuclear-a702UNIDEN             | bq_Elcano              |
| nuclear-anpei8                 | AN101G4                |
| g12refM805                     | msm8660_t6             |
| tenderloin                     | crane-hn               |
| Tablet PC                      | PMP5588C               |
| ADM8000KP_A                    | fiber-colorfly         |
| rk3026                         | fiber-a31st            |
| crane-a702-lmobile             | crane-m1003h6Playtab   |
| CoolTab-70                     | maxwell                |
| CONNECT 2G                     | aosbis_c7016           |
| rk2928sdk                      | casper                 |
| bq_maxwellplus                 | gs702a                 |
| rk2928sk7204                   | g17reft102             |
| elite-s2eu-pulier33            | crane-a702jh-Starmobil |
| Prestigio                      | crane-a702jhorange     |
| nuclear_sp0735_socchip_sc3068n | crane-n708h6           |
| PMP5080CPRO                    | fiber-s12m5a7          |
| crane-bc1003                   | crane-MID9742-sc3052   |
| f04ref                         | g06refe3               |
| sugar-512M                     | rks750v3swwsdk         |
| g08refem618                    | CM                     |
| METABLET                       | crane-m1003h6          |
| D01E                           | PMP3570C               |
| nuclear-me107                  | TR719                  |
| PMP7100D3G                     | NT-1710                |
| Xenta TAB10-201                | nuclear-gp707pub       |
| basicom15_jb                   | nuclear-a86            |
| nuclear-MID7117                | yecon75_tb_ics         |
| crane-m799                     | NX007HD8G              |

encore  
baoxue  
mid  
fiber-onda809q9p6  
crane-a760  
Bush  
PMP7280C3G  
htt77\_tb\_jb  
A2107A  
Smartphones  
PMP5780D  
vbox86tp  
g06refe4  
v901  
crane-inet  
Tablet  
P88(GT4K)  
stvmx  
nuclear-ib755c  
crane-n707h6  
PMP7280C  
me12  
g18ref  
crane-a1001Polaroid  
fiber-q10  
crane-a106  
nuclear-anpei9  
mw07  
A70H  
nuclear-quan  
SmartPad Go  
f16ref  
crane-a802hw2  
1234-XYZ  
PMP3670B-WH  
kpt15\_6628\_gb2  
nuclear-a13mid  
p98hd\_a2q6  
wing-d9-906DA2  
apollo-tvdevb  
microlab-evb  
crane-m801t  
elite-10moons  
crane-a732  
nuclear-mt7000  
PMP7100D  
miki75\_6628\_ics2  
nuclear-chip

crane-lg971  
mevlana  
A90G3  
rk2928sk7240  
A70S  
nuclear-hn  
crane-p76ti  
nuclear-f727  
C13000US  
YPY  
crane-ka009  
PMP3970B  
hws10201u  
crane-a1002jhzx  
Nexus 7  
crane-genesis  
crane-bc1077  
wing-k70  
bq\_Edison2  
nuclear\_sc3041n\_ainol\_novo705fc\_d1  
kai  
crane-h5  
fiber-ondam785q6V1  
Linux-Q8  
temp-evb  
hwmt1-u06  
elite-10moons\_LT390W\_A  
PMP7170B3G  
SGP312  
g12refM1006  
Allview-Speed3G  
g12refM1005  
g12refM806A1SPISY  
STM722HZ  
yecon77\_mg789\_tb\_ics2  
nuclear-t03  
U1  
WEXLER  
HCL ME Tablet  
NX008HD8G  
crane-a702jh  
nuclear-pfdq3  
bq\_curie  
d5h88vh\_8188  
nuclear-107a  
bq\_edison  
fiber-onda809q8  
MT7001

MW0711  
sugar-evb  
crane-skyworth  
GHIAPad  
crane-evb-v13  
g12refM806A2  
g12refM806A1  
nuclear-pfdq88c  
stvmc  
GT-P7510  
nuclear-pfdq88  
FunTab Pro  
PMP7170B3GCE  
PMP5580C  
crane-ibt  
PMP7170B3G\_DUO  
TAB462  
wing-inet  
fiber-onda978q9p6  
MID1106  
nuclear-m876  
crane-a088  
A101IT  
crane-a1002hw  
crane-m802h6gaiban  
fiber-q8s  
crane-MID7113  
IMO Z5 tablet PC  
L9  
nuclear-x3  
INM805ND  
g12refM1006A2  
MTK8389  
crane-evb  
nuclear\_sc3068n\_YT\_M7057  
vortex  
Enjoy 71  
crane-a702  
f32ref  
griffin  
crane-a710  
GASEM712MC  
crane-aino  
harmony  
elite-10moons\_T2  
crane-m802h6  
Surfer\_8\_31\_3G  
S9714

AMD120  
nuclear-anpei7  
HDC-08  
nuclear-Polaroid705  
msm8625\_fw8937  
apollo-mele  
rk2906  
g06ref1003AC  
g02\_d9ref\_gps  
nuclear-a7028  
tostab12AL  
C6833  
nuclear-107a-01b