

DEKO

Training Manual

PPN 321117002 Rev. A



Introduction

The Deko Training Manual is the primary text for the Pinnacle Systems Deko training program:

Deko is a full-color video character generator from Pinnacle Systems, Inc. Based on the Windows operating system; Deko offers unprecedented performance in broadcast quality.

How to Use This Manual

This manual is designed as an in-depth tutorial of the Deko system. Lessons are structured in a logical flow taking you from basic concepts to more advanced features and functions. Most lessons include self-paced exercises that allow you to practice the skills needed for mastery of the Deko system. A companion CD contains samples and the source material you will need to perform the exercises.

Note: All Deko references in this manual apply to FXDeko. While most of this material is directly applicable to other version of Deko hardware and software, features and menus vary between different systems. Your Deko system may not include options described in this manual.

How to Contact Pinnacle Systems

Pinnacle Systems, Inc.
280 N. Bernardo Avenue
Mountain View, CA 94043

What to Do Before You Call:

Whenever you contact Pinnacle Systems for technical support, please have the following information available:

- Product name and software version number
- Product serial number (in the Help menu, choose About)
- Precise description of problem and attempted solutions
- Exact wording of any error messages

Pinnacle Systems Technical Support by Phone:

| | |
|-------------------------------|------------------|
| Customer Service (U.S.): | (650) 930-2990 |
| Customer Service Fax (U.S.) | (650) 930-1601 |
| Customer Service (Europe) | +44 1895 442-003 |
| Customer Service Fax (Europe) | +44 1895 442 009 |

Information and Technical Support on the Internet:

For the latest information on Deko upgrades, visit our website at: www.pinnaclesys.com.

Our e-mail address for technical support is:

In the U.S.: broadcast-support@pinnaclesys.com

In the U.K.: broadcast-support-uk@pinnaclesys.com

Table of Contents

| | |
|--|------------|
| Introduction | i |
| How to Use This Manual | i |
| How to Contact Pinnacle Systems | ii |
| What to Do Before You Call: | ii |
| Pinnacle Systems Technical Support by Phone:..... | ii |
| Information and Technical Support on the Internet:..... | ii |
| Table of Contents | iii |
| Lesson 1: Verify and Configure Your Deko..... | 1-1 |
| Verifying Your Deko..... | 1-1 |
| Identify Your Keyboard..... | 1-1 |
| Start Up Your Deko Software..... | 1-2 |
| How to Create a Shortcut..... | 1-3 |
| Launching Deko from the Start Menu | 1-4 |
| Can't Find Deko in the Programs List?..... | 1-5 |
| Verify Hardware Settings..... | 1-5 |
| Verify Hardware Settings..... | 1-6 |
| Verify Video Standard | 1-6 |
| Check Input / Output Settings..... | 1-7 |
| FastAction Keyboard Isn't Working Properly?..... | 1-8 |
| Desktop Layout | 1-10 |
| Desktop Layout | 1-11 |
| Save Preferences (Alt + O >S) | 1-14 |
| Special Note: Using Undo | 1-14 |
| Opening Files..... | 1-15 |
| Saving Files..... | 1-16 |
| Verify System Output | 1-16 |
| Exiting Deko | 1-16 |
| Exercise: Enter Text Into Bio Page. Play to Air With an Effect. | 1-17 |
| Shortcuts Keys | 1-18 |
| Lesson 2: Navigating the Deko Interface | 2-1 |
| The Deko Interface | 2-1 |
| Navigating the Menus with the Keyboard | 2-1 |
| The View Menu..... | 2-2 |
| The Window Menu..... | 2-3 |
| Four Important Layouts..... | 2-3 |
| <i>Effect Playback (Shift+F11)</i> | 2-5 |
| Custom Layouts..... | 2-6 |
| Lesson 3: Setting up and Managing File Directories..... | 3-1 |
| Opening Windows NT Explorer | 3-1 |
| Opening Windows Explorer | 3-1 |
| Desktop | 3-1 |
| Showing File Details | 3-1 |
| Showing File Details | 3-2 |
| Browsing Through Drives and Folders | 3-2 |
| Network Neighborhood | 3-4 |
| Managing Files and Folders | 3-5 |
| Copying Files Between Drives or Folders..... | 3-5 |
| Moving Files Between Drives | 3-7 |
| Deleting Folders and Files..... | 3-8 |
| Rescuing a Deleted Folder or File..... | 3-9 |

| | |
|--|------------|
| Creating New Folders..... | 3-10 |
| Renaming Folders and files | 3-11 |
| Windows Components..... | 3-12 |
| Changing the Size of a Window..... | 3-13 |
| Switching Between Open Programs or Windows..... | 3-13 |
| Deko File Types | 3-13 |
| Deko File Types | 3-14 |
| Setting Directories and Paths in Deko | 3-14 |
| Exercise – Create New Folders and Subfolders | 3-15 |
| Lesson 4: Type and Modify Text..... | 4-1 |
| Before You Start | 4-1 |
| The Deko Interface | 4-2 |
| Elements of the Deko Interface | 4-2 |
| Elements of the Deko Interface | 4-3 |
| Window Focus in the Deko Interface | 4-5 |
| Exercise – Type and Alter Text..... | 4-6 |
| Navigating the Cursor and Selecting Text | 4-8 |
| Home and End Key Behavior..... | 4-8 |
| Cursor Selection | 4-8 |
| Setting the Text Cursor | 4-9 |
| Moving the Cursor..... | 4-9 |
| Selecting Characters | 4-9 |
| Selected Text versus Current Style..... | 4-11 |
| Modifying Selections | 4-11 |
| Styles..... | 4-11 |
| Selecting or Changing Typefaces | 4-12 |
| Adding Details | 4-13 |
| Shader Controls..... | 4-17 |
| Activating a Shader | 4-17 |
| Shader Controls | 4-18 |
| Preset Shaders..... | 4-19 |
| Ramp Shader | 4-20 |
| Texture Shader..... | 4-21 |
| Keyhole Shader..... | 4-22 |
| The CAP Shader (Option)..... | 4-22 |
| The CAP Shader (Option)..... | 4-23 |
| The Graphic Browser | 4-23 |
| Copying, Cutting, and Pasting..... | 4-24 |
| Copying, Cutting, and Pasting Looks | 4-25 |
| Styles | 4-25 |
| Preset Style Windows | 4-26 |
| Exercise – Modify Text | 4-28 |
| Shortcut Keys | 4-30 |
| General Desktop Controls..... | 4-30 |
| Moving Cursor..... | 4-30 |
| Selecting Characters | 4-30 |
| Cutting, Copying and Pasting Details, Styles, Graphic Elements | 4-30 |

| | |
|---|------------|
| Lesson 5: Working with Layers and Tabs | 5-1 |
| Creating Additional Layers..... | 5-1 |
| Creating a Text Layer | 5-1 |
| Moving and Resizing a Text Layer..... | 5-1 |
| Layers vs. Fields..... | 5-3 |
| To Enter Text..... | 5-3 |
| Exercise – Entering Text and Adjusting Layer Attributes..... | 5-4 |
| Word Wrap Preferences..... | 5-4 |
| Word Wrap Preferences..... | 5-5 |
| Auto-scaling..... | 5-5 |
| Exercise Continued – Adjusting Auto-Scaling..... | 5-6 |
| The Move Tool – Moving a Layer vs. Moving Text..... | 5-6 |
| Moving Selected Text..... | 5-6 |
| Scale, Rotate, Skew, Kern and Justify Controls..... | 5-7 |
| Scaling Text and Layers..... | 5-7 |
| To Scale a Layer..... | 5-8 |
| Rotate and Skew..... | 5-8 |
| Justifying Text and Layers..... | 5-10 |
| Justifying Text Within a Layer | 5-10 |
| Character Spacing (Kerning) and Row Spacing (Leading) | 5-12 |
| Character Spacing (Kerning) and Row Spacing (Leading) | 5-13 |
| Exercise – Creating a Lower Third Template with a Keyed Background..... | 5-14 |
| Exercise – Creating a Lower Third Template with a Keyed Background..... | 5-15 |
| Before you start | 5-15 |
| Step-by-Step: Lower Third with Logo..... | 5-15 |
| Exercise – Creating Graphics from a Template | 5-19 |
| Fill in a Name and Job Title..... | 5-19 |
| Use Save As to Store the Lower Third on Disk..... | 5-19 |
| Fill in the Second Lower Third..... | 5-20 |
| Fill in the Third Title and Save | 5-20 |
| Fill in the Third Title and Save | 5-21 |
| The Layer Browser..... | 5-22 |
| Selecting Multiple Layers | 5-23 |
| Naming Layers..... | 5-24 |
| Modifying Layers..... | 5-25 |
| Exercise – Making a Full Screen Slate..... | 5-27 |
| Step-by-Step..... | 5-27 |
| Setting Tab Stops..... | 5-35 |
| Set Tabs | 5-35 |
| Exercise: Working with Tabs..... | 5-37 |
| To Exchange Rows of Content | 5-37 |
| To Select All Text at a Tab..... | 5-38 |
| To Locate and Modify Tab Position..... | 5-38 |
| To Locate the Tab Stop in any other Tab Column | 5-38 |
| Shortcut Keys..... | 5-39 |
| File Management..... | 5-39 |
| Selecting Tools..... | 5-39 |
| Layer Controls | 5-39 |

| | |
|---|------------|
| Lesson 6: Working With File Imports | 6-1 |
| Deko Graphics | 6-1 |
| Computer Graphics | 6-1 |
| Alpha Channels (Key Channels) | 6-2 |
| File Formats | 6-3 |
| File Compression | 6-5 |
| Aspect Ratio and Graphic Size | 6-5 |
| Square vs. Rectangular Pixels | 6-5 |
| Recommended Practice | 6-6 |
| Bringing Images Into Deko | 6-7 |
| Exercise – Creating an OTS Graphic | 6-8 |
| Open Background | 6-8 |
| Insert Graphic | 6-9 |
| Define a Text Layer and Add a Caption | 6-10 |
| Save Graphic as a Targa File for Export | 6-11 |
| Exercise – Creating a Lower-third with a “Sticky” Texture | 6-11 |
| Exercise – Creating a Lower-third with a “Sticky” Texture | 6-12 |
| Chyron Import | 6-14 |
| To Open the Chyron Import Window: | 6-14 |
| To Import a Chyron Message File: | 6-14 |
| To Map a Chyron Bitmap Font onto a TrueType Font: | 6-15 |
| To Save the Current Font Mapping File for Future Deko Sessions: | 6-16 |
| To Open a Font Mapping File: | 6-17 |
| To Convert a Chyron Logo Font into a Custom Typeface: | 6-18 |
| Lesson 7: Creating and Using Custom Typefaces | 7-1 |
| Custom Typefaces | 7-1 |
| Creating Custom Typefaces | 7-1 |
| Exercise – Build a Weather Graphic | 7-2 |
| Exercise – Build a Weather Graphic | 7-3 |
| Import Weather Logos | 7-3 |
| Using a Custom Typeface | 7-5 |
| Assembling the Weather Graphic | 7-5 |
| Inserting Useful Symbols | 7-7 |
| Keyboard Shortcuts for Useful Symbols | 7-8 |
| Lesson 8: Baseline Editing – <i>Typing on a Curve</i> | 8-1 |
| Baseline Edit Window | 8-1 |
| Drawing Baseline Segments | 8-1 |
| Rectangle or Ellipse | 8-2 |
| Apply Baseline | 8-2 |
| Editing Baselines | 8-2 |
| Delete or Insert a Point | 8-2 |
| Reverse Direction | 8-2 |
| Change Type of Point | 8-3 |
| Bezier curves | 8-3 |
| Cancel Changes | 8-3 |
| Exercise – Baseline Editing | 8-4 |
| Editing a Baseline | 8-6 |

| | |
|---|-------------|
| Lesson 9: Creating Sequences and Effects..... | 9-1 |
| The Sequence Layout (SK: F11, FAK: Seq Edit)..... | 9-1 |
| The Sequence Window..... | 9-2 |
| To Create a Sequence | 9-2 |
| Data Fields | 9-3 |
| Editing Sequences | 9-4 |
| Exercise – Create and Run a Sequence | 9-5 |
| Exercise – Create and Run a Credit Roll | 9-7 |
| Before You Start..... | 9-7 |
| Step-by-Step: Create and Run a Credit Roll..... | 9-7 |
| Import a Text Document | 9-10 |
| Exercise – Create and Run a Crawl | 9-11 |
| Before You Start..... | 9-11 |
| Step-by-Step: Create and Run a Crawl..... | 9-11 |
| Embed Speed Changes in Your Crawl | 9-13 |
| Creating a Multi-Line Crawl..... | 9-13 |
| The Effect Layout..... | 9-15 |
| The Effect Window..... | 9-16 |
| Embed Effects..... | 9-17 |
| Shortcuts | 9-17 |
| Shortcuts | 9-18 |
| Lesson 10: Understanding Timeline Motions..... | 10-1 |
| Before You Start..... | 10-1 |
| Step-by-Step: Preview a Sample Timeline Motion | 10-2 |
| Step-by-Step: Build a Timeline Motion..... | 10-3 |
| Exercise continued..... | 10-5 |
| Note: Home Position | 10-8 |
| Content Independence..... | 10-12 |
| Tip: Copy and Paste Function | 10-16 |
| Help..... | 10-19 |
| Why Does My Program Output Disappear When I Scrub a Motion?..... | 10-19 |
| I played My Motion From the Timeline Toolbar. Where is My Preview Graphic?..... | 10-19 |
| Exercise: Build a Slate Motion..... | 10-20 |
| Further Exploration | 10-25 |
| How Can I Increase the Degree of Rotation Beyond 360°?..... | 10-25 |
| What Happens When I define an Object as a Word or Row?..... | 10-25 |
| Run a Motion that Defines “Home Position”..... | 10-25 |
| Shortcut Keys | 10-26 |
| Lesson 11: Using Macros | 11-1 |
| Using the Macro Recorder | 11-1 |
| Recording a Macro..... | 11-1 |
| Exercise – Recording a Macro..... | 11-3 |
| Replacing Commands..... | 11-5 |
| Loops and Variables | 11-5 |
| Assigning Macros to the Preset Macro Key | 11-7 |
| Exercise: Build a Serve Indicator Macro..... | 11-9 |
| Run Macro on FAK..... | 11-11 |
| Run Macro on SK | 11-11 |
| Exercise: Review and Run a Directory Select Macro..... | 11-12 |
| Exercise – “my_settings” Macro..... | 11-13 |

| | |
|---|-------------|
| Lesson 12: Creating Clocks and Timers | 12-1 |
| Creating Clocks | 12-1 |
| Add a Clock..... | 12-1 |
| Insert a Clock in a Graphic..... | 12-2 |
| Exercise – Create a Clock..... | 12-3 |
| Create a Clock..... | 12-3 |
| Add Clock to Your Graphic..... | 12-3 |
| Lesson 13: Channel Configuration..... | 13-1 |
| Single/Dual Channel Operation | 13-1 |
| To Specify Single Program Plus a Preview Output:..... | 13-1 |
| To Specify Dual Program Output:..... | 13-1 |
| Using Deko’s Built-In Keyer | 13-2 |
| Keying and Routing..... | 13-2 |
| Frame Grabbing..... | 13-3 |
| Lesson 14: FastAction Keyboard..... | 14-1 |
| Exercise: Fastest Way to Get Random Graphics to Air..... | 14-4 |
| Exercise: Fastest Way to Get Sequential Graphics to Air..... | 14-4 |
| Enable / Disable Function Keys | 14-4 |
| Enable FAK Numeric Keypad..... | 14-5 |
| Lesson 15: SportsWare and Pops | 15-1 |
| About Pops..... | 15-1 |
| Text Pop..... | 15-1 |
| Style Pop..... | 15-1 |
| Place Pop..... | 15-1 |
| Creating a Text Pop..... | 15-2 |
| Creating a Style Pop..... | 15-2 |
| Creating a Style Pop..... | 15-3 |
| Creating a Place Pop..... | 15-3 |
| Using Pops..... | 15-4 |
| To Pop Text Onto a Graphic Using a Text Pop or Style Pop: | 15-4 |
| To Place Pop Text onto a Graphic: | 15-4 |
| Exercise – Creating and Using Pops | 15-5 |
| Creating a Text Pop..... | 15-5 |
| Creating a Style Pop..... | 15-6 |
| Creating a Place Pop..... | 15-7 |
| Using Text Pops..... | 15-8 |
| Using Style Pops..... | 15-9 |
| Using Place Pops..... | 15-9 |
| Lesson 16: Automation..... | 16-1 |
| What is Automation?..... | 16-1 |
| How Does Deko Automation Work?..... | 16-1 |
| Enable Automation | 16-1 |
| Enable Automation | 16-2 |
| Creating a Template File | 16-3 |
| Using the Template..... | 16-4 |

| | |
|--|-------------|
| Lesson 17: Other Options | 17-1 |
| Database Connection | 17-1 |
| View ODBC Drivers | 17-1 |
| Specify a DSN..... | 17-1 |
| Query Database | 17-2 |
| Database Window Options | 17-3 |
| Test Drive..... | 17-4 |
| Query the Database | 17-7 |
| Set Up Automatic Query Updates..... | 17-9 |
| Set Up the Graphic to Update Fields Based on a Global Variable..... | 17-10 |
| CAP Shaders (Cel Animation Player)..... | 17-12 |
| Applying a Cel Animation..... | 17-12 |
| Setting Up the Animation File to Play..... | 17-14 |
| Keep Animation Playing..... | 17-14 |
| CAP Performance Guidelines..... | 17-14 |
| The StillDeko Option | 17-15 |
| Lightning and Thunder | 17-15 |
| Install Thunder Browse Software on Deko..... | 17-15 |
| Connect to An Existing Remote Database..... | 17-16 |
| Set Up a Database on Your Deko..... | 17-17 |
| Create and Open a Database..... | 17-18 |
| Set Default Database | 17-19 |
| Access Stills and Clips | 17-19 |
| Still Images | 17-20 |
| Clips..... | 17-21 |
| Store Images..... | 17-21 |
| ClipDeko | 17-23 |
| To Turn On ClipDeko:..... | 17-23 |
| To Turn On ClipDeko:..... | 17-24 |
| To Enable ClipDeko:..... | 17-24 |
| <i>To Open the Clip Browser:</i> | 17-24 |
| <i>To Open the Clip Editor:</i> | 17-24 |
| Recording and Importing Clips..... | 17-24 |
| To Verify the Compression Protocol: | 17-24 |
| To Record a New Clip from Input Video:..... | 17-25 |
| To Import a Clip to the Browser Database: | 17-25 |
| Using Clips with Key..... | 17-25 |
| <i>To Import a Fill Clip and Its Associated Key:</i> | 17-25 |
| To Assign a Key Clip to a Fill Clip:..... | 17-26 |
| To Remove the Key Assignment from the Current Clip: | 17-26 |
| To Align a Key Clip with a Fill Clip:..... | 17-26 |
| Playing Clips | 17-27 |
| To Specify the Genlock Source: | 17-27 |
| To Preview a Clip:..... | 17-27 |
| To Set a Start Point and End Point for Playback: | 17-27 |
| To Play a Clip from the In Point to the Out Point: | 17-28 |
| To Find the Nearest Point (In, Out, Beginning, or End) in the Clip:..... | 17-28 |
| To Play a Clip:..... | 17-28 |
| To Synchronize Clip Playback with Effect Playback: | 17-28 |
| To Stop Clip Playback:..... | 17-28 |
| To Loop from In to Out:..... | 17-29 |
| Using the Clip Browser..... | 17-29 |

| | |
|---|------------|
| To Associate a Clip with a Graphic: | 17-29 |
| To Rename a Clip:..... | 17-29 |
| To Delete a Clip from the Browser Database:..... | 17-29 |
| Appendix | A-1 |
| Keyboard Extenders..... | A-1 |
| Overview | A-1 |
| Extender Choices | A-1 |
| Brands and Models | A-2 |
| FastAction Keyboard Hot Switching | A-3 |
| Vital Details..... | A-3 |
| Keyboard Mixing..... | A-3 |
| File Associations for Sports Production..... | A-5 |
| Benefit of a File Association | A-5 |
| Two Components of a File Association..... | A-5 |
| Building the Graphics..... | A-5 |
| Rules for Making File Associations..... | A-6 |
| Optional Exercise: Make Bio Graphic with a File Association | A-7 |
| Optional Exercise: Make Bio Graphic with a File Association | A-8 |
| Optional Exercise – Update and Recall Team Graphics for Game Day..... | A-10 |
| Deko Unshaper Card Information | A-11 |
| GPI Connection..... | A-14 |
| Controlling a Thunder Server from FXDeko..... | A-14 |
| Controlling a Thunder Server from FXDeko | A-15 |
| Before you begin..... | A-15 |
| Controlling Multiple Channels..... | A-15 |
| The Clip Command and Its Syntax..... | A-15 |
| Thunder Configuration..... | A-16 |
| FXDeko Configuration | A-18 |
| Troubleshooting..... | A-20 |
| How to contact Pinnacle Broadcast Support:..... | A-22 |
| Broadcast Support Americas and Canada..... | A-22 |
| Broadcast Support Europe | A-22 |
| Broadcast Support South Asia | A-22 |
| Broadcast Support Beijing..... | A-22 |
| Pinnacle Systems Corporate Website: http://www.pinnaclesys.com | A-22 |
| Glossary | G-1 |

Lesson 1: Verify and Configure Your Deko

Verifying Your Deko

If you have PostDeko, you should have in front of you a keyboard, mouse and a VGA monitor. The Deko family of character generators have video outputs, so you should have a keyboard, mouse, VGA monitor and video monitor.

You do not have video output with PostDeko. Throughout the rest of this tutorial, you will need to look at the Program window of the Deko software whenever a lesson tells you to *check your video output*.

Identify Your Keyboard

You might have either the standard or the FastAction Keyboard, which makes it easier to harness the power of Deko. Some shortcut keys change when you have FastAction. In this tutorial, we will mark shortcuts with SK for *Standard keyboard*, or FAK for *FastAction keyboard*. Shortcuts that apply to both will not be marked.




The Deko FastAction Keyboard.

Start Up Your Deko Software



On the menu monitor, you should now be looking at the Windows NT Desktop—or maybe the nearly identical Windows 95/98/2000 Desktop if you have PostDeko.

If the task bar is visible, set it to Auto Hide. To do this, go to Start > Settings > Taskbar & Start Menu. Then, in the dialog box that appears, check the Auto hide box and click OK.

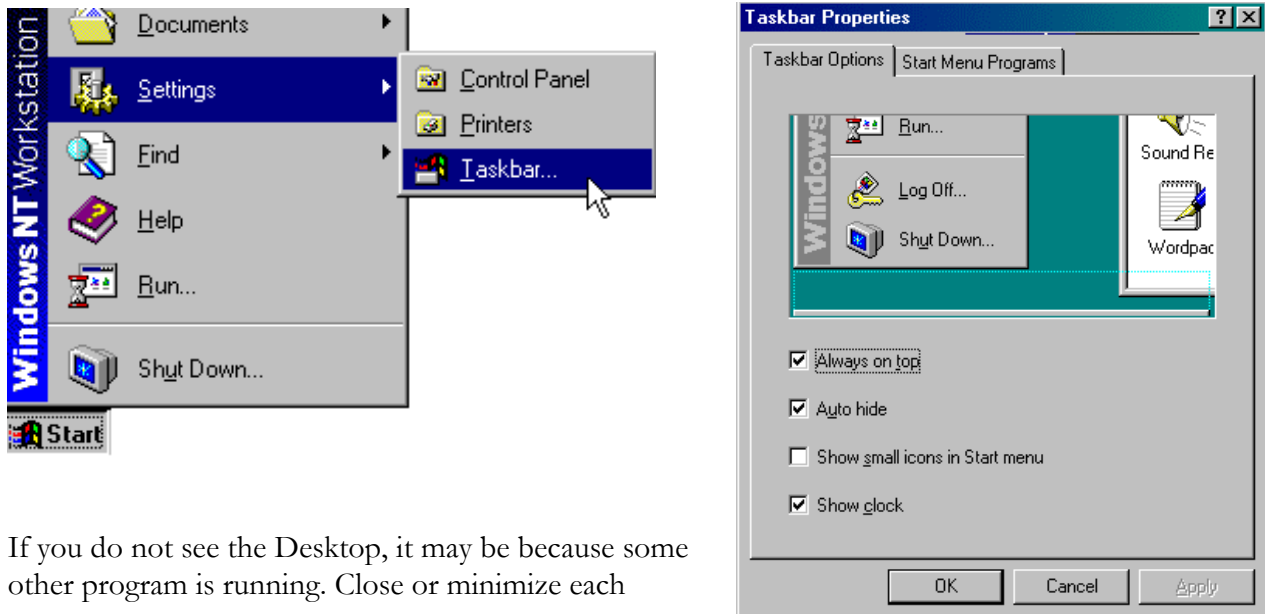



If you do not see the Desktop, it may be because some other program is running. Close or minimize each program until you see the Desktop.

By now you are looking at the Desktop and are ready to start the Deko program. Depending on which flavor of Deko you have, you will find the appropriate Deko entry in the Start Menu. Find the correct entry, highlight the program and click on it once.

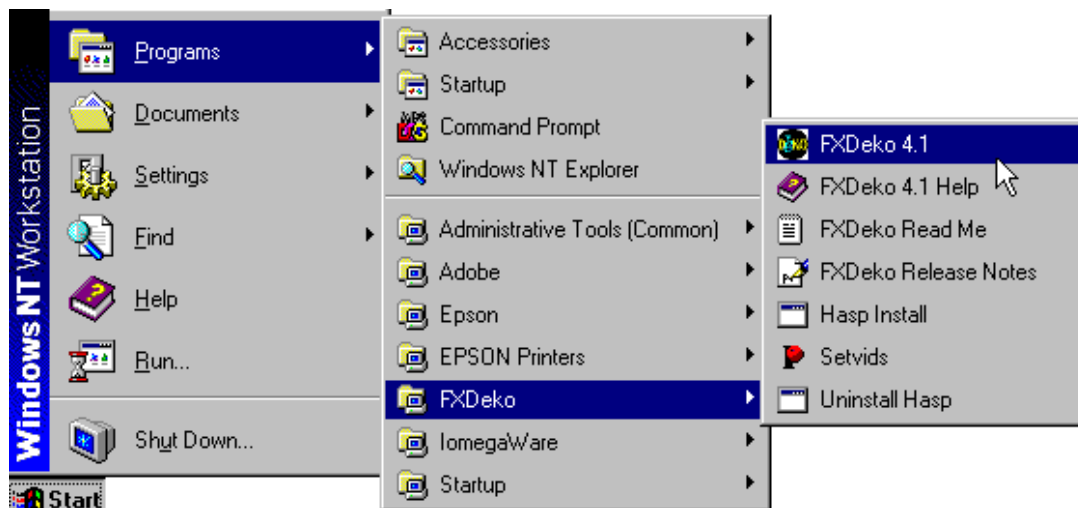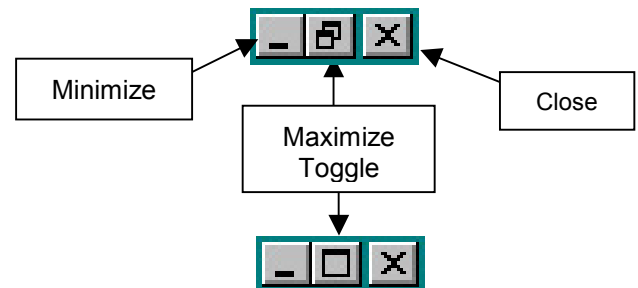


How to Create a Shortcut


The easiest way to launch Deko is from a shortcut on the desktop. A shortcut is a link to the actual file giving ready access to the program file. Your desktop should already have a Deko shortcut available. If not, to create a shortcut:

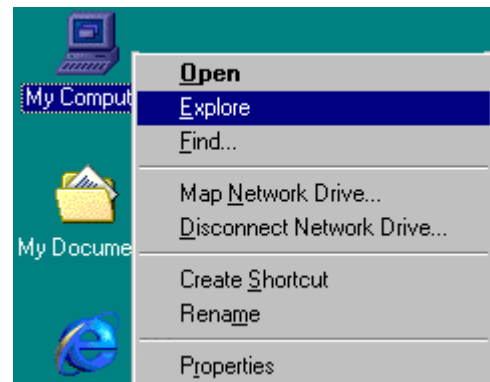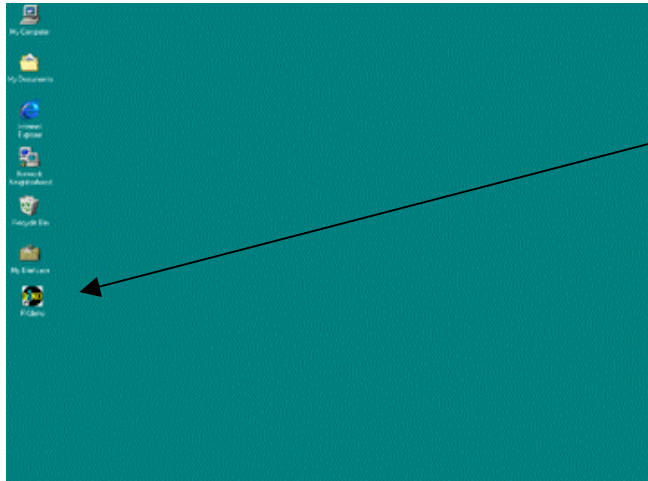

1. If the Windows Desktop is not visible, minimize all programs.
2. Right-click on the My Computer icon and select Explore.
3. When the Explore window appears, double-click on (C:) Drive, Double click on the Deko program directory, then double-click on the Bin directory.

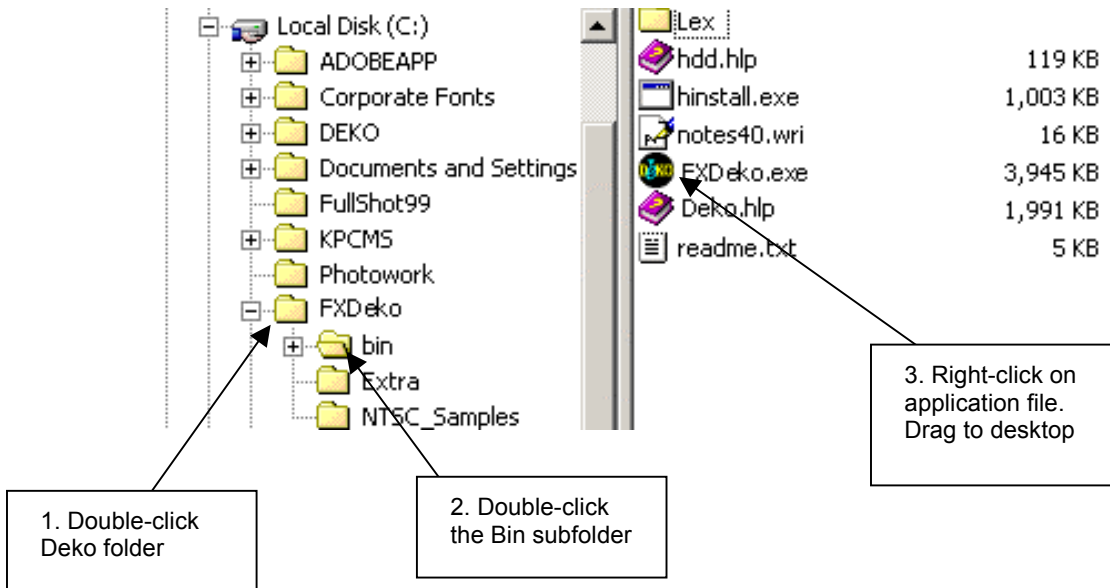

4. Right-click on the Deko program icon and drag it to the desktop.
5. Release the right mouse button. A menu will be revealed. Select *Create Shortcut(s) Here*. The Deko icon will be placed on the desktop.
6. Double-click the newly made shortcut icon to launch Deko.

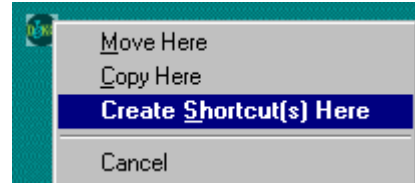


Launching Deko from the Start Menu




When other applications are running, the Windows Desktop may not be visible. An alternative way of accessing the shortcut is from the Start menu. To place a copy of the shortcut in the Start menu, drag the Deko shortcut from the Desktop to the Start menu button and release. A copy of the Shortcut will appear in the Start menu. Now you can start Deko by clicking on the Start button and selecting the Deko icon in the menu.

You may wish to place additional programs you use often in the Start menu for easy access.

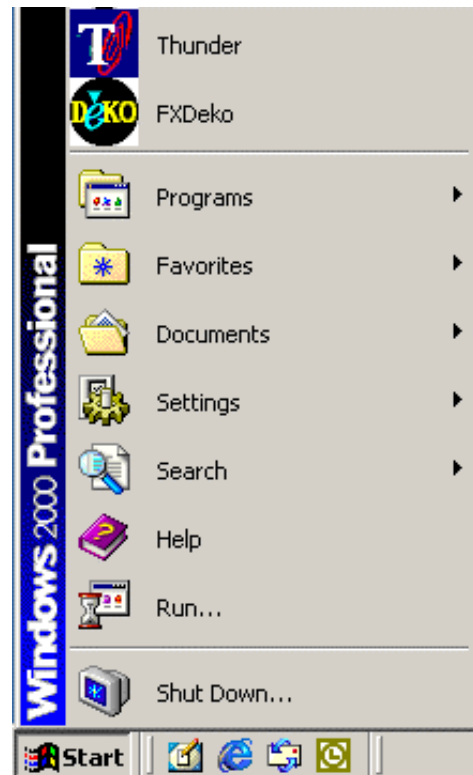


Can't Find Deko in the Programs List?

1. Click the Start > Find > Files or Folders.

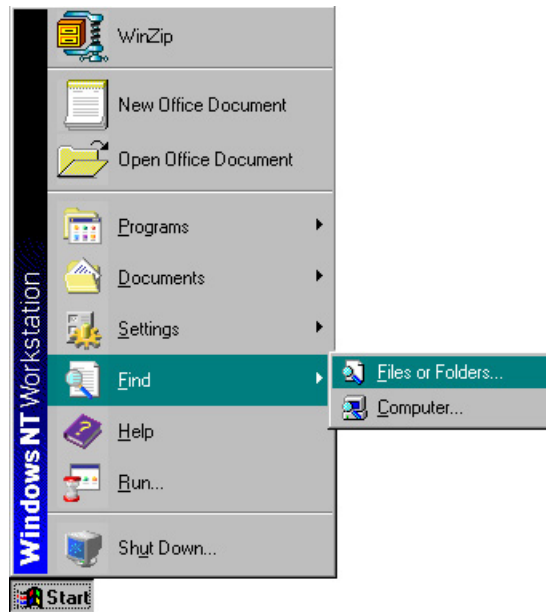

2. Type in the name of the desired application in the *Named:* field. Such as:
 - FXDeko.exe
 - FXDekoII.exe
 - PostDeko.exe
3. Click on the Find Now button.
4. Once the search has finished, look in the list at the bottom of the window. You should see a description of your filename along with a path that indicates its location.
5. Double-click on the icon of the found file to open your application.

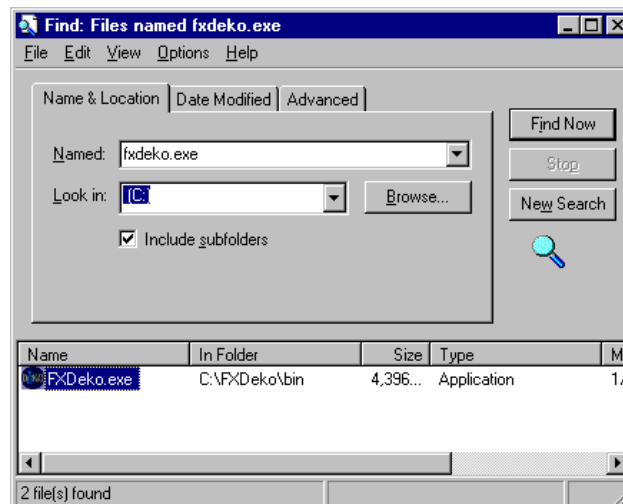


Verify Hardware Settings

All Deko systems except PostDeko provide for video input and output to support live feed of character generator output for video production. Depending on your model of Deko, these settings may vary. On the FX Deko, these settings are made in two locations.

Verify Video Standard

The first setting to verify is the video operating standard. All versions of Deko can operate in either NTSC or PAL standards.


- To set the video standard, minimize the Deko interface to reveal the Windows NT Desktop. Right click on the Desktop and select Properties from the Shortcut menu.

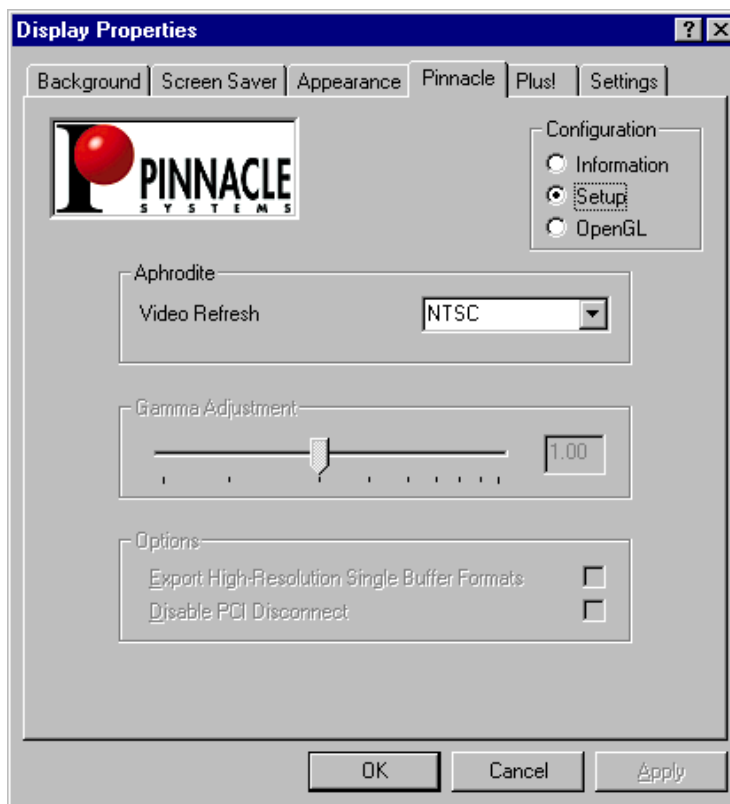

- Select the Pinnacle tab from the dialog box. Click on the Setup button in Configuration and verify the video Standard. In the U.S., the standard is NTSC. In most of Europe, Australia, Africa, the Middle East and Latin America, the standard is PAL.

Check Input / Output Settings


The Input/Output settings are found under the Options > Hardware Setting > Analog I/O Adjustments menu. This menu reveals a four-tab dialog box used to set the video Input/Output feeds to the Deko.

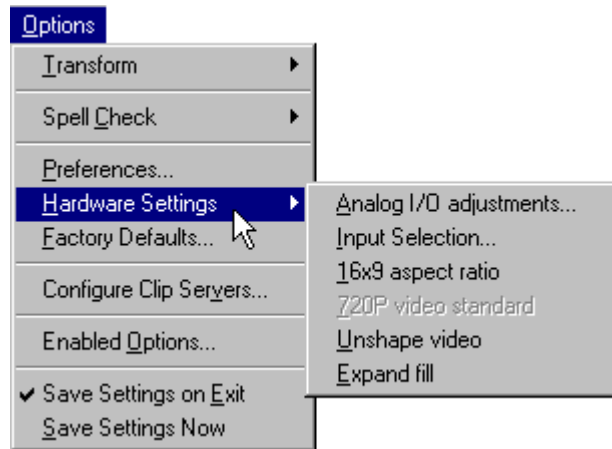

IO Status Tab


The IO Status tab verifies the current setting of the system. Check to see that the settings match the I/Os you are using in your system.

Note: if the Output settings are incorrect, your video monitor will display the output of your graphics incorrectly. Click on the corresponding tabs to make any needed adjustments.

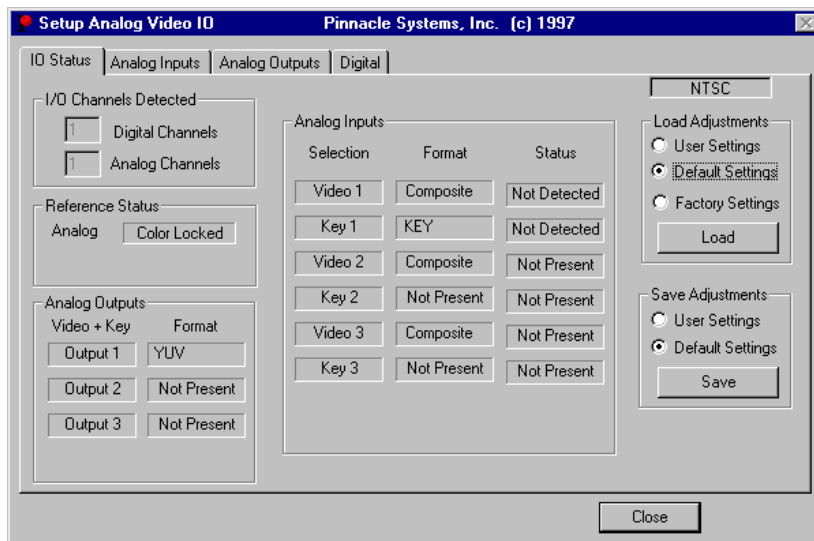

Input/Output Adjustment Tabs

The Input and Output adjustment tabs provide for both selection of video format and adjustment of the signal. The Formats are Composite, YUV (Component) and RGB. Choose the format that matches your video standard.

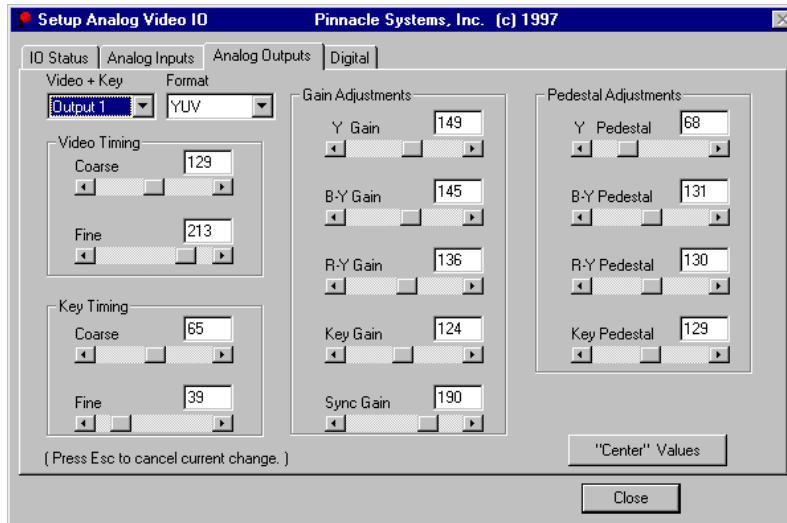


Note: Do not move the Video adjustment sliders unless you are technically qualified to do so.

FastAction Keyboard Isn't Working Properly?

If you cannot clear the LED display on the FastAction keyboard or perform typical keystrokes such as using the Read key to open a document, your keyboard may not be enabled properly. First, check to see that Num Lock is set on the keyboard. If this does not correct the problem, do the following:

1. Go to Options > Preferences.
2. In the Preferences dialog box select the Common tab.
3. To the right you will see settings for the FastAction keyboard. Click *Enhanced Keypad*, *FastAction Function* and *FastAction Lights* keys to place an "X" in each box.

- Click on the OK. This will activate the keyboard.

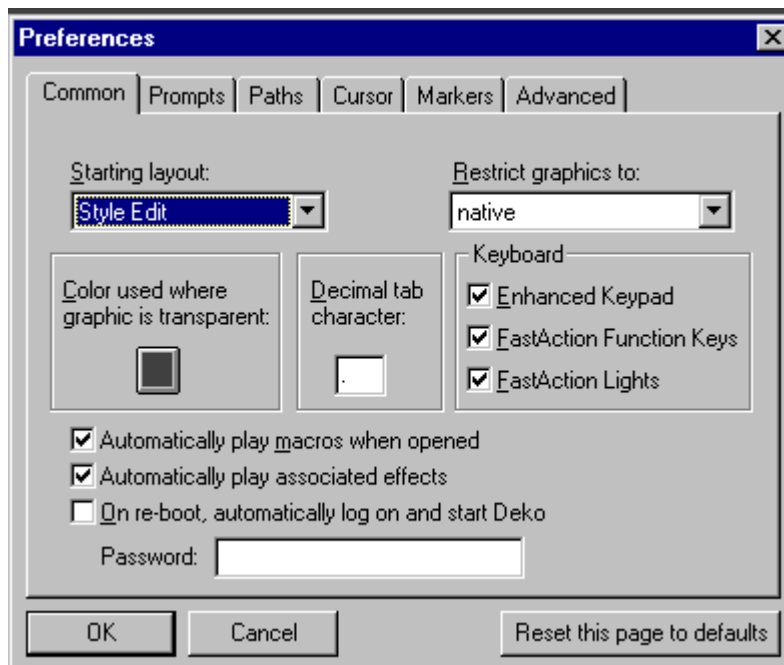


Versions before 3.0

If the boxes are grayed out, this means the drivers may not be installed. If you have the drivers, they may not work if you upgraded Windows NT Service Pack 6. To find your software version, go to Help > About Deko.

To fix this problem, re-install the FastAction Keyboard drivers. Begin as if you were installing the entire Deko program.

- Run `Setup.exe` from your Deko installation disk.
- Keep the destination directory the same as where you installed Deko.
- Choose *Custom* installation.
- When you reach the window pictured below, deselect all components by clicking directly over each check mark except for the FastAction Keyboard. Make sure FastAction Keyboard has a check.

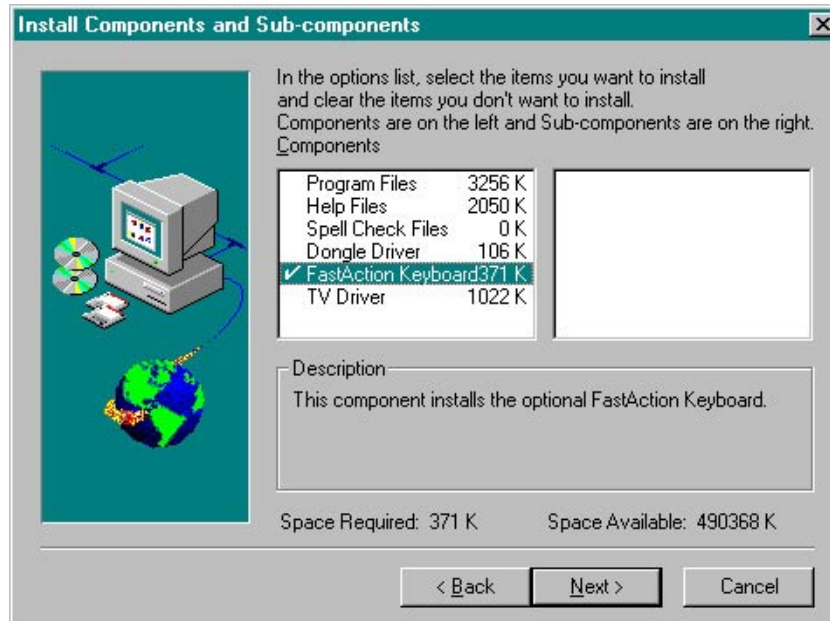


5. Click Next to complete the installation process.
6. Restart the computer. Click the Start button and choose Shut Down.
7. Select *Restart the computer?* in the Shut Down window and click on Yes.



Desktop Layout

The first time the Deko program opens; you will see the Graphic Compose Layout screen. All creation and playback of Deko graphics are done using the mouse and keyboard to interact with the various controls and windows on the Deko desktop.

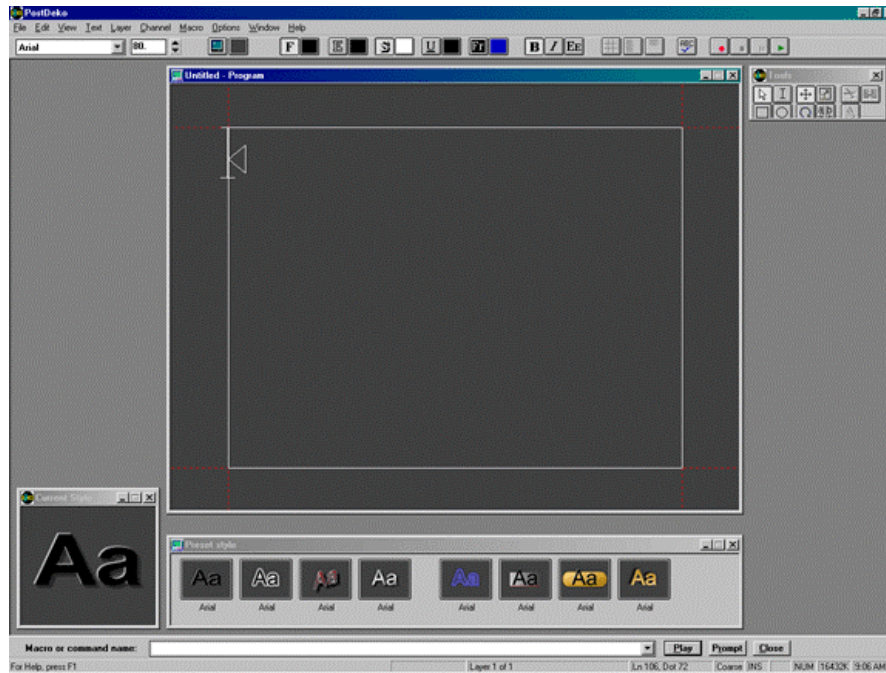

The appearance of the desktop depends on the current layout as selected from the Window Menu. Deko offers a variety of standard layouts for creating, editing and playing back graphics and macros. You can also set up and save custom layouts that better accommodate the way you work.


Set Preferences


Go to Options > Preferences.

- Select the Cursor tab and click the *Moving cursor sets font and look box*. Check the *Show text cursor* box is checked so that your cursor is visible in the Program window.
- For *Text Cursor Style*, check *I-beam*. Your window should look like the one below.


Note: The lessons in this text reference the *I-beam* cursor. You may have greater familiarity with the *Box* cursor as used in some other CG applications. If so, select *Box cursor* as your preference.

- In the Options menu, deselect *Save Settings on Exit*.

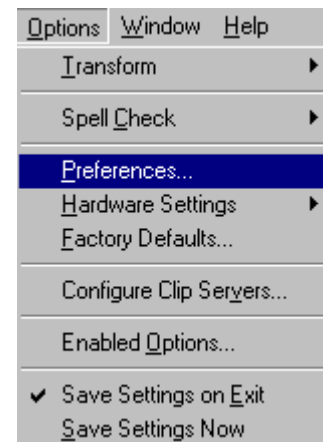

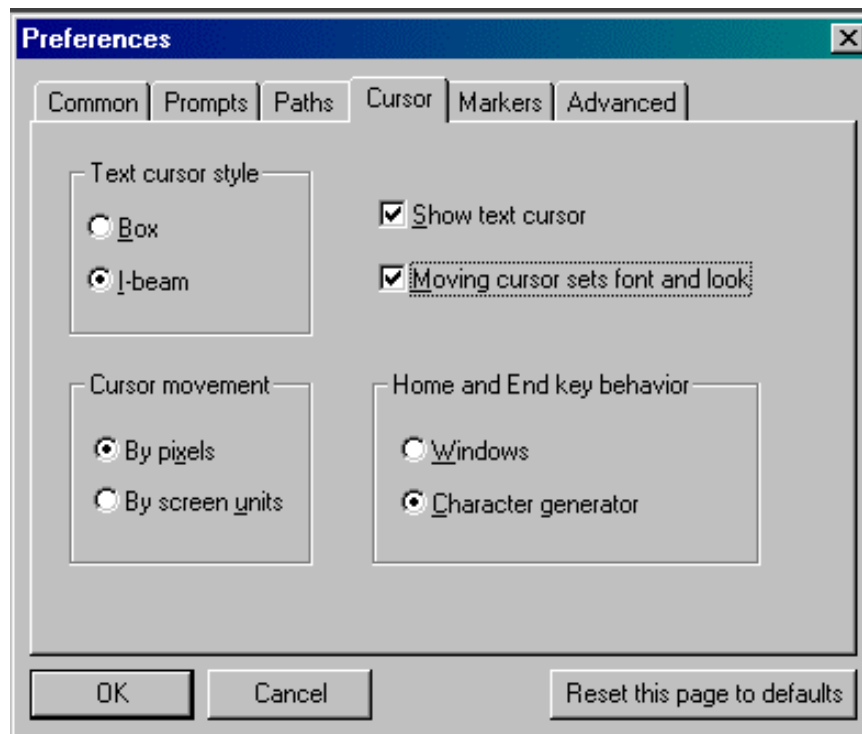

- Select the Common tab.
- Click on the Layout window.
- Click on the Shortcut menu in Starting layout and select *Style Edit*.
- If you are using a FastAction keyboard (FAK), make sure the Enhanced Keypad and FastAction Function Keys are selected. If both selections are grayed out, this may indicate that the drivers need to be installed.

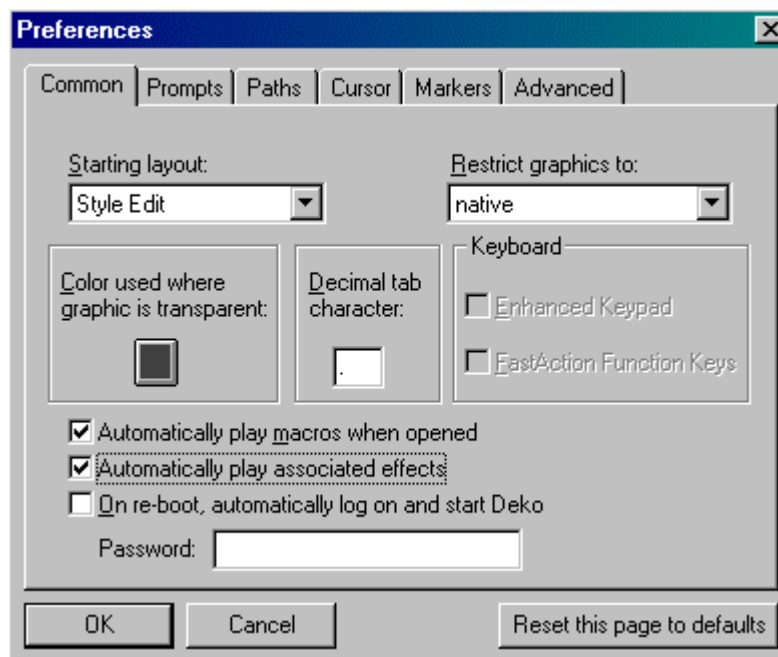


- Check *Automatically play macros when opened*.
- Check *Automatically play associated effects*.
- Click OK.

Color Used Where Graphic is Transparent

The Common tab provides you with a setting to change the background of the Preview and Program window when you are working with transparent backgrounds. The normal default for this setting is dark gray. With this setting it is often difficult to determine whether you are looking at a *keyed* transparent background or a black background. Choosing a dark color such as dark green for your setting helps you to determine what is transparent in the background. To change this setting:

1. Click on the button under *Color used where graphic is transparent*. A color picker is revealed.
2. Click on one of the basic colors or use the color picker panel for a custom color. The color chosen will display in the Color Solid box.
3. When you have selected a satisfactory color click OK. The color will be deposited on the button under *Color used where graphic is transparent*. This color will be used as the background color of the Preview and Program windows.
4. Click OK to accept the change.

Note: the color will not be displayed on your video output.

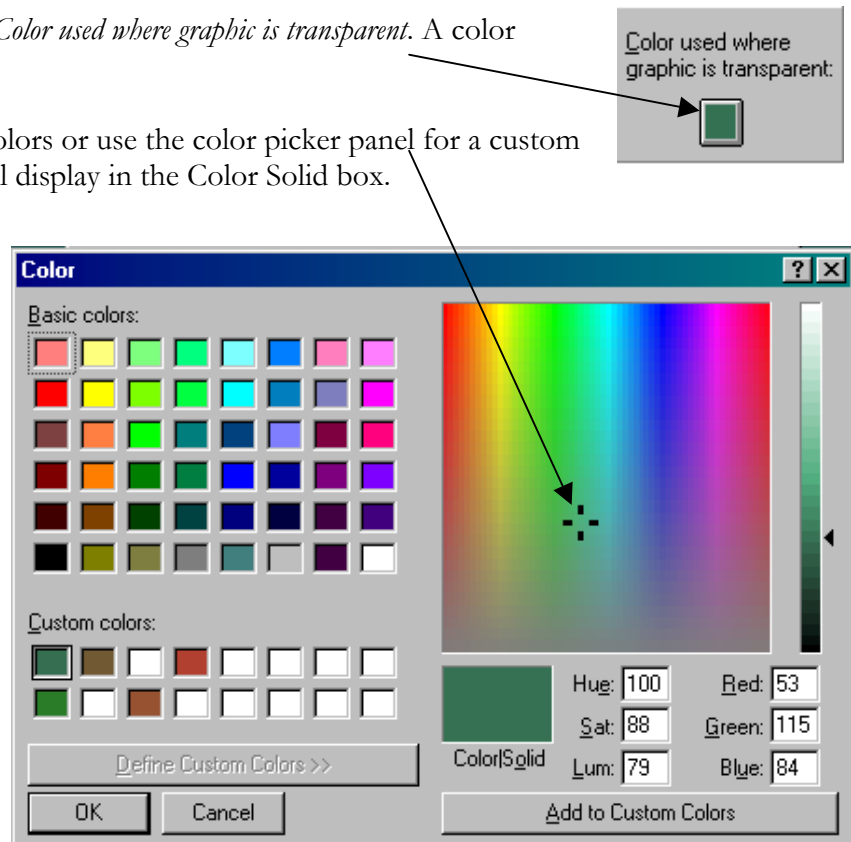

Choose Style Edit Layout (Alt+F11)

Deko provides eight preset layouts as tools for developing and playing graphics. For the first part of the lesson we will be using the Style Edit layout. This is the preferred of the preset layouts for graphic creation. Later, you may choose to create a custom layout to suit your individual work style.

Most Deko commands have keyboard shortcuts. In addition, the FastAction Keyboard has special function keys to improve the productivity of your work session. Begin to learn the shortcuts and you will dramatically improve your speed and productivity using Deko software.

Go to Windows > Select Layout > Style Edit. The shortcut for Style Edit layout on both the SK and the FAK is Alt+F11. On the FAK, press Ctrl + Program to choose your preference for standard layout (as set in the Starting layout section of Options > Preferences > Common tab). This could be the Style Edit layout, one of the other layout preferences, or your own custom layout.

Save Preferences (Alt + O >S)

Go to Options > Save Settings Now. This saves Preference menu settings and preset macro settings. Any time you re-open the Deko program, these settings will still exist and the Preset Style window will open with these styles.

Special Note: Using Undo

From time to time, you may find yourself wishing you hadn't done whatever you just did. Yes, it could happen to you. No need to panic. Deko gives you the prerogative to change your mind and your mistakes using Undo.

To Undo the Previous Action(s):

Go to Edit > Undo (Ctrl + Z) for each action you wish to undo. The Edit menu tells you what will be undone.

To Redo Undone Actions:

Go to Edit > Redo (Ctrl + Y) for each action you wish to redo. The Edit menu tells you what will be redone, that is, putting it back the way it was immediately before you used the Undo function.


To Enable or Disable Undo:

In the Edit menu, check or un-check Undo enabled.


The default setting is Undo enabled. Undo uses several megabytes of space on your hard drive and may slow some Deko operations. Disabling Undo frees space on your hard drive and may speed up Deko's performance. However, you cannot Undo actions performed while Undo is disabled, even if you immediately re-enable it.

Opening Files

The Open Files dialog provides the tools for you to open files in the Deko interface. The following tools will assist your selection:

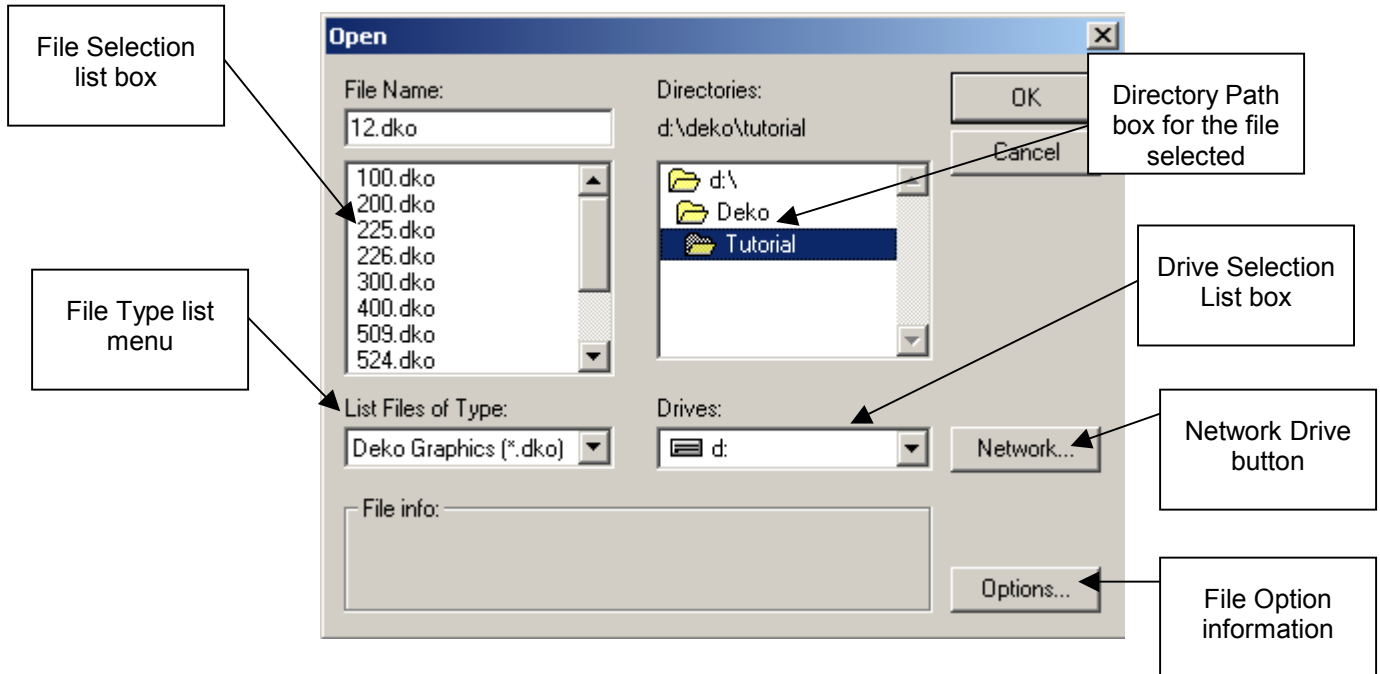

- **Directory Path field** – provides the path from the root Drive directory to your file directory. Starting from the Root Drive directory, double clicking on each folder in the path will open the final directory in the path where your files are located. This path will be placed in your Paths file of preferences. The above example would show `d:\deko\tutorial`
- **File Selection List menu** – provides a list of all available files for you to open in a selected directory.
- **List File of Type menu** – acts as a filter showing only selected file types in the File Selection menu. This can be useful when many file types are stored in a directory. Deko defaults to the Deko (*.dko) file type represented by the active window when File Open was selected. You can select a different file type if desired. In the program window, other graphic files can be open including .bmp, .tga, and .jpg files. To see these files, click on the arrow of the List Files of Type box and click on the desired file type.

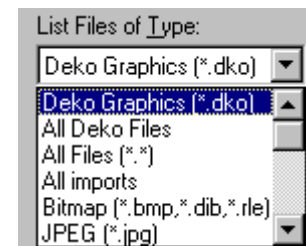

- **Drives Selection menu** – use this to select a different available drive.
- **Network Drive button** – if your Deko is connected to a network, files can be opened from servers or other Deko systems on the network. Click on this button to open the dialog to map the network path.
- **Options button** – provides file information on the selected file.

Note: Use Clear + Read keys (FAK) or F9 (SK) to open access the File Open dialog without using the mouse.

Saving Files

When you wish to save an opened file, the preferred method is to choose File > Save As. Deko automatically increments a number on the file name to create a new file with a new name. This allows you to retrieve the original should you wish to go back. The keyboard shortcut is F12 on the SK (Standard Keyboard) or the Save File button on the FAK (FastAction Keyboard). To overwrite the original file, go to File > Save or press Alt+F12 (Alt + Save File on FAK).

Verify System Output

1. Go to Style Edit layout. (ALT+F11).
2. Click in the Program window to “set focus” and type some characters.
3. Look to the video monitor to verify system output. If no text is displayed, do one of the following:
 - Check for power and proper channel selection on the video monitor.
 - Check the connection from Deko chassis to the video monitor for improper video cabling (Refer to your Deko Quick Install Guide for information on connections).
 - Check for a video reference source; Deko requires this for output. Go to Options > Hardware Settings > Analog IO adjustments. Under Reference Status, look for “Line Locked” or “Color Locked” to verify a reference source.


Note: Use the *Hardware Settings* menu for technical troubleshooting. Do not change any setting without consulting the appropriate technical personnel within your facility.

Exiting Deko


To exit Deko, choose File > Exit (Alt+F4) or click on the close box on the Deko Interface.

Exercise: Enter Text Into Bio Page. Play to Air With an Effect.

This sample exercise is designed to familiarize you with various components of a Deko graphic, as well as entering, saving and recalling text. See the sample below.

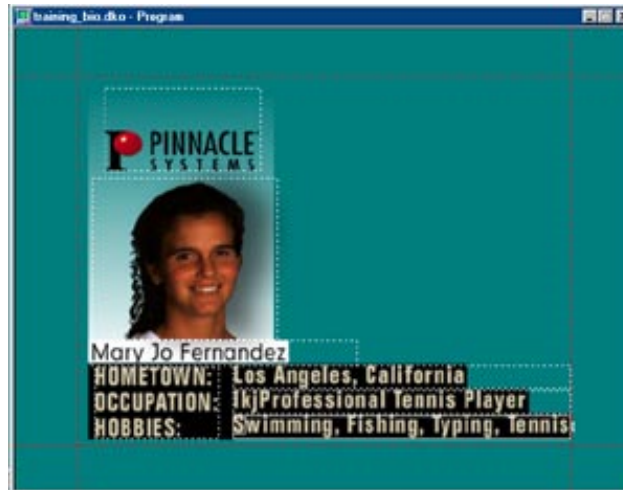

1. Click in the Program window to *set focus* and open the sample file D:\Deko\Tutorial\training_bio.dko.
2. On the keyboard, toggle the Insert key to enable Overwrite (OVR) mode. Look to the status bar at the bottom of the screen to see that OVR is displayed.
3. Press the Tab key to jump from layer to layer in the graphic. Enter personal information for the following layers: name, hometown, occupation and hobbies.
4. Press the Save File key and enter “99” as the filename (message address). Save your file to the Tutorial folder.
5. Press the Clear Program key to clear out the air channel. Do the same for the Preview channel.
6. On a FastAction keyboard (FAK): Enter “99” from the numpad, then select the Read Preview key.

 On a Standard keyboard (SK): go to View > Preview. Select the Read key (F9) and open “99.dko”.
7. Take notice of the FAK’s blinking Play key and the mouse icon  (indicating unavailable). Deko is currently paused awaiting the play of an effect.
8. Press the Play key (FAK) or Alt + Enter (SK) to resume the effect. Look at the video monitor to see your work.

Shortcuts Keys

| | |
|------------------------|-------------|
| Close the Deko program | Alt + F4 |
| Save Settings Now | Alt + O > S |
| Save File As | F12 |
| Save File | Alt + F12 |
| Style Edit Layout | Alt + F11 |

Lesson 2: Navigating the Deko Interface

The Deko Interface

When you open the Deko program, the window will display the starting layout you set to configure on the Common tab of the Preferences dialog box. If you configured your system in Lesson 1, the window should open to the Style Edit layout. This is the preferred layout for graphic creation. In this section we will review some important concepts for quickly navigating the Deko Interface. We will also introduce the four main layouts for work within Deko. Finally we will show you how to create and save your own custom layout.

When you are working in Deko, the look of the screen will change depending on the layout you are using. All layouts share some things in common. For example, each window will open with a menu bar at the top of the layout. These menus provide you with the tools necessary for running the Deko software and are key to mastering the program. The menus will change depending on the layout selected and the window activated for each function.



If you position the mouse pointer to a menu selection and click on a Menu item, a Shortcut menu will reveal more selections, click on a selection to open a dialog box or activate a function.

Navigating the Menus with the Keyboard

As you are learning the software, you will need to refer to the menus frequently to learn where commands are located. As you learn the interface, you will use the keyboard shortcuts and rely less on the mouse.

Using the Alt Toggle

Pressing the Alt key will toggle menu selection. When you press the Alt key, the selection over File will depress. Press the left arrow key to select the item to the right. Press the down arrow to open the Shortcut menu. Continue pressing the down arrow to select a menu item.

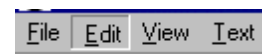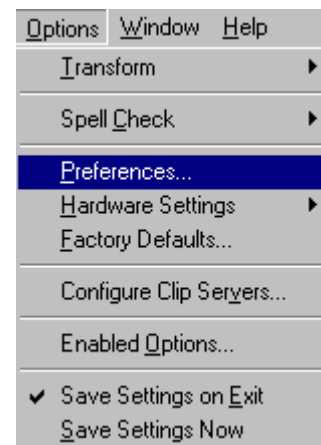

Using Alt Key Select to Open Menus

Notice that the first letter for each menu selection is underlined. If you hold the Alt key down and press the underlined letter, that menu will be revealed. For instance, press Alt + V to reveal the view menu.

Notice that each menu item has an underlined character. While the window is open, if you press this character, you will activate this menu function. Press Alt + V then N to reveal the Motion window (without a layout change). Press Alt + V then S to reveal the Style window.

In this text we will note any menu selections as with this example Alt + V > S, which translates to the Alt key plus the V key then the S key.

Shortcut Keys


Also notice in this menu that some selections have a keyboard shortcut. For example, Sequence has F11 noted after it. Function key 11, is a keyboard shortcut for the Sequence Edit layout on a Standard keyboard. You should begin to memorize the shortcut keys you use regularly. They will save you a tremendous amount of time. Learn to use the mouse as little as possible.

The View Menu


The View menu, pictured above, provides access to all of the tools available to the Deko interface. The eight items checked in the menu comprise the elements of the Style layout view. The remaining items are additional dialogs we will explain later.

Selecting an item will toggle it on or off view. Each standard interface layout uses a different combination of these *views*. Later in this lesson, you will learn how to create your own custom layout using the tools of your choice.

Remember use Alt + V > (ID letter) to select a view rather than the mouse. If an item has a keyboard shortcut, learn the shortcut.

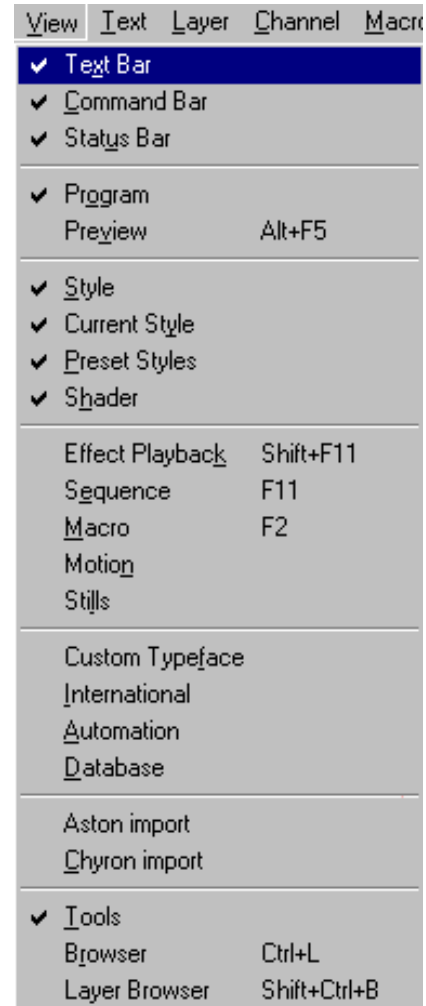

The Window Menu

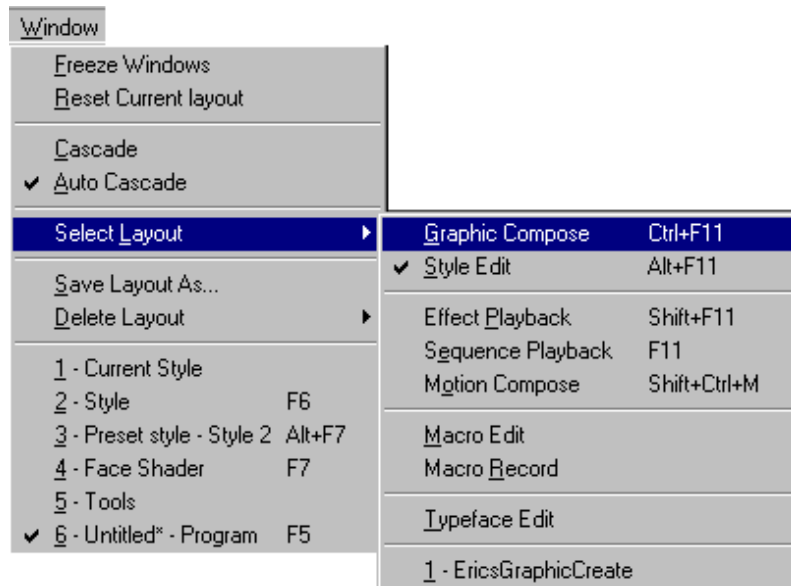

The Window menu provides access to the machine layouts you will be working with. There are seven standard layouts available to work in. In addition, FXDeko/FXDeko II and some other models allow you to save custom layouts that will appear in this menu. To access these layouts with the Alt key, press Alt + W > L > (ID letter for Layout). For example, Typeface edit can be accessed with Alt + W > L > T.

Notice that the first five layouts have shortcut keys. You should learn these shortcut keys, and use them to access the different Layouts. You will be switching layouts frequently in the operation of the machine and you need to be able to do this quickly.

Four Important Layouts

The four most important layouts for working within Deko are:

- Style Edit (Alt + F11)
- Effects Playback (Shift + F11)
- Sequence Playback (SK: F11, FAK: Seq Edit)
- Motion Compose (Shift + Ctrl + M)

Style Edit Layout (Alt + F11)



The Style Edit layout is the preferred view for graphic creation and is probably the most important layout for you to learn. The Style Edit opens with the Program window in the center. Five windows surround the Program window: Style window, Current Style window, Preset Style window, Shader window and Tools window.


The Style Edit layout will be covered in detail in Lesson 4 – Type and Modify Text.

Sequence Edit (F11)



The Sequence Edit layout is used to create a playback sequence of graphics. The Sequence Edit view opens with three windows, the Preview window (top left), Program window (top right) and Sequence window (bottom).


Effect Playback (Shift + F11)

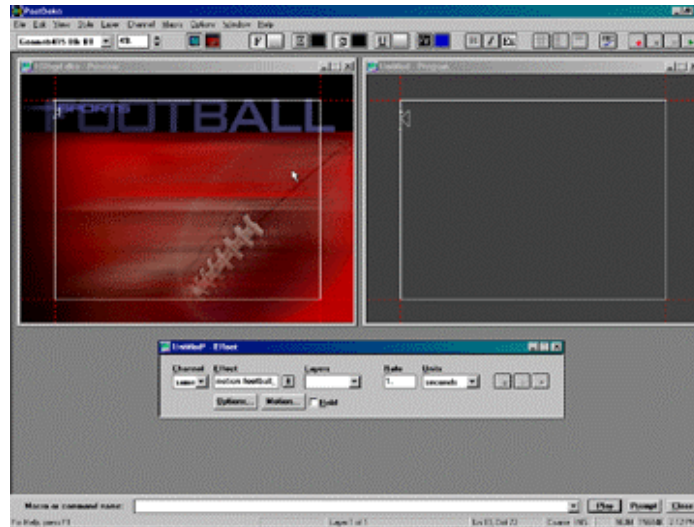

The Effect Playback window looks similar to the Sequence layout. The Effect playback window replaces the Sequence window on the bottom. Use this layout to setup and playback single effects (as opposed to creating a playback sequence of multiple graphics). You can also use this layout to create an *embedded effect*, which can be stored with a graphic and played when the graphic is opened in the preview channel.

Both of these layouts will be covered detail in Lesson 9 – Creating Sequences and Effects.

Motion Compose (Shift + Ctrl + M)

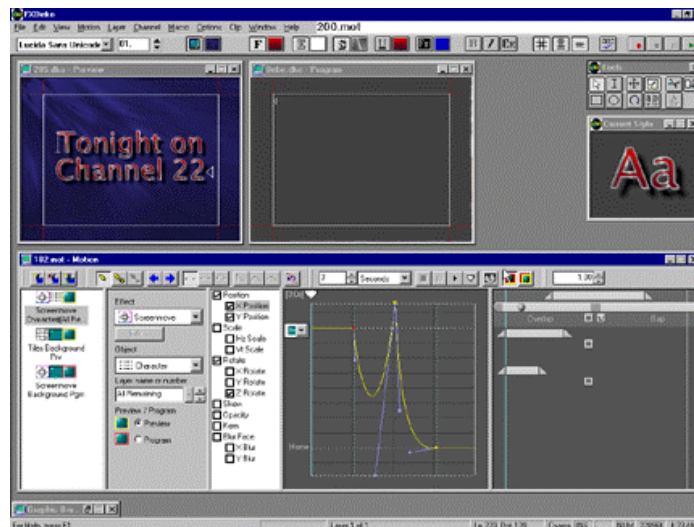



The Timeline Motion Compose window enables you to create a wide variety of complex on-screen moves and 3D effects. These effects can be applied to any and all elements in the graphic providing for very sophisticated and exiting on-screen moves.

In Lesson 10 you will work through a tutorial to produce a complex graphic move with the timeline. You will also learn how the timeline can be used to create sophisticated moves on multiple elements (layers) of a graphic.

Custom Layouts


The Deko interface can be customized to meet your individual requirements. To customize the interface, rearrange the windows as necessary. Open any windows you wish to include from the view menu. Close any windows you do not wish to include. Below is an example of a custom layout.

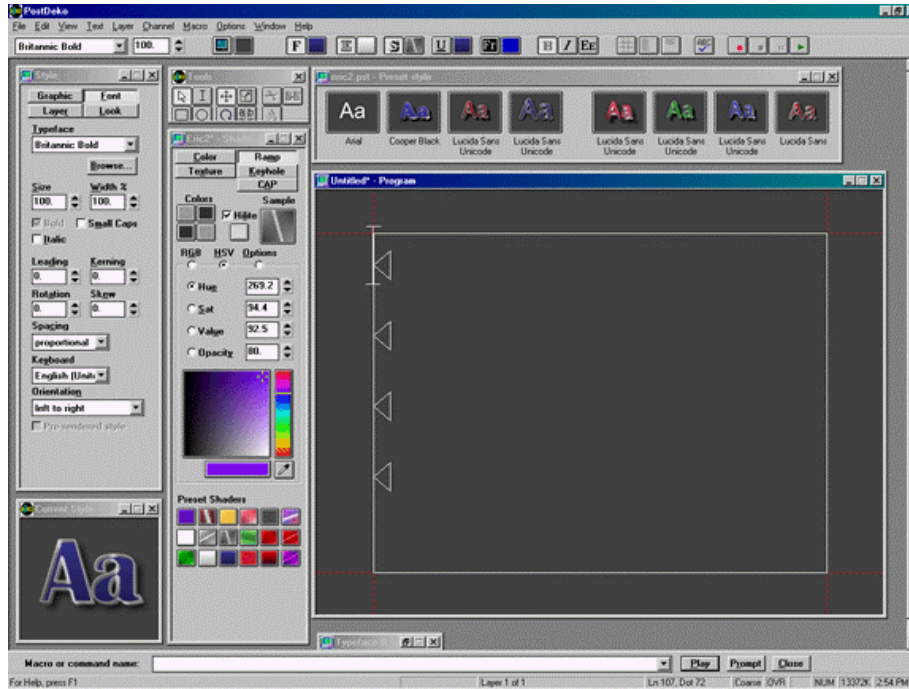

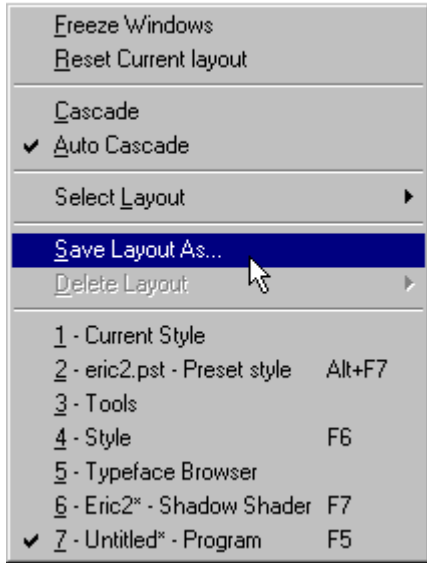


To save your custom layout:

1. Go to Windows > Save Layout As.
2. Type the layout name in the Save Layout dialog box and click Save.

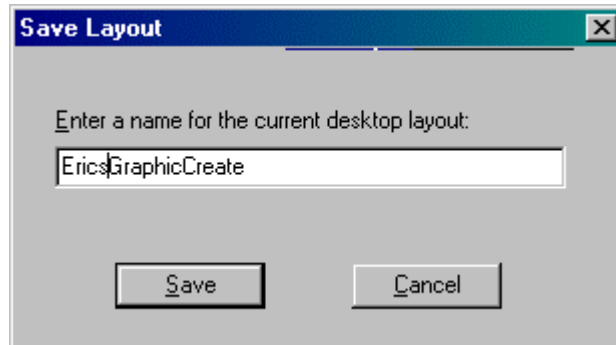

3. The layout is now available as a selection in the Windows > Select Layout menu.

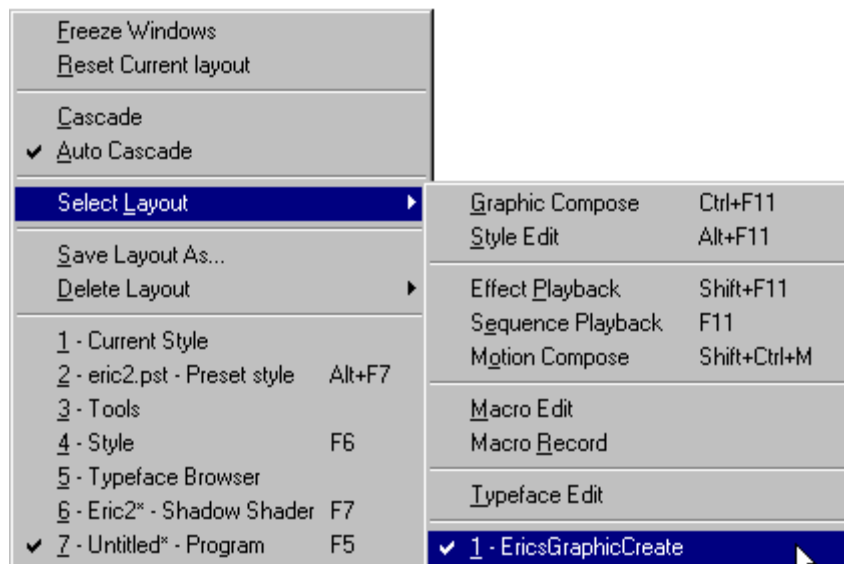

Note: Not all versions of Deko allow you to save custom layout views.

Lesson 3: Setting up and Managing File Directories

Opening Windows NT Explorer

Windows provides a number of ways to manage files. One of the more useful tools is Windows Explorer. Explorer works basically the same on Windows 95, 98 or Windows NT, so no matter what version of Deko you are using, you will find Explorer an essential tool to manage your files.



Opening Windows Explorer

1. Click on the Start button.
2. Move the mouse pointer up to Programs to highlight it. A second menu will appear.
3. Click on Windows NT Explorer.

Desktop

Many long-term users do not know about this shortcut to open Explorer.


4. Right-click on the My Computer Icon on the Desktop
5. Click on Explore from the popup menu.

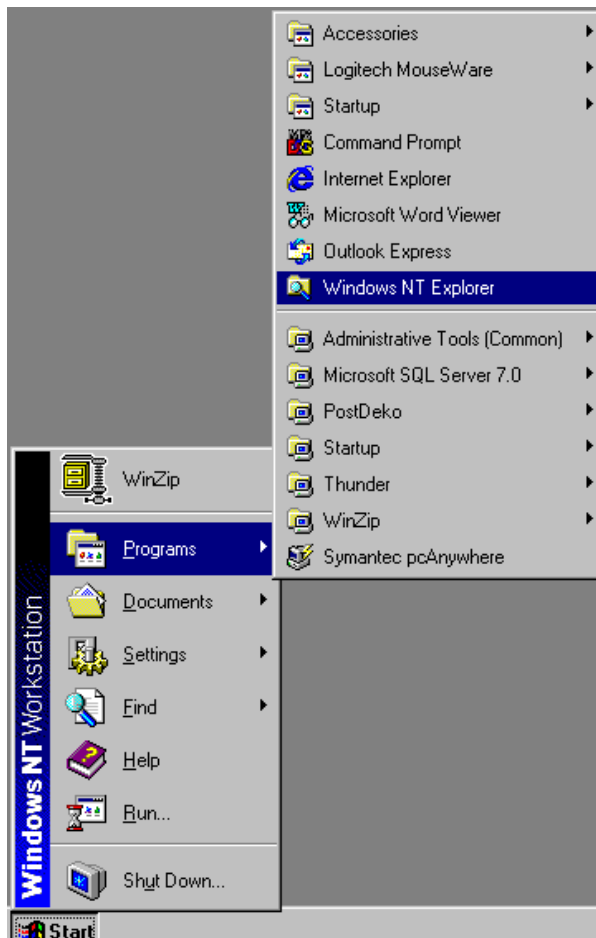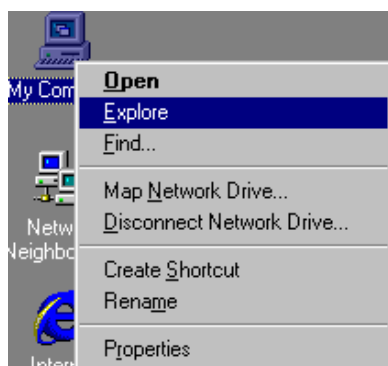


Showing File Details

When Explorer opens, check to see you are in the Details View.

To choose the Details view, go to View > Details.

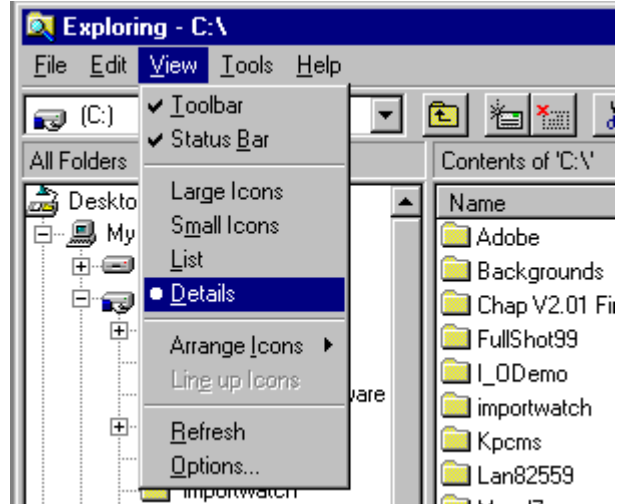


Browsing Through Drives and Folders

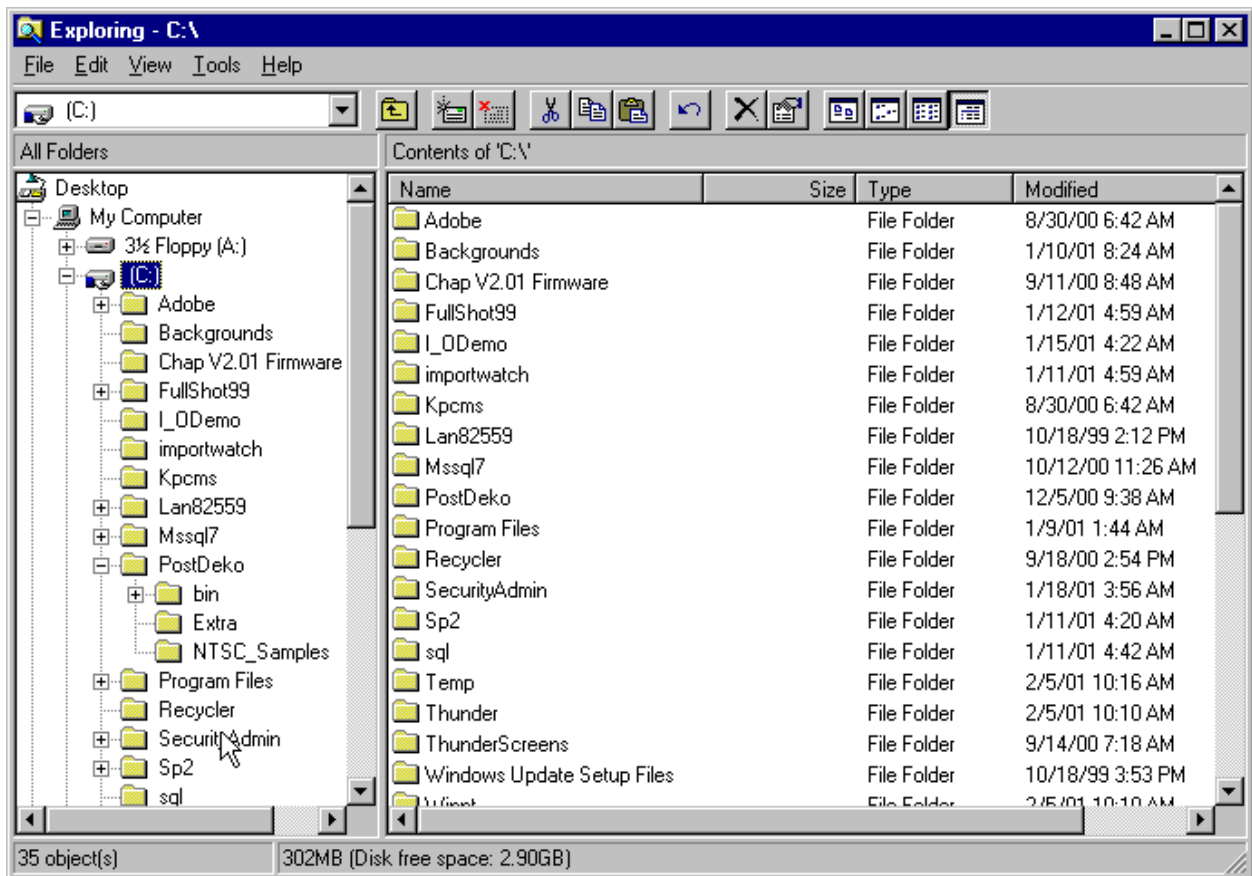


Explorer has two sections. The left pane, or *Network Tree*, shows the drives and folders available to the system. The right pane shows the contents of the highlighted drive or folder. In the above picture, the C drive is highlighted in the left pane, so its content shows in the right pane.


Notice the minus (–) sign next to the C drive and the plus (+) sign next to some of the folders in the network tree. A minus sign indicates that the folders (directories) residing in that drive or folder are displayed below it and slightly to the right in the network tree. A plus sign indicates that that drive or folder has additional folders, which are not in view. Clicking on a sign or double clicking on a folder will toggle between showing and hiding the directory contents.

Look at the Icons in the left pane. Your system will have the same Icons.


 Indicates a local hard drive, on your computer. Your Deko should have a C and D drive. Drive letters begin with A: (always a floppy drive) and continue to include all local and network drives. The hand under the drive icon indicates this is a shared drive.


 Indicates a CD-Drive


 Indicates a network drive, which is a drive or directory located on another computer and connected over a network.


 My Computer displays all drive resources located locally on your computer.

 Desktop indicates all resources and Shortcuts mapped to your desktop space. You can customize this space.


 Network Neighborhood provides access to all network connections available on your computer.

 The Control Panel folder gives you shortcut access to your computer’s Control Panels directory. This folder contains a number of useful utilities to modify the settings on your computer. For instance, the Date/Time utility allows you to set the clock and calendar for your computer. This Clock Setting is used when you create a CG clock in Deko.


 If your C drive is highlighted, click on the Up One Level button on the Tool bar. This will place you at the My Computer level.

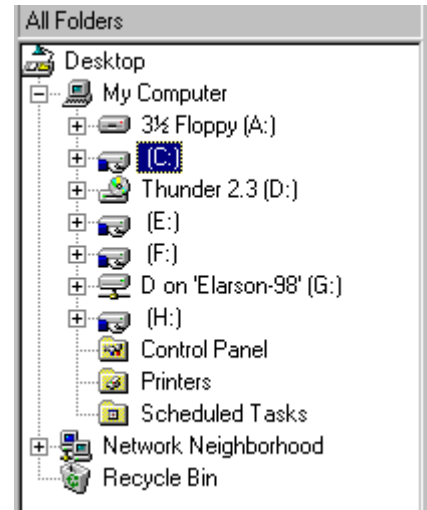

Note: If you are at a file level, clicking on the Up One Level button will take you to the next folder up or to the drive level if there are no folders. At the drive level, it will take you to My Computer, From My Computer; you will go to the Desktop.

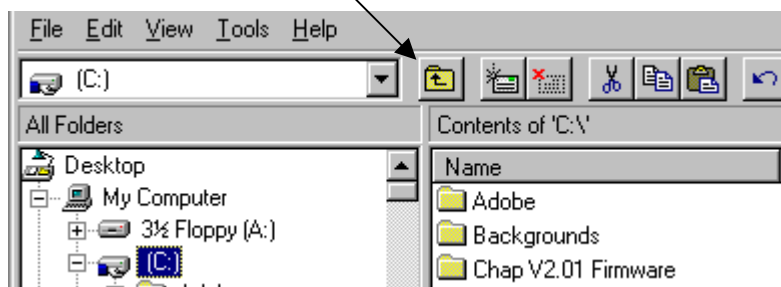


Network Neighborhood

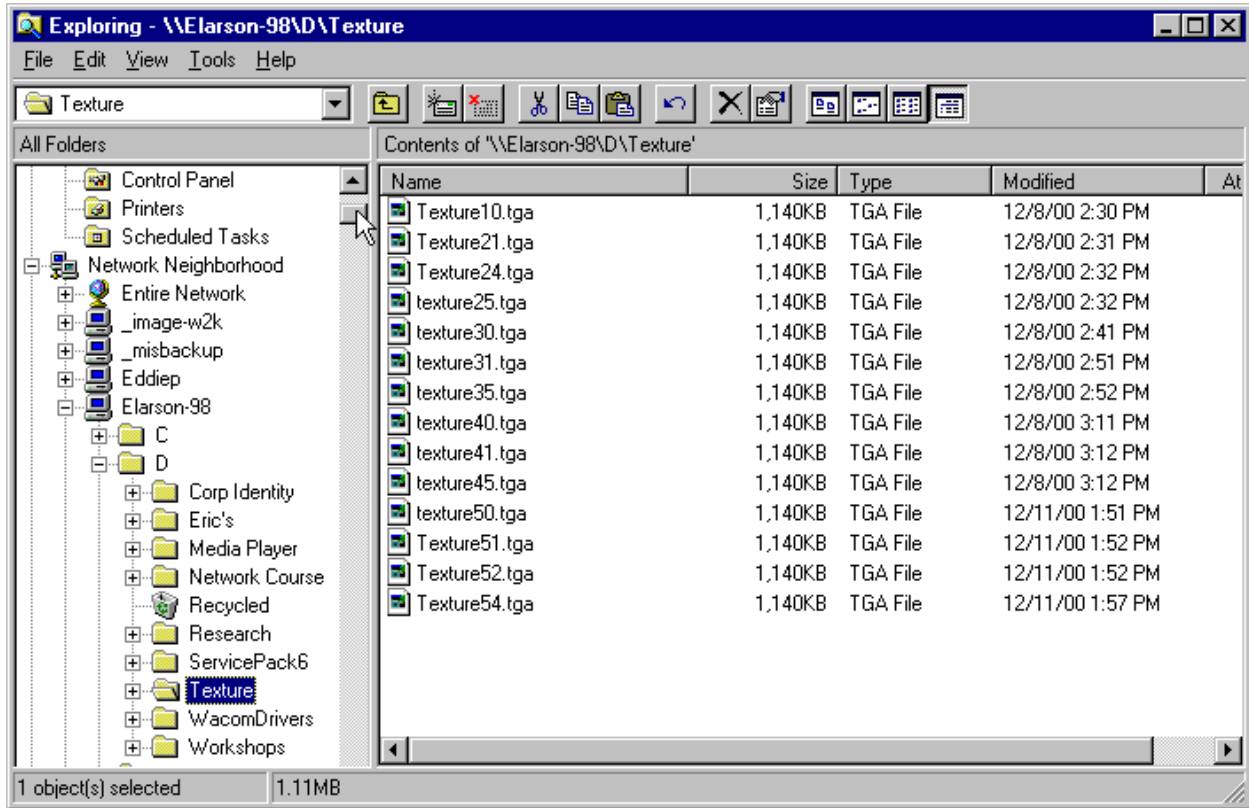

Network Neighborhood displays the available network connections for your system. In the above example, the Network Connection Elarson-98 is open displaying its directory contents. The Folder Texture located in the D directory is highlighted with its contents in the right window. Network connections can be navigated in the same way as drive connections.


Note: Not all network connections or directories will be available to you without proper authorization or a password. If the Enter Network Password dialog box appears, enter your login name in the Connect As: field and your password in the Password field. See your network administrator for help accessing the files you need.

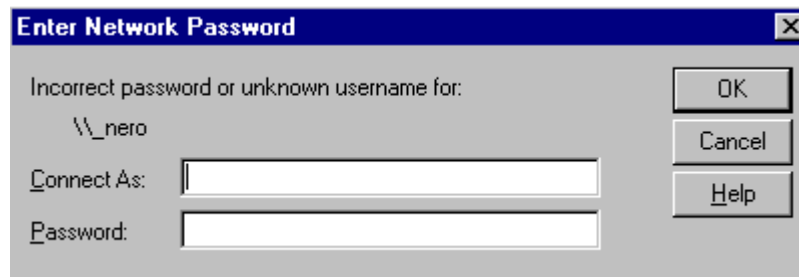

Managing Files and Folders


Copying Files Between Drives or Folders

1. Go to the drive and folder that have the original files you want to copy.
2. Select the file you want to copy. To select more than one file, hold down the Ctrl key and click on each of the files you want.
3. Click the right mouse button (right-click) on one of the highlighted files. A menu will appear.
4. Click on Copy. You won't see anything happen but the files are now copied to the Clipboard, a temporary storage area on your computer.

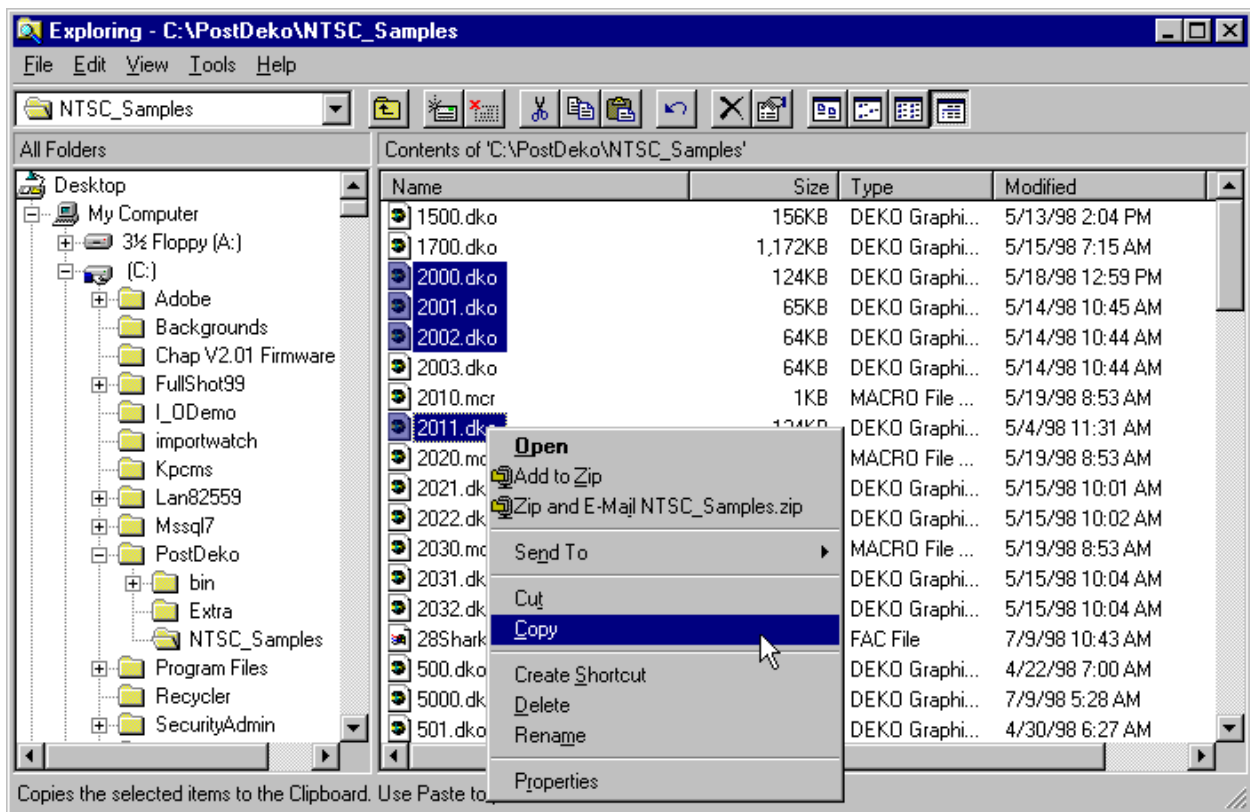


Note: If Copy is grayed out on the menu, your mouse pointer was not on top of one of the highlighted files. Repeat steps 2 and 3 and try again.

5. Navigate to the drive on which you wish to paste the copied file(s).
6. Scroll to the folder into which you want to paste the file(s),
7. Right-click on the folder where you want to paste the file(s). A menu will appear
8. Click on *Paste*.

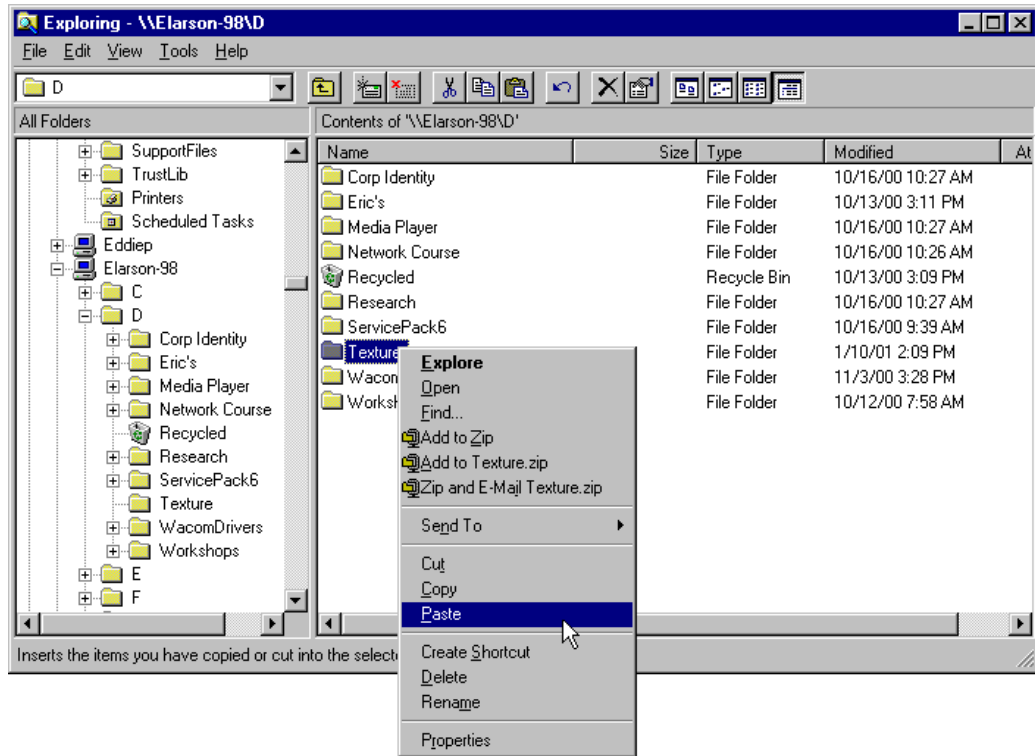


Note: If the files have the same names as the files already in this folder, you will see a message appear as to the right. Click Yes to allow the copy to continue, or no to disallow it. If you click Yes to All, copying will occur for all files with the same name. Be careful when selecting this command. You may overwrite a file you did not wish to lose. There is no undo for this command.

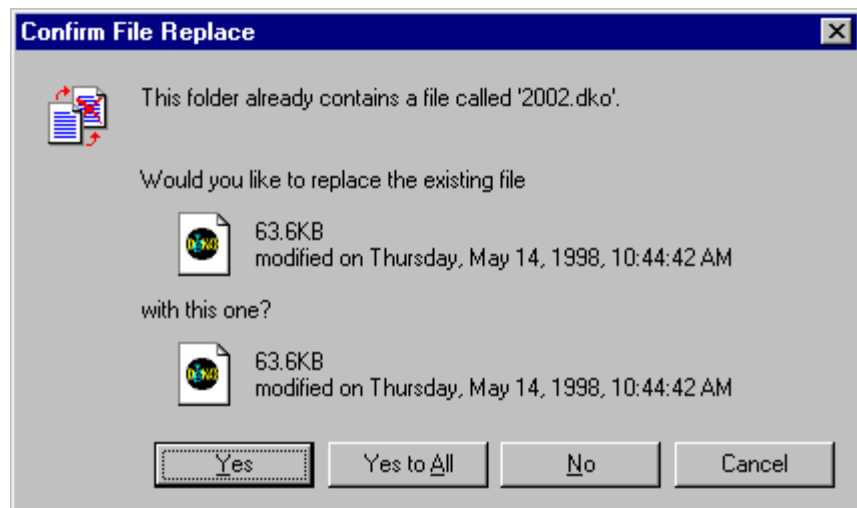

Moving Files Between Drives


Use the Cut/Paste commands to move files between drives.

1. Go to the drive that has the files you want to move.
2. Select the files.
3. Right-click on one of the highlighted files. A menu will appear.
4. Click on Cut. You will still be able to see the files but the file icons will be grayed out.

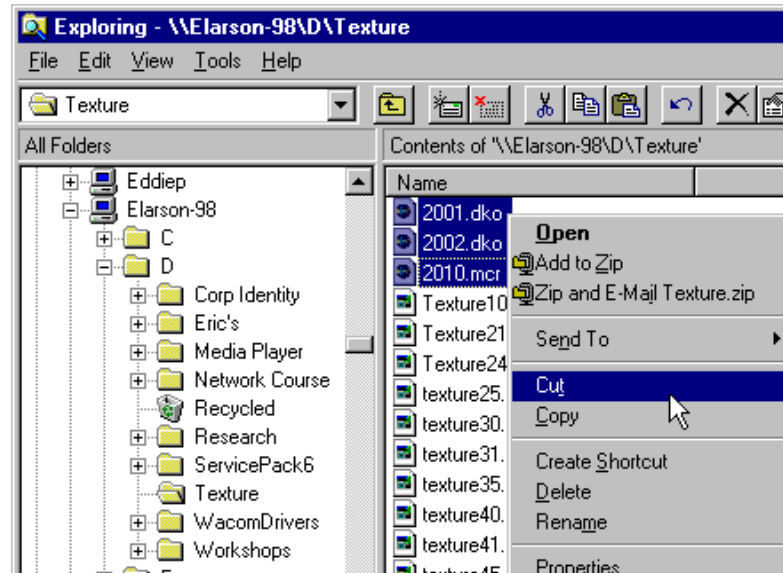

5. Go to the drive to which you wish to move the files.
6. Right-click the folder where you wish to place the files in and click on Paste. The files will be moved to the new location.


Note: Macintosh users often drag and drop files between folders. This is a dangerous practice in Windows as it can break directory links causing files to be lost to the program's search path. Do not drag and drop files between folders. Instead, select the files and copy them, then paste them to a new folder.

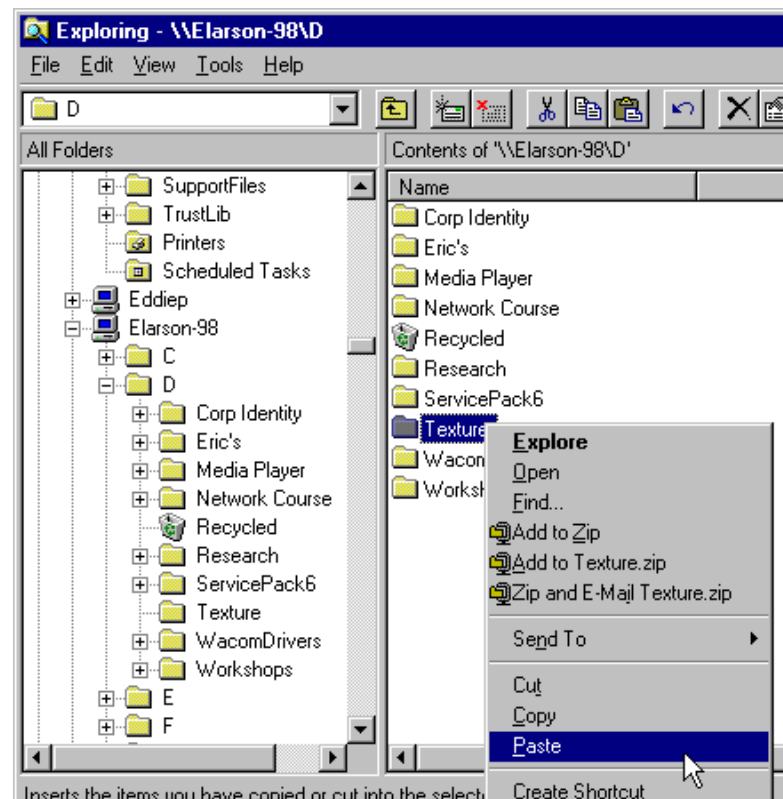


Deleting Folders and Files

When you want to permanently delete folders or files from your system you use the Delete command. The Cut command will not remove files until you move them into another folder. The Delete command will normally send items to the Recycle Bin, which is the last item in the Network Tree. Items placed in the Recycle Bin can be recovered and placed back on your system for use. If the recycle bin is emptied, items are no longer available for recovery.


1. Right-click on the folder or file(s) you want to delete. A popup menu will appear.
2. Click on Delete. One of two messages will appear.

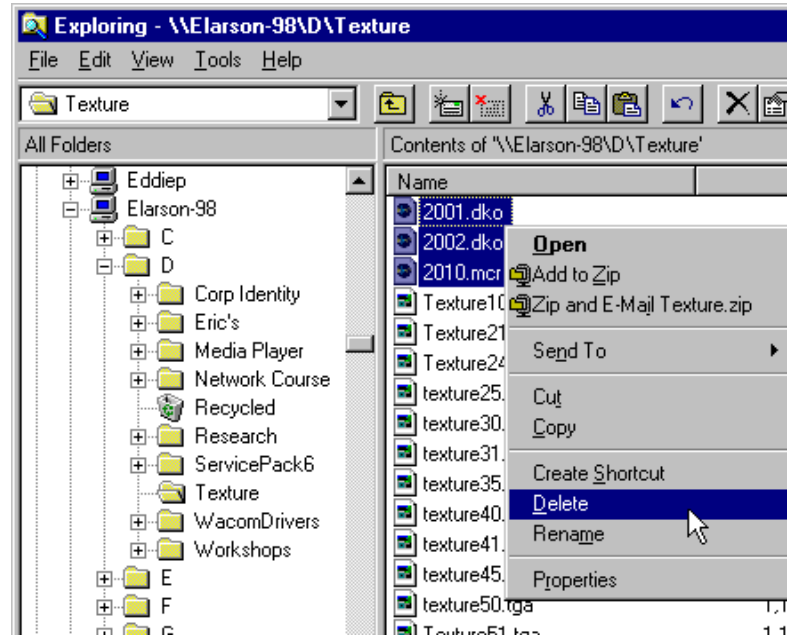

- If the following message appears, click yes and the folder or file(s) will be placed in the Recycle Bin. Files placed in the recycle bin can be recovered.

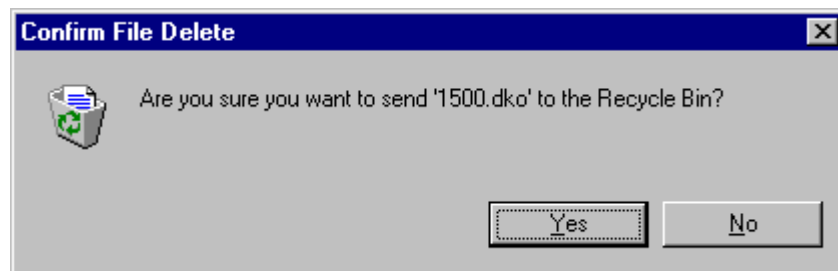


- If this message appears, click yes to permanently remove the folder or file(s) from the drive or system.


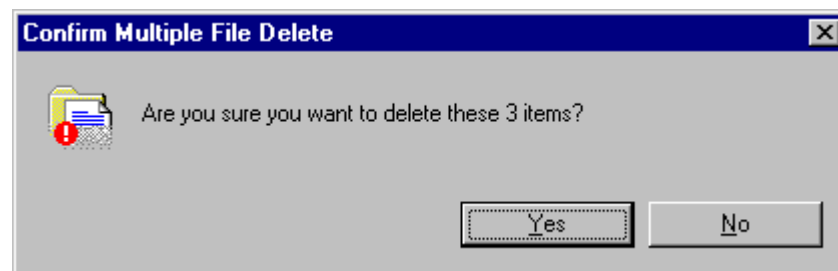


Note: The second message will appear whenever you are deleting files from a networked drive or an external drive such as a zip disk or a floppy. Files deleted from external drives or sources cannot be recovered.

Rescuing a Deleted Folder or File

If you deleted a folder and sent it to the Recycle Bin, you can easily recover it. Windows provides a number of ways to do this. Three ways are outlined here:

- Click on the Undo button in the Toolbar 
- Click on the Edit menu and select Undo Delete.

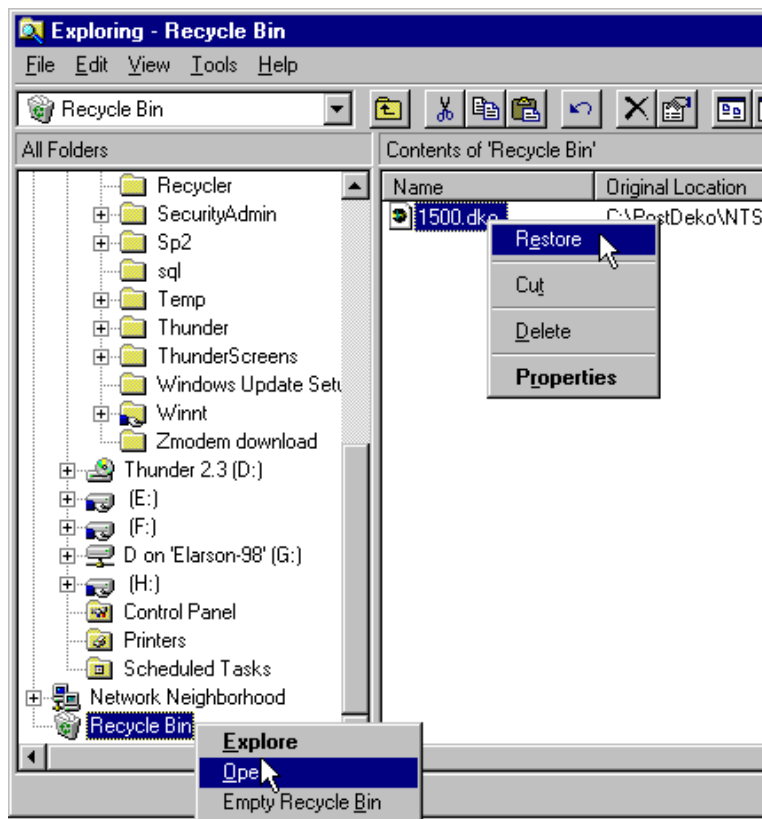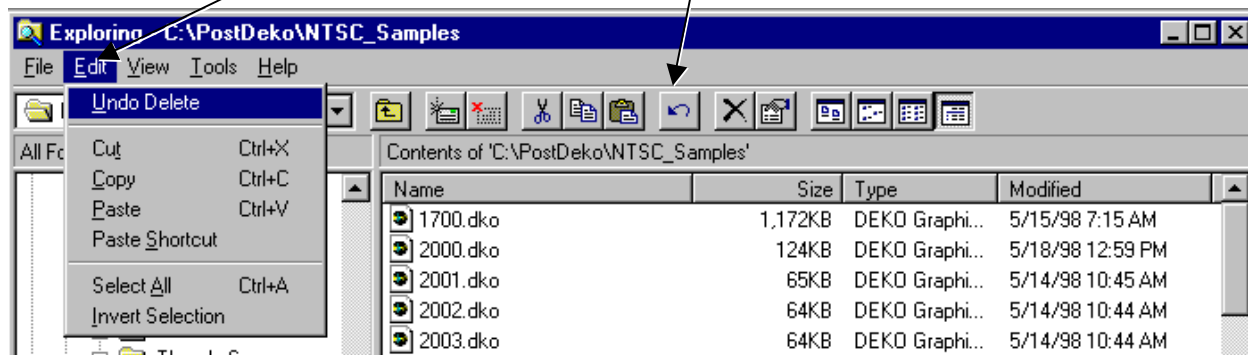


- Drag the Network Tree Scroll bar to the bottom and right-click on Recycle Bin.
1. Click Open on the menu.
 2. Select the file(s) you wish to restore.
 3. Right-click on one of the highlighted files and click Restore on the popup menu.

Creating New Folders


Folders can be nested inside other folders. This way you can easily organize your data. At the end of this lesson you will complete an exercise creating new folders and sub-folders to store your graphics in. Creating folders is an important skill you will use to organize your graphic material.

1. Click on the Drive or folder you wish to place your new folder in. In this case click on the C drive.
2. Go to File > New. A popup menu will appear.
3. Click on Folder. A second folder labeled New Folder will appear at the bottom of the list of folders in the right window. New Folder will have a box around it and will be highlighted.

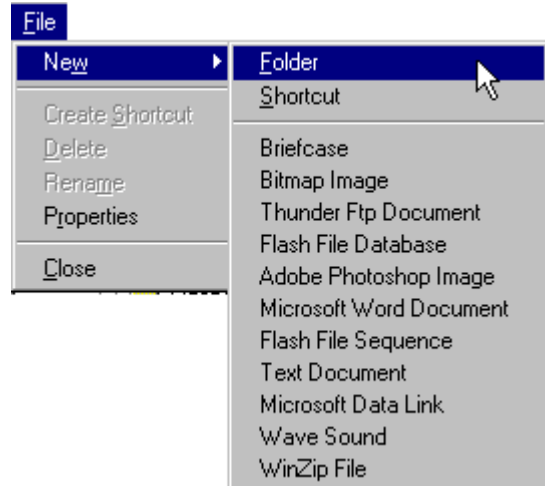

4. Type a name for the new folder. In this example it is Deko Graphics.
5. Press the Enter key to complete the process.

Notice that your new folder appears in the correct order in the Network Tree. It still appears at the bottom of the right contents pane. When you click to another folder and then open it again it will appear in the alphabetical order.

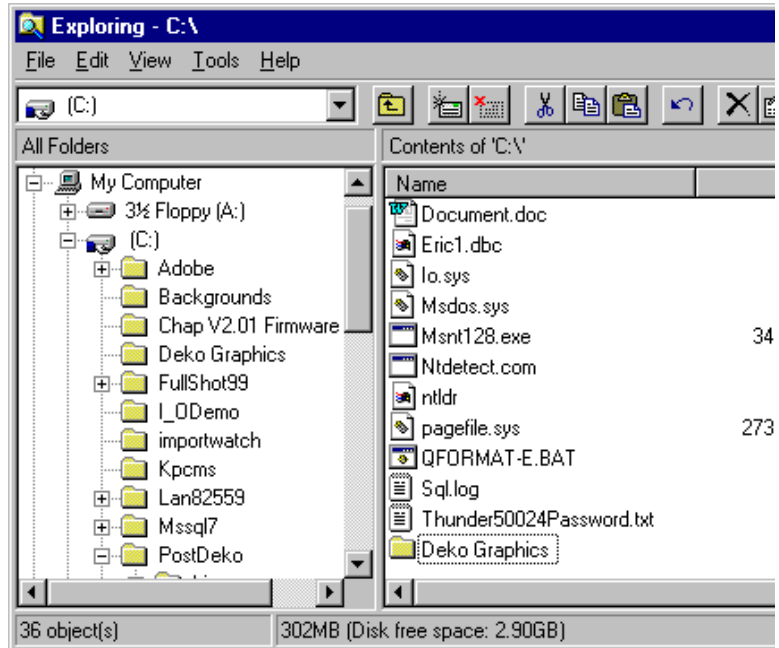



Renaming Folders and files

You may wish to change the name of a file or folder. A file must be closed before you can rename it. If it is still opened, you will get an Access Denied message.

1. Right-click on the folder or file you want to rename. A menu will appear.
2. Click on Rename. A box will appear around the name and the name will be highlighted.
3. Type a new name.


Note: If you chose to show the file extension, be sure to type the file extension in the new name or Windows will not recognize the file. File extensions are typically a three-letter code preceded by a period such as .dko for Deko graphic file type.

4. Press Enter to complete the naming process.

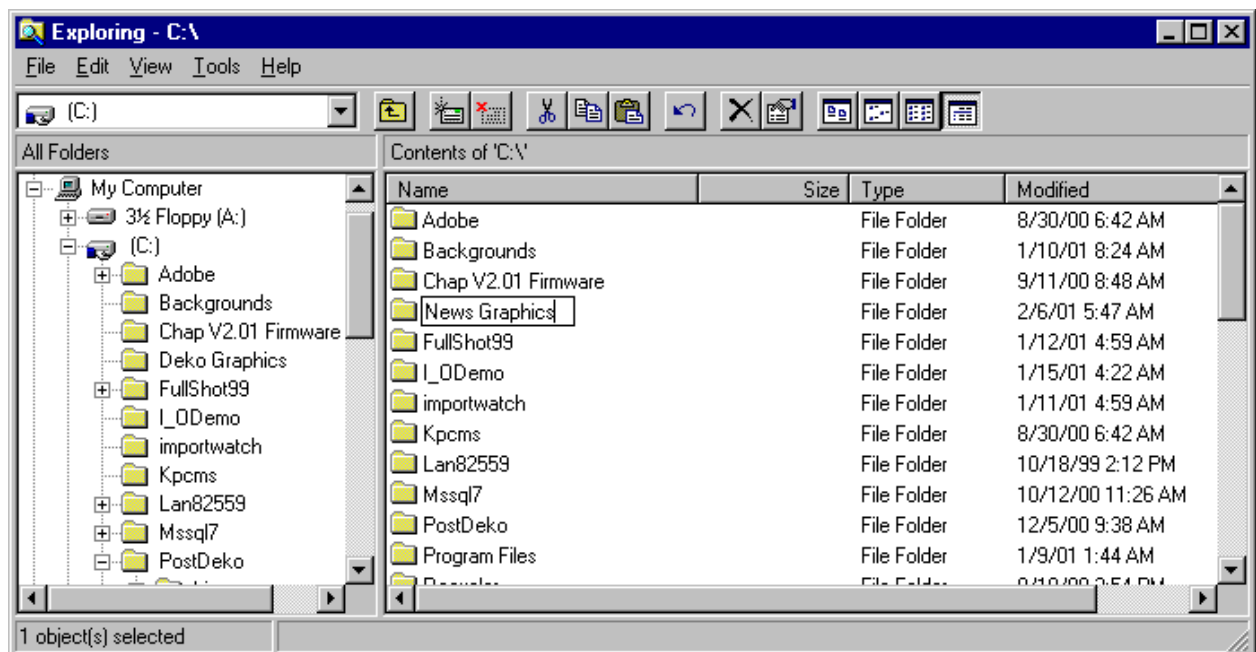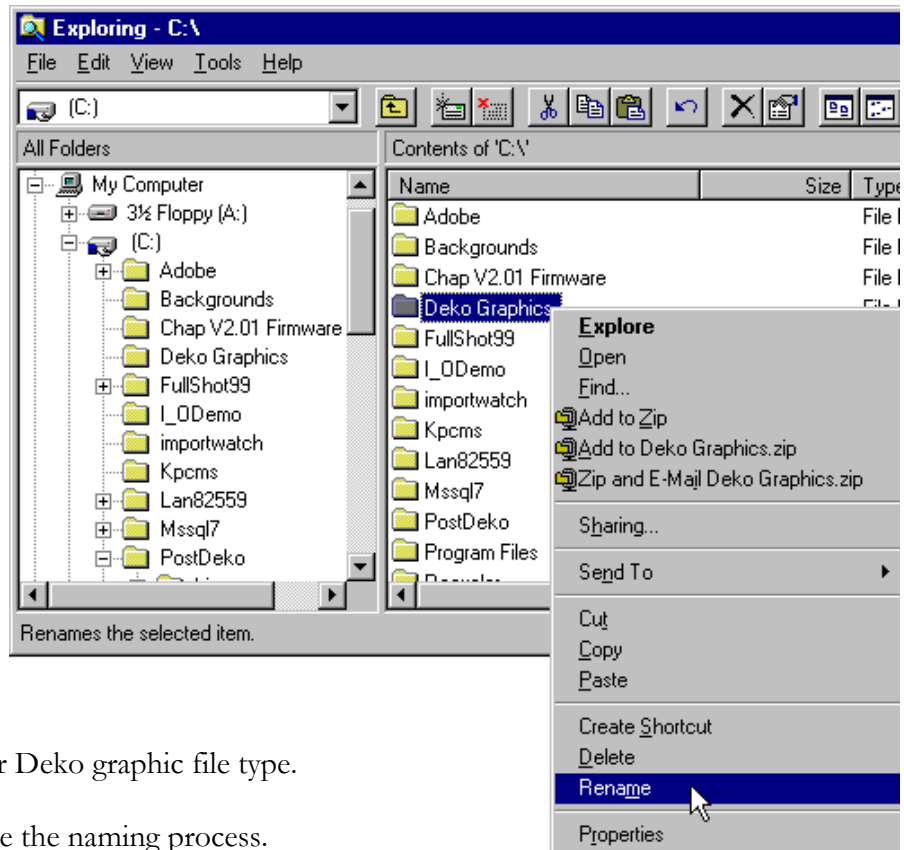




Windows Components

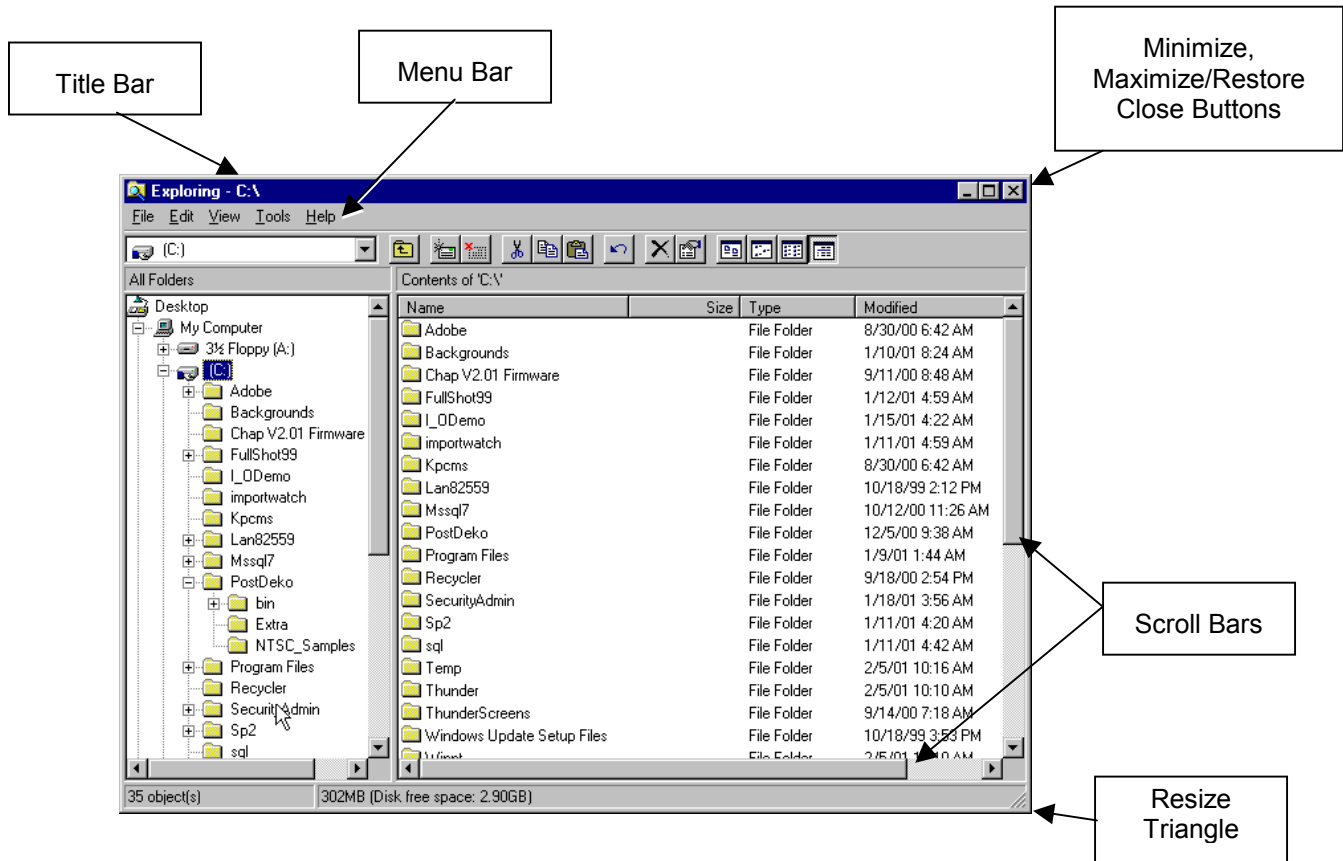
Programs open within the Windows interface as *Windows*, which can be opened, closed, resized or repositioned on the Desktop. Explorer, like other programs opens within a window. Windows will have some or all of the following components to allow you to work with them.



- **Title Bar** – gives the Title of the program, documents or dialog box. When it is bright and highlighted it is active. When it is grayed out, another window is active. Click anywhere in the window to make it active. Click and hold the left mouse button on the title bar to drag the window to a new location on the desktop.
- **Menu Bar** – provides tools to work within the program or dialog box.
- **Minimize, Maximize/Restore/Close buttons** – Use to minimize, maximize, restore or close a window. We will discuss this in the next section below.
- **Scroll Bars** – Drag these with the mouse (click and hold the left-mouse button and drag the mouse) to reveal contents of the window that are not visible. If the scroll bars disappear, the full content of the window is displayed.
- **Resize Triangle** – Position the mouse pointer over this small triangle in the lower right corner of the window and drag to resize it.

Changing the Size of a Window

1. Click on the Maximize  button to make a window fill your screen. Notice that after the window is maximized, the Restore button  appears in place of the Maximize button.
2. Click on the Restore button to restore the window to its previous size.
3. Click on the Minimize  button. The window will disappear into the taskbar at the bottom of your screen. It is now running in the background, which means the program is still open and will immediately reappear when you click its button on the taskbar.

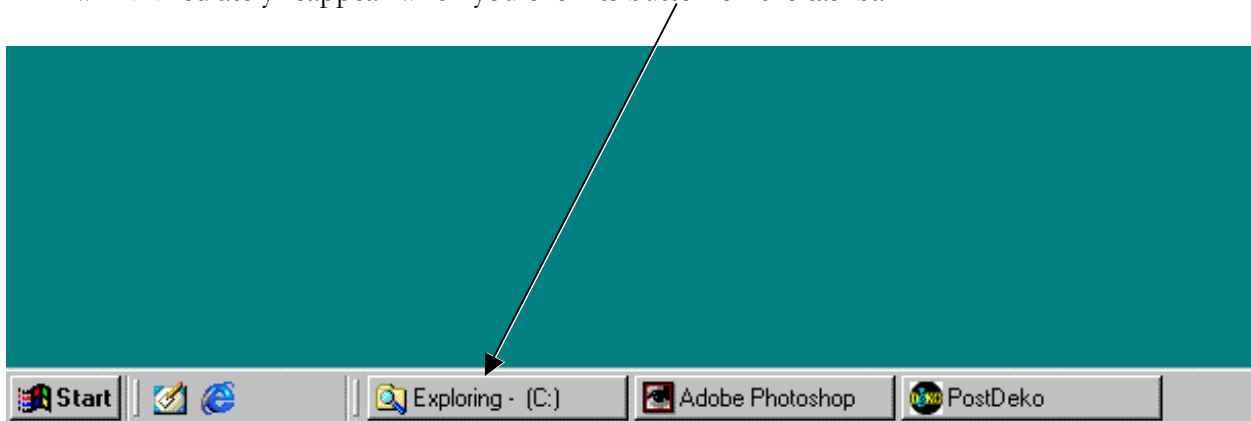

Switching Between Open Programs or Windows

If you move the mouse to the bottom of the Desktop, the Taskbar will reveal. Click on the program you desire, and the Desktop will switch to the program selected.

Alt Tab Key

You can quickly gain access to each program without revealing the Taskbar by holding down the Alt key and pressing the Tab key. When you press and hold the keys, the following menu appears showing each program running on the task bar. Each time you press the tab key, you toggle between programs. If multiple programs are running, hold down the Alt key and press the Tab key until the blue square highlights the program you want. Then release both keys and the program will switch.



Deko File Types

Deko uses a variety of file types to save various kinds of data. Each file type is identified by a three-letter extension.


- `.aut` – Automation file, opened or saved from the Automation or Database window.
- `.dko` – Graphic file, opened or saved from the Program or Preview window.
- `.efx` – Effect file, opened or saved from the Effects window.
- `.fac` – Custom typeface, opened or saved from the Custom Typeface window.
- `.mcr` – Macro file, opened or saved from the Macro editor.
- `.pst` – Preset Style file, opened or saved from the Preset Style window.
- `.mot` – Motion files, opened or saved from the Timeline Motion editor.
- `.seq` – Sequence file, opened or saved from the Sequence editor.
- `.shd` – Shader files, opened or saved from the Shader window.
- `.sty` – Style files, opened or saved from the Style window.

Setting Directories and Paths in Deko

Deko saves and opens different file types from a directory you specify in the Preferences menu. This simplifies file management during operation. We recommend you set up your directory structure for saving files before you begin a project. The next exercise will show you how to do this. You can always change the directory you wish to save a file to or open a file from.

The paths tab (Options > Preferences) allows you to assign preferred directories to save various files used by the system. The directories are assigned a path from a root directory or drive, with the paths noted on the Paths tab of Preferences.

You can set these paths to preferred directories for the Deko to use upon program startup. You can change these preferred directories at any time while operating the system, either by navigating to a new directory from the File > Open menu, or from the File > Change Directory menu if you are currently viewing an active browser window. You can also change paths by typing new ones directly in the appropriate fields.


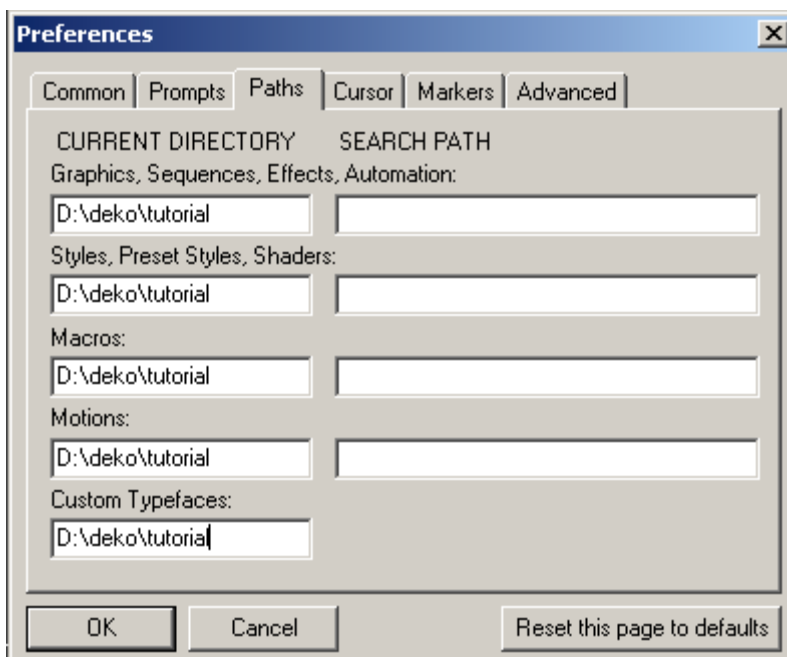


Exercise – Create New Folders and Subfolders


In this exercise you will create one new folder on the C drive and four subfolders placed within the folder. Use this as an example to consider how you might set up your directories on your own Deko system.

Create New Folder


1. Click on the C drive in the Directory Tree to highlight it.
2. Go to File > New > Folder. A folder named New Folder will appear at the bottom of the right pane.

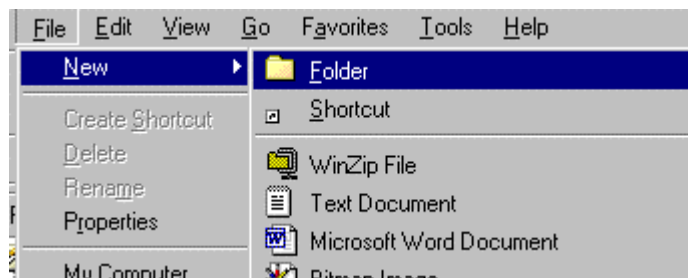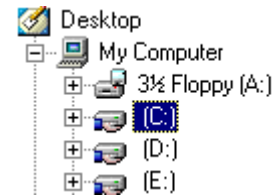

3. Click in the highlighted Name box and type "News". The news folder will appear in the Directory Tree.

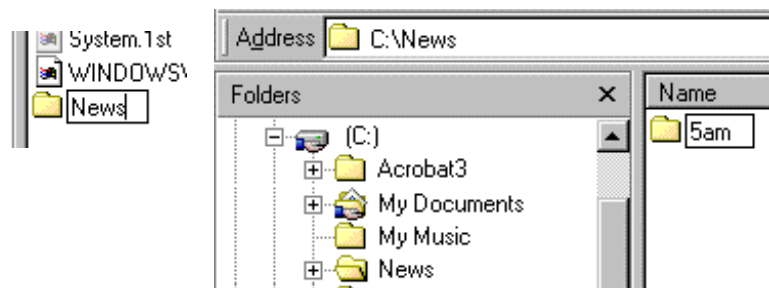

4. In the Directory Tree (left window pane), click on the News folder to highlight it. Go to File > New > Folder. A new folder will appear in the right window pane.
5. Click in the Name box and type "5am".
6. Repeat step 4 and create the following additional subfolders: "noon, 6pm". When you are finished the subdirectories should look as follows.

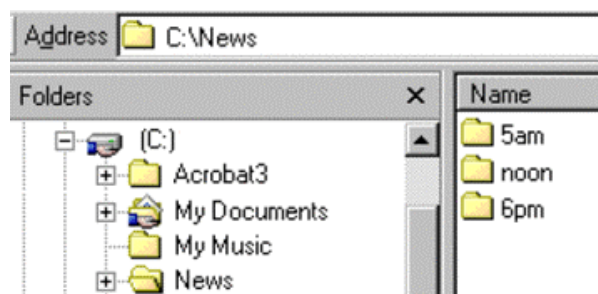

Lesson 4: Type and Modify Text

At the end of this lesson, you will be able to use your Deko to type text, change the size and color of characters, and add style details.

Before You Start

The Window menu provides several options for arranging the current layout of windows and tools on your Deko desktop. Most of these layouts include a *Program window*, which is where you will type text.

The Program window shows the current on-air graphic. The contents of this window match Deko's video output, with the addition of a cursor, safe-title lines and other markers. A Preview window shows the same elements (cursor, safe-title lines and markers) as a Program window but may not have an associated video output.

Creating Graphics


The main function of Deko is the creation and display of graphic files. All graphics are created in a Program or Preview window. A Deko *graphic* can include text and background elements. Once created, a graphic may be saved on disk in a *graphic file*.

A graphic consists of one or more *layers* and a *background*. Each layer can be text or a geometric shape – a rectangle or an ellipse.

Each character of text is rendered in a particular *style*, which specifies its *font* and *look*. Each geometric shape is also rendered in a particular look.

Deko provides a variety of tools for typing, justifying, positioning, sizing and otherwise editing text and shapes.

The Deko Interface

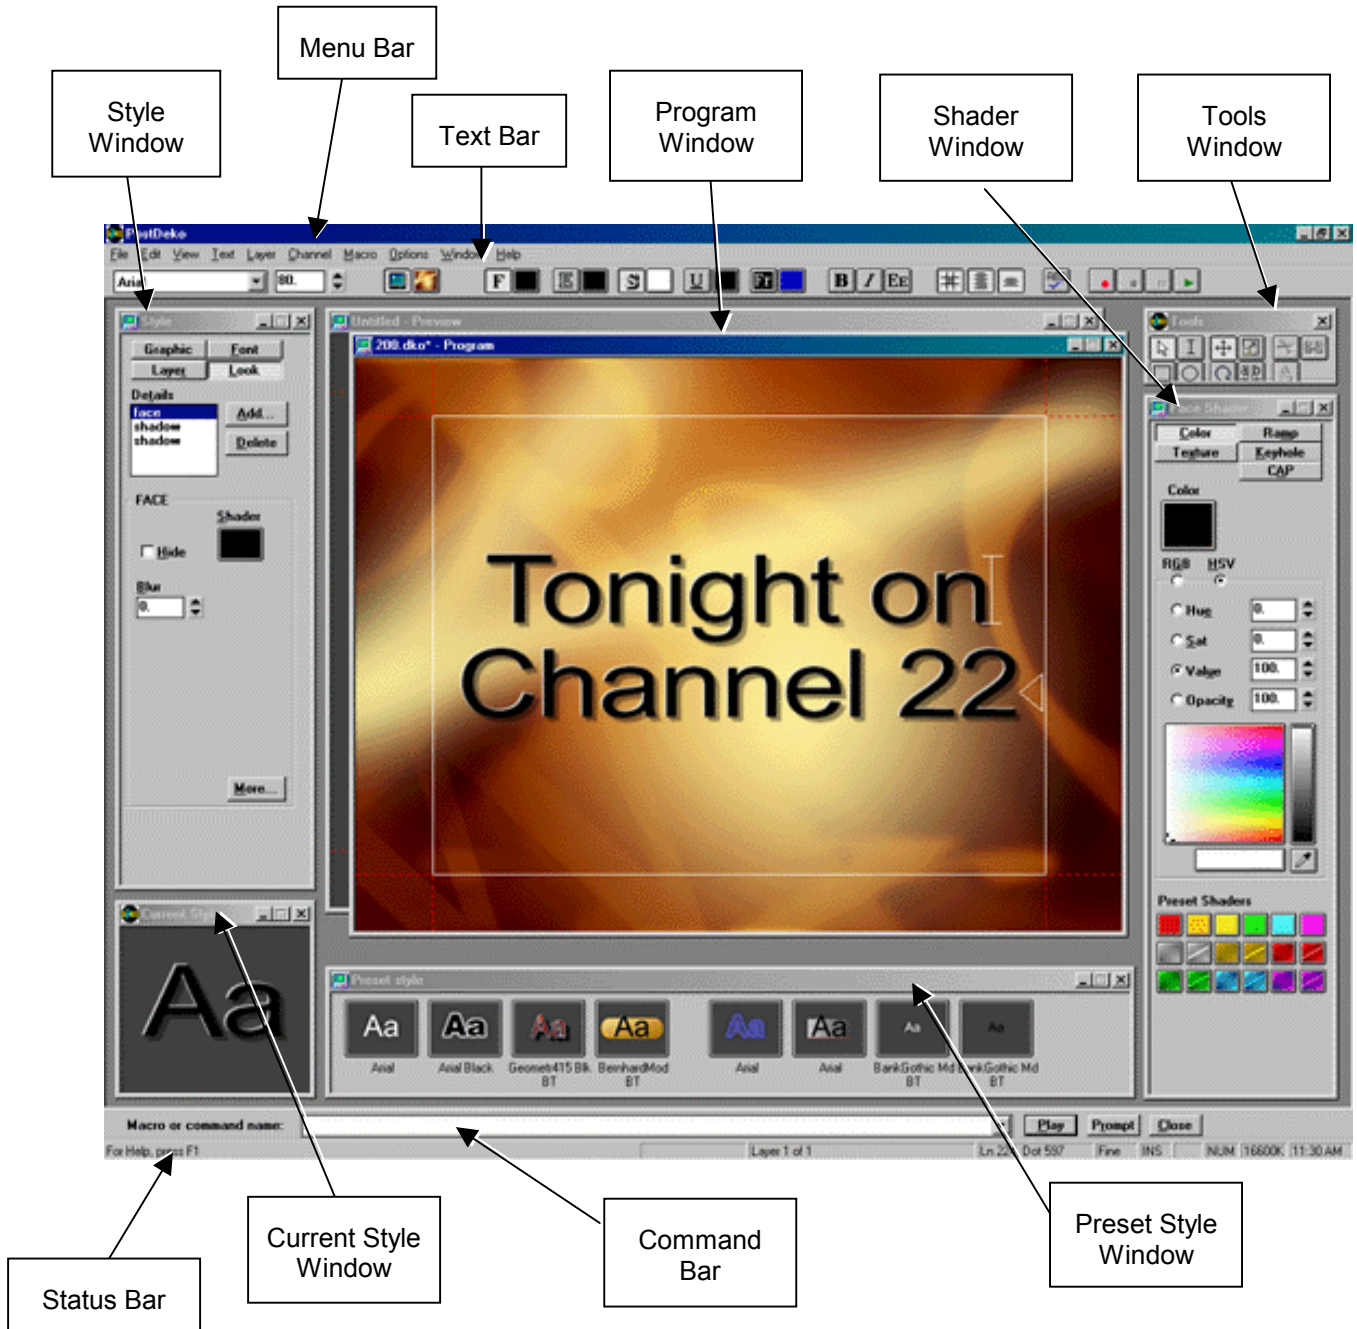

Elements of the Deko Interface

Pictured left is the Style Edit layout, the preferred layout for graphic creation. The elements of the layout are the most common tools you will use in creating graphics. Additional tools available to this layout and others will be discussed later.

Menu Bar

The Menu bar appears in all layouts. The menu selections will vary slightly depending on which window is active at the time

Text Bar

The Text bar is also available in all layouts. The Text bar allows users to choose and size text as well as access and activate the various shaders. You will use them in designing the styles of your text and graphic objects. There are also tools for text formatting and text justification. The right side tools are used for recording macros. This subject will be covered later in more detail.

Program Window

The Program window is the primary graphic creation window. Graphics created in the Program window are simultaneously displayed on the video output of the Deko unit. The Program window displays with the graphic cursor position, safe area, carriage returns and tab stops. A Preview window is also available for graphic creation. The Preview window is identical to the Program window except its output may not be made available to air depending on how many channels are in the system.

Style Window

The Style window is used to define the Style attributes of Text and Graphic elements. The Style window provides an interface to change Graphic, Font, Look and Layer attributes. Pressing the associated button at the top of the window accesses each attribute control. The attributes are:

- **Font** – provides font formatting attributes such as size, width, kerning and leading.
- **Look** – allows the addition of detail elements such as face, edge, shadow, underline and frame.
- **Layer** – sets layer attributes such as word wrap, scaling and layer justification.
- **Graphic** – allows you to link effects files and clips (if you have the ClipDeko option) with associated graphics.

Shader Window

The Shader window is used in conjunction with the Style window to modify the look of the various details. There are six shaders available for adjusting the look of a font or graphic element. They are:

- Face Shader
- Edge Shader
- Shadow Shader

- Underline Shader
- Frame Shader
- Background Shader

Clicking on the appropriate Shader button on the Text bar can access each Shader.

Note: If the current selection does not have a particular detail, clicking on a Text bar Shader button will add one. If the current selection already has that detail, clicking on the Shader button will delete it.

The Shader window provides a choice from five fill sources for each Shader element.

- **Color** – a solid color fill.
- **Ramp** – a color gradient fill.
- **Texture** – a graphic file that can be used as a texture fill.
- **Keyhole** – a key cutout for external fill.
- **CAP** – an option to allow fill from sequential animation files.

Tools Window

The Tools window provides a palette of tools used in the creation of graphics. Tools allow you to create text layers and graphic elements as well as move and alter their shapes. Many of the tools have shortcut keys that you should memorize to speed your productivity.

Current Style Window

The Current Style window provides a sample of the current style selection or the style at the current cursor position (when *Moving cursor sets font and look* is selected in Options > Preferences > Cursor tab). In the default mode, the style is presented with an upper and a lower case “Aa”.

Preset Style Window

The Preset Style window provides a swatch of eight styles that can be quickly used in graphics. Users can assign their own preset styles to palettes and save these as .pst extension files. More than one Preset Style window may be opened on the screen at the same time.

Status Bar


The Status bar provides useful information about the graphic in current view including cursor screen position, layer selected, layer position, insert/overwrite mode status, and file size.

Command Bar

The Command bar, which you can select to view on your screen, is used to play macro files. This component will be covered in greater detail later.

Window Focus in the Deko Interface

The Deko interface provides multiple layouts for the different tasks you may be performing. Each layout consists of a number of windows providing the tools for the task at hand. For a window to be active, its title bar will be highlighted and in color. Inactive windows have title bars that are grayed out.

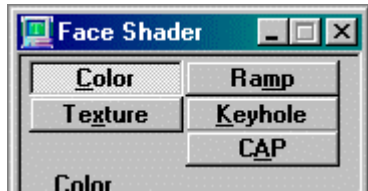

Active Window



Inactive Window


To activate a window, position the mouse to a point anywhere within the window and click. You can also change the window focus by pressing Ctrl + Tab or Shift + Ctrl + Tab.

Certain windows have hot keys to activate them. Press F5 to activate the Program window and Alt+F5 to activate the Preview window. The FAK has dedicated Program and Preview keys as well as keys to activate the other tools on the screen.


Exercise – Type and Alter Text

1. Go to Window > Select layout > Style Edit, or press Alt+F11. This opens all the tools and windows necessary for text creation.


Note: you should begin to use keyboard shortcuts rather than the mouse to perform operations whenever possible.

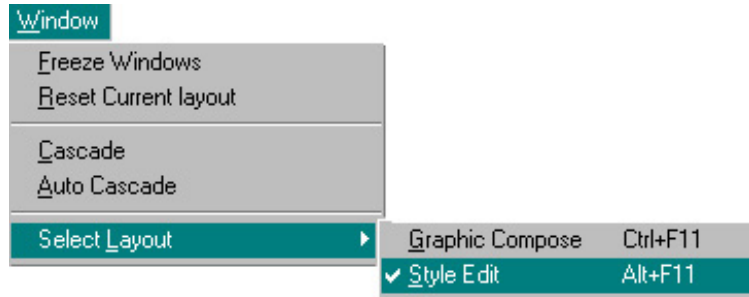


2. Select the Program window by pressing the Program key (FAK) or F5 (SK). Deko highlights the title bar of the Program window to show you that the window is active.
3. Click on the Layer button in the Style window and verify that Word wrap is checked.
4. Click on the Title bar of the Preset Style window to set focus.
5. With focus set on the Preset Style window, press the Clear + Read keys (FAK) or F9 (SK) to bring up the Open File dialog. Select the file tutorial.pst and click Open.
6. From the Options menu, select Save Settings Now. You will be using this setting for exercises in the next two lessons.
7. Select Preset Style 1 in the Preset Style window.
8. Set focus to the Program window and type your text. Type The quick brown fox jumped over the lazy dog. If your system has video output, verify that you see the same output on the video monitor.

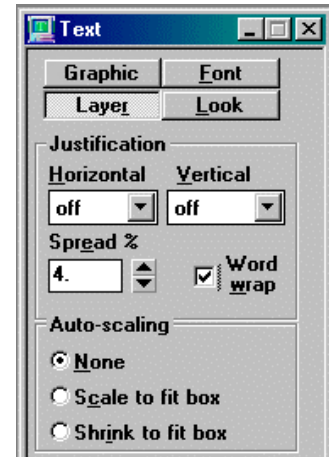

9. Select the “g” in dog by placing your I-beam to the left of the “g” and pressing Shift + right arrow.
 - Locate the up/down arrows next to the size field on the Text bar.
 - Click either arrow to change the size of the selected character. If you hold an arrow button down the font size numbers will automatically advance. You must release the arrow to see the character in the new size.

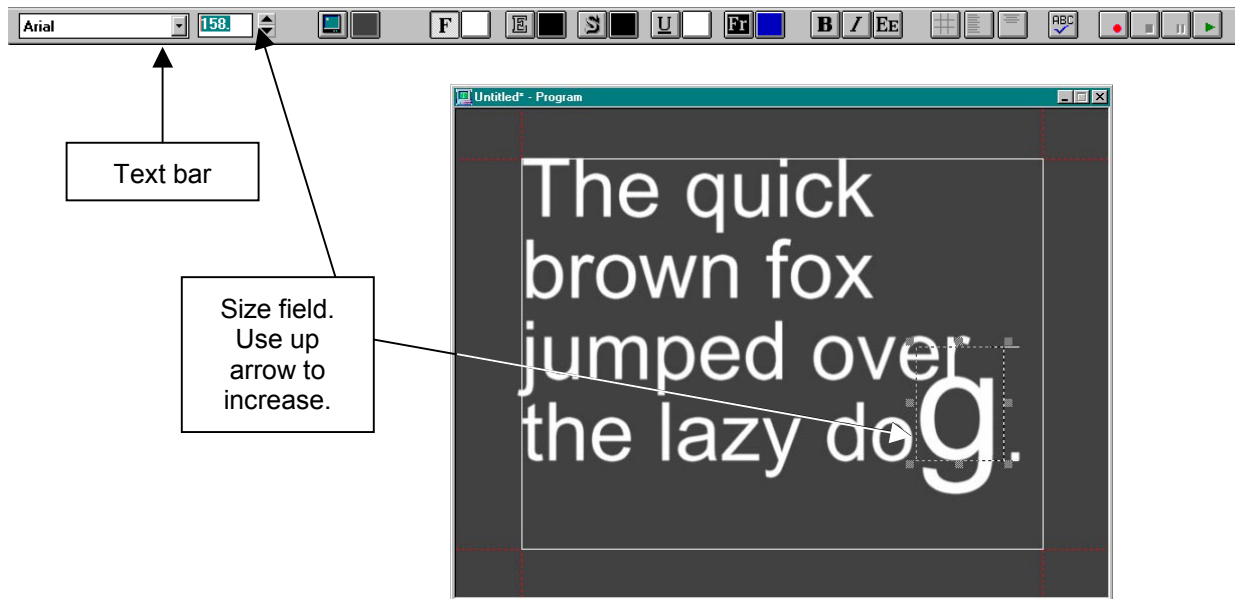

10. Double-click the word lazy to select it. Triple-click to select the entire row. Try it.
11. Click on Style 6 from the Preset Style window. If you have a FAK, use the Preset Style buttons to select the style.

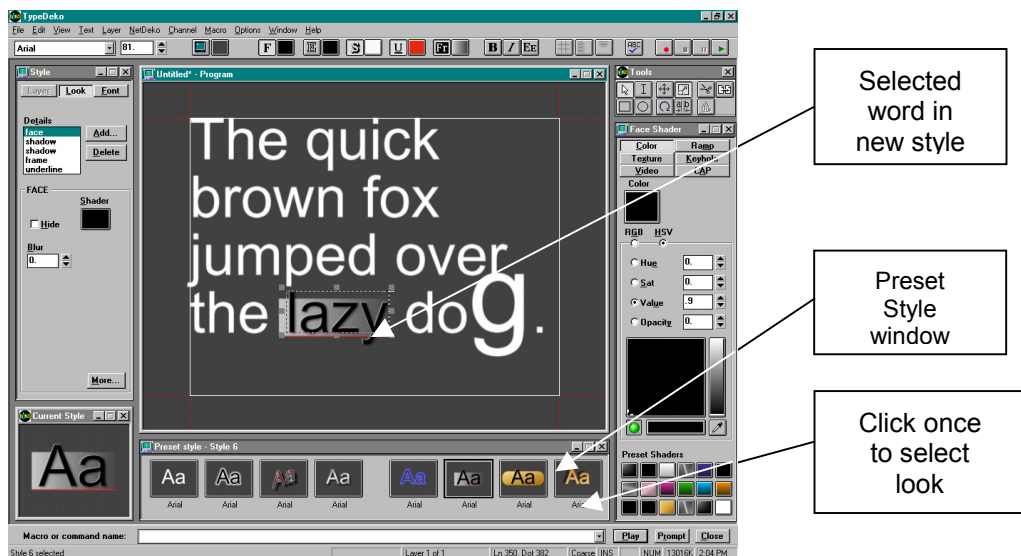

You should see the selected word change immediately to the look of Preset Style 6.


Congratulations! You have successfully set up your screen in the proper layout for text creation, entered text in the Program window, resized text, and given text a new style.

Navigating the Cursor and Selecting Text

As we saw in the previous example, selected text can be resized and have new styles applied to it. Understanding the mechanics of this process is essential to working productively with Deko. The system provides easy methods with either the mouse or the keyboard to quickly navigate the cursor and select text.

Home and End Key Behavior

Go to Options > Preferences and click on the Cursor tab. The lower right quadrant of the tab provides an option to determine how your keyboard Home and End key will behave. The behavior is as follows:

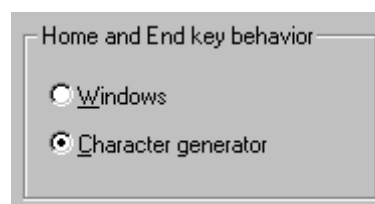

Character Generator

- Home moves the cursor to the beginning of a text field.
- End moves the cursor to the end of a text field.
- Ctrl + Home moves the cursor to the beginning of a line.
- Ctrl + End moves the cursor to the end of a line.

Windows

- Home moves the cursor to the beginning of a line.
- End moves the cursor to the end of a line.
- Ctrl + Home moves the cursor to the beginning of a text field.
- Ctrl + End moves the cursor to the end of a text field.

Choose the one that works better for you. If you have no preference, choose Character generator.

Note: for the rest of this document, we will refer to Home and End key behavior using the Character generator standard. If your machine is set to Windows, make adjustments accordingly.


Cursor Selection

Deko provides two cursors, the I-Beam cursor and the Box cursor. The I-beam is placed to the *left* of a character to be selected with the shift + right arrow key. The Box cursor places a box around the character to be selected with the shift + right arrow key. It is important to distinguish the difference between a box cursor around a character and a character that has been selected shown in the third example below.

Setting the Text Cursor



To set the cursor, go to Options > Preferences and in the dialog box select the Cursor tab. Choose your preference. For the remainder of this document we will use the I-beam cursor. If you are more comfortable with the box cursor, choose it.

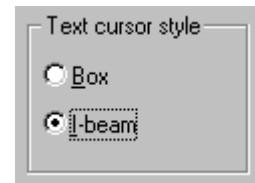

Moving the Cursor

You can reposition the cursor by positioning the mouse and clicking at the place where you want it. This will place the cursor at current mouse position. Use the keyboard arrow keys to move the cursor a character or row at a time.

- Left or right arrow keys move the cursor a space at a time.
- Up or down arrow keys move the cursor a row at a time.
- Ctrl + Left/Right arrow moves the cursor a word at a time.

Selecting Characters

You can select characters with either the mouse or the keyboard. To perform character selection:

- Press the Shift key and move the arrow keys.
- Drag the mouse.



This operation places a bounding box around the selection. If the bounding box contains characters or words not selected, the characters selected will be noted with a row of dotted lines (otherwise known as *measles*) across the face of the selected text.



More Selections

To select a word, position the cursor over the word and double-click.

To select a row, position the cursor anywhere on the line and triple-click.

To select all the text in a Layer, do one of the following:

- Press Ctrl + Shift + A (recommended).
- From the top left of the text, drag the cursor across and down to the lower left quadrant of the text.
- Press the Insert key to select Overwrite and press the Tab key.
- Go to Edit > Select Field (Alt + E > I).

To select multiple Blocks of Text, which can be useful if you wish to isolate parts of a field only selecting certain characters or words, do one of the following:

- Hold the Ctrl key down as you drag. Release the mouse button and Ctrl key as you position for the next selection. Then repeat the process. The example right shows three characters selected.
- Go to Edit > Select More. Move the cursor with the arrow keys to position for selection. Hold down the shift key and use the arrow keys to make a selection (recommended).



To select all text characters in the Current Style:

1. Position the cursor next to a character of the style in question so that the style shows in the Current Style window.
2. Go to Edit > Select Style (Alt + E > Y) or (Shift + Ctrl + S).



To select all text from all Layers in a Graphic, do one of the following:

- Choose Select All from Edit menu.
- Press Ctrl+A.

To De-select text, do one of the following:

- Click anywhere in the text field.
- Press any arrow key.

Selected Text versus Current Style

It is important to understand the difference between *selected characters* and the *Current Style*. If you select some characters and then change the size value, Deko will scale the selected text. If you change size when no characters are selected, this changes the Current Style. So be aware that you must select characters before making changes to their text properties. Otherwise, you are setting the properties of the next character to be typed.

Note: Changing selected text may not permanently change the text field attributes unless the new line position is selected (indicated by a triangle marker). When you desire to change the text in a field, use Ctrl + Shift + A to guarantee all of the text is selected.

Modifying Selections

Text is selected so it can be modified. Modifications can include resizing or repositioning text, changing the font or changing the look of a font. When we change the look of a selection, we are changing its style. A *style* is defined as a *font* plus the font's *look*.

Styles

The font is specified by its name, size and kerning characteristics. Its *style* is defined as the elements that give the font shape and color. Style elements are described as *details*. Each detail has a *look* that is defined by the *Shader* settings. Detail elements include:

- **Face** – the fill elements of a font.
- **Edge** – outline of any other detail.
- **Shadow** – drop or deep shadow of a detail.
- **Underline** – of a given detail (including frame).
- **Frame** – of the detail.

Styles can be saved individually from the Style window, or they can be added to a Preset Style window and saved in groups of eight. The current style determined by style selection or cursor position is visible in the Current Style window.

Steps in Creating a Style

1. Select a font.
2. Set Font parameters including Size, Leading, Kerning, Rotation and Skew from the Text bar or in the Font dialog of the Style window.
3. Add Details from the Look dialog in the Style window or by clicking the appropriate detail on the Text bar.
4. Adjust Detail settings in the Shader window.


Selecting or Changing Typefaces

To change a font (typeface):

1. Select the text (Ctrl + Shift + A).
2. On the Text bar, click on the arrow and scroll to the desired font and click on it. This will change the current font setting.


To change a font size:

3. Select the text (Ctrl + Shift + A).
4. To change the font size, click on the arrows of the size box to increment the size, or type a value into the size box and press enter on the keyboard.

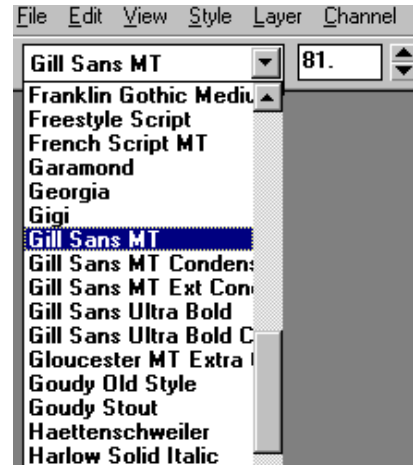


Style Window

To change a font or font size using the Style window:

5. Click on the font button in the Style window to bring up the font parameter dialog box.
6. Use the Typeface list menu in this dialog box or click on the Browse button  in the window to reveal the Typeface Browser.


This browser reveals a window with samples of available typefaces. Scroll to a desired typeface and double click on it. The window opens as a single column of typeface icons. You can resize this window to any size up to screen maximum to show more fonts.

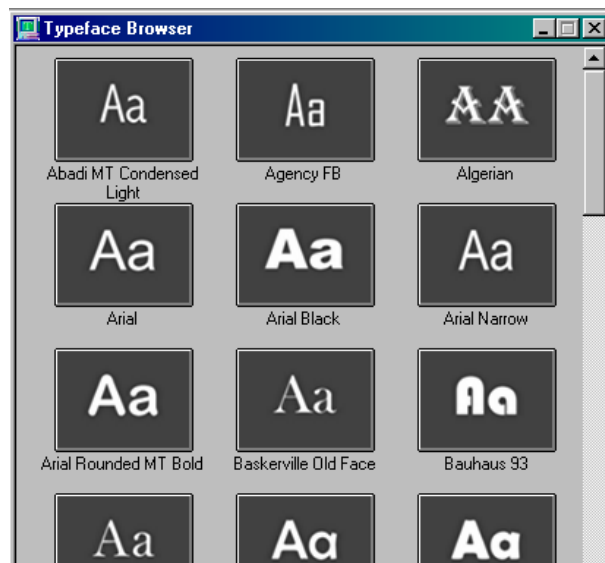

Keyboard

The FAK has a dedicated key for the Typeface Browser. On the SK, type Ctrl + L to open the browser, then select File/Browse Typefaces (Alt + F > F).

Changing a Typeface

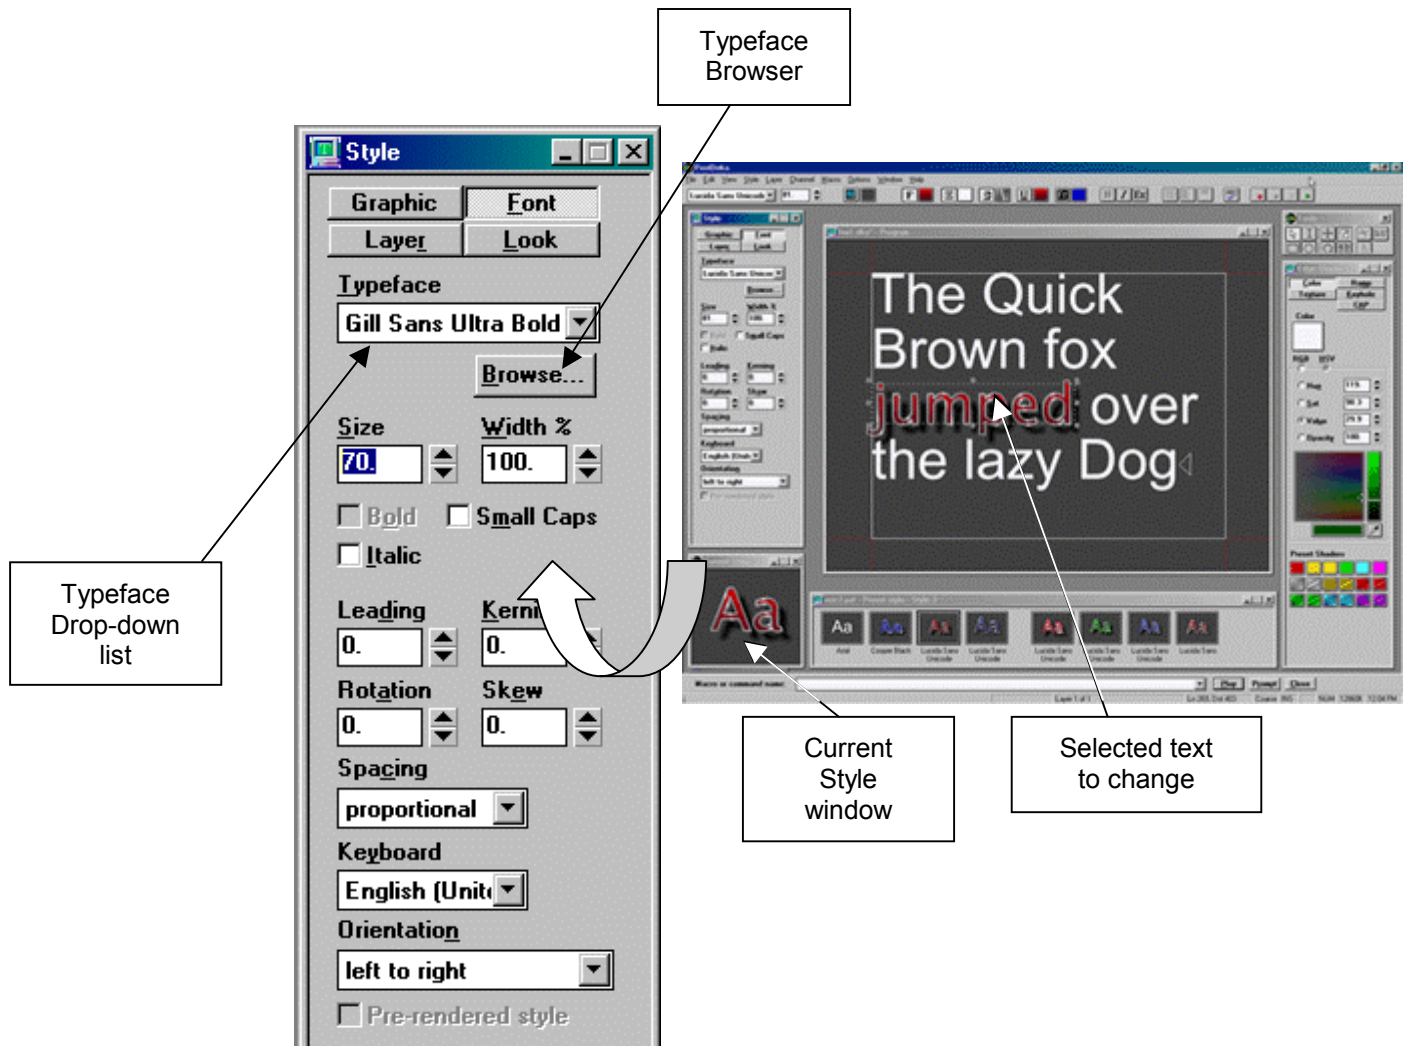


Adding Details

Deko allows you to control the *look* of your font by adding *details*. Details define the overall look of the font, such as face, edge and shadow attributes. Deko allows you to determine how many of these details you wish to add to a font and gives you great flexibility in assigning priority and attributes to these details.


To add a detail to your text:

1. Select the text you wish to modify.
2. In the Style window, click the Look button. Choose Add and then select the detail from the reveal window.

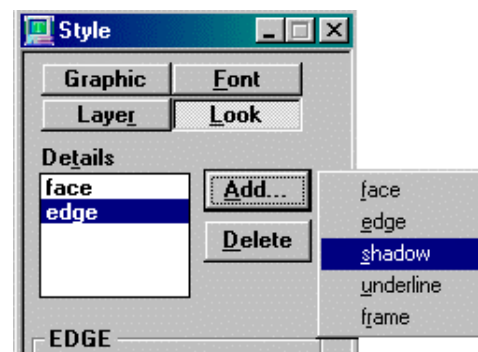

Modifying Look Details

Each *detail* has a list of *attributes* that can be altered. To change a detail attribute, click on the detail in the Look view of the Style window. The attributes for that detail are displayed at the bottom of the window. In addition, clicking on a detail will select that detail element in the Shader window. Modifying a detail involves setting attributes in both the *Style* and the *Shader* windows.

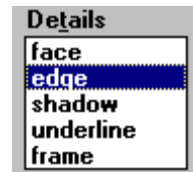


Detail Attributes

All details have Hide, Shader and Blur attributes. Edge, Shadow, Underline and Frame details have other specific attributes.


Face Attributes (Common to All Details)

- **Hide** – click to hide detail from view. This is useful when setting up a look with multiple details, to distinguish one from another.
- **Shader** – shows a sample swatch of the current Shader Setting for face.
- **Blur** – sets a blur adjustment on the selected detail from 0 (no blur) to 100.

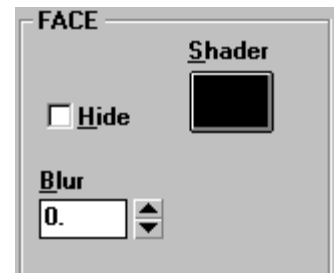

Edge Attributes

- **Shape** – defines the shape of the blur edges, either round or square.
- **Type** – there are four types of fill:
 - **Outer** – borders the outer edge of the previous detail.
 - **Inner** – borders the inner edge of the previous detail.
 - **Border** – fills the outer and inner edge of the previous detail.
 - **Filled** – fills a solid edge placed behind the previous detail.

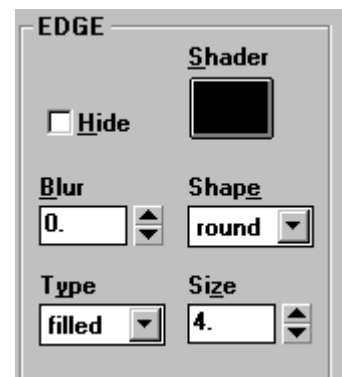

Outer



Inner



Border



Filled


- **Size** – the width of the edge from 0 (no edge) to 100.

Shadow Attributes

- **Angle** – sets the angle of the shadow in degrees.
- **Type** – there are two types of shadows:
 - **Drop** – creates a single shadow of the detail being shadowed.
 - **Deep** – creates a thick shadow that appears to be extruded.




- **Distance** – controls the distance of the shadow from the shadowed detail(s).

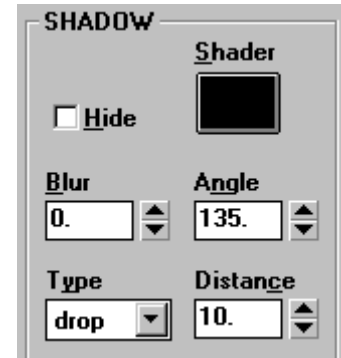


Underline Attributes

- **Shape** – like edge, controls the shape of the underline edges, either square or round.
- **Height** – controls the height of the underline. The default value is 100.
- **Width** – provides an option to make the underline wider than the actual text. A value of zero matches the width of the text.
- **V offset** – specifies a vertical offset from the underline's normal position. Negative values move the underline down, and positive values move it up.
- **Spaces** – when checked, underlines the spaces between words.

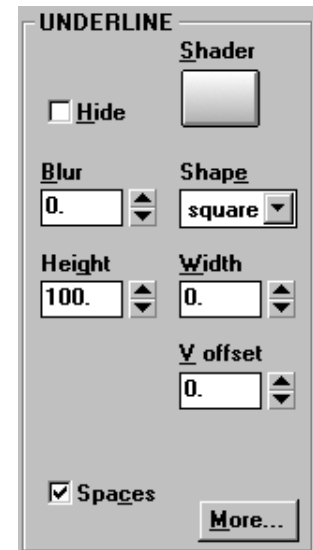

Frame Attributes

- **Shape** – produces a rectangle with either square or rounded corners.
- **Height** – specifies the height of the frame.
- **Width** – specifies the width of the frame.
- **H offset** – offsets the frame horizontally relative to the detail being framed.
- **V offset** – offsets the frame vertically relative to the detail being framed.
- **Descenders** – when checked, lowers the bottom of the frame to accommodate lower case descender characters like g, j and y.
- **Spaces** – when checked, underlines the spaces between words.

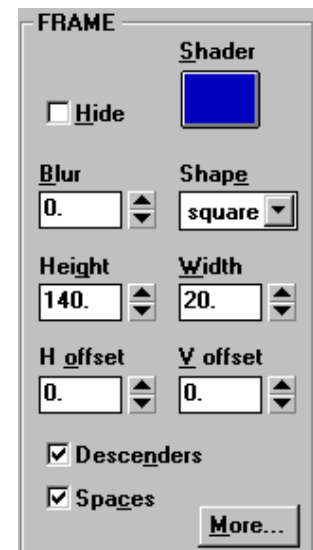


Priority Controls

Each Detail has a priority attribute control to determine how it will be laid out in relation to other details. By clicking the more button, you will reveal the priority controls.



- **Priority** – determines whether the detail appears in front of or behind other details. By default, Deko assigns a priority to each detail so that they render from front to back, in the order they appear in the Details list. Use Priority to change the rendering order. Priority ranges from 0 (closest to viewer) to 1000 (farthest from viewer). Priority also controls the rendering order of overlapping details from different styles.
- **From previous detail** – specifies which other details in the look provide the shape on which this detail is based:
 - **Face** – produces a detail based only on the face detail.
 - **Previous** – produces a detail based on the *To next detail* setting of the item immediately above the current detail in the list.
 - **Frame** – produces a detail based on the first frame above the current detail in the list.
 - **Underline** – produces a detail based on the first underline above the current detail in the list.
- **To next detail** – determines what this detail will send to the detail immediately below it in the list:
 - **Previous** – sends whatever was sent to the current detail from the detail above it.
 - **This** – sends the current detail.
 - **Merged** – sends the combination of the current detail and whatever was sent to the current detail from the detail above it.

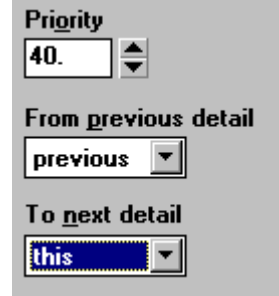

Shader Controls

To apply color to text or graphics, Deko uses a *Shader*.

Each detail in a look (face, edge, frame, shadow or underline) has its own shader. The shader determines how color is applied to the detail.

Each detail can be filled with colors from five different shader options:

- A *color shader* produces a detail with a single, solid color.
- A *ramp shader* produces a detail with a four-color ramp and an optional highlight.
- A *texture shader* produces a detail with a *bitmap* texture.
- A *keyhole shader* produces a key cutout that can be replaced with video from an external key source.
- A *CAP shader* (option) allows the inclusion of sequential animation files as a fill source

Note: CAP shader can only be used with a rectangle or circle or as fill of a single letter, not as fill of a text field.

Any detail can have any kind of shader. For instance, a face can have a color shader, an edge a ramp shader, and a shadow a texture shader, all within a single look.


Multiple occurrences of the same type of detail within a look do not have to have the same type of shader. For example, a look with three edges can have a different shader for each edge.

You can use the same type of shader on multiple details within a graphic. In addition, each graphic's background has its own shader. Using the background shader, you can make a solid, ramped or textured background for any graphic.

Shaders are specified in the *Shader window* (F7). Any shader can be stored as a *preset shader*. The preset shaders can be saved in an `.shd` file for future use.

Activating a Shader

To activate a shader for the current look's first face, edge, shadow, underline or frame, click the appropriate detail shader button on the text bar.

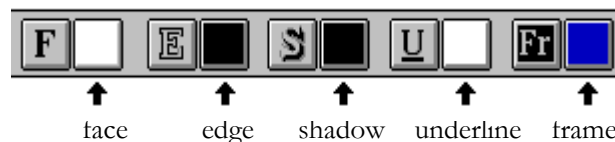

Note: If you click the shader button for a detail that is not in the Details list, Deko automatically adds the detail.


You can activate the shader for a detail in the current style also by activating the Style window and clicking on any detail in the Details list box.

Background Shader

To activate the background shader, click the background-shader button (Ctrl+F7) on the text bar.



Shader Controls

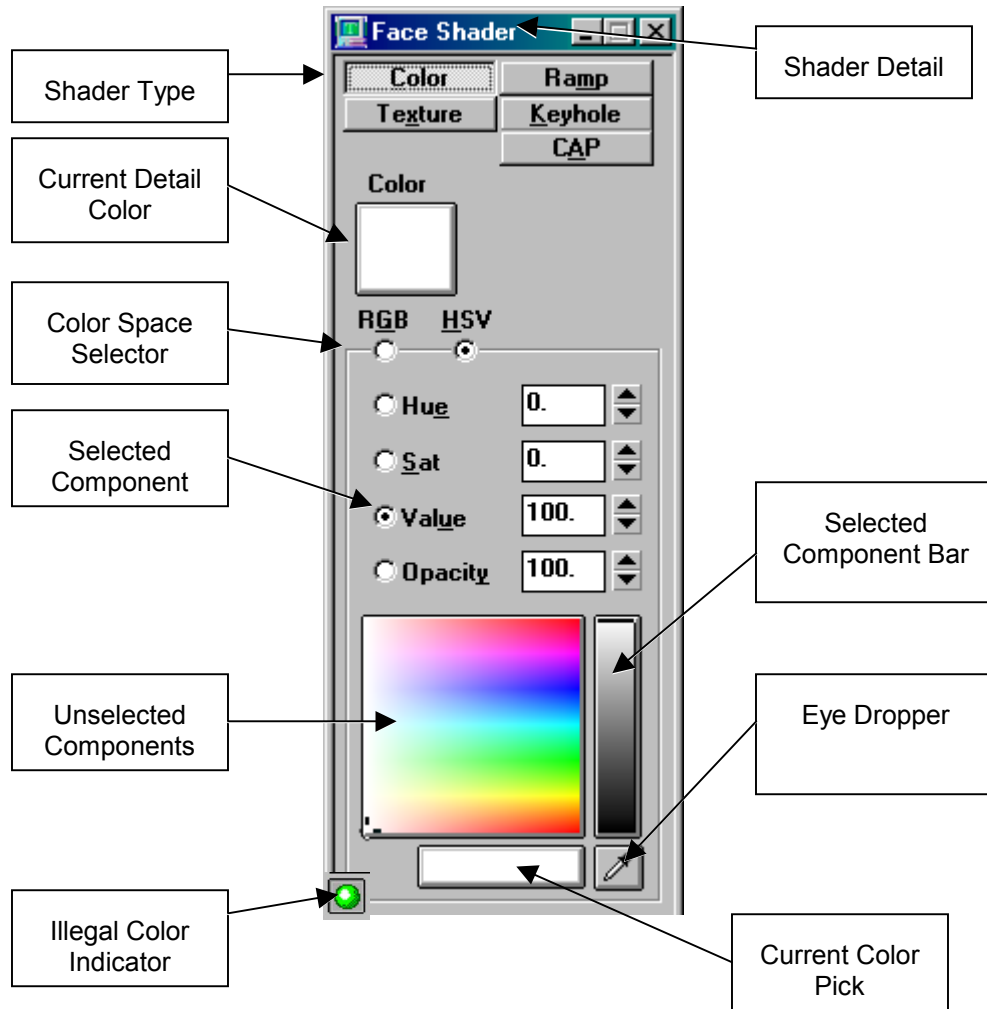


The Shader window allows you to quickly adjust colors or other parameters for a given detail. Pictured above is a Face Shader with the current shader type set to Color. The following tools are provided to set a color:

- **Shader Type buttons** – chooses the type of detail fill from among the five choices.
- **Current Detail Color** – shows current color of selected detail.
- **Color Space Selector** – chooses the current color space. The choice will affect the view of the color picker palettes. The choices are:
- **RGB** – Red, Green, Blue color space.

- **HSV** – Hue, Saturation, Value color space.
- **Selected Component** – sets the component to be adjusted in the Selected Components bar.
- **Unselected Component** – the large color palate display square displays the two remaining unselected components in a *horizontal/vertical grid*. In other words, if (as above) Value is the Selected Component, the square shows Hue along the *vertical axis* and Saturation along the *horizontal axis*. If Opacity is the Selected Component, Deko displays a gray scale in this square.
- **Current Color** – shows the current color selected in the color picker. The color is indicated in the picker by a *crosshair* marker at its position.
- **Illegal Color Indicator** – if a color chosen is out of the legal range of NTSC colors, the *illegal color indicator* will turn *red*. Clicking on the indicator will move the color to the nearest legal color.
- **Eye Dropper Tool** – allows the selection of a color from anywhere on the desktop. To capture a color, hold the mouse button down and drag it over the desired color, then release it. The color will be deposited in the current color selection.

To Change the Color of a Selected Detail

1. Choose the selected component to adjust the color picker window (HSV and Value are a good starting point).
2. Click in the palette window to choose the desired color. Note the color in the current color selection.
3. Right-click the Color button to transfer the color to the detail.

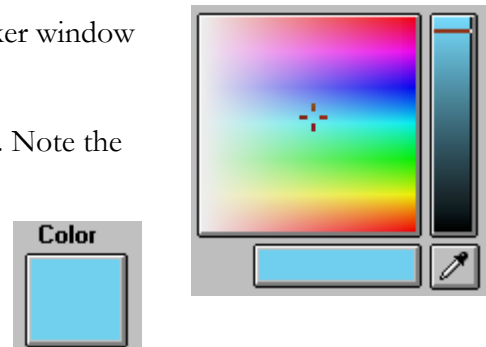

Preset Shaders



The 18 Preset Shader buttons appear at the bottom of the Shader window. You can use these shader buttons to save your favorite shader settings. Any type of shader may be assigned to any preset. You can save the Preset Shaders to disk for later retrieval.


- To use a Preset Shader, left-click the desired shader and its settings will be deposited in the current shader settings.
- To save a current shader setting to Preset Shaders, right click on any of the 18 Preset Shader buttons and the current setting will be deposited on that button.

- To save current Preset Shader settings, click on the Shader window and choose Save As from the File menu or press F12 (SK) or Save File (FAK). Enter the name for the file and press Enter.

Note: Deko will automatically add the extension .shd to the file.


Ramp Shader

The Ramp Shader allows you to create color gradients with or without highlight details. The four buttons represent the individual color quadrants of the gradient. In addition, a check box with a fifth color box is added to create a highlight detail across the gradient. Color selection for each of these boxes works the same as with the Color Shader.

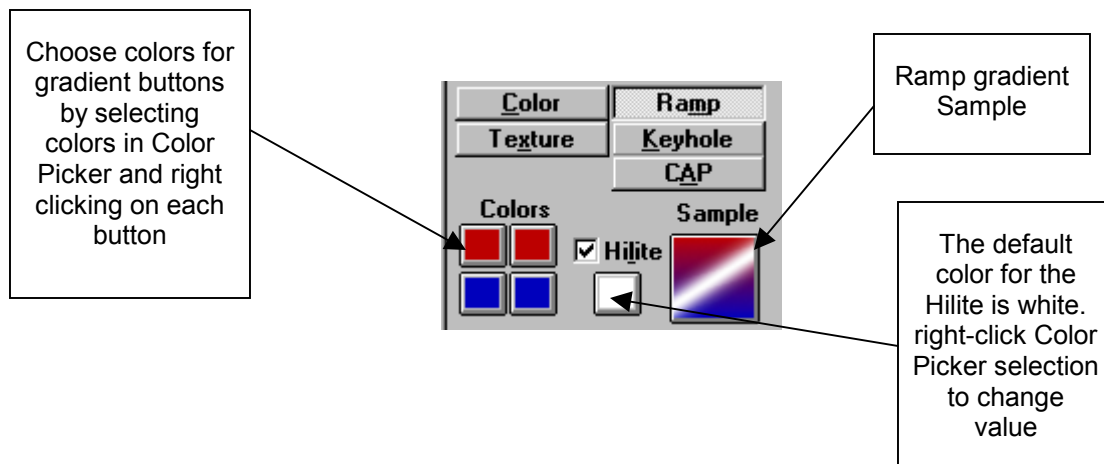

Once colors are applied to the gradient, click on Options to select the way your gradient is applied to text. The following options are available:

- Group** – determines how the ramp will be applied.
 - letter** – applies the ramp to each letter.
 - word** – applies the ramp to each word.
 - row** – applies the ramp to each row of text.
 - page** – applies the ramp to the entire page of text.
- Opacity** – controls the overall transparency of the ramp on top of any transparency controls applied to individual colors in the ramp.
- Ramp Options**
 - H Scale** – the width of the ramp relative to the group. For setting less than 100 percent, only part of the ramp is applied.
 - V Scale** – the height of the ramp relative to the group. For setting less than 100 percent, only part of the ramp is applied.

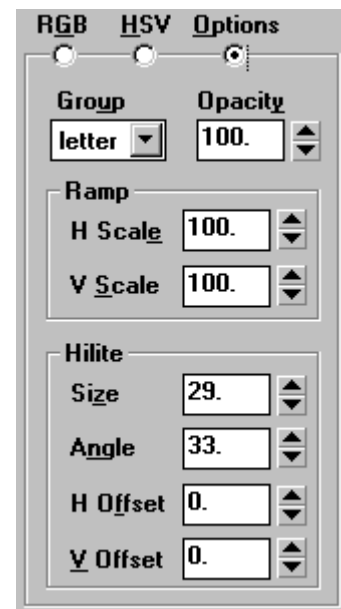

- **Hilite Options**
 - **Size** – of the ramp in percentage relative to height of the ramp.
 - **Angle** – expressed in degrees (-360 to 360); an angle of 0 produces a horizontal line.
 - **H Offset** – specifies the horizontal position of the highlight relative to the ramp. Negative numbers move it to the left, positive values to the right.
 - **V Offset** – specifies vertical the position of the highlight relative to the ramp. Negative values move it down; positive values move it up.


Texture Shader

The Texture shader allows you to apply a graphic file as a detail fill. Textures can be .dtk files as well as a variety of popular graphic files including .jpg, .tga, .bmp and .tif files. Any graphic can act as a fill.

When the File name box is checked (default) Deko links the graphic file as a texture, but does not actually save or render the file to the graphic. This allows you to change textures at a later time.

Texture Shader Options

- **File Name Check Box** – if this box is unchecked, Deko copies the bitmap from the original texture file and saves it as part of the graphic. The word *unnamed* appears in the File Name text box to indicate the texture is being stored with the graphic.
 - Note:** choosing this option will increase the size of the graphic and will preclude modifications to the texture when editing the original source files.
- **Group** – specifies how the ramp should be applied:
 - **letter** – applies the same texture to each letter.
 - **word** – applies the same texture to each word.
 - **row** – applies the same texture to each row of text.
 - **page** – applies the texture to the entire page of text.
- **Opacity** – controls the texture's opacity, from zero (transparent) to 100 (opaque).
- **Auto Scale** – scales texture based on the group setting. Works in conjunction with specific horizontal and vertical scaling.
- **Replace** – tags the texture for replacement with a user-specified texture.
- **H offset** – offsets the texture relative to its horizontal alignment.
- **V offset** – offsets the texture relative to its vertical alignment.

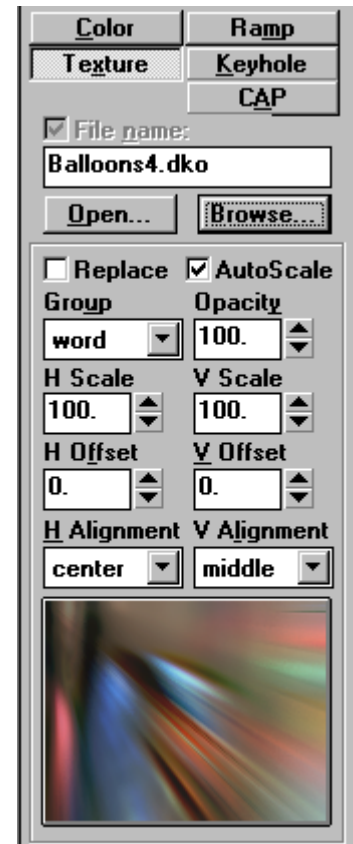


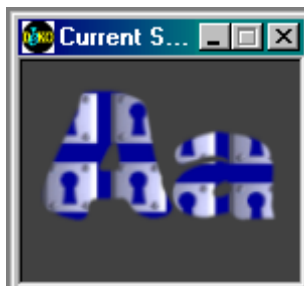
- **H Alignment**
- **left** – aligns the left edge of the texture with the left edge of the group.
- **center** – aligns the center of the texture with the center of the group.
- **right** – aligns the right edge of the texture with the center of the group.
- **V Alignment**
 - **top** – aligns the top of the texture with the top of the group.
 - **middle** – aligns the middle of the texture with the middle of the group.
 - **baseline** – aligns the middle of the texture with the baseline of the group.
 - **bottom** – aligns the bottom of the texture with the bottom of the group.

Keyhole Shader

Clicking the Keyhole Shader button allows you to apply a key cutout to a detail. By applying an external fill source (from your switcher or other source) you can fill a detail element with live video.

To Apply a Keyhole:

1. Select a detail's Shader.
- 
2. Click on the Keyhole button. When the button is selected, the Current Style window will display the detail with a keyhole fill pattern indicating the key. The Detail Shader button on the text bar will display it as well. The text detail will appear as a dull gray color in the Program window. In your output monitor, the detail will display Deko's current input source. If there is none, a noisy green will display.



Keyhole
indicator in
Current Style



Keyhole
indicator on
Shader button



Text Face
Detail set as
Keyhole

The CAP Shader (Option)

The CAP Shader allows you to apply prebuilt animation sequences to a detail. Animation sequences are built from a *sequence of cels* that are made up of individual graphic files, often .tga files.

Note: For animation sequences, each file (cel) within the animation should be named with successive cel numbers, such as globe001.tga, globe002.tga, globe003.tga...

Typically, the CAP shader is applied to rectangles to allow animations to be incorporated into graphics. A Deko graphic can support more than one animation, but performance may degrade if there are large animations or lots of details in one graphic. To apply an animation file to a graphic:

1. Enter the File Name or click Open to browse to the file location. Enter the name of the first file in the sequence.
2. Specify Number of Frames – the number of cels (files) to play. Deko defaults to a number based on the assumption that the animation ends when it encounters a file name that breaks the sequence of numbers.
3. Indicate Play direction by checking forward or backward.
4. To play the animation in a continuous loop, click Continuous.
5. To change the direction of the animation each time it plays click Oscillate.
6. Enter the frame rate at which you wish the animation to play back.


Note: Playing an animation file involves using the Motion editor. CAP Shaders will be covered in Lesson 17.

The Graphic Browser

The Graphic Browser, like the Typeface Browser provides a window with sample picons of available graphics in a given directory. The window opens as a single column of graphic Picons; you can resize this window to any size up to screen maximum to show more graphics. The graphic browser can be accessed the following ways:

- Press Ctrl + L (SK) or Browse Graphics (FAK)
- Goto View > Browser.
- Click on the Browse button in any Shader when Texture is selected.

Pressing Page Up or Page Down keys will advance or reverse one page of picons at a time within the browser. To advance to a particular graphic

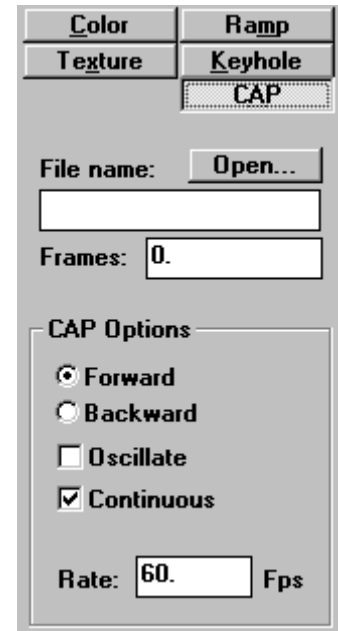


type the first letter of the graphic title. The browser will advance to the first graphic with that letter. Scroll forward to find your graphic.

Viewing Import Files in the Graphic Browser

The Graphic browser defaults to viewing .dtk files. To view non-native Deko files:

1. Set focus to the Graphic Browser
2. Go to File > Change Directory. The Change Directory dialog box appears.
3. Choose the file type you wish to list from the List Files of Type drop-down menu.
4. Click OK. The Browser will view files of the specified type.

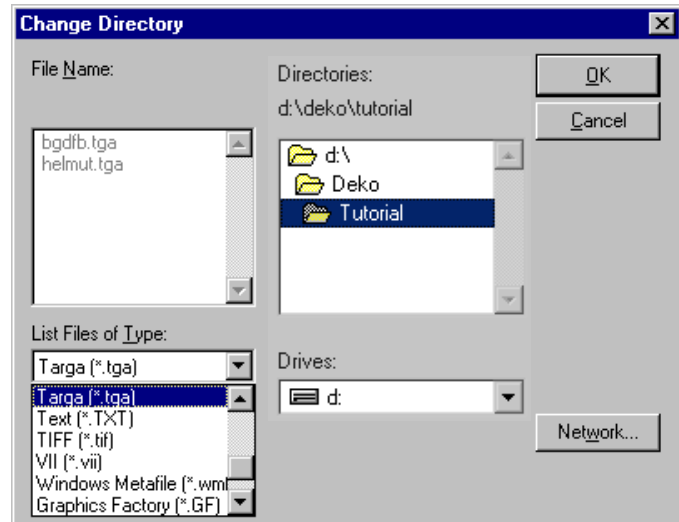

Note: Do not choose All Files, or picons of all file types in the directory will be created (including text and other Deko file types) which could make a graphic search very difficult

Copying, Cutting, and Pasting

Once you have defining the look of a given detail, you can copy or cut the parameters of that detail and paste them to text elements. The keyboard shortcuts for copy, cut and paste are the same as for all Windows programs:

- Ctrl + C – Copy
- Ctrl + X – Cut
- Ctrl + V – Paste

The keyboard shortcuts are the quickest way to perform this operation. As an alternate, you can use the Edit menu selections for Cut, Copy and Paste, or use the Tool Buttons:





Copy



Cut



Paste

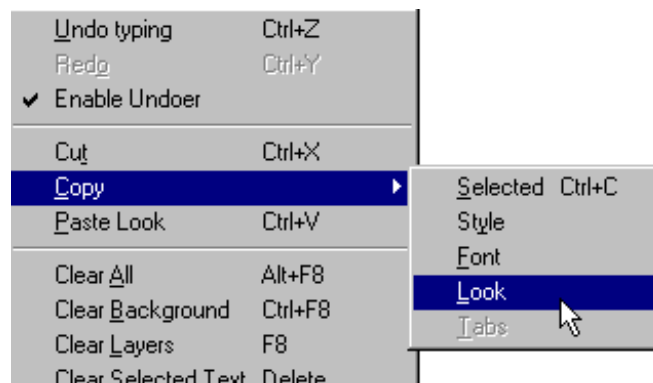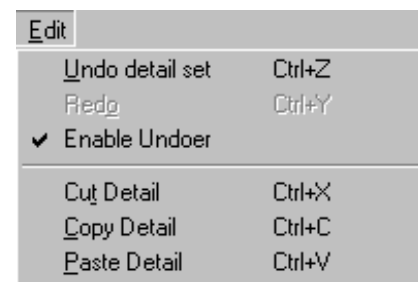

Copying, Cutting, and Pasting Looks

When a Style window is active, Cut, Copy and Paste acts on Details. Use this when you want to Copy and Paste details from one Style to another.

To Copy and Paste a Look:

1. Select text whose look you wish to copy.
2. Go to Edit > Copy > Look.
3. Select the Text or position the cursor where you will apply the new look.
4. Go to Edit > Paste Look or type Ctrl + V.

To Cut or Copy and Paste a Detail:

1. Select the *text element* that contains the *style* you wish to copy.
2. Activate the Style window.
3. Choose Look at the top of the window and select the *detail* you wish to copy from the Details list.
4. Type Ctrl + C (copy) or Ctrl + X (cut) to copy or cut. Cut removes the detail. Copy leaves the detail intact but copies it to the clipboard so it can be pasted to another element.
5. Select the *text element* you wish to *paste* details to.
6. Click on the detail in the Details list where you wish to insert the copied detail.
7. Type Ctrl + V to paste the detail.

Styles

Styles are the combination of a *font* plus a *look*. As you have just found out, setting up a style can be a time-consuming operation. Deko allows you to save your work as individual styles that can be recalled as desired. Styles can also be combined on Preset Style windows that combine eight styles together. These are accessible simply by clicking on a style button or pressing the Style buttons one through eight on the FastAction Keyboard.

Once you have selected and adjusted your font and have defined its look with the Style and Shader windows, you can save your completed fonts for future access.

To Save a Style:


1. Make sure the style is visible in the Current Style window.
2. Click on the Style window.

3. Select Save As from the Edit menu or press F12 (SK), Save File (FAK). Enter the name of the style and press Enter.

Note: Recommended practice is to save styles to a preset palette, .pst file rather than be saved as an individual style.

Preset Style Windows

Preset Style windows allow you to conveniently save up to eight styles at a time, and you can save as many Preset Style windows as you like. Each is saved with a .pst extension.

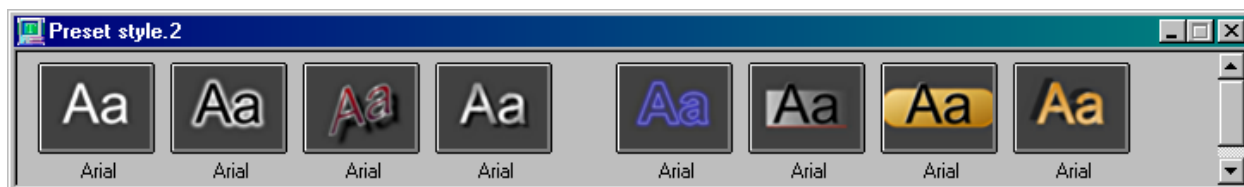

To Assign a Style to a Preset Style Window:

1. If the Preset style window is not in view, go to View > Preset Styles.
2. In the graphic window, click on the desired style so it is visible in the Current Style window.
3. Right-click on a Preset style button.

You can also pick up multiple styles from a graphic window and assign them all to preset style buttons. To do this, activate a graphic window. Then choose Pick Presets from the Text menu. Deko assigns each style in the graphic to a Preset Style.

To save a Preset Style window:

4. Click on the window to activate it and go to File > Save As or press F12 (SK), Save File (FAK).
5. Enter the name of the style and press Enter.

To open a Preset Style window:

6. Click on the preset style window and go to File > Open (SK: F9, FAK: Clear + Read).
7. Navigate to the drive or folder holding the .pst file you are looking for. Click on it and click OK or press enter.


Saving a Pre-Rendered Style

Pre-rendered styles occupy more disk space than a normal style file.

Pre-rendered styles are indicated at the bottom of the Style/Font window by a check next to Pre-rendered Style, and in the Preset Style window by an (r) in front of the typeface name.

To save a style as a pre-rendered style:


1. Activate the Style window (F6).
2. Go to > Render and Save Style.
3. When the Render and Save dialog box appears, navigate to the drive and directory you wish to store the file in.
4. Type a file name in the File Name field, then click OK or press Enter.

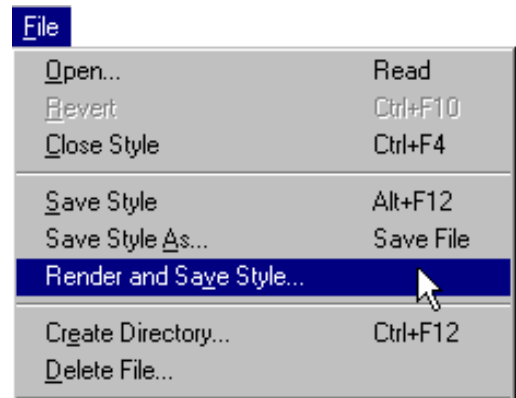

Note: FX Deko software and hardware has substantially improved in performance, and current releases show no difference in performance between normal style files and pre-rendered styles.


Exercise – Modify Text

1. Select Font in the Style window.
2. Click the Typeface drop-down menu and choose a font by name.

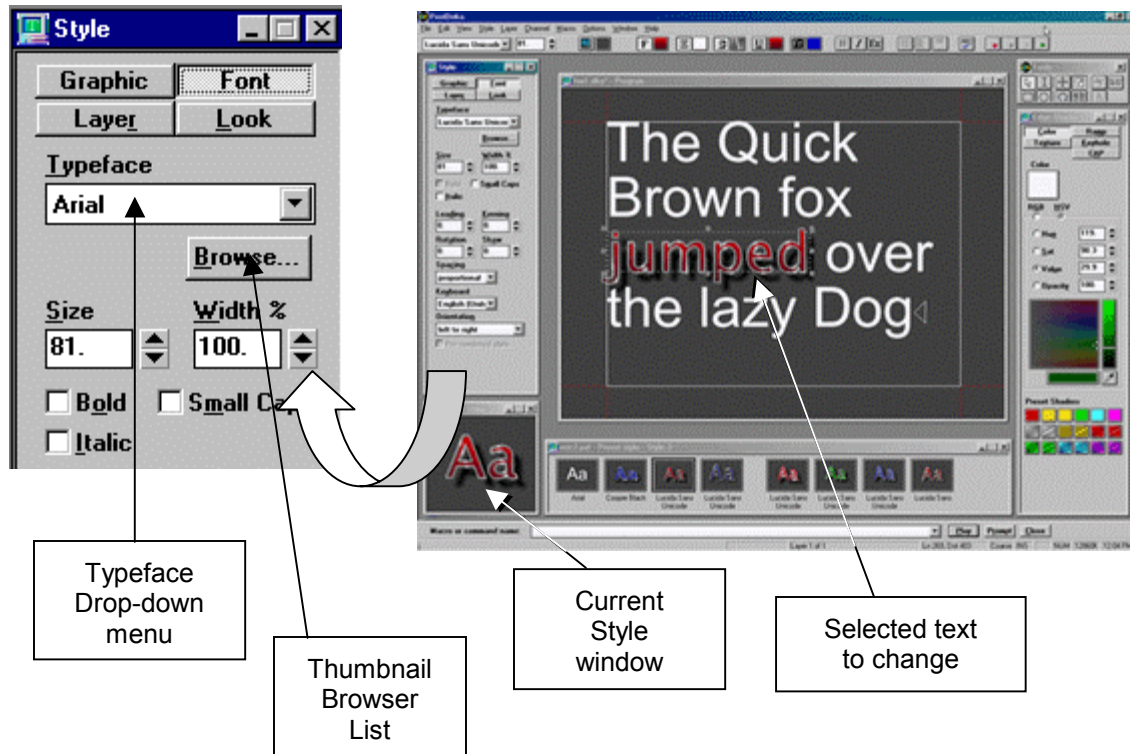


To Add an Underline to Your Text:

1. Select the text you wish to underline.
2. In the Style window, click the Look button.
3. Choose Add, then underline.

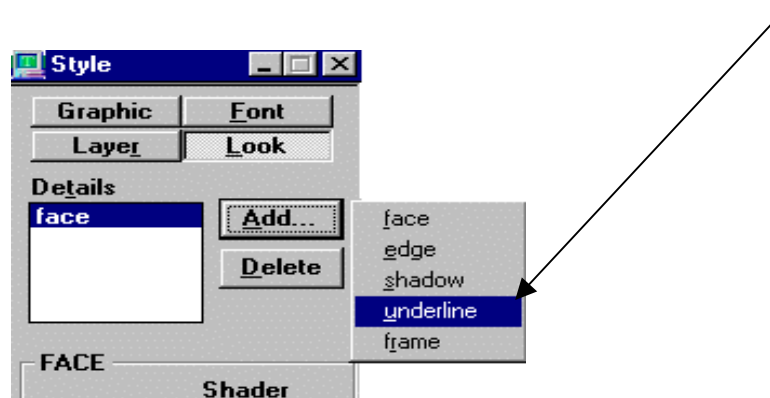


To Change the Color of Your Text:

1. Select the text you wish to change.
2. Select Look in the Style window, choose Face from the Details list, and then click the Shader button.
3. In the Shader window on the right side of your desktop, a Color button indicates the current color of your text.

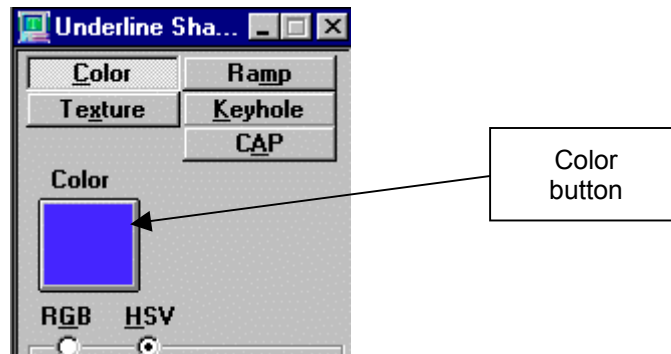

4. Position the cursor in the lower *color palette* area of the window and (left) click the desired color to pick it up. Notice that nothing changes because you have not yet applied this color to the color button above.
5. Right-click the Color button to drop in the new color. You will see the selected text change immediately to the chosen color.

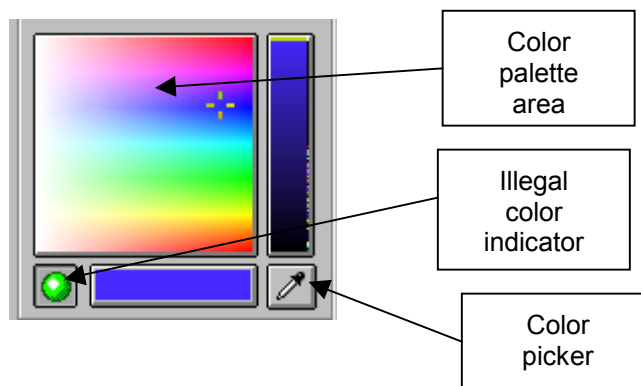

Note: left-click picks a color while right-click applies the selected color.

Shortcut Keys

General Desktop Controls

| | |
|--------------------------|---------------------------------|
| Switching programs | Alt + Tab |
| Changing active window | Ctrl + Tab |
| Selecting Program window | F5; FAK: Program |
| Selecting Preview window | Alt + F5; FAK: Preview |
| Select Style Edit window | Alt + F11 |
| Open Text Browser window | Ctrl + L; FAK: Typeface Browser |
| Select Style Look window | FAK: Look |
| Select Style Font window | FAK: Font |

Moving Cursor

| | |
|-----------------------------|------------------------------|
| Left or right one character | Left/right arrow keys |
| Up or down one row | Up/down arrow keys |
| Left or right one word | Ctrl + left/right arrow keys |
| Move to beginning of field | Home |
| Move to end of field | End |
| Move to end of row | Ctrl + End |
| Move to beginning of row | Ctrl + Home |

Selecting Characters

| | |
|--------------------------------|--------------------|
| Select word | Double-click mouse |
| Select row | Triple-click mouse |
| Select to end of field | Shift + End |
| Select to beginning of field | Shift + Home |
| Select all text in layer | Ctrl + Shift + A |
| Select all text in graphic | Ctrl + A |
| Select multiple blocks of text | Ctrl Drag |
| Select style | Shift + Ctrl + S |

Cutting, Copying and Pasting Details, Styles, Graphic Elements

| | |
|---------------|----------|
| Cut element | Ctrl + X |
| Copy element | Ctrl + C |
| Paste element | Ctrl + V |




Lesson 5: Working with Layers and Tabs

Deko allows you to define an area where text will be entered along with the style that will be applied to that text. This area is referred to as a *text layer*. Layers are important to the operation of Deko and your knowledge of them will expand in the following lessons. Text layers are equivalent to, but more flexible than the *tab layers* in other CGs.



All Deko graphics are made up of a combination of a *background* and one or more *layers*. Layers can contain *text*, *ellipse shapes*, or *rectangles*. When a new graphic is created, it opens with a default background (usually black), which is determined in your Preference settings, and a default text layer, which occupies the safe title area of the screen.

Creating Additional Layers

The Tool window provides three tools that can be used to create additional layers. Layers can be:

- **Text layers** – created with the Text layer tool. 
- **Rectangle layers** – created with the Rectangle layer tool. 
- **Ellipse layers** – created with the Ellipse layer tool. 


Creating a Text Layer

1. From the Tools window click on the Text layer tool. 
2. Position the cursor placing it in the upper left corner of where you want the new text layer to go. Notice that the cursor over the Program window changes. You should see a pointer with an I-beam denoting that this is a Text layer. 
3. Click and drag the cursor down to the right until you have a rectangular outline the size of your desired text layer, then release the mouse button. You should now have two layers in your graphic, the *default layer*, and a second text layer representing the smaller rectangle.

Note: The process of creating a shape layer (rectangle or ellipse) is basically the same. Select the appropriate tool. Position the cursor and drag till the desired shape is produced. We will discuss shape layers a little later.

Moving and Resizing a Text Layer

To change the size and position of a text layer you use the Move tool. To select the Move tool, do one of the following:

- Click on the Move tool in the Tool window. 
- Press Ctrl + M (SK) or Move (FAK).

To Move a Text Layer


1. Move the mouse so the cursor is over the edge of the text layer.
2. Left-click to select it (SK) or Page Up or Down (FAK). The text layer outline will turn black, and eight small gray squares will appear on the outline, one on each corner, and one in the middle of each line. These handles are used to resize the layer.
3. To move the layer, place the cursor on one of the black lines, but not near one of the squares. Click and hold the left mouse button down. A *crosshair* pattern cursor appears. Drag the layer to the new location.



Note: You can also move the layer by selecting it and using *Alt + Arrow Keys*. Up/Down or Left/Right. *Ctrl + Spacebar* will toggle between *Coarse* (10 pixels) and *Fine* (1 pixel) movements.

To Change the Size of a Text Layer

1. Position the mouse so the cursor is next to one of the handles and click. Then do one of the following:
 - Place the cursor near one of the centered box handles will allow you to adjust the width or height of the layer. The cursor will change to an up/down arrow or a left/right arrow.

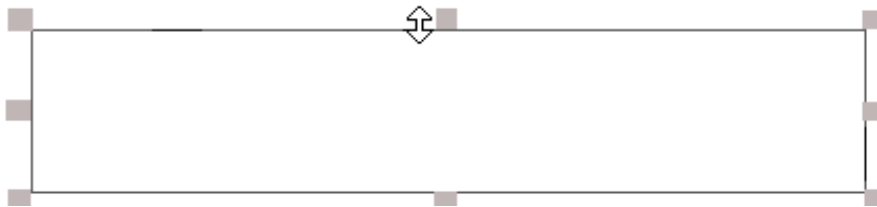

- Placing the cursor near one of the boxes on the corners will allow you to resize both height and width together in a diagonal movement. The cursor will change to a diagonal arrow pointer.



2. Click and drag to resize the layer.

Layers vs. Fields

The Deko interface often uses the term *Layers*. Some users refer to a layer as the physical boundaries of an object in the graphic. Others refer to a *field* as the content inside of a layer. Actually the terms are synonymous and interchangeable.

To Enter Text

To enter text, simply begin to type. When you begin to type an I-beam (or box cursor) appears at the beginning of the layer and moves as you type your text.

Note: If there are multiple layers in the graphic press the Tab key to select the layer to which you wish to enter text. Each time you press the Tab key you will advance to the next layer in *text context*.




To select a text layer for moving or resizing, press Page Up or Page Down to toggle through the layers for selection.


Note: Pressing Page Up or Page Down will toggle through all of the layers in a graphic (including shape layers). Pressing the Tab key (or Shift + Tab) will toggle only through text layers. Using the Tab key can save time selecting a layer if there are several shape layers in a graphic. When a layer contains *Tabs*, the Tab key will not jump to a new layer (it will jump to the next tab in the layer). To select another layer, you must press Page Up or Page Down.

Exercise – Entering Text and Adjusting Layer Attributes

1. With the Text layer tool selected, create a new text layer in the lower-third position.
2. Select a style from the Preset Style window and set the font size at 60 points.
3. Click on the Style window, then click the Layer button. This will reveal the Layer attribute settings.
4. Make sure Word wrap is not selected.
5. Set focus to the Program window.
6. Enter text and type a name that moves beyond the boundaries of the layer.

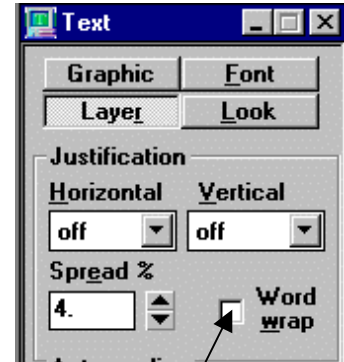


7. Click on the Word Wrap checkbox. Notice that the second word in the layer moves below the layer boundaries.

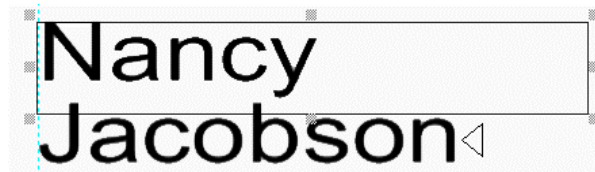

Word Wrap Preferences

It is often preferable to leave the Word wrap setting off and only turn it on when you need word wrap for specific graphics. To change the Word wrap setting:


1. Go to Options > Preferences and choose the Advanced tab.
2. Uncheck the Word wrap box and click OK.

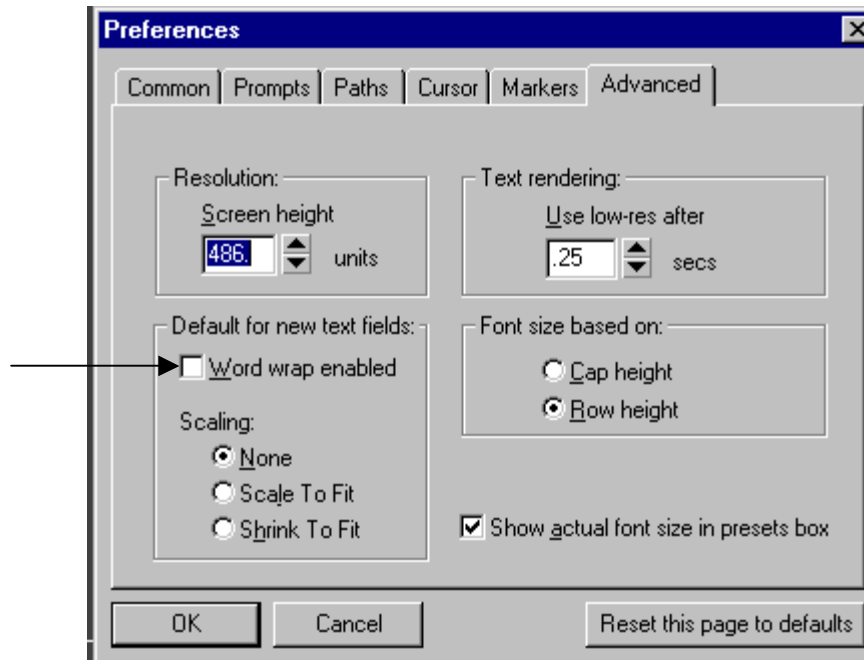

Auto-scaling

The Auto-scaling feature allows you to have layers automatically size or scale text to fit. This is especially useful in templates for graphics such as lower thirds where names can vary in length but must fit within a given screen area. The Auto-scaling feature has three settings:

- **None** – no auto-scaling.
- **Scale to fit box** – scales text vertically and horizontally to fit within the layer boundaries.
- **Shrink to fit box** – shrinks text on the horizontal to fit within the layer boundaries.

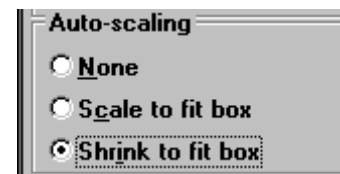

Exercise Continued – Adjusting Auto-scaling

1. Uncheck Work wrap.
2. Click *Shrink to fit box* in the Auto-scaling section. Notice that the text shrinks horizontally to fit within the layer boundaries.



3. Now Click the *Scale to fit box*. Notice the different shape to the text. With *Scale to fit box*, the text sizes to fit both horizontally and vertically.




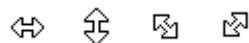
The Move Tool – Moving a Layer vs. Moving Text

In previous examples, we used the Move tool to change the size and/or position of the layer. As we demonstrated in the example, changing the size or shape of the layer did not alter the size or shape of the text unless an auto-scale selection was chosen. The Move tool can also be used to alter text within a layer; however within the layer the tool acts somewhat differently.


Moving Selected Text

When text is selected within a layer, a *selection bounding outline* borders the selection with eight small *selection handles* surrounding the selection.

1. Place the cursor near the outline so that the crosshair cursor appears. 
2. Click and drag the text to a new position. The position of the selected text will change in relation to other text elements within the text layer.
3. Place the cursor near one of the eight selection handles so that the cursor becomes a scale tool. Notice that the text scaling changes. Also notice the



size and *width* indicators in the Font tab/Style window change.

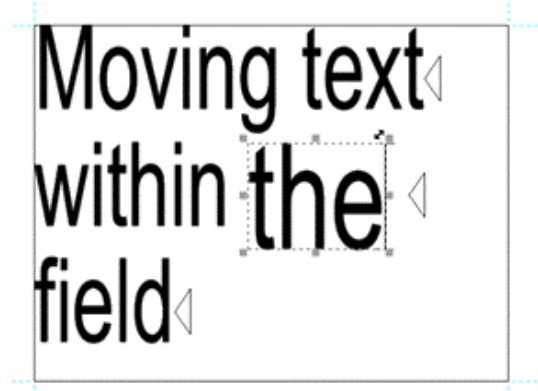

Moving Text with the Keyboard

You can also move selected text with the keyboard, press Alt + Arrow keys to move in four potential directions. *Ctrl + Spacebar* toggles between *Fine* (1 pixel/line) and *Course* (10 pixels/lines) movement. This works when moving layers and objects as well.


Note: Moving text within a layer is not the recommended practice. Moving one word within a layer of many may be confusing. We suggest that you make the word it's own layer so as not to affect the position of other words. To do this select the word and type Alt + T>F.

Scale, Rotate, Skew, Kern and Justify Controls

Deko provides tools to enable easy scaling, rotating and skewing text. With the Justify controls, text positioning on the screen is easily adjusted. As with the Move tool, there are keyboard equivalents for all of these adjustments. These actions take on slightly different characteristics when applied to an entire layer vs. to selected text within the layer. Let's examine each of these attributes.


Scaling Text and Layers

To change the size and position of selected text within the layer use the Scale tool. To select the Scale tool do one of the following:

- Click on the Scale Tool in the Tool window 
- Press Ctrl + W (SK) or Scale button (FAK)

When text is selected within the layer, and the Scale tool is selected, the mouse works exactly as it does with the Move tool selected.


- When the cursor is placed next to a bounding outline, the crosshair cursor appears. Dragging the mouse will move the text. Try it.
- When placing the mouse near one of the selection handles, the pointer becomes a scaling tool and dragging the text will scale it. Notice that the text size and width attributes change in the Style window.

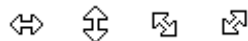


- Hold down the Alt key and press the arrow keys. Notice the text does not move but rather changes in size. Also notice the scaling attributes change in the Font/Style window.

Type Ctrl + Spacebar to change the settings between Course and Fine when making the adjustments. Press and hold Ctrl down when you drag to preserve aspect ratio.


To Scale a Layer

1. Click on the Scale tool in the Tool window or type Ctrl+W (FAK: Scale). 
2. Select the layer.
3. Position the pointer over a handle on any side or corner of the layer so that the pointer becomes a scaling tool.

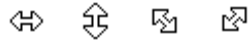

4. Drag to scale the layer. Notice that when you scale a layer, the size and width indicators for the font do not change within the Style window.

Press and hold Ctrl when you drag a corner to retain the Layer aspect ratio.

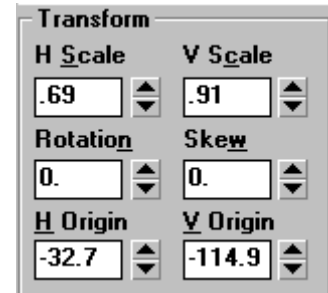

5. Click on the Layer window and click the More button.
6. Scale the text and observe the transform section in the window. Notice the H and V Scale changes and the H and V Origin changes.



To scale a layer with the keyboard, select the layer and then press Alt + the arrow keys.

Note: It is important to remember that scaling selected text within the layer will change the font size attributes, while changing the scaling of a layer itself will leave font attributes unchanged but will change the Scale attributes of the layer itself. This is because Scaling a layer is a post process; that is, the layer attributes are applied to the layer after text attributes are applied. Where this becomes important is when you wish to note attribute changes for additional graphics or restore attributes to their original values.

Rotate and Skew

The Rotate tool allows you to both rotate and skew selected text or layers. Rotate and skew apply differently to selected text and selected layers. With selected text, the adjustment is applied to Text attributes, while with selected layers, the adjustment is applied to Layer attributes.

 
To Rotate Selected Text

1. Click on the Rotate tool button  or type Ctrl + R (FAK: Rot/Skew)
2. Position the pointer near the bounding outline of the selected text so the pointer becomes a rotation tool. 





3. Drag to rotate the text. In the Style window under Font, notice the change in the rotation setting. Notice also that the text leaves the boundaries of the layer outline.


To Skew Selected Text

1. Click on the Rotate button or type Ctrl + R.
2. Position the pointer over the top-right-corner handle of the selected text so the pointer becomes a skew tool. 
3. Drag to skew the text. Again, notice in the Style window the change in the skew setting.

Note: You can change Rotate and Skew settings for selected text by entering numerical values in the Rotation and Skew fields in the Style window.

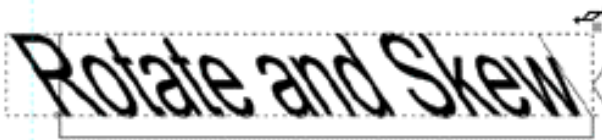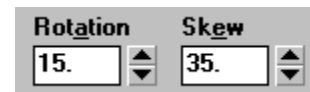**Rotate and Skew a Layer**


If a layer is selected, it can be rotated and or skewed using the Rotate/Skew tool as with selected text. The procedure is the same but the object rotated is a layer with all of its contents. As with Scale, changing Rotate or Skew parameters to a layer will apply attributes to the layer rather than to the text.

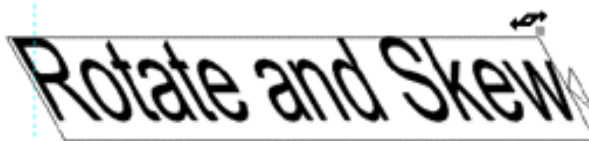

Justifying Text and Layers

Deko provides tools for simplifying the justification of text. Three tools on the toolbar provide reveal menus for justifying text. Keyboard shortcuts are available as well.

Text can be justified within *layer boundaries* or you can justify a layer relative to *safe title marker boundaries*, indicated by a red-dotted line in the graphic window.

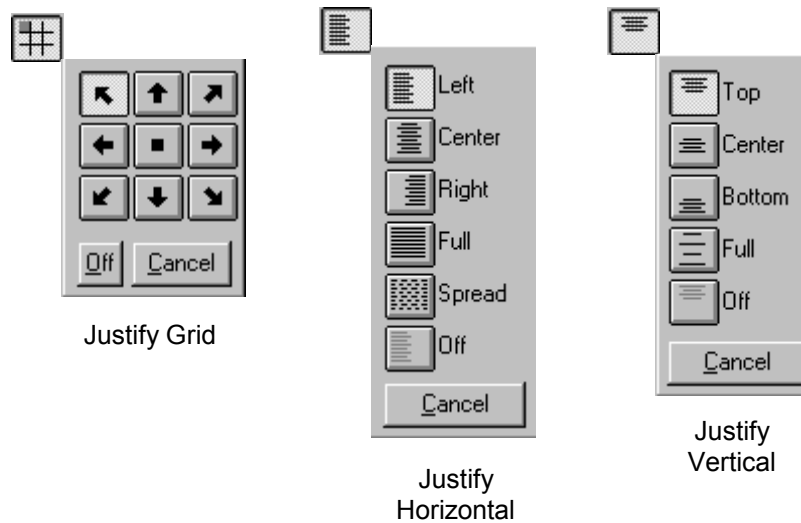

Justifying Text Within a Layer

1. Select a Layer and press the Home key to enter the text layer.
2. Without selecting any characters within the layer, click on one of the justify tools to reveal the menu and click on the appropriate button.


Note: You can justify text using the keyboard by holding down Ctrl and pressing the numbers on the keypad. The positions are represented as follows.

| | | |
|-------------|-------------------|--------------|
| 7 | 8 | 9 |
| top left | top center | top right |
| 4 | 5 | 6 |
| middle left | middle center | middle right |
| 1 | 2 | 3 |
| bottom left | bottom center | bottom right |
| | 0 | |
| | justification off | |


Note: Selecting all of the text within a layer before justifying will force the layer boundaries to fit the borders of the text and then justify to the safe title boundary. *If you select only some of the text in the layer, a separate layer will be created for that text when it is justified.*

Special Settings


- **Full Horizontal Justification** – forces all of the rows with exception of the last rows or any hard returns flush with the left and right sides of the text.

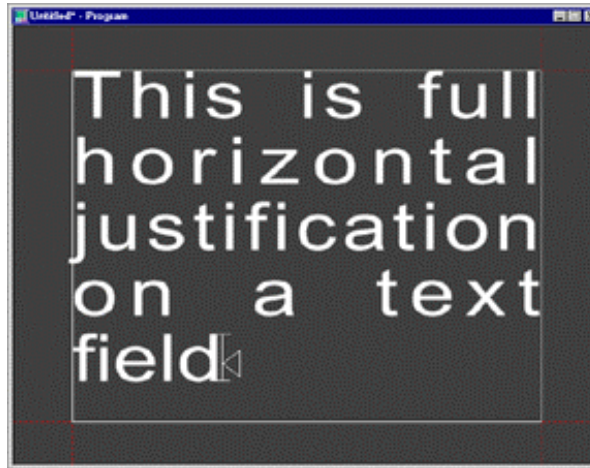

- **Full Vertical Justification** – spreads the text so the top and bottom lines are flush with the top and bottoms of the layer box.

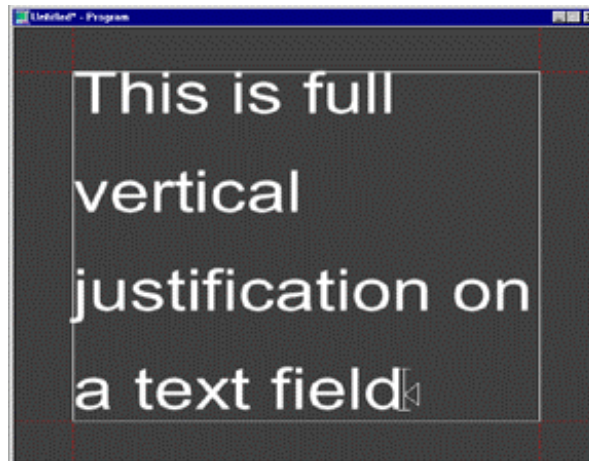


- **Spread Justification** – makes all lines of selected text flush with both the left and right sides of the layer boundaries.

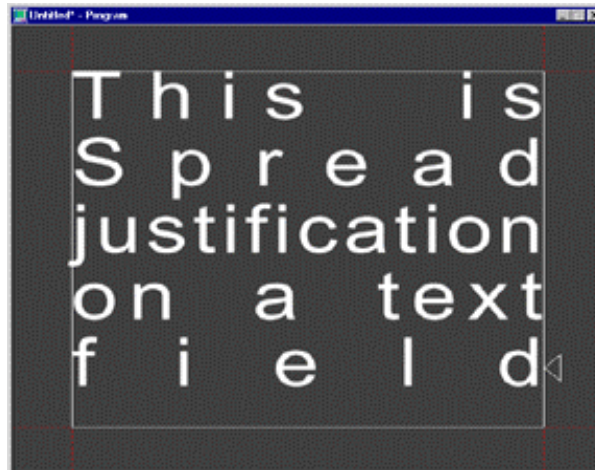

Justifying Layers

When a text or shape layer is selected, the layer is justified to the boundaries of the safe title area. To justify a layer, select it and apply the appropriate justification tool. Tool bars and keyboard shortcuts work the same for layers.

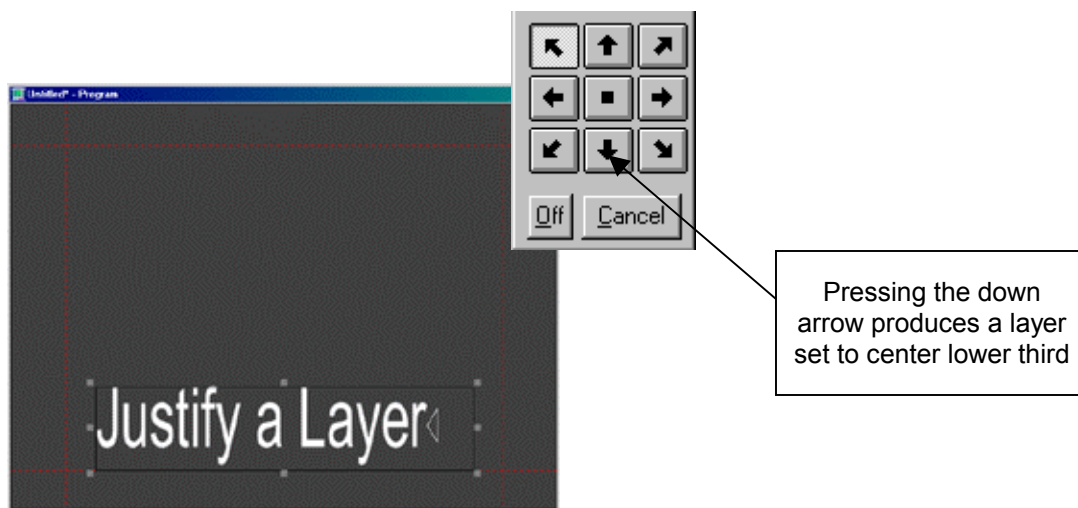

Character Spacing (Kerning) and Row Spacing (Leading)

The Kerning/Leading tool allows you to make incremental changes in character or row spacing. The same tool is used for both. Both actions can be performed from the mouse or the keyboard.

To activate the Kerning/Leading tool type Ctrl + K (FAK: Kern/Lead) or click on the tool.

Kerning Text



To kern from the keyboard:

1. Select the text to be kerned.
2. Hold down Alt and press either the right arrow to widen space between characters or the left arrow to reduce character spacing.

Type Ctrl + Spacebar to toggle between fine and course control.

To kern with the mouse:

3. Move the pointer handle to either side of selected text so that the pointer becomes a kerning tool.



4. Drag the handle either to the right to widen spacing between text or to the left to narrow the space between text.

Text Kerning

Leading Rows

To change the row spacing of selected text with the keyboard, hold down Alt and press the up arrow to increase space and the down arrow to decrease space.

Use Ctrl + Spacebar to toggle between fine and course control.


To change Leading using a mouse:

1. Move the mouse pointer to a handle above or below selected text, so the pointer becomes a leading tool.



2. Drag the handle downward to increase the space between rows, or upward to reduce row spacing.

Note: Numerical kerning and leading values can be entered for selected text or to current style setting if no text is selected by entering a value in the Kerning or Leading fields in the Style window. Positive values increase the space between characters or rows and negative numbers decrease it.

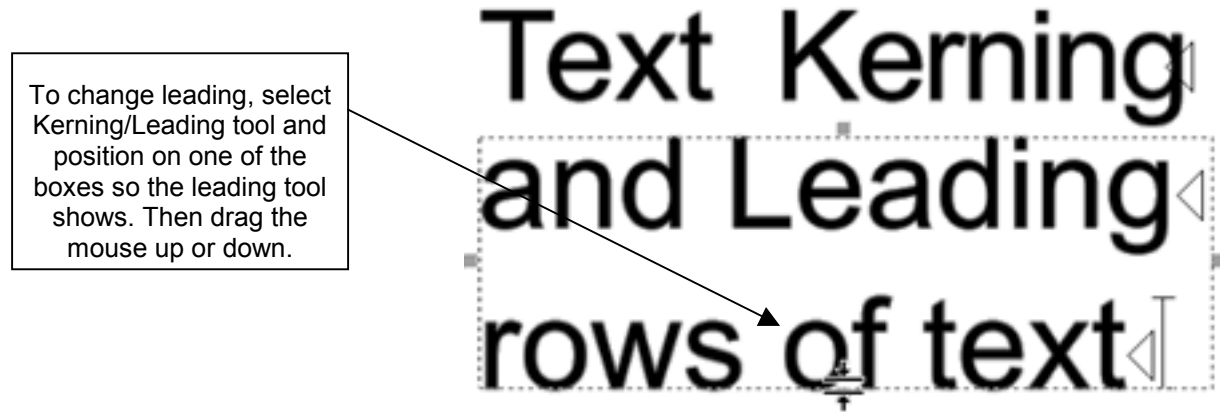

Exercise – Creating a Lower Third Template with a Keyed Background

Before you start

A graphic consists of one or more *layers* and a *background*. The use of a background, the bottom graphic element over which all layers and their contents appear, is introduced in this exercise. Deko allows you to import a wide variety of file formats and use any file as a background.

For keyed backgrounds like the lower third in this exercise, Deko can import a variety of file types. However, `.tga` and `.tif` work best since they are the commonly used formats that store a key signal.

Note: Lesson 6 will introduce importing graphics and define and discuss the use of *key signals* (alpha channels).


Step-by-Step: Lower Third with Logo

Clear the Program window: Press Clear Program (FAK) or Alt+F8 (SK)

You will be creating a three-part lower third – a background image, plus two text layers. The two layers will be used for a two-line lower third to hold a name and job title.


Load up the Sample Background Image

1. Set focus to the Program window.
2. Press Clear Read (FAK) or F9 (SK) to reveal the File Open dialog. Your directory path should read `D:\Deko\Tutorial`.
3. Change the file format from `*.dko` (Deko) to `*.tga` (Targa) in the List Files of Type box in the bottom left of the Open dialog box.

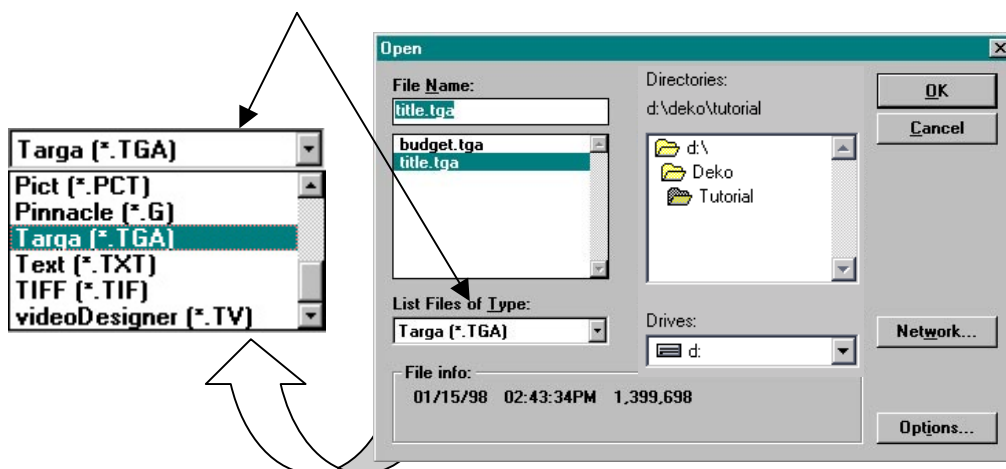

- Double-click `title.tga` in the File Name list to open it. Deko automatically loads `title.tga` as a background into the Program window. This image was created on a paint system and saved as a Targa file. It includes a logo and textured lower third bars with semi-transparency.

Create a Text Layer for the Name

- From the Tools menu, select the add-text-layer tool. 
- Position the tool on the upper left corner of the background's upper blue rectangle and drag it to the bottom right corner to create a text layer that matches the blue rectangle.




- If you need to make any adjustments to the layer, make sure that the Move tool is selected so that you do not accidentally scale the text and the layer.


Open the Tutorial Preset Style

- Click on the Preset Style window.
- From the File menu select Open (F9). The directory path should read `D:\Deko\Tutorial`. If it does not, change the directory path by double-clicking the `D:\` directory and scroll down to the Deko folder.
- Double-click the Deko folder to find the Tutorial sub-folder.
- Click on the file titled `tutorial.pst`. Then press OK.

Note: double-clicking on the file `tutorial.pst` will open it as well.

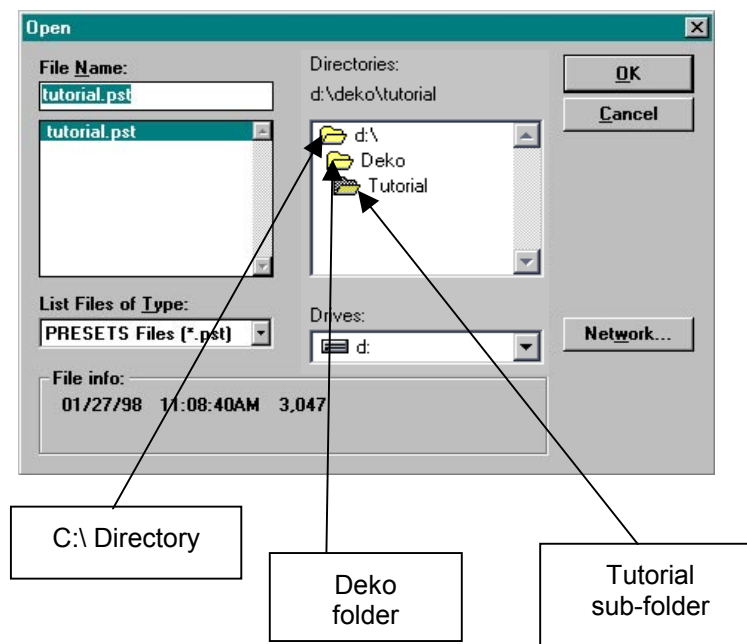


This will open a new Preset Style window. We will use the styles in this window to complete the exercise.

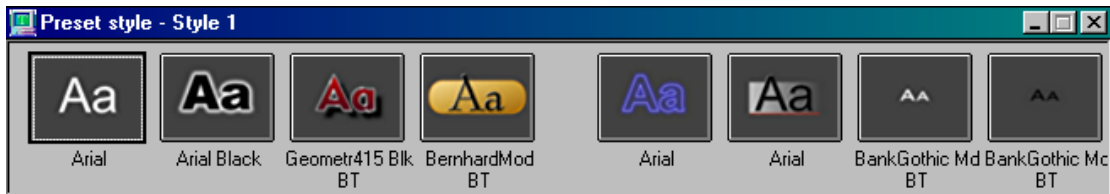

Set Auto-Scaling Properties and Choose a Style

1. In the Style window, click the Layer button.
2. Turn off Word wrap and choose Shrink to fit box in the Auto-scaling section of the window. This enables your text to conform to the boundaries of this layer, as it commonly does in lower third titles.
3. Then choose style 7 in your tutorial.pst window, but don't type yet.

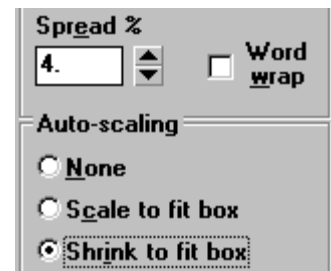

Create a Text Layer for Job Title


1. Select the Text Layer tool and create a second text layer. This layer goes below the previous layer and directly on top of the lower gray rectangle.



2. Choose style 8 from the Preset Style window for this layer. Don't type yet. Set the layer for Shrink to fit box and turn Word wrap off.

Delete the Default Text Layer

1. Set focus to the Program window.
2. Use Page Up to move among your layers to select the Default layer. This layer is based on the size of the safe-title area.

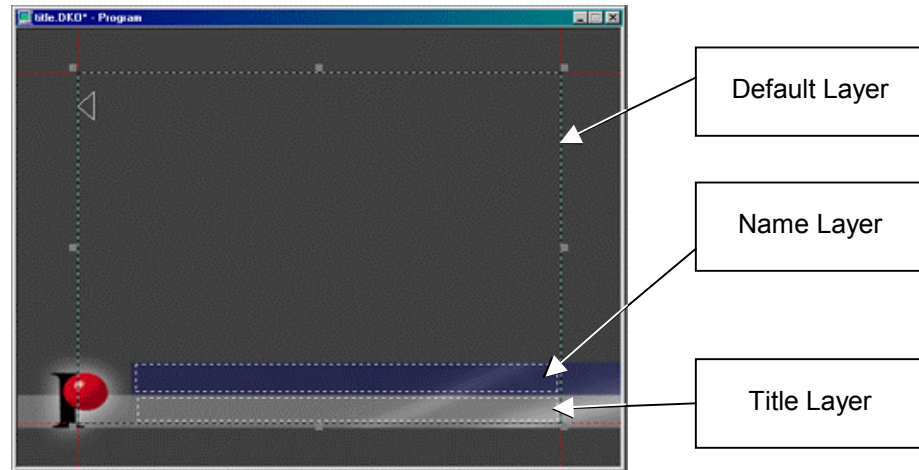

3. Once the default layer is selected, tap the Delete key. This will make it easier to work with the graphic.

Save This File to the Hard Drive

1. With the Program window selected, go to the File menu and choose Save Graphic As (SK: F12, FAK: Save File).
2. In the Directories list, double-click the Deko Tutorial folder to open it.
3. In the File Name field type `template`. Under the List Files of Type drop-down box, verify Deko (.dko) as File Type. Then select OK to save.

What you have just created and saved is the positioning and the font chosen for that position, along with the background image. This is commonly referred to as a template.


Exercise – Creating Graphics from a Template

A template graphic contains text layers ready to be filled. The template can also contain a background image. The file saved to disk in the previous exercise was a template graphic.

The only difference between a ready-to-air graphic and a template graphic is whether or not the text has been filled in. There is no difference in how you save the files. In this exercise you will create five lower thirds from the template you just created.

Fill in a Name and Job Title


1. The first lower third needed is Frank Capelli, Firefighter. Press the Insert key to toggle Insert/Overwrite to OVR.
2. Select the name layer, and then type in the name.
3. Tab to the second layer, and type in the job title. Notice that the current style box changed when you moved to the second layer. If this did not happen, then you might not have the correct user preference set for *Moving cursor sets font and look*.

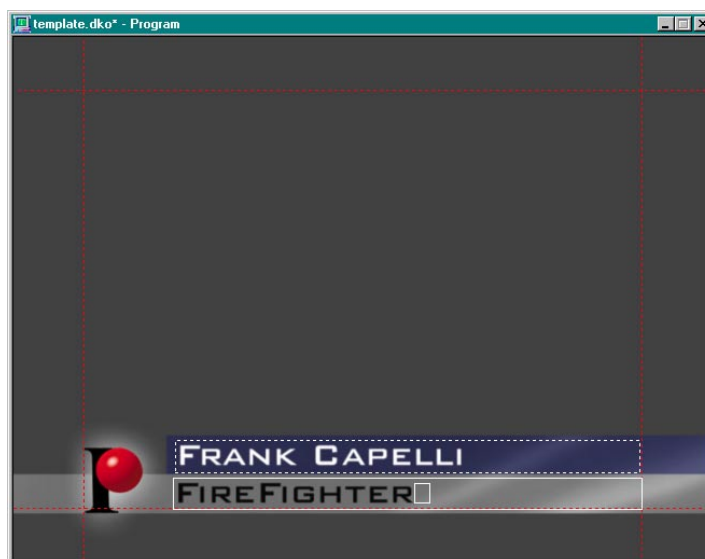


Use Save As to Store the Lower Third on Disk

1. From the File window go to Save Graphic As (SK: F12, FAK: Save File).
2. To preserve the original template file, `template.dko`, save the file a different file name. Use `title1`. Once you have created a name, Deko will automatically increment the number at the end. Deko will suggest that your next title be `title2`, etc.

Fill in the Second Lower Third

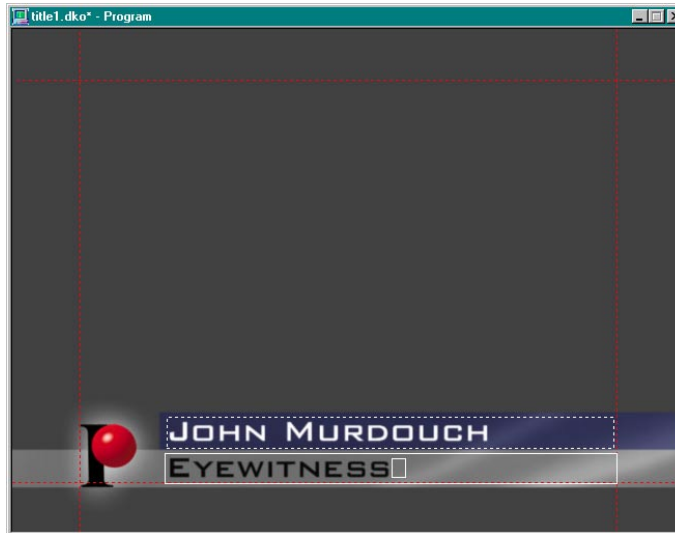


1. This one is John Murdouch, Eyewitness. Remember to put the name and title into their own layers. With OVR turned on, you can just Tab and type.
2. Again, Save Graphic As lets you preserve your template file by making a new file on disk. Use the default title2.dko.

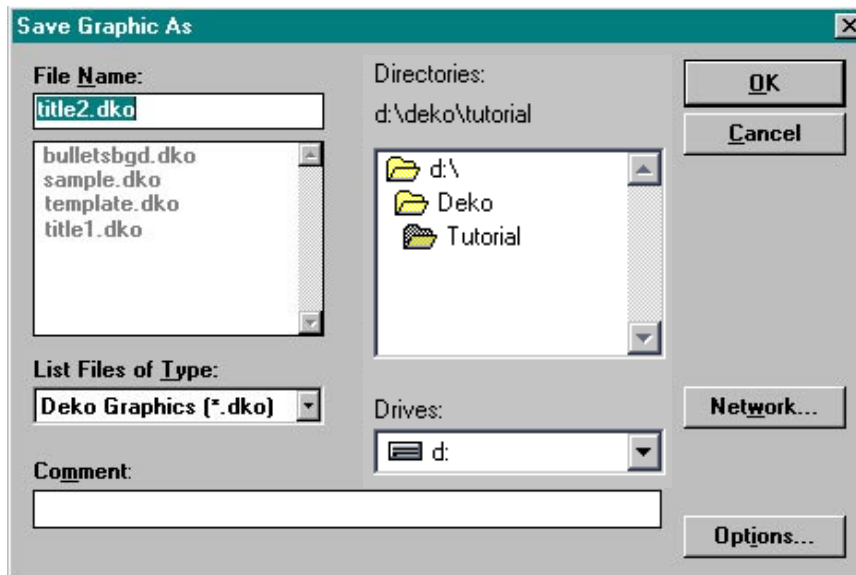

Fill in the Third Title and Save

1. This third CG page is J. Christian Bollwage, City of Elizabeth Mayor. Notice that the Deko has automatically put both layers into a smaller font size, to fit it into the available space.
2. If the text *rises* within the layer when it first starts shrinking, you will need to center the text within the layer, using Ctrl + Number key 4.
3. Save this graphic.
4. Repeat the same steps for these remaining lower-third titles.
5. Jeanette Hanlein, Proprietor and Harold Lambeau, Deputy Sheriff. If done correctly, your Save Graphic As window will look like this on the fifth save:

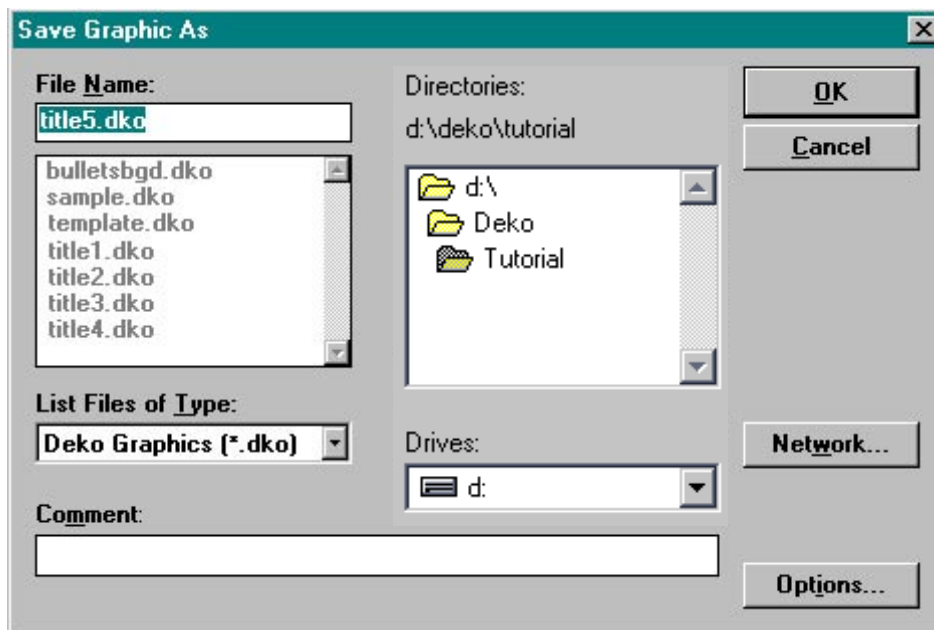

The Layer Browser

The previous exercise produced a graphic with a background and two distinct layers. Deko graphics are often composed of many layers. Creating separate layers can make it easier to manage and modify the graphic, and is also an important element in creating effects, as we will see later.

Managing layers is made easier with the Layer Browser. To view the Layer Browser, select View/Layer Browser on the Menu bar (Ctrl + Shift + B).

The screenshot shows the Layer Browser window with two layers. The top layer is labeled '75' and the bottom layer is labeled '77'. Callouts point to various features: 'Change View/Lock buttons' points to the top toolbar, 'View/Lock indicators' points to the eye and lock icons on the right of the layer thumbnails, and 'A thumbnail positioned and numbered in order, from 1 to last, represents each layer.' points to the '75' thumbnail. Below the main window are three icons with labels: 'View/Hide Layer' (eye icon), 'Lock/Unlock Layer' (lock icon), and 'Normal/Zoom Layer' (zoom icon).

| View | Text | Layer | Channel | Macro |
|------|-----------------|-------|--------------|-------|
| ✓ | Text Bar | | | |
| ✓ | Command Bar | | | |
| ✓ | Status Bar | | | |
| ✓ | Program | | | |
| | Preview | | Alt+F5 | |
| ✓ | Style | | | |
| ✓ | Current Style | | | |
| ✓ | Preset Styles | | | |
| ✓ | Shader | | | |
| | Effect Playback | | Shift+F11 | |
| | Sequence | | F11 | |
| | Macro | | F2 | |
| | Motion | | | |
| | Stills | | | |
| | Custom Typeface | | | |
| | International | | | |
| | Automation | | | |
| | Database | | | |
| | Aston import | | | |
| | Chyron import | | | |
| ✓ | Tools | | | |
| | Browser | | Ctrl+L | |
| | Layer Browser | | Shift+Ctrl+B | |

The Layer Browser shows all layers in sequence, with the highest priority layer (top) represented by the first layer in the browser, and lower priority layers numbered in sequence below. A layer in the browser can be selected simply by clicking on it.

Note: As the layer browser can tax system memory, it is recommended practice to keep it closed when playing graphics on air.

Reordering Layers

Layer priority determines how a layer is viewed on the screen. The top layers will appear in front of layers of lower priority. Layer priority can be easily changed:

- Click on a layer thumbnail in the browser and drag it to a different position.
- Click on a layer in the graphic or the browser and type:
 - Ctrl + (+) to move the layer up one position.
 - Ctrl + (-) to move the layer down one position.
 - Alt + (+) to move the layer to the top position.
 - Alt + (-) to move the layer to the bottom position.

Reordering Layers Based on Screen Position

From the Layer menu, select Re-order Layers. A priority first from left to right, then from top to bottom determines the layer order. This is designed for fast and easy update of live template pages.

Viewing Layers

Next to each layer is a *View* status indicators. The indicator will either show an *eye open* or *shut*. When the eye is open, the layer is visible in the Program window; when the *eye is shut*, the layer is not visible. To change the view status of a layer:

1. Select the layer in Layer Browser by clicking on it.
2. Click on either View button at the top of the browser window (eye open or closed) to change the status.

Locking Layers

Below the *View* status indicator on each layer is a *Lock* status indicator. When a layer is locked, it cannot be moved or altered. To lock or unlock a layer:

1. Click on the layer to select it.
2. Click on either the *Lock* or *Unlock* button at the top of the browser.

Normal/Zoom Layers

In the normal view, layers appear in proportion to their actual size in the graphic. For small layers, this makes it difficult to distinguish one layer from another in the layer browser. The zoom button magnifies the layer element in the browser making it easier to identify the layer in the browser.

Selecting Multiple Layers


It is often necessary to select more than one layer to work with. Individual layers can be selected by pressing the Page Up or Page Down keys when the Program window is active, or by clicking on the layers in the Layer Browser.

To select more than one layer at a time, do one of the following:

- In the Layer Browser, hold the Ctrl key down and click on desired layer thumbnails. Each will be highlighted;
- Select Edit > Select More menu and click on each desired layer in the graphic (use Page Up/Page Down to select the layers consecutively).
- Within the graphic, hold the Ctrl key down and click on each desired layer.

Note: When you select multiple layers within the graphic a *plus* sign will appear next to the cursor pointer. Also note that while you have selected multiple layers, the only indication that these layers have been selected will appear in the Layer Browser, with each selected layer highlighted.

| Edit | View | Channel | Macro | Options |
|---------------------|------|---------|--------------|---------|
| Undo view_show | | | Ctrl+Z | |
| Redo | | | Ctrl+Y | |
| ✓ Enable Undoer | | | | |
| Cut | | | Ctrl+X | |
| Copy | | | Ctrl+C | |
| Paste | | | Ctrl+V | |
| Clear All | | | Alt+F8 | |
| Clear Background | | | Ctrl+F8 | |
| Clear Layers | | | F8 | |
| Clear Selected Text | | | Delete | |
| Select All | | | Ctrl+A | |
| Select Field | | | Shift+Ctrl+A | |
| Select Layers | | | Shift+Ctrl+L | |
| Select Style | | | Shift+Ctrl+S | |
| Select at Tab | | | Shift+Alt+T | |
| Select More | | | | |
| Find... | | | Ctrl+F | |

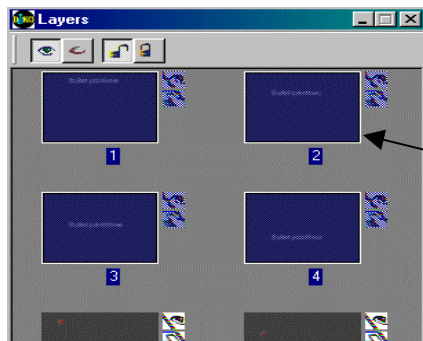

Ctrl click to select multiple layers. Each selected is highlighted in blue.

Naming Layers

Often it is advantageous to name layers. If related layers are given related names, the layers can be easily grouped using the wildcard symbol *.

Example: Lower Third

low3 top text
 low3 bottom text
 low3 top banner
 low3 bottom banner
 low3 bug

Example: Leaderboard layout, layer names as follow


Column 1a Column 2a Column 3a
 Column 1b Column 2b Column 3b
 Column 1c Column 2c Column 3c, etc.

The advantage of using such a naming scheme is that it allows us to quickly group related layers when building effects and motions. For example, we could identify all the layers in Column 1 by notating Column 1* or all the layers in row one by notating Column *a. In lesson 10, you will learn

how to apply layer names to the Timeline Motion Compose window to easily produce exiting effects on grouped layers.

To name a layer:

1. Click on the desired layer in the Layer browser.
2. Click in the Number layer below the Layer Picon or right-click on the Picon. A Shortcut menu appears.
3. Click on Edit Name. The name layer for the layer changes to allow you to edit name layer.
4. Enter the new name in the layer.
5. Click anywhere in the screen to accept the name change.
6. Repeat this process for each layer to be named.

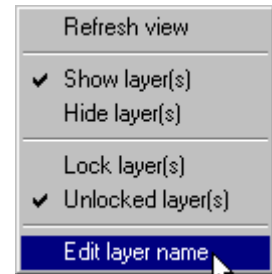

Modifying Layers

Cutting and Pasting Layers

Layers can be cut, copied or pasted within the graphic or to other graphics. To perform any of these operations, select the desired layer(s) and use the keyboard shortcuts:

- Cut – Ctrl + X
- Copy – Ctrl + C
- Paste – Ctrl + V

Appending A Graphic to Another Graphic

An entire graphic (with all of its layers) can be appended to another graphic file combining layers from the first graphic with that of the second.

To append one graphic with another:

1. Open the first graphic file.
2. Go to File > Append Layers (Alt+F9).
3. In the opened dialog box, navigate to the drive and directory containing the second graphic file.
4. Choose the file from the File Name menu or type it in the File Name field and click OK.

Note: the first file will be appended to the second file with the second files graphic layers behind those of the first. The second graphic's background is discarded for the first.

Converting Layers to Background

Sometimes it is desirable to lock down all layers permanently to a background.

To do this, go to Choose Layers > Layers to Background.


Note: Deko copies the layers and combines them with the background. The original layers remain until you clear them out with Edit > Clear Layers or F8.

Combining Text Across Many Layers

It is also possible to combine the contents of two or more text layers into a single layer.

To do this:

1. Select the text within the layers you wish to combine. Hold Ctrl and drag the mouse to select the desired text within each layer.
2. Go to Layer > Text to Field.

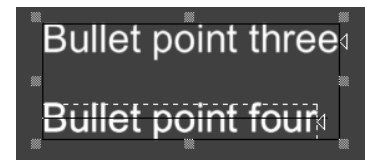

Exercise – Making a Full Screen Slate

In this lesson, you will create a *slate* – a CG page suitable for presenting bullet points to support an interview or an investigative report.

The background for a slate can be a uniform color, a ramped color, or a graphic file. Typically, the bullet points on a slate are brought up one by one, either from the Deko, or from a still store. If the images are brought up from a still store, you have no choice but to save them as multiple graphics, one for each added bullet point. However, if the images are brought up from a Deko, then you can save a single copy and use a layer-based transition to bring it on screen. We will cover layer-based transitions in a later lesson that will show you how to create and save motion files with the Motion editor.

Bullet points in the body of a slate are typically emphasized with a graphical element, such as a dot, square, sphere or arrow. Deko provides you with two different ways to put such an element up on screen: graphical layers and custom typefaces. In this exercise you will use graphical layers to create the bullet points. In the next lesson, we will cover creating and using Custom Typefaces.


Step-by-Step

Create a Text Layer for the Title Line of the Graphic, and assign a style

1. Delete the default layer and make a text layer near the top third of the screen within the margins of the *safe area*.
2. Specify *Shrink to fit box* and click off Word wrap.
3. Assign Preset Style 4 from the Preset Style window, but don't type in the layer.

Create a Single Text Layer for Bullet Points, Assigning a Style


1. Create a single text layer for the main points you will be bulleting leaving some room to the left of the layer for the graphic bullet on each point.

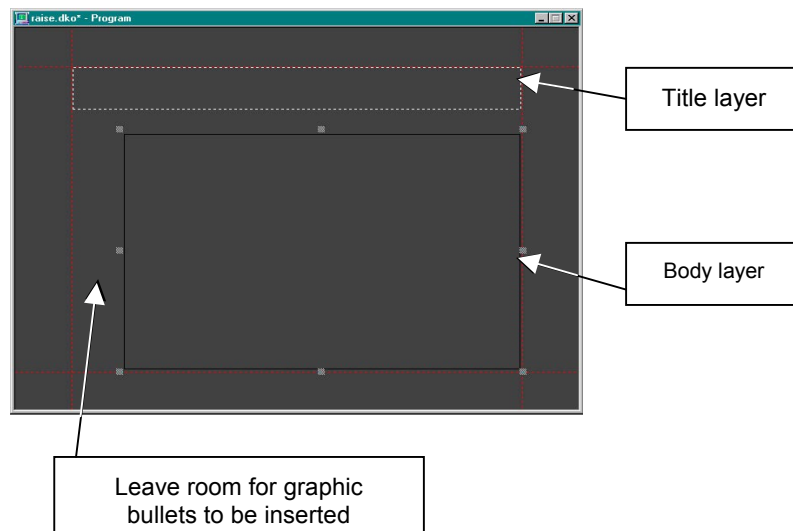

2. Again, specify *Shrink to fit box* and leave Word wrap off.
3. Select Preset Style 1 and scale down the size of the characters to 30. Do this before typing into the layer.

Fill in Some Text on Your Layers Before Setting a Background

1. Select the Title layer and type in a short title.
2. Select the Body layer and type in several lines of text to illustrate your body. Keep the bullet points within one line and enter an extra return in between lines to space the text out. Enter five bullet points.

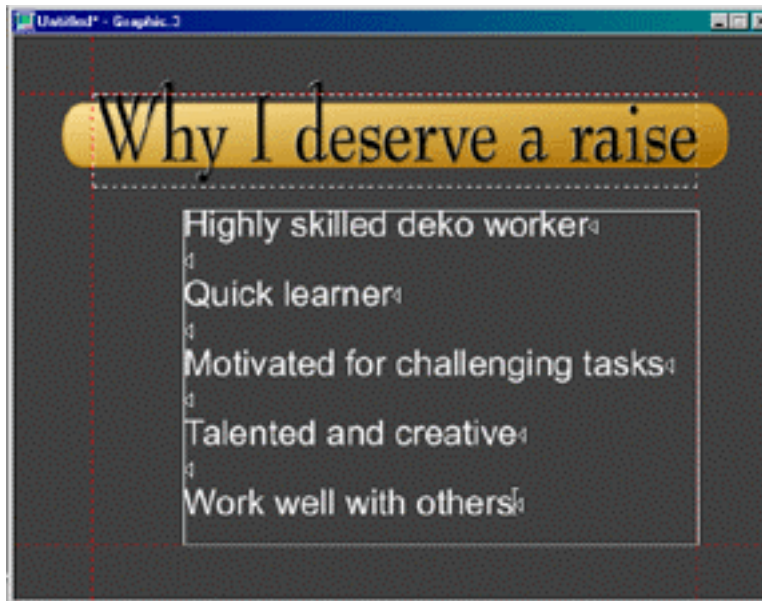



Convert Body Text Layer into Multiple Layers

A bulleted slate works best if each bullet point is a separate layer. It is often easier to type in all the bullets in to one layer and convert them into multiple layers.



1. Select all of the text in the body text layer (Shift + Ctrl + A).
2. Once all the text is selected go to Text > Text to Multiple Fields. This will take the single selected text layer and break it into five distinct text layers each a separate layer in the graphic.

Note: avoid dragging the layers with the mouse to adjust layer spacing. This can produce unsatisfactory results.

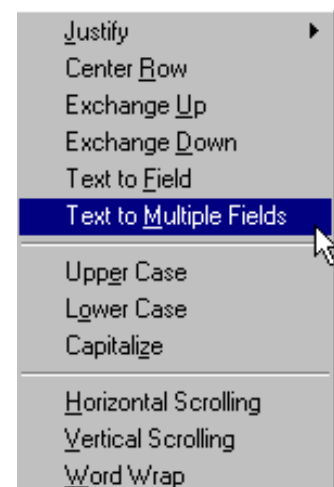

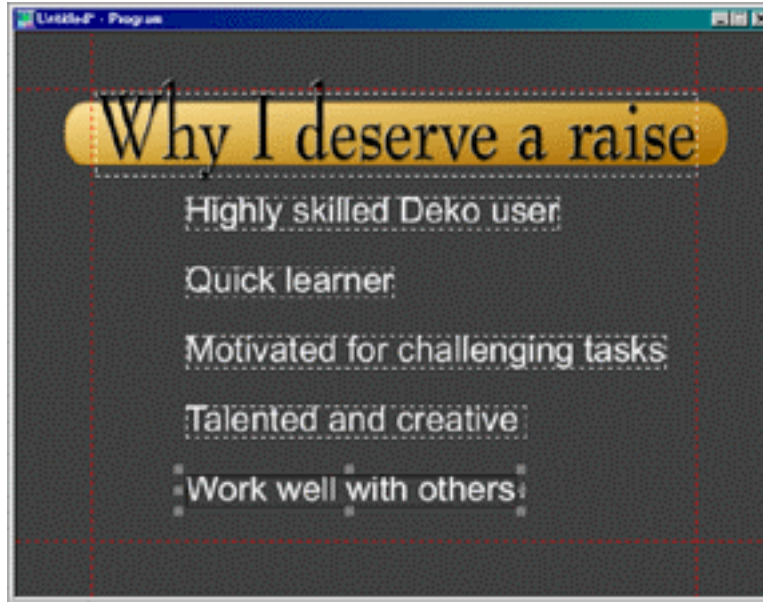


Add the First Bullet Point

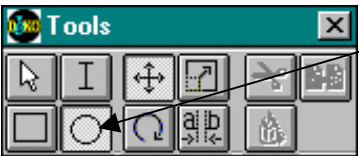1. From the Tools window, select the ellipse tool. Your cursor will change to indicate that it can draw a circle or ellipse.
- 
2. Position the cursor to the left of the first text layer in your bullet list
 3. Press and hold the Ctrl key (this will give you a perfect circle). Drag the cursor down and let go when you reach the desired size. Reposition the circle for better placement if necessary.
 4. With the circle still selected, choose a style from the Preset Style window or create your own style, preset 3 works well.
- 

Copy the Bullet to the Second Bullet Point


1. With the circle selected, press Ctrl + C (to copy), then Ctrl + V (to paste).

You've created a copy of the first circle but cannot see it because it was placed directly on top of the original. The only indication that you've successfully copied and pasted a second element is that the layer count on the status bar down at the bottom of your desktop updated with the addition of another layer. It should now read Layer 2 of 8.

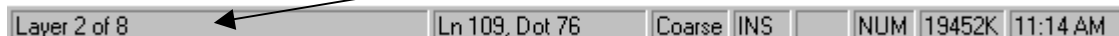


2. Again, with the circle selected press Ctrl + M. This is the shortcut for selecting the Move tool.

3. Hold down the Alt key and press the arrow down key until the second circle (bullet) is positioned next to the second point. Press Ctrl + Spacebar to toggle between Course and Fine movements so you can align the bullet to the point.

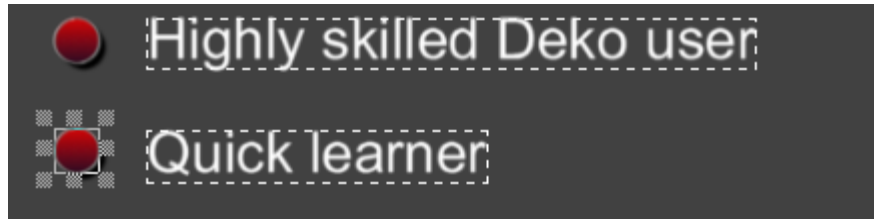

4. Repeat Step 8 three more times until you have a total of 5 bullets.

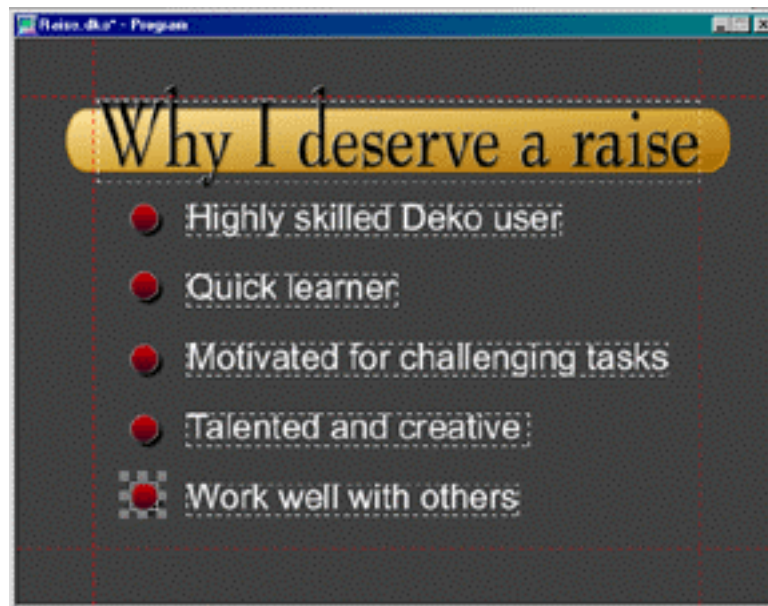

Name the Layers


1. Open the Layer browser and select the layer for the first bullet point. When you have highlighted the layer in the browser, selection points will surround the selected bullet points.
2. Right-click on the Layer browser picon to reveal the Shortcut menu and click on Edit layer name.
3. In the Name layer, type Col 1a .
4. Click anywhere on the screen to accept the change.
5. Select the next and remaining bullet points to change their names as follows: Col 1b, Col 1c, Col 1d, Col 1e.




6. Select the first text layer associated with the first bullet point and change its name layer to Col 2a.
7. Select the next text layer and the remaining layers and change their names as follows: Col 2b, Col 2c, Col 2d, Col 2e.
8. Change the name of the Graphic Title Layer *Why I Deserve a Raise* to *Title*.

Bring up a One-Color Background

1. To turn on the background, go to the text bar at the top of the desktop and click once on the Background on/off button, which resembles a TV screen (FAK: F3)

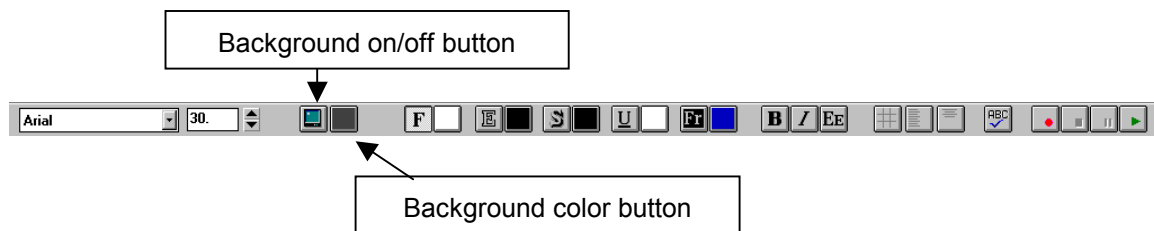


2. Then click once on the background color button directly to the right. This activates the Background Shader window.
3. Click on the color button in the Background Shader. Pick a color from the palette below. Right-click on the active color box to place the selected color in it. The background of the graphic will now change to your selected color.

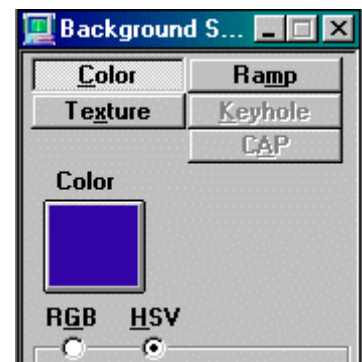

Change the Background to a Ramp.

1. From the Shader window, choose Ramp. You will see a four-cornered gradient to which you can apply separate colors plus a highlight.
2. Again, pick your colors from the palette below and right-click on each quadrant to drop in the selected colors in.


3. Check Hilite box. Set Value to 90 and right click this new color value to the active Hilite Color box.

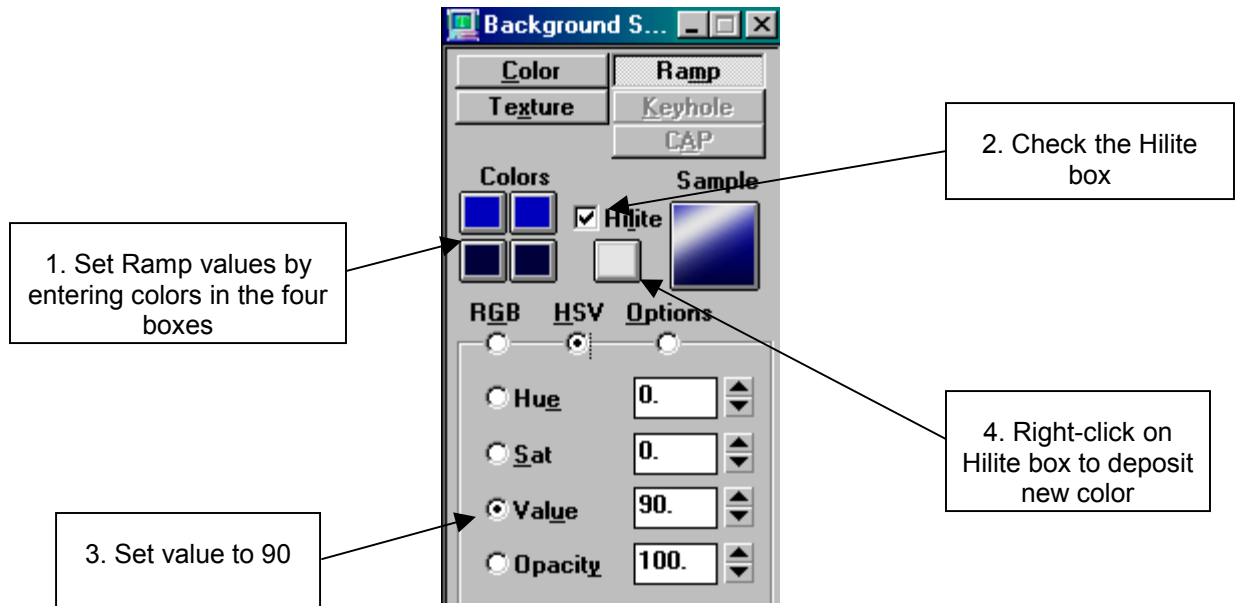


4. Click on Options. This will reveal a settings window to setup the highlight. Enter the following values:



- Size 60
- Angle 30
- H Offset -70
- V Offset 0


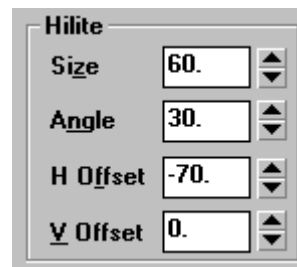


This will create an offset highlight to your graphic that should look something like this.

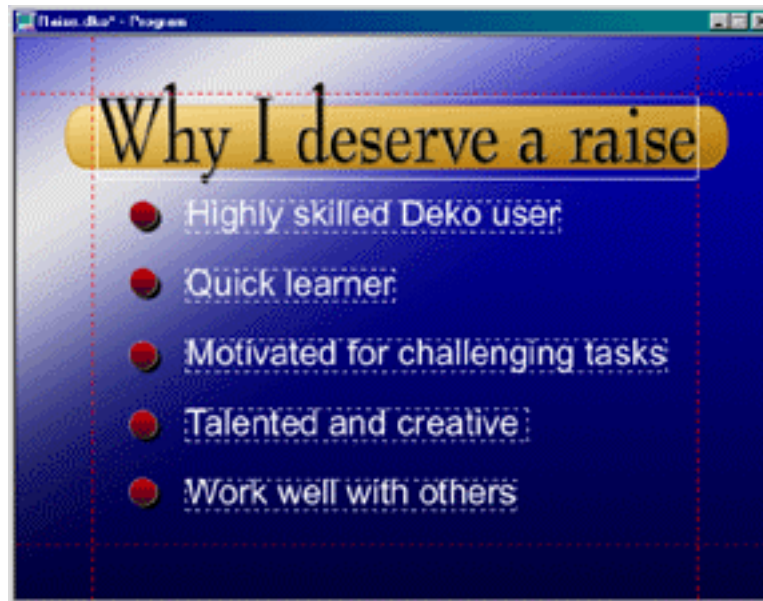

Change to a Texture File


1. Click on the Texture button to reveal the Texture dialog box in the Shader window.
2. Click the checkbox next to File name, and then click the Open button below the File Name box.

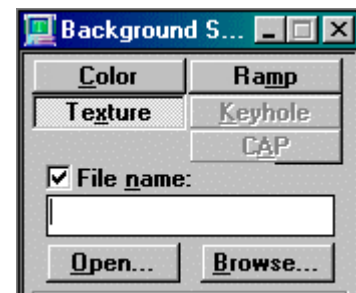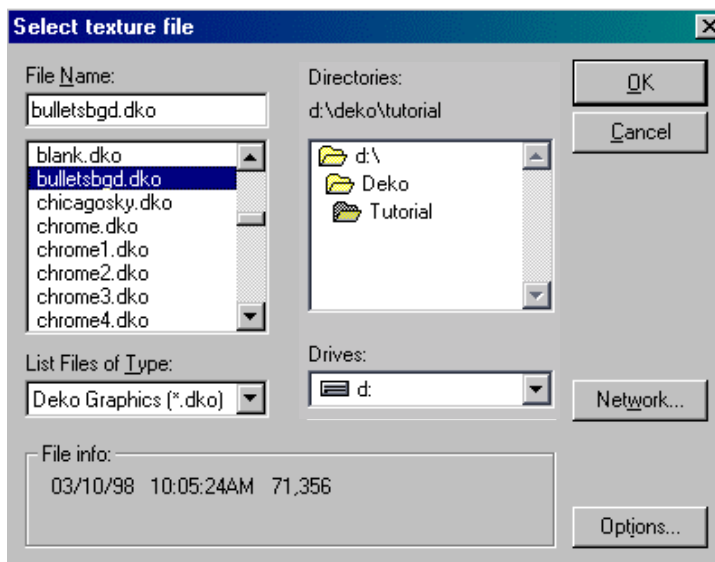


3. In the Scroll menu below File Name, scroll to the file `bullet.sbgd.dko` and click on it. Click OK. The file will be loaded into the background of the graphic. Alternately, you can click on the Browse button to open the Graphic browser and double-click on the graphic of your choice to load it into the background.

Save this File to Disk

1. Press F12 (SK) or Save File (FAK) to save the file to disk.

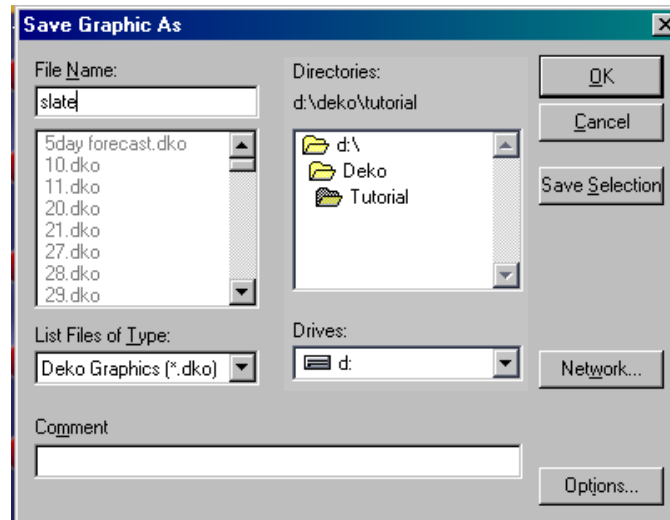

2. Enter the name `slate` into the Name field of the Save As dialog and click OK. The file will be saved as `slate.dko`.

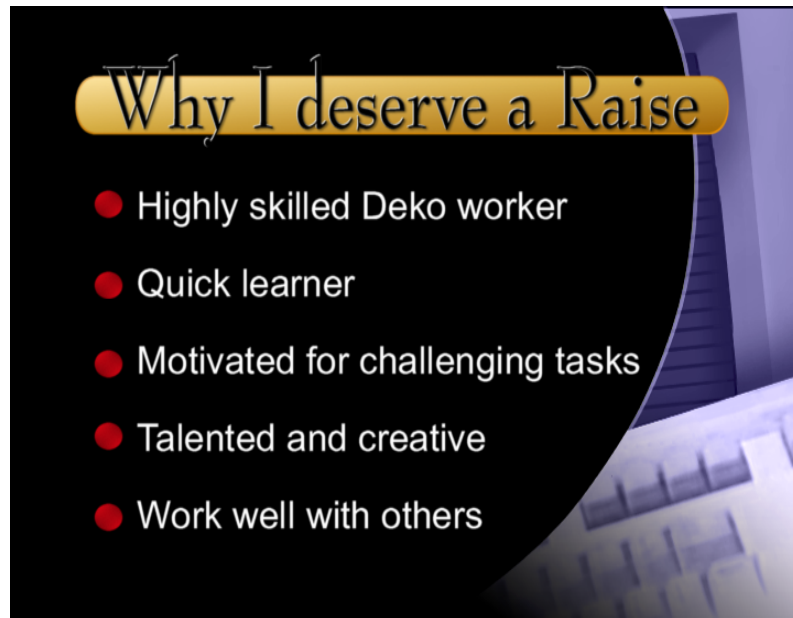

Your graphic should look something like this when complete.

Setting Tab Stops

Deko provides tab stop settings that can be applied to any layer. If a layer has tab stops applied, the bottom margin of the text layer will show indicators for tab positions. As you tab to a tab stop, a tab indicator will show in that position. Tab indicators will only show if they are set to show in the Preference menu. To verify this, go to Options > Preferences and click on the Markers tab. Check the Tab stops check box to show them in a layer.

Check Tab Stop on Markers tab of Preferences dialog to show tabs in text fields




Set Tabs

1. Position the cursor in the text layer where you wish to insert the tab stop.
2. Choose Tab Set from the Text menu (or Tab Set key on FAK) and select the type of tab from the drop-down menu. The choices are:


- Left
- Right
- Center
- Decimal

Use the keyboard shortcut Alt + T then type T for Tab Set and the underlined letter of your choice of tab. Left, Center, Right, Decimal

Alt + T then C to clear a tab
Alt + T then A to clear all tabs

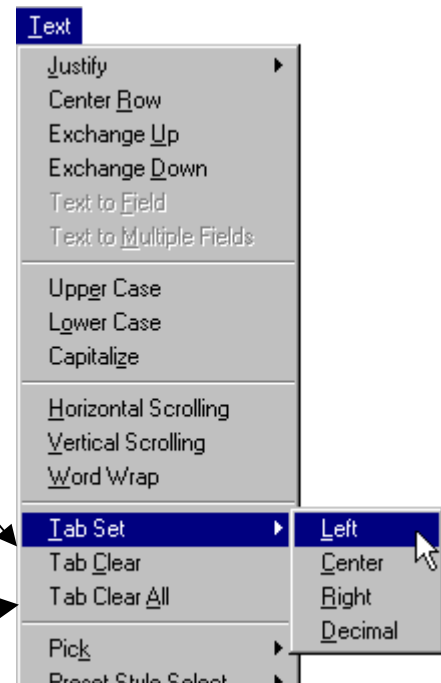

- When you press the Tab key to advance the cursor to a *tab stop*, a *tab marker* is displayed to the left of the first character at that tab stop.

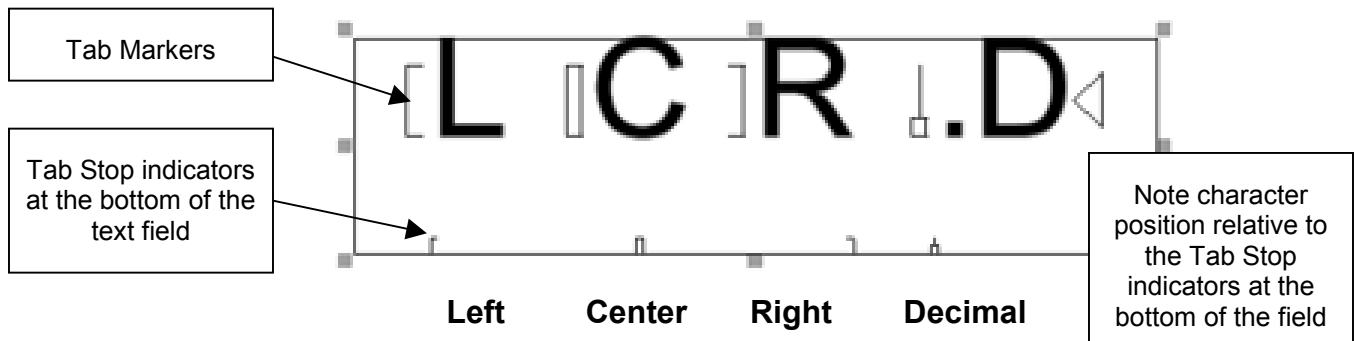

Note: Tab stops are saved as a text layer parameter within the layer. When you create a new layer, the tab stop settings of the last active layer will be copied to the new layer. When you clear the graphic window, all tabs will disappear with the contents of that graphic.

Note: Make sure Word wrap is *not* selected in layers that will contain Tab stops.

Finding a Tab Stop

- Tab stops for a column are located to the right of the last character typed in the previous column.
- For the first column, your tab stop can be located by hitting the home key.
- To confirm you are positioned on a tab, look to the bottom left of the status bar for the word “Tab”.

Moving a Tab Stop

- Position the cursor to the left of the Tab Stop.
- Select the Move tool (Ctrl + M).
- Hold Alt and use the right or left arrow keys to move the tab stop.
- Type Ctrl + Spacebar to toggle between Coarse and Fine movement.

Exercise: Working with Tabs

This sample exercise highlights the benefits of setting Tab stops inside of a text layer. For instance, Tabs are recommended when names and statistics for many players are displayed in a columnar order. If a player advances and moves ahead of his opponents, a Leaderboard provides fast and flexible access to change this order. Rows of information can be exchanged up or down, rapidly. And there is no restriction to style formatting. Any changes to style and position can also happen quickly. See the sample below.



| Name | Score | Location |
|------------------|-------|-------------------|
| Ruth Ferraro | 9.4 | Oakland, NJ |
| Eric Larson | 9.3 | Mountainview, CA |
| Jim Karpe | 9.0 | Brooklyn, NY |
| Teicia Ann Joffe | 9.0 | Elizabeth, NJ |
| Rob Rizzuto | 8.8 | Montvale, NJ |
| Joann Galinis | 8.5 | Lodi, NJ |
| Kevin Prince | 7.9 | Whoville, CT |
| Lou Garvin | .1 | Feeding Hills, MA |

To Exchange Rows of Content

1. Click in the Program window to set focus and open the sample file D:\Deko\Tutorial\training_leaderboard.dko.
2. Toggle the Insert key to enable Overwrite (OVR) mode. Look to the status bar at the bottom of the screen for OVR.

Note: Pressing the Insert key toggles between Overwrite (OVR) and Insert (INS) modes. The OVR mode must be set when updating Tab content. Typing in INS mode will re-arrange the Tab stops.

3. Press the Tab key and overwrite the existing content with new text. Get a feel for the speed of typing.
4. Set the cursor anywhere within a row of content you wish to exchange up. (Shift + ALT + up arrow) will exchange up the list, one row at a time. (Shift + ALT + down arrow) will exchange down the list, one row at a time.

To Select All Text at a Tab

1. Set the cursor anywhere within the desired Tab column.
2. Press Shift + Alt + T to select all the Tab's text.
3. Use this function for changing the font or look of text within a single Tab column. Once selected, left-click on any one of the eight Preset Styles.

To Locate and Modify Tab Position

To locate the Tab Stop in the first (left-most) Tab column, press the Home key. Look to the status bar for the word Tab.

To Locate the Tab Stop in any other Tab Column

1. Set the cursor to the right of the last character typed in the previous Tab column. Look to the status bar for the word Tab.
2. Set the cursor at a Tab Stop.
3. Enable the Move Tool (Ctrl + M). Hold the Alt key down and use the right or left arrows to reposition the Tab column.

Shortcut Keys

File Management

| | |
|----------------------|---------------------------------|
| Open File | F9; FAK: Read |
| Save File As | F12; FAK: Save File |
| Save File | Alt + F12; FAK: Alt + Save File |
| Open Graphic Browser | Ctrl + L; FAK: Browse Graphics |

Selecting Tools

| | |
|----------------------|--------------------------|
| Move tool | Ctrl + M; FAK: Move |
| Scale tool | Ctrl + W; FAK: Scale |
| Rotate/Skew tool | Ctrl + R; FAK: Rot/Skew |
| Kerning/Leading tool | Ctrl + K; FAK: Kern/Lead |
| Course/Fine movement | Ctrl + Spacebar |

Layer Controls

| | |
|-------------------------------|------------------------------|
| Bring to Front | Alt + (+) |
| Send to Back | Alt + (-) |
| Bring Forward one layer | Ctrl + (+) |
| Send Back one layer | Alt + (-) |
| Justify layers or text | Ctrl + Numeric Keypad |
| Clear Text from layer | Ctrl + Shift + T |
| Clear Layers | F8 |
| Clear All | Alt + F8; FAK: Clear Program |
| Move text cursor among layers | Tab |
| Select next/previous layer | Page Up/Page Down |
| Insert or Overwrite text | Insert (toggle) |
| View Layer Browser | Ctrl + Shift + L |

Lesson 6: Working With File Imports

Deko Graphics

As we learned in Lesson 4, Deko graphics are made up of one or more *layers* and a *background*. Layers can consist of text or shapes. Backgrounds consist of solid colors, *ramp shaders* or *textures*. With Deko, you can create *shapes* consisting of rectangles or ellipses. As you have already learned, you can also create complex *looks* that can be applied to fonts (font plus look equal style) and shapes.

If you wish to incorporate photographs or continuous tone graphic elements such as team logos or station IDs, you must *import* these elements into Deko from another application. Deko allows you to import graphic elements from a wide variety of sources. Typically, these elements would be created in application such as Adobe Photoshop, and saved into a *file format* that can be read by Deko.

Deko can use these imported files to supply the background to a graphic, or to supply texture fills to any font or shape with a Texture Shader. In Lesson 7, you will also learn how to import graphics to create a *Custom Typeface*, which allows you treat graphic elements as characters in a typeface. This is an ideal way of handling graphics consisting of frequently used logos or IDs.

Computer Graphics

While Deko graphics in their native state are saved as `.dko` files, the Deko application supports a wide variety of widely used graphic formats.

There are two broad classes of still graphics: *bitmapped* graphics and *vector* graphics.

Bitmapped Graphics

Bitmapped graphics are made up of individual *bits* of picture information or *pixels* (picture elements). The graphic consists of a computer *map* of these bits that is re-created pixel for pixel when displayed or printed. Paint applications such as Photoshop create bitmapped graphics. A bitmap is an array of pixels (picture elements) mapped in an X Y grid. The dimensions of a bitmap frame for television are 720 pixels x 486 pixels (NTSC) or 720 pixels x 586 pixels (PAL). Each pixel is assigned enough bits of information to represent the RGB color values for that element. In digital television each pixel receives 8 bits of information for each color (Red Green and Blue) for a total of 24 bits per pixel. That works out to 8,398,080 bits of information for one video graphic frame.

Vector Graphics

Vector Graphics are made up of geometrical formulas to represent image content rather than an array of bits (bitmap). Vector graphics are more flexible than bit maps because they can be resized and stretched. Vector graphics do not need as many bits to store information for graphic creation than a bitmap because shapes are determined by a formula rather than a bit for bit reproduction. Deko is a vector graphic application. It treats imported bitmaps as geometric objects within the graphic. Imported graphics fill the background or fill shapes as applied *textures*.

Alpha Channels (Key Channels)

An important aspect of Graphic files used with Deko is the inclusion of an alpha channel, also called a key channel. In addition carrying the RGB values Graphics can contain additional information carried in an *alpha channel*. This alpha channel carries gray-scale information that can be used to mask or hide part of the graphic.

As we can see below, example A shows a graphic image. Example B shows the alpha (mask) channel. When the mask is combined with the photo as in example C, the muted color area will be cut from the image when it is displayed within Deko as shown in D.



Example A



Example B



Example C



Example D

A Paint application such as Photoshop is required to create an alpha channel.

Note: other terms for *alpha channel* include: *bicon*, *picon*, *key* and *alpha mask*.

File Formats

There are many file formats used in computer graphic applications today. As we said earlier, Deko saves graphics as .dco files. Photoshop saves files as a .psd extension in their native form. However, Photoshop can accept a wide variety of formats and save them as native .psd or convert them into other formats. Deko can accept many graphic formats. If you need to carry an Alpha channel with the graphic, you must save your graphic as a .tga (Targa) or .tif (TIFF) file format.

Targa® Files

.tga – The TGA (Targa®) format is designed for systems using the Truevision video board and is commonly supported by MS-DOS color applications. The Targa format supports 32-bit RGB files with a single alpha channel, and indexed-color, grayscale, and 16-bit and 24-bit RGB files without alpha channels. When saving an RGB image in this format, you can choose a pixel depth.

TIFF Files

.tif – Tag Image File Format (TIFF) is the most versatile scheme for storing photo-realistic bit-mapped data and the most reliable for ensuring that image and tonal values are faithfully imported by the importing application. TIFF files are supported across Macintosh, Windows and other imaging platforms. TIFF is a flexible bitmap image format supported by virtually all paint, image-editing, and page-layout applications. Also, virtually all desktop scanners can produce TIFF images. In addition to other formats for print applications, the TIFF format supports RGB and grayscale files with alpha channels, and Bitmap files without alpha channels. TIFF also supports LZW (lossless) compression.

Other File Formats

Deko can read other formats besides TIFF and Targa files. Not all formats can carry alpha channels. Deko cannot read the alpha channels of other file formats (except Pinnacle .g files). If have a file saved in an other format and need to use an existing alpha channel or create a new one, bring the image into a paint program and save the file with the alpha channel as a TIFF or Targa file.

Below are some other popular file formats:

.bmp – (BitMaP) is the standard Windows image format on DOS and Windows-compatible computers. Bitmapped graphics are large in comparison to gifs or jpegs due to the fact that they contain a map of every pixel on the screen and they are not compressed. The BMP format supports RGB, indexed-color, grayscale, and Bitmap color modes but not support alpha channels.

.gif – Graphics Interchange Format (GIF) is the file format commonly used to display indexed-color graphics and images in documents over the World Wide Web and other online services. GIF is an LZW-compressed (see compression below) format designed to minimize file size and electronic transfer time. The maximum compression available with a GIF depends on image content. Graphic images with limited flat colors will compress well—sometimes even down to one tenth of the original file size—while a complex, non-repetitive image will fare worse, perhaps only saving 20% or so. GIF files are limited to a palette of 256 colors or less. The GIF format does not support alpha channels.

Note: Deko cannot read .gif files. Translate them first to a compatible format.

.g – Pinnacle .g files are used as the native file format for *Lightning* still stores and *Thunder* clip servers. The .g format is a good choice for import if your facility has integrated Deko with these products. .g files are already formatted to NTSC or PAL resolution. They also carry an alpha channel readable by Deko.

.jpg – Joint Photographic Experts Group (JPEG). JPEG is a lossy compression method. In other words, to save space it just throws away parts of an image. Lossy compression methods can generate *artifacts*—unwanted effects such as false color and blockiness—if not used carefully. JPEG compression provides the best results with continuous-tone images, such as photographs. A JPEG image is automatically decompressed when opened. A higher level of compression results in lower image quality, and a lower level of compression results in better image quality. In most cases, the Maximum quality option produces a result indistinguishable from the original. The JPEG format supports RGB, and grayscale color modes, and does not support alpha channels.

.pct – PICT format (Macintosh Picture) – supports a mixture of bitmapped and vector oriented data that is encoded in the Mac’s native QuickDraw language. This is the most generic file format for the Macintosh, widely used among graphics and page-layout applications as an intermediary file format for transferring files between applications. The PICT format supports RGB files with a single alpha channel, and indexed-color, grayscale, and bitmap files without alpha channels. The PICT format is especially effective at compressing images with large areas of solid color. This compression can be dramatic for alpha channels with their large areas of white and black.

Note: Deko will not see alpha channels saved in the .pct format.

.png – Portable Network Graphics (PNG), developed as a patent-free alternative to GIF, the PNG format is used for lossless compression and display of images on the World Wide Web. Unlike GIF, PNG supports 24-bit images and produces background transparency without jagged edges. The PNG format supports grayscale and RGB color modes with a single alpha channel, and bitmap and indexed-color modes without alpha channels.

Note: Deko will not see alpha channels saved in the .png format.

.pcx – a graphics file format for programs running on PCs, its supported by most scanners, and desktop publishing programs. The PCX format supports RGB, indexed-color, grayscale, and Bitmap color modes, and does not support alpha channels. Images can be saved with 1, 4, 8, or 24 bits per pixel (bit depth).

.wmf – Windows Metafile Format, a graphics file format used to store vector and bitmap data in memory and on hard drives for later playback to an output device. Though native to Microsoft Windows, several non-Windows applications support this format as a means exchanging data with Windows applications. WMF supports up to 24-bit images

File Compression

Many image file formats use compression techniques to reduce the storage space required by bitmap image data. Compression techniques are distinguished by whether they remove detail and color from the image. Lossless techniques compress image data without removing detail; lossy techniques compress images by removing detail. The following are commonly used compression techniques:

- Run Length Encoding (RLE) is a lossless compression technique supported by the Photoshop and TIFF file formats and some common Windows file formats.
- Lempel-Zif-Welch (LZW) is a lossless compression technique supported by TIFF, PDF, GIF, and PostScript language file formats. This technique is most useful in compressing images that contain large areas of single color, such as screenshots or simple paint images.
- Joint Photographic Experts Group (JPEG) is a lossy compression technique supported by JPEG, PDF, and PostScript language file formats. JPEG compression provides the best results with continuous-tone images, such as photographs.
- CCITT encoding is a family of lossless compression techniques for black-and-white images that is supported by the PDF and PostScript language file formats. (CCITT is an abbreviation for the French spelling of International Telegraph and Telecommunications Consultive Committee.)
- ZIP encoding is a lossless compression technique supported by the PDF file format. Like LZW, ZIP compression is most effective for images that contain large areas of single color.


Aspect Ratio and Graphic Size

Square vs. Rectangular Pixels

All Windows- and Macintosh-based computer systems use square pixels to create bitmapped images. A common frame sized used in multimedia applications has a screen area of 640 x 480 pixels. This 4 x 3 aspect ratio (the ratio of screen width to screen height) mirrors the aspect ratio of a television system at very close to the same resolution.

Both PAL and NTSC television systems use rectangular pixels. In NTSC the aspect ratio is 4 x 3 as well, however, this aspect ratio has a pixel dimension of 720 x 486 pixels.


If you create a graphic sized at 640 x 480 (Example 1) on a computer graphics system, and display it on a video output. The image will not fill the screen correctly and will be geometrically distorted because the square pixels from the computer output will be squeezed into rectangular shapes making objects appear slightly thinner and taller than they actually are. This is especially noticeable with symmetrical shapes such as circles and squares.

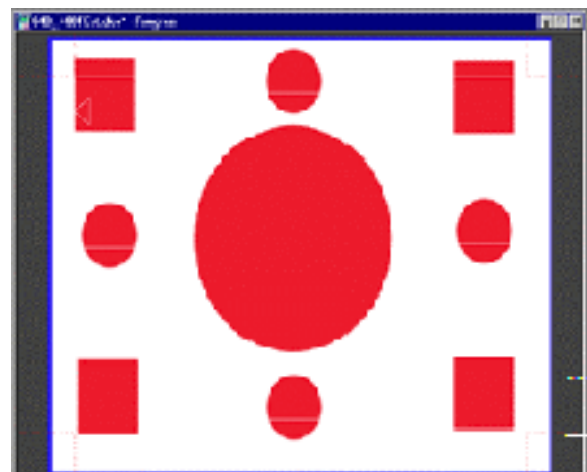

Example 1

If you create an image on a computer program with an image size of 720 x 486 (Example 2), and bring display it on a video output, the image will fill the screen but will still be geometrically distorted because the square pixels from the computer output will be squeezed into rectangular shapes.

Deko has the ability to resize imported graphics, so creating an image of the correct aspect ratio on the computer is most important. You can make an image saved at 640 x 480 look right. However to gain the best looking output we recommend the following practice.

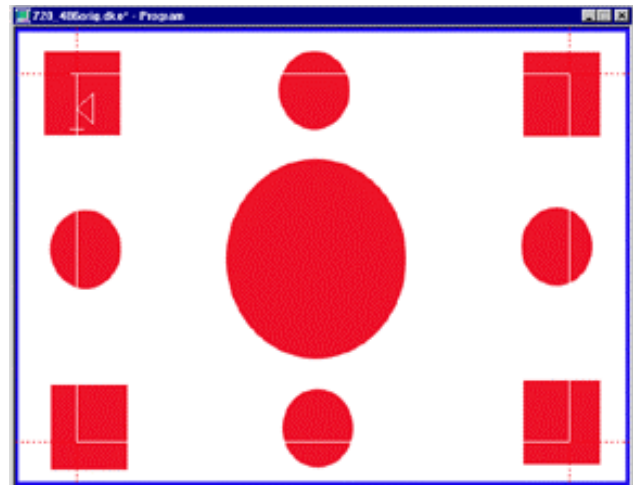


Example 2

Recommended Practice

4 x 3 Images

When making 4 x 3 images with Photoshop or other square pixel paint program, make your image size 720 x 540. This is a 4 x 3 aspect ratio in square pixels. Just before you are ready to export your file to Deko, resize the image to 720 x 486 and save the image as a .tga file or a .tif file. Use 486 because our video buffers are exactly 486 lines tall. The resized image will appear geometrically distorted on your computer monitor. However when you import the image to Deko it will display correctly.

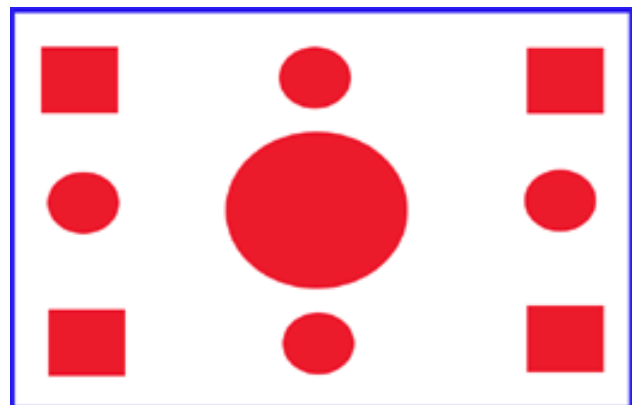


Resized Box will appear distorted with objects shorter and wider than normal

Note: Before you resize the image make sure you save a copy of the image at 720 x 540 so you can work in a geometrically correct image if you need to edit the file.

16 x 9 Images

When making 16x9 images, work in 864 pixels by 486 lines, and then scale down to 720 x 486 before saving the .tga file. By using the 864 pixel-count, you have an image that is in the 16 x 9 aspect ratio, and you are scaling down before saving. Do not use a 720 x 405 image because you would have to scale up when changing to video resolution, thus reducing image quality.

Bringing Images Into Deko

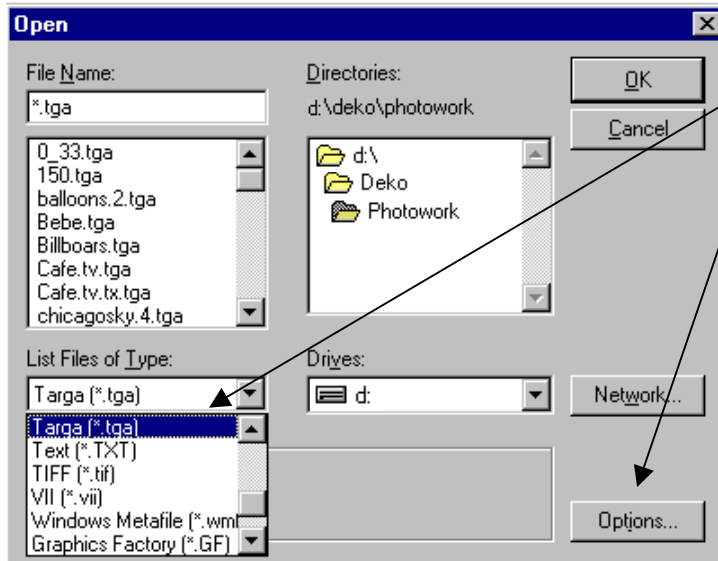


When you wish to import an image into Deko, use the File Open dialog box, and select the file format from the List Files of Type menu.

If you are unsure of the aspect ratio settings, click on the options button. This reveals the File Open Options dialog box.

The top section of this dialog box provides Image size information represented in Horizontal and Vertical Pixels.

The Bottom *How to format:* section gives you four choices on how to bring the image into Deko. The Choices are:

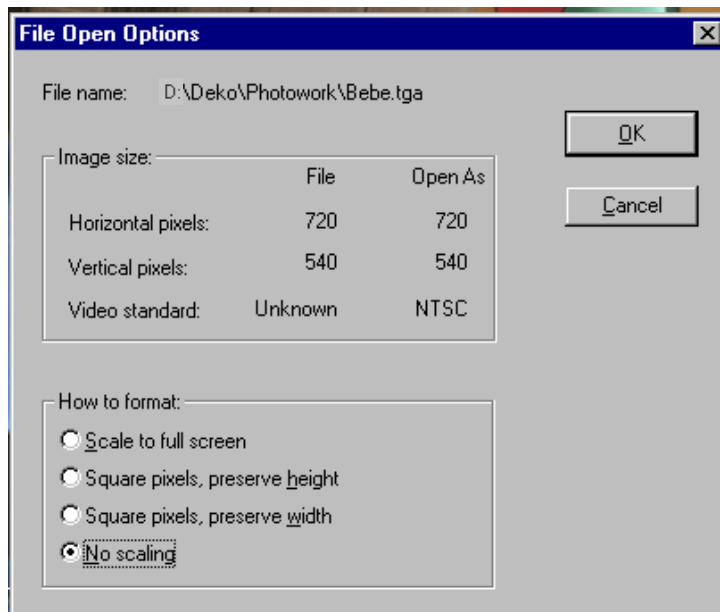

- Scale to full screen – (recommended) use this choice if the original image is already scaled to the correct aspect ratio. 640 x 480 or 720 x 540 will scale correctly at this setting. If you followed the recommended practice the image will look correct as well.
- Square pixels, preserve height – This setting will preserve the vertical dimension setting of the image and stretch or shrink the horizontal dimension to fill the frame.
- Square pixels preserve width – This setting will preserve the horizontal dimension setting and stretch or shrink the vertical dimension to fill the frame.

- No scaling – Use this setting if you do not want any resizing of the image. If you followed the described recommended practice just discussed, this setting will work as well.


Exercise – Creating an OTS Graphic

Very often, the Over-The-Shoulder (OTS) graphic both with and without text is stored either in a paint system or in a still store device. If these systems are networked to the Deko, the graphic file can be loaded up as a background, altered, and then stored back out to the remote hard drive.

In this exercise you will open an OTS background with a rectangle left blank for a graphic insertion. You will then insert the graphic and add a caption. Finally you will save the completed graphic as a Targa file so it can be used with an external still store.


Open Background

1. Select the Style edit layout (Alt+F11)
2. Activate the Program window. If a graphic already exists, clear the window.
3. Press F9 (SK) or Clear + Read (FAK) to open the Open File dialog box.
4. Select Targa (*.tga) from List of File types.
5. Select the file `ots.tga` and click open.

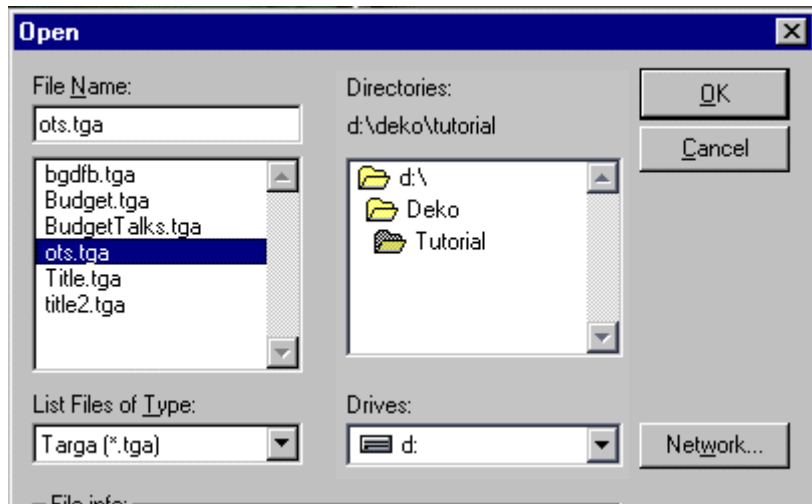


The background image will open in the program window. Notice the black rectangle in the upper left corner of the graphic. This is where we will put our graphic.



Notice black rectangle.
This is where we will
insert our graphic.

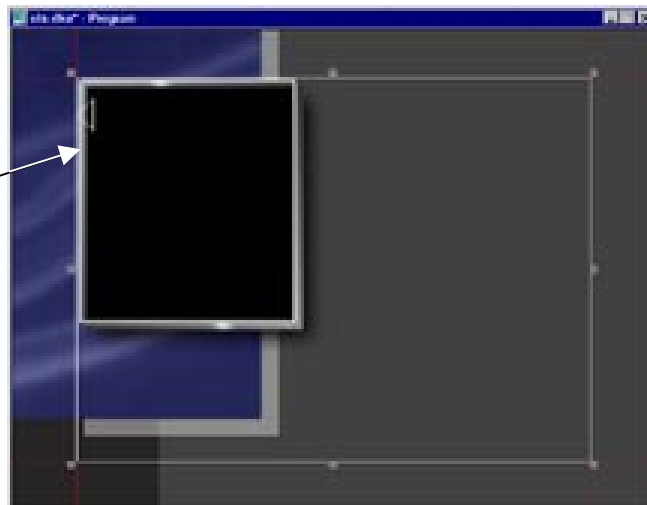

Insert Graphic



1. Delete the default text layer.
2. Select Preset Style 8.
3. Select the Move tool, and then select the Rectangle Shape tool 

4. Draw a rectangle to outline the shape of the black rectangle.
5. On the Style window, click the Look button and make sure the Look is defined by a face detail only.

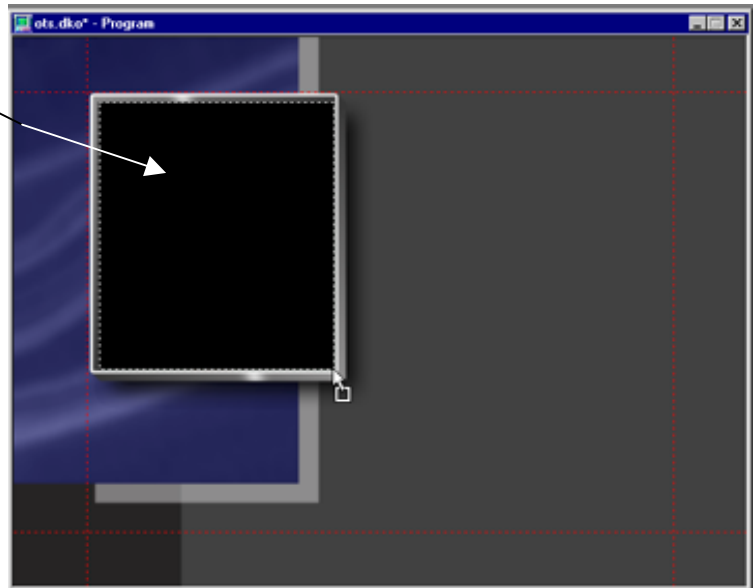
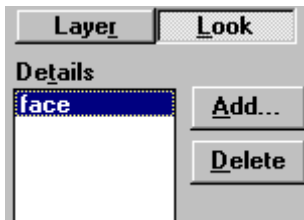


6. On the Face Shader window, click Texture.
7. Click Open. When the Select texture file dialog box appears, select budget . tga from the list, and click Open.

Note: You should be in the Deko/Tutorial directory with Targa (*.tga) chosen in List Files of Type.

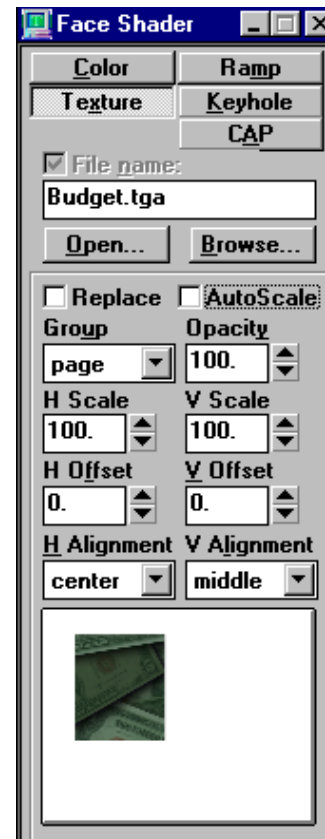
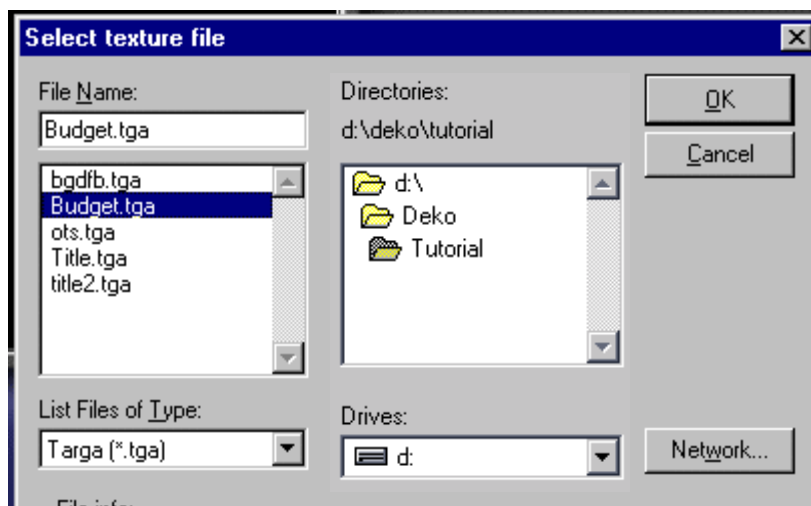


8. Click OK.
9. On the Face Shader window set Group to *page*.
10. Notice the sample in the texture window that shows a small visual of your imported graphic. The graphic has been pre-sized to fit within the OTS window. Your background should now look like this.

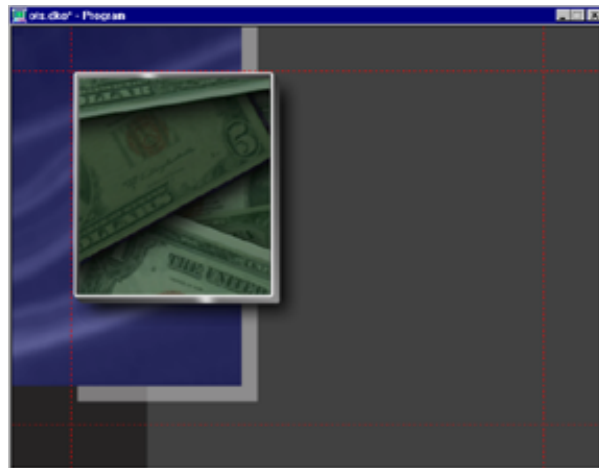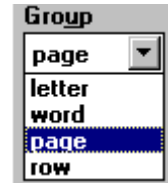

Define a Text Layer and Add a Caption

1. Select the Text Layer tool.
2. Draw a text layer under the graphic rectangle.
3. Select a preset style from the Preset Style palette or define a new style.
4. Select Layer from the Text window and check Shrink to fit box in the Auto-scaling section.

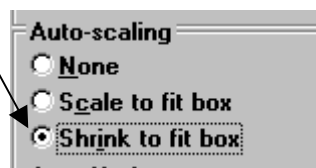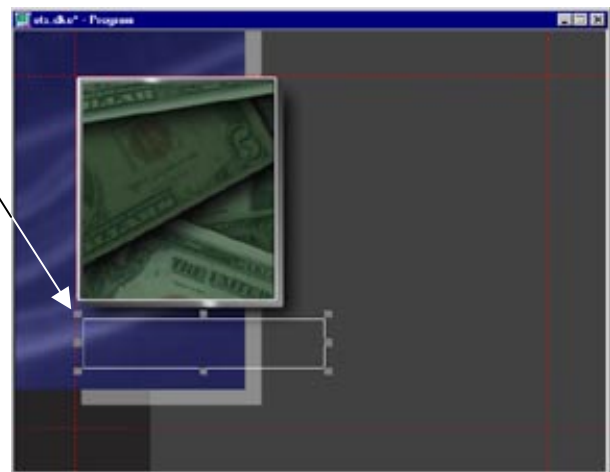


Type the title Budget Talks into the text layer.



Save Graphic as a Targa File for Export



1. Press Save File (FAK) or F12 (SK). The Save Graphic As dialog box opens.
2. Check to make sure Targa (*.tga) is selected in List Files of Type.
3. Type budgettalks for a title and click OK. The graphic will be saved as a Targa file that can be exported to still stores and other devices.

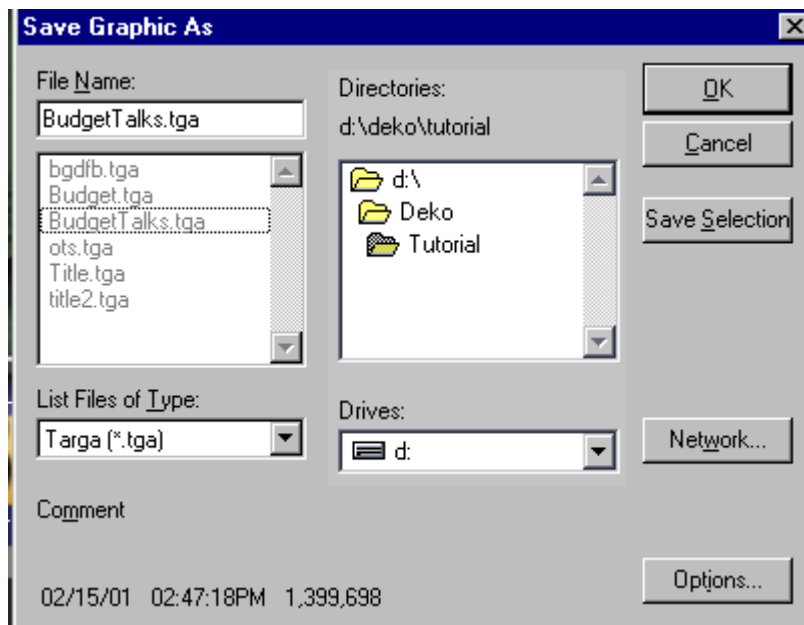




Exercise – Creating a Lower-third with a “Sticky” Texture


In lesson 5 we created a series of lower-third graphics with a background. Sometimes it is desirable to reposition this background in the frame. We refer to this effect as a *sticky texture*. In this exercise you will use the elements from the lower-third lesson to create a sticky texture lower third.

1. Set focus on the Program window and open `title1.dko`.
2. Click on the Background Shader button to turn the background off. The text layers will appear without the background.
3. Select the Rectangle Shape tool and draw a rectangle over the lower third of the graphic.

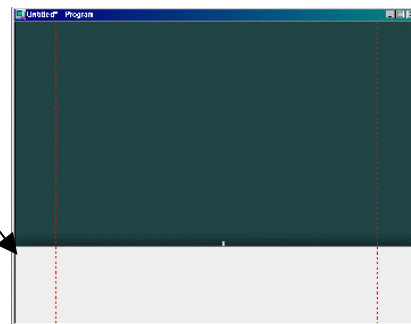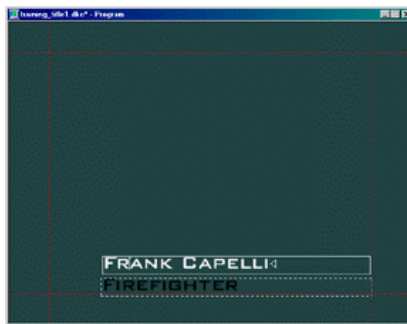


4. Click on the Look button in the Style window and delete any details other than face.
5. Set focus on the Face Shader. Click on the Texture button and open `title.tga`. The lower-third background should appear in the rectangle window in front of your two text layers.
6. Set focus on the Program window and select the rectangle texture layer.
7. Press `Ctrl+ (-)` twice to move the texture behind your text layers.
8. In the Face Shader window under Group, choose letter. When letter is selected, your background graphic should disappear in the window.

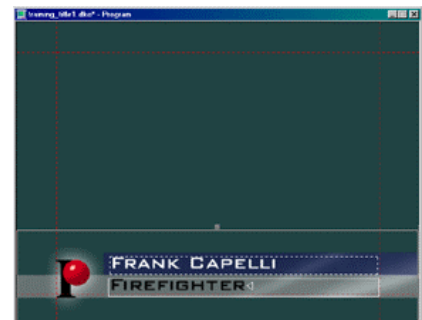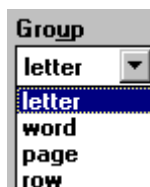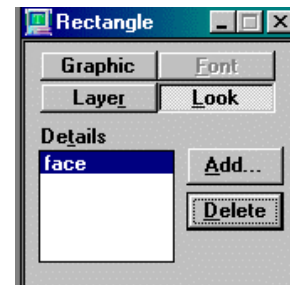

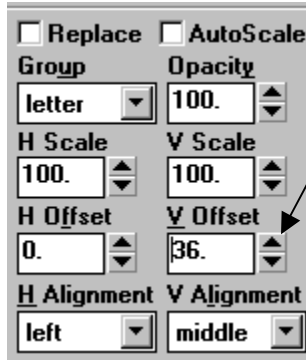

9. Click on the up arrow in the window next to V Offset to allow the vertical offset numbers to advance. Release the keys periodically to see if you can see the graphic begin to appear in the window. Advance the numbers to about 34. Adjust to fine tune the position of the background correctly under the text layer.
10. The background is now a texture in the rectangle layer that can be positioned like any other object in the graphic. Select all of the layers (Shift + Ctrl + L).
11. Select the Move tool and reposition the layers in the graphic (Alt+ Up Arrow key). The background element will move with the text layers.

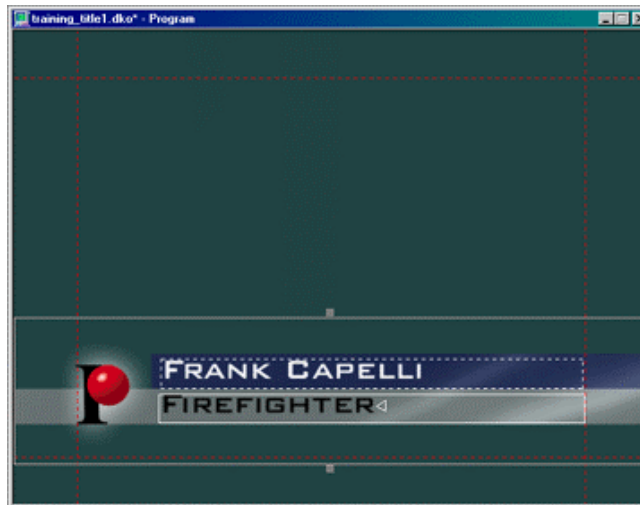

Chyron Import

The Chyron Import option gives you the ability to read Chyron Infnit family files and work with them in the Deko environment. The members of the Infinite family include Maxine, Max, Winfnit, and Infnit. These files come in two flavors:

Message


Message directories contain message and RGBA (RGB plus Alpha Channel) files that Deko can read into a Program or Preview window. These files usually refer to fonts, which you can associate with True Type fonts for viewing and editing within Deko.

Machine

Machine directories contain logo font files that Deko can convert into Deko custom typeface (.fac) files.

To Open the Chyron Import Window:

1. Insert the Chyron disk into the appropriate drive and close the drive door.
2. Activate a Program or Preview window.

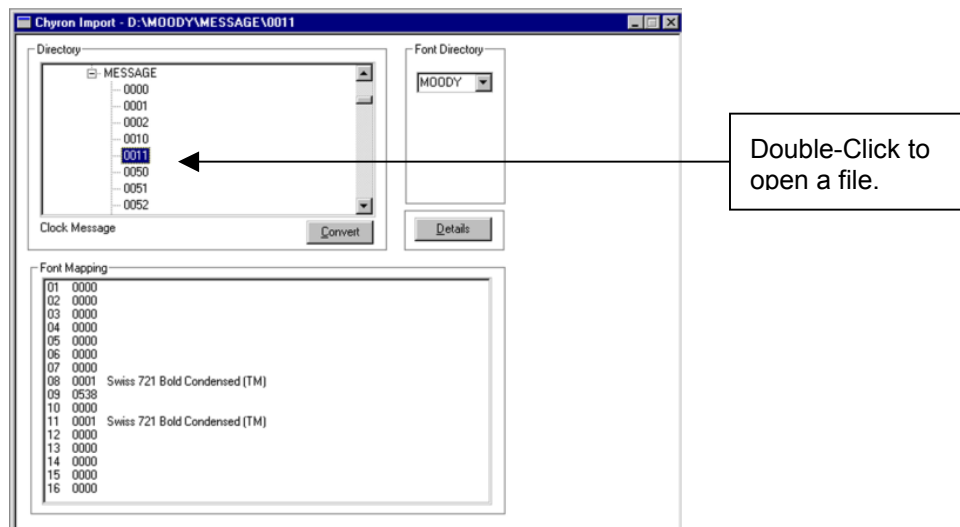

3. Go to View > Chyron import.


To Import a Chyron Message File:

1. Open the Chyron Import window.
2. Navigate to the drive and directory that contain the message file.
3. Double-click the file name to open the file in the active Program window.


Note: Once you have imported a Chyron message file, you can save it as a Deko (.dko) file. The sample file, Chyron2.dko, is a Chyron message file with logo fonts that was saved as a .dko file.

To Map a Chyron Bitmap Font onto a TrueType Font:

1. Open the Chyron Import window.
2. Navigate to the drive and directory that contain the message file.
3. Click the file name to open its Font Mapping list in the window.

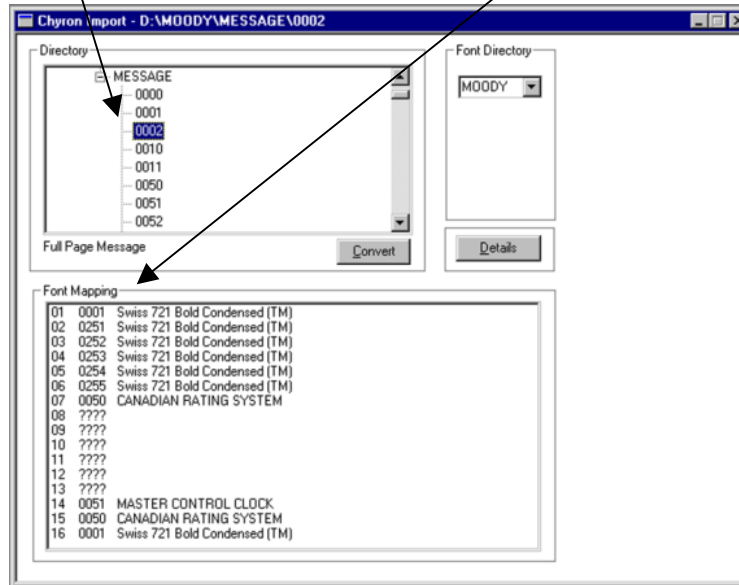


4. Double-click an item in the Font Mapping list to open the list of available TrueType fonts.
5. Select a TrueType font, and then click Accept to add the font to the mapping file for the current Deko session.

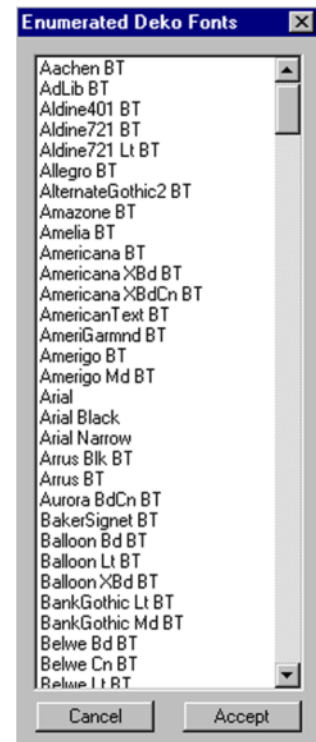


To Save the Current Font Mapping File for Future Deko Sessions:

1. In the Chyron Import window, click Details. The Chyron Import Details dialog box appears.

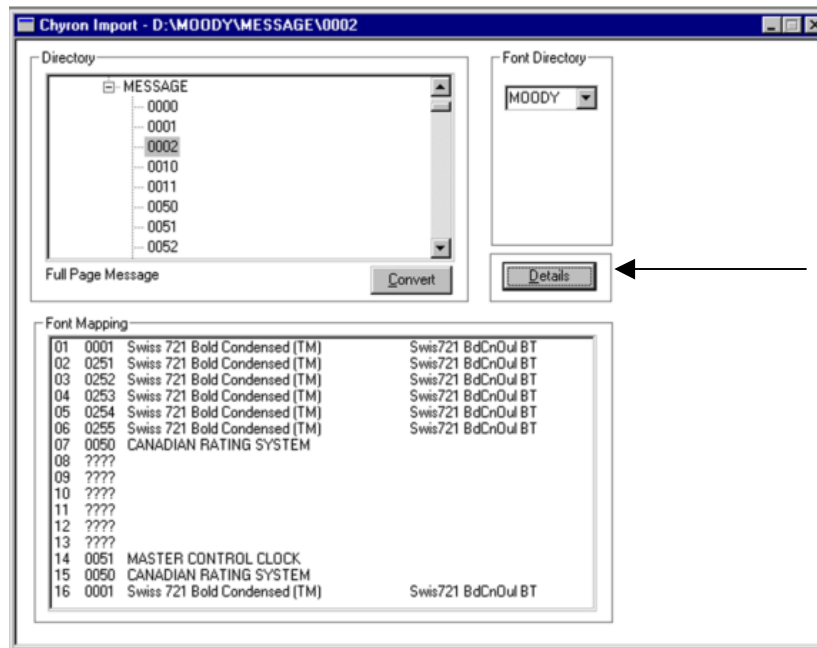


2. Click Save. The Save As dialog box appears.

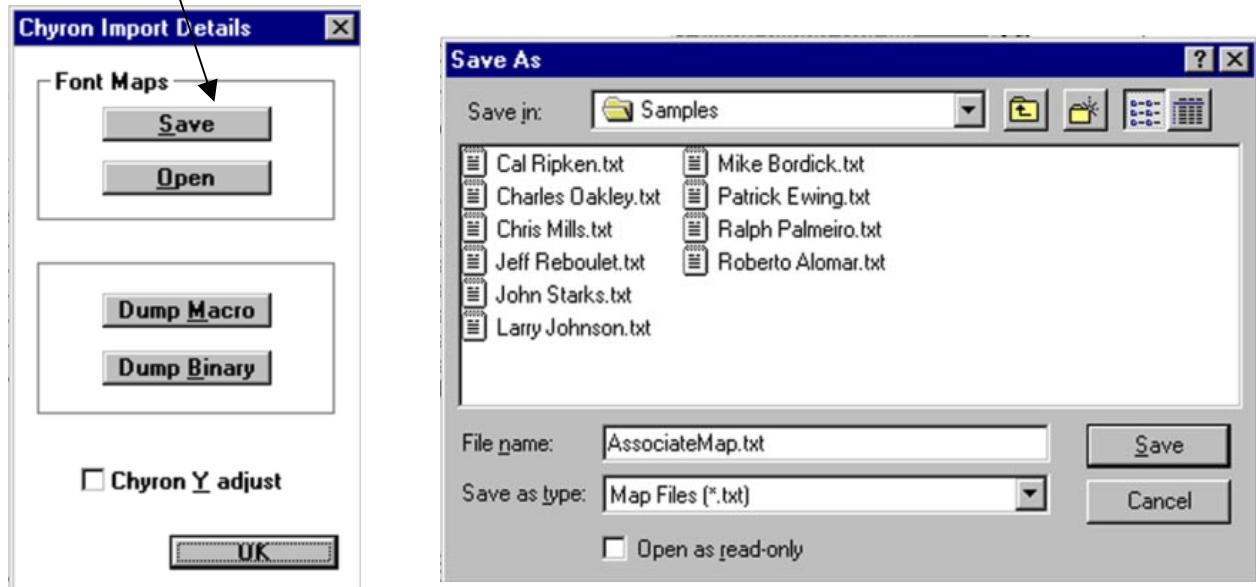


3. Enter a name for the mapping file in the File name: field, and then click Save. The Save As dialog box disappears.
4. Click OK in the Chyron Import Details dialog box or press Enter. Deko saves the font mapping file as a text (.txt) file.

To Open a Font Mapping File:

1. In the Chyron Import window, click Details. The Chyron Import Details dialog box appears.

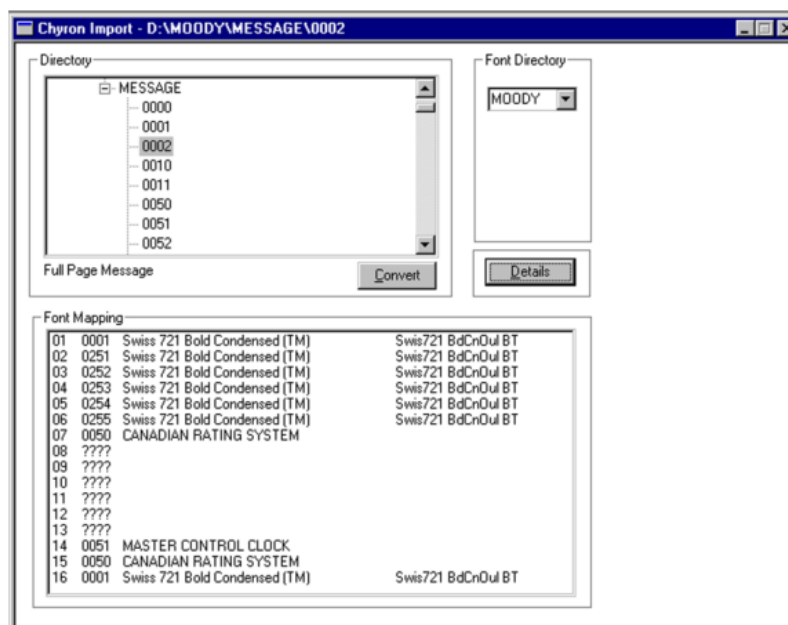


2. In the Chyron Import Details dialog box, click Open, and then navigate to the mapping file.

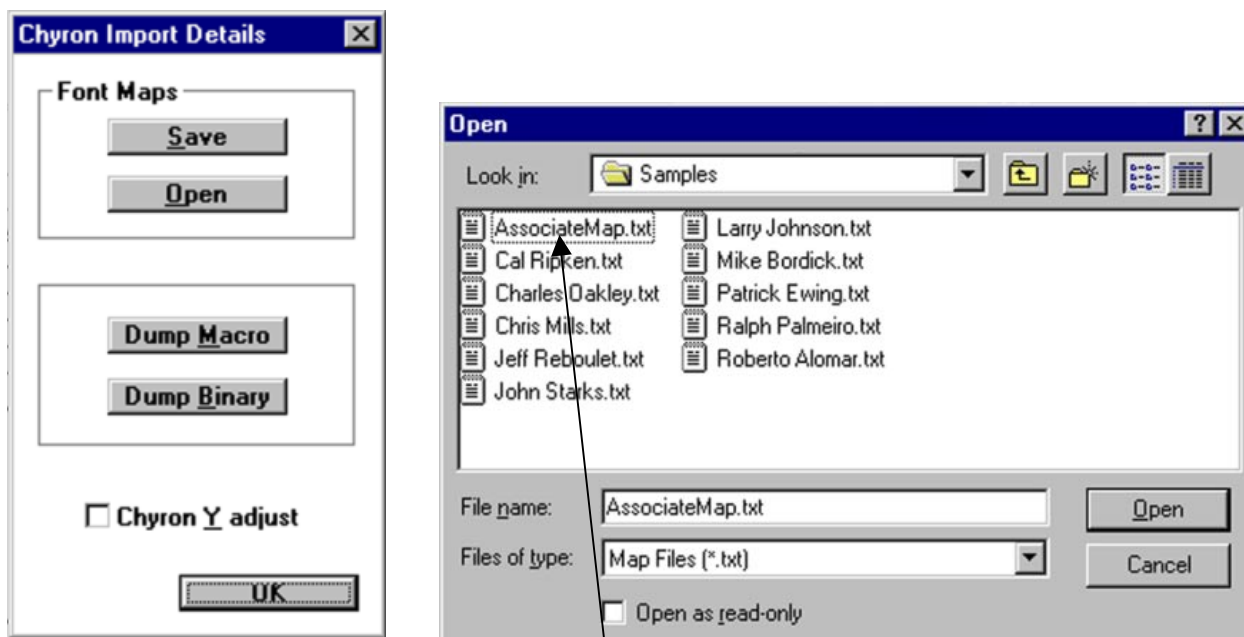


3. In the Open dialog box, double-click the file name, or select it and click Open.
4. Click OK in the Chyron Import Details dialog box or press Enter.

To Convert a Chyron Logo Font into a Custom Typeface:

1. Open the Chyron Import window.
2. Navigate to the drive and directory that contain the machine file.
Note that the file description appears.

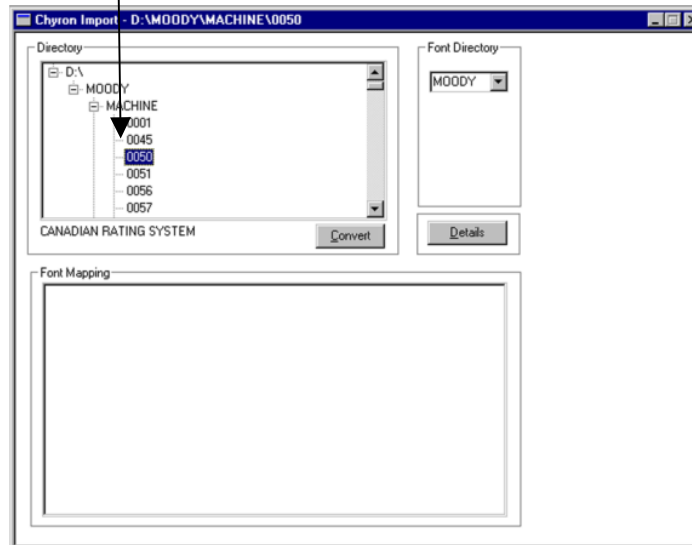

3. Double-click the file name to open and import the file into a Custom Typeface window.

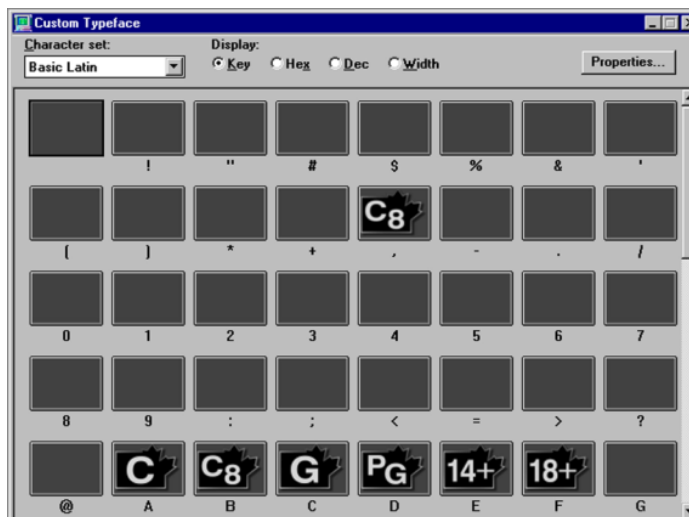

4. Go to File > Save Custom Typeface As.
5. Navigate to the drive and directory where you will store the file.
6. Type a new file name in the File Name field, then click OK or press Enter.

Note: the sample file, 28SharkElements . fac, is a custom typeface converted from a Chyron logo font.


Lesson 7: Creating and Using Custom Typefaces

Custom Typefaces



Custom Typefaces allow you to save graphic IDs, logos and other graphic content to a typeface font for quick access and recovery. Creating a custom typeface is an easy process. Once a typeface is created, you can access the typeface elements as you would a regular typeface or font.

Creating Custom Typefaces

1. Go to View > Custom Typeface. The Custom Typeface window appears.

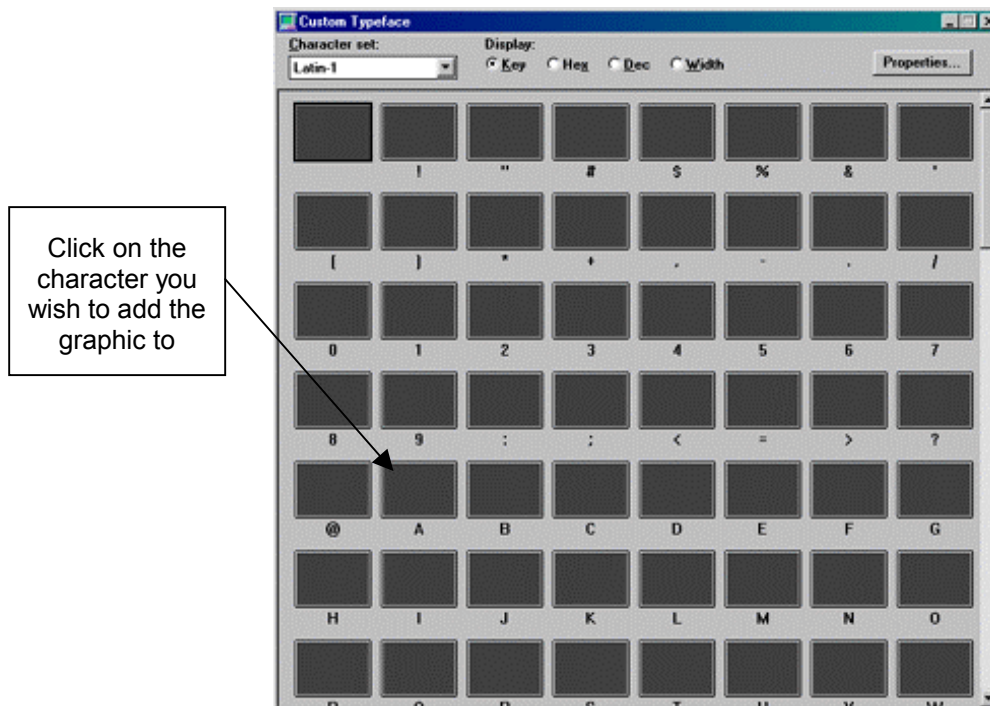


2. Activate the Program window and open the first graphic you wish to import as a character. You can do this quickly from the graphic browser by double clicking on the selected graphic.
3. Activate the Custom Typeface Window and click on the character to which you wish to import the graphic.
4. Go to File > Import Character. The graphic will appear on the selected character.

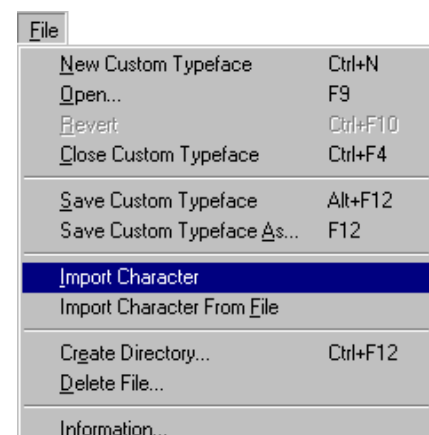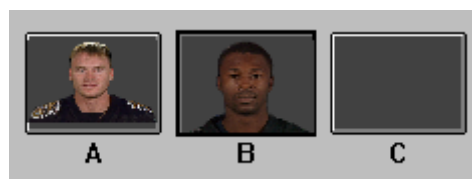

5. Repeat steps 2 through 4 until all desired graphics are imported.
6. Activate the Custom typeface window. Press Save File (FAK) or F12 (SK) and type in the name of the custom typeface.

Alternate Method


1. Go to View > Custom Typeface.
2. Click on the character into which you wish to import the graphic.
3. Go to File > Import Character From File. The Import graphic into the selected character to dialog box appears.
4. Browse to the file directory and select the desired file, then click OK.
5. Repeat Steps 2 through 4 until all graphics are selected.
6. Activate the Custom Typeface window. Press Save File on the FAK and type the name of the custom typeface.

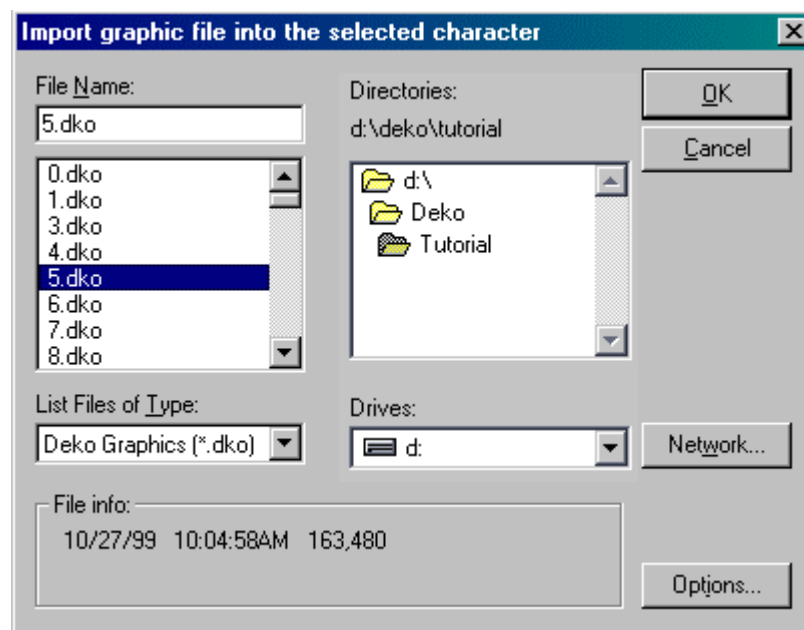

Exercise – Build a Weather Graphic


Assembling a weather graphic typically requires the import of symbols (or logos) that were designed on some other application. The method by which these symbols are imported can vary. Traditionally, files are transferred from one device to another via floppy or Zip. Deko can accommodate both. A faster approach is to transfer via network connection.

The following will step you through logo import, using a Custom Typeface and assembling a typical weather graphic. See the finished sample below.


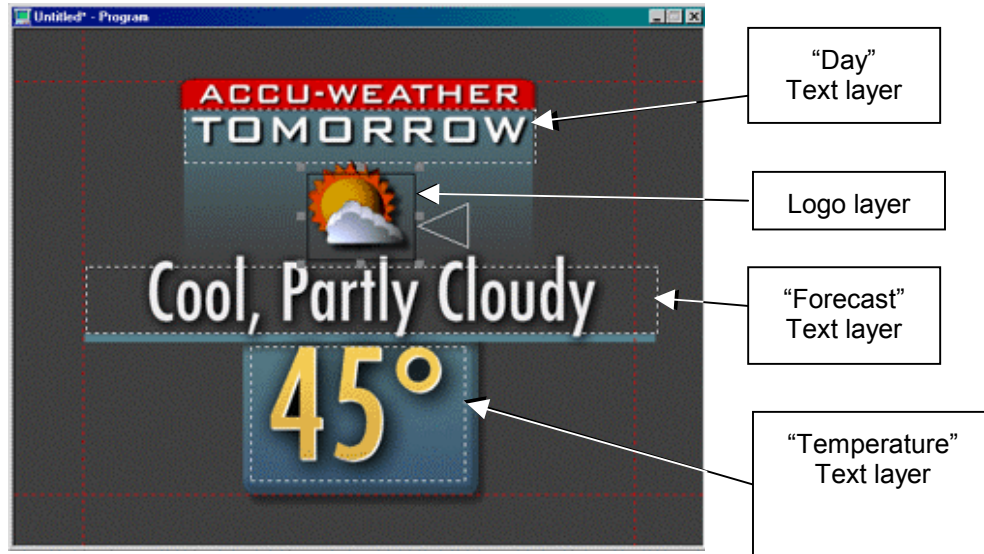


Import Weather Logos

1. Select the Style Edit layout.
2. Go to View > Custom Typeface. The Custom Typeface window will open
3. Set focus to the Program window. Open (Clear + Read) the sample graphic `wx_partlycloudy.tif`. To do this you will need to set *List Files of Type* to *TIFF*.
4. Set focus to the Custom Typeface window and click on character A.

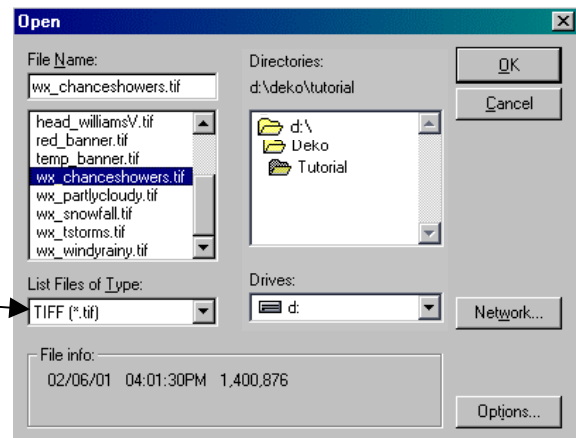

- Go to File > Import Character (Alt + F > I).
The logo should display in the A position.

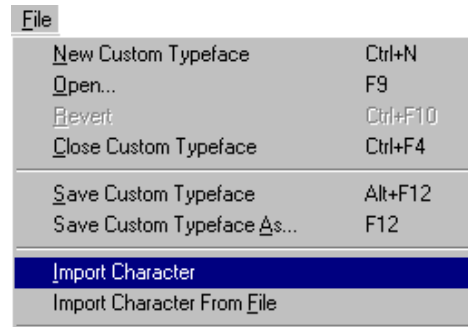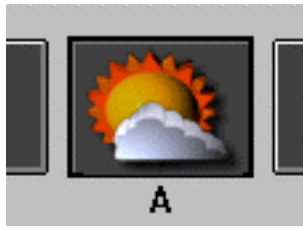


- Set focus on the Program window and open the sample graphic wx_chanceshowers.tif.
- Set focus to the Custom Typeface window and click on character B.

- Go to File > Import Character (Alt + F > I).
The logo should display in the B position.

- Repeat steps 6-8 assigning three more graphics to the following key positions:



- Open the sample graphic wx_tstorms.tif. Assign to the C position.
- Open the sample graphic wx_windyrainy.tif. Assign to the D position.
- Open the sample graphic wx_snowfall.tif. Assign to the E position.

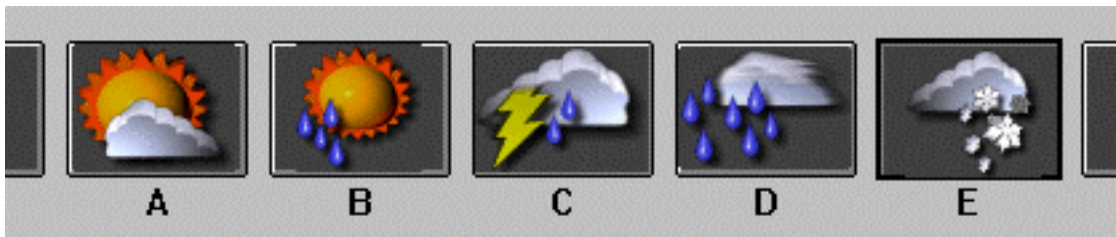


- Save the Custom Typeface as weather.fac. Be sure to save in the D:\Deko\Tutorial folder.

Using a Custom Typeface

When a Custom Typeface is created and saved, using the Custom Typeface is similar to using a standard typeface. You can apply the same detail attributes to your logos as you do to your text. To simplify this exercise, we have already assigned an identical copy of the custom typeface you just created to a Preset Style window. This window has the other fonts you will use in the exercise as well.

1. Set focus to the Preset Style window. Open the Preset Style `training_weather.pst`.

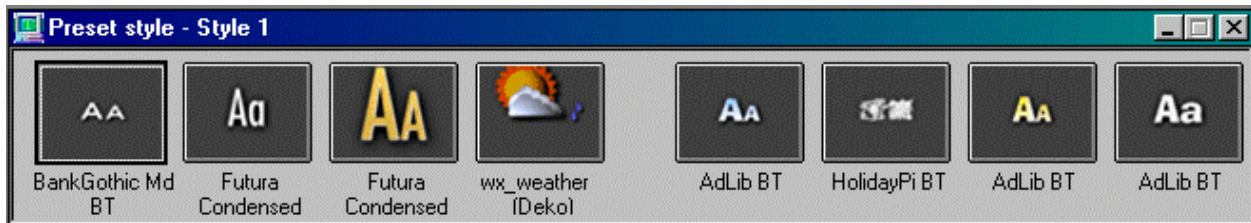


2. Set focus on the Program window and clear the window of any existing graphics.
3. Delete the default text layer.
4. From the Tools window, select the *Add Text Layer* tool. Draw a layer box in the center of the Program window (approximately 2 in. x 2 in.).
5. Select Preset Style 4.
6. Set focus back to the Program window and type Shift + A. If the logo appears to sit high in the layer, type Ctrl + numpad 2 to bottom justify.
7. Save this graphic as `1600.dko`.


Assembling the Weather Graphic

Your weather graphic will consist of 3 text layers, 1 logo layer and a background. The logo layer has already been created in the previous section.

1. Enable the Background Shader and click on the Texture button in the Shader window.

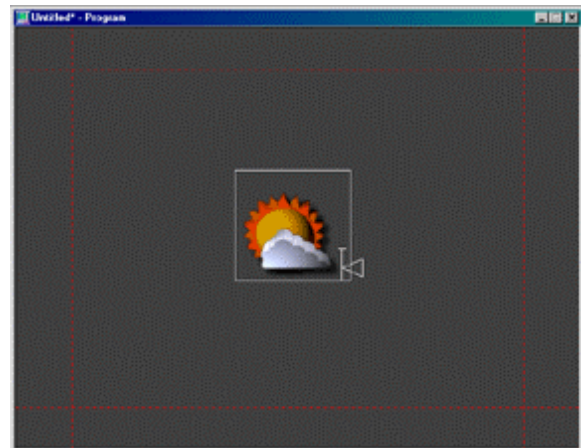

- Click the Open button and navigate to D:\Deko\Tutorial\bgd_training_weather.dko. The background elements for the graphic will appear. If you need to position the logo relative to the example below, select the move tool and do this now.

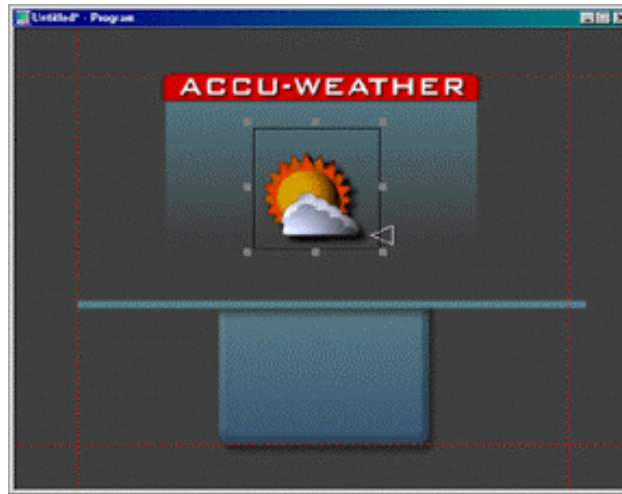

- Draw a text layer for *Day* below “ACCU-WEATHER” and select Preset Style 1 (Bank Gothic).
- Center justify text inside the layer (Ctrl+5) and type in all CAPS “TOMMORROW.”



- Draw a text layer for the *Forecast* and choose Preset Style 2 (Futura Condensed).
- Center justify text inside the layer (Ctrl+5) and type “Cool, Partly Cloudy”.




7. In the box below the *Forecast layer* draw a text layer for *Temperature*. Choose Preset Style 3 (Futura Condensed size 140).
8. Center justify text inside the layer and type “45”.




Inserting Useful Symbols

Depending on the current typeface character set there may be many symbols available to the user that do not have a quick key. The Degree (°) symbol is one of these.

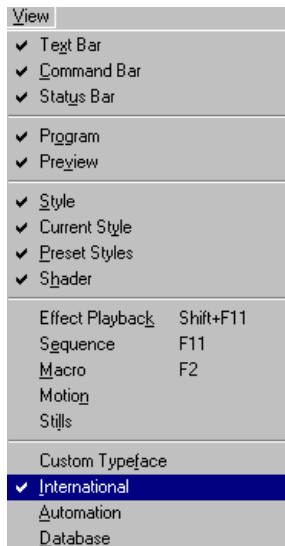

- To insert the Degree symbol by typing the key code, hold down the Alt key and, from the number pad, type 0176. Release keys to display the symbol.
- To insert the symbol with a mouse, select View > International. The International character window appears.
- Position the cursor after the “45.”
- With the mouse, click on the *degree* “°” symbol in the International character window.

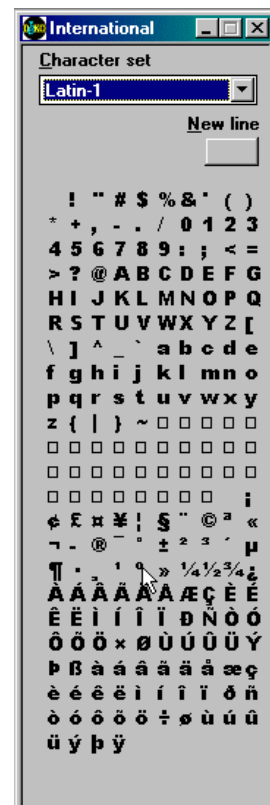

If a faster approach is required, a custom TrueType font can be created with the degree symbol mapped to a user-defined key. Special software programs, such as Macromedia Fontographer, are designed for such tasks.

When you have added the degree symbol, your finished graphic should look like this.



9. Press Alt + Save File (FAK) or Alt+F12 (SK) to save the graphic.

Keyboard Shortcuts for Useful Symbols

| Symbol | Keystrokes |
|--------|------------|
| © | Alt+0169 |
| ® | Alt+0174 |
| ° | Alt+0176 |
| ™ | Alt+0153 |
| ¼ | Alt+0188 |
| ½ | Alt+0189 |
| ¾ | Alt+0190 |

Lesson 8: Baseline Editing – *Typing on a Curve*

Deko provides many tools for text formatting including: moving, scaling, rotation, skewing, kerning and leading. For precise placement of text to match details of a specific image, such as an imported logo, the tool best used is called Baseline Edit.


Baseline Edit Window

To activate the Baseline Edit window, do one of the following:

- From the Layer menu, choose Edit Baseline to activate the Baseline Edit window.
- If the Baseline Edit window is open but not active, check Baseline Edit in the Window menu.

Drawing Baseline Segments

To draw a curved baseline:

1. Select the layer whose baseline you wish to modify.
2. Activate the Baseline Edit window.
3. Do one of the following:
 - In the Baseline menu, check Draw Curve.
 - Click the curve drawing tool button in the Tools window. 
 - Position the drawing tool where you will begin the curve and *drag* the mouse to draw the curve.

To draw a line-segment baseline:

4. Select the layer whose baseline you wish to modify.
5. Activate the Baseline Edit window.
6. Do one of the following:
 - In the Baseline menu, check Draw Curve.
 - Click the drawing tool button in the Tools window.
7. Click to begin the line, then move the line tool to the desired end point and click again. Repeat this step as desired to draw multiple line segments.
8. To break the line, move the cursor out of the Baseline Edit window.

Rectangle or Ellipse

To use a rectangle or ellipse as a baseline:

1. Select the layer whose baseline you wish to modify.
2. Activate the Baseline Edit window.
3. Click the rectangle or ellipse button in the Tools window, and then drag the cursor in the Baseline Edit window to define the rectangle or ellipse.
4. Release the mouse button, then drag points as desired to edit the baseline.

Note: Hold Ctrl as you drag the cursor to maintain a square or round baseline.

Apply Baseline

To apply a baseline:

1. Once you have drawn or edited the baseline as desired.
2. Do one of the following:
 - To apply the baseline and remain in Baseline Edit mode, choose Apply Baseline (Enter) from the Baseline menu.
 - To apply the baseline and close the Baseline Edit window, choose Accept Baseline (Alt + Enter) from the Baseline menu.

Editing Baselines

Delete or Insert a Point

To delete or insert a point on a baseline:

1. If not already in the Baseline Edit mode, choose Edit Baseline from the Layer menu.
2. In the Baseline menu, check Edit Curve.
3. Do one of the following:
 - Click the point you wish to delete, and then choose Delete Selected Point (Delete) from the Baseline menu.
 - Choose Insert Point (Insert) from the Baseline menu, and then click on the curve where you wish to insert the point.

Reverse Direction

To reverse the direction of the baseline:

1. If not already in the Baseline Edit mode, choose Edit Baseline from the Layer menu.

2. In the Baseline menu, choose Reverse Baseline.

Change Type of Point

To change the type of a point on the baseline:

1. In the Baseline menu, check Edit Curve.
2. Click the point to select it.
3. In the Baseline menu, do one of the following:
 - Check Move To, for a point that begins a new section of the baseline.
 - Check Line To, for a point connected to the previous point by a straight line.
 - Check Bezier, for a point connected to the previous point by a Bezier curve.

Bezier curves

To adjust the continuity between two Bezier curves:

1. In the Baseline menu, check Edit Curve.
2. Click the point shared by the two curves.
3. In the Baseline menu, do one of the following:
 - Check Cusp for no continuity. The *control points* on either side of the shared point move independently.
 - Check Smooth for *C1 continuity*.
 - Check Symmetric for *C2 continuity*.


Cancel Changes

To cancel changes to a baseline, do one of the following:

- To cancel all changes and exit the Baseline Edit window, choose Cancel from the Baseline menu.
- If Undo is enabled, you can choose Undo (Ctrl + Z) from the Edit menu, for each change you wish to undo.

Exercise – Baseline Editing

1. Click in the Preset Style window to *set focus* and open the sample file D:\Deko\Tutorial\training_baseline.pst.
2. Click in the Program window to *set focus* and open the sample file D:\Deko\Tutorial\training_baseline.dko. A sample logo will appear along with a default text layer.
3. Left-click in the first Preset Style button to activate that style.
4. Go to Layer > Baseline Edit. The graphic window will become a *Baseline Edit* window, as indicated in the title bar.

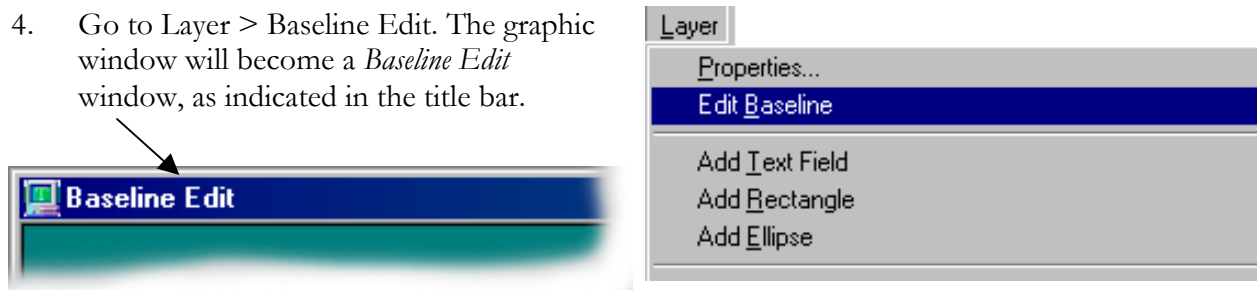


The text layer tool will become a drawing tool. 

5. Click the Ellipse tool, and then move the cursor to the Baseline Edit window and position in the very center of the logo.
6. Hold down the Ctrl key, then click and drag your mouse downward. Release the mouse button when your baseline circle begins to enter the blue of the logo. If the circle is a little off-center, select the Move tool and adjust the circle in the center of the logo.



- Press Alt + Enter to accept the baseline or go to Baseline > Accept. The baseline will change showing the text cursor. In this mode you can enter text.

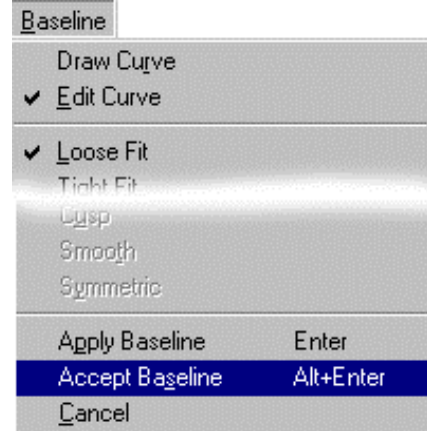


- Enter the text WWLP MASS. Drag points as desired to edit the baseline.



Editing a Baseline

1. Select Edit Baseline from the Layer menu (Alt + L > B).
2. Click on the Rotation tool in the Tools window.
3. Position the mouse pointer in the graphic, then click and drag the mouse up or down. Notice that the baseline rotates around the graphic.



4. Press the Enter key. This will apply the change to the text position, but remain in Baseline Edit mode. Try this a few more times.
5. Press Alt + Enter to accept the baseline and disable Baseline Edit mode.
6. Enter the Edit Baseline mode again (Alt + L > B).
7. Now select the Selection Tool in the Tools window. 

8. Position the mouse on the graphic. The pointer changes to a hand icon.
9. Place the hand icon near one of the points and drag the mouse to reposition the point. Notice how the baseline shape changes.



Note: You can move the position of any point on the curve with the selection tool except the starting point of the baseline. To move the baseline start point, select the move tool and drag the baseline to a new position. Then edit the other points.

10. Position the hand near one of the handles protruding from a point. Click and drag the handle. Notice that as you drag the handle the spline of the curve changes. You can edit any point to create complex curves.



11. Press the Insert key and position the mouse pointer near the curve. Notice that the mouse pointer includes a plus sign.



12. Click to insert a point.
13. When you are finished editing the baseline, press Alt + Enter to accept changes and leave Baseline Edit mode.

Lesson 9: Creating Sequences and Effects

This lesson will introduce you to the concept of sequence playback and effect creation. We will introduce you to the Sequence layout and show you how to build a sequence with effects. We will also introduce the Effects layout and show you the advantage of using *embedded effects* with your graphics. At the end of this lesson you will be able to do the following:

- Build a sequence with effects.
- Build a roll page with speed changes and a pause.
- Build a crawl with speed changes and a pause.
- Build a multi-layer crawl.
- Create an *embedded effect* that will automatically play when a graphic is opened in the preview window.


The Sequence Layout (SK: F11, FAK: Seq Edit)

A Sequence ties graphics and effects together in the form of a play-list. Sequences are best used for rundowns, weather pages, credits or other items that are consistently used repeatedly in the same order. If you wish to play effects maintaining random access to any graphic in a directory, the Effects layout allows you to build and play single effects. That layout will be covered later in this lesson.



The Sequence layout is made up of the Preview window on the left, the Program window on the right and the Sequence window at the bottom center of the screen.

The Sequence Window

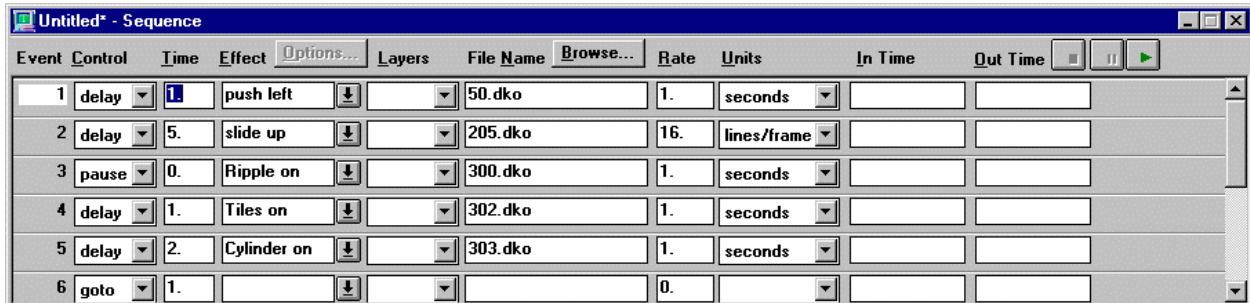

The Sequence window opens with a view of 6 event rows (you can resize the window to show more events per view). There are 10 data fields in each event for the user to control playback of graphics.


To Create a Sequence

1. Open the Sequence layout (SK: F11, FAK: Seq Edit).
2. Activate the Sequence window.
3. If there are events in the Sequence window and you wish to clear them, go to Sequence > Clear Sequence.
4. Use the Tab or arrow keys to move to the data fields and enter necessary information for each field. Shift + Tab will move in a backward direction.
5. When you have finished setting up the first event, continue entering events until your sequence is complete.
6. Making sure the Sequence window is active, save the sequence using Save File on the FAK or F12 on the SK.

Data Fields

Control Field

The Control field determines how events will sequence one after another. Click on the down arrow in the Control window for an event to reveal a menu, then choose the desired control the controls are:

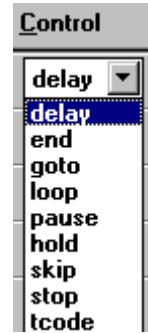


- **(blank field)** – no control. The event starts playing as soon as the previous event is finished playing.
- **pause** – waits for a GPI trigger, right mouse click, or Play Sequence (Alt + Enter) or Play key on the FAK to continue playing.
- **hold** – displays the first frame of the effect, then waits for a trigger as described above before continuing.
- **delay** – pauses the number of fields specified in the Time field before continuing.
- **stop** – stops the sequence, returning control to the user. To resume playback, press the Play key or pres Alt + Enter.
- **tcode** – starts the event playback based on input and output times using a time code reader. If Deko does not detect time code, it will trigger time code events based on the system clock.
- **skip** – skips to the next event. Use this if you wish to insert a comment in an event number
- **loop** – repeats subsequent event a specified number of times, until an end is encountered.
- **end** – specifies the end of the loop.
- **goto** – skip to event number in Time field.

Time C

The control variable field used with the delay, loop and goto control selections.


Effect Field

Click on the arrow in the field box to choose your desired effect. Several effects in the menu have a reveal arrow that shows more choices. The example to the right shows the second column reveal menu shows more choices in the third column. The best way to learn effects is to begin to play with them to see what happens. In this lesson we will build a crawl and a roll effect within a sequence. You will also have some time to play.

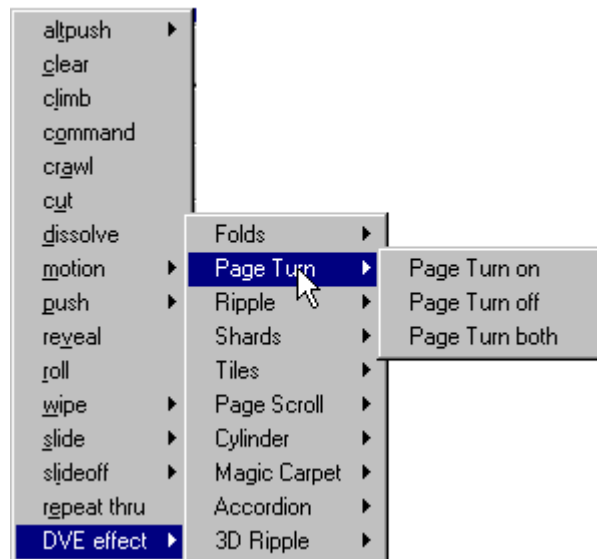

Two points worth noting:

- The menu item *motion* provides access to motions in your current directory to sequence playback. We will cover timeline motions in Lesson 10.
- Choosing an effect from the DVE effects selection (an option on more advanced Dekos), will activate the options button on the Sequence window. If you click Options, the DVE Effect Editor dialog box appears. This dialog box allows you great control over the playback of your effect.

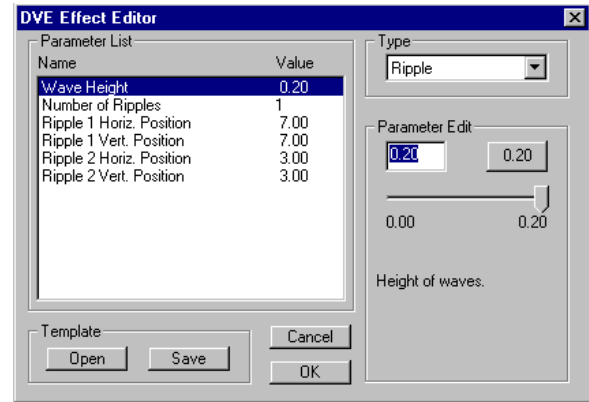


Rate Field

Enter a value here to determine the rate at which the effect is performed. This rate is determined by the values specified in the Units field.

Units Field

Click on the pull-down menu to determine the rate unit. When you click on an effect, the most common unit of measurement is chosen as a default with a nominal rate specified for that unit. You can change either.

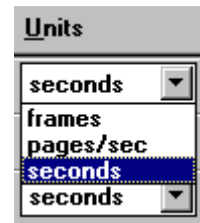

In Time/Out Time

You can choose a time code value for effects to trigger. If no time code is detected by the system, the computer system clock will be read. This normally displays time of day.

Playback Controls

The sequence window displays three buttons for Stop, Pause and Play of Sequences. Recommended practice is to use the buttons provided on the FAK.



Editing Sequences

Insert

To insert an Event between other existing Events:

1. Place the cursor where you would like the new Event to be placed.
2. Go to the Sequence menu.
3. Choose Insert event (Alt + Insert).

Delete


To delete the current event, choose Delete Event (Alt + Delete) from the Sequence menu.

To delete a group of events, select the group of events to be deleted. Press Delete.

Exercise – Create and Run a Sequence

For this lesson, you will sequence the five title files created in Lesson 5, or use the sample files, lesson6a.dko through lesson6e.dko, provided in the Tutorial directory.

Change Layout to Sequence Playback (SK: F11) (FAK: Seq Edit)

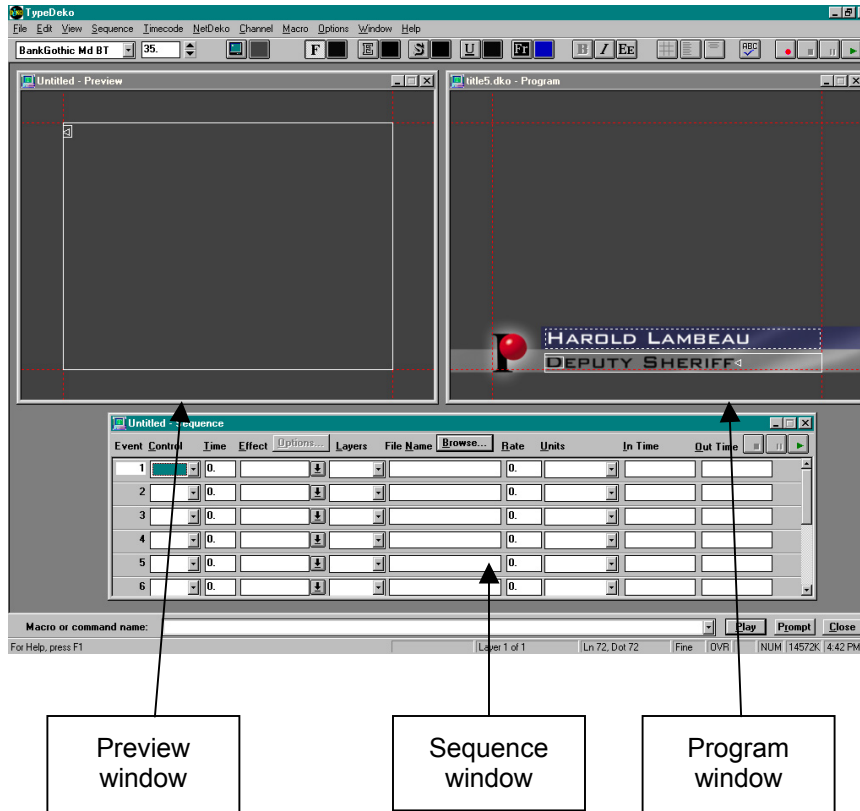


Specify the First Event

1. Click the down arrow next to the Effect field in Event 1 and choose clear.
2. Click the down arrow next to the Control field of Event 2, then choose Pause. Pause causes the Sequencer to wait for Play or a GPI trigger before playing the event.

Specify the Next Five Lower Third Titles

1. Click on the down arrow next to the Effect field and choose Motion. From the window that is revealed choose the motion file `lower_third.mot`.
2. In the Graphics Browser, select the first of the five lower third files you created in Lesson 5.
3. Double-click on the file to insert it into the sequencer. Notice that the cursor advances to the next event in the sequence.
4. Select the next lower third and insert it, Repeat this process to fill in the next three events.
5. Save the sequence to the hard drive (SK: F12, FAK: Save File). Enter number 200 in the File name field and click OK.
6. Make the rate 2 sec. for even 2 and after.

Play the Sequence

1. Press the Home key to position your cursor in Event 1 and make it the current event. Deko always plays a sequence beginning with the current event. Near the top right you will see controls for Stop, Pause and Play. You can use these controls to play, but we recommend pressing the Play, Stop and Pause keys on your FAK. 
2. Press the Play key. This first event will play from Preview to Program. It will then pause, since you have set this as a control in each event. You will see the Pause button turn yellow. The Play key on the keyboard will blink green.
3. Press Play again. The sequence will stop when it gets to an empty event or when you press the Stop button.

Exercise – Create and Run a Credit Roll

Before You Start

Though some shows now cut from page to page of credits, the credit roll remains a staple of TV production. Deko makes it easy to create and run credits. All the text is typed into a single file, just as it was when you did a lower third or a slate. The only difference is that you must tell the Deko that you want this to be a roll file.



Running the roll file is equally easy. You specify the speed of the roll in a sequence event, and run that event.

Unfortunately, moving video text up or down has a technical problem, inherent with all character generators, because interlace artifacts, give the text in rolls a jagged appearance. Deko provides you with a built-in solution that always gives you the smoothest roll possible.

Step-by-Step: Create and Run a Credit Roll

1. Enter the Style Edit layout to compose your roll graphic (Alt+F11).
2. Clear the program window (SK: Alt + F8, FAK: Clear Program), and select the style you wish to use for the roll. You can, of course, use as many different styles as you want, though usually rolls are all one typeface, in several sizes.
3. Select the Program window and go to Text > Vertical Scrolling. A check mark will appear indicating that it is enabled.

A vertical scroll appears on the Program window, to allow you to move through the roll file.

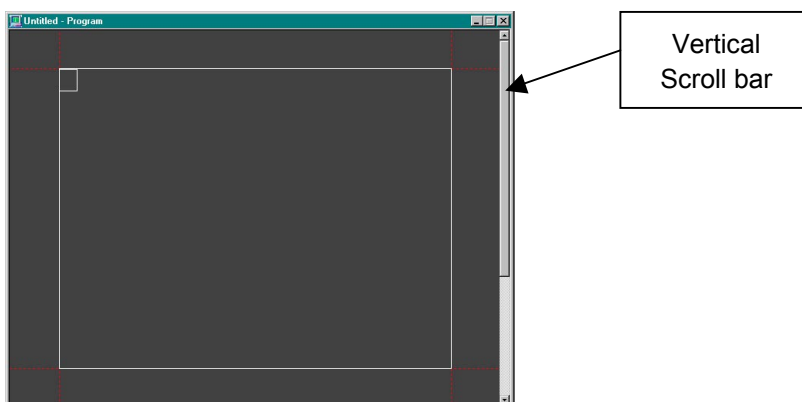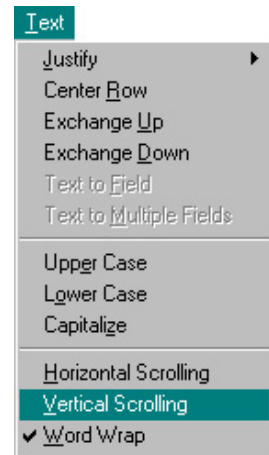

4. Type in the roll text. Put in about ten lines of text separated by blank lines. If you can't think of anything else, use this example:

Writer
(Insert your name here)

Producer
(Insert your name here)

Camera
(Insert your name...)

(4 or 5 more lines)

Note: If you want your credits to roll off the screen when complete, enter several carriage returns after the last line of text. This will increase the vertical length of the roll page and provide a blank screen on air when the credit roll finishes.


5. Save the file to the hard drive. (SK: F12, FAK: Save File)

6. Bring up the Sequence layout. (SK: F11, FAK: Seq Edit)

If there is already an open Sequence window, clear it. Activate the window, then go to Sequence > Clear Sequence.

7. Fill in the fields for event 1.

- Effect – roll
- File Name – the file you saved
- Rate – 2 seconds
- Units – seconds

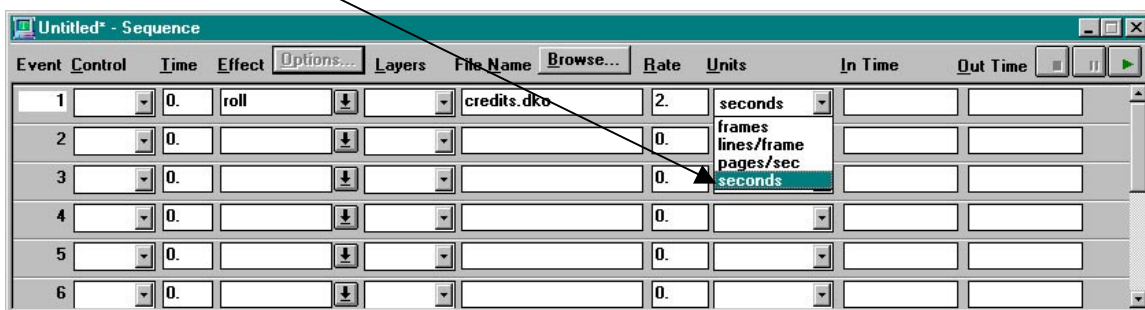


8. Play the roll. Use Play on the FAK or Alt + Enter on the SK.


Note: You can use the + and - keys on the Num Pad to change speed during playback of a roll or crawl.

Setup for Page for Smooth Rolling

1. Select the Sequence window. Go to Sequence > Smooth Roll Playback Adjustments > Only Full Vertical Resolution Rates.

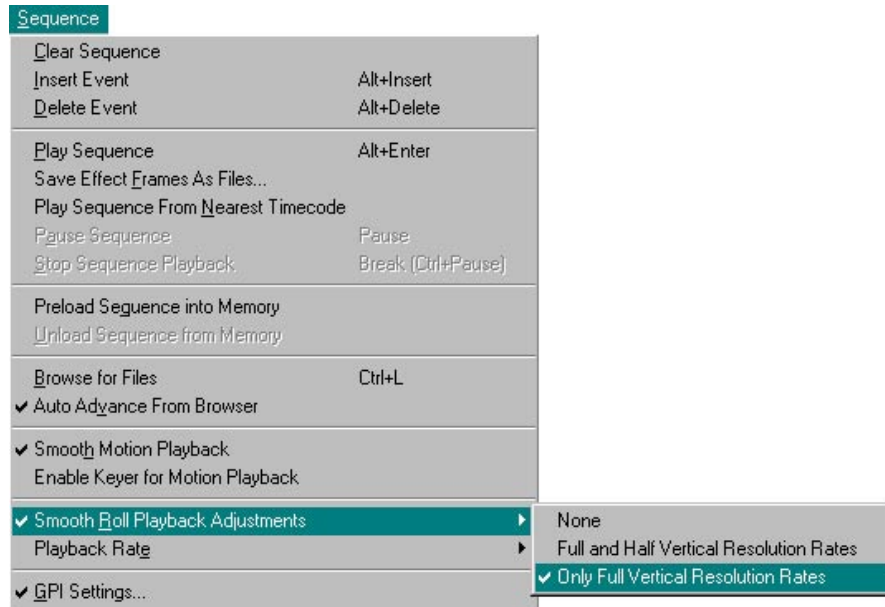

2. From the Options window choose Save Settings Now to preserve this one-time setting (Alt + O > S).
3. Change the rate of time in the Sequencer from 2 seconds to 5 seconds and then press Play. The Smooth Roll Playback Warning will appear.

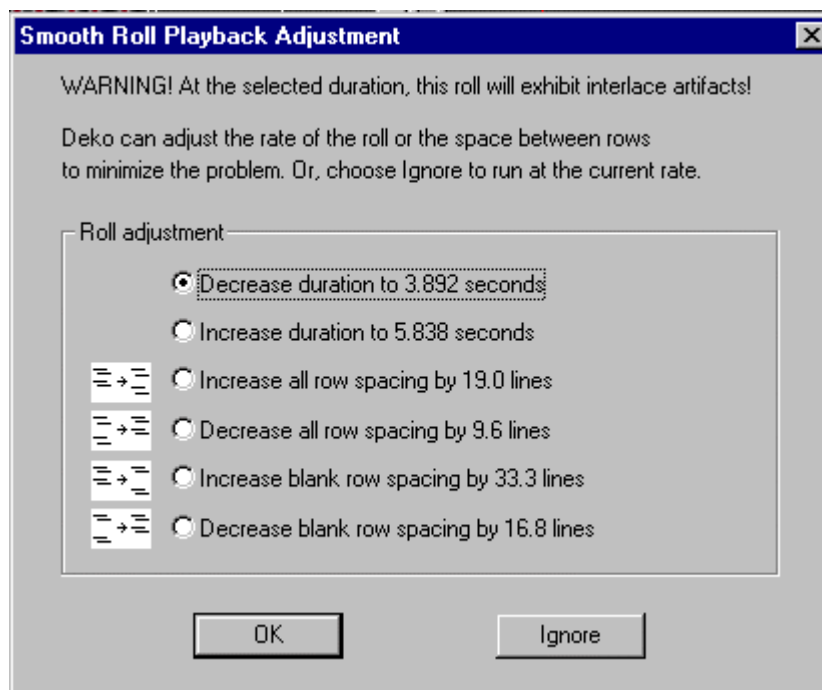

The values you see in the window depend on the number of lines in your roll, and the font size and leading. Generally, you will want to adjust the line spacing rather than the overall time.

4. Once you decide whether you'd like to adjust duration or line spacing, choose OK. If you adjusted line spacing, a "Save As" window will appear asking that you save these changes either over the original file or to a new file. Insert the File Name into the highlighted field and choose OK. If you saved as a new file, the updated name will appear in your sequence.
5. Go to the Sequencer and change your rate of time to 7 seconds. The Smooth Roll Playback Adjustment dialog box appears again.
6. Specify your change in either duration or line spacing. Choose OK and re-save the existing graphic over the original if you chose to change the line spacing.
7. Play the sequence.

Import a Text Document

Since Deko supports standard ASCII text, it can import text files (such as credits) from other applications. You will use a sample text document provided in the Tutorial folder and place the contents of this document into the Deko program. We will use the default layer provided. Your text will be imported and placed into this layer according to the Current Style.

1. Clear out the Program window.
2. Set up for vertical scrolling as instructed in this lesson.
3. Be sure to also set the window for Word wrap (it should have a check-mark next to it in the Text pull-down menu).
4. Set the desired style and size that you would like for your text.
5. Open the file titled `credits.txt` from the Tutorial folder. Changing directory paths and File types should be familiar to you by now.
6. Your text will be placed according to the specifications you have set for justification, style, and size.
7. If you would like to specify justification, make sure Num Lock is on and use the numeric keypad for these shortcut key combinations:
 - Ctrl + 7 = top, left
 - Ctrl + 8 = top, center
 - Ctrl + 9 = top, right
8. Save this file as a native `.dko` (Deko) file in the same folder as your other files.
9. Set up your sequence to play these credits, as you did in steps 5 and 6 of this lesson.

Exercise – Create and Run a Crawl



Before You Start

A crawl is almost identical to a roll. In both cases, there are two special steps: mark the file as scrolling and transition it on with the roll or crawl. Unlike rolls, crawls always have smooth motion. The limitation with rolls is due to the interlaced nature of video, which only effects vertical motion.

Deko crawls can be in any typeface or mixture of typefaces. The vertical position of the crawl can be easily adjusted. You can even have up to four different crawl lines, each going at a different speed.

Step-by-Step: Create and Run a Crawl


1. Switch the menu layout to Style Edit and click on the Program window to give it focus, then clear the program window.
2. Go to Text > Horizontal Scrolling. (Alt + T > H). A horizontal scroll bar appears at the bottom of the Program window. This control allows you to move back and forward in the crawl file.

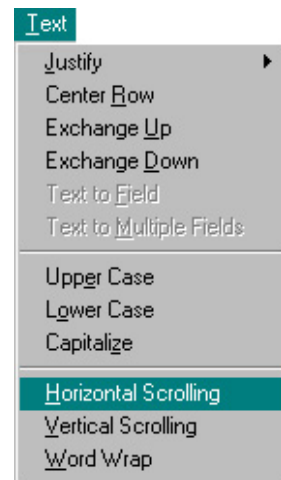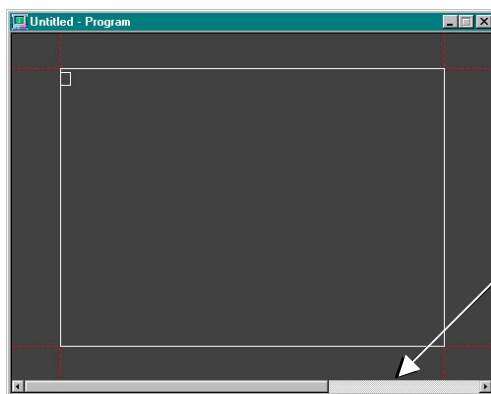


3. Type in your text. Enter whatever text you like, in whatever style or mixture of styles you like. It is important to enter all the text on a single line – do not press the Enter key. If you need inspiration, you can use the following text:

State lottery officials announced today that today's \$20 Million jackpot was won by (your name here). In an unprecedented announcement, officials stated that not only today's jackpot, but also future jackpots would all be awarded to (name). Ticket sales are expected to decline in response to today's news.

Notice how you can scroll back and forth through the text. The appearance of the scroll bar changes, to give you an idea the file length.

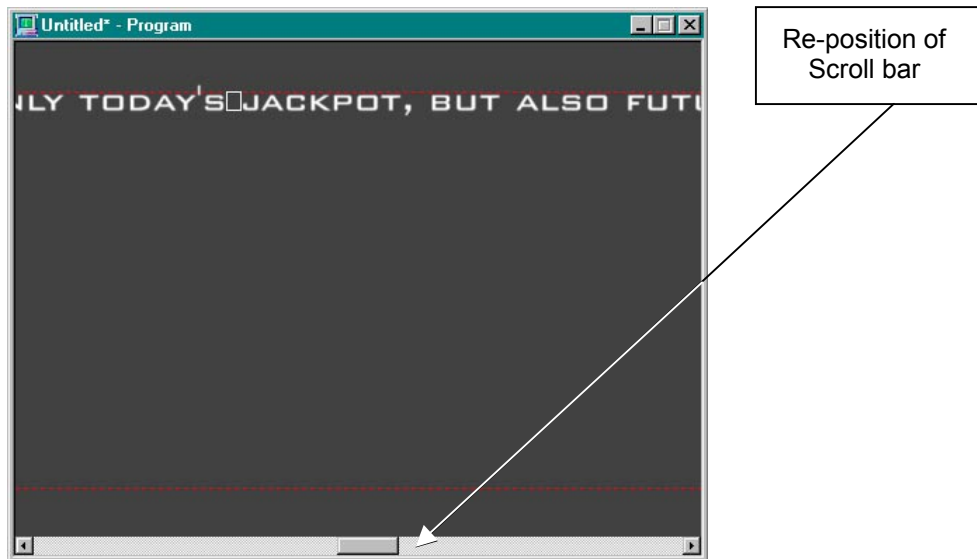

4. Save the file.
5. Switch menu layout to sequence. If necessary, choose Clear sequence from the Sequence menu to clear out the current sequence.
6. Pick crawl as the transition, and either type in or Browse for the file name you just saved.

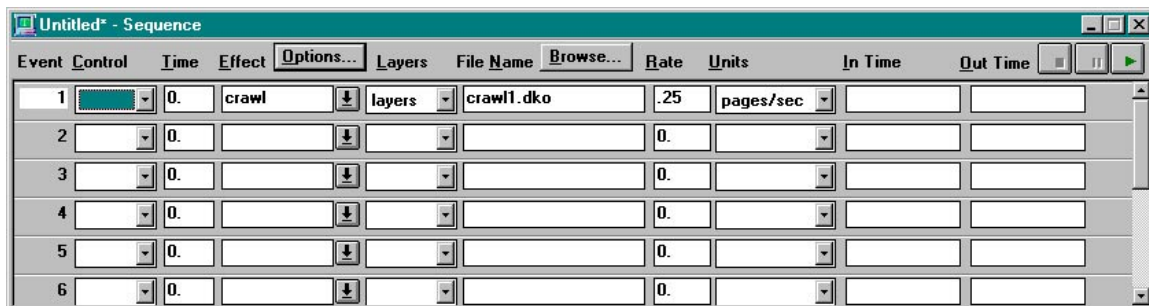


7. Set the crawl rate. The default rate of 1 second per page is a little fast, set it to between one-quarter and one-half pages per second.
8. Select the text layer on the screen and use the Justify controls Ctrl + Number pad to set the crawl to a lower-third position.
9. Press Alt + Save File (FAK) or Alt+F12 (SK) to save the graphic.

Note: you can press Ctrl+S to save the file with either keyboard.


10. Set the crawl to play continuously. Go to the Control field in Event 2 and specify, “go to”. In the Time field directly to the right, specify the number 1. This will direct the sequence back up to Event 1.
11. Play the crawl.

Note: You can use the + and – keys on the Num Pad to change speed during playback of a roll or crawl.

Embed Speed Changes in Your Crawl

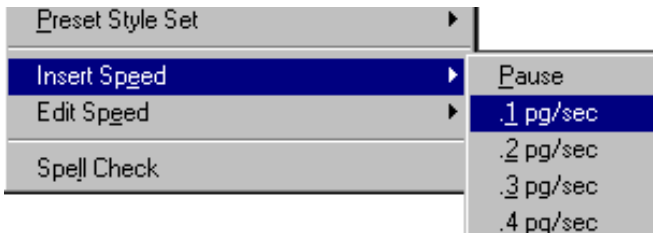1. Open your graphic in the Style Edit layout.
2. Scroll the graphic to the position you would like to see the speed change to occur and position the cursor.
3. From the text menu, select Insert Speed. 
4. Select Pause or a speed from the drop-down menu. You can specify speed changes in 1/10 page increments up to 1 page per second. Deko inserts a marker to show where the embedded change is.


Note: You can apply speed changes and pauses to both roll and crawl graphics. Embedded speed changes only work if you specify Pages per Second as your unit of rate to your crawl or roll effect. Do not use the + and - keys to change speed during playback of a roll or crawl with embedded changes.

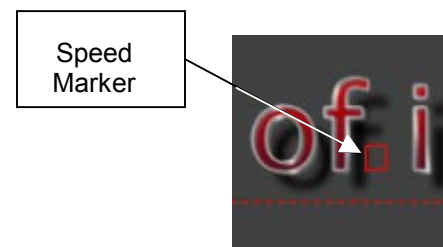

Embedded Speed Changes

To edit your Embedded speed changes:

1. Select the marker you wish to edit.
2. Select Edit Speed from the text menu and choose the changed speed from the pull-down menu to the right.

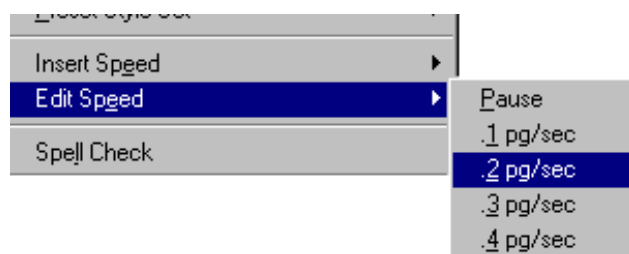


Creating a Multi-Line Crawl

This works much like a single-line crawl except carriage returns separate each row of text. Don't create separate layers of text.

1. Clear out the Program window and set for Horizontal Scrolling. The cursor will default to the upper left corner of the window.
2. Pick a style and type First Row.


3. Press Enter twice.
4. Change styles of you like. Type Second Row.
5. Press Enter twice.
6. Again, you can change styles. Type Third Row.
7. Save this file as multicrawl.dko in the Tutorial folder.

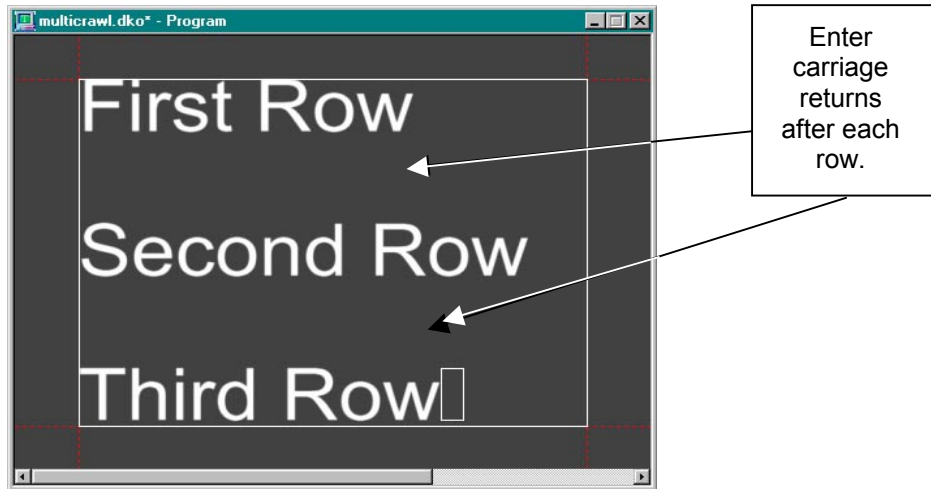

Set up the Sequencer with multicrawl.dko as the File Name, specify crawl as the Effect and change the Rate of time to 2 seconds. Since this is a multiple row crawl, the Rate of time is applied to the first row only.

To set timing for the other rows:

8. Click in Event 1.
9. Select the Options button in the Sequencer to display a Crawl options dialog box.
10. Specify 3 seconds for Second Row and 4 seconds for Third Row.

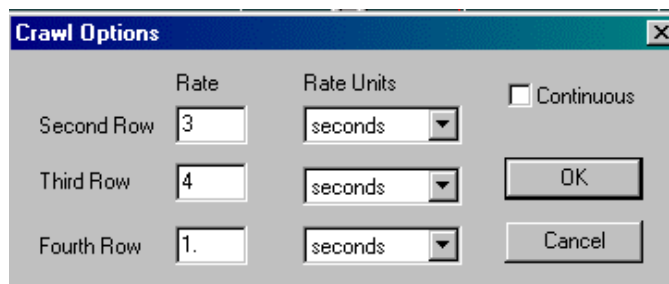


11. Ignore the Fourth row.


- Press OK and play the sequence. You should see three rows of text crawl at independent speeds. To create a more interesting effect with this feature, experiment with row length and size.

The Effect Layout

The Effects window allows you to play effects maintaining random access to any graphic in a directory. The Effects layout allows you to build and play single effects. Use this layout when your payout of graphics is not an orderly sequence. You can also use the effects layout to save effects that can be embedded within a graphic file. Embedded effects will playback whenever a graphic is opened up in the preview window.

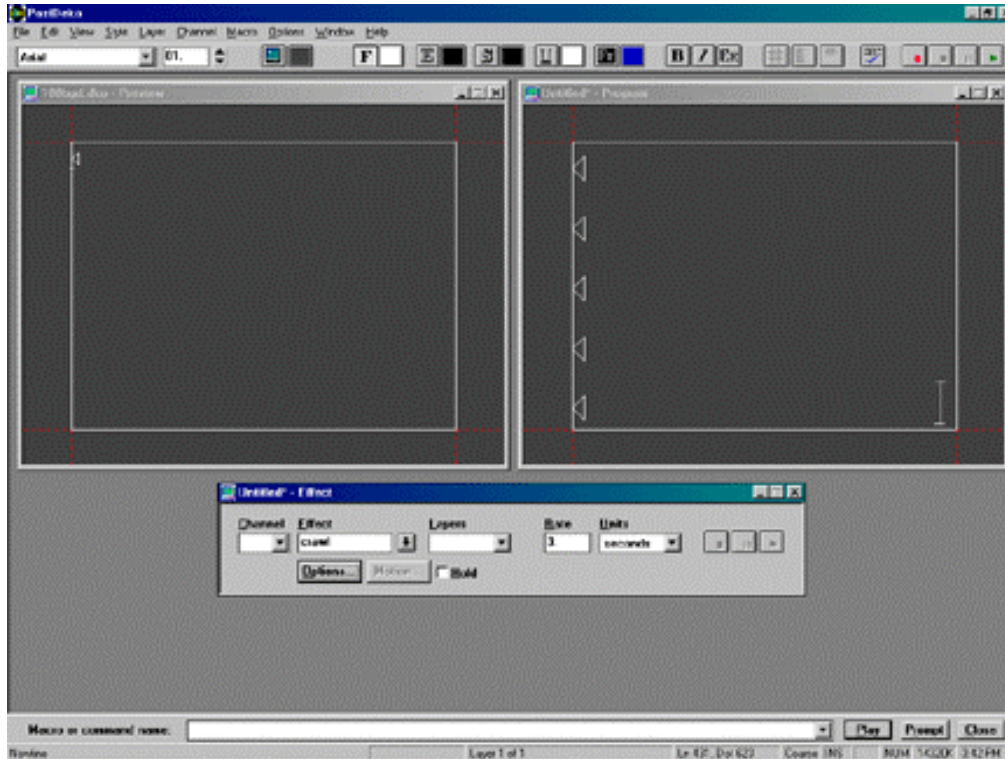

The Effects layout looks similar to the Sequence layout with a Preview window (left) Program window (right) and Effect window (bottom).

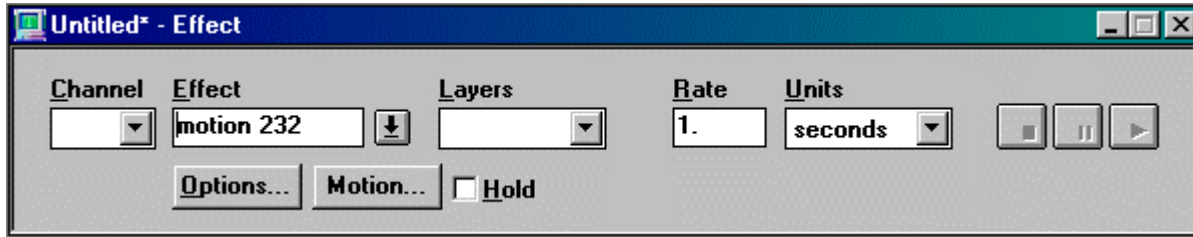

The Effect Window

The effect window is also similar in function to the sequence window. Rather than have sequential events with data fields, the Effect window shows data field for one effect.


To create a single effect and play to the current graphic:

1. Open the Effect layout (Shift+F11).
2. Activate the Effect window.
3. Enter the necessary information in the Effect window data fields.
 - Channel – the channel for playback output (you can leave this blank).
 - Effect – the menus are identical to those shown in the sequence window.
 - Layers – the graphic element, e.g. layers, background, row, etc., on which to perform the effect. Options depend on the specific effect. If this is left blank the effect applies to the entire graphic.
 - Rate – set this rate as you would set rate in the sequence window described above.
 - Units – set the unit of measurement for rate.
 - Hold – when checked, loads the graphic in and waits for a trigger to play the effect.
4. If you wish to save the effect as an .efx file, press Save File or F12 and enter a file name then click OK.
5. Press the play key or Alt + Enter to play the effect.
6. Making sure the Sequence window is active, save the sequence using Save File on the FAK or F12 on the SK.


Embed Effects

To embed an effect into a graphic:

1. Open a graphic in the Preview window.
2. Select Style from the View menu (F6).
3. Click the Graphic button on the Style window.
4. Click the Select button and navigate to the effect (.efx) file.
5. Save the graphic.
6. To play the graphic simply open it in the Preview window. Deko automatically plays the associated effect. If read in the Program window, the graphic will cut to air without an effect.

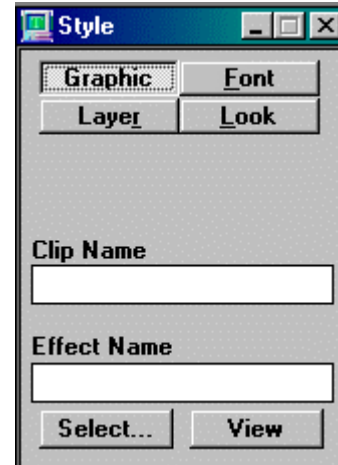


Note: This will not occur unless your Preferences are set correctly. Open Options>Preferences and click on the common tab. Check *Automatically play associated effects*.

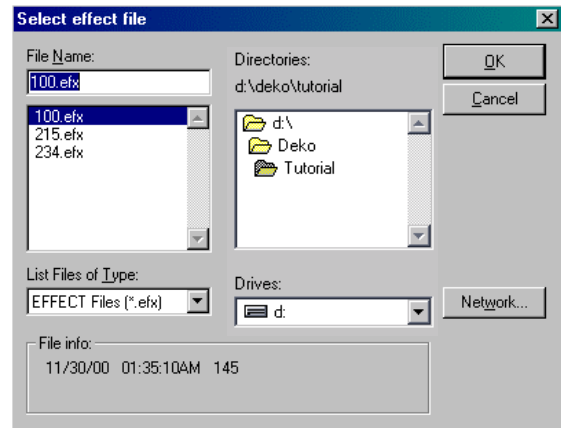

If the Effect Playback window is open when you open the graphic, Deko automatically focuses on the Effect Playback window after the effect plays.

Note: Press Ctrl + Play to play the effect again.

Check this box if you wish to have embedded effects to playback on graphics.

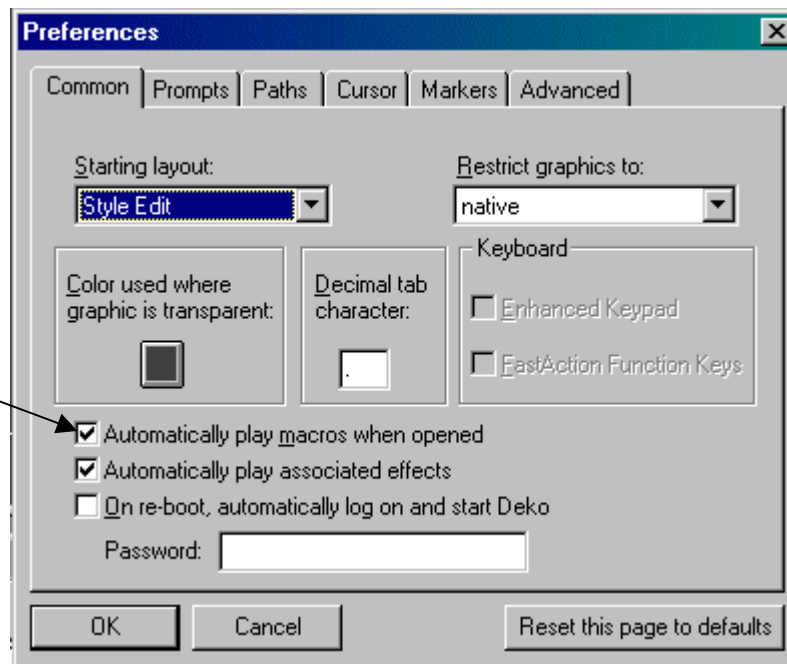

Shortcuts

| | |
|-----------------------------|-------------------------------------|
| Sequence Layout | SK: F11; FAK: Seq Edit |
| Effects Layout | Shift + F11 |
| Play Effect/Sequence | SK: Alt + Enter; FAK: Play |
| Stop Sequence | Esc |
| Save window contents | SK: Alt + F12; FAK: Alt + Save File |
| “Save as” window contents | SK: F12; FAK: Save File |
| Enable Horizontal Scrolling | Alt +T > H |
| Enable Vertical Scrolling | Alt + T > V |


Lesson 10: Understanding Timeline Motions

In this lesson we will introduce the components of the Timeline window and you will create a basic Motion using FXDeko's Timeline Motion editor. We will also define the important concept of *Content Independence*.

Before You Start

The Timeline Motion editor, shown below, is an option for FXDeko v2.0 or higher.

Using the Timeline Motion editor, you can create text animations, called Motions, which are not based on specific graphics. The Motion window contains a series of one or more Actions that is saved in a Motion (.mot) file. You can then specify that Motion file within a sequence, just as you would any other effect.

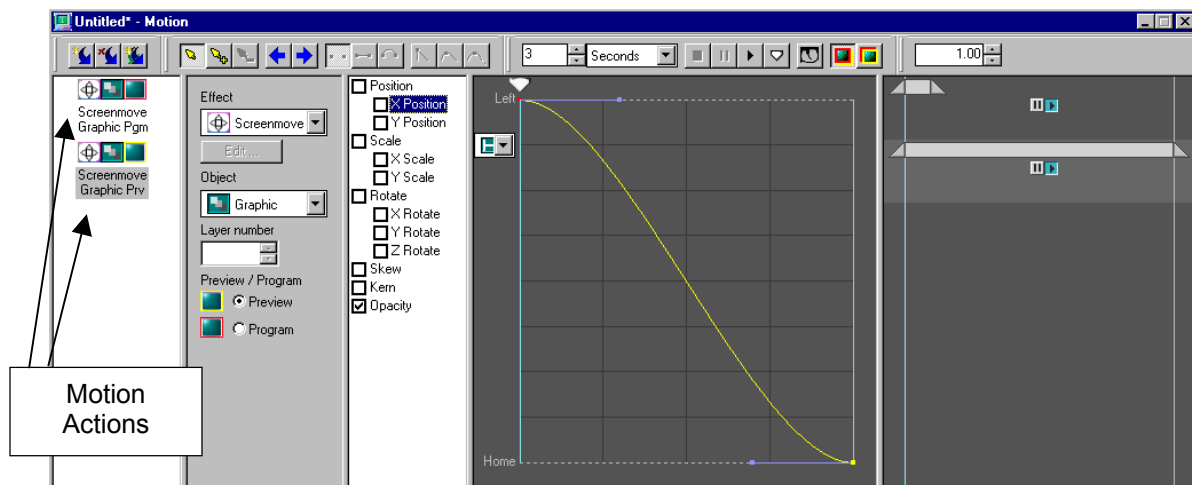

Motion
Actions

The Timeline Motion editor enables the creation of on-screen moves, variable flight paths, dynamic re-sizing, X-Y-Z rotation and more. Choose from several 3D DVE effects to apply to any character, word, row, layer, background or full screen. Scrub through (preview) the Motion during its creation for real time feedback.




Step-by-Step: Preview a Sample Timeline Motion

“What’s so great about Timeline Motions?” Follow the steps below to preview a sample Motion that you will recreate from scratch in the next section: Step-by-Step: Build a Timeline Motion.

Open and Play a Sample Sequence File

1. Select the Sequence Layout (SK: F11. FAK: Sequence).
2. Click once in the Sequence window to set focus.
3. Press Clear Read (FAK) or F9 SK to reveal the Open Dialog. The path should read D:\Deko\Tutorial. Double-click on the file named 100.seq to open into the Sequence window.
4. Press the play button in your Sequence window or play key on your Fast Action keyboard to run the sample Motion.

Timeline Motions add a wealth of creativity for post and on-air applications. Automated elections, stock reports and live news are just a few of many areas in which Deko can improve the quality and efficiency of production.

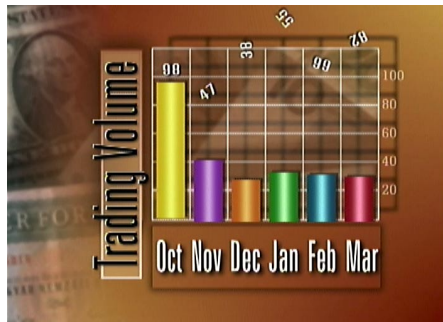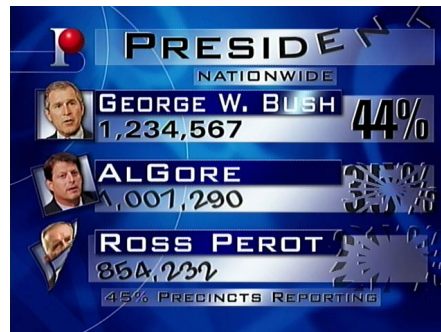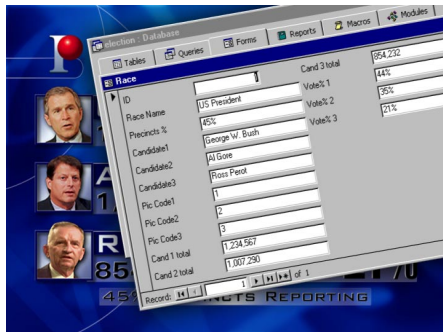


Step-by-Step: Build a Timeline Motion


The following steps will guide you through defining and building a Motion using the Timeline Motion editor found in FXDeko. If you get into trouble, please look at the Help section that follows.

Choose Motion Compose Layout (Ctrl + Shift + M)


1. Go to Window > Select Layout > Motion Compose (Shift + Ctrl + M).

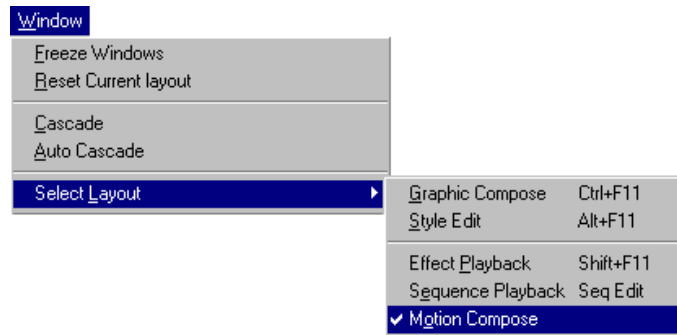

2. Your desktop will now reflect the image below. You should see a Preview window, Program window and Timeline Motion window.

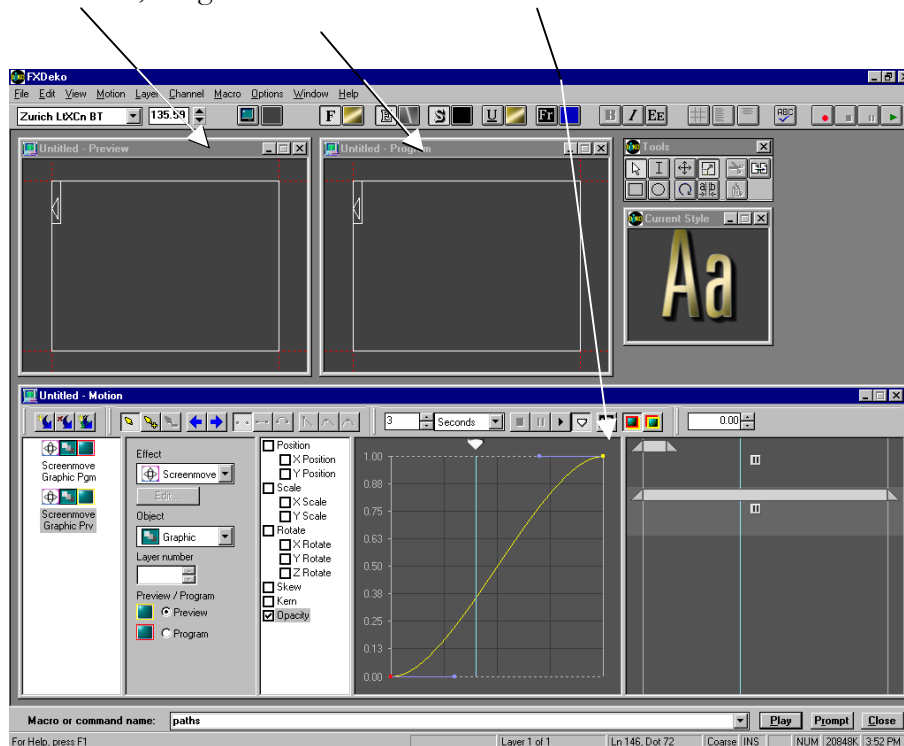

To best explain the Timeline Motion editor we will use the analogy of a dance. As we step along, we will make references that should help you better understand the components of the Timeline interface.

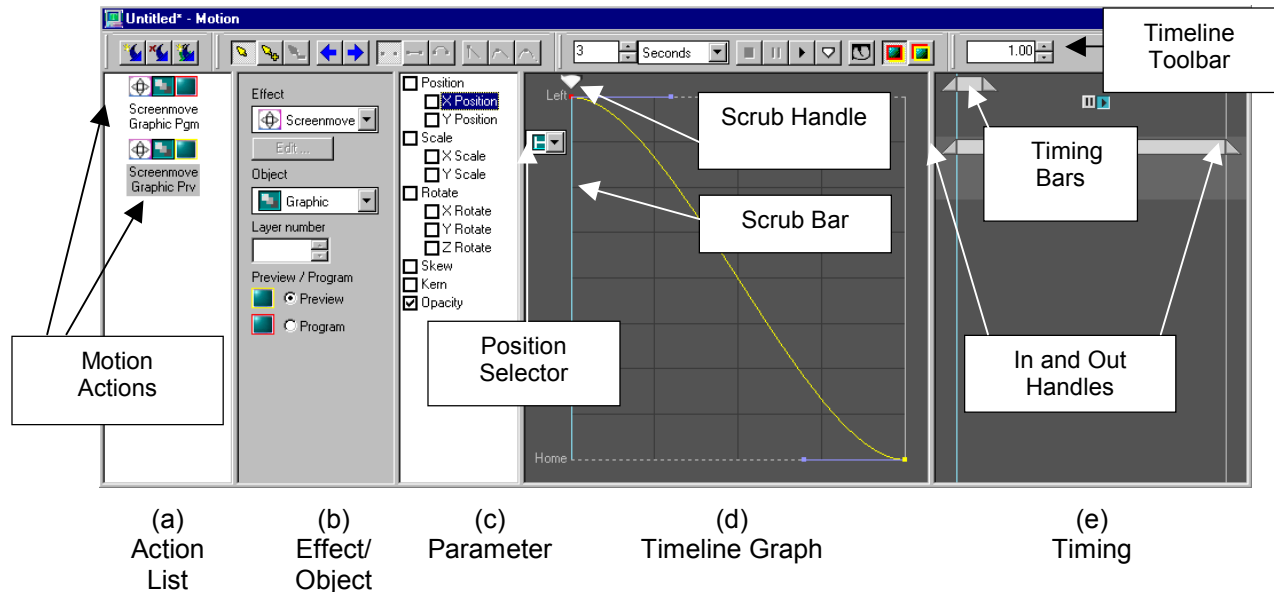

There are 5 sections of this interface that we will define one by one and refer to throughout this lesson using the IDs and descriptions above.

(a) Action List

This list is a summary of your performance. Consider each Action a dancer who's Choreography can be individually specified. Right-click to add and delete Actions to the list as desired. Every Action has an associated *Effect*, defined in section (b).

(b) Effect / Object

An *Effect* is specified for every Action created in section (a). DVE Effects are selected at the top. They include Page Turns, Ripples and other editable 3D Effects. To edit and optionally save parameters of an Effect, click on the Edit button.

Your chosen Effect will perform based on your definition of an *Object*. Objects can be characters, words, rows, layers, all layers together, background or the entire graphic. Select a *Layer number* below, in which to find the specified Object.

Your Actions will perform in either *Preview* or *Program*. Check one to enable them.

(c) Parameter

As every dancer has its own choreography, here you will specify Parameters of movement for every Action (dancer). This movement can be as basic or complex as you like.

The more Parameters are specified, the more complex the movement. To enable a Parameter, place a check in the box beside it.

(d) Timeline Graph

Edit your Parameters by degree of position, scale, rotation, kern, skew and opacity. Adjust for curved, linear, cusp, smooth and symmetrical movement using the Continuity Tools found in the Timeline Toolbar.

Click and drag the Scrub Handle across the Timeline Graph to preview the entire Motion. The Position Selector displays a list of position choices and is used only with the Position Parameter. Position choices and view of the Graph depend upon the Parameter currently selected.

(e) Timing

For every Action (dancer) created in section (a), a corresponding Timing Bar will appear. Grab handles at either end to adjust for In or Out Timing of Actions.

When you define an Object in section (b) to be a character, word or row, a Sub-Bar will appear just below and is tied to the Timing Bar above it for that Action. Click and drag the round Offset control to adjust Timing delay.


Exercise continued

Continue the following steps to create a simple Timeline Motion. If you've already run the sample sequence, jump to step 3.

Open a Sample File into the Preview Window (SK: F9, FAK: Read)

1. Click once in the Preview window to set focus.
2. Press Clear Read (FAK) or F9 (SK).
3. The directory path should read `D:\Deko\Tutorial`. If it does not, change the directory path by double-clicking the `C` directory and scroll down to the `Deko` folder. Then double-click the `Deko` folder to find the `Tutorial` sub-folder.
4. Click once on the file named `200.dko` but do not press OK yet.


- Take a look in the bottom of the Open dialog box. You will see an area titled *File info* that displays important details of your graphic. This contains a comment logged by the user while saving the file. See Further Exploration for these steps.

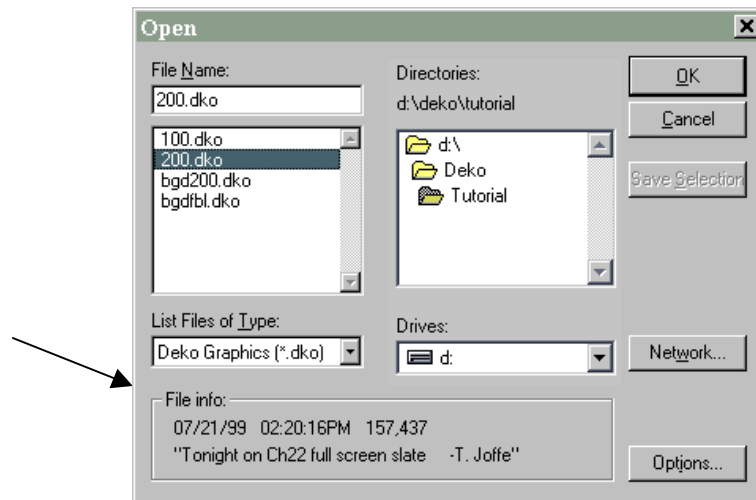

- Press OK to open a sample graphic in the Preview window and notice that the content of the graphic reflects the comment stored in the File Info area.

Open a Sample Motion file

- If there is a graphic in the Program window, set focus to Program and clear the graphic so you have a blank screen (SK: F8 twice, FAK: Clear Program).

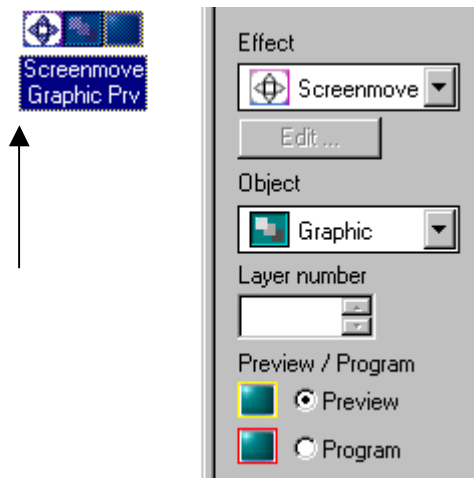


- Go to Edit > Clear All.
- Set focus to the Motion window and open the file named 200.mot. You should see only one Action in the Actions list.

- This Action indicates that the *Effect* is a Screen move; the *Object* is defined as the entire Graphic, and will perform in the *Preview* channel. These are specified in the Effect section, where it can be modified.

Create and Scrub a Basic Motion

- In the Parameter list, click once to place a check in the box next to Y Position to enable. In the Timeline Graph, position your mouse on the Scrub Handle. Click, hold and drag your mouse to the right across the Graph. This is called *scrubbing*.

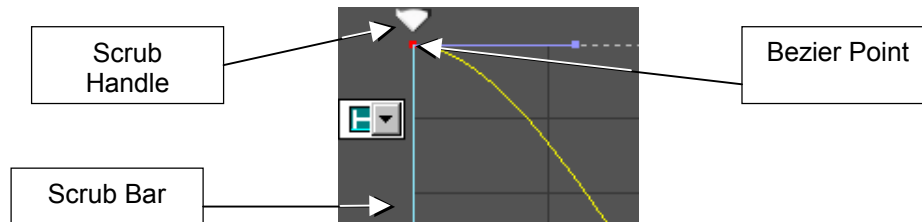

- You should take notice of three things:
 - Your graphic will push down from the top, off-screen.
 - You will see a similar Scrub Bar appear in the Timing section. This acts as a guide for setting In and Out points to your Actions.
 - You can scrub forward or backward (right or left) and your output will reflect your Motion in real time!

Create a More Complex Motion

- In the Effect section, click on the arrow under Effect and select Page Turn.
- In the Parameter list, click to enable Z Rotate. The default degree of Rotation is 360°.
- To change Rotation, click and hold on the small, red Bezier Point in the Graph, then drag down to 180°.
- For more accurate control, double-click in the Numerical Setting box on the Timeline Toolbar. Enter 180. Scrub the effect to preview.





- In the Effect section, click on the arrow under Object and change from Graphic to Background. Your Parameters and Effect will now apply to the Background only! Scrub to preview and notice that the text in Layer 1 now remains in place. All other Objects will stay put until an Effect is applied to a new Action.



- To add a new Action for your text layer, right-click on the first one and select Insert. You can also right-click to Delete Actions.



- The default Effect for the new Action is the same as before. Click on Object and select Layer.
- FXDeko can build an unlimited number of layers. Assign Layer 1 in the Layer Number field.
- From the Parameter section, enable Y Position. Click on the Position Selector in the Timeline Graph and select "Bottom to Home".

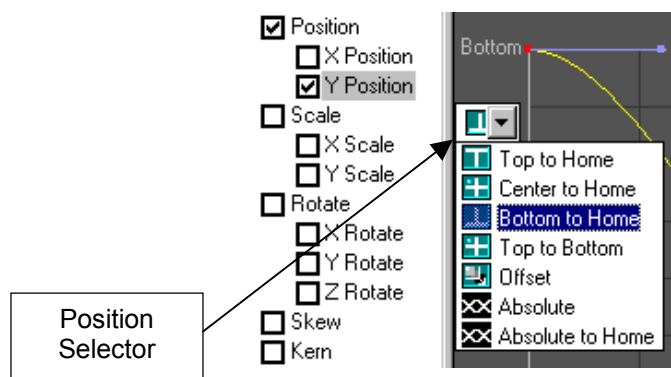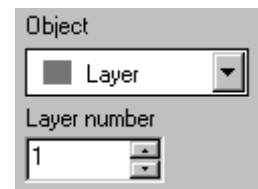

- Enable X Position and set the position for "Right to Home".
- Enable Z Rotate. Scrub to preview.

Note: Home Position

We have given FXDeko the intelligence to identify the result of a finished graphic and make this equivalent to the end keyframe in a Motion, saving both time and effort for the operator. The graphic itself becomes an integral part of a Motion. We call this the *Home* position.

All off-screen objects begin their motion path in the same position. Notice below that every character is overlapped. This motion requires little effort since all you will need to do is plot the direction from which you want your object to appear.



If the content is changed for any reason, off-screen position remains the same and Deko will automatically work out the parameters of the graphic and individual flight paths for every object. Home position defines the result of the Motion.


See the Further Exploration section of this lesson to run a sample Motion that best defines this concept.

Your 200 .mot Motion should now contain two different Actions: a Background Page Turn and a Layer Screen move. However, each Action performs at the same time. Follow the next steps to set separate In and Out times for each Action.


Adjust Timing

When you inserted a new Action in step 6, you may have noticed the addition of second Timing Bar. This appeared because every Action has its own, independent Timing control. Again, think of it as Choreography for a dance and each dancer has separate In and Out times during a performance.

To adjust Timing:

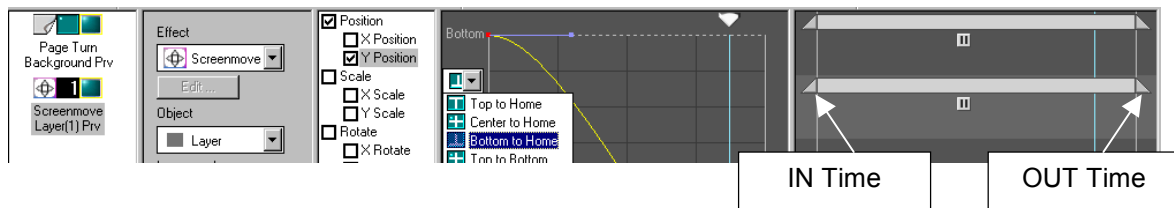


1. Look for a light gray highlight to appear behind the Timing Bar and the corresponding Action. This indicates correct selection.
2. Select the first (top) Timing Bar.
3. Click, hold and drag the Out Point to the left.
4. By default, a playback rate in seconds will display during selection of any In or Out point. To change the Playback Rate or Units, select the arrow next to either box Timeline Toolbar.

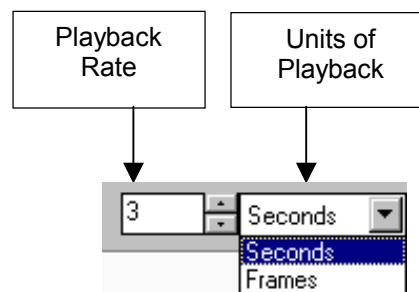

5. Position Out Time for the first (top) Timing Bar at 1:10 Seconds.
6. Click, hold and drag the In Point for the second (bottom) Timing Bar and position IN Time at 1 Second. These will overlap slightly.
7. Scrub to preview.

Create a Character-Based Motion

1. In Effect, click on the arrow under Object and change from Layer to Character.
2. You've now changed the way the Motion defines an Object. Your Parameters and Effect will now apply to the characters of Layer 1 individually but at the same time!
3. Scrub to preview and notice that each character has the same Start position off-screen.
4. You should also notice the addition of a Sub-Bar below the Timing Bar. This appears anytime an Object is defined as either: Character, Word or Row.

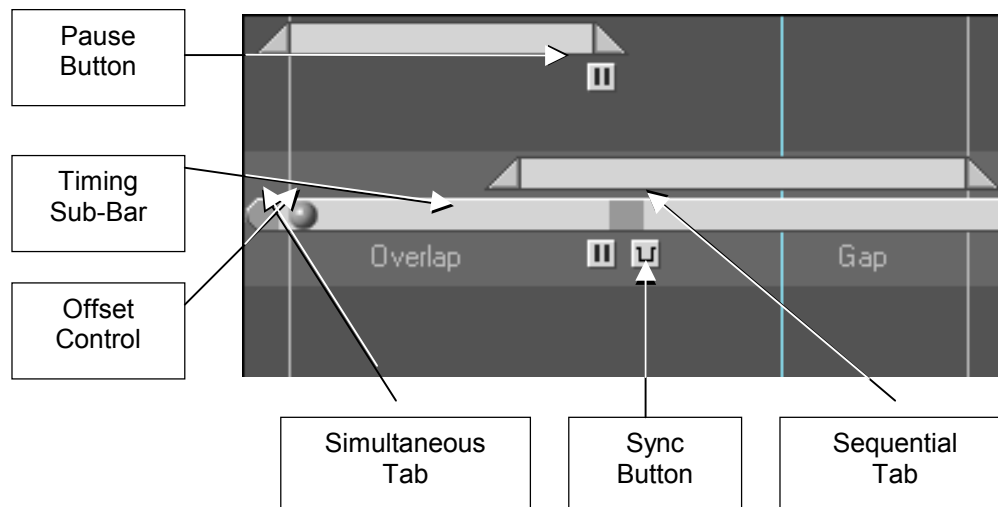

The *Sub-Bar* provides finer timing control of your Object's movement and is tied directly to the *Timing Bar* above it.

5. Click, hold and drag the round *Offset Control* just a pinch to the right. This will increase (to the right) or decrease (to the left) the delay between each character. Scrub to preview.
6. When the *Offset Control* is positioned on the left directly over the *Simultaneous Tab*, there is no delay in placement between each Object.
7. As the *Offset Control* is moved to its right, more delay will appear in between the placement of each Object.
8. The *Sequential Tab* places each Object, one directly after the other.
9. The *Sync Button* synchronizes timing on multiple actions that look to the same object (layer).
10. The *Pause Button* will hold that Action. A GPI or manual trigger will resume the Motion.
11. Position the *Scrub Bar* toward the end of the *Timeline*.
12. Set focus to the *Preview window* and select the words *Tonight on*.
13. Overwrite the text with *Tonight's Lineup on*. Your text will automatically word wrap and shrink to fit full because we have applied these parameters to the text layer (make sure *Word wrap* and *Shrink to fit* are selected in the *Layer section* of the *Style dialog box*).
14. Notice in the output that your Motion maintains its flight path, regardless of the content! Motion paths are specified in Objects. Whether an Object contains one letter, one word or one layer of several words, the path is never tied strictly to the content. We call this *Content Independence*.

Content Independence

The objective of Deko's Motion editor is to provide a mechanism by which to fly objects around the screen. In doing so, we recognize that a CG has specific needs just as any word processor, where relationships are formed between letters, words, sentences and paragraphs. This concept is also built into Deko, having created a motion environment that allows these relationships to be maintained. Deko allows an object to be defined equally as:

The letter: **T**


The word: **Tonight**

The row: **Tonight on Channel 22.**

Either way, we have created a system whereby it does not matter. Based on what you specify in the Motion editor, Deko automatically works out the definition of an Object without user intervention, saving both production time and cost. This is also ideal when interfaced to an automation system or external databases where content is not known at the time Motions are built!

Play the Motion

1. So far, you've been scrubbing through your Motion manually using the Scrub Bar. To preview your Motion in real time, click the Play button on the Timeline Toolbar.

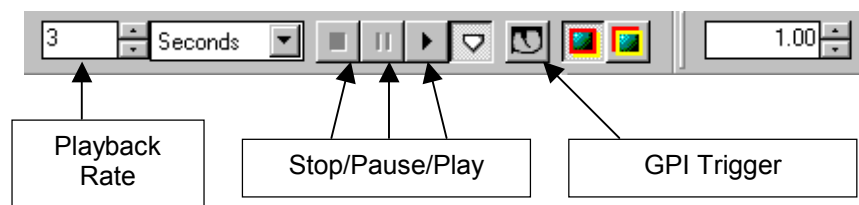

2. Press the Swap key to take the graphic back to Preview.

When you use the Play button to playback a Motion, Deko plays the entire Motion at the playback rate specified on the Timeline Toolbar. However, this rate is ignored when the Motion file is specified within a sequence. The sequencer's rate of time for that event takes priority.

You have now successfully created a basic Motion. Save this file. For a more complex approach, follow the next steps to enhance the existing Motion.

Create a Point-to-Point Motion


For the sake of identifying the next steps, we will call this *keyframing*. Though *keyframing* is a term mostly used on a DVE, Deko can produce a similar effect whereby different points of position are inserted as part of an Action for your Object.

Rather than Actions performing off-screen to on-screen, or on-screen to off-screen, Deko allows you to create Point-to-Point Actions within the screen and as part of a single Motion. Consider that your existing Action for the text layer already has two Points (keyframes):


- Start point (Bottom)
- End Point (Home)

We will add another. Let's begin by editing our first Point (the direction from which our Object appears off-screen).


1. Select the second Action assigned to Layer 1.
2. Click in the box beside X Position to disable that Parameter.
3. Click on Y Position to highlight the Parameter, but do not disable it. A check should remain.
4. From the Position Selector box in the Graph, select Top to Home. This defines the first and last Points. By now, you should notice that the display in the Timeline Graph will change to reflect the values of the selected Parameter.
5. Drag your Scrub Bar to about 2 seconds into the entire Motion. It should line up in the center of the second, corresponding Timing Bar (not the Sub-bar).

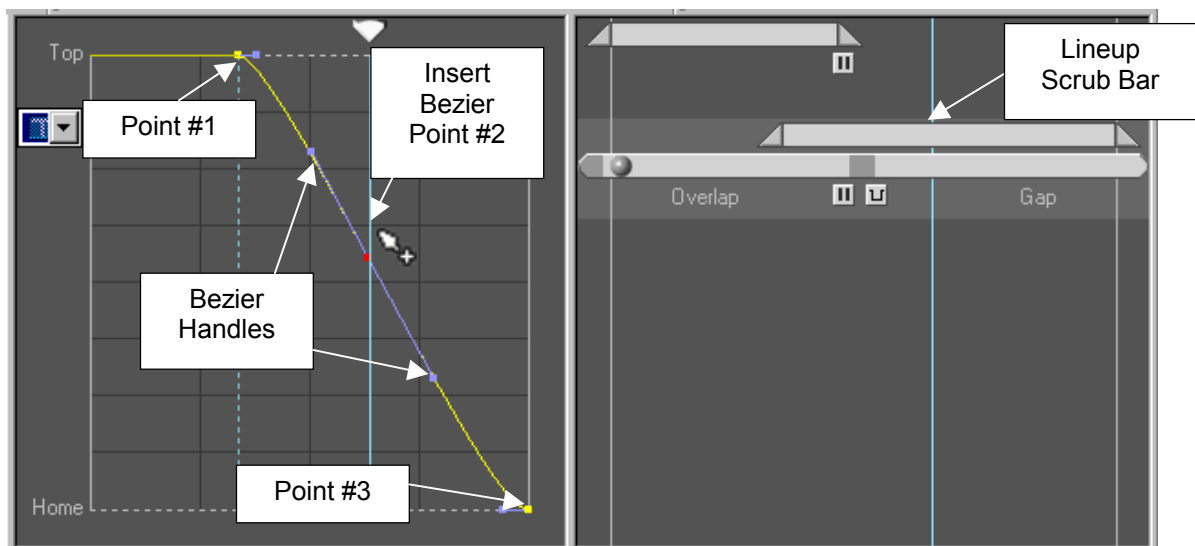


- Click once on the Insert point icon in the Timeline Toolbar. Your mouse pointer will display a “+” sign.

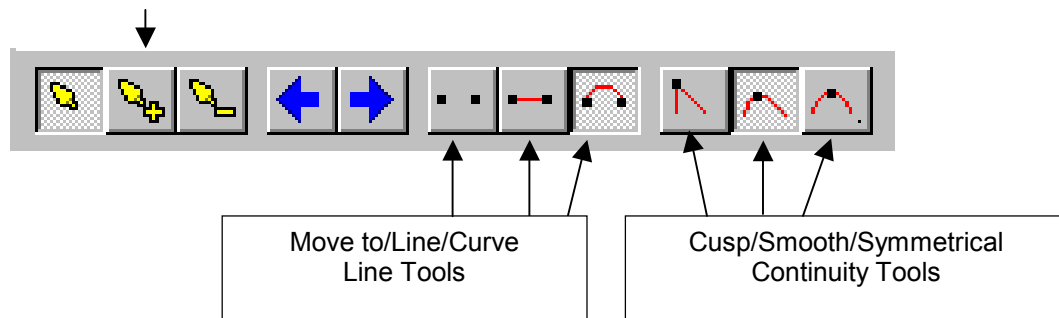

- Position your mouse in the Graph where the blue Scrub Bar and yellow, diagonal Timeline intersect. Click once to insert a red Bezier Point with two, purple handles at opposite ends. This becomes Point 2.
- The red Bezier point acts as a keyframe for repositioning. You can also assign a level of continuity by choosing one of five Continuity Tools in the Timeline Toolbar (see above). Deko defines continuity as a degree of smoothness from Point to Point. To assign continuity to Point 2, the Point must be selected (indicated in red).
- Click on the Cusp Tool in the Timeline Toolbar. This sets the level of continuity for Point 2 to be Abrupt instead of Smooth.
- Click on the bottom, purple Bezier handle of Point 2 and drag upward so it creates an arch.
- Click on the top, purple Bezier handle and drag upward and to the right so it creates a V with both handles.

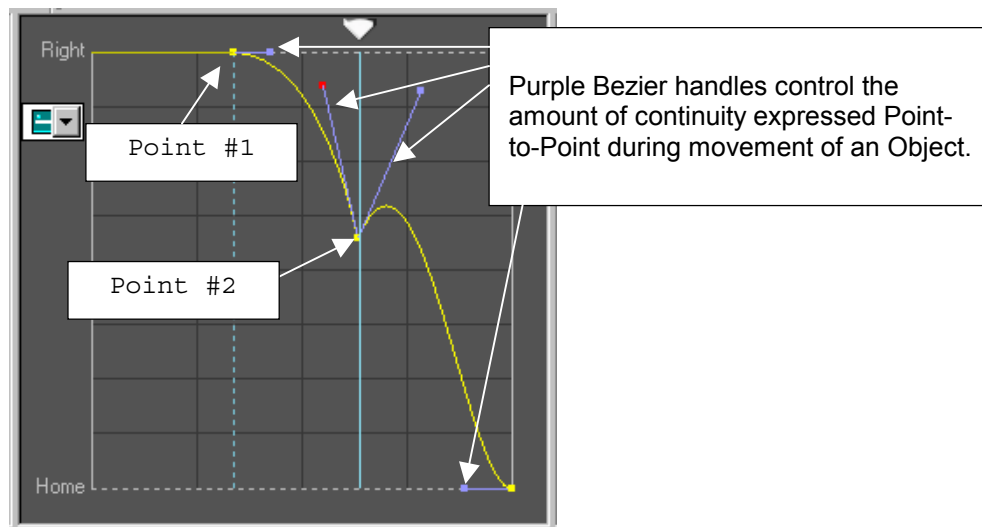


- The motion we are creating is an abrupt bounce of our Object during its flight path. To make this more effective, select Point 2 either manually with your mouse or for more accurate selection click on the Next Point Icon in the Timeline Toolbar.

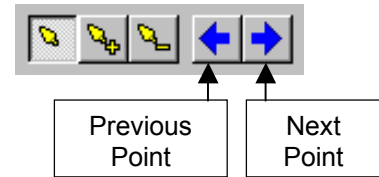

- Click, hold and drag Point 2 downward and below the Home position line. The Home line will lift upward to display a greater area below it.

- Release Point 2 when about $\frac{1}{4}$ of the Graph displays beyond the Home line. Select the right Bezier handle of Point 2 and drag upward. Select the only Bezier handle of Point 3 and drag upward. This creates an arch and provides a taller bounce to your effect.

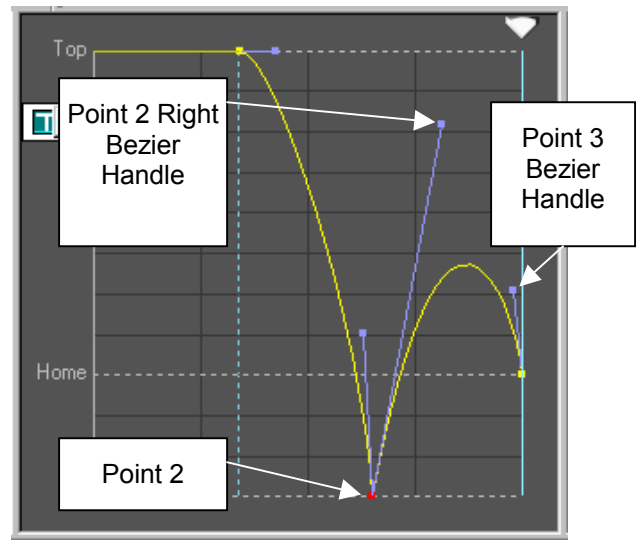

- Just for fun, enable both the X and Y Scale Parameters. In the Background Action change Effect from Page Turn to Tiles and play your Motion! Then save it.


Note: Though we have just created a Point-to-Point Motion for Position, this is only one of many Parameters. For greater creativity you should experiment and apply these steps to other Parameters.

Create a Transition Action

The Motion that we have just created applies to the contents of Preview graphic only and does not consider a graphic that may exist in the Program window. Let's now consider Program and create a transition between Preview and Program graphics.

- Select the Program window and open the file 100.dko.
- Right-click in the Action List and insert a new Action.
- In the Effect panel, change the Object to Graphic and select for Program at the bottom.
- Enable Opacity and X and Y Scale Parameters.
- Shorten the timing duration to 1 second.
- Scrub to preview. You should see the Program graphic shrink and dissolve center screen.
- For a better effect, select X Scale and position the second point to 2 instead of 0. This will scale that parameter to twice it's size instead of shrinking to zero.

- Do the same for Y Scale but follow the tip below. Then Scrub to preview and save the Motion.

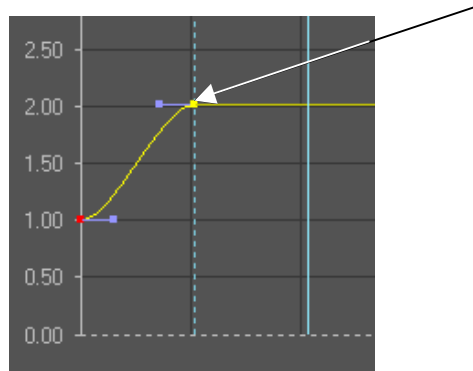

Tip: Copy and Paste Function


Values of a Point can be copied and pasted for use within the same Parameter. Rather than creating details of a point from scratch, click on X Scale and Copy (Ctrl + C); then click on Y Scale and Paste (Ctrl + V). This will apply those same values.

Congratulations on successfully building your Motion. Your results should match the sample sequence 100.seq. Continue on to explore more advanced techniques.

Edit a DVE Effect

The Timeline interface offers a large list of DVE Effects to apply to an Action. From this list, you can customize and edit the Parameters of a chosen Effect.

- Click once on the top, Background Action. In Effect, change from Tiles to Page Turn and click on the Edit button to open the DVE Effect Editor shown below.

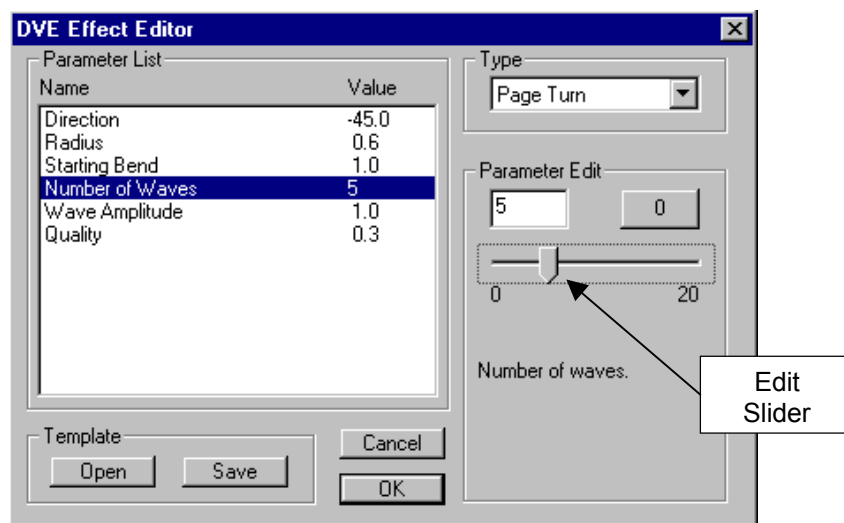


- There are many Parameters that can be edited and saved into a Template. Select Number of Waves.

3. Click, hold and drag the Edit slider to the right. Set the value for 5 waves and click OK.
4. Scrub to preview the new Effect.

Create an Absolute Motion Path


In the start of this lesson we mentioned the Timeline's ability to begin and end Motions in any arbitrary position determined by the user.

1. Open and play the sample sequence 300 . seq. This provides a good example of Absolute Motion.
2. After you have viewed the sample, clear your Program window and open 400 . dko in Preview.
3. Select the Motion window and open 200 . mot.
4. Change the Effect from Graphic to Layer and enable X Position.
5. The default for X Position is Left to Home.
6. Click on the Position Selector in the Graph and select Absolute.
7. Notice that the Timeline changes to portray Absolute left, center and right coordinates.
8. Scrub to preview.
9. You should see your text layer fly in from off screen/left, through the center and off screen/right. Our objective is to create an *on-screen* flight path.

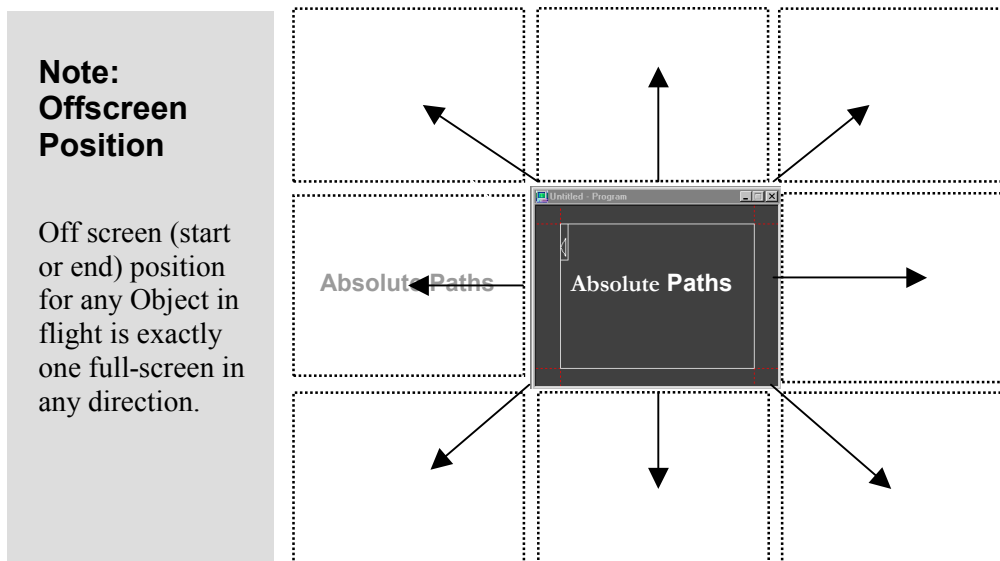

10. Position the scrub bar at the very front (left) of the Timeline.
11. Click on the left Point Abs 1f and drag down to just above the Centerline.

12. Click on the right Point Abs Rt and drag up to just below the Centerline.
13. View your output as a guide for placement. Scrub to preview.

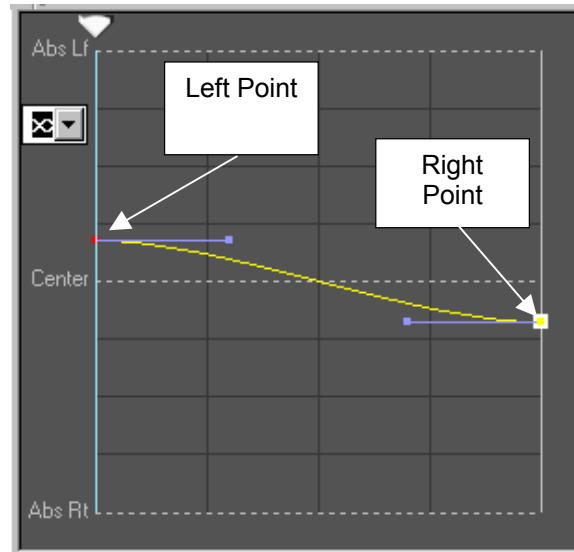

14. Enable Y Position and select the Absolute path.
15. Use the Copy function on the X Position and Paste to the Y Position (see the Tip in step 11).
16. Enable Z Rotate then Scrub to preview.


Help

Why Does My Program Output Disappear When I Scrub a Motion?

When you click and drag the Scrub Handle, you enable what is called *Scrub mode*. This puts the user into a place where the Program output is ignored for the sake of previewing the creation of a motion effect.

In the instance where the user does not have a graphic in the Program window, then nothing is affected. But in the case where there is a graphic in the Program window, but there is no accommodating *Program* Action, then the Program channel is ignored.

To disable Scrub Mode, click once on the Scrub Handle Icon in the Timeline Toolbar. Your program graphic will reappear in the output monitor.

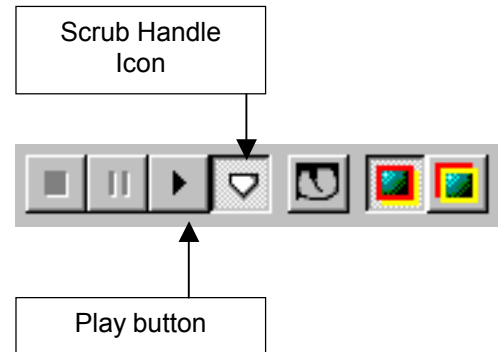


I played My Motion From the Timeline Toolbar. Where is My Preview Graphic?

When you play your Motion, remember that Preview graphics will now appear in Program. Press the Swap key (SK: F3, FAK: Swap) to transfer back from Program to Preview. The Program graphic (if there was one) will disappear.


Exercise: Build a Slate Motion

The previous steps helped you to build various motion paths. In this exercise you will build a more advanced motion for the `slate.dko` graphic (right), already created (Lesson 5, page 34). Every layer has also been named (Lesson 5, page 30).

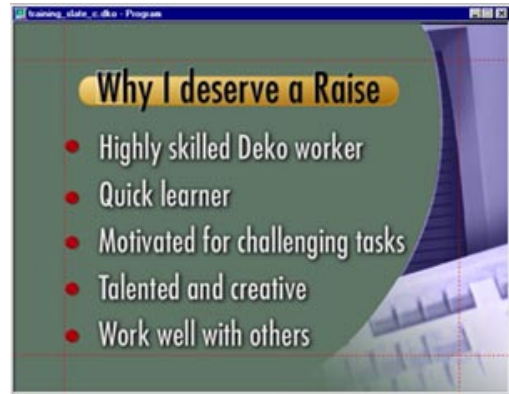


We will incorporate the following techniques that will make the most efficient Motion playback:


- Layer-naming
- Wild Card for Grouping
- Inserting Points
- Copy and Paste
- Pausing

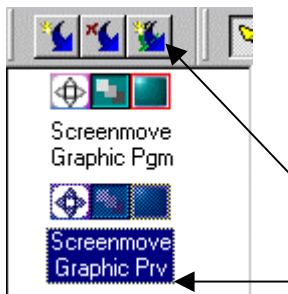



1. Go to Motion layout. (Shift + Ctrl + M)
2. Set focus to the Preview window and open the file `slate.dko`, created in Lesson 5.
3. Click on the *Clear Motion* tool to start with a fresh Motion window.
4. Click on the (bottom) Preview Action.

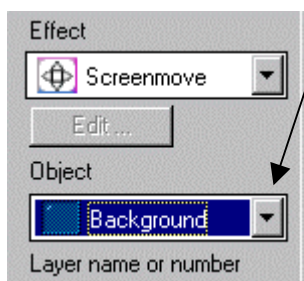


5. In the Effect section, specify the *Object* to be the Background.
6. In the Parameter section, click in the box to the Left of *X Position* to enable that parameter.
7. In the Timeline Graph section, click on the down arrow in the *Position Selector* and choose Right to Home.
8. Above the Timeline Graph, specify 5 Seconds as the total Rate of Time for this Motion.

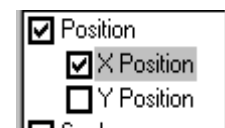

- In the Timing section, click and hold on the Out point (triangle) for the bottom Timing bar. Drag left until it displays an Out time of 1;0s (1 second, 0 frames).

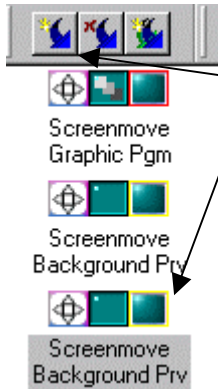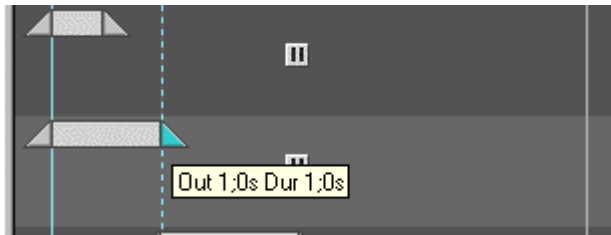

- Click on the *New Action* tool to insert a new Action in the Action list.
- By default, the Object will specify a Background. Change this to Layer.
- We will use this Action for the layer named Title. Click on the down arrow under *Layer name or number*. A drop down list of layer names will display. Select *Title*.

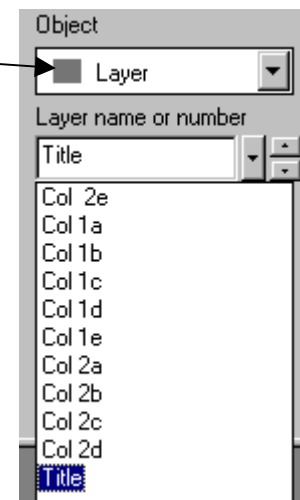



Note: Benefits of Layer Naming

Specifying a layer name avoids a dependence on layer priority and saves time for the operator.

For example: If an Action specifies layer number and a new layer, such as a logo, is added to the intended graphic, the layer priority will be changed and the Action will now affect a different layer. This will require the operator to open the intended graphic and re-order the layers.


Layer naming is the most efficient way to build a Motion, and naming layers smartly will allow you to group multiple layers.

- Enable the parameters *X Position* and *X Rotate*.
- With the parameter *X Rotate* highlighted, click and hold on the red point next to 360°. Drag in a downward direction and release at 180°.

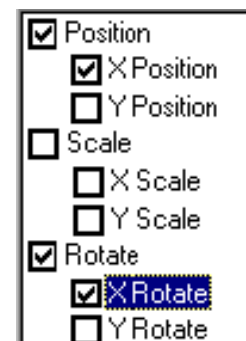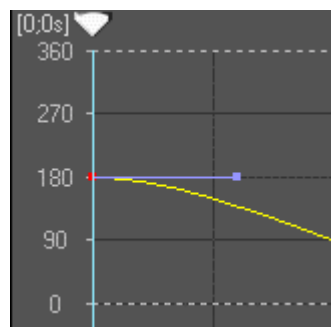



- In the Timing section, click and hold on the *In point* for the third Timing bar. Drag right until it displays an In time of 1;0s (1 sec, 0 frames).

Click and drag the *Out point* left until it displays an Out time of 2:10s (2 sec, 10 frames).
Click, hold and drag the Scrub bar to preview.

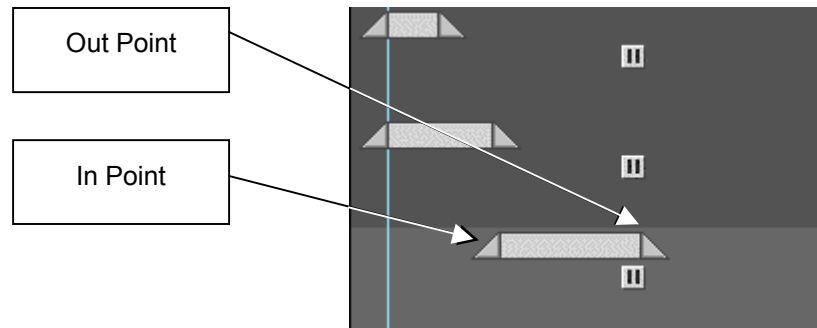


Add Actions for Bullet Layers


- Insert a New Action.
- Specify the Object as Layer and in *Layer name or number*, select Col 1a.
- In the Parameter section, enable *X Position*.
- In the Timing section, move the *In point* for the fourth Timing bar to 2;10.

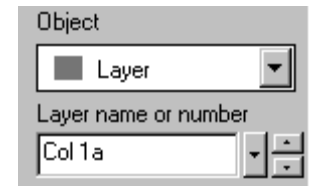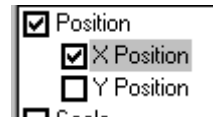

Note: Be sure that the third and fourth Timing bars do not overlap.

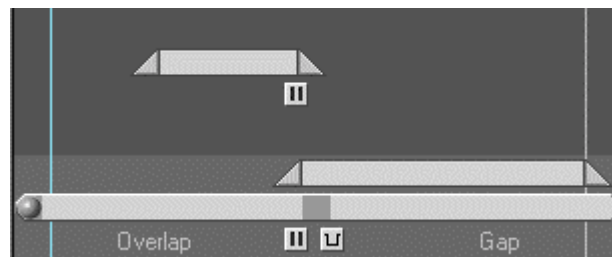


- We will use layer naming as a method for grouping multiple layers. In this example, we will group all layers that begin with "Col 1". To do this, under *Layer name or number*, replace the "a" with an asterisk (*).

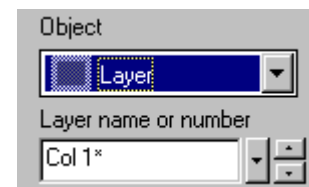


Drag the Scrub bar to preview. This is called a *wild card*.


Note: Notice the addition of a *sub-bar* below the timing bar. This provides more control over grouped Objects and only appears when an Object is specified as Row, Word or Character or used as a Wild Card. We will use the round control in the sub-bar to create a sequential delay between the placement of each bullet.

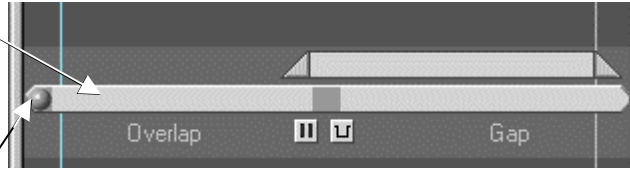


- Click, hold and drag the round control slightly to the right. Scrub the Motion to see the delay. Then click on the center gray square in the sub-bar to place the round control.

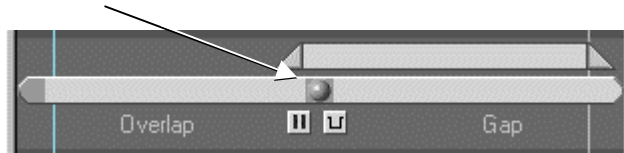

- Scrub to preview a sequential placement of each bullet in the “Col 1*” group.
- Since the Action for Column 2 will be almost identical to Column 1, we can copy and paste this Action for the text in Column 2. Click on the fourth Action. Press Ctrl + C, then Ctrl + V.

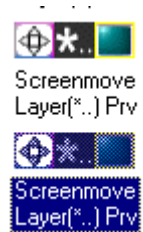


A duplicate action is created and a fifth Action and Timing bar will display.

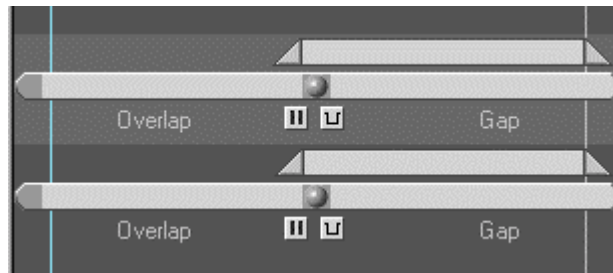

- Position
 - X Position
 - Y Position
- Scale
 - X Scale
 - Y Scale
- Rotate
 - X Rotate
 - Y Rotate
 - Z Rotate
- Skew
- Opacity

- Under *Layer name or number*, replace the “1” with a “2”.
- Enable the *Opacity* parameter, and then enable both *X Scale* and *Y Scale*. Scrub to preview.

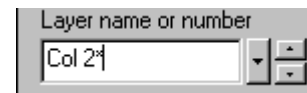

11. As an advanced technique, we will add a *Point* to the Scale parameter timeline to create a dynamic re-size of the text. Click on the word *X Scale* to display the graph for that parameter. Be careful not to disable it.

Scale
 X Scale
 Y Scale
12. Just above the Effect selection click on the *Insert Point* tool.
13. Position your mouse in the Graph and click in the very middle of the yellow timeline. A red point will display. (Fig. A) Click on the red point and drag up to just above the 1.00 line. (Fig. B)

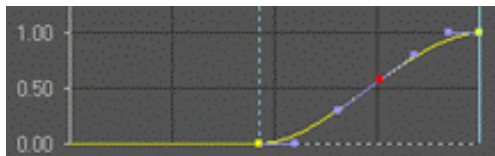


Figure A


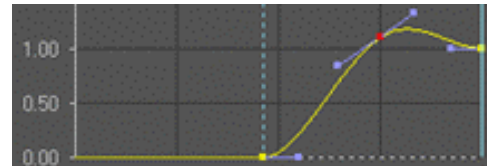


Figure B

14. In the Parameter section, click on the word *X Scale*. Press Ctrl + C to copy the values of that parameter. Click on the word *Y Scale*. Press Ctrl + V to paste the values. A red point will display.
15. Play the Motion to preview real-time playback.

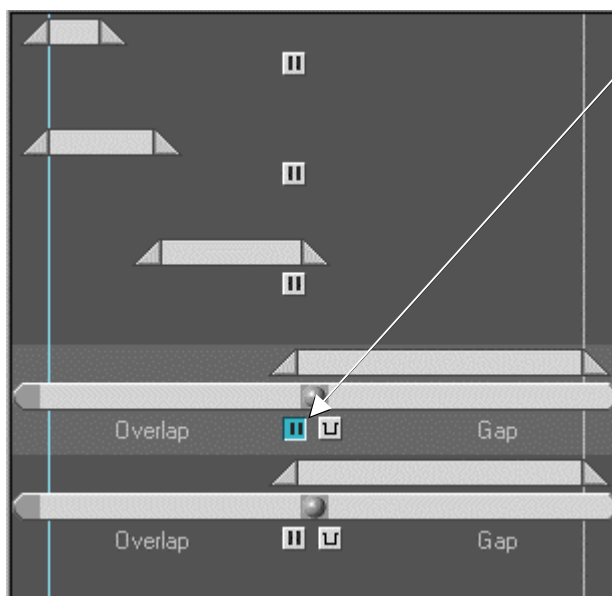


16. Finally, we will place a pause for the manual reveal of each bullet point. Click on the pause icon below the fourth Timing sub-bar to enable a pause between the placement of each Object. The pause icon will turn blue to indicate that it is active.
17. Play the Motion. The Play key will trigger after each pause. Save the motion as `slate.mot`.

Further Exploration

How Can I Increase the Degree of Rotation Beyond 360°?

Although the Timeline Graph displays default Rotation values from -360° (counter clockwise) to $+360^\circ$ (clockwise), you are not limited to this setting. To apply Rotation beyond $+360^\circ$:

1. Click and hold on the small, red Bezier point in the Graph.
2. Drag your mouse in an upward direction. Your Graph will display the added values or enter the desired value manually in the Numerical Setting box.
3. Use this same approach in the downward direction to apply Rotation counter clockwise.

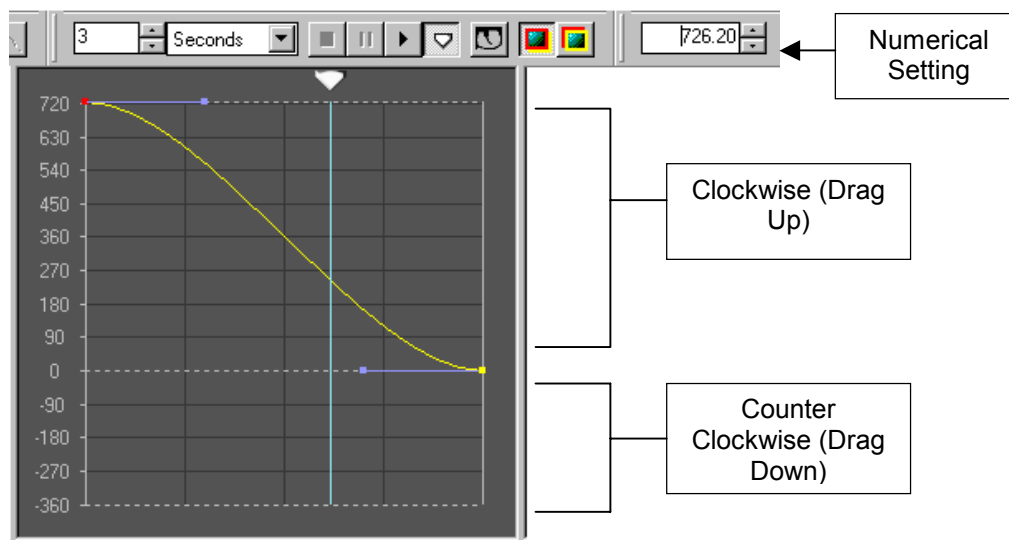

What Happens When I define an Object as a Word or Row?

When an Object in the Effect section specifies a character, word or row, a Sub-bar will appear just below the Timing bar for that Action. This gives you the ability to apply a delay between each Object during its flight path. Experiment by selecting each and scrubbing through the Timeline to give you a better feel for the difference between each.

Run a Motion that Defines “Home Position”

1. Select Motion Compose Layout.
2. Set focus to the Preview window and open `200.dko`.
3. Set focus to the Timeline Motion Editor and open `procedural.mot`.
4. Click and hold on the scrub bar arrow and then drag to the right to preview the effect.
5. Edit to the content by adding or deleting text, and then scrub the motion again. Notice that the effect remains the same regardless of the number of characters input.

Shortcut Keys

| | |
|-----------------------|-------------------------------------|
| Motion Compose layout | Shift + Ctrl + M |
| Clear Program window | SK: F8 twice; FAK: Clear Program |
| Swap | SK: F3; FAK: Swap |
| Save File As | SK: F12; FAK: Save File |
| Save File | SK: ALT + F12; FAK: ALT + Save File |
| Open Macro window | SK: F2; FAK: Macro Edit |

Lesson 11: Using Macros

A *command* is an instruction to FXDeko to perform a specific function.

The FXDeko user interface (menus, shortcut keys, etc.) implicitly executes commands. Every time you press a key or select a menu item, you invoke a command that directs FXDeko to perform a function.

If you know the command name for the function you wish to perform, you can invoke the command explicitly by entering its name on the *Command Bar*.



For example, the command to clear the current graphic is `clear graphic`. Try it. Press F4 to select the Command Bar, type `clear graphic`, then press Enter.

Some commands have user-defined parameters. The Prompt button on the Command Bar opens a Command Prompt dialog box where you can specify parameter values. The Defaults button in the resets a command's parameters to their default values.


Every command recognized by FXDeko is listed and described in detail in the accompanying *FXDeko Command Reference*.

A *macro* is a sequence of FXDeko commands. You can name and store a macro by saving it in a file. You can invoke a macro in the same way you can invoke a command, by typing the macro name on the Command Bar and pressing Enter.

Once you learn FXDeko's macro language, you will be able to write and edit macros directly in the *Macro window*. For now, you can follow the simple instructions in this section to quickly begin creating macros using FXDeko's *Macro Recorder*.


Using the Macro Recorder


Recording a Macro

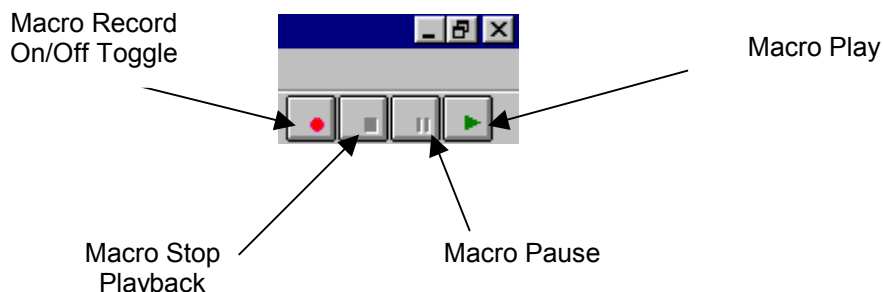

To Record a Macro:

1. To turn the macro recorder on, do one of the following:

 - Click the record button at the far right end of the text bar. 
- Go to Macro > Record Macro (Ctrl + F2).

On the text bar, the button lights up red to indicate that the macro recorder is on. 

2. Use the keyboard and/or mouse to perform the sequence of actions that will constitute the macro.

3. To turn the recorder off, do one of the following:


- Click off the record button on the text bar.
- Go to Macro > Record Macro (Ctrl + F2).
- Press F2 to turn the recorder off and activate the Macro window.


To view the macro you just recorded, do one of the following:

- Go to Window > Select Layout > Macro Edit.
- Go to View > Macro (F2).

Playing a Macro

To play the active macro, do one of the following:

- Click the play button near the right end of the text bar. 
- Choose Play Macro (Alt + F2) from the Macro menu.


On the text bar, the play button lights up green to indicate that a macro is playing. 

Note: the name of the macro that is currently playing appears on the *status bar*. If no Macro window or Sequence window is active, FXDeko plays the macro in the most recently activated Macro window.

Exercise – Recording a Macro

To see how this works please perform the following steps:

1. Click the macro record button and notice that it highlights in pink.
2. Click on Preset 1 in the Preset Style window with your mouse or press Style 1 (FAK).
3. Press F5 or Program (FAK) on your keyboard to select the graphic window, and then type the word Deko.
4. Double click on this word to select it.
5. Click in turn on presets 2 to 8 in the Deko Preset Style window or press Style 2 to 8 (FAK).
6. Click on the record macro button again to turn off the record function.
7. Press the Macro Edit key or go to View > Macro. The macro you just recorded will be displayed.

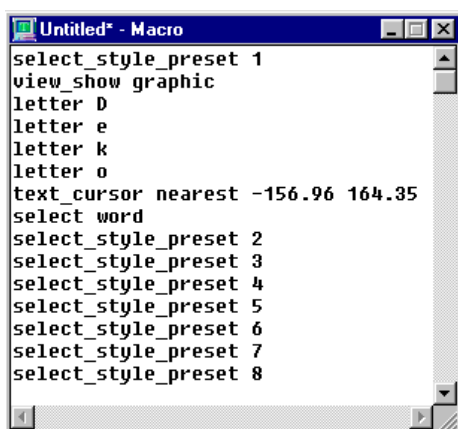


```
Untitled* - Macro
select_style_preset 1
view_show_graphic
letter D
letter e
letter k
letter o
text_cursor nearest -156.96 164.35
select word
select_style_preset 2
select_style_preset 3
select_style_preset 4
select_style_preset 5
select_style_preset 6
select_style_preset 7
select_style_preset 8
```

8. Press F5 then F8 or Clear Program (FAK) to select the graphic window and erase it.
9. Click on the green macro play button to perform the macro and you will then see the word Deko appear in Style 8.

You may have expected it to appear first in Style 1 then cycle through to Style 8. The reason that it does not appear to do that is that the macro performs all of the actions very quickly.

10. To slow down the macro, select the macro window (as in step 7).
11. Click with your mouse at the end of `select word` and then press the Enter key to insert a carriage return.

12. Type `render`. This is a useful command when you want the machine to wait until it displays a graphic before moving on to the next step.

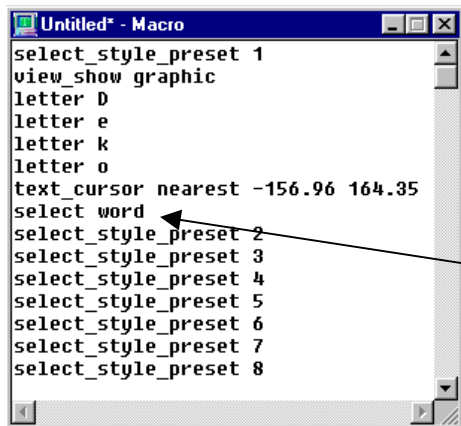


```

select_style_preset 1
view_show graphic
letter D
letter e
letter k
letter o
text_cursor nearest -156.96 164.35
select word
select_style_preset 2
select_style_preset 3
select_style_preset 4
select_style_preset 5
select_style_preset 6
select_style_preset 7
select_style_preset 8

```

Click here (step 12)
Enter a carriage return and type the word *render*

13. Click at the end of `select_style_preset 2` and then press the Enter key to insert a carriage return, type `render`. Repeat for other rows as shown below.

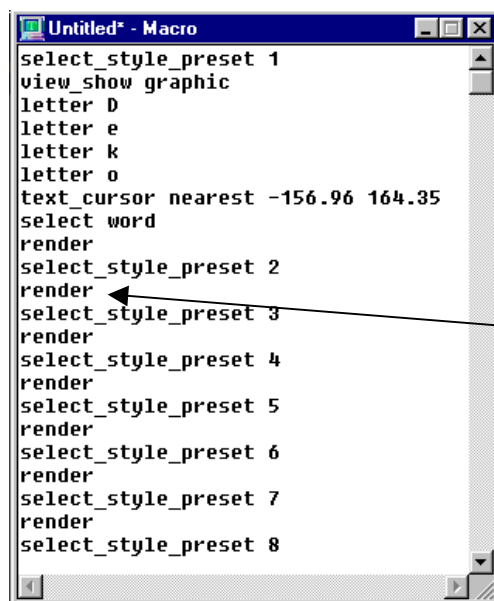

```

select_style_preset 1
view_show graphic
letter D
letter e
letter k
letter o
text_cursor nearest -156.96 164.35
select word
render
select_style_preset 2
render
select_style_preset 3
render
select_style_preset 4
render
select_style_preset 5
render
select_style_preset 6
render
select_style_preset 7
render
select_style_preset 8

```


Click at end of "select_style_preset 2"
and enter a carriage return.
Type *Render*.
Repeat this for the other rows.

14. Click on the green macro play button and watch as the display now changes from style 1 through 8 with a short delay.

Replacing Commands

The command `render` is not the only command that you can use to force the machine to wait until it updates. You can also use the `wait` command and specify how long you wish the machine to wait. The syntax to use is `wait 1` for 1 second or `wait 0 12` for a 12 frame delay. There is a very easy way to replace commands in macros and this is to use the replace function. To see how this works please perform the following steps:

1. Press Macro Edit to view your macro.
2. Place the cursor at the top line.
3. Go to Edit > Replace.
4. Type `render` in the Find what: window, and `wait 1` in the Replace with: window (see the figure below) then click on Replace All.
5. Close the replace window.
6. Click on the green macro play button. The delay will now be 1 second between events.

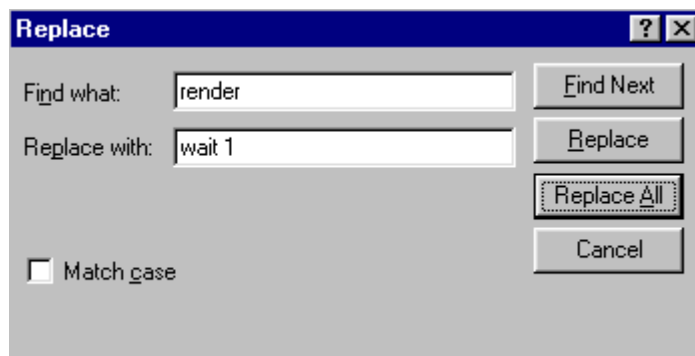


Loops and Variables

The above program can be made shorter by using a loop and a variable instead of typing the same information several times. For example, you can type `select_style_preset` and `render` or `wait` just once but use them however many times they are required. You can find more information on variables in the on-line help menu but basically there are 2 types:

- System-defined – A system variable is prefixed by the `@` symbol and examples are `@time` and `@date` which are the PC time and date respectively.
- User-defined. – User-defined variables are prefixed with the `$` symbol and can be any name that you require (without gaps) but the first character after the `$` symbol must NOT be a number.

To modify the macro that you have just created to use a loop and variables do the following:

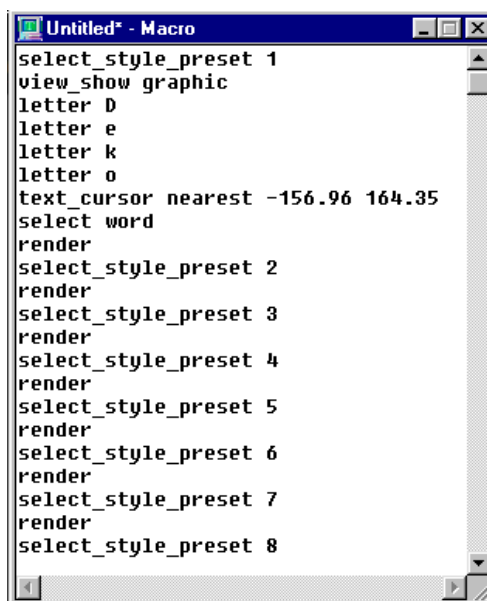


```

select_style_preset 1
view_show graphic
letter D
letter e
letter k
letter o
text_cursor nearest -156.96 164.35
select word
render
select_style_preset 2
render
select_style_preset 3
render
select_style_preset 4
render
select_style_preset 5
render
select_style_preset 6
render
select_style_preset 7
render
select_style_preset 8

```

1. You should see the display as in the figure above.
2. Modify the macro to appear as below.

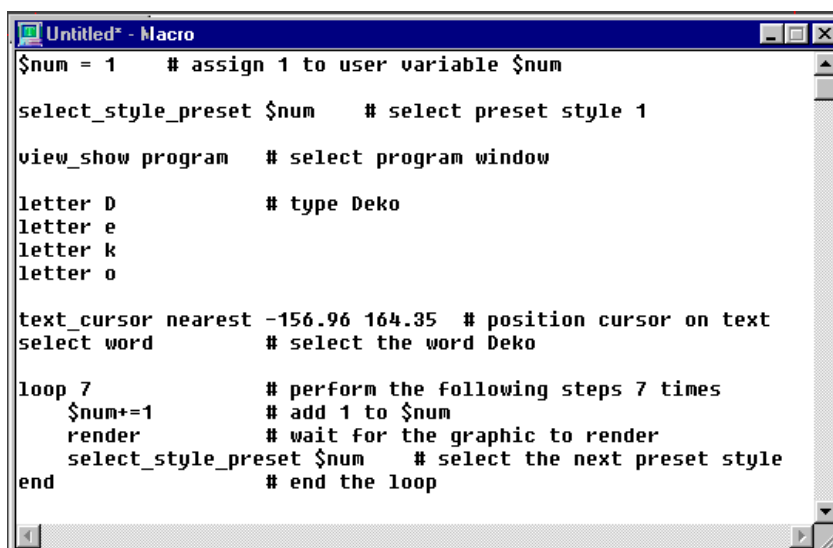

```

$num = 1      # assign 1 to user variable $num

select_style_preset $num    # select preset style 1

view_show program    # select program window

letter D            # type Deko
letter e
letter k
letter o

text_cursor nearest -156.96 164.35 # position cursor on text
select word        # select the word Deko

loop 7             # perform the following steps 7 times
  $num+=1         # add 1 to $num
  render          # wait for the graphic to render
  select_style_preset $num    # select the next preset style
end               # end the loop

```

In the above example, you will see the user-defined variable ($\$num$) and the loop command. The comments appear after hash symbol (#) to show what each line of the macro does. These are not necessary for the program to work but are included for future reference.

Click on the green macro play button to perform the macro.

Note: $\$num$ was used to indicate a number in the above example; it is good practice to use a name that describes what the variable does. For example, $\$name$ if you want to enter a name, $\$loc$ or $\$location$ for entering a location.


Assigning Macros to the Preset Macro Key

For repetitive tasks, you can create a macro and assign it to the Preset Macro key. To access functions assigned to this key, hold down the Preset Macro key and press the assigned key for the Macro.


1. If this is a new macro, record your macro with the macro recorder.




3. Press the Macro Edit key (SK: F2, FAK: Macro Edit), to open the Macro Window. You will see several lines of K language that define your actions in code.
4. Save the macro (SK: F12, FAK: Save File).
5. Press the Preset Macro key in the bottom, left on the FAK. This will open a window where you can enter up to 26 macros as character assignments.

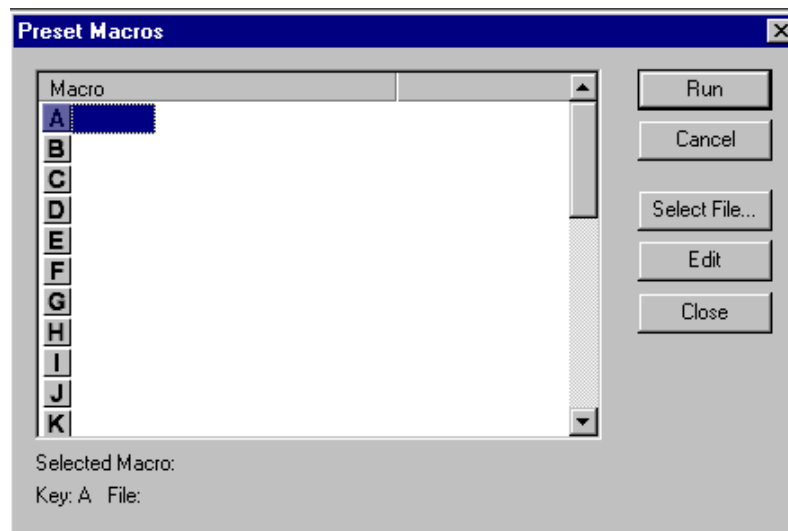

6. Scroll to the desired key assignment and click on the key.
7. Press the Select File button. The Select Preset Macro dialog box appears.
8. Navigate to the desired Macro file. Select the file and click OK.
9. The Macro will appear assigned to the desired key.

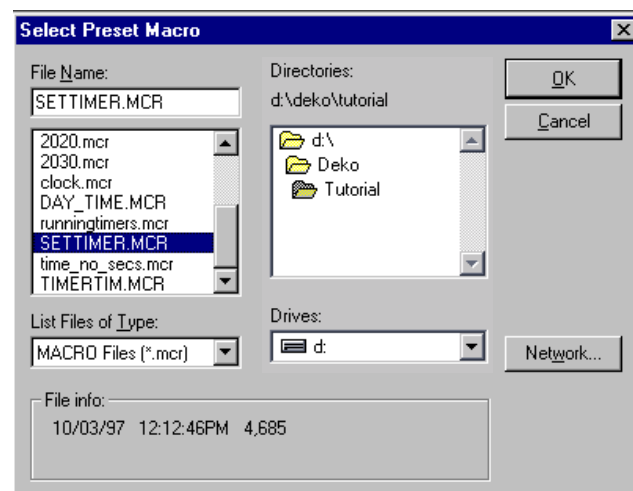

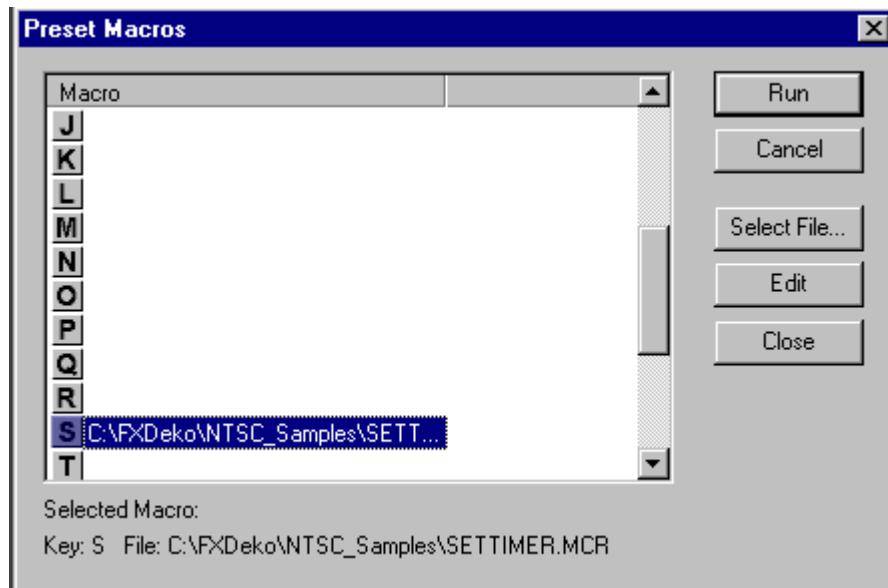



10. Click close to accept the assignment.
11. To run the Preset Macro, press the Preset Macro key + the assigned key.

Exercise: Build a Serve Indicator Macro

1. Open the sample graphic D:\Deko\Tutorial\225.dko. A lower third scoreboard for a tennis match will display. See the sample below.
2. To the left of the player names, locate the yellow ellipse shape layers. Continue on to build a macro that will hide or reveal these layers to act as serve indicators.



3. From Style Edit layout, click on the Macro record button in the top, right of the Deko interface to enable the Macro recorder. The button will turn pink to indicate record. If you are asked if you wish to clear the Macro window before recording, select yes.
4. Go to Layer > More Layers.
5. From the More Layers window, scroll down and select Layer 14. Click OK.
6. In the Style Edit window, click on the Layer button.
7. Click the More button at the bottom of the window, then click on Hide. Layer 14 will be hidden.

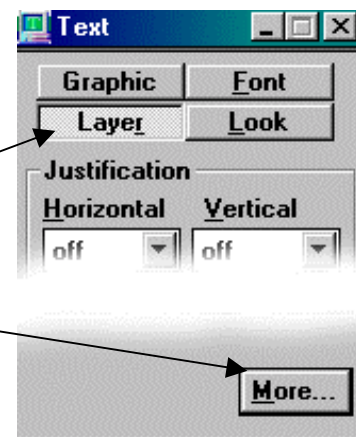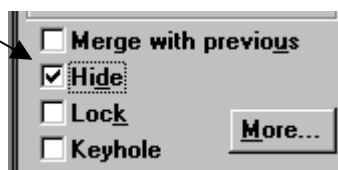

8. Click on the pink Record button to stop the Macro recorder.



9. Press the Macro Edit key to open the Macro window to view the recorded commands. These commands make up the `serve_up` macro.

We will need 2 more macros: `serve_down` and `serve_none`.

10. Within the Macro window, select and delete all commands except what is displayed in Figure A.

11. In an effort to be efficient, this macro should also contain commands to show Layer 13. Select and copy (Ctrl + C) the 2 command rows.

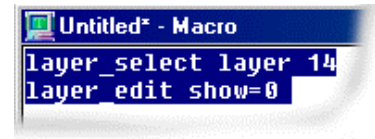


Figure A

12. Move the cursor below the last line and paste (Ctrl + V).

13. Highlight the 14 in the second `layer 14` and change it to 13.

14. Highlight 0 in the second `layer_edit show=0` and change it to 1.


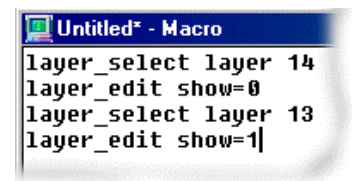


Figure B


15. Save this macro as `serve_up.mcr`. Your macro should look like Figure B.



16. Edit this macro show Layer 14 and hide Layer 13. Save this as `serve_down.mcr`. Your macro should look like the following:

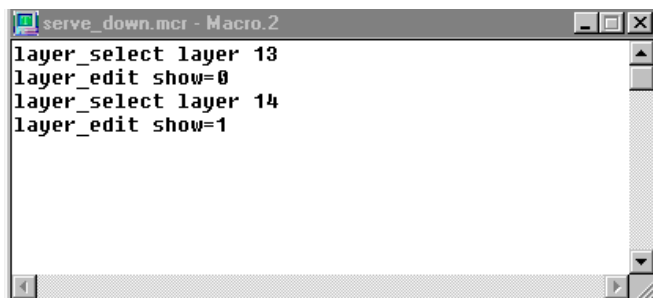

17. Modify this macro to hide Layer 14 and Layer 13. Save this as `serve_none.mcr`. Your macro should look like the following:

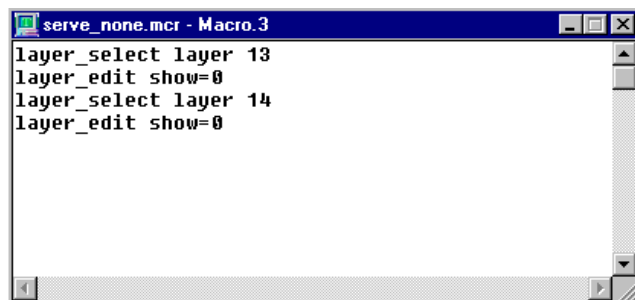

```
serve_none.mcr - Macro.3
layer_select layer 13
layer_edit show=0
layer_select layer 14
layer_edit show=0
```

Run Macro on FAK

To run this Macro on a FastAction keyboard:

1. Press the Preset Macro key to open a dialog window.
2. Scroll down and select the Z location, then press the Select File button.
3. Navigate to `D:\Deko\Tutorial\macros`, and select the macro file named `serve_up.mcr`.
4. Scroll up to the X location, and then press the Select File button.
5. Navigate to `D:\Deko\Tutorial\macros`, and select the macro file named `serve_down.mcr`.
6. Scroll up to the C location, and then press the Select File button.
7. Navigate to `D:\Deko\Tutorial\macros`, and select the macro file named `serve_none.mcr`.
8. Go to the Options menu and select Save Settings Now, to maintain the Preset assignments after re-launch of the Deko program.
9. Press Preset Macro, then the appropriate character to run the macros.

Run Macro on SK

To run this Macro on a Standard keyboard:

1. Press the Cmd key (F4) to enter your cursor in the command line.
2. Type `serve_up` then press the Enter key. The macro will play.
3. Type `serve_down` then press the Enter key. The macro will play.


4. Type `serve_none` then press the Enter key. The macro will play.
5. You will not need to re-type any of the macros above. Press F4, then the up or down arrow to gain access to recently played macros.

Exercise: Review and Run a Directory Select Macro

The directory macro: `dir_select` is already created and stored in the `D:\Deko\Tutorial` folder. This macro enables the user to change through several directory paths quickly and efficiently.

This exercise works in conjunction with a previous exercise found on page 15 of Lesson Three: Setting up and Managing File Directories. If you have not completed that exercise, go back and refer to those pages before continuing on.

1. Press the Macro Edit key (FAK) to open the Macro window.
2. Open the macro `D:\Deko\Tutorial\dir_select.mcr`. The following Macro will display:

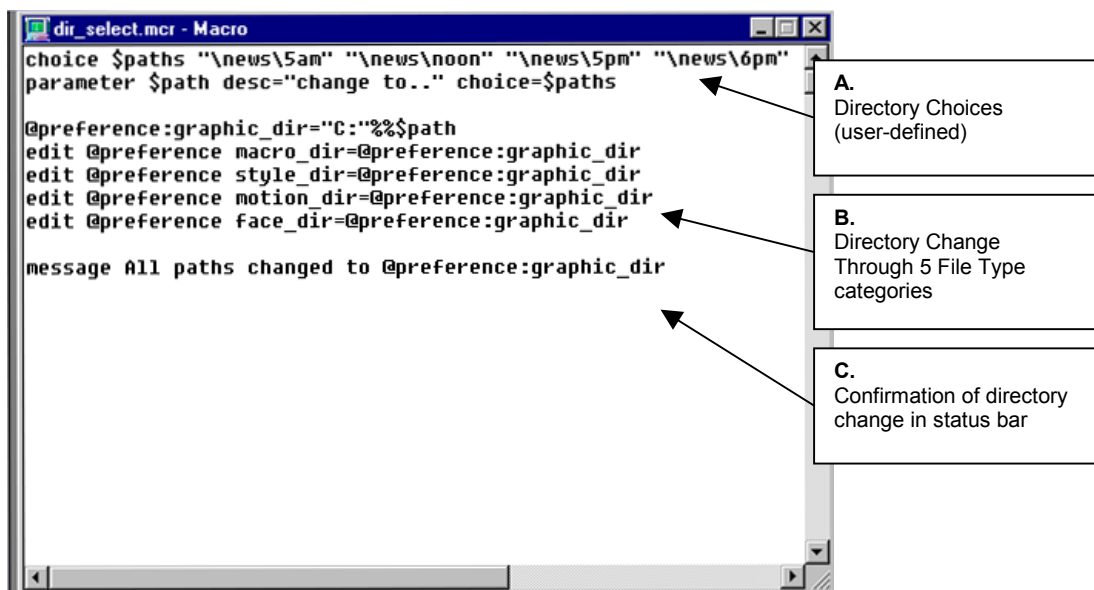

There are three sections of this Macro, separated by a blank row:

- In the first section, a choice list of directory paths is provided. These choices are user-defined and can be accessed rapidly in the form of a drop down list.
- The second section contains commands that will perform based on the chosen directory. The commands will set all directory paths chosen by the user for each of the five Deko File Type categories: Graphics, Macros, Styles, Motions and Custom Typefaces.
- After the directory choice is selected and all directory paths have properly changed, a confirmation of the selected directory will appear in the bottom, left of the Deko status bar.

Exercise – “my_settings” Macro

This Macro will record all software and hardware settings and preferences as defined by the user into the Macro Edit window. A Deko operator, who begins new work on a fresh Deko system, can restore all of their preferred settings by running this Macro as a one-time process. Save the Settings once and they will restore each time the Deko is powered up.

We will record 3 commands and save as one Macro file for playback on a new Deko system:

learn @preference – Records all settings enabled in the Options/Preferences menu, such as: Starting Layout, Prompt options, Current Directory, Cursor Style and other options.

learn @settings – Records all software settings such as Preset Macro assignments, Preset Style and Shader options and other options.

Caution: Running the “learn @hardware” command will affect I/O settings that may have already been established by technical staff. Be sure you have proper permissions before modifying the hardware settings.

To Create “my_settings.mcr”:


1. From Style Edit layout, open the Macro Edit window. (SK: F2, FAK: Macro Edit)
2. Click on the Macro record button to enable the Macro recorder. The button will turn pink to indicate record. If asked if you wish to clear the Macro window before recording, select yes.
3. In the Command Bar, type the following 3 commands separated by a semicolon:

```
learn @settings; learn @preference
```

(Be sure to include a space between learn and @)

4. Press Enter to display all the commands that make up your settings in the Macro Edit window.
5. Click on the pink record button to turn the recorder off.
6. Set focus to the Macro Edit window and press Ctrl + End to place the cursor at the very end of the Macro.
7. To display a confirmation of the Macro’s success, type the following:

```
message My Settings Complete
```

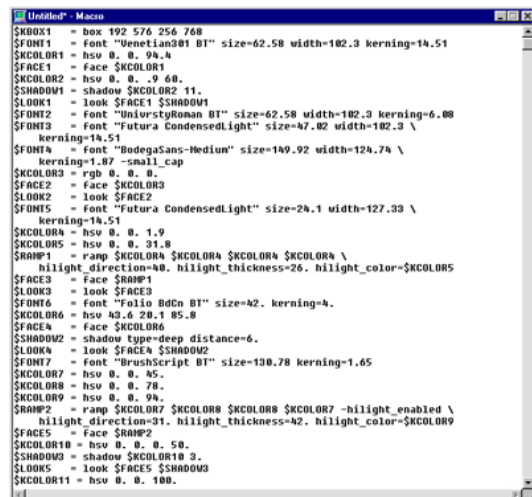

```

Untitled - Macro
$KBOX1 = box 192 576 256 768
$FONT1 = font "Venetian301 BT" size=62.58 width=182.3 kerning=14.51
$COLOR1 = hsv 0. 0. 94.4
$FACE1 = face $COLOR1
$COLOR2 = hsv 0. 0. .9 60.
$SHADOW1 = shadow $COLOR2 11.
$LOOK1 = look $FACE1 $SHADOW1
$FONT2 = font "UnifontRoman BT" size=62.58 width=182.3 kerning=6.88
$FONT3 = font "FuturaCondensedLight" size=47.82 width=182.3 \
kerning=14.51
$FONT4 = font "BodegasSans-Medium" size=149.92 width=124.74 \
kerning=1.87 -small_cap
$COLOR3 = rgb 0. 0. 0.
$FACE2 = face $COLOR3
$LOOK2 = look $FACE2
$FONT5 = font "FuturaCondensedLight" size=24.1 width=127.33 \
kerning=14.51
$COLOR4 = hsv 0. 0. 1.9
$COLOR5 = hsv 0. 0. 31.8
$RAMP1 = ramp $COLOR4 $COLOR4 $COLOR4 $COLOR4 \
highlight_direction=40. highlight_thickness=26. highlight_color=$COLOR5
$FACE3 = face $RAMP1
$LOOK3 = look $FACE3
$FONT6 = font "Folio Bdcn BT" size=42. kerning=4.
$COLOR6 = hsv 43.6 28.1 85.8
$FACE4 = face $COLOR6
$SHADOW2 = shadow type=deep distance=6.
$LOOK4 = look $FACE4 $SHADOW2
$FONT7 = font "BrushScript BT" size=130.78 kerning=1.65
$COLOR7 = hsv 0. 0. 85.
$COLOR8 = hsv 0. 0. 78.
$COLOR9 = hsv 0. 0. 94.
$RAMP2 = ramp $COLOR7 $COLOR8 $COLOR8 $COLOR7 -hilight_enabled \
highlight_direction=01. hilight_thickness=42. hilight_color=$COLOR9
$FACE5 = face $RAMP2
$COLOR10 = hsv 0. 0. 0. 50.
$SHADOW3 = shadow $COLOR10 3.
$LOOK5 = look $FACE5 $SHADOW3
$COLOR11 = hsv 0. 0. 100.

```

```
-----  
in_mii_rmy_gain=0 in_mii_bmy_ga:  
out_rgb_gain=0 -in_comb_filter :  
in_decoder_v_gain=0 out2_key_ga:  
standard video standard=ntsc  
message My Settings Complete
```

8. Save the Macro as "my_settings.mcr" .

To Run "my_settings.mcr":

1. From the Command bar, type the following:

```
my_settings
```

2. Press Enter and look to the bottom, left on the status bar. Your message should display in the lower left corner of the Status bar.




Lesson 12: Creating Clocks and Timers

Clocks and countdowns are a common element of graphics. In earlier versions of Deko, building clocks required the use of macros. Beginning with version 4.1 of the Deko software, building a clock or timer is greatly simplified.


This lesson will introduce the new clock feature in version 4.1 software. Building a clock is a two-step process. First the clock parameters are formatted. Multiple clock styles can be created. Next, you create a graphic layer and assign the clock you created to the layer. Let's review the first step.

Creating Clocks

The new clock feature is found in the Style menu. In version 4.1 software, the Layer view of the Style menu has changed. The Auto-Update panel provides selection buttons to choose your Auto-update source, and Clock is added as a choice. When the Clock button is clicked an ID box appears to allow you to assign different clocks to different layers or graphics.

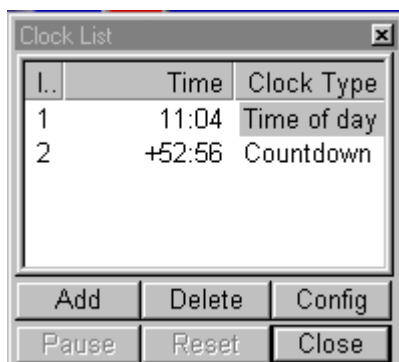

Press the View Clocks button to reveal the Clock List dialog box. →

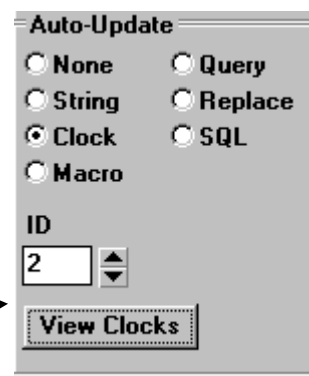


Clock List

The Clock List shows the current clocks available and provides buttons for creating new clocks, as well as modifying or deleting existing clocks.

Add a Clock


1. Go to View > Style Menu. (FAK Font or Look)
2. Set focus to the Style window and click on the Layer button to select the Layer view.
3. Select the Clock button from the Auto Update section.
4. Click on View clocks to show the List.
5. Click the Add button. The Configure Clock dialog box will open.
6. Enter Data in the appropriate fields and Click OK to add the clock to the clock list.

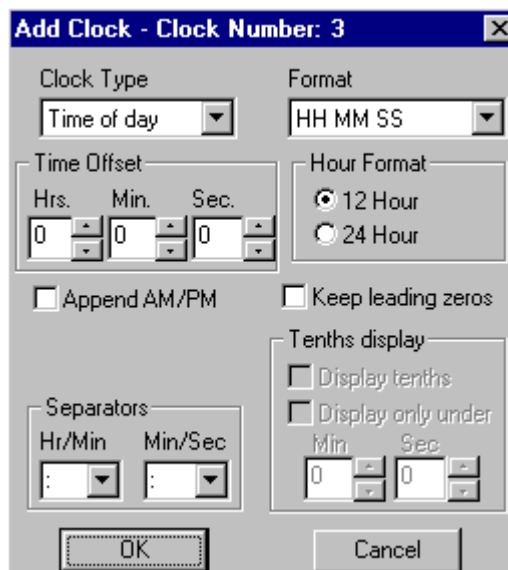


Add Clock Data Fields

- Clock Type – click on pull-down arrow and choose from three choices: Time of day; Countdown, or Countup.
- Format – set timing format for Time of day – HH:MM:SS; HH:MM – or Countdown/Countup – HH:MM:SS, HH:MM, MMM:SS, SSS.
- Time Offset – will set an offset for the time output, from your system clock time (useful for time zone shifts).
- Hour Format – 12 Hour or 24 Hour display.
- Append AM/PM – Adds an AM or PM to 12 hour output
- Keep leading zeros – will keep the zero in place for times, such as 01:25PM.
- Separators – Choose colons, semicolons or commas.
- Tenths display – Countdown/Countup timers only.

Insert a Clock in a Graphic

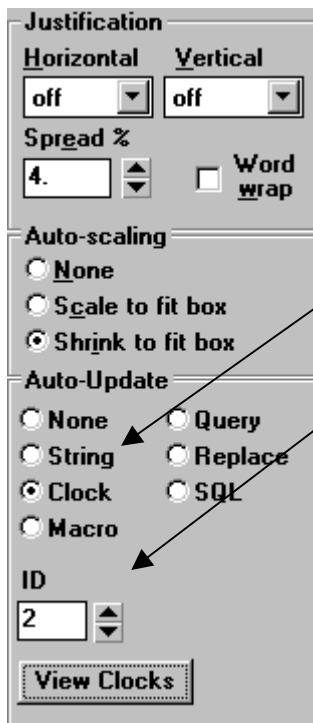

1. Create a layer in your graphic for the clock or timer.
2. Assign a preset style to the layer.
3. Go to View > Style Menu. (FAK Font or Look)
4. Click on the Layer button to select the Layer view.
5. Select the Clock button from the Auto Update section.
6. Click on View Clocks to show the Clock List.
7. Click on the up or down arrows from the ID window to select the correct clock ID. The clock will appear in the data field.

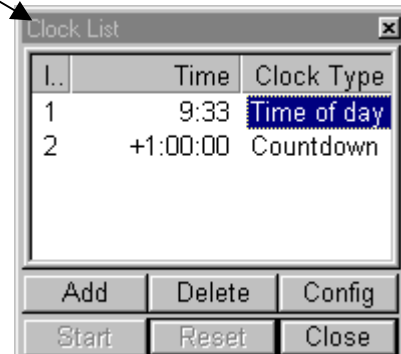

Note: When choosing Countdown/Countup timers, you must click the Start button in the Clock List to begin the count. Click Reset to reset the timer.


Note: For some fonts, digits can shift left and right as the clock advances. To avoid this, choose monospace or digits rather than proportional spacing. This setting is found in the Font section of the Style window.



Exercise – Create a Clock

Create a Clock

1. Choose the Style Edit view.
2. On the Style window click the Layer button to reveal the Layer view.
3. Click the Clock button in the Auto Update panel.
4. Click View Clocks. The Clock List window appears.
5. Click Add Clocks. The Add Clocks dialog box appears.
6. Make the following settings in the data fields:
 - Set Clock Type to Time of Day.
 - Set Format to HH:MM.
 - Check Append AM/PM.
7. Click OK. The new clock will be added to the Clock List.

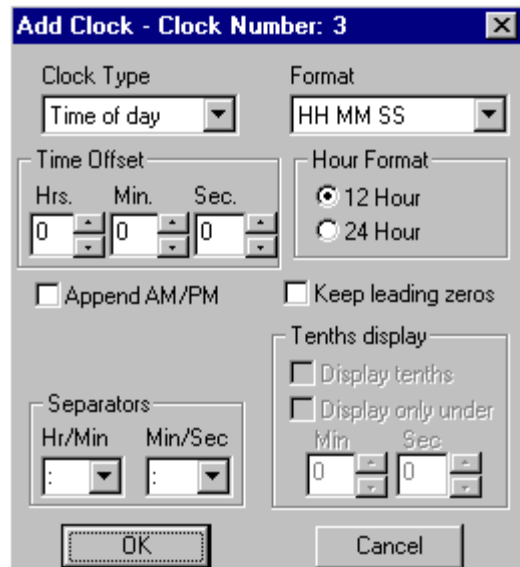

Add Clock to Your Graphic

1. Create a new Text Layer.
2. Choose a style from your Preset Style palette.
3. Choose the Layer view on the Style window and Click Shrink to Fit box in Auto-scaling section.
4. Under the Auto Update section, click on Clock.
5. Set ID to the Clock ID from your Clock List. The new clock will appear in your Text Layer formatted to your settings.

Lesson 13: Channel Configuration

Single/Dual Channel Operation


All graphics can be created in either the Preview or Program window. This makes no difference to the graphic. The Program window shows the current “on-air” graphic and matches Deko’s video output. The Preview window shows a graphic that is not yet “on-air”. Preview is most used to demonstrate what is about to become an “on-air” graphic.

Depending on the configuration of your Deko system, you can view up to two Program outputs plus a Preview output.

To Specify Single Program Plus a Preview Output:

In the Channel menu do one of the following:

- Click Program/Preview
- Click Keying and Routing. In the dialog box, select Program/Preview

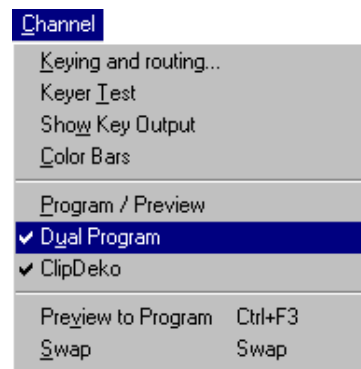


To Specify Dual Program Output:

Your system must be configured with 2 Program output cards.

In the Channel menu do one of the following:


- Click Dual Program
- Click Keying and Routing. In the dialog box, select Dual Program

In Dual Program mode, you can view a Preview window plus Program A and Program B windows. To view Program B, go to the View menu and select Program B.

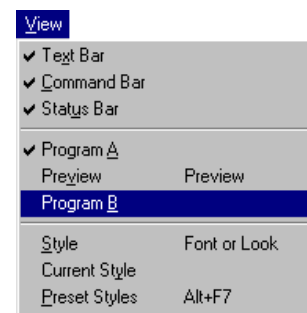

There is no dedicated layout to view all of these windows at once.

However, Deko smartly allows you to open each window and create your own layout. See the sample below.

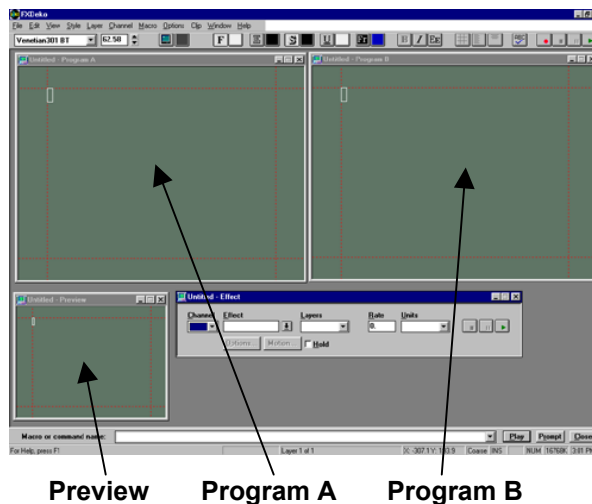

The FastAction Keyboard provides dedicated keys for operating in Dual Program mode. *Pgm A* and *Pgm B* keys set focus to the desired Program window.

The Sequence window also provides a selection for playing an effect to either Program A or Program B. In the Sequencer, click the down arrow in the Channel field and choose the desired function.



Using Deko's Built-In Keyer


With Deko's built-in keyer, you can key text and graphics over a live input of video. And you can frame grab this input. Or, use Deko's linear key output to key text and graphics downstream through a switcher.

Keying and Routing

1. Connect an input video signal to Deko, and optionally a key signal.
2. In the Options menu, click Hardware settings. Click Input selection and select the appropriate input signal.
3. From the Channel menu, choose Keying and Routing.

You will see a selection list for both Channel 1 and 2.

Selections from this list will vary based on the current Channel Usage, selected at the bottom of this window.

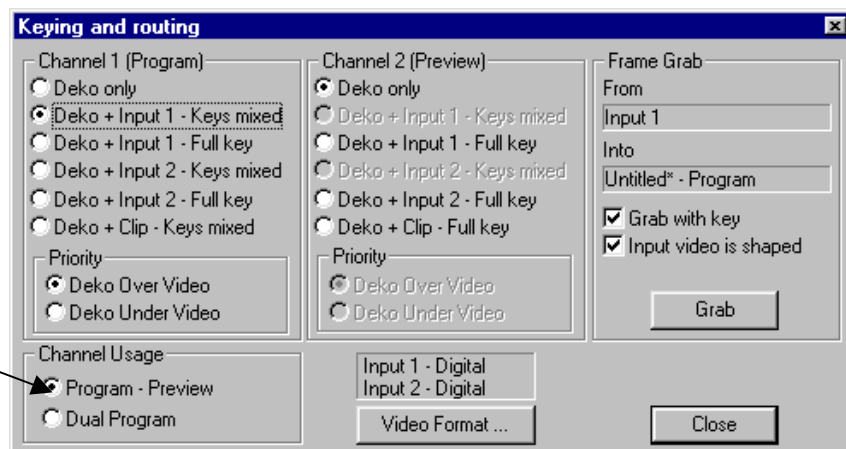

To turn off Deko's built-in keyer:

- Choose Deko only.

To turn on Deko's built-in keyer:

- Choose Deko + Input 1 or 2

To view a Clip:


- Choose Deko + Clip - Keys mixed.
4. Choose the type of key:
- Choose *Keys mixed* to view key signals for both the selected Video input and the Deko graphic.
 - For example: A DDR feeds Input 1 with an animated logo. Deko provides a text crawl across the bottom lower third, then sends this downstream for keying through the switcher.
 - Choose *Full key* to avoid viewing an unwanted key signal from the selected video input.
 - For example: This would be typically selected when frame grabbing from a camera feed.

Frame Grabbing

Note: The internal keyer does not need to be on to perform a Frame Grab.

Connect an input video signal to Deko, and optionally a key signal. Do one of the following:

- In the Channel menu, choose Frame Grab
- In the Keying and routing menu, choose Frame Grab

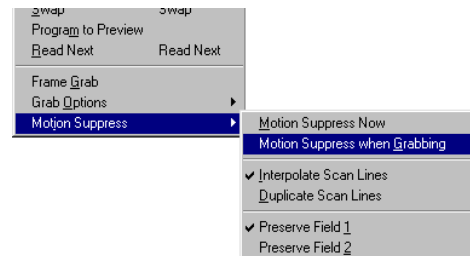

To Grab with Key:

In the Keying and routing menu, enable Grab with key.


To Suppress Motion Jitter:

Go to Channel menu, choose Motion suppress, then select Motion suppress now. You can optionally choose to suppress all Motion jitter while grabbing, and other options handling fields and scan-lines.

Lesson 14: FastAction Keyboard

The FastAction Keyboard (FAK) enables common tasks to perform with a single keystroke. It is designed for use in real-time on-air environments, where speed is critical.

Though the Deko User Manual provides a detailed description of all FAK functions – this Lesson contains a Quick-Start Chart, condensed descriptions to help get you started and steps to enable your FastAction keyboard.

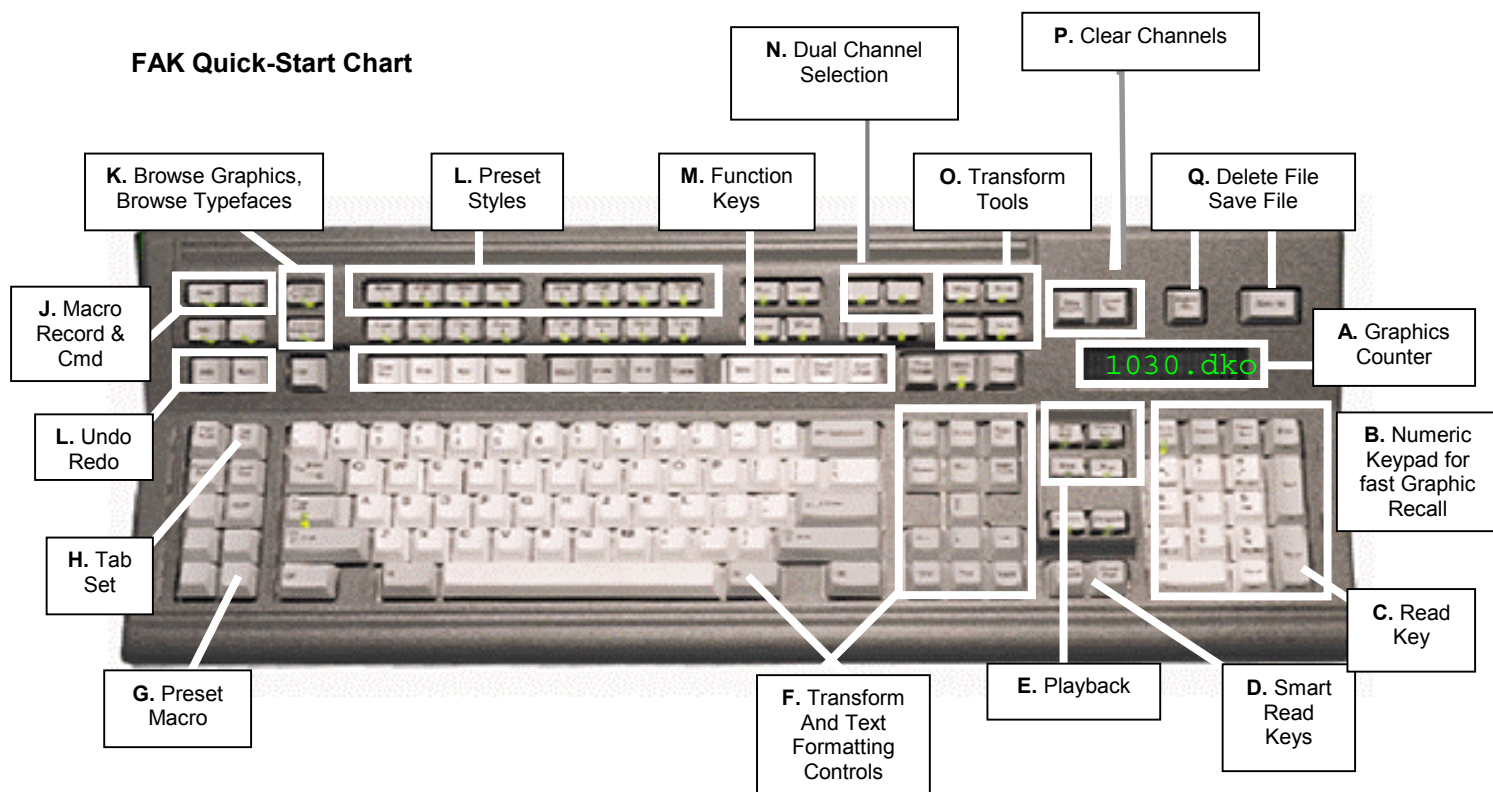

A. Graphics Counter – Use the graphics counter (alphanumeric display) to view the numeric location of a file as it is being typed. Press the Read key (C.) to recall the file to the currently selected window. The counter will advance to display the next sequential file. Press the Prev (-) and Next (+) keys on the numeric keypad to cycle through all files (alpha and numeric) in the current directory.

B. The Numeric Keypad – Press the Num Lock key to enable. A yellow light will illuminate. This provides fast access to reading files. You can quickly call up graphics with numerical file names by typing the filename on the numeric keypad. Press the Read key (C.) to open to the currently selected window.

- C. **Read** – Type the numeric location or press the Prev (-) or Next (+) keys to display a file in the graphics counter. Press the Read key to open that file to the currently selected window. Pressing Clear, then Read will display the Open dialog box. You can navigate, then double-click on a filename to open into the currently selected window.
- D. **Smart Read keys** – (Read Preview and Read Program) automatically opens the entered filename to the either the Preview or Program channel without changing focus of the current window. This allows random access to either channel with a single keystroke.
- E. **Playback and Macro Edit keys** – Playback controls for sequences and single effects include Stop and Play. Pause is executed by pressing the Play key while an effect is in progress.

Press the Macro Edit key to open the Macro Edit window in any layout. A combination of commands can be typed or recorded to this window, then saved as a * .mcr file. Macros are designed to automate repetitive tasks and speed production.

- F. **Text Formatting Tools** – Include: Page Up/Down keys to select layers, Home/End keys to insert cursor inside layer, and the Insert key to toggle INS and OVR modes of typing text.

Layers and text can be manipulated on screen with Transform Tools. Controls for transforming can be accessed by holding the Alt key down and pressing the directional arrows.

- G. **Preset Macro key** – You can store macros to a character assignment and execute them by pressing the Preset Macro key and the desired character.
- H. **Tab Set** – position your cursor, and press the Tab set key to insert a Tab stop in the following formats: Left, Center, Right and Decimal.
- I. **Undo/Redo keys** – You may wish to Undo or Redo a particular action. Pressing the Undo key will backtrack keystrokes and mouse-clicks until you have reached a desired state. The Undo function must be enabled in the Edit menu.
- J. **Macro Record & Cmd key** – Press the Learn key at this location to turn on Macro Record. This will record all keystrokes and mouse – clicks to the Macro Edit window. Open this window to view the commands.

Press the Cmd key and type the Macro filename to play a Macro.

- K. **Browse Graphics/Typefaces** – Press the Browse Graphics key to open a window of thumbnail images displaying all graphic files for the current directory. Press the Browse Typeface key to display thumbnail images for all fonts loaded on the system.
- L. **Preset Style keys** – Select text, then press any one of eight Preset Style keys to load the look and font displayed in same position of the Preset Styles window, located at the bottom of the Style Edit layout.

-
- M. Function keys** – Deko’s 12 Function keys are enhanced with quick access to commonly used text functions. These include font selection, treatment, size and spell-check.
 - N. Dual Channel Selection** – For multi-channel (2 program and 1 preview) systems, press the Pgm A or Pgm B keys for quick dual-channel selection.
 - O. Transform Tools** – Use these tools to manipulate layers and text on screen. They include Move, Scale, Rotate/Skew, Kern/Lead. Hold down the Alt key down and press the directional arrows to control transforming.
 - P. Clear Preview and Program** – Clear Preview and Program channels with a single keystroke. This will revert the graphic to a default state containing one default text layer.
 - Q. Delete Files and Save Files** – Delete files and save files rapidly by entering the numeric location. Press the Delete or Save key twice to execute that function. The graphic counter will advance to the next sequential location.

Exercise: Fastest Way to Get Random Graphics to Air

1. Press Num Lock to enable the numeric keypad. A yellow light will illuminate.
2. Press the Effect key to change layout displaying the Preview and Program channels
3. Press Clear Preview and Clear Program.
4. Look to the graphics counter on the FAK. If a file location is displayed press the Clear key.
5. Type: 100 .
6. Press the Read Preview key. The next file 101 .dko will display in the counter.
7. Press the Read Program key. The next file 102 .dko will display in the counter.
8. Set focus to Preview.
9. Press the Next (+) key to jump over 102 .dko and advance to 103 .dko .
10. Press the Read Preview key.

Repeat these steps with other graphics to familiarize with this section of the keyboard. This is your best and most efficient tool for on-air operation.

Exercise: Fastest Way to Get Sequential Graphics to Air

1. Press Clear Preview and Clear Program.
2. Type: 100 .
3. Press the Read Preview key.
4. Press the Read Next (*) key. Then again.

Note: you will see sequential files read into the Preview channel then swap to the Program channel, all in a single keystroke.

Enable / Disable Function Keys

To enable/disable FastAction function keys (F1 - F12):

1. Go to Options > Preferences > Common.
2. Under Keyboard click FastAction Function Keys.
3. Click OK or press Enter.

Note: When the FastAction Function Key box is checked, the F1-F12 keys access the functions engraved on the keycaps, which mirror Deko text bar functions. When the box is unchecked, the keys function as on a standard Deko keyboard.

Enable FAK Numeric Keypad

To enable the FastAction numeric keypad:

1. Go to Options > Preferences > Common.
2. Under Keyboard click Enhanced.
3. Click OK or press Enter.

Note: Once enabled, the numeric keypad provides FastAction access to reading files. To quickly recall graphics with numerical filenames, type the filename on the keypad and press Read. The display shows the filename as it is being typed, and advances to the sequential file when you press Read.

The keyboard will display an alphanumeric filename, but only numeric filenames can be entered on the numeric keypad. To read in any filename, press Clear to clear the display, then press Read. In the Open dialog box, type or double-click on the filename.

Lesson 15: SportsWare and Pops

The SportsWare option includes two powerful features to enhance fast-track character generation: Pops and Macro Autoplay. Macros were discussed in Lesson 11. In this lesson we will learn how to create and apply Pops.

About Pops

The Pops feature allows you to create and “pop” a text selection onto an open graphic. These text selections are saved as text files or as special graphic files, which you can use like any other graphic file. You can even specify pop files, including text (.txt) files, in sequences.

There are three ways to pop text onto the CG page:

Text Pop

A Text Pop pops in text only (from a .txt file) at the cursor position. Text is rendered in the current style. For example, during a baseball game, you can pop stats into a lower third.

Style Pop

A Style Pop pops in text and font at the cursor position. This works like a text pop, except it renders text in the stored style associated with the pop rather than the current style.


Place Pop

a Place Pop pops in text and style appear on a specific position of the graphic, regardless of where the cursor is. You can, for instance, pop “Final Results” in the center of an on-air election graphic, even if the cursor is at the top of the page.


Creating a Text Pop

To create a text pop:

1. Open a word processing program.
2. Type the text.

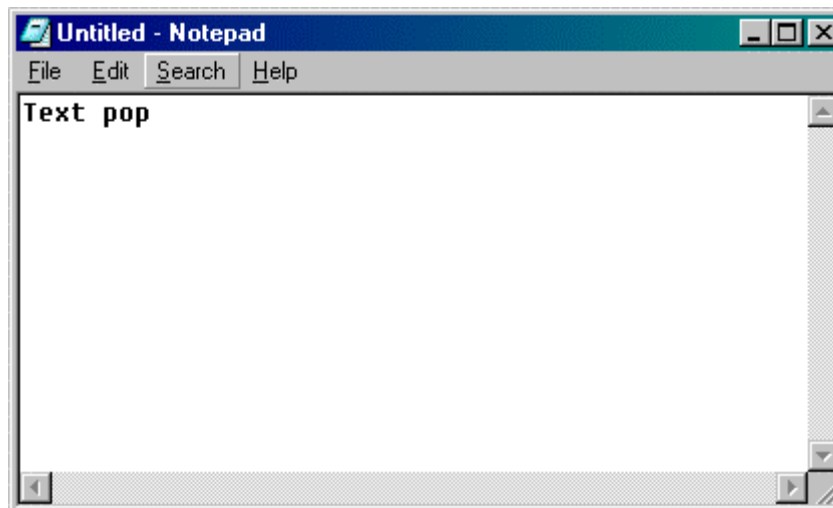

3. Navigate to the drive and directory where you will store the file and save the file as a text (.txt) file.

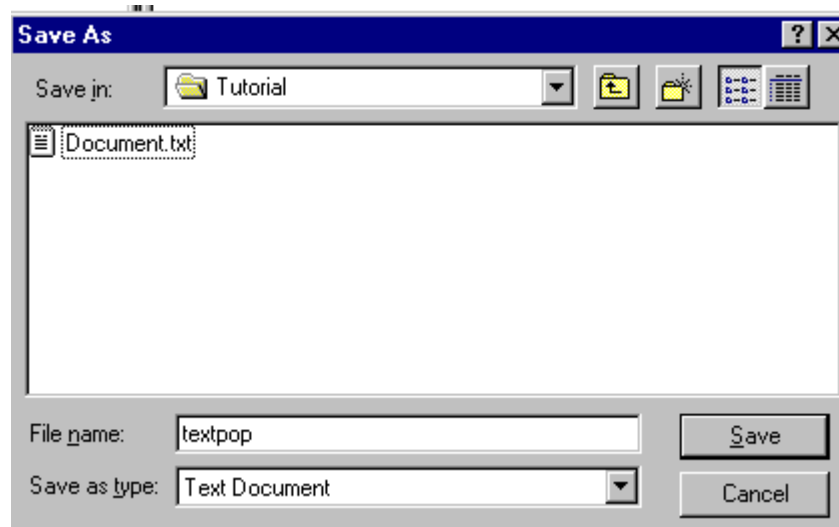

Creating a Style Pop

To create a style pop:

1. Activate a Program or Preview window.
2. Choose a preset style or create a new style for the text.
3. Type the text.
4. Select the text, *not* the layer.
5. Navigate to the drive and directory where you will store the file, and type a name in the File name text box.

Style Pop
Select Text not Layer




6. Click the Save Selection button.

Creating a Place Pop

To create a place pop:


1. Activate a Program or Preview window.
2. Create a layer for the text or use the default layer.
3. Choose a preset style or create a new style for the text.
4. Type the text.
5. Select the layer, **NOT** the text.
6. Navigate to the drive and directory where you will store the file, and type a name in the File name text box.
7. Choose Save Selection.

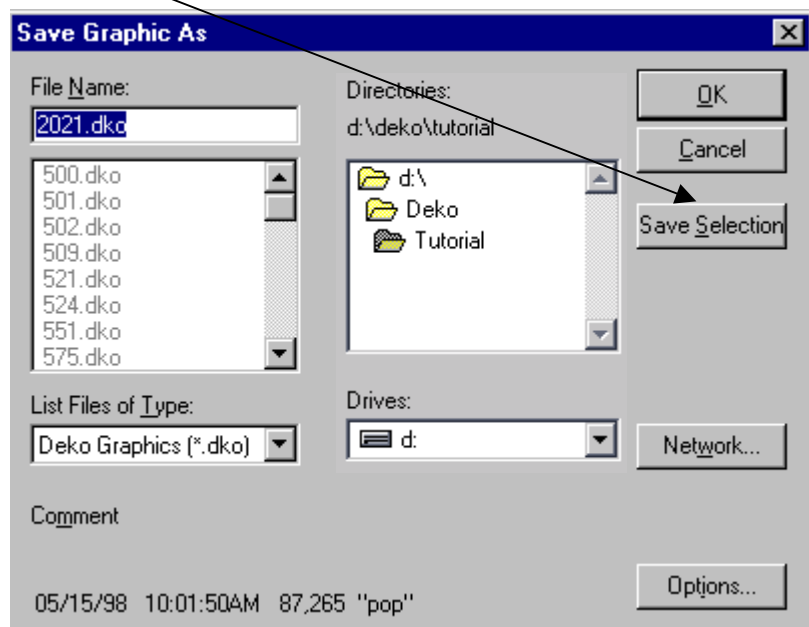

Place Pop
Select Layer not text



Note: When you use Save Selection to save a graphic, the Graphic browser indicates next to the graphic file name that the graphic is a pop file. Likewise, the File Info section of the File Open dialog box will tell you if a file is a pop file.

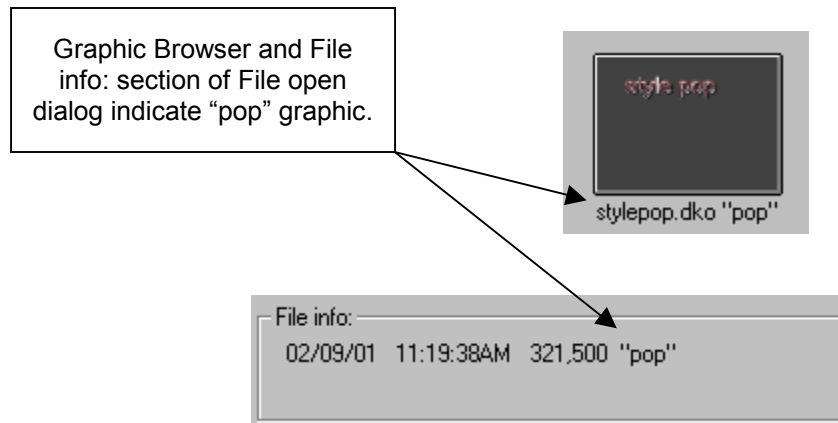

Using Pops

To Pop Text Onto a Graphic Using a Text Pop or Style Pop:

1. Open the graphic file and position the cursor or select the layer where you will pop in the text.
2. Press Clear Read (FAK) or F9 (SK) to open the file.
3. In the dialog box, navigate to the drive and directory containing the text pop (.txt) or style pop (.dko) file.
4. Choose the file from the File Name list box or type it in the File Name text box, then click OK or press Enter.

Note: Deko pops the text into the current or selected layer of the graphic, then automatically selects the next layer behind it. It does not create a new layer for the pop.

To Place Pop Text onto a Graphic:



1. Open the graphic file onto which you will pop the text.
2. Press Clear Read (FAK) or F9 (SK) to open the file.
3. In the dialog box, navigate to the drive and directory containing the place pop (.dko) file.
4. Choose the file from the File Name list box or type it in the File Name text box, then click OK or press Enter.

Note: Deko creates a new layer for the place pop in front of the current or selected layer, then automatically activates the layer behind the previously current or selected layer.


Exercise – Creating and Using Pops

Creating a Text Pop

1. Go to Start > Programs > Accessories > Notepad.
The application Notepad will open.
2. Type Jimmy Keys in the open window.
3. Go to File > Save. The Save As dialog box will appear.
4. Navigate *Save in* box to D:\Deko\Tutorial.
5. Type 021 in the *File name* box and click Save.

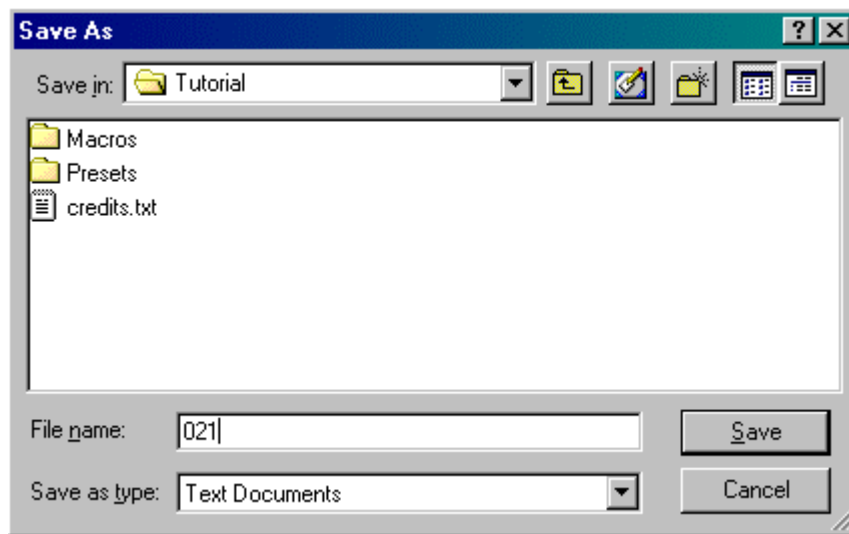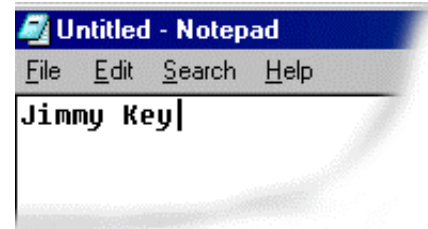


6. Highlight the text in the window and type Terry Matthews.
7. Go to File > Save As and save the file as 051.
8. Repeat this process and save the following names as these files:

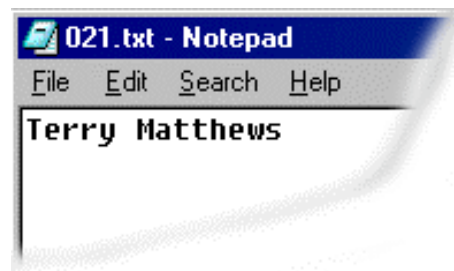



| Name | Save File As |
|----------------|--------------|
| Alan Mills | 075.txt |
| Eric Davis | 024.txt |
| Brady Anderson | 009.txt |

Creating a Style Pop

1. In Deko, clear the Program window.
2. Click on the Preset Style window and open `training_pops.pst`.
3. Select the Layer in the program window, and then Select Preset Style 2.
4. Type the following five names with numbers:

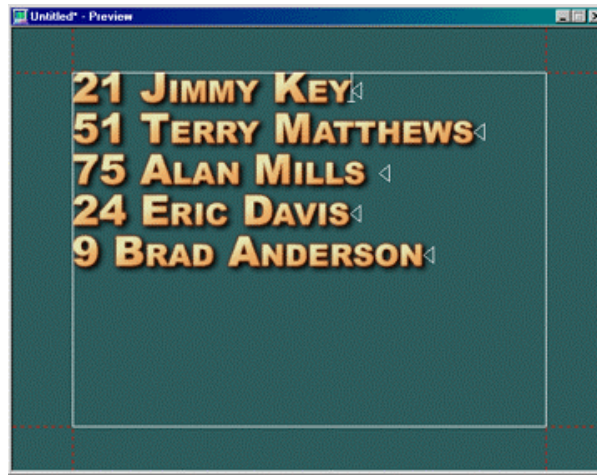

5. Select the first row within the layer but DO NOT select the end of row marker.

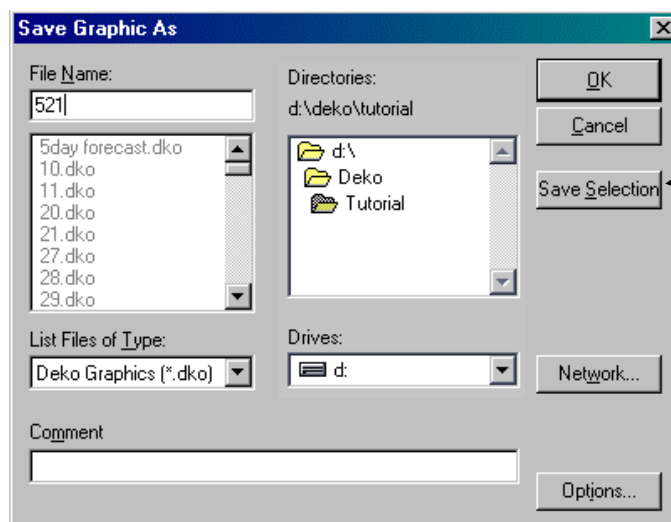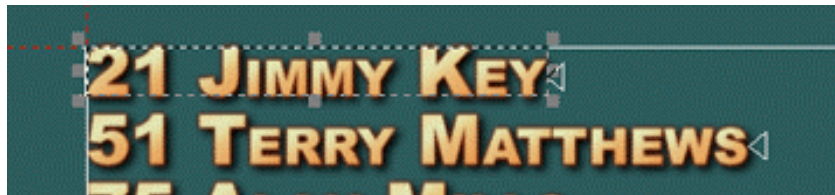

6. Press Save File (FAK) or F12 (SK).

7. When the Save Graphic As dialog appears, enter 521 in File name and click on Save Selection. This will save the selection as a Style Pop.

8. Select the next row (remember not to select the end of row marker).
9. Press the Save File key and enter 551 in File name, then press Save Selection.
10. Repeat steps 8 and 9 and save the next three rows as follows.

| Name | Save File As |
|------------------|--------------|
| 75 Alan Mills | 575.dko |
| 24 Eric Davis | 524.dko |
| 9 Brady Anderson | 509.dko |

Creating a Place Pop

1. Clear the Program window.
2. Delete the default text layer and draw a text layer about 1 inch high from the bottom-right of the safe area indicators.



3. Select Preset Style 4.
4. Type Live.
5. Center justify the text (Ctrl+5).



6. Select the layer, and press the Save File key.
7. Under File Name, enter 700.dko and click on the Save Selection button.

Using Text Pops

1. Open the graphic file 1501.dko. The graphic is a background with a lower-third template made up of one layer.
2. Select the layer, which is waiting for a player name.
3. Do one of the following:
 - On the number pad enter 021 and press the Read Key (FAK).
 - Press F9. Set *List Files of Type* to .txt and enter 021 in the File Name box (SK).


The Pop Jimmy Key will appear in the Text Layer formatted to the style of the layer.



4. Press Read (FAK) or F9 (SK) and enter 051 on the number pad. The Name Layer will change to Terry Matthews.
5. Repeat this for the other three Text Pops: 075.txt, 024.txt, 009.txt.

Using Style Pops

1. With the layer still selected, read 521.dko. Notice that the style has changed within the layer to the style of the saved Pop.

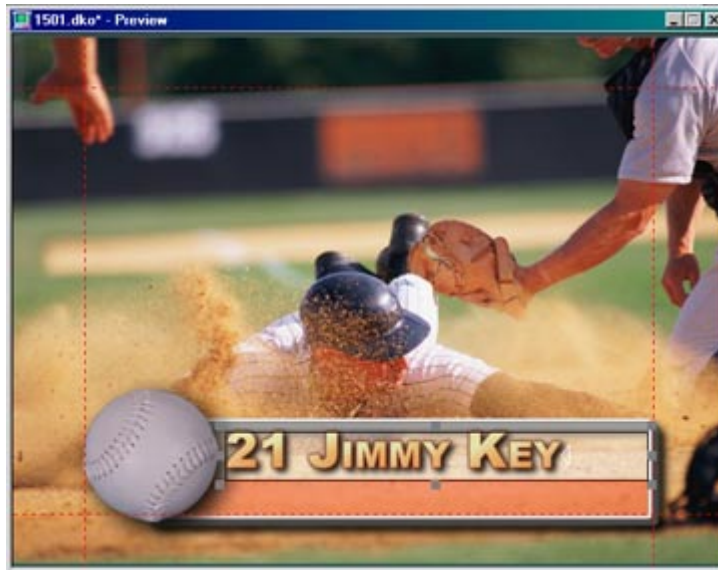

2. Repeat this for the other four Style Pops: 551.dko, 575.dko, 524.dko, 509.dko.

Using Place Pops

1. Open the file training_stocks.dko.
2. Read 700.dko. Notice that the Place Pop appears in the lower right corner of the graphic.



Lesson 16: Automation

What is Automation?

Automation allows you to control your Deko Character Generator from another computer program. Usually that program is running on a different computer, and sending commands to the Deko through a serial line or a network connection. But since Deko runs on a standard, Windows NT platform, the controlling program can also be run on the same computer as the Deko.

Traditionally, CG automation interfaces have been used by newsroom automation systems, such as *Newstar*, *Bays*, etc.. For example, using these systems journalists and producers type in the names of people who appear in a news story. Those names along with the name or ID number of a template are then sent over to the CG, for display during that news item.


The template is a file created by the CG operator, which picks the layout and style of the text. The newsroom automation program that sends commands to the CG fills in the content.

With Deko, you can move beyond newsroom automation, and create simple custom interfaces for data entry and update. The benefits are really quite amazing—a custom interface running on the Deko serves as pre-packaged access to the power of the machine. This allows a relatively untrained person to create quite sophisticated effects. The simplified interface also helps prevent errors, by restricting the novice operator's options. The experienced operator can always “reach behind” to the full power and flexibility of the Deko.

Pinnacle has created several examples of what can be accomplished with automation. The “Sports Score Update” provides fields for the names of two teams, and the name of the CG template in which to display the score. The user can then hit “add” buttons to update the scoreboard displayed by the Deko. This application is especially well suited for fast-scoring sports like basketball.

How Does Deko Automation Work?


Push vs. Pull Technology

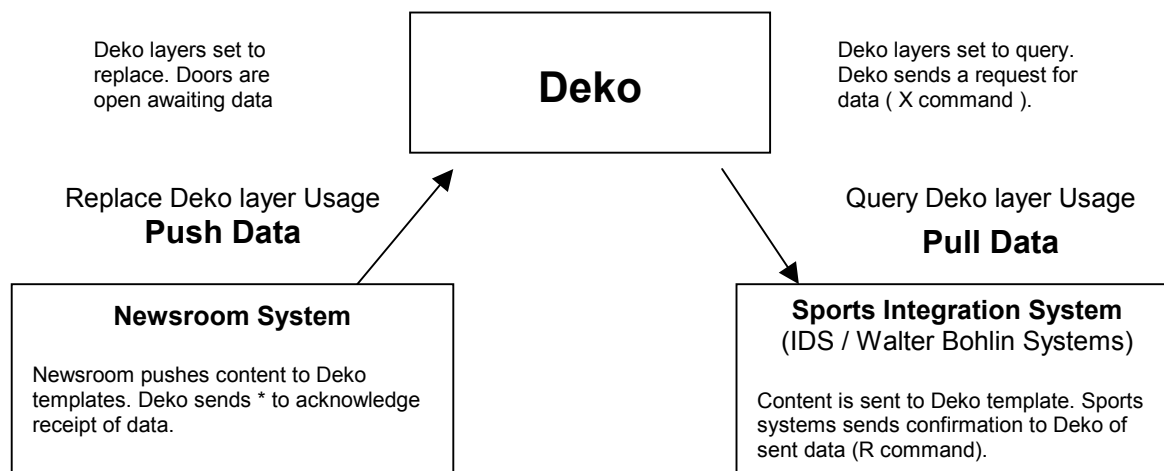


Enable Automation

You only need to perform these steps once. After that, your machine will come up with Automation enabled.

1. Within Deko, go to View > Automation. The dialog box will open at the bottom of the screen.

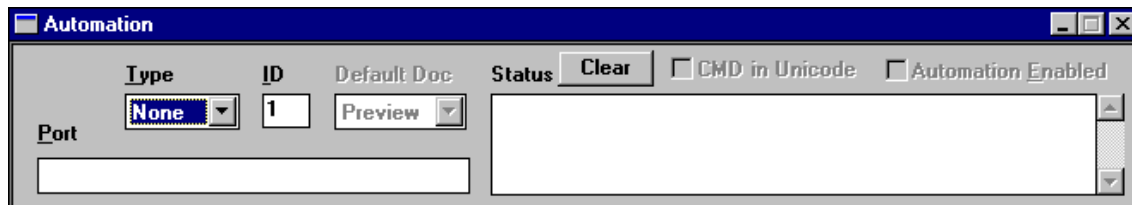

2. In the Port text field, type in the Communications port that Deko will be using, most often COM1 or COM2.
3. Under Type Select “I.I.I.” for Intelligent Interface.
4. Under ID, if you have only one Deko put “1”.
5. In the Default Doc field, select either “Program” or “Preview”, to decide which screen receives your data.
6. Lastly, check Automation Enabled. A successful connection will show a message such as “Server created through \\ . \COM1”.

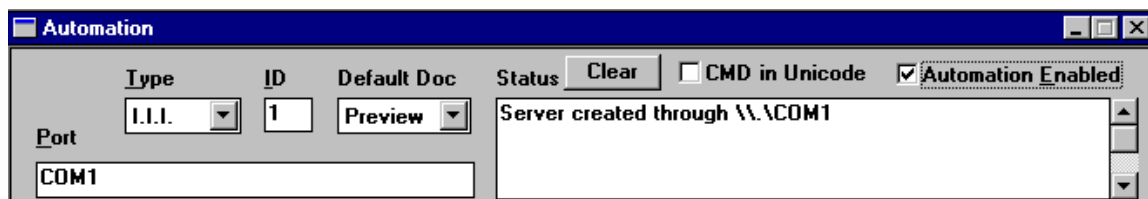

7. Close the Automation dialog box.


Creating a Template File

This section describes the process of creating a template file, which will later be filled in by the automation interface, as sketched out in the next section.

1. Within Deko, design the look of your .dko file, selecting the fonts and colors. You may design using just one layer, and putting example text on the screen.
2. After you have designed and created your look, you are ready to select the text fields. Each text block that needs to be updated through automation must be put into its own layer. Repeat the following steps for each text field:
3. Highlight the text.
4. Go to Text > Text to Field. This puts the highlighted text to its own independent layer.
5. Go to Layer > Layer Properties.
6. There are two screens for this window. Select More to view page two of this window. Under Text Initialization set Usage to “Replace”. This allows the layer to be updated through the Automation Interface.
7. We recommend that you select Shrink to Fit, and uncheck Word Wrap. This is also where you select the centering alignments for your layers.

In later versions of Deko software, you may need to reassign the layer order of the layers that are set to “Replace” starting with the first layer to be updated as layer one. To reassign layers, select each layer and then use “Ctrl+” or “Ctrl-”. Layer One will receive the first set of data from the Automation Interface, layer two will get the second, and so on...

In newer versions of Deko software, you can set an ID for interfaced layers (query or replace). This ID represents a priority order in which layers will be filled with external data. To assign an ID, select each layer. In the Style window, click on the ID arrow under Auto-Update.

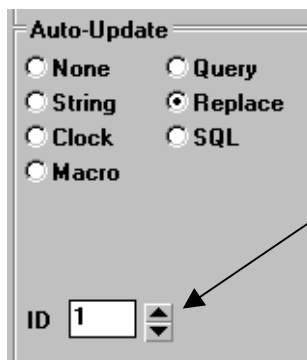

Using the Template

With a successful connection made between the Deko and the external control program, you will begin to see data in the Automation Window.

When a command is sent that the Deko understands, it responds with an asterisk (*).

For example, a Newsroom Automation system sends:

```
W\100\900\layer one text\layer two text\\<OD> <OA>
```

Deko responds:

*

In this example:

- W = Write to layer
- 100 = Name of the file where the transmitted text will be stored
- 900 = Template
- Layer one text = transmitted text for the first layer set to "Replace"
- Layer two text = text for the second layer set to "Replace"
- \\ = Command terminator
- <OD> = Carriage Return
- <OA> = Line Feed

In response to this command, the Deko will create a file called 100 . aut, which contains the two lines of text that were sent by this command, along with the name of the . dko file serves as the template – in this case, 900 . dko.

When, at a later time, the file 100 . aut is read, it will cause the Template file 900 . dko to be read, and its fields will be filled with the data in 100 . aut.

Lesson 17: Other Options

Deko provides a number of options which expand the capabilities of your system. In this lesson, we will examine four options designed to enhance the Deko system:

- Database Connection
- Cap Shaders
- Still Deko
- Clip Deko

Database Connection

The Automation option now includes a dynamic feature that enables Deko to read and display information from a database. This means you can set up a layer to query a database and display the value of a field within that database.

A database query differs from Deko's existing query feature, which sends inquiries to a newsroom automation system. Database queries send inquiries to database files, which may be stored on a local system drive or accessed by a LAN or WAN.

To use the database connection feature, you must have the ODBC driver installed to support the database source. The ODBC driver is automatically installed during installation and setup of your database software package. You must also specify a data source name (DSN).

View ODBC Drivers

To view installed ODBC drivers:

1. Go to Start > Settings > Control Panel.
2. Double-click the ODBC icon to open the ODBC Data Source Administrator dialog box.
3. Click the ODBC Drivers tab.

Specify a DSN

See also the **Test Drive** section on page 16-4.

To specify a DSN:

1. Go to Start > Settings > Control Panel.
2. Double-click the ODBC icon to open the ODBC Data Source Administrator dialog box.
3. Click one of the following:
 - User DSN – To create a data source that is visible only to you and can only be used on the current machine.

- System DSN – To create a data source that is visible to all users on the current machine.
 - File DSN – To create a data source which allows you to connect to a data provider and which can be shared by multiple users who have the correct driver installed.
4. Click the Add button, select the driver for which you want to set up a data source, then click Finish.
 5. Type in a Data Source Name.
 6. Click the Select button, navigate to the database file, and then click OK. Click OK two more times to close the dialog box.

Query Database

To set up a layer to query a database:

1. Select the layer.
2. Go to View > Database to open the Database window.
3. In the window, choose a Database Name, then check the Connect box.
4. Choose a Table In Database.
5. Specify a record within that table, by selecting a Field Name and entering a Field Value for that field.
6. In Display Field, choose the field whose data to display in the layer.
7. Enter a value in the Frequency box to specify how many seconds to wait between requests to the data source for updates. If Frequency is set to zero, the automation interface will issue the request only once.
8. Click Create Query.

Database Window Options

- Database Name – A database name defined in the ODBC Data Source Administrator.
- Connect – Connects Deko to the specified database.
- Table In Database – A table within the database.
- Field Name – The field used to identify a data record within the database.
- Field Value – A value of the specified Field Name field. This can be “hard-coded” as a specific value, or you can enter the variable, `$where_colVal`, then use the Command Bar to update the value of the variable. See the topic, *To use a variable Field Value*, later in this section.
- Display Field – The field whose value to display in the layer.
- Create Query – Associates this database query with the current layer.
- Read Query – Reads query associated with the current layer into the Database window. Select a layer that has been previously set up for database query, then use this button to display options already specified for that layer in the Database window.

To Set a Global Field Value:

1. From the Command bar, type `global $FieldValue`
2. Play command.

To Use a Global Field Value:

1. Set layers Field Value to: `$FieldValue`
2. From the Command bar, type `$FieldValue = "pcl"`
3. Play the command. All values should update.

Note: the FieldValue “pcl” refers to the value for Pinnacle Systems Inc. found in the Tutorial demo *Stocks* database.

Test Drive

Before you begin, you must have Microsoft Access installed in your Deko PC. It might also be a good idea to open the sample database, `Sample.mdb`, in Access and look at the two tables, `Elections` and `QVC`, to get a general idea of their contents and structure.

This exercise requires the use of these Deko Sample Files:

`Race.dko`


`Race2.dko`

`Sample.mdb` (this file must be copied to your hard drive)

To register the Database:


1. Click Start at the bottom of your desktop, choose Settings, then double-click Control Panel.
2. Double-click the ODBC icon to open the ODBC Data Source Administrator dialog box.

You should be looking at User DSN options. If not, click the User DSN tab at the top of the dialog box.

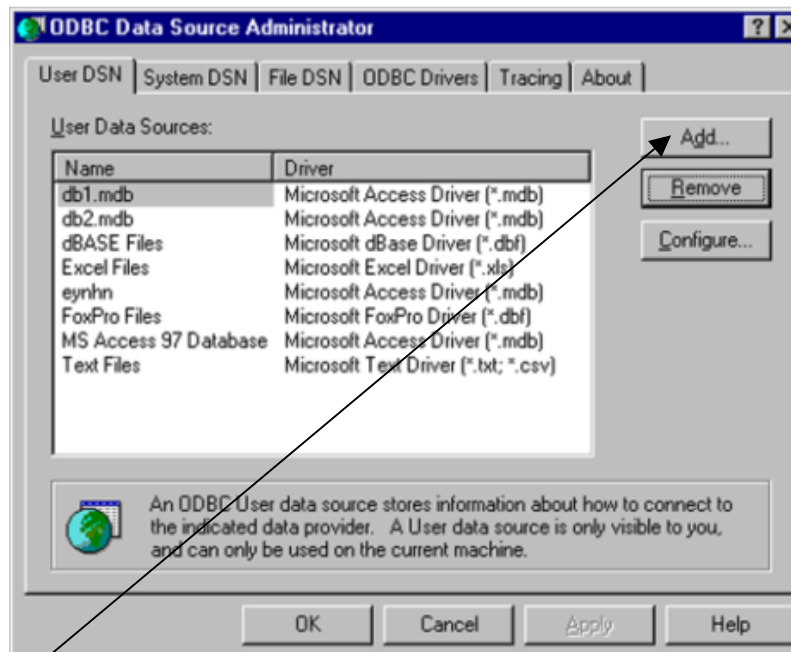


3. Click the Add button.


- Select Microsoft Access Driver, then click the Finish button.

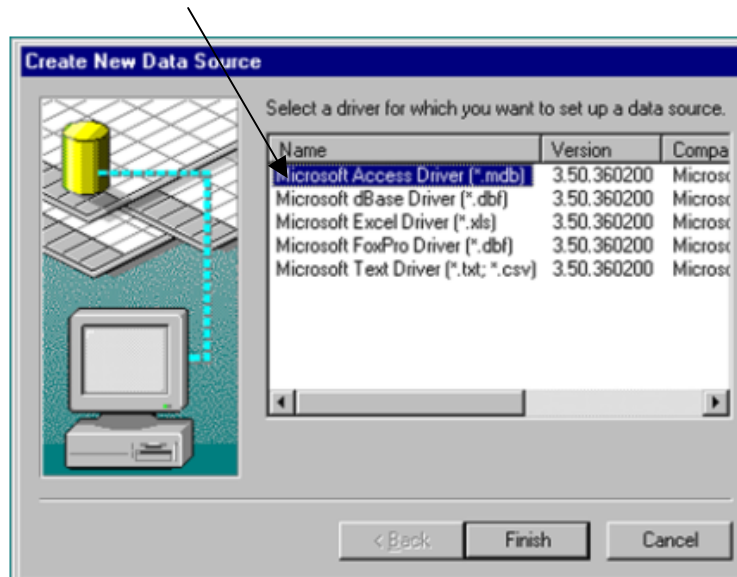


- In the Data Source Name text box, type Sample. Usually, you can use any name you want, but for this test drive you must use Sample.

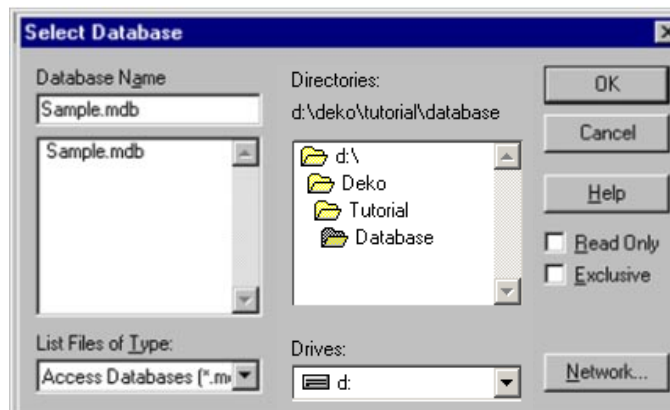


- Click the Select button, navigate to the Sample.mdb file, and then click OK.

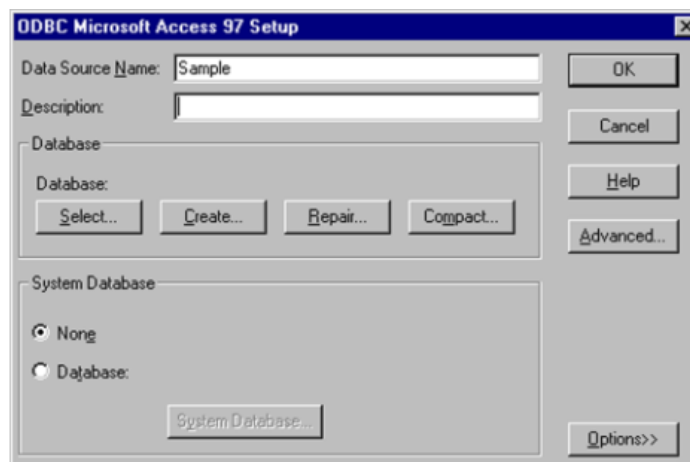

Notice that the pathname for Sample.mdb appears in the Setup dialog box.

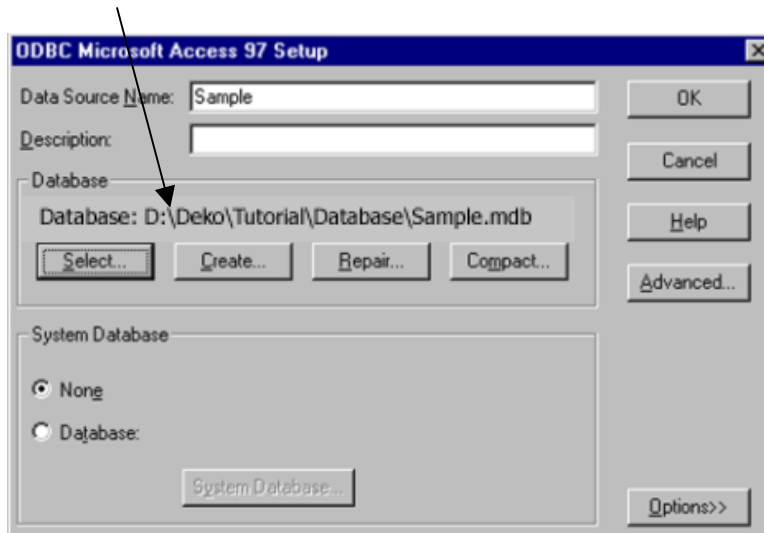

7. Click OK again and notice that Sample appears in the User DSN list.

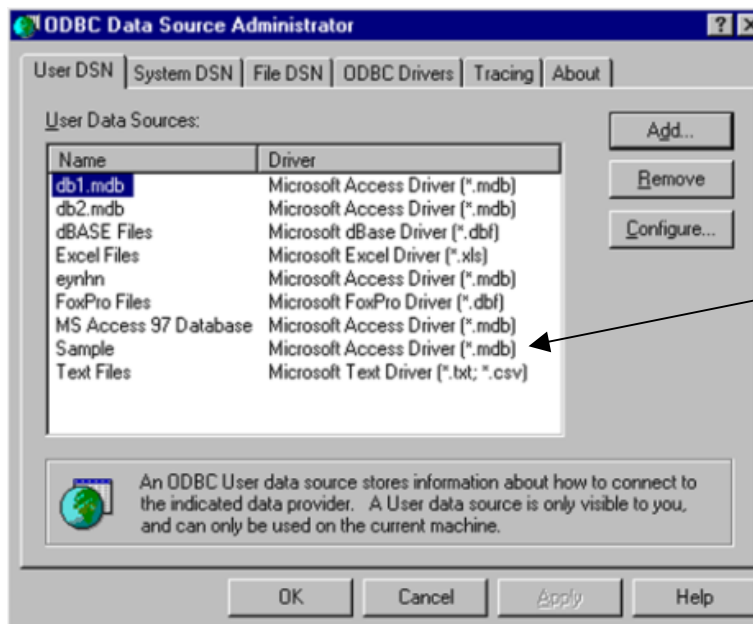


8. Click OK once more to finish the process and close the dialog box. That's it! You don't have to do this again until you want to add ODBC access for another database.

Query the Database


Set up a layer to query the database. We will set up a layer in the Race .dko template to display the name of the first candidate in race 3.

1. Open the graphic, Race .dko.

On WriteDeko, this file requires the Unlimited Layers option. Instead, you can use the file Race2 .dko, which only has five layers.

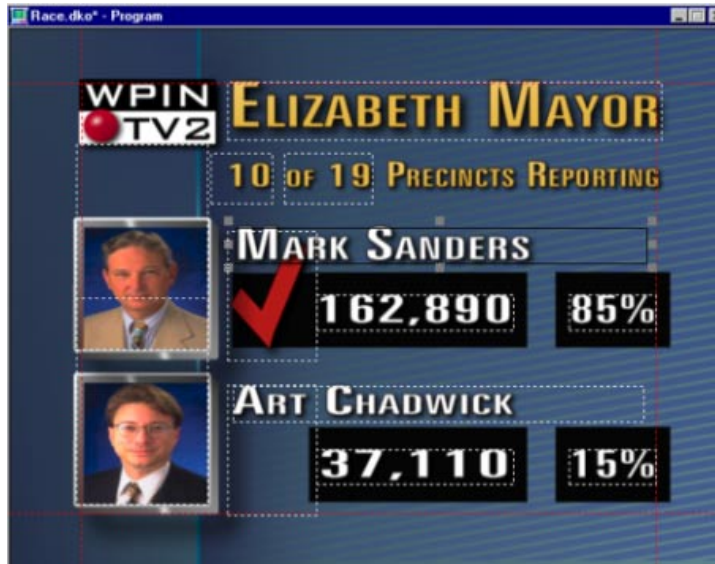


2. Select layer 2, the one that says “Mark Sanders”.
3. From the View menu, select Database to open the Database window, then fill in window options as Sample as the Database Name.

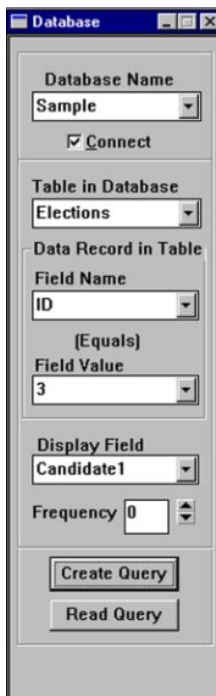

- Choose Sample as the Database Name
 - Check the Connect box.
 - Choose Elections as the Table in Database.
 - In the Field Name box, enter ID.
 - Enter 3 as the Field Value.
 - In the Display Field box, choose Candidate1.
4. Click the Create Query button.

Voila! Candidate 1 in race 3 is...Teicia Joffe.

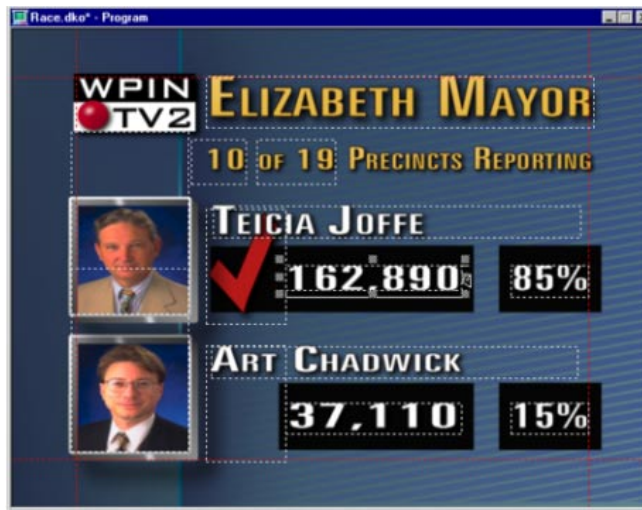

5. Select Layer 8, the one that displays Teicia's total votes.

Database Name: **Sample**

Connect

Table in Database: **Elections**

Data Record in Table

Field Name: **ID**

(Equals)

Field Value: **3**


Display Field: **Total Votes1**

Frequency: **0**

Create Query

Read Query

6. In the Database window, click the Read Query button.
7. Change the Field Value from 1 to 3.
8. Click the Create Query button. The display now tells us Teicia has 12,000 total votes.

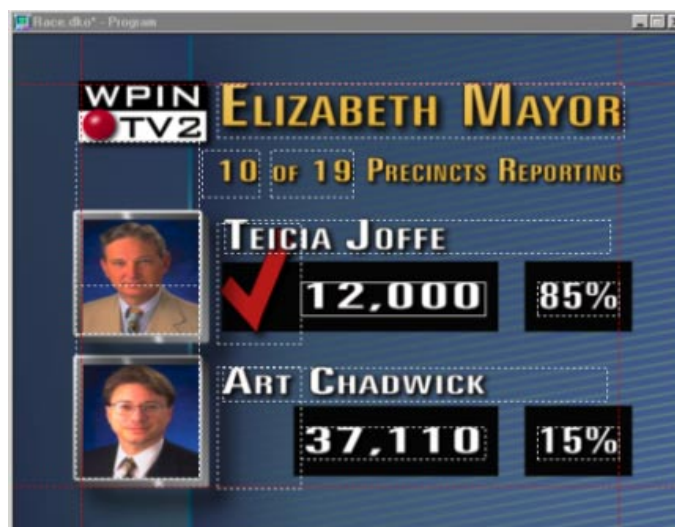

Set Up Automatic Query Updates

By default, update frequency is set to zero and the automation interface issues a query only once. Let's set up Race.dko to automatically update Teicia's total vote count every ten seconds, so that we will have an accurate total as the votes keep rolling in.

1. Make sure layer 8 is still selected, the one that displays Teicia's total votes.
2. In the Database window, change Frequency to 10.
3. Now, keep Deko running while you open the Sample.mdb database in Access and go to the Elections table.
4. Change the value of Total Votes1 in row 3 to 12,003. Save the change to disk by closing the table. Within ten seconds you will see the Deko display change to reflect the new total.

Database

Database Name: Sample

Connect

Table in Database: Elections

Data Record in Table

Field Name: ID

[Equals]

Field Value: 3

Display Field: Total Votes1

Frequency: 10.

Create Query

Read Query

| Race Number | Race Name | Candidate1 | Candidate2 | Precincts Rep | Total Precincts | Pic Code1 | Pic Code2 | Total Votes1 |
|-------------|----------------------|----------------|-----------------|---------------|-----------------|-----------|-----------|--------------|
| 1 | Elizabeth Mayor | Mark Sanders | Art Chadwick | 10 | of 19 | A | B | 162,890 |
| 2 | State Senate | Tary Hughes | Bob Wilson | 33 | of 45 | C | D | 37,110 |
| 3 | Coolest CG Operator | Teicia Joffe | Louis Garvin | 15 | of 20 | T | L | 12,000 |
| 4 | State Representative | Michael Jordan | Michael Jackson | 1 | 30 | A | B | 2 |
| 5 | U.S. President | Bill Gates | Homer Simpson | 2 | 20 | A | B | 1 |

Note: You can tell when Deko is updating a query even if the Display Field value isn't changing. The status line displays a "rendering" message during each update.


Set Up the Graphic to Update Fields Based on a Global Variable

You may have noticed that when you changed the Field Values for Candidate1 and Total Votes1 from 1 to 3, then clicked Create Query, none of the data in other layers changed. Those layers still displayed information from race 1. Most likely, you would want to display all of the results of race 3 all at once. Can you do that without changing the Field Value for each layer individually every time? Yes, if you go through the one-time process of entering a global variable as the Field Value for each layer.


1. Go to View > Command Bar.




2. Click the command text box and type \$Where_ColVal=3, then click Play.
3. For each layer in Race .dko:

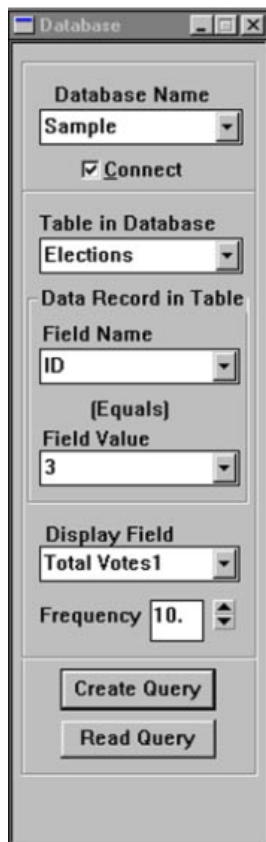

- Select the layer.
- Click Read Query at the bottom of the Database window.
- Now click the Field Value drop-down list box and choose \$Where_ColVal.
- At the bottom of the Database window, change the Frequency to 10.
- Click the Create Query button. Notice that within 10 seconds the field display changes to reflect values in race 3.

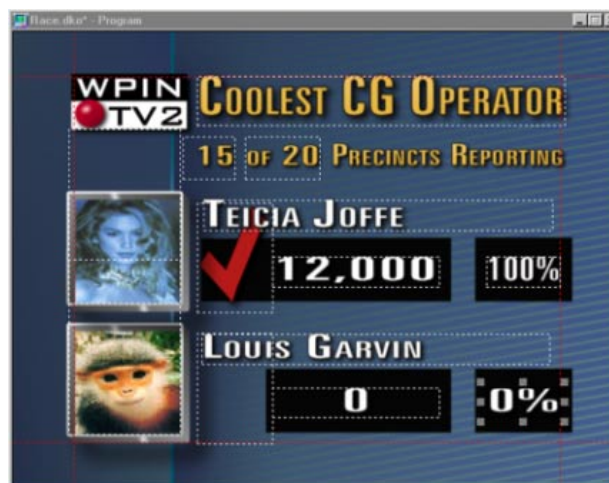

- On the Command Bar change the command to `$Where_ColVal=4` and click Play. Within 10 seconds you should see all the field values change again.

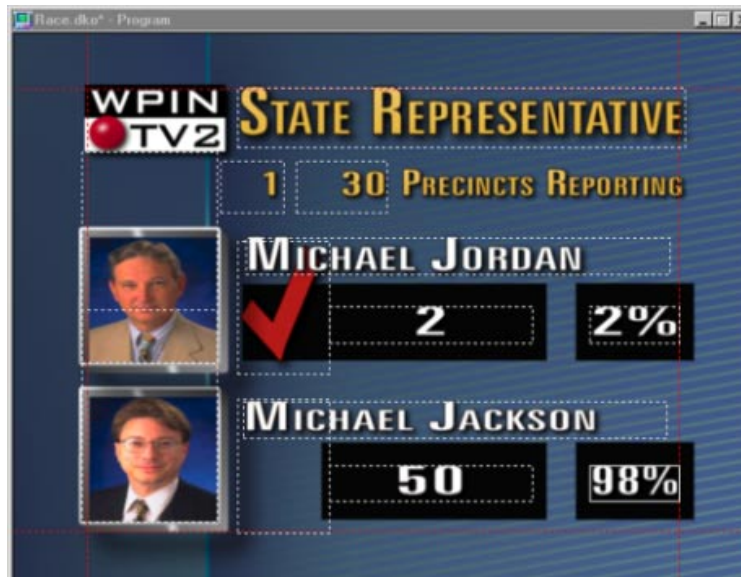

CAP Shaders (Cel Animation Player)

A CAP (cel animation player) shader produces a detail with an animation. You can use a CAP shader to apply a cel animation to a detail, just as you can use other types of shaders to apply ramps, colors, or textures. A CAP shader differs from other types of shaders in that you cannot apply a cel animation to a background.

A typical way to use the CAP shader is to create a rectangle and choose CAP for the rectangle's face shader. Make the rectangle large enough or it will clip the edges of the animation. It is also important to make the rectangle small enough without clipping so you maintain the maximum efficiency.



By specifying a CAP shader, Deko will recall a series of image frames. On the Deko2000, the series of frames will automatically loop, producing the animation. On the FXDeko, the series of frames are loaded and the first one displays as a static graphic on the detail. FXDeko only plays the cel animation in the context of a motion. See *Playing a Cel Animation*.

You can have more than one CAP shader in a graphic. Performance may degrade as Deko encounters large animations or a lot of details in a graphic.


Applying a Cel Animation

To apply a cel animation to a detail:


1. Create a Shape field. (a rectangle or ellipse).
2. In the Style window click on the Look Tab. Make sure there is a Face detail.
3. Open the Face detail's shader.
4. At the top of the Shader window, choose CAP.
5. Click on Open to select a file. The Select Cap file dialog box will open.

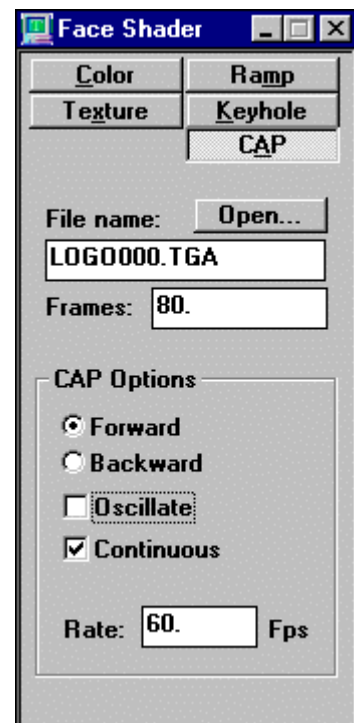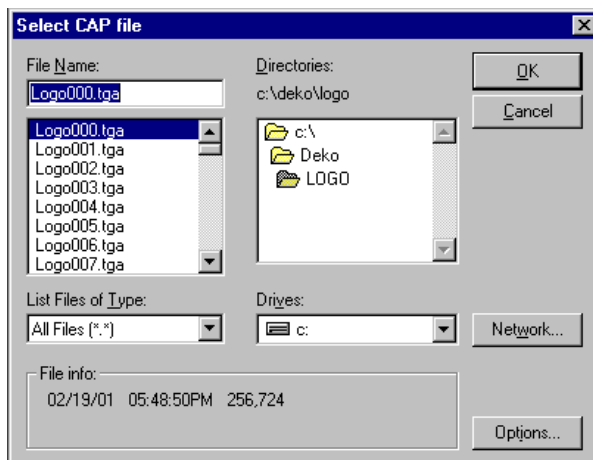

6. Navigate to the directory containing the sequential animation file and locate the first file in the sequence.
7. To verify file open parameters click on the Options button.

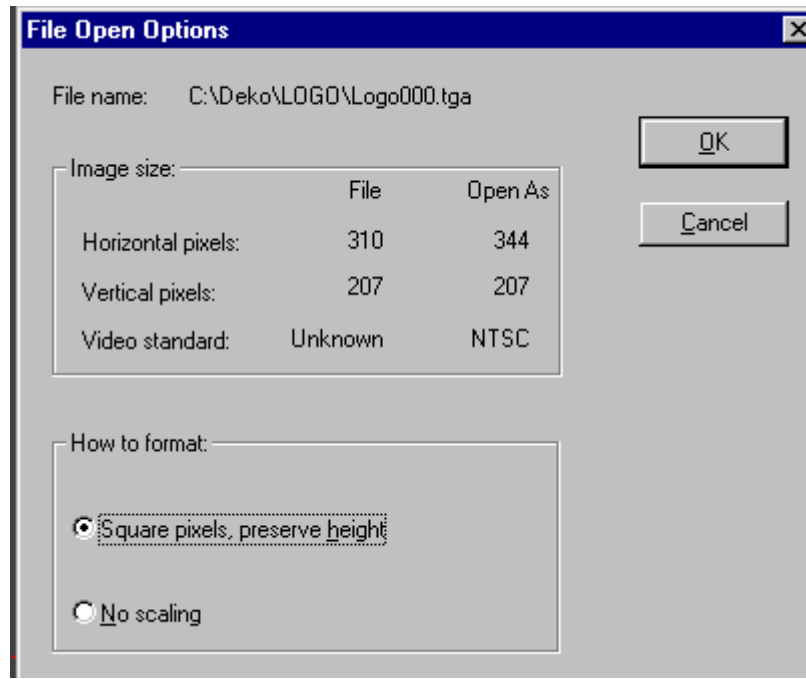


8. Choose *No scaling* or *Square pixels, preserve height* from the How to format section. Use Square pixels, preserve height if the animation has not been resized for Television (see Lesson 6).
9. Click OK. Then Click OK to close Select CAP file dialog box.
10. In the Face Shader Frames: field, enter the total number of frames in the Animation sequence.
11. Choose CAP Options:
 - Forward/Backward – specifies which direction the animation will play.
 - Oscillate – reverses direction of the animation each time it plays.
 - Continuous – plays cel animation through any pause in the motion. Automatically puts a pause at the end of the motion so the animation continues when the motion ends.
 - Rate – the rate of animation playback in frames per second.

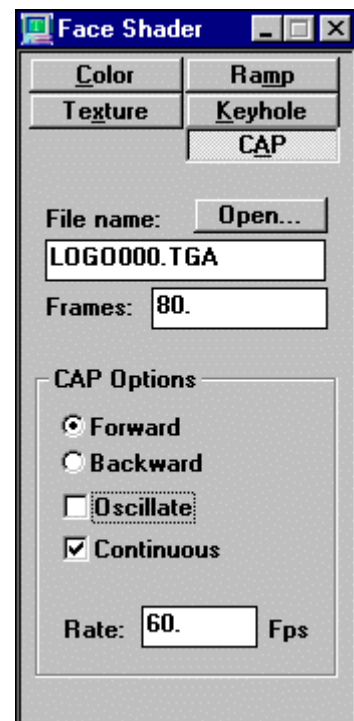

Setting Up the Animation File to Play

1. Open the graphic that includes the CAP shader in the Preview window.
2. Activate the Motion window. If necessary, go to Motion > Clear Motion to restore default settings to the Motion window.
3. Click the second default motion descriptor to select it from the script list on the left hand side of the Motion window.

| Motion | Layer | Channel |
|---------------|--------|---------|
| Clear Motion | | |
| Insert action | Insert | |
| Delete action | Delete | |

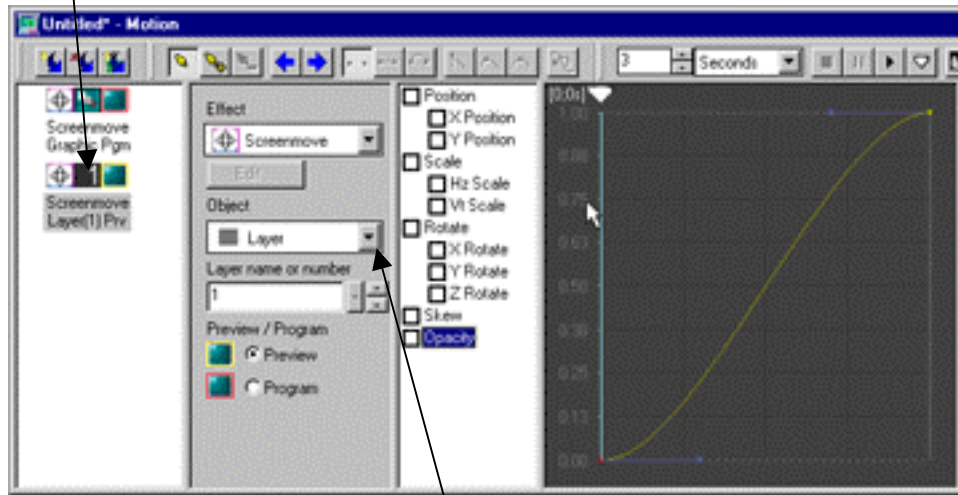

4. Click the arrow next to the Object dropdown menu and select Layer from the drop-down menu.
5. Enter the layer number of the layer that contains the CAP shader in the Layer number text box.
6. Uncheck opacity from the effects parameter list.
7. To view the cel animation, play the motion or, if you have the Timeline option, scrub through the timeline.

Keep Animation Playing

To keep a cel animation playing once a motion ends, in the Shader window, under CAP shader options, select Continuous. Deko automatically puts a pause at the end of the motion so that the animation continues when the motion ends.

CAP Performance Guidelines

A rough limit for the size of an individual frame (image) for a CAP shader that plays in real time is approximately 1/9 of the screen size in NTSC (if this is the only motion being played). That means that, since NTSC is 720 x 486 = 350,000 pixels, the file size of an individual frame should be no more than about 39,000 pixels (x 4 bytes per pixel = 156 kilobytes, uncompressed).

The StillDeko Option

The StillDeko option brings Deko graphic file management to a new level of efficiency and ease of use, through *Lightning integration*. This is the most powerful, efficient and useful Still Store/Character Generator integration available today.

To see whether StillDeko is enabled, go to Options > Enabled Options. A checkmark next to StillDeko indicates that it is enabled. If StillDeko is not enabled, contact your Pinnacle Systems dealer.

Lightning and Thunder

Lightning is a high performance, network based, image storage and management system, used in on-air broadcast and production. Thunder works similarly, and has the added capability to store and manage clips as well as still images. StillDeko uses Thunder Browse software to integrate Thunder and/or Lightning with Deko, for the most powerful graphics management available. Once you install the Thunder Browse software, you can open and edit a Lightning image in Deko, associate a Thunder clip with a Deko graphic, and store Deko files in a Lightning database on your Deko's hard drive or a networked Lightning system.

Install Thunder Browse Software on Deko



1. Connect the Thunder dongle to the parallel port on the back of your Deko. If you have any other dongle already connected, connect the Thunder dongle onto the back of the dongle already there.
2. Insert the Thunder CD in your Deko's CD drive.
3. In the bottom left corner of desktop, go to Start > Run.
4. Click the Browse button and navigate to the Setup.exe file on the Thunder CD, then click OK.
5. Follow the on-screen prompts to complete the installation. The installer will ask you to choose Thunder or Thunder Browse. Choose Thunder Browse.
6. Once the installation is complete, go to Start > Shut Down > Restart.
7. Once the computer has restarted, go to Start > Programs > Thunder Browse.
8. Thunder Browse prompts you to enter the Options Enable password. Refer to the *Important Notice*, included with your Deko documentation, for the password. Enter the password, which is case sensitive, and click OK.

Connect to An Existing Remote Database

To access databases on another system in your network, you must first connect to that system. After you follow this one-time connection process, the other system will always appear in the Thunder Browser Tree.

If your Deko is not networked, check with your network administrator.

1. Open Thunder Browse.
2. Go to File > Open.
3. In the Look in field at the top of the Open dialog box, choose Network Neighborhood.

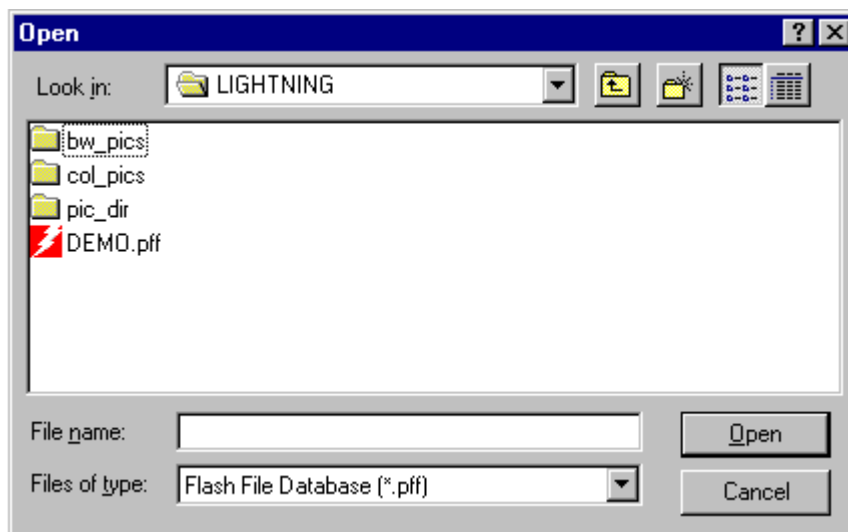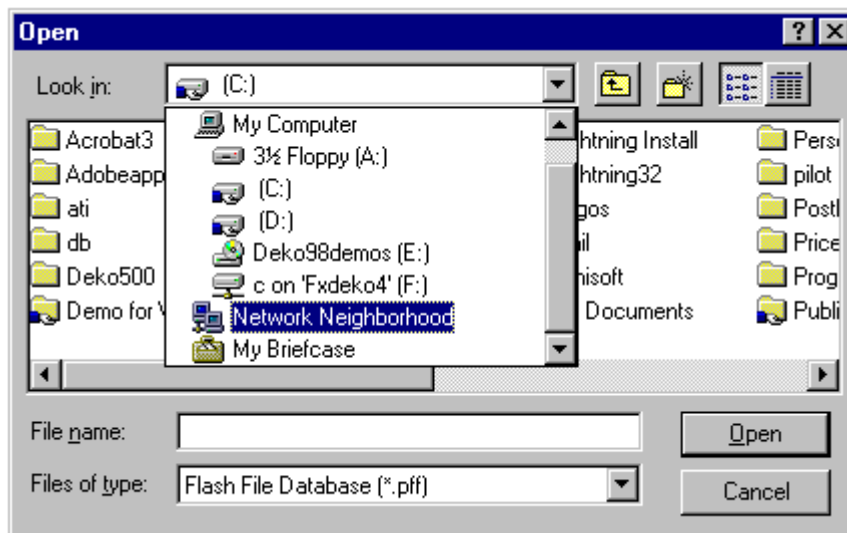

4. Double-click the remote system name, the exported drive (usually D), the Lightning directory, and then the database (.pff) file you wish to open.


Set Up a Database on Your Deko

You must first setup file sharing for the drive where the database will reside. After that, you can create a new database, and open it.


File Sharing

To set up file sharing on the hard drive:

1. Go to Start > Programs > Windows Explorer.
2. Right-click the drive where you will store Lightning databases (probably C or D), then choose Sharing. The Properties dialog box appears with the Sharing tab selected.

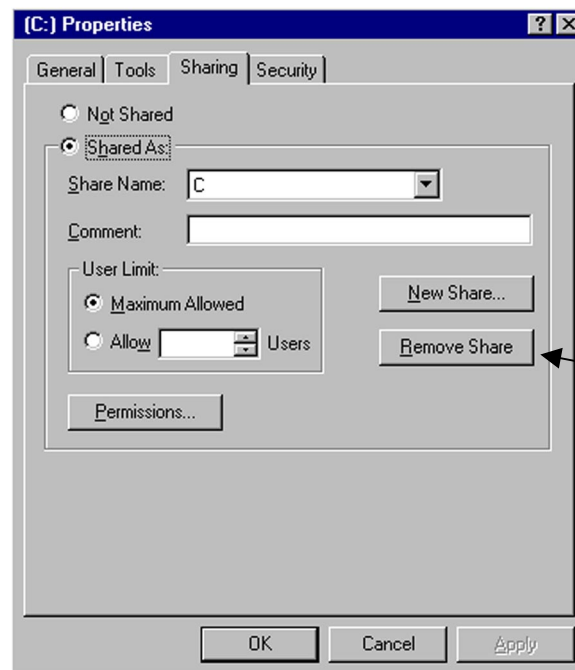

3. Under the Sharing tab, click the New Share button.

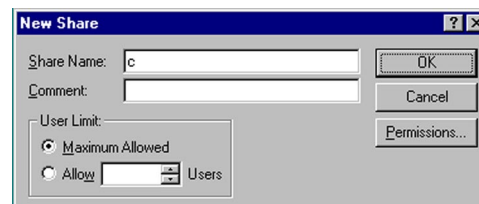


4. Type the drive designation letter (such as C) in the Share Name text box, then click OK, then click OK again on the Properties dialog box. The selected drive is now shared.

Create and Open a Database


To create and open a database:

1. Open Thunder Browse.
2. In the File menu, click Advanced, then Create New Database.
3. Select Lightning as the Database Type.

Note: Thunder and Lightning databases are different. Thunder and Thunder Browse can access both Thunder and Lightning databases. Lightning can access only Lightning databases. If you are creating a database on your Deko system we recommend that you select Lightning as the Database Type. This way, any Lightning or Thunder machine can open your database.

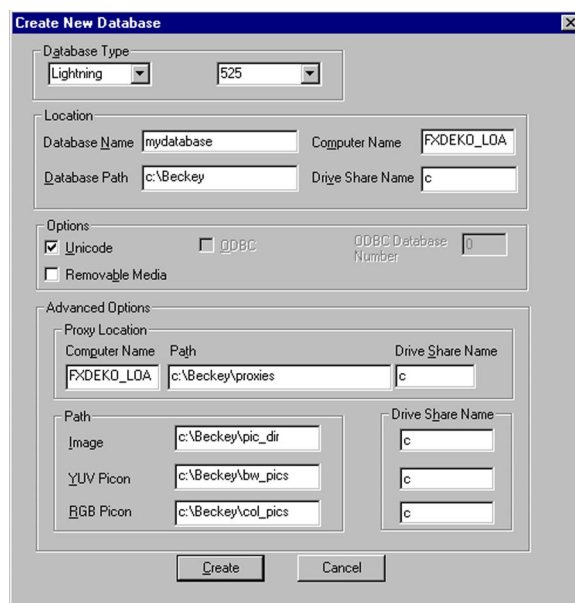


4. Enter a Database Name.
5. Enter a Database Path, unique to the new database, that contains the full path name of the directory where the new database will reside.
6. Choose 525 for NTSC (the default setting) or 625 for PAL.
7. Thunder automatically enters other field values for you. Click the Create button.
8. Go to File > Open, and navigate to the new database (.pff) file. Then click the Open button.

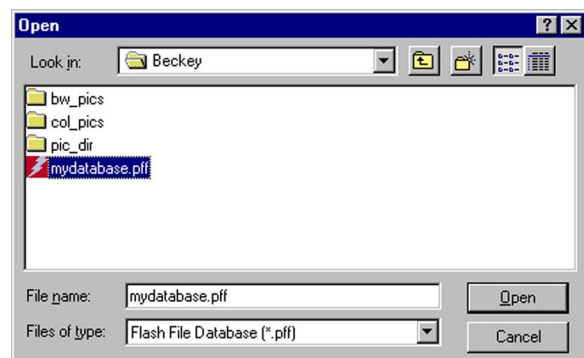

Set Default Database

To set a default database:

1. Open the database, as described above, so that it shows up in your Thunder Network Tree. You can select any database as the default database. It can be a database on your hard drive, or anywhere on the network.
2. In the Thunder Network Tree, navigate to the database, then right-click the database name.

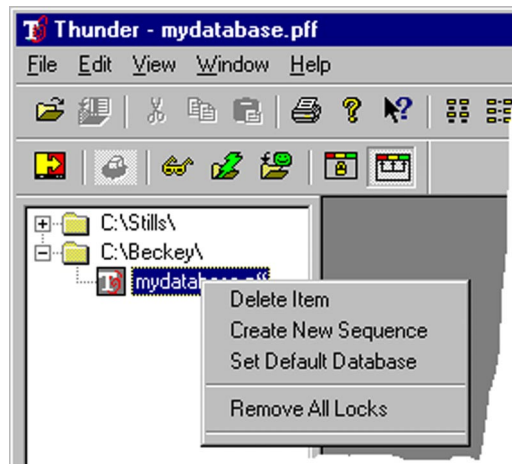


3. In the drop-down menu, click Set Default Database.

Access Stills and Clips

To open a still image from Deko:

1. In Deko, click anywhere on the Program or Preview window.
2. From the File menu, choose Open From Lightning.
3. In the Open From Lightning dialog box, double-click anywhere on the image data line.

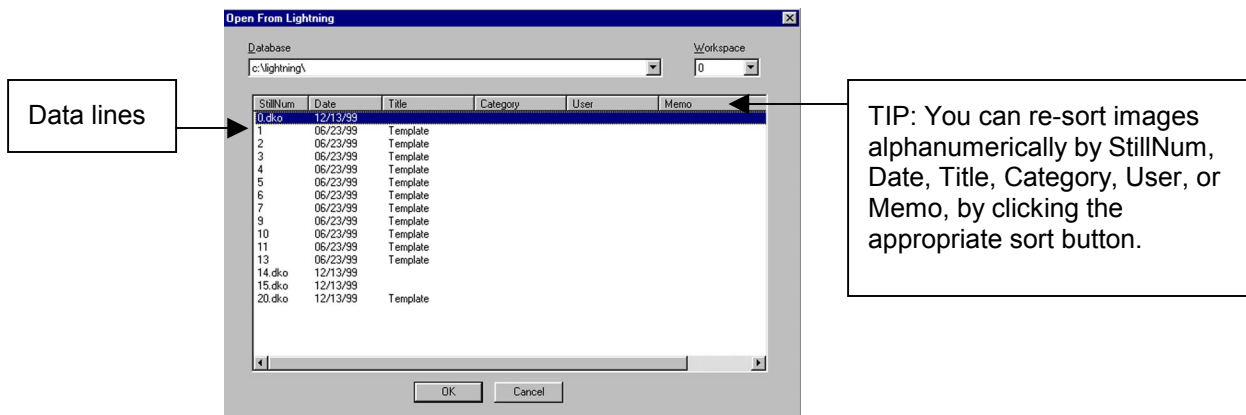


To browse for images:

Hold Alt and press the Tab key to find Thunder, then release Alt to open Thunder Browse.



Thunder Browse has a variety of View menu options, to display exactly the information you want. Refer to the Thunder documentation and Online Help for more details.

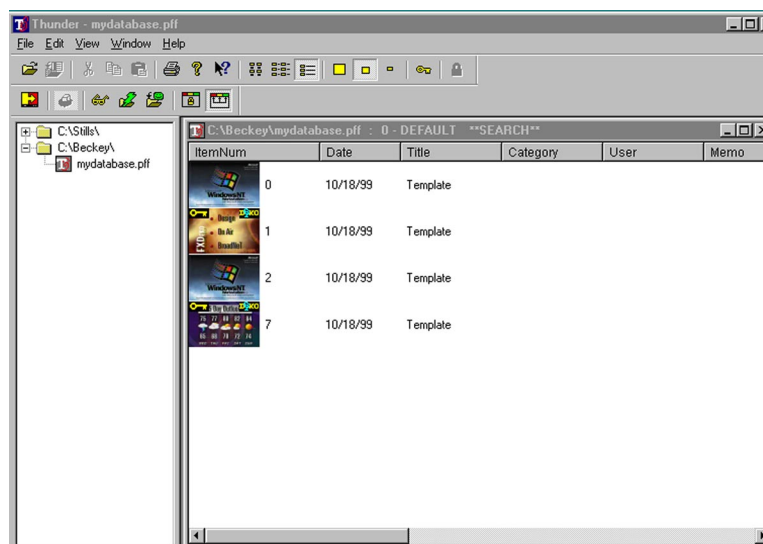

Still Images


You can open a still image from the Thunder Browse into the Deko in several different ways:

- Right click on the still, and choose Title from the drop-down menu.
- Left click the still, then press function key F9 on the keyboard.
- Use the numeric keypad to type the number of the still, then press F9.

Any of these three operations will switch you over to the Deko application, with the image you picked loaded into the Preview or Program window—whichever was active when you left the application.

If Deko is already open, you can drag and drop an image from Thunder Browse to the Deko Preview or Program window, where you can then edit the image like any other Deko graphic.

Once you edit and save a graphic in Deko, Thunder marks the upper right corner of the thumbnail image of the graphic with the Deko logo.

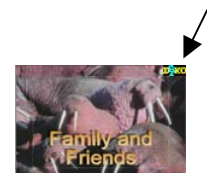

Clips

Thunder Browse marks thumbnail images of clips with a small film clip in the upper right corner. You can associate a clip from the Thunder Browse with a Deko graphic. When you then use the graphic in a sequence, Deko plays the clip simultaneously with the effect associated with the graphic.

To associate a clip with a Deko graphic:

1. In Deko, open the graphic in a Program or Preview window. The window must be active.
2. Drag and drop the clip from the Thunder Browser onto the graphic.


Store Images

To save a Deko graphic in a Lightning database:


1. Open the graphic in an active Program or Preview window.



2. From the Deko File menu, choose Save To Lightning.

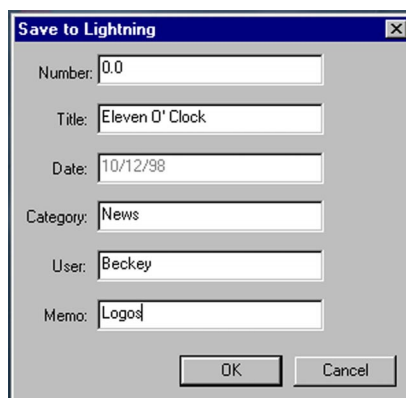A screenshot of the "Save to Lightning" dialog box. The dialog box has a title bar with "Save to Lightning" and a close button. It contains several text input fields: "Number" with the value "0.0", "Title" with "Eleven O' Clock", "Date" with "10/12/98", "Category" with "News", "User" with "Becky", and "Memo" with "Logos". At the bottom, there are "OK" and "Cancel" buttons.

3. In the Save To Lightning dialog box, you can edit any of the file details, which default to the details of the last saved image. StillDeko automatically picks an available, empty number for you. We recommend against changing the number, to avoid overwriting an existing still.

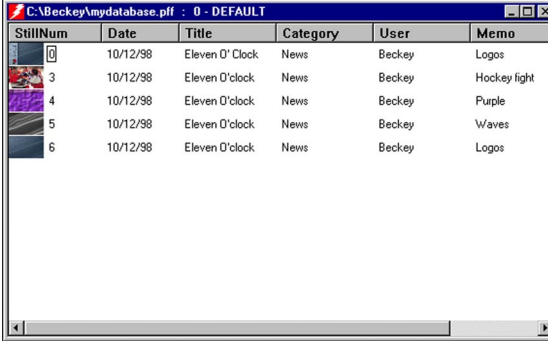

| StillNum | Date | Title | Category | User | Memo |
|----------|----------|-----------------|----------|--------|--------------|
| 0 | 10/12/98 | Eleven O' Clock | News | Beckey | Logos |
| 3 | 10/12/98 | Eleven O'clock | News | Beckey | Hockey light |
| 4 | 10/12/98 | Eleven O'clock | News | Beckey | Purple |
| 5 | 10/12/98 | Eleven O'clock | News | Beckey | Waves |
| 6 | 10/12/98 | Eleven O'clock | News | Beckey | Logos |

- Click OK. The image is stored in the Lightning database, and will show up in the Browse window if you press Alt + Tab to switch to the Thunder Browse application.


Note: You can also drag and drop images from Windows Explorer into the Thunder Browser.

ClipDeko


The ClipDeko option enables you to record Digital video, then playback, loop, and browse these clips. Animated backgrounds can now be played all from one box, without the need for a separate disk recorder. you can also associate any clip to any Deko graphic.

ClipDeko hardware supports DV25 and MPEG-2 compression formats, providing over 3 hours of DV25 storage. Clips can also be imported in the form of AVI files from standard applications such as Adobe AfterEffects and 3D Studio Max.

- The Clip Browser offers thumbnail images for fast searching as well as clip association control for linking your clips to specific graphics.

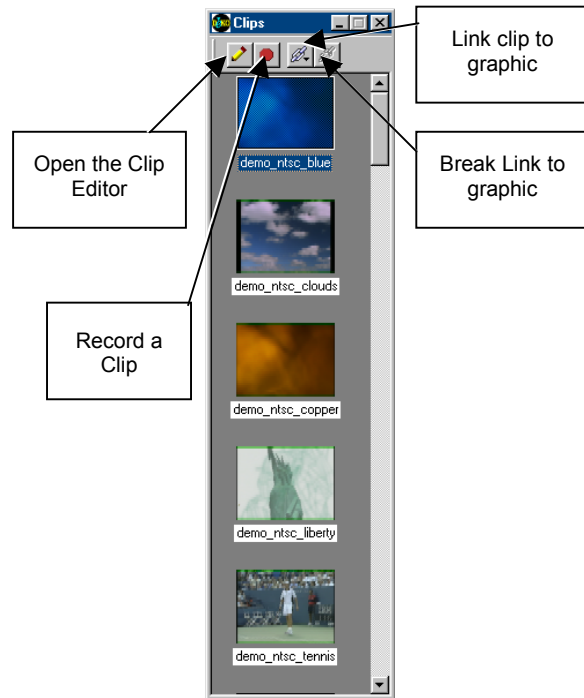

- The *Clip Editor* allows you to import, record, preview, play and, loop your clips, as well as assign key clips to fill clips, and align a fill clip with its associated key. This menu also contains a thumbnail browser of all clips imported in the database.

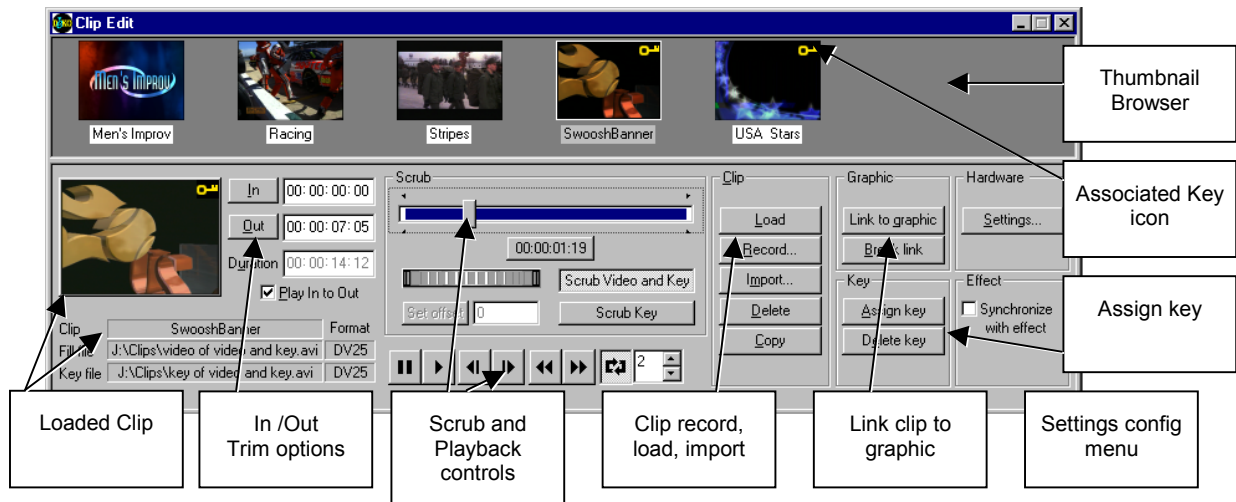


To Turn On ClipDeko:

- In the Channel menu, choose ClipDeko.

To Enable ClipDeko:

- In the Channel menu, click Keying and Routing.
- In the Keying and Routing dialog box, under the appropriate channel, select Deko + Clip.

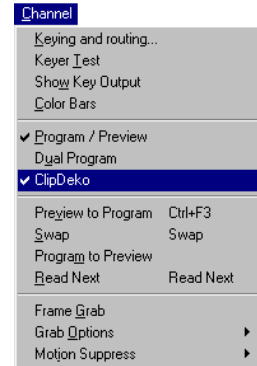

To Open the Clip Browser:

1. Turn on ClipDeko.
2. In the View menu, click Clip Browser.

To Open the Clip Editor:

Do one of the following:



- In the Clip Browser, click the Edit Clip tool.
- Go to View > Clip Edit.


Note: The Clip Editor also contains a clip browser.

Recording and Importing Clips

The first time you record a clip, it is important to verify the compression protocol before recording.

To Verify the Compression Protocol:

1. Open the Clip Editor and click the Settings button.
2. In the dialog box, click the Capture tab.
3. Verify that the compression protocol is set to DV25:

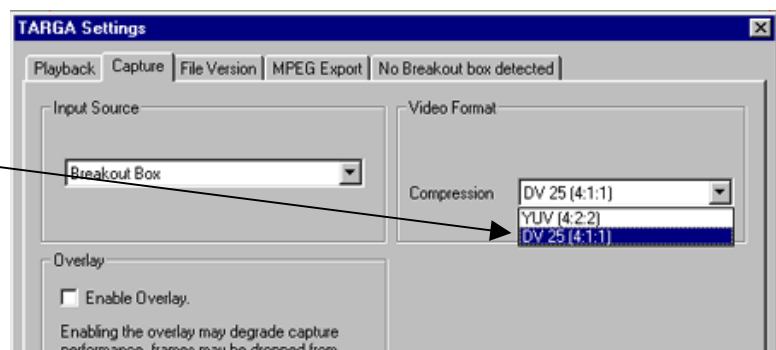


To Record a New Clip from Input Video:

1. Connect a live video source to the system's SDI Video input.
2. In the Clip Editor, click the Record button.
3. In the Create Clip dialog box, type a clip name and select a folder where the clip will be stored.
4. Specify clip length – up to 10 minutes.
5. Click the Record button to start recording input video.
6. Once the recording is complete, click Play to play back the new clip. As it plays, verify that it appears properly on the system video output.

To Import a Clip to the Browser Database:

1. Open the Clip Editor, then click the Import button.
2. In the Import Clip dialog box, navigate to the directory that contains the clip (.avi file) you wish to import.
3. Select the file name, then click the Open button.

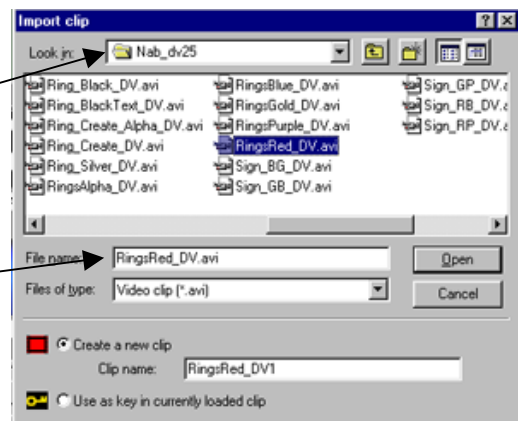

Using Clips with Key


Using clips with key requires that you have two separate clips, one for the fill, and one for the key. The fill clips can be imported or recorded as described in an earlier section. You can use a copy of the same .avi file for both the fill clip and the key clip, but you must record or import that file twice.

To Import a Fill Clip and Its Associated Key:

1. Import the fill clip as described above.
2. Double-click the fill clip thumbnail to load it as the current clip.
3. Import the key clip as described above, but be sure to choose “Use as key in currently loaded clip” in the Import Clip dialog box before you click Open.

To Assign a Key Clip to a Fill Clip:

1. In the Clip Browser, double-click the fill clip thumbnail to load it as the current clip.
2. In the Clip Browser, click the key clip thumbnail to select it.
3. In the Clip Editor, click the Assign Key button. Deko displays a key icon in the corner of the fill clip's thumbnail image.

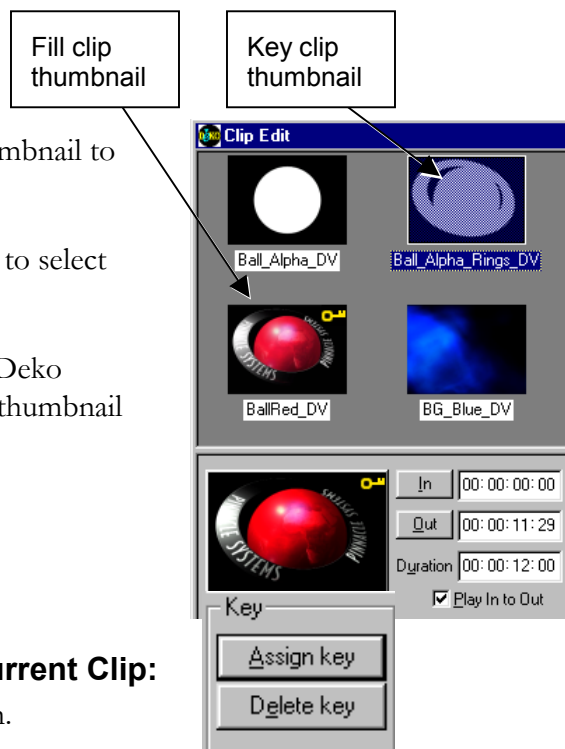

To Remove the Key Assignment from the Current Clip:

- In the Clip Editor, click the Delete Key button.

To Align a Key Clip with a Fill Clip:


1. In the Channel menu, click Keying and Routing, then verify that Deko Under Video is selected.
2. Create a solid color background that contrasts with the clip color and black.
3. Open a fill clip that has been assigned a key clip.
4. In the Clip Editor, select Scrub Key.
5. Use the thumbwheel or the double arrow keys to align the key clip with the fill clip.
6. Click Set Offset.

Playing Clips

The first time you play a clip, it is important to specify the genlock source.

To Specify the Genlock Source:

1. Open the Clip Editor and click the Settings button.
2. Click the Playback tab in the dialog box.
3. Under Genlock Source, choose Reference Input (signal present).

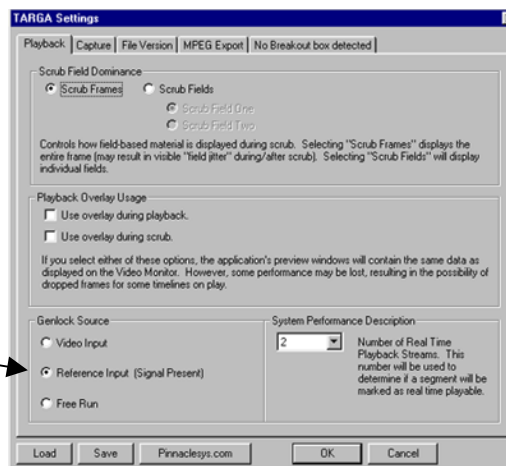

To Preview a Clip:

Open the browser and select the clip. Deko displays the clip in the clip viewer, a box in the lower left corner of the editor.

Note: The name of the current clip file and the name of the .avi files for the fill and for the key appear below the clip viewer. The format (DV25, YUV, or RGB) of the .avi file appears next to the file name. If no clip is selected, the clip viewer is grayed out.

To Set a Start Point and End Point for Playback:

1. Open the browser and select the clip.
2. Open the Clip Editor, and use the slider, thumbwheel, or frame-by-frame buttons to find the frame where you would like playback to begin.



3. Click the In button.
4. Repeat step 2 to set the display on the desired Out point frame, then click the Out button.

Note: You also can specify In and Out points as well as Duration of playback by entering numerical values next to these buttons.

To Play a Clip from the In Point to the Out Point:

- Check Play In to Out.

Note: When Play In to Out is not checked, Deko will play the clip from beginning to end, ignoring the In and Out points. Once you specify an In point and/or an Out point, and check Play In to Out, Deko begins at the In point and ends at the Out point whenever you scrub through the clip. When no In or Out point is specified, you can scrub through the whole clip.

To Find the Nearest Point (In, Out, Beginning, or End) in the Clip:

1. In the Clip Edit box, do one of the following:
2. Use the double left arrows to jump to the nearest point backward in the clip (Out, In, or beginning).
3. Use the double right arrows to jump to the nearest point forward in the clip (Out, In, or end).



To Play a Clip:

Do one of the following:

- From the Clip menu, select Play.
- In the Clip Editor, click the Play button under the thumbwheel.



To Synchronize Clip Playback with Effect Playback:

1. Open the Clip.
2. In the Clip Editor, click Synchronize with Effect.

Note: When you associate the clip with a graphic, ClipDeko will begin clip playback simultaneously with any effect played on that graphic.

To Stop Clip Playback:

Do one of the following:

- From the Clip menu, select Stop.
- In the Clip Editor, click the Pause button under the thumbwheel.
- Clear the Program graphic.



To Loop from In to Out:

1. In the Clip Editor, click the loop button under the thumbwheel.
2. Specify number of times to loop in the box next to the Loop button.
3. Play the clip.



Using the Clip Browser

Clips are organized alphabetically by clip name in the browser. You can type a letter to jump forward or backward through the browser alphabetically.

To Associate a Clip with a Graphic:

1. Open the graphic.
2. Open the Clip Browser and scroll through thumbnail images to find the clip. Click the clip to select it.
3. Do one of the following:
4. Drag and drop the clip from the browser onto the graphic.
5. Click the Link tool at the top of the browser, then select the graphic file name from the list of available (open) graphics.



You can use the Undo Link tool at the top of the browser to break a link between a clip and a graphic.



Note: When you associate a clip with a graphic, ClipDeko will play the clip whenever you open the graphic in the Program window, swap the graphic to the Program window, or play and effect on the graphic.

To Rename a Clip:

Do one of the following:

- In the browser, click the clip name to highlight it, then click it again.
- Click the clip to select it, then right-click and select Edit Clip Name.
- Type a new clip name, then press Enter.

To Delete a Clip from the Browser Database:

1. Open the browser and click the clip to select it.
2. Open the Clip Editor and click Delete. Deko displays a message box asking if you want to delete the .avi file, too. Click Yes or No.

Appendix

Keyboard Extenders

Overview

Describes a variety of keyboard extenders, and covers issues of *hot switching* among multiple control points.

This document will refer to the SVGA, keyboard and mouse at the operator station as the GUI. Technically, this is a misuse of the term, but it saves typing.

Extender Choices

- All systems extend keyboard, mouse and SVGA, unless otherwise indicated.
- All systems consist of a transmitter, near the chassis, and a receiver at the GUI.
- The transmitter is generally powered from the keyboard cable, while the receiver always has a *wall wart* power supply.

This document lumps together extenders and multi-point access. Our experience is that with the FastAction Keyboard (FAK), having multiple receivers and switching among them best achieve multi-point access. The automatic switches tend to result in double characters being sent to the display of the FAK.

See pages A-3 and A-4 for details on hot switching among receivers.

In systems without FAK, multi-point access works fine.

Brands and Models

BlackBox

<http://www.blackbox.com/catalog/09switches/424.PDF>

Servswitch Cat5 KVM Extender

Uses Cat5 cable. Works fine. Up to 1000 feet.

Dual station version also available. Standard dual station caveats apply.

Cost \$765.

Cybex

<http://www.cybex.com/>

PC-Extender Plus

Uses 25 wire cable, which is awkward to run long distances, and horribly expensive, especially the plenum-rated version. Works well, though SVGA can get a little dim or noisy.

PC-Extender SNAP 1

Uses Cat5 cable, and supports runs up to 300 feet. Works well.

Cost \$600.

LongView400 (LV400)

An enhanced version of SNAP 1, at the same price; Uses Cat5 cable, supports runs up to 500 feet, and also includes support for COM port, audio, multi-media quality video. Works fine.

Cost \$600.

Hall Research

<http://www.hallresearch.com/hall/model97.htm>

Model 97 Dual station interface

Works fine. Can be used as an extender, up to 250 feet away.

When used as dual station, the standard caveats apply

FastAction Keyboard Hot Switching

Our experience is that you can easily hot swap from one location to another, while in the Deko application. The experiments were conducted with the LV400, but should work the same for all extenders.

Simply switch, at the transmitter, from a cable leading to receiver A, to a cable leading to receiver B. If using a Cat5 extender, a jumper block could be setup, such as is used for networking. This allows any GUI to be used with any chassis.

For temporary setups, such as a sporting event, the GUI of one of the on-air operators can be switched to the spare machine by changing the wire over from one transmitter to another.

Vital Details

After switching to a new GUI, you must “wake up” the new FastAction Keyboard (FAK). The best way to do this is disconnect the keyboard cable from the rear of the FAK, wait a couple of seconds, and then reconnect it. If this is not done, the keyboard will not function.

In addition, to get accurate display lights on the **caps lock** and **num lock** keys, you must press each one twice. Otherwise, the lights stay off, even if they should be on.

On one system, we found it necessary to disconnect and reconnect the mouse from the receiver, after hot swapping. Until this was done, the mouse cursor was locked in position. Our guess is that the hot-swap procedure puts noise on the mouse line.


Keyboard Mixing

You can also hot swap between a FAK and a standard 101 keyboard. There are some details to watch out for.

The driver for the FAK is loaded at Windows NT boot time. Therefore, our recommendation is that you have the FAK connected (through the extender) at boot time. Otherwise, you will not be able to use all the FAK features until NT is re-booted.

If you boot up NT with a 101 keyboard and then switch to a FAK, all the FAK functions will work except for the function keys and numeric keypad. To check whether the FAK driver is loaded, go to Options > Preferences and pick the Common tab.

If the FAK driver is not loaded, the choices in the Keyboard section will be grayed out, as shown.

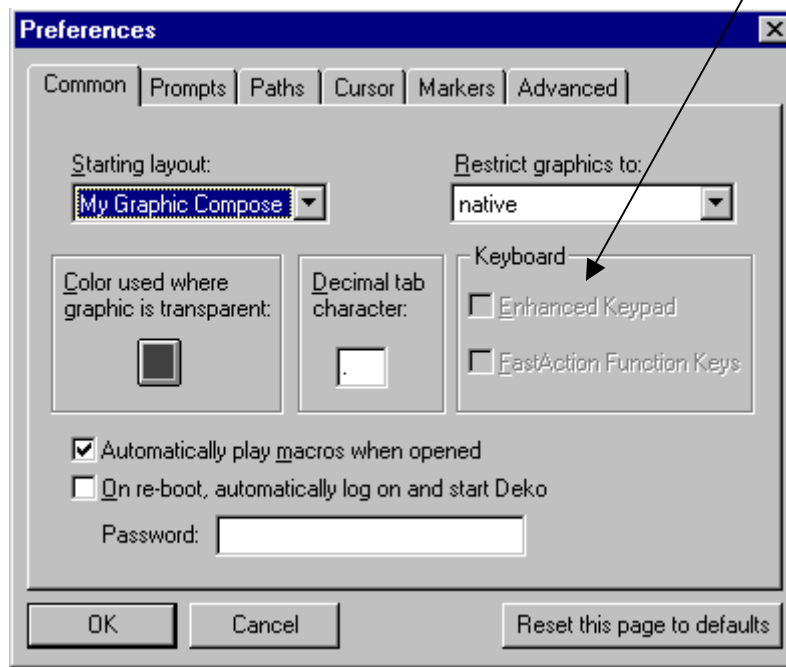

On the other hand, if you switch to the 101 keyboard with the FAK driver loaded, the numeric keypad and function keys will behave like a FAK. If you don't want this behavior, you can turn off those features. To do this, go to Options > Preferences. Under the Common tab, un-check the boxes labeled Enhanced Keypad and FastAction Function Keys.

File Associations for Sports Production

Deko offers many tools to speed and simplify graphic creation. One tool in particular that can reduce pre-build efforts in Sports and Event production is *File Association*.


File Association is defined as any file containing a reference to any other file. For example: A Graphic file (.dko) can embed an Effect file (.efx) – or the background of a Graphic file (.dko) can reference another Graphic file (.dko).

Benefit of a File Association

By referencing a single graphic across many other graphics, what is typically a lengthy process to edit the appearance of a large volume of graphics is reduced to one step – edit the single referenced graphic!

Two Components of a File Association

1. An *air graphic* will typically contain one or more Deko objects refer to an *associated graphic*. The object can be the background or several shape layers in a Deko graphic who's Shader is specified as a *Texture*.
2. An associated graphic is not typically called to air, but rather contains all the team-specific elements – such as banners, logos, frames and team names – used in various team graphics.

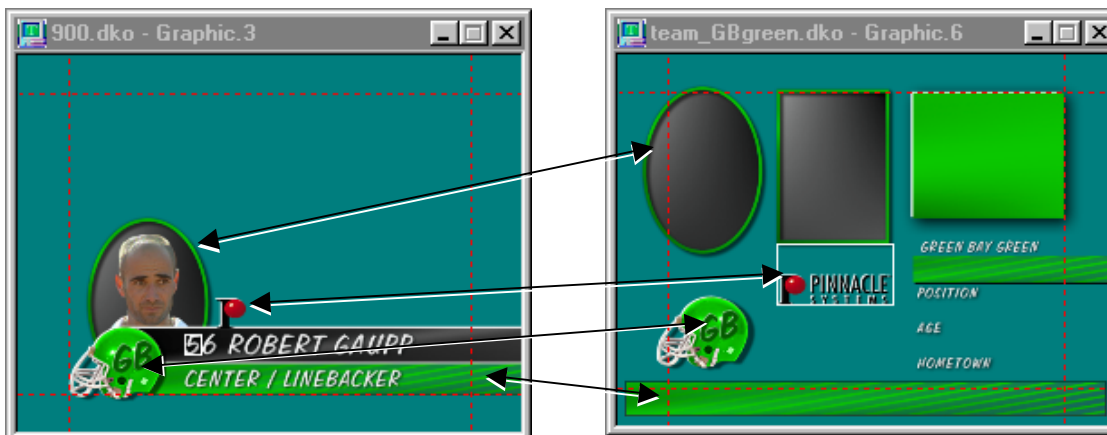

Air Graphic
saved as 900.dko

Associated Graphic
saved as "team_GbGreen.dko"

Building the Graphics



Ideally, the seasonal pre-build for a sporting event will produce a single associated graphic for each team. The air graphics will make a reference to two associated graphics: `team_home.dko` and `team_visitor.dko`. On game day, it all comes together when the playing teams, for example: `team_GB` and `team_NY`, are saved as `team_home.dko` and `team_visitor.dko`.

Every air graphic will automatically update with the current team “look”, without user intervention! To insure the success of this process, there are several rules to comply with.

Rules for Making File Associations



- When using shaper layers as the Deko object for file association, the *Texture* Group should be letter-based in the Group list of the Shader window. This creates what we refer to as a “sticky” texture, so the user may define any size and position in the *air graphic*.

For example: A single full-screen headshot is the associated graphic. This can be used in any random air graphic, such as a lower-third banner, full-screen page or over the shoulder bio.

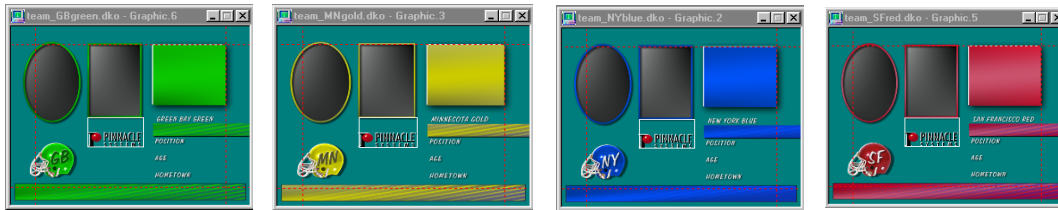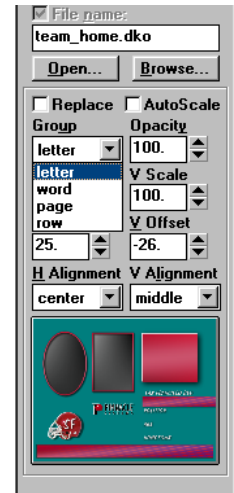


“team_GBgreen.dko” “teamMNgold.dko” “teamNYblue.dko” “teamSFred.dko”

- Team elements used in associated graphics should never vary in size or screen position from team to team.
- Graphics intended to be an associated graphic should not make references to other files. Avoid these “deep file associations” by collapsing layered graphics into backgrounds. From the Layer menu, select Layers to Background.
- Team elements should be arranged into as few graphics (for file association) as possible. Storing all team elements in a single graphic is ideal.

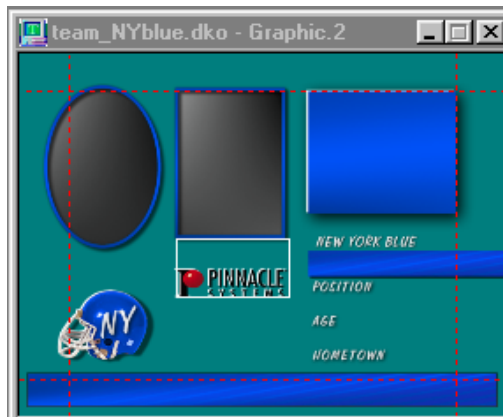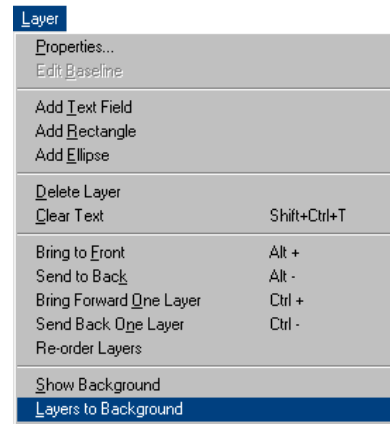

“teamNYblue.dko”

- When saving graphics, click on the Option button in the dialog window. Be sure to *deselect* “Save with rendered bitmap for faster recall” and be sure to *select* “Never” under “Save character glyphs”.

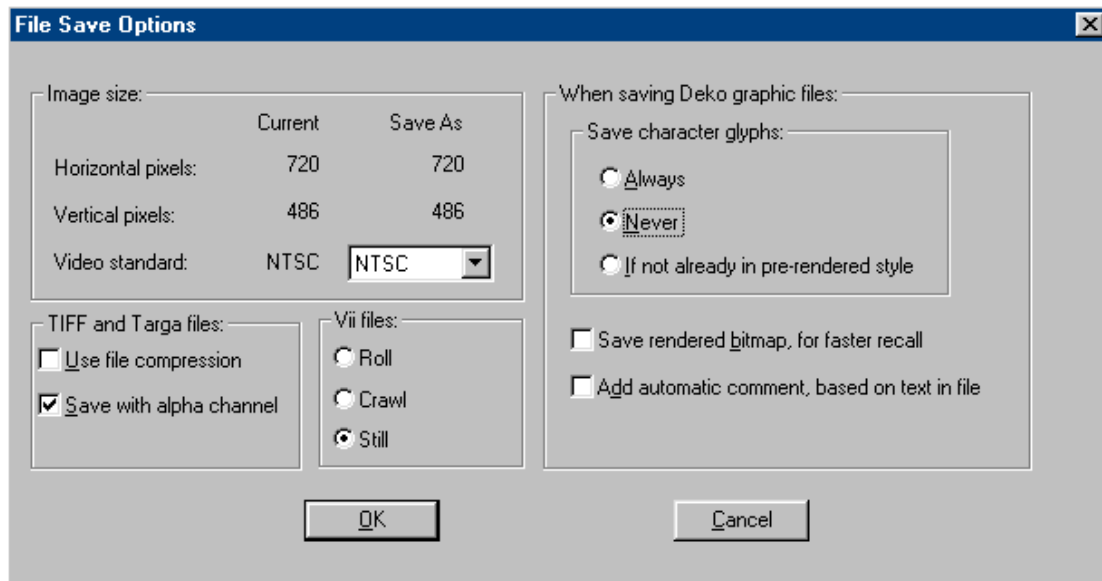

Optional Exercise: Make Bio Graphic with a File Association

1. Set focus to the Preset Style window, and open `training_fileassociation.pst`.
2. From the Tools window, click on the Add Rectangle tool.
3. Pick Preset Style #1 and draw a rectangle in the bottom right corner of the Program window.
Fig. A

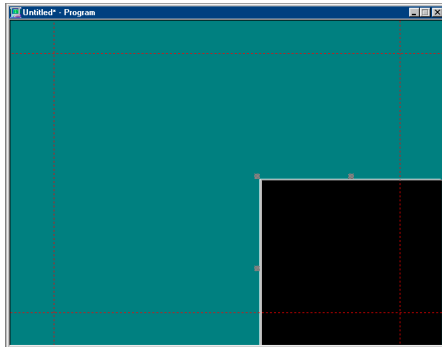


Figure A

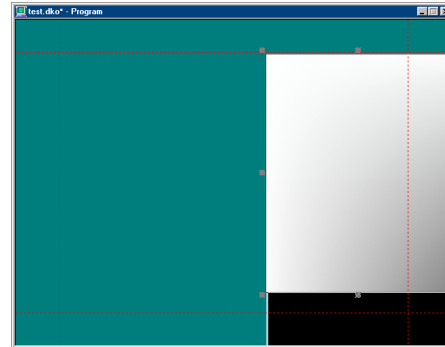


Figure B

4. Choose the Add Rectangle tool and draw a rectangle just above and over-lapping the first. Release when the bottom edge of the layer sits just above safe-title. Pick Preset Style #2. Fig. B
5. From the Shader window, click on Texture, then open the file `team_home.dko`.
6. From the Group list, select Letter. This creates a “sticky” texture for random on-screen placement.
7. In the H Offset field, click and release on the up arrow until you reach 30. Notice the texture moving as you edit the Horizontal position.
8. In the V Offset field, click and release on the down arrow until you reach -2. The graphic should resemble Fig. C below.

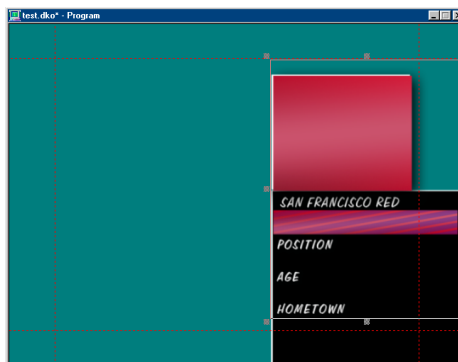


Figure C


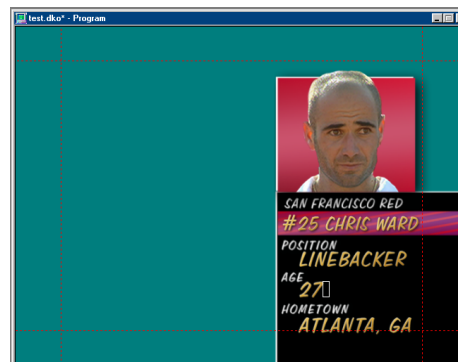


Figure D

Note: These values may vary slightly based on the on-screen position of the rectangle.

9. Next we will add a headshot. Choose the Add Rectangle tool and draw a rectangle over top of and about the same size as the red frame. Pick Preset Style #2.
10. From the Shader window, click on Texture, then open the file `head_agassi.tif`.
11. From the Group list, select Letter.
12. Set H Scale and V Scale to 50 for both.
13. Reset H Offset and V Offset to 0 for both.
14. From the Tools window, click on the Add Text Layer tool. Pick Preset Style # 3 and draw 4 layers for the player name, position, age and hometown.
15. Your graphic should resemble Fig. D above. Save as `0801.dko`. Be sure you have followed all the File Association Rules listed above.

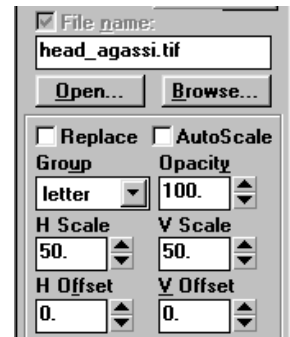

Optional Exercise – Update and Recall Team Graphics for Game Day

1. Open the graphic `team_NYblue.dko`, and save this as `team_home.dko`.
2. Read the *air graphic* titled `0801.dko`. This will display the team look and team title of the current home team.

Samples for Review

| Home | Visitor | Type of Graphic |
|------------------------|---------------------------|---------------------------|
| 800 | 900 | Air Graphic / Lower Third |
| 801 | 901 | Air Graphic / Bio Page |
| <code>team_home</code> | <code>team_visitor</code> | Associated Graphic |

Team Elements Graphics

`team_Gbgreen`
`team_SFred`
`team_NYblue`
`team_MNgold`


Deko Unshaper Card Information

Deko's graphics are composited over external video by a linear keyer. The compositing can be done internally, using Deko's integrated downstream keyer or externally, typically through a switcher. Deko's internal keyer always composites anti-aliased graphics properly, smoothly blending the graphic into the background with no disturbing artifacts. External keying can also be done cleanly. However, an improperly configured system can lead to unsatisfactory results, including black fringes and saw-tooth patterns surrounding the graphic. An improperly configured system will also cause the fill to look like it is disappearing too quickly during a dissolve.

An external switcher requires two signals to properly composite an anti-aliased graphic: the key signal and the video fill. The key signal is also known as the alpha channel. In addition to cutting a hole for the graphic, it carries the anti-aliasing and transparency information. The video fill contains the actual RGB content of the graphic. The keyer uses the key signal to control the blending between the video fill and the background video.

Keyers use one of two algorithms for blending the video fill with the background video. A shaped keyer, also known as a narrow or half-blending keyer, expects the input video fill to be anti-aliased over a black background prior to processing. An unshaped keyer, uses the linear key signal to control a dissolve between the two video signals.

The following diagram illustrates both the fill and key for one scan line of an anti-aliased white letter:

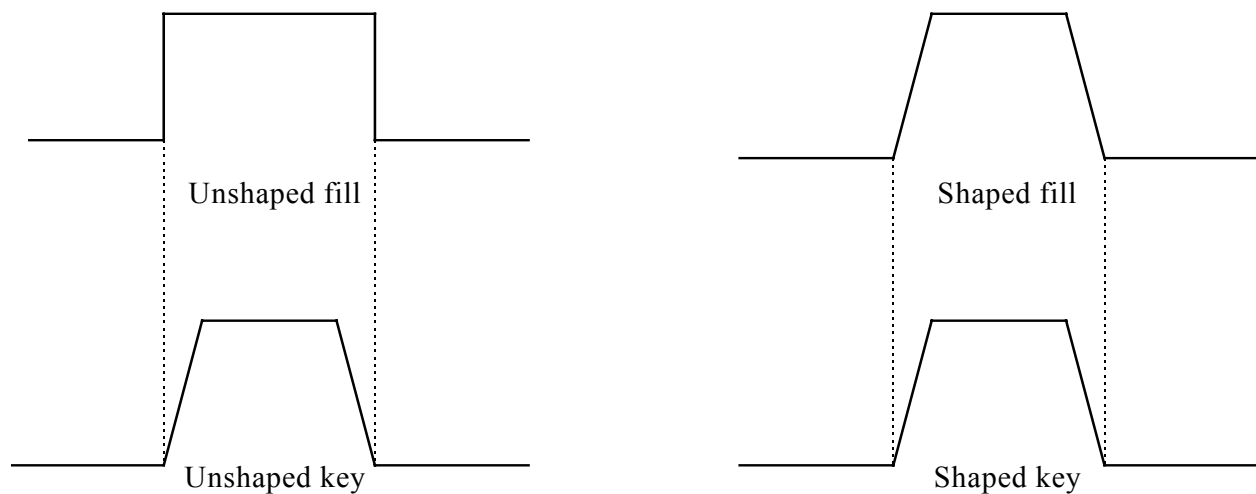

Note: The key signal is the same for both unshaped and shaped video. Unshaped fill is always full value when the key is non-zero. Shaped fill is always less than or equal to the level of the key. The shaped fill of a white character is identical to its key signal.

Without getting too technical, an unshaped keyer does a crossfade between the fill and background signal. It applies the mathematical formula to do the keying: $F * K + B(1 - K)$ where F = Fill, B = Background, and K = Key.

A shaped keyer applies the formula: $F + B(1 - K)$

The standard Deko produces shaped video. Shaped video has many technical advantages: less processing is required for multi-layered compositing, it looks good on a monitor, and it avoids nasty filtering problems during D-to-A conversion and encoding. If your keyer does not handle shaped keying, the Deko Unshaper module is required.

The following table shows some of the terms used to refer to the two keying algorithms, along with the equipment manufacturers who use them:

| Algorithms | | Manufacturer |
|-------------------|---------------------|------------------------------|
| Shaped | Unshaped | Deko Products, Tektronix/GVG |
| Additive | Multiplicative | |
| Narrow | Wide | |
| Half-Blended | Full-Blended | Matrox |
| Aston Mode | Non-Aston Mode | BVS |
| Attenuated Fill | Non-Attenuated Fill | |
| One Legged | Two Legged | |
| Add | Linear | BTS |
| Matte | Linear | Abekas |
| Clean | Linear | Sony |
| Cyber Key On | Cyber Key Off | VGX |

The following switchers require an unshaped input:

| Manufacturer | Model |
|---------------------|----------------------------------|
| GVG | 110, 200, 300 |
| Ross | All |
| Echolab | All |
| BVS | All |
| VGX | DX60, DX120, D2500, DX300, DX320 |

The following switchers accept a shaped input:

| Manufacturer | Model |
|---------------------|---------------------------|
| GVG | All digital switchers |
| VGX | CV60, CV120, CV132, CV332 |
| Sony | All digital switchers |
| BTS | All digital switchers |
| Abekas | All |

There is a simple test to check which mode your keyer is in. Put up a box on your Deko, using the drawing tools. Fill the box with a ramp, where the left side is 100% white, 100% opaque, and the right side is 100% white, 0% opaque. If you view the video (or key for that matter) output of the Deko on a waveform monitor, you will see a straight line from 100 IRE down to black. If you key this over a black signal, and view the output of the keyer, it should look the same if it is configured properly. If you see a curved line, it means the keyer is expecting an unshaped signal.

The optional Unshaper enables Deko to produce unshaped video. The Unshaper's proprietary fill-widening circuitry enables unshaped keying of the highest quality. The unshaping can be turned on and off under software control, allowing Deko to be used with any external linear keyer.


GPI Connection

GPI (General Purpose Interface) is a method by which electronic pulses from one device, such as an edit controller, are used to trigger functions on another device, such as FXDeko.

To connect a GPI trigger, connect the triggering device to COM port 1.

To enable GPI triggering:

1. Connect the triggering device, then restart FXDeko.
2. Activate the Sequence window (F11).
3. Go to Sequence > GPI Settings.
4. In the GPI Trigger Settings dialog box, check GPI Enabled, enter the COM port name (such as COM1), and then choose OK.

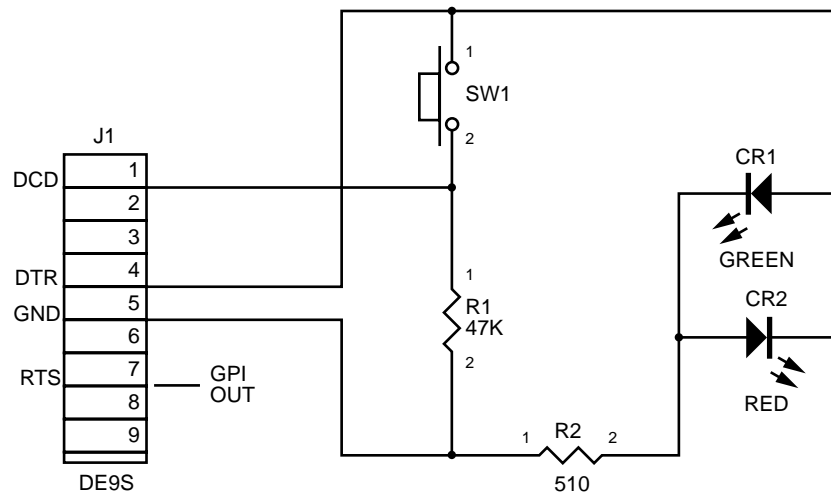

Controlling a Thunder Server from FXDeko

Before you begin

Controlling Multiple Channels

For each channel you wish to control remotely, both the Thunder and FXDeko procedures must be repeated. For example, if you wish to control two channels of Thunder from the FXDeko, you will need to have two entries in Thunder's Protocol Setup Window, and two clip servers set up on the FXDeko.

A Word about Media ID Numbers

Controlling Thunder from a remote location requires the operator to know the media ID number for the desired clip. This is a separate number from the clip's database number (the number appearing below the picon in the Thunder database).

The Media ID number is formatted as the workspace number, an underscore, and the clip's *original* database number. In most situations, the workspace number will be 0. Workspaces are a function of the Security Administration option, and Thunder systems without this option always use the default workspace, which is 0.

The original database number is the database number assigned to the clip when it was first created. If the clip was moved from one database to another, it may have been renumbered. Somebody else may have also renumbered the clip. It is in cases like these that the Media ID number will be dissimilar from the clip's database number.

The Clip Command and Its Syntax

Controlling a clip server from FXDeko is done with the Command bar.

Thunder understands three clip commands:

- `Clip load <Clip Server ID> <Media ID>`
- `Clip play <Clip Server ID>`
- `Clip stop <Clip Server ID>`

Clip load <Clip Server ID> <Media ID>

The Clip Server ID is the ID number assigned to Thunder in FXDeko's Clip Server Configuration window.

The Media ID number is the Media ID number for the desired clip to play from Thunder's default database. This is not the still number. In most cases the Media ID number will be 0, and underscore, and the clip number.

Example: Thunder's clip server ID number in the FXDeko Clip Server Configuration window is 0, and the correct Media ID number for the clip1 is 0_1:

Type the command: `clip load 0 0_1`

Clip play <Clip Server ID>

The Clip Server ID is the ID number assigned to Thunder in FXDeko's Clip Server Configuration window. For this command to work, there must be a cued clip (the picon appears just under the mini monitor on the desired channel in the Thunder application). This is done using the clip load command.

Example: Thunder's Clip Server ID number in the FXDeko Clip Server Configuration window is 0, and the clip load command was executed successfully:

In the FXDeko Command bar, type the command: **clip play 0**

Clip stop <Clip Server ID>



The Clip Server ID is the ID number assigned to Thunder in FXDeko's Clip Server Configuration window. This command stops the clip currently being played out of the selected Thunder channel.

Example: Thunder's Clip Server ID number in the FXDeko Clip Server Configuration window is 0, and the clip load and play commands were executed successfully:

In the FXDeko Command bar, type the command: **clip stop 0**

Thunder Configuration

1. Thunder must have a default database. Right-click on the desired database and choose Set Default Database from the context menu.
2. Configure the desired channel for automation. Go to File > Preferences > Protocol Setup.
3. In the Protocol dialog box, select ThunderNet. The Channel box determines which channel you wish to control. ThunderNet protocol is an Ethernet protocol, so the Port box will be disabled. It should show

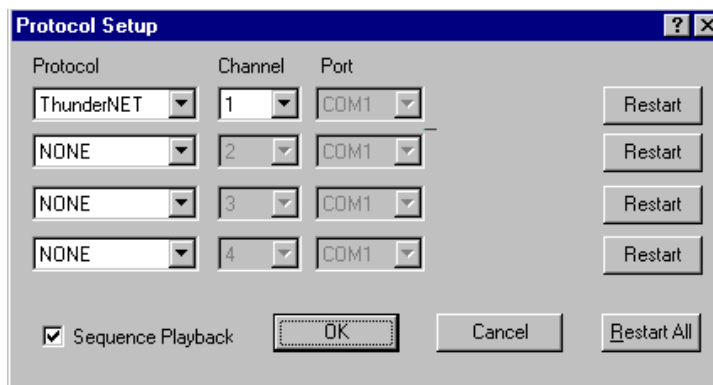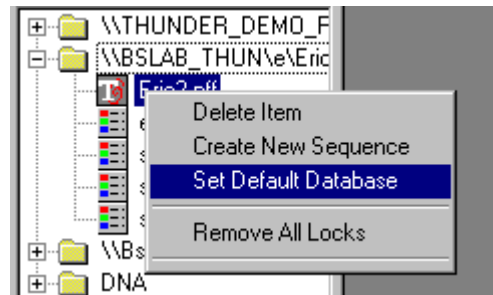


COM1.

4. Press the Restart button next to the protocol you have just set up, then press the OK button.

Note: If you wish to change the Default Database, you must restart the Protocol. To do this, select a new Default Database as described above. Select Preferences/Protocol to bring up the Protocol Setup dialog box. Click Restart on the assigned channel(s).

5. Make sure the automation protocol has permission to control the desired channel. Choose File menu, Preferences, then Channel Configuration.
6. In the Channel Configuration window, Notice the second column of checkboxes. These checkboxes permit and deny access to the listed channels from the context chosen in the box at the top of the column. ThunderNet will appear listed as IO COM1 Context.

Make sure the desired channel to control has its checkbox checked when IO COM1 Context is selected at the top of the column.

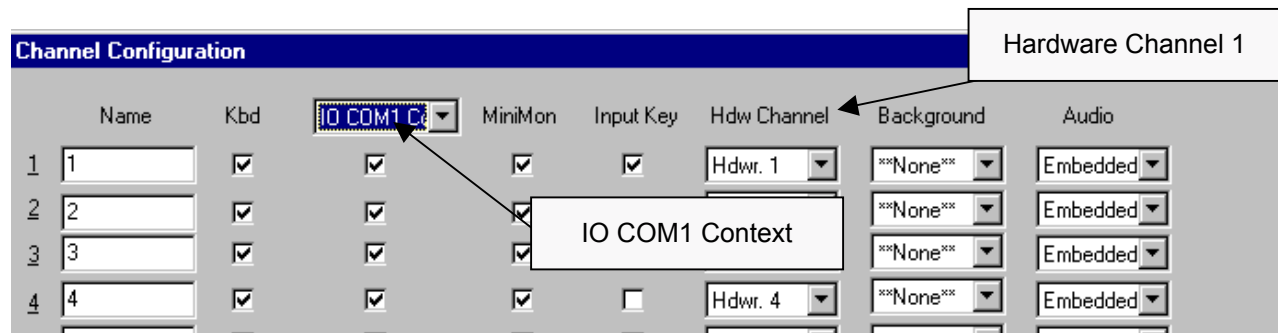


Note: the IO COM1 Context reference assumes that the Port box in the Protocol Setup window for the ThunderNet protocol shows COM1. If another COM port was selected in that box before it was disabled, that COM port number will appear in the second column of checkboxes.


FXDeko Configuration

1. Go to Options > Configure Clip Servers.
2. Enter a unique number in the Server ID box.
3. If there are no clip servers already configured, the first number to be entered is 0. If there is already a clipserver #0 (for example, if you have ClipDeko you should already have a clip server #0), you may enter 1 here.

Note: The remainder of this procedure will assume the Clip Server ID number is 0. If you entered a different number here, use this number instead of 0.

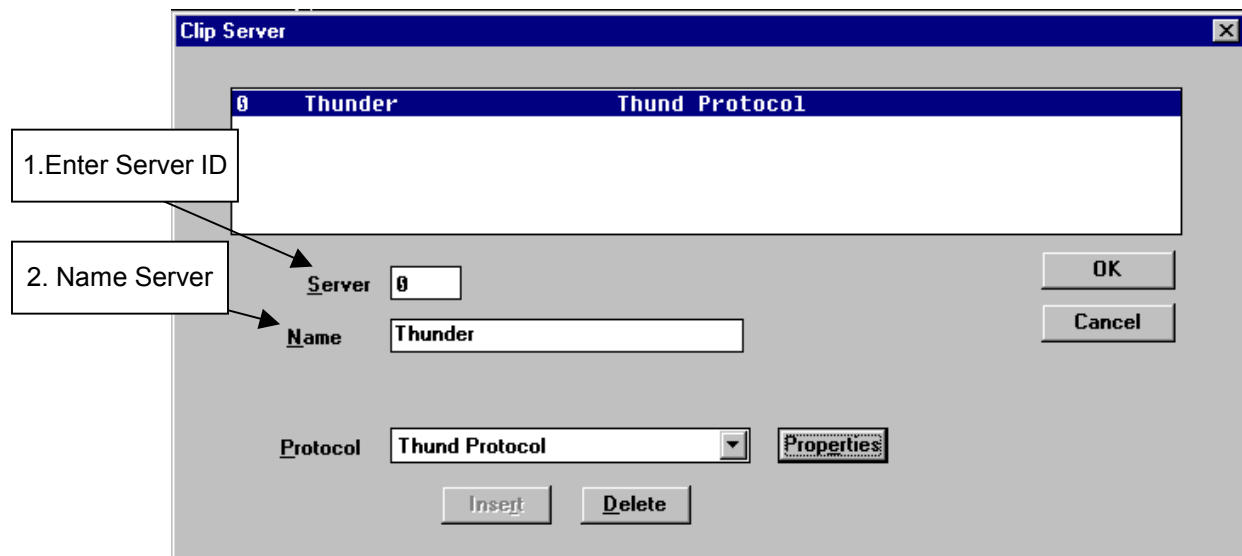

4. Enter a name in the Name box. This name is arbitrary. However, to avoid confusion, we recommend the name “Thunder”. The input box allows you to indicate which FXDeko input is connected to the server if desired.
5. In the Protocol box, choose Thund Protocol. Press the Insert button, the clipserver will appear in the list and the properties button should become active.
6. Press the Properties button. The server ID is the number given in the Configure Clip Servers window in the Server ID box.
7. Select the appropriate Video Type (NTSC or PAL).
8. Make sure the Network Com checkbox is checked.
9. Set the Codec box to show which Thunder channel you want to control.
10. Enter the Thunder system’s network name into the Server box.

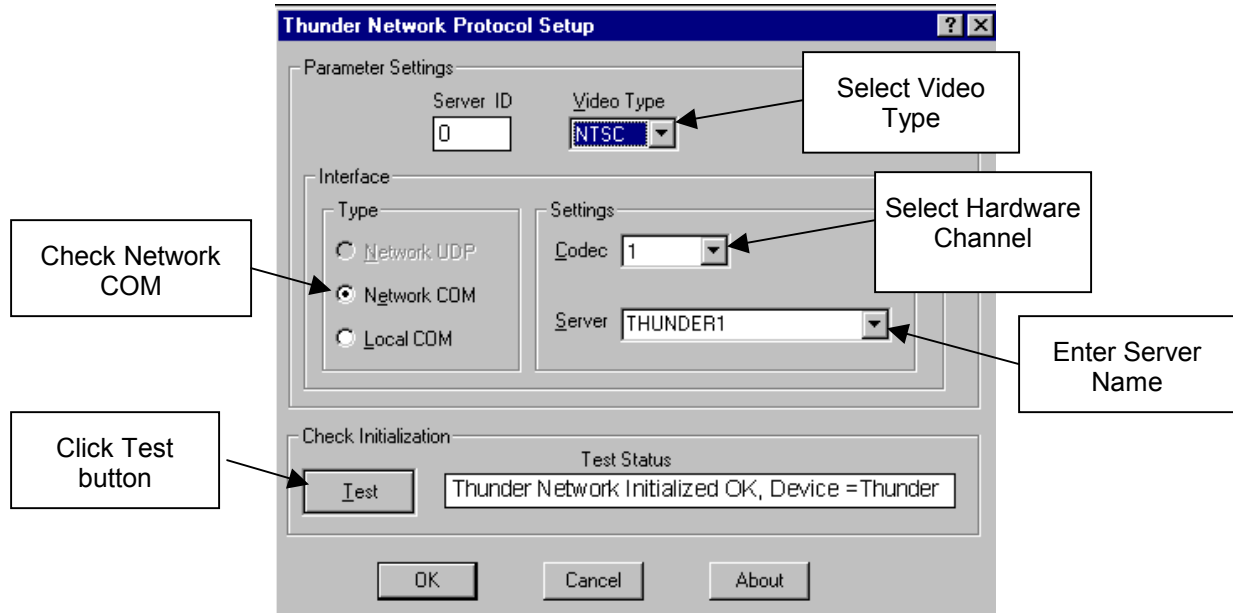


11. Press the Test button.

If all is well, the message “Thunder Network Initialized OK, Device=Thunder” will appear.

If not, refer to the Troubleshooting section below.

Testing the Configuration

1. First, identify an existing clip in the Thunder default database. Select a valid clip (the picon will show a green filmstrip in the upper right corner).
2. Right-click on the picon, and select Properties from the context menu.
3. In the Properties dialog, choose the Clip tab. Take note of the media ID number.
4. In the FXDeko’s Command bar, type the following command:

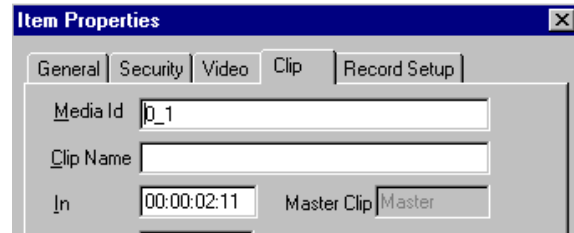

```
clip load <server-id> <media ID>
```

For example, if Thunder’s clip server ID in the FXDeko Clip Server configuration window was 0, and the media Id of the desired clip is 0_1, the command to type into the Command bar is: clip load 0 0_1.

Note: There will be no returned message on the FXDeko. Watch the appropriate mini-monitor in the Thunder application, this command should cue the desired clip and the picon will appear just under the mini monitor.

Macro or command name:

- Following the example set in step 2, type the next command to play the clip: clip play 0. The cued clip should now play out through the channel. There will still be no response apparent on the FXDeko.

Troubleshooting


Pressing the TEST button in the FXDeko Clip Server Configuration Parameters window returned an error.

- Make sure both systems are communicating correctly on the network and are using a common network protocol.
- Sometimes the error may be due to a permissions issue. Use the Windows NT Explorer on the FXDeko, select Network Neighborhood, and pick the Thunder system by its network name.

If there is a permissions issue, Explorer will ask for a Name and password. Enter a valid username and password that Thunder would accept on its own login screen. Once you can successfully browse the Thunder system using Windows NT Explorer, the Test button should now work until the next time FXDeko is rebooted. To correct this issue on a permanent basis, see your network administrator.

The Test button returned an OK, but when the clip load command is entered, nothing happens.

- The Deko will not provide a response when the commands are entered. Check visually to see if Thunder played the clip.
- On the Thunder system open the Thunder Network Protocol application (click on the Protocol button on the Windows Start bar).

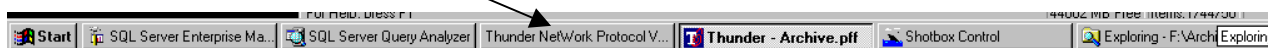

5. Inside this window you will see numerous messages as the two systems communicate. Look for an error message, you should see either “Clip not found” or “Clip did not load.” See below:

Clip not found error message: Check to make sure you are referring to the correct Media ID. See *A word about Media ID numbers* on page A-9. Right-click on the clip you intended to load and select Properties from the context menu. In the Properties dialog box, select the Clip tab. The clip’s correct Media ID number appears here.

Clip did not load error message: Make sure the automation protocol has permission to control the desired channel of Thunder. In the Channel Configuration window (go to File > Preferences > Channel Configuration), the second column is where the protocol appears. The heading of this column is a selection box. Select IO COM1 Context in this box, and make sure the intended channel to control has a checkbox under this column.

```

Thunder NetWork Protocol Ver(2.3.54), BSLAB_THUN, Ch1
05:44:16.34-> Loading(0_36) In(00:00:00:00) Out(00:00:05:07) Auto=1
05:44:16.34-> LoadClip(0_36) Took 43.1257 Frames
05:45:49.03-> Cmd = 2 (14,44) 30 5F 34 31 (28 nulls) 01 (11 nulls)
05:45:49.03-> CueClip(0_41) Called
05:45:51.15-> Loading(0_41) In(00:00:00:00) Out(00:00:30:05) Auto=1
05:45:51.15-> LoadClip(0_41) Took 63.8776 Frames
05:50:12.76-> CreatedNamedPipe(\.\pipe\ThunderPipe1)
05:50:12.76-> Connected to \.\pipe\ThunderPipe1
05:52:01.56-> Cmd = 1 (1,0) 30 5F 34
05:52:01.56-> GetDeviceID(Thunder)
05:52:03.54-> Cmd = 2 (2,44) 30 5F 34 31 (28 nulls) 01 (11 nulls)
05:52:03.54-> CueClip(0_41) Called
05:52:05.67-> Loading(0_41) In(00:00:00:00) Out(00:00:40:05) Auto=1
05:52:05.67-> LoadClip(0_41) Took 63.4857 Frames
05:52:55.96-> Cmd = 2 (3,44) 30 5F 34 31 (28 nulls) 01 (3 nulls) 84 03 (6 nulls)
05:52:55.96-> CueClip(0_41) Called
05:52:58.12-> Loading(0_41) In(00:00:30:00) Out(00:01:10:05) Auto=1
05:52:58.12-> LoadClip(0_41) Took 63.2698 Frames
05:53:41.04-> Cmd = 2 (4,44) 30 5F 34 31 (28 nulls) 01 (3 nulls) 84 03 (2 nulls) 08 07
05:53:41.04-> CueClip(0_41) Called
05:53:43.17-> Loading(0_41) In(00:00:30:00) Out(00:01:00:00) Auto=1
05:53:43.17-> LoadClip(0_41) Took 63.3444 Frames
 Pause  Timing  Detail  LogData  Status

```

How to contact Pinnacle Broadcast Support:

Broadcast Support Americas and Canada

Phone: (650) 930-2990
Fax: (650) 930-1601
Hours: 6am – 6pm (M-F) Pacific Time
Email: broadcast-support@pinnaclesys.com
Web Support: www.pinnaclesys.com/support

Broadcast Support Europe

Phone: (44) (0) 1895 442-003
Fax: (44) (0) 1895 442-275
Hours: 9 am – 5 pm (M-F)
Email: broadcast-support-uk@pinnaclesys.com
Web Support: www.pinnaclesys.com/support

Broadcast Support South Asia

Phone: (65) 284-2336
Fax: (65) 285-9486
Hours: 9 am – 6 pm (M-F)
Email: pacrim-support@pinnaclesys.com
Web Support: www.pinnaclesys.com/asia
Supports Regions: Taiwan, India, Pakistan, Bangladesh, Sri Lanka, Australia, New Zealand

Broadcast Support Beijing

Phone: (86) 10 6641 0053 or (86) 10 6641 0063
Fax: (86) 10 6641 0073
Hours: 9 am – 6 pm (M-F) Beijing Time
Email: broadcast-support@pinnaclesys.com
Web Support: www.pinnaclesys.com/asia
Supports Regions: China, Hong Kong, Korea

Pinnacle Systems Corporate Website: <http://www.pinnaclesys.com>

Pinnacle Systems Mailing Address:

Pinnacle Systems, Inc.
Attn: Broadcast Support
280 N. Bernardo Avenue
Mountain View, CA 94043-5238

Glossary

A to D (Analog to Digital) – A conversion process that changes an analog signal into a digital signal. It is achieved by sampling the signal at intervals and then quantifying each sample to give them values suitable for use in a digital system.

active window – The window with a highlighted (usually blue) title bar. A window must be active for you to perform tasks in it. To open and activate a window, choose the window type from the View menu. To activate a window that is already open, select it from the list at the bottom of the Window menu, or click anywhere on the window.

aliasing – Inaccurate rendering of an image due to a low, digital-sampling rate. Aliasing appears as *jaggies*, or jagged edges on graphics and especially text. Aliasing is corrected by special software and techniques (anti-aliasing) that smooth out the jagged edges by anticipating and displaying the interim pixels. In analog CCD systems, a form of distortion that is associated with the process of signal sampling, resulting in stair-step edges on diagonal lines within the image.

analog – A signal that is a *likeness* of or *analogous* to a physical process and is continuously variable. Analog electronic signals, the basis for conventional video and audio recording and imaging processes, are distinguished from digital signals, which represent discrete numerical samples of information—the basis for computer imaging processes.

Analog/Digital Converter (A/D) – An electronic circuit that changes continuously variable analog signals into discrete numerical digital signals (bits). The common abbreviation is A/D.

Analog-to-Digital Conversion (A/D) – The process of converting an analog signal into a digital bit stream. Includes the steps of sampling and quantizing.

animation – Single images displayed in rapid sequence producing the illusion of motion.

anti-aliasing – Aliasing causes jagged edges in images displayed on a computer screen in low resolution. Anti-aliasing software smoothes the stair-step effect by anticipating and displaying the interim pixels. In analog CCD systems, anti-aliasing is accomplished by the removal of unwanted high-frequency components through the means of a high-frequency-cut optical filter placed before the imager.

artifacts – Unpleasant visual problems within the signal such as noise, chroma displacement, etc.

ASCII – An abbreviation for American Standard Code for Information Interchange. An ASCII file is a text file that is in a standard computer readable format understandable to any PC platform.

aspect ratio – The ratio of height over width of an image. A standard video monitor has an aspect ratio of four units of width (horizontal) to three units of height (vertical). This is expressed as a 4:3 aspect ratio. Images will become distorted if forced into a different aspect ratio during enlargement, reductions, or transfers. The aspect ratio for HDTV is 16:9.

axis – A line that is fixed, along which distances are measured or to which positions are referenced.

background – The backmost part of a graphic. It is a full-screen rectangle located behind the last layer, furthest from the viewer. The background can be turned on and off. When off, it is transparent – live video “shows through” the background when you use a keyer. When the background is on, the background shader determines its color. Like all FXDeko shaders, the background can be a solid color, a ramp or a texture.

bandwidth – In terms of signal frequency, the range between the lowest and the highest frequencies used to transmit a signal from one site to another. Bandwidth is a measure of an analog signal and is measured in cycles per second. Contemporary units are Hertz (one cycle equals one Hertz).

- (1) In video systems, bandwidth is specified as the highest frequency value because all video systems must transmit frequencies down to 30 Hz or lower. The greater the bandwidth, the more information is carried and the higher the potential resolution of images. In television, bandwidth is usually expressed in MHz.
- (2) With digital codec specifications, bandwidth is represented by the number of bits of information that can be transmitted per second or bps. High-bandwidth codecs can have bandwidths between 768 Kbps (thousand bits per second) and 45 Mbps (million bits per second). Low-bandwidth codecs range between 56 Kbps and 384 Kbps.

baud – Commonly used unit of transmission speed to describe the rate at which binary data is communicated. One baud is approximately equal to one bit per second. Common baud rates are 300, 1200, and 2400 bps (bits per second).

Bernoulli Devices – A medium-high-capacity, disk-storage medium used for digital data storage. Bernoulli disks use a *floppy* piece of magnetic material housed in a rigid cassette. The disks have a storage capacity of about 20 MB and a data-access performance equivalent to hard drives.

binary – A numbering system that uses only two values, one and zero. It is used extensively by modern electronic equipment that responds to being in a state of either ON or OFF. The foundation of information processing in all digital systems.

bit – Short for binary digit: the smallest unit of digital information with a value of 0 or 1. A bit is the smallest element of a digital word. (See binary and word).

bitmap – A set of numerical values specifying the colors of the pixels in a graphic image. A representation of images or graphic information made up of individual *bits* of picture information or *pixels* (picture elements). Bitmaps are computer *maps* of these bits that can be re-created pixel for pixel when displayed or printed.

bitmapped graphics – A form of graphics that is made up of individual *bits* of picture information or *pixels* (picture elements). The graphic consists of a computer *map* of these bits that is re-created pixel for pixel when displayed or printed.

black – Video signal set to a pre-determined level (7.5 IRE units) so that no picture information appears and the screen is *black*. Also referred to as *pedestal* or *setup*, the level at which this signal is set determines overall picture contrast and quality.

black level – In an NTSC composite signal, 7.5 IRE units is the lowest point in the signal that luminance components are permitted. Luminance information falling below this point is cut off and lost.

breakup – A momentary image distortion caused by the loss of sync.

broadcast system – A system that allows public access to electronically transmitted information. Typically, the Federal Communications Commission (FCC) regulates a commercial television or radio station.

bus – A row of switches on a production switcher for entering or cutting to program material. There are several *busses* or rows on each switcher. Each bus contains the same input sources but sends selected signals to a different stage of the switcher. The *program/background bus* selects which signal will go out on air; the *preset* or *preview bus* sets what the next source will be when an auto transition is performed; the *key bus* determines what will serve as the key source and/or the key fill.

byte – The number of bits used to represent a character. Typically, in personal computers, 8 bits equals one byte, e.g. 00001111. (See Binary).

CAP shader – (Cel Animation Player) Deko shader used to apply a cel animation to a detail, such as a face or an edge. You can then play the animation within a motion.

CD-ROM (Compact Disc–Read Only Memory) – A 4.75-inch laser encoded optical memory storage medium with the same constant linear velocity (CLV) spiral format as compact audio discs and some videodiscs. CD-ROMs can hold about 650 megabytes of data. CD-ROMs differ from regular prerecorded compact audio discs in the amount of additional error-correction information encoded. CD-ROMs primarily are used for large data and graphic files but can play back standard audio Compact Discs as well.

CD-ROM drive or player – A device that retrieves data from a CD-ROM disc. Differs from a standard compact audio disc player by incorporating additional error correction circuitry. Some models lack the necessary D/A converter to play music from standard compact discs.

cel animation – A series of graphic files. Each file consists of one frame of the animation and may be of any graphic type that Deko can import (.tga, .bmp, .dib, .rle, .pcd, .pcx, .psd, .wmf, .jpg, .g, .dco, .or .tif). Files should be successively numbered, such as globe001.tga, globe002.tga, globe003.tga, etc. You can play a cel animation within a Deko motion by applying the animation to a detail using a CAP (Cel Animation Player) shader.

character set – A set of 256 characters in a TrueType or PostScript font. A font may contain more than 256 characters, but Windows NT can access only 256 at a time. By choosing a character set, you are choosing which 256 characters you wish to use. Not all character sets are supported by every font. See Using an International Character Set.

chroma – See chrominance.

chroma key – Inserting one image over a background of a second image. Allows you to eliminate predetermined objects from one scene and put what is left within a second scene by *cutting a hole* in a background and filling the hole with an image or text. Chroma key uses color rather than luminance to trigger the key.

chrominance – The signals, used in image reproduction systems that represent the color components of the image. A black-and-white image has a chrominance value of zero.

clipboard – The Windows NT temporary holding area for text or other data that has been cut or copied from an FXDeko graphic, macro, style or sequence. When you cut or copy a selection, it replaces any previous contents of the clipboard. When you paste, you are pasting the contents of the clipboard. You can paste multiple times without re-cutting or re-copying. The contents of the clipboard remain the same until you cut or copy something different.

Since most Windows NT applications support the clipboard, it is possible to cut and copy a selection from one Windows NT application—a word processor or a spreadsheet program, for example—and paste it into another Windows NT application.

coaxial cable (COAX) – A one-conductor, one-ground cable which can carry a wide range of frequencies up to 1,000 feet with little or no signal loss. Coax is primary means of equipment interconnection for video devices.

color bars – An electronically generated signal consisting of red, blue, green, yellow, cyan, and magenta, plus gray, black, and white set to standards established by the Society of Motion Picture and Television Engineers. Color Bars are used as a reference at the head end of a videotape recording. The playback machine is set up using color bars to ensure accurate color saturation and balance during playback.

command – An instruction, optionally modified by parameters, to perform a specific function on the Deko.

command bar – Allows direct entry of Deko commands and macros. Press F4 to call up the command bar, type the name of a command or macro, then press Enter or click Play. Use the Prompt button on the command bar to open the Command Prompt dialog box where you can specify command parameters. A Defaults button in the dialog box resets parameters to their default values. Click Close to close the command bar.

component video – A video signal that has not been encoded and retains the original color information as separate elements. Component is technically superior to encoded composite video. It entails the transfer of three-color video signals that describe a color image. The most common component systems are RGB and Y/R-Y/B-Y. Y stands for luminance or brightness, the sum of R, G, and B. By subtracting Y from (R-Y) and from Blue (B-Y), two color difference signals are produced which when transmitted with the Y signal can be used to recreate the original RGB color information.

composite sync – A signal containing all the timing pulses that are needed to lock the electron beam of the picture monitor in step, both horizontally and vertically, with the electron beam of the imaging device.

composite video – The most common type of video signal, in which the color (chrominance) and brightness (luminance) information is combined onto a single signal path. Composite signals are used in television broadcast and most video recording applications. Some image degradation results from combining the signals.

compression – Techniques used to reduce the size of digital signals so that they are easier to process, transmit, and store. Video and audio compression allows the conversion of analog signals to digital and reduces the number of bytes required to store those digital signals. Video, in particular, can be moved to and manipulated more efficiently when compression techniques are employed. There are several methods of compression for both audio and video available but no standard has been set as yet. For more information on both still image and motion image compression standards. (See JPEG and MPEG).

compression – The action taken by a video codec in reducing the data rate required for the transmission of television signals between sites.

contrast – How much brighter the white areas of an image are from the black areas.

contrast ratio – The ratio of the scale between the brightness of the brightest possible area in an image to the darkest possible area.

control point – The point at either end of a Bezier curve or a line segment. In FXDeko, you can move control points to change the curvature or length of a baseline segment.

convergence – Proper alignment of the vertical and horizontal lines to ensure that red, blue, and green signals are correctly registered to produce a proper color image on video displays. Convergence circuits are found on color monitors and projectors.

crosstalk – Interference of one channel of electrical information with another adjacent channel. This could be from one stereo channel to another (e.g., left to right, right to left) or chroma and luma information in a video system.

cue – To ready a source for playback or to locate the starting point of a tape.

current event – The event you are editing or playing back. FXDeko indicates the current event by highlighting its event number.

current style – Style based on current Font and Look settings in the Style window. FXDeko displays the current style in the Current Style window. Any text you type in a graphic appears in the current style. When text is selected, the current style becomes the style of the first character of selected text. When a layer is selected, the current style becomes the style of the layer.

custom typeface – A typeface made in FXDeko for typing graphical (logo) characters. You create a custom typeface by importing graphics and assigning each graphic to a key. Custom Typeface characters can be typed, positioned, scaled, and even given looks like normal TrueType characters.

cut – A visual technique where the picture changes instantaneously from one scene to an entirely different one.

D to A (Digital to Analog) – A conversion process that takes a digital signal and converts it into an analog signal usually by a process of filtering.

D/A – Abbreviation for Digital-to-Analog converter.

D-1 – Component Digital Video: employs the component Y, R-Y, B-Y recording system in a digital recording process.

D-2 – Composite Digital Video: employs the composite (full bandwidth, direct color) recording system in a digital recording process.

DAC (Digital-to-Analog Converter) – Also called a D to A converter. A device that converts digital signals to analog signals that traditional analog circuits, such as VCRs, audio amplifiers, video monitors can handle. In a digital video system, the DAC converts digital video to an analog video signal. In a CD drive, it converts the digital information to analog audio that can be used by amplifiers and speakers.

data rate – The speed of a data-transfer process, normally expressed in bits per second or bytes per second. The data rate of CD-ROM is 150,000 bytes per second, while the data rate for a typical Magnetic Hard Disk is 1.5 MB per second.

definition – Synonymous with sharpness, detail, quality, or resolution of a video signal.

desktop – The Windows NT term for everything appearing on your computer's color monitor such as windows, icons, cursors, buttons, etc.

desktop video – Video post-production using personal computers at the *desktop* rather than a traditional post-production environment. Desktop video may include video storyboarding, editing, and/or special effects generation using personal computer equipment rather than dedicated post-production hardware.

detail – One element of a Deko look. It controls how a font is rendered. There are five kinds of details: face, edge, shadow, underline and frame.

digital – A method of representing information using a sequence of ones and zeros for storage and interpretation by a computer. In digital transmission, analog signals which are originally in a continuous form are converted to discrete signals of zeros or ones to be transmitted to a receive site, interpreted, and used to reconstruct the original analog signal.

digitization – The process of changing an electronic *analog* signal into a discrete binary form. The process is divided into the steps of *sampling* the analog signal at set moments in time, *quantizing* each sample (assigning it a numerical value), and translating the sample into a discrete binary number. The advantages of digitization include reliable high-speed signal transmission, quality duplication, and easy manipulation and processing. A copy of a digital signal is virtually identical to the original. The primary disadvantage of digital signals is their large size resulting in high-storage requirements. Digital compression techniques are helping to overcome this disadvantage.

disc – A generic name for an optically recorded medium as opposed to “disk” which refers to magnetically recorded material.

disk – A magnetic storage device for computers such as a floppy or a hard disk.

display – A CRT (Cathode-Ray Tube): a device used to view electronic images; the process of presenting that image.

dissolve – As one scene is fading out, another scene is simultaneously coming in. At the middle of the dissolve, both scenes are on the screen with the same 50% exposure. In single camera taping techniques, the dissolves are added in postproduction.

double-click – To tap the left mouse button twice in rapid succession without moving the cursor.


downstream key – A term that is applied to the final output of the switcher where a key can be created. The downstream key function is used by broadcasters to key their logo over the final program feed, and by producers who wish to further modify their signal by taking advantage of the downstream keyer.

drag – Holding the left mouse button down and moving the mouse in the desired direction. Operation is used to select elements in a window.

driver (device driver) – A software program that translates commands between the computer operating system and a peripheral device such as a CD-ROM drive, videodisc player, computer printer, or other device.

DVE (Digital Video Effects) – Used to manipulate video images: fly-in, squeeze room, rotate spin. DVE effects have been exclusively in the high-end video production domain until recently when low-cost extension boards have become available to accomplish these effects on the Macintosh and other PCs.

event – One element of a sequence or motion. In a sequence, an event describes the playback of a single graphic file using an effect. In a motion, an event describes the movement on or off air of some element of a graphic.

eyedropper – A button used to pick colors from anywhere on the desktop. It is located in the Shader window, on the color picker. 

fade – The gradual increase or decrease in the video level of the picture. In other words, the picture emerges from black, or recedes into black.

field (1) – A video term signifying one half of one television frame. In NTSC television broadcast, each frame (image) is made up of 525 lines. Two 262.5 horizontal line fields equal one frame. Each field represents either the even or the odd lines of a complete frame. A scanning system that uses even/odd field pairs is defined as interlace scanning. A field equals one-half of a complete television scanning cycle (1/60 of a second NTSC; 1/50 of a second PAL/SECAM). When interlaced, two fields combine to make one video frame with a scanning cycle of 1/30 of a second at a scanning rate of 1/30 of a second in NTSC.

field (2) – Computer term: The basic categories of information stored in the records in a file—for example, a file of bibliographic information might have Author, Title, and Date fields. Field is also used to describe portions of a sector that contain particular information, such as a sync field.

field frequency – The number of fields per second. NTSC field frequency is 60 per second; PAL frequency is 50 per second.

field rate – The number of fields per second.

frame – One complete TV picture consisting of two interlaced scanned fields. The American and Japanese standard for TV, NTSC, scans a new TV frame consisting of 525 raster lines 30 times per second. One TV frame is a 1/30 second synchronized to the U.S. AC power frequency of 60 Hz.

frame buffer – An area of computer memory that produces an output picture, which can be viewed on a monitor. A frame buffer consists of an array of pixels, short for *picture elements*. Each pixel is assigned separate amounts of red, green, blue and transparency, from 0 to 255. The number of rows and columns of pixels determines the resolution of the frame buffer. In NTSC, FXDeko's frame buffer has 720 pixels in each of 486 rows. In PAL, it has 720 pixels in each of 576 rows.

frame grabber – Similar to digitizers, but this term generally refers to those that can capture a frame in 1/30th of a second. A *real-time* frame grabber can digitize and display full-motion video.

freeze frame (1) – The action taken or the device used to pull out a single field or a full frame from a sequence in full motion.

freeze frame (2) – To hold a single frame or picture for a period of time.

gain – A term used for amplification of an electronic signal. Also stands for amplitude or volume. In projection systems, the ability of a screen to amplify incident light. In cameras, the ability to amplify the input signal to obtain pictures in low-light conditions.

genlock – Circuitry that synchronizes the television signal source of two or more devices. All video signals contain synchronization pulses that are used to reconstruct the picture on the CRT. When several signals are used together through a common device such as a switcher, they all must be operating on the same sync. A master sync generator provides *genlock* to signal generating devices (cameras, VTRs, switchers, etc.) so that they can operate in sync.

glyph – The word glyph comes from the Greek *glyphe*, meaning a pictograph or other symbolic character or sign. In FXDeko, glyphs are actual renderings of characters, in a particular style (font and look). FXDeko normally renders characters as you type them. For a style with a large font or complicated look, you can increase the speed of typing by pre-rendering the style.

GPI (General Purpose Interface) – A pulse or contact (switch) closure signal sent from an editor to trigger audio tape recorders, digital video effects devices, and graphics generators to activate for an edit or effect. Some external devices do not have the ability to be directly controlled by the editor. In this case GPI signal is used as a means of telling these devices *when* to execute a command. The *choice* of command itself, however, must be set up on the external device and cannot be controlled by the editor.

graphic – One video page of text and/or background art, created and displayed using FXDeko. A graphic is created in either the Program or Preview window. A graphic can be saved on disk as a graphic file.

Graphic Browser window – Also referred to as the Browser, shows thumbnails of all the graphics in the current directory. Depending on how it is invoked, this window shows graphics that will be read into Preview or Program, put into a sequence, or used as texture shaders.

You can size and position the browser anywhere, to see as many thumbnails as you like. Type the first one or two letters of a graphic's name to jump to the thumbnail of that graphic. Double-click the thumbnail to use the graphic.

graphics (1) – Computer term: Text or pictorial artwork created on the computer with software and stored on a hard disk for use in computer-based presentations, desktop publishing, or video applications.

graphics (2) – Video term: Text and Graphics created primarily by specialized electronic character generators and graphics systems and used in videotape applications. Personal computers equipped with special video output cards are capable of producing graphics for video production.

gray scale – An even range of gray tones between black and white.

GUI (Graphic User Interface) – A computer operating system that relies on menus, icons, and a pointing device (mouse) for user interaction. The foundation for the Macintosh™ personal computer and IBM PCs operating with Microsoft Windows™ 3.0.

High Definition Television (HDTV) – A high-quality television system that has a wider aspect ratio (16:9) and increased number of scanning lines (1080) providing video images of a cinematic quality.

history – A drop-down list of commands that have been executed since the last time FXDeko was rebooted.

horizontal resolution – In a television scanning system, the specification of resolution in the horizontal direction, meaning the ability of the system to reproduce closely spaced alternating black-and-white *vertical* lines of detail across the screen. The number of alternating black-and-white lines is divided by the aspect ratio (usually 4:3) to make comparison between horizontal and vertical resolution easier. This number is usually expressed as TV lines per picture height.

hue – The shade of a color. (See Wavelength).

interface – An electronic device that allows dissimilar components in a system to communicate. The connection between two devices, such as a computer and a peripheral, for example.

interlace – The pattern of two separate field scans when they join to form a complete video frame. As the video picture is transmitted, the first field picks up even-numbered scan lines, the second picks up odd-numbered ones. The two lace together to form a single, complete frame. (See Field and Frame).

JPEG (Joint Photographic Experts Group) – An industry group brought together to establish a standard for digital image compression. Also used to denote the *draft* standard algorithm the group has developed for digital image compression. An approved standard has yet to be developed. The JPEG draft standard is being used by various software developers and is the basis for Apple's software compression scheme, QuickTime™.

Kerning – The spacing between the characters within a word. The higher the kerning amount, the more space between characters. A negative kerning amount tightens the spacing between characters.

key – A combination of two images where one image covers a portion, or cuts a hole in the picture, of the other as in a title. A key signal has three components: a *key source*, a *key fill*, and a *background* image. The key source cuts a hole in the background video, and the fill signal fills in that hole. Titles are usually keyed in.

key signal – A black-and-white video signal that, when used with a keyer, tells the keyer how to combine two video signals. FXDeko outputs both a full-color video output and a black-and-white key signal. Let's say you're keying FXDeko graphics over live video from a camera. You feed the video and key outputs from FXDeko to a keyer (which could be FXDeko's own internal keyer), and also the camera output. Where the key signal is white, the keyer inserts FXDeko's output (the fill signal). Where the key signal is black, the keyer inserts the camera output (the key signal). Where the key signal is gray—somewhere between black and white—the keyer mixes the FXDeko and camera outputs.

keyhole shader – A shader that cuts through all elements behind a detail to show keyed video on the detail.

Kilobyte (KB) – One thousand bytes or characters of digital information, consisting of from six to eight bits. In reality, one kilobyte equals 1024 bytes of information.

layer – A layer is one element of a FXDeko graphic. A layer is either a text layer, a rectangle layer or an ellipse layer. A graphic can have any number of layers. Layers are rendered from front to back.

layer browser – Shows a thumbnail image of each layer in the current graphic, and displays the layer's name and order. Type the first one or two letters of the layer name to jump to that layer's thumbnail. You can click a thumbnail to select a layer, or reorder layers by dragging and dropping them within the browser.

layout – The arrangement of windows and toolbars on the desktop. FXDeko provides several pre-configured layouts for composing, editing and playing back graphics and macros.

leading – The spacing between rows of text. The higher the leading amount, the more space there is between rows. *Leading* rhymes with *wedding*.

linear – A motion video or film sequence designed to be played from beginning to end without stops or branching. Linear usually refers to traditional video or films that are meant to be watched by the viewer passively from beginning to end without *interaction*.

linear key signal – A key signal that varies from black to white, including intermediate gray shades. This is in contrast (no pun intended) to a hard key signal, which has areas of either black or white but no gray. A linear key signal is required for keyed graphics to look properly anti-aliased over background video. Your switcher must be capable of handling linear key.

linear video – Any video program which plays from start to finish with no variation in sequence or pace of information presented.

live – Television that is transmitted as the event occurs.

look – Deko parameters that control everything about the way a text character *looks*—colors, edges, shadows, etc. A look is made up of a list of *details*.

looping – A video device (switcher, monitor, etc.) that allows video inputs to pass through outputs to other devices without terminating. By *looping* the signal through a device, one signal can drive several devices.

luminance – Amplitude (brightness) of the gray scale portion of the television signal. The Y signal. The range of brightness from black through gray to white in a video picture.

macro – A series of FXDeko commands that can be saved in a macro file and played back on demand. You can use the macro recorder to record a macro, or you can edit a macro as a text file.

macro recorder – Used to play macros and to record actions to create macros.

mapping – The ability to take a two-dimensional graphics file of texture: wood grain, chrome, etc. and project it on an object, thus, wrapping the object with the chosen texture.

maximize button – Appears on the right side of a windows title bar. Clicking this button enlarges the window to its maximum size.

media – Materials or technical means of communication, using films, art, video, voice, music, computer programming, etc.


Megabyte (MB) – A unit of measurement equal to 1024 kilobytes (KB) or 1,048,576 bytes. Data files: especially sound, graphics, and digital video files are measured in MB.

menu bar – Appears near the top of FXDeko's application window, under the title bar. Clicking on any entry brings up a pull-down menu of commands. Click on a command to perform it. Commands followed by an ellipsis (...) bring up an additional window for more information to be entered.

File Edit View Text Layer Transform Channel Macro Window Help

MHz – Abbreviation for megahertz, or millions of cycles per second. The bandwidth of the video signal is 4.2 MHz. A normal U.S. television transmission channel is 6 MHz.

minimize button – Appears on the right side of a title bar. Clicking this button reduces the window to its smallest size, usually an icon at the bottom of the screen. For example, clicking the minimize button in FXDeko's title bar reduces FXDeko to its application icon. To restore FXDeko, double-click the icon.

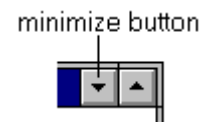


mixing – Combining two or more audio or video sources.

modem – A device used to accept digital signals and add them onto, or modulate them on, analog signals for transmission between sites. Modem is an abbreviation for MODulator/DEModulator. A modem acts not only to convert digital signals to be transmitted in analog form, but likewise to demodulate the signals.

monitor – In video, a television with composite video inputs. A computer monitor usually accepts RGB rather than composite input. To watch or listen to, or the device through which monitoring takes place.

monochrome – Black and white.

motion – Describes the movement on or off air of elements, or sprites, of a graphic. Each line in a motion script specifies one or more sprites. A motion script can be saved in a motion (.mot) file, which you can then specify as an effect in a sequence.

mouse pointer – The mouse pointer is used for pointing to objects on the desktop and clicking or dragging them. 

MPEG (Motion Picture Experts Group) – The standards committee meeting to set standards for the compression of motion video images. Like JPEG, it is both a group and an algorithm. The algorithm, for compressing moving images, is being developed and is not yet available for use.

navigate – A term used to use a mouse or keyboard to control the elements of a Graphic Interface. To navigate around a dialog box, use Tab and Shift + Tab to move between fields, or click on the desired field. The up and down arrow keys scroll through the items in a list. Double-click a directory to select it. Double-click a file name to open the file.

network – An interconnected and coordinated system of geographically dispersed communication devices (terminals) so that signal transmission to or among any of the devices is practical and reliable.

noise – A change in the characteristics of an electronic signal (amplitude, frequency, or phase) that is not directly related to the information being communicated. All electronic circuits are subject to noise.

non-composite video signal – A video signal containing picture and blanking information, but no sync signals. Non-composite video signals are used as input and output signals for some video equipment.

NTSC (National Television System Committee) – The group that established the color TV transmission system in the United States. Used to refer to the North American broadcast scanning standard for television of 525 lines per frame at a rate of 30 frames per second. Established by the American National Technical System Committee, NTSC is used as a general term to describe the color and standards of American broadcasting. Other color standards such as PAL and SECAM are used by different countries and are not compatible with NTSC.

Object-oriented graphics – A picture or other graphic where each object, rather than being made up of separate dots (as in a bit-mapped graphic), is treated as a unit.

OEM (Original Equipment Manufacturer) – A manufacturer that sells equipment slightly redesigned to several vendors. Each vendor then puts its name on that equipment and sells it as its private brand.

PAL (Phase Alternating Line) – A video standard used in Western Europe, Latin America, Great Britain, South Africa, and Australia; PAL uses 625 scan lines with a 25-frame/50-field per second rate. PAL is not compatible with NTSC.

patch bay – A junction panel of connector jacks (patch points) that serve as a convenient location for making all system connections. It consists of two rows of connector jacks, which are wired, with various signals from the rear of external equipment.

pedestal – See black.

phase – The timing of an electronic signal. Two signals that occur simultaneously are *in phase*, if they occur at different times, they are *out of phase*.

Phase Alternating Line (PAL) – The broadcast television standard in Europe as well as other locations, calling for 625 lines per frame transmitted at 25 frames per second. North American standards call for 525 lines per frame transmitted at 30 frames per second.

picons – Picture Icons: On screen visual objects that represent media elements.

PICT – A standard format for encoding computer graphics and images (term is an abbreviation of picture).

PICT 2 or PICT II – An update of the PICT adding color support and formatting instructions carried as comments in the image file.

pin location – A character's *pin location* determines how it will be placed relative to the baseline of the current row. The Y value indicates the baseline of the character, and the X value indicates the left edge of the character.

pixel (picture element) – (1) The smallest unit of picture information on imagers, scanners, printers, displays, images, or graphic files. (2) The basic picture element of a computer screen or graphics-sensing array, such as a CCD, the smallest dot a computer can create. (3) The individual picture elements on a picture tube or display device.

preset shader – A shader that has been stored in one of the 18-shader presets at the bottom of the Shader window. All 18 preset shaders may be saved in a shader presets file.



preset style – A style that has been saved in one of the eight preset style buttons in the Preset Style window. Each button displays sample text in the preset style. To change what sample text is displayed, click Sample in the Typeface Browser and type in new sample text. By default, sample text on the buttons shows fonts in their actual sizes. You can have the buttons display all fonts in standard sizes by choosing Preferences from the Options menu, clicking the Advanced tab, and unchecking the Show actual font size in Presets box.

Preview window – The window that shows a graphic that is not yet *on-air*. When playing back a sequence, this window shows the next graphic in the sequence.

Program window – The window that shows the current on-air graphic. The contents of this window match FXDeko's video output, with the addition of a cursor, safe-title lines and other markers.

quantizing – The numerical value assigned to a digital sample. In digital imaging, the level of quantizing determines how realistically digital images will be reproduced. The more *quantizing* levels for each sample, the truer the digital representation will be to the original analog source.

RAM – Abbreviation for random-access memory, a memory providing access time that is independent of location.

random access – Also referred to as instant access, a term used to define the capability of a videodisc to access specific frames regardless of location on the disc.

raster – The pattern of the moving electron scanning beam in a CRT, usually moving left to right and repeating over the image from top to bottom as a series of horizontal *scan* lines. In an NTSC system, the raster scan of one TV frame consists of 525 individual scanned lines made up of two interlaced fields of 262.5 lines each. The scanning pattern creates a new frame every 30th of a second.

real estate – The space available on a videodisc or tape.

real time – The actual time in which a program or event takes place.

reference black level (pedestal) – Part of the video signal that provides a reference level for total picture brightness.

render – To draw an image as it actually appears in schematic or blueprint form.

resolution – FXDeko specifies resolution in screen units, which are user-definable in Options/Preferences/Advanced/Resolution. The default value for screen units is 486 in NTSC and 576 in PAL.

resolution – The maximum definition a particular system is capable of reproducing. Resolution is measured in the number of discrete observable lines that can be reproduced on a system. The higher the resolution a system is capable of producing, the sharper the picture will appear. In TV, resolution is measured in vertical and horizontal lines or the total number of observable black to white line transitions observable in the picture. Horizontal resolution is limited by the bandwidth of the television circuit, while vertical resolution is limited by the total number of TV scan lines. A high-resolution video camera or monitor can display 700 horizontal lines of resolution and 486 vertical lines or 700 x 486 resolution.

Amount of detail in the video image is measured along both the horizontal and vertical axes. In digital systems, resolution is the number of pixels on a display surface. Computer CRT resolutions are usually given as the number of pixels per scan line and the number of scan lines, e.g. 640 x 480. Video resolution is measured in terms of lines of detail per horizontal scan line (horizontal resolution) and total number of scan lines (vertical resolution).

The clarity or graininess of a video or computer image as measured by lines or pixels; the smallest resolvable detail in the image. The perceivable detail, or the ability of an image reproducing system to reproduce fine detail.

restore button – Appears on the right side of a windows title bar. Clicking this button restores the window to its size before it was minimized or maximized.



RGB (Red, Green, Blue) – The primary colors of light, which are mixed to produce a video image. In video, RGB refers to a system in which the three primary colors are kept isolated and delivered from the source to the display device over separate wires. This system results in high-quality pictures. The RGB system is used by some broadcast video equipment and computers.

RGB encoder – Device for converting composite video to RGB video.

right-click – Operation that involves pressing the right-mouse button. The right-click operation reveals hidden menus or dialogs in an NT interface.

ROM (Read-Only Memory) – The information on a CD-ROM disc cannot be altered or new information added by the user.

routing – Directing a signal through various audio and/or video components.

routing switchers – Hard-wired, automated patch bays that allow system connections to be made simply by pushing a button.

safe title area – The area of the screen considered safe for graphics. Anything outside this area may be clipped by an over scanning monitor. The safe title area is only a reference; it does not prevent typing outside its boundaries. You can specify the top, bottom, right and left boundaries of the safe title area. Values represent a percentage of the distance from the specified edge of the screen to the opposite edge. With Deko, the default text layer is set to the dimensions of the safe title area.

safe-area – The central display on a video screen. A loss of 10-15% of the edges of the image is to be expected because of over scanning on video monitors. Designers should plan to stay in the “safe-area” when creating graphics for video. Also known as Safe-Title Area.

sampling – The act of frequently “looking” at a signal during the analog to digital conversion process to evaluate how the signal has changed. The process of dividing something continuous into discrete sections. The resulting samples of the signal are used to form the digital representation of the signal.

saturation – The intensity of a particular hue.

scaling – Changing the size of something.

scan converter – A digital signal processor that converts the high scan rate output of the computer display card to a high-quality broadcast video signal rate. Scan converters differ from encoding boards and boxes in that they usually can take a variety of scan rates from many computer systems, and they are usually in the higher price range: US\$8000 to US\$12,000.

scan line – A complete horizontal row of pixels on the display surface of a CRT.

screen units – The units FXDeko uses for the height of a typeface and for the location of text and shapes in a graphic. Screen units are user-definable, in Options > Preferences > Advanced > Resolution. Once you set the number of vertical units, the number of horizontal units is automatically set to 4:3 of that amount. For convenience, the default value for screen units is 486 in NTSC and 576 in PAL, which equals the number of visible scan lines in each video standard.

SCSI (Small Computer Systems Interface) – An intelligent controller standard used to connect peripherals like CD-ROM drives and printers to microcomputers.

sequence – A list of events that controls the playback of a series of FXDeko graphic files.

serial communications – Multi-pin digital communication lines allowing several communications to occur sequentially along each conductor enabling the connected devices to talk and to receive at the same time.


set width – A character’s set width determines how much horizontal space the character occupies when typed. A character’s set width plus its pin location equals the pin location of the character to its right.

setup – See black.

shader – Controls the color—solid, texture, ramp, or keyhole—of a detail or a background.

sprite graphics – A small graphic picture that can be moved around the screen independently to produce animation.

status bar – The line of information, at the bottom of the screen, which shows FXDeko’s current status.

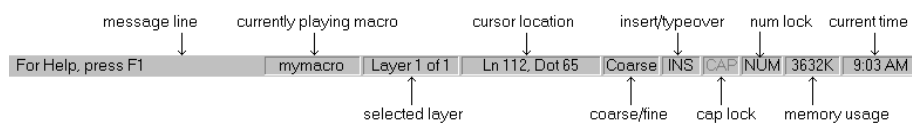

string – A set of characters, such as a word or sentence. A string that includes spaces or non-alphanumeric characters must be defined within quotation marks, such as “Hello there”.


style – A style consists of a *font* and a *look*. A font is a typeface of specified size, shape and orientation. A look controls how FXDeko renders a font character. Each look is comprised of a list of details. Each detail is a face, edge, frame, shadow, or underline, and has its own set of attributes that dictate its color, size, shape, etc.

superimpose – To overlap the image from one source over the image from another source. Also: Super.

Sync (Synchronize) – The drive pulses—both vertical and horizontal—that maintain the vertical and horizontal scanning process of the video picture signal in all video equipment through processing and recording to display.

sync generator – A pulse generator that produces video sync signals. A *master* sync generator would be used to provide sync signals (genlock) to integrate the functioning of several pieces of video equipment in relation to each other and the video signal.

text bar – The toolbar at the top of the FXDeko desktop, under the menu bar, which controls many common text functions.

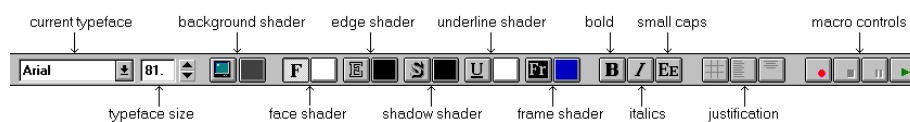


text box – Text boxes are Windows NT controls in which you type or otherwise enter information.

This is text in a text box |

text cursor – Shows where in a text field the next typed character will be inserted. The text cursor is shaped like an I-beam or a rectangle, depending how you have your cursor preference set.



I - beam cursor

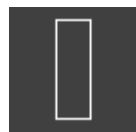

Box cursor

text field – One layer of text in a FXDeko graphic. A text field is defined by its text field box, which controls word wrapping and justification. A text field has a default style (font and look). Characters in a text field may extend beyond the text field box. The box is used for alignment, not clipping.

texture shader – Used to apply a pattern to a detail. The pattern is actually a bitmap that is cut from another graphic file and pasted onto the detail.

time code – A code using time as its measuring and location system. Recently standardized by the SMPTE, time code utilizes hours, minutes, seconds, and frames. It is a binary electronic signal if recorded on the tape and is analogous to the edge numbers in film.

title bar – The bar at the top of any Windows NT application window, including FXDeko's. This bar is highlighted whenever an application is active.

tool tips – Those little yellow pop-up windows that appear if you hold the selection cursor over a toolbar button for a brief moment. They explain what each button does. You can turn tool tips on and off from the Help menu.

turnkey – Generally used to refer to a fully integrated system installed and ready for use; implies all phases of creating such systems, as well as all necessary communication links to use them.

UNIX™ – An operating system developed by AT&T and used by the LMST™ applications controller. Widely acclaimed in the computer industry, UNIX is recognized for its powerful multi-user and multi-tasking capabilities.

VCR – Video Cassette Recorder.

vertical resolution – For television signals, the specification of resolution in the vertical direction. The ability to reproduce closely spaced horizontal lines. The maximum number of alternating white-and-black horizontal lines that can be counted from the top of the picture to the bottom, or the amount of detail that can be perceived in the vertical direction. Vertical resolution is only roughly equivalent to the number of horizontal scanning lines in a picture.

video signal – A waveform carrying video information.

voice-over – A spoken message delivered off-camera. This is the opposite of Lip Sync recording, which is done live as the actors are being photographed. An off-screen narration would be considered a voice-over.

VTR – Video Tape Recorder.

wipe – An optical effect where the picture appears to have been “wiped” from the screen, i.e., left to right, or top to bottom.

workstation – A high-end computer system having many of the characteristics of a personal computer; intended for use by engineers or imaging professionals.

WYSIWYG – An acronym for, *What you see is what you get*. Refers to computer systems that give you an on-screen image of the final printed or recorded product, rather than substituting symbols or codes.

Y signal – The luminance or brightness aspect of a video signal.

Y, R-Y, B-Y – The three components of a component video signal including the Y (luminance) signal and the R-Y, B-Y color difference signals (chrominance). The component output of the D-1, Betacam®, and MII formats.