

# FUJIFILM

DIGITAL CAMERA

# A100

DIGITAL CAMERA

# A150


## Owner's Manual

---

Thank you for your purchase of this product. This manual describes how to use your FUJIFILM A100/A150 digital camera and the supplied software. Be sure that you have read and understood its contents before using the camera.

**A100 – 2.7 inch monitor model**

**A150 – 3.0 inch monitor model**

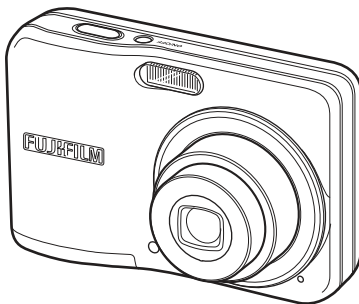

For information on related products, visit our website at <http://www.fujifilm.com/products/index.html>

Exif Print



BL00833-201 **EN**

**Before You Begin**

---

**First Steps**

---

**Basic Photography and Playback**

---

More on Photography

---

More on Playback

---

Movies

---

Connections

---

Menus

---

Technical Notes

---

Troubleshooting

---

Appendix

---

# About This Manual

Before using the camera, read this manual and the warnings on another sheet. For information on specific topics, consult the sources below.

## ✓ **Camera Q & A** ..... pg. iii

Know what you want to do but don't know the name for it? Find the answer in "Camera Q & A."

## ✓ **Troubleshooting** .....pg. 75

Having a specific problem with the camera? Find the answer here.

## ✓ **Glossary** .....pg. 84

The meanings of some technical terms may be found here.

## ✓ **Table of Contents** .....pg. v

The "Table of Contents" gives an overview of the entire manual. The principal camera operations are listed here.

## ✓ **Warning Messages and Displays** .....pg. 80

Find out what's behind that flashing icon or error message in the monitor.

## **Memory Cards**

Pictures can be stored in the camera's internal memory or on optional SD and SDHC memory cards. In this manual, SD memory cards are referred to as "memory cards." For more information, see page 5.

# Camera Q & A

Find items by task.

## Camera Setup

Question	Key phrase	See page
How do I set the camera clock?	Date and time	9
Can I set the clock to local time when I travel?	Time difference	70
How do I keep the monitor from turning off automatically?	Auto power off	69
How do I make the monitor brighter or darker?	LCD brightness	68
How do I stop the camera beeping?	Operation volume	65
What are the parts of the camera called?	Parts of the camera	2
What do the icons in the monitor mean?	Monitor	3
How do I use the menus?	Menus	50
What's behind that flashing icon or error message in the monitor?	Messages and displays	80
How much charge is left in the battery?	Battery level	10
Can I increase the capacity of rechargeable Ni-MH batteries?	Discharge	72

## Sharing Pictures

Question	Key phrase	See page
Can I print pictures on my home printer?	Printing pictures	38
Can I copy my pictures to my computer?	Viewing pictures on a computer	43

## Taking Pictures

Question	Key phrase	See page
How many pictures can I take?	Memory capacity	85
Is there a quick and easy way to take snapshots?	<b>AUTO</b> mode	10
How can I make good portraits?	Intelligent Face Detection	15
Is there a simple way to adjust settings for different scenes?	Shooting mode	25
How do I shoot close-ups?	Macro mode (close-ups)	20
How do I keep the flash from firing?	Flash mode	21
How do I stop my subjects' eyes glowing red when I use the flash?		
How do I "fill-in" shadows on back-lit subjects?		
How do I take a group portrait that includes the photographer?	Self-timer mode	23
How do I frame pictures with the subject off to one side?	Focus lock	18
How do I shoot movies?	Recording movies	34

## Viewing Pictures

Question	Key phrase	See page
How do I view my pictures?	Viewing pictures	14
How do I get rid of unwanted pictures?	Deleting pictures	14
How do I delete a lot of pictures at once?	Erase	32
Can I zoom in on pictures during playback?	Playback zoom	29
How do I view a lot of pictures at once?	Multi-frame playback	30
How do I view all pictures taken on the same day?	Sort by date	31
Can I protect my pictures from accidental deletion?	Protect	59
Can I hide the icons in the monitor when viewing my pictures?	Choosing a display format	28
How do I view my pictures on TV?	Viewing pictures on TV	37

# Table of Contents

About This Manual.....	ii
Camera Q & A.....	iii

## Before You Begin

Introduction.....	1
Symbols and Conventions.....	1
Supplied Accessories.....	1
Parts of the Camera.....	2
The Monitor.....	3





## First Steps

Inserting the Batteries.....	4
Inserting a Memory Card.....	5
Turning the Camera on and Off.....	8
Basic Setup.....	9

## Basic Photography and Playback

Taking Pictures in AUTO Mode.....	10
Viewing Pictures.....	14

## More on Photography

Intelligent Face Detection and Red-Eye Removal.....	15
Focus Lock.....	18
 Macro Mode (Close-ups).....	20
 Using the Flash.....	21
 Using the Self-Timer.....	23
 Shooting Mode.....	25
Selecting a Shooting Mode.....	25
Shooting Modes.....	26

## More on Playback

Playback Options.....	28
Playback Zoom.....	29
Multi-Frame Playback.....	30
Sort by Date.....	31
 Deleting Pictures.....	32






## Movies


















 Recording Movies.....	34
 Viewing Movies.....	36

## Connections

Viewing Pictures on TV.....	37
Printing Pictures via USB.....	38
Connecting the Camera.....	38
Printing Selected Pictures.....	38
Printing the DPOF Print Order.....	39
Creating a DPOF Print Order.....	41
Viewing Pictures on a Computer.....	43
Installing FinePixViewer.....	43
Connecting the Camera.....	48

## Menus

The Shooting Menu.....	50
Using the Shooting Menu.....	50
Shooting Menu Options.....	51
 ISO.....	51
 QUALITY.....	52
 EXP. COMPENSATION.....	53
 WHITE BALANCE.....	54
 CONTINUOUS (Continuous shooting).....	54

<b>The Playback Menu</b> .....	55	<b>Technical Notes</b> .....	
Using the Playback Menu .....	55	<b>Optional Accessories</b> .....	73
Playback Menu Options.....	56	<b>Caring for the Camera</b> .....	74
 RED EYE REMOVAL.....	57	<b>Troubleshooting</b> .....	
 SLIDE SHOW .....	58	<b>Troubleshooting</b> .....	75
 PROTECT .....	59	<b>Warning Messages and Displays</b> .....	80
 COPY.....	60	<b>Appendix</b> .....	
 IMAGE ROTATE.....	62	<b>Glossary</b> .....	84
 TRIMMING.....	63	<b>Internal Memory/Memory Card Capacity</b> .....	85
<b>The Setup Menu</b> .....	64	<b>Specifications</b> .....	86
Using the Setup Menu .....	64		
Setup Menu Options.....	65		
 IMAGE DISP. ....	66		
 FRAME NO. ....	67		
 DIGITAL ZOOM .....	68		
 LCD POWER SAVE .....	68		
 PLAYBACK VOLUME.....	68		
 LCD BRIGHTNESS.....	68		
 FORMAT.....	69		
 AUTO POWER OFF .....	69		
 TIME DIFFERENCE.....	70		
 BATTERY TYPE .....	71		
 DISCHARGE (Ni-MH Batteries Only) .....	72		

# Introduction

## ***Symbols and Conventions***

The following symbols are used in this manual:

 **Caution:** This information should be read before use to ensure correct operation.

 
 **Note:** Points to note when using the camera.

 **Tip:** Additional information that may be helpful when using the camera.


Menus and other text in the camera monitor are shown in bold. In the illustrations in this manual, the monitor display may be simplified for explanatory purposes.

## ***Supplied Accessories***

The following items are included with the camera:




AA alkaline (LR6) batteries (x2)

 

USB cable




 
FinePix software CD  
**(IMPORTANT: read license agreement on the last page of this manual before opening)**



Strap

### **Attaching the Strap**


Attach the strap as shown. **1**

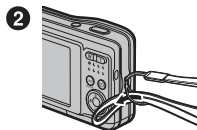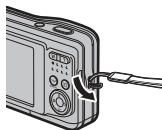

Owner's Manual  
(may be distributed on CD in some countries or regions)

## Parts of the Camera

For more information, refer to the page listed to the right of each item.

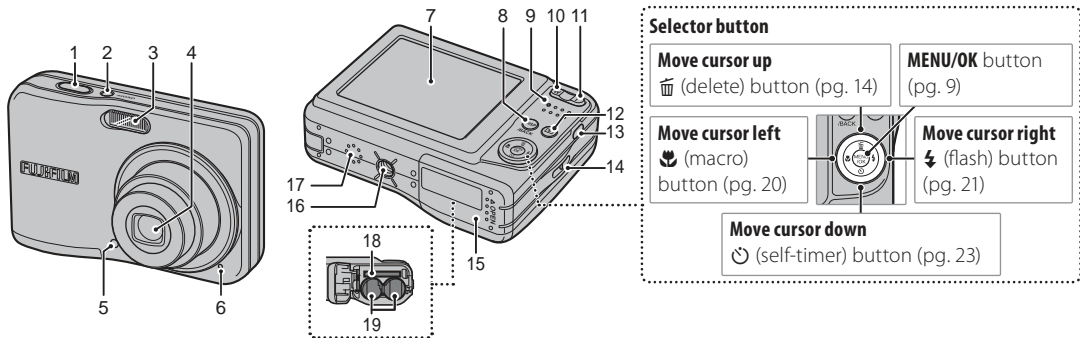


1	Shutter button.....	13	7	Monitor.....	3	14	Strap eyelet.....	1
2	<b>ON/OFF</b> button.....	8	8	<b>DISP</b> (display)/ <b>BACK</b> button.....	12, 28	15	Battery-chamber cover.....	4
3	Flash.....	21	9	Indicator lamp.....	13	16	Tripod mount.....	
4	Lens and lens cover.....	8	10	<b>W</b> (zoom out) button.....	11, 29	17	Speaker.....	36
5	Self-timer lamp.....	23	11	<b>T</b> (zoom in) button.....	11, 29	18	Memory card slot.....	6
6	Microphone.....	34	12	<b>▶</b> (playback) button.....	28	19	Battery chamber.....	4
			13	Connector for USB cable.....	48			

## The Monitor

The following indicators may appear in the monitor during shooting and playback:


### Shooting

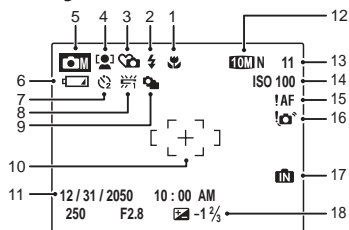

1	Macro mode (close-ups) .....	20	10	Focus frame .....	12
2	Flash mode.....	21	11	Date and time.....	9
3	Silent mode .....	22	12	Quality.....	34, 52
4	Intelligent Face Detection indicator.....	15	13	Number of available frames...	85
5	Shooting mode.....	25	14	Sensitivity.....	51
6	Battery level.....	10	15	Focus warning .....	12
7	Self-timer indicator .....	23	16	Blur warning.....	21
8	White balance .....	54	17	Internal memory indicator*.....	5
9	Continuous shooting mode...	54	18	Exposure compensation .....	53

\* Indicates that no memory card is inserted and that pictures will be stored in the camera's internal memory (pg. 5).

### Playback

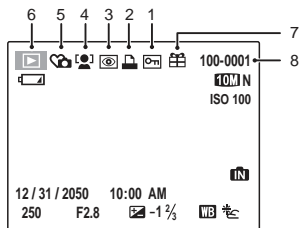

1	Protected image.....	59	5	Silent mode .....	22
2	DPOF print indicator .....	41	6	Playback mode indicator .....	28
3	Red-eye removal indicator .....	57	7	Gift image .....	28
4	Intelligent Face Detection indicator.....	15	8	Frame number.....	67

### Caution

The indicators shown here may be different from those displayed in the actual monitor.


## Inserting the Batteries

The camera takes two AA alkaline (LR6) batteries (supplied), two lithium batteries (sold separately) or two AA rechargeable Ni-MH batteries (sold separately). Insert the batteries in the camera as described below.

### 1 Open the battery-chamber cover.

#### ← Note

Be sure the camera is off before opening the battery-chamber cover.

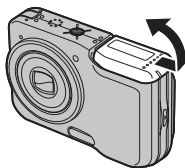


#### ⚠ Cautions


- Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could result in damage to image files or memory cards.
- Do not use excessive force when handling the battery-chamber cover.

### 2 Insert the batteries.

Insert the batteries in the orientation shown by the "+" and "-" marks inside the battery chamber.

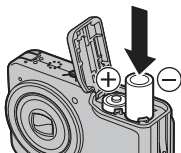


### 3 Close the battery-chamber cover.

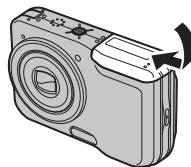

#### ⚠ Cautions


- Insert the batteries in the correct orientation.
- **Never use batteries with peeling or damaged casing or mix old and new batteries, batteries with different charge levels, or batteries of different types.**

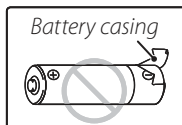

- Failure to observe these precautions could result in the batteries leaking or overheating.
- **Never use manganese or Ni-Cd.** Replace AA alkaline batteries with batteries of the same make and grade as those supplied with the camera.
  - **If the battery-chamber cover can not be latched easily, confirm the battery orientation first. Do not use excessive force to latch it.**

## Inserting a Memory Card

Although the camera can store pictures in internal memory, SD memory cards (sold separately) can be used to store additional pictures.

**When no memory card is inserted**,  appears in the monitor and internal memory is used for recording and playback. Note that because camera malfunction could cause internal memory to become corrupted, the pictures in internal memory should periodically be transferred to a computer and saved on the computer hard disk or on removable media such as CDs or DVDs. The pictures in internal memory can also be copied to a memory card (see page 60). To prevent internal memory from becoming full, be sure to delete pictures when they are no longer needed.

 
**When a memory card is inserted** as described below, the card will be used for recording and playback.

### ■ **Compatible Memory Cards**

SanDisk SD and SDHC memory cards have been tested and approved for use in the camera. A complete list of approved memory cards is available at [http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html). Operation is not guaranteed with other cards. The camera can not be used with MultiMediaCard (MMC) or *xD-Picture* cards.

### **Caution**


Memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting a memory card, slide the write-protect switch to the unlocked position.



Write-protect  
switch



## ■ Inserting a Memory Card

1 Open the battery-chamber cover.

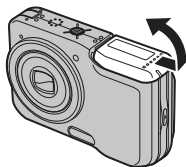


2 Insert the memory card.

Holding the memory card in the orientation shown below, slide it all the way in.

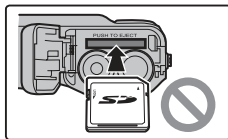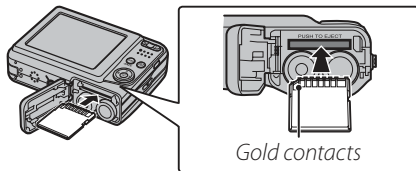

Be sure card is in correct orientation; do not insert at an angle or use force.

3 Close the battery-chamber cover.

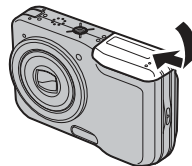

## ● Removing Memory Cards

After turning the camera off, press the card in and then release it slowly. The card can now be removed by hand.

 


## ⚠ Cautions

- The memory card may spring out if you remove your finger immediately after pushing the card in.
- Memory cards may be warm to the touch after being removed from the camera. This is normal and does not indicate a malfunction.

**⚠ Cautions**


- Format memory cards before first use or after using them in a computer or other device. For more information on formatting memory cards, see page 69.
- Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.
- Do not use miniSD or microSD adapters that expose the back of the card. Failure to observe this precaution may cause damage or malfunction. Adapters that are larger or smaller than the standard dimensions of an SD card may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card.
- Do not turn the camera off or remove the memory card while the memory card is being formatted or data are being recorded to or deleted from the card. Failure to observe this precaution could damage the card.
- Do not affix labels to memory cards. Peeling labels can cause camera malfunction.
- Movie recording may be interrupted with some types of memory card.
- The data in internal memory may be erased or corrupted when the camera is repaired. Please note that the repairer will be able to view pictures in internal memory.
- Formatting a memory card or internal memory in the camera creates a folder in which pictures are stored. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures from memory cards and internal memory; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals.



# Turning the Camera on and Off


## ***Shooting Mode***

Press the **ON/OFF** button to turn the camera on. The lens will extend and the lens cover will open.

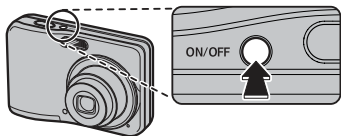

Press **ON/OFF** again to turn the camera off.


### **Tip: Switching to Playback Mode**

Press the  button to start playback. Press the shutter button halfway to return to shooting mode.


### **Cautions**


- Pictures can be affected by fingerprints and other marks on the lens. Keep the lens clean.
- The **ON/OFF** button does not completely disconnect the camera from its power supply.

### **Tip: Auto Power Off**

The monitor will dim to save power if no operations are performed for about ten seconds in shooting mode. Full brightness can be restored by operating any of the controls next to the monitor. The camera will turn off automatically if no operations are performed for the length of time selected in the **AUTO POWER OFF** menu (see page 69). To turn the camera on, press the **ON/OFF** button or press the  button for about a second.


## ***Playback Mode***

To turn the camera on and begin playback, press the  button for about a second.

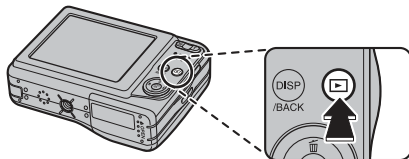

Press the  button again to turn the camera off.

### **Tip: Switching to Shooting Mode**

To exit to shooting mode, press the shutter button halfway. Press the  button to return to playback.

# Basic Setup

A language-selection dialog is displayed the first time the camera is turned on. Set up the camera as described below (for information on resetting the clock or changing languages, see page 64).

## 1 Choose a language.




- 1.1 Press the selector up, down, left, or right to highlight a language.



- 1.2 Press **MENU/OK**.



## 2 Set the date and time.

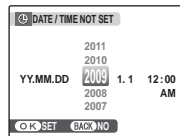

- 2.1 Press the selector left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the selector up or down.



- 2.2 Press **MENU/OK**.



## 3 Check the battery type.

A confirmation message for the battery type to be used appears. Alkaline batteries are selected by default.

### Tip: The Camera Clock


If the batteries are removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on. If the batteries are left in the camera for about two hours, they can be removed for about twenty four hours without resetting the clock or language selection.

## Taking Pictures in AUTO Mode

This section describes how to take pictures in **AUTO** mode. **AUTO** mode is automatically selected the first time the camera is turned on; for information on restoring **AUTO** mode after shooting in other modes, see page 25.


### 1 Turn the camera on.

Press the **ON/OFF** button to turn the camera on.

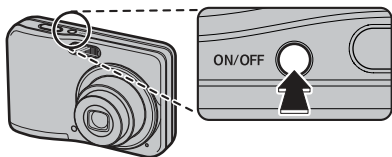

### 2 Check the battery level.

Check the battery level in the monitor.

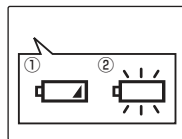



Indicator	Description
① (red)	Batteries are low. Replace as soon as possible.
② (blinks red)	Batteries are exhausted. Turn camera off and replace batteries.

### ← Note

A battery warning may not be displayed before the camera turns off, particularly if batteries are reused after having once been exhausted. Power consumption varies greatly from mode to mode; the low battery warning (①) may not be displayed or may be displayed only briefly before the camera turns off in some modes or when switching from shooting to playback mode.

### 3 Frame the picture.


Position the main subject in the focus area and use the zoom buttons to frame the picture in the monitor.

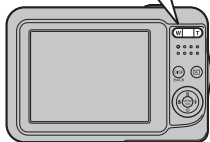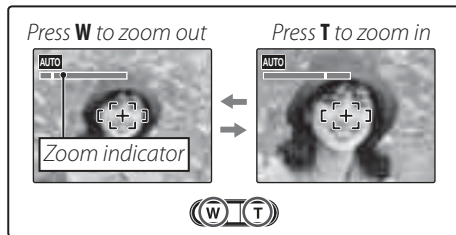


Zoom in using optical zoom, or use digital zoom (pg. 68) to zoom in closer.

### ● Holding the Camera

Hold the camera steady with both hands and brace your elbows against your sides. Shaking or unsteady hands can blur your shots.

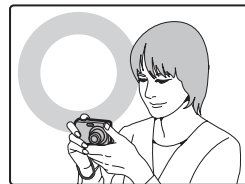

To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens and flash.

 


#### Tip: Focus Lock

Use focus lock (pg. 18) to focus on subjects that are not in the focus frame.

### Framing Guideline


To display a best framing or to view or hide other indicators in the monitor, press the **DISP/BACK** button.

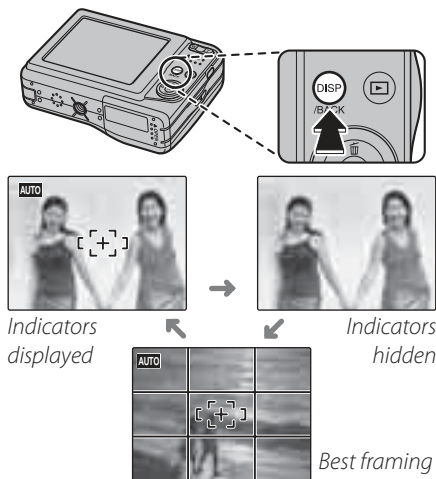

To use the best framing, position the main subject at the intersection of two lines or align one of the horizontal lines with the horizon. Use focus lock (pg. 18) to focus on subjects that will not be in the center of the frame in the final photograph.

## 4 Focus.

Press the shutter button halfway to focus on the main subject in the focus frame.

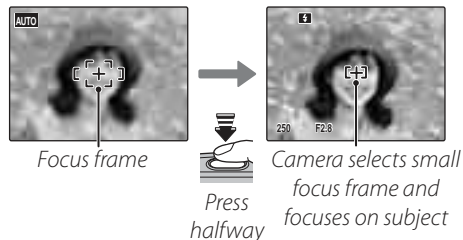

**If the camera is able to focus**, it will beep twice and the indicator lamp will glow green.

**If the camera is unable to focus**, the focus frame will turn red, a **!AF** indicator will appear in the monitor, and the indicator lamp will blink green. Change the composition or use focus lock (pg. 18).

### Note


The lens may make a noise when the camera focuses. This is normal.

**5 Shoot.**


Smoothly press the shutter button the rest of the way down to take the picture.

**Tip: The Shutter Button**

The shutter button has two positions. Pressing the shutter button halfway sets focus and exposure; to shoot, press the shutter button the rest of the way down.

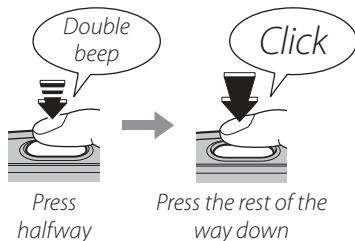**Note**

If the subject is poorly lit, the flash may fire when the picture is taken. To take pictures without the flash, choose another flash mode (pg. 21).

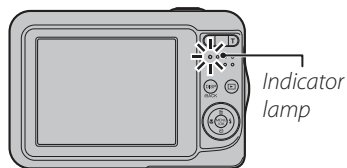**The Indicator Lamp**

The indicator lamp shows camera status as follows:

Indicator lamp	Camera status
Glows green	Focus locked.
Blinks green	Camera unable to focus. Picture can be taken.
Glows orange	Recording pictures. No additional pictures can be taken at this time.
Blinks orange	Flash charging; shutter disabled.
Blinks red	Recording or lens error.


**Tip: Warnings**

Detailed warnings appear in the monitor. See pages 80–83 for more information.

# Viewing Pictures

Pictures can be viewed in the monitor. When taking important photographs, take a test shot and check the results.

- 1 Press the  button.

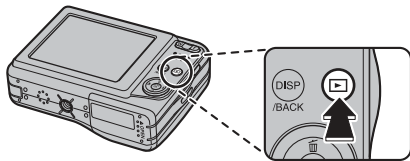

The most recent picture will be displayed in the monitor.




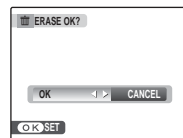
- 2 View additional pictures.  
Press the selector right to view pictures in the order recorded, left to view pictures in reverse order.



Press the shutter button to exit to shooting mode.

## Deleting Pictures

To delete the picture currently displayed in the monitor, press the selector up () button. The following dialog will be displayed.



To delete the picture, press the selector left to highlight **OK** and press **MENU/OK**. To exit without deleting the picture, highlight **CANCEL** and press **MENU/OK**.



### Tip: The Playback Menu


Pictures can also be deleted from the playback menu (pg. 32).

# Intelligent Face Detection and Red-Eye Removal

Intelligent Face Detection allows the camera to automatically detect human faces and set focus and exposure for a face anywhere in the frame for shots that emphasize portrait subjects. Choose for group portraits to prevent the camera from focusing on the background.

## 1 Turn Intelligent Face Detection on.

- 1.1 Press **MENU/OK** to display the shooting menu.

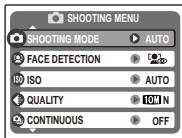

- 1.2 Press the selector up or down to highlight **FACE DETECTION**.



- 1.3 Press the selector right to display Intelligent Face Detection options.



- 1.4 Press the selector up or down to highlight the desired option.



Option	Description
<b>ON</b>	Intelligent Face Detection and red-eye removal on. Use with the flash.
<b>ON</b>	Intelligent Face Detection on; red-eye removal off.
<b>OFF</b>	Intelligent Face Detection and red-eye removal off.

- 1.5 Press **MENU/OK** to select the highlighted option and return to shooting mode.




icon appears in the monitor when Intelligent Face Detection is on.



## 2 Frame the picture.

If a face is detected, it will be indicated by a green border. If there is more than one face in the frame, the camera will select the face closest to the center; other faces are indicated by white borders.

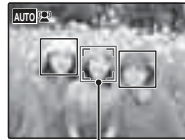

*Green border*

## 3 Focus.

Press the shutter button halfway to set focus and exposure for the subject in the green border.



### **Cautions**

- If no face is detected when the shutter button is pressed halfway (pg. 76), the camera will focus on the subject at the center of the monitor and red-eye will not be removed.
- In each shooting mode, the camera will focus on the human faces, but the exposure will be optimized for the selected shooting mode, so the brightness of human faces may not be optimized.




## 4 Shoot.

Press the shutter button all the way down to shoot.



### Caution

If the subject moves as the shutter button is pressed, their face may not be in the area indicated by the green border when the picture is taken.

If  **ON**/ **ON** is selected, the picture will be processed to reduce red-eye before it is recorded (the  **RED-EYE**



**REMOVAL** option in the playback menu can also be used to reduce red-eye; pg. 57).

### Intelligent Face Detection

Intelligent Face Detection is recommended when using the self-timer for group- or self-portraits (pp. 23–24).




During slide shows, the camera can zoom in on pictures taken with Intelligent Face Detection (pg. 58).

# Focus Lock

To compose photographs with off-center subjects:

## 1 Position the subject in the focus frame.

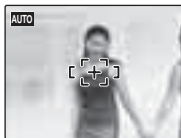

## 2 Focus.

Press the shutter button halfway to set focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock).




*Press  
halfway*



Repeat steps 1 and 2 as desired to refocus before taking the picture.

## 3 Recompose the picture.

Keeping the shutter button pressed halfway, recompose the picture.

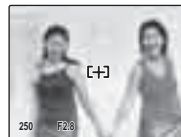

## 4 Shoot.

Press the shutter-release button the rest of the way down to take the picture.



*Press the rest of  
the way down*


## Autofocus

Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below. If the camera is unable to focus using autofocus, use focus lock (pg. 18) to focus on another subject at the same distance and then recompose the photograph.

- Very shiny subjects such as mirrors or car bodies.




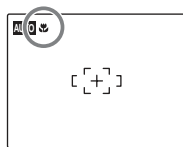
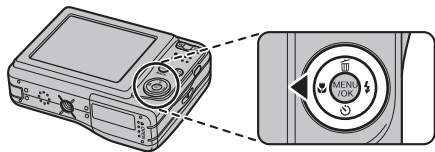
- Fast-moving subjects.

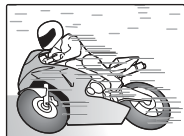

- Subjects photographed through a window or other reflective object.
- Dark subjects and subjects that absorb rather than reflect light, such as hair or fur.
- Insubstantial subjects, such as smoke or flame.
- Subjects that show little contrast with the background (for example, subjects in clothing that is the same color as the background).
- Subjects positioned in front of or behind a high-contrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).


## Macro Mode (Close-ups)

Macro mode can be used for close-ups in some modes (see another sheet). Press the selector left ()



 icon appears in monitor when camera is in macro mode

When macro mode is in effect, the camera focuses on subjects near the center of the monitor. Use the zoom buttons to frame pictures.

To exit macro mode, press the selector left () . Macro mode can also be cancelled by turning the camera off or selecting another shooting mode.

 
### Note

Use of a tripod is recommended to prevent blur caused by camera shake.

## ⚡ Using the Flash

Use the flash when lighting is poor, for example when shooting at night or indoors under low light.

To choose a flash mode, press the selector right (⏪). The flash mode changes each time the selector is pressed; in modes other than AUTO, the current mode is indicated by an icon in the monitor. Choose from the following options (some options are not available in all shooting modes; see another sheet):



Mode	Description
AUTO (no icon)	The flash fires when required. Recommended in most situations.
👁️ (red-eye reduction)	As above, except that red-eye reduction is used to minimize “red-eye” caused by light from the flash reflecting from the subject’s retinas as shown in the illustration at right.
⚡ (forced flash)	The flash fires whenever a picture is taken. Use for backlit subjects or for natural coloration when shooting in bright light.
Ⓜ️ (suppressed flash)	The flash does not fire even when the subject is poorly lit. ⚠️ will appear in the monitor at slow shutter speeds to warn that pictures may be blurred. Use of a tripod is recommended.
Ⓜ️⚡ (slow sync)	Capture both the main subject and the background when shooting at night (note that brightly lit scenes may be overexposed). Ⓜ️ combines slow sync with red-eye reduction. If Ⓜ️⚡ is selected for Ⓜ️ SHOOTING MODE, shutter speed may be slow. Use a tripod.
Ⓜ️⚡ (slow sync with red-eye reduction)	Ⓜ️⚡ is selected for Ⓜ️ SHOOTING MODE, shutter speed may be slow. Use a tripod.



If the flash will fire, ⚡ will be displayed in the monitor when the shutter button is pressed halfway.

### ⚠️ Caution

The flash may fire several times with each shot. Do not move the camera until shooting is complete.


### ●● Red-Eye Removal

When **REMOVAL ON** is selected for Intelligent Face Detection (pg. 15), red-eye removal (👁) is available in **AUTO** (👁), forced flash (👁⚡), and slow sync (👁⏸) modes. Red-eye removal minimizes “*red-eye*” caused when light from the flash is reflected from the subject’s retinas as shown in the illustration at right.



### ●● 📷 Silent Mode

In situations in which camera sounds or light from the flash may be unwelcome, press the **DISP/BACK** button until 📷 is displayed in the monitor.

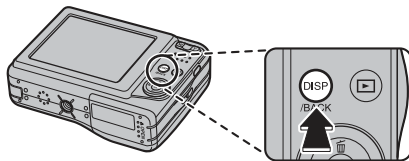



The camera speaker, flash and self-timer lamps turn off. Flash and volume settings can not be adjusted while silent mode is in effect. To restore normal operation, press the **DISP/BACK** button until the 📷 icon is no longer displayed.

## ⌚ Using the Self-Timer

The camera offers a ten-second timer that allows photographers to appear in their own photographs, and a two-second timer that can be used to avoid blur caused by the camera moving when the shutter button is pressed. The self-timer is available in all shooting modes.

### 1 Set the timer.

The current self-timer mode is displayed in the monitor. To choose a different setting, press the selector down (⌚). The selection changes each time the selector is pressed.

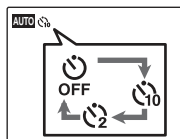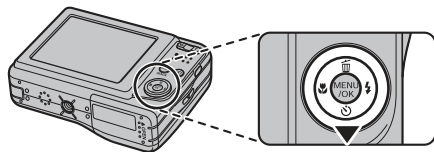

Choose from (self-timer off), (10 s delay), or (2 s delay)

### 2 Focus.

Press the shutter button halfway to focus.


#### Caution

Stand behind the camera when using the shutter button. Standing in front of the lens can interfere with focus and exposure.




### 3 Start the timer.

Press the shutter button the rest of the way down to start the timer. The display in the monitor shows the number of seconds remaining until the shutter is released. To stop the timer before the picture is taken, press **DISP/BACK**.

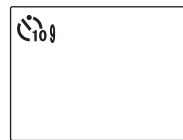

The self-timer lamp on the front of the camera will blink immediately before the picture is taken. If the two-second timer is selected, the self-timer lamp will blink as the timer counts down.

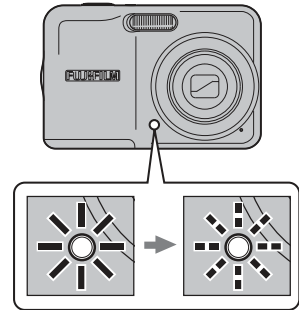

### Intelligent Face Detection

Because it ensures that the faces of portrait subjects will be in focus, Intelligent Face Detection (pg. 15) is recommended when using the self-timer for group portraits or self-portraits. To use the self-timer with Intelligent Face Detection, set the timer as described in Step 1 and then press the shutter button all the way down to start the timer. The camera will detect faces while the timer is counting down and adjust focus and exposure immediately before the shutter is released. Be careful not to move until the picture has been recorded.

### Note


The self-timer turns off automatically when the picture is taken, a different shooting mode is selected, playback mode is selected, or the camera is turned off.

## Shooting Mode

Choose a shooting mode according to the scene or type of subject.

### ***Selecting a Shooting Mode***


- 1** Press **MENU/OK** to display the shooting menu.

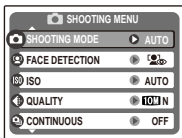

- 2** Press the selector up or down to highlight ** SHOOTING MODE**.



- 3** Press the selector right to display shooting mode options.

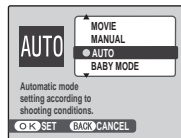

















- 4** Press the selector up or down to highlight the desired mode.

- 5** Press **MENU/OK** to select the highlighted option.




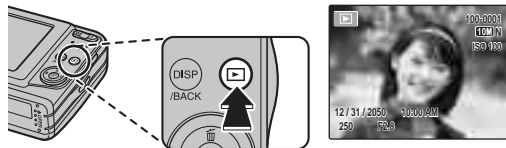
## Shooting Modes

Shooting Mode	Functions
 <b>MANUAL</b>	Choose this mode for complete control of shooting settings, including sensitivity (pg. 51), exposure compensation (pg. 53), and white balance (pg. 54).
<b>AUTO AUTO</b>	Choose for crisp, clear snapshots (pg. 10). This mode is recommended in most situations.
 <b>BABY MODE</b>	Choose for natural skin tones when taking portraits of infants. The flash turns off automatically.
 <b>ANTI-BLUR (Picture Stabilization)</b>	Choose this mode for fast shutter speeds that reduce blur caused by camera shake or subject movement.
 <b>PORTRAIT</b>	Choose this mode for softtoned portraits with natural skin tones.
 <b>LANDSCAPE</b>	Choose this mode for crisp, clear daylight shots of buildings and landscapes. The flash turns off automatically.
 <b>SPORT</b>	Choose this mode when photographing moving subjects. Priority is given to faster shutter speeds.
 <b>NIGHT</b>	Slow shutter speeds are used to record night and twilight scenes. Use of a tripod is recommended to prevent camera shake.
 <b>NATURAL LIGHT</b>	Capture natural light indoors, under low light, or where the flash can not be used. The flash turns off and sensitivity is raised to reduce blur.
 <b>BEACH</b>	Choose for crisp, clear shots that capture the brightness of sunlit beaches.
 <b>SNOW</b>	Choose for crisp, clear shots that capture the brightness of scenes dominated by shining white snow.
 <b>FIREWORKS</b>	Slow shutter speeds are used to capture the expanding burst of light from a firework. Press the selector left or right to choose from shutter speeds. Use of a tripod is recommended to prevent blur. The flash turns off automatically.

Shooting Mode	Functions
 <b>SUNSET</b>	Choose this mode to record the vivid colors in sunrises and sunsets.
 <b>FLOWER</b>	Choose for vivid close-ups of flowers. The camera focuses in the macro range and the flash turns off automatically.
 <b>PARTY</b>	Capture indoor background lighting under low-light conditions.
 <b>MUSEUM</b>	<p>Choose where flash photography is prohibited or the sound of the shutter may be unwelcome. The flash, speaker, and shooting indicator turn off automatically.</p> <p><b>← Note</b> Photography may be prohibited altogether in some settings. Obtain permission before shooting.</p>
 <b>TEXT</b>	Take clear pictures of text or drawings in print. The camera focuses in the macro range.

## Playback Options

To view the most recent picture in the monitor, press the  button.




Press the selector right to view pictures in the order recorded, left to view pictures in reverse order.



Press and hold the selector to scroll rapidly through your pictures.

### Choosing a Display Format

Press the **DISP/BACK** button to cycle through playback display formats as shown below.

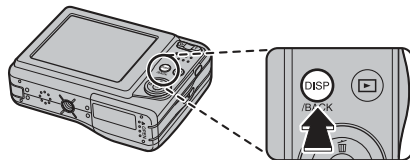

*Indicators displayed*

*Indicators hidden*




*Sort by date*

### Note

Pictures taken using other cameras are indicated by a  ("gift image") icon during playback.

## ***Playback Zoom***

Press **T** to zoom in on the picture currently displayed full frame in the monitor; press **W** to zoom out. When the picture is zoomed in, the selector can be used to view areas of the image not currently visible in the display.

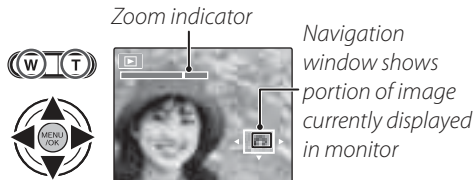




Press **MENU/OK** or **DISP/BACK** to exit zoom.

### **← Note**

The maximum zoom ratio varies with image size. Playback zoom is not available with pictures taken at an image size of **03M**.

## Multi-Frame Playback

To change the number of images displayed, Press **W** when a picture is shown full-frame in the monitor.

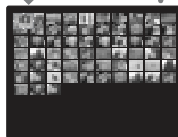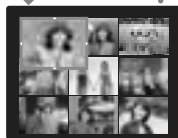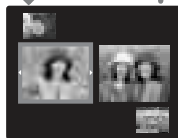

Press **W** to increase the number of pictures displayed to two, nine, or a hundred.

Press **T** to reduce the number of images displayed.

Use the selector to highlight images and press **MENU/OK** to view the highlighted image full frame. In the nine- and hundred-frame displays, press the selector up or down to view more pictures.

## Sort by Date

Choose sort-by-date mode to view pictures taken on a selected date.

- 1 Press **DISP/BACK** until the sort-by-date screen is displayed.



- 2 Press the selector up or down to select a date.



- 3 Press the selector left or right to select a picture.




### Tips: Rapid Scroll

- Press and hold the selector up or down to scroll dates rapidly.
- Press and hold the selector left or right to rapidly scroll pictures taken on the same date.

## Deleting Pictures

The **ERASE** option in the playback menu can be used to delete still pictures and movies, increasing the amount of space available on the memory card or in internal memory (for information on deleting pictures in single-frame playback, see page 14). *Note that deleted pictures can not be recovered. Copy important pictures to a computer or other storage device before proceeding.*


- 1 Press **MENU/OK** to display the playback menu.

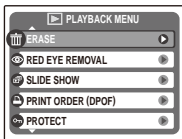

- 2 Press the selector up or down to highlight **ERASE**.



- 3 Press the selector right to display delete options.

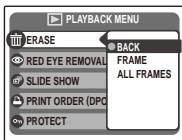

- 4 Press the selector up or down to highlight **FRAME** or **ALL FRAMES**.



- 5 Press **MENU/OK** to display options for the selected item (pg. 33).




### Tips: Deleting Pictures

- When a memory card is inserted, pictures will be deleted from the memory card; otherwise, pictures will be deleted from internal memory.
- Protected pictures can not be deleted. Remove protection from any pictures you wish to delete (pg. 59).
- If a message appears stating that the selected images are part of a DPOF print order, press **MENU/OK** to delete the pictures.

### ■ FRAME: *Deleting Selected Images*

Selecting **FRAME** displays the dialog shown at right.

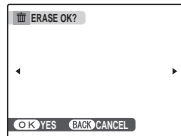


Press the selector left or right to scroll through pictures and press **MENU/OK** to delete the current picture (the picture is deleted immediately; be careful not to delete the wrong picture).



Press **DISP/BACK** to exit when all the desired pictures have been deleted.

### ■ ALL FRAMES: *Deleting All Images*


Selecting **ALL FRAMES** displays the confirmation shown at right.

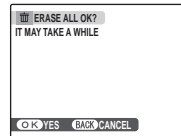

Press **MENU/OK** to delete all unprotected pictures.




The dialog shown at right is displayed during deletion. Press **DISP/BACK** to cancel before all pictures have been deleted (any pictures deleted before the button was pressed can not be recovered).

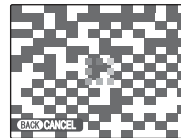

## Recording Movies

Shoot short movies. Sound is recorded via the built-in microphone; do not cover the microphone during recording.


- 1 Press **MENU/OK** to display the shooting menu and select **SHOOTING MODE > MOVIE** (pg. 25).

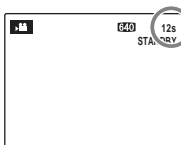


*Time available is displayed in monitor*

### Choosing the Frame Size

To choose the frame size, press **MENU/OK** and select **QUALITY**. Choose **640** (640×480 pixels) for better quality, **320** (320×240 pixels) for longer movies. Press **MENU/OK** to return to movie recording mode.

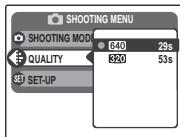

- 2 Frame the scene using the zoom **W** **T** buttons.

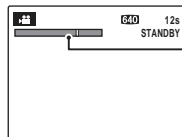

*Zoom indicator*

Zoom can not be adjusted once recording begins.

- 3** Press the shutter button all the way down to start recording.



● **REC** and time remaining are displayed in monitor

← **Note**

Focus is set when recording begins; exposure and white balance are adjusted automatically throughout recording. The color and brightness of the image may vary from that displayed before recording begins.

- 4** Press the shutter button halfway to end recording. Recording ends automatically when the movie reaches maximum length or memory is full.



🗉 **Tip**


There is no need to keep the shutter button pressed during recording.

← **Note**

Movies are recorded as monaural motion JPEG files. See page 85 for more information on recording times.


## ▶ Viewing Movies

During playback (pg. 28), movies are displayed in the monitor as shown at right. The following operations can be performed while a movie is displayed:

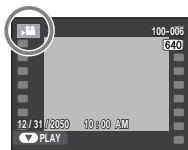

Operation	Description
Start/pause playback	<b>Press the selector down</b> to start playback. Press again to pause.
End playback/delete	<b>Press the selector up</b> to end playback. If playback is paused, pressing the selector up will delete the current movie.
Advance/rewind	<b>Press the selector right</b> to advance, <b>left</b> to rewind. If playback is paused, the movie will advance or rewind one frame each time the selector is pressed.
Adjust volume	<b>Press MENU/OK</b> to pause playback and display volume controls. Press the selector up or down to adjust the volume; press <b>MENU/OK</b> again to resume playback.

Progress is shown in the monitor during playback.

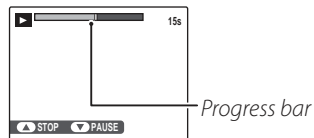

### Tip: Viewing Movies on a Computer


Copy movies to the computer before viewing.

### ⚠ Cautions

- Do not cover the speaker during playback.
- White vertical or dark horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.

## Viewing Pictures on TV

Connect the camera to a TV and tune the television to the video channel to show pictures and slide shows (pg. 58) to a group. The A/V cable (sold separately) connects as shown below.

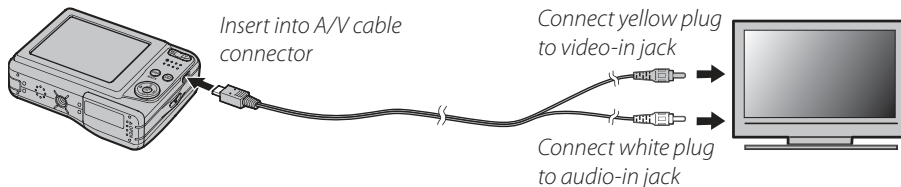

Press **▶** for about a second to turn the camera on. The camera monitor turns off and pictures and movies are played back on the TV. Note that the camera volume controls have no effect on sounds played on the TV; use the television volume controls to adjust the volume.

### ← Notes

- A/V cables are sold separately.
- Use fully charged batteries for extended playback.
- Image quality drops during movie playback.

### ⚠ Caution

When connecting the A/V cable, be sure the connectors are fully inserted.


# Printing Pictures via USB

If the printer supports PictBridge, the camera can be connected directly to the printer and pictures can be printed without first being copied to a computer. Note that depending on the printer, not all the functions described below may be supported.




## Connecting the Camera

- 1 Connect the supplied USB cable as shown and turn the printer on.

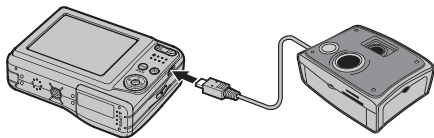

- 2 Press the button for about a second to turn the camera on. **USB** will be displayed in the monitor, followed by the PictBridge display shown below at right.

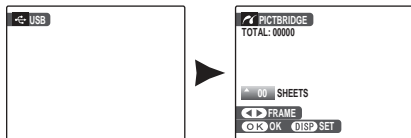


## Printing Selected Pictures

- 1 Press the selector left or right to display a picture you wish to print.
- 2 Press the selector up or down to choose the number of copies (up to 99).
- 3 Repeat steps 1–2 to select additional pictures. Press **MENU/OK** to display a confirmation dialog when settings are complete.



- 4 Press **MENU/OK** to start printing.

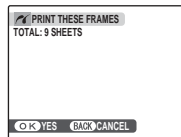

**Tip: Printing the Date of Recording**

To print the date of recording on pictures, press **DISP/BACK** in steps 1–2 to display the PictBridge menu (see “Printing the DPOF Print Order,” below). Press the selector up or down to highlight **PRINT WITH DATE** and press **MENU/OK** to return to the PictBridge display (to print pictures without the date of recording, select **PRINT WITHOUT DATE**). The date will not be printed if the camera clock was not set when the picture was taken.


**Note**

If no pictures are selected when the **MENU/OK** button is pressed, the camera will print one copy of the current picture.

**Printing the DPOF Print Order**

To print the print order created with **PRINT ORDER (DPOF)** in the playback menu (pg. 41):


- 1 In the PictBridge display, press **DISP/BACK** to open the PictBridge menu.

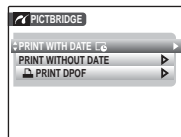

- 2 Press the selector up or down to highlight **PRINT DPOF**.



- 3 Press **MENU/OK** to display a confirmation dialog.

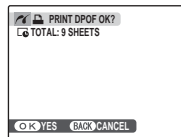



4 Press **MENU/OK** to start printing.




#### ● ● **During Printing**

The message shown at right is displayed during printing. Press **DISP/BACK** to cancel before all pictures are printed (depending on the printer, printing may end before the current picture has printed).

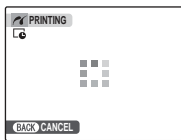


If printing is interrupted, press  to turn the camera off and then on again.

#### ● ● **Disconnecting the Camera**

Confirm that "PRINTING" is not displayed in the monitor and press  to turn the camera off. Disconnect the USB cable.

#### ← **Notes**

- Use fully charged batteries to power the camera for extended periods.
- Print pictures from internal memory or a memory card that has been formatted in the camera.
- If the printer does not support date printing, the **PRINT WITH DATE**  option will not be available in the PictBridge menu and the date will not be printed on the pictures in the DPOF print order.
- Default printer page size and print quality settings are used when printing via direct USB connection.

## Creating a DPOF Print Order

The **PRINT ORDER (DPOF)** option in the playback menu can be used to create a digital “print order” for PictBridge-compatible printers (pg. 38) or devices that support DPOF.


### DPOF

**DPOF** (Digital Print Order Format) is standard that allows pictures to be printed from “print orders” stored in internal memory or on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.



### WITH DATE /WITHOUT DATE

To modify the DPOF print order, select **PRINT ORDER (DPOF)** in the playback menu and press the selector up or down to highlight **WITH DATE**  or **WITHOUT DATE**.

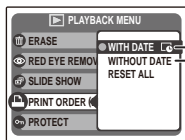

**WITH DATE** : Print date of recording on pictures.


**WITHOUT DATE**: Print pictures without date.

Press **MENU/OK** and follow the steps below.

**1** Press the selector left or right to display a picture you wish to include in or remove from the print order.



**2** Press the selector up or down to choose the number of copies (up to 99). To remove a picture from the order, press the selector down until the number of copies is 0.

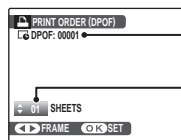

Total number of prints


Number of copies


**3** Repeat steps 1–2 to complete the print order. Press **MENU/OK** to save the print order when settings are complete, or **DISP/BACK** to exit without changing the print order.




- 4 The total number of prints is displayed in the monitor. Press **MENU/OK** to exit.




The pictures in the current print order are indicated by a  icon during playback.

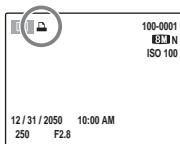


## ■ RESET ALL

To cancel the current print order, select **RESET ALL** in the  **PRINT ORDER (DPOF)** menu. The confirmation shown at right will be displayed; press **MENU/OK** to remove all pictures from the order.

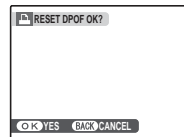

## ← Notes

- Remove the memory card to create or modify a print order for the pictures in internal memory.
- Print orders can contain a maximum of 999 pictures.
- If a memory card is inserted containing a print order created by another camera, the message shown at right will be displayed. Pressing **MENU/OK** cancels the print order; a new print order must be created as described above.

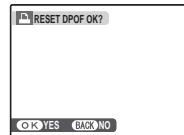

## Viewing Pictures on a Computer

---

The supplied FinePixViewer software can be used to copy pictures to a computer, where they can be stored, viewed, organized, and printed. Before proceeding, install FinePixViewer as described below.

*Do NOT connect the camera to the computer until installation is complete.*

### **Installing FinePixViewer**

FinePixViewer is available in a Windows version (FinePixViewer S) and a Macintosh version (FinePixViewer).

The latest version of the FinePixViewer is available at <http://www.fujifilm.com>.

Installation instructions for Windows are on pages 44–45, those for the Macintosh on pages 46–47.

## Installing FinePixViewer S: Windows

1 Confirm that the computer meets the following system requirements:

<b>OS</b>	Preinstalled versions of Windows Vista, Windows XP Home Edition (Service Pack 2), Windows XP Professional (Service Pack 2), or Windows 2000 Professional (Service Pack 4)
<b>CPU</b>	<ul style="list-style-type: none"> <li>• <b>Windows Vista:</b> 800 MHz Pentium 4 or better (3 GHz Pentium 4 or better recommended)</li> <li>• <b>Windows XP:</b> 800 MHz Pentium 4 or better (2 GHz Pentium 4 or better recommended)</li> <li>• <b>Windows 2000:</b> 200 MHz Pentium or better</li> </ul>
<b>RAM</b>	<ul style="list-style-type: none"> <li>• <b>Windows Vista:</b> 512 MB or more (1 GB or more recommended)</li> <li>• <b>Windows XP:</b> 512 MB or more</li> <li>• <b>Windows 2000:</b> 128 MB or more</li> </ul>
<b>Free disk space</b>	A minimum of 450 MB required for installation with 600 MB available when FinePixViewer is running (15 GB or more recommended under Windows Vista, 2 GB or more recommended under Windows XP)
<b>Video</b>	800×600 pixels or more with 16-bit color or better (1,024×768 pixels or more with 32-bit color recommended)
<b>Other</b>	<ul style="list-style-type: none"> <li>• Built-in USB port recommended. Operation is not guaranteed other USB ports.</li> <li>• Internet connection (56 kbps or faster recommended) required to use FinePix Internet Service; Internet connection and e-mail software required to use e-mail option</li> </ul>

### Caution

Other versions of Windows are not supported. Operation is not guaranteed on home-built computers or computers that have been upgraded from earlier versions of Windows.

2 Start the computer. Log in to an account with administrator privileges before proceeding.

- 3 Exit any applications that may be running and insert the installer CD in a CD-ROM drive.

#### **Windows Vista**

If an AutoPlay dialog is displayed, click **SETUP.exe**. A “User Account Control” dialog will then be displayed; click **Allow**.

The installer will start automatically; click **Installing FinePixViewer** and follow the on-screen instructions to install FinePixViewer S. Note that the Windows CD may be required during installation.

#### **If the Installer Does Not Start Automatically**

If the installer does not start automatically, select **Computer** or **My Computer** from the Start menu (Windows Vista/XP) or double-click the **My Computer** icon on the desktop (Windows 2000), then double-click the **FINEPIX** CD icon to open the FINEPIX CD window and double-click **SETUP** or **SETUP.exe**.

- 4 If prompted to install Windows Media Player or DirectX, follow the on-screen instructions to complete installation.
- 5 When prompted, remove the installer CD from the CD-ROM drive and click **Restart** to restart the computer. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software. The version number is printed at the top of the CD label for reference when updating the software or contacting customer support.

Installation is now complete. Proceed to “Connecting the Camera” on page 48.

## Installing FinePixViewer: Macintosh

1 Confirm that the computer meets the following system requirements:

<b>CPU</b>	PowerPC or Intel
<b>OS</b>	Mac OS X version 10.3.9–10.5 (only with OS-preinstalled models)
<b>RAM</b>	256 MB or more
<b>Free disk space</b>	A minimum of 200 MB required for installation with 400 MB available when FinePixViewer is running
<b>Video</b>	800×600 pixels or more with thousands of colors or better
<b>Other</b>	<ul style="list-style-type: none"> <li>• Built-in USB port recommended. Operation is not guaranteed other USB ports.</li> <li>• Internet connection (56 kbps or faster recommended) required to use FinePix Internet Service; Internet connection and e-mail software required to use e-mail option</li> </ul>

For the latest compatible OS, see the website below.

[http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html)

- 2 After starting the computer and quitting any applications that may be running, insert the installer CD in a CD-ROM drive. Double-click the **FinePix CD** icon on the desktop and double-click **Installer for Mac OS X**.
- 3 An installer dialog will be displayed; click **Installing FinePixViewer** to start installation. Enter an administrator name and password when prompted and click **OK**, then follow the on-screen instructions to install FinePixViewer. Click **Exit** to quit the installer when installation is complete.

- 4 Remove the installer CD from the CD-ROM drive. Note that you may be unable to remove the CD if Safari is running; if necessary, quit Safari before removing the CD. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software. The version number is printed at the top of the CD label for reference when updating the software or contacting customer support.
- 5 Select **Applications** in the Finder **Go** menu to open the applications folder. Double-click the **Image Capture** icon and select **Preferences...** from the Image Capture application menu.
- 6 The Image Capture preferences dialog will be displayed. Choose **Other...** in the **When a camera is connected, open** menu, then select **FPVBridge** in the "Applications/FinePixViewer" folder and click **Open**.
- 7 Select **Quit Image Capture** from the Image Capture application menu. Installation is now complete. Proceed to "Connecting the Camera" on page 48.




## ***Connecting the Camera***

**1** If the pictures you wish to copy are stored on a memory card, insert the card into the camera (pg. 5). If no card is inserted, pictures will be copied from internal memory.

**⚠ Caution**

Loss of power during transfer could result in loss of data or damage to internal memory or the memory card. Use fully charged batteries.

**2** Turn the camera off and connect the supplied USB cable as shown, making sure the connectors are fully inserted. Connect the camera directly to the computer; do not use a USB hub or keyboard.

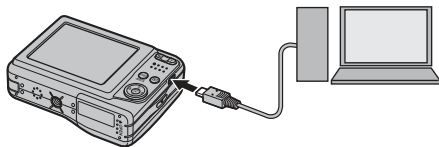

**3** Press the **▶** button for about a second to turn the camera on. FinePixViewer will start automatically and the “Save Image Wizard” will be displayed. Follow the on-screen instructions to copy pictures to the computer. To exit without copying pictures, click **CANCEL**.

**⚠ Caution**

If FinePixViewer does not start automatically, the software may not be correctly installed. Disconnect the camera and reinstall the software.

For more information on using FinePixViewer, select **How to Use FinePixViewer** in the FinePixViewer **Help** menu.

**← Note**

The camera will not turn off automatically while connected to a computer.

### Cautions

- Use only memory cards that have been formatted in the camera and contain pictures taken with the camera. If a memory card containing a large number of images is inserted, there may be a delay before FinePixViewer starts and FinePixViewer may be unable to import or save images. Use a memory card reader to transfer pictures.
- Make sure the indicator lamp is out before turning the camera off or disconnecting the USB cable. Failure to observe this precaution could result in loss of data or damage to internal memory or the memory card.
- Disconnect the camera before inserting or removing memory cards.
- In some cases, it may not be possible to access pictures saved to a network server using FinePixViewer in the same way as on a standalone computer.
- The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.

### Disconnecting the Camera

After confirming that the indicator lamp is out, follow the on-screen instructions to turn the camera off and disconnect the USB cable.

### Uninstalling FinePixViewer


Only uninstall FinePixViewer before reinstalling the software or when it is no longer required. After quitting FinePixViewer and disconnecting the camera, drag the “FinePixViewer” folder from “Applications” into the Trash and select **Empty Trash** in the **Finder** menu (Macintosh), or open the control panel and use “Programs and Features” (Windows Vista) or “Add/Remove Programs” (other versions of Windows) to uninstall FinePixViewer. Under Windows, one or more confirmation dialogs may be displayed; read the contents carefully before clicking **OK**.

# The Shooting Menu

The shooting menu is used to adjust settings for a wide range of shooting conditions.

## *Using the Shooting Menu*


- 1 Press **MENU/OK** to display the shooting menu.

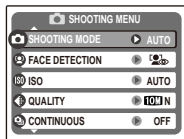

- 2 Press the selector up or down to highlight the desired menu item.



- 3 Press the selector right to display options for the highlighted item.

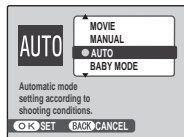




































 
- 4 Press the selector up or down to highlight the desired option.



- 5 Press **MENU/OK** to select the highlighted option.




## Shooting Menu Options


Menu item	Description	Options	Default
 <b>SHOOTING MODE</b>	Choose a shooting mode according to the type of subject (pg. 25).	 / <b>AUTO</b> /  /  /  /  /  /  /  /  / 	<b>AUTO</b>
 <b>FACE DETECTION</b>	Turn Intelligent Face Detection and red-eye removal on or off (pg. 15).	 <b>ON</b> /  <b>ON</b> /  <b>ON</b> /  <b>OFF</b> / <b>OFF</b>	 <b>ON</b>  <b>ON</b>
 <b>ISO</b>	Adjust ISO sensitivity (pg. 51). Choose higher values when the subject is poorly lit.	<b>AUTO</b> / <b>1600</b> / <b>800</b> / <b>400</b> / <b>200</b> / <b>100</b>	<b>AUTO</b>
 <b>QUALITY</b>	Choose image size and quality (pg. 52).	<b>10M F</b> / <b>10M N</b> / <b>9M</b> 3:2 / <b>5M</b> / <b>3M</b> / <b>2M</b> / <b>03M</b>	<b>10M N</b>
 <b>EXP. COMPENSATION</b>	Adjust exposure for bright, dark, or high-contrast scenes (pg. 53).	-2 EV to +2 EV in increments of 1/3 EV	<b>±0</b>
 <b>WHITE BALANCE</b>	Adjust color for different light sources (pg. 54).	<b>AUTO</b> /  /  /  /  /  /  / 	<b>AUTO</b>
 <b>CONTINUOUS</b>	Shoot a series of pictures (pg. 54).	 / <b>OFF</b>	<b>OFF</b>
 <b>SET-UP</b>	Perform basic camera setup such as choosing a language and setting the time and date (pg. 64).	 /  1 /  2 /  3	—

### **ISO**

Control the camera's sensitivity to light. Higher values can be used to reduce blur when lighting is poor; note, however, that mottling may appear in pictures taken at high sensitivities. If **AUTO** is selected, the camera will adjust sensitivity automatically in response to shooting conditions.

In shooting modes other than , sensitivity is set to **AUTO**; other values can not be selected.

Settings other than **AUTO** are shown by an icon in the monitor.

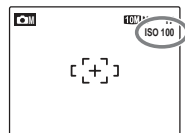

## QUALITY

Choose the size and quality at which still pictures are recorded (the options for movie mode are shown on page 34). Large pictures can be printed at large sizes with no drop in quality; small pictures require less memory, allowing more pictures to be recorded.

Option	Prints at sizes up to
<b>10M F</b>	31×23 cm/12×9 in. ( <b>10M</b> ) or 31×21 cm/12×8 in.
<b>10M N</b>	( <b>9M 3:2</b> ). Choose <b>10M F</b> for high-quality prints,
<b>9M 3:2</b>	<b>9M 3:2</b> for an aspect ratio of 3:2.
<b>5M</b>	22×16 cm (8.5×6.5 in.)
<b>3M</b>	17×13 cm (7×5 in.)
<b>2M</b>	14×10 cm (5.3×4 in.)
<b>03M</b>	5×4 cm (2×1.5 in.). Suited to e-mail or the web.

The number of pictures that can be taken at current settings (pg. 85) is displayed to the right of the image quality icon in the monitor.

### Note

Image quality is not reset when the camera is turned off or another shooting mode is selected.

### Aspect Ratio

Pictures taken at an image quality setting of **9M 3:2** have an aspect ratio of 3:2, the same as a frame of 35-mm film. Pictures taken at other settings have an aspect ratio of 4:3.



4:3



3:2

## EXP. COMPENSATION

Use exposure compensation when photographing very bright, very dark, or high-contrast subjects.

Choose positive (+) values  
to increase exposure



Choose negative (-) values  
to reduce exposure



### Choosing an Exposure Compensation Value

- **Backlit subjects:** choose values from  $+2/3$  EV to  $+1 2/3$  EV (for an explanation of the term "EV", see the Glossary on page 84)




- **Highly reflective subjects or very bright scenes** (e.g., snowfields): +1 EV









- **Scenes that are mostly sky:** +1 EV
- **Spotlit subjects** (particularly if photographed against dark backgrounds):  $-2/3$  EV
- **Subjects with low reflectivity** (pine trees or dark-colored foliage):  $-2/3$  EV

### Note

At settings other than  $\pm 0$ , a  icon is displayed in the monitor. Exposure compensation is not reset when the camera is turned off; to restore normal exposure control, choose a value of  $\pm 0$ .

**WB WHITE BALANCE**

For natural colors, choose a setting that matches the light source (for an explanation of “white balance,” see the Glossary on page 84).


Option	Displayed in
<b>AUTO</b>	White balance adjusted automatically.
	For subjects in direct sunlight.
	For subjects in the shade.
	Use under “daylight” fluorescent lights.
	Use under “warm white” fluorescent lights.
	Use under “cool white” fluorescent lights.
	Use under incandescent lighting.

If **AUTO** does not produce the desired results (for example, when taking close-ups), choose the option that matches the light source.

**Notes**


- Auto white balance is used with the flash. Turn the flash off (pg. 21) to take pictures at other settings.
- Results vary with shooting conditions. Play pictures back after shooting to check colors in the monitor.

**CONTINUOUS (Continuous shooting)**

Select  **TOP 3** to capture motion in a series of pictures. The camera takes up to three pictures while the shutter-release button is pressed.

**Notes**


- The flash turns off automatically (pg. 21), and focus and exposure are determined by the first frame in each series. The previously-selected flash mode is restored when **OFF** is selected for **CONTINUOUS**.
- Frame rate varies with shutter speed.
- The number of pictures that can be recorded depends on the memory available. Additional time may be required to record pictures when shooting ends. The pictures are displayed in the monitor while recording is in progress.

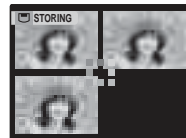

# The Playback Menu


The playback menu is used to manage the pictures in internal memory or on the memory card.

## Using the Playback Menu

1 Press  to enter playback mode (pg. 28).




2 Press **MENU/OK** to display the playback menu.

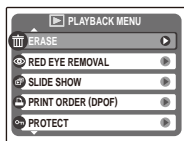

3 Press the selector up or down to highlight the desired menu item.



4 Press the selector right to display options for the highlighted item.

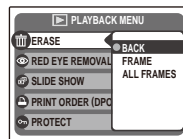

5 Press the selector up or down to highlight the desired option.



6 Press **MENU/OK** to select the high-lighted option.



## ***Playback Menu Options***

The following options are available:

Option	Description
<b>ERASE</b>	Delete all or selected pictures (pg. 32).
<b>RED-EYE REMOVAL</b>	Create copies with reduced red eye (pg. 57).
<b>SLIDE SHOW</b>	View pictures in a slide show (pg. 58).
<b>PRINT ORDER (DPOF)</b>	Select pictures for printing on DPOF- and PictBridge-compatible devices (pg. 41).
<b>PROTECT</b>	Protect pictures from accidental deletion (pg. 59).
<b>COPY</b>	Copy pictures between internal memory and a memory card (pg. 60).
<b>IMAGE ROTATE</b>	Rotate pictures (pg. 62).
<b>TRIMMING</b>	Create cropped copies of pictures (pg. 63).
<b>SET-UP</b>	Perform basic camera setup (pg. 64).


## 👁️ RED EYE REMOVAL

This option is used with pictures taken using Intelligent Face Detection to create copies that have been processed to remove red eye.

- 1 Play the picture back in the monitor (pictures taken with Intelligent Face Detection are indicated by a 👤 icon) and select 👁️ **RED EYE REMOVAL** in the playback menu (pg. 55).



- 2 Press **MENU/OK**. The message shown below at left will be displayed while the camera analyses the image; if red-eye is detected, the message shown below at right will be displayed while the camera processes the image to create a copy with reduced red-eye.

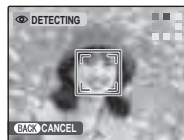


### ← Notes

- Red eye may not be removed if the camera is unable to detect a face or the face is in profile. Results may differ depending on the scene. Red eye can not be removed from pictures that have already been processed using red-eye removal or pictures created with other devices.
- The amount of time needed to process the image varies with the number of faces detected.
- Copies created with 👁️ **RED EYE REMOVAL** are indicated by a 👁️ icon during playback.



## SLIDE SHOW

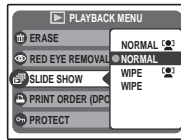View pictures in an automated slide show. Choose the type of show and press **MENU/OK** to start. Press the selector left or right to go back or skip ahead one frame. Press **DISP/BACK** at any time during the show to view on-screen help. When a movie is displayed, movie playback will begin automatically, and the slide show will continue when the movie ends. The show can be ended at any time by pressing **MENU/OK**.



### Note

The camera will not turn off automatically while a slide show is in progress.

Option	Description
<b>NORMAL</b>	Press selector left or right to go back or skip ahead one frame. Select <b>WIPE</b> for wipe transitions between frames.
<b>WIPE</b>	
<b>NORMAL</b> 	As above, except that camera automatically zooms in on faces selected with Intelligent Face detection (pg. 15).
<b>WIPE</b> 	


## PROTECT

Protect pictures from accidental deletion. The following options are available.


### ■ FRAME

Protect selected pictures.

- 1 Press the selector left or right to display the desired picture.

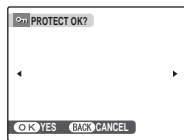

*Picture not protected*

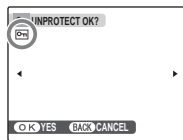

*Protected picture*

- 2 Press **MENU/OK** to protect the picture. If the picture is already protected, pressing **MENU/OK** will remove protection from the image.




- 3 Repeat steps 1–2 to protect additional images. Press **DISP/BACK** to exit when the operation is complete.




### ■ SET ALL

Press **MENU/OK** to protect all pictures, or press **DISP/BACK** to exit without changing picture status.

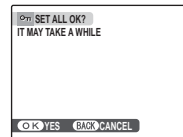


### ■ RESET ALL

Press **MENU/OK** to remove protection from all pictures, or press **DISP/BACK** to exit without changing picture status.

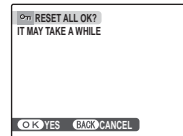

If the number of pictures affected is very large, the display at right will appear in the monitor while the operation is in progress. Press **DISP/BACK** to exit before the operation is complete.

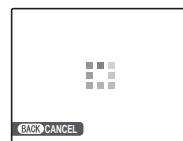

### Caution

Protected pictures will be deleted when the memory card or internal memory is formatted (pg. 69).


**COPY**

Copy pictures between internal memory and a memory card.

- 1 Press the selector up or down to highlight **INTERNAL MEMORY** → **SD CARD** (copy pictures from internal memory to the memory card) or **SD CARD** → **INTERNAL MEMORY** (copy pictures from a memory card to internal memory).



- 2 Press the selector right to display options for the highlighted item.

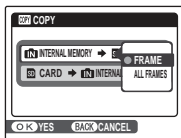

- 3 Press the selector up or down to highlight **FRAME** or **ALL FRAMES**.




- 4 Press **MENU/OK**.

**Tip: Copying Pictures Between Memory Cards**

To copy pictures between two memory cards, insert the source card and copy the pictures to internal memory, then remove the source card, insert the destination card, and copy the pictures from internal memory.

## ■ FRAME

Copy selected frames.

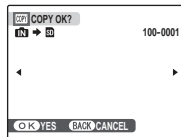

- 1 Press the selector left or right to display the desired picture.



- 2 Press **MENU/OK** to copy the picture.




- 3 Repeat steps 1–2 to copy additional images. Press **DISP/BACK** to exit when the operation is complete.



## ■ ALL FRAMES

Press **MENU/OK** to copy all pictures, or press **DISP/BACK** to exit without copying pictures.

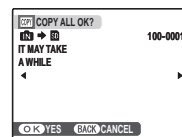


### ⚠ Cautions

- Copying ends when the destination is full.
- DPOF print information is not copied (pg. 41).

## 🔄 IMAGE ROTATE

By default, pictures taken in tall orientation are displayed in wide orientation. Use this option to display pictures in the correct orientation in the monitor. It has no effect on pictures displayed on a computer or other device.

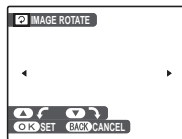


### 👉 Notes

- Protected pictures can not be rotated. Remove protection before rotating pictures (pg. 59).
- The camera may not be able to rotate pictures created with other devices.

To rotate a picture, play the picture back and select 🔄 **IMAGE ROTATE** in the playback menu (pg. 55).

- 1 Press the selector down to rotate the picture 90° clockwise, up to rotate the picture 90° counterclockwise.

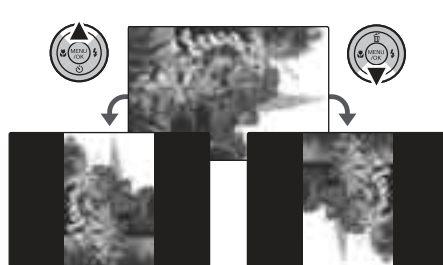


- 2 Press **MENU/OK** to confirm the operation (to exit without rotating the picture, press **DISP/BACK**).

The next time the picture is played back, it will automatically be rotated.


## TRIMMING

To create a cropped copy of a picture, play the picture back and select **TRIMMING** in the playback menu (pg. 55).

- 1 Press the zoom buttons to zoom in and out and use the selector to scroll the picture until the desired portion is displayed (to exit to single-frame playback without creating a cropped copy, press **DISP/BACK**).

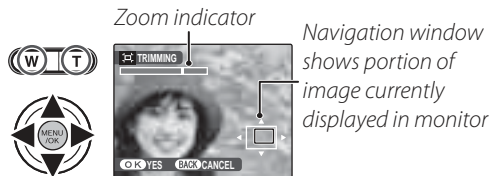

- 2 Press **MENU/OK**. A confirmation dialog will be displayed.

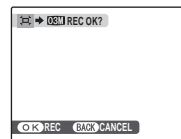

Copy size (**5M**, **3M**, **2M** or **03M**; see page 52) is shown at the top; if the size is **03M**, **OK** is displayed in yellow. Larger crops produce larger copies; all copies have an aspect ratio of 4:3.

- 3 Press **MENU/OK** to save the cropped copy to a separate file.



# The Setup Menu

## Using the Setup Menu

### 1 Display the setup menu.


1.1 Press **MENU/OK** to display the menu for the current mode.



1.2 Press the selector up or down to highlight **SET SET-UP**.



1.3 Press the selector right to display the setup menu.

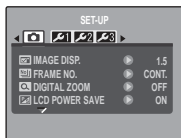

### 2 Choose a page.

2.1 Press the selector left or right to choose a page.



2.2 Press the selector down to enter the menu.




### 3 Adjust settings.

3.1 Press the selector up or down to highlight a menu item.



3.2 Press the selector right to display options for the highlighted item.

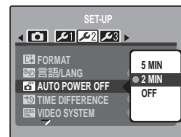











 

 











 





3.3 Press the selector up or down to highlight an option.



3.4 Press **MENU/OK** to select the highlighted option.



## Setup Menu Options

	Menu item	Description	Options	Default
	 <b>IMAGE DISP.</b>	Choose how long pictures are displayed after shooting (pg. 66).	<b>CONTINUOUS / 3 SEC / 1.5 SEC / ZOOM (CONTINUOUS) / OFF</b>	<b>1.5 SEC</b>
	 <b>FRAME NO.</b>	Choose how files are named (pg. 67).	<b>CONTINUOUS / RENEW</b>	<b>CONTINUOUS</b>
	 <b>DIGITAL ZOOM</b>	Enable or disable digital zoom (pg. 68).	<b>ON / OFF</b>	<b>OFF</b>
	 <b>LCD POWER SAVE</b>	Enable or disable monitor power saving (pg. 68).	<b>ON / OFF</b>	<b>ON</b>
	 <b>DATE/TIME</b>	Set the camera clock (pg. 9).	—	—
	 <b>OPERATION VOL.</b>	Adjust the volume of camera controls.	 (high) /  (mid) /  (low) /  OFF (mute)	
	 <b>SHUTTER VOLUME</b>	Adjust the volume of the shutter sound.	—	—
	 <b>PLAYBACK VOLUME</b>	Adjust the volume for movie playback (pg. 68).	—	<b>7</b>
	 <b>LCD BRIGHTNESS</b>	Control the brightness of the monitor (pg. 68).	<b>-5 - +5</b>	<b>0</b>
	 <b>FORMAT</b>	Format internal memory or memory cards (pg. 69).	—	—
	 <b>言語/LANG</b>	Choose a language (pg. 9).	See page 87	<b>ENGLISH</b>
	 <b>AUTO POWER OFF</b>	Choose the auto power off delay (pg. 69).	<b>5 MIN / 2 MIN / OFF</b>	<b>2 MIN</b>
	 <b>TIME DIFFERENCE</b>	Set the clock to local time (pg. 70).	 / 	
	 <b>VIDEO SYSTEM</b>	Choose a video mode for connection to a TV (pg. 37).	<b>NTSC / PAL</b>	—
	 <b>BATTERY TYPE</b>	Specify the type of battery used in the camera (pg. 71).	<b>ALKALINE / Ni-MH / LITHIUM</b>	<b>ALKALINE</b>
	 <b>DISCHARGE</b>	Discharge rechargeable Ni-MH batteries (pg. 72).	—	—
	 <b>RESET</b>	Reset all settings except <b>FRAME NO.</b> , <b>DATE/TIME</b> , <b>TIME DIFFERENCE</b> , and <b>VIDEO SYSTEM</b> to default values. A confirmation dialog will be displayed, press the selector left or right to highlight <b>OK</b> and press <b>MENU/OK</b> .	—	—

**☑ IMAGE DISP.**

Choose how long pictures are displayed in the monitor after shooting.

- **CONTINUOUS**: Pictures are displayed until the **MENU/OK** button is pressed.
- **3 SEC**: Pictures are displayed for about 3 s before being recorded to the memory card.
- **1.5 SEC**: Pictures are displayed for about 1.5 s before being recorded to the memory card.
- **ZOOM (CONTINUOUS)**: As for **CONTINUOUS**, except that pictures taken at qualities larger than **03M** can be zoomed in to check fine details (see page 29).
- **OFF**: Pictures are not displayed automatically after shooting.


**← Note**

The colors displayed at settings of **3 SEC** and **1.5 SEC** may differ from those in the final picture.

**FRAME NO.**

New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used. The file number is displayed during playback as shown at right. **FRAME NO.** controls whether file numbering is reset to 0001 when a new memory card is inserted or the current memory card or internal memory is formatted.



- **CONTINUOUS:** Numbering continues from the last file number used or the first available file number, whichever is higher. Choose this option to reduce the number of pictures with duplicate file names.
- **RENEW:** Numbering is reset to 0001 after formatting or when a new memory card is inserted.

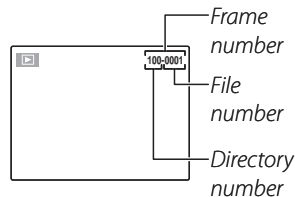**Notes**

- If the frame number reaches 999-9999, the shutter release will be disabled (pg. 81).
- Selecting **RESET** (pg. 65) does not reset frame numbering.
- Frame numbers for pictures taken with other cameras may differ.

## DIGITAL ZOOM

If **ON** is selected, pressing **T** at the maximum optical zoom position will trigger digital zoom, further magnifying the image. To cancel digital zoom, zoom out to the minimum digital zoom position and press **W**.

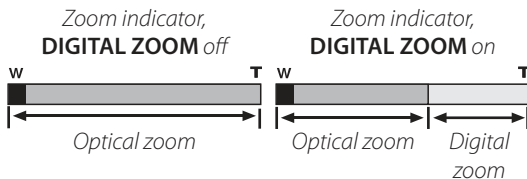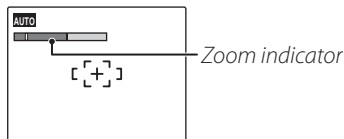

### Caution


Digital zoom produces lower quality images than optical zoom.

## LCD POWER SAVE

If **ON** is selected, the monitor will dim to save power if no operations are performed for several seconds. Full brightness can be restored by pressing the shutter button halfway. The monitor does not dim in movie mode or during playback.


## PLAYBACK VOLUME

Press the selector up or down to choose volume for movie playback and press **MENU/OK** to select.

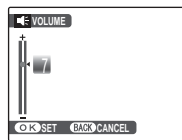


## LCD BRIGHTNESS

Press the selector up or down to choose monitor brightness and press **MENU/OK** to select.

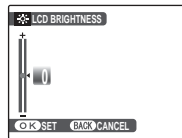

## **FORMAT**

Format internal memory or a memory card. If a memory card is inserted in the camera, **SD** will be displayed in the dialog shown at right and this option will format the memory card. If no memory card is inserted, **IN** will be displayed and this option will format internal memory. Press the selector left to highlight **OK** and press **MENU/OK** to begin formatting.

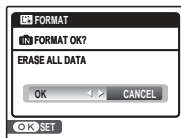


### **Cautions**

- All data—including protected pictures—will be deleted. Be sure important files have been copied to a computer or other storage device.
- Do not open the battery cover during formatting.

## **AUTO POWER OFF**

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually. Note that regardless of the option selected, the camera will not turn off automatically when connected to a printer (pg. 38) or computer (pg. 48) or when a slide show is in progress (pg. 58).

### **Tip: Reactivating the Camera**

To reactivate the camera after it has turned off automatically, press the **ON/OFF** button or press the  button for about a second (pg. 8).

## TIME DIFFERENCE


When travelling, use this option to switch the camera clock instantly from your home time zone to the local time at your destination.

### 1 Specify the difference between local time and your home time zone.

1.1 Press the selector up or down to highlight **← LOCAL**.



1.2 Press the selector right to display the time difference.

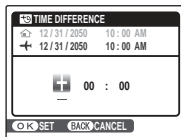

1.3 Press the selector left or right to highlight **+**, **-**, hours, or minutes; press up or down to edit. The minimum increment is 15 minutes.




1.4 Press **MENU/OK** when settings are complete.



### 2 Switch between local time and your home time zone.

To set the camera clock to local time, highlight **← LOCAL** and press **MENU/OK**. To set the clock to the time in your home time zone, select **HOME**. If **← LOCAL** is selected, **←** will be displayed in the monitor for three seconds after the camera enters shooting mode, and the date will be displayed in yellow.

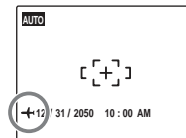



After changing time zones, check that the date and time are correct.

## BATTERY TYPE


After replacing the batteries with batteries of a different type, select the battery type to ensure that the battery level is displayed correctly and the camera does not turn off unexpectedly.

- **ALKALINE:** AA alkaline (LR6) battery
- **Ni-MH:** AA Ni-MH (nickel-metal hydride) battery
- **LITHIUM:** AA UL-certified lithium battery

## DISCHARGE (Ni-MH Batteries Only)

The capacity of rechargeable Ni-MH batteries may be temporarily reduced when new, after long periods of disuse, or if they are repeatedly recharged before being fully discharged. Capacity can be increased by repeatedly discharging the batteries using the  **DISCHARGE** option and recharging them in a battery charger (sold separately). Do not use  **DISCHARGE** with non-rechargeable batteries.

- 1** Selecting  **DISCHARGE** displays the message shown above. Press **MENU/OK**.

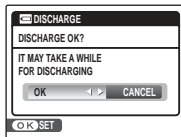

- 2** Press the selector left or right to highlight **OK**.




- 3** Press **MENU/OK** to begin discharging the batteries. When the batteries are fully discharged, the battery level indicator will blink red and the camera will turn off. To cancel the process before the batteries are fully discharged, press **DISP/BACK**.



## Optional Accessories

Your camera can be used with televisions, printers, computers, and optional memory cards. For more information on the accessories available in your region, contact your local Fujifilm representative or visit [http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html).

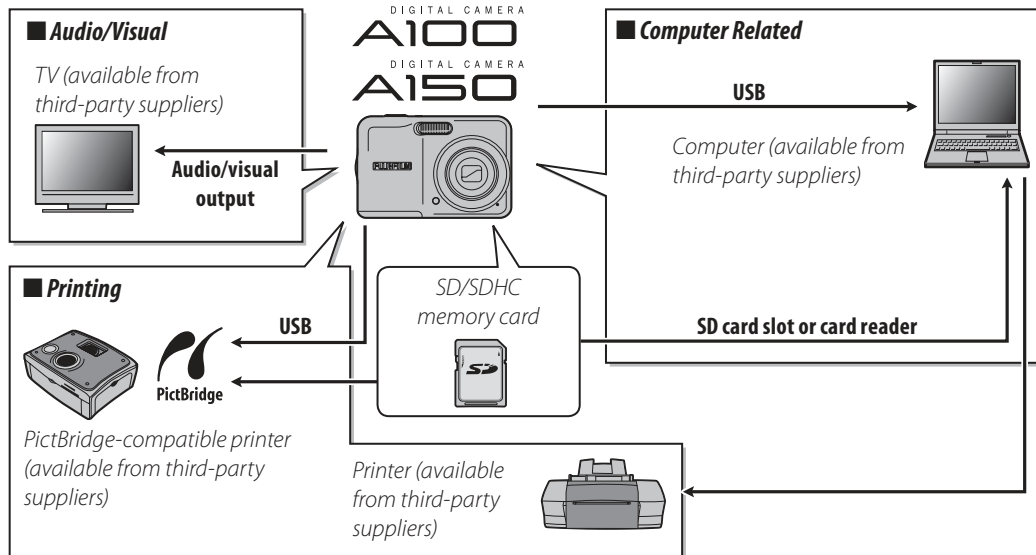

## Caring for the Camera

To ensure continued enjoyment of the product, observe the following precautions.

### **Storage and Use**

If the camera will not be used for an extended period, remove the batteries and memory card. Do not store or use the camera in locations that are:

- exposed to rain, steam, or smoke
- very humid or extremely dusty
- exposed to direct sunlight or very high temperatures, such as in a closed vehicle on a sunny day
- extremely cold
- subject to strong vibration
- exposed to strong magnetic fields, such as near a broadcasting antenna, power line, radar emitter, motor, transformer, or magnet
- in contact with volatile chemicals such as pesticides
- next to rubber or vinyl products

### **Water and Sand**

Exposure to water and sand can also damage the camera and its internal circuitry and mechanisms. When using the camera at the beach or seaside, avoid exposing the camera to water or sand. Do not place the camera on a wet surface.

### **Condensation**

Sudden increases in temperature, such as occur when entering a heated building on a cold day, can cause condensation inside the camera. If this occurs, turn the camera off and wait an hour before turning it on again. If condensation forms on the memory card, remove the card and wait for the condensation to dissipate.

### **Cleaning**


Use a blower to remove dust from the lens and monitor, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of FUJIFILM lens-cleaning paper to which a small amount of lens-cleaning fluid has been applied. Care should be taken to avoid scratching the lens or monitor. The camera body can be cleaned with a soft, dry cloth. Do not use alcohol, thinner, or other volatile chemicals.

### **Travelling**

Keep the camera in your carry-on baggage. Checked baggage may suffer violent shocks that could damage the camera.

# Troubleshooting

## Power and Battery

	Problem	Possible cause	Solution	Page
Power supply	The camera does not turn on.	The batteries are exhausted.	Insert fresh or fully-charged spare batteries.	4
		The batteries are not in the correct orientation.	Re-insert the batteries in the correct orientation.	4
		The battery-chamber cover is not latched.	Latch the battery-chamber cover.	4
	The batteries run down quickly.	The batteries are cold.	Warm the batteries by placing them in a pocket or other warm place and re-insert them in the camera immediately before taking a picture.	4
		There is dirt on the battery terminals.	Clean the terminals with a soft, dry cloth.	—
		The batteries are new, have been left unused for an extended period, or have been recharged without first being fully discharged (rechargeable Ni-MH batteries only).	Discharge Ni-MH batteries using the  <b>DISCHARGE</b> option and recharge them in a battery charger (sold separately). If the batteries do not hold a charge after repeated discharging and recharging, they have reached the end of their service life and must be replaced.	72
		The camera turns off suddenly.	The batteries are exhausted.	Insert fresh or fully-charged spare batteries.

## Menus and Displays

	Problem	Possible cause	Solution	Page
	Menus and displays are not in English.	English is not selected for the 言語/LANG option in the setup menu.	Select <b>ENGLISH</b> .	9

**Shooting**

Problem		Possible cause	Solution	Page
Taking pictures	No picture is taken when the shutter button is pressed.	Memory is full.	Insert a new memory card or delete pictures.	5, 32
		Memory is not formatted.	Format the memory card or internal memory.	69
		There is dirt on the memory card contacts.	Clean the contacts with a soft, dry cloth.	6
		The memory card is damaged.	Insert a new memory card.	5
		The batteries are exhausted.	Insert fresh or fully-charged spare batteries.	4
	The camera has turned off automatically.	Turn the camera on.	8, 69	
The monitor goes dark after shooting.	The flash has fired.	The monitor may darken while the flash charges. Wait for the flash to charge.	21	
Focus	The camera does not focus.	The subject is close to the camera.	Select macro mode.	20
		The subject is far away from the camera.	Cancel macro mode.	
		The subject is not suited to autofocus.	Use focus lock.	18
Close-ups	Macro mode is not available.	The camera is in a shooting mode where the macro mode cannot be selected.	Choose a different shooting mode.	25
Intelligent Face Detection	Face detection not available.	The camera is in a shooting mode where face detection cannot be selected.	Choose a different shooting mode.	25
		No face is detected.	The subject's face is obscured by sunglasses, a hat, long hair, or other objects.	Remove the obstructions.
	The subject's face occupies only a small area of the frame.	Change the composition so that the subject's face occupies a larger area of the frame.		
	The subject's head is tilted or horizontal.	Ask the subject to hold their head straight.		
	The camera is tilted.	Hold the camera straight.	11	
	The subject's face is poorly lit.	Shoot in bright light.	—	
Wrong subject selected.	The selected subject is closer to the center of the frame than the main subject.	Recompose the picture or turn face detection off and frame the picture using focus lock.	18	



Problem		Possible cause	Solution	Page
Flash	The flash does not fire.	The camera is in a shooting mode where the flash cannot fire.	Choose a different shooting mode.	25
		The batteries are exhausted.	Insert fresh or fully-charged spare batteries.	4
		The flash is off (🔴).	Choose a different flash mode.	21
	Some flash modes are not available.	The camera is in a shooting mode where the flash setting you want to use cannot be selected.	Choose a different shooting mode.	25
	The flash does not fully light the subject.	The subject is not in range of the flash.	Position the subject in range of the flash.	87
The flash window is obstructed.		Hold the camera correctly.	11	
Problem images	Pictures are blurred.	The lens is dirty.	Clean the lens.	74
		The lens is blocked.	Keep objects away from the lens.	11
		!AF is displayed during shooting and the focus frame is displayed in red.	Check focus before shooting.	12, 18, 80
		🔴 is displayed during shooting.	Use the flash or a tripod.	21
	Pictures are mottled.	The ambient temperature is high and the subject is poorly lit.	This is normal and does not indicate a malfunction. Choose a lower sensitivity.	51

## Playback

Problem		Possible cause	Solution	Page
Pictures	Pictures are grainy.	The pictures were taken with a different make or model of camera.	—	—
	Playback zoom unavailable.	The pictures were taken at an image size of 03M or with a different make or model of camera.	—	—
Audio	No sound in movie playback.	Playback volume is too low.	Adjust playback volume.	68
		The microphone was obstructed.	Hold the camera correctly during recording.	34
		The speaker is obstructed.	Do not cover the speaker during playback.	36

Problem	Possible cause	Solution	Page	
Deletion	Selected pictures are not deleted.	Some of the pictures selected for deletion are protected.	Remove protection using the device with which it was originally applied.	59
Frame no.	File numbering is unexpectedly reset.	The battery-chamber cover was opened while the camera was on.	Turn the camera off before opening the battery-chamber cover to replace the battery or insert a memory card.	67

### Connections


 

Problem	Possible cause	Solution	Page	
TV	No picture or sound.	The camera is not properly connected.	Connect the camera correctly.	37
		The camera was connected during movie playback.	Connect the camera once movie playback has ended.	36, 37
		Input on the television is set to "TV".	Set input to "VIDEO".	—
		The camera is not set to the correct video standard.	Match the camera  VIDEO SYSTEM setting to the TV.	37, 65
	The volume on the television is too low.	Adjust the volume.	—	
No color.	The camera is not set to the correct video standard.	Match the camera  VIDEO SYSTEM setting to the TV.	37, 65	
Computer	The computer does not recognize the camera.	The camera is not properly connected.	Connect the camera correctly.	48
PictBridge	Pictures can not be printed.	The camera is not properly connected.	Connect the camera correctly.	38
		The printer is off.	Turn the printer on.	—
	Only one copy is printed. The date is not printed.	The printer is not PictBridge-compatible.	—	—






**Miscellaneous**








<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>	<b>Page</b>
Nothing happens when the shutter button is pressed.	Temporary camera malfunction.	Remove and reinsert the batteries.	4
	The batteries are exhausted.	Insert fresh or fully-charged spare batteries.	4
The camera does not function as expected.	Temporary camera malfunction.	Remove and reinsert the batteries. If the problem persists, contact your FUJIFILM dealer (see another sheet).	4

## Warning Messages and Displays

The following warnings are displayed in the monitor:

Warning	Description	Solution
 (red)	Batteries are low.	Insert fresh or fully-charged spare batteries.
 (blinks red)	Batteries are exhausted.	
	Slow shutter speed. Picture may be blurred.	Use the flash or mount the camera on a tripod.
<b>!AF</b> (displayed in red with red focus frame)	The camera can not focus.	<ul style="list-style-type: none"> <li>• Use focus lock to focus on another subject at the same distance, then recompose the picture (pg. 18).</li> <li>• If the subject is poorly lit, try focusing at a distance of about 2 m (6ft. 7 in.).</li> <li>• Use macro mode to focus when taking close-ups.</li> </ul>
<b>!AE</b> (displayed in red)	The subject is too bright or too dark. The picture will be over- or under-exposed.	If the subject is dark, use the flash.
FOCUS ERROR	Camera malfunction.	Turn the camera off and then on again, taking care not to touch the lens. If the message persists, contact a FUJIFILM dealer.
ZOOM ERROR		
NO CARD	No memory card inserted when <b>COPY</b> is selected in the playback menu.	Insert a memory card.
CARD NOT INITIALIZED	The memory card or internal memory is not formatted.	Format the memory card or internal memory (pg. 69).
	The memory card contacts require cleaning.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 69). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.
PROTECTED CARD	The memory card is locked.	Unlock the memory card (pg. 5).
BUSY	The memory card is incorrectly formatted.	Use the camera to format the memory card (pg. 69).


Warning	Description	Solution
CARD ERROR	The memory card is not formatted for use in the camera.	Format the memory card (pg. 69).
	The memory card contacts require cleaning or the memory card is damaged.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 69). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.
 MEMORY FULL	The memory card or internal memory is full; pictures can not be recorded or copied.	Delete pictures or insert a memory card with more free space.
 MEMORY FULL		
INTERNAL MEMORY IS FULL INSERT A NEW CARD		
WRITE ERROR	Memory card error or connection error.	Re-insert the memory card or turn the camera off and then on again. If the message persists, contact a FUJIFILM dealer.
	Not enough memory remaining to record additional pictures.	Delete pictures or insert a memory card with more free space.
	The memory card or internal memory is not formatted.	Format the memory card or internal memory (pg. 69).
READ ERROR	The file is corrupt or was not created with the camera.	The file can not be played back.
	The memory card contacts require cleaning.	Clean the contacts with a soft, dry cloth. If the message is repeated, format the memory card (pg. 69). If the message persists, replace the memory card.
	Camera malfunction.	Contact a FUJIFILM dealer.
FRAME NO. FULL	The camera has run out of frame numbers (current frame number is 999-9999).	Format the memory card and select <b>RENEW</b> for the  <b>FRAME NO.</b> option in the  <b>SETUP</b> menu (pg. 64). Take a picture to reset frame numbering to 100-0001, then return to the  <b>FRAME NO.</b> menu and select <b>CONTINUOUS</b> .

Warning	Description	Solution
TOO MANY FRAMES	Date for which more than 4,999 pictures exist selected in sort-by-date view.	Choose a different date.
PROTECTED FRAME	An attempt was made to delete or rotate a protected picture.	Remove protection before deleting or rotating pictures.
 NO IMAGE	The source device selected in the playback <b>COPY</b> menu contains no pictures.	Select a different source.
 NO IMAGE		
 CAN NOT TRIM	An attempt was made to crop a  picture.	These pictures can not be cropped.
CAN NOT TRIM	The picture selected for cropping is damaged or was not created with the camera.	
DPOF FILE ERROR	The DPOF print order on the current memory card contains more than 999 images.	Copy the pictures to internal memory and create a new print order.
CAN NOT SET DPOF	The picture can not be printed using DPOF.	—
 CAN NOT SET DPOF	Movies can not be printed using DPOF.	—
CAN NOT ROTATE	The picture can not be rotated.	—
 CAN NOT ROTATE	Movies can not be rotated.	—
CANNOT DETECT	Red-eye reduction can not be applied to the selected picture or movie.	—
CANNOT EXECUTE		
 CANNOT EXECUTE		
COMMUNICATION ERROR	A connection error occurred while pictures were being printed or copied to a computer or other device.	Confirm that the device is turned on and check that the USB cable is connected.
PRINTER ERROR	Printer out of paper or ink, or other printer error.	Check printer (see printer manual for details). To resume printing, turn the printer off and then turn it back on.
PRINTER ERROR RESUME?		Check printer (see printer manual for details). If printing does not resume automatically, press <b>MENU/OK</b> to resume.

Warning	Description	Solution
PRESS AND HOLD THE DISP BUTTON TO DEACTIVATE SILENT MODE	An attempt was made to choose a flash mode or adjust the volume with the camera in silent mode.	Exit silent mode before choosing a flash mode or adjusting the volume.
CAN NOT BE PRINTED	An attempt was made to print a movie, a picture not created with the camera, or a picture in a format not supported by the printer.	Movies and some pictures created with other devices can not be printed. If the picture was created with the camera, check the printer manual to confirm that the printer supports the JFIF-JPEG or Exif-JPEG format. If it does not, the pictures can not be printed.

## Glossary

**Digital zoom:** Unlike optical zoom, digital zoom does not increase the amount of visible detail. Instead, details visible using optical zoom are simply enlarged, producing a slightly “grainy” image.

**Discharge:** The capacity of rechargeable Ni-MH batteries will drop if they are repeatedly charged without first being fully discharged. Full capacity can be restored by repeatedly discharging the batteries using the  **DISCHARGE** option in the camera setup menu and recharging them using a battery charger (sold separately).

**DPOF** (Digital Print Order Format): A standard that allows pictures to be printed from “print orders” stored in internal memory or on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.



**EV** (Exposure Value): The exposure value is determined by the sensitivity of the image sensor and the amount of light that enters the camera while the image sensor is exposed. Each time the amount of light doubles, EV increases by one; each time the amount of light is halved, EV decreases by one. The amount of light entering the camera can be controlled by adjusting aperture and shutter speed.

**Exif Print:** A standard that allows information stored with pictures to be used for optimal color reproduction during printing.

**JPEG** (Joint Photographic Experts Group): A compressed file format for color images. The higher the compression rate, the greater the loss of information and more noticeable drop in quality when the picture is displayed.

**Motion JPEG:** An AVI (Audio Video Interleave) format that stores images and sound in a single file, with the images recorded in JPEG format. Motion JPEG files can be played in QuickTime 3.0 or later.

**Smear:** A phenomenon specific to CCDs which causes white streaks to appear when very bright light sources, such as the sun or reflected sunlight, appear in the frame.

**White balance:** The human brain automatically adapts to changes in the color of light, with the result that objects that appear white under one light source still appear white when the color of the light source changes. Digital cameras can mimic this adjustment by processing images according to the color of the light source. This process is known as “white balance.”

## Internal Memory/Memory Card Capacity

The following table shows the recording time or number of pictures available at different image qualities. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of frames or length remaining may not diminish at an even rate.

		10M F	10M N	9M 3:2	5M	3M	2M	03M	640	320
<b>Image size (pixels)</b>		3648×2736		3648×2432	2592×1944	2048×1536	1600×1200	640×480	640×480	320×240
<b>File size</b>		4.9 MB	2.5 MB	2.2 MB	1.2 MB	780 KB	630 KB	130 KB	—	—
<b>Internal memory (approx. 20 MB)</b>		3	7	8	13	19	26	90	13 sec.	31 sec.
<b>SD card</b>	<b>512 MB</b>	95	190	210	350	480	640	2220	6 min.	12 min.
	<b>1 GB</b>	190	380	420	700	960	1280	4420	12 min.	28 min.
	<b>2 GB</b>	390	760	860	1400	1930	2580	8850	25 min.	57 min.
<b>SDHC card</b>	<b>4 GB</b>	790	1520	1720	2810	3870	5160	17720	50 min.*	116 min.*
	<b>6 GB</b>	1170	2250	2540	4160	5730	7640	26200	75 min.*	171 min.*
	<b>8 GB</b>	1590	3060	3450	5650	7780	10370	35560	100 min.*	229 min.*
	<b>12 GB</b>	2370	4550	5140	8410	11570	15430	52920	151 min.*	346 min.*
	<b>16 GB</b>	3190	6140	6930	11340	15600	20800	71310	204 min.*	467 min.*
	<b>32 GB</b>	6340	12190	13760	22610	30970	41290	99990	406 min.*	927 min.*

\* Total length of all movie files. Individual movies can not exceed 2 GB in size.

# Specifications

System	
<b>Model</b>	FUJIFILM DIGITAL CAMERA A100/A150
<b>Effective pixels</b>	10 million
<b>CCD</b>	½.33-in., square-pixel CCD with primary color filter
<b>Storage media</b>	• Internal memory (approx. 20 MB) • SD/SDHC memory cards (see page 5)
<b>File system</b>	Compliant with Design Rule for Camera File System (DCF), Exif 2.2, and Digital Print Order Format (DPOF)
<b>File format</b>	• <b>Still pictures:</b> Exif 2.2 JPEG (compressed) • <b>Movies:</b> Motion JPEG AVI
<b>Image size (pixels)</b>	• <b>10M F:</b> 3,648 × 2,736 • <b>10M N:</b> 3,648 × 2,736 • <b>9M 3:2:</b> 3,648 × 2,432 • <b>5M:</b> 2,592 × 1,944 • <b>3M:</b> 2,048 × 1,536 • <b>2M:</b> 1,600 × 1,200 • <b>03M:</b> 640 × 480
<b>File size</b>	See page 85
<b>Lens</b>	3 × optical zoom lens, F/3.1 (wide angle) – 5.6 (telephoto)
<b>Focal length</b>	f=6.3 mm–18.9 mm (35-mm format equivalent: 35.5 mm–106.5 mm)
<b>Digital zoom</b>	Approx. 5.7 × (up to 17.1 × when combined with optical zoom)
<b>Aperture (wide angle)</b>	Two steps
<b>Focus range (distance from front of lens)</b>	Approx. 40 cm (1 ft. 4 in.)–infinity (wide angle/telephoto) Macro mode: approx. 10 cm (4 in.)–80 cm (2 ft. 7 in.) (wide angle); 40 cm (1 ft. 4 in.)–80 cm (2 ft. 7 in.) (telephoto)
<b>Sensitivity</b>	Equivalent to ISO 100, 200, 400, 800, 1600; <b>AUTO</b> (Standard Output Sensitivity)
<b>Metering</b>	Through-the-lens (TTL) metering
<b>Exposure control</b>	Programmed autoexposure
<b>Exposure compensation</b>	–2 EV – +2 EV in increments of ⅓ EV (CAM mode)
<b>Intelligent Face Detection</b>	Available
<b>Scene modes</b>	☺ (BABY MODE), 👤 (PORTRAIT), ▲ (LANDSCAPE), 🏃 (SPORT), 🌙 (NIGHT), 🌿 (NATURAL LIGHT), 🏖️ (BEACH), ❄️ (SNOW), 🎆 (FIREWORKS), 🌅 (SUNSET), 🌸 (FLOWER), 🎉 (PARTY), 🏛️ (MUSEUM), 📄 (TEXT)
<b>Picture stabilization</b>	Available
<b>Shutter speed</b>	¼ s–½,000 s (AUTO mode); 8 s–½,000 s (other modes); combined mechanical and electronic shutter
<b>Continuous shooting</b>	Number of recorded frames: up to 3 frames (approx. 1 frame/sec.)

System	
<b>Focus</b>	<ul style="list-style-type: none"> <li>• <b>Mode:</b> Single AF</li> <li>• <b>Focus-area selection:</b> AF CENTER</li> <li>• <b>Autofocus system:</b> Contrast-detect TTL AF</li> </ul>
<b>White balance</b>	Automatic scene detection; six manual preset modes for direct sunlight, shade, daylight fluorescent, warm white fluorescent, cool white fluorescent, and incandescent lighting
<b>Self-timer</b>	Approx. 2 s and approx. 10 s
<b>Flash</b>	Auto flash; effective range when sensitivity is set to <b>AUTO</b> is approx. 50 cm–3.5 m/1 ft. 8 in.–12 ft. 8 in. (wide angle), 50 cm–2.0 m/1 ft. 8 in.–6 ft. 8 in. (telephoto), or 30 cm–80 cm/1 ft.–2 ft. 8 in. (macro mode)
<b>Flash modes</b>	Auto, red-eye reduction, forced flash, off, slow sync, slow sync with red-eye reduction
<b>Monitor</b>	2.7/3.0-in., 230k-dot low-temperature polysilicon TFT color LCD monitor; frame coverage approx. 96%
<b>Movies</b>	Camera can record movies with monaural sound and a frame size of 640×480 ( <b>640</b> ) or 320×240 ( <b>320</b> ) at a frame rate of 30fps
<b>Shooting options</b>	Intelligent Face Detection and Red-Eye Removal, framing guideline and frame number memory
<b>Playback options</b>	Intelligent Face Detection and Red-Eye Removal, Micro Thumbnail, multi-frame playback, sort-by-date (line view), cropping (still pictures only), slide show, and image rotation
<b>Other options</b>	PictBridge, Exif Print, language selection (Simplified Chinese, Traditional Chinese, Czech, Dutch, English, French, German, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Swedish, Thai, and Turkish), time difference, discharge option for rechargeable Ni-MH batteries, Silent mode
Input/output terminals	
<b>A/V OUT</b> (audio/video output)	NTSC or PAL with monaural sound
<b>Digital input/output</b>	USB 2.0 High Speed with MTP/PTP connection

<b>Power supply/other</b>	
<b>Power sources</b>	<ul style="list-style-type: none"><li>• AA alkaline batteries (x2)</li><li>• AA rechargeable nickel-metal hydride (Ni-MH) batteries (x2; sold separately)</li><li>• AA lithium batteries (x2)</li></ul>
<b>Battery life</b>	Approx. 150 frames (alkaline batteries of the type supplied with the camera), 600 frames (lithium batteries), or 450 frames (2,700 mAh Ni-MH batteries), based on CIPA (Camera and Imaging Products Association) standard; measured at 23°C (73°F) with the monitor on, pictures recorded to an SD memory card, the camera zoomed from widest angle to maximum zoom and back once every 30s, the flash fired at full power with every other shot, and the camera turned off and then on again every 10 shots. Note that the number of shots that can be taken varies with battery make and charge state, temperature, and shooting conditions.
<b>Camera dimensions</b>	91.5 mm x 60.5 mm x 21.7 mm/3.6 in. x 2.4 in. x 0.9 in. (W x H x D), excluding battery and accessories
<b>Camera weight</b>	Approx. 124 g/4.3 oz. (A100), 130 g/4.5 oz. (A150), excluding battery, accessories, and memory cards
<b>Shooting weight</b>	Approx. 172 g/6 oz. (A100), 177 g/6.2 oz. (A150), including battery and memory card
<b>Operating conditions</b>	<ul style="list-style-type: none"><li>• <b>Temperature:</b> 0°C – +40°C/+32°F – +104°F</li><li>• <b>Humidity:</b> 10%–80% (no condensation)</li></ul>

## Color Television Systems

NTSC (National Television System Committee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (Phase Alternation by Line) is a color television system adopted mainly in European countries and China.

## Notices

- Specifications subject to change without notice. FUJIFILM shall not be held liable for damages resulting from errors in this manual.
- Although the monitor is manufactured using advanced high-precision technology, small bright points and anomalous colors (particularly in the vicinity of text) may appear. This is normal for this type of monitor and does not indicate a malfunction; images recorded with the camera are unaffected.
- Digital cameras may malfunction when exposed to strong radio interference (e.g., electric fields, static electricity, or line noise).
- Due to the type of lens used, some distortion may occur at the periphery of images. This is normal.

## IMPORTANT NOTICE: Read Before Using the Software

BEFORE OPENING THE CD-ROM PROVIDED BY FUJIFILM CORPORATION, PLEASE READ THIS END USER LICENSE AGREEMENT CAREFULLY. YOU SHOULD USE THE SOFTWARE ON THE CD-ROM ONLY IF YOU CONSENT TO THIS AGREEMENT. BY OPENING THE PACKAGE, YOU ACCEPT AND AGREE TO BE BOUND BY THIS AGREEMENT.

### End User License Agreement

This End User License Agreement ("Agreement") is an agreement between FUJIFILM Corporation ("FUJIFILM") and you, which sets forth the terms and conditions of the license granted for you to use the software provided by FUJIFILM.

The CD-ROM contains third-party software. In case a separate agreement is provided by a third party supplier for its software, the provisions of such separate agreement shall apply to the use of such third party software, prevailing over those of this Agreement.

#### 1. Definitions.

- (a) "Media" means the CD-ROM titled "Software for FinePix" which is provided to you together with this Agreement.
- (b) "Software" means the software which is recorded on Media.
- (c) "Documentation" means the operation manuals of Software and other related written materials which are provided to you together with Media.
- (d) "Product" means Media (including Software) and Documentation collectively.

#### 2. Use of Software.

FUJIFILM grants to you a nontransferable, nonexclusive license:

- (a) to install one copy of Software onto one computer in binary machine executable form;
- (b) to use Software on the computer onto which Software is installed; and
- (c) to make one backup copy of Software.

#### 3. Restrictions.

- 3.1 You shall not distribute, rent, lease or otherwise transfer all or any part of Software, Media or Documentation to any third party without FUJIFILM's prior written consent. You also shall not sublicense, assign or otherwise transfer all or any part of the rights granted to you by FUJIFILM under this Agreement without FUJIFILM's prior written consent.
- 3.2 Except as expressly granted by FUJIFILM hereunder, you shall not copy or reproduce all or any part of Software or Documentation.
- 3.3 You shall not modify, adapt or translate Software or Documentation. You also shall not alter or remove copyright and other proprietary notices that appear on or in Software or Documentation.
- 3.4 You shall not, or shall not have any third party, reverse-engineer, decompile, or disassemble Software.

#### 4. Ownership.

All copyrights and other proprietary rights to Software and Documentation are owned and retained by FUJIFILM or the third party suppliers as indicated on or in Software or Documentation. Nothing contained herein shall be construed, expressly or implicitly, as transferring or granting any right, license, or title to you other than those explicitly granted under this Agreement.

#### 5. Limited Warranty.

FUJIFILM warrants to you that Media is free from any defect in material and workmanship under normal use for ninety (90) days from the date of your receipt of Media. Should Media not meet the foregoing warranty, FUJIFILM shall replace such defective Media with other Media bearing no defect. FUJIFILM's entire liability and your sole and exclusive remedy with regard to any defect in Media shall be expressly limited to such FUJIFILM's replacement of Media as provided herein.

#### 6. DISCLAIMER OF WARRANTY.

EXCEPT AS PROVIDED IN SECTION 5 HEREIN, FUJIFILM PROVIDES PRODUCT "AS IS" AND WITHOUT WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED. FUJIFILM SHALL MAKE NO WARRANTY, EXPRESS, IMPLIED OR STATUTORY, AS TO ANY OTHER MATTERS, INCLUDING, BUT NOT LIMITED TO NON-INFRINGEMENT OF ANY COPYRIGHT, PATENT, TRADE SECRET, OR ANY OTHER PROPRIETARY RIGHTS OF ANY THIRD PARTY, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE.

#### 7. LIMITATION OF LIABILITY.

IN NO EVENT SHALL FUJIFILM HAVE ANY LIABILITY FOR ANY GENERAL, SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL, INCIDENTAL, OR OTHER DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS OR LOST SAVINGS) INCURRED FROM THE USE OF OR INABILITY TO USE PRODUCT EVEN IF FUJIFILM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### 8. No export.

You acknowledge that neither Software nor any part thereof, will be transferred, or exported to any country or used in any manner in violation of any export control laws and regulations to which Software is subject.

#### 9. Termination.

In case you breach any of the terms and conditions hereof, FUJIFILM may immediately terminate this Agreement without any notice.

#### 10. Term.

This Agreement is effective until the date when you cease to use Software, unless earlier terminated in accordance with Section 9 hereof.

#### 11. Obligation upon termination.

Upon termination or expiration of this Agreement, you shall, at your own responsibility and expense, delete or destroy immediately all Software (including its copies, Media and Documentation).

#### 12. Governing Law.

This Agreement shall be governed by and construed in accordance with laws of Japan.

# FUJIFILM

FUJIFILM Corporation

7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN

[http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html)