

INTRODUCTION

Before using the light, please read this manual and the attached "NiMh Batteries" thoroughly, and keep them for future reference.

N FOR SAFE OPERATION

- Do not place it within children's reach.
- In preparation for unexpected battery shutoff, we recommend you carry a spare
- If the light unit or parts become dirty with mud, etc., clean with a soft cloth which is moistened with mild soap. Never apply paint thinner, benzine or alcohol; damage will result.
- Mount the light unit more than 10 cm away from the wireless meter. When it is mounted too close, the transmission may be affected adversely.
- This product has waterproof features that allow you to use it in light rain. Do not use it in heavy rain.
- . Operate the switch after you stop your bicycle.

Before Initial Use

The rechargeable battery supplied is charged enough to check the light. Be sure to install it to the light and charge it before use, according to the instructions "How to

COMPONENTS



Light unit







FlexTight™ bracket (H-34N)

Rechargeable hattery x 2

Battery charger (Various forms according to the specifications)

HOW TO INSTALL BATTERY

In place of rechargeable batteries, AA batteries can be used for this light.

- Slide the cover backward, while pressing down the dot section on the top of the unit.
- Replace batteries according to the marks on the unit, and replace the cover

How to remove batteries Dot section

CAUTIONIO

 
- Do not use a dry battery (primary battery) together with a rechargeable battery. Do not use a new battery in combination with an old battery.
- · Be sure to install batteries in the correct direction.
- Remove and store batteries when you will not use the light for a long period of time. Otherwise, batteries may leak liquid, which may result in failure.

HOW TO MOUNT

- Wind the bracket strap around the handlebar, and put the strap through the opening.
- Screw the dial into the bracket to secure it temporarily. * Insert the light unit to the bracket until it clicks, and adjust the beam angle. (Refer to "HOW TO MOUNT THE LIGHT")
- 3 Securely tighten the dial, and cut off any excess bracket strap.
- To remove the light unit, pull out it forward while pressing the button.
- To re-adjust the beam angle, loosen the dial enough to move the bracket, and securely tighten it after adjustment.


CAUTION!:

- Be sure to tighten the dial by hand. When you tighten it too hard with a tool, the screw thread may be
- Check the dial and screw (*1) on the bracket periodically, and use them without any loosening.
- Round off the cut edge of the bracket strap to prevent iniury.





HOW TO MOUNT THE LIGHT

 




HOW TO USE

1 Lighting (switching the lighting mode)

The ON/OFF and lighting modes are selected using a switch.

Switch	Standard continuous lighting time
ON ↔ OFF : Long press	Hi : Approx. 9 hours
Hi ↔ Low : Single press	Low : Approx. 20 hours
Flash : Quick double press	Flash : Approx. 80 hours

*2 When returning from Flash to ON (Hi or Low), it returns to the ON mode used previously

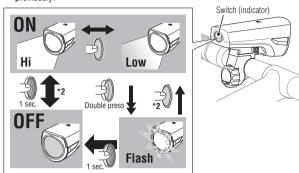

Remaining battery capacity

When the switch (indicator) lights up, the remaining battery level is low. Charge or replace the battery as soon as possible.

2 How to charge

DANGER!!:

- · Do not to charge when dry batteries are installed.
- Be sure to use CatEve rechargeable battery and battery charger. The battery charger is indoor use only.
- Commercially available rechargeable batteries should be charged with a compatible battery charger.
- Open the charge lack cover at the back of the light unit to connect the battery charger plug.
- 2 Plug the battery charger to an AC outlet.

When the switch (indicator) lights up, charging starts.

- When the switch flashes, it indicates a charge error. Disconnect the plug, and reconnect it.
- 3 When the switch lights off, charging is completed. Remove the plug, and close the charge jack cover.

Switch (indicator) state	Standard charging time
ON : Charging OFF : Charging is completed Flash : Charge error	Approx. 9 hours

Charging and lighting times are approximate values, and will vary by environmental and user conditions

SPARE PARTS



5338827N FlexTiaht™ bracket









Charge jack cover

5341890

Special nickel-hydride rechargeable battery x 2 (Ni-MH 2.2Ah GP220AAH)

To AC power outlet

Battery charger

SPECIFICATIONS

OI EUII IUMIIUIU		
Light source		
	.AA Ni-MH 2.2Ah (GP220AAH) rechargeable battery x 2, or AA alkaline battery x 2	
	.CHA-2.2AH-2.4V (Only the rechargeable batteries supplied can be used.)	
	.Hi: Approx. 9 hours (Approx. 7 hours), Low: Approx. 20 hours (Approx. 20	
	hours), Flash : Approx. 80 hours (Approx. 100 hours)	
Standard charging time	Approx. 9 hours	
Temperature range		
	Operating: 14°F - 104°F (-10°C - 40°C)	
Recharge/discharge number of times	About 300 times (until the rated canacity drops to 50%)	

LIMITED WARRANTY

2-year Warranty: Light unit / Battery charger

2-year Warranty: Light unit / Battery charger
(Deterioration of the battery is excluded.)

CatEye products are warranted to be free of defects from materials
2-8-25, Kuwazu, Higashi
and workmarship for a period of 2 years from original purchase. If the
product fails to work during normal use, CatEye will legair or replace
the defect at no charge. Service must be performed by CatEye or an Attr. CATEYE Customer Service
authorized relation. To refurn the product, pack licarefully and enclose Phone : (06)6719-6863
the warranty certificate (proof of purchase) with instruction for repair. Fax
: (06)6719-6863
errificate (proof of purchase) with instruction for repair. Fax
: (06)6719-6863
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase) with instruction for repair. Fax
: (10)6719-6803
in the warranty certificate (proof of purchase)
: (10)6719-6803
in the warranty certificate (proof of purchase)
: (10)6719-6803
in the warranty certificate (proof of purchase)
: (10)6719-6803 shall be borne by person desiring service. For UK and REPUBLIC OF IRELAND consumers, please return to the place of purcha not affect your statutory rights.

CAT EYE CO., LTD.

[For US Customers] CATEYE AMERICA, INC.

1200, Boulder C080301-5494 USA . 303 443 4505