



Spare parts for:
Laundry machines



Switches

- Change over switch
- Button
- Push switch
- Keyboards



This catalogue is automatically generated.
Therefore, the sequence of the items might
not be always shown at best.
Updates will be issued in case of additions
and/or amendments.





Suitable for:

3319476 SELF-STICK LABEL FOR EMERGENCY PUSH-BUT



AGA A504/E/01E

3319639 PUSH-BUTTON COVER

for Dryer (IMESA) ES5EGC - ES5EGE - ES5EIC
ES5EIE
for Dryer (PRIMUS) DAM5
for Dryer (WHIRLPOOL) AGB204/WP - AGB205/WP
AGB206/WP - AGB207/WP - SACE5 - SE5GC - SE5GE
SE5IC - SE5IE
for Washing machine (IMESA) LM5EGDP - LM5EGDV
LM5EIDP - LM5EIDV
for Washing machine (PRIMUS) PW5
for Washing machine (WHIRLPOOL) AGB200/WP
AGB201/WP - AGB202/WP - AGB203/WP - WACS5
WACS5M - WES5GP - WES5GV - WES5IP - WES5IV



ASKO 8061950-69

IMESA ASK8061950-69

PRIMUS 8061950-69

WHIRLPOOL 483286009905

3319593 SWITCH 4591 W2 - START/STOP - 6 FASTONS

for Dryer (ASKO) TDC44
for Dryer (IMESA) ES5EGC - ES5EGE - ES5EIC
ES5EIE
for Dryer (PRIMUS) DAM5
for Dryer (WHIRLPOOL) AGB204/WP - AGB205/WP
AGB206/WP - AGB207/WP - SACE5 - SE5GC - SE5GE
SE5IC - SE5IE
for Washing machine (IMESA) LM5EGDP - LM5EGDV
LM5EIDP - LM5EIDV
for Washing machine (PRIMUS) PW5
for Washing machine (WHIRLPOOL) AGB200/WP
AGB201/WP - AGB202/WP - WACS5 - WACS5M
WES5GP - WES5GV - WES5IP



ASKO 8061875

GRANDIMPIANTI 36ASK8061875

IMESA ASK8061875

PRIMUS 8061875

WHIRLPOOL 483286009926

WHIRLPOOL 747010

WHIRLPOOL 771985008632

Switches



Suitable for:

5036674 SINGLE POLE PUSH-BUTTON GREEN 16A 250V

 
mounting hole 22x26 mm
for Dryer (AGA) E12 - E18 - E26 - E35



AGA A533/VL/01

3319600 PUSH-BUTTON SPRING

for Dryer (ASKO) TDC44
for Dryer (IMESA) ES5EGC - ES5EGE - ES5EIC
ES5EIE
for Dryer (PRIMUS) DAM5
for Dryer (WHIRLPOOL) AGB204/WP - AGB205/WP
AGB206/WP - AGB207/WP - SACE5 - SE5GC - SE5GE
SE5IE
for Washing machine (ASKO) WMC55
for Washing machine (IMESA) LM5EGDP - LM5EGDV
LM5EIDP - LM5EIDV
for Washing machine (PRIMUS) PW5
for Washing machine (WHIRLPOOL) AGB200/WP
AGB201/WP - AGB202/WP - AGB203/WP - WACS5
WACS5M - WES5GP - WES5GV - WES5IP - WES5IV

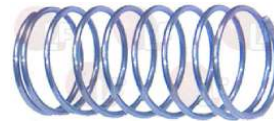

ASKO 8061857

IMESA ASK8061857

PRIMUS 8061857

WHIRLPOOL 483286009908

3319639 PUSH-BUTTON COVER

for Dryer (IMESA) ES5EGC - ES5EGE - ES5EIC
ES5EIE
for Dryer (PRIMUS) DAM5
for Dryer (WHIRLPOOL) AGB204/WP - AGB205/WP
AGB206/WP - AGB207/WP - SACE5 - SE5GC - SE5GE
SE5IC - SE5IE
for Washing machine (IMESA) LM5EGDP - LM5EGDV
LM5EIDP - LM5EIDV
for Washing machine (PRIMUS) PW5
for Washing machine (WHIRLPOOL) AGB200/WP
AGB201/WP - AGB202/WP - AGB203/WP - WACS5
WACS5M - WES5GP - WES5GV - WES5IP - WES5IV



ASKO 8061950-69

IMESA ASK8061950-69

PRIMUS 8061950-69

WHIRLPOOL 483286009905



Suitable for:

3319599 PUSH-BUTTON LAMP

for Dryer (ASKO) TDC44
 for Dryer (IMESA) ES5 - ES5EGC - ES5EGE - ES5EIC
 ES5EIE
 for Dryer (PRIMUS) DAM5
 for Dryer (WHIRLPOOL) AGB204 - AGB204/WP - AGB205
 AGB205/WP - AGB206 - AGB206/WP - AGB207
 AGB207/WP - SECE5 - SE5GC - SE5GE - SE5IC
 SE5IE
 for Washing machine (ASKO) WMC55
 for Washing machine (IMESA) LM5 - LM5EGDP
 LM5EGDV - LM5EIDP - LM5EIDV
 for Washing machine (PRIMUS) PW5
 for Washing machine (WHIRLPOOL) AGB200 - AGB200/WP
 AGB201 - AGB201/WP - AGB202 - AGB202/WP
 AGB203 - AGB203/WP - WACS5 - WACS5M - WES5GP



ASKO 8064069
 PRIMUS 8064069

GRANDIMPIANTI 36ASK8064069
 WHIRLPOOL 483286000304

IMESA ASK8064069

3319600 PUSH-BUTTON SPRING

for Dryer (ASKO) TDC44
 for Dryer (IMESA) ES5EGC - ES5EGE - ES5EIC
 ES5EIE
 for Dryer (PRIMUS) DAM5
 for Dryer (WHIRLPOOL) AGB204/WP - AGB205/WP
 AGB206/WP - AGB207/WP - SACE5 - SE5GC - SE5GE
 SE5IE
 for Washing machine (ASKO) WMC55
 for Washing machine (IMESA) LM5EGDP - LM5EGDV
 LM5EIDP - LM5EIDV
 for Washing machine (PRIMUS) PW5
 for Washing machine (WHIRLPOOL) AGB200/WP
 AGB201/WP - AGB202/WP - AGB203/WP - WACS5
 WACS5M - WES5GP - WES5GV - WES5IP - WES5IV



ASKO 8061857
 WHIRLPOOL 483286009908

IMESA ASK8061857

PRIMUS 8061857

3319642 SWITCH CASE

for Dryer (PRIMUS) T24
 for Washing machine (GRANDIMPIANTI) AS26 - AS33
 AS44 - AS66 - WFP120
 for Washing machine (PRIMUS) FS16 - MB26 - MB33
 MB44 - MB66
 for Washing machine (WHIRLPOOL) WACS28AE
 WACS28AV - WACS35AE - WACS35AV - WACS46AE
 WACS46AV - WACS70AE - WACS70AV



DANUBE ELEINT0012

PRIMUS 102260

Switches

Suitable for:

3319638 PUSH-BUTTON LAMP RED LENS

for Dryer (ASKO) TDC44
 for Dryer (IMESA) ES5 - ES5EGC - ES5EGE - ES5EIC
 ES5EIE
 for Dryer (PRIMUS) DAM5
 for Dryer (WHIRLPOOL) AGB204 - AGB204/WP - AGB205
 AGB205/WP - AGB206 - AGB206/WP - AGB207
 AGB207/WP - SACE5 - SE5GC - SE5GE - SE5IC
 SE5IE
 for Washing machine (ASKO) WMC55
 for Washing machine (IMESA) LM5 - LM5EGDP
 LM5EGDV - LM5EIDP - LM5EIDV
 for Washing machine (PRIMUS) PW5
 for Washing machine (WHIRLPOOL) AGB200 - AGB200/WP
 AGB201 - AGB201/WP - AGB202 - AGB202/WP
 AGB203 - AGB203/WP - WACS5 - WACS5M - WES5GP



ASKO 8061822
 PRIMUS 8061822

GRANDIMPIANTI 36ASK8061822
 WHIRLPOOL 483286009906

IMESA ASK8061822

3319636 RECTANGULAR CAP

mounting hole 34x24 mm
 for Dryer (ASKO) ES5 - TDC44
 for Washing machine (ASKO) WMC55
 for Washing machine (IMESA) LM5



3319437 5 BUTTONS PANEL 16A 250V

5 switches
 for Washing machine (DANUBE) GF11 - GF15 - GF8
 for Washing machine (GRANDIMPIANTI) WFC11 - WFC18
 WFC8
 for Washing machine (IPSO) HF110 - HF132 - HF145
 HF165 - HF176 - HF205 - HF234 - WE110 - WE132
 WE165 - WE176 - WE234 - WE55 - WE73 - WE95



DANUBE 422090017500

GRANDIMPIANTI 422090017500

IPSO 209/00175/00





Suitable for:

3319435 4 BUTTONS PANEL 16A 250V
3 switches - 1 button
for Washing machine (GIRBAU) HS2007 - HS2012
LS320



GIRBAU 262253

Switches



Suitable for:

3319159 GREEN BIPOLAR CHANGE OVER SWITCH 250V
with green indicator lamp 250V
"3 - 5" symbol screenprinted
contact capacity 16(8)A 250V
mounting hole 22x30 mm



GRANDIMPIANTI 50GI851144

3319158 GREEN MOMENTARY CHANGE OVER SWITCH 250V
with green indicator lamp 250V
contact capacity 16(8)A 250V
mounting hole 22x30 mm



GRANDIMPIANTI 50GI851145

5009287 PUSH-BUTTON PANEL 6 BUTTONS
for WASHING MACHINE PRIMUS WACS8-FS6-FS7-FS10-W10



GRANDIMPIANTI 4PR348011091

PRIMUS PRI348011091

3319156 RED MOMENTARY CHANGE OVER SWITCH 0-1 250V
with red indicator lamp 250V
"0 - 1" symbol screenprinted
contact capacity 16(8)A 250V
mounting hole 22x30 mm



GRANDIMPIANTI 50GI851146

5022852 SWITCH 32A 690V SCHNEIDER V1
for Washing machine (GRANDIMPIANTI) WFM33 - WFM40
WFM55



GRANDIMPIANTI 50GI851165

3319157 YELLOW MOMENTARY SWITCH 250V
with indicator lamp
mounting hole 22x30 mm



GRANDIMPIANTI 50GI851143

3319099 6-BUTTON SWITCH BLOCK
5 black and 1 red buttons
for Washing machine (GRANDIMPIANTI) - Series WM
WMC11 - WMC17 - WMC23 - WMC30 - WMC8



GRANDIMPIANTI 50GI851037



Switches



Suitable for:

Suitable for:

3319660 DIAPHRAGM KEYBOARD IM6

for Washing machine (IMESA) LM11 - LM14 - LM18
LM23 - LM6 - LM8 - RC11 - RC14 - RC18 - RC23
RC8
for Washing machine (WHIRLPOOL) AGB208 - AGB208/WP
AGB209 - AGB209/WP - AGB210 - AGB210/WP
AGB211 - AGB211/WP - AGB212 - AGB212/WP
AGB213 - AGB214 - AGB214/WP - AGB215
AGB215/WP - AGB216 - AGB216/WP - AGB217
AGB217/WP - AGB218 - AGB218/WP - AGB230/WP
AGB231/WP - AGB232/WP - AGB233/WP - AGB234/WP
AGB235/WP - AGB236 - AGB237 - AGB238 - AGB239
AGB240 - AGB240/WP - AGB241 - AGB241/WP
AGB242 - AGB243 - AGB244 - AGB245 - AGB246
AGB247 - AGB248 - AGB249 - AGB250 - AGB251
AGB252 - AGB253 - AGB254



IMESA 4020502A

IMESA 4020502X

WHIRLPOOL 483286008261

3319662 DIAPHRAGM KEYBOARD IM9

for Washing machine (IMESA) LM11 - LM14 - LM18
LM23 - LM6 - LM8 - RC11 - RC14 - RC18 - RC23
RC8
for Washing machine (WHIRLPOOL) AGB208/WP
AGB209/WP - AGB210/WP - AGB211/WP - AGB212/WP
AGB213 - AGB214/WP - AGB215/WP - AGB216/WP
AGB217/WP - AGB218/WP - AGB230 - AGB231
AGB232 - AGB233/WP - AGB234/WP - AGB235/WP
AGB236/WP - AGB237/WP - AGB238/WP - AGB239
AGB240/WP - AGB241/WP - AGB242 - AGB243
AGB244 - AGB245



IMESA 4020503B

WHIRLPOOL 483286008262

3319595 FORWARD/BACKWARD ROTARY SELECTOR SWITCH

red/yellow



IMESA

WHIRLPOOL 483286009535

3241852 KNOB

ON/OFF - 66x66 mm
for Washing machine (IMESA) LM11 - LM14 - LM18
LM23 - LM6 - LM8
for Washing machine (WHIRLPOOL) AGB230/WP
AGB231/WP - AGB232/WP - AGB233/WP - AGB234/WP
AGB235/WP - AGB236/WP - AGB237/WP - AGB238/WP
AGB239/WP - AGB240/WP - AGB241/WP - WES11MP
WES11ST - WES14ST - WES18MP - WES18ST - WES6MP
WES6ST - WES8MP - WES8ST



IMESA 2950SEZOH136

WHIRLPOOL 483286008412

3319680 RED EMERGENCY PUSH-BUTTON

for Washing machine (IMESA) LM11 - LM14 - LM18
LM23 - LM6 - LM8 - RC11 - RC14 - RC18 - RC23
RC8
for Washing machine (WHIRLPOOL) AGB208/WP
AGB209/WP - AGB211/WP - AGB212/WP - AGB213
AGB214/WP - AGB217/WP - AGB218/WP - AGB230/WP
AGB231/WP - AGB232/WP - AGB234/WP - AGB235/WP
AGB236/WP - AGB237/WP - AGB238/WP - AGB239/WP
AGB240/WP - AGB241/WP



IMESA K2950PULEM248_01

IMESA 2950PULEM248

WHIRLPOOL 483286008247

3454029 CONTACTOR MCB-01

for emergency stop



IMESA 2950PULEM494

WHIRLPOOL 483286008248

WHIRLPOOL 483286008595



Suitable for:

Switches



5050990 PUSH-BUTTON-SPST NO
mounting hole 27x13 mm
for Dryer (IPSO) DR25-30



IPSO TU20645

IPSO 70107001

Suitable for:

3319592 POWER SWITCH 3 KEYS
for Washing machine (MIELE) PW51 - PW61
for Washing machine (WHIRLPOOL) WS5425 - WS5426



MIELE 3579651

MIELE 3579655

WHIRLPOOL 745283

WHIRLPOOL 771985008037

5035624 PUSH-BUTTON PANEL 10A 250V
for Dryer (MIELE) T5236/1158680



MIELE 3513841

7104459 BIPOLAR REVERSING SWITCH
for DRIER PRIMUS T24



PRIMUS 100388

5054351 BIPOLAR SWITCH
mounting hole 14x28 mm
for DRIER PRIMUS T9-11-13



PRIMUS 506045

3319640 DOOR OPENING SWITCH
for Washing machine (PRIMUS) P5
for Washing machine (WHIRLPOOL) LWS51M



PRIMUS BLO0001726500

WHIRLPOOL 746618

WHIRLPOOL 771985008491

3319641 SWITCH KNOB
for Washing machine (PRIMUS) P5
for Washing machine (WHIRLPOOL) LWS51M



PRIMUS BLO0003851200

PRIMUS BLO0003851203

WHIRLPOOL 746617

WHIRLPOOL 771985008490

5048146 FULL CONTROL KEYBOARD GRAPHITRONIC
for Washing machine (PRIMUS) FS16 - FS23 - FS33
FS40 - FS55



PRIMUS 520681

3319718 KEY BOARD EASY CONTROL



PRIMUS PRI348000123

WHIRLPOOL



Switches



Suitable for:

Suitable for:

3319591 PUSH-BUTTON KNOB
 for Washing machine (PRIMUS) P5
 for Washing machine (WHIRLPOOL) LWS51M



PRIMUS BLO0003852203

WHIRLPOOL 746623

WHIRLPOOL 771985008496

3319590 PUSH-BUTTON PANEL 6 BUTTONS
 for Washing machine (PRIMUS) P5
 for Washing machine (WHIRLPOOL) LWS51M




PRIMUS BLO0001725800

WHIRLPOOL 746611

WHIRLPOOL 771985008484

 3319591 PUSH-BUTTON KNOB
 for Washing machine (PRIMUS) P5
 for Washing machine (WHIRLPOOL) LWS51M

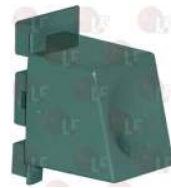

PRIMUS BLO0003852203

WHIRLPOOL 746623

WHIRLPOOL 771985008496

3319597 SEALING CAP
 for switch
 for Washing machine (PRIMUS) P6 - P7
 for Washing machine (WHIRLPOOL) WACS6 - WACS7



PRIMUS PRI543000003

WHIRLPOOL 746809

WHIRLPOOL 771985008583

3319598 START POWER SWITCH
 for Dryer (PRIMUS) DAM9 - DA9
 for Dryer (WHIRLPOOL) SACE8
 for Washing machine (PRIMUS) P5




PRIMUS RSP55882

WHIRLPOOL 722002

WHIRLPOOL 771985007831

 3319596 START/STOP SWITCH - 4 FASTON
 for Washing machine (PRIMUS) P6 - P7
 for Washing machine (WHIRLPOOL) WACS6 - WACS7

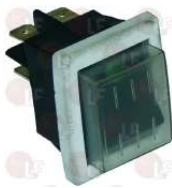

PRIMUS 100195

WHIRLPOOL 746806

WHIRLPOOL 771985008580

3319597 SEALING CAP
 for switch
 for Washing machine (PRIMUS) P6 - P7
 for Washing machine (WHIRLPOOL) WACS6 - WACS7



PRIMUS PRI543000003

WHIRLPOOL 746809

WHIRLPOOL 771985008583



Suitable for:

Switches



5041498 STOP BUTTON

for WASHING MACHINE GRANDIMPIANTI WFP120-AS26-AS33-AS44-AS66
for WASHING MACHINE PRIMUS MB26-MB33-MB44-MB66-FS16
for WHIRLPOOL WASHING MACHINE WACS28AE-WACS28AV-WACS35AE-WACS35AV-WACS46AE-WACS46AV-WACS70AE-WACS70AV
for DRIER PRIMUS T24



PRIMUS 102259

WHIRLPOOL

3319642 SWITCH CASE

for Dryer (PRIMUS) T24
for Washing machine (GRANDIMPIANTI) AS26 - AS33-AS44 - AS66 - WFP120
for Washing machine (PRIMUS) FS16 - MB26 - MB33-MB44 - MB66
for Washing machine (WHIRLPOOL) WACS28AE WACS28AV - WACS35AE - WACS35AV - WACS46AE WACS46AV - WACS70AE - WACS70AV



DANUBE ELEINT0012

PRIMUS 102260

3319641 SWITCH KNOB

for Washing machine (PRIMUS) P5
for Washing machine (WHIRLPOOL) LWS51M



PRIMUS BLO0003851200

PRIMUS BLO0003851203

WHIRLPOOL 746617

WHIRLPOOL 771985008490

5041503 WHITE BUTTON SWITCH 40x14 mm

snap-in
16A 3/4HP 125/250VAC
for DRIER PRIMUS SWE140-D14



PRIMUS RSPM406103

WHIRLPOOL 771985007817

3319119 LEVER CHANGE OVER SWITCH 250V

for Dryer (SOCOLMATIC) J15 - J20
for Washing machine (SOCOLMATIC) C15 - C20 - C30 C7



SOCOLMATIC A34

3319120 LEVER CHANGE OVER SWITCH 250V

for Washing machine (SOCOLMATIC) C15 - C20 - C30 C7



SOCOLMATIC A40

3319118 SWITCH WITH RED BUTTON

for Dryer (SOCOLMATIC) E12 - E20 - E25
for Washing machine (SOCOLMATIC) C15 - C20 - C30 C7



SOCOLMATIC A35