

# Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

**WARNING!** *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than  $-4^{\circ}\text{F}$  or greater than  $122^{\circ}\text{F}$ .
4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.
7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

# Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.

4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.
4. Store the battery out of reach of children.



5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

# Table of Contents

|                                 |    |                                     |    |
|---------------------------------|----|-------------------------------------|----|
| Important Safety Precautions    | 1  | Turning the Phone On                | 19 |
| Table of Contents               | 4  | Turning the Phone Off               | 19 |
| Welcome                         | 9  | Signal Strength                     | 19 |
| Technical Details               | 10 | Screen Icons                        | 20 |
| Phone Overview                  | 13 | Making Calls                        | 20 |
| Menus Overview                  | 15 | Correcting Dialing Mistakes         | 20 |
| Getting Started with Your Phone | 18 | Redialing Calls                     | 21 |
| The Battery                     | 18 | Receiving Calls                     | 21 |
| Installing the Battery          | 18 | Quick Access to Convenient Features | 22 |
| Removing the Battery            | 18 | Lock Mode                           | 22 |
| Charging the Battery            | 18 | Mute Function                       | 22 |
| Battery Charge Level            | 19 | Volume Quick Adjustment             | 22 |
| Turning the Phone On and Off    | 19 | Call Waiting                        | 22 |
|                                 |    | Caller ID                           | 23 |
|                                 |    | Speed Dialing                       | 23 |
|                                 |    | Web                                 | 24 |
|                                 |    | Using Phone Menus                   | 24 |

*Some of content in this user guide may be different from your phone depending on the software of the phone or your service provider. Features and specifications might be subject to change without prior notice.*

|                         |           |                      |           |
|-------------------------|-----------|----------------------|-----------|
| <b>Ringers</b>          | <b>25</b> | Memory Card          | 31        |
| 1. Downloaded Ringtones | 25        | Memory Status        | 33        |
| 2. Ringer Type          | 26        | <b>Camera</b>        | <b>33</b> |
| 2.1 Incoming Calls      | 26        | 1. Camera            | 34        |
| 2.2 Messages            | 26        | 2. Camcorder         | 35        |
| 3. Volume               | 26        | 3. Photo Album       | 37        |
| 4. Caller Ringtones     | 27        | 4. Pic/Video Message | 38        |
| <b>Entertainment</b>    | <b>27</b> | 5. Print             | 38        |
| 1. Media Player         | 27        | 6. Settings & Info   | 38        |
| 2. Music                | 28        | <b>Messaging</b>     | <b>39</b> |
| 3. Games                | 28        | 1. Send Message      | 40        |
| <b>Calls</b>            | <b>28</b> | 2. Text Message      | 41        |
| <b>Missed Alerts</b>    | <b>28</b> | 3. Mobile email      | 43        |
| <b>My Downloads</b>     | <b>29</b> | 4. Instant Messaging | 43        |
| Application Manager     | 29        | 5. Personal email    | 43        |
| Tools                   | 30        | 6. Pic/Video Message | 43        |
| Ringers                 | 30        | 7. WebAlerts         | 43        |
| Screen Savers           | 30        | 8. Voicemail         | 43        |
| Games                   | 30        | 9. Settings          | 43        |
|                         |           | 9.1 Notification     | 44        |

# Table of Contents

|                      |           |                                |           |
|----------------------|-----------|--------------------------------|-----------|
| 9.2 Callback Number  | 44        | 2.4 Alerts                     | 52        |
| 9.3 Signature        | 44        | 2.5 Keytones                   | 52        |
| 9.4 Quick Messages   | 44        | <b>3. Airplane/Music Mode</b>  | <b>53</b> |
| 9.5 Edit Voicemail # | 45        | <b>4. Text Entry</b>           | <b>53</b> |
| 9.6 WebAlerts        | 45        | 4.1 Auto-Capital (On/ Off)     | 53        |
| <hr/>                |           | 4.2 Auto-Space (On/ Off)       | 53        |
| <b>Contacts</b>      | <b>45</b> | 4.3 Word Choice List (On/ Off) | 53        |
| 1. New Contact       | 46        | 4.4 Word Prediction (On/ Off)  | 53        |
| 2. New Group         | 47        | 4.5 Word Completion (On/ Off)  | 54        |
| <hr/>                |           | 4.6 Use My Words (On/ Off)     | 54        |
| <b>Settings</b>      | <b>47</b> | 4.7 My Words                   | 54        |
| 1. Display           | 48        | 4.8 Help                       | 54        |
| 1.1 Main Screen      | 48        | <b>5. TTY</b>                  | <b>54</b> |
| 1.2 Outer Screen     | 49        | <b>6. Call Setup</b>           | <b>54</b> |
| 1.3 Font Size        | 50        | 6.1 Auto-Answer                | 54        |
| 1.4 Keypad Light     | 50        | 6.2 Abbreviated Dialing        | 55        |
| 1.5 Time Format      | 50        | 6.3 Call Answer                | 55        |
| 1.6 Language         | 50        | 6.4 Contacts Match             | 55        |
| 1.7 Status Light     | 50        | <b>7. Headset Mode</b>         | <b>55</b> |
| 1.8 Phone Interface  | 51        | <b>8. Location</b>             | <b>55</b> |
| <b>2. Sounds</b>     | <b>51</b> | <b>9. Restrict and Lock</b>    | <b>56</b> |
| 2.1 Volume           | 51        | 9.1 Restrict Voice             | 56        |
| 2.2 Ringer Type      | 51        | 9.2 Lock Pictures              | 56        |
| 2.3 Vibrate Type     | 52        |                                |           |

|                          |           |                               |           |
|--------------------------|-----------|-------------------------------|-----------|
| 9.3 Lock My Phone        | 56        | <b>6. Memory Card Manager</b> | <b>66</b> |
| <b>0. Roaming</b>        | <b>57</b> | <b>7. More...</b>             | <b>66</b> |
| 0.1 Set Mode             | 57        | 7.1 Voice Control             | 66        |
| 0.2 Update PRL           | 57        | 7.2 World Clock               | 66        |
| <b>*. Security</b>       | <b>57</b> | 7.3 Calculator                | 67        |
| *.1 Lock My Phone        | 57        | 7.4 Notepad                   | 67        |
| *.2 Change Lock Code     | 57        | 7.5 Voice Memo                | 68        |
| *.3 Special Numbers      | 58        | 7.6 Document Viewer           | 69        |
| *.4 Edit Contacts List   | 58        | 7.7 USB Mode                  | 69        |
| *.5 Delete/Reset         | 58        | 7.8 Update Firmware           | 70        |
| <hr/>                    |           | <hr/>                         |           |
| <b>Tools</b>             | <b>60</b> | <b>Phone Support</b>          | <b>70</b> |
| 1. GPS Nav               | 61        | 1. Account Info               | 70        |
| 2. Backup                | 61        | 2. Add New Services           | 70        |
| 3. Alarm Clock           | 61        | 3. Phone Information          | 70        |
| 4. Scheduler             | 62        | 3.1 Phone Number              | 70        |
| 5. Bluetooth             | 63        | 3.2 Icon Glossary             | 71        |
| 5.1 Pair with Hands Free | 64        | 3.3 Version                   | 71        |
| 5.2 Send a Contact       | 64        | 3.4 Advanced                  | 71        |
| 5.3 Send Files           | 64        | <b>4. Security</b>            | <b>71</b> |
| 5.4 Add New              | 64        | <b>5. Live Assistance</b>     | <b>71</b> |
| 5.5 Trusted Devices      | 64        | <b>6. Text Assistance</b>     | <b>71</b> |
| 5.6 More...              | 64        |                               |           |

# Table of Contents

|   |           |  |           |
|---|-----------|--|-----------|
| <b>Safety</b>   | <b>72</b> | <b>Safety Information</b>                    | <b>77</b> |
| <b>TIA (Telecommunications Industry Association) Safety Information</b> | <b>72</b> | Explosion, Shock, and Fire Hazards           | 77        |
| Exposure to Radio Frequency Signal                                      | 72        | General Warnings and Cautions                | 79        |
| Antenna Care  | 72        | <b>Warning! Important safety information</b> | <b>80</b> |
| Phone Operation   | 73        | Avoiding hearing damage                      | 80        |
| Tips on Efficient Operation   | 73        | Using your phone safely                      | 81        |
| Driving   | 73        | Using headsets safely                        | 81        |
| Electronic Devices  | 73        | <b>FDA Consumer Update</b>                   | <b>82</b> |
| Pacemakers  | 73        | <b>Consumer Information on SAR</b>           | <b>93</b> |
| Persons with Pacemakers:  | 74        | <hr/> <b>Accessories</b>                     | <b>97</b> |
| Hearing Aids  | 74        | <hr/> <b>Warranty Information</b>            | <b>98</b> |
| Other Medical Devices   | 74        |  |           |
| Health Care Facilities  | 74        |  |           |
| Vehicles  | 75        |  |           |
| Posted Facilities   | 75        |  |           |
| Aircraft  | 75        |  |           |
| Blasting Areas  | 75        |  |           |
| Potentially Explosive Atmosphere  | 75        |  |           |
| For Vehicles Equipped with an Air Bag                                   | 76        |  |           |
| <b>Charger and Adapter Safety</b>                                       | <b>76</b> |  |           |
| <b>Battery Information and Care</b>                                     | <b>76</b> |  |           |

# Welcome

Thank you for choosing the advanced and compact LG600 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

- Large, easy-to-read, 11-line backlit LCD with status icons.
- Paging, messaging, voicemail and caller ID.
- 24-key keypad.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and French) capabilities.
- Easy-to-carry, compact and slim design.
- Bluetooth® wireless technology.
- Media Player.
- Flash Wallpaper.

# Technical Details

## Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

## FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

## Industry Canada Compliance

This phone complies with Industry Canada RSS 133. This phone complies with the Class B limits for radio noise emissions as set out in the interference causing standard entitled "Digital Apparatus" (ICES-003) of Industry Canada.

## FCC RF Exposure Information

**WARNING!** *Read this information before operating the phone.*

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are

consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

### **Bodily Contact During Operation**

This device was tested for typical use with the back of the phone kept 0.9 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.9 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components should not

be used. Avoid the use of accessories that cannot maintain 0.9 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

### **Vehicle-Mounted External Antenna**

(Optional, if available.)

A minimum separation distance of 8 inches (20 cm) must be maintained between the user/ bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

# Technical Details

## Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC and IC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

# Phone Overview



1. **Earpiece** Lets you hear the caller.
2. **LCD Screen** Displays messages and indicator icons. When the phone is turned on, Power Save mode automatically dims the screen and then darkens it if no keys are pressed.
3. **Left Soft Key** Use to access Options.
4. **TALK Key** Use to place or answer calls.
5. **Speaker Key** Use to set the speakerphone mode.
6. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
7. **FN Key**
8. **SHIFT Key** Lets you change letter capitalization when entering text using the QWERTY keyboard.
9. **Microphone**
10. **SPACE Key** Lets you enter a space.
11. **Navigation Key** Use for quick access to Send to, Calendar, Media Player and My Downloads.
12. **Menu/OK Key** Lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
13. **Right Soft Key** Use to access Contacts.
14. **END/PWR Key** Use to turn the power on/off and to end a call. Also returns to the main menu display screen.
15. **BACK Key** Deletes single spaces or characters with a quick press, but press and hold to delete entire words. Will also back you out of menus, one level at a time.
16. **SYM Key** Allows you to enter symbols when entering text using the QWERTY keyboard.
17. **ENTER Key** Selects the highlighted choice when navigating through a menu.
18. **TEXT Key**

# Phone Overview



- 19. **Outer Screen**
- 20. **Music Player Hot Keys**
- 21. **Speakers**
- 22. **Camera Lens** Use to take photos and record video. Keep it clean for optimal photo quality.
- 23. **Side Keys** Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
- 24. **Charger/Accessory Jack** Allows you to connect the phone to the phone charger and to optional accessories, such as a USB cable. (Inserting an accessory into the incorrect jack may damage the phone.)
- 25. **Earphone Jack** Allows the use of a headset to hear caller's voice.
- 26. **MUSIC Key**
- 27. **Side Camera Key** Use for quick access to Camera functions.
- 28. **microSD™ card slot** Insert microSD card for external memory. Use LG approved microSD card.

Phone Overview



# Menus Overview

## Web

## Ringers

1. Downloaded Ringtones
2. Ringer Type
3. Volume
4. Caller Ringtones

## Entertainment

1. Media Player
2. Music
3. Games

## Calls

## Missed Alert

## My Downloads

- Application Manager
- Tools

## Ringers

## Screen Savers

## Games

## Memory Card

## Memory Status

## Camera

1. Camera
2. Camcorder
3. Photo Album
4. Pic/Video Message
5. Print
6. Settings & Info

## Messaging

1. Send Message
2. Text Message
3. Mobile email
4. Instant Messaging
5. Personal email

## 6. Pic/Video Message

## 7. Web Alerts

## 8. Voicemail

1. Call Voicemail
  2. Voicemail Details
  3. Clear Icon
- ## 9. Settings


1. Notification
2. Callback Number
3. Signature
4. Quick Messages
7. Edit Voicemail #
8. Web Alerts

## Contacts

## Settings

1. Display
1. Main Screen
1. Screen Saver

## Menu Access

To use phone menus, press  using Navigation Key to highlight and select. Press the number key that corresponds to the submenu.

# Menus Overview

---

## 2. Backlight

---

## 3. Menu Style

---

## 4. Foregrounds

---

## 5. Incoming Calls

---

## 2. Outer Screen

---

### 1. Screen Saver

---

### 2. Clock

---

## 3. Font Size

---

### 1. Messages

---

### 2. Browser

---

### 3. Notepad

---

## 4. Keypad Light

---

## 5. Time Format

---

## 6. Language

---

## 7. Status Light

---

## 8. Phone Interface

---

## 2. Sounds

---

### 1. Volume

---

#### 1. Ringer

---

#### 2. Earpiece

---

#### 3. Speakerphone

---

#### 4. Keytones

---

#### 5. Messages

---

#### 6. Alarm & Scheduler

---

## 7. Applications

---

## 8. Alerts

---

## 9. Power On/Off

---

## 2. Ringer Type

---

### 1. Incoming Calls

---

### 2. Messages

---

## 3. Vibrate Type

---

## 4. Alerts

---

### 1. Beep Each Minute

---

### 2. Out of Service

---

### 3. Connect

---

### 4. Signal Fade/Call Drop

---

## 5. Keytones

---

### 1. Tone Length

---

### 2. Tone Volume

---

## 3. Airplane/Music Mode

---

## 4. Text Entry

---

### 1. Auto-Capital

---

### 2. Auto-Space

---

### 3. Word Choice List

---

### 4. Word Prediction

---

### 5. Word Completion

---

### 6. Use My Words

---

### 7. My Words

---

## 8. Help

---

## 5. TTY

---

## 6. Call Setup

---

### 1. Auto-Answer

---

### 2. Abbreviated Dialing

---

### 3. Call Answer

---

### 4. Contacts Match

---

## 7. Headset Mode

---

## 8. Location

---

## 9. Restrict and Lock

---

### 1. Restrict Voice

---

### 2. Lock Pictures

---

### 3. Lock My Phone

---

## 0. Roaming

---

### 1. Set Mode

---

### 2. Update PRL

---

## \*. Security

---

### 1. Lock My Phone

---

### 2. Change Lock Code

---

### 3. Special Numbers

---

### 4. Edit Contacts List

---

### 5. Delete/Reset

---

 **Tools**

---

## 1. GPS Nav

- 2. Backup**
- 3. Alarm Clock**
- 4. Scheduler**
- 5. Bluetooth**
- 6. Memory Card Manager**
- 7. More...**
  - 1. Voice Control**
  - 2. World Clock**
  - 3. Calculator**
  - 4. Notepad**
  - 5. Voice Memo**
  - 6. Document Viewer**
  - 7. USB Mode**
  - 8. Update Firmware**



## **Phone Support**

- 1. Account Info**
- 2. Add New Services**
- 3. Phone Information**
  - 1. Phone Number**
  - 2. Icon Glossary**
  - 3. Version**
  - 4. Advanced**
- 4. Security**

- 1. Lock My Phone**
- 2. Change Lock Code**
- 3. Special Numbers**
- 4. Edit Contacts List**
- 5. Delete/Reset**
- 5. Live Assistance**
- 6. Text Assistance**

# Getting Started with Your Phone

## The Battery

### Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

## Installing the Battery

To install, insert the battery into the opening on the back of the phone and gently press down until the latch snaps into place.

## Removing the Battery

1. Make sure the power is off so that you do not lose any stored numbers or messages.

2. Press the battery release latch up and remove the battery from the phone.

## Charging the Battery

*Warning! Use only the charger provided with the phone. Using any charger other than the one included with the RUMOUR™ may damage your phone or battery.*

1. Attach the charger to the phone. Make sure that the triangle symbol faces up when inserting the plug into the charger port.
2. Plug the charger into a wall outlet.




## Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying a warning. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

## Turning the Phone On and Off


### Turning the Phone On

1. Install a charged battery or connect the phone to an external power source.
2. Press  for a few seconds until the LCD screen lights up.

### Note

Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

## Turning the Phone Off

1. Press and hold  until the display turns off.

## Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.



# Getting Started with Your Phone

## Screen Icons

When the phone is powered on, the top line of the LCD screen displays icons indicating the status of the phone.

To see the icons, go to **OK**-> **Phone Support**-> **Phone Information**-> **Icon Glossary**.




## Making Calls

1. Make sure the phone is turned on. If not, press  for about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press .

If the phone is locked, enter the lock code.



### Note

If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contacts. To turn off this function:


-  -> **Phone Support** -> **Security**
- > **Enter the four-digit lock code**
-  -> **Lock My Phone**-> **Unlock** ->
- 

4. Press  to end the call.


## Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to erase the last digit entered or hold down  for at least 2 seconds to delete all digits.


## Redialing Calls


1. Press  twice to redial the last number you called, received or missed. The last 60 numbers are stored in the call history list and you can also select one of these to redial.

## Receiving Calls

1. When the phone rings or vibrates press  to answer a call. Just open the flip and answer the call when the flip is closed.

### Note

If you press  the side keys while the phone is ringing, the ringing or vibration is muted for that call.

2. Press  to end the call.

# Quick Access to Convenient Features


## Lock Mode

Sets your phone to require your 4-digit password in order to use the phone.

### Note

By default, the lock code/password is the last 4 digits of your phone number. You can change this code/password in Security menu.


## Mute Function

The Mute Function does not transmit your voice to the caller. To quickly activate **Mute**, press Left Soft Key  during a call.



## Volume Quick Adjustment

Quickly adjust ringer and earpiece volumes by pressing the upper side key to increase and lower key to decrease.

### Note

The earpiece volume can only be adjusted during a call and Keypad volume can only be adjusted through the  -> Settings -> Sound -> Volume-> Earpiece.

## Call Waiting

During a call, one beep indicates another incoming call. Check with your service provider for information about this function. Press  to receive the waiting call then press  again to switch between calls.

## Caller ID

Caller ID displays the number of the person calling when your phone rings. If the caller's identity is stored in Contacts, the name appears on the screen. Check with your service provider to ensure they offer this feature.


## Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly and then dials it. Speed Dial number 1 is for Voicemail.

### Dialing Single Digit Speed Dials (from 1 to 9)

Press and hold the Speed Dial number.


OR

Enter the Speed Dial number and press .

### Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the last digit.

OR

Enter the first and second digits and press .



# Using Phone Menus

## Web

The Web feature allows you to view Internet content especially designed for the mobile phone interface. For specific information on Web access through your phone, contact Bell Mobility.

### Access and Options

Allows you to initiate a Wireless Web session.

1. Press .
2. Press  Web.

### Accessing the Web

1. Press , .

### Overview

The Web allows the user to use a variety of Internet services. Using the Web on the phone allows you to:

- Send and receive Internet e-mail.
- Browse and search the World Wide Web via web pages especially designed for wireless phone customers.
- Set bookmarks to directly access your favorite sites.
- Retrieve information, such as stock quotes and flight schedules from the Internet.

### Quality of Browser

Browsing the web via the phone is not like using your home computer. Site providers have selected only the critical aspects of their site to present to wireless phone users and have removed most graphics.

### Ending the Web Session

You can end a Web session by

pressing .

## Navigating through the Browser

While using the Web, you will find the following:



- Numbered options (some options may not be numbered);
- Links (embedded in content);
- Text or numeric input;
- Simple text.

You can act on the options or the links by using the Soft Keys.

## Ringers

This menu allows you to access and buy ringtones. You can control ringer type depending on the types of messages and customize the volume. Caller ringtones are also available.

### Access and Options

1. Press , .
2. Select a sub-menu.

1. Downloaded Ringtones
2. Ringer Type
3. Volume
4. Caller Ringtones

## 1. Downloaded Ringtones

Allows you to download an available ringer to your phone.

1. Press ,  Ringers.

# Ringers

2. Press **1 W** **D**ownloaded **R**ingtones.
3. Highlight **Get New** and press **MENU OK** (The browser will launch and take you to the Ringers download menu).

## 2. Ringer Type

### 2.1 Incoming Calls

Allows you to assign ringtones for incoming calls.

1. Press **MENU OK**, **2 E**, **2 E**, **1 W**.
2. Select **Contact Entries/Unknown**.

### 2.2 Messages

Allows you to assign ringers for messages.

1. Press **MENU OK**, **2 E**, **2 E**, **2 E**.
2. Select **Voicemail/ Text**

**Message/ Pic/Video Message.** (The list of preprogrammed ringers is displayed.)


3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press **MENU OK** to assign the desired ringer.

## 3. Volume

Allows you to set various volume settings.

1. Press **MENU OK**, **2 E**, **3 R**.
2. Select **Ringer/ Earpiece/ Speakerphone/ Keytones/ Messages/ Alarm & Scheduler/ Applications/ Alerts/ Power On/Off**.
3. Use **⬆️⬇️⬆️** to adjust the volume

# Ringers/ Entertainment

of the ringer, then press .



## Entertainment

### 4. Caller Ringtones

Allows you to set a ringtone for each caller that will ring when you have an incoming call.

1. Press , , .

### 1. Media Player

Displays the available options of the media player depending on the type of files. They allow you to view the file information, customize the media effects or read on-screen help.

1. Press , , .

- Video Clips Home: Available video clips are listed.
- Live TV Home: Available TV Channels are listed.
- Radio Home: Available Radio stations are listed.
- Search: Allows you to search contents of Video clips, Live TV or Radio.
- Subscriptions: Allows you to subscribe contents of Video clips, Live TV or Radio.
- Help: Help information about Video clips, Live TV or Radio.
- About: Information about Media Player, Production




# Entertainment/ Calls

company or application version.

- **Exit:** Allows you to exit Media Player.

## 2. Music

This menu will let you use your phone as a portable personal jukebox. From both the Media Player and Music store to a variety of streaming music options, you're bound to find the music you want, when you want it.

1. Press , , .
2. Use your keypad and navigation key to explore the store.

## 3. Games


 



Allows you to select and buy game applications available on your phone.

1. Press , , .
2. Select **Get New**



## Calls

The Calls Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.




1. Press , .
2. Use  to highlight an entry, then
  - Press  to view the entry.
  - Press  to place a call to the number.

# Missed Alerts/ My Downloads

## Missed Alerts

Displays the list of your missed alerts. This feature allows you to check out functions you have not promptly checked. For example, the features are Missed Calls, Alarm, Text Message.

### Access and Options

1. Press .
2. Press  **Missed Alert.**
3. Press  **View.**



## My Downloads

You have access to a dynamic variety of Premium Service content such as downloadable Games, Ringers, Screen Savers, and other applications.

### Note

Additional fees may apply.

### Access and Options



1. Press .
2. Press  **My Downloads.**
3. Select a sub-menu.

Application Manager  
Tools  
Ringers  
Screen Savers  
Games  
Memory Card  
Memory Status

# My Downloads





## Application Manager

Allows you to view the downloaded applications.

1. Press , .
2. Scroll to **Application Manager** and press .





## Tools

To download an available tool to your phone.

1. Press , .
2. Scroll to **Tools** and press .
3. Highlight **Get New** and press  (Ringtones/ Wallpapers/ Games/Applications/My Downloads).





## Ringers

To download an available ringer to your phone:

1. Press , .
2. Scroll to **Ringers** and press .
3. Highlight **Get New** and press  (The browser will launch and take you to the Ringers download menu).




 
## Screen Savers

To download an available Screen Saver to your phone:

1. Press , .
2. Scroll to **Screen Savers** and press .
3. Highlight **Get New** and press  (The browser will launch and take you to the Screen Savers download menu).

## Games

To download an available Games to your phone:

1. Press , .
2. Scroll to **Games** and press .
3. Highlight **Get New** and press  (The browser will launch and take you to the Games download menu).

## Memory Card

Up to 8GB is supported. It allows you to easily store images, video, music, some documents and voice data in your phone.

### Inserting the microSD Card

1. Open the microSD access panel located on the left side of the phone.

2. Position the microSD card perpendicular to the opening and gently slide it into place until it is fully inserted and locked.

### Note

Be sure to use only recommended microSD cards (8MB–8GB). Using non-recommended microSD cards could cause data loss and damage your phone.

 
### Removing the microSD Card

1. Open the microSD access panel located on the left side of the phone.
2. Push in and then release the microSD card to eject.
3. Pull the microSD memory card out of the phone.

# My Downloads

## Notes

- The microSD card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing, or handling them.
- Do not remove a microSD card while files are being accessed or transferred. It will result in loss or damage of data.

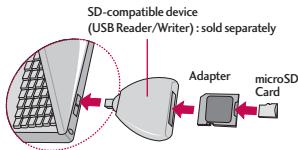

## Creating Folders in the microSD Card

1. Press **MENU OK**, **6 F**.
2. Scroll to **Memory Card** and press **MENU OK**.
3. Press Right Soft Key **—** **Options** and select **Create New Folder** (The phone will


create the microSD's default folders: DCIM, EMAIL, MUSIC, BLUETOOTH).

## Viewing Memory in the microSD Card






1. Press **MENU OK**, **6 F**.
2. Scroll to **Memory Card** and press **MENU OK**.
3. Press Right Soft Key **—** **Options** and select **Memory Info** (The used and available memory space will be displayed).

## Formatting the microSD Card

1. Press **MENU OK**, **6 F**.
2. Scroll to **Memory Card** and press **MENU OK**.
3. Press Right Soft Key **—** **Options** and select **Format Memory Card**.

- If you are sure you wish to remove all the files from your microSD card, select **Format** and press .

## Displaying Your microSD Folders

- Press , .
- Scroll to **Memory Card** and press .
- Select your desired folder (DCIM, MUSIC) and press .
- To view or play a preview of a file, highlight it with your navigation key, and then press  or the appropriate soft key.

## Memory Status

Displays the Total, Used or Free memory space.

- Press , .
- Scroll to **Memory Status** and press .

# Camera





## Camera

Your phone's built-in camera gives you the ability to take full-color digital pictures, view your pictures using the phone's display, and instantly send them to family and friends.

### Note

While recording a video, do not eject your microSD card. This may damage your phone.

### Access and Options

1. Press .
2. Press  **Camera**.
3. Select a sub-menu.
  1. Camera
  2. Camcorder
  3. Photo Album
  4. Pic/Video Message
  5. Print
  6. Settings & Info



## 1. Camera

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate the phone's camera mode whether the phone is open or closed.


1. Press , , .

### Shortcut

Press the side camera key to access the camera. To return to camera mode, select Options and then Take New Picture.

2. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
3. Press Left Soft Key  **Capture**, , or the side camera key until the shutter sounds. (The picture will automatically be saved to the In Phone Folder if you do not

have a microSD card inserted. If you have a microSD card in the phone then the pictures will be automatically saved to your memory card instead.

- To return to camera mode to take another picture, press .

4. Press Right Soft Key   
Options for more options:

**Send** to send the picture to up to 25 contacts at one time.

**Upload** to upload the video you just recorded to the Picture and Video Messaging Web Site.

**Assign** to assign the picture to a phone task. Select an option:

- **Picture ID** to assign the picture to a Contacts entry.

- **Screen Saver** to use the picture as a screen saver.
- **Incoming Calls** to display the picture for all incoming calls.

**Delete** to delete the picture you just took.

**Print** to print an image by mail or at a retail outlet.

**Post to Service** to send the image to a number of popular third-party Web image services.


 




**Review/Send Media** to review the picture and to send it to media.

**Take New Picture** to return to Camera mode to take another picture.

# Camera

## 2. Camcorder

In addition to taking pictures, you can also record, view, and send videos to your friends and family with your phone's built-in video camera.

1. Press , , .
2. **Video Mail** or **Long Video** to activate video mode.
3. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
4. Press Left Soft Key  **Record**, , or the side camera key to begin recording (The maximum recording time is 30 seconds).
5. Press Left Soft Key  **Done** or the side camera key to stop recording. (The video will be automatically saved to the In Phone Folder if you do not

have a microSD card inserted. If you have a microSD card in the phone then the video will be automatically saved to your memory card instead. To change this option go to the Camera menu, select Settings & Info, and then select the Auto-Save to option. Select Memory Card or In Phone.)

6. Press Right Soft Key  **Options** for more options:

**Play** to play the video that was just captured.

**Send** to send the video.

**Upload** to upload the video you just recorded to the Picture and Video Messaging Web Site. Depending on your settings, you may be prompted to accept a PCS Vision connection. Choose from the following options:

**Assign** Allows you to assign to incoming calls.

**Delete** to delete videos in the In Phone folder.

**Post to Service** to send the image to a number of popular third-party Web image services.

### Review/Send Media

**Take New Video** to return to camcorder mode.

## 3. Photo Album

Your phone's picture storage area is called Photo Album. There are three types of folders that can be used separately according to your needs: In Phone/ Memory Card/ Online Albums.

1. Press , , .

### In Phone

Allows you to see received


messages. You can save media files such as picture and video to In Phone or microSD card.

**To review your stored pictures in the In Phone folder:**

1. Select **Menu** -> **Camera** -> **Photo Album** -> **In Phone**.
2. Use your navigation key to view and scroll through the pictures.
3. Use the following options:  
**Play\*/ Send/ Upload/  
 Assign/ Delete/ Post to  
 Service/ Copy/Move/  
 Detail/Edit/ Media Filter/  
 Album List/ Camcorder  
 Mode**

\* Files dependent

### Memory Card

When viewing the pictures in your memory card, press Right Soft Key  **Options** to

# Camera

display picture options. (The Memory Card options are identical to the In Phone Folder options)

## Online Albums

To save your pictures and videos to online albums:

1. Input the Pic/Video Message password when prompted. (The Picture and Video Messaging Web Site. will start.)
2. Select Upload and then select Uploads or an album title to save your picture(s) to your online albums.

## 4. Pic/Video Message

Allows you to send your pictures/videos to other users. And allows you to see received picture/video message.

1. Press , , .

### Note

While copying or moving the Pic/Video messages, do not eject your microSD card. This may damage your phone.

## 5. Print


 


Pictures in your phone and memory card can be printed via the connection between your phone and a printer. While the transfer, you cannot receive incoming calls and you need printer setting to use this menu.

1. Press , , .

## 6. Settings & Info

The Settings menu allows you to configure where pictures or videos are saved, view your account information.

# Camera/ Messaging

1. Press , , .
2. Select one of the following options and press .

**Auto-Save to** to select where to save pictures and videos. The available options are Memory Card or In Phone.



**Status Bar** to set the status bar On or Off.

**Location** Setting Location On will tag media you capture with the location of the cell tower your phone is currently using for Pic/Video Message Services.



**Account Info** to display your current account settings via an online connection.

## **Messaging**

### Access and Options

1. Press .
2. Press  **Messaging**.
3. Select a sub-menu.
  1. Send Message
  2. Text Message
  3. Mobile email
  4. Instant Messaging
  5. Personal email
  6. Pic/Video Message
  7. Web Alerts
  8. Voicemail
  9. Settings

Text messages, pages, and the voicemail box become available as soon as the phone is powered on.

- Check types of messages by pressing the message key .
- Make a call to the callback number by pressing .

# Messaging

during an Inbox message check.

- Read and edit messages saved in the outbox after transmission and resend them.



 

The phone can store up to 260 messages. The LG600 supports up to 140 characters per message including header information. The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.


## 1. Send Message

Allows you to send text messages, picture messages, pages, and e-mail transmissions. Each message has a destination (up to 25 recipients per message) and



information (Message). These are dependent upon the type of message you want to send.

## Sending a Text Message


1. Press , , .
2. With the highlight on To field, press .





Search an entry you want to send a message in Contacts and press .


Go to Contacts or NEW ADDR, after press the right soft key, and enter phone number or email address.

3. Press Left Soft Key  **CONTINUE** and type your message (text or e-mail), then press .

## Using Text Input Modes

**Right Soft Key** () To choose Predictive Text/ Symbols/ Emoticon/ Smileys/ Settings


|                        |   |   |
|------------------------|---|---|
| <b>SHIFT Key</b>       |  | To change cases.  |
| <b>SPACE Key</b>       |  | To insert a space.  |
| <b>BACK Key</b>        |  | To backspace and hold it to delete words.                                 |
| <b>Punctuation Key</b> |  | To insert punctuation in a word or to complete a sentence in T9Word Mode. |

4. Press Left Soft Key  **Send**.  
A confirmation message is displayed.
5. Set a priority of your message.  
**Priority: Urgent**
6. Set your callback number.  
**None/ My Phone Number/ Other**


### Sending a Pic/Video Msg

Register your Pic/Video Msg account.


### Message Icon Reference

-  Indicates a text message is saved as draft.


---

-  Indicates the text message is duplicated.


---

-  Indicates the text message is duplicated and locked.


---

-  Indicates a text message is failed in transmission.


---

-  Indicates the text message is locked.


---

-  Indicates the text message is pending.


---

-  Indicates a text message is read.


---

-  Indicates a text message is sent.


---

-  Indicates the text message is not read.

---

-  Indicates the text message is cancelled.

---

-  Indicates the read text message is urgent.

# Messaging





## 2. Text Message

Allows you to check received text message.

1. Press , , .

### Inbox Messages



Up to 100 received messages can be stored in the Inbox.



1. Press , , .
2. Use  to highlight an Inbox message.

- Left Soft Key  SEND MSG.

- Right Soft Key  OPTIONS.

Forward/ Reply With/  
Lock/Unlock / Delete/  
Delete All/ Settings





3. Use  to highlight an Inbox message, then press .
4. While viewing the selected message, press Left Soft Key


-  REPLY or Right Soft Key
-  OPTIONS.

Options from here:

Call(Go to List)/ Reply With/  
Forward/ Lock/Unlock / Save  
Number/ Delete/ Compose  
New




### Outbox Messages

1. Press , , .
2. Use  to highlight an Outbox message.

- Left Soft Key  SEND MSG.

- Right Soft Key  OPTIONS.

Forward/ Reply With/ Lock/  
Delete/ Delete All/ Settings

3. Use  to highlight an Inbox message, then press .
4. While viewing the selected message, press Left Soft Key  SEND MSG or Right

Soft Key **—** **OPTIONS.**

Options from here:

Forward/ Lock/ Delete

### 3. Mobile email

With Bell Mobile Email, you can get your corporate email, synchronize your contacts, and have access to your company's directory.

1. Press **MENU OK**, **8 X**, **3 R**.

### 4. Instant Messaging

Allows you to connect to friends and family using Messenger 2.0.

1. Press **MENU OK**, **8 X**, **4 S**.

### 5. Personal email

1. Press **MENU OK**, **8 X**, **5 D**.

### 6. Pic/Video Message

Allows you to send your pictures/videos to other users.

And allows you to see received picture/video message.

1. Press **MENU OK**, **8 X**, **6 F**.

### 7. WebAlerts

Allows you to store the received web messages in a separate folder.

1. Press **MENU OK**, **8 X**, **7 Z**.

### 8. Voicemail

Allows you to view new voice messages recorded in the voicemail box. Your phone will alert you when you receive a new voice message.

#### Checking Your Voicemail Box

1. Press **MENU OK**, **8 X**, **8 X**.

2. Use **▲ ▼** to select a setting, then press **MENU OK**.

Call Voicemail/ Vocicemail  
Details/ Clear Icon







# Messaging

## 9. Settings

Allows you to configure 6 settings for messages.

### 9.1 Notification

When you receive a text message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a larger pop-up message on your display screen.


1. Press , , , .
2. Use  to select a setting, then press .

#### Message & Icon/ Icon Only

### 9.2 Callback Number







You can set a callback number in your messages so that the recipient of the message can contact you.

1. Press , , , .

2. Select **None**, **My Phone Number**, or **Other** and press . (If you select **Other**, enter a number and press the left soft key to save.)

### 9.3 Signature

Each message you send can have a customized signature to reflect your personality.

1. Press , , , .
2. Select **Custom** and press .  
(If you do not wish to attach a signature to your outgoing messages, select **None**.)
3. Enter your signature and press .

### 9.4 Quick Messages

Your phone is loaded with 20 quick messages to help make sending text messages faster and easier. Also you can add your

own quick messages up to 20.

1. Press **MENU OK**, **8 X**, **9 C**, **4 S**.

The list of quick messages is displayed.

### Note

Those preloaded Quick Messages can be edited or deleted in the handset.

To add a new preset message:

1. Press **MENU OK**, **8 X**, **9 C**, **4 S**.
2. To add a new preset message, select **<Add>** by pressing the left soft key.
3. Enter your message and press **MENU OK**. Your new message will be added to the beginning of the list.

## 9.5 Edit Voicemail #

You can edit your voicemail # and there are following options

as well.

1. Press **MENU OK**, **8 X**, **9 C**, **5 D**.

- Left Soft Key **— SAVE**.
- Right Soft Key **— OPTIONS**.  
Hard Pause/ Soft Pause

## 9.6 WebAlerts

Automatically connects you to WebAlerts when available.

1. Press **MENU OK**, **8 X**, **9 C**, **6 F**.
2. Select **Yes** or **No** and press **MENU OK**.

# Contacts



## Contacts








The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 600).

### Access and Options



1. Press .
2. Press  **Contacts**.
3. Press  **Add New**.  
**New Contact/ New Group**

### 1. New Contact


Your phone can store up to 600 Contacts entries. Contacts entries can store up to a total of seven phone numbers, and each entry's name can contain 64 characters.


1. Press , , .
2. Scroll to **<Add New>** and press .
3. Scroll to **<New Contact>** and press .
4. Enter a name for the new entry and press .
5. Scroll down to additional fields and enter or edit information as desired.
6. Press Left Soft Key  **Done**.

### To Find Contacts Entries by Name:

1. Press , .
2. Scroll through all the entries using your navigation key. Or enter the full letter of a name.

3. To display an entry, highlight it and press .

4. To dial the entry's default phone number, press .

Or to display additional Contacts entries, press .





Options;  
Edit Group/ Delete Group

## 2. New Group

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a part of group.

1. Press , , .

2. Options from here:



- Use  to highlight a group to view, then press .
- Select <Add New> then select  New Group to add a new group to the list.
- Use  to highlight a group, then select right soft key

# Settings

## Settings

The Settings Menu has options to customize your phone.

### Access and Options

1. Press .
2. Press  **Settings**.
3. Select a sub-menu.
  1. Display
  2. Sounds
  3. Airplane/Music Mode
  4. Text Entry
  5. TTY
  6. Call Setup
  7. Headset Mode
  8. Location
  9. Restrict and Lock
  0. Roaming
  - \*. Security








## 1. Display

Provides you with options to customize the phone's display screen.

### 1.1 Main Screen

#### 1.1.1 Screen Saver

Allows you to choose the kind of screen savers to be displayed on your phone while not in use.

1. Press , , , , .
2. Select **Preloaded/ Photo Album/ Assigned Media/ Downloads/ New Picture**.
3. Use the navigation key to select an image and press  to view the image.  
(Once an image is displayed, you can use your navigation key to scroll through and view the other default images.)
4. Press  to assign the desired image.

## 1.1.2 Backlight

The backlight setting lets you select how long the display screen is backlit after any keypress is made.

1. Press **MENU OK**, **\***, **1 W**, **1 W**, **2 E**.
2. Choose a setting, then press **MENU OK**.  
Dim Only/ 8 seconds/  
15 seconds/ Always On

## 1.1.3 Menu Style

Allows you to set menu style.

1. Press **MENU OK**, **\***, **1 W**, **1 W**, **3 R**.
2. Choose a setting, then press **MENU OK**.  
Grid/ List

## 1.1.4 Foregrounds

Allows you to set the clock & calendar or Greeting displayed on main screen.

1. Press **MENU OK**, **\***, **1 W**, **1 W**, **4 S**.
2. Choose a setting, then press **MENU OK**.  
Clock & Calendar/ Greeting

## 1.1.5 Incoming Calls

Allows you to set a specific screen for incoming calls.

1. Press **MENU OK**, **\***, **1 W**, **1 W**, **5 D**.
2. Select **Contact Entries/ Unknown #s**.

## 1.2 Outer Screen

### 1.2.1 Screen Saver

1. Press **MENU OK**, **\***, **1 W**, **2 E**, **1 W**.
2. Select **Preloaded/ Photo Album/ Assigned Media/ Downloads/ New Picture**.

### 1.2.2 Clock





1. Press **MENU OK**, **\***, **1 W**, **2 E**, **2 E**.

# Settings

2. Select **Normal Clock/ Analog Clock/ Digital Clock/ Dual Clock**.






## 1.3 Font Size

Allows you to set the size of the font for Message, Browser and Notepad.

1. Press , , , .
2. Select the menu to set the font size.  
**Messages/ Browser/ NotePad**
3. Select a font size.  
**Small/ Medium/ Large**

## 1.4 Keypad Light






The keypad light setting lets you select how long the keypad is backlit after any keypress is made.

1. Press , , , .
2. Choose a setting, then press .

On/ Off



 



## 1.5 Time Format

Allows you to set time format as AM/PM (12hr) or 24h.

1. Press , , , .
2. Choose a setting, then press .  
**AM/PM (12hr)/ 24h**

## 1.6 Language



Allows you to set the bilingual feature according to your preference. Choose between English and French.

1. Press , , , .
2. Use  to select **English** or **French**, then press .







## 1.7 Status Light

Shows the status on your phone by blinking the light.

1. Press , , , .

- Use  to set to **On** or **Off**, then press .

## 1.8 Phone Interface




 


- Press , , , .
- Use  to set to **Bell** or **LG**, then press .

## 2. Sounds

Provides options to customize the phone's sounds.

### 2.1 Volume

Allows you to set various volume settings.

- Press , , , .
- Select **Ringer/ Earpiece/ Speakerphone/ Keytones/ Messages/ Alarm & Scheduler/ Applications/ Alerts/ Power On/Off**.
- Use  to adjust the volume of the ringer, then press .

## 2.2 Ringer Type






### 2.2.1 Incoming Calls

Allows you to assign ringers for incoming calls.

- Press , , , , .
- Select **Contact Entries/ Unknown #s**.

### 2.2.2 Messages

Allows you to assign ringers for messages.

- Press , , , , .
- Select **Voicemail, Text Message and Pic/Video Message**. (The list of preprogrammed ringers is displayed.)
- Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.

# Settings

4. Press **MENU OK** to assign the desired ringer.

## 2.3 Vibrate Type

### 2.3.1 Incoming Calls

1. Press **MENU OK**, **\***, **2 E**, **3 R**, **1 W**.
2. Select **Contact Entries/ Unknown #s**.

### 2.3.2 Messages

1. Press **MENU OK**, **\***, **2 E**, **3 R**, **2 E**.
2. Select **Voicemail, Text Message, Pic/Video Message**. (The list of preprogrammed ringers is displayed.)
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press **MENU OK** to assign the desired vibrate.

### 2.3.3 Alarm & Scheduler

1. Press **MENU OK**, **\***, **2 E**, **3 R**, **3 R**.
2. Select **Vibrate Type1/ Vibrate Type2/ Vibrate Type3/ Vibrate Type4**

## 2.4 Alerts

Allows you to select the alert type just in cases of new Voicemail, Message, Service Change, Pic/Video Msg., Minute Beep, Call Connect, Signal Fade.

1. Press **MENU OK**, **\***, **2 E**, **4 S**.
2. Select **Beep Each Minute/ Out of Service/ Connect/ Signal Fade/Call Drop**.
3. Select **On** or **Off** and press **MENU OK**.

## 2.5 Keytones

Allows you to select the Key Tone type.

1. Press **MENU OK**, **\***, **2**, **5**.
2. Select **Tone Length** or **Tone Volume** and press **MENU OK**.

### 3. Airplane/Music Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

1. Press **MENU OK**, **\***, **3**.
2. Press **MENU OK**.
3. Select **On/ Off/ On Power Up** and press **MENU OK**.

### 4. Text Entry

Allows you to configure 8

settings for editing messages.

1. Press **MENU OK**, **\***, **4**.
2. Use **↑** to highlight one of the settings and press **MENU OK** to select it.

#### 4.1 Auto-Capital (On/Off)

Allows you to automatically capitalize letters when necessary.

#### 4.2 Auto-Space (On/ Off)

Allows you to automatically insert space between letters, words or sentences.

#### 4.3 Word Choice List (On/Off)

Allows you to view the list of recommended word choices in writing a message.

#### 4.4 Word Prediction (On/Off)

Allows you to set your phone to

# Settings

predicting words when you enter a word in writing a message.

## 4.5 Word Completion (On/Off)

Allows you to set your phone to enable word completion in advance in writing a message.

## 4.6 Use My Words (On/Off)

Allows you to use your preset words in entering a message text.

## 4.7 My Words

Allows you to add your new words in the word database.






## 4.8 Help

Shows you the usefulness of modifying Word Options for your convenience.

## 5. TTY

Allows you to attach a TTY

(Teletype Writer) device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press , , .
2. Press .
3. Select TTY Full/ TTY + Talk/ TTY + Hear/ TTY + Off and press .

## 6. Call Setup

### 6.1 Auto-Answer

This feature is only intended for use with hands free devices or headsets, but is an independent feature of the phone and must be manually turned on/off when connected or disconnected from the device.

1. Press **MENU OK**, **\***, **6 F**, **1 W**.

2. Use **▲ ▼** to select a setting, then press **MENU OK**.

- **Off**
- **Headset** When your phone is connected to a Headset, the phone automatically responds a call.

## 6.2 Abbreviated Dialing

Your dialing match options allow you to enable or disable Abbreviated Dialing.

1. Press **MENU OK**, **\***, **6 F**, **2 E**.

2. Select **On** and enter a five- or six-digit number (for example, area code and prefix) and press **MENU OK**.

## 6.3 Call Answer

Allows you to determine how to handle an answered call.

1. Press **MENU OK**, **\***, **6 F**, **3 R**.

2. Use **▲ ▼** to select a setting, then press **MENU OK**.

**Flip Open / Any Key/  
TALK Only**

## 6.4 Contacts Match

1. Press **MENU OK**, **\***, **6 F**, **4 S**.

2. Select **On** or **Off** and press **MENU OK**.

## 7. Headset Mode

Allows you to set Headset Only mode.

1. Press **MENU OK**, **\***, **7 Z**.






2. Use **▲ ▼** to select a setting, then press **MENU OK**.

**Normal/ Headset Only**

# Settings

## 8. Location

Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Press , , .  
The Location disclaimer is displayed.
2. Read the disclaimer and press .
3. Select **On** or **Off** and press .

### Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.





## 9. Restrict and Lock

### 9.1 Restrict Voice

1. Press , , .






2. Enter the four-digit lock code.

The default lock code is commonly the last 4 digits of your phone number.

3. Press  **Restrict Voice**.
4. Select **Incoming Calls** or **Outgoing Calls** and press .
5. Use  to select a setting, then press .

**Contacts Only/ Special #'s Only/ Unlock**

### 9.2 Lock Pictures

1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Lock Pictures**.
4. Select **Unlock** or **Lock** and press .

### 9.3 Lock My Phone

Keeps your phone from

unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls.

You can modify the lock code using the New Lock code within the Security menu.

1. Press **MENU OK**, **\***, **9** **C**.
2. Enter the four-digit lock code.
3. Press **3** **R** **Lock Phone**.
4. Use **▲** **▼** to select an option, then press **MENU OK**.

**Unlock** The phone is never locked (Lock mode can be used).

**Lock Now** The phone is always locked. When locked, you can receive incoming calls and make only emergency calls.

**On Power Up** The phone is locked when it is turned on.

## 0. Roaming

### 0.1 Set Mode

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press **MENU OK**, **\***, **0** **!**, **1** **W**.
2. Use **▲** **▼** to select **Automatic/1X Only/ Home Only** then press **MENU OK**.

### 0.2 Update PRL

1. Press **MENU OK**, **\***, **0** **!**, **2** **E**.

## \*. Security

The Security Menu allows you to secure the phone electronically.





### \*.1 Lock My Phone

See "Lock Phone" on page 57.

# Settings





## \*.2 Change Lock Code

Allows you to change your lock code. To enter this menu, you are asked to enter a new lock code and once again to confirm it.


1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Change Lock Code**.
4. Enter a new lock code.
5. Enter the new lock code once more to confirm it.

## \*.3 Special Numbers





Allows you to set special phone numbers.

1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Special Numbers**.
4. Select a location for your

entry.





 
5. Enter a phone number then press .

## \*.4 Edit Contacts List

1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Edit Contacts List**.

## \*.5 Delete/Reset

### \*.5.1 Delete Private Browser Data

1. Press , , .
2. Enter the four-digit lock code.
3. Press  **Delete/Reset**.
4. Press  **Delete Private Browser Data**.

### \*.5.2 Delete Contacts

Allows you to erase all of your Contacts at once.

1. Press **MENU OK**, **\***, **\***.
2. Enter the four-digit lock code.
3. Press **5 D** Delete/Reset.
4. Press **2 E** Delete Contacts.
5. In a pop up message, select Yes/No.

### \*.5.3 Delete Downloads

1. Press **MENU OK**, **\***, **\***.
2. Enter the four-digit lock code.
3. Press **5 D** Delete/Reset.
4. Press **3 R** Delete Downloads.
5. Press **MENU OK**.
6. In a pop up message, select Yes/No.

### \*.5.4 Delete Pictures

1. Press **MENU OK**, **\***, **\***.
2. Enter the four-digit lock code.
3. Press **5 D** Delete/Reset.
4. Press **4 S** Delete Pictures.
5. In a pop up message, select Yes/No.

### \*.5.5 Delete Voice Memo

1. Press **MENU OK**, **\***, **\***.
2. Enter the four-digit lock code.
3. Press **5 D** Delete/Reset.
4. Press **5 D** Delete Voice Memo.
5. In a pop up message, select Yes/No.

### \*.5.6 Reset Pic/Video Message

1. Press **MENU OK**, **\***, **\***.
2. Enter the four-digit lock code.

# Settings

3. Press **5 D** **Delete/Reset**.
4. Press **6 F** **Reset Pic/Video Message**. (A disclaimer appears.)
5. Read the disclaimer and press **MENU OK**.
6. Select **Yes** or **No**.

## \*.5.7 Reset All Settings

Resetting the current default settings restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Scheduler, and Messaging are not affected.

1. Press **MENU OK**, **\***, **\***.
2. Enter the four-digit lock code.
3. Press **5 D** **Delete/Reset**.
4. Press **7 Z** **Reset All Settings**. (A disclaimer appears.)

5. Read the disclaimer and press **MENU OK**.
6. If you are certain that you would like to restore all the factory settings, select **Yes**.

## \*.5.8 Reset Phone

Resetting the phone resets all settings and erases all data on your phone.

1. Press **MENU OK**, **\***, **\***.
2. Enter the four-digit lock code.
3. Press **5 D** **Erase/Reset**.
4. Press **8 X** **Reset Phone**. (A disclaimer appears.)
5. Read the disclaimer and press **MENU OK**.
6. If you are certain that you would like to erase all the data and reset your settings, select **Yes**.



## Tools

Allows you to make use of various tools and applications to your phone.

### Access and Options

1. Press **MENU OK**.
2. Press **0 !** Tools.
3. Select a sub-menu.
  1. GPS Nav
  2. Backup
  3. Alarm Clock
  4. Scheduler
  5. Bluetooth
  6. Memory Card Manager
  7. More...

### 1. GPS Nav

Allows you to use GPS Navigation application.

1. Press **MENU OK**, **0 !**, **1 W**.

### 2. Backup

With this, safeguard the contact information stored on your mobile phone against loss, damage or theft. Eliminate the hassle of manually entering contacts when you upgrade your phone. Import contacts from various email service including Outlook, Outlook Express, Yahoo!, Gmail and more.

1. Press **MENU OK**, **0 !**, **2 E**.
2. Use **▲ ▼** to select a setting, then press **MENU OK**.




Backup Manager/ Learn More



### 3. Alarm Clock


Allows you to set one of five alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time,



# Tools



Alarm(1~3), Walk the Dog or Quick Alarm will be displayed on the LCD screen and the alarm will sound.

1. Press , ,  R .
2. Select the alarm you want to edit.  
**Alarm 1/ Alarm 2/ Alarm 3/  
Walk the Dog/ Quick Alarm**

3. Use  to highlight the alarm time then press .

4. Set the time for alarm and press .






5. Use  to highlight **Once** (recurring setting) and press .

6. Press  to select one of the following and press .

**Once / Daily / Mon - Fri /  
Weekends**

For **Quick Alarm** option,  
set **Off/ 1 min later/ 10 min  
later/ 30 min later/ 5 1 hour**


**later**





7. Use  to highlight a tone or an alert and press .
8. Use  to select one of the available alarm ring types and press .
9. Press  to save.

## 4. Scheduler

Allows you to conveniently keep and access your agenda(s). Simply store your appointments and your phone will alert you with a reminder of your appointment.

1. Press , ,  S .

2. Use  to highlight the scheduled day.

-  Moves cursor to the left.
-  Moves cursor to the right.
-  Moves to the previous week.
-  Moves to the next week.

3. Press Left Soft Key **⏪** **Add**.

4. Enter your schedule information including:

- **Date**
- **Time** Press **⏺** to set specific time or press Right Soft Key **⏪** **All day**.
- **Content**
- **Recurring event**  
None/ Daily/ Mon-Fri/ Weekly/ Monthly/ Yearly
- **When to ring the alarm reminder**  
On time/ 5 minutes/ 10 minutes/ 1 hour/ 1 day/ 2 days/ None
- **Which ring alarm to sound**  
(Tone1 ~ 10/ Shine/ Radical Party/ Welcome Back/ Stranger/ Tears/ Mystique/ Next Time/ Jack Coke/ Never Stop/ Wah Wah/ Beat/ L.O.V.E./ Like a Movie/ This time/ Light Flash/ Law of

Motion/ Funky Band/  
Easy Rider/ Turn Me On/  
Deep Blue Sea/ Morning  
Walk/ Walk in the woods/  
Evening Walk)

5. Press Left Soft Key **⏪** **Save**.  
When you exit without saving, you are asked to select Return to Edit/ Save and Exit/ Exit in a pop up message.

#### Note

Scheduler will not alert you during a call or during SMS transmission. It will sound the reminder after you exit a call.

## 5. Bluetooth

The LG 600 is compatible with devices that support the Bluetooth® headset and hands-free profile(s). You may create and store 20 pairings within the LG 600 and connect to one device at a time. The approximate communication range for Bluetooth® wireless technology is

# Tools

up to 30 feet (10 meters).

## Bluetooth QD ID B014029

### Note

- Read user guide of each Bluetooth accessory that you are trying to pair with your phone because the instructions may be different.
- The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.
- Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology.

### 5.1 Pair with Hands Free

1. Press , , , .

### 5.2 Send a Contact







1. Press , , , .

### 5.3 Send Files





1. Press , , , .

### 5.4 Add New

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

1. Press , , , .
2. Use  to select a setting, then press .  
Headset/Car Kits/ All/  
Phone/ PDA/ PC/ Printer

### 5.5 Trusted Devices

1. Press , , , .
2. If Bluetooth device is set to off, you will be prompted to turn power on. Select Yes.

### 5.6 More...









#### 5.6.1 Settings

You can control the settings to

use the Bluetooth wireless technology via your phone. Your proper setting is a prerequisite for the maximization of the functionality.

### 5.6.1.1 On/Off







 

Allows you to set the *Bluetooth* power On/Off.

1. Press , , , , .
2. Press  **On/Off**.
3. Use  to select a setting, then press .

**On/ Off**

### 5.6.1.2 Visibility









Allows you to manage your phone's availability to other *Bluetooth* devices.

1. Press , , , , .
2. Press  **Visibility**.
3. Use  to select a setting, then press .

**Hidden/ Visible for 3 min/  
Always Visible**

### 5.6.1.3 Device Name

The My Bluetooth Name section of the Bluetooth Settings menu allows you to select a *Bluetooth* name for your phone. Your phone's *Bluetooth* name will appear to other in-range Bluetooth devices, depending on your visibility settings.

1. Press , , , , .
2. Press  **Device Name**.
3. Press  to clear the current name.
4. Use your keypad to enter a new name and press  to save and exit.

### 5.6.1.4 Device Info

Allows you to display your phone's Bluetooth address.

# Tools

1. Press **MENU OK**, **0**!, **5** D, **6** F, **1** W.
2. Press **4** S **Device Info**.

## 5.6.1.5 Save to

1. Press **MENU OK**, **0**!, **5** D, **6** F, **1** W.
2. Press **5** D **Save to**.
3. Use **▲▼** to select a setting, then press **MENU OK**.

### In Phone/ Memory Card

## 5.6.1.6 Voice Priority

1. Press **MENU OK**, **0**!, **5** D, **6** F, **1** W.
2. Press **6** F **Voice Priority**.
3. Use **▲▼** to select a setting, then press **MENU OK**.

### Hands-free/ Phone/ Device Answered

## 5.6.2 Block List

1. Press **MENU OK**, **0**!, **5** D, **6** F, **2** E.

## 6. Memory Card Manager

See “Memory Card” on page 31.

1. Press **MENU OK**, **0**!, **6** F.

## 7. More...

### 7.1 Voice Control

1. Press **MENU OK**, **0**!, **7** Z, **1** W.
2. Use **▲▼** to select a setting, then press **MENU OK**.  
Call [Name]  
[Type]/[Number]/ Send Msg to [Name]  
[Type]/[Number]/ Find [Name] [Type]/ Missed Alerts/ Voice Guide/ Phone Status/ Training/ Bookmark/ Help/ Exit Voice Control

### 7.2 World Clock

Allows you to determine the current time in another time

zone or country.

1. Press , , , .
2. Use the navigation key to choose different city.
3. Press Left Soft Key **Set DST** to display Daylight Savings Time in the selected location.

## 7.3 Calculator

### 7.3.1 Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to the fifth decimal place.

1. Press , , , , .
2. Enter data.
  - Use to enter plus, minus, slash and multiple calculations.
  - Press to enter period and

to enter plus or minus.

- Press to delete digits or symbols.
- Press Left Soft Key **Clear** to Clear the calculation.
- Press the right soft key to close the calculator.

### 7.3.2 Ez Tip Calculator

Allows you to quickly and easily calculate the amounts for a bill with the amount of the bill, the amount of the tip, and the number of people as variables.







1. Press , , , , .
2. Press Left Soft Key **Reset** if necessary.
3. Press Right Soft Key **Close** to exit this menu.


## 7.4 Notepad

Allows you to add, read, edit,

# Tools

and erase notes to yourself.



1. Press , , , .
2. Press Left Soft Key  on **<ADD>** to write a new note then press Left Soft Key  to save.

In entering a note, use text input mode with Right Soft Key  **Mode**. Also, note that word choices/ suggestions are listed and adding an word to database is asked while entering characters.


## 7.5 Voice Memo

Allows you to add, listen to, and erase short verbal reminders. In the entry of Voice Memo, the recorded Voice Memos are listed. You can select Set As, View Details, Edit Title, Delete This, Delete Multiple, Delete All, Memory Info.

1. Press , , , .

2. Select Left Soft Key  **<RECORD>**.
3. Talk into the microphone after the tone, then press Left Soft Key  **Stop**. The default memo title is the date and time of recording.

## To Playback a Voice Memo

1. Access Voice Memo, highlight the Voice Memo you want to hear, then press .

In the selected Voice Memo, the following options are available:

- Play** Play the selected Voice Memo.  
Speaker On/ Pause/ Stop
- Set As** Contacts Default/  
One Contact/ Unknown #s /  
Voicemail/ Text Message/  
Picture Video Message
- View Details** Title/ Recorded  
On/ Play Time

**Edit Title** Edit the title of the selected Voice Memo. Save/ Edit Mode: Predictive Text/ Symbols/ Smileys/ Settings

**Delete This** Yes/ No

**Delete Multiple**

**Delete All**

**Memory Info**

## 7.6 Document Viewer

Allows you to view document file saved in SD Card. Doc, PPT, xls, PDF or TXT file formats are supported.

1. Press **MENU OK**, **0**, **7**, **6**.

## 7.7 USB Mode

### 7.7.1 Mass Storage

This menu is accessible when your phone is connected to your PC with a data cable and a






microSD™ card is inserted into your phone. Enabling the Mass Storage allows you to connect your phone to your computer to view and transfer music files.

**To enable the Mass Storage Mode:**






1. Make sure that you attach the USB cable to your phone and your computer a microSD™ card is inserted into your phone.
2. Press **MENU OK**, **0**, **7**, **7**, **1**.
3. Select Yes to verify that calls will be disabled when the Mass Storage is enabled. Your phone will then connect to your computer.
4. To exit and disable the Mass Storage, disconnect the USB cable from your phone.

# Tools/ Phone Support

## 7.7.2 Phone As Modem

1. Attach the USB cable to your phone and your computer.
2. Press , , , , .

## 7.7.3 Print

1. Attach the USB cable to your phone and your computer.
2. Press , , , , .

## 7.8 Update Firmware

This feature gives your phone the ability to upgrade to the latest software and keeps your phone operating with the latest features without visiting store for the upgrade.

1. Press , , , .

## Phone Support

### 1. Account Info

Displays the account information of your phone.

1. Press , , .

### 2. Add New Services

Allows you to add new services on your phone.

1. Press , , .

### 3. Phone Information

The Phone Information Menu provides you with specific information pertaining to your phone model.

#### 3.1 Phone Number

Allows you to view your phone number.

1. Press **MENU OK**, **#**?, **3 R**, **1 W**.

## 3.2 Icon Glossary

Allows you to view the icons and their meanings.

1. Press **MENU OK**, **#**?, **3 R**, **2 E**.

## 3.3 Version

Allows you to view the versions of S/W, H/W, PRL, Browser and MCL.

1. Press **MENU OK**, **#**?, **3 R**, **3 R**.

## 3.4 Advanced

Allows you to check information of SID, Channel, Frequency or Technology.

1. Press **MENU OK**, **#**?, **3 R**, **4 S**.

## 4. Security

See “Security” on page 58.

## 5. Live Assistance

Connects you to the Customer Service Center.

1. Press **MENU OK**, **#**?, **5 D**.

## 6. Text Assistance

Sends a text message for assistance.

1. Press **MENU OK**, **#**?, **6 F**.

# Safety

## TIA (Telecommunications Industry Association) Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

### Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- ANSI C95.1 (1992) \*
- NCRP Report 86 (1986)
- ICNIRP (1996)
- Health Canada, Safety Code 6, 1999.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines, IC Regulations (and those standards).

### Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas,

modifications, or attachments could damage the phone and may violate FCC regulations.

## Phone Operation

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

## Tips on Efficient Operation

For your phone to operate most efficiently:

Do not press the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

## Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and

always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law so require.

## Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

## Pacemakers

The Health Industry Manufacturers Association

# Safety

recommends that a minimum separation of six inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

## Persons with Pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

## Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) Optional for each phone manufacturer.

## Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

## Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals

or health care facilities may use equipment that could be sensitive to external RF energy.

## **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## **Posted Facilities**

Turn your phone OFF in any facility where posted notices so require.

## **Aircraft**

FCC and Transport Canada regulations prohibit using your phone while in the air. Switch

OFF your phone before boarding an aircraft.

## **Blasting Areas**

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

## **Potentially Explosive Atmosphere**

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations);

# Safety

below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

## For Vehicles Equipped with an Air Bag

An air bag inflates with great force. **DO NOT** place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.

## Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- Do not dispose of your battery by fire or with hazardous or flammable materials.
- Never use an unapproved battery since this could damage the phone and/or battery and could cause the

battery to explode.

- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.

- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.

## Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user's guide in an accessible place at all the times after reading it.

### Explosion, Shock, and Fire Hazards

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of this causing a fire.

# Safety

- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the

phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Never place your phone in a microwave oven as it will cause the battery to explode.

### **General Warnings and Cautions**

- Only use the batteries, antennas, and chargers provided by LG. The warranty

will not be applied to products provided by other suppliers.

- Store the battery in a place out of reach of children.
- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Do not hold or let the antenna come in contact with your body during a call.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.

# Safety

- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not press the antenna unnecessarily.

## Warning! Important safety information

### Avoiding hearing damage

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or

muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

### **Using your phone safely**

Use of your phone while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

### **Using headsets safely**

Use of headsets to listen to music while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

## FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the Main Menu Screen. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects

causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### 2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if

wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health

# Safety

participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure.

The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety

questions discussed in this document.

### **3. What kinds of phones are the subject of this update?**

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user’s head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance

from the source. The so called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

#### **4. What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of

cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or

# Safety

other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

## **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists.

Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

## 6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information

documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

# Safety

## **7. How can I find out how much radio frequency energy exposure I can get by using my wireless phone?**

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and

Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

## **8. What has the FDA done to measure the radio frequency energy coming from wireless phones?**

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard

for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, “Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,” sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of

energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

## **9. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?**

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a

# Safety

wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## 10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a

wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

### **11. What about wireless phone interference with medical equipment?**

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical

instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was

# Safety

approved by the IEEE in 2000. The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

## 12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones  
(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications  
Commission (FCC) RF Safety  
Program  
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on  
Non-Ionizing Radiation Protection  
(<http://www.icnirp.de>)

World Health Organization  
(WHO) International EMF Project  
(<http://www.who.int/emf>)

National Radiological Protection  
Board (UK)  
(<http://www.nrp.org.uk/>)

## Consumer Information on SAR

(Specific Absorption Rate)  
This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the

recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy. The exposure Limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to

# Safety

account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC

that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party beltclips, holsters, and similar accessories containing metallic components should not be used. Body-worn

accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. The highest SAR value for this model phone when tested for use at the ear is 1.36 W/kg and when worn on the body, as described in this user's manual, is 0.432 W/kg. While there may be differences between SAR levels of various phones and at various positions,

they all meet the government requirement for safe exposure. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional information on Specific

# Safety

Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

\*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

# Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

---

## Battery Charger

The battery charger allows you to charge your phone.



## Battery

Standard battery is available.



## Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle.



# Warranty Information

## **1. WHAT THIS WARRANTY COVERS:**

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product by the original end user.
- (2) The limited warranty extends only to the original end user of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original end user of the product during the warranty period as long as it is in Canada.
- (4) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (5) During the applicable warranty period, LG will repair or replace at LG's sole option, without charge to the original end user, any defective component part of the phone or accessory.
- (6) LG may, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product.

## **2. WHAT THIS WARRANTY DOES NOT COVER:**

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by spills of food or liquids.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) If the carrier's or manufacturer's Customer Service Centre was not notified by the end user of the alleged defect or malfunction of the product, during the warranty period.
- (5) Products which have had their serial numbers removed or made illegible.
- (6) Damage resulting from use of non-LG approved accessories.
- (7) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (8) Products serviced by non-authorized persons or companies.

### **Notes:**

- (1) This limited warranty is in lieu of all other warranties, express or

# Warranty Information

implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose.

- (2) Shipping damage is the sole responsibility of the shipping company.

### **3. EXCLUSION OF LIABILITY:**

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS CANADA, INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES,

DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF Merchantability APPLICABLE TO THIS PRODUCT.

### **4. HOW TO GET WARRANTY SERVICE:**

To obtain warranty service, please call the following telephone number from anywhere in Canada:

LG Electronics Canada, Inc.  
Tel. 1-888-542-2623