

Canon

Digital Video Camcorder
Instruction Manual

PUB. DIE-295

MD205

MD215

MD216

MD235

Mini **DV** Digital
Video
Cassette



PAL

Cleaning the Video Heads

Digital video camcorders record video signals onto the tape in very thin lines (as thin as 1/8 the width of a hair). The following anomalies may appear if the video heads become dirty even a little.

- Mosaic or other blocky video artifacts (Fig. 1) or banding (Fig. 2) appear on the picture during playback.
- Sound becomes distorted, or there is no sound during playback.
- The message “HEADS DIRTY, USE CLEANING CASSETTE” appears.



Fig. 1

If such symptoms appear, clean the video heads with the Canon DVM-CL Digital Video Head Cleaning Cassette* or a commercially available dry cleaning cassette.

If the symptoms reappear shortly after the cleaning, the videocassette may be defective. Stop using it.

* Availability differs from area to area.



Fig. 2

Video heads may become dirty under the following conditions:

- When using the camcorder in humid or hot places.
- When using cassettes with damaged or dirty tapes.
- When using the camcorder in dusty places.
- When using the video heads for a long time without cleaning them.

NOTES

- Before you make important recordings, clean the video heads and make a test recording first. We also recommend cleaning the video heads after use, before storing the camcorder.
- Do not use wet type cleaning cassettes as this may damage the camcorder.
- Even after cleaning the video heads you may not be able to play back correctly tapes that were recorded with dirty video heads.

Important Usage Instructions

WARNING!

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING!

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

CAUTION:

DISCONNECT THE MAINS PLUG FROM THE SUPPLY SOCKET WHEN NOT IN USE.

The Mains plug is used as the disconnect device. The Mains plug shall remain readily operable to disconnect the plug in case of an accident.

While using the compact power adapter, do not wrap it or cover it with a piece of cloth, and do not place it in confined narrow spaces. Heat may build up, the plastic case may deform and it could result in electric shock or fire.

CA-590E identification plate is located on the bottom.



Using any device other than the Compact Power Adapter CA-590E may damage the camcorder.

European Union (and EEA) only.

This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC) and your national law. This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service. For more information regarding return and recycling of WEEE products, please visit www.canon-europe.com/environment. (EEA: Norway, Iceland and Liechtenstein)


Table of contents

Introduction

- 8 About this Manual
- 9 Getting to Know the Camcorder**
- 9 Supplied Accessories
- 10 Components Guide
- 13 Screen Displays

Preparations

- 15 Getting Started**
- 15 Charging the Battery Pack
- 17 Installing the Backup Battery
- 17 Preparing the Wireless Controller (**MD235** only) and Accessories
- 19 Basic Operation of the Camcorder**
- 19 Operating Modes
- 19 Joystick and Joystick Guide
- 20 Using the Menus
- 22 First Time Settings**
- 22 Changing the Language
- 22 Changing the Time Zone
- 23 Setting the Date and Time
- 23 Getting Ready to Start Recording**
- 23 Opening the Lens Cover and Adjusting the LCD Screen
- 25 Inserting and Removing a Tape

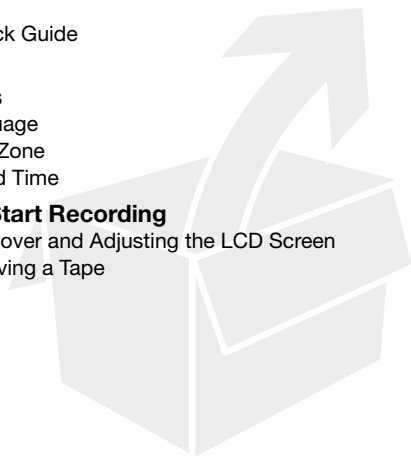

Video

- 26 Basic Recording**
- 26 Shooting Video
- 28 Zooming: Optical, Advanced and Digital Zoom
- 30 Quick Start Function
- 31 Reviewing the Last Scene Recorded
- 31 Basic Playback**
- 31 Playing Back Video
- 33 **MD235** Returning to a Pre-marked Position
- 33 **MD235** Locating the Beginning of a Recording Date
- 34 Locating the End of the Last Scene
- 34 On-Screen Displays (Data Code)
- 35 Advanced Function**
- 35 **P**: Special Scene Recording Programs
- 37 **P** Flexible Recording: Changing the Shutter Speed
- 38 LCD Video Light
- 38 Self Timer
- 39 Audio Recording Mode
- 40 Audio Playback Modes
- 41 Manual Focus Adjustment
- 42 Manual Exposure Adjustment
- 42 White Balance
- 43 Image Effects
- 44 Digital Effects

External Connections

46 Connecting to a TV or VCR

47 Connection Diagrams

48 Playback on a TV Screen

48 Copying your Recordings to an External Video Recorder

49 **MD235** Audio Dubbing

51 Connecting to a Computer

51 PC Connection Diagram

52 Transferring Video Recordings



Additional Information

53 Appendix: Menu Options Lists

- 53 FUNC. Menu
- 54 Setup Menus
 - 54 Camera Setup (Advanced Zoom, Image Stabilizer, etc.)
 - 55 VCR Setup (Recording Mode, TV Type, etc.)
 - 55 Audio Setup (Audio Mode, Wind Screen, etc.)
 - 56 Display Setup (LCD Brightness, Language, etc.)
 - 57 System Setup (Beep, Power Save, etc.)
 - 58 Date/Time Setup

59 Trouble?

- 59 Troubleshooting
- 61 List of Messages

63 Do's and Don'ts

- 63 Handling Precautions
- 65 Maintenance/Others
- 67 Using the Camcorder Abroad

68 General Information

- 68 System Diagram
- 69 Optional Accessories
- 72 Specifications
- 75 Index



About this Manual

Thank you for purchasing the Canon MD235/MD216/MD215/MD205. Please read this manual carefully before you use the camcorder and retain it for future reference. Should your camcorder fail to operate correctly, refer to *Troubleshooting* (□ 59).


Conventions Used in this Manual

- **!** IMPORTANT: Precautions related to the camcorder's operation.
- **i** NOTES: Additional topics that complement the basic operating procedures.
- **✓** POINTS TO CHECK: Restrictions or requirements regarding the function described.
- □ : Reference page number.
- **MD235** : Text that applies only to the model(s) shown in the icon.
- "Screen" refers to the LCD and the viewfinder screen.
- The photos included in the manual are simulated pictures taken with a still camera. Note that unless indicated otherwise, illustrations in this manual refer to the **MD235** model.

Buttons and switches to be operated

Brackets [] and capital letters are used to refer to menu options as they are displayed on screen. In tables in this manual the default value is shown in boldface. For example **[ON]**, **[OFF]**.


Names of buttons and switches other than the joystick are indicated within a "button" frame. For example **FUNC.**.

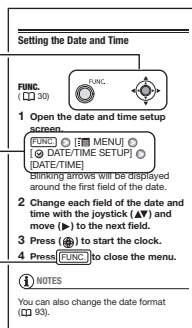

Supplied Accessories



 CA-590E Compact Power Adapter
(incl. power cord)



BP-2L5 Battery Pack

Lithium Button Battery
(CR1616)



STV-250N Stereo Video Cable
(**MD235** incl. ferrite core)




MD235 WL-D85
Wireless Controller



MD235 Lithium Button
Battery (CR2025) for
Wireless Controller


Components Guide

Left side view

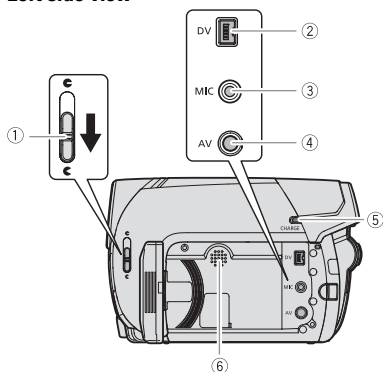


- ① Lens cover switch (26)
(☺ open, ☹ closed)
- ② DV terminal (47, 51)
- ③ MIC (microphone) terminal (39)
- ④ AV terminal (47)
- ⑤ CHARGE indicator (15)
- ⑥ Speaker
- ⑦ Mode switch (27)
EASY Easy recording
P Recording programs
- ⑧ Grip belt (18)
- ⑨ Strap mount (71)
- ⑩ Lock button
- ⑪ POWER switch (19)
- ⑫ Stereo microphone

Right side view

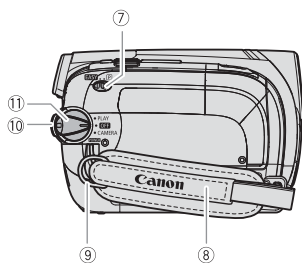


Names of buttons and switches other than the joystick are indicated within a “button” frame (for example FUNC.).


Front view

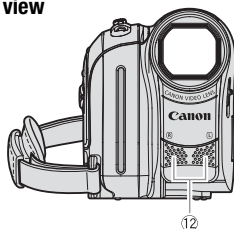


Back view

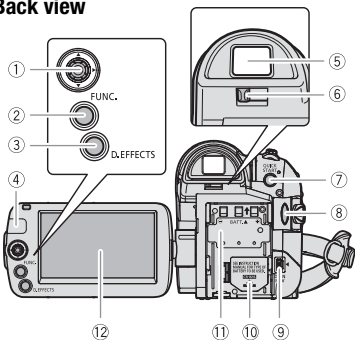

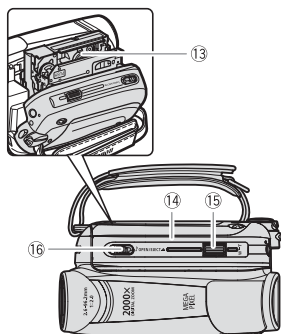

Top view

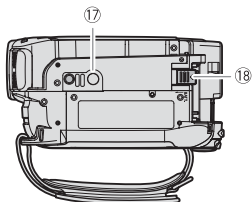


Bottom view



- ① Joystick (☐ 19)
- ② FUNC. button (☐ 20, 53)
- ③ D.EFFECTS button (☐ 44)
- ④ **MD235** Remote sensor (☐ 18)
- ⑤ Viewfinder (☐ 28)
- ⑥ Dioptic adjustment lever (☐ 28)
- ⑦ QUICK START button (☐ 30)
- ⑧ Start/Stop button (☐ 26)
- ⑨ DC IN terminal (☐ 15)
- ⑩ Backup battery compartment (☐ 17)
- ⑪ Serial number/
Battery attachment unit (☐ 15)
- ⑫ LCD screen (☐ 23)
- ⑬ Cassette compartment (☐ 25)
- ⑭ Cassette compartment cover (☐ 25)
- ⑮ Zoom lever (☐ 28)
- ⑯ OPEN/EJECT  switch (☐ 25)
- ⑰ Tripod socket (☐ 18)
- ⑱ BATT. (battery release) switch (☐ 15)

Names of buttons and switches other than the joystick are indicated within a "button" frame (for example .

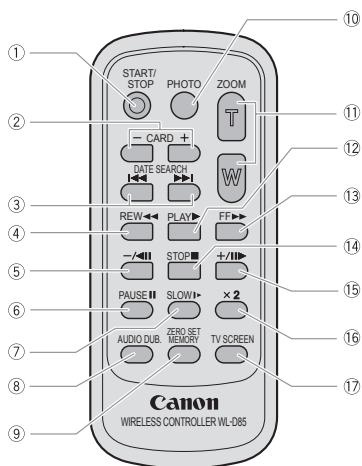
MD235 Wireless Controller WL-D85

- ① START/STOP button (☐ 26)
- ② CARD -/+ buttons*
- ③ DATE SEARCH ◀◀/▶▶ buttons (☐ 33)
- ④ REW ◀◀ button (☐ 31)
- ⑤ -/▶ button (☐ 31)
- ⑥ PAUSE || button (☐ 31)
- ⑦ SLOW ▶▶ button (☐ 31)
- ⑧ AUDIO DUB. button (☐ 49)
- ⑨ ZERO SET MEMORY button (☐ 33)
- ⑩ PHOTO button*
- ⑪ Zoom buttons (☐ 28)
- ⑫ PLAY ▶ button (☐ 31)
- ⑬ FF ▶▶ button (☐ 31)
- ⑭ STOP ■ button (☐ 31)
- ⑮ +/▶▶ button (☐ 31)
- ⑯ x2 button (☐ 31)
- ⑰ TV SCREEN button (☐ 57)


* **MD235** Still images cannot be recorded or played back using this model. Please disregard these buttons.


Screen Displays

CAMERA Recording Movies

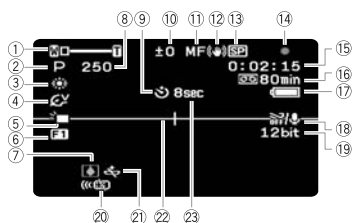

PLAY Playing Movies

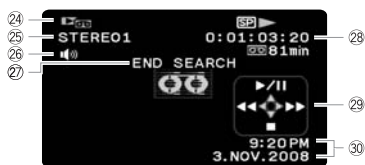

- ① Zoom (□ 28), Exposure  (□ 42)
- ② Recording program (□ 35)
- ③ White balance (□ 42)
- ④ Image effect (□ 43)
- ⑤ LCD video light (□ 38)
- ⑥ Digital effects (□ 44)
- ⑦ Condensation warning (□ 66)
- ⑧ Shutter speed (□ 37)
- ⑨ Self timer (□ 38)
- ⑩ Exposure adjustment (□ 42)
- ⑪ Manual focus (□ 41)
- ⑫ Image stabilizer (□ 54)
- ⑬ Recording mode (□ 55)
- ⑭ Tape operation (□ 14)
- ⑮ Time code (hours : minutes : seconds)
- ⑯ Remaining tape (□ 14)
- ⑰ Remaining battery charge (□ 14)
- ⑱ Wind screen off (□ 56)
- ⑲ Audio recording mode (□ 39)
- ⑳ **MD235** Remote sensor off (□ 57)
- ㉑ Backup battery warning (□ 17)
- ㉒ Level marker (□ 57)
- ㉓ Recording reminder (□ 14)
- ㉔ Operating mode (□ 19)
- ㉕ Audio playback mode (□ 40)
- ㉖ Speaker volume (□ 32)
- ㉗ Search function display
END SEARCH (□ 34)/
MD235 DATE SEARCH (□ 33)
- ㉘ Playback time
(hours : minutes : seconds : frames)
- ㉙ Joystick guide (□ 19)
- ㉚ Data code (□ 34)


 
14 Tape operation

Note that some playback and search modes are only available when using the wireless controller (not included with all models).

- Record, ● || Record pause,
- Stop, ▲ Eject,
- ▶▶ Fast forward, ◀◀ Rewind,
- ▶ Playback, ▶ || Playback pause,
- || ◀ Reverse playback pause,
- x1 ▶ Playback (normal speed),
- ◀x1 Reverse playback (normal speed),
- x2 ▶ Playback (double speed),
- ◀x2 Reverse playback (double speed),
- ▶▶ Fast forward playback,
- ◀◀ Rewind playback,
- ▶ Slow playback,
- ◀ Slow reverse playback,
- ||▶ Frame advance,
- ◀|| Frame reverse,
- ◀◀/▶▶ Date search (□ 33),
- ◀◀ / ▶▶ Zero set memory (□ 33)

16 Remaining tape


Indicates the remaining time of the tape in minutes.

 moves during recording. When the tape reaches its end, the display changes to " END".

- When the time left is less than 15 seconds, the remaining tape time may not appear.
- Depending on the type of tape, the remaining time displayed may not be correct. In any case, you will be able to record on the tape the number of minutes that appears on the cassette's label (for example, 85 minutes).

17 Remaining battery charge



- When  starts flashing in red replace the battery pack with a fully charged one.
- When you attach an empty battery pack, the power may turn off without displaying the icon.
- Depending on the conditions under which the camcorder and the battery pack are used, the actual battery charge may not be indicated accurately.

23 Recording reminder

The camcorder counts from 1 to 10 seconds when you start recording. This is helpful to avoid scenes that are too short.



Preparations

This chapter describes basic operations, such as navigating the menus, and first time settings to help you learn more about your camcorder.


 
Getting Started

Charging the Battery Pack

The camcorder can be powered with a battery pack or directly using the compact power adapter. Charge the battery pack before use.


For approximate charging times and recording/playback times with a full battery pack, refer to the tables on page 70.

Remove the battery terminal cover before attaching the battery

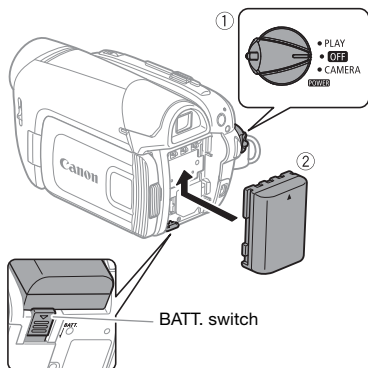

- 1 Turn off the camcorder.
- 2 Attach the battery pack to the camcorder.

Press the battery pack lightly and slide it up until it clicks.

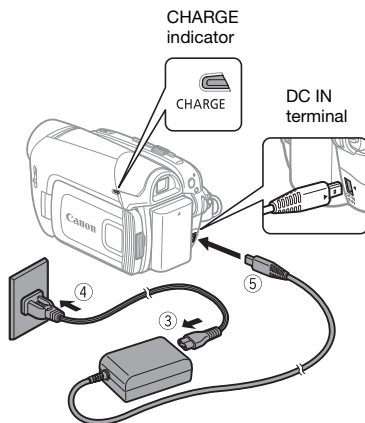

- 3 Connect the power cord to the compact power adapter.
- 4 Plug the power cord into a power outlet.
- 5 Connect the compact power adapter to the camcorder's DC IN terminal.
 - The CHARGE indicator starts flashing. The indicator will stay on when the charging is completed.

- You can also use the compact power adapter without attaching a battery pack.
- When the compact power adapter is connected, even if a battery is attached its power will not be consumed.

ONCE THE BATTERY IS FULLY CHARGED

- 1 **Disconnect the compact power adapter from the camcorder.**
- 2 **Unplug the power cord from the power outlet and the compact power adapter.**

TO REMOVE THE BATTERY PACK

Press **BATT.** to release the battery pack. Slide the battery pack down and then pull it out.

! IMPORTANT

- You may hear some noise from the compact power adapter during use. This is not a malfunction.
- We recommend charging the battery pack in temperatures between 10 °C and 30 °C. Outside the temperature range of 0 °C to 40 °C, charging will not start.
- Do not connect to the camcorder's DC IN terminal or to the compact power adapter any electrical equipment that is not expressly recommended for use with this camcorder.
- To prevent equipment breakdowns and excessive heating, do not connect the supplied compact power adapter to voltage converters for overseas travels or special power sources such as those


on aircraft and ships, DC-AC inverters, etc.

i NOTES


- The CHARGE indicator also serves as a rough estimate of the battery charge status.
Continuously on: Battery pack fully charged.
Two quick flashes at 1-second intervals: Battery pack at least 50% charged. If the indicator flashes quickly but not exactly in this pattern, refer to *Troubleshooting* (□ 59).
One flash at 1-second intervals: Battery pack less than 50% charged.
- We recommend that you prepare battery packs 2 to 3 times longer than you think you might need.

Installing the Backup Battery

The backup battery (lithium button battery CR1616) allows the camcorder to retain the date, time (☐ 23) and other camcorder settings while the power source is disconnected. Connect a power source to the camcorder when replacing the backup battery to retain the settings.

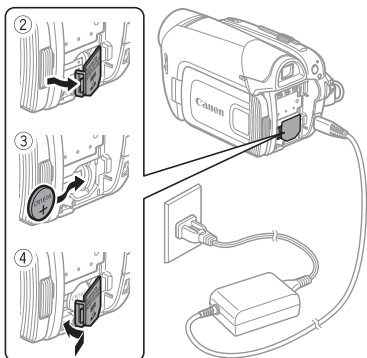

 - 1 If a battery pack is attached, remove it first.
- 2 Open the backup battery cover.
- 3 Insert the backup battery with the + side facing out.




- 4 Close the cover.

i NOTES

The battery life of the backup battery is about one year. flashes in red when the lithium button battery is not installed, or when it needs to be replaced.


Preparing the Wireless Controller (MD235 only) and Accessories

First, insert the supplied lithium button battery (CR2025) into the wireless controller.

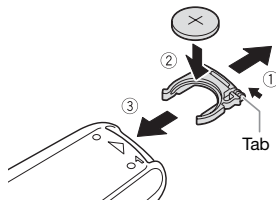

- 1 Press the tab in the direction of the arrow and pull out the battery holder.
- 2 Place the lithium button battery with the + side facing up.
- 3 Insert the battery holder.

TO USE THE WIRELESS CONTROLLER

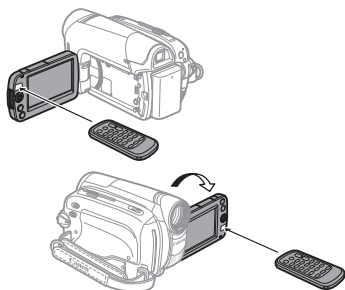


Point the controller at the camcorder's remote sensor when you press the buttons.

You can rotate the LCD panel 180 degrees to use the wireless controller from the front of the camcorder.

i NOTES

- The wireless controller may not work properly when the remote sensor is situated under strong light sources or direct sunlight.
- If the wireless controller does not work, check that [WL.REMOTE] is not set to [OFF] (OFF) (p. 57). Otherwise, replace the battery.

Accessories

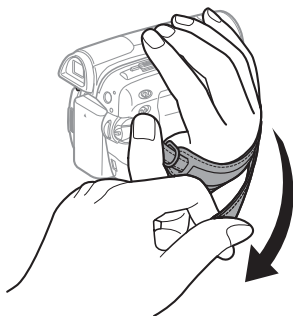


Fasten the grip belt.

Adjust the grip belt so that you can reach the zoom lever with your index finger, and the [Start/Stop] button with your thumb.



 WHEN YOU MOUNT THE CAMCORDER ON A TRIPOD

Do not leave the viewfinder exposed to direct sunlight as it may melt (due to concentration of the light by the lens). Do not use tripods with fastening screws longer than 5.5 mm. Doing so may damage the camcorder.







Basic Operation of the Camcorder

 
Operating Modes


The camcorder's operating mode is determined by the position of the **POWER** switch. In the manual,  indicates that a function is available in the operating mode shown and  indicates that the function is not available. When no operating mode icons are given, the function is available in both operating modes.


Joystick and Joystick Guide








Use the joystick to operate the camcorder's menus.

Push the joystick up, down, left or right (, , , ) to select an item or change settings.



Press the joystick itself () to save the settings or confirm an action. On menu screens, this is indicated by the icon **SET**.

The joystick can also be used in combination with the joystick guide to operate additional functions. Press () to display/hide the joystick guide (when recording, the joystick guide will appear only when the mode switch is set to **P**). The functions that appear on the joystick guide will change depending on the operating mode.


Operating mode	POWER switch	Icon display	Operation	
	 CAMERA		Recording movies.	26
	 PLAY		Playing movies.	31

Using the Menu

Many of the camcorder's functions can be adjusted from the menus that open after pressing the FUNC. button (FUNC.).

For details about the available menu options and settings, refer to the appendix *Menu Options Lists* (53).

Selecting a FUNC. Menu Option

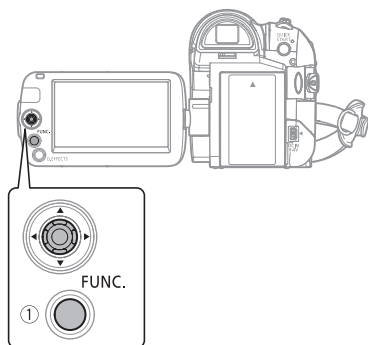

1 Press FUNC. .

2 Select (▲▼) the icon of the function you want to change from the left side column.

Menu items not available will appear grayed out.



3 Select (◀▶) the desired setting from the available options at the bottom bar.

- The selected option will be highlighted in light blue. Menu items not available will appear grayed out.
- With some settings you will need to make further selections and/or press (⊙). Follow the additional operation guides that will appear on the screen (such as the joystick icon ⬆, small arrows, etc.).

4 Press FUNC. to save the settings and close the menu.

You can press FUNC. to close the menu at any time.

Selecting an Option from the Setup Menu

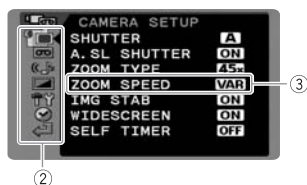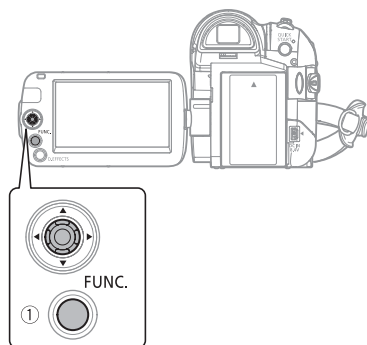

- 1 Press **[FUNC.]**.
- 2 Select (**▲▼**) the icon and press (**⊗**) to open the setup menus.
- 3 Select (**▲▼**) the desired menu from the left side column and press (**⊗**).

The title of the selected menu appears on top of the screen and under it the list of settings.

- 4 Select (**▲▼**) the setting you want to change and press (**⊗**).
 - An orange frame will indicate the menu item currently selected. Menu items not available will appear grayed out.
 - To return to the menu selection screen, select (**▼**) [**↩** RETURN] and press (**⊗**).

- 5 Select (**▲▼**) the desired option and press (**⊗**) to save the setting.

- 6 Press **[FUNC.]**.

You can press **[FUNC.]** to close the menu at any time.

NOTES

Instead of steps 1 and 2, you can also keep **[FUNC.]** pressed down for more than 1 second to open the setup menus screen directly.

Abbreviation of Menu Selections in this Manual

In this manual, the arrow is used to abbreviate menu selections. Below is an example of changing a setting using the setup menus.

[FUNC.]
[MENU]
[DISPLAY SETUP/]
[LANGUAGE]
Desired language

[FUNC.]
For selections in the **[FUNC.]** menu, the abbreviated form will always show the initial default value. In recording mode, its icon will appear on the left side column when you first open the menu. If the setting was changed, the icon of the currently selected option will appear instead.

[FUNC.]
[IMAGE EFFECT OFF]
Desired image effect
[FUNC.]

First Time Settings

Changing the Language

The language for on-screen and menu displays can be changed. The list of available languages depends on the region where you purchased the camcorder.

◆ Default value

Language Set A

Czech, German, Greek, English◆, Spanish, French, Italian, Hungarian, Polish, Romanian, Turkish, Russian, Ukrainian, Arabic and Persian.

Language Set B

English◆, Malay, Simplified Chinese, Traditional Chinese and Thai.

FUNC.
([] 20)



FUNC. >

[MENU] >

[DISPLAY SETUP/] >

[LANGUAGE] >

Desired language >

FUNC.

i NOTES

- If you changed the language by mistake, follow the [] mark next to the menu item to change the setting.
- The display **FUNC.** that appears in some menu screens refers to the name of the button on the camcorder and will not change, regardless of the language selected.

Changing the Time Zone

Change the time zone to match your location. The default setting is Paris or Singapore, depending on the region of purchase.

FUNC.
([] 20)



FUNC. >

[MENU] >

[DATE/TIME SETUP] >

[T.ZONE/DST] >

Desired time zone* >

FUNC.

* To adjust for daylight saving time, select the time zone with the ☀ mark next to the area.

World Time Zones

Once you have set the time zone, date and time, you do not need to reset the clock every time you travel to another time zone. Select the time zone to match the local time at your destination, referring to the date and time displayed on the screen.

Setting the Date and Time

FUNC.
(20)



1 Open the date and time setup screen.

FUNC. [MENU]
 [DATE/TIME SETUP]
 [DATE/TIME]

Blinking arrows will be displayed around the first field of the date.

2 Change each field of the date and time with the joystick () and move () to the next field.

3 Press () to start the clock.

4 Press **FUNC.** to close the menu.


NOTES

You can also change the date format (58).

Getting Ready to Start Recording

Opening the Lens Cover and Adjusting the LCD Screen

Before you start recording, open the lens cover.

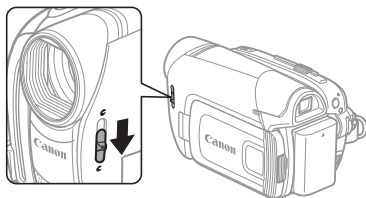


Move the lens cover switch down to to open the lens cover.

Rotating the LCD Panel

Open the LCD panel 90 degrees.


You can rotate the panel 90 degrees downward.

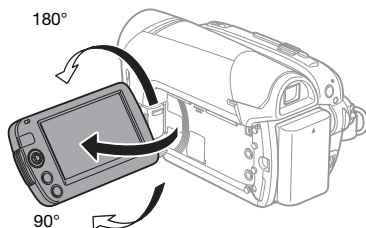

You can rotate the panel 180 degrees toward the lens (allowing the subject to monitor the LCD screen while you use the viewfinder). This is the only case where you can use the viewfinder and

the LCD screen simultaneously. Rotating the LCD panel 180 degrees can be useful in the following cases:

- When you wish to include yourself in the picture when recording with the self timer.
- **MD235** To allow the camcorder to be operated with the wireless controller from the front.

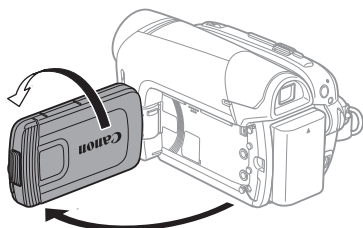


Subject can monitor the LCD screen

i NOTES

About the LCD and viewfinder screen: The screens are produced using extremely high-precision manufacturing techniques, with more than 99.99% of the pixels operating to specification. Less than 0.01% of the pixels may occasionally misfire or appear as black, red, blue or green dots. This has no effect on the recorded image and does not constitute a malfunction.

LCD Backlight

You can set the brightness of the LCD screen to normal or bright.

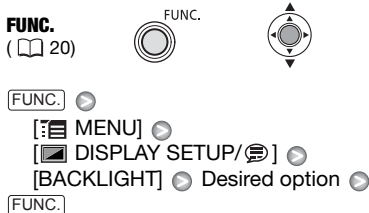


i NOTES

- This setting does not affect the brightness of the recording or the viewfinder screen.
- Using the [BRIGHT] setting will shorten the effective usage time of the battery pack.

Inserting and Removing a Tape

Use only videocassettes marked with the **Mini DV** logo.

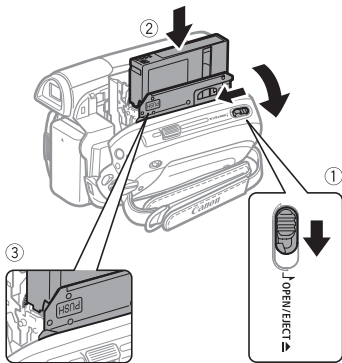


- 1 Slide **OPEN/EJECT** fully in the direction of the arrow and open the cassette compartment cover.

The cassette compartment opens automatically.

- 2 Insert the cassette.

- Insert the cassette with the window facing the grip belt.
- To remove a cassette pull it straight out.

- 3 Press the **PUSH** mark on the cassette compartment until it clicks.

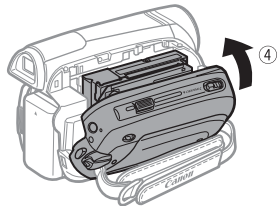

- 4 Wait for the cassette compartment to retract automatically and close the cassette compartment cover.

IMPORTANT

- Do not interfere with the cassette compartment while it is opening or closing automatically, or attempt to close the cover before the cassette compartment has fully retracted.
- Be careful not to get your fingers caught in the cassette compartment cover.

NOTES

If the camcorder is connected to a power source, cassettes can be inserted/removed even if the **POWER** switch is set to **OFF**.



Video


This chapter covers functions related to shooting and playing back movies – from basic recording and zooming to more advanced manual picture adjustments.

Basic Recording

Shooting Video

Before You Begin Recording

Make a test recording first to check if the camcorder operates correctly. If necessary, clean the video heads (19).

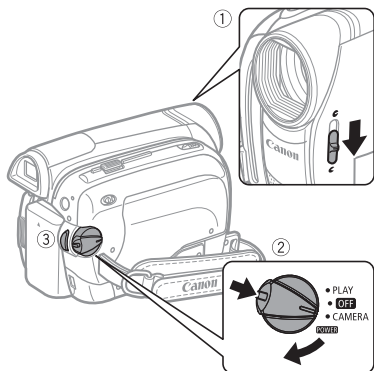

- 1 Move the lens cover switch down to to open the lens cover.
- 2 Holding the lock button pressed down, set the **POWER** switch to **CAMERA**.
- 3 Press **[Start/Stop]** to begin recording.
Press **[Start/Stop]** again to pause the recording.

WHEN YOU HAVE FINISHED RECORDING

- 1 Close the lens cover and the LCD panel.
- 2 Turn off the camcorder.
- 3 Remove the tape.
- 4 Disconnect the power source and remove the battery pack.

! IMPORTANT

When recording movies, try to get a calm, stable picture.

Excessive camcorder movement while shooting and extensive use of fast zooms and panning can result in jittery scenes. In extreme cases, the playback of such scenes may result in visually induced motion sickness. If you experience such a reaction, immediately stop the playback and take a rest break as necessary.

i NOTES

- **About the recording time:** By changing the recording mode you can change the video quality and as a result, also the available recording time (□□ 55).
- Previous recordings overwritten by a new recording cannot be recovered. Before you start recording, search for the end of the last recording (□□ 34).
- To protect the tape and video heads, the camcorder will enter the stop mode (■) if left in record pause (● ||) mode for 4 minutes 30 seconds. To resume recording press [Start/Stop].
- **About the Power Save mode:** To save power when the camcorder is powered by a battery pack, the camcorder will automatically shut off if left without any operations for 5 minutes (□□ 58). To restore the power, turn the camcorder off and then on again.
- When recording in very loud places (such as fireworks shows or concerts), sound may become distorted or it may not be recorded at the actual levels. This is not a malfunction.

About the Mode Switch and Recording Programs

Set the mode switch to **EASY** to let the camcorder adjust all the settings for you, allowing you to just point the camcorder and start shooting.




Set the mode switch to **P** to select one of the recording programs. The Special Scene recording programs (□□ 35) offer a convenient way to select the optimal settings to match special recording conditions. The **[P PROGRAM AE]** recording program (□□ 37), on the other hand, allows you to set the shutter speed you want, or enjoy the flexibility to change other settings.



Using the Viewfinder

When recording in bright places it may be difficult to use the LCD screen. In such case, change the brightness of the LCD screen (□ 24, 57) or use the viewfinder instead. To use the viewfinder, keep the LCD panel closed*.

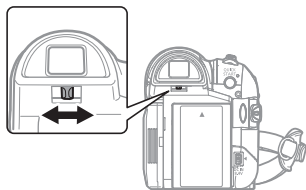

Adjust the viewfinder as necessary with the dioptic adjustment lever.

* The LCD screen and the viewfinder can be used simultaneously only when the LCD panel is turned 180 degrees to face the subject (□ 23).

Zooming: Optical, Advanced and Digital Zoom

The camcorder offers three types of zoom: optical, advanced and digital zoom. You can also change the zoom speed.

Selecting the Zoom Type

CAMERA | **PLAY** (□ 19)

Options

♦ Default value

[OPTICAL] (37x, MD205 32x)

The zoom range is limited to the optical magnification ratio of the lens.

[ADVANCED] ♦ (Advanced Zoom)

In addition to the optical zoom range, the camcorder processes the image digitally to obtain a larger zoom range without any deterioration in image quality. When recording movies with a 16:9 aspect ratio, the field of view (picture angle) will change. Refer to the table in the NOTES section.

[DIGITAL] (2000x)

When this option is selected, the camcorder will switch to digital zoom (light blue area on the zoom indicator) when you zoom in beyond the optical zoom range (white area on the zoom indicator). With the digital zoom the image is processed digitally so image quality will deteriorate the more you zoom in.

FUNC.
(□ 20)





- [FUNC.]
- [MENU]
- [CAMERA SETUP]
- [ZOOM TYPE] Desired option
- [FUNC.]

NOTES

- The zoom range of the advanced zoom will change depending on the aspect ratio of the scene (54).
- **MD216/MD215/MD205** The advanced zoom cannot be selected if [WIDESCREEN] is set to [OFF OFF].

[WIDESCREEN] set to [ON ON] (16:9)
MD235 45x*, MD216 / MD215 41x**, MD205 36x**
* The picture angle will be wider at both full telephoto and full wide-angle.
**The picture angle will be wider at full wide-angle.
[WIDESCREEN] set to [OFF OFF] (4:3)
MD235 46x, MD216/MD215/MD205 Not available

Selecting the Zoom Speed

 
- CAMERA** **PLAY** 19

Options

Default value

[VAR VARIABLE]
The variable zoom speed depends on how you operate the zoom lever: Press gently for slower zooms; press harder for faster zooms. With this option, the zoom speed will be faster in record pause mode.
[>>>] SPEED 1 , [>>] SPEED 2 , [>>>>] SPEED 3
Constant zoom speeds. [>>>>] SPEED 3 is the fastest, and [>] SPEED 1 is the slowest.

FUNC.
(20)




- [FUNC.]
- [MENU]
- [CAMERA SETUP]
- [ZOOM SPEED]
- Desired option
- [FUNC.]

NOTES

The fastest zoom speed can be achieved with the [VAR VARIABLE] setting.

Using the Zoom

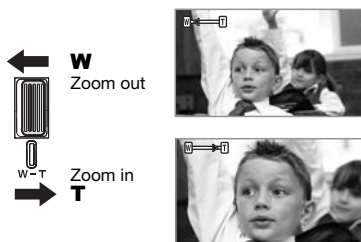


Move the zoom lever toward W to zoom out (wide-angle). Move it toward T to zoom in (telephoto).

NOTES

- Keep at least 1 m to the subject. At full wide-angle, you can focus on a subject as close as 1 cm.
- **MD235** You can also use the **T** and **W** buttons on the wireless controller. The zoom speed with the wireless controller will be the same as with the camcorder or fixed at [>>>>] **SPEED 3** (when [VAR VARIABLE] is selected).

Quick Start Function

When you press **QUICK START** the camcorder enters the **Q** standby mode. In standby mode the camcorder consumes only about half the power used when recording, saving energy when you are using a battery pack. Additionally, when you press **QUICK START** again the camcorder is ready to start recording within approx. 1 second, ensuring you do not miss important shooting opportunities.

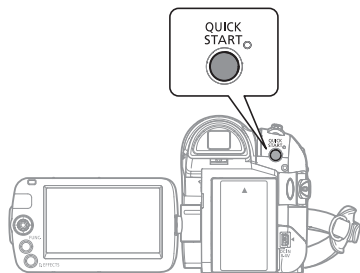

1 Press **QUICK START** firmly.

The standby lamp flashes at first while the camcorder is preparing and then stays on when it enters the standby mode.

2 When you wish to resume recording, press **QUICK START** again.


Within approx. 1 second, the camcorder is ready to record.


 

 
 
 
 
i NOTES

- When you wake up the camcorder from standby mode, the following settings will be changed automatically:
 - Manual focus returns to automatic focus (AF).
 - Manual exposure adjustment returns to automatic exposure.
 - Zoom position returns to full wide-angle **W**.
- The camcorder will shut off if left in standby mode for 10 minutes, regardless of the [POWER SAVE] setting (□ 58). To restore the power if the camcorder shut off, turn the camcorder off and then on again.
- The camcorder will be woken up from standby mode if you open the cassette compartment cover while the camcorder is in standby mode (standby lamp is on).

Reviewing the Last Scene Recorded

CAMERA | **PLAY** (19)

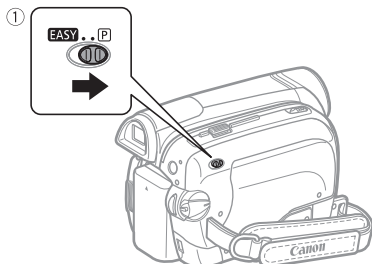



 

 
 
- 1 Set the mode switch to **P**.
- 2 If the joystick guide does not appear on screen, press () to display it.
- 3 Push the joystick () momentarily toward  and release it.
 - The camcorder will play back a few seconds of the last recording made and return to record pause mode.
 - You can also hold the joystick pressed () toward  or () toward  to play back the tape (reverse or forward respectively) in order to locate the point where you want to start recording.

Basic Playback

Playing Back Video

CAMERA | **PLAY** (19)

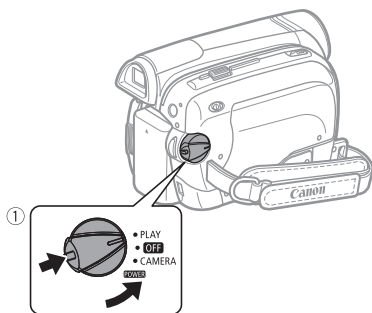

- 1 Holding the lock button pressed down, set the **POWER** switch to **PLAY**.
- 2 If the joystick guide does not appear on screen, press () to display it.
- 3 **Locate the point where you want to begin the playback.**
Push the joystick () toward  to rewind the tape or () toward  to fast forward.

4 Push the joystick (▲) toward ►/|| to begin the playback.


DURING PLAYBACK


5 Push the joystick (▲) toward ►/|| again to pause the playback.

6 Push the joystick (▼) toward ■ to stop the playback.


TO ADJUST THE VOLUME

During the playback of a scene:


FUNC.  **[SPEAKER VOLUME]** 
Adjust (◀▶) the volume 
FUNC.





 
 















- The sound from the built-in speaker will be muted when you close the LCD panel or while the STV-250N Stereo Video Cable is connected to the AV terminal.
- If you turn down the volume completely, the icon will change to .

  NOTES

- You can display the date and time of the recording ( 34).
- To protect the tape and video heads, the camcorder will enter the stop mode (■) if left in playback pause (►||) mode for 4 minutes 30 seconds. To resume the playback push the joystick (▲) toward ►/||.

Special Playback Modes¹

To enter most special playback modes you need to operate the buttons on the wireless controller² ( 12). There is no sound during the special playback modes.

Special playback mode	Initial mode	Operation on the camcorder  or on the wireless controller 
Fast playback	Normal playback	 : Push the joystick (◀) toward ◀◀ or (▶) toward ▶▶ and hold it down.  : Press and hold  or 
Reverse playback	Normal playback	 : Press 
1 frame reverse/advance	Playback pause	 : Press  or 
Frame-by-frame playback	Playback pause	 : Press and hold  or 
Slow playback	Normal or reverse playback	 : Press 
Double speed playback	Normal or reverse playback	 : Press 
Return to normal playback	Special playback mode	 : Push the joystick (▲) toward ►/ .  : Press 

¹ During some special playback modes you may notice some anomalies (blocky video artifacts, banding, etc.) in the playback picture.

² The wireless controller is included only with the **MD235**.

MD235**Returning to a Pre-marked Position**

If you wish to return to a particular scene later, mark the point with the zero set memory and the tape will stop at that point when you rewind/fast forward the tape. This function is operated with the wireless controller.



1 While recording or during playback, press at the point you wish to return to later.

- The time code changes to "0:00:00 ".
- Press again to cancel the memory.

2 If you marked the zero memory while recording, set the camcorder to mode. If you marked the zero memory during playback, press .

3 Press to locate the zero mark.

- If the tape counter shows a negative number, press instead.
- appears and the camcorder rewinds/fast forwards the tape.
- The tape stops at or near the zero mark, disappears and the correct time code will be displayed again.

 NOTES

If there are blank sections between recordings, the zero set memory may not work correctly.

MD235**Locating the Beginning of a Recording Date**

You can locate the change of the date/time zone with the date search function.



Press or on the wireless controller.

- Press more than once to search for further date changes (up to 10 times).
- To cancel the search press .

 NOTES

- The date search function will not detect recordings shorter than 1 minute per date/time zone.
- Date search may not function if the data code is not displayed correctly.

Locating the End of the Last Scene

After playing back a tape, use this function to locate the end of the last scene recorded in order to continue recording from that point.



POINTS TO CHECK

Stop the playback before using this function.



[FUNC.] [END SEARCH] [EXECUTE]

- “END SEARCH” appears.
- The camcorder rewinds/fast forwards the tape, plays back the last few seconds of the recording and stops the tape.
- To cancel the end search push the joystick () toward .

NOTES

- End search cannot be used once you remove the cassette.
- If there are blank sections between recordings, the end search may not work correctly.
- **MD235** You cannot use the end search to locate the end of a scene that was audio dubbed.

On-Screen Displays (Data Code)

The camcorder keeps a data code containing the date and time of recording. You can select the data to be displayed.



Options

Default value

[OFF OFF]
No data code display.
[DATE], [TIME]
Displays the date or time when the scene was recorded.
[DATE & TIME]
Displays both the date and time of the recording.



[FUNC.] [MENU]
 [DISPLAY SETUP/]
 [DATA CODE] Desired option
 [FUNC.]

Advanced Functions

[P]: Special Scene Recording Programs

Recording in a very bright ski resort or capturing the full colors of a sunset or a fireworks display becomes as easy as selecting a Special Scene recording program. For details about the available options, refer to the sidebar on page 36.



POINTS TO CHECK

Mode switch: [P]

FUNC.
(20)



FUNC. >

[P PROGRAM AE] >

Desired recording program >

FUNC.

i NOTES

- Do not set the mode switch to **EASY** during the actual recording of a scene; the brightness of the picture may change abruptly.
- [SPORTS]/[BEACH]/[SNOW]
 - The picture may not appear smooth during playback.
- [PORTRAIT]
 - The blur effect of the background increases the more you zoom in (T).
- [NIGHT]
 - Moving subjects may leave a trailing afterimage.
 - Picture quality may not be as good as in other modes.
 - White points may appear on the screen.
 - Autofocus may not work as well as in other modes. In such case, adjust the focus manually.
- [SNOW]/[BEACH]
 - The subject may become overexposed on cloudy days or in shaded places. Check the image on the screen.
- [FIREWORKS]
 - To avoid camcorder shake, we recommend using a tripod.

[P PROGRAM AE]

The camcorder sets the aperture and shutter speed.



[BEACH]

Use this mode to record on a sunny beach. It prevents the subject from being underexposed.



[PORTRAIT]

The camcorder uses a large aperture, achieving a focus on the subject while blurring other distracting details.



[SUNSET]

Use this mode to record sunsets in vibrant colors.



[SPORTS]

Use this mode to record sports scenes such as tennis or golf.



[SPOTLIGHT]

Use this mode to record spotlight scenes.



[NIGHT]

Use this mode to record in low-light conditions.



[FIREWORKS]

Use this mode to record fireworks.



[SNOW]

Use this mode to record in bright ski resorts. It prevents the subject from being underexposed.



P Flexible Recording: Changing the Shutter Speed

Use the automatic exposure (AE) program to use functions like the white balance or image effects, or to select the shutter speed.

Use faster shutter speeds to record subjects moving quickly. Use slower shutter speeds to add motion blur, emphasizing the feel of movement.



POINTS TO CHECK

Mode switch: **P**



1 Press **FUNC.**.

2 Select the **[P PROGRAM AE]** recording program (page 35).

[P PROGRAM AE] is the default value; proceed directly to step 3 if you have not changed the recording program.

3 Select the shutter speed from the setup menu.

FUNC. **[MENU]**
CAMERA SETUP
[SHUTTER] Desired shutter speed **FUNC.**

Shutter speed guidelines

Note that on screen only the denominator is displayed – **[P 250]** indicates a shutter speed of 1/250 second, etc.

1/50
To record under most ordinary conditions.
1/120
To record indoor sports scenes.
1/250, 1/500, 1/1000
To record from within a moving car or train or to shoot fast-moving subjects such as roller coasters.
1/2000
To record outdoor sports scenes on sunny days.

i NOTES

- Do not set the mode switch to **EASY** during the actual recording of a scene; the brightness of the picture may change abruptly.
- [P PROGRAM AE]**
 - When setting the shutter speed, the number displayed will flash if the value selected is not appropriate for the recording conditions. In such case, select a different value.
 - If you use a slow shutter speed in dark places, you can obtain a brighter image, but the image quality may be lower, and the autofocus may not work well.
 - The image may flicker when recording with high shutter speeds.
 - The shutter speed resets to **[A AUTO]** when you set the mode switch to **EASY** or change the recording program.

LCD Video Light

You can use the LCD video light to record in completely dark places. For a brighter picture, we recommend keeping a distance of about 20 cm - 60 cm from the subject and/or using the [NIGHT] recording program. When you activate the LCD video light, rotate the LCD panel to face the subject and use the viewfinder instead (28).



FUNC.
(20)



FUNC.

[OFF LCD LIGHT OFF]

[ON LCD LIGHT ON]

Press ()

- The LCD display turns entirely white when used as the video light. Use the viewfinder instead.
- Using the viewfinder, select [OFF LCD LIGHT OFF] to turn the LCD video light off.

Self Timer



POINTS TO CHECK

Set the camcorder to record pause mode.

FUNC.
(20)



1 Activate the self timer.

FUNC. [MENU]

[CAMERA SETUP]

[SELF TIMER] [ON ON]

2 Press **FUNC.** to close the menu.

- appears.
- Set [SELF TIMER] to [OFF OFF] to cancel the self timer.

3 Press **Start/Stop** on the camcorder to start recording.

- The camcorder starts recording video after a 10-second countdown. The countdown appears on the screen.
- **MD235** You can also press **START/STOP** on the wireless controller. In that case, the countdown will be only 2 seconds.

i NOTES

Once the countdown has begun, you can press **Start/Stop** again or turn off the camcorder to cancel the self timer.

Audio Recording Mode

You can change the quality of the audio recording.



Options

♦ Default value

[16bit 16bit]
Records audio at the highest quality.
[12bit 12bit]♦
Records audio on 2 channels (Stereo 1) leaving 2 free channels (Stereo 2) you can use for audio dubbing.
MD235 With this camcorder you can dub audio only using the microphone (49).

FUNC.
(20)



FUNC. ◀

[MENU] ▶

[AUDIO SETUP] ▶

[AUDIO MODE] ▶


Desired option ▶

FUNC.

ABOUT THE WIND SCREEN

The camcorder automatically reduces the background sound of wind (only while using the built-in microphone). You can turn the wind screen off when you want the microphone to be as sensitive as possible (56).

Using an External Microphone

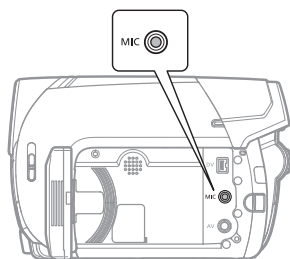

Connect the external microphone to the MIC terminal. Use commercially available condenser microphones with their own power supply and a cable no longer than 3 m. You can connect almost any stereo microphone with a \varnothing 3.5 mm plug but audio recording levels may vary.

Audio Playback Modes

Selecting the Audio Channel

You can select the audio channel to play back when playing back a tape with audio recorded on two channels (either stereo sound or bilingual audio signals).



Options

◆ Default value

[L/R]◆
Left and right channels (stereo) / Main and sub signals (bilingual).
[L/L]
Left channel only (stereo) / Main signal only (bilingual).
[R/R]
Right channel only (stereo) / Sub signal only (bilingual).

FUNC.
(20)



FUNC.

[MENU]

[AUDIO SETUP]

[OUTPUT CH] Desired option

FUNC.

Selecting the Audio Track on a Tape with Dubbed Audio

You can select the audio track to play back when playing back a tape that has a dubbed audio track (Stereo 2) in addition to the original recorded audio (Stereo 1).



Options

◆ Default value

[ST-1 STEREO1]◆
Original sound only.
[ST-2 STEREO2]
Dubbed audio only.
[1:1 MIX/FIXED]
Mixed audio with the original sound and the dubbed audio at the same level.
[MIX/VAR.]
Mixed audio where the balance between the original sound (ST-1) and the dubbed audio (ST-2) can be adjusted.

FUNC.
(20)



FUNC.

[MENU]

[AUDIO SETUP]

[12bit AUDIO] Desired option*

FUNC.

* When you select [MIX/VAR.], adjust the mix balance with the [MIX BALANCE] setting (56).

Manual Focus Adjustment

Autofocus may not work well on the following subjects. In such case, focus manually.

- Reflective surfaces
- Subjects with low contrast or without vertical lines
- Fast moving subjects
- Through wet windows
- Night scenes



POINTS TO CHECK

Adjust the zoom before you start the procedure.

Mode switch:



1 If the joystick guide does not appear on screen, press () to display it.

2 Push the joystick () toward [FOCUS] to activate the manual focus.

[FOCUS] on the joystick guide will be displayed in light blue and "MF" appears on the screen.

3 Adjust () the focus as necessary.

- Push the joystick () toward for a farther focal distance or push it () toward for a closer focal distance.

- Pushing the joystick () toward [FOCUS] again will return the camcorder to autofocus.

4 Push the joystick () toward [BACK] to save the focus adjustment.

Infinity Focus

Use this function when you wish to focus on faraway subjects such as mountains or fireworks.

POINTS TO CHECK

Adjust the zoom before you start the procedure.

Mode switch:



1 Keep the joystick pushed () toward [FOCUS] for more than 2 seconds.

- ∞ appears.
- Pushing the joystick () toward [FOCUS] again will return the camcorder to autofocus.
- If you operate the zoom or the joystick () , ∞ changes to "MF" and the camcorder returns to manual focusing mode.

2 Push the joystick () toward [BACK] to save the focus adjustment.

NOTES

The camcorder will automatically return to autofocus when you set the mode switch to **EASY**.

Manual Exposure Adjustment

At times, backlit subjects may appear too dark (underexposed) or subjects under very strong lights may appear too bright or glaring (overexposed). To correct this, you can manually adjust the exposure.




POINTS TO CHECK

Mode switch: [P] (except for the [FIREWORKS] recording program).



1 If the joystick guide does not appear on screen, press (⊙) to display it.

2 Push the joystick (▲) toward [EXP].

[EXP] on the joystick guide changes to light blue and the exposure adjustment indicator  and the neutral value “±0” appear on the screen.

3 Adjust (◀▶) the brightness of the image as required.

- The adjustment range and the length of the exposure adjustment indicator will vary depending on the initial brightness of the picture.
- Pushing the joystick (▲) toward [EXP] again will return the camcorder to automatic exposure.

4 Push the joystick (▼) toward [BACK] to lock and save the exposure setting.

If you operate the zoom during exposure lock, the brightness of the image may change.

White Balance

The white balance function helps you accurately reproduce colors under different lighting conditions so that white objects will always look truly white in your recordings.



POINTS TO CHECK

Recording program: [P PROGRAM AE]

Options

♦ Default value

[AWB AUTO]♦	Settings are automatically set by the camcorder. Use this setting for outdoor scenes.
[DAYLIGHT]	For recording outdoors on a bright day.
[TUNGSTEN]	For recording under tungsten and tungsten type (3-wavelength) fluorescent lighting.
[SET]	Use the custom white balance setting to make white objects appear white under colored lighting.



FUNC.
([] 20)



FUNC. []

[**AWB AUTO**] [] Desired option* []

FUNC.

* When you select [**SET**], do not press **FUNC.** and continue instead with the procedure below.

TO SET THE CUSTOM WHITE BALANCE

- 1 **Point the camcorder at a white object, zoom in until it fills the whole screen and press ([]).** When the adjustment is completed, [] stops flashing and stays on. The camcorder retains the custom setting even if you turn off the camcorder.
- 2 **Press **FUNC.** to save the setting and close the menu.**

NOTES

- **When you select the custom white balance:**
 - Set the custom white balance in a sufficiently illuminated place.
 - Select a zoom type other than [**2000x DIGITAL**] ([] 28).
 - Reset the white balance when the lighting conditions change.
 - Depending on the light source, [] may keep flashing. The result will still be better than with [**AWB AUTO**].
- Custom white balance may provide better results in the following cases:
 - Changing lighting conditions
 - Close-ups
 - Subjects in a single color (sky, sea or forest)
 - Under mercury lamps and certain types of fluorescent lights

Image Effects

You can use the image effects to change the color saturation and contrast to record images with special color effects.



([] 19)

POINTS TO CHECK

Recording program: [**P PROGRAM AE**]

Options

◆ Default value

[OFF IMAGE EFFECT OFF] ◆
Records with no image enhancing effects.
[VIVID]
Emphasizes the contrast and color saturation.
[NEUTRAL]
Tones down the contrast and color saturation.
[SOFT SKIN DETAIL]
Softens the details in the skin tone area for a more complimentary appearance. To obtain the best effect, use this setting when recording a close-up of a person. Note that areas similar to the skin color may lack in detail.

FUNC.
([] 20)



FUNC. []

[**OFF IMAGE EFFECT OFF**] []

Desired option []

FUNC.

Digital Effects

CAMERA **PLAY** (19)

POINTS TO CHECK

Mode switch: **[P]**

Options

◆ Default value

[D.EFFECT OFF] ◆
Select this setting when you do not intend to use the digital effects.
[F1 FADE-T] (fade trigger), [F2 WIPE]
Select one of the faders to begin or end a scene with a fade from or to a black screen.
[E1 BLK&WHT]
Records images in black and white.
[E2 SEPIA]
Records images in sepia tones for an "old" look.
[E3 ART] , [E4 MOSAIC]
Select one of these digital effects to add "flavor" to your recordings.

Setting

FUNC.
(19) 20



FUNC.

[D.EFFECT OFF]


Desired option*

FUNC.**

* While making the selection, you can preview the effect on the screen.

** The icon of the selected effect appears.

Applying

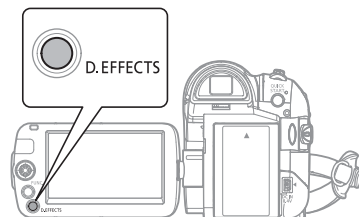

Press **[D.EFFECTS]** to activate the fader/effect.

- The icon of the selected effect turns green.
- Press **[D.EFFECTS]** again to deactivate the fader/effect.

TO FADE IN

Press **[D.EFFECTS]** ...


[CAMERA]: ...in record pause mode, then press **[Start/Stop]** to start recording with a fade in.





[PLAY]: ...in playback pause mode, then push the joystick () toward to fade in and start the playback.



To FADE OUT


Press **D.EFFECTS** ...


CAMERA : ...while recording, then press **Start/Stop** to fade out and pause the recording.

PLAY : ...during playback, then push the joystick () toward / to fade out and pause the playback.

To ACTIVATE AN EFFECT

Press **D.EFFECTS** ...

CAMERA : ...while recording or in record pause mode.

PLAY : ...during playback.

NOTES

- When you apply a fader, not only the picture but also the sound will fade in or out. When you apply an effect, the sound will be recorded normally.
- The camcorder retains the last setting used even if you turn off the digital effects or change the recording program.
- The digital effects are not available when [TV TYPE] is set to [NORMAL TV] and the stereo video cable is connected to the AV terminal.




3



External Connections

This chapter explains step-by-step how to connect your camcorder to an external device such as a TV, VCR, or computer.

Connecting to a TV or VCR

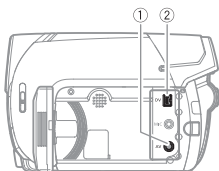

Open the LCD panel to access.





① AV Terminal

Sound from the built-in speaker will be muted while the STV-250N Stereo Video Cable is connected to the camcorder.



② DV Terminal

- Check the type and orientation of the terminal and make sure you connect the DV cable properly.
- Use the optional CV-150F (4 pin-4 pin) or CV-250F (4 pin-6 pin) DV cable.

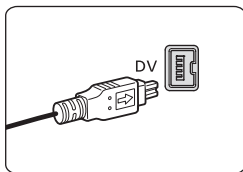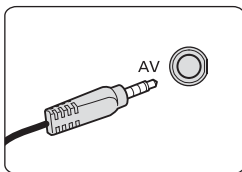


MD235 Attaching the Ferrite Core

Attach the enclosed ferrite core before you connect the STV-250N Stereo Video Cable to the camcorder.

Attach the ferrite core to the cable about 10 cm from the plug end (the plug to be connected to the camcorder) of the STV-250N Stereo Video Cable.

Pass the cable through the centre of the core and wrap it around the core, then close the unit until it clicks shut.

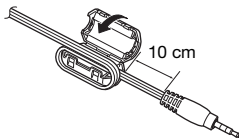


Connection Diagrams


Turn off all the devices when making the connections and refer also to the instruction manual of the connected device.

Terminal on the Camcorder	Connecting Cable	Terminal on the Connected Device
---------------------------	------------------	----------------------------------

1 Output connection (signal flow →) to a TV or VCR with AV Terminals.

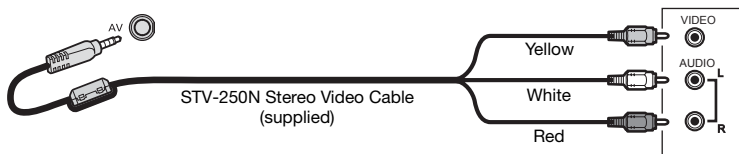


2 Output connection (signal flow →) to a high-definition TV with a DV (IEEE1394) terminal.

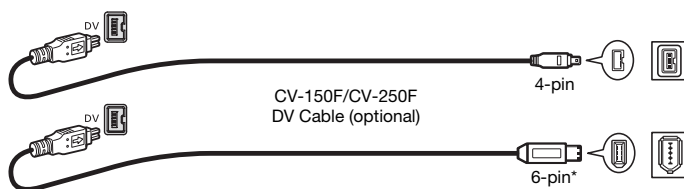

* Be careful to correctly insert the 6-pin plug into the DV terminal. Inserting it in the wrong direction can result in damage to the camcorder.

3 Output connection (signal flow →) to a TV or VCR with a SCART terminal.

You will need to connect beforehand a commercially available SCART adapter to the SCART terminal on the TV or VCR and then connect the STV-250N Stereo Video Cable to the adapter.

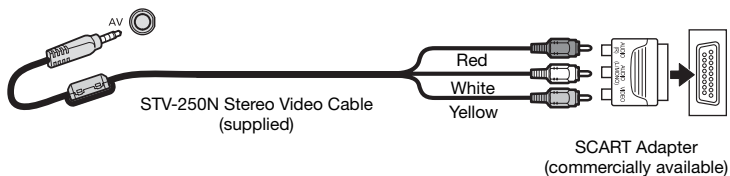

Playback on a TV Screen

The quality of the playback picture will vary depending on the connected TV and the type of connection used.



POINTS TO CHECK

Before making the connections, select the [TV TYPE] setting according to the TV set to which you will connect the camcorder (□ 55).

Connecting

Connect the camcorder to the TV following one of the connection diagrams shown in *Connection Diagrams* (□ 47).

Playback

1 Turn on the camcorder and the connected TV or VCR.

On a TV: Select as the video input the same terminal to which you connected the camcorder.

On a VCR: Set the input selector to the external video input (usually labeled LINE IN).

2 Start the playback of the movies (□ 31).

NOTES

- Turn off all the devices before starting the connections.
- We recommend powering the camcorder using the compact power adapter.

Copying your Recordings to an External Video Recorder

You can copy your recordings by connecting the camcorder to a VCR or a digital video device. When recording to a digital video recorder using the DV terminal, you can copy recordings with virtually no generation loss in video and sound quality.



Connecting

Connect the camcorder to a VCR or other analog device using connection type **1** or **3**, or to a DVD recorder or other digital recording device using connection type **2**, as shown in *Connection Diagrams* (□ 47).

Recording

- 1 This camcorder: Load the recorded cassette.**
- 2 Connected device: Load a blank cassette or disc and set the device to record pause mode.**
- 3 This camcorder: Locate the scene you wish to copy and pause the playback shortly before the scene.**
- 4 This camcorder: Resume the movie playback.**

When using an analog connection you can include in the copy also the date/time of the original recording (□ 34).



5 Connected device: Begin recording when the scene you wish to copy appears. Stop recording when copying is complete.

6 This camcorder: Stop playback.

i NOTES

- We recommend powering the camcorder using the compact power adapter.
- When recording to a VCR using an analog connection –connection type **1** or **3** (□ 47)–, the quality of the edited tape will be lower than the original.
- When recording to a digital video recorder using the DV terminal –connection type **2** (□ 47)–:
 - If the picture does not appear, disconnect the DV cable and restore the connection after a short while or turn the camcorder off and then on again.
 - Proper operation cannot be guaranteed for all digital devices equipped with a DV terminal. If the operation does not work, use the AV terminal.


MD235 Audio Dubbing

You can add sound to a recording using the built-in or an external microphone.



POINTS TO CHECK

You can only dub audio on tapes recorded in SP mode with [12bit] 12bit audio (□ 39). This function is operated with the wireless controller.

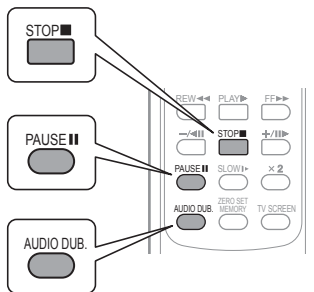

1 Locate the point where you want to start dubbing audio.

Before locating the starting point, you can also set the zero set memory (□ 33) at the point where you want the audio dubbing to end. The camcorder will automatically stop audio dubbing at that point.

2 Start playback and immediately press [PAUSE].

3 Press [AUDIO DUB].


“AUDIO DUB.” and [PAUSE] appear.

4 Press [PAUSE] to begin dubbing.

Speak into the microphone.

5 Press  to stop dubbing.


 IMPORTANT

- Audio dubbing will stop if the tape has a blank section or a section recorded in LP mode or [ 16bit] audio.
- The quality of the dubbed sound will not be as good when dubbing audio to a tape that was not recorded with this camcorder or after having dubbed audio over the same scene more than 3 times.


 NOTES

You can connect the camcorder to a TV to check the picture on the TV screen and check the sound through headphones connected to the TV.

TO SELECT THE AUDIO TRACK FOR PLAYBACK

You can select the audio track that will be played when playing back a tape that was audio dubbed ( 40).

Connecting to a Computer

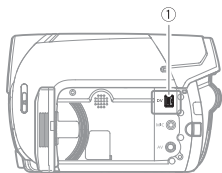

Open the LCD panel to access.

DV




① DV Terminal

- Check the type and orientation of the terminal and make sure you connect the DV cable properly.
- Use the optional CV-150F (4 pin-4 pin) or CV-250F (4 pin-6 pin) DV cable.

PC Connection Diagram

Terminal on the Camcorder	Connecting Cable	Terminal on the Connected Device
---------------------------	------------------	----------------------------------

1 Output connection (signal flow →) to a computer with a DV (IEEE1394) terminal or a DV capture board.

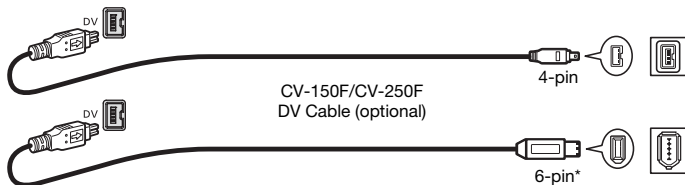

* Be careful to correctly insert the 6-pin plug into the DV terminal. Inserting it in the wrong direction can result in damage to the camcorder.



Transferring Video Recordings




You can transfer recordings to a computer using the DV terminal.

Equipment and System Requirements


- A computer equipped with an IEEE1394 (DV) terminal or an IEEE1394 (DV) capturing board.
- A DV cable. Use the optional CV-150F (4 pin-4 pin) or CV-250F (4 pin-6 pin) DV Cable.
- Video editing software.
- The appropriate driver.

A driver is preinstalled on Windows operating systems later than Windows 98 Second Edition and Mac operating systems later than Mac OS 9, and will be installed automatically.

Connecting

- 1 Start the computer.**
- 2 Connect the camcorder to the computer using the DV connection –connection type  ( 51)– shown in *PC Connection Diagram*.**
- 3 Set the camcorder to  mode.**
- 4 Start the video editing software.**
Refer to the instruction manual of the editing software.

IMPORTANT

- The video transfer may not work correctly depending on the software and the specifications/settings of your computer.
- If the computer freezes while the camcorder is connected to it, disconnect the DV cable and turn off the camcorder and the computer. After a short while, turn them on again, set the camcorder to  mode and restore the connection.
- Before connecting the camcorder to the computer using a DV cable, make sure that no other IEEE1394 device is connected to the computer.
- Depending on the video editing software, you may need to set the **POWER** switch on the camcorder to a mode other than PLAY. Refer to the instruction manual of the editing software.

NOTES

- We recommend powering the camcorder using the compact power adapter.
- Refer also to the instruction manual of the computer.



4



Additional Information

This chapter contains troubleshooting advice, screen messages, handling and maintenance tips, and other information.

Appendix: Menu Options Lists



Menu items not available appear grayed out. For details about how to select an item, refer to *Using the Menus* (□□ 20). For details about each function, see the reference page. Menu options without a reference page are explained below the tables.

FUNC. Menu

Menu item	Setting options	CAMERA	PLAY	
Recording programs ¹	[P PROGRAM AE], [E] PORTRAIT], [S] SPORTS], [N] NIGHT], [SNOW], [B] BEACH], [SUNSET], [SPOTLIGHT], [FIREWORKS]	●	–	35
White balance ¹	[AUTO], [DAYLIGHT], [TUNGSTEN], [SET]	●	–	42
Image effects ¹	[IMAGE EFFECT OFF], [VIVID], [NEUTRAL], [SOFT SKIN DETAIL]	●	–	43
LCD video light	[LCD LIGHT OFF], [LCD LIGHT ON]	●	–	38
Digital effects	[D.EFFECT OFF], [FADE-T], [WIPE], [BLK&WHT], [SEPIA], [ART], [MOSAIC]	● ¹	●	44
[SPEAKER VOLUME]	-.....++++	–	●	32
[END SEARCH]	Press (SEARCH) to search.	–	●	34

¹ Option available only when the mode switch is set to [P].

 CAMERA SETUP

Menu item	Setting options	CAMERA	
			
[SHUTTER] ¹	[A AUTO], [1/50], [1/120], [1/250], [1/500], [1/1000], [1/2000]	●	37
[A.SL SHUTTER] ²	[ON ON], [OFF OFF]	●	–
[ZOOM TYPE]	MD235 [37x OPTICAL], [45x ADVANCED], [2000x DIGITAL] MD216 / MD215 [37x OPTICAL], [41x ADVANCED], [2000x DIGITAL] MD205 [32x OPTICAL], [36x ADVANCED], [2000x DIGITAL]	●	28
[ZOOM SPEED]	[VAR VARIABLE], [>>> SPEED 3], [>> SPEED 2], [> SPEED 1]	●	29
[IMG STAB] ³	[ON ON], [OFF OFF]	●	–
[WIDESCREEN]	[ON ON], [OFF OFF]	●	–
[SELF TIMER]	[ON ON], [OFF OFF]	●	38

¹ Option available only when the recording program is set to [**P** PROGRAM AE].

² Option available when the mode switch is set to **EASY** or **P** (only when the recording program is set to [**P** PROGRAM AE]).

³ Option available only when the mode switch is set to **P**.

[A.SL SHUTTER]: The camcorder automatically uses slow shutter speeds to obtain brighter recordings in places with insufficient lighting.

- The camcorder uses shutter speeds down to 1/25.
- If a trailing afterimage appears, set the slow shutter to [**OFF** **OFF**].

[IMG STAB]: The image stabilizer compensates for camcorder shake even at full telephoto.

- The image stabilizer is designed to compensate for a normal degree of camcorder shake. **MD216/MD215/MD205** The image stabilizer may also not be able to compensate for all movement when recording moving subjects.
- The image stabilizer may not be effective when recording in dark places with [A.SL SHUTTER] set to [**ON** **ON**] or using the [**NIGHT**] recording program.
- **MD216/MD215/MD205** The image stabilizer may not work well on subjects with low contrast, with a recurring, repetitive pattern or without vertical lines.
- The image stabilizer cannot be turned off when the mode switch is set to **EASY**.
- We recommend setting the image stabilizer to [**OFF** **OFF**] when using a tripod.

[WIDESCREEN]: The camcorder uses the full width of the image sensor providing high-resolution 16:9 recordings.



- Since the screens on the camcorder have an aspect ratio of 16:9, recordings with a 4:3 aspect ratio will appear in the center of the screen with black sidebars.
- **Playing back a widescreen recording:** TV sets compatible with the WSS system will automatically switch to wide (16:9) mode. Otherwise, change the aspect ratio of the TV manually. To play back on a TV with normal aspect ratio (4:3) change the [TV TYPE] setting accordingly (55).

VCR SETUP

Menu item	Setting options	CAMERA	PLAY	
[REC MODE]	[STD PLAY], [LONG PLAY]	●	●	–
[TV TYPE]	[NORMAL TV], [WIDE TV]	●	●	–

[REC MODE]: Select the video recording mode.

- Recording in LP mode extends the available recording time on the tape 1.5 times.
- Depending on the condition of the tape (long usage, imperfections, etc.) you may notice some video anomalies (blocky video artifacts, banding, etc.) in the playback picture when playing back recordings made in LP mode. We recommend using the SP mode for important recordings.
- **[MD235]** Audio cannot be dubbed on tapes recorded in LP mode.
- If you make recordings in both SP and LP modes on the same tape, during playback you may notice some video anomalies in the picture at the point where the recording mode changes.
- When playing back in this camcorder tapes recorded in LP mode with other devices or vice versa, you may notice some anomalies in the playback picture or the sound may stop briefly.

[TV TYPE]: In order to display the picture in full and in the correct aspect ratio, select the setting according to the type of television to which you will connect the camcorder.

[NORMAL TV]: TV sets with 4:3 aspect ratio.

[WIDE TV]: TV sets with 16:9 aspect ratio.

AUDIO SETUP

Menu item	Setting options	CAMERA	PLAY	
[OUTPUT CH]	[L/R], [L/L], [R/R]	–	●	40
[WIND SCREEN]	[AUTO], [OFF]	● ¹	● ²	–
[12bit AUDIO]	[ST-1 STEREO1], [ST-2 STEREO2], [1:1 MIX/FIXED], [MIX/VAR.]	–	●	40
[MIX BALANCE]	ST-1 ST-2	–	●	–
[AUDIO MODE]	[16bit], [12bit]	●	–	39

¹ Option available only when the mode switch is set to .

² **[MD235]** Option available only when dubbing audio with the built-in microphone.




 






[WIND SCREEN]: The camcorder automatically reduces the background sound of wind when recording outdoors (only while using the built-in microphone).


- The wind screen cannot be turned off when the mode switch is set to **EASY**.

[MIX BALANCE]: When [12bit AUDIO] is set to [\oplus MIX/VAR.], adjust (\blacktriangleleft \blacktriangleright) the sound balance with the joystick.

- The camcorder will retain the audio balance adjustment, however if you turn off the camcorder, [12bit AUDIO] will be reset to [ST-1 STEREO1].

DISPLAY SETUP

Menu item	Setting options	CAMERA	PLAY	
				
[BRIGHTNESS]		●	●	–
[BACKLIGHT]	[ NORMAL] ¹ , [ BRIGHT]	●	●	24
[TV SCREEN]	[ON ON], [OFF OFF]	●	–	–
	[ON ON], [OFF OFF]	–	●	
[MARKERS]	[OFF OFF], [\leftarrow LEVEL], [ GRID]	●	–	–
[DISPLAYS]	[ON ON], [OFF OFF <PLAYBK>]	–	●	–
[6SEC.DATE]	[ON ON], [OFF OFF]	–	●	–
[DATA CODE]	[OFF OFF], [ DATE], [ TIME], [ DATE & TIME]	–	●	34
[LANGUAGE] ²	Language Set A: [ČEŠTINA], [DEUTSCH], [ΕΛΛΗΝΙΚΑ], [ENGLISH] , [ESPAÑOL], [FRANÇAIS], [ITALIANO], [MAGYAR], [POLSKI], [ROMÂNĂ], [TÜRKÇE], [РУССКИЙ], [УКРАЇНСЬКА], [العربية], [فارسی] Language Set B: [ENGLISH] , [MELAYU], [简体中文], [繁體中文], [ภาษาไทย]	●	●	22
[DEMO MODE]	[ON ON], [OFF OFF]	●	–	–

¹ The default setting is [ BRIGHT] when you power the camcorder using the compact power adapter.

² The list of languages available depends on the region of purchase.



[BRIGHTNESS]: Adjust (◀▶) the brightness of the LCD display with the joystick.

- Changing the brightness of the LCD display does not affect that of the viewfinder or the recordings.

[TV SCREEN]: When set to [**ON** ON], the camcorder's on-screen displays will appear also on the screen of a connected TV or monitor.

When the date and time are displayed on the camcorder's screen they will also appear on a connected TV regardless of the [TV SCREEN] setting. Turn off the date/time display with the [DATA CODE] setting (□ 34).

[MARKERS]: You can display a grid or a horizontal line at the center of the screen. Use the markers as a reference to make sure your subject is framed correctly (vertically and/or horizontally).

- Using the markers will not affect the recordings on the tape.

[DISPLAYS]: You can hide the on-screen displays to show only the playback picture on the full screen.

- Tape operation displays appear for 2 seconds.
- Warning messages and the data code (if activated) will appear, even when set to [**OFF** OFF<PLAYBK>].
- All on-screen displays will appear while the playback image is magnified or a digital effect is activated.

[6SEC.DATE]: When you start playing back a tape or when the date of the recording changes, the date and time will be displayed for 6 seconds.

[DEMO MODE]: The demonstration mode displays the camcorder's main features. It starts automatically when the camcorder is powered with the power adapter if you leave it turned on without loading a recording media for more than 5 minutes.

- To cancel the demo mode once it started, press any button, turn off the camcorder or insert a videocassette.

SYSTEM SETUP

Menu item	Setting options	CAMERA	PLAY	
[MD235] [WL.REMOTE]	[ON ON], [OFF OFF	●	●	—
[BEEP]	[] HIGH VOLUME], [] LOW VOLUME], [OFF OFF]	●	●	—
[POWER SAVE]	[ON ON], [OFF OFF]	●	—	—

[MD235] [WL. REMOTE]: Allows the camcorder to be operated with the wireless controller.

[BEEP]: A beep will accompany some operations like turning on the camcorder, the self-timer countdown, etc. It also serves as a warning beep under unusual conditions.

[POWER SAVE]: In order to save power when the camcorder is powered by a battery pack, it will automatically shut off if left without any operation for 5 minutes. Approximately 30 seconds before the camcorder shuts off, the message “⚠️ AUTO POWER OFF” will appear.

📅 DATE/TIME SETUP

Menu item	Setting options	CAMERA	PLAY	📖
		📺	📺	
[T.ZONE DST]	List of world time zones.	●	●	22
[DATE/TIME]	–	●	●	23
[DATE FORMAT]	[Y.M.D (2008.1.1 AM 12:00)], [M.D,Y (JAN. 1, 2008 12:00 AM)], [D.M.Y (1.JAN.2008 12:00 AM)]	●	●	–

[DATE FORMAT]: Changes the date format for on-screen displays.

Troubleshooting

If you have a problem with your camcorder, refer to this section. Consult your dealer or a Canon Service Center if the problem persists.

Power Source


 
The camcorder will not turn on or it turns off by itself.

The cassette compartment cover will not open or it stops halfway while you insert or remove a tape.

The LCD/viewfinder switches on and off.

- Battery pack is exhausted. Replace or charge the battery pack (□□ 15).
- Attach the battery pack correctly.
- Use the compact power adapter.

The charge indicator flashes rapidly.

-  (one flash at 0.5-second intervals)
Charging has stopped because the compact power adapter or the battery pack is faulty. Consult a Canon Service Center.
-  (two quick flashes at 1-second intervals)
Battery pack at least 50% charged (□□ 16). This is not a malfunction.

Battery pack will not charge.

- Charge the battery pack in temperatures between 0 °C and 40 °C.
- Battery packs become hot with use and may not charge. When the battery pack is outside the charging temperature range, the CHARGE indicator will flash irregularly. The charging will start once the battery pack temperature is below 40 °C.
- The battery pack is damaged. Use a different battery pack.
- If you connect a faulty power adapter or battery pack, the CHARGE indicator flashes approx. twice per second and the charging stops.
- Check that the compact power adapter is correctly connected to the camcorder.


Recording/Playback

Buttons will not work.


- Turn on the camcorder.
- Load a cassette (□□ 25).

Abnormal characters appear on the screen. The camcorder does not operate properly.

- Disconnect the power source and reconnect it after a short time. If the problem still persists, disconnect all power sources (including the battery pack and the backup battery). This will reset all the camcorder's settings.

 flashes on the screen.

- Load a cassette (□□ 25).

 flashes on the screen.

- Battery pack is exhausted. Replace or charge the battery pack (□ 15).

 flashes on the screen.

- Condensation is detected. Refer to *Condensation* (□ 66).

“REMOVE THE CASSETTE” appears on the screen.

- Remove the cassette and reinsert it (□ 25).

MD235 The wireless controller will not work.

- Set [WL.REMOTE] to [ON] (□ 57).
- The battery of the wireless controller is exhausted. Replace the battery (□ 17).


Video noise appears on screen.

- When using the camcorder in a room where a plasma TV is located, keep a distance between the camcorder and the plasma TV.

Video noise appears on the TV screen.


- When using the camcorder in a room where a TV is located, keep a distance between the compact power adapter and the power or antenna cables of the TV.

The tape stops during record pause or playback pause.

- To protect the tape and video heads, the camcorder will enter the stop mode (■) if left in playback pause (▶||) or record pause (●||) mode for 4 minutes 30 seconds. To resume the operation press  (when recording) or push the joystick (▲) toward ▶/|| (during playback).

Recording




Image will not appear on the screen.

- Set the camcorder to  (□ 26).

“SET THE TIME ZONE, DATE AND TIME” appears on the screen.

- Set the time zone, date and time (□ 22).
- Replace the backup lithium battery and set the time zone, date and time (□ 17).

Pressing  will not start recording.

- Set the camcorder to  (□ 26).
- Load a cassette (□ 25).
- Tape reached the end (“ END” appears on the screen). Rewind the tape or replace the cassette (□ 25).
- Cassette is protected ( flashes on the screen). Change the position of the protect switch (□ 64).

Camcorder will not focus.

- Autofocus does not work on that subject. Focus manually (□ 41).
- If you are using the viewfinder, adjust it with the dioptic adjustment lever (□ 28).
- Lens is dirty. Clean the lens with a soft lens-cleaning cloth (□ 65). Never use tissue paper to clean the lens.

Sound is distorted.

- When recording near loud sounds (such as fireworks or concerts), sound may become distorted.

Viewfinder picture is blurred.

- Adjust the viewfinder with the dioptic adjustment lever (□ 28).



Playback

During playback there is video noise.

- Video heads are dirty. Clean the video heads (□ 2).

Playback does not start.

- Load a cassette (□ 25).
- Set the camcorder to **PLAY** (□ 31).
- Tape reached the end ("END" appears on the screen). Rewind the tape (□ 25).

No sound from the built-in speaker.

- Open the LCD panel.
- Speaker volume is turned off. Adjust the volume with the [SPEAKER VOLUME] setting (□ 32).

Image will not appear on the TV screen.

- Check again that the camcorder is properly connected to the TV (□ 47).

Tape is running, but image will not appear on the TV screen.

- TV/VIDEO selector on the TV is not set to VIDEO. Set the selector to VIDEO (□ 48).
- Video heads are dirty. Clean the video heads (□ 2).
- You attempted to play back or dub a copyright protected tape. Stop playback/dubbing.

List of Messages (in alphabetical order)

CHANGE THE BATTERY PACK

- Battery pack is exhausted. Replace or charge the battery pack (□ 15).

MD235 CHECK THE CASSETTE [AUDIO MODE]

- You attempted to dub audio (□ 49) on a tape recorded with an audio mode other than [**12bit** 12bit].

MD235 CHECK THE CASSETTE [BLANK]

- You attempted to dub audio (□ 49) on a tape with a blank section.

MD235 CHECK THE CASSETTE [INCORRECT TAPE SPECIFICATION]

- You attempted to dub audio (□ 49) on a tape recorded in HD (high definition) standard.

MD235 CHECK THE CASSETTE [REC MODE]

- You attempted to dub audio (□ 49) on a tape recorded in a recording mode other than SP.

CONDENSATION HAS BEEN DETECTED

- Condensation has been detected in the camcorder (□ 66).

CONDENSATION HAS BEEN DETECTED REMOVE THE CASSETTE

- Condensation has been detected in the camcorder (□ 66). Remove the cassette.

HEADS DIRTY, USE CLEANING CASSETTE

- Video heads are dirty. Clean the video heads (□ 2).

INCORRECT TAPE SPECIFICATION PLAYBACK IS RESTRICTED

- You attempted to play back a tape recorded in a different television system (NTSC) or in a recording standard not supported by this camcorder.

REMOVE THE CASSETTE

- Camcorder stopped operating to protect the tape. Remove the cassette and reinsert it (□□ 25).

SET THE TIME ZONE, DATE AND TIME

- You have not set the time zone, date and time. This message appears each time you turn the power on until you set the time zone, date and time (□□ 22).

TAPE END

- Tape reached the end. Rewind the tape or replace the cassette.

THE TAPE IS SET FOR ERASURE PREVENTION

- Cassette is protected. Replace the cassette or change the position of the protect switch (□□ 64).



Handling Precautions

Camcorder

- Do not carry the camcorder by the LCD panel. Be careful when closing the LCD panel.
- Do not leave the camcorder in places subject to high temperatures (like the inside of a car under direct sunlight), or high humidity.
- Do not use the camcorder near strong electromagnetic fields such as above TVs, near plasma TVs or mobile phones.
- Do not point the lens or viewfinder at strong light sources. Do not leave the camcorder pointed at a bright subject.
- Do not use or store the camcorder in dusty or sandy places. The camcorder is not waterproof – avoid also water, mud or salt. If any of the above should get into the camcorder it may damage the camcorder and/or the lens.
- Be careful of heat generated by lighting equipment.
- Do not disassemble the camcorder. If the camcorder does not function properly, consult qualified service personnel.
- Handle the camcorder with care. Do not subject the camcorder to shocks or vibration as this may cause damage.

Battery Pack

DANGER!

Treat the battery pack with care.

 
- Keep it away from fire (or it might explode).
 - Do not expose the battery pack to temperature higher than 60 °C. Do not leave it near a heater or inside a car in hot weather.
 - Do not try to disassemble or modify it.
 - Do not drop or knock it.
 - Do not get it wet.
-
- Charged battery packs continue to discharge naturally. Therefore, charge them on the day of use, or the day before, to ensure a full charge.
 - Attach the terminal cover whenever a battery pack is not in use. Contact with metallic objects may cause a short circuit and damage the battery pack.
 - Dirty terminals may cause a poor contact between the battery pack and the camcorder. Wipe the terminals with a soft cloth.
 - Since storing a charged battery pack for a long time (about 1 year) can shorten its lifecycle or affect performance, we recommend to discharge the battery pack fully and to store it in a dry place at temperatures no higher than 30 °C. If you do not use the battery pack for long periods, charge and discharge it fully at least once a year. If you have more than one battery pack, perform these precautions at the same time for all battery packs.

- Although the battery pack's operating temperature range is from 0 °C to 40 °C, the optimal range is from 10 °C to 30 °C. At cold temperatures, performance will temporarily decline. Warm it in your pocket before use.
- Replace the battery pack if the usable time after full charge diminishes substantially at normal temperatures.

About the battery terminal cover

The battery terminal cover has a [□] shaped hole. This is useful when you wish to differentiate between charged and uncharged battery packs.

Back side of the battery pack



Terminal cover attached



Charged



Uncharged


Cassette

- Rewind tapes after use. A slack or damaged tape may cause video problems and/or audio distortions during playback.
- Return cassettes to the case and store them upright. Rewind tapes from time to time if they are stored for a long time.
- Do not leave the cassette in the camcorder after use.

- Do not use spliced tapes or nonstandard cassettes as they may damage the camcorder.
- Do not use tapes that have been jammed as video heads may become dirty.
- Do not insert anything into the small holes of the cassette, or cover them with cellophane tape.
- Handle cassettes with care. Do not drop or subject them to severe impact as this may damage the cassettes.
- With cassettes equipped with a memory function, metal plated terminals may become dirty with use. Clean the terminals with a cotton swab after about 10 times of removing and reinserting the cassette. The memory function is not supported by the camcorder.

Protecting Tapes from Accidental Erasure

To protect your recordings from accidental erasure, slide the tab on the cassette to SAVE or ERASE OFF.

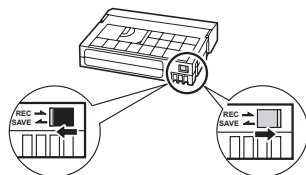



Lithium Button Battery

WARNING!

- The battery used in this device may present a fire or chemical burn hazard if mishandled.
 - Do not disassemble, modify, immerse in water, heat above 100 °C or incinerate the battery.
 - Backup battery: Replace with a CR1616 battery made by Panasonic, Hitachi Maxell, Sony, Toshiba, Varta or Renata. Use of other batteries may present a risk of fire or explosion.
 - **MD235** Lithium battery for the wireless controller: Replace with a CR2025 battery made by Panasonic, Hitachi Maxell, Sony, Sanyo, or with Duracell2025. Use of other batteries may present a risk of fire or explosion.
 - Do not insert the battery into the mouth. If swallowed, seek medical assistance immediately. The battery case may break and the battery fluids may cause internal damage.
 - Keep the battery out of the reach of children.
 - Do not recharge, short-circuit or insert the battery in the wrong direction.
 - The used battery should be returned to the supplier for safe disposal.
- Do not pick up the battery using tweezers or other metal tools, as this will cause a short circuit.
 - Wipe the battery with a clean dry cloth to ensure proper contact.

Maintenance/Others

Storage

If you do not intend to use the camcorder for a long time, store it in a place free of dust, in low humidity, and at temperatures not higher than 30 °C.

Cleaning

Camcorder Body

- Use a soft, dry cloth to clean the camcorder body. Never use chemically treated cloth or volatile solvents such as paint thinner.

Lens and Viewfinder

- If the lens surface is dirty, the autofocus may not work properly.
- Remove any dust or dirt particles using a non-aerosol type blower brush.
- Use a clean, soft lens-cleaning cloth to gently wipe the lens or viewfinder. Never use tissue paper.

LCD Screen

- Clean the LCD screen using a clean, soft lens-cleaning cloth.
- Condensation may form on the surface of the screen when the temperature changes suddenly. Wipe it with a soft dry cloth.

Condensation

Moving the camcorder rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its internal surfaces. Stop using the camcorder if condensation is detected. Continued use may damage the camcorder.



Condensation may form in the following cases:

- When the camcorder is moved from an air-conditioned room to a warm, humid place
- When the camcorder is moved from a cold place to a warm room
- When the camcorder is left in a humid room
- When a cold room is heated rapidly

TO AVOID CONDENSATION

- Do not expose the camcorder to sudden or extreme changes in temperature.
- Remove the cassette, place the camcorder in an airtight plastic bag and let it adjust to temperature changes slowly before removing it from the bag.

WHEN CONDENSATION IS DETECTED

- The camcorder automatically shuts off, the warning message “CONDENSATION HAS BEEN DETECTED” appears for approx. 4 seconds and  starts flashing.
- If a cassette is loaded, the warning message “REMOVE THE CASSETTE” appears and  starts flashing. Remove the cassette immediately and leave the cassette compartment open. Leaving the cassette in the camcorder may damage the tape.
- A cassette cannot be loaded when condensation is detected.

RESUMING USE

The precise time required for water droplets to evaporate will vary depending on the location and weather conditions. After the condensation warning stops flashing, wait for 1 more hour before resuming use.



Using the Camcorder Abroad

Power Sources

You can use the compact power adapter to operate the camcorder and to charge battery packs in any country with power supply between 100 and 240 V AC, 50/60 Hz. Consult the Canon Service Center for information on plug adapters for overseas use.

Playback on a TV Screen


You can only play back your recordings on TVs compatible with the PAL system. The PAL system is used in the following countries/areas:

Algeria, Australia, Austria, Bangladesh, Belgium, Brunei, China, Croatia, Czech Republic, Denmark, Finland, Germany, Hong Kong Special Administrative Region, Iceland, India, Indonesia, Iran, Iraq, Ireland, Israel, Italy, Jordan, Kenya, Kuwait, Liberia, Malaysia, Malta, Montenegro, Mozambique, the Netherlands, New Zealand, North Korea, Norway, Oman, Pakistan, Poland, Portugal, Qatar, Romania, Serbia, Sierra Leone, Singapore, Slovakia, Slovenia, South Africa, Spain, Sri Lanka, Swaziland, Sweden, Switzerland, Tanzania, Thailand, Turkey, Uganda, Ukraine, United Arab Emirates, United Kingdom, Yemen, Zambia.

Trademark Acknowledgements

- ^{Mini} DV is a trademark.
- Microsoft, Windows and Windows Vista are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the United States and other countries.
- Other names and products not mentioned above may be trademarks or registered trademarks of their respective companies.

System Diagram (Availability differs from area to area)

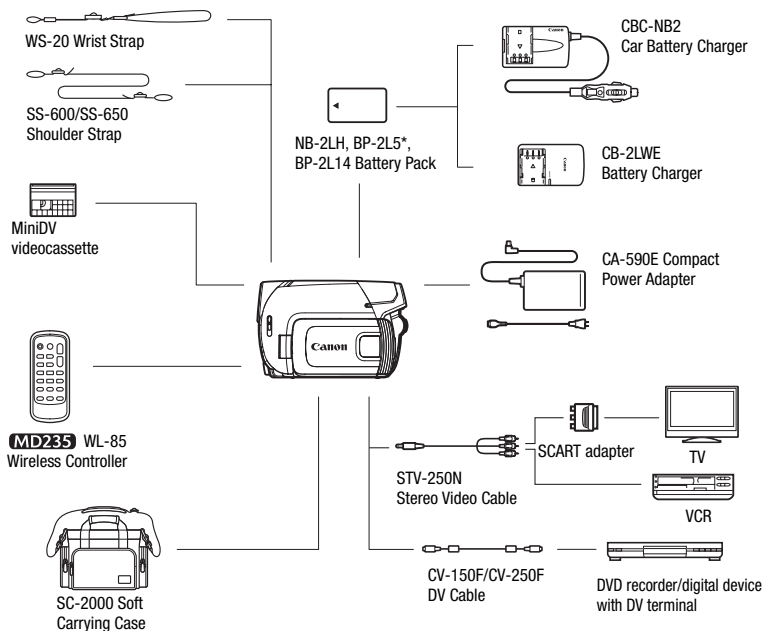

* The BP-2L5 is not available as a separate optional accessory.


Optional Accessories

Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.


Battery Packs

When you need extra battery packs, select either the NB-2LH or the BP-2L14.

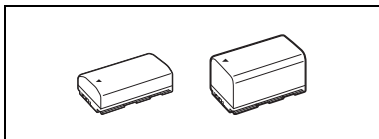

CB-2LWE Battery Charger

Use the battery charger to charge battery packs.

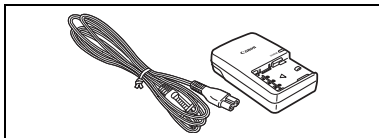

Charging Times

The charging times given in the following table are approximate and vary according to charging conditions and initial charge of the battery pack.

Battery Pack →	BP-2L5	NB-2LH	BP-2L14
Charging Conditions ↓			
Using the camcorder	145 min.	155 min.	285 min.
Using the CB-2LWE Battery Charger	105 min.	160 min.	205 min.

Recording and Playback Times


The recording and playback times given in the following table are approximate and vary according to recording mode and charging, recording or playback conditions. The effective usage time of the battery pack may decrease when recording in cold surroundings, when using the brighter screen settings, etc.

Battery Pack	BP-2L5		NB-2LH		BP-2L14	
Screen Used	Viewfinder	LCD	Viewfinder	LCD	Viewfinder	LCD
MD235						
Maximum Recording Time	90 min.	85 min.	125 min.	120 min.	270 min.	260 min.
Typical Recording Time*	45 min.	45 min.	65 min.	60 min.	145 min.	140 min.
Playback Time	-	110 min.	-	145 min.	-	315 min.
MD216 / MD215 / MD205						
Maximum Recording Time	95 min.	95 min.	135 min.	125 min.	300 min.	280 min.
Typical Recording Time*	55 min.	50 min.	55 min.	50 min.	155 min.	150 min.
Playback Time	-	105 min.	-	145 min.	-	310 min.

* Approximate times for recording with repeated operations such as start/stop, zooming, and power on/off.


CBC-NB2 Car Battery Charger

Use the car battery charger to charge battery packs on the move. The car battery cable plugs into your car's cigarette lighter and runs off a 12-24 V DC negative ground battery.

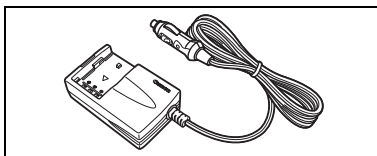


Shoulder Strap

You can attach a shoulder strap for more security and portability. Pass the ends through the strap mount and adjust the length of the strap.

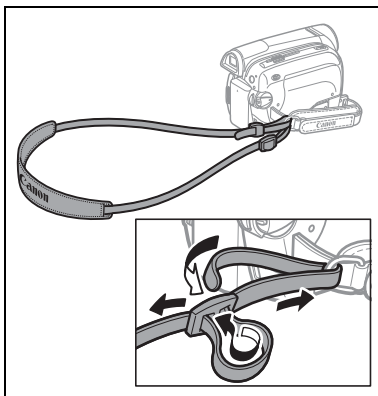

WS-20 Wrist Strap

Use this for extra additional protection for active shooting.

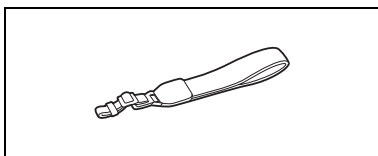

SC-2000 Soft Carrying Case

A handy camcorder bag with padded compartments and plenty of space for accessories.



This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.



Specifications

MD245/MD225

System

Video Recording System	2 rotary heads, helical scanning DV system (consumer digital VCR SD system), digital component recording
Audio Recording System	PCM digital sound: 16 bit (48 kHz/2 channels); 12 bit (32 kHz)
Television System	CCIR standard (625 lines, 50 fields) PAL color signal
Image Sensor	1/6-inch CCD, MD235 approx. 1,070,000 pixels MD215/MD2157/MD205 approx. 800,000 pixels MD235 Effective pixels ¹ (all figures are approximate values) 16:9 Movies (advanced zoom) 480,000 (T) / 710,000 (W) pixels (other zoom types) 550,000 pixels 4:3 Movies (advanced zoom) 440,000 (T) / 690,000 (W) pixels (other zoom types) 690,000 pixels MD216/MD215/MD205 Effective pixels ¹ (all figures are approximate values) 16:9 Movies (advanced zoom) 440,000 (T) / 540,000 (W) pixels (other zoom types) 440,000 pixels 4:3 Movies 400,000 pixels
Compatible Tapes	Videocassettes bearing the <small>Mini</small> DV mark
Tape Speed	SP: 18.83 mm/s; LP: 12.57 mm/s
Maximum Recording Time (60 min. tape)	SP: 60 minutes; LP: 90 minutes
LCD Screen	2.7 in., wide, TFT color, approx. 112,000 pixels
Viewfinder	0.35 in., wide, TFT color, approx. 114,000 pixels
Microphone	Stereo electret condenser microphone

¹ When two values are given, the first indicates the value at full telephoto (T) and the second indicates the value at full wide-angle (W).



Lens	MD235/MD216/MD215 f=2.6–96.2 mm, F/2.0–5.2, 37x power zoom MD235 35 mm equivalent (all figures are approximate values) 16:9 Movies (advanced zoom) 41.7–1,877 mm (other zoom types) 47.1–1,743 mm 4:3 Movies (advanced zoom) 44.6–2,052 mm (other zoom types) 44.6–1,650 mm MD216/MD215 35 mm equivalent (all figures are approximate values) 16:9 Movies (advanced zoom) 40.5–1,676 mm (other zoom types) 45.3–1,676 mm 4:3 Movies 49.8–1,843 mm MD205 f=2.6–83.2 mm, F/2.0–4.6, 32x power zoom 35 mm equivalent (all figures are approximate values) 16:9 Movies (advanced zoom) 40.5–1,450 mm (other zoom types) 45.3–1,450 mm 4:3 Movies 49.8–1,594 mm
Lens Configuration	10 elements in 8 groups (1 double-sided, aspheric element)
AF system	TTL autofocus, manual focus available
Minimum Focusing Distance	1 m; 1 cm on maximum wide angle
White Balance	Auto white balance, preset white balance (DAYLIGHT, TUNGSTEN) or custom white balance
Minimum Illumination	[NIGHT] recording program, Shutter speed at 1/6: MD235 1.7 lx, MD216/MD215/MD205 1.6 lx EASY mode, Auto slow shutter [ON], Shutter speed at 1/25: MD235 7 lx, MD216/MD215/MD205 6 lx
Recommended Illumination	More than 100 lx
Image Stabilization	Electronic
Input/Output Terminals	
AV Terminal	Ø 3.5 mm minijack, output only Video: 1 Vp-p/75 ohms unbalanced Audio: -10 dBV (47 kohms load/3 kohms or less)
DV Terminal	4 pin (IEEE1394 standard), output only
MIC Terminal	Ø 3.5 mm stereo minijack -57 dBV (with 600 ohm mic)/5 kohms or more

Power/Others

Power supply (rated)	7.4 V DC (battery pack), 8.4 V DC (compact power adapter)
Power consumption	MD235 2.4 W (viewfinder), 2.5 W (LCD screen, normal brightness) MD216/MD215/MD205 2.2 W (viewfinder), 2.3 W (LCD screen, normal brightness)
Operating temperature	0 – 40 °C
Dimensions (W x H x D)	68 x 82 x 127 mm excluding the grip belt
Weight (camcorder body only)	380 g

CA-590E Compact Power Adapter

Power input	100 – 240 V AC, 50/60 Hz, 0.14 – 0.08 A
Rated output	8.4 V DC, 0.6 A
Operating temperature	0 – 40 °C
Dimensions	46 x 26 x 70 mm
Weight	93 g

BP-2L5 Battery Pack

Battery type	Rechargeable Lithium Ion Battery
Rated voltage	7.4 V DC
Operating temperature	0 – 40 °C
Battery capacity	530 mAh
Dimensions	33.3 x 16.2 x 45.2 mm
Weight	40 g

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.



Index

6-second auto date57

A

Abroad, using the camcorder67
Aspect ratio
 of a connected TV (TV type)55
 of movies (Widescreen)54
Audio dubbing*49
Audio mode39
Audio output channel40
Auto slow shutter54
AV terminal46

B

Backup battery17
Battery pack
 Charging15
 Remaining charge indicator14
Beach (recording program)36
Beep57

C

Compact power adapter15
Condensation66
Connections
 to a computer51
 to a TV/VCR46

D

Data code34
Date and time
 Date format58
 Daylight saving time22
 Time zone22
Date search*33
Digital effects44
DV terminal47, 51

E

EASY (recording program)27
End search34
Error messages61
Exposure42

F

Fireworks (recording program)36
FUNC. menu20, 53

G

Grip belt18

I

Image effects43
Image stabilizer54

J

Joystick19
Joystick guide19

L

Language22
LCD screen23
LCD video light38
LP mode55

M

Maintenance65
Manual exposure adjustment42
Manual focus41
Markers57
MIC terminal39
Microphone39
Mode switch27

N

Night (recording program)36

* MD235 only.

O
 Onscreen display selection 34

P
 P (recording program) 37
 Playback 31
 Portrait (recording program) 36
 Power save 58

Q
 Quick Start function 30

R
 Recording 26
 Recording mode 55
 Recording programs 35
 Recording reminder 14
 Remaining tape indicator 14
 Remote sensor* 18
 Reviewing movies (Record review) 31

S
 Screen icons 13
 Self timer 38
 Serial number 10
 Setup menus 20, 54
 Shutter speed 37
 Snow (recording program) 36
 SP mode 55
 Special scene (recording programs) 35
 Sports (recording program) 36
 Spotlight (recording program) 36
 Sunset (recording program) 36

T
 Telephoto 28
 Transferring movies to a computer 52
 Tripod 18
 Troubleshooting 59

V
 Video heads, cleaning 2
 Videocassettes 25, 64
 Viewfinder 28
 Volume 32

W
 White balance 42
 Wide angle 28
 Widescreen 16:9 54
 Wind screen 56
 Wireless controller* 18

Z
 Zero set memory* 33
 Zoom
 Advanced zoom 28
 Zoom speed 29
 Zoom type 28

* MD235 only.



DIE-295

Canon

Canon Europa N.V.

P.O. Box 2262, 1180 EG Amstelveen, The Netherlands

Canon UK Ltd.

CCI Service Centre, Unit 130
Centennial Park, Borehamwood, Hertfordshire, WD6 3SE, England
Telephone 0870-241-2161

Canon Australia Pty. Ltd.

Info-Line: 131383
www.canon.com.au

Canon New Zealand Ltd.

Customer Care: (09) 489 0470
www.canon.co.nz

Canon Singapore Pte. Ltd

1 HarbourFront Avenue, #04-01 Keppel Bay Tower, Singapore 098632
Tel: (65) 6799 8888
Fax: (65) 6799 8882

Canon Hongkong Company Ltd

19/F, The Metropolis Tower, 10 Metropolis Drive, Hungghom,
Kowloon, Hong Kong

Canon Latin America, Inc.

Sales & Enquiries: 703 Waterford Way Suite 400 Miami, FL 33126 USA

The information on this manual is verified as of 1 January 2008.



Printed on 70% reused paper.