
Digital Video Camcorder Instruction Manual

English

MVX45i/**MVX4**0i/**MVX4**0

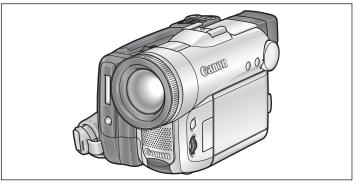

Mini Digital Video Cassette







Please read also the following instruction manual.

• Digital Video Software



Introduction

Preparation

Basic Functions

Advanced Functions

Editing

Printing

Connecting to

Trouble?

Do's & Don'ts

Additional Information



Important Usage Instructions

WARNING!



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING!



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

CAUTION:

DISCONNECT THE MAINS PLUG FROM THE SUPPLY SOCKET WHEN NOT IN USE.


CA-570 identification plate is located on the bottom.

Using this Manual

Thank you for purchasing the Canon MVX45i/MVX40i/MVX40. Please read this manual carefully before you use the camcorder and retain it for future reference.

Symbols and References Used in This Manual

- Precautions related to the camcorder operation.
- Additional topics that complement the basic operating procedures.
- O III: Reference page number.
- O Capital letters are used to refer to buttons on the camcorder or the wireless controller.
- O [] are used to refer to menu items displayed on the screen.
- O "Screen" refers to the LCD and the viewfinder screen.
- O Please note that the illustrations mainly refer to the MVX45i.

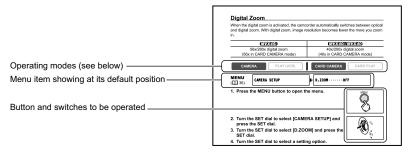

About the Operating Modes

The operating modes are determined by the position of the POWER switch and the TAPE/CARD switch.

Operating Mode	POWER Switch	TAPE/CARD Switch
CAMERA	CAMERA	ලා (TAPE)
PLAY (VCR)	PLAY (VCR)	তে (TAPE)
CARD CAMERA CAMERA		(CARD)
CARD PLAY	PLAY (VCR)	☐ (CARD)

CAMERA

: Function can be used in this mode.

CAMERA

: Function cannot be used in this mode.

Trademark Acknowledgements

- Mini DY is a trademark.
- 53 is a trademark.
- Windows[®] is a registered trademark of Microsoft Corporation in the United States and/ or other countries.
- Macintosh and Mac OS are trademarks of Apple Computer, Inc., registered in the United States and other countries.
- HDV is a trademark of Sony Corporation and Victor Company of Japan, Limited (JVC).
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.

Table of Contents

Introduction	
Using this Manual	3
Checking Supplied Accessories	8
Components Guide	9
Screen Displays	13
Preparation	
Step 1: Preparing the Power Supply	16
Step 2: Loading a Cassette	19
Step 3: Inserting a Memory Card	20
Step 4: Preparing the Camcorder	
Step 5: Using the Wireless Controller	
Step 6: Adjusting the LCD Screen	
Step 7: Changing the Display Language	25
Step 8: Setting the Time Zone, Date and Time	26
Basic Functions	
Recording	
Recording Movies on a Tape	28
Recording on a Memory Card	31
Zooming	
Tips for Better Recording	36
Playback	
Playing Back a Tape	
Playing Back a Memory Card	
Adjusting the Volume	
Playing Back on a TV Screen	41
Advanced Functions	
Recording Programs	
Using the Recording Programs	
☐ Using the Super Night Mode	
SCNUsing the Special Scene Modes	
P Using the Program AE Mode	48
Tv Using the Shutter-Priority AE Mode	49
Av Using the Aperture-Priority AE Mode	50
Recording Adjusting Exposure Manually	E1
Adjusting the Focus Manually	
MVX45) Using the Mini Video Light	
Using the Self-Timer Recording with an External Microphone	
Changing the Settings (1)	
	EG
Changing the Settings with the FUNC. ButtonList of Menu Items (FUNC.)	
Setting the White Balance	
Selecting an Image Effect	
Using Digital Effects	00
Changing the Settings (2)	01
Changing the Settings (2) Changing the Settings with the MENU Button	70

	List of Menu Items (MENU)	71
	Changing the Recording Mode (SP/LP)	
	Adjusting the Audio Recording Level	77
	Using the Wind Screen	79
	Widescreen TV Recording (16:9)	
	Changing the My Camera Settings	
Play	yback	
	Magnifying the Image	83
	Displaying the Data Code	
	End Search	
	Returning to a Pre-marked Position	
	Date Search	
D::		01
Digi	ital Camera Functions	00
	Selecting the Image Quality/Size	88
	Simultaneous Recording on Tape and Memory Card	
	Using the Flash	
	Selecting the Metering Method	
	Changing the focusing method	94
	Selecting the Drive Mode	95
	Recording Panoramic Images (Stitch Assist Mode)	97
	Reviewing a Still Image Right after Recording	99
	Playing Back/Searching Images	100
	Protecting Images.	
	Erasing Images	
	Formatting a Memory Card	
	3 ,	
Eai	ting	
	Recording to a VCR or Digital Video Device	105
	MVX45i/MVX40i Analog Line-in Recording	106
	MVX45i/MVX40i DV Dubbing	
	MVX45i/MVX40i Converting Analog Signals into Digital Signal	ıls
	(Analog-Digital Converter)	
	Audio Dubbing	
	Recording from the Tape on a Memory Card	
D	· · · · · · · · · · · · · · · · · · ·	
Prii	nting	
	Printing Still Images	
	Selecting the Print Settings	121
	Trimming Settings	
	Printing with Print Order Settings	127
C	nnecting to a PC	
COI		
	Transferring Video Recordings to a Computer	129
	Transferring Memory Card Images to a Computer	131
	Direct Transfer (Windows OS only)	132
	•	
	Selecting Images for Transfer (Transfer Order)	134
	Selecting Images for Transfer (Transfer Order)	134
Tro	Using the NETWORK Mode (DV Messenger Version 2)	134
Tro	Using the NETWORK Mode (DV Messenger Version 2)uble?	135
Tro	Using the NETWORK Mode (DV Messenger Version 2)	135

Introduction

Do's & Don'ts

Handling Precautions	143
Cleaning the Video Heads	
Maintenance/Others	148
Additional Information	
System Diagram	149
Optional Accessories	
Specifications	153
Index	155


Checking Supplied Accessories

CA-570 Compact Power Adapter (incl. power cord)	NB-2LH Battery Pack	WL-D85 Wireless Controller	Lithium Button Battery CR2025 for Wireless Controller
			+
Lens Cap and Lens Cap Cord	SS-900 Shoulder Strap	STV-250N Stereo Video Cable	PC-A10 SCART Adapter*
IFC-300PCU USB Cable	MMC-16M MultiMediaCard	DIGITAL VIDEO SOLUTION DISK For Windows For Macintosh	
	To like		

^{*} Europe only.

Components Guide

MVX45i/MVX40i/MVX40

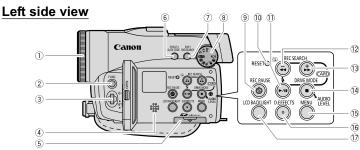


Right side view




- 1) Focus ring (52)
- (2) FUNC. button (111 56)
- ③ SET dial (40, 56, 70)
- ④ Speaker (40)
- (5) Memory card slot (111 20)
- ⑥ FOCUS button (☐ 52) / DATA CODE button (☐ 84)
- ① EXP button (51) / END SEARCH button (85)
- 8 Mode dial (44)
- ⑨ ৩ (self-timer) button (□ 54) /
 REC PAUSE button* (□ 106, 108)
- 10 RESET button (136)
- 1) 4 (flash) button (91) /
 - ►/II (play/pause) button (□ 37)
- 12 REC SEARCH button (30) /
 - (record review) button (30) /
 - ◄◄ (rewind) button (☐ 37) /
 - CARD button (39)
- * MVX45i/MVX40i only.

- 13 REC SEARCH + button (30) /
 - ►► (fast forward) button (☐ 38) / CARD + button (☐ 39)
- 14 DRIVE MODE button (95) /
 - (stop) button (□ 37) / AUDIO LEVEL button (□ 77)
- 15 MENU button (III 70)
- 16 D.EFFECTS button (61)
- ① LCD BACKLIGHT button (24)
- 18 Terminal cover
- 19 DC IN terminal (16)
- 20 Power switch (3, 135)
- ② MIC terminal (55)
- 22 AV terminal (41) /
- 23 DV terminal (ДД 105, 108, 129)
- 24 Grip belt (21)

Front view

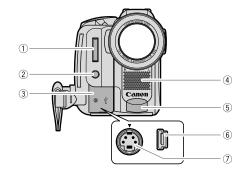


Back view

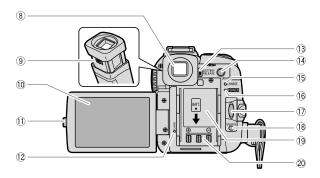


- (1) Flash (1 91)
- 2 Mini video light (assist lamp)* (53)
- 3 Terminal cover
- (4) Stereo microphone
- 5 Remote sensor (23)
- ⑥ USB terminal (118, 131)
- 7 S-video terminal (43)
- 8 Viewfinder (21)
- 9 Dioptric adjustment lever (21)
- 10 LCD screen (11 24)
- * MVX45i only.

- ① OPEN button (24)
- (2) Card access indicator (12) 31)
- 13 BATTERY RELEASE button (16)
- (4) LIGHT button* (11 53)
- 15 CHARGE indicator (16)
- 16 POWER indicator
- 17 Start/stop button (28, 31)
- 18 UNLOCK button (135)
- (19) Serial number
- 20 Battery attachment unit (11 16)

Top view

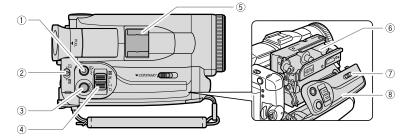

Bottom view

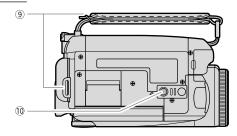

- ① △ ~ (print/share) button (□ 119, 132)
- ② TAPE/CARD switch (□ 3)
- 3 PHOTO button (31)
- 4 Zoom lever (34)
- **5 MVX45**î


Advanced accessory shoe (55)

MVX40i/MVX40

Accessory shoe (\$\square\$ 55)

- 6 Cassette compartment (19)
- 8 Cassette compartment cover (19)
- 9 Strap mount (22)
- 10 Tripod socket (11 36)

Wireless Controller WL-D85

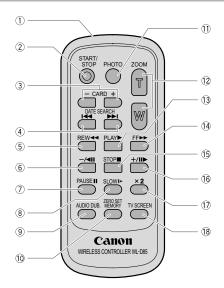


1) Transmitter
② START/STOP button (🕮 28, 31)
③ CARD -/+ buttons (□ 39)
④ DATE SEARCH ► buttons (□
⑤ REW ◄ button (□ 37)
⑥ -/ ◀ ▮▮ button (ДД 38)
⑦ PAUSE ■ button (□ 38)
9 AUDIO DUB. button (113)

① ZERO SET MEMORY button (86)		
① PHOTO button (CQ 31)		
② Zoom buttons (Д 34)		
③ PLAY ▶ button (□ 37)		
① FF ▶▶ button (□ 38)		
(5) STOP ■ button (□ 37)		
16 +/ ▶ button (□ 38)		
① x 2 button (38)		
® TV SCREEN button (ДД 73)		

Screen Displays during Recording/Playback

CAMERA Mode

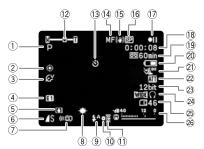

- 1 Recording Program (11 44)
- ② White balance (ДД 58)
- ③ Image effect (Д 60)
- 4 Digital effects (61)
- ⑤ Condensation warning (139)
- 6 Still image quality/size (90)
- 7 Remote sensor mode (74)
- ® Mini video light* (53)
- 9 Flash (91)
- * MVX45i only.

- ① AF/AE locked during still image recording(90)
- ① Accessory connected to the Advanced Accessory Shoe*
- 12 Zoom (34)
- 13 Self-timer (54)
- (14) Manual focus (111) 52)
- (5) Image stabilizer (CL 71)
- 16 Recording mode (76)
- (17) Tape operation (111 14)
- 18 Time code (QQ 29)
- (9) Remaining tape (11) 29)
- 20 Remaining battery charge (11 29)
- 21 Wind screen (79)
- 22 Microphone attenuator (78)
- 23 Audio mode (73)
- ② Widescreen mode (□ 80) / Headphones (□ 78)
- ⊗ Remaining card capacity for still images
 (□ 90)
- 26 Audio level indicator (77)

PLAY (VCR) Mode




- 1) 12 bit audio (11115)
- 2 End search (\$\omega\$ 85)
- ③ Movie size (116)
- 4 Still image quality/size (116)
- ⑤ Data code (\$\mathbb{\Pi}\$ 84)
- ⑥ Volume level of built-in speaker or headphones (☐ 40)

- 7 Tape operation
 - : Record II: Pause
 - ■: Stop


 ▲: Eject
 - ►: Play ►►: Fast
 - forward
- Fast forward playback/ rewind playback (38)
 - x2▶/**∢**x2: x2 playback (☐ 38)
 - x1 ▶ / ◀ x1: x1 playback (☐ 38) ▶ / ◀1: Slow playback (☐ 38)
 - ||▶/◀||: Frame advance playback/ frame reverse playback (∭ 38)

- ► ||/|| **◄**: Playback pause (☐ 38)
- ▶▶ / | **◄** : Date search (☐ 87)
- ► Zero set memory (☐ 86)
- ♠ / ♠ ||: Audio dubbing (113)

CARD CAMERA Mode

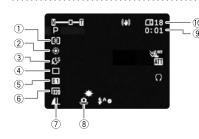

- 1) Metering mode (QQ 93)
- ② White balance (58)
- 3 Image effect (60)
- 4 Drive mode (☐ 95)5 Digital effects (☐ 61)
- 6 Movie size (88)
- 7 Still image quality/size (88)
- 8 Camcorder shake warning (71)
- 9 Remaining card capacity for movies
- 10 Remaining card capacity for still images

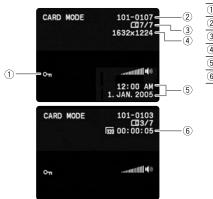

- ① Protect mark (① 102) ② File number (① 72) ③ Number of images
- 4 Still image size5 Data code (☐ 84)
- 6 Movie size/playback time

Step 1: Preparing the Power Supply


The camcorder can be powered by a battery pack or connected to a household power source. Charge the battery pack before use.

Attaching the Battery Pack

- 1. Turn the POWER switch to OFF.
- 2. Move the viewfinder upward.
- Attach the battery pack to the camcorder.
 - Remove the terminal cover of the battery pack.
 - Press lightly and slide it in the direction of the arrow until it clicks.

To remove the battery pack:

- 1. Move the viewfinder upward.
- Press the BATTERY RELEASE button and slide the battery pack upward.

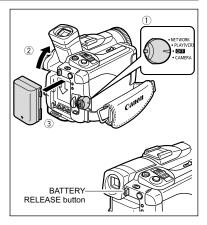


Charging the Battery Pack

- 1. Connect the power cord to the adapter.
- 2. Plug the power cord into a power outlet.
- 3. Connect the power adapter to the camcorder's DC IN terminal.

The CHARGE indicator starts flashing. It glows steadily when charging is complete.

To remove the power adapter:


- 1. Disconnect the power adapter from the camcorder.
- 2. Unplug the power cord from the power outlet.
- 3. Disconnect the power cord from the adapter.

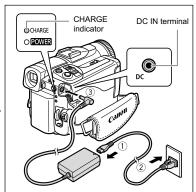

Using a Household Power Source

Connect to a household power source to use the camcorder without worrying about the battery power. You can keep the battery pack attached; the battery power will not be consumed.

- 1. Turn the POWER switch to OFF.
- 2. Connect the power cord to the power adapter.
- Plug the power cord into a power outlet.
- Connect the power adapter to the camcorder's DC IN terminal.

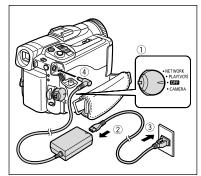



- O Turn off the camcorder before connecting or disconnecting the power adapter.
- O Do not connect any products that are not expressly recommended to the camcorder's DC IN terminal or to the power adapter.
- O You may hear some noise from the power adapter during use. This is not a malfunction.
- O Do not disconnect and reconnect the power cord while charging a battery pack. Charging may stop. The battery pack may not be charged correctly even if the CHARGE indicator glows steady. The battery pack may also not be charged correctly when a power outage occurs during charging. Remove the battery pack and attach it back to the camcorder.



- O When the power adapter or battery pack is defective, the CHARGE indicator flashes rapidly (at about 2 flashes/second) and charging stops.
- O The CHARGE indicator informs you about the charge status.

0-50%: Flashes once every second

More than 50%: Flashes twice every second

100%: Glows steadily

O Charging, Recording and Playback Times

Below times are approximate and vary according to the charging, recording or playback conditions.

Battery Pack		NB-2LH	NB-2L	BP-2L12	BP-2L14
Charging Time		140 min.	125 min.	220 min.	260 min.
Max. Recording Time					
Viewfinder		85 min.	70 min.	145 min.	185 min.
LCD	normal	80 min.	65 min.	140 min.	175 min.
	bright	75 min.	60 min.	130 min.	165 min.
Typical Recording Time*					
Viewfinder		45 min.	35 min.	80 min.	100 min.
LCD	normal	45 min.	35 min.	80 min.	100 min.
	bright	40 min.	35 min.	75 min.	95 min.
Playback Time		115 min.	90 min.	200 min.	245 min.

^{*} Approximate times for recording with repeated operations such as start/stop, zooming, power on/off.

- O We recommend charging the battery pack in temperatures between 10 °C and 30 °C (50 °F and 86 °F). Outside the temperature range of 0 °C to 40 °C (32 °F to 104 °F), the CHARGE indicator flashes rapidly and charging stops.
- O A lithium ion battery pack can be charged at any charge state. Unlike conventional battery packs, you do not need to completely use or discharge it before charging.
- O To conserve battery power, turn off the camcorder instead of leaving it in record pause mode.
- O We recommend that you prepare battery packs 2 to 3 times longer than you think you might need.


Step 2: Loading a Cassette


Use only videocassettes marked with the Mini DY logo.

 Slide the OPEN/EJECT switch and open the cassette compartment cover.

The cassette compartment opens automatically.

- 2. Load the cassette.
 - Load the cassette with the window facing the grip belt.
 - Unload the cassette by pulling it straight out
- 3. Press the PUSH mark on the cassette compartment until it clicks.
- 4. Wait for the cassette compartment to retract automatically and close the cassette compartment cover.

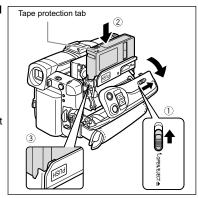

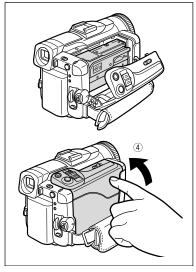



- O Do not interfere with the cassette compartment while it is opening or closing automatically, or attempt to close the cover before the cassette compartment has fully retracted.
- O Be careful not to get your fingers caught in the cassette compartment cover.



If the camcorder is connected to a power source, cassettes can be loaded/ unloaded even if the POWER switch is set to OFF.


Step 3: Inserting a Memory Card

This camcorder is for use with MultiMediaCards and SD Memory Cards only.

Inserting the Card

- 1. Set the POWER switch to OFF.
- 2. Open the cover.
- 3. Insert the memory card straight all the way into the memory card slot.
- 4. Close the cover.


Do not close the cover forcefully without having the card correctly inserted.

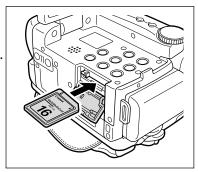

Removing the Card

Do not forcefully remove the memory card without first pushing it in.

- 1. Turn off the camcorder.
 - Make sure that the card access indicator is not flashing before you turn off the camcorder
- 2. Open the cover.
- 3. Push the memory card to release it. Remove the memory card.
- 4. Close the cover.

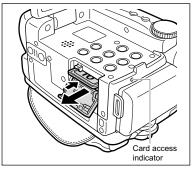




- Turn off the camcorder before inserting or removing the memory card.
 Otherwise, it may result in data damage.
- O If you use memory cards other than the supplied one, make sure to format them with the camcorder (104).




- O The SD Memory Card has a protect switch to prevent accidental erasure.
- O Proper operation cannot be guaranteed for all memory cards.

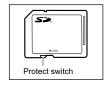

Step 4: Preparing the Camcorder

Adjusting the Viewfinder (Dioptric Adjustment)


- 1. Turn on the camcorder and keep the LCD panel closed.
- 2. Pull out the viewfinder.
- 3. Adjust the dioptric adjustment lever.
- 4. Push the viewfinder back in.

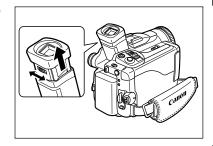

Attaching the Lens Cap

- 1. Attach the cord to the lens cap.
- 2. Pass the grip belt through the loop on the cord.


Press the buttons on the lens cap when attaching/removing it. Hook the lens cap on the grip belt while you are recording, and place it over the lens when you have finished

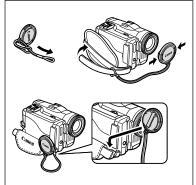

Fastening the Grip Belt


Hold the camcorder with your right hand and adjust the belt with your left.

Adjust the grip belt so that you can reach the zoom lever with your index finger, and the start/stop button with your thumb.

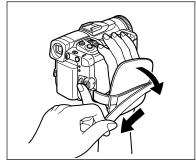

Attaching the Shoulder Strap

Pass the ends through the strap mount and adjust the length of the strap.

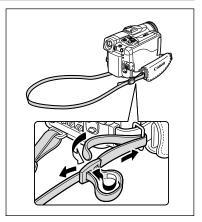


Step 5: Using the Wireless Controller

Inserting the Battery


The wireless controller operates with a lithium button battery CR2025.

- Press the tab in the direction of the arrow and pull out the battery holder.
- 2. Place the lithium button battery with the + side facing up.
- 3. Insert the battery holder.

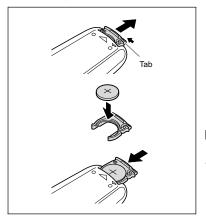

Using the Wireless Controller

Point it at the camcorder's remote sensor when you press the buttons.

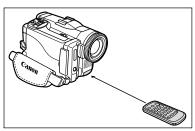




- O The wireless controller may not work properly when the remote sensor is subjected to strong light sources or direct sunlight.
- O If the wireless controller does not work, check if the remote sensor is set to [OFF (♠)] (☐ 74).
- O When the camcorder cannot be operated with the wireless controller, or when it can only be operated in very close range, replace the battery.

Step 6: Adjusting the LCD Screen

Rotating the LCD Panel

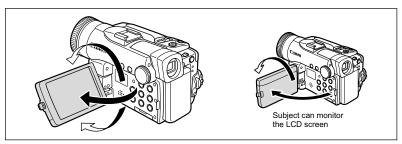

Press the OPEN button and open the LCD panel 90 degrees.


- You can rotate the panel downward by 90 degrees.
- You can rotate the panel by 180 degrees toward the lens (allowing the subject to monitor the LCD screen).



You can rotate the LCD panel to allow the subject to monitor the screen while you use the viewfinder. It is also useful if you wish to include yourself when recording with the self-timer.

LCD Backlight

You can switch the brightness of the LCD screen between normal and bright by pressing the LCD BACKLIGHT button. This is useful for outdoor recordings.

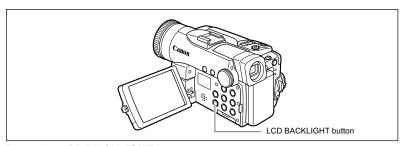

Press the LCD BACKLIGHT button.


The brightness changes with each press of the button.



- O This setting does not affect the brightness of the recording or the viewfinder screen
- O When using a battery pack, the camcorder retains the setting even if you change the position of the POWER switch.
- O The battery usage time shortens when the LCD screen is set brighter.

Step 7: Changing the Display Language

The language used in the camcorder displays and menu items can be changed to German, Spanish, French, Italian, Russian, Simplified Chinese, Traditional Chinese, Korean or Japanese.

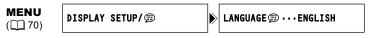

- 1. Turn the POWER switch to CAMERA or PLAY (VCR).
- 2. Press the MENU button.
- 4. Turn the SET dial to select [LANGUAGE] and press the SET dial.
- 5. Turn the SET dial to select a language and press the SET dial.
- 6. Press the MENU button.




- O If you have mistakenly changed the language, follow the
 menu item to change the setting.
- O The displays "MENU" and "SEI" at the bottom of the screen refer to the button names on the camcorder and will not change when you change the language.

Step 8: Setting the Time Zone, Date and Time

Setting the Time Zone/Daylight Saving Time

MENU (☐ 70) SYSTEM T.ZONE/DST···PARIS

- 1. Turn the POWER switch to CAMERA or PLAY (VCR).
- 2. Press the MENU button to open the menu.

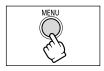

- Turn the SET dial to select [SYSTEM] and press the SET dial.
- 4. Turn the SET dial to select [T.ZONE/DST] and press the SET dial.



The time zone setting appears (see table on the next page). The default setting is Paris.

Turn the SET dial to select the setting option that represents your time zone and press the SET dial.

To adjust for daylight saving time, select the time zone with the $**$ next to the area.

Setting the Date and Time


MENU (☐ 70) SYSTEM D/TIME SET··· 1.JAN.2005 12:00 AM

6. Turn the SET dial to select [D/TIME SET] and press the SET dial.

The year display starts to flash.



- Turn the SET dial to select the year, and press the SET dial.
 - · The next part of the display starts flashing.
 - · Set the month, day, hours and minutes in the same way.
- 8. Press the MENU button to close the menu and to start the clock.

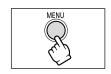




When you do not use the camcorder for about 3 months, the built-in rechargeable lithium battery may become discharged, and the date/time setting may be canceled. In such case, recharge the built-in lithium battery (\square 145).

Time Zones

Once you have set time zone, date and time, you do not need to reset the clock each time you travel to another time zone. Just set the time zone to the one of your destination, and the camcorder automatically adjusts the clock.

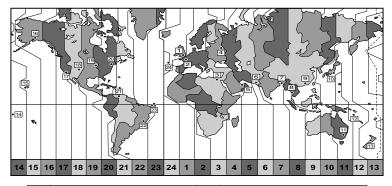

No.	Time zone	No.	Time zone
1	LONDON	13	WELLGTN (Wellington)
2	PARIS	14	SAMOA
3	CAIRO	15	HONOLU. (Honolulu)
4	MOSCOW	16	ANCHOR. (Anchorage)
5	DUBAI	17	L.A. (Los Angeles)
6	KARACHI	18	DENVER
7	DACCA	19	CHICAGO
8	BANGKOK	20	N.Y. (New York)
9	H. KONG (Hong Kong)	21	CARACAS
10	TOKYO	22	RIO (Rio de Janeiro)
11	SYDNEY	23	FERNAN. (Fernando de Noronha)
12	SOLOMON	24	AZORES

Recording Movies on a Tape

Before You Begin Recording

Make a test recording first to check if the camcorder operates correctly. If necessary, clean the video heads (147).

Set the camcorder to CAMERA mode.


- Set the POWER switch to CAMERA and the TAPE/CARD switch to

 O

 .
- The POWER indicator lights up.

2. Press the start/stop button to begin recording.

Press the start/stop button again to pause recording.

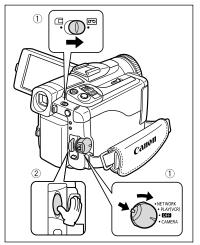

When You Have Finished Recording

- 1. Turn the POWER switch to OFF.
- 2. Close the LCD panel.
- 3. Replace the lens cap.
- 4. Unload the cassette.
- 5. Disconnect the power source.




- O Wait until the tape counter stops completely before you start recording.
- O When you do not remove the cassette, you can record the next scene without producing any noise or blank sections between the recordings even if you turn the camcorder off.
- O Bright light may make it difficult to use the LCD screen. In such case, use the viewfinder instead.
- O When recording near loud sounds (such as fireworks, drums or concerts), sound may become distorted or may be recorded not in the actual sound level. This is not a malfunction. The audio recording level can also be adjusted manually (\$\square\$ 77).
- O The camcorder enters stop mode after 4 minutes 30 seconds when left in record pause mode to protect tape and video heads.
- O In stop mode, press the start/stop button to start recording and press the ♂ (self-timer) button to go into record pause mode.



- O When powered by a battery pack, the camcorder shuts off after 5 minutes when the camcorder is left without any operation to save power (☐ 74). Approximately 30 seconds before the camcorder shuts off, "⚠AUTO POWER OFF" appears in the center of the screen. If the camcorder shuts off, turn the POWER switch to OFF and back on again.
- O About the LCD and viewfinder screen: The screens are produced with extremely high-precision manufacturing techniques, with more than 99.99% of the pixels operating to specification. Less than 0.01% of the pixels may occasionally misfire or appear as black or green dots. This has no effect on the recorded image and does not constitute a malfunction.

Screen Displays during Recording

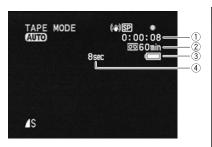

1) Time Code

Indicates the recording time in hours, minutes and seconds

2 Remaining tape

Indicates the remaining time of the tape in minutes. "" moves during recording. "" END" flashes when the tape reaches the end.

- When the time left is less than 15 seconds, the remaining tape time may not appear.
- Depending on the type of the tape, the indication may not be displayed correctly.

3 Remaining battery charge

The battery symbol indicates the charge status of the battery pack.



- When you attach an empty battery pack, the power may turn off without displaying "


 "."
- The actual battery charge may not be indicated accurately depending on the condition under which battery pack and camcorder are used.

4 Recording reminder

The camcorder counts from 1 to 10 seconds when you start recording. This is helpful to avoid scenes that are too short.

Reviewing and Searching when Recording

You can review the last few seconds of your recording (record review). You can also play back the tape to locate the point where you wish to begin recording (record search).

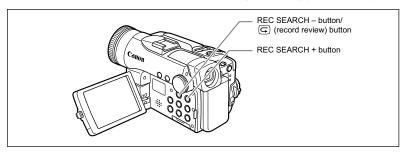

Record Review

CAMERA PLAY (VCR) CARD CAMERA CARD PLAY

In record pause mode:

Press and release the \subseteq (record review) button.

The camcorder rewinds the tape, plays back the last few seconds, and returns to record pause mode.



Record Search

CAMERA PLAY (VCR) CARD CAMERA CARD PLAY

In record pause mode:

Press and hold the REC SEARCH + button (forward) or

- button (reverse).
- · Release the button at the point you wish to begin recording.
- · The camcorder returns to record pause mode.



Recording on a Memory Card

Recording Still Images on a Memory Card

1. Set the camcorder to CARD CAMERA mode.


- Set the POWER switch to CAMERA and the TAPE/CARD switch to
- · The POWER indicator lights up.

2. Press the PHOTO button halfway.

- turns green when focus is adjusted and a green frame appears. The beep sounds.
- When you press the PHOTO button on the wireless controller, recording starts immediately.

3. Press the PHOTO button fully.

- and focusing frame disappear and you hear a shutter sound.
- · The card access indicator flashes.

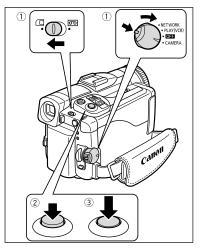


Recording Movies on a Memory Card

1. Set the camcorder to CARD CAMERA mode.

- Set the POWER switch to CAMERA and the TAPE/CARD switch to
- The POWER indicator lights up.

2. Press the start/stop button to begin recording.

- · The card access indicator flashes.
- Press the start/stop button to stop recording.

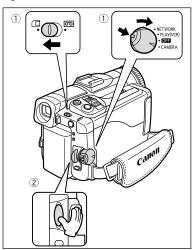



- O When you are using a SD Memory Card, make sure that the protect switch is set to allow recording.
- O Do not turn off the camcorder, change the position of the TAPE/CARD switch, disconnect the power source, open the memory card cover or remove the memory card while the card access indicator is flashing. Doing so could result in data damage.
- O Do not load/unload a cassette during recording.



O About the focusing frame:

The camcorder automatically selects the appropriate focusing frames out of the 9 focusing frames, allowing to focus on subjects out of the center (94).

- O If the subject is not suitable for autofocus, turns yellow. Keep the PHOTO button pressed halfway and adjust the focus manually with the focus ring.
- O Depending on the number of images on the memory card (Windows: more than 1800 images; Macintosh: more than 1000 images), you may not be able to download images to a computer. In such case, use a PC card reader.
- O Connection to a PictBridge compliant printer will not work when the memory card contains more than 1800 images. For best performance, we recommend to keep the number of images on the memory card less than 100.
- O When recording a still image (step 2), the image may appear out of focus for a moment while the camcorder is focusing.
- When the subject is too bright, "OVEREXP." starts flashing. In such case, use the optional FS-34U ND filter.
- O Sound for movies recorded on the memory card will be monaural.
- O When you use a SD Memory Card, we recommend using a Canon SD Memory Card, or a SD Memory Card with a transfer rate of more than 2 MB/sec., right after you have formatted it with this camcorder. With memory cards not formatted with this camcorder, or when recording/erasing has been repeatedly performed, the writing speed may be lower and recording may stop.
- Recording time of movies on the memory card differs depending on the image size and subject.
- O Users of Windows XP: When you plan to connect the camcorder to a computer using a USB cable, keep the length of one movie shorter than approx. 12 min. in 320 x 240 and 35 min. in 160 x 120.
- O The camcorder shuts off when you do not operate it for 5 minutes to save power (☐ 74). "⚠ AUTO POWER OFF" appears 30 seconds before shutoff. To continue recording, turn the POWER switch to OFF and then back to CAMERA.

Screen Displays during Still Image Recording



① Still Image Quality/Size

Indicates the image quality and the image size of the still image.


② Remaining Card Capacity for Still Images

- ☐ flashing in red: No card
- in green: 6 or more images
- in yellow: 1 to 5 images in red: No more images
- The indication may not decrease even though a recording has been made, or may decrease by 2 images at once.
- All indicators are displayed in green when a memory card is played back.

Card Access Display

">" appears to indicate that the camcorder is writing on the memory card.

Screen Displays during Movie Recording

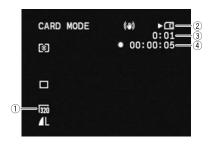

1 Movie Size

Indicates the movie size.

② Card Access Display

"▶" appears to indicate that the camcorder is writing on the memory card.

③ Remaining Card Capacity for Movies

Indicates the remaining time in hours and minutes. At less than 1 minute, the remaining time will be displayed in 10 second-steps, at less than 10 seconds in 1 second-steps.


 The indication varies depending on the recording condition. The actual remaining time may be longer or shorter than indicated


4 Movie recording time

Indicates the recording time of the movie.

Zooming

The camcorder is equipped with optical zoom and digital zoom.

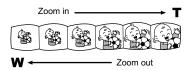

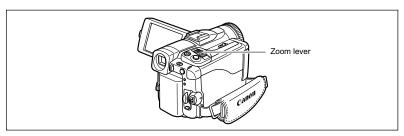

Optical Zoom

(MVX45i)	MVX40i/MVX40
14x optical zoom	10x optical zoom

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

Move the zoom lever toward ${\bf W}$ to zoom out (wide-angle). Move it toward ${\bf T}$ to zoom in (telephoto).

Press the zoom lever slightly for a slow zoom. Press harder for a faster zoom.





- O You can also use the **T** and **W** buttons on the wireless controller. However, you cannot control the zoom speed.
- O The zoom speed is slightly faster in record pause mode.
- O Keep at least 1 m (3.3 ft.) to the subject. At wide-angle, you can focus on a subject as close as 1 cm (0.39 in.).

Digital Zoom

When the digital zoom is activated, the camcorder automatically switches between optical and digital zoom. With digital zoom, image resolution becomes lower the more you zoom in.


(MVX45i)	(MVX40i/MVX40)	
56x/280x digital zoom	40x/200x digital zoom	
(56x in CARD CAMERA mode)	(40x in CARD CAMERA mode)	
DLAY (VCD)	CARD BLAY	

MENU
(70)

CAMERA SETUP


D. ZOOM······OFF

1. Press the MENU button to open the menu.

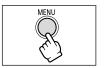

- 2. Turn the SET dial to select [CAMERA SETUP] and press the SET dial.
- Turn the SET dial to select [D.ZOOM] and press the SET dial.
- 4. Turn the SET dial to select a setting option.
- 5. Press the MENU button to close the menu.



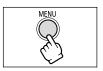



- O A zoom indicator appears for 4 seconds. It extends in light blue when the digital zoom is set to 56x (MVX45i) or 40x (MVX40i/MVX40), and extends further in dark blue when set to 280x (MVX45i) or 200x (MVX40i/MVX40).
- O Digital zoom cannot be used in the following cases:
 - In the night modes
 - With the multi-images screen
 - In Stitch Assist mode

Tips for Better Recording

Holding the Camcorder

For maximum stability, grip the camcorder in your right hand and keep your right elbow pressed against your body. If necessary, support the camcorder with your left hand. Be careful that your fingers do not touch the microphone or lens.



For More Stability

Lean against a wall



Lie on your elbow

Put the camcorder on a table



Kneel on one knee

Use a tripod





Lighting

When recording outdoors, we recommend recording with the sun at your back.





O When using a tripod, do not leave the viewfinder exposed to direct sunlight as it may melt (due to concentration of the light by the lens).




Do not use tripods with fastening screws longer than 5.5 mm (0.2 in.) as it may damage the camcorder.


Playing Back a Tape

If the playback picture is distorted, clean the video heads using a Canon Head Cleaning Cassette or a commercially available digital video head-cleaning cassette (1147).

 Set the camcorder to PLAY (VCR) mode.

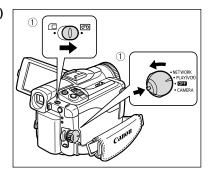


- 2. Press the ◀◀ button to rewind the tape.
- 3. Press the ▶/▮▮ button to begin playback.
- 4. Press the button to stop playback.

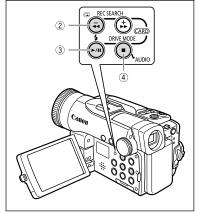



- O To use the viewfinder, close the LCD panel.
- O About the screen display: During playback, the time code gives the hours, minutes, seconds and frames. The remaining tape time may not appear when the time left is less than 15 seconds.
- O You can display the audio level indicator (77).

Special Playback Modes

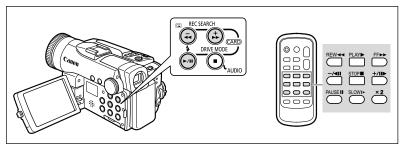

►/II (Playback Pause)

To pause playback, press the ▶/▮▮ button during normal playback.

►► (Fast Forward Playback) / ◄◄ (Rewind Playback)

Plays back the tape at 11.5 times normal speed (forward or reverse). Press and hold the button during normal playback or fast forward.

-/ ◀ ▮▮ (Reverse Playback)

Press the button on the wireless controller during normal playback. Press the ▶ (play) button to return to normal playback.

+/**|| | |** (Frame Advance) / –/ **| | |** (Frame Reverse)

Plays back frame-by-frame. Press the button on the wireless controller repeatedly during playback pause. Press and hold it to play back continuous frame advance/frame reverse.

SLOW **I►** (Slow Forward)/(Slow Reverse)

Plays back at about 1/3 normal speed. Press the button on the wireless controller during normal or reverse playback. Press the ▶ (play) button to return to normal playback.

x2 (Forward x2 Playback)/(Reverse x2 Playback)

Plays back at 2 times normal speed. Press the button on the wireless controller during normal or reverse playback. Press the ▶ (play) button to return to normal playback.




- O There is no sound during special playback.
- O The picture may become distorted during some special playback modes.
- O The camcorder stops the tape automatically after 4 minutes 30 seconds in playback pause mode to protect tape and video heads.

Playing Back a Memory Card


Set the camcorder to CARD PLAY mode.

Set the POWER switch to PLAY (VCR) and the TAPE/CARD switch to ...

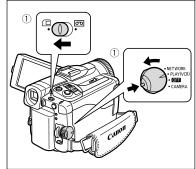

- Press the CARD +/- button to move between images.
 Press the ►/II button to play back a movie.
 - The first scene appears as a still image when playback is complete.
 - Pressing the ►/III button during playback pauses the playback. Press the ►/III button again to restart playback.

Pressing the **button** displays the first scene of the movie

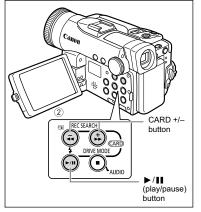



- O Images not recorded with this camcorder, uploaded from a computer (except the sample images


 69), edited on a computer and images whose file names have been changed may not be played back correctly.
- O Do not turn off the camcorder, change the position of the TAPE/CARD switch, disconnect the power source, open the memory card cover or remove the memory card while the card access indicator is flashing. Doing so could result in data damage.



During movie playback: Press the CARD +/– button (or the REW ◀◀/FF▶► button on the wireless controller) for 8x fast forward/fast rewind playback.

Adjusting the Volume

When you use the LCD screen for playback, the camcorder plays back the sound via built-in speaker. The speaker does not sound when you close the LCD panel. Use headphones when using the viewfinder.

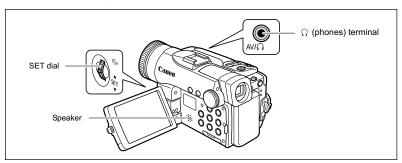

Adjusting the Speaker Volume



Turn the SET dial up to increase the volume, and down to lower the volume.

- · A volume bar appears for 2 seconds.
- You can turn off the volume completely by turning the SET dial down until "OFF " appears. Turn the SET dial up to increase the volume again.



Adjusting the Headphones Volume

The headphones terminal also serves as AV terminal. Headphones can only be used when "()" is displayed on the screen. If not, change the setting following the procedure below.



- Press the MENU button and select [VCR SETUP]. Select [AV/PHONES ∩], set it to [PHONES ∩] and press the MENU button.
- 2. Turn the SET dial to increase the volume, and down to lower the volume.





- O The speaker does not sound when " Ω " is displayed.
- O Do not connect headphones unless "()" is displayed as it produces noise.
- O You can also adjust the headphones volume during recording.

Playing Back on a TV Screen


The AV terminal also serves as headphones terminal. When " Ω " is displayed on the screen, change the setting following the procedure below.



Press the MENU button and select [VCR SETUP]. Select [AV/PHONES \cap], set it to [AV] and press the MENU button.

TVs with SCART Terminal

Refer also to the TV or VCR instruction manual.

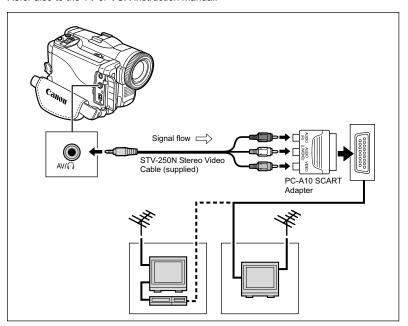

- 1. Turn off all devices before starting the connections.
- 2. Connect the PC-A10 SCART Adapter to the TV or VCR's terminals.
- Connect the STV-250N Stereo Video Cable to the camcorder's AV terminal and the audio terminals on the SCART Adapter.

Connect the white plug to the white AUDIO terminal L (left), and the red plug to the red AUDIO terminal R (right) and the yellow plug to the yellow VIDEO terminal.


4. If connecting to a TV, set the input selector to VIDEO. If connecting to a VCR, set the input selector to LINE.



The supplied PC-A10 SCART Adapter is for output only. For analog line-in recording or analog-digital conversion, please use a SCART Adapter with input capability (commercially available).

TVs with Audio/Video Terminals


Refer also to the TV or VCR instruction manual.

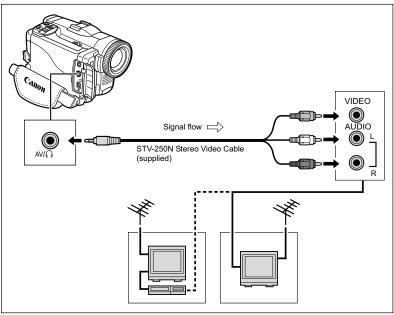

- 1. Turn off all devices before starting the connections.
- Connect the STV-250N Stereo Video Cable to the camcorder's AV terminal and the audio/video terminals on the TV/VCR.
 - Connect the white plug to the white audio terminal L (left), the red plug to the red audio terminal R (right) and the yellow plug to the yellow video terminal VIDEO.
- 3. If connecting to a TV, set the input selector to VIDEO. If connecting to a VCR, set the input selector to LINE.

TVs with S (S1)-Video Input Terminal

Refer also to the TV or VCR instruction manual.

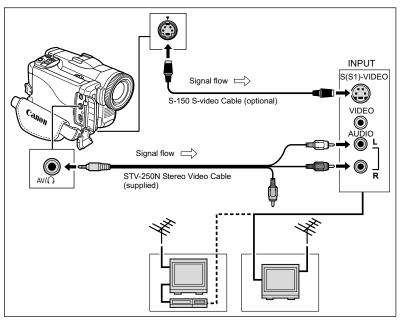

1. Turn off all devices before starting the connections.

AUDIO terminal R (right). Do not connect the yellow plug.

- 2. Connect the S-150 S-video Cable (optional) to the S-video terminals.
- Connect the STV-250N Stereo Video Cable to the camcorder's AV terminal and the audio terminals of the TV/VCR.
 Connect the white plug to the white AUDIO terminal L (left), and the red plug to the red
- 4. If connecting to a TV, set the input selector to VIDEO. If connecting to a VCR, set the input selector to LINE.



- O We recommend powering the camcorder from a household power source.
- O The picture quality is higher when connecting to a TV with an S (S1) terminal. Optional S-150 S-Video Cable required.

Using the Recording Programs

AUIO Auto

The camcorder adjusts focus, exposure and other settings automatically, allowing you to just point and shoot.



Portrait

The camcorder uses a large aperture, achieving a focus on the subject while blurring other distracting details.



Landscape

The camcorder chooses a small aperture to achieve a broad depth of field in the entire composition.



Creative Zone:

You can adjust the settings to match the conditions for the subjects.



Image Zone:

The camcorder automatically selects matching conditions for the subjects.

P Program AE

The camcorder adjusts the camera settings automatically. However, you have the options of adjusting the settings manually (48).

Tv Shutter-Priority AE

Use this mode to select the shutter speed. The camcorder automatically sets a matching aperture setting (1 49).

Av Aperture-Priority AE

Use this mode to select the aperture size. The camcorder chooses the appropriate shutter speed (\square 50).



Use this mode to record sports scenes such as tennis or golf.



Slow Shutter

Use this mode to record moving subjects to make them appear blurred, such as the flow of rivers.




SCN Special Scene

Select from 6 Special Scene modes to record with the most appropriate settings for each scene (12) 47).

Night

Use this mode to record in dimly lit places (46).

Selecting the Recording Program

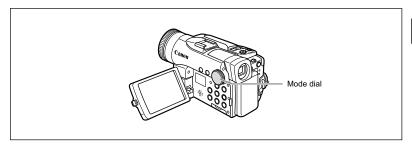

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

Turn the mode dial to switch between the recording programs.

The symbol of the selected recording program appears.






- O Do not change the mode during recording as the brightness of the image may change abruptly.
- O Portrait mode:
 - The blur effect of the background increases the more you zoom to telephoto. The picture may not appear smooth when played back.
- O Landscape mode:
 - Zooming out (W) can result in more effective shooting.
- O Sports mode:

The picture may not appear smooth when played back.

- O Slow Shutter mode:
 - In CAMERA mode, picture quality may not be as good as in other modes.
 - The camcorder may have difficulty to focus automatically.

(MVX45) M Using the Super Night Mode

Allows you to record in dimly lit places without sacrificing color. The assist lamp lights up automatically responding to the surrounding brightness.

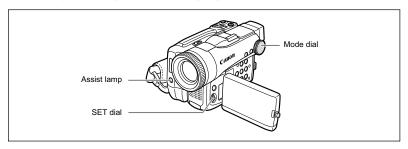



Super Night Mode

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

- 1. Set the mode dial to .
- 2. Press the SET dial.
- Turn the SET dial to select [™SUPER NIGHT] and press the SET dial.
 - "<mark>ሼ</mark>" appears.
 - The symbol of the selected mode appears on the screen.



- O Moving subjects may leave a trailing afterimage.
- O Picture quality may not be as good as in other modes.
- O White points may appear on the screen.
- Autofocus may not work as well as in other modes. In such case, adjust the focus manually.



Recording Programs

SCN Using the Special Scene Modes

FOLIAGE

Use this mode to record images with flowers, leaves or trees.



SOBEACH

Use this mode to record on a sunny beach. It prevents the subject from being underexposed.



ASPOTLIGHT

Use this mode to record spotlit scenes.



CAMERA

PLAY (VCR)



1. Set the mode dial to SCN.

2. Press the SET dial.

A list of Special Scene modes appears.

3. Turn the SET dial to select a Special Scene mode and press the SET dial.

The symbol of the selected mode appears.



O Snow/Beach mode:

- The subject may become overexposed on cloudy days or in shaded places. Check the image on the screen.
- The picture may not appear smooth when played back.
- O Fireworks mode:

To avoid camcorder shake, we recommend using a tripod. Use a tripod in CARD CAMERA mode as the shutter speed slows down.

SNOW

Use this mode to record in bright ski resorts. It prevents the subject from being underexposed.



™SUNSET

Use this mode to record sunsets for vibrant colors.



FIREWORKS

Use this mode to record fireworks.



CARD CAMERA

CARD PLAY



P Using the Program AE Mode

The camcorder automatically adjusts shutter speed and exposure according to the brightness of the subject. In Program AE mode, you can point and shoot as in Auto mode, however, you have the option of changing some settings.


CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

Set the mode dial to P.

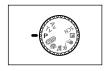



When you cannot achieve an appropriate exposure, use the flash or change the metering method.

Tv Using the Shutter-Priority AE Mode

You can select a shutter speed, and the camcorder automatically sets a matching aperture setting.

Select a high shutter speed for recording fast moving subjects, and a slow shutter speed to create a trailing after image. When recording in CAMERA mode the standard shutter speed is 1/50.

Guidelines for selecting the shutter speed

CAMERA	CARD CAMERA	
1/6, 1/12, 1/25	1/2, 1/3, 1/6,	For recording subjects in dark places.
	1/12, 1/25	
1/120	1/120	For recording indoor sports scenes.
1/250, 1/500,	1/250, 1/500	For recording from within a car or trains, or
1/1000		recording moving subjects such as roller coasters.
1/2000		For recording outdoor sports such as golf or tennis
	•	on sunny days.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

- 1. Set the mode dial to Tv.
- 2. Press the SET dial.
- 3. Turn the SET dial to select the shutter speed.
 The denominator of the shutter speed appears.





- O The shutter speed number flashes when the selected shutter speed is not appropriate for the recording condition. In such case, readjust the shutter speed.
- O When using a slow shutter speed in dark places, you can record the subject brightly, but the image quality may be lower, and autofocus may not work well.
- O **MIXX55** When recording in dark places, we recommend using the optional VFL-1 Video Flash Light or the VL-3 Video Light.
- If the shutter speed is set to 1/1000 or higher in CAMERA mode and you switch to CARD CAMERA mode, it automatically changes to 1/500.
- O Do not point the camcorder directly at the sun when the shutter speed is set to 1/1000 or higher.
- O The image may flicker when recording with high shutter speeds.

Av Using the Aperture-Priority AE Mode

You can select an aperture value, and the camcorder automatically chooses the appropriate shutter speed.

Aperture values: 1.8, 2.0, 2.4, 2.8, 3.4, 4.0, 4.8, 5.6, 6.7, 8.0

Use low aperture values (large aperture) to blur the background for a portrait, or high aperture values (small aperture) to achieve a broad depth of field for recording landscapes.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

- 1. Set the mode dial to Av.
- 2. Press the SET dial.
- 3. Turn the SET dial to select an aperture value.
 - · The shutter speed is adjusted automatically.
 - The aperture becomes smaller the bigger the aperture value.






The aperture number flashes when the selected aperture is not appropriate for the recording condition. In such case, readjust the aperture.

Adjusting Exposure Manually

Adjust the exposure when a backlit subject becomes underexposed, or overexposed due to bright light.

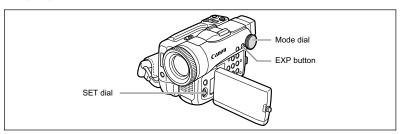

Exposure Lock



- Set the mode dial to a mode other than (MD).
 Exposure cannot be adjusted in the Fireworks mode (SCN).
- 2. Press the EXP button.
 - "±0" appears on the screen.
 - When you operate the zoom during exposure lock, the brightness of the image may change.

Exposure Adjustment



During exposure lock:

Turn the SET dial to adjust the brightness of the image.

The adjustment range depends on the brightness at the time you locked the exposure.

Adjusting the Focus Manually

Autofocus may not work well on the following subjects. In such case, focus manually.

Reflective surfaces

Subjects with low contrast or without vertical lines

Zoom lever

Focus ring

Subjects

Fast Moving Subjects

Fast Moving Subjects

Through dirty or wet windows

Night Scenes

Night Scenes

Mode dial

FOCUS button

CARD CAMERA

CARD PLAY

1. Set the mode dial to a mode other than (Min).

PLAY (VCR)

2. Adjust the zoom.

CAMERA

3. Press the FOCUS button.

"MF" appears.

- 4. Turn the focus ring to adjust the focus.
 - · Turn the focus ring until the image appears focused.
 - Press the FOCUS button to return to autofocus.



- O Readjust the focus when you have turned off the camcorder.

Infinity Focus

Use this function when you wish to focus on faraway subjects such as mountains or fireworks.

Press the FOCUS button more than 2 seconds after step 2 in *Adjusting the Focus Manually*.


"∞" appears.



When you operate the zoom or turn the focus ring, " ∞ " changes to "MF" and the camcorder changes to manual focusing mode.

MVX451 Using the Mini Video Light

You can turn on the mini video light (assist lamp) at any time regardless of the recording program.

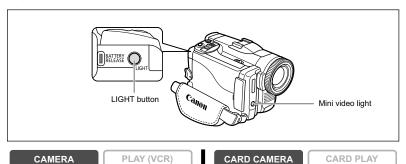

Press the LIGHT button.

- "" appears on the screen.
- · The mini video light turns on and off with each press of the button.




- O Do not point the mini video light at persons while they are driving.
- O Do not look at the mini video light for a long time.
- O Do not use the mini video light close to people's eyes.



In Super Night mode when the mini video light turns on automatically, pressing the LIGHT button will not turn it off.

Using the Self-Timer

The self-timer can be used for recording movies and still images.

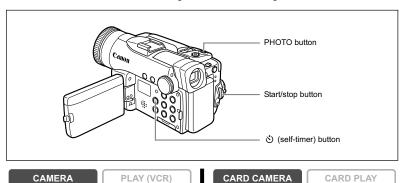

When recording movies


- 1. Press the 🖒 (self-timer) button.
 - "ॐ" appears.
- 2. Press the start/stop button.
 - The camcorder starts recording after a 10-second countdown (2 seconds when using the wireless controller). The count down appears on the screen.
 - To record a still image, press the PHOTO button (31).



- O To cancel the self-timer, press the ♂ (self-timer) button. Once the countdown has begun, you can also press the start/stop button (when recording movies) or the PHOTO button (when recording still image) to cancel the self-timer.
- O The self-timer will be canceled when you turn off the camcorder.

Recording with an External Microphone

You can attach a commercially available microphone (MVX45i: or the optional DM-50 Directional Stereo Microphone) equipped with an accessory shoe. Refer also to the instruction manual of the microphone.

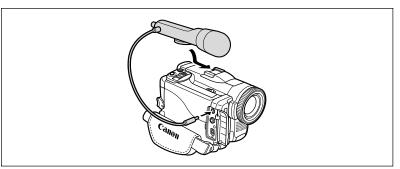


- 1. Attach the microphone to the accessory shoe.
- 2. When using a commercially available microphone, connect it to the MIC terminal.



- O When recording in silent places, the built-in microphone may pick up the motor noise of the camcorder. In such case, we recommend using an external microphone.
- O When using a commercially available microphone:
 - Use a microphone with built-in power supply (condenser microphone). Almost all stereo microphones with a plug diameter of 3.5 mm (0.14 in.) can be connected. The audio level may differ from that of the built-in microphone.
 - Long microphones may appear on the screen.

Changing the Settings with the FUNC. Button

Many of the camcorder's functions are selected from the FUNC. menu that appears when pressing the FUNC. button. For menu items, see *List of Menu Items (FUNC.)* (57).

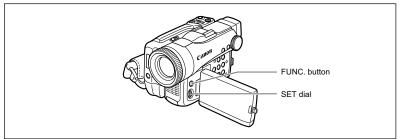

- 1. Press the FUNC. button.
 - · The menu appears.
 - The symbols of the current settings are displayed.



- 2. Turn the SET dial to select a function and press the SET dial.
- 3. Turn the SET dial to select a setting option and press the SET dial.
 - The symbol changes to the one of the selected setting.
 - For setting the white balance [SET], image effect [CUSTOM] or digital effect [MULTI-S] function, refer to the relevant pages.
- 4. Press the FUNC. button.

The menu disappears.





- O Functions that are not available appear in purple.
- O Pressing the FUNC. button at any time closes the menu.

List of Menu Items (FUNC.)

Available menu items vary depending on the operation mode. Default settings are in boldface text.

For details on each function, see the reference page.


Menu Items	Setting Options	CAMERA	PLAY (VCR)	CARD CAMERA	CARD PLAY	
Metering method	(© (EVALUATIVE), ☐ (CENT.WEIGHT.AVERAGE), • (SPOT)			0		93
White balance	(SHADE),	0		0		58
Image effect	뿐 (IMAGE EFFECT OFF), 와 (VIVID), 와 (NEUTRAL), 용 (LOW SHARPENING), 용 (SOFT SKIN DETAIL), 용 (CUSTOM)	0		0		60
Drive mode	☐ (SINGLE), ☐ (CONT.SHOOT.), ☐ (HISPEED CONT.SHOOT.), ☐ (AEB), ☐ (STITCH AST)			0		95 97
Digital Effects	(D.EFFECT OFF), IF (FADER), FE (EFFECT), IF (MULTI-IMAGE SCREEN), IF (CARD MIX)	0				
	© (D.EFFECT O), ☐ (FADER), ☐ (EFFECT), ☐ (MULTI-IMAGE SCREEN)		0			61
	□ (D.EFFECT 回), ■ (BLK&WHT)			0		
Still image recording	(♠ STILL I. REC OFF),	0				90
Movie size	320 ('₹ 320x240), 160 ('₹ 160x120)		0	0		88
Still image quality	§ \$(♠ S.FINE/640x480), 1 \$(♠ FINE/640x480), 1 \$(♠ NORMAL/640x480)		0			116
Still image size/ quality	L (1632x1224), M (1280x960), S (1640x480) S (15 SUPER FINE), (15 FINE), L (15 NORMAL)			0		88
Image erase*	CANCEL, ERASE			0	0	103
Slide show	CANCEL, START				0	100
Protect*	OFF, ON			0	0	102
Print order	0 ~ 99 COPIES	$oxed{oxed}$			0	127
Transfer order	OFF, ON				0	134

^{*} In CARD CAMERA mode, this setting option appears when pressing the FUNC. button right after recording.

Setting the White Balance

You can use the preset modes to reproduce colors more accurately, or set a custom white balance to obtain the optimal setting.

₩B (AUTO)	Settings are automatically set by the camcorder.
☀ (DAYLIGHT)	For recording outdoors on a bright day.
å∖ (SHADE)	For recording in shaded places.
♣ (CLOUDY)	For recording on a cloudy day.
♣ (TUNGSTEN)	For recording under tungsten and tungsten type (3-wavelength) fluorescent lighting.
∰ (FLUORESECENT)	For recording under warm white, cool white or warm white type (3-wavelength) fluorescent lighting.
端(FLUORESCENT H)	For recording under daylight or daylight type (3-wavelength) fluorescent lighting.
.■ (SET)	Use the custom white balance setting to make white subjects appear white under colored lighting.

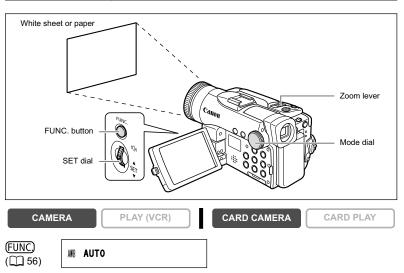

- 1. Set the mode dial to mode other than (Min) or SCN.
- 2. Press the FUNC. button.
- 3. Select the white balance symbol followed by the setting option.

 The symbol of the current setting is displayed.
- 4. When you have selected [.= SET]: Point the camcorder at a white object, zoom in until it fills the whole screen and press the SET dial.
 - Keep the camcorder zoomed at the white object until step 5 is completed.
 - 🗻 flashes and stops flashing when adjustment is complete.

5. Press the FUNC. button.



- O Use the auto setting for normal outdoor scenes.
- O Depending on the type of fluorescent light, optimal color balance cannot be accomplished with [FLUORESCENT] or [FLUORESCENT H]. If the color looks unnatural on the screen, adjust using [AUTO] or [SET].
- O The camcorder retains the custom white balance setting even if you turn it off.
- O When you want to use a previously made [SET] setting, after selecting [SET] in step 3, press the FUNC. button without pressing the SET dial.
- O When you have set the custom white balance:
 - Depending on the light source, "...." may keep flashing. The result will still be better than with the auto setting.
 - Reset the white balance when the lighting condition changes.
 - Turn off the digital zoom.
- O Custom white balance may provide better results in the following cases:
 - Changing lighting conditions
 - Close-ups
 - Subjects in a single color (sky, sea or forest)
 - Under mercury lamps or certain types of fluorescent lights

Selecting an Image Effect

You can record with different saturation and contrast color effects.

JF (IMAGE EFFECT OFF)	Records with no effect.
¿ ¥ (VIVID)	Emphasizes the contrast and color saturation to record in crisp colors.
e ^Ŋ (NEUTRAL)	Tones down the contrast and color saturation to record in neutral hues.
나 (LOW SHARPENING)	Records subjects with softened outlines.
இ (SOFT SKIN DETAIL)	Softens the details in the skin tone area for a more complimentary appearance.
€ (CUSTOM)	Allows you to adjust the brightness, contrast and sharpness of the image.

CARD CAMERA

CARD PLAY



- 1. Set the mode dial to a mode other than @ or SCN.
- 2. Press the FUNC. button.
- 3. Select the image effect symbol followed by the setting option.
 The symbol of the current setting is displayed.
- 4. When you have selected [& CUSTOM]:
 Select the custom setting option (brightness, contrast, sharpness or color depth), adjust the settings with the SET dial and select [SET].
- 5. Press the FUNC. button.

The symbol of the selected setting appears.



[SOFT SKIN DETAIL]: To obtain the best effect, use this function when recording a person in close-up. Note that areas similar to the skin color may lack in detail.


Advanced Functions Changing the Settings (1)

Using Digital Effects

The Digital Effects functions include a fader and effects, multi-image screen and Card Mix $(\square$ 67).


Faders (DG 63)

Begin or end scenes with a fade to or from black.

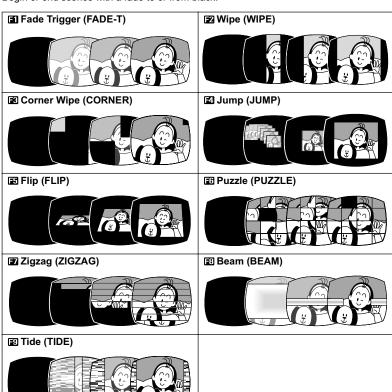


Effects (Q 64)

Add flavor to your recordings.

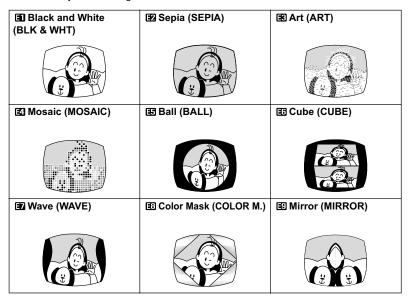

Multi-Image Screen (1 66)

Captures moving subjects in 4, 9 or 16 sequences of still images and displays them at one time. Sound will be recorded normally.

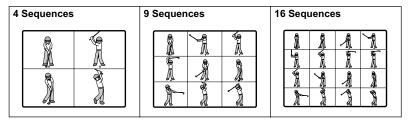

Availability of Digital Effects by Operating Modes:

	CAM	IERA			
	Movies	Still Images	PLAY (VCR)	CARD CAMERA	CARD PLAY
Faders	0	×	0	×	×
Effects	0	×	0	0*	×
Multi-image screen	0	×	0	×	×

O: Available X: Not available

(FUNC.)

 $(\square 56)$


Selecting a Fader

In CAMERA mode, set the mode dial to a mode other than **Quo**.

CAMERA PLAY (VCR) CARD CAMERA CARD PLAY


1. Press the FUNC. button.

■ D.EFFECT OTE

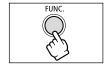

2. Select the digital effect symbol followed by [■ FADER1.

The symbol of the current setting is displayed.

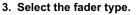

- · The selected fader shows as an animation.
- The selected fader animates the image that appears on the screen.
- 4. Press the FUNC. button.

The symbol of the selected fader appears.



D.EFFECTS


- 5. Press the D.EFFECTS button.
 - · The symbol changes to green.
 - Pressing the D.EFFECTS button again deactivates the fader.

CAMERA mode:

6. Fade in: Press the start/stop button in record pause mode.

Fade out: Press the start/stop button in record mode.




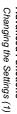

^{* :} Black and White only.

 Fade in: Press the ►/II button in playback pause mode.

Fade out: Press the ▶/II button in playback mode.

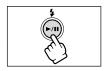


Selecting an Effect

In CAMERA mode, set the mode dial to a mode other than **Quo**.



1. Press the FUNC. button.

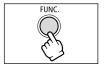

2. Select the digital effect symbol followed by [€ EFFECT].

The symbol of the current setting is displayed.

- 3. Select the effect type.
 - · The selected effect shows as an animation.
 - The selected effect animates the image that appears on the screen.
- 4. Press the FUNC. button.

The symbol of the selected effect appears.



- 5. Press the D.EFFECTS button.
 - · The symbol turns green, and the effect is activated.
 - In PLAY (VCR) mode, playback the tape first and press the D.EFFECTS button.
 - Pressing the D.EFFECTS button again deactivates the effect.



Selecting an Effect in CARD CAMERA Mode

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY



□ D.EFFECT OE

1. Press the FUNC. button.



2. Select the digital effects symbol followed by [B BLK&WHT].

The symbol of the current setting is displayed.



- 3. Press the FUNC. button.
 - " appears.



- 4. Press the D.EFFECTS button.
 - The symbol turns green and the effect is activated.
 - Pressing the D.EFFECTS button again deactivates the effect.



Using the Multi-Image Screen

You can operate the multi-image screen only in the following playback modes:

• When [S.SPEED] is set to [MANUAL]: Playback pause, slow forward/reverse playback

CARD CAMERA

• When [S.SPEED] is set to [FAST], [MOD.] or [SLOW]: Playback pause In CAMERA mode, set the mode dial to a mode other than (MID) or .



() 56) D.EFFECT OH

1. Press the FUNC. button.



CARD PLAY

Select the digital effects symbol followed by [MULTI-IMAGE SCREEN].

The symbol of the current setting is displayed.

- 3. Select [S.SPEED] and select the transition speed.
 - Manual: For capturing images manually.
 - · Fast: Every 4 frames
 - Moderate: Every 6 frames (8 frames in Slow Shutter mode)
 - Slow: Every 8 frames (12 frames in Slow Shutter mode)
- 4. Select [S.SPLIT] and select the number of sequences.
- 5. Select [SET] and press the FUNC. button.
 - " III appears.
- 6. Press the D.EFFECTS button.
 - · The symbol turns green.
 - FAST, MODERATE, SLOW: The set number of images will be captured at the set speed. To cancel the multi-image screen, press the D.EFFECTS button.
 - MANUAL: Images will be captured each time you press the D.EFFECTS button. The blue frame indicating the next sequence disappears after the last image. Pressing the D.EFFECTS button for more than 1 second cancels the images one after another.

7. Press the start/stop button to begin recording.

The multi-image screen is recorded on the tape.



In PLAY (VCR) mode: Pressing any tape operation button (such as play or pause), or performing date search cancels the multi-image screen.



FUNC.

Combining Images (Card Mix)

You can produce effects not possible with just a tape with the Card Mix function. Choose one of the sample images provided on the supplied DIGITAL VIDEO SOLUTION DISK (such as picture frames, backgrounds and animations) and combine it with the live video recording.

Movies recorded on a memory card cannot be combined with camcorder recordings.

Card Chroma Key (CARD CHROMA)

Combines frames with your recordings. The live video recording will appear in place of the blue area of the card mix image.

Mix level adjustment: blue area of the still image.



Card Luminance Key (CARD LUMI.)

Combines illustrations or title with your recordings. The live video recording will appear in place of the light area of the card mix image. Mix level adjustment: light area of the still image.



Camera Chroma Key (CAM. CHROMA)

Combines backgrounds with your recordings. Record your subject in front of a blue curtain, and the subject not blue will be superimposed on the card mix image.

Mix level adjustment: blue area of the live video recording.




Card Animation (C. ANIMATION)

Combines animations with your recordings. You can choose from 3 types of card animation effects.

- Corner: Animation appears on the upper left and the lower right corner of the screen.
- Straight: Animation appears on the top and bottom of the screen and moves to the right and left.
- Random: Animation moves randomly in the display.
 Mix level adjustment: blue area of the card animation image.



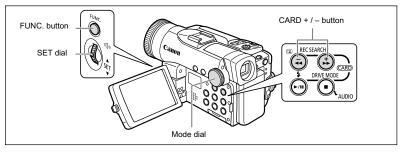

Selecting the Card Mix Effect



 Upload a sample image from the DIGITAL VIDEO SOLUTION DISK to the memory card.

Refer to Adding Still Images from Your Computer to the Memory Card in the Digital Video Software Instruction Manual.

- 2. Set the mode dial to a mode other than (III).
- 3. Press the FUNC. button.
- Select the digital effects symbol followed by [ACARD MIX].
 The symbol of the current setting is displayed.
- 5. Select the image you wish to combine with the CARD+/- button.
- Select [MIX TYPE] and select the mix type matching the sample image you have selected.

When you have selected [C.ANIMATION], select the animation type and press the SET dial.

- To adjust the mix level, select [MIX LEVEL], adjust it with the SET dial and select [SET].
- 8. Press the FUNC. button.
 - " appears.
- 9. Press the D.EFFECTS button.
 - "It is a turns green and the combined image appears."



- O Turn off the digital effect when you do not use it.
- O The camcorder retains the setting even if you turn it off or change the recording program.
- O The image quality may be slightly lower with digital effects.
- O Digital effects cannot be used during DV dubbing.

Sample Images

Below are some sample images provided on the supplied DIGITAL VIDEO SOLUTION DISK.

Card Chroma Key











Card Luminance Key











Camera Chroma Key





Card Animation













The sample images provided on the supplied DIGITAL VIDEO SOLUTION DISK are intended only for the personal use with this camcorder. Do not use these sample images for other purposes.

PhotoEssentials - Royalty Free Stock Photography


The PhotoEssentials suite of royalty-free images on CD-ROM features premium quality assignment photography and is ideally suited for use in advertising, brochures, reports, multimedia, websites, books, packaging and more.

For more information, please visit their website www.photoessentials.com

Changing the Settings with the MENU Button

Many of the camcorder's functions are selected from a menu that appears when pressing the MENU button. For menu items, see *List of Menu Items (MENU)* (


71).

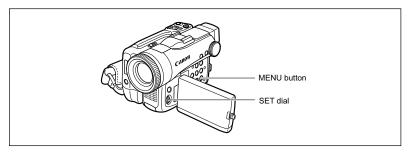

Selecting Menus and Settings

1. Press the MENU button.

The menu appears.

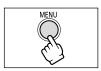


- 2. Turn the SET dial to select a submenu and press the SET dial.
- 3. Turn the SET dial to select a menu item and press the SET dial.



- 4. Turn the SET dial to select a setting option and press the SET dial.
- 5. Press the MENU button.

The menu disappears.

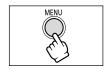



- O Pressing the MENU button at any time closes the menu.
- O Items that are not available appear in purple.

List of Menu Items (MENU)

Available menu items vary depending on the operation mode. Default settings are in boldface text.

For details on each function, see the reference page. Functions without reference page are explained below the tables.

CAMERA SETUP

* MVX45i only.

Menu Items	Setting	Options	CAMERA	PLAY (VCR) C	CARD Camera	CARD PLAY	
A.SL SHUTTER	ON, OFF		0		0		-
D.ZOOM	MVX45i	MVX40i/MVX40					
	OFF , 56X, 280X	OFF , 40X, 200X	0				35
	OFF , 56X	OFF , 40X			0		
IMG STAB (4)	ON, OFF		0		0		-
WIDESCREEN	ON WIDE, OFF		0				80
AF AST LAMP*	AUTO, OFF		0		0		92
FOCUS PRI.	ON, OFF				0		-
ND	AUTO, OFF				0		-
REVIEW	OFF, 2sec , 4sec, 6sec	c, 8sec, 10sec			0		99

A.SL SHUTTER: The camcorder automatically uses slow shutter speeds to record brightly in places with insufficient lighting.

- O The camcorder uses shutter speeds down to 1/25 (1/12 in CARD CAMERA mode).
- O In CARD CAMERA mode, set the flash mode to ③ (flash off).
- O When a trailing afterimage appears, set it to [OFF].
- O If " (camcorder shake warning) appears, we recommend stabilizing the camcorder, for example, by mounting it on a tripod.

IMG STAB (4): The image stabilizer compensates for camcorder shake even at full telephoto.

- O The image stabilizer is designed to compensate a normal degree of camcorder shake.
- O The image stabilizer may not be effective when recording in dark places using the night modes.
- O We recommend turning off the image stabilizer when using a tripod or when panning.

FOCUS PRI.: The camcorder records the still image once focus is adjusted.

- O Set it to [OFF] when you wish to record a still image as soon as you press the PHOTO button.
- O When set to [OFF], no focusing frame appears.
- O The setting cannot be changed in following cases:
 - In the Auto mode
 - In the Fireworks mode (SCN)

ND: The ND filter activates automatically to prevent overexposure.

CARD SETUP

Menu Items	Setting Options	CAMERA	PLAY (VCR)	CARD CAMERA	CARD PLAY	
FILE NOS.	RESET, CONTINUOUS		0	0		-

FILE NOS.: Select the file numbering method upon inserting a new memory card.

- O Images are automatically assigned file numbers from 0101 to 9900, and stored in folders containing up to 100 images. Folders are numbered from 101 to 998.
- [RESET]: The file number starts at 101-0101. If the memory card already contains images files, the consecutive file number will be assigned.
- O [CONTINUOUS]: The consecutive file number of the last recorded image will be assigned. If a higher file number already exists on the memory card, the consecutive number will be assigned. This is useful for organizing images on a computer.
- O We recommend setting [FILE NOS.] to [CONTINUOUS].

CARD OPERATIONS

Menu Items	Setting Options	CAMERA	PLAY (VCR)	CARD CAMERA	CARD PLAY	
凸PRINT ORDERS ALL ERASE	NO, YES				0	128
TRANS. ORDERS ALL ERASE	NO, YES				0	134
ERASE ALL IMAGES	NO, YES				0	103
FORMAT	CANCEL, EXECUTE				0	104

CARD OPERATIONS (in index screen display)

Menu Items	Setting Options	CAMERA	A PLAY (VCR)	CARD CAMERA	CARD PLAY	
→ Om PROTECT					0	102
→ APRINT ORDER					0	127
→ 🕒 TRANSFER ORDER	२				0	134

VCR SETUP

* MVX45i/MVX40i only.

Menu Items	Setting Options	CAMERA	VCR)	CARD CAMERA	CARD PLAY	
REC MODE	SP, LP	0	0*			76
AV/PHONES ()	AV, PHONES ()	0	0	0	0	40 41
MVX45i: AV → DV/ MVX40i: AV → DV	ON, OFF		*			111

Menu Items	Setting Options	CAMERA	PLAY (VCR)	CARD CAMERA	CARD PLAY	
OUTPUT CH	L/R, L/L, R/R		0			-
AUDIO DUB.*	AUDIO IN, MIC. IN		0			113
WIND SCREEN	AUTO, OFF % LOFF	0	0	0		79
MIC ATT	ON 🛅 , OFF	0		0		78
MIC LEVEL	AUTO, MANUAL	0				77
12bit AUDIO	STEREO1, STEREO2, MIX/FIXED, MIX/VARI.		0			115
MIX BALANCE			0			115
AUDIO MODE	16bit, 12bit	0	0*			-
∩VOLUME		0		0		78

OUTPUT CH: Switches the output channels when playing back a tape with audio recorded on two channels.

O [L/R]: Stereo: L+R channels, Bilingual: Main+Sub.

O [L/L]: Stereo: L channel, Bilingual: Main. O [R/R]: Stereo: R channel, Bilingual: Sub.

AUDIO MODE: Switches the audio recording mode.

O [16bit] records in high sound quality.

O Select [12bit] if you plan to dub audio later.

DISPLAY SETUP

Menu Items	Setting Options	CAMERA	PLAY (VCR)	CARD CAMERA	CARD PLAY	
BRIGHTNESS		0	0	0	0	-
LCD MIRROR	ON, OFF	0		0		-
TV SCREEN	ON, OFF	0		0		
	ON, OFF		0		0	_
DISPLAYS	ON, OFF <playbk></playbk>		0		0	-
6SEC.DATE	ON, OFF		0			-
AUDIO LEVEL	ON, OFF		0			77
DATA CODE	DATE/TIME, CAMERA DATA, CAM.&D/T		0			84
D/TIME SEL.	DATE, TIME, DATE&TIME		0		0	84
LANGUAGE	DEUTSCH, ENGLISH , ESPAÑOL, FRANÇAIS, ITALIANO, РУССКИЙ, 简体中文 , 繁體中文 , 한국어, 日本語	0	0	0	0	-
DATE FORMAT	Ex.: 2005.1.1 AM12:00, 1.JAN.2005 12:00AM , JAN.1.2005 12:00AM	0	0	0	0	-
DEMO MODE	ON, OFF	0		0		-

BRIGHTNESS: Adjusts the brightness of the LCD screen.

O Turn the SET dial up or down to adjust the brightness.

 Changing the brightness of the LCD screen does not affect that of the viewfinder or the recordings.

LCD MIRROR: The image appears mirror reversed when you rotate the LCD panel so that the screen faces in the same direction as the lens.

O When [LCD MIRROR] is set to [ON], only tape or card operation and self-timer displays appear on the LCD screen (all displays appear on the viewfinder screen).

TV SCREEN: Shows the camcorder displays on a connected TV screen.

O You can also use the TV SCREEN button on the wireless controller.

DISPLAYS: Shows the displays on the screen during playback.

- O When set to [OFF]:
 - Displays except for the data code disappear (the displays for magnification of a playback image and digital effects, the audio level indicator and the FUNC. menu still appear).
 - Tape operation displays appear for approximately 2 seconds.
 - Displays also disappear from the connected TV, except for some warning messages.

6SEC. DATE: The camcorder displays the date and time for 6 seconds when you begin playback, or to indicate that date or time zone has changed.

O The 6-second auto date appears even if [DISPLAYS] is set to [OFF].

DATE FORMAT: Changes the displayed date format (includes date format for printing).

DEMO MODE: The demonstration mode displays the camcorder's main features. It starts automatically when you leave the camcorder turned on without loading a recording media for more than 5 minutes using the power adapter.

O To cancel the demo mode once it has begun, press any button, turn off the camcorder or load a recording media.

SYSTEM

Menu Items	Setting Options	CAMERA	PLAY (VCR)	CARD CAMERA	CARD PLAY	
WL. REMOTE	ON, OFF (億)	0	0	0	0	-
BEEP	HIGH VOLUME, LOW VOLUME, OFF	0	0	0	0	-
POWER SAVE	ON, OFF	0		0		-
T.ZONE/DST		0	0	0	0	26
D/TIME SET		0	0	0	0	26

WL. REMOTE: Sets the camcorder to be operated with the wireless controller.

BEEP: A beep sounds upon operations such as turning on the camcorder, during self-timer countdown or warnings such as condensation.

POWER SAVE: When powered by a battery pack, the camcorder shuts off after 5 minutes when the camcorder is left without any operation to save power. Approximately 30 seconds before the camcorder shuts off, "(1) AUTO POWER OFF" appears in the center of the screen.

Advanced Functions Changing the Settings (2)

MY CAMERA

SOUND

Changing the Recording Mode (SP/LP)

You can choose between SP (standard play) and LP (long play). LP extends the tape usage by 1.5 times.



To change to LP mode, press the MENU button and select [VCR SETUP]. Select [REC MODE], set it to [LP] and press the MENU button.




- O Tapes recorded in LP mode cannot be used for audio dubbing.
- O Depending on the nature and usage condition of the tape, picture and sound recorded in LP mode may be distorted. We recommend using the SP mode for important recordings.



- O If you record in both SP and LP modes on the same tape, the playback picture may become distorted and the time code may not be written correctly.
- O If you play back a tape that has been recorded in LP mode with another digital device on this camcorder, or vice versa, picture and sound may become distorted.

Adjusting the Audio Recording Level

You can manually adjust the audio recording level of the built-in microphone or an external microphone. You can also display the audio recording level during playback.

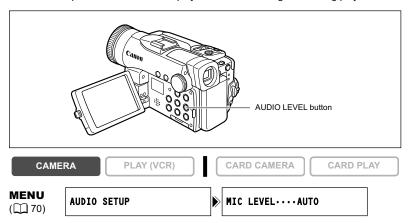

- 1. Set the mode dial to a mode other than (MIII).
- 2. Press the MENU button and select [AUDIO SETUP]. Select [MIC LEVEL], set it to [MANUAL] and press the MENU button.
 - The audio level indicator appears.
 - If a green bar showing the adjustment level is not displayed, press the AUDIO LEVEL button.
- 3. Adjust the level with the SET dial.
 - The maximum level should only slightly exceed -12 dB.
 - Sound may be distorted if the indicator for 0 dB lights up in red.
- 4. Press the AUDIO LEVEL button.

The green bar disappears.

Displaying the Audio Recording Level during Playback




Press the MENU button and select [DISPLAY SETUP/

]. Select [AUDIO LEVEL], set it to [ON] and press the MENU button.



O About the audio level indicator:

When [MIC LEVEL] is set to [AUTO], the audio level indicator switches on and off with each press of the AUDIO LEVEL button.

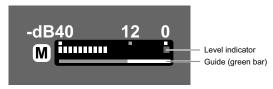

- O The audio level can be changed when the green bar is displayed. We recommend hiding the bar when you have finished adjusting to prevent accidental changes.
- O The microphone level resets to [AUTO] when you switch the mode dial to (AUTO).
- O When the data code is being displayed, the level indicator will not display.
- O We recommend using headphones when manually adjusting the audio level, or using the microphone attenuator.
- O When sound is distorted even though the audio level indicator shows an appropriate level:

Activate the microphone attenuator by setting [MIC ATT] to [ON]. The microphone attenuator can also be used in CARD CAMERA mode.

Adjusting the Headphone Volume


The headphones terminal also serves as AV terminal. Headphones can only be used when " Ω " is displayed on the screen. If not, change the setting (\square 40).



Press the MENU button and select [AUDIO SETUP]. Select $[\ \cap \ VOLUME]$, adjust the volume with the SET dial and press the MENU button.

Using the Wind Screen

The camcorder reduces wind noise automatically. However, you can turn off the wind screen when recording indoors, or when you want the microphone to be as sensitive as possible.

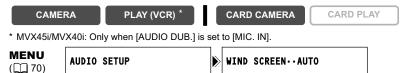

- 2. Press the MENU button and select [AUDIO SETUP]. Select [WIND SCREEN], set it to [OFF] and press the MENU button.
 - " 🖫 " appears when you turn the wind screen off.



The wind screen function can only be used with the built-in microphone.

Widescreen TV Recording (16:9)

The camcorder uses the full width of the CCD providing high-resolution 16:9 recording.

CAME	PLAY (VCR)		CARD CARD PLA	AY
MENU (∭ 70)	CAMERA SETUP	>	WIDESCREEN···OFF	


Press the MENU button and select [CAMERA SETUP]. Select [WIDESCREEN], set it to [ON] and press the MENU button.

- "WIDE" appears.
- The LCD screen switches to the "letterbox" display. The picture on the viewfinder appears horizontally squeezed.

Changing the My Camera Settings

You can personalize your camcorder by customizing the start-up image and the sound it makes for start-up, shutter, operation and self-timer. You can also create a start-up image using a still image on the memory card.

Changing the My Camera Settings

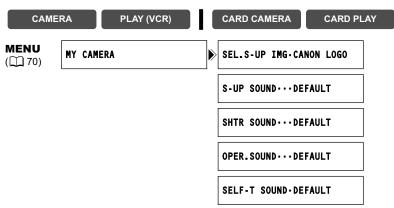

- 1. Press the MENU button and select [MY CAMERA].
- Select the menu item you wish to change.When selecting a start-up image, set the camcorder to CARD PLAY mode.
- 3. Select a setting option and press the MENU button.

Creating a Start-up Image




- 1. Select a still image with the CARD +/- buttons.
- 2. Press the MENU button and select [MY CAMERA].
- 3. Select [CREATE START-UP IMAGE].
 [SET THIS AS START-UP IMAGE?], [YES] and [NO] appears.
- Select [YES].
 [OVERWRITE MY IMAGE?], [NO] and [YES] appears.
- Select [YES].
 The still image will be saved, and the image that was saved to [MY IMAGE] is erased.
- 6. Press the MENU button.



- O You can save your original images, or the images and sounds contained in the supplied software (ZoomBrowser EX for Windows or ImageBrowser for Macintosh) to the setting options [MY IMAGE] and [MY SOUND]. For details, refer to the *Digital Video Software Instruction Manual*.
- O Retain the original data of the still image you have set as the start-up image on your computer or removable disk.

Magnifying the Image

The playback image can be magnified up to 5 times.

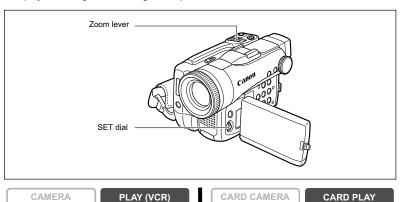

1. Move the zoom lever toward T.

- · The image is magnified by 2 times.
- · A frame appears indicating the position of the magnified area.
- To further enlarge the image, move the zoom lever toward T. To shrink the image below 2 times magnification, move the zoom lever toward W.
- A " * will display for images that cannot be enlarged.

2. Select the magnified area with the SET dial.


- Turn the SET dial to move the image to the right and left, or up and down. Pressing the SET dial switches between the directions.
- To cancel the magnification, move the zoom lever toward W until the frame disappears.




Movies played back from a memory card cannot be magnified.

Displaying the Data Code

The camcorder maintains a data code containing recording date and time and other camera data such as shutter speed and exposure (f-stop). When you play back a tape, you can display the data code and select the data code combination you wish to display.

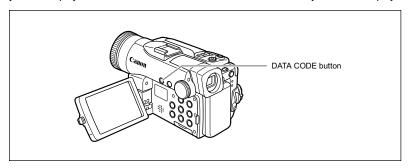

Selecting the Date/Time Display Combination

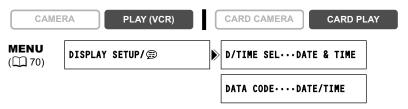


- 2. Select [D/TIME SEL.] and select the date/time display combination. In CARD PLAY mode, move to step 5.
- 3. Select [DATA CODE] and select the data code combination.
- 4. Press the MENU button.
- 5. Play back a tape and press the DATA CODE button.
 - In CARD PLAY mode, only date and time appear.
 - Pressing the DATA CODE button again makes the data code disappear.



The data code will not display the next time you turn on the camcorder.

End Search

When you have played back a tape, you can use this function to locate the end of the last recorded scene.

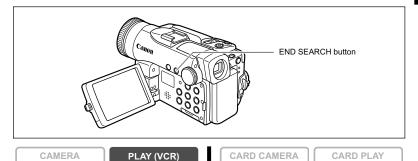

In stop mode, press the END SEARCH button.

- "END SEARCH" appears.
- The camcorder rewinds/fast forwards the tape, plays back the last few seconds of the recording and stops the tape.
- · Pressing the button again cancels the search.




- O End search cannot be used once you unload the cassette.
- O End search may not work properly if a blank section exists on the tape.
- O You cannot use end search to locate the editing end of audio dubbing.

Returning to a Pre-marked Position

If you wish to return to a particular scene later, mark the point with the zero set memory and the tape will stop at that point when you rewind/fast forward the tape.

This function is operated with the wireless controller.

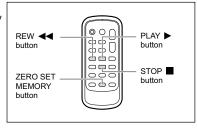

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

- Press the ZERO SET MEMORY button at the point you wish to return to later.
 - "0:00:00 **™**" appears.
 - To cancel, press the ZERO SET MEMORY button again.
- 2. When you have finished playback, rewind the tape.
 - "■" appears.

 - · The tape counter changes to time code.



If the time code has not been recorded consecutively, the tape may not stop correctly at the scene marked with the zero set memory.

Date Search

You can locate the change of the date/time zone with the date search function.

This function is operated with the wireless controller



CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

Press the ▶▶ or ◄◄ button to begin searching.

- Press more than once to search for further date changes (up to 10 times).
- Press the STOP button to stop searching.



- O A recording of longer than a minute per date/area is required.
- O Date search may not function if the data code is not correctly displayed.

Selecting the Image Quality/Size

You can select the image quality of still images, and the image size of still images and movies.

Still Image Quality	S (SUPER FINE),			
Image size	Still Image			
	Movie	320 (♣ 320x240), 160 (♣ 160x120)		

Still images are compressed and recorded in JPEG (Joint Photographic Experts Group). Movies are recorded in Motion JPEG.

The number of still images and maximum recording time of movies that can be recorded on a memory card vary according to the recording condition. The estimated figures are as follows:

128MB/512MB: Using a SD Memory Card

Number of still images that can be recorded on a memory card:

			File Size		
Image Size	Image Quality	Supplied card	128MB	512MB	per Image
1632X1224	Super Fine	10	85	350	1360KB
	Fine	15	135	545	880KB
	Normal	25	250	1000	480KB
1280X960	Super Fine	15	140	555	850KB
	Fine	25	215	860	560KB
	Normal	45	395	1585	300KB
640X480	Super Fine	85	690	2740	176KB
	Fine	115	955	3770	120KB
	Normal	185	1525	6035	72KB

Maximum recording time of a movie on a memory card:

Image Size		File Size		
illiage Size	Supplied card	128MB	512MB	per Second
320 x 240	10 sec. (1 min.*)	8 min.	32 min.	250KB/sec.
160 x 120	30 sec. (2 min.*)	17 min.	67 min.	120KB/sec.

^{*} The recording times specified above are the total amount of recording times with the supplied MultiMediaCard.

CARD PLAY

Selecting the Still Image Size and Quality



- 1. Press the FUNC. button.
- 2. Select the still image size/quality symbol.

The symbol of the current setting is displayed.

3. Select the still image size.

The number indicates the approximate number of images remaining on the memory card.

- 4. Select the still image quality.
- 5. Press the FUNC. button.

Selecting the Movie Size



- 1. Press the FUNC. button.
- 2. Select the movie size symbol followed by the setting option.
 - The symbol of the current setting is displayed.
 - The number indicates the approximate recording time remaining on the memory card.
- 3. Press the FUNC. button.

Simultaneous Recording on Tape and Memory Card

When you are recording a movie on a tape, you can record the same picture as a still image on the memory card. The size of the still image will be 640 x 480. The image quality can be selected.



- 1. Press the FUNC. button.
- Select the still image recording symbol followed by a setting option.The symbol of the current setting is displayed.
- 3. Press the FUNC. button.
- 4. While you are recording a movie, press the PHOTO button. The still image is recorded on the memory card while the screen continues to show the video recording.




- O The quality of the still image is slightly lower than a still image recorded in CARD CAMERA mode.
- O The still image cannot be recorded on a memory card when the digital effect is activated.
- O The still image cannot be recorded on a memory card when the widescreen mode is selected.

Using the Flash

You can use the built-in flash for recording still images in dark places. The flash is equipped with the red-eye reduction mode.

♣ ^A (auto)	The flash fires automatically according to the brightness of the subject.
	The flash fires automatically according to the brightness of the subject. With the MVX45i, the assist lamp lights up to reduce the red-eye effect. With the MVX40i/MVX40, the flash fires a pre-flash for red-eye reduction.
🕻 (flash on)	The flash always fires.
(flash off)	The flash does not fire. Use this setting in places where flash photography is prohibited.

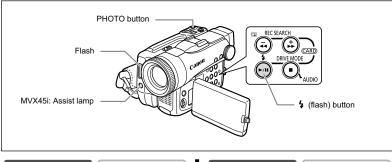

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

1. Press the 4 (flash) button.

- Set the camcorder to a recording program other than the Fireworks mode (SCN).
- · The setting changes with each press of the button.
- The symbol of the selected flash mode appears on the screen. "

 4" disappears after 4 seconds.

2. Press the PHOTO button halfway.

- "4" appears in green.
- In CAMERA mode, the flash can be used in record pause mode when still image recording is set to anything other than [STILL I. REC OFF].

3. Press the PHOTO button fully.

The flash fires.

WIXES Using the Optional VFL-1 Video Flash Light

You can also use the optional VFL-1 Video Flash Light with stronger flash. The procedure for selecting the flash mode is the same as for the built-in flash. For instructions on connection and use, refer to the instruction manual of the VFL-1.



- O Do not fire the flash close to people's eyes.
- O Do not fire the flash at persons while they are driving.
- O Do not fire the flash with the flash bulb covered with your hand.



- O The practical range of the flash is approx. 1 to 2 m (3.3 to 6.6 ft.); 1 to 4.5 m (3.3 to 14.8 ft.) with the VFL-1. The range depends upon the recording condition.
- O The range of the flash decreases in continuous shooting mode.
- O For the red-eye reduction mode to be effective, the subject needs to look at the assist lamp (MVX45i) or flash (MVX40i/MVX40). The degree of reduction depends upon the distance and on each individual.

WIXX55 When the VFL-1 is attached, the VFL-1 fires a pre-flash for red-eye reduction.

- O The flash will not fire in the following cases:
 - When you press the EXP button in ‡[∧] (auto) or ⊚ (red-eye reduction, auto) mode.
 - When recording movies.
 - When

 [↑] (auto) or
 (red-eye reduction, auto) is selected and a shutter speed of 1/2000 is set in CAMERA mode.
 - During auto exposure bracketing.
- O When \$ (flash on) is selected and a shutter speed of 1/2000 is set in CAMERA mode, the shutter speed becomes set to 1/1000 and the flash fires.
- O We recommend not using the flash when the optional Wide-converter or Teleconverter is attached. Their shadows appear on the screen.
- O The flash mode cannot be selected when exposure is locked, or after the first still image in Stitch Assist mode.
- O The red-eye reduction mode cannot be used in stitch assist mode.
- O MYZED When the optional VL-3 Video Light or the VFL-1 is attached, the built-in flash does not fire when the POWER switch of the VL-3 or the VFL-1 is set to a position other than OFF.
- O (MYXCES) About the AF-Assist Lamp:

While the PHOTO button is pressed halfway, the assist lamp may light up as AF-assist lamp responding to the brightness of the subject to enable the camcorder to focus more accurately.

- The camcorder may not be able to focus even though the AF-assist lamp is lighting.
- The AF-assist lamp lights up brightly. Consider turning off the AF-assist lamp in public places such as in restaurants or theaters.

Selecting the Metering Method

	Appropriate for standard shooting conditions, including					
	backlit scenes. The camcorder divides images into					
	several zones for light metering. It evaluates complex					
	lighting conditions, such as the position and brightness of					
	the subject, background, direct light or backlight, and					
	adjusts the exposure of the main subject accordingly.					
[] (CENT.WEIGHT.AVERAGE)	Averages the light metered from the entire screen, giving					
	more weight to the subject in the center.					
(SPOT)	Meters the area within the spot AE point frame. Use this					
	setting for adjusting the exposure matching the subject in					
	the center of the screen.					
CAMERA PLA	AY (VCR) CARD CAMERA CARD PLAY					
	STATE STATE OF ALL PROPERTY.					
(FUNC)						
FUNC. ST FVALUATIV	F					

- 1. Set the mode dial to P, Tv or Av.
- 2. Press the FUNC. button.

 $(\square 56)$

- Select the metering method symbol followed by a setting option. The symbol of the current setting is displayed.
- **4. Press the FUNC. button.**If you have selected [SPOT], "[]" appears.

Changing the focusing method

You can change the AF (autofocus) frame selection method.

Auto selection (AiAF)	Depending on the shooting conditions, an AF frame is automatically selected from the 9 frames and focused.
Center point	Of 9 AF frames, the center one is selected to focus. This is convenient for making sure the focus is exactly where you want it.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

1. Set the mode dial to a mode other than (1110).

Focusing method cannot be changed in the Fireworks mode (SCN).

- 2. Turn the SET dial to select the focusing method.
 - With [Auto selection] a large frame will display on the screen.
 - With [Center point] a frame displays in the center of the screen.
- 3. Press the PHOTO button halfway.

A focusing frame appears.


4. Press the PHOTO button fully.



When using the digital zoom, the AF frame is fixed in the center.

Selecting the Drive Mode

☐ (Single)	Records a single still image when you press the PHOTO
	button.
및 (Continuous Shooting)	Captures a quick series of still images while you press the
빌 (High-Speed Continuous Shooting)	PHOTO button. For the number of frames per second, refer to the table on the next page.
(AEB (Auto Exposure Bracketing))	The camcorder records a still image in three different exposures (dark, normal, light in 1/2 EV steps), allowing you to choose the perfect exposed shot.

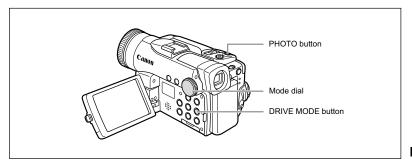

Changing the Drive Mode

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

- 1. Set the mode dial to a mode other than (1110).
- 2. Press the DRIVE MODE button to switch between the drive modes. The setting changes with each press of the button.



- O The drive mode can also be selected from the FUNC. menu (56).
- When the FUNC. menu is being displayed, the DRIVE MODE button cannot be used.

Continuous Shooting/High-Speed Continuous Shooting

- 1. Press the PHOTO button halfway.
- 2. Press and hold the PHOTO button fully.

A series of still images will be recorded as long as you hold the PHOTO button.



O Maximum number of continuous shots at one time:

Ctill Image Cize	Frames p	Maximum Number	
Still Image Size	Normal speed	High speed	of Continuous Shots
1632 x 1224	2 frames	3 frames	10 images
1280 x 960	3 frames	5 frames	10 images
640 x 480	3 frames	5 frames	60 images

These figures are approximate and vary with the recording conditions and subjects. Sufficient space on the memory card is required. Continuous shooting stops when card is full.

- O The number of frames per second will be lower when " (camcorder shake warning) is displayed on the screen.
- O In normal and high-speed continuous shooting mode, images are captured at 2 frames/second when using the built-in flash or the optional Video Flash Light VFL-1 (MVX45i).

Auto Exposure Bracketing

- 1. Press the PHOTO button halfway.
- 2. Press the PHOTO button fully.


Three still images in different exposures are recorded to the memory card.



Make sure that there is sufficient space on the memory card.


Recording Panoramic Images (Stitch Assist Mode)

You can shoot a series of overlapping images and merge them into one large panoramic scene using the supplied software (PhotoStitch) on a computer.

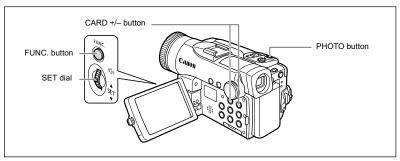

When Recording in Stitch Assist Mode:

PhotoStitch detects the overlapping portion of adjoining images and merges them. Try to include a distinctive item (landmark, etc.) in the overlapping portion.

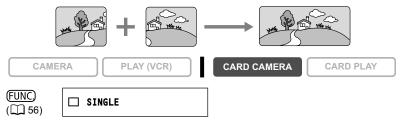

- 1. Press the FUNC. button.
- Select the drive mode symbol followed by [STITCH AST].
 The symbol of the current setting is displayed.
- 3. Press the SET dial.

The Stitch Assist screen appears.

- 4. Select the direction with the CARD +/- button.
 - CARD + button: clockwise, CARD button: counterclockwise.
- 5. Select the recording program and zoom on the subject.

Adjust focus and exposure manually as necessary. Once the sequence has started, you cannot change the recording program, exposure, zoom or focus.

6. Press the PHOTO button to record the first image.

Direction and number of recorded images appear.

Record the second image so that it overlaps a portion of the first image.

- Minor discrepancies in the overlapped area can be corrected with the software.
- You can retake an image by pressing the CARD +/- button to return to the previous image.
- · A maximum of 26 images can be recorded.

8. Press the FUNC. button after the last image.

For details on how to merge these images, refer to the *Digital Video Software Instruction Manual*.



- O Compose each image so that it overlaps 30 to 50% of the adjoining image. Try to keep the vertical misalignment within 10%.
- O Do not include a moving subject in the overlapping portion.
- O Do not try to stitch images that include both distant and close subjects. They may appear warped or doubled up.
- O Do not press the DRIVE MODE button. It will end the operation.

Reviewing a Still Image Right after Recording

You can select to display a still image for 2, 4, 6, 8 or 10 seconds after it has been recorded.




Press the MENU button and select [CAMERA SETUP]. Select [REVIEW], select a setting option and press the MENU button.



- O A still image is displayed as long as you hold the PHOTO button after recording. O You can erase (□ 103) or protect (□ 102) the image when you press the FUNC. button while you are reviewing the image, or when you press the FUNC. button right after recording.
- O [REVIEW] cannot be selected when 및 (continuous shooting), 및 (high-speed continuous shooting) or ၍ (auto exposure bracketing) is selected.

Playing Back/Searching Images

You can display images one after another (slide show) or 6 at one time (index screen). With the Card Jump function, you can quickly locate an image without displaying them one by one.

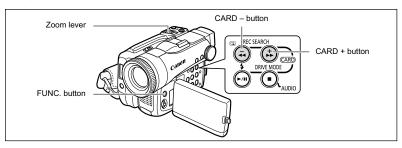

Slide Show



- 1. Press the FUNC. button.
- 2. Select [♦ SLIDE SHOW] followed by [START].
- 3. Press the SET dial.
 - · Images are played back one after another.
 - Press the button to stop the slide show.

Index Screen



1. Move the zoom lever toward W.

- · Up to 6 images appear.
- With movies, the index screen can only be started when the first scene is displayed as a still image.

2. Turn the SET dial to select an image.

- Move the " to the image you wish to view.
- You can switch between the index pages by pressing the CARD + or CARD button.

3. Move the zoom lever toward T.

The index screen is cancelled and the selected image is displayed.

Card Jump Function

You can locate images without displaying them one by one. The number in the upper right of the screen indicates the image number of the current image by the total number of images.

CAMERA PLAY (VCR)	CARD CAMERA	CARD PLAY
-------------------	-------------	-----------

Press and hold the CARD + or CARD - button.

When you release the button, the image of the displayed image number appears.

Protecting Images

You can protect important images from accidental erasure when displaying a single image or index screen.



If a memory card is formatted, all still images and movies, even protected ones, will be erased permanently.



Movies can only be protected when the first scene is displayed as a still image.

Protecting during Single Image Playback



1. Press the FUNC. button.

In CARD CAMERA mode, press the FUNC. button while reviewing an image or right after recording.

- 2. Select [Or PROTECT] followed by [ON] and press the SET dial.
- 3. Press the FUNC. button.
 - "On" appears, and now the image cannot be erased.
 - To cancel the protection, select [OFF] in step 2.

Protecting during Index Screen Display



- 1. Move the zoom lever toward W.
 - · Up to 6 images appear.
 - · Select the image you wish to protect.
- 2. Press the MENU button and select [CARD OPERATIONS]. Select [→ O_T PROTECT] and press the SET dial.
 - "On" appears on the image.
 - · To cancel the protection, press the SET dial.
- 3. Press the MENU button.

Erasing Images

You can erase images singly or all at once.



Be careful when erasing images. Erased images cannot be recovered.



- O Protected images cannot be erased.
- O Movies can only be erased when the first scene is displayed as a still image.

Erasing a Single Image



- 1. Press the FUNC. button.
 - In CARD CAMERA mode, press the FUNC. button while reviewing an image or right after recording.
- 2. Select ['if IMAGE ERASE] followed by [ERASE] and press the SET dial.
- 3. Press the FUNC. button.

Erasing All Images



- 1. Press the MENU button and select [CARD OPERATIONS].
- 2. Select [ERASE ALL IMAGES].
- 3. Select [YES] and press the MENU button.

All still images or movies with exception of the protected ones are erased.

Formatting a Memory Card

Format new memory cards, or when you get the message "CARD ERROR". You can also format a memory card to erase all data recorded on it.



- O Formatting a memory card erases all data, including protected images.
- O Images erased by formatting cannot be recovered.
- O If you use a memory card other than the supplied one, format it with the camcorder.




- 1. Press the MENU button and select [CARD OPERATIONS].
- Select [FORMAT]. [CANCEL] and [EXECUTE] appears.
- Select [EXECUTE]. [ALL DATA WILL BE ERASED. FORMAT THIS CARD?], [NO] and [YES] appears.
- 4. Select [YES] and press the MENU button. Formatting starts.

Recording to a VCR or Digital Video Device

You can copy your recordings by connecting the camcorder to a VCR or a digital video device. If you connect a digital video device, you can copy recordings with virtually no generation loss in image and sound quality.

Connecting the Devices

- ① Connecting a VCR
 See Playing Back on a TV Screen (□ 41).
- ② Connecting a Digital Video Device Refer also to the instruction manual of the digital video device.

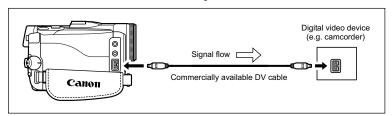

Recording



- Connected device: Load a blank cassette and set the device to record pause mode.
- Locate the scene you wish to copy and pause playback shortly before the scene.
- 4. Play back the tape.
- 5. Connected device: Begin recording when the scene you wish to copy appears. Stop recording when copying is complete.
- 6. Stop playback.



- O We recommend powering the camcorder from a household power source.
- O When connecting a VCR, the quality of the edited tape will be slightly lower than that of the original.
- O When connecting a digital video device:
 - If the picture does not appear, reconnect the DV cable or turn the camcorder off and back on again.
 - Proper operation cannot be guaranteed for all digital video devices equipped with a DV terminal. If operation does not work, use the S-video or AV terminal.


(MVX457/MVX407) Analog Line-in Recording

You can input video from other analog devices (VCR, TV or camcorder) via the S-video terminal or AV terminal, and record the input video on the tape in the camcorder. You can also record the input video as a movie or still image on a memory card.

Connecting

Refer also to the instruction manual of the connected device.

You can also connect via the S-video terminal (43).

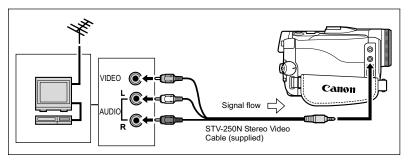

Recording



- 1. Set the camcorder to PLAY (VCR) mode and load a blank cassette.
- 2. Connected device: Load the recorded cassette.
- Press the REC PAUSE button.In record pause mode and during recording, you can check the picture on the screen.
- 4. Connected device: Play back the tape.
- Press the ►/II button when the scene you wish to record appears.
 Recording starts.
- 6. Press the button to stop recording.
 - Press the ►/II button to pause recording.
 - Press the ▶/▮▮ button again to restart recording.
- 7. Connected device: Stop playback.

Recording the Input Video on a Memory Card

The size of the still image recorded on the memory card will be 640 x 480. The still image quality and the movie size can be selected.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

1. Set the camcorder to PLAY (VCR) mode.

If a cassette is loaded, make sure that the tape is stopped.

- Press the MENU button and select [VCR SETUP]. Select [AV → DV/ ☑]
 (MVX45i) or [AV → DV] (MVX40i), set it to [ON] and press the MENU button.
- 3. Selecting the still image quality:

Press the FUNC. button. Select the still image quality symbol followed by a setting option and press the FUNC. button.

Selecting the movie size:

Press the FUNC. button. Select the movie size symbol followed by a setting option and press the FUNC. menu.

4. Connected device: Load a recorded cassette and play back the tape.

When recording a still image:

- Press the PHOTO button halfway when the scene you wish to record appears.
 - The still image, remaining image capacity and other information appear.
 - When you press the PHOTO button on the wireless controller, recording starts immediately.
- 6. Press the PHOTO button fully.

The card access indicator flashes.

When recording a movie:

Press the start/stop button when the scene you wish to record appears.

Pressing the start/stop button again stops recording.



- O Headphones cannot be used during analog line-in recording.
- O When connecting to a TV/Video with SCART terminal, use a SCART adapter with input capability (commercially available). The supplied SCART Adapter PC-A10 is for output only.
- O Depending on the signal sent from the connected device, dubbing may not work properly (e.g. signals that include copyright protective signals or anomalous signals such as ghost signals).




- O We recommend powering the camcorder from a household power source.
- O An image recorded from an image in widescreen mode will be vertically compressed.
- O The data code of the still image will reflect the date and time it has been recorded on the memory card.

MVX457/MVX40i DV Dubbing

You can input video from other digital video devices via the DV terminal, and record the input video on the tape in the camcorder. You can also record the input video as a movie or still image on a memory card.

Connecting

Refer also to the instruction manual of the connected device.

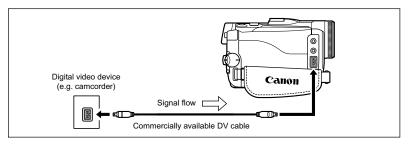

Dubbing



- Set the camcorder to PLAY (VCR) mode and load a blank cassette.
 If "AV → DV" is displayed, change the setting (□ 72).
- 2. Connected device: Load the recorded cassette.
- 3. Press the REC PAUSE button.
 You can check the picture on the screen.
- 4. Connected Device: Play back the tape.
- Press the ►/II button when the scene you wish to record appears. Recording starts.
- 6. Press the button to stop recording.
 - Press the ►/II button to pause recording.
 - Press the ►/II button again to restart recording.
- 7. Connected Device: Stop playback.

Recording the Input Video on a Memory Card

The size of the still image recorded on the memory card will be 640 x 480. The still image quality and the movie size can be selected.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

- 1. Set the camcorder to PLAY (VCR) mode.
 - · If a cassette is loaded, make sure that the tape is stopped.
 - If "AV → DV" is displayed, change the setting (72).
- 2. Selecting the still image quality:

Press the FUNC. button. Select the still image quality symbol followed by a setting option and press the FUNC. button.

Selecting the movie size:

Press the FUNC. button. Select the movie size symbol followed by a setting option and press the FUNC. menu.

3. Connected device: Load a recorded cassette and play back the tape.

When recording a still image:

- Press the PHOTO button halfway when the scene you wish to record appears.
 - The still image, remaining image capacity and other information appear.
 - When you press the PHOTO button on the wireless controller, recording starts immediately.
- 5. Press the PHOTO button fully.

The card access indicator flashes.

When recording a movie:

Press the start/stop button when the scene you wish to record appears.

Pressing the start/stop button again stops recording.



- O Blank sections may be recorded as anomalous picture.
- O If the picture does not appear, reconnect the DV cable or turn the camcorder off and back on again.
- O Do not connect any devices to the camcorder's USB terminal.
- O You can only record signals from devices with the **DY** logo recording in SD system in SP or LP format. (Note that signals from identically shaped terminals may be of different format 1 138.)



- O We recommend powering the camcorder from a household power source.
- O An image recorded from an image in widescreen mode will be vertically compressed.
- O The data code of the still image will reflect the date and time it has been recorded on the memory card.

Concerning Copyright

Copyright Precaution

Certain pre-recorded video tapes, films and other materials, as well as some television programmes are copyrighted. Unauthorised recording of these materials may violate copyright protection laws.

Copyright Signals

During playback: If you try to play back a tape that contains copyright control signals for protection of software, "COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED" appears for a few seconds and the camcorder displays a blank blue screen. You cannot playback the contents of the tape.

During recording: If you try to record from software that contains copyright control signals for protection of software, "COPYRIGHT PROTECTED DUBBING RESTRICTED" appears. You cannot record the contents of the software.

You cannot record copyright protection signals to a tape using this camcorder.


(MVX457/MVX407) Converting Analog Signals into Digital Signals (Analog-Digital Converter)

By connecting the camcorder to a VCR or 8mm video camcorder, you can convert analog video/audio signals to digital signals and output the digital signals via the DV terminal. The DV terminal serves as output terminal only.


Connecting the Devices

Turn off all devices before starting the connections. Unload the tape from the camcorder. Refer also to the instruction manual of the connected device.

You can also connect a VCR with S (S1)-VIDEO terminal (43).

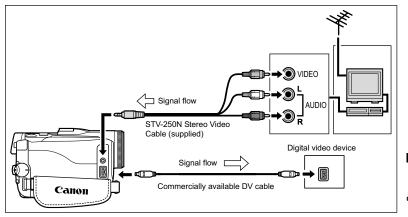

Turning On the Analog-Digital Converter

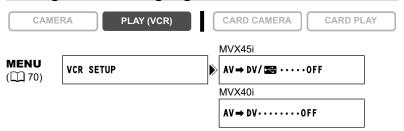

Press the MENU button and select [VCR SETUP]. Select [AV → DV/ 🔀] (MVX45i) or [AV → DV] (MVX40i), set it to [ON] and press the MENU button.



- O Headphones cannot be used.
- O Depending on the signal sent from the connected device, the conversion from analog to digital signals might not work properly (e.g., signals that include copyright protective signals or anomalous signals such as ghost signals).
- O When connecting to a TV/Video with SCART terminal, use a SCART adapter with input capability (commercially available). The supplied SCART Adapter PC-A10 is for output only.
- O For normal use, set [AV → DV/ 🔀] (MVX45i) or [AV → DV] (MVX40i) to [OFF]. If it is set to [ON], digital signals cannot be input via the camcorder's DV terminal.
- O Depending on the software and the specifications of your computer, you may not be able to transfer converted signals via the DV terminal.



- O We recommend powering the camcorder from a household power source.
- O **MYX45** Users of Windows XP with Hi-Speed USB 2.0 port can output the signals to a computer using the USB cable by installing the Canon USB Video Driver (130).

Audio Dubbing


You can add sound with the built-in microphone. With the MVX45i/MVX40i, you can also add sound from audio devices or with an external microphone.

This function is operated with the wireless controller.

MVX45i/MVX40i Connecting


① Connecting an Audio Device

Refer also to the instruction manual of the connected device.

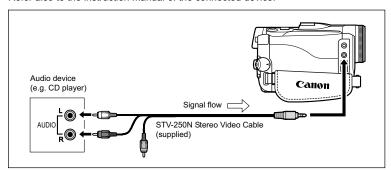

② Connecting a Microphone
See Recording with an External Microphone (□ 55).

Dubbing

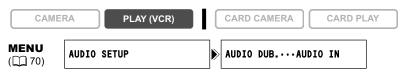

- Set the camcorder to PLAY (VCR) mode and load a recorded cassette.
 Use a tape recorded in SP, 12-bit mode with this camcorder.
- 2. (AVXC57MVXCO) Press the MENU button and select [AUDIO SETUP]. Select [AUDIO DUB.], set it to [AUDIO IN] or [MIC. IN] and press the MENU button.
- 3. Locate the scene you wish to start audio dubbing.
- 4. Press the PAUSE **II** button on the wireless controller.
- Press the AUDIO DUB. button on the wireless controller. "AUDIO DUB." and "♠ II" appear.
- Press the PAUSE II button on the wireless controller to begin dubbing.
 - · Microphone: Speak into the microphone.
 - MVX45i/MVX40i Audio device: Begin playback.



- O Use only tapes recorded in SP mode 12-bit audio sound with this camcorder. Audio dubbing will stop if the tape has a blank section or a section recorded in LP mode or 16-bit mode.
- O When using the built-in microphone, do not connect any devices to the MIC terminal (MVX45i: or the advanced accessory shoe). MVX45i: When using the DM-50 Directional Stereo Microphone, do not connect any devices to the MIC terminal
- O You cannot use the DV terminal for audio dubbing.
- If you add sound to a tape not recorded with this camcorder, sound quality may decrease.
- O Sound quality may decrease when you add sound to the same scene for more than 3 times.



- O You can check the picture on the LCD screen.
- O MYX457/11/X401 When you connect an audio device, check the sound via built-in speaker or audio device. You can also connect a TV via S-video terminal.
- O When you use a microphone, you can check the picture on a TV connected via the AV terminal and the sound via headphones connected to the TV. When you connect a TV via S-video terminal, you can check the picture on the TV screen and the sound with headphones connected to the camcorder.
- O Set the zero set memory at the end of the scene you wish to dub audio. The camcorder will automatically stop audio dubbing at that point.

Playing Back the Added Sound

You can select to play back Stereo 1 (original sound), Stereo 2 (added sound), or adjust the balance of both sounds.



- 1. Press the MENU button and select [AUDIO SETUP]. Select [12bit AUDIO], select a setting and press the MENU button.
 - STEREO1: Plays back the original sound.
 - STEREO2: Plays back the added sound.
 - MIX/FIXED: Plays back Stereo 1 and Stereo 2 in the same level.
 - MIX/VARI.: Plays back Stereo 1 and Stereo 2. The mix balance can be adjusted.
- If you have selected [MIX/VARI.], adjust the mix level: Press the MENU button and select [AUDIO SETUP]. Select [MIX BALANCE], adjust the balance with the SET dial and press the MENU button.

Turn the SET dial down to increase the volume of Stereo 1 and up to increase the volume of Stereo 2.



The camcorder resets to [STEREO1] when you turn the camcorder off. However, the mix balance is memorized by the camcorder.

Recording from the Tape on a Memory Card


You can record movies or still images from a tape in the camcorder.

Recording a Movie from the Tape

The movie size can be selected.





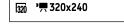

1. Selecting the movie size:

Press the FUNC. button. Select the movie size symbol followed by a setting option and press the FUNC. menu.

Press the start/stop button when the scene you wish to record appears.

Pressing the start/stop button again stops recording.



- O The data code of the movie will reflect the date and time it has been recorded on the memory card.
- O An image recorded from an image in widescreen mode will be vertically compressed.

Recording a Still Image from the Tape

The size of the still image recorded on the memory card will be 640 x 480. The still image quality can be selected.



- Selecting the still images quality:
 Press the FUNC. button. Select the still image quality symbol followed by a setting option and press the FUNC. menu.
- 2. Press the PHOTO button halfway when the scene you wish to record appears.
 - The camcorder pauses playback. The remaining image capacity and other information appear.
 - When you press the PHOTO button on the wireless controller, recording starts immediately.

Editing

3. Press the PHOTO button fully.

- The card access indicator flashes.
- You can also record a still image by pressing the PHOTO button fully when the tape is in playback pause mode.



- O An image recorded from an image in widescreen mode will be vertically compressed.
- O The data code of the still image will reflect the date and time it has been recorded on the memory card.


Printing Still Images

You can print still images by connecting the camcorder to a printer with direct print function. You can also use the print order settings for direct printing (\square 127).

Following printers can be connected to your camcorder:

	PictBridge compatible SELPHY CP/ SELPHY DS/PIXMA printers	PictBridge
Canon Printers	Bubble Jet Direct compatible PIXMA printers	BUBBLE JET DIRECT
	Direct Print compatible CP printer	DIRECT PRINT
PictBridge compliant non-Canon Printer		PictBridge

Connecting the Printer to the Camcorder

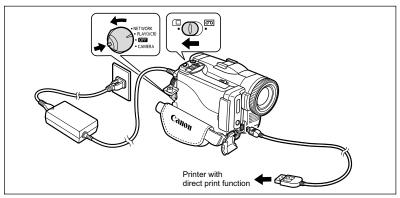

- Turn off the camcorder and insert a memory card that contains still images.
- 2. Turn on the printer.
- 3. Set the camcorder to CARD PLAY mode.
- 4. Connect the camcorder to the printer using the cable.



If \blacksquare continues to flash (for more than 1 minute) or if \blacksquare , \boxdot or \boxdot does not appear, the camcorder is not correctly connected to the printer. In such case, disconnect the cable from camcorder and printer, turn off camcorder and printer, turn both back on and reconnect the camcorder to the printer.



- - O Refer to the instruction manual of each printer for information on which interface cable to use with the camcorder.
 - The Canon CP-Printers CP-10 and CP-100 are supplied with two direct interface cables. Use the cable with the USB logo on the connector (DIF-100).
- O We recommend powering the camcorder from a household power source.
- O Refer also to the instruction manual of the respective printer.
- O The print setting menu may differ slightly depending on the connected printer.

Printing with the △ ~ (Print/Share) Button

You can print an image without changing the settings by simply pressing the $\triangle \sim$ (print/ share) button.


CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

 Select the still image you wish to print with the CARD +/- button.

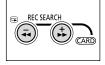

- 2. Press the △ ∞ (print/share) button.
 - Printing starts. The $\ \, \underline{\square} \, \sim \,$ button flashes and glows steadily when printing is complete.
 - If you wish to continue printing, select another still image with the CARD +/- button.



Printing after Selecting the Print Settings

You can select the number of copies and other settings for printing. The setting options vary depending on your printer model.

- 1. Press the SET dial.
 - · The print setting menu appears.
 - Depending on the printer, the message "BUSY." may appear before the camcorder displays the print setting menu.



- 2. Select the print settings (1121).
- 3. Turn the SET dial to select [PRINT] and press the SET dial.
 - Printing starts. The print setting menu disappears when printing is complete.
 - If you wish to continue printing, select another still image with the CARD +/– button.

Printing



- O Images not recorded with this camcorder, uploaded from a computer, edited on a computer and images whose file names have been changed may not be printed correctly.
- Observe the following precautions during printing:
 - Do not turn off the camcorder or the printer.
 - Do not change the position of the TAPE/CARD switch.
 - Do not detach the cable.
 - Do not open the memory card cover or remove the memory card.
- O If the message "BUSY." does not disappear, disconnect the cable from camcorder and printer and reconnect the camcorder to the printer.



O Cancel Printing

Press the SET dial during printing. A confirmation dialog appears. Select [OK] and press the SET dial.

- Canon PIXMA/SELPHY DS printers: Printing stops even if it is incomplete and the paper is fed through.
- Canon CP printers: A print in progress cannot be stopped. Printing stops when the current print is finished, and the remaining prints are canceled.
- O Printing Errors

If an error occurs during the printing process, an error message appears (
141).

- Canon PIXMA/SELPHY DS printers: Resolve the error. When printing does
 not resume automatically, select [CONTINUE] and press the SET dial. If
 [CONTINUE] cannot be selected, select [STOP], press the SET dial and retry
 printing. Refer also to the printer manual for details.
- Canon CP printers: Select [STOP] or [RESUME] and press the SET dial. (The [RESUME] setting may not appear with some error messages. In that case, select [STOP].) Refer also to the printer manual for details.
- If the error still persists and printing does not restart, follow below procedure:
 - 1. Disconnect the cable.
 - 2. Turn the POWER switch of the camcorder to OFF and back to PLAY (VCR).
 - 3. Reconnect the cable.

O When you have finished printing:

- 1. Disconnect the cable from the camcorder and printer.
- 2. Turn off the camcorder.

Selecting the Print Settings

The procedure for selecting the number of copies is common to all printers. Other print setting procedures vary depending on your printer model. Check which icon appears in the upper left corner of the camcorder screen after connecting, and refer to the relevant pages accordingly.





Selecting the Number of Copies

A maximum of 99 copies can be selected for one still image.

1. In the print setting menu, turn the SET dial to select (COPIES) and press the SET dial.



2. Turn the SET dial to select the number of copies and press the SET dial.



Setting the Print Style

PAPER	PAPER SIZE	Available paper sizes vary depending on the printer model.
	PAPER TYPE	PHOTO, FAST PHOTO, DEFAULT
	PAGE LAYOUT	BORDERLESS, BORDERED, 2-UP, 4-UP, 8-UP, 9-UP, 16-UP, DEFAULT
		ON, OFF, DEFAULT
		ON, OFF, VIVID, NR, VIVID+NR, DEFAULT



- O Print setting options and [DEFAULT] settings vary depending on the printer model. For details, refer to the instruction manual of your printer.
- O [BORDERED]: The image area remains relatively unchanged from the recorded image when it is printed. [BORDERLESS]: The center portion of the recorded image is printed at an enlarged size. The image's top, bottom and sides may be cropped slightly.
- O [VIVID], [VIVID+NR] and [NR] can be selected with Canon PIXMA/SELPHY DS
- O When you use 10 x 15 cm (4" x 6") size paper, you can select the layout from [2-UP], [4-UP], [8-UP], [9-UP] and [16-UP].

Paper Settings

1. In the print setting menu, turn the SET dial to select [PAPER] and press the SET dial.



2. Turn the SET dial to select the paper size and press the SET dial.

Select the paper size of the paper set in your printer.



Turn the SET dial to select the paper type and press the SET dial.

Select the paper type of the paper set in your printer.



4. Turn the SET dial to select a layout option and press the SET dial.



Including the Date in the Print

In the print setting menu, turn the SET dial to select
 ⊙ (date) and press the SET dial.



2. Turn the SET dial to select a date print option and press the SET dial.



Setting the Print Effect (Image Optimize)

This function uses the camcorder's recording information to optimize the image data, yielding high quality prints.

1. In the print setting menu, turn the SET dial to select
☐ (print effect) and press the SET dial.



2. Turn the SET dial to select a setting and press the SET dial.



Setting the Print Style

		CARD #1*, CARD #2*, CARD #3*, LTR, A4 For details on paper type, refer to the Printer User Guide.
BORDERS	BORDERLESS	Prints right to the edges of the page.
	BORDERED	Prints with a border.

^{*} Recommended paper size



[BORDERED]: The image area remains relatively unchanged from the recorded image when it is printed. [BORDERLESS]: The center portion of the recorded image is printed at an enlarged size. The image's top, bottom and sides may be cropped slightly.

1. In the print setting menu, turn the SET dial to select [STYLE] and press the SET dial.





- 3. Turn the SET dial to select the paper size and press the SET dial.
 - · Select the paper size of the paper set in your printer.
 - Pressing the MENU button brings you back to the print settings menu.
- 4. Turn the SET dial to select (BORDERS) and press the SET dial.





5. Turn the SET dial to select a borders option and press the SET dial.

Pressing the MENU button brings you back to the print settings menu.



Setting the Print Style

IMAGE	STANDARD	Prints 1 still image per page.
	MULTIPLE	Prints 8 copies of the same still image on one page.
BORDERS	BORDERLESS	Prints right to the edges of the page.
	BORDERED	Prints with a border.
DATE	ON	Prints with date.
	OFF	Prints without date.



- O The [BORDERS] and [DATE] settings cannot be selected when [IMAGE] is set to [MULTIPLE].
- O [BORDERED]: The image area remains relatively unchanged from the recorded image when it is printed. [BORDERLESS]/[MULTIPLE]: The center portion of the recorded image is printed at an enlarged size. The image's top, bottom and sides may be cropped slightly.
- O [MULTIPLE] can only be selected when printing on card size paper.
- O The date print function is not supported by the CP Printers CP-10 and CP-100.
- 1. In the print setting menu, turn the SET dial to select [STYLE] and press the SET dial.



Printing

Selecting the Image Style

2. Make sure that ☐ (IMAGE) is selected and press the SET dial.



3. Turn the SET dial to select the image style and press the SET dial.

Pressing the MENU button brings you back to the print settings menu.



Selecting the Borders

2. Turn the SET dial to select (BORDERS) and press the SET dial.



3. Turn the SET dial to select a borders option and press the SET dial.

Pressing the MENU button brings you back to the print settings menu.



Including the Date

2. Turn the SET Dial to select ⊗ (DATE) and press the SET dial.



3. Turn the SET dial to select a date option and press the SET dial.

Pressing the MENU button brings you back to the print settings menu.



Trimming Settings

Set the print style before you start with the trimming settings.

1. In the print setting menu, turn the SET dial to select [TRIMMING] and press the SET dial.

The trimming frame appears.



2. Change the size of the trimming frame.

- Move the zoom lever toward T to shrink the frame, and toward W to enlarge the frame.
- To cancel the trimming settings, move the zoom lever toward
 W until the trimming frame disappears.



3. Move the trimming frame.

- Turn the SET dial to move the frame. Press the SET dial to switch between the directions (up/down or right/left) and the orientation of the frame (vertical/horizontal).
- Pressing the MENU button brings you back to the print settings menu.





- O About the color of the trimming frame (Canon CP printers only):
 - White: No trimming settings.
 - Green: Recommended trimming size. (The trimming frame may not appear in green depending on the image size, paper size or borders settings.)
 - Red: The image is magnified beyond recommended size. The image will be printed coarsely.
- O The trimming setting applies only to one image.
- O The trimming setting is canceled with the following operations:
 - When you turn off the camcorder.
 - When you disconnect the interface cable.
 - When you expand the trimming frame beyond its maximum size.

Printing with Print Order Settings

You can select still images for printing and set the number of copies. These print order settings are compatible with the Digital Print Order Format (DPOF) standards and can be used for printing on DPOF compatible printers (

118). A maximum of 998 still images can be selected.

Selecting Still Images for Printing (Print Order)

Do not connect a USB or DV cable to the camcorder while setting the print orders.



- 1. Press the FUNC. button.
- 2. Select [PRINT ORDER] and press the SET dial.
- 3. Select the number of copies and press the SET dial.
- 4. Press the FUNC, button.

To cancel the print order, set the number of copies to 0 in step 2.

Selecting in Index Screen Display



- 1. Move the zoom lever toward W.
 - · Up to 6 images appear.
 - · Select the image you wish to print.
- Press the MENU button and select [CARD OPERATIONS]. Select
 □ PRINT ORDER].
- 3. Press the SET dial and set the number of copies with the SET dial.
- "≜" appears on the image.

 4. Press the MENU button.

To cancel the print order, set the number of copies to 0.

Erasing All Print Orders



- 1. Press the MENU button and select [CARD OPERATIONS].
- 2. Select [D PRINT ORDERS ALL ERASE].
 "ERASE ALL D PRINT ORDERS?", [NO] and [YES] appears.
- 3. Select [YES].

All "∆" disappear.

4. Press the MENU button.

Printing



- 1. Connect the printer to the camcorder (118).
- 2. Press the MENU button and select [→ PRINT].
 - The print setting menu appears.
- Make sure that [PRINT] is selected and press the SET dial.
 Printing starts. The print setting menu disappears when printing is complete.



- O Depending on the connected printer, you can select style or paper settings before step 3.
- O Cancel Printing/Printing Errors (120)
- O Restarting Printing

Open the CARD PLAY menu and select [➡ ⚠ PRINT]. Select [RESUME] or [CONTINUE] in the print setting menu and press the SET dial. The remaining images will be printed.


Printing cannot be restarted in the following cases:

- When you change the print order settings.
- When you delete a still image with print order settings.

Transferring Video Recordings to a Computer

Transferring Using a DV Cable

You can transfer recordings to a computer equipped with a IEEE1394 (DV) terminal or IEEE1394 capture board. Use the editing software supplied with your computer/capture board to transfer video recording from tape to computer. Refer to the instruction manual of the software. A driver is preinstalled on Windows operating systems later than Windows 98 Second Edition and Mac operating systems later than Mac OS 9, and will be installed automatically.

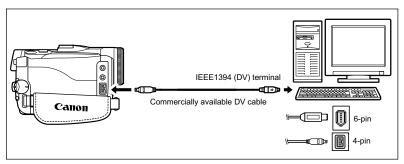



- Operation may not work correctly depending on the software and the specifications/settings of your computer.
- O If the computer freezes while you have connected the camcorder, disconnect and reconnect the DV cable. If the problem persists, disconnect the interface cable, turn off camcorder and computer, turn camcorder and computer back on and reconnect them.
- O Before connecting the camcorder to the computer using a DV cable make sure that camcorder and computer are not connected with a USB cable, and that no other 1394 device is connected to the computer.



- O We recommend powering the camcorder from a household power source while it is connected to the computer.
- Refer also to the instruction manual of the computer.

MYX25 Transferring Using a USB Cable

Windows XP/Hi-Speed USB 2.0 Only

Use a video editing software to transfer video recordings from the tape to the computer, edit them and upload them from the computer to the tape. You can also convert analog signals to digital signals and transfer them to the computer. To transfer video recordings to the computer, the Canon USB Video driver and Windows Movie Maker 2 (version 2.0.3312.0) are required. For details, refer to the *Digital Video Software Instruction Manual*.

CAMERA

PLAY (VCR)

CARD CAMERA

CARD PLAY

- 1. Install the Canon USB Video Driver.
- 2. Connect the power adapter to the camcorder.
- 3. Set the camcorder to PLAY (VCR) mode.

When transferring video recordings from/to a tape, make sure that "AV → DV" is not displayed. When using the analog-digital converter, make sure that "AV → DV" is displayed. Change the settings as necessary (□ 72).

4. Connect the camcorder to the computer using the USB cable.




- O Operation may not work correctly depending on the software and the specifications/settings of your computer.
- O Make sure that camcorder and computer are not connected with a DV cable before connecting the camcorder to the computer using the USB cable. Otherwise, the computer may not operate properly.

Transferring Memory Card Images to a Computer

With the supplied USB cable and Digital Video Software, you can browse and archive images or arrange still images for printout. For details, refer to the *Digital Video Software Instruction Manual*.

Users of Windows OS can also transfer images to the computer by simply pressing the $\triangle \sim$ (print/share) button (\square 132).

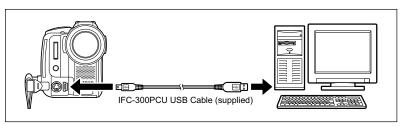



- O Do not disconnect the USB cable, open the memory card cover, remove the memory card, change the position of the TAPE/CARD switch or turn off the camcorder and computer while data is being transferred to the computer (while the camcorder's card access indicator is flashing). Doing so may damage the memory card's data.
- Operation may not work correctly depending on the software and the specifications/settings of your computer.
- O The image files on your memory card and the image files saved on the hard disk drive of your computer are valuable, original data files. If you wish to use image files on your computer, make copies of them first, and use the copied file, retaining the original.
- O Make sure that camcorder and computer are not connected with a DV cable before connecting the camcorder to the computer using the USB cable. Otherwise, the computer may not operate properly.




- We recommend powering the camcorder from a household power source while it is connected to the computer.
- O Refer also to the computer instruction manual.
- O Users of Windows XP and Mac OS X:
 - Your camcorder is equipped with the standard Picture Transfer Protocol (PTP) allowing you to download still images (JPEG only) by simply connecting the camcorder to a computer via USB cable without installing the software from the DIGITAL VIDEO SOLUTION DISK.

Direct Transfer (Windows OS only)

You can transfer images to the computer with the 🖺 🗸 (print/share) button.

ALL IMAGES	Transfers all images to the computer.
NEW IMAGES	Transfers only those images that have not yet been transferred to the computer.
TRANSFER ORDERS	Transfers images with transfer orders to the computer.
SELECT & TRANSFER	Allows you to select an image and transfers the selected image to the computer.
	Allows you to select a still image and transfers the selected image to the computer as wallpaper.

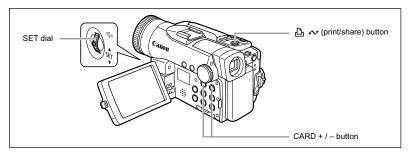

Preparations

The first time you connect the camcorder to the computer, you need to install the software and set the auto-launch setting. From the second time on, you only need to connect the camcorder to the computer to transfer images.



- Install the supplied Digital Video Software.
 See Installing the Software in the Digital Video Software Instruction Manual.
- 2. Set the camcorder to CARD PLAY mode.
- Connect the camcorder to the computer using the USB cable.
 See Connecting the Camcorder to a Computer in the Digital Video Software Instruction Manual.
- 4. Set the auto-launch setting.
 - See Starting CameraWindow in the Digital Video Software Instruction Manual.
 - The direct transfer menu appears on the camcorder screen and the $\ \ \ \ \ \ \ \$ button lights up.

Transferring Images (ALL IMAGES, NEW IMAGES, TRANSFER ORDERS)

To transfer images with transfer order, you need to set the transfer orders (11) 134).



PLAY (VCR)



CARD PLAY

ALL IMAGES.

NEW IMAGES

F TRANSFER ORDERS

SELECT & TRANSFER.

- 1. Turn the SET dial to select [☐ ALL IMAGES],
 [☐ NEW IMAGES] or [☐ TRANSFER ORDERS].
- 2. Press the $\triangle \sim$ button.
 - The images are transferred to the computer and displayed in the Main Window of ZoomBrowser EX.
 - The camcorder displays the transfer menu when transfer is complete.
 - To cancel transfer, turn the SET dial to select [CANCEL] and press the SET dial, or press the MENU button.

Transferring Images (SELECT & TRANSFER, WALLPAPER)



PLAY (VCR)

CARD CAMERA

- Turn the SET dial to select [☐ SELECT & TRANSFER] or [☐ WALLPAPER].
- Press the

 →

 → button.
- Select the image you wish to transfer with the CARD+/- button.
- 4. Press the △ ∞ button.
 - [SELECT & TRANSFER]: The selected image is transferred to the computer and displayed in the Main Window of ZoomBrowser EX.

To continue transferring, select another image with the CARD+/– button.

- Pressing the MENU button brings you back to the transfer menu.



- O You can press the SET dial in place of the ♠ ~ button. With [♠ ALL IMAGES], [♠ NEW IMAGES] or [♠ TRANSFER ORDERS], a confirmation message appears. Turn the SET dial to select [OK] and press the SET dial.
- O When transferring with the 🚨 🛷 button, the camcorder retains the transfer setting even if you change the position of the POWER switch.
- O When the camcorder is connected to the computer and screen to select images displays, press the MENU button. The transfer menu will display.
- O When the protect switch of the SD Memory Card is activated during image transfer, the images will not be marked as "already transferred", and will be transferred again when you select [NEW IMAGES] later.



Selecting Images for Transfer (Transfer Order)

You can select images for transfer to the computer. These transfer settings are compatible with the Digital Print Order Format (DPOF) standards. A maximum of 998 images can be selected.


Do not connect a USB or DV cable to the camcorder while setting the transfer orders.



- 1. Press the FUNC. button.
- 2. Select [TRANSFER ORDER] followed by [ON] and press the SET dial.
- 3. Press the FUNC. button.

To cancel the transfer order, select [OFF] in step 2.

Selecting in Index Screen Display

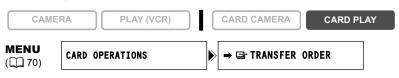

- 1. Move the zoom lever toward **W**.
 - Up to 6 images appear.
- 2. Press the MENU button and select [CARD OPERATIONS]. Select [→ 🖼 TRANSFER ORDER].
- 3. Press the SET dial on the image you wish to transfer.
 - " appears on the image.
- 4. Press the MENU button.

To cancel the transfer order, press the SET dial again.

Erasing All Transfer Orders



- 1. Press the MENU button and select [CARD OPERATIONS].
- 2. SELECT [雪 TRANS.ORDERS ALL ERASE].

 "ERASE ALL 雪 TRANSFER ORDERS?", [NO] and [YES] appears.
- Select [YES].

All "□ " disappear.

4. Press the MENU button.

Using the NETWORK Mode (DV Messenger Version 2)

With the Windows XP dedicated DV Network Software (DV Messenger), you can operate your camcorder from the computer, perform videoconferences using the camcorder or remotely access the camcorder at home using the Internet.


Download the DV Messenger and the DV Network Software Instruction Manual from the following homepage. Refer to the *DV Network Software Instruction Manual* for details.

www.canon-europe.com/DVmessenger

www.canon.com.au/products/cameras.html

www.canon.com.cn/down/static/driverflistview.html

www.canon-asia.com

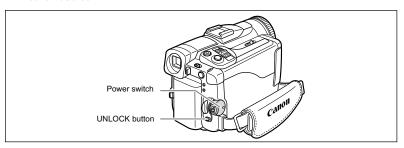

Preparation for Using DV Messenger

- 1. Start the computer.
- 2. Install DV Messenger.

If you wish to connect the camcorder using a USB cable, you also need to install the Canon USB Video Driver (\square 130).

- 3. Connect the power adapter to the camcorder.
- 4. Press the UNLOCK button and turn the POWER switch to NETWORK.
- 5. Connect the camcorder to the computer using a USB cable or DV cable.

"NETWORK MODE" appears on the camcorder screen.

6. Start DV Messenger.



- O In NETWORK mode, the camcorder can only be operated from the computer, except for the following functions:
 - When the DV Messenger [CAMERA] control panel is displayed: Zoom and focus (when DV Messenger set to autofocus)
 - When the DV Messenger [VCR] control panel is displayed: Volume adjustment of the built-in speaker
- O Following functions cannot be used with DV Messenger.
 - Image stabilizer
 - Digital zoom
 - Flash
- O The camcorder cannot be operated with the wireless controller.

Troubleshooting

If you have a problem with your camcorder, refer to this checklist. Consult your dealer or a Canon Service Center if the problem persists.

Power Source

Problem	Solution	Ш
Camcorder will not turn on.	Battery pack is exhausted. Replace or charge the battery pack.	16
	Attach the battery pack correctly.	16
The camcorder switches off by itself.	Battery pack is exhausted. Replace or charge the battery pack.	16
	Power save function has been activated. Turn on the camcorder.	28
Cassette compartment will not open.	Battery pack is exhausted. Replace or charge the battery pack.	16
	Open the cassette compartment cover fully.	19
Cassette compartment stopped during loading/ unloading.	Battery pack is exhausted. Replace or charge the battery pack.	16
LCD/viewfinder switches on and off.	Battery pack is exhausted. Replace or charge the battery pack.	16
Battery pack will not charge.	Charge the battery pack in temperatures between 0 °C and 40 °C (32 °F and 104 °F).	-
	Battery packs become hot with use and may not charge. Wait until the battery pack temperature is below 40 °C (104 °F) and retry charging.	_
	The battery pack is damaged. Use a different battery pack.	-

Recording/Playback

Problem	Solution	m
Buttons will not work.	Turn on the camcorder.	28
	Load a cassette.	19
Abnormal characters appear on the screen. The camcorder does not operate properly.	This camcorder uses a microcomputer. External noise or static electricity may cause abnormal characters to appear on the screen. In such case, disconnect the power source and reconnect it after a short time. If the problem still persists, disconnect the power source and press the RESET button with a pointed item. Pressing the RESET button resets all settings.	_
" ignation in the screen.	Load a cassette.	19
" tlashes on the screen.	Battery pack is exhausted. Replace or charge the battery pack.	16
" " flashes on the screen.	Condensation is detected. See reference page.	139
"REMOVE THE CASSETTE" appears on the screen.	Unload and reload the cassette.	19
The wireless controller will not	Set [WL.REMOTE] to [ON].	74
work.	The battery of the wireless controller is exhausted. Replace the battery.	23

Recording

Problem	Solution	m
"\$ " flashes red on the screen.	The camcorder malfunctions. Consult a Canon Service Center.	-
Image will not appear on the screen.	Set the camcorder to CAMERA mode.	28
"SET THE TIME ZONE,	Set the time zone, date and time.	26
DATE AND TIME" appears on the screen.	Recharge the built-in lithium battery and set the time zone, date and time.	145
Pressing the start/stop button	Set the camcorder to CAMERA mode.	28
will not start recording.	Load a cassette.	19
	Tape reached the end (" END" flashes on the screen). Rewind the tape or replace the cassette.	19
	Cassette is protected ("জ্ৰ্ছা" flashes on the screen). Change the position of the protect switch.	144
Camcorder will not focus.	Autofocus does not work on that subject. Focus manually.	52
	Adjust the viewfinder with the dioptric adjustment lever.	21
	Lens is dirty. Clean the lens.	148
A vertical light bar appears on the screen.	Bright light in a dark scene may cause a vertical light bar (smear) to appear. This is not a malfunction.	-
Viewfinder picture is blurred.	Adjust the viewfinder with the dioptric adjustment lever.	21
Sound is distorted.	When recording near loud sounds (such as fireworks, drums or concerts), sound may become distorted. Sound may be recorded properly when you set [MIC ATT] to [ON] in the menu, or when you adjust the audio recording level manually.	77
Sound is recorded in a lower level than the actual level.	When recording near loud sounds (such as fireworks, drums or concerts), sound may be recorded not in the actual sound level. Sound may be recorded properly when you adjust the audio recording level manually.	77
	Set [MIC ATT] to [OFF] in the menu.	73

Playback

Problem	Solution	Ш
Pressing the playback button	Set the camcorder to PLAY (VCR) mode.	37
does not start playback.	Load a cassette.	19
	Tape reached the end (" END" flashes on the screen). Rewind the tape.	37
Image will not appear on the	Set [AV/PHONES ∩] to [AV] in the menu.	41
TV screen.	Set [AV → DV/ 🚭] (MVX45i) or [AV → DV] (MVX40i) to [OFF].	72
Tape is running, but image will not appear on the TV screen.	TV/VIDEO selector on the TV is not set to VIDEO. Set the selector to VIDEO.	41
	Video heads are dirty. Clean the video heads.	147
	You attempted to play back or dub copyright protected tape. Stop playback/dubbing.	_
No sound from the built-in speaker.	Speaker volume is turned off. Adjust the volume with the SET dial.	40
Noise comes out of the headphones.	Set [AV/PHONES ()] to [PHONES ()].	40

Problem	Solution	m
The tape stops during playback pause.	When playback pause continues for more than 4 minutes 30 seconds during playback or audio dubbing, the camcorder shuts off to protect tape and video heads. Playback the tape again and press the \[\/ \] pause button.	-

Memory Card Operation

Problem	Solution	Ш
Memory card cannot be inserted.	Memory card was not facing the correct direction. Turn the memory card over and reinsert it.	20
Memory card cannot be	Insert a memory card.	20
recorded.	Memory card is full. Replace the memory card or erase images.	103
	Format the memory card.	104
	File number reached maximum value. Set [FILE NOS.] to [RESET] and insert a new memory card.	72
	SD Memory Card is protected. Change the position of the protect switch.	20
Memory card cannot be	Set the camcorder to CARD PLAY mode.	39
played back.	Insert a memory card.	20
Image cannot be erased.	Image is protected. Cancel the protection.	102
	SD memory card is protected. Change the position of the protect switch.	20
" □ " flashes red.	Card error occurred. Turn off the camcorder. Remove and reinsert the memory card. Format the memory card if flashing persists.	104

Printing

Problem	Solution	ш
The printer is not operating even though camcorder and printer are correctly connected.	Set the camcorder to CARD PLAY mode. Disconnect and reconnect the USB cable. Turn off the printer and turn it back on.	_

Editing


Problem	Solution	Ш
Dubbing via the camcorder's DV terminal does not work.	Set [AV → DV/ ➡] (MVX45i) or [AV → DV] (MVX40i) to [OFF].	72
	Wrong signal format. Dubbing may work via the AV terminal. Refer also to the instruction manual of the connected device.	-

Condensation


Moving the camcorder rapidly between hot and cold temperature may cause condensation (water droplets) to form on its internal surfaces. Stop using the camcorder if condensation is detected. Continued use may damage the camcorder.

Condensation may form in the following cases:

When the camcorder is moved from an air-conditioned room to warm, humid place

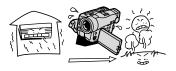


When the camcorder is moved from a cold place to a warm room

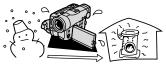

When the camcorder is left in a humid room



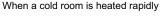





How to avoid condensation:

O Unload the cassette, place the camcorder in an airtight plastic bag and let it adjust to temperature changes slowly before removing it from the bag.

When condensation is detected:

- O The camcorder stops operating and the warning message "CONDENSATION HAS BEEN DETECTED" appears for approx. 4 seconds and "▲" starts flashing.
- O If a cassette is loaded, the warning message "REMOVE THE CASSETTE" appears and "maily starts flashing. Remove the cassette immediately and leave the cassette compartment open. Leaving the cassette in the camcorder may damage the tape.
- O A cassette cannot be loaded when condensation is detected.

Resuming use:

O It takes about 1 hour until the water droplets evaporate. After the condensation warning stops flashing, wait for 1 more hour before resuming use.

List of Messages

Message	Explanation	m
	·	
SET THE TIME ZONE, DATE AND TIME	You have not set the time zone, date and time. This message appears each time you turn the power on until you set the time zone, date and time.	26
CHANGE THE BATTERY PACK	Battery pack is exhausted. Replace or charge the battery pack.	16
THE TAPE IS SET FOR ERASURE PREVENTION	Cassette is protected. Replace the cassette or change the position of the protect switch.	144
REMOVE THE CASSETTE	Camcorder stopped operating to protect the tape. Unload and reload the cassette.	19
CHECK THE INPUT	DV cable or USB cable is not connected, or the connected digital device is turned off.	108 130
CONDENSATION HAS BEEN DETECTED	Condensation has been detected in the camcorder.	139
CONDENSATION HAS BEEN DETECTED REMOVE THE CASSETTE	Condensation has been detected in the camcorder. Unload the cassette.	139
TAPE END	Tape reached the end. Rewind the tape or replace the cassette.	_
CHECK THE CASSETTE [WRONG FORMAT]	You attempted to perform audio dubbing on a tape recorded in HDV format.	-
WRONG FORMAT PLAYBACK NOT POSSIBLE	You attempted to play back a tape recorded in HDV format.	-
CHECK THE CASSETTE [REC MODE]	You attempted to perform audio dubbing on a tape recorded in a mode other than the SP mode.	113
CHECK THE CASSETTE [AUDIO MODE]	You attempted to perform audio dubbing on a tape recorded in 16-bit or 12-bit 4-channel sound.	113
CHECK THE CASSETTE [BLANK]	You attempted to perform audio dubbing on a tape with a blank section.	113
HEADS DIRTY, USE CLEANING CASSETTE	Video heads are dirty. Clean the video heads.	147
COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED	You attempted to play back a copyright protected tape.	110
COPYRIGHT PROTECTED DUBBING RESTRICTED	You attempted to dub a copyright protected tape. May also appear when an anomalous signal is received during analog line-in recording.	110

Memory Card Related Messages

Message	Explanation	Ш
NO CARD	Memory card not is inserted into the camcorder.	20
THE MEMORY CARD COVER IS OPEN	Close the card cover.	20
THE CARD IS SET FOR ERASURE PREVENTION	SD Memory Card is set for erasure prevention. Replace the card or change the position of the protect switch.	20
NO IMAGES	No images are recorded on the memory card.	_

Message	Explanation	\square
CARD ERROR	A memory card error occurred. The camcorder cannot record or play back the image. The error may be temporary. If the message disappears after 4 seconds and " T flashes red, turn the camcorder off, remove the card and reinsert the card. If " T changes to green, you can continue recording/playback.	_
CARD FULL	No remaining capacity on the memory card. Replace with another card or erase images.	_
NAMING ERROR	File or folder number has reached the maximum value.	-
UNIDENTIFIABLE IMAGE	Image is not recorded with JPEG compression, or with a compression not compatible with the camcorder, or the image file is corrupted.	_
☐ TRANSFER ORDER ERROR	You attempted to set more than 998 transfer orders.	134
CANNOT TRANSFER!	You attempted to transfer a movie file as wallpaper.	132
THIS IMAGE CANNOT BE RECORDED	Some analog images cannot be recorded on the memory card depending on the signal.	-
NOW CREATING START- UP IMAGE	The start-up image is being made.	-
THIS IMAGE CANNOT BE USED AS START-UP IMAGE	You attempted to use an image recorded with another camcorder, recorded with a compression not compatible with this camcorder, or that has been edited on a computer.	81
TOO MANY STILL IMAGES DISCONNECT USB CABLE	Disconnect the USB cable and decrease the number of still images on the memory card to less than 1800. If a dialog appeared on the computer screen, close it. Reconnect the USB cable.	_

Direct Print Related Messages

Following messages may appear on the camcorder screen. On printers equipped with an operation panel or printer that can be connected to a TV, an error number or message displays on the panel or TV monitor. Refer to the printer manual for the remedies corresponding to the error numbers or messages.

Message	Explanation
PAPER ERROR	There is a problem with the paper. Wrong paper size is inserted, the ink cannot be used with the selected paper or paper output tray is open.
NO PAPER	Paper is not correctly inserted or there is no paper. If the printer is equipped with a photo paper cassette, specify the paper feed location using the Paper Feed switch.
PAPER JAM	The paper jammed during printing. Select [STOP] to cancel printing. After removing the paper, set some paper again and press the resume button on the printer.
PAPER HAS BEEN CHANGED	Paper size has been changed between print setting and start of printing.
MEDIA TYPE ERROR	You attempted to use a paper size/type that is not supported by the printer.
INCOMPATIBLE PAPER SIZE	You attempted to print on paper that cannot be used with the camcorder.
INK ERROR	There is a problem with the ink.
NO INK	The ink cartridge is not inserted or is out of ink.
LOW INK LEVEL	The ink cartridge needs to be replaced soon. Select [CONTINUE] to restart printing.

Message	Explanation
INK CASSETTE ERROR	There is a problem with the ink cassette.
PAPER AND INK DO NOT MATCH	The ink cannot be used with the selected paper type.
WASTE TANK FULL	Waste tank is full. Select [CONTINUE] to restart printing. Consult your dealer or a Canon Service Center listed in the Contact List provided with the printer or the printer manual to replace the waste tank (waste ink absorber).
FILE ERROR	You attempted to print an image that was recorded with another camcorder, with a different compression, or was edited on a computer.
CANNOT PRINT!	You attempted to print an image that was recorded with another camcorder, with a different compression, or was edited on a computer.
COULD NOT PRINT X IMAGES	You attempted to use the print order settings to print X images that were recorded with another camcorder, with a different compression or were edited on a computer.
SET PRINT ORDER	You attempted to print an image from the CARD PLAY menu [➡ ⚠ PRINT] without having set the print order.
凸 PRINT ORDER ERROR	You attempted to set more than 998 still images in the print order.
CANNOT TRIM	You attempted to trim an image that was recorded with another camcorder.
READJUST TRIMMING	You changed the print style after you set the trimming settings.
PRINTER ERROR	Cancel printing. Turn off the printer and turn it back on. Check the printer status. If the error persists, consult your dealer or a Canon Service Center listed in the Contact List provided with the printer or the printer manual.
PRINT ERROR	Cancel printing, disconnect the USB cable and turn off the printer. After a while, turn the printer back on and reconnect the USB cable. Check the printer status. If the error persists, consult your dealer or a Canon Service Center listed in the Contact List provided with the printer or the printer manual. When you are printing using the w button, check the print settings.
HARDWARE ERROR	Cancel printing. Turn off the printer and turn it back on. Check the printer status. If the printer is equipped with a battery, it might be exhausted. In such case, turn off the printer, replace the battery and turn it back on. If the error persists, consult your dealer or a Canon Service Center listed in the Contact List provided with the printer or the printer manual.
RECHARGE THE PRINTER BATTERY	The printer battery is depleted.
COMMUNICATION ERROR	The printer is experiencing a data transmission error. Cancel printing, disconnect the USB cable and turn off the printer. After a while, turn the printer back on and reconnect the USB cable. When you are printing using the
CHECK PRINT SETTINGS	The print setting cannot be used for printing with the 🚨 🎺 button.
PRINTER IN USE	The printer is in use. Check the printer status.
PRINTER WARMING UP	Printer is warming up. If the message does not disappear after a few seconds, check the printer status.
PAPER LEVER ERROR	Paper lever error occurred. Adjust the paper selection lever to the proper position.
PRINTER COVER OPEN	Close the printer cover securely.
NO PRINTHEAD	No print head is installed in the printer or print head is defect. Refer to the instruction manual of your printer.

Handling Precautions

Camcorder

- O Do not carry the camcorder by the LCD panel or viewfinder.
- O Do not leave the camcorder in places subject to high temperatures, such as a sunheated car, and high humidity.
- O Do not use the camcorder near strong electric or magnetic fields such as above TVs, near plasma TVs or mobile phones.
- O Do not point the lens or viewfinder at strong light sources. Do not leave the camcorder pointed at a bright subject.
- O Do not use the camcorder in dusty or sandy places. Dust or sand getting inside the cassette or camcorder may cause damage. Dust and sand can also damage the lens. Attach the lens cap after use.
- O The camcorder is not waterproof. Water, mud or salt getting inside the cassette or camcorder may cause damage.
- O Be careful of heat generated by lighting equipment.
- O Do not disassemble the camcorder. If the camcorder does not function properly, consult qualified service personnel.
- O Handle the camcorder with care. Do not subject the camcorder to shocks or vibration as this may cause damage.
- O Avoid sudden changes in temperature. Moving the camcorder rapidly between hot and cold temperatures may cause condensation to form on its internal surfaces (

 139).

Battery Pack

DANGER!

Treat the battery pack with care.

- · Keep it away from fire (or it might explode).
- Do not expose the battery pack to temperature higher than 60 °C (140 °F). Do not leave it near a heater or inside a car in hot weather.
- · Do not try to disassemble or modify it.
- · Do not drop or knock it.
- · Do not get it wet.
- O Charged battery packs continue to discharge naturally. Therefore, charge them on the day of use, or the day before, to ensure a full charge.
- O Attach the terminal cover whenever a battery pack is not in use. Contact to metallic objects may cause a short circuit and damage the battery pack.
- O Dirty terminals may cause a poor contact between the battery pack and the camcorder. Wipe the terminals with a soft cloth.
- O Since storing a charged battery pack for a long time (about 1 year) can shorten its lifecycle or affect performance, we recommend to discharge the battery pack fully and to store it in a dry place at temperatures no higher than 30 °C (86 °F). If you do not use the battery pack for long periods, charge and discharge it fully at least once a year. If you have more than 1 battery pack, perform these precautions at the same time for all battery packs.

- O Although the battery pack's operating temperature range is from 0 °C to 40 °C (32 °F to 104 °F), the optimal range is from 10 °C to 30 °C (56 °F to 86 °F). At cold temperatures, performance will temporarily decline. Warm it in your pocket before use.
- O Replace the battery pack if the usable time after full charge diminishes substantially at normal temperatures.

About the battery terminal cover

The battery terminal cover has a []-shaped hole. This is useful when you wish to differentiate between charged and uncharged battery packs. For example, with charged battery packs, attach the terminal cover so that the []-shaped hole shows the blue label








Cassette

- O Rewind tapes after use. If the tape becomes slack and damaged, it may cause picture and sound distortion.
- O Return cassettes in the case and store them upright.
- O Do not leave the cassette in the camcorder after use.
- O Do not use spliced tapes or nonstandard cassettes as they may damage the camcorder.
- O Do not use tapes that have been jammed as video heads may become dirty.
- O Do not insert anything into the small holes of the cassette, or cover them with cellophane tape.
- O Handle cassettes with care. Do not drop or subject them to severe impact as this may damage the cassettes.
- O Rewind tapes from time to time if they are stored for a long time.
- O With cassettes equipped with a memory function, metal plated terminals may become dirty with use. Clean the terminals with a cotton swab after about 10 times of loading/ unloading. The memory function is not supported by the camcorder.

Protecting Tapes from Accidental Erasure

To protect your recordings from accidental erasure, slide the tab on the cassette to SAVE or ERASE OFF.

If you load a protected cassette in CAMERA mode, the message "THE TAPE IS SET FOR ERASURE PREVENTION" appears for approx. 4 seconds and "em" starts flashing. If you wish to record on that cassette, change the position of the tab.

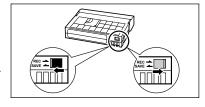

Memory Card

- O Format new memory cards with the camcorder. Memory cards formatted with other devices such as a computer may not operate correctly.
- O We recommend saving backups of memory card images on your computer's hard drive or other external memory device. Image data may be corrupted or lost due to memory card defects or exposure to static electricity. Canon Inc. makes no warranties for corrupted or lost data.
- O Do not turn off the camcorder, disconnect the power source, open the memory card cover or remove the memory card while the card access indicator is flashing.
- O Do not use memory cards in places subject to strong magnetic fields.
- O Do not leave memory cards in places subject to high humidity and high temperature.
- O Do not disassemble memory cards.
- O Do not bend, drop, or subject memory cards to shocks and do not expose them to water.
- O Moving a memory card rapidly between hot and cold temperatures may cause condensation to form on its external and internal surfaces. If condensation forms on the card, put it aside until the droplets have evaporated completely.
- O Do not touch or expose the terminals to dust or dirt.
- O Check the direction before inserting the memory card. Forcing a memory card backwards into the slot may damage the memory card or the camcorder.
- O Do not remove the label from the memory card, or affix other labels on the memory card.

Lithium Button Battery

WARNING!

- The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 100 °C (212 °F) or incinerate the battery.
- Replace the battery with a CR2025 made by Panasonic, Hitachi Maxell, Sony, Sanyo, or with Duracell2025. Use of other batteries may present a risk of fire or explosion.
- The used battery should be returned to the supplier for safe disporsal.
- O Do not pick up the battery using tweezers or other metal tools as this will cause a short circuit.
- O Wipe the battery with a clean dry cloth to ensure proper contact.
- O Keep the battery out of reach of children. If it is swallowed, seek medical assistance immediately. The battery case may break and the battery fluids may damage stomach and intestines
- O Do not disassemble, heat or immerse the battery in water to avoid the risk of explosion.


Built-in Rechargeable Lithium Battery

The camcorder has a built-in rechargeable lithium battery to retain date/time and other settings. The built-in lithium battery is recharged while you use the camcorder, however, it discharges when the usage time is short, and will become totally discharged when you do not use the camcorder for about 3 months. In such case, recharge the built-in lithium battery: Connect the power adapter to the camcorder and leave it connected for 24 hours with the POWER switch set to OFF.

Recycling the Built-in Rechargeable Lithium Battery


If you should dispose of your camcorder, first remove the built-in rechargeable lithium battery for recycling according to the recycling system of your country.

Remove the cover using tweezers or a flat tip driver.

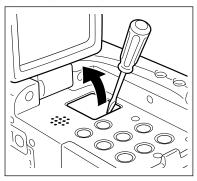

2. Remove the battery using a pointed tool.

Align the pointed tool with the dent on the battery, and move the battery to the right and left while you pull the battery.

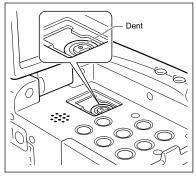



- O Do not remove the cover for any other purpose than removing the battery for recycling when disposing the camcorder.
- O When you have removed the battery, keep it out of reach of children. If it is swallowed, seek medical assistance immediately. The battery case may break and the battery fluids may damage the stomach and intestines.
- O When removing the built-in lithium battery, disconnect power to the camcorder.

Cleaning the Video Heads

When the message "HEADS DIRTY, USE CLEANING CASSETTE" appears, or when the playback picture becomes distorted, the video heads need to be cleaned.

To maintain the best picture quality, we recommend cleaning the video heads frequently with the Canon DVM-CL Digital Video Head Cleaning Cassette or a commercially available dry cleaning cassette.







- O Do not use wet type cleaning cassettes as this may damage the camcorder.
 O Tapes already recorded with dirty video heads may not be played back correctly
 - appes already recorded with dirty video heads may not be played back correctly even when you clean the video heads.

Maintenance/Others

Storage

- O If you do not intend to use the camcorder for a long time, store it in a place free of dust, in low humidity, and at temperatures not higher than 30 °C (86 °F).
- O After storage, check the functions of your camcorder to make sure that the camcorder is still working properly.

Cleaning

Camcorder Body and Lens

O Use a soft, dry cloth to clean the camcorder body and lens. Never use chemically treated cloth or volatile solvents such as paint thinner.

LCD Screen

- O Clean the LCD screen using a commercially available cleaning cloth for glasses.
- O Condensation may form on the surface of the screen when the temperature changes suddenly. Wipe it with a soft dry cloth.

Viewfinder

O Clean the viewfinder screen using blower brush or a commercially available cleaning cloth for glasses.

Using the Camcorder Abroad


Power Sources

You can use the compact power adapter to operate the camcorder and to charge battery packs in any country with power supply between 100 and 240 V AC, 50/60 Hz. Consult the Canon Service Center for information on plug adapters for overseas use.

Playback on a TV Screen

You can only play back your recordings on TVs with PAL system. The PAL system is used in the following countries/areas:

Algeria, Australia, Austria, Bangladesh, Belgium, Brunei, China, Denmark, Finland, Germany, Hong Kong Special Administrative Region, Iceland, India, Indonesia, Ireland, Italy, Jordan, Kenya, Kuwait, Liberia, Malaysia, Malta, Mozambique, the Netherlands, New Zealand, North Korea, Norway, Oman, Pakistan, Portugal, Qatar, Sierra Leone, Singapore, South Africa, Spain, Sri Lanka, Swaziland, Sweden, Switzerland, Tanzania, Thailand, Turkey, Uganda, United Arab Emirates, United Kingdom, Yemen, former Yugoslavia, Zambia.

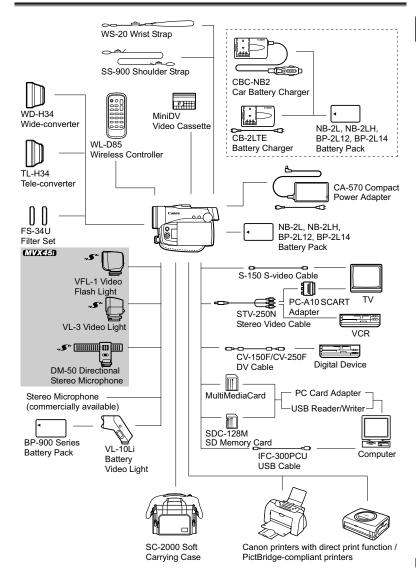


Optional Accessories

Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.


Battery Packs

When you need extra battery packs, select from the following: NB-2L, NB-2LH, BP-2L12, BP-2L14.

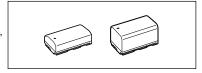

CB-2LTE Battery Charger

Use the battery charger for charging the battery packs.

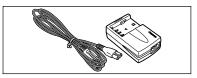

Battery Pack	Charging Time
NB-2LH	90 min.
NB-2L	80 min.
BP-2L12	150 min.
BP-2L14	170 min.

Charging time varies according to the charging condition.


CBC-NB2 Car Battery Charger


Use the car battery charger to charge battery packs on the move. The car battery cable plugs into your car's cigarette lighter and runs off a 12-24 V DC negative ground battery.



TL-H34 Tele-converter

This Tele-converter lens increases the focal length of the camcorder lens by a factor of 1.5.

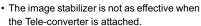

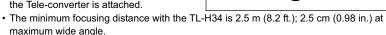


 When the Tele-converter is attached, a shadow may appear in the picture when you record with flash or assist lamp (MVX45i).



WD-H34 Wide-converter

This lens decreases focal length by a factor of 0.7, giving you a wide perspective for indoor shots or panoramic views.

 When the Wide-converter is attached, a shadow may appear in the picture when you record with flash or assist lamp (MVX45i).

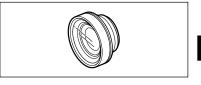

FS-34U Filter Set

Neutral density and MC protector filters help you to control difficult lighting conditions.



VL-10Li Battery Video Light


This compact yet powerful video light can be used for both indoor and outdoor shooting. It attaches to the camcorder's accessory shoe and is powered by BP-900 series battery packs.



- Approximate usage time: BP-915: 60 min., BP-930: 120 min., BP-945: 170 min.
- BP-900 series battery packs are charged with the CA-920 Compact Power Adapter or CH-910 Dual Battery Charger/Holder.

WS-20 Wrist Strap

Use this for extra additional protection for active shooting.

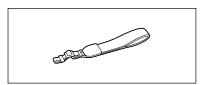

SC-2000 Soft Carrying Case

A handy camcorder bag with padded compartments and plenty of space for accessories.



WVX457 VFL-1 Video Flash Light


This video flash light allows you to record still images and movies even at night or in dark places. It attaches to the camcorder's advanced accessory shoe for cable-free operation.



Additional Information


MVX25f VL-3 Video Light

This video light enables you to record brightly in color even in dark places. It attaches to the camcorder's advanced accessory shoe for cable-free operation.

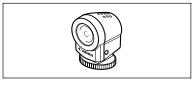

(MVXCIST) DM-50 Directional Stereo Microphone

This highly sensitive, super-directional microphone attaches to the camcorder's advanced accessory shoe. It can be used as directional microphone (monaural) or stereo microphone.

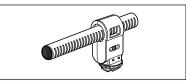

This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.



Specifications

MVX45i/MVX40i/MVX40

System

Video Recording System	2 rotary heads, helical scanning DV system (consumer digital VCR SD system), digital component recording	
Audio Recording System	PCM digital sound: 16 bit (48 kHz/2 ch); 12 bit (32 kHz/4 ch)	
Television System	CCIR standard (625 lines, 50 fields) PAL colour signal	
	, , ,	
Image Sensor	1/3.4-inch CCD, approx. 2,200,000 pixels	
	Effective pixels: tape: approx. 1,770,000 pixels	
T F	card: approx. 2,000,000 pixels	
Tape Format	Videocassettes bearing the "MiniDV" mark.	
Tape Speed	SP: 18.83 mm/s, LP: 12.57 mm/s	
Maximum Recording Time (80 min. cassette)	SP: 80 min., LP: 120 min.	
Fast Forward/Rewind Time	Approx. 2 min. 20 sec. (with a 60 min. cassette)	
LCD Screen	2.5-inch. TFT color, approx. 123,000 pixels	
Viewfinder	0.33-inch. TFT color, approx. 113,000 pixels	
Microphone	Stereo electret condenser microphone	
Lens	MVX45i: f=4.6-64.4 mm, f/1.8-3.0, 14x power zoom	
	35mm equivalent:	
	Tape: 4:3 recording: 39.9-559 mm	
	16:9 recording: 40.9-573 mm	
	Card: 37.6-526 mm	
	MVX40i/MVX40: f=4.6-46 mm, f/1.8-2.8, 10x power zoom	
	35mm equivalent:	
	Tape: 4:3 recording: 39.9-399 mm	
	16:9 recording: 40.9-409 mm	
	Card: 37.6-376 mm	
Lens Configuration	11 elements in 9 groups	
Filter Diameter	34 mm	
AF System	TTL autofocus, manual focusing possible	
Minimum Focusing Distance	1 m (3.3 ft.); 1 cm (0.39 in.) on maximum wide angle	
White Balance	Auto white balance, pre-set white balance (DAYLIGHT, SHADE,	
	CLOUDY, TUNGSTEN, FLUORESCENT, FLUORESCENT H) or custo white balance	
Minimum Illumination	0.9 lx (using the Night mode)	
Recommended Illumination	More than 100 lx	
Image Stabilization	Optical	
mage Jabinzation	Option	

Memory Card

Recording Media	MultiMediaCard, SD Memory Card
Number of Recording Pixels	Still image: 1632 x 1224, 1280 x 960, 640 x 480 pixels Movie: 320 x 240, 160 x 120 pixels, 12.5 frames/sec.
File Format	Design rule for Camera File System (DCF), Exif 2.2* compliant, DPOF compliant

^{*} This camcorder supports Exif 2.2 (also called "Exif Print"). Exif Print is a standard for enhancing the communication between camcorders and printers. By connecting to an Exif Print-compliant printer, the camcorder's image data at the time of shooting is used and optimized, yielding extremely high quality prints.

Image Compression Method Still image: JPEG (compression: Super Fine, Fine, Normal)
Movie: Video data: Motion JPEG, audio data: WAVE (monaural)

Input/Output Terminals (MVX40: Output only)

		3,
AV Terminal	Ø3.5 mm minijack	
	Video:	1 Vp-p/75 ohms unbalanced
	Audio output:	-10 dBV (47 kohm load)/3 kohms or less
	Audio input:	-10 dBV/40 kohms or more
DV Terminal	Special 4-pin connector (IEEE 1394 compliant)	
MIC Terminal	Ø3.5 mm stereo mini-jack –57 dBV (with 600 ohm mic)/5 kohms or more –37 dBV (with 600 ohm mic)/5 kohms or more (MIC ATT ON)	
Headphone Terminal	Ø3.5 mm stereo mini-jack	
USB Terminal	mini-B	
S-video Terminal	1 Vp-p/75 ohms (Y signal), 0.3 Vp-p/75 ohms (C signal)	

Power/Others

Power supply (rated)	7.4 V DC
Power consumption (AF on)	3.5W (using viewfinder), 3.6W (using LCD screen in normal brightness)
Operating temperature	0 – 40 °C (32 – 104 °F)
Dimensions (W × H × D)	70 x 82 x 133 mm (2.8 x 3.2 x 5.2 in.) excluding protrusions
Weight (camcorder body only)	530 g (1.2 lb.)

CA-570 Compact Power Adapter

Power supply	100 – 240 V AC, 50/60 Hz
Power consumption	17W
Rated output	8.4 V DC, 1.5 A
Operating temperature	0 – 40 °C (32 – 104 °F)
Dimensions	52 x 90 x 29 mm (2.1 x 3.5 x 1.1 in.)
Weight	135 g (4.8 oz.)

NB-2LH Battery Pack

Battery type	Rechargeable Lithium Ion Battery
Rated voltage	7.4 V DC
Operating temperature	0 – 40 °C (32 – 104 °F)
Battery capacity	720 mAh
Dimensions	33.3 x 16.2 x 45.2 mm (1.3 x 0.64 x 1.8 in.)
Weight	43 g (1.5 oz.)

MMC-16M MultiMediaCard

Capacity	16 MB
Interface	MultiMediaCard standard
Operating temperature	0 – 40 °C (32 – 104 °F)
Dimensions	32 x 24 x 1.4 mm (1.3 x 0.94 x 0.06 in.)
Weight	1.5 g (0.05 oz.)

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.

Additional Information

Index

12bit audio	E
A	Effects 62
Abroad, using the camcorder 148	End search
Advanced accessory shoe 55	Exposure lock/adjustment
AF-assist lamp	F
Analog line-in	Faders
Audio dubbing	File numbers
Auto (recording program) 44	Fireworks (SCN mode) 47
Auto exposure bracketing 95	Flash
Auto slow shutter	Focusing
Av (recording program) 50	Focus-priority
AV/headphones terminal 40, 41 AV-DV	Foliage (SCN mode) 47
AV-DV 111	Formatting104
В	G
Beach (SCN mode)	Grip belt
Beep	Grip beit
С	н
CAMERA mode	Headphones40
CARD CAMERA mode	High-speed continuous shooting95
Card jump	
Card mix	Image effect
CARD PLAY mode	Image effect 60 Image erase 103
Cassette	Image quality88
Condensation	Image size
Connection - Computer 129, 131	Image stabilizer
Connection - Recording from	Image transfer
a TV or VCR	Index screen
Connection - Recording to a VCR 105 Connection - TV	
Continuous shooting	Landscape (recording program) 44
G	Language
D	LCD backlight 24
Data code	LCD screen
Date and time	Lens cap
Date search	LP mode
Digital effect	
Digital zoom	М
Direct printing	Magnifying an image83
Drive mode	Maintenance
DV (IEEE1394) terminal 105, 129	Memory card
	Menu (FUNC.)

Menu (MENU)/0	Shoulder strap22
Metering method	Shutter speed 49
Microphone attenuator 78	Slide show
Microphone level	Slow Shutter (recording program) 44
Mini video light 53	Snow (SCN mode) 47
Movies (memory card) 31	SP mode
Movies (tape) 28	Speaker40
Multi-image screen 62	Special Scene (recording program) 44
MultiMediaCard	Sports (recording program) 44
My Camera	Spotlight (SCN mode) 47
my camera	Start-up image81
N	Still image
· 	Stitch Assist
ND filter	Sunset (SCN mode)
NETWORK Mode	Super Night (night mode)
Night (recording program) 44	S-video terminal
	5-video terminai45
P	
P (recording program) 48	Т
Panoramic images 97	Telephoto
PLAY (VCR) mode	Time code
Playback - Memory card 39	Time zone
Playback - Tape	Transfer order
Portrait (recording program) 44	Tripod
Power - Battery pack 16	Troubleshooting
Power - Household power source 17	Tv (recording program) 49
Power save	TV screen73
Print order	
Protect	U
110000	USB terminal
R	COD terminal
	V
Record review/record search 30	·
Recording - Memory card	Video head cleaning
Recording - Tape	Viewfinder - Dioptric adjustment 21
Recording mode	Volume40
Recording programs	
Remaining battery charge indicator 29	W
Remote sensor	White balance
RESET 136	Wide-angle
Review	Widescreen TV (16:9) 80
	Wind screen
S	Wireless controller
S1-video terminal	
Sample images 69	Z
SCN mode (recording program) 47	Zero set memory86
Screen display	
Screen messages	Zoom34
SD memory card	
-	
Self-timer	
Serial number	

Canon

CANON INC.

Canon Europa N.V.

P.O. Box 2262, 1180 EG Amstelveen, the Netherlands

Canon UK Ltd.

CCI Service Centre, Unit 130 Centennial Park, Borehamwood, Hertfordshire, WD6 3SE, England Telephone 0870-241-2161

Canon Australia Pty. Ltd.

Info-Line: 131383 www.canon.com.au

Canon New Zealand Ltd.

Customer Care: (09) 489 0470 www.canon.co.nz

Canon Singapore Pte. Ltd

1 HarbourFront Avenue, #04-01 Keppel Bay Tower, Singapore 098632

Tel: (65) 6799 8888 Fax: (65) 6799 8882

Canon Hongkong Company Ltd

19/F., The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong

Canon Latin America, Inc.

Sales & Enquiries: 703 Waterford Way Suite 400 Miami, FL 33126 USA





Printed on 100% reused paper.