

Marantz Reset Procedures

Model

Reset Procedure

CC4300

Press and hold (|<<) and (>>|) on the front panel simultaneously.

DV4300

Unplug the AC cord from the AC outlet for 5-10 seconds

DV4600

Unplug the AC cord from the AC outlet for 5-10 seconds.

DV7600

Press and hold (STOP) on the front panel until “RESET OK” is displayed on the display when pressing Power switch to turn the power on.

DV9600

Press and hold (STOP) on the front panel when pressing Power switch to turn the power on.

RC5400

Press the reset button near the battery connector inside the battery compartment of the RC5400 with a paperclip or sharp pencil.

RC9500

Press the reset button near the battery connector inside the battery compartment of the RC9500 with a paperclip or sharp pencil.

SR14EX

Turn the unit on, press and hold the CL (CLEAR) and DISPLAY OFF buttons simultaneously for 3 seconds or more.

SR18EX

Turn the unit on, press and hold the CL (CLEAR) and DISPLAY OFF buttons simultaneously for 3 seconds or more.

SR19EX

Turn the unit on, press and hold the CL (CLEAR) and DISPLAY OFF buttons simultaneously for 3 seconds or more.

SR96

Turn the unit on, press and hold the CL (CLEAR) and MEMO buttons simultaneously for 3 seconds or more.

SR670

Turn the power OFF for 3 minutes or longer, or with the power ON press the RESET button for more than 3 seconds.

SR770

Turn the unit on, press and hold the CL (CLEAR) and MEMO buttons simultaneously for 3 seconds or more.

SR780

Turn the unit on, press and hold the CL (CLEAR), MEMO and TUNING UP buttons simultaneously for 3 seconds or more.

Model

Reset Procedure

- SR880** Turn the unit on, press and hold the CL (CLEAR) and MEMO buttons simultaneously for 3 seconds or more.
- SR880mkII** Turn the unit on, press and hold the CL (CLEAR), MEMO and TUNING UP buttons simultaneously for 3 seconds or more.
- SR4001** Turn the unit on, press and hold the 7.1CH INPUT and ATT buttons simultaneously for 3 seconds or more.
- SR5001** Turn the unit on, press and hold the MULTI and ATT buttons simultaneously for 3 seconds or more.
- SR4002** Turn the unit on, press and hold the 7.1CH INPUT and ATT buttons simultaneously for 3 seconds or more.
- SR5002** Turn the unit on, press and hold the MULTI and ATT buttons simultaneously for 3 seconds or more.
- SR4021** Turn the unit on, press and hold the SLEEP and SOURCE DIRECT buttons simultaneously for 3 seconds or more.
- SR4200** Press POWER button to set the unit to standby mode, then press and hold the F/P button until the unit is turned on.
- SR4300** Turn the unit on, press and hold the CLEAR and MEMORY buttons simultaneously for 3 seconds or more.
- SR4320** Press POWER button to set the unit to standby mode, then press and hold the F/P button until the unit is turned on.
- SR4400** Turn the unit on, press and hold the CLEAR and MEMORY buttons simultaneously for 3 seconds or more.
- SR4500** Turn the unit on, press and hold the 7.1CH INPUT and ATT buttons simultaneously for 3 seconds or more.
- SR4600** Turn the unit on, press and hold the 7.1CH INPUT and ATT buttons simultaneously for 3 seconds or more.
- SR5300** Turn the unit on, press and hold the A/D and DIMMER buttons simultaneously for 3 seconds or more.
- SR5500** Turn the unit on, press and hold the MULTI and 7.1CH INPUT buttons simultaneously for 3 seconds or more.

Model

Reset Procedure

- SR5600** Turn the unit on, press and hold the MULTI and 7.1CH INPUT buttons simultaneously for 3 seconds or more.
- SR6001** Turned the unit on, press and hold the MULTI + SPEAKERS A/B buttons simultaneously for 3 seconds or more.
- SR6300** Turn the unit on, press and hold the A/D and DIMMER buttons simultaneously for 3 seconds or more.
- SR6400** Turn the unit on, press and hold the SELECT and ATT buttons simultaneously for 3seconds or more.
- SR7000** Turn the unit on, press and hold the CLEAR and DISPLAY OFF buttons simultaneously for 3 seconds or more.
- SR7001** Turn the unit on, press and hold the MULTI + SPEAKERS A/B buttons simultaneously for 3 seconds or more.
- SR8001** Turn the unit on, press and hold the MULTI + SPEAKERS A/B buttons simultaneously for 3 seconds or more.
- SR7002** Turn the unit on, press and hold the MULTI + SPEAKERS A/B buttons simultaneously for 3 seconds or more.
- SR8002** Turn the unit on, press and hold the MULTI + SPEAKERS A/B buttons simultaneously for 3 seconds or more.
- SR7300** Turn the unit on, press and hold the SELECT and ATT buttons simultaneously for 3seconds or more.
- SR7400** Turn the unit on, press and hold the SELECT and S-DIRECT buttons simultaneously for 3 seconds or more.
- SR7500** Turn the unit on, press and hold the MULTI + SPEAKERS A/B buttons simultaneously for 3 seconds or more.
- SR8500** Turn the unit on, press and hold the MULTI + SPEAKERS A/B buttons simultaneously for 3 seconds or more.
- SR8000** Turn the unit on, press and hold the CLEAR and DISPLAY OFF buttons simultaneously for 3 seconds or more.

Model

Reset Procedure

- SR7002** Turn the unit on, press and hold the MULTI + SPEAKERS A/B buttons simultaneously for 3 seconds or more.
- SR8002** Turn the unit on, press and hold the MULTI + SPEAKERS A/B buttons simultaneously for 3 seconds or more.
- SR8200** Turn the unit on, press and hold the SELECT and AUX1 buttons simultaneously for 3 seconds or more.
- SR8300** Turn the unit on, press and hold the SELECT and AUX1 buttons simultaneously for 3 seconds or more.
- SR8400** Turn the unit on, press and hold the SELECT and S-DIRECT buttons simultaneously for 3 seconds or more.
- SR9200** Turn the unit on, press and hold the SELECT and AUX1 buttons simultaneously for 3 seconds or more.
- SR9300** Turn the unit on, press and hold the SELECT and AUX1 buttons simultaneously for 3 seconds or more.
- SR9600** Turn the unit on, press and hold the MRAC and PURE DIRECT buttons simultaneously for 3 seconds or more.
- ZC4001** Turn the unit on, press and hold the MUTE and STOP buttons simultaneously for 3 seconds or more.
- ZR6001** Turn the unit on, press and hold the MULTI and 7.1CH INPUT buttons simultaneously for 3 seconds or more.