


OPERATING YOUR 10 MODE RAPID FIRE CONTROLLER

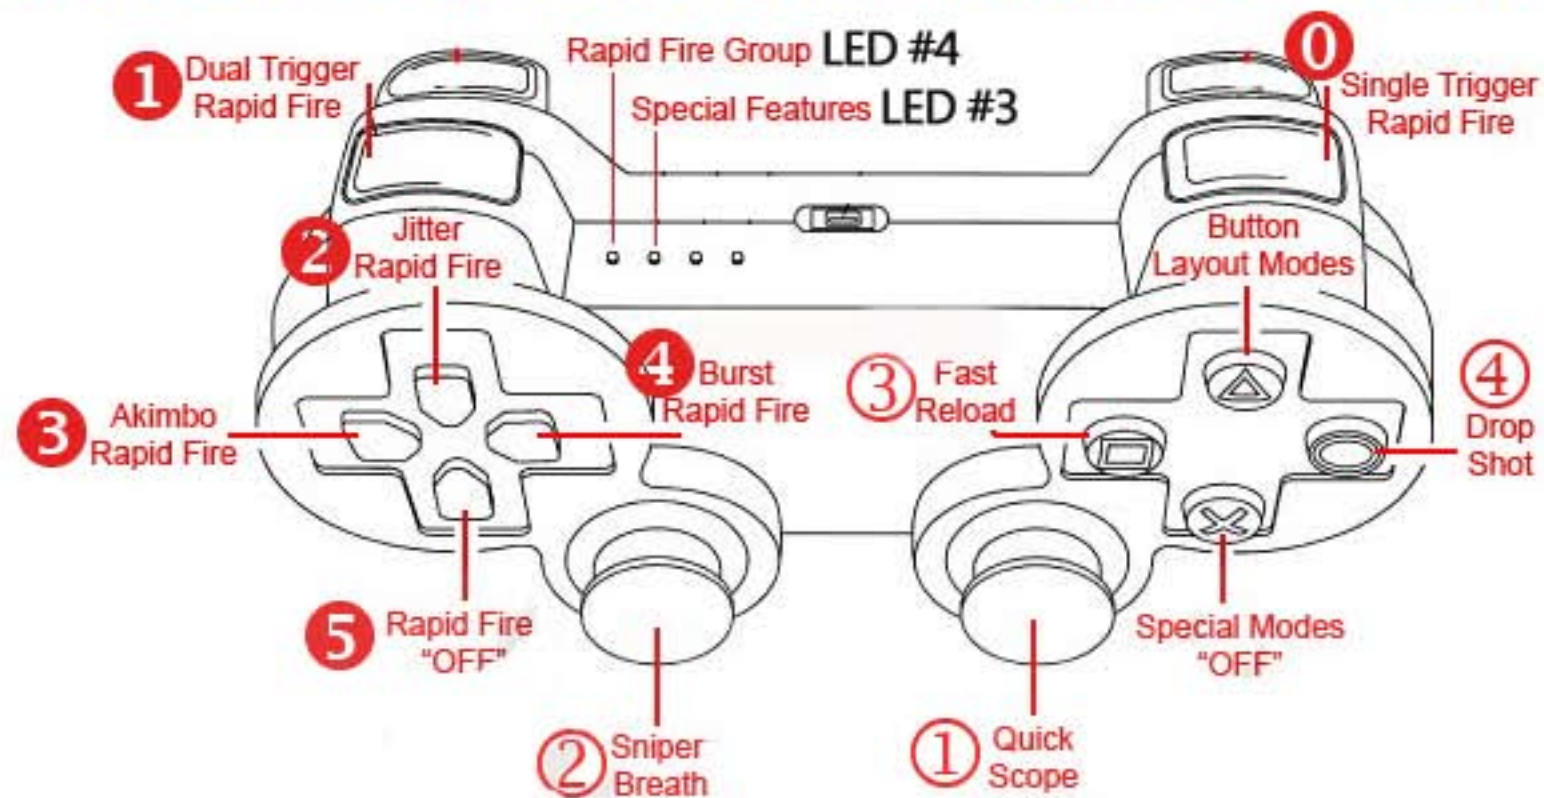

PLAYER 4 LED WILL STAY LIT

- ① **DUAL-TRIGGER RAPID FIRE** : HOLD SWITCH ON BACK SIDE AND PUSH L1
- ② **JITTER** : HOLD SWITCH ON BACK SIDE AND PUSH D-PAD UP
- ③ **AKIMBO** : HOLD SWITCH ON BACK SIDE AND PUSH D-PAD LEFT
- ④ **BURST RAPID FIRE** : HOLD SWITCH ON BACK SIDE AND PUSH D-PAD RIGHT
- ⑤ **ALL RAPID FIRE OFF** : HOLD SWITCH ON BACK SIDE AND PUSH D-PAD DOWN

PLAYER 3 LED WILL STAY LIT

- ① **QUICK SCOPE** : HOLD SWITCH ON BACK SIDE AND PUSH RIGHT THUMBSTICK
- ② **SNIPER BREATH** : HOLD SWITCH ON BACK SIDE AND PUSH LEFT THUMBSTICK
- ③ **FAST RELOAD** : HOLD SWITCH ON BACK SIDE AND PUSH RELOAD
- ④ **DROP SHOT** : HOLD SWITCH ON BACK SIDE AND PUSH CIRCLE BUTTON
- ⑤ **ALL MODES OFF** : HOLD SWITCH ON BACK SIDE AND PUSH "X" BUTTON

① **RAPID FIRE** - **HOLD SWITCH ON BACK SIDE AND PUSH R1**