

**TIPS THAT ARE INCLUDED IN THE POWERMONKEY KIT**

<b>BRAND</b>	<b>TIPS</b>	<b>COMPATIBLE</b>
<b>Acer</b>	<b>N35</b>	Acer N30/N35, Navman Pin 570, Q2, X3
		Fuji Finepix F10, Z2
<b>Apple</b>	<b>iPod</b>	iPod (3rd, 4th, 5th Gen), Mini, Nanao, Photo, Video, Shuffle, iPhone, iTouch
<b>Archos Media Player</b>	<b>DC3.5 x 1.3</b>	AV300, AV400
<b>Axim</b>	<b>PDA</b>	X30
<b>Blackberry</b>	<b>V3 Mini USB</b>	6210, 6220, 6230, 6280, 6510, 6710, 6720, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t 7130e, 7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 7730, 7750, 8100 Pearl, 8700c, 8700f, 8700g, 8703e (8800), XDAIII
<b>Blackberry</b>	<b>Micro USB</b>	Pro, Storm
<b>Blackberry headset</b>	<b>V3 Mini USB</b>	
<b>Bluetooth Headset</b>	<b>V3 Mini USB</b>	
<b>Bluetooth Headset (Moto)</b>	<b>DC2.5</b>	HB610
	<b>V66</b>	HS-850
<b>Canon</b>	<b>DC2.3</b>	Powershot A300/A310/G6
	<b>DC4.0</b>	750, V3
<b>Creative</b>	<b>Mini USB</b>	ZEN V Plus, ZEN V, ZEN Micro, ZEN MicroPhoto, ZEN Neeson, MuVo, Slim
	<b>DC4.0</b>	ZEN, ZEN Touch, ZEN Vision, ZEN Vision M, MuVo2, MuVo2 FM (ZEN PMC, ZEN Sleek)
<b>Dell</b>	<b>DC4.0</b>	Axim X3/X5
	<b>PDA</b>	Axim X30
<b>DoCoMo/Foma</b>	<b>VGS</b>	
<b>DoCoMo/Vodafone</b>	<b>TU-KA</b>	
<b>Fuji FinePix</b>	<b>N35</b>	F10, Z2
	<b>DC2.3</b>	A310
	<b>DC2.0</b>	4700
<b>Gameboy</b>	<b>DS</b>	Advanced SP
<b>Garmin</b>	<b>V3 Mini USB</b>	Forerunner 205, 203 & 301, Edge 205 & 305
	<b>DC2.5</b>	Nuvi
<b>HP IPAQ</b>	<b>PDA</b>	HW6510, HX2190, HX2790, HW6915, HW6920, HW6825, HW6945, HX6945, HX2115, HX2490, HX2495, H3970
<b>HTC</b>		Mteor, P3300, P3600, P4350, S320, TyTN
<b>iAudio</b>	<b>DC2.5</b>	X5
<b>i-mate</b>		PDA2k
<b>iRiver</b>	<b>V3 Mini USB</b>	T10, T30, PMP-100, PMC-100, H300, iGP-100, iFP-1000, iFP-900, iFP-800, iFP-700, iFP-1000, iFP-900, iFP-800, iFP-700, iFP-300, N10
<b>Kyocera</b>	<b>Micro USB</b>	E2000, Tempo
<b>LG</b>	<b>Chocolate</b>	AX275, AX8600, Chocolate, EnV, LX150, VX5400, VX8350, VX 8500, VX8600, VX8700, VX9400, VX9900, KE970, KG90, KG800, KG810, KG320, U970 (VX8500), Shine U970, CU575
	<b>VX10</b>	V111, VX1, VX2000, VX3100, VX3100A, VX4400, VX4400B, 1010, 4NE1
	<b>VX8300</b>	Migo, VX3300, VX3400, VX3450, VX4650, VX4700, VX5200, VX5300, VX6100, VX7000, VX8000, VX8100, VX8300
	<b>VX6000</b>	VX4500, VX4600, VX6000, 1200, L1200, C930, LX5450, LX5550, VI5225, GZ-One
	<b>8080</b>	1400, 1400C, 4010, 4011, 4015, 4020, 4050, 6260, 7020, 7050, 8080, 8181, A7110, B2000, B2050, B2100, LC1100, C1100, C1200, C1300, C1500, C2000, C2200, C3300, C3300, C3310, C3320, CE500, CG225, CG300, CU400 F2250, F2400, F7200, F9100, F9200, L1100, L1150, L1200, L1400, L1500, P7200, S5200, SC9288, SC9388, U300, U880, U970, U8110, U8120, U8130, U8138, U8150, U8180, U8290, U8330, U8360, U8380, U880, U890 (8080, 6260, SC9338, 7020)

**TIPS THAT ARE INCLUDED IN THE POWERMONKEY KIT**

BRAND	TIPS	COMPATIBLE
	<b>Micro USB</b>	AX300, AX830, ENV2, LX400, UX300, UX830, VX8610 Decoy
<b>Minolta</b>	<b>DC2.3</b>	Dimax F100, Pentos Optio 50
<b>Mio Digi Walker</b>	<b>V3 Mini USB</b>	168, 268, 269, 269+, 336BT, 336i, 339, 8390, 8870, A201, A701, C510E, C710, P350, P550
<b>Motorola</b>	<b>V3 Mini USB</b>	ic402, ic502, A780, E770v, E1070, L2, L6, PEBL, MOTOKRZR K1&K1m, RAZR series: V3r, V3t, V3xx, V3m, V3, V3c, V3i, V3m, V3x, Z3, MOTOSLVR L7c, V360, V360v, SLVR, V190, V195, V197, V235, V323, V323i, v325, V325i, V360, V361, V365, W315 (A1200, A70, A732, A780, C305, C363, E2, E680, E680L, Q, U6, V191, V320, Cingular L2/L6/L6g
	<b>V66</b>	388C, A630, A830, A835, A920, A1000, C331 & C332 (TDMA versions), C333 (CDMA with antenna), C341, C343, C353 (TDMA), C975, E310, E1000, MPx220, ROKR, T280i, T300p, T720, T720i, T721, T721i, T722i, T730, T731, V70, V260, V262, V265, V300, V400, V500, V505, V525, V545, V547, V550, V551, V600, V620, V635, V710, V810, V975, V1050, V60, C60i, V60c, V60P (PTT), V60s, V60t, V60g, V60x, V66, V66i, V120C, 120t, 120x, 120c, 120e, 270c, 280 V200 personal computer (A760, A840, A845, A860, A925, im1000, M300)
	<b>V998</b>	V998, V8160
	<b>DC2.5</b>	C290, i500
	<b>DC3.0</b>	C113, C113a, C115, C139, C155, C200, C300, C331 (GSM), C332 (GSM), C333 (GSM), C350 (without antenna), C336, C450, C550, T190, T191, T193, T193m, V150, T2260, T2282, T2297, V Series, V2260, V2267, V2282, V2290, V2297, V2397, V220, V220 PINK C116, C117, C118, C136, C137, C168, C193, C195, C202, C205, C257, C261, W220
	<b>Micro USB</b>	RAZR2, V8, V9, V9m, Q9, Q9h, Q Global
<b>Nintendo</b>	<b>DS</b>	Original DS, Game Boy Advanced SP
	<b>DS Lite</b>	DS Lite
<b>Nokia</b>	<b>DC2.0</b>	N70, N71, N73, N75, N76, N80, N80e, N800, N90, N91, N918GB, N92, N93, N95, E50, E51, E61, E62, E65, E90, 770, 2865i, 3155i, 3250, 5200, 5300, 5500, 6070, 6080, 6085, 6086, 6101, 6102i, 6103, 6111, 6125, 6126, 6131, 6133, 6136, 6151, 6155i, 6165i, 6233, 6265, 6265i, 6270, 6275i, 6280, 6282, 6300, 6555, 7360, 7370, 7373, N72, N75
	<b>DC3.5 x 1.1</b>	E60, E70, 1100, 1101, 1110, 1110i, 1112, 1221, 1260, 1261, 1600, 2115i, 2116i, 2125i, 2126i, 2128i, 2260, 2270, 2285, 2300, 2310, 2600, 2650, 2652, 3100, 3105, 3108, 3120, 3200, 3205, 3285, 3300, 3285, 3300, 3350, 3360, 3361, 3390, 3395, 3510, 3510i, 3520, 3530, 3560, 3570, 3585, 3585i, 3587i, 3589i, 3590, 3600, 3620, 3650, 3660, 5100, 5140, 5140i, 5210, 5510, 6010, 6015i, 6016i, 6019i, 6020, 6021, 6030, 6060 6061, 6100, 6108, 6170, 6200, 6220, 6225, 6230, 6230i, 6235i, 6236i, 6255i, 6260, 6310, 6310i, 6340, 6681, 6682, 6800, 6681, 6800, 6810, 6820, 6822, 7200, 7210, 7250, 7250i, 7260, 7270, 7280, 7360, 7380, 760 7610, 7650, 7700, 7710, 8260, 8265, 8265i, 8270, 8290, 8310, 8390, 8800, 8801, 8910i phones, 9210i, 9290, 9300, 9500 Communicators, N-Gage & n-Gage QD (6102, 6103, 6133, 6315, 2336 c&i, E62
	<b>Micro USB</b>	6500 Classic, 8600 Luna, 7900 Prism, 8800 Arte, 8800 Sapphire, Arte, N85
<b>O2</b>	<b>XDA</b>	XDA Exec, XDA Mini Pro, XDA Mini S, XDA SP, Xphone II, Xphone Iim, Cosmo, Sprint PDA PPC-6700, Vodaphone V1640/V2140/VPA, QTX Series PDA, VPA Compact, SPV C500/M500, HTC Artemis P3300, MTeoR, Excalibur s620, Hermes 100/200/300, Trinity P3600, TyTn, Dopod PDA 565/575/585/818/828/838/900, Orange SPV PDA Series
	<b>N35</b>	X3
<b>Olympus</b>	<b>DC4.0</b>	C-450 Zoom, U-10D, D-15D, D-20D, D-25D, D-30D, D-300D, D-400D, X-1, X-2, X-3, AZ-1, C-50Z, C-60Z
<b>Palm/Tungsten</b>	<b>i705</b>	i705, M120, M130, M510, Tungsten C/T/T2/Y3/W/Zire 71
	<b>DC2.5</b>	Tungsten E, Zire 72, Zire 31, Zire 7
	<b>E-2</b>	Centro, m515, m505, m500, m130, Zire 71, Tungsten T3/T2/C & W, TX Tungsten E2, T5/Lifedrive, Lifedrive, Showtime / Treo, 650, 680, 700p, 700w, 700wx, 750V

**TIPS THAT ARE INCLUDED IN THE POWERMONKEY KIT**

BRAND	TIPS	COMPATIBLE
Panasonic	V3 Mini USB	Lumix DMC-FX01
	D92	Sharp 550SH/770SH/902/903/703/GX15/17/25/30/30i, NEC:E101/A228/E313/E540/E606/E616/E616V /E808N/E808S/E808Y, MX6, MX7, SA6, SA7, VS2, VS3, VS6, VS7
	D95	D95
Pentax	DC3.0	Optio 50
Phillips	929	Savvy DB
Samsung	A110	SPH-A100/A110/A120/A200/A150, SPH: A110, A120
	A288	SCH: A210, A310, A399, A475, A505, A509, A530, A539, A563, A564, A570, A591, A592, A595, A599, A610, A650, A670, A720, A790, A795, A800, A900, C100, C120, C130, C207, C225, C417, U340, U410, U540, U620, SGH: D100, D307, D347, D357, D407, D410, D415, D417, D500, D500, C/D508, D600, SGH: E100, E105, E300, E315, E316, E317, E330N, E335, E350, E370, E400, E530, E600, E630, E635, E700, E710, E715, E730, E760, E770, E800, SGH: K258, M500/MM-5600, SCH: N181, N182, N191, N195, N288, N330, N370, N375, N626, N635, SGH: N200, N400, N500, N620, N625, N628, SGH: P107, P207, P400, P408, P510, P735, SGH: Q100, Q200, Q208, Q300, SGH: S100, S200, S208, S300, S300M, S307, S308, S500, SGH: T100, T108, T200, T208, T209, T309, T319, T400, T408, T410, T500, T609, T619, T707, T709, T719, U410, U340, U620 SGH: V100, V200, V205, V206, SCH: U340, U410, U620, X199, X209, X219, X309, X319, X359, X640, SGH: X100, X105, X4216, X427, X427M, X450, X460M X475, X480, X495, X497, X507, X600, X460, X660, SPH: A420, A580, A640, A900, M500, T100
	E900	SPH: A920, A940, A820, A880, A800, A740, A760, A660, A600, A500, A460 MM-A700, VM-A680, VGA1000, SPH-N400, SPHN-N240 SGH: A437, A717, D807, D900, T519, T509, T809, T629, D520, D800, D830, D807, E550, 727, 780, E870, E900, P300, T509, T809, V804, X820, X830, Z150, Z400, Z510, Z540 (D820, D900) SPH-M610, SCH-U420, E900, E870, U740, Z510/Z560/Z400/Z510/Z510i, Trace, T629, T809,
	A990	A630, A645, A850, A870, A930, A950, A970, A990
	Z500	Z500, Z130, Z140, Z300, E720, E810, E818, D720, E720/E810/E818, D720
	G600	SCH: U470 Juke, U700 Gleam, U900 Flipshot,Blackjack II E210/F200/F210/M300/M305/M510/M520BEAT SGH-T539/T429/T439/T639/T409/I617/T729/R500, A513/A516/A737/A747/M210, SCH-R10/R410/R610, SGH-A117/A127/A226/A517/L768/L760/G608/G600/i607/i617, Ace i325, SPH: i325, M520, Instinct m800
A31	A31, AF51, C81, EF81, EL71, S68	
Samsung Camera	DC3.5x1.1	Digimax U-CA3, V3, V4, 350SE, 230, 340, 370, 410, CYBER#, ViVi 2800
Siemens	C25	A35, A36, A40, A50, C25, C28, C35, C35i, C45, M35, M35i, M45, M50, ME45, MT50, S25, S35, S45, S45i, SL42, SL45, SL45i (X25, 3518, 6618, C2588, 3518, 3618, 3508, 3568, 6688, 2118, A45, A10, SL50, 2508
	A31	A51, A52, A53, A55, A57, A60, A62, A65, A70, A75, AL21, AL72, AL75, AL76, AX21, AX72, AX76, C55, C60, C62, C65, C70, C72, C75, CC55, CC60, CC62, CC65, CC70, CC72, CC75, CF52, CF75, CF110, CFX65, CL75, CX65, CX70, CX75, M55, M60, M65, M75, MC55, MC60, MC65, MC75, ME75, S55, S65, S75, SP55, SP65, SP75, SF65, SK65, SL55, SL65, SL75, SG75, SXG75, SX1 (A31, AF51, C81, EF-81, EL71, S68
	C55	C56, C62, A51, A56, A52, C46, M45, MN60, S56, S66, S57, S75, SL56, SX-4, 2128, SC55, AX72, AX75, CF110, CF62, CF75, CFX65, CL70, CL75, CT56, T66, CX65, CX70, CX75, ME75, SF65, K65, SL75, SP65, SXG75
	DC2.5	BenQ
Skype NetGear	V3 Mini USB	5PH101
Sanyo	Micro USB	S1, Katana LX
Sony	Clie	Clie PEG Full Series
	DV1	Cyber-shot DSC-H1/H2/H5/M2/S40/S500/S600, /T10/T30/T50/T7 /W100 /W30 /W40/W5/W50/W7/W70, DSC-F88/L1/N1/N2/P10/P100/P12/P150 /P200/P32 /P41/P43/P52/P72/P73/P8/P92/P93/S60/S90/T5/T9/V1/V3

**TIPS THAT ARE INCLUDED IN THE POWERMONKEY KIT**

BRAND	TIPS	COMPATIBLE
Sony	DV2	CCD-TR3300/TR516/TR716/TR76/TR818/TR910/TRV118/TRV128/TRV318 /TRV328/TRV36 /TRV41/TRV43, CCD-TRV46/TRV51/TRV57/TRV58 /TRV66 /TRV67/TRV68/TRV81/ TRV87/TRV88/TRV98, CD Mavica MVC-CD200/ CD250/CD300/CD350/CD400/CD500, DSC-W1/DSC-T9, CCD-TR3300/TR516/TR716 /TR76/TR818/ TR910/ TRV118/TRV128/TRV318/TRV328/TRV36/TRV41/TRV43, CCD-TRV46/TRV51/TRV57/TRV58/TRV66/ TRV67/ TRV68/TRV81/TRV87/TRV88/TRV98, CD Mavica MVC-CD200/CD250/CD300/CD350/CD400/CD500 Cyber-shot DSC-F707/717/828/R1/S70/S75/S85, DCR-TRV210/TRV340/TRV350/TRV360/TRV460/TRV510/ TRV520/TRV525 FD Mavica MVC-FD100/FD200/FD97, Handycam CCD-TR315/TR416/TR618/TR917/TR940 /TR97/TRV107/TRV108/TRV138/TRV15/TRV16/TRV17, Handycam CCD-TRV215/TRV25/TRV308/TRV315 /TRV338/TRV35/TRV37/TRV408/TRV49/TRV608/TRV615/Handycam CCD-TRV63/TRV65/TRV715/TRV75/ TRV78/TRV815/TRV85/TRV93/TRV95/TRV99, Handycam DCR-DVD100/DVD101/DVD200/DVD201 /DVD300/DVD301/ Handycam DCR-PC100/PC101/PC105/PC110/PC115/PC120BT/PC330/PC9/TR7000 Handycam DCR-VX1000/VX2000/VX2100/VX700, Handycam HDR-FX1/HC1, Mavica MVC-CD1000,Handycam DCR-TRV Series
	DV3	Sony Cybershot P9
	DV4	Handycam DCR- DVD103/DVD105/DVD203/DVD205/DVD305/DVD403/DVD405/DVD505/DVD602/ DVD605/DVD705/DVDDVD755/DVDS803/DVD92 Handycam DCR- HC1000/HC20/HC21/HC26/HC30/HC32/HC36/HC40/HC42/HC46/HC65/HC85/HC90/HC96 Handycam DCR- IP1/IP220/IP45/IP55/IP7BT/PC1000/PC109/PC350/PC55 Handycam DCR-SR100, HandycamHDR-HC3
Sony Ericsson	T28	A2218z, A2618, A2618s, A2628, A3618sM F500i, J210i, J300i, K500i, K508i, K600i, K608i, K700i, P800, P900, P910i, R300d, R300LX, R300z, R320, R320s, R380 WORLD, R380e, R380s, R520m, R600, S700i, T20e, T20s, T28 WORLD, T28z, T29, T29s, T39m, T60c, T60d, T61c, t61d, T61LX, T61z, T62u, T65, T66, T68i, T100, T105, T200, T226, T230, T290i, T300, T306, T310, T318, T600, T620, T630, V600i, V800, Z200, Z300i, Z600, Z800i, Z1010 (K300, Z500, S Series, J700i
	K750i	D750i, J100a, J100c, J100i, J110i, J120i, J220a, J220c, J230c, J220i, J230i, K200i, K220i, K310a, K310c K310i, K510a, K510c, K510i, k550i, K550im, K610i, K601i, K618i, K750c, K750i, K758c, K790a, K790i, K800i, K810i, M600i, M608c, P990i, V630i, W200a, W200i, W300c, W300i, W550i, W550c, W580i, W600, W600c, W600i, W610i, W660i, W700C, W700i, W710c, W710i, W712a, W800, W800i, W800c, W810c, W830c, W803i, W850i, W880i, W900c, W900i, W950i, W958c, Z610i, Z710c, Z710i, Z520a, Z520c, Z720i, Z525a, Z525i, Z520c, Z530i, Z550a, Z550c, Z550i, Z558c, Z558i, Z601i, Z710i, Z750i (HBH-GV435
T Mobile	V3 Mini USB	SDA-11, MDA Vario (inc co-pilot), MDA Pro, MDA Compact II, SDA, SDA Music, Dash
TomTom	DC4.0	GO, GO300, 500, 510, 700, 710, 910
Two Way Radios	DC4.0	
UT Starcom	DC2.5	Slice
VK	DC2.5	Mobile Helio 650C, Kickflip
USB	USB Standard	For general charging where electronic device is supplied with USB charging cable.
USB	USB Retractable	For charging the powermonkey from laptop computer
USB	USB for iPod	iPod Shuffle/Nano/Mini/Video