

# NOKIA 2275

A chic phone designed for everyday life.



User Guide

# Nokia 2275

## User Guide

What information is needed?	Numbers	Where is the number?
My number		Wireless service provider
Voice mail number		Wireless service provider
Wireless provider's number		Wireless service provider
Provider's customer care		Wireless service provider
Model number	Nokia 2275	See "About your phone" on page 7.
Phone type	RH-3DNG	Back of title page
Electronic serial number (ESN)		See "Phone label" on page 6.

The wireless phone described in this guide is approved for use in CDMA networks.

## LEGAL INFORMATION

Part No.9235510, Issue No. 1

Copyright ©2004 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nokia 2275, the Nokia Original Enhancements logos, Snake II, Bumper and Space Impact II are trademarks or registered trademarks of Nokia Corporation. All other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Printed in Canada 10/2004

US Patent No 5818437 and other pending patents.

T9 text input software Copyright ©1999-2003. Tegic Communications, Inc.

All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.

The information in this user guide was written for the Nokia 2275 phones. Nokia operates a policy of on-going development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

## EXPORT CONTROLS

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

## FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

# Table of contents

<b>1 For your safety</b> . . . . .	<b>1</b>	Use caller groups . . . . .	24
Quick guide . . . . .	3	Check memory status . . . . .	24
Menu shortcuts . . . . .	4	<b>6 Call log</b> . . . . .	<b>25</b>
<b>2 Welcome</b> . . . . .	<b>5</b>	Check missed, received, or dialed calls . . . . .	25
Understand wireless network services . . . . .	5	Delete recent call lists . . . . .	26
Learn about accessibility solutions . . . . .	5	Use call timers . . . . .	26
Contact Nokia . . . . .	6	Turn on a current call timer . . . . .	27
Contact your service provider . . . . .	6	Clear call timers . . . . .	27
<b>3 About your phone</b> . . . . .	<b>7</b>	<b>7 Voice mailbox</b> . . . . .	<b>28</b>
Antennas . . . . .	8	Store your voice mailbox number . . . . .	28
Battery . . . . .	8	Set greetings . . . . .	28
Switch your phone on or off . . . . .	9	Listen to your voicemail . . . . .	28
Check the Start screen . . . . .	10	View details of last voicemail . . . . .	29
Use the selection keys . . . . .	10	Clearing the voicemail icon . . . . .	29
Use the scroll keys . . . . .	10	<b>8 Text messages</b> . . . . .	<b>30</b>
Learn about the keys . . . . .	11	Write a text message . . . . .	30
Make and answer calls . . . . .	11	Use message templates . . . . .	31
View help system . . . . .	12	Learn about e-mail text messages . . . . .	32
Browse phone menus . . . . .	12	Receive text messages . . . . .	32
Phone book menu . . . . .	13	Respond to a text message . . . . .	33
<b>4 Text entry</b> . . . . .	<b>14</b>	Reply to a message . . . . .	33
Write using ABC and 123 modes . . . . .	14	Delete messages . . . . .	34
Write with predictive text . . . . .	17	Message settings . . . . .	36
Tips for predictive text . . . . .	18	Organize text messages using folders . . . . .	36
<b>5 Phone book</b> . . . . .	<b>20</b>	<b>9 Personalization</b> . . . . .	<b>37</b>
Saving contacts and numbers . . . . .	20	Learn about profiles . . . . .	37
Recall contacts and numbers . . . . .	20	Select a different profile . . . . .	37
Use phone book menus . . . . .	21	Customize a profile . . . . .	37
Edit a name or number . . . . .	21	Rename profiles . . . . .	38
Add a number to a phone book entry . . . . .	21	Set the display language . . . . .	39
Delete stored contacts and numbers . . . . .	23	Set the Date and clock . . . . .	39
Add other information to a phone book entry . . . . .	23	Learn about voice commands . . . . .	41

<b>10 Advanced features</b> . . . . .	<b>43</b>	Calendar . . . . .	61
View in-call options . . . . .	43	Calculator . . . . .	62
Use call forwarding . . . . .	43	Stopwatch . . . . .	62
Use call waiting . . . . .	45	<b>13 Games</b> . . . . .	<b>65</b>
Make a conference call . . . . .	45	<b>14 Your phone and other devices</b> . . . . .	<b>66</b>
Send own caller ID when calling . . . . .	46	PC Connectivity . . . . .	66
Use automatic redial . . . . .	46	<b>15 Reference information</b> . . . . .	<b>67</b>
Calling card . . . . .	47	Use enhancements safely . . . . .	67
Voice dialing . . . . .	48	Important safety information . . . . .	68
1-touch dialing . . . . .	50	Certification Information (SAR) . . . . .	71
Learn about Caller Groups . . . . .	51	Care and maintenance . . . . .	72
Use Touch tones . . . . .	51	Enhancements . . . . .	72
Link phone book entries . . . . .	53	Battery information . . . . .	73
Learn about Voice Recorder . . . . .	54	Chargers and other accessories . . . . .	74
<b>11 Security and System settings</b> . . . . .	<b>55</b>	Nokia Xpress-on™ colour covers . . . . .	75
Lock keypad (Keyguard) . . . . .	55	Nokia One-Year Limited Warranty . . . . .	77
Phone lock . . . . .	55	<b>Appendix A Message from the CTIA</b> . . . . .	<b>79</b>
Call restrictions . . . . .	57	<b>Index</b> . . . . .	<b>83</b>
Automatic update of service . . . . .	58		
Learn about system selection . . . . .	59		
<b>12 Organizer</b> . . . . .	<b>60</b>		
Use the alarm clock . . . . .	60		

# 1 For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.



## SWITCH OFF WHERE PROHIBITED

Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



## ROAD SAFETY COMES FIRST

Don't use a handheld phone while driving.



## INTERFERENCE

All wireless phones may get interference, which could affect performance.



## SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



## SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



## SWITCH OFF WHEN REFUELING

Don't use the phone at a refueling point. Don't use near fuel or chemicals.



## SWITCH OFF NEAR BLASTING

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



## USE SENSIBLY

Use only in the normal position. Don't touch the antenna unnecessarily.



## QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.



## ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



## WATER-RESISTANCE

Your wireless phone is not water-resistant. Keep it dry.



## BACKUP COPIES

Remember to make backup copies of all important data.



## **CONNECTING TO OTHER DEVICES**

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



## **CALLING**

Ensure the phone is switched on and in service. Fully extend the whip antenna. Enter the phone number, including the area code, then press the talk key. To end a call, press the end key. To answer a call, press the talk key.



## **EMERGENCY CALLS**

Ensure the phone is switched on and in service. Fully extend the whip antenna. Press the end key as many times as needed (for example, to exit a call, to exit a menu) to clear the display. Enter the emergency number, then press the talk key. Give your location. Do not end the call until told to do so.

## **About your device**

The wireless phone described in this guide is approved for use in CDMA 800 and CDMA 1900 networks. A number of features included in this guide are called Network Services. They are special services provided by wireless service providers. Before you can take advantage of any of these Network Services, you must subscribe to the service(s) from your home service provider and obtain instructions for their use.

## • Quick guide

<b>Make a call</b>	Enter phone number, press the <b>Send</b> key.
<b>Answer a call</b>	Press the <b>Send</b> key.
<b>Answer a call with call waiting</b>	Press the <b>Send</b> key or Answer.
<b>End a call</b>	Press the <b>End</b> key.
<b>Ignore a call</b>	Press <b>Silence</b> when your phone rings.
<b>Redial</b>	Press the <b>Send</b> key twice.
<b>Adjust call volume</b>	Press the up or down scroll key to increase or decrease volume, while in a call.
<b>Use the in-call menu</b>	While in a call, press the <b>left</b> selection key to select <b>Options</b> .
<b>Use 1-touch dialing</b>	Press and hold any key <b>2-9</b> , after assigning dialing location.
<b>Save a name and number</b>	Enter a number, press the <b>left</b> selection key to select <b>Options</b> , and select <b>Save</b> . Enter a name and press <b>OK</b> .
<b>Recall a name/number</b>	Press <b>Contacts</b> , and select <b>Search</b> . Enter first character of name.
<b>Make a new call during a call</b>	Press <b>Options</b> , scroll <b>New call</b> , press <b>Search</b> , and enter the first letter of the name to find.
<b>Check voice mail</b>	Press and hold <b>1 OR</b> dial your voice mailbox number.
<b>Send a text message</b>	Press <b>Menu 01-1-1</b> , then press <b>Select</b> . Add recipient's phone number, then press <b>OK</b> . Press <b>Options</b> and scroll to <b>Enter text</b> , then press <b>Select</b> . Enter the message text, press <b>Options</b> , and select <b>Send</b> .
<b>Send an e-mail message</b>	Press <b>Menu 01-1-1</b> , scroll to <b>Add e-mail</b> , and press <b>Select</b> . Add recipient's e-mail address, then press <b>OK</b> . Press <b>Options</b> , scroll to <b>Enter text</b> , then press <b>Select</b> . Enter the message text, press <b>Options</b> , and select <b>Send</b> .
<b>Read new message</b>	Press <b>Show</b> .
<b>Reply to a message</b>	Press <b>Options</b> , select <b>Reply</b> , then select a reply option. Write the reply, press <b>Options</b> , and select <b>Send</b> .
<b>Reply to an e-mail message</b>	Press <b>Options</b> , select <b>Reply</b> , then select a reply option. Write the reply, press <b>Options</b> , and select <b>Send</b> .
<b>Send a business card (SMS) (This feature is ONLY applicable with other Nokia devices)</b>	Recall a name from the phone book. Press <b>Details</b> , press <b>Options</b> , select <b>Send bus. card</b> , then select <b>Via text msg.</b> Enter the recipient's number or press <b>Search</b> to retrieve a number from the phone book. Press <b>OK</b> .



## • Menu shortcuts

- 1 MESSAGES**
  - Text messages..... 01-1
  - Create message..... 01-1-1
  - Inbox..... 01-1-2
  - Outbox..... 01-1-3
  - Archive..... 01-1-4
  - Templates..... 01-1-5
  - My folders..... 01-1-6
  - Delete messages..... 01-1-7
  - Message settings..... 01-1-8
  - Vicemail..... 01-2
- 2 CALL LOG**
  - Missed calls..... 2-1
  - Received calls..... 2-2
  - Dialed numbers..... 2-3
  - Delete recent call lists... 2-4
  - Call timers..... 2-5
- 3 PROFILES**
  - Normal..... 3-1
  - Silent..... 3-2
  - Meeting..... 3-3
  - Outdoor..... 3-4
  - Pager..... 3-5
- 4 SETTINGS**
  - Call settings..... 4-1
  - Phone settings..... 4-2
  - Time settings..... 4-3
  - Enhancement settings... 4-4
  - Security settings..... 4-5
  - Network services..... 4-6
  - Restore factory settings.. 4-7
- 5 PHONE DETAILS**
  - My number..... 5-1
  - SW version..... 5-2
- 6 SYSTEM**
  - Roaming options..... 6-1
  - Mode..... 6-2
- 7 GAMES**
  - Select game..... 7-1
  - Snake II..... 7-1-1
  - Space Impact II..... 7-1-2
  - Bumper..... 7-1-3
  - Settings..... 7-2
- 8 VOICE**
  - Voice tags..... 8-1
  - Voice commands..... 8-2
  - Profiles..... 8-2-1
  - Voice mailbox..... 8-2-2
  - Recorder..... 8-2-3
  - Call log..... 8-2-4
  - Voice recorder..... 8-3
- 9 ORGANIZER**
  - Alarm clock..... 9-1
  - Calendar..... 9-2
  - Calculator..... 9-3
  - Stopwatch..... 9-4
- 10 KEYGUARD**

## 2 Welcome

Congratulations on the purchase of your Nokia mobile phone. Nokia recommends that you read this chapter before you use your new phone.

### • Understand wireless network services

Your service provider's wireless network may be equipped to provide special features or functions for use with your Nokia phone. These features are called *network services*, and may include some of the following:

- Voice mail and voice privacy
- Call waiting, call forwarding, and caller ID
- Text messages
- Ability to block or send your own caller ID

### Sign up with a service provider

Before you can take advantage of your service provider's network services, you must sign up with a wireless service provider and subscribe to these services. Your service provider will make available descriptions of its services and instructions for using them.

Wireless service providers may differ from each other in certain ways. For example, some networks may not support special language-dependent characters. Contact your service provider regarding your service needs.

### • Learn about accessibility solutions

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. Nokia maintains a Web site that is dedicated to accessibility solutions. For more information about phone features, accessories, and other Nokia products designed with your needs in mind, please contact Nokia Customer Care at 1-888-226-6542.

## • Contact Nokia

When you need help, the Nokia Care Center can provide information about Nokia products.

Nokia Customer Care Center, USA	Customer Care, Canada
Nokia Mobile Phones 7725 Woodland Center Boulevard, Suite #150 Tampa, Florida 33614 Tel: 1-888-NOKIA-2U (1-888-665-4228) Fax: 1-813-249-9619 For TTY users: 1-800-24-NOKIA (1-800-246-6542)	Nokia Products Ltd. 601 Westney Rd. South Ajax, Ontario L1S 4N7 Tel: 1-905-427-1373 1-888-22-NOKIA (1-888-226-6542) Fax: 1-905-619-4360 Web site: <a href="http://www.nokia.ca">www.nokia.ca</a>

If you ever need to call Nokia Customer Care, or your wireless service provider, you will need to provide specific information from your phone's label. This information is provided on the phone label.

### Phone label

The label is inside the back cover of your phone under the battery. It contains important information about your phone, including the model and electronic serial numbers (ESN). Nokia recommends that you note this information on the title page of this guide. Please do not remove or deface the label.

## • Contact your service provider


Some service providers have preprogrammed their customer support number into the phone. Pressing and holding the 2 key (or the key that your service provider instructs you to use) for two seconds will automatically dial their customer support number. If your service provider determines that the problem is Nokia-related, the provider's representative will direct you to the Nokia Customer Care Center (USA) or Nokia Customer Care (Canada).



**Note:** This one-key feature may not be available on all systems. Contact your service provider for availability.

### 3 About your phone

This section gives you a brief introduction to your phone and provides you with quick steps for making, answering, and managing your calls.

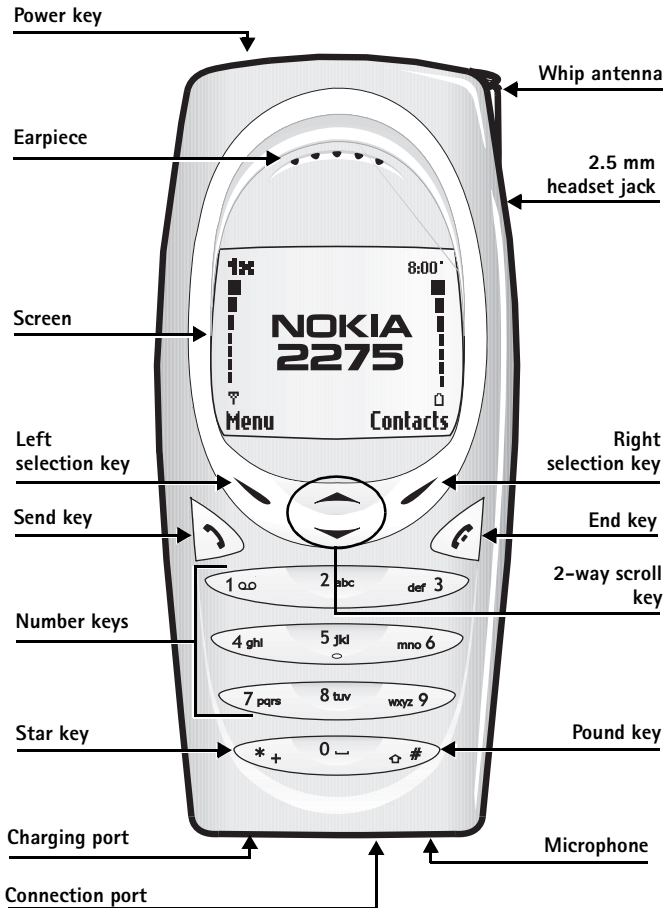


## • Antennas

Your phone has two antennas:

- Internal antenna is always active.
- Whip antenna is active when fully extended.

Do not touch either antenna unnecessarily when the phone is switched on.

Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. While in a call, hold the phone to your ear.

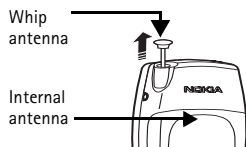

## • Battery



**Warning:** Use only the BL-5C battery in this Nokia phone.




### Install the battery

- 1 Remove the back cover.
- 2 Place the battery in the compartment with the label side facing down and the metal contacts aligned with the contact prongs. Snap the battery into place.
- 3 Replace the cover by sliding it upward until you hear a click.

### Charge the battery

- 1 Connect the charger to an ac wall outlet.
- 2 Connect the lead from the charger to the charging port located on the bottom of the phone.
- 3 Disconnect the charger from the phone and ac outlet when the indicator stops scrolling.

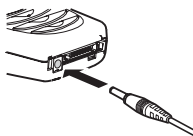

**Note:** For best performance, charge the battery for 24 hours before you use the phone. The charging time depends on the charger and battery you use. For example, the charging time for the BL-5C battery with the ACP-7U charger is approximately 4 hours.




**Important:** Do not leave the battery connected to a charger for more than 72 hours, since prolonged maintenance charging could shorten its lifetime.

## Remove the battery

You will need to remove the existing battery if you want to install a new battery or if you have purchased a spare battery. Make sure the phone has been turned off for 10 seconds.

- 1 Remove the back cover of the phone as shown in step 1 on page 8.
- 2 Place your index finger in the space at the bottom of the battery, and press toward the top of the phone.
- 3 Take out the battery.

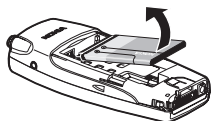

**Warning:** Use only your hands to remove the battery. Do not puncture, burn or use any objects that may damage the phone or the battery. Please recycle the battery, or dispose of properly.

## Important battery information

- Recharge your battery only with a charger approved by Nokia.
- You can switch the phone on and use it for calls while the battery is charging.
- If the battery is totally empty, it may take a few minutes for the battery indicator to appear on the screen.
- If you switch the phone on when charging is complete, the message **Battery full** is displayed momentarily.
- Charging time depends on the charger and battery used. Please see "Battery information" on page 73, for more information.
- If the battery has become completely empty, you may need to recharge it for a few minutes before you can make or receive calls.

## • Switch your phone on or off

To switch your phone on or off, press and hold the power key (located on the top of the phone) for two seconds.




**Warning:** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

## • Check the Start screen

The Start screen refers to the phone display when no calls are in progress, and there are currently no menu or phone book entries displayed.

You can easily return to the Start screen from any location (other than an active call) simply by pressing the End key.

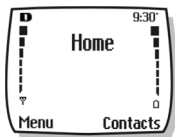

## • Use the selection keys

Note the two selection keys beneath the screen. The function of these keys is determined by the word shown above them on the screen.



For example, pressing the left selection key when the word **Menu** appears above it shows the first of many menus. Scroll through the menus using the up scroll and down scroll keys.

Likewise, pressing the right selection key when **Contacts** appears above it displays the phone book menu.



## • Use the scroll keys

Note the two scroll keys in the center of the phone, beneath the screen. The function of these keys is to scroll through the different menus and lists within the phone.



## • Learn about the keys

The following table contains a summary of how the various keys on your phone work.

Key	Description
	<b>Send:</b> Press the <b>Send</b> key to make a call to the name or number shown on the screen or to answer a call. Pressing this key when not in a call (or when not in the menu or phone book) displays a list of recently dialed numbers.
	<b>End:</b> Press the <b>End</b> key to end a call, to silence the ring from an incoming call, or to exit the phone book or menus completely.
<b>0 through 9</b>	<b>Number:</b> Use keys <b>0-9</b> to enter numbers and letters. Press and hold <b>1</b> to dial your voice mailbox.
<b>#</b>	<b># key:</b> Press the <b>#</b> key to change case of text, or to enable or disable predictive text input.
<b>*/+</b>	<b>* key:</b> Press the <b>*</b> key to enter special characters (for example, punctuation) or access special characters menu.

## • Make and answer calls

Use the following table as a quick reference for making and answering calls:

Task	Instructions
<b>Make a call</b>	<ol style="list-style-type: none"> <li>1 Fully extend the whip antenna.</li> <li>2 Enter the number using the keypad (include area code as needed). Press the <b>Send</b> key.</li> <li>3 Hold the phone as you would any other telephone, with the ear piece over your ear and the microphone near your mouth.</li> </ol>
<b>Answer a call</b>	When your phone rings, press the <b>Send</b> key.
<b>End a call</b>	Press the <b>End</b> key to terminate the active call.
<b>Reject a call</b>	Press the <b>End</b> key when you do not want to answer a call, but just want to silence the ringer.
<b>Keyguard</b>	To avoid accidental calls, press <b>Menu 10</b> . You can also press <b>Menu</b> , then press the <b>*/+</b> (within three seconds) to lock your keypad. This activates the Keyguard feature.
<b>Unlock keypad</b>	When the keypad is locked, press <b>Unlock</b> , then press <b>*/+</b> (within three seconds). This deactivates the Keyguard feature.



## • View help system


Your phone provides brief descriptions of all menu options. To view any of the help texts:

- 1 Scroll to a menu or submenu option.
- 2 Wait about 15 seconds. A short message appears, describing the option and what it does.
- 3 Use up scroll and down scroll keys as needed to scroll down through longer descriptions.

Press **Menu 4-2-5 (Settings > Phone settings > Help text activation)** to turn the phone help system on or off.

## • Browse phone menus


Your phone menu system displays choices you can make to change settings on your phone or gives you access to various phone features. Your phone has 10 menus, plus the phone book menu (**Contacts**). Each menu can contain several levels of submenus.

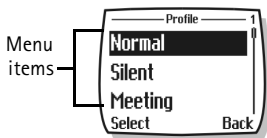

You can use menus and submenus two ways: by scrolling or by using a shortcut.

A **header line** appears at the top of your screen when in the phone book or while navigating the menus. The header line provides you with a reminder of the phone book entry or the menu or submenu with which you are working.

- 1 Header line
- 2 Menu number
- 3 Scroll bar with tab

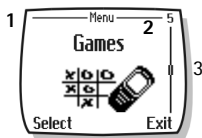

A **scroll bar** appears on the right side of the screen when you scroll through the main menu. A **tab** on the bar gives you a visual indication of your relative position in the menu structure. The **menu number** is located at the top of the scroll bar.

## Scroll through menus

- 1 At the Start screen, press **Menu**, then scroll through menus using up and down scroll keys.
- 2 Press **Options**, **Select**, or **OK**, pressing the selection key for the option you want.
- 3 Use the scroll and selection keys to navigate the submenu; press the **End** key to return to the Start screen.

## Use menu shortcuts

Menus and options are numbered so that you can jump directly to the most frequently used option. The numbers appear in the top right corner of the screen and show your location in the menu.

- 1 Press **Menu**.
- 2 Within three seconds, press **4-3-2** (**Settings > Time settings > Date**).

## • Phone book menu

From the Start screen, press **Contacts**. The following phone book options are available:

Menu	Menu
<b>Search</b>	<b>Voice tags</b>
<b>Add new</b>	Playback
<b>Edit name</b>	Change
<b>Delete</b>	Delete
One by one	<b>My number</b>
Delete all	<b>Caller groups</b>
<b>Add number</b>	Family <sup>a</sup>
<b>Settings</b>	Rename group
Scrolling view	Group ringing tone
Name list	Group logo
Name+number	Group members
Memory status	Remove contact
<b>1-touch dialing</b>	Add contact
View number	VIP
Change	Friends
Delete	Business
	Other

- a. Menu options for VIP, Friends, Business, and Other are identical to Family options.


## 4 Text entry



**Warning:** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

You can enter letters, numbers, and special characters using the phone keypad when working with the phone book, calendar or text messaging. This section provides detailed instructions for the two text entry methods, that is, traditional text entry and predictive text input.


You have four modes available for entering information, based on the type of data you are entering (phone book, organizer notes or text messages):

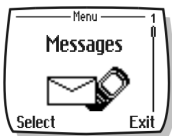

Mode	The phone shows	Use for
<b>ABC</b> ☞ABC	Sentence or title case (first letter uppercase)	Entering names, numbers or addresses in phone book
☞ABC	All uppercase letters	Entering notes in Calendar
☞abc	All lowercase letters	Writing a text message
<b>123</b> ☞123	Number entry	Entering numbers
<b>Special characters</b> ?!£	Special characters list	Entering punctuation or special characters
<b>Predictive text</b> ☞ABC	In combination with ABC mode indicators.	Writing SMS text messages or calendar notes

### • Write using ABC and 123 modes

A status indicator in the upper left corner of your screen indicates the mode you are in whenever you are entering information into your phone book, calendar, or text messaging.

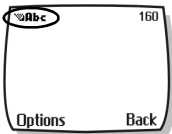

The following table contains a list of the characters displayed when entering text and numbers from your keypad:

Key	Characters	Key	Characters
1	. @ ? ! - , & : ' ↵ 1	7	P Q R S 7
2	A B C 2	8	T U V 8
3	D E F 3	9	W X Y Z 9
4	G H I 4	0	Space, 0, return
5	J K L 5	*/+	Special characters menu
6	M N O 6	#	Changes letter case or mode

Pressing a key repeatedly cycles you through all of that key options. To enter a letter, press the appropriate key repeatedly until the desired letter appears. Continue this process until the word or name is completed.



**Note:** If the next letter in the word you are entering is on the same key, wait two to three seconds for the cursor to advance, then enter the new letter, or press **0** to advance the cursor.



**Important:** Phone language settings may affect the characters associated with the phone keypad.

For example: to enter the name "Albert":

Press **2**      **A**  
 Press **5-5-5**    **l**  
 Press **2-2**      **b**  
 Press **3-3**      **e**  
 Press **7-7-7**    **r**  
 Press **8**        **t**



**Note:** Default mode is sentence case where the first letter of a name or sentence is automatically capitalized. Phone book default mode is title case—each word is capitalized.

#### OTHER OPTIONS

- **Delete mistakes**—If you make a mistake, press **Clear** to delete one character to the left. Press and hold the **Clear** key to speed up the erasing process.
- **Enter a space**—When you have completed entering a word or name, press **0** to enter a space before the next word.
- **Change letter case**—Press **#** to switch between the various text entry modes or from uppercase and lowercase letters.
- **To start a new line**—Press **0** three times.


## Enter numbers

Your phone will switch to 123 mode when entering a number into your phone book or any other purely numeric entry. When in ABC mode, you can insert numbers using any of the following:

- Press and hold the # key for two seconds to switch to 123 mode, then press the desired number keys. Press and hold # again to return to ABC mode.
- Press and hold the desired number key until the number appears on the display.
- Press the desired key repeatedly until the desired number appears.

## Enter punctuation or other characters

You can enter punctuation, special characters, and symbols while writing text messages, entering notes in the organizer or creating phone book entries.

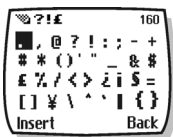

You can add punctuation or special characters by these methods:

- Press 1 repeatedly while in ABC mode to cycle through some of the most common punctuation marks and special characters.
- Press \* to activate the special characters list. A screen appears displaying the available special characters. Use the scroll keys to move through the special characters list, highlight the desired character, then press **Insert** to add the character to your message.



**Important:** Some networks may not support all language-dependent characters.

## Use special characters in phone numbers

You can enter certain special characters as a part of the phone numbers you save to the phone book. Pressing \* repeatedly cycles through the four special characters available when saving a phone number.


- \* Sends command strings to the network. Contact your service provider for more information.
- + Links a 1-touch dialing location to the number currently being entered.
- p Creates a pause that occurs when the phone dials a number. Numbers entered to the right of this special character are automatically sent as touch tones after a 2.5-second pause.
- w Causes the phone to wait for you to press **Send**.

## • Write with predictive text

Using predictive text input is a quick way to enter text, using a highly compressed database (or dictionary) of common words that tries to anticipate the word as you enter it.

Watching predictive text guess a word can be confusing, disregard the screen until all characters have been entered.

**Example:** To write "Nokia":

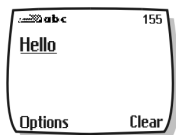


What you press	What you see
Press 6–N	O
Press 6–o	On
Press 5–k	Onl
Press 4–i	Onli
Press 2–a	Nokia

### KEYS AND TOOLS FOR PREDICTIVE TEXT

Key	Description
2 - 9	Text entry. Press each key only once per letter. Press and hold the key to enter the number.
*/+	If the underlined word is not the word you intended, press this key repeatedly until the word you want appears. Press and hold this key to display a list of punctuation and special characters.
0	Press once to accept the word and add a space. Press and hold to enter a zero.
Spell	If the word entered is not recognized, <b>Spell</b> appears above the left selection key. Press <b>Spell</b> , enter the desired word, then press <b>Save</b> .
Clear	Press once to delete the character to the left of the cursor. Press and hold to delete characters faster.
Previous	Press to scroll through previously viewed predictive text matches for a word.
#	Press and hold to enter <b>123</b> mode. Enter the desired number, then press and hold again to return to predictive text. Press to switch between sentence case, lowercase, or uppercase modes or to switch to the above modes without predictive text.
1	Press once to add a period. Press */+ repeatedly to view other punctuation marks. Press once to add a punctuation mark that predictive text converts to an apostrophe. Press and hold to enter the numeral 1.

## Turn on predictive text input

You can turn on predictive text input from the **Options** menu while writing a text message. Once enabled, predictive text is available to all features that support it.

 in upper left corner of the screen indicates predictive text is active.

### ENABLE PREDICTIVE TEXT (QUICK METHOD)

While creating a new text message or calendar note, press and hold the **Options** key for two seconds. The message **T9 prediction on** displays and the English language dictionary is enabled (or the most recently selected dictionary).

### ENABLE PREDICTIVE TEXT (AND SELECT DICTIONARY)

While creating a new text message:

- 1 Press **Options**, scroll to **Predictive text**, and press **Select**.
- 2 Scroll to the dictionary you want (for example, **English**), then press **Select**.

The message **T9 prediction on** is displayed. The dictionary in the selected language is enabled.

## Turn off predictive text input

While creating a new text message, press and hold the **Options** key for two seconds. OR

- 1 Press **Options**, scroll to **Predictive text**, and press **Select**.
- 2 Scroll to **Prediction off**, then press **Select**.

## • Tips for predictive text

### Check a word

When you have finished writing a word, and the word is correct as shown:

- Press **0** to confirm the word and enter a space, and continue by writing the next word. OR
- Insert a punctuation mark, then press **0** for a new sentence.

If the displayed word is not correct:

- Press **\*/+** repeatedly until the word you want appears.
- Press **0** to confirm your choice and continue. OR
- Press **Options**, scroll to **Matches**, then press **Select**. Scroll to the correct word and press **Use**.
- Press **0** to confirm the word and enter a space.

### ADD A WORD TO THE DICTIONARY

When your word is not in the dictionary, the left selection key becomes **Spell**.

- 1 Select **Spell** and enter the word using standard text entry.
- 2 Press **Save** to insert the correct word and save it to the dictionary.

### **INSERT NUMBERS AND SYMBOLS**

The procedure for entering numbers with predictive text and standard text entry is the same. Please see "Enter numbers" on page 16.

The procedure for entering symbols with predictive text and standard text entry is the same. Please see "Enter punctuation or other characters" on page 16.

### **WRITE COMPOUND WORDS**

- 1 Write the first part of the compound word, then press the down scroll key to accept that part.
- 2 Write the last part of the compound word.
- 3 Press 0 to enter the word.



## 5 Phone book



**Warning:** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

You can save up to 250 entries (contacts and associated numbers) in your phone book. Phone memory can store multiple numbers for each name (home, business, mobile, etc.), as well as text information (postal address, e-mail address, or note).



**Note:** The amount of detail stored for each entry may affect the total number of entries available.



### • Saving contacts and numbers

There are several ways to save contacts and numbers in your phone book. Instructions for the two most common ways are as follows:

#### SAVE A NUMBER AND NAME (USING PHONE BOOK MENU)

- 1 Press **Contacts**.
- 2 Scroll to **Add new** and press **Select**.
- 3 Enter the name and press **OK**.
- 4 Enter the area code (as necessary) and phone number, then press **OK**.

#### SAVE A NUMBER AND NAME (QUICK SAVE)

- 1 Enter the phone number using the keypad.
- 2 Press the left selection key twice (**Options > Save**).
- 3 Enter a name and press **OK**.
- 4 Press **Done** to return to the Start screen.



**Tip:** Press and hold the **Options** selection key for two seconds after entering the number to store the number only.

### • Recall contacts and numbers

There are several ways to recall phone book entries. Once you locate the desired name and number from the phone book, you can perform any of the following tasks: call the number, edit or add information to the selected phone book entry, or delete the entry.

- Press the down scroll key to display the list of phone book entries.
- Press **Contacts**, select **Search**, enter the first few letters of the entry,



**Tip:** When viewing the list of contacts, enter the first few letters of the desired entry. The phone book automatically jumps to that section of the phone book.

## • Use phone book menus

The phone book has several menu options from which you can choose. These options appear when you press **Contacts**. Use the scroll keys to scroll to the option you want.

Option	Description of function
<b>Search</b>	Allows you to search for a specific phone book entry
<b>Add new</b>	Allows you to add a new contact to your phone book
<b>Edit name</b>	Allows you to edit the name of a phone book entry
<b>Delete</b>	Allows you to delete phone book entries one by one or all at once
<b>Add number</b>	Allows you to add a phone number to an existing contact
<b>Settings</b>	Displays a list of phone book options, including phone book memory status and scrolling view.
<b>1-touch dialing</b>	Allows you to assign phone book entries to any of the 8 speed dialing locations.
<b>Voice tags</b>	Allows you to create and manage voice tags for voice dialing
<b>My number</b>	Displays your phone number(s)
<b>Caller groups</b>	Allows you to organize phone book entries into groups and categories and assign special ringing tones and graphics to the group.

## • Edit a name or number

You can edit a phone book entry at any time.

- 1 Locate the phone book entry you wish to edit.
- 2 Press **Details**, then press **Options**.
- 3 Scroll to **Edit name** or **Edit number** and press **Select**.
- 4 Edit the name or number, then press **OK**.

## • Add a number to a phone book entry

There are several ways to add additional numbers to an existing phone book entry. Phone memory can store up to five numbers per entry.

Once you choose to add a number, you can assign one of the following number types for the additional numbers: **General**, **Mobile**, **Home**, **Work**, or **Fax**.

## From the phone book

- 1 Press **Contacts**, scroll to **Add number**, then press **Select**.
- 2 Scroll to the entry you wish to modify, then press **Add**.
- 3 Scroll to the type of number you are adding (**General**, **Mobile**, **Home**, **Work**, or **Fax**), then press **Select**.
- 4 Enter the number and press **OK**.

## From the Start screen

- 1 Enter the phone number using the keypad, then press **Options**.
- 2 Scroll to **Add to contact**, then press **Select**.
- 3 Scroll to the desired phone book entry, then press **Add**.
- 4 Scroll to the desired number type and press **Select**.

## By recalling the name

- 1 Locate the phone book entry you wish to edit.
- 2 Press **Details**, then press **Options**.
- 3 Scroll to **Add number**, then press **Select**.
- 4 Scroll to the desired number type and press **Select**.
- 5 Enter the number and press **OK**.

## Change the number type

Every time you create a new phone book entry, your phone automatically assigns the **General** number type to the new number. You can use a phone book entry **Options** menu to change the number type for any of the phone numbers. For example, change a number type from **Work** to **Home**.

- 1 Recall the name from the phone book.
- 2 Press **Details**, then scroll to highlight the number you want to modify.
- 3 Press **Options**, scroll to **Change type**, then press **Select**.
- 4 Scroll to the number type you want, then press **Select**.



**Important:** If you plan on using Nokia PC Suite to synchronize your phone book and your PC PIM (Personal Information Manager) application, make sure all phone numbers are assigned the correct number type. PC Sync uses this information to synchronize contacts correctly between phone and PC.

## Learn about primary number

If a phone book entry contains multiple numbers, the number entered when the phone book entry was created is designated as the **primary number**. When you highlight a phone book entry and press the **Send** key, your phone dials the primary number.

Consider designating the number you dial most often (for phone book entries containing multiple numbers per name) as the primary number.

**CHANGE PRIMARY NUMBER**

Any phone number can be designated the primary number.

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, then scroll to the number you want to set as the primary number.
- 3 Press **Options**, scroll to **As primary no.**, then press **Select**.

## • Delete stored contacts and numbers

You can delete a number from a phone book entry, delete all details of a contact, or delete the entire contents of your phone book. Once you delete information, it cannot be recovered.

**DELETE A NUMBER**

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, then scroll to the number you want to delete.
- 3 Press **Options**, scroll to **Delete number**, press **Select**, then **OK**.

**DELETE ENTIRE PHONE BOOK ENTRY**

- 1 Highlight the phone book entry you want to delete, then press **Details**.
- 2 Press **Options**, scroll to **Delete**, then press **Select**.
- 3 Press **OK** to delete the phone book entry (including all details).

**DELETE THE ENTIRE PHONE BOOK**

- 1 Press **Contacts**, scroll to **Delete**, then press **Select**.
- 2 Scroll to **Delete all** and press **Select**.
- 3 When you see the message **Are you sure?**, press **OK**.
- 4 Enter your lock code, then press **OK**.

For more information on the lock code, see "Learn about the lock code" on page 56.

## • Add other information to a phone book entry

Once you have created a contact, you can add an e-mail address, a mailing address, or a note to that contact.



**Note:** Text information can only be added to existing contacts. For example, you cannot create a new contact with only an e-mail address.

- 1 Recall the phone book entry you want to modify.
- 2 Press **Details**, then press **Options**.
- 3 Scroll to **Add detail**, then press **Select**.
- 4 Scroll to the type of information you would like to add (**E-mail**, **Street addr.**, etc.), then press **Select**.
- 5 Enter the information, then press **OK**. Press the **End** key to return to the Start screen.

## • Use caller groups

Your phone allows you to group phone book entries with similar attributes into **caller groups**. The five default caller groups are **Family**, **VIP**, **Friends**, **Business**, and **Other**. Each group has attributes which can be defined by the user: *Rename group*, *Group ringing tone*, *Group logo*, and *Group members*.

### Assign phone number to a caller group

- 1 Recall the desired phone book entry, then press **Details**.
- 2 Scroll to the desired phone number, then press **Options**.
- 3 Scroll to **Caller groups**, then press **Select**.
- 4 Scroll to the desired caller group (for example, **Family**), then press **Select**.

### Edit caller group options

You can edit various aspects of a caller group.

#### SETTING A RINGING TONE AND GRAPHIC FOR A CALLER GROUP

- 1 Press **Contacts**.
- 2 Scroll to **Caller groups** and press **Select**.
- 3 Scroll to one of the **Caller groups** and press **Select**.
- 4 Scroll to one of the following functions and press **Select**.
  - **Rename group**—Enter the new name for the caller group and press **OK**.
  - **Group ringing tone**—Scroll to the desired tone and press **OK**. **Default** is the tone selected for the currently selected profile.
  - **Group logo**—Choose to turn the group logo on or off for the selected caller group.
  - **Group members**—Press **Select** to view group members. To add or remove a member, press **Options**, then select **Add contact** or **Remove contact**.

## • Check memory status

You can check the percentage of phone memory that is dedicated to the phone book, that is in use, and the percentage that remains available.

- 1 Press **Contacts**.
- 2 Scroll to **Settings**, then press **Select**.
- 3 Scroll to **Memory status** and press **Select**.

## 6 Call log



**Warning:** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.


Your phone keeps a log (record) of call-related information including phone numbers and call times.

Before your phone can log missed or received calls properly:

- 1 You must have a subscription to caller ID service.
- 2 Your phone must be turned on and in a digital service area.
- 3 The caller must not have caller ID blocked.
- 4 Your phone time and date must be set.



**Note:** If the incoming call has caller ID blocked, the number cannot be recorded in the call log. If you try to view the call log, the message **No number** is displayed.

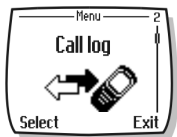

### • Check missed, received, or dialed calls

Your phone records information about the 20 most recently missed, received, and dialed calls. To view call log entries:

- 1 Press **Menu 2 (Call log)**, press **Select**, then scroll to the desired call type (**Missed calls**, **Received calls**, or **Dialed numbers**), then press **Select**.
- 2 Use the up and down scroll keys to scroll to the desired call log entry type then press **Options**.



**Note:** If the phone number recorded by the call log matches a number stored in your phone book, the name of the phone book entry is displayed.

### View call log options

The table below contains a list of options available for all call log entries.

Option	Description
<b>Call time</b>	Shows the time when the call was missed, received or placed
<b>Send message</b>	Allows you to write and send a text message to numbers listed in the call log
<b>View number</b>	Displays the phone number when call log entry matches a number found in your phone book
<b>Use number</b>	Allows you to edit the number shown on the screen
<b>Save</b>	Saves the number in your phone book

Option	Description
<b>Add to contact</b>	Adds the number to an existing phone book entry
<b>Delete</b>	Removes the number from the call log
<b>Call</b>	Redials the displayed number

### MISSED CALLS

When you miss calls, the messages **Missed calls**, appears on your phone screen along with the number of calls missed.



**Important:** You are notified of missed calls only if your phone was turned on and you are in a digital service area.



**Note:** If you chose the **Forward if not answered** option in **Call Forwarding**, your phone handles these forwarded calls as missed calls.

### DIALED NUMBERS

You can view the list of dialed calls without having to access the **Call log** menu. From the Start screen:

- 1 Press the **Send** key. The most recently dialed call is displayed.
- 2 Use the up or down scroll keys to view the other call log entries.
- 3 Press the **Send** key again to redial the number displayed, or press **Options** to work with the selected call log entry.

## • Delete recent call lists

Your phone **Call log** uses **call lists** to store numbers of incoming, outgoing, and missed calls. Use the **Delete recent call lists** menu to delete the log of phone numbers dialed, received, or missed. The **All** option clears all numbers in all lists, whereas the other options clear only the numbers associated with that list.



**Caution!** This operation cannot be undone. Clearing the **Dialed numbers** call list clears the list of dialed calls accessed by pressing the **Send** key.

- 1 Press **Menu 2-4 (Call log > Delete recent call lists)**.
- 2 Use the up or down scroll keys to highlight the desired option: **All**, **Missed**, **Received** or **Dialed**.
- 3 Press **Select** to confirm your selection.

## • Use call timers

Your phone uses **call timers** to track the amount of time you spend on each call. You can review phone use by checking the call timers.



**Important:** The actual time invoiced for calls by your service provider may vary, depending upon network features, billing, round-off, and so forth.

**ACCESS THE VARIOUS CALL TIMERS:**

- 1 Press **Menu 2-5 (Call log > Call timers)**.
- 2 Use the up or down scroll keys to scroll through the following options:

Option	Description
<b>Duration of last call</b>	Displays elapsed time of the last call you made
<b>Duration of dialed calls</b>	Displays total time for all outgoing calls
<b>Duration of received calls</b>	Displays total time for all incoming calls
<b>Duration of all calls</b>	Displays sum total for all incoming and outgoing calls
<b>Life timer</b>	Shows the time used for all calls for the life of the phone. This option cannot be reset.
<b>Clear timers</b>	Clears (deletes) all call timers except <b>Life timer</b>

## • Turn on a current call timer

Your phone can display a call timer showing elapsed time of the current call. When the call is completed, the timer displays the call length.

- 1 Press **Menu 2-5-1-1 (Call log > Call timers > Duration of last call > Show call time on display)**.
- 2 Press **Select**, then scroll to **On** and press **OK**.



**Tip:** After a call has ended, press any key on your phone to clear the current call time from the screen.

## • Clear call timers



**Caution!** This action cannot be undone.



**Tip:** If using call timers to log the amount of time spent on calls, you may want to record the information from the call timers before you clear them.

- 1 Press **Menu 2-5-6 (Call log > Call timers > Clear timers)**.
- 2 The Lock code field appears.
- 3 Enter your lock code and press **OK**.




## 7 Voice mailbox



**Warning:** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Voice mail is a feature that enables those who call you to leave a voice message in the event you are unable to answer your phone. When using your phone in conjunction with your service provider's voice mail system, you can retrieve your messages at any time.

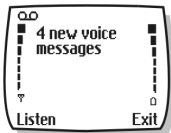

**Note:** Voice mailbox is a network dependent feature. Check with your local service provider to subscribe to and use this feature.

### • Store your voice mailbox number

Before you can retrieve voice messages, store your voice mailbox number in your phone:

- 1 Press **Menu 01-2-3 (Messages > Voicemail > Voice mailbox number)**.
- 2 Enter your voice mailbox phone number, then press **OK**.

Your voice mailbox number can be up to 32 digits long.



**Note:** If your phone number changes, you may need to re-enter your voice mailbox number.



**Tip:** You can store your voice mailbox password and/or PIN number as a part of your voice mailbox number. For more information, see "Save touch tones as a phone book entry" on page 52.

### • Set greetings

Voice greetings may vary in different wireless systems. If you need information about how to record your greeting, contact your service provider.

### • Listen to your voicemail



**Note:** These are various ways to retrieve your voice messages, depending on your service provider. Call your service provider if you have any questions.

#### LISTEN TO MESSAGES WHEN NOTIFIED

If your phone plays an alert tone and **New voice message** is displayed, press **Listen** and follow the prompts. If you want to listen to your messages later, press **Exit**.

### **LISTEN TO MESSAGES LATER**

From the Start screen, press and hold **1** for two seconds.

OR

Press **Menu 01-2-1 (Messages > Voicemail > Listen to voice messages)**.

**Calling voice mailbox** appears on the screen. Follow the audio prompts from the voice mail system to review your messages.

## • **View details of last voicemail**

Allows you to view information on your last received voice mail. Press **Menu 01-2-2 (Messages > Voicemail > View details of last voice mail)**.

## • **Clearing the voicemail icon**


In most networks, the voice message icon will automatically be cleared a few seconds after listening to your last new message. If the network in which you are currently using your phone does not automatically clear the voice message icon, you can manually clear the icon. To clear the icon, press **Menu 01-2-4 (Messages > Voicemail > Clear voice mail icon)**, then press **OK**.

## 8 Text messages



**Warning:** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

You can use the **Messages** menu (**Menu 1**) and Short Message Service (SMS) to read, write, and send text messages to another phone in your network.

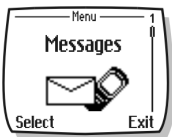

**Important:** When sending SMS messages, your phone may display **Message Sent** (where service is available). This is an indication that the message has been sent by your phone to the SMS network. This is not an indication that the message has been received at the intended destination. For more details about SMS services, check with your service provider.



**Note:** This function can be used only if it is supported by your network operator or service provider. Only devices that offer compatible e-mail features can receive and display messages. It may require a separate subscription.

### • Write a text message

You can use the **Messages** menu to create and send text messages to another mobile phone in your network, to another mobile phone in another network, or to an e-mail recipient. You can also save a draft of your message in the **Outbox** folder for later use.

### Create and send a text message



**Important:** Use this method when sending a message to recipients in the same wireless network. If the recipient has a different service provider, you may need to send the message as an e-mail (see "Create and send an e-mail message" on page 32).

- 1 From the Start screen, press **Menu**, then press **Select**.
- 2 Select **Text messages**, then select **Create message**.
- 3 Select **Add number**.
- 4 Enter the phone number of the recipient, then press **OK**. Or, press **Search**, highlight the desired number stored in your phone book, then press **Select**.
- 5 Press **Options**, scroll to **Enter text**, then press **Select**.
- 6 Enter your message.



**Tip:** Since the network limits the number of characters in a message, a character counter appears in the upper right-hand corner of your phone display. This phone supports 160 character SMS messages.

- 7 To send the message, press **Options**, then select **Send**.

## OTHER OPTIONS

You may use the following as a shortcut for sending a new text message:

- 1 Enter the recipient's phone number, then press **Options**.
- 2 Scroll to **Send message**, then press **Select**. Continue the creation process as described.

## View message options

The table below lists several options available while creating a text message. To view these options, press **Options** at the text entry screen.

Description	
<b>Send</b>	Sends the current text message to the recipients
<b>List recipients</b>	Adds or removes recipients to the message
<b>Settings</b>	Marks a message as urgent, or to specify a callback number
<b>Save message</b>	Saves the current message to the desired folder
<b>Clear text</b>	Clears the screen of all text and characters
<b>Exit editor</b>	Returns to the Messages menu
<b>Insert contact</b>	Inserts a phone book entry into the text message
<b>Insert number</b>	Inserts a phone book number into the text message
<b>Use template</b>	Adds text from a template to the current message
<b>Predictive text</b>	Enables or disables predictive text entry. Also used to select language of dictionary used.

## • Use message templates

Templates are short, prewritten messages which can be recalled and inserted into new text messages when you are short on time.

- 1 Create a new text message as described in steps 1-5 in the section, "Create and send a text message" on page 30.
- 2 Instead of entering your own message, press **Options**, scroll to **Use template**, then press **Select**.
- 3 Scroll to one of the available templates.
- 4 Press **Select** to enter the text into your new message.
- 5 Complete the process to send your message.

## • Learn about e-mail text messages

You can also use the Messages menu to write and send text messages to a person's Internet or corporate e-mail account or to phones in other networks.

### Create and send an e-mail message

Use the same procedure for creating and sending e-mail messages as found in the section, "Write a text message" on page 30. However, select **Add e-mail**, then enter the e-mail address (or press **Search** and recall an e-mail address stored in your phone book).

### Messages to phones in other networks

Most service providers now have the ability to route e-mail messages to your phone (appearing as text messages). The following are just a few examples of how your phone e-mail address may appear:

2135551234@myserviceprovider.com  
username@serviceprovider.com  
2135551234@mobile.myserviceprovider.com

It can be difficult to send messages to phones outside your service provider's network using traditional text messaging. However, it is possible to send a text message as an e-mail to phones outside your service provider's network (provided the recipient's phone is capable of receiving e-mail text messages).

Follow the instructions, "Write a text message" on page 30 but select **Add e-mail**. Enter the e-mail address associated with the recipient's phone number (or press **Search** and recall the e-mail address stored in your phone book).



**Important:** This feature may require subscription to special services. Please check with your service provider for more information and for the e-mail address assigned to your phone.

## • Receive text messages



When you receive a text message, the  indicator and the text: **(#) Message(s) received** appears on the screen (where # is the number of new messages received).

- 1 Press **Show** to read the message or **Exit** to view it later.
- 2 While reading the message, press **Options** to view the list of message options, then press **Select** to choose the desired option.

### READ MESSAGES LATER

- 1 Press **Menu**, select the **Messages** menu, then **Text messages**.
- 2 Scroll to **Inbox**, then press **Select**.
- 3 Scroll to the desired message, then press **Select** to read the message.



**Note:** The  icon in front of the message header indicates the message has not been read.  in front of the message header indicates you have already viewed the message.

## • Respond to a text message

You have several options when reading a text message. Pressing **Options** displays the following list of choices:

Option	Description
Delete	Deletes the current message.
Reply	Replies to the current message.
Use number	Captures phone number in the message (or from the message sender) with the option to <b>Save</b> (as new phone book entry), <b>Add to contact</b> , <b>Send message</b> , or <b>Call</b> .
Save	Saves current message to another folder.
Forward	Forwards current message to another user.
Rename	Renames existing message title as seen in the message list.
Save address	Captures an e-mail address in the message (or the sender of an e-mail text message).



**Note:** Some of these options may not be visible.

## • Reply to a message

You can reply to a text message either by a traditional text message or by an e-mail message. The origin of the message or the sender's wireless network affects how you reply to the incoming message.

### Reply using SMS

- 1 While viewing a message, press **Options**.
- 2 Scroll to **Reply** and press **Select**.
- 3 Scroll to one of the following reply types and press **Select**:
  - **Empty screen**—gives you an empty text buffer
  - **Original text**—includes original message in the reply message
  - **Template**—allows you to select a template from the **Templates** folder
  - **Standard answer templates** (including: **See you in**, **See you at**, **Sorry**, **I can't help you on this.**, **I will be arriving at**, **Please call**, **I'm at home**, **I'm at work**, **I'm in a meeting**.)

4 After you write your reply, press **Options**, then select **Send**.

A copy of all sent messages (up to the memory limit) remain in your **Outbox**, unless you turn this feature off in **Message settings**.

Press **Back** to return to the Messages menu, or press the **End** key to return to the Start screen.

## Reply to an e-mail message

Use the methods described above for replying to SMS messages sent from an e-mail address.



**Note:** If the incoming e-mail message is improperly formatted, you may be required to re-enter the e-mail address.

- 1 Press **Options**, then select **Save address** to re-enter the e-mail address.
- 2 Press **Options** and select **Send e-mail**.
- 3 Compose your text message, press **Options**, and select **Send**.

## • Delete messages

You have several options for erasing individual messages or erasing the contents of an entire folder. You may need to delete older or unwanted messages in order to free up phone memory for new messages.

### Learn about delete options

The **Messages** menu has an option that allows you to delete the entire contents of your folders as described below.

- **All**—deletes all messages from all folders (unread messages remain intact)
- **All read**—deletes all read messages from all folders (unread messages remain intact).
- **All unread**—deletes all unread messages from all folders.
- **Inbox**—deletes read messages in this folder (unread messages remain intact).
- **Outbox**—deletes all messages in this folder.
- **Archive**—deletes all messages in this folder, plus user-defined folders.

### Erasing messages in the message folders

- 1 At the Start screen, press **Menu 01-1-7 (Messages > Text messages > Delete messages)**.
- 2 Highlight the folder whose contents you want deleted and press **OK**.
- 3 Enter your security code (if prompted) and press **OK**.

## Erase individual text messages

- 1 From the **Inbox**, **Outbox**, or **Archive** folder, **Archive**, or from a user-defined folder, highlight the message you wish to delete.
- 2 Press **Options**, scroll to **Delete**, and press **Select**.
- 3 Press **OK** to confirm your choice.

## Forward a message

You can forward any incoming text messages, whether they were sent as traditional text messages or as e-mail messages. You can forward a message to a single user or to a list of users.

- 1 While viewing a message, press **Options**.
- 2 Scroll to **Forward** and press **Select**.
- 3 Press **Options** and select **Send**.
- 4 Select **Add e-mail** or **Add number**, then address the message.  
For multiple recipients, press **Options** again, then add additional e-mail addresses or phone numbers.
- 5 Press **Options**, scroll to **Send**, then press **OK**.

If you want to edit the forwarded message, select **Edit text** from the options menu prior to sending the message.

## View message settings

You can assign several settings to the text messages (new messages, replies, or forwarded messages). The following settings are available from the message **Options** menu:

- **Urgent** sends the message marked *urgent* and appears in recipient's **Inbox** with higher priority than other messages.
- **Callback no.** includes your number (or a number that you enter or recall from the phone book) in the body of the message.

### ASSIGN MESSAGE OPTIONS

- 1 After entering text, press **Options**. Scroll to **Settings** and press **Select**.
- 2 Scroll to the desired setting, then press **Mark**.
- 3 Press **Done**, then press **Yes** to save changes to your message.
- 4 Scroll to **Send**, then press **Select** (or select a different menu option).


## Learn about message memory

Messages are stored in the following locations:

- **Inbox**—stores new messages and read messages.
- **Outbox**—saves copies of all sent messages or messages waiting to be sent (in the event the network is temporarily unavailable).



- **Archive**—used to file read messages and sent messages for long term storage.
- **My folders**—used to create and organize your own folders for message storage

A blinking  icon indicates the text message memory is full. Before you can receive, save, or send any new messages, you must delete older messages from your **Inbox**, **Outbox**, or the **Archive** folder.

## • Message settings

Specify several settings that affect the overall way your phone handles text messaging. Use **Menu 01-1-8 (Messages > Text messages > Message settings)** to configure the following:

- **Sending options**—used to specify normal or urgent priority, request delivery note, or specify that a callback number be sent automatically.
- **Other settings**—used to specify the font size in which messages will be displayed. Also used to configure how your phone automatically handles incoming messages when your **Inbox** or **Outbox** are full, and saves copies of sent messages automatically.

## • Organize text messages using folders

You have several options for storing and organizing your text messages. The following pages explain further about the various folder options.

- **Inbox**—Text messages you receive remain stored in your **Inbox** until you delete them or move them to the **Archive** folder, or to a custom folder that you create, or move them to the **Archive** folder.
- **Outbox**—Messages that cannot be sent immediately can be saved so you can come back to it later. Your phone stores the message in **Outbox**.

If you try to send a text message and the network is unavailable, the outgoing message will be saved in **Outbox**.

### WORK WITH MESSAGES SAVED IN OUTBOX

- 1 From the **Text messages** menu, scroll to **Outbox**, and press **Select**.
- 2 Scroll to the desired message, then press **Select**.
- 3 Press **Options**, then press **Resend** or **Enter text** to edit the message.

## 9 Personalization




**Warning:** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

### • Learn about profiles

A **profile** refers to a group of settings you can use to customize the way your phone works. You can use the existing profiles or you can customize a profile to suit your own preferences. Some of the items you can customize are:

- Ringing options and vibrating alert
- Ringing tones and ringing volume
- Keypad and message alert tones
- Warning tones

Your phone comes with five profiles: **Normal** (default setting), **Silent**, **Meeting**, **Outdoor**, and **Pager**.

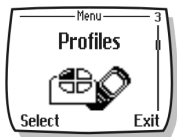

### • Select a different profile

#### QUICK METHOD


- 1 Press the power key briefly.
- 2 Use the up and down scroll key to scroll to the profile you want to use.
- 3 Press **Select** to select a profile.

#### USE PROFILES MENU

- 1 Press **Menu 3 (Profiles)**.
- 2 Scroll to the profile you want to use, then press **Select**.
- 3 Press **Select** again to choose the highlighted profile.

### • Customize a profile

- 1 Press **Menu 3 (Profiles)**.
- 2 Scroll to the profile you want to customize, then press **Select**.
- 3 Scroll to **Customize**, then press **Select**.

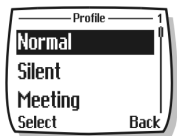

The following sections describe each of the options you can customize.

## Set ringing options

You can choose the way your phone rings to notify you of incoming calls. This setting does not affect text message alert tones.

- 1 From a profile's **Customize** menu, scroll to **Ringing options**, then press **Select**.
- 2 Scroll to one of the ringing options described below, then press **Select**.

Option	Description
<b>Ring</b>	The phone rings normally.
<b>Ascending</b>	Ringing volume begins softly, then increases in volume if the phone is not answered.
<b>Ring once</b>	The phone rings once to indicate an incoming call.
<b>Beep once</b>	The phone beeps once to indicate an incoming call.
<b>Silent</b>	The phone makes no sound.



**Important:** The **Silent** or **Beep once** ringing option disables any melody you may choose. To hear a ringing tone while editing a profile, make sure one of the other ringing options is selected.

## Set a ringing tone

A ringing tone is the melody your phone plays when you receive a call. You can set the ringing tone to a specific sound effect, or to a melody to personalize how the phone rings. Your phone can store 35 different tones.

- 1 From a profile **Customize** menu, scroll to **Ringing tone** and press **Select**.
- 2 Scroll through the options and listen. When you hear the ringing tone you want to use, press **Select**.

## Set ringing volume

You can set the default ringing volume for incoming voice calls and message alert tones. There are five different levels of volume.

- 1 From a profile **Customize** menu, scroll to **Ringing volume** and press **Select**.
- 2 Scroll to an option and listen. When you hear the ringing volume you want to use, press **Select**.

## • Rename profiles

You can rename any of the profiles except **Normal**. You may want to use your own name for one of the profiles. When you select this profile, your name appears on the Start screen.

- 1 Press **Menu 3 (Profiles)**.
- 2 Scroll to the desired profile and press **Select**.

- 3 Select **Customize**, scroll to **Profile name**, and press **Select**.
- 4 Enter the new name and press **OK**.

## Select and customize an enhancement profile



**Note:** You must have an enhancement attached to your phone prior to selecting the **Enhancement settings** menu.

To select and customize profiles for use with the headset, and handsfree device (car kit):

- 1 Press **Menu 4-4 (Settings > Enhancement settings)**.
- 2 Scroll to **Headset** and press **Select**.

### IF YOU SELECTED HEADSET

The following options are available. Scroll to the option of your choice and press **Select** to enter the option's submenu and modify its settings.

- **Default profile**—Choose the profile you wish to be automatically activated when your phone is connected to a car kit.
- **Automatic answer**—Calls are answered automatically after one ring when connected to a car kit. Scroll to **On** or **Off** and press **Select**.

## • Set the display language

You can set your phone to display information in different languages.

Your possible choices are English and French.



**Note:** Some languages may vary due to regional differences. All of these languages may not be available in your phone.

- 1 Press **Menu 4-2-1 (Settings > Phone settings > Phone language)**.
- 2 Scroll to the language you want to use and press **Select**.

## • Set the Date and clock

Your phone contains a real-time clock that can be set two different ways: the clock can use the time and date information provided by the wireless system, or it can be set manually.

The clock will display the current time and date on the Start screen. You can also choose to hide the clock if you prefer. Please see "Displaying or hiding the clock" on page 40."



**Note:** Your phone also has an alarm clock. See "Use the alarm clock" on page 60. for more information.

By default, the clock gets its information from the wireless network. If you wish to override the network clock, do the following:

## Manually setting the clock

- 1 Press **Menu 4-3-1** (**Settings > Time settings > Clock**).
- 2 Scroll to **Set the time**, then press **Select**.
- 3 Enter the current time, then press **Select**.  
For example, to enter 7:30, enter 0730.
- 4 Scroll to **am** or **pm**, then press **OK**.

## Selecting time format

- 1 Press **Menu 4-3-1** (**Settings > Time settings > Clock**).
- 2 Scroll to **Time format**, then press **Select**.
- 3 Scroll to either **24-hour** or **am/pm**, then press **Select**.

## Allow the network to set the clock

- 1 Press **Menu 4-3-3** (**Settings > Time settings > Auto-update of date and time**).
- 2 Scroll to **On** (or **Confirm first**), then press **Select**. Selecting the **On** option will set your phone clock to be automatically updated by your network. Selecting **Confirm first** will prompt the network to ask you if you want the date and time updated before it is updated.




**Important:** If you use the **Auto-update of date and time** option while outside your digital network, you may be prompted to enter your own time manually (see "Manually setting the clock" on page 40). Network time will replace the time and date you set once you re-enter your digital network.



**Note:** If your battery has been removed or has drained outside the digital network, you may be prompted to enter your own time (once the battery is replaced/recharged, and you are still outside of the digital network).

## Displaying or hiding the clock

- 1 Press **Menu 4-3-1** (**Settings > Time settings > Clock**).
- 2 Depending on the current settings, either **Hide clock** or **Show clock** is highlighted.
- 3 Press **Select**.

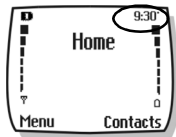

## • Learn about voice commands

The voice command feature provides handsfree operation of certain menu options and commands. Just like voice dialing, you must create a voice "tag" for the commands you want to use (please read "Assign a voice tag to a phone number" on page 48 for detailed information on voice tags). The following table lists menu options for use with voice commands:


Option	Description
Profiles	Switch between the available profiles ( <b>Normal</b> , <b>Silent</b> , <b>Meeting</b> , <b>Outdoor</b> , and <b>Pager</b> ).
Voice mailbox	Access your voice messages.
Recorder	Start recording a memo.
Call log	Access the Call log menu.

### Create a voice tag for a menu option



**Important:** Please see "Important notes about voice tags" on page 49 for more information on creating voice tags.

- 1 Press **Menu 8-2 (Voice > Voice commands)**.
- 2 Scroll to the menu option you wish to tag, then press **Select**.
- 3 Press **Options**, then select **Add command**.
- 4 Press **Start**.
- 5 After the tone sounds, speak the voice tag clearly into the microphone.

The phone replays then saves the recorded tag. The  icon appears next to commands which have voice tags assigned.

### Use a voice command



**Warning:** Do not use voice command in an emergency situation. In emergencies, stress causes changes in your voice, which may keep the phone from recognizing your voice command.

- 1 At the Start screen, press and hold **Contacts** for one to two seconds. A tone is heard and **Please speak now** is displayed.
- 2 After the tone, clearly speak the voice tag that you recorded previously into the microphone.

The only other option for initiating a voice command is to press the headset button momentarily at the Start screen. The alert tones plays through the headset. Speak the voice tag into the headset microphone. The voice tag will playback through the headset to confirm your choice.

## Work with voice tags

You can listen to an existing voice tag (in case you forgot what you recorded), rerecord a voice tag, or delete an existing tag.

- 1 Press **Menu 8-2 (Voice > Voice commands)**.
- 2 Scroll to the menu option you wish to tag, then press **Select**.
- 3 Press **Options**, scroll to either **Playback**, **Change**, or **Delete**, and press **Select**.
- 4 If you chose **Change**, press **Start** to record again.

The new tag that is recorded replaces the old information.

## 10 Advanced features



**Warning:** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



**Note:** Some in-call options are network services features. Please contact your service provider for information and availability.

This chapter describes advanced calling features such as conference calling, call waiting, and the use of calling cards for calls. Not all the features described here are available in all wireless network systems.

### • View in-call options

Your phone allows you to use a number of features during a call. These features are known as **in-call options**.

You cannot use all these options at all times. This section tells you when you can use a certain option.

- 1 To access an option during a call, press **Options**.
- 2 Scroll to one of the following options, then press **Select**:

Option	Description
<b>Mute/ Unmute</b>	Disables or enables the microphone. If mute has already been selected, <b>Unmute</b> is displayed. These options affect any accessories connected to the phone (headset, car kit).
<b>New call</b>	Initiates a new call while in a call (call-waiting and three-way calling).
<b>End all calls</b>	Ends all active calls (call-waiting or three-way calling).
<b>Touch tones</b>	Manually enters a touch tone string (series of tones) or search for a string in your phone.
<b>Contacts</b>	Views the phone book. Press <b>Back</b> to close the phone book and return to call.
<b>Menu</b>	Displays the main menu.

### • Use call forwarding

When you use **call forwarding**, your network redirects incoming calls to another phone number. Using this feature helps to prevent missing important phone calls.



**Important:** Call forwarding is a network-dependent feature and may not work the same in all networks. Contact your service provider for availability and for your network's feature codes.



## Learn about call forwarding feature codes

Your network requires separate codes for activating and cancelling the various types of call forwarding. Your service provider can provide you with the necessary feature codes for these network services.

Once you store these feature codes in your phone, they are sent automatically to the network when you select one of the call forwarding options from your phone menu.

Your phone can store the following types of feature codes:

Feature code type	Description
<b>Forward all calls</b>	Forwards all incoming calls to the number you specify
<b>Forward if busy</b>	Forward incoming calls when you are in a call
<b>Forward if not answered</b>	Forwards incoming calls to another number when you are unable to answer
<b>Forward if out of reach</b>	Forwards incoming calls to another number when you are out of the network or when the phone is switched off
<b>Cancel all call forwarding</b>	Cancels any and all call forwarding options you may have set

## Store a feature code

- 1 Press **Menu 4-6-5** (**Settings > Network services > Network feature setting**).
- The **Feature code** field appears after a few seconds.
- 2 Enter the feature code your service provider gave you example, \*90 for activating **Forward if busy**, then press **OK**.
- 3 Press **Select** when **Call forwarding** is displayed.
- 4 Scroll to the type of forwarding that matches the feature code you entered (for example, **Forward if busy**, then press **Select**). Select **Activate**.

The Activate feature code is now stored in your phone, and you are returned to the **Feature code** field. Continue entering other feature codes (for example, \*900 to cancel **Forward if busy**), or press the **End** key to return to the Start screen.



**Important:** Once you enter a network feature code successfully, the feature becomes visible in the **Network services** menu.

## Activate/cancel call forwarding

After you store the correct feature codes, you can activate (or cancel) call forwarding as follows:

- 1 Press **Menu 4-6-2** (**Settings > Network services > Call forwarding**).
- 2 Scroll to the desired call forwarding option, then press **Select**.
- 3 Highlight **Activate** and press **Select**.
- 4 Enter the number to which you want your calls forwarded (or press **Search** to recall a number from the phone book), and press **OK**.

Your phone calls the network to activate (or cancel) the feature you have requested. The network sends a confirmation when the feature activated (or cancelled) successfully.

## • Use call waiting

This network service lets you receive an incoming call when you are already in a call. When you receive an incoming call, your phone displays the caller's phone number (or the caller's entry in your phone book). The phone also beeps, notifying you of the incoming call.

To answer call waiting, press the **Send** key (or press **Answer**) to place the current active call on hold and automatically answer the new call.

To switch between two calls, accepting the waiting call puts the first caller on hold. To put the second caller on hold and reconnect with the first caller, press the **Send** key.

To end an active call, simply allow the other party to hang up; the call on hold then becomes the active call.

## • Make a conference call

This feature allows you to talk to two people at the same time. Conference calling is a network-dependent feature.



**Note:** Check with your service provider to make sure this service is available in your network.

- 1 Make a call to the first participant as usual. When you are ready to place a call to the next party, press **Options**, then press **New call**.
- 2 Enter the number and press the **Send** key OR  
Press **Search** to recall the number from the phone book.
- 3 Press the **Send** key again to connect both parties.
- 4 To end the call, press the **End** key. This action disconnects both parties.

## End calls

To end a conference call, that is, to disconnect with all callers, press the **End** key. Or you can also press **Options**, then select **End all calls**.

## Disconnect one party from the conference call

If you wish to disconnect with the first party and remain connected to the second party, have the first party terminate the call on his/her end.

### • Send own caller ID when calling

This feature allows you to block caller ID when you call someone (your number will not be displayed on their caller ID). This feature may only be effective when calling a number equipped with caller ID.



**Note:** This feature is available only when supported by the wireless network and may not function if you are roaming.



**Important:** This feature works on a call-by-call basis. You must enable this feature each time you want to block the sending of your own number to the caller ID.

### Store the feature codes

Before you can use the **Send my caller ID** feature, you must store the feature codes for activating this feature. Once the code is stored in your phone, it is sent automatically to the network when you select this option from your phone menu.

- 1 Press **Menu 4-6-5** (**Settings > Network services > Network feature setting**). The **Feature code** field appears after a few seconds.
- 2 Enter the feature code your service provider gave you (for example, \*67 for activating **Send my caller ID**), then press **OK**.
- 3 Scroll to **Send my caller ID** and press **Select**.
- 4 Select **No** to assign the activation code.

### Place a call without sending your number

- 1 Press **Menu 4-6-4** (**Settings > Network services > Send own caller ID when calling**).
- 2 Scroll to **No**, then press **Select**.
- 3 Enter the desired phone number, then press **OK**.

OR

Press **Search** to recall a phone number from the phone book.

The phone automatically inserts the feature code into the dialing string and dials the phone number. The person you are calling cannot see your phone number on their caller ID.

### • Use automatic redial

There are times when you may not be able to place a call (for example, during high traffic volume on the wireless network). When the wireless network is busy or unavailable, **Automatic redial** instructs your phone to retry the call.

**ACTIVATE AUTOMATIC REDIAL**

- 1 Press **Menu 4-1-3** (**Settings > Call settings > Automatic redial**).
- 2 Scroll to **On** and press **Select**.

If the system is busy, your phone makes three additional call attempts. If you want to stop the automatic redial process before the last attempt, press the **End** key.



**Important:** This feature does not automatically retry a number when the number you are calling is busy.

## • Calling card

If you wish to use a calling card for long distance calls, you can first save your calling card information into your phone. Your phone is equipped to handle up to four calling cards.

### Saving calling card information

- 1 Press **Menu 4-1-6** (**Settings > Call settings > Calling card**).
- 2 Enter your lock code, then press **OK**. For more information on lock codes, see "Learn about the lock code" on page 56.
- 3 Scroll to one of the four memory locations, then press **Options**. Scroll to **Edit**, then press **OK**.
- 4 Select **Dialing sequence**.

Dialing sequence	Use for cards that require you to:
Access number + phone number + card number	Dial 1-800 access number, phone number, then card number (+ PIN if required)
Access number + card number + phone number	Dial 1-800 access number, card number (+ PIN if required), then phone number
Prefix + phone number + card number	Dial the prefix (numbers that must precede the phone number) and phone number you want to dial, then card number (+ PIN if required)

- 5 Scroll to one of the three sequence types as described in the following table, then press **Select**. Enter the required information (access number or prefix and card number).
- 6 Press **OK** to confirm your entries. Press **OK** to save your changes.
- 7 Scroll to **Card name**, then press **Select**. Enter the card name, then press **OK**.



**Note:** This procedure might not work with all calling cards. Please look at the back of your calling card or contact your long distance company for more information.

## Choosing a calling card to use

Use **Menu 4-1-6 (Settings > Call settings > Calling card)** to select a calling card to use. You will be required to enter your security code.

## Making calling card calls

After you have saved your calling card information in your phone, you can make a call using your calling card.

- 1 Enter the phone number, including any prefix (such as **0** or **1**) that your calling card may require when you make a calling card call. See your calling card for instructions.
- 2 Press and hold the **Send** key for a few seconds until your phone displays **Card call**. Your phone displays **Wait for tone, then press OK**.
- 3 When you hear the tone or system message, press **OK**.
- 4 Your phone displays **Wait for tone, press OK again**. When you hear the tone or system message, press **OK**.

## • Voice dialing

You can dial up to 25 stored phone book numbers using the voice dialing feature. Before you can place a call using voice dialing, you must first assign a voice tag to the number. Before using voice dialing, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- When recording a voice tag or making a call by saying a voice tag, hold the phone in the normal position near to your ear.
- Very short contacts are not accepted. Use long contacts and avoid similar contacts for different numbers.



**Important:** You must say the name exactly as you said it when you recorded it. This may be difficult in, for example, a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

## Assign a voice tag to a phone number

You must record a voice tag (up to two seconds) for a phone number before you can use the voice dialing feature to dial it.


### ADD A VOICE TAG TO A PHONE BOOK ENTRY

- 1 At the Start screen, press the up or down scroll keys. Scroll to the desired phone book entry, and press **Details**.

- 2 Scroll to the phone number you want to tag and press **Options**.
- 3 Scroll to **Add voice tag** and press **Select**. The phone displays **Press Start, then speak after tone**.
- 4 Press **Start** and after the tone, speak the voice tag clearly into the phone microphone.



**Note:** Your phone informs you if the recording is not successful. Press **OK** to try again or **Back** to return to phone book.

The message **Voice tag saved** is displayed upon completion of the recording process. The  icon next to a phone number denotes that a voice tag exists for this number.

#### IMPORTANT NOTES ABOUT VOICE TAGS

- The recording process stops automatically; pressing **Quit** aborts the recording attempt.
- Unique tags are recognized more accurately. Consider using first and last name or first name, last name, and number type when tagging a number.
- Avoid pauses or silence as you record the voice tag.
- If the voice tag memory is full, the phone displays **Delete an existing voice tag?** Press **OK**, scroll to locate a tag to delete, then press **Delete**.
- Deleting a phone number deletes any associated voice tags.



**Warning:** Do not use a voice tag for dialing emergency numbers. In emergencies, stress causes changes in your voice, which may keep the phone from recognizing your voice command.

## Dialing a number using voice dialing



**Note:** You must say the name exactly as you said it when you recorded it.

- 1 At the Start screen, press and hold **Contacts** for two seconds.  
A tone is heard and **Please speak now** is displayed.
- 2 After the tone, clearly speak the voice tag that you recorded previously into the microphone.



**Note:** If the voice tag is not recognized by the phone or if you fail to speak a tag within three seconds after the tone, the message **Name not recognized** is displayed, and you are returned to the Start screen.

- 3 When the voice tag is recognized,
  - The phone book entry will be displayed on the screen for three seconds  
AND
  - The voice tag is replayed (through the ear piece).  
After three seconds, the number is dialed.

The only other option for initiating voice dialing is to press the headset button momentarily at the Start screen. The alert tones play through the headset. Speak the voice tag into the headset microphone. The voice tag will playback through the headset to confirm your choice.

## Work with voice tags

You can listen to an existing voice tag (in case you forgot what you recorded), rerecord a voice tag, or delete an existing tag.

- 1 At the Start screen, press **Contacts**. Scroll to **Voice tags**, then press **Select**.



**Note:** This option displays a list of only those contacts and numbers that have been assigned a voice tag.

- 2 Scroll to the phone number voice tag you want to edit, then press **Options**.
- 3 Scroll to either **Playback**, **Change**, or **Delete**, and press **Select**. If you chose **Change**, press **Start** to begin rerecording. The new tag that is recorded replaces the old information.

## • 1-touch dialing

When a phone number is assigned to one of the 1-touch dialing locations (2-9), you can call the phone number in either of the following ways:

- Press the number key that corresponds to a 1-touch dialing location and press the **Send** key.
- Press and hold the number key that corresponds to a 1-touch dialing location until the call is initiated.

1 is preassigned to dial your voice mailbox number and cannot be reassigned.

## Set up 1-touch dialing

If you want to assign a number to one of the number keys (2-9), do the following:

- 1 Press **Contacts**.
- 2 Scroll to **1-touch dialing** and press **Select**.
- 3 Scroll to the desired number key (**2-9**), and press **Assign**.



**Note:** If a phone number is already assigned to a key, the phone book entry name is displayed and the left selection key is **Options**.

- 4 Enter the phone number manually, or press **Search** to locate a phone book entry.
- 5 Select the desired name or entry from the phone book. If more than one number is stored for that entry, scroll to the desired number and press **Select**.

## 1-touch dialing options

You can change or delete (clear) numbers assigned to 1-touch dialing or view the number assigned to a key from the 1-touch dialing menu.

- 1 Press **Contacts**.

- 2 Scroll to **1-touch dialing** and press **Select**.
- 3 Scroll to a key that is assigned a number, then press **Options**.
- 4 Scroll to either **View number**, **Change**, or **Delete**, then press **Select**.

## • Learn about Caller Groups

You can group phone book entries using one of the existing categories (**Family**, **VIP**, **Friends**, **Business**, and **Other**). Each group has its own unique ringing tone and logo.

When you receive a call from a number assigned to a caller group, the ringing tone for that caller group is used, and the caller group's logo is displayed on the screen. This feature can help you identify incoming calls more quickly.

### ADD A NUMBER TO A CALLER GROUP

- 1 At the Start screen, press the up or down scroll keys.
- 2 Scroll to the desired phone book entry, and press **Details**.
- 3 Scroll to the phone number you want to use and press **Options**.
- 4 Scroll to **Caller groups**, and press **Select**.
- 5 Scroll to the desired caller group (for example, **Friends**), and press **Assign**.

### SELECT A RINGING TONE AND GRAPHIC FOR A CALLER GROUP

- 1 Press **Contacts**.
- 2 Scroll to **Caller groups** and press **Select**.
- 3 Scroll to one of the **caller groups** and press **Options**.
- 4 Scroll to one of the following options and press **Select**:

Description	
<b>Rename group</b>	Renames the selected caller group.
<b>Group ringing tone</b>	Selects a ringing tone for this group. Scroll through list of ringing tones, then press <b>OK</b> .
<b>Group logo</b>	Views, activates or deactivates the group logo.
<b>Group members</b>	Assigns other phone book entries to the selected caller group.

## • Use Touch tones

Touch tones (sometimes known as DTMF tones) are those tones produced when you press the keys on your phone keypad. You can use touch tones for many automated dial-up services such as banking and airlines, or for entering your voice mailbox number and password.

Touch tones are sent during an active call. You can send them manually from your phone keypad, or send them automatically by saving them in your phone.



## Set manual touch tone options

You may customize the way your phone sends the touch tones for optimum performance with the system you are calling.

### SET TOUCH TONE TYPE

- 1 Press **Menu 4-2-2-1** (**Settings > Phone settings > Touch tones > Manual touch tones**).
- 2 Select one of the following options, then press **Select**:

Option	Description
<b>Continuous</b>	Tone sounds for as long as you press and hold a key.
<b>Fixed</b>	Sends tones of the duration you specify in the <b>Touch tone length</b> option.
<b>Off</b>	Turns off tones. No tones are sent when you press a key.

### SET FIXED TOUCH TONE LENGTH

You can also specify touch tone length when using the **Fixed** option.

- 1 Press **Menu 4-2-2-2** (**Settings > Phone settings > Touch tones > Touch tone length**).
- 2 Scroll to **Short** (1 /10 second) or **Long** (1/2 second), then press **Select**.

## Send a touch tone string manually

Before you begin, make sure that **Manual touch tones** is not set to **Off**.

- 1 During a call to the automated service, press **Options**, scroll to **Touch tones**, and press **Select**.
- 2 Enter the touch tone string from your phone keypad as required by the service you are calling, then press **Tones**.

## Send touch tone string from phone book

You can save a touch tone string as a separate phone book entry, then recall and send the string using the in-call menu option **Touch tones**.

### SAVE TOUCH TONES AS A PHONE BOOK ENTRY

Save the touch tone string (including any pause or wait characters that may be required) to a new entry in the phone book. For more information on saving contacts and number to your phone book see "Saving contacts and numbers" on page 20.

### RECALL A TOUCH TONE STRING FROM THE PHONE BOOK

- 1 During a call to the automated service, press **Options**, scroll to **Touch tones**, and press **Select**.

- 2 Press **Search**, scroll to the touch tone string entry in your phone book, then press **OK**.
- 3 Press **Tones** to send the touch tones.

## Store a touch tone string with phone number

You can store touch tone strings (for example, voice mailbox number and PIN code) as a part of a phone book entry. Once the string is stored, it is sent automatically (instead of entering the touch tones from the keypad).

- 1 Enter the phone number of the automated service.
- 2 Use the **\*/+** key to enter a **w** or **p** after the number.
  - **w** (wait)—The phone waits for you to press **Send**. When you press **Send**, the phone sends the touch tone string you have saved.
  - **p** (pause)—The phone pauses for 2.5 seconds, then automatically sends the touch tone string you have saved.
- 3 Enter the touch tone string after the **w** or **p** characters as required by the service. Example: 214-555-1234w1234#p5678#
- 4 Save this phone book entry as you normally would.

Once the touch tone string is stored with the phone number, you can now call the number and have the touch tone strings sent automatically.

## • Link phone book entries

This feature allows you to store a phone number in one phone book location and link it to another phone book entry.

For example, linking the phone number of an automated service (for example, automated banking service) with a touch tone string entry in your phone book (for example, account and PIN numbers) automatically recalls and sends the touch tone string when you call the service.

### USE LINKING OPTIONS

- 1 Store the touch tone string into your phone book.
- 2 Assign the phone book entry with the touch tones to a 1-touch dialing location (for example, location 3). For more information, see "1-touch dialing" on page 50.
- 3 Edit the automated service's phone number by adding **+n** to the end of the phone number (where **n** is the 1-touch dialing location).  
Example: 214-555-1234+3
- 4 Press **OK** to save your changes. Dial the automated service's number from your phone book.

Your phone automatically sends the touch tones when the call connects.



**Important:** You may need to enter a pause (**p**) before the **+** in order to account for delays in the automated system answering your call (for example, 214-555-1234p+3).

## • Learn about Voice Recorder

**Voice recorder** allows you record audio memos and store them in your phone. Use this feature to record phone numbers and personal memos. Total time available for all memos is three minutes (up to 180 seconds). Maximum length of a single message is one minute, up to 60 seconds.

The maximum number and length of remaining memos depends on how much memory is still available. A countdown timer is displayed while recording and shows remaining record time.

### Record a memo

- 1 Press **Menu 8-3-1 (Voice > Voice recorder > Record)**.
- 2 After the tone, begin recording your memo; when you finish recording, press **Stop**.
- 3 Enter the subject of the voice memo, then press **OK**.

#### NOTES

- Press **Back** (instead of entering a subject) to discard the memo without saving.
- Press **OK** without entering a subject to assign the default name (**Recording**) to the memo.

### View and work with recorded memos

- 1 Press **Menu 8-3-2 (Voice > Voice recorder > Recordings list)**.
- 2 Scroll through the list of memos, then press **Options**. The following options are available:

Option	Description
<b>Playback</b>	Plays back the message through the earpiece (phone or headset).
<b>Delete</b>	Deletes selected voice memo.
<b>Edit title</b>	Edits the memo of the subject, or renames the memo.
<b>Add alarm / Alarm</b>	Adds (edits, or removes) a reminder alarm for the memo.

- An incoming call interrupts voice memo playback. When the call is complete, the phone returns to the **Options** menu for the selected voice memo.
- An incoming call stops voice memo recording. The recorded memo is automatically saved with the default name.


# 11 Security and System settings



**Warning:** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

Your phone has a variety of security features that help prevent some of the following:

- Placing accidental or unintentional calls
- Unauthorized use of your phone
- Placing and accepting calls from certain phone numbers
- Accidental erasing of information or restoring factory settings

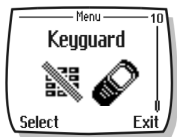


## • Lock keypad (Keyguard)

With keypad lock (Keyguard) you can temporarily lock your phone keypad and prevent the accidental placing of calls or pressing of the keypad (for example, when the phone is in your pocket or in your purse).

Press **Menu 10**, to activate Keyguard. You could also press **Menu** followed by **\*/+** (within three seconds) to activate Keyguard. It is possible to answer a call, even though Keyguard is activated. Press the **Send** key to answer the call. When the call has ended, the keypad remains locked.

Press **Unlock** followed by **\*/+** (within three seconds) to deactivate Keyguard and unlock your phone keypad.



**Important:**  appears at the top of the display. The left softkey is also labeled **Unlock**.



**Important:** When the phone is locked, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

## • Phone lock

This feature protects your phone from unauthorized outgoing calls or unauthorized access to information stored in the phone. When phone lock is activated, **Phone locked** is displayed each time you turn your phone on or off.

After pressing either **Contacts** or **Menu**, you must enter your lock code. Once your lock code has been accepted, your phone will function normally.



**Important:** **Call not allowed** is displayed if you attempt to place a call while phone is locked.



**Important:** When the phone is locked, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

## Learn about the lock code

Your phone has a **lock code**. You will need the lock code to activate and deactivate the phone lock feature, or to change your lock code. The default lock code is **1234**.

### CHANGE YOUR LOCK CODE

- 1 Enter **Menu 4-5 (Settings > Security settings)**.
- 2 Enter the current (or default) lock code and press **OK**.
- 3 Scroll to **Change lock code** and press **Select**.
- 4 Enter the new lock code and press **OK**.
- 5 Reenter the new lock code for verification, then press **OK**.



**Important:** When you change your lock code, make sure you store it in a safe place, away from your phone. Avoid entering access codes similar to emergency numbers to prevent accidental emergency calls.

### ACTIVATING AND DEACTIVATING PHONE LOCK

- 1 Enter **Menu 4-5 (Settings > Security settings)**.
- 2 Enter the lock code, then press **OK**.
- 3 Press **Select** on **Phone lock**.
- 4 Scroll to **Off, Lock now**, or **On power-up** and then press **Select**.
- 5 Turn your phone off and back on to complete the phone lock activation (or deactivation).

### ANSWER A CALL WITH PHONE LOCK ON

Press the **Send** key or **Answer**.

### ALLOWED NUMBER WHEN PHONE LOCKED

When phone lock is on, the only outgoing calls that can be made are to the following numbers:

- The emergency number programmed into your phone (for example, 911 or other official emergency number).
- The number stored in the **Allowed number when phone locked** location.

## Store the unlocked phone number

- 1 Press **Menu 4-5 (Settings > Security settings)**.
- 2 Enter the lock code and press **OK**.
- 3 Scroll to **Allowed number when phone locked** and press **Select**.
- 4 Press **Assign**.
- 5 Enter the phone number (or press **Search** and recall the number from the phone book), then press **OK**.

## Calling the allowed phone number

At the Start screen, press up scroll or down scroll key to display the number. Press the **Send** key to place the call.



**Important:** Phone lock must be activated to use this feature.

## • Call restrictions

This feature allows you to restrict incoming and outgoing calls. You can restrict all calls or create a custom list of numbers to restrict.

When you select either **Restrict outgoing calls** or **Restrict incoming calls** from the **Security settings** options, your options are as follows:

- **Select**—Used to display a list of all available restricted numbers. Select those numbers you want to restrict from this screen.
- **Add restriction**—Used to create your own list of restricted numbers

Once you have added at least one restriction to either the outgoing or incoming calls list, the following options become visible:

- **Edit**—Used to edit an existing outgoing call restriction
- **Delete**—Used to delete call restrictions from the list



**Important:** When calls are restricted, calls may be possible to the emergency number programmed into your phone (for example, 911 or other official emergency number).

## Adding a call restriction

You can add up to 10 restrictions for outgoing calls and 15 restrictions for incoming calls. The maximum number of characters you can enter for each restriction is 15.

- 1 Press **Menu 4-5 (Settings > Security settings)**.
- 2 Enter the lock code and press **OK**.
- 3 Scroll to **Call restrictions**.
- 4 Select either **Restrict outgoing calls** or **Restrict incoming calls**.
- 5 Scroll to **Add restriction** and press **Select**.
- 6 Enter the number string you wish to restrict and press **OK**.

For example:

- If you wish to restrict all calls that begin with 1, enter **1**.
  - If you wish to restrict all calls that begin with 1972, enter **1972**.
  - If you wish to restrict all calls that begin with 214, enter **214**.
- 7 Enter a name to identify this restriction, or just press **OK**.



**Note:** When creating a new restriction, that restriction is automatically selected (enabled) at the time it is saved.

## Select call restrictions

- 1 Press **Menu 4-5** (**Settings > Security settings**).
- 2 Enter your lock code and press **OK**.
- 3 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**.
- 4 Scroll to **Select** and press **Select**.
- 5 Scroll to each restriction you wish to use and press **Mark**; press **Unmark** to deactivate existing restrictions.
- 6 Press **Done**, then press **Yes** to save the changes you have made.

## Edit call restrictions

You can edit the name or number of an entry in the call restrictions list.

- 1 Press **Menu 4-5** (**Settings > Security settings**).
- 2 Enter your security code and press **OK**.
- 3 Scroll to **Call restrictions**.
- 4 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**.
- 5 Scroll to **Edit** and press **Select**.
- 6 Scroll to the restriction you wish to edit, then press **Select**.



**Note:** If no name has been entered for a restriction, the restricted number will be displayed.

- 7 Edit the number (as needed), then press **OK**.
- 8 Edit the name (as needed), then press **OK**.

## Erasing call restrictions

You may want to delete a restriction that is no longer needed.

- 1 Press **Menu 4-5** (**Settings > Security settings**).
- 2 Enter your security code and press **OK**.
- 3 Scroll to **Call restrictions**.
- 4 Scroll to **Restrict outgoing calls** or **Restrict incoming calls** and press **Select**.
- 5 Scroll to **Delete** and press **Select**.
- 6 Scroll to the restriction you wish to delete, then press **OK**.
- 7 Press **OK** again to delete restriction.

## • Automatic update of service

Your phone updates to wireless services sent by your service provider. Use **Menu 4-1-5** (**Settings > Call settings > Auto-update of service**) to turn this feature on or off.

## • Learn about system selection

The **System** menu (**Menu 6**) allows you to customize the way your phone chooses a system in which to operate while you are within or outside of your primary or home system.

Your phone is set to search for the most cost-effective system. If your phone cannot find a preferred system, it selects a system automatically based on the option you choose in the **System** menu.



**Important:** Before selecting an item in the **System** menu, contact your service provider to find out how your selection will affect your service charges.

## View Roaming options


The menu options you see in your phone are based on your service provider's network. Their network determines which options actually appear in the phone menu. The following is a description of the options that may appear in your phone:

Option	Description
Home only	You can make and receive calls in your home area only. While roaming, <b>No Service</b> appears and you cannot make or receive calls.
Automatic	Your phone automatically selects the best available system.




## 12 Organizer

Your phone has a calendar, alarm clock, stopwatch, and calculator.

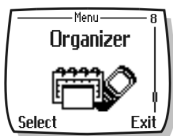

### • Use the alarm clock

Your phone alarm clock can be set to sound an alarm at a time you specify. The alarm clock uses the clock time format (12-hour or 24-hour format). The  icon, displayed on the Start screen, indicates that an alarm is set. The alarm clock will work, regardless if the phone is on or off.



**Important:** The alarm clock works in conjunction with your phone clock. Make sure the time and date are correct before using this feature.

### Set the alarm

- 1 Press **Menu 9-1 (Organizer > Alarm clock)**, then press **Select**.
- 2 Enter the alarm time, then press **OK**.
- 3 Select **am** or **pm**, then press **OK**.

### Respond to an alarm

At the time of the alarm, the phone sounds an alert tone, displays an animated message, and flashes its lights.

Press **Stop** or the **End** key to stop the alarm from sounding, and return to the Start screen.

#### SNOOZING

There are several ways you can enable the **Snooze** feature:

- 1 Press the **Snooze** selection key.
- 2 Press any key (except the **End** key or **Stop**).
- 3 Allow the alarm to sound for one minute.

Once snooze is enabled, the alarm will sound again in 10 minutes.

### Alarm when phone power is off

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you press **Stop**, the phone asks whether you want to activate the phone for calls. Press **No** to switch off the phone or **Yes** to make and receive calls.



**Warning:** Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.

## • Calendar



**Warning:** Your phone must be switched on to use the calendar feature. Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.


You can use your phone calendar to record notes to remind you of appointments such as meetings, phone calls, birthdays, or general reminders. Alarms can also be set to notify you of your appointments or notes.

You can also use the DKU-5 cable in conjunction with Nokia PC Suite to synchronize your PIM application calendar with your phone calendar, keeping you up-to-date when you are away from your office or PC.

### Add a calendar note

Predictive text input is available for Calendar notes.

- 1 Press **Menu 9-2 (Organizer > Calendar)**, scroll to the desired day and press **Options**.
- 2 Select **Make a note**.
- 3 Scroll to one of the following note types and press **Select**:
  - **Meeting**—Enter the note (or press **Search** to recall a name from the phone book) and press **OK**. Enter the time and press **Options**.
  - **Call**—Enter the desired phone number (or press **Options** then **Search** to recall it from phone book) and press **OK**. Enter the time and press **OK**.
  - **Birthday**—Enter the person's name (or press **Options** then **Search** to recall it from phone book) and press **OK**. Press **Options** then **Save** and enter date of birth and year (optional). Press **OK**.
  - **Memo**—Enter the note. Press **Options** then **Save**. Enter a date for the memo, then press **OK**.
  - **Reminder**—Enter the note. Press **Options** then **Save**. Select an alarm option (**Alarm on**, **Alarm off**).
- 4 Scroll to the desired alarm option, then press **Select**.
- 5 Enter the desired information.

The presence of an alarm is indicated by  when you view the notes.

#### WHEN THE ALARM SOUNDS FOR A NOTE

The phone flashes its lights, beeps, and displays the note. When a **Call** note is displayed, you can call the number by pressing the **Send** key.

To stop the alarm, press **Exit** or the **End** key.

## • Calculator

You can use your phone calculator to add, subtract, multiply, or divide numbers and convert currencies.



**Warning:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

### Use the calculator

- 1 Press **Menu 9-3 (Organizer > Calculator)**, and then press **Select**.
- 2 Enter the first number in the calculation (press # for decimal point).
- 3 To add, press **\*/+** once (+ appears); to subtract, press **\*/+** twice (-); to multiply, press **\*/+** three times (\*); to divide, press **\*/+** four times (/).
- 4 You can also press **Options**, scroll to **Add, Subtract, Multiply, Divide, Square**, or **Square root, Change sign**, and press **Select**.
- 5 Enter the second number.  
Repeat steps 3 and 4 as many times as necessary.  
A subtotal is shown after you enter the next operand (+, -, \*, or /).
- 6 For a total, press **Options** twice.
- 7 To start a new calculation, press and hold **Clear** for two seconds.



**Note:** This calculator has limited accuracy and rounding errors may occur, especially in long divisions.

## • Stopwatch

You can use your phone **Stopwatch** feature to time an event in hours, minutes and seconds. The event time can be saved, viewed, or deleted.



**Warning:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



**Important:** Using the stopwatch consumes the battery and the operating time of the phone will be reduced. Be careful not to let it run in the background when performing other operations with your phone.

### Time an event using split timing

The split time function allows you to measure the total time for an event, yet allows you to capture the elapsed time at various intervals. To measure split time:

- 1 Press **Menu 9-4 (Organizer > Stopwatch)** and then press **Select**.
- 2 Scroll to **Split timing**, then press **Select**.

### 3 Press **Start**.

The running time appears on the display.

Once the split timer has started, you can:

- Press **Split** to display the split time while the timer continues to display elapsed time.
- Press **Stop** to stop the timer and view the total elapsed time.

If you continue pressing **Split**, the most recent split time appears at the top of the list of split times. You can scroll to review previous times.

## View timing options

Once you have stopped timing an event (using lap or split), you have the option to save the information, reset the stopwatch, or continue timing (split timing only).

While stopwatch is running, press **Stop**, then press **Options**. Select one of the following:

- **Save** save the current timing data. Enter a name, then press **OK**.
- **Reset** clears the current timing data and resets the timer.
- **Start** restarts the split timer from the point the timer was stopped.

## Time an event using lap timing

The lap time function allows you to measure the amount of time it takes to complete a cycle or lap. To measure lap time:

- 1 Press **Menu 9-4 (Organizer > Stopwatch)** and then press **Select**.
- 2 Scroll to **Lap timing**, then press **Select**.
- 3 Press **Start**.

The running time appears on the display.

Once the lap timer has started, you can:

- Press **Stop** to stop the timer and view the elapsed time.
- Press **Lap** to display the lap time; the timer restarts from zero.

If you continue pressing **Lap**, the most recent lap time appears at the top of the list of lap times. You can scroll to review previous times.

Press **Stop** to stop the timer. The final lap time is displayed.

## Choose other stopwatch options

You can choose the following options from the **Stopwatch** menu.

Option	Description
<b>Continue</b>	Redisplays active timer (for example, if you receive a call while the timer is still running).
<b>Show last time</b>	Allows you to view the last measured time.
<b>View times</b>	Allows you to view the list of saved times.
<b>Delete times</b>	Allows you to delete the saved times. You can delete the saved times one by one or all at once.



**Note:** If you receive a call while using the stopwatch, the timer continues running in the background. After ending the call, you can redisplay the timer by doing the following:


Press **Menu 9-4-1 (Organizer > Stopwatch > Continue)**. Press **Select**.

## 13 Games



**Warning:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

You can use your phone not only for communication but also for some serious fun. Your phone offers three games from which to choose.

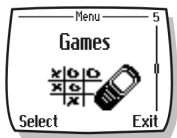

- In **Snake II**, you feed the snake with as many goodies as possible. The longer the snake's tail grows, the higher your score is.
- In **Space Impact II**, you try to destroy the falling asteroids before they destroy you.
- In **Bumper**, you can play an exciting game of pinball. Increase your score by keeping the ball on the table using the flippers.

### Game control

Your phone supports two-way scrolling while playing the games:

- Use **2** to scroll **up**. Use **8** to scroll **down**.
- Use **4** to scroll **left**. Use **6** to scroll **right**.

### Start a new game

- 1 Press **Menu 7-1 (Games > Select game)**, scroll to the desired game, and press **Select**.
- 2 Choose an option and press **Select**.

#### LEARN ABOUT GAME OPTIONS

Use the option **Instructions** to learn how to play the game. With the option **Level** you can choose the difficulty level of the game.

In **Snake II** you can pause the game by pressing either selection key and resume a paused game with **Continue**. Use **Top score** (available in some games) to check the high score in your phone.

### Game settings

The following settings are available for all games. Press **Menu 7-2 (Games > Settings)**:

Option	Description
<b>Game sounds</b>	Turns game sound effects <b>On</b> or <b>Off</b> .
<b>Game lights</b>	Turns screen lights <b>On</b> or <b>Off</b> during game play only.
<b>Shakes</b>	Turns game vibrating effects <b>On</b> or <b>Off</b> .

## 14 Your phone and other devices

Your phone is capable of interacting with, or connecting to a computer using the DKU-5 serial cable. Your phone can exchange information with other desktop and laptop PCs.



**Warning:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

### • PC Connectivity

You can make a serial connection between your Nokia phone and compatible PC using the DKU-5 serial cable. This cable is available for purchase as an enhancement, or may be included in your sales package. Once your phone and PC are connected, you can access phone information from your PC.

With your phone is connected to your PC, you can use Nokia PC Suite to:

- Make a backup copy of the data in your phone (Content Copier).
- Edit phone book contacts and numbers, profiles, and settings using your PC keyboard (Phone Editor).
- Synchronize your phone book and reminders with Personal Information Manager (PIM) applications such as Microsoft Outlook, Outlook Express, and Lotus Organizer (PC Sync).

Please refer to the document *Nokia PC Suite User Guide and PC/PDA Connectivity Guide* for installation and setup instructions.

For more information refer to the *Nokia PC Suite User Guide and PC/PDA Connectivity Guide*.

### Download software

PC Suite, the PC Suite/PC connectivity user guide, and all related software is provided to you free of charge on the CD-ROM found in your sales package. These items can also be downloaded from the Download Software section at: [www.nokia.ca](http://www.nokia.ca).

## 15 Reference information

### • Use enhancements safely

This section provides information about the phone's batteries, accessories, and chargers. Be aware that the information in this section is subject to change as the batteries, chargers, and accessories change.

This phone is intended for use when supplied with power from an ACP-7U, ACP-12U or LCH-12 charger. Other usage could invalidate any approval given to this apparatus and may be dangerous.



**Warning:** When you purchase batteries, chargers, and accessories for your phone, use *only* batteries, chargers, and accessories that have received approval from Nokia. The use of any other type may invalidate any approval or warranty applying to the phone, and could also be dangerous. For availability of approved batteries, chargers, and accessories, check with your service provider.



**Note:** For information on how to charge and recharge your battery, please see "Charge the battery" on page 8.

When the battery is fully charged, the indicator will tell you that the battery is fully charged.

When you are not using a charger, disconnect it from the power source. Do not leave the battery connected to a charger for more than 72 hours, since prolonged maintenance charging could shorten its lifetime. If left unused, a fully-charged battery will discharge over time.

Temperature extremes can affect the ability of your battery to charge. Therefore, allow it to cool down or warm up before trying to charge it.

When the battery is running out of power and your phone only has a few minutes of talk time remaining, a warning tone sounds and the **Battery low** message appears briefly. When no more talk time is left, a warning tone is sounded and the phone switches itself off.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Battery performance is particularly limited in temperatures below freezing.

Do not dispose of batteries in a fire!



**Warning:** Use only your hands to remove the battery. Do not puncture, burn or use any objects that may damage the phone or the battery. Please recycle the battery, or dispose of properly.



## • Important safety information

This section provides additional safety information. A brief overview of safety can be found in the section.

### Traffic Safety

Do not use a handheld telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

### Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

### Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

#### PACEMAKERS

Pacemaker manufacturers recommend that a minimum separation of at least 6 inches (approximately 20 cm) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should always keep the phone more than 6 inches (20 cm) from their pacemaker when the phone is switched on
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- Switch off the phone immediately if you have any reason to suspect that interference is taking place.

#### HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

## Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (for example, electronic fuel injection systems, electronic antiskid/antilock braking systems, electronic speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### POSTED FACILITIES

Switch your phone off in any facility where posted notices so require.

## Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in property and/or bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

## Vehicles

Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

FCC regulations prohibit using your phone while in the air. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, legal action or both.

## Emergency calls



**Important:** This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore you should never rely solely upon any wireless phone for essential communications (for example, medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

## Make an Emergency Call

- 1 If the phone is not on, switch it on.
  - 2 Press the **End** key as many times as needed (for example, to exit a call, to exit a menu, etc.) to clear the display and ready the phone for calls.
  - 3 Enter the emergency number for your present location (for example, 911 or any other official emergency number—emergency numbers vary by location).
  - 4 Press the **Send** key.
- If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this user guide and your local cellular service provider.
  - When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident – do not end the call until given permission to do so.

## • Certification Information (SAR)

### THIS MODEL PHONE MEETS GOVERNMENT REQUIREMENTS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy set by Industry Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the Industry Canada is 1.6 W/kg\* Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, compliance with the Canadian Standard must be shown. The highest SAR value for this model phone when tested for use at the ear is 1.10 W/Kg and when worn on the body, as described in this user guide is 1.10 W/Kg.

(Body-worn measurements differ among phone models, depending upon available enhancements and Industry Canada requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for RF exposure.

\* The SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of body tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at [www.nokia.com](http://www.nokia.com).

## • Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfill any warranty obligations and to enjoy this product for many years:

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside and may damage electronic circuit boards.
- Do not attempt to open the phone except to remove or change front and back covers. Nonexpert handling may damage it.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any enhancement. If any of them are not working properly, take them to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

## • Enhancements

If you want to enhance your phone functionality, a range of accessories is available for you. You can select any of these items to help accommodate your specific communication needs. For availability of these and other accessories, contact your service provider.



## A FEW PRACTICAL RULES FOR ENHANCEMENT OPERATION

- Keep all accessories out of the reach of small children.
- When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.
- Check regularly that any vehicle-installed accessories are mounted and are operating properly.
- Installation of any complex car accessories must be made by qualified personnel only.
- Use only batteries, chargers, and accessories that have been approved by Nokia. The use of any other types could invalidate any approval or warranty applying to the phone and could be dangerous. Refer to "Use enhancements safely" on page 67 for important battery usage information.

## • Battery information



**Note:** The phone has a lithium ion (Li-Ion) battery. Dispose of batteries according to local regulations (for example, recycling). Do not dispose as household waste.

This section provides information about the phone battery. Be aware that the information in this section is subject to change.

The tables shown in this section provide information about the battery that is available for your phone, charging times with the Standard Travel Charger (ACP-7U), the talk and standby times. Consult your service provider for more information.

### Charging Times

Charging times for the BL-5C Li-ion Battery (900 mAh) are approximate:

Battery option:	ACP-7U
BL-5C Li-ion	4 hours

### Standby and Talk Times

Mode	Talk time	Standby time
Digital	Min: 2.92 hours Max: 4.11 hours	Min: 1.8 days Max: 12.8 days



**Note:** Battery talk and standby times are estimates only and depend on signal strength, network conditions, features used, battery age and condition (including the effect of charging habits), temperatures to which battery is exposed, use in digital mode, and many other factors. Please note that the amount of time a phone is used for calls will affect its standby time. Likewise, the amount of time that the phone is turned on and in standby mode will affect its talk time.

## Charging and Discharging

Your phone is powered by a rechargeable battery. Note that the full performance of a new battery is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than 72 hours, since prolonged maintenance charging may shorten its lifetime. If left unused, a fully charged battery will discharge over time.

Temperature extremes can affect the ability of your battery to charge. Battery will not charge at temperatures above 140°F (60°C).

## • Chargers and other accessories

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from the devices listed on the following pages.



**Warning:** Use only batteries, chargers, and accessories approved by Nokia for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone and may be dangerous.

For availability of approved accessories, please check with your dealer.

When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Be aware that the information about the phone chargers and accessories found in this section is subject to change as the chargers and accessories change. Chargers and accessories described in this section are available for your phone. Contact your dealer for details and refer to the accessories brochure in your sales package for all Nokia Original accessories.



**Note:** When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than 72 hours, since prolonged maintenance charging of the battery could shorten its lifetime. If left unused, a fully charged battery will discharge over time.


- Standard Charger (ACP-7U)
- Travel Charger (ACP-12U)
- Rapid Mobile Charger (LCH-12)
- Headset (HS-5)
- Boom Headset (HDB-4)
- Data Cable (DKU-5)
- Desktop Charger (DCV-15)
- Headset Handsfree (BHF-1)
- Mobile Holder (MBC-17)
- Full Car Kit (CK-6) (requires Mobile Holder (MBC-17) sold separately)

## The HS-5 headset

Your sales package may include the HS-5 headset. Using the headset offers you convenient handsfree communications.

### BEFORE USING THE HEADSET:

- 1 Plug the headset into the jack at the bottom of your phone.
- 2 Insert earbud into ear.

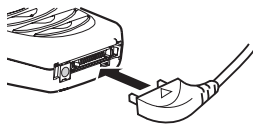


You can use the HS-5 button to answer or end a call, as well as activate voice dialing or voice commands.

You can also use the **Send** key or the **End** key to answer and end calls.

### ADJUST THE VOLUME

Change your phone ear piece volume to make the caller's voice louder or softer. Adjustments to the volume can only be made during a call, by pressing the up or down scroll key.

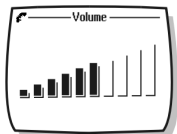

## • Nokia Xpress-on™ colour covers

The Xpress-on cover is available in several fashion colours. Xpress-on covers may be purchased from your authorized Nokia dealer.




**Warning:** Before changing the cover, always switch off the power and disconnect the phone from the charger or any other device. Always store and use the phone with the covers attached.



## REMOVE THE BACK COVER


Switch off the power. Disconnect the phone from the charger or any other device.

- 1 Push the release button on the back cover.
- 2 Slide the cover downward and lift off.

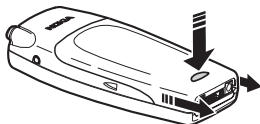

## REMOVE THE FRONT COVER


- 1 With the phone face down or up, grab the bottom of the front cover.
- 2 Gently pry the front cover away from the phone and lift the cover off the phone.

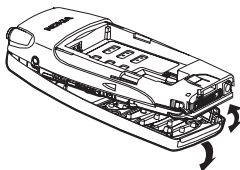

**Warning:** When the front cover is off the phone, be careful not to damage the phone screen face or the rubber gasket around it.


## REPLACE THE FRONT COVER

- 1 Align the keypad with the proper openings in the front cover.
- 2 Gently push the front cover into the phone until it clicks into place.

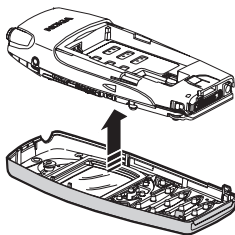

## REPLACE THE BACK COVER

 - 1 Insert the two catches of the back cover in the corresponding slots in the phone.
- 2 Slide the cover towards the top of the phone until it locks into place.



## • Nokia One-Year Limited Warranty

Nokia warrants that the Nokia wireless phone and enhancements are free from defects in material and workmanship. The warranty period for the Phone (Radio) units and all enhancements (excluding carry cases) is twelve (12) months from the date of purchase OR fourteen (14) months from date of wholesale shipment from Nokia, OR fifteen (15) months from the date of manufacture by Nokia. The warranty period for the Carry cases is three (3) months from the date of purchase or five (5) months from the date of wholesale shipment from Nokia.

During the warranty period, Nokia will, at its option, repair or replace the defective product free of charge. Replacement Product may be either new or remanufactured or refurbished.

However, if Nokia determines that the warranty conditions cannot be applied, the purchaser will be billed for the repair and shipping.

### EXCEPTIONS

This warranty is subject to the following exceptions:

- 1 Mobile or fixed installation, which is not in accordance with the installation instructions, published by Nokia, will void the warranty. Damage caused by a repair or an attempt to repair by other than a service centre authorized by Nokia will void the warranty;
- 2 This warranty covers normal consumer use and does not cover defects or damage to any product which, in the sole opinion of Nokia, has been subject to: improper storage, exposure to moisture or dampness, exposure to fire, sand, dirt, windstorm, lightning, or earthquake; to theft, battery leakage, unauthorized modification, misuse, neglect, abuse, misapplication, accident, alteration, improper installation, maladjustment of consumer controls, or abnormal operating conditions, or which has been attributable to acts of God;
- 3 Fuses are not covered by the warranty;
- 4 This warranty does not cover defects or damages caused by a product which is not approved by Nokia to be connected to its wireless phone;
- 5 This warranty does not cover defects or damages caused by improper or defective function of the carrier system or by inadequate signal reception by the antenna;
- 6 Removal and reinstallation costs are not covered by this warranty;
- 7 This warranty is applicable only to products bought through Nokia Products Ltd. in Ajax, Ontario, Canada, and sold either in Canada or Bermuda.
- 8 Removal, alteration, or defacing of the Serial Number Plate, or the enhancement Date Code Labels will void the warranty.

In no event shall Nokia be liable for incidental, special, or consequential damages, direct or indirect, loss of anticipated benefits or profits, loss of use of its wireless telephone, resulting from the use of its wireless phone, or its enhancements, or arising from any breach of this warranty.

#### **CLAIM PROCEDURE**

In order to obtain warranty performance, return the defective unit to the Nokia Service Centre with transportation charges prepaid (Shipping of the repaired unit may be paid by Nokia, in which case Nokia shall have risk of loss or damage during this shipment).

The proof of date of purchase will be required before in-warranty service is rendered.

Maintenance and service may be obtained in any authorized service centre in Canada.

#### **EXTENSION OF WARRANTY PERIOD**

When a repair is made, an extra 90-day service warranty is given to the labour and parts of the repair concerned. If replacement of a faulty unit is applied, instead of repairing, this 90-day service warranty is applied to the replaced unit.

Besides this 90-day service warranty, the warranty repairs or replacements do not affect the original warranty conditions, which are determined by the date of purchase.

**THE FOREGOING WARRANTY IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE.**

Some provinces do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

**FOR WARRANTY SERVICE LOCATIONS, CONTACT YOUR SERVICE PROVIDER/RETAILER/DEALER OR DIRECTLY TO:**

**NOKIA PRODUCTS LIMITED**

601 Westney Road South

Ajax, Ontario L1S 4N7

Tel: 905-427-1373

1-888-226-6542

Website: [www.nokia.ca](http://www.nokia.ca)

For products being returned to Nokia or its authorized service centres, the service provider/retailer/dealer shall prepay shipping charges, taxes, duties, insurance. Nokia shall have no risk for loss or damage during this shipment.

**NOTE:** As warranty is automatically registered, no further action is required by the consumer.

# **Appendix A Message from the CTIA (Cellular Telecommunications & Internet Association) to all users of mobile phones**

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved.  
1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036.  
Phone: (202) 785-0081

*Safety is the most important call you will ever make.*

## **A Guide to Safe and Responsible Wireless Phone Use**

Tens of millions of people in North America today take advantage of the unique combination of convenience, safety and value delivered by the wireless telephone. Quite simply, the wireless phone gives people the powerful ability to communicate by voice--almost anywhere, anytime--with the boss, with a client, with the kids, with emergency personnel or even with the police. Each year, Americans make billions of calls from their wireless phones, and the numbers are rapidly growing.

But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle--whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common sense--keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the speed limit. It means using seatbelts and requiring other passengers to do the same.

But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car. Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need.

When it comes to the use of wireless phones, *safety is your most important call.*

### **Wireless Phone "Safety Tips"**

Below are safety tips to follow while driving and using a wireless phone which should be easy to remember.

- 1 Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2 When available, use a hands free device. A number of hands free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
- 3 Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

- 4 Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
- 5 Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to do" list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip--dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix--they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
- 8 Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations--with your phone at your side, help is only three numbers away. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!
- 9 Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
- 10 Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted educational outreach to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely.

*The wireless industry reminds you to use your phone safely when driving.*

For more information, please call 1-888-901-SAFE.

For updates: <http://www.wow-com.com/consumer/issues/driving/articles.cfm?ID=85>

# Index

## Numerics

- 1-touch dialing 50
  - setup 50
- 3-way conference calls 45

## A

- ABC and 123 modes 14
- access codes
  - lock code 56
- accessibility
  - solutions 5
- accessories
  - battery 73
  - data cable 75
  - data cable DKU-5 75
  - mobile holder 75
- accessory
  - cigarette lighter charger 75
  - headset kit 75
  - travel charger 75
- activate
  - automatic redial 46
  - call forwarding 43, 45
  - TTY/TDD 39
- adjust the volume 75
- advanced calling features 43
- antenna
  - contact with 8
  - location 8
- automatic redial 46
- automatic update of service 58

## B

- battery
  - charging 8
  - important information 9
  - installing 8
  - prolonged charging 67
  - removal 9
- battery low indication 67

## C

- cable
  - connecting to a PC 66
- calculator 62
  - using 62
- calendar
  - alarms 61
  - make a note 61
  - note types 61
- call forwarding 43, 45
  - activate 45
  - cancel 45
  - feature codes 44
- call lists, clearing 26
- call restrictions 57
  - adding 57
  - editing 58
  - erasing 58
  - selecting 58
- call timers
  - clearing 27
  - turning on 27



- call waiting 45
- caller groups 24
  - assign a number 24
  - edit options 24
  - phone book menu 21
- calls
  - 1-touch dialing 50
  - 3-way calls 45
  - answer a call 11
  - call waiting 45
  - end a call 11
  - ignoring 3
  - make a call 11
  - phone lock 56
  - redial last 3
  - reject a call 11
- certification information 71
- change letter case 15
- characters, entering 16
- charge the battery 8
- clock
  - automatic settings 40
  - displaying the clock 40
  - hiding the clock 40
  - set the time 39
  - time format 40
- colour covers 75
- connecting to a PC 66
- contacting Nokia 5
- contacting your service provider 6
- Content Copier (PC Suite) 66

## **D**

- data cable 75
- Data Synchronization (PC Sync) 66
- dialed calls, checking 25

- dictionary, add words 18
- display language 39
- download software 66

## **E**

- ear piece 75
- edit a name or number 21
- e-mail 32
- emergency calls 70
- enter
  - characters 16
  - numbers 16
  - punctuation 16
- enter a space 15
- entering letters and numbers 14
- entering text
  - change letter case 15
- entering text
  - enter a space 15
- erase
  - mistakes 15
- erase mistakes 15
- erase names or numbers 21

## **G**

- games 65
  - starting 65

## **H**

- headset
  - setup 75
- Headset Kit 75
- help 12

## **I**

- in-call options 43

## K

- keyguard 55
- keypad
  - about 11
  - lock 55
- keys, selection 10

## L

- label 6
- language setting 39
- lock code 56
  - changing 56
- lock keypad 55

## M

- memory status, checking 24
- menus, phone 12
- messages
  - e-mail messages 32
  - options 31
  - text 30
  - using templates 31
  - writing 30
- missed calls, checking 25
- mistakes, erasing 15
- mobile holder 75

## N

- name or number edit 21
- navigate phone menus 12
- network services 5
  - subscribing 5
- Nokia Customer Care 6
- number type, changing 22
- number types 21
- numbers, add to message 19
- numbers, entering 16

## O

- one-touch dialing 50
- options
  - in-call menu 43

## P

- PC Connectivity 66
- PC Suite
  - Content Copier 66
  - Instructions 66
  - PC Sync 66
- PC Sync (PC Suite) 66
- phone
  - certification information 71
  - radio frequency signals 71
- phone book
  - add entries 20
  - add number to entry 21
  - add other info 23
  - caller groups 24
  - change number type 22
  - edit entry 21
  - erase names 23
  - erase numbers 23
  - erasing 23
  - menus 21
  - opening 20
  - primary number 22
- phone book menu 13
- phone book menu options 13
- phone help 12
- phone lock 55
  - activating/deactivating 56
  - allowed number 56
  - lock code 56
  - making a call 56

- phone menus 12
- power on your phone 9
- predictive text 17
  - tips for 18
  - turning off 18
  - turning on 18
- primary number, specifying 22
- profile
  - customizing 37
  - defined 37
  - renaming 38
  - selecting 37
- punctuation, entering 16

## Q

- quick save 20

## R

- Rapid Cigarette Lighter Charger 75
- received calls, checking 25
- remove the battery 9
- restrict calls 57
- ring options, setting 38
- ring volume 38
- ring volume, setting 38
- ringing tone, setting 38
- rings and tones 37

## S

- SAR 71

- save

- e-mail address 23
  - phone book entry 20
  - street addresses 23
- scroll keys 12

- scroll through menus 12
- security 55
  - lock keypad 55
  - phone lock 55
- security settings
  - call restrictions 57
  - phone lock 55
- selecting call restrictions 58
- selection keys 10
- service provider
  - signing up 5
- service provider, contacting 6
- set the ring volume and tone 38
- set up
  - your headset 75
  - your phone 8
- setting time (manual) 40
- setting time (network) 40
- shortcuts 13
- Snake II 65
- software download 66
- spaces, entering 16
- special characters 16
- specify a primary number 22
- start screen
  - about 10
- starting a game 65
- strings, touch tone 53
- switch on your phone 9
- symbols, inserting 19

## T

- templates 31
- text messages
  - e-mail messages 32

- touch tones
  - length 52
  - manual 52
  - sending 52
  - storing 53
- Travel Charger 75
- turn on your phone 9

## U

- underlined words 18
- understanding wireless network services 5

## V

- view
  - dialed calls 25
  - missed calls 25
  - new text messages 32
  - received calls 25
- voice command
  - shortcut 4
- voice commands 41

- voice commands
  - create a voice tag 41
  - using 41
- voice dialing 48
  - dialing a number 49
  - important notes 49
  - voice tags 48
    - working with tags 42, 50
- voice mail greetings 28
- voice mail, setting up 28
- voice tags
  - add 48
  - change or erase 50
- volume, adjusting 75

## W

- wireless network services 5

## X

- Xpress-on colour covers 75

## NOTES