

PRINTRONIX®

Administrator's Manual



SL/T5R Energy Saver
RFID Smart Label and Thermal Printers

Printronic makes no representations or warranties of any kind regarding this material, including, but not limited to, implied warranties of merchantability and fitness for a particular purpose. Printronix shall not be held responsible for errors contained herein or any omissions from this material or for any damages, whether direct, indirect, incidental or consequential, in connection with the furnishing, distribution, performance or use of this material. The information in this manual is subject to change without notice.

This document contains proprietary information protected by copyright. No part of this document may be reproduced, copied, translated or incorporated in any other material in any form or by any means, whether manual, graphic, electronic, mechanical or otherwise, without the prior written consent of Printronix.

COPYRIGHT © 2005, 2013 PRINTRONIX, INC. All rights reserved.

Trademark Acknowledgements

Printronix, IGP, Auto Label Mapping, LinePrinter Plus, PGL, and PrintNet are registered trademarks of Printronix, Inc.

SL/T5R and Thermaline are trademarks of Printronix, Inc.

HP is a registered trademark of Hewlett-Packard Company.

Code V is a trademark of QMS, Inc.

QMS is a registered trademark of Quality Micro Systems, Inc.

IBM is registered trademark of International Business Machines Corp.

Monarch is a registered trademark of Paxar Corporation.

MS-DOS and Windows are registered trademarks of Microsoft Corporation.

Centronics is a registered trademark of Genicom Corporation.

IEEE is a registered service mark of the Institute of Electrical and Electronic Engineers, Inc.

ANSI is a registered trademark of American National Standards Institute, Inc.

EIA is a registered service mark of Electronic Industries Association.

ZPL, ZPL II, and Zebra are registered trademarks of Zebra Technologies Corporation.

TEC is a registered trademark of the Toshiba TEC Corporation.

Intermec is a registered trademark of the Intermec Technologies Corporation.

SATO is a registered trademark of SATO America, Inc.

DPL is a trademark and Datamax is a registered trademark of Datamax Technologies Corporation.

IER is a registered trademark of IER Siège

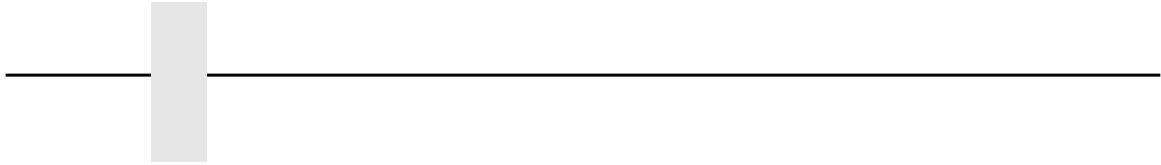




Table of Contents

1	Introduction	11
	The SL/T5R Energy Saver Family of Printers.....	11
	Standard Features	12
	Optional Features	13
	Thermal Printer Technology	14
	The Printing Process.....	14
	Dynamic Print Control	15
	Warnings and Special Information	15
	Manual Conventions.....	15
	Thermal Consumables	16
	Media Selection	16
	Ribbons.....	17
	Setting Up the Printer	17
	Unpacking the Printer	17
	Installation.....	19
2	Operation.....	23
	Controls and Indicators.....	23
	Power Switch	23
	Control Panel	23
	Powering On the Printer	27
	Operating Modes	27
	Media Handling Modes.....	27
	Loading Media and Ribbon.....	28
	Loading Roll Media	29
	Loading Fanfold Media	36
	Loading Ribbon.....	40
	Using the Optional Internal Rewinder	43
	Batch Rewind Mode.....	43
	Label Peel-Off.....	48
	Removing the Paper Path.....	51
	Printing Adjustments.....	52
	Printhead Pressure Adjustment	52
	Printhead Pressure Block Adjustments	53
	Positioning the Media Sensors	54
	Sensing Different Media Types	59

Running Auto Calibrate	60
Running Media Profile	62
Running Manual Calibrate	66
Cleaning.	68
Exterior Cleaning	68
Interior Cleaning.....	68
Cleaning the Printhead, Platen Roller, Media Sensors and Media Damper	69
3 Configuring The Printer	73
Overview	73
Setting Printer Configuration Parameters.....	73
Moving within the Configuration Menu	73
Selecting a Menu Option	74
Changing Printer Settings	75
Saving a Configuration	76
Auto Save Configuration	77
Specifying a Power-Up Configuration.....	78
Modifying a Saved Configuration	79
Printing a Configuration.....	81
Loading A Saved Configuration.....	81
Menu Overview.....	82
Main Menu.....	84
QUICK SETUP	95
QUICK SETUP Submenus.....	96
CONFIG. CONTROL.....	104
CONFIG. CONTROL Submenus.....	105
MEDIA CONTROL.....	107
MEDIA CONTROL Submenus	108
CALIBRATE CTRL	127
CALIBRATE CTRL Submenus.....	128
PRINTER CONTROL	135
PRINTER CONTROL Submenus.....	137
EMULATIONS	149
Overview	149
COAX SETUP	153
TWINAX SETUP.....	156
SPC COAX SETUP	158
SPC TWINAX SETUP	159
IPDS SETUP	160
TN3270 SETUP.....	164
TN5250 SETUP.....	166

PGL SETUP	168
VGL SETUP	170
P-SERIES SETUP.....	172
P-SER XQ SETUP	174
SERIAL MATRIX SETUP	176
PROPRINTER XL SETUP	178
EPSON FX SETUP	180
Emulation Submenus	182
DIAGNOSTICS	225
DIAGNOSTICS Submenus	226
PARALLEL PORT	229
PARALLEL PORT Submenus.....	230
SERIAL PORT.....	233
SERIAL PORT Submenus	234
C/T PORT.....	241
C/T PORT Submenus	241
USB PORT	242
USB Port Submenu.....	242
ETHERNET PORT	243
ETHERNET PORT Submenu.	243
ETHERNET ADDRESS.....	244
ETHERNET ADDRESS Submenus	245
ETHERNET PARAMS.....	246
ETHERNET PARAMS Submenus	247
WLAN ADDRESS.....	249
WLAN ADDRESS Submenus	250
WLAN PARAMS.....	251
WLAN PARAMS Submenus	253
KERBEROS PARAMS	257
KERBEROS PARAMS Submenus.....	257
WLAN EAP	260
WLAN EAP Submenus	260
PRINTER MGMT.....	262
PRINTER MGMT Submenus	262
DATE.....	263
Date Submenus	263

4	Downloading Software	265
	Loading Flash Memory	265
	Downloading Software with the Firmware Download Utility	266
	Downloading Software through the Parallel Port	267
	Downloading Software through the NIC	269
	Downloading Software through the NIC using FTP	270
	Downloading Software through the USB Port	272
	Downloading Software through the Printronix Windows Driver	273
	Downloading Software if Flash Contains Only Boot or Corrupt Code	274
	Using TrueType Fonts	275
	Downloading TrueType Fonts	275
	Printronix Windows Driver	276
	PGL Emulation (Online)	276
	Download Mode	277
	PTX_SETUP	279
	Labeling Applications	279
	Filename Extensions Not Shown in Menus	279
	Select and Print Downloaded TrueType Fonts	280
5	Interfaces	281
	Overview	281
	Auto Switching	281
	Centronics Parallel Interface	282
	Centronics Parallel Interface Signals	283
	IEEE 1284 Parallel Interface	284
	Compatibility Mode	284
	Nibble Mode	284
	Byte Mode	284
	Signals	285
	RS-232 and Optional RS-422 Serial Interfaces	287
	RS-232	287
	RS-422	288
	USB	289
	Ethernet and Wireless	289

6	Diagnostics and Troubleshooting.....	291
	Printer Tests	291
	Troubleshooting Common Situations	291
	Improving Processing Time	292
	Data Exchange	292
	Controlling Print Quality	294
	Determining Printhead Wear	295
	Replacing the Printhead	296
	Restore the Printer to Operation	298
	Diagnostics for E0xx, Bad NVM, or ILL NVM Errors	299
	Solving other Printer Problems	300
	Printer Alarms	308
	Fault Messages.....	308
A	Specifications	333
	Print Method.....	333
	Media	334
	Ribbon	336
	Indicators and Switches	336
	Memory	336
	Media Cutter Option	337
	Host Interfaces	338
	Power.....	338
	Environmental.....	339
	Physical	339
	Acoustic Specifications	339
	Maximum Page Length	340
B	Printer Options.....	341
	Hardware Options	341
	Interface Options.....	342
	Supplies and Accessories	343
	Genuine Printronix Thermal Transfer Ribbons	344
	Genuine Printronix Media	345
	Accessories	347
C	ASCII Control Codes.....	349

D	Media Cutter Installation	351
	Prepare the Printer	351
	Installing the Cutter.....	352
	Restore the Printer To Operation.....	353
	Removing the Media Cutter	353
E	Media Cutter Tray Installation	355
	Assembling the Media Cutter Tray.....	355
	Installing the Media Cutter Tray	356
F	Selecting Supported RFID Tag Types	359
	Read this First.....	359
	Selecting RFID Tag Types	359
G	PTX_SETUP Commands	361
	Overview	361
	The PTX_SETUP Commands.....	361
	General Commands.....	362
	Thermal Commands	369
H	Customer Support.....	371
	Printronix Customer Support Center	371
	Printronix Supplies Department	371
	Corporate Offices	372
I	Glossary	373
J	Communication Notices and Warranties	379
	Communication Notices.....	382
	Software License Agreement	385
	Warranty Information	392

1

Introduction

The SL/T5R Energy Saver Family of Printers

NOTE: As used in this manual, the terms “T5R” and “printer” refer to all models within the series. “SL” refers to all SmartLine RFID models.

The SL/T5R Energy Saver series consists of a family of high quality, direct thermal and thermal transfer printers specifically designed for printing labels and tags from any MS-DOS®, Windows®, ASCII, or EBCDIC (with the Coax/Twinax option) based compatible computer.

The T5R, Smart Ready, and SmartLine series are comprised of the products detailed in Table 1.

NOTE: All 4” models are Smart Ready.

Table 1. The T5R, Smart Ready, and SmartLine Series

Version	Max Print Speed (ips)	Printing Density (dpi)	Max Print Width (inches)
T5204R	10	203	4.1
T5204R DT*	10	203	4.1
SL5204R	10	203	4.1
T5304R	8	300	4.1
T5304R DT*	8	300	4.1
SL5304R	8	300	4.1
SL5304R	8	300	4.1
T5206R	10	203	6.6
SL5206R	10	203	6.6
T5306R	8	300	6.6
SL5306R	8	300	6.6
T5208R	8	203	8.5
T5308R	6	300	8.5

* Direct Thermal only 4 inch models (no ribbon transfer support)

Standard Features

- **64MB DRAM memory** (fixed).
- **16MB Flash memory** (fixed).
- **Auto Label Mapping®**: For compatibility with programs written for Printronix line matrix printers.
- **Bar Codes**: Supports over 20 types of bar codes.
- **Download**: Fonts, forms, and graphics to printer memory.
- **Emulations**:
 - Printronix LinePrinter Plus® (LP+). Provides direct compatibility with Printronix P-Series printers, Epson FX-1050, Proprinter IIIXL, and Serial Matrix Printers.
 - Printronix PGL®. Provides printer system commands for text, barcodes, graphics, lines, and boxes.
 - Printronix VGL. Emulates the QMS Code V™ Version II programming language to produce on-line forms, bar codes, and alphanumeric text generation in both normal and high resolution.
 - ZGL, TGL, IGL, STGL, DGL, MGL, and IEGL Interpreters: ZGL (Zebra®), TGL (TEC®), IGL (Intermec®), STGL (SATO®), DGL (Datamax®), MGL (Monarch®), and IEGL (IER®) interpreters are powerful integration tools that allow the SL/T5R to function in virtually all legacy ZPL, TEC, IPL, SATO, DPL™, MPCL II®, and IER® application environments without requiring modification to host data stream.
- **High Resolution Printhead**: For sharp graphics and text.
- **Label Taken Sensor**: Detects removal of labels in Tear-Off mode (and in Peel-Off mode when optional rewinder is installed).
- **Resident Fonts**: Letter Gothic Bold (#93779), Courier Bold (#93952), CG Triumvirate Bold Condensed (#92250), OCR-A (#90993), OCR-B (#91409), CG Triumvirate (#92244), CG Triumvirate Bold (#92248), and CG Times New Roman (#92500).
- **Standard Interfaces**:
 - 10/100Base Ethernet
 - Network Interface Port: This interface allows you to attach the printer to a LAN (Local Area Network) rather than attaching it directly to a host computer. The port is visible on the back panel. The ethernet port is a 10/100Base and supports data transfer rates up to 100 Mbps. The PrintNet Enterprise Suite (PNE) remote management software is included with the package. The option is enabled by a security key.
 - Parallel: Centronics®-compatible parallel, IEEE® 1284 compliant parallel

- Serial: RS-232
- USB 2.0 Universal Serial Bus

NOTE: The interface cable needed to connect the printer to the host device is supplied by the user.

- **Tear-Off Mode:** Positions the label at the tear-off position and detects its removal before printing the next label.
- **Tear-Off Strip Mode:** Prints a specified number of labels and positions the last label at the tear-off position.
- **Thermal Transfer and Direct Thermal Printing:** On all printers (except DT models, which print only in direct thermal mode).
- **Ventless System:** For operation in environments with airborne particulate matter without compromising performance.

Optional Features

Ask your authorized representative about the following enhancement options:

- **Coax/Twinax Host Interface:** Provides connection to a host computer system using a coaxial or twinaxial interface.
- **Fonts:** A selection of purchasable fonts can be loaded from the host computer into printer memory.
- **GPIO (General Purpose Input/Output):** Enables a T5R printer to interface with an external device such as a label applicator system. GPIO is available as a factory option or field installable kit that also includes a mating connector for field interface, installation instructions, and operation manual.
- **Internal Label Rewinder:** In label peel-off mode, peels off labels one at a time before printing the next label and rewinds the liner into a discardable roll. In batch rewind mode, rewinds printed labels into a removable roll.
- **IPDS:** Available for coax/twinax, a NIC, or a combination of both. The printer may be ordered with this option installed and the required hardware to support it, or it can be field installed by an authorized service representative at a later date. The printer must have a coax/twinax interface or NIC, and 300 dpi printhead installed to support this field installed option.

NOTE: RFID is not supported in IPDS applications.

- **Media Cutter:** Automatically cuts printed media when the media exits the printer. Available for 4, 6, and 8 inch printers.
- **Media Cutter Tray:** Used with the media cutter option to catch and collect the cut media in a bin.
- **NIC, Wireless:** This card provides wireless 802.11b/g connectivity without expensive cabling and reconfigurations required from a wired network. PNE is standard with this option.

- **Online Barcode Validator:** Analyzes each bar code to ensure it meets stringent scanning standards. This inspection validates the symbology specifications of both linear and PDF417 bar code images. Bad bar code labels are cancelled and good replacement labels are printed automatically.
- **RFID MP2 Encoder:** The RFID (Radio Frequency Identification) UHF encoder reads and writes information to smart labels (with embedded RFID tags) with a pitch typically two to six inches. These labels are used on shipping cartons and pallets.

NOTE: The RFID encoder is standard on the SL5R, and optional for the T5R.

- **RS-422:** Serial interface option.
- **TN5250/TN3270:** Enables your printer to communicate with an IBM host through a network interface using the 5250/3270 datastream. This feature allows you to use an application generated for the coax/twinax emulation to be printed through the network interface.

NOTE: RFID is not supported by TN5250/3270 applications.

For more information about printer options, see Appendix B.

Thermal Printer Technology

Quiet and fast, with excellent print quality, your multifunction thermal printer uses an inline thermal printhead. The thermal printer operates differently from a line matrix or laser printer, because the thermal printer uses a printhead with heating elements and special paper or ribbon.

The Printing Process

The thermal printhead allows two modes of operation:

- **Direct Thermal**

During *direct* thermal printing, the thermal printhead selectively heats small, rectangular *thermal* dots. When these contact the coated thermal paper, the dyes and developers in the coating react to the heat and develop an image. This mode of printing is generally used for short-term labeling applications.

- **Thermal Transfer**

During thermal *transfer* printing, the heated thermal dots contact a thermal ribbon. The heat reacts with the ribbon and bonds the image to the paper. This method is used especially for abrasive, long-storage applications and for specialized applications, such as in extreme environmental conditions or where tamper-proofing is required.

NOTE: Thermal transfer is not supported on 4 inch DT model printers.

Dynamic Print Control

Dynamic print control is a unique feature of your thermal printer that provides excellent print quality by preventing unevenness of print density.

Print quality largely depends on how the thermal paper or the thermal ribbon and thermal transfer paper responds to the heat of the thermal printhead. During printing, the thermal printhead must reach a set temperature in the shortest possible time. Then it must cool down to the original temperature in the shortest possible time after printing. Thus print quality is dependent on the precise control of the energy supplied to the thermal dots.

The dynamic print control is a method for predicting the quantity of heat required to print dots based on the results of the previous printing. This prevents unevenness of print density and results in the printing of narrow-ladder bar codes or vertical grid lines that are straight from the microscopic viewpoint.

Warnings and Special Information

For your safety and to protect valuable equipment, read and comply with all information highlighted under special headings:

- | | |
|------------------|--|
| WARNING | Conditions that could harm you and damage the equipment. |
| WARNING | Achten Sie auf folgendes, um keine Personen in Gefahr zu bringen bzw. das Gerät zu beschädigen. |
| WARNING | Condiciones que pueden causar daños a personas y equipos. |
| WARNING | Conditions à respecter pour éviter tout danger corporel et dommage matériel. |
| WARNING | Condizioni che possono arrecare danni alle persone e alle apparecchiature. |
| CAUTION | Conditions that could damage the printer or related equipment. |
| IMPORTANT | Information vital to proper operation of the printer. |
- NOTE:** Information and helpful tips about printer operation.

Manual Conventions

- Operator panel keys are printed in uppercase letters.
Example: Press the PAUSE key and then press ENTER.
- Operator panel keys are often shown by their symbol or icon (located on the control panel directly below the key).
Example: Press the ↵ key for ENTER.
- Liquid Crystal Display (LCD) messages are printed in uppercase letters inside quotation marks (" ").

Example: When “OFFLINE” appears on the LCD, you may release the PAUSE key.

- LCD fault messages display the specific fault in uppercase letters on the top line. A corrective action in upper and lowercase letters displays on the bottom line.

Example: PAPER OUT
Load Paper

- Key combinations are indicated by the + (plus) symbol.

Example: Press ↑ + ↓ means *Press the Up ↑ key and the Down ↓ key at the same time.*

Thermal Consumables

Media Selection

Since there are two print modes of operation, there are two kinds of thermal media:

- Direct thermal media
- Thermal transfer media

Direct thermal media is paper coated with special chemicals that act as an accelerator, acceptor dye, and binder. During direct thermal mode, the heat from the thermal printhead contacts the paper and causes a chemical reaction.

Thermal transfer media requires ribbon. A wide range of Printronix thermal transfer media is available, such as film or synthetic paper substitutes. Most of these media options can be die-cut for easy label applications. The wide selection of media sizes and face stocks have been tested with Printronix ribbons for print quality and usage. Consult your Genuine Printronix Supplies Catalog, call the Printronix Customer Support Center (see page 371), or access the Printronix web page at www.primtronix.com.

NOTE: The term “media” used in this manual refers to all the different kinds of paper or tag stock that can be used in the printer.

See “Genuine Printronix Media” on page 345 for more information.

Ribbons

Printronix offers a wide range of ribbons specifically engineered to enhance printing capabilities and to prevent premature printhead wear. Therefore, you should use a Genuine Printronix Thermal Ribbon in your printer.

See “Genuine Printronix Thermal Transfer Ribbons” on page 344 for more information.


Setting Up the Printer

Unpacking the Printer


The printer is shipped in a carton and protective bag. The top lid of the carton has instructions for removing the internal packing material. Keep all packing material in case repacking is required.

CAUTION Avoid touching the electrical connectors to prevent electrostatic discharge damage while setting up the printer. The discharge of accumulated electrostatic energy can damage or destroy the printhead or electronic components used in this device.


CAUTION Do not place the printer on its backside during unpacking or handling, because you may damage the printer interface connector.

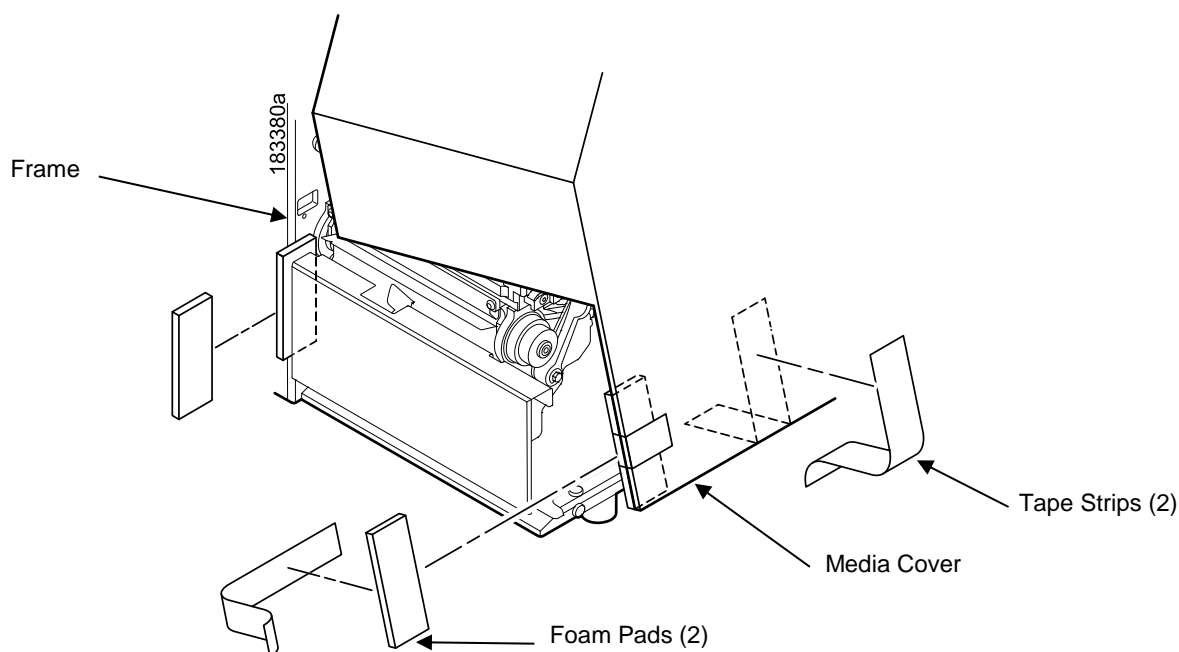

1. Remove the tape strips from the media cover. Lift open the media cover.
2. Remove the tape securing the foam pad to the inside of the media cover.
3. Remove the foam pad between the front door and the frame.

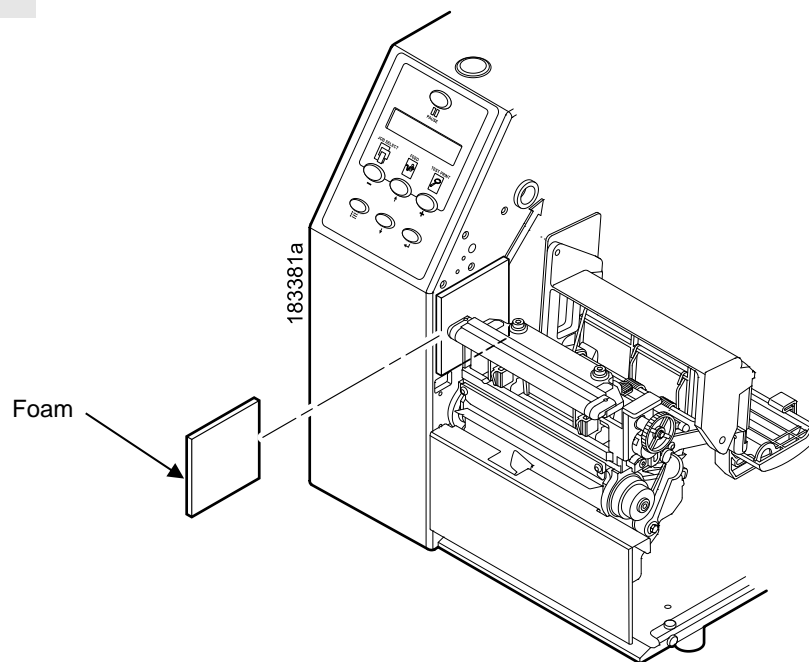

4. Remove the foam pad between the pivoting deck and the frame.

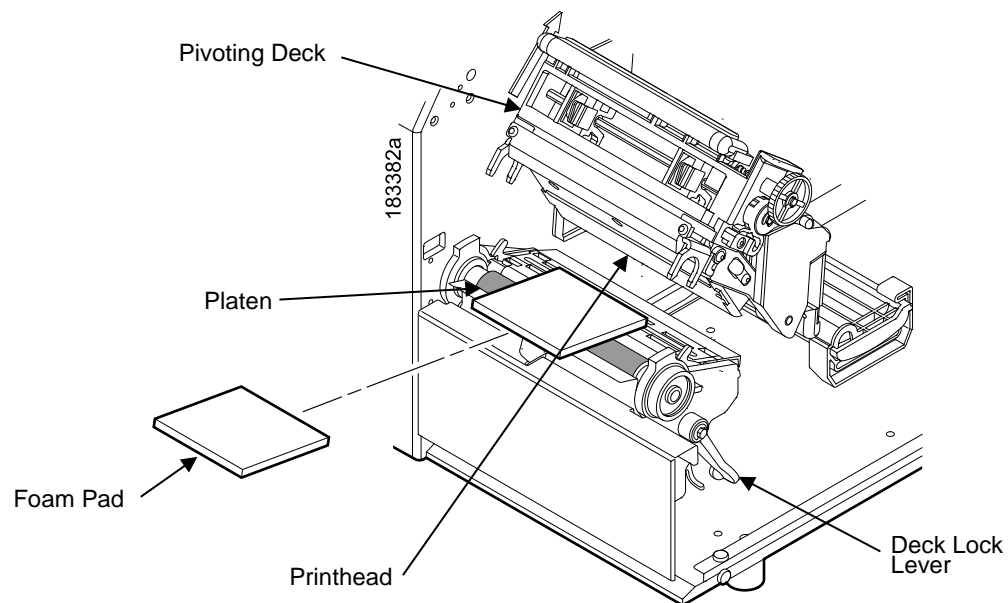

5. Open the pivoting deck by rotating the blue deck lock lever fully clockwise.
6. Remove the foam pad from between the printhead and the platen (rubber roller).
7. Close the pivoting deck and media cover.

Installation

The following sections will guide you through the printer installation process.

1. Place the printer on a flat level surface that allows easy access to all sides of the printer.

CAUTION Never operate the printer while it is resting on its side or upside down.

2. Check that the printer power switch is in the OFF (O) position.

WARNING Failure to properly ground the printer may result in electric shock to the operator.

In compliance with international safety standards, this printer has been equipped with a three-pronged power cord. When inserted in a correctly wired power outlet, the ground conductor will ensure that the printer chassis is at ground (earth) potential. Do not use adapter plugs or remove the grounding prong from the cable plug. If an extension cord is required, ensure that a three-wire cable with a properly grounded plug is used.

3. Attach the AC power cord to the AC power receptacle in the back of the printer.

CAUTION Verify the required voltage on the printer's model number label on the rear of the printer.

4. Attach the AC power cord to a grounded (three prong) electrical outlet of the proper voltage.

5. Attach Interface:


a. Parallel Interface

Attach a suitable parallel printer cable from the computer to the Centronics/IEEE 1284 interface connector at the back of the printer. Snap the bail locks to the Centronics connector to secure the interface cable to the printer.

b. Serial Interface

Attach a suitable serial printer cable from the computer to the DB-9 RS-232 serial interface connector at the back of the printer. For additional information on serial cable wiring, refer to “Diagnostics and Troubleshooting” on page 291.


NOTE: The printer supports simultaneous connection of the parallel, serial, ethernet, and USB interfaces using the Auto Switching feature. Auto Switching is described on page 281.

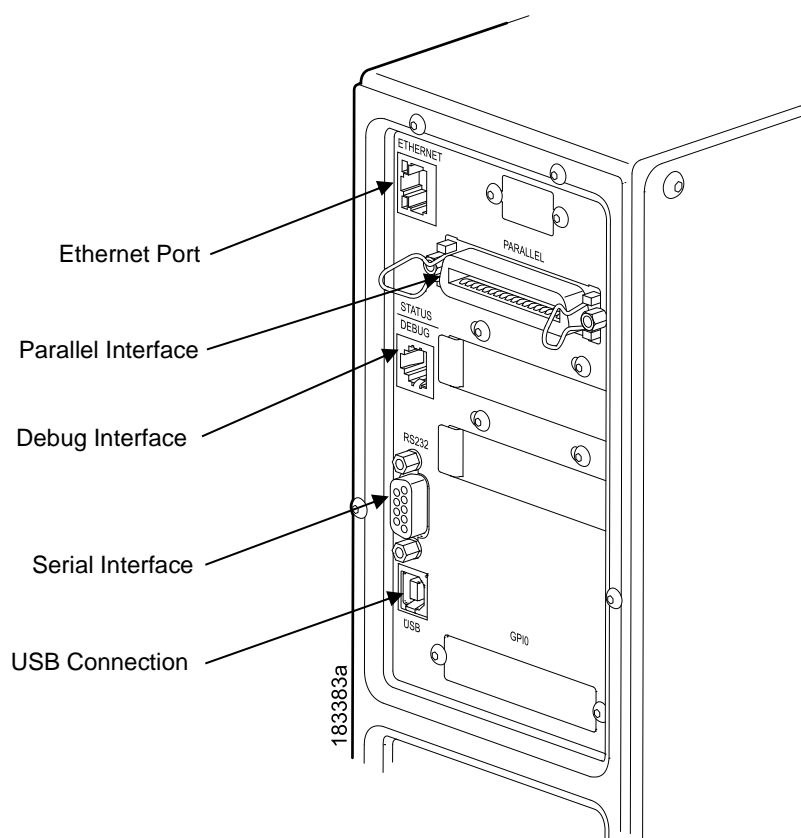Standard Interface Panel

If your printer is equipped with the optional Coax/Twinax, and/or optional RS-422, the rear I/O panel will appear as illustrated below.


NOTE: Autoswitching does not support simultaneous switching between coax and twinax interfaces. However, autoswitching supports all interfaces including coax or twinax. Auto Switching is described on page 281.

Coax/Twinax and RS-422 Panel

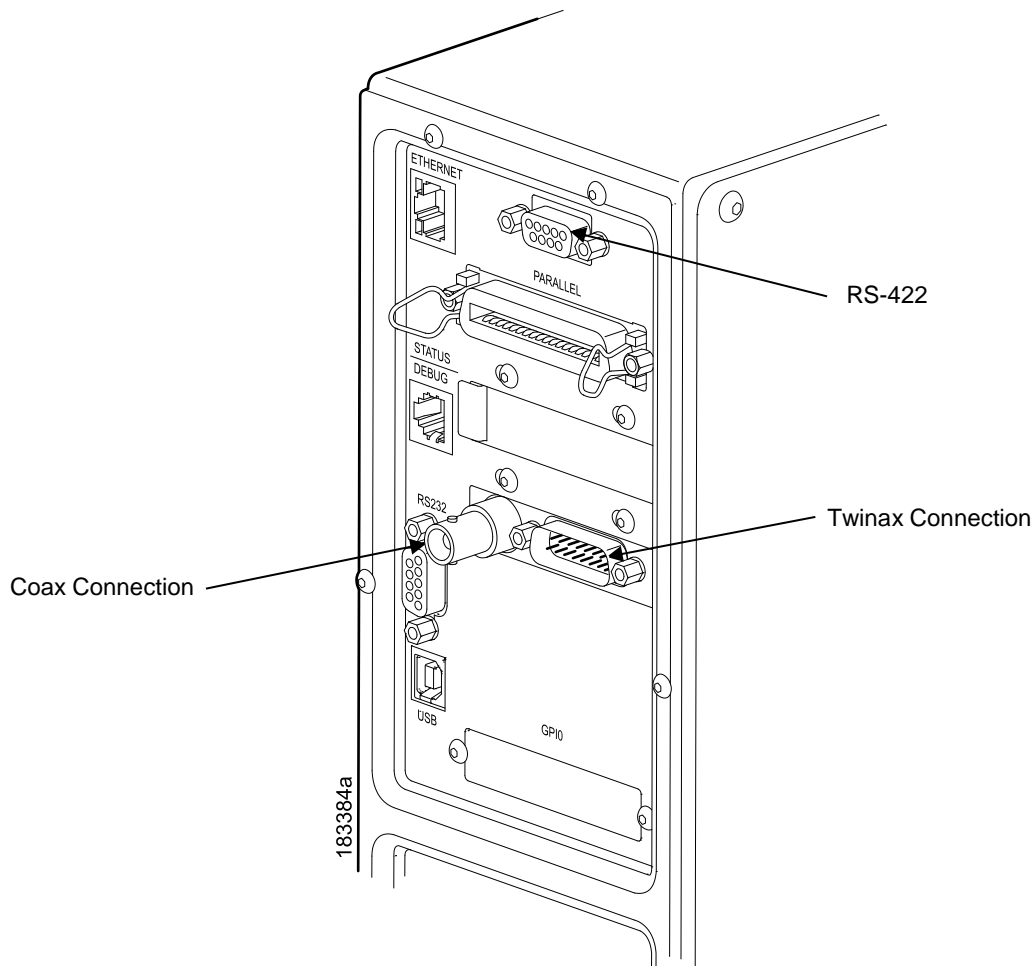

If your printer is equipped with the optional Wireless and Optional GPIO it will appear as illustrated below.

Wireless And GPIO Interface Panel

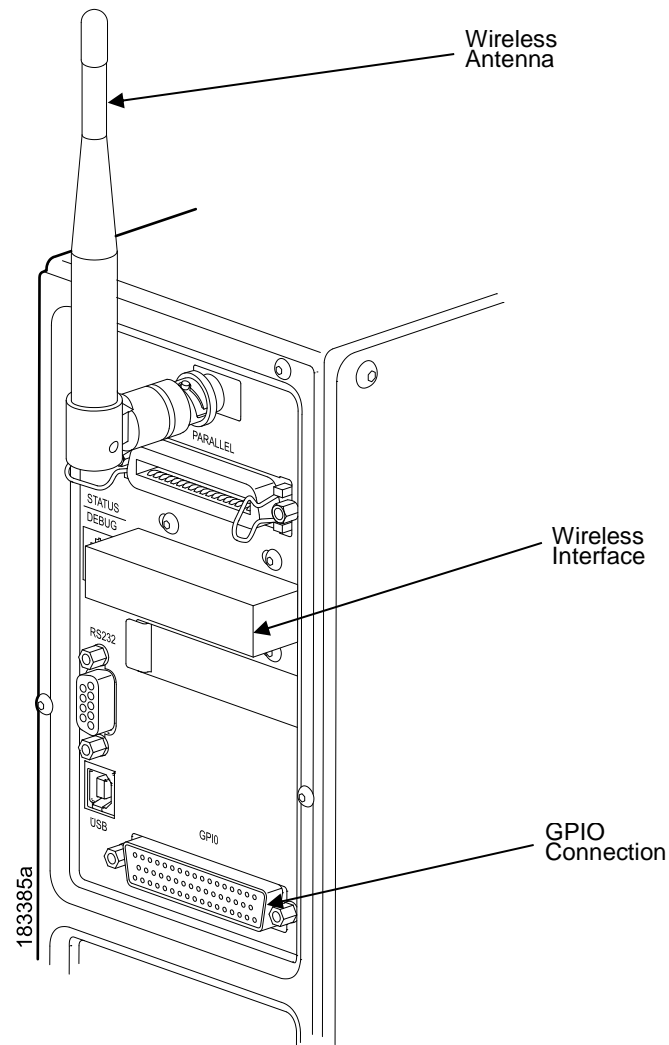

c. Coax Connection

Attach a suitable coaxial cable from the computer to the coax connector located in the I/O plate in the back of the printer.

d. Twinax Connection

Attach a suitable twinax cable from the computer to the twinax connector located in the I/O plate in the back of the printer.

e. NIC Connection

Insert a suitable NIC cable from your hub or switch to the NIC connector located in the I/O panel in the rear of your printer.

2

Operation

Controls and Indicators


Power Switch

The power switch is located on the bottom back panel of the printer. To apply power, place the switch in the | (ON) position. When you first power on the printer, a series of initialization messages will appear on the Liquid Crystal Display (LCD) on the control panel.

To remove power, place the power switch in the O (OFF) position.

Control Panel



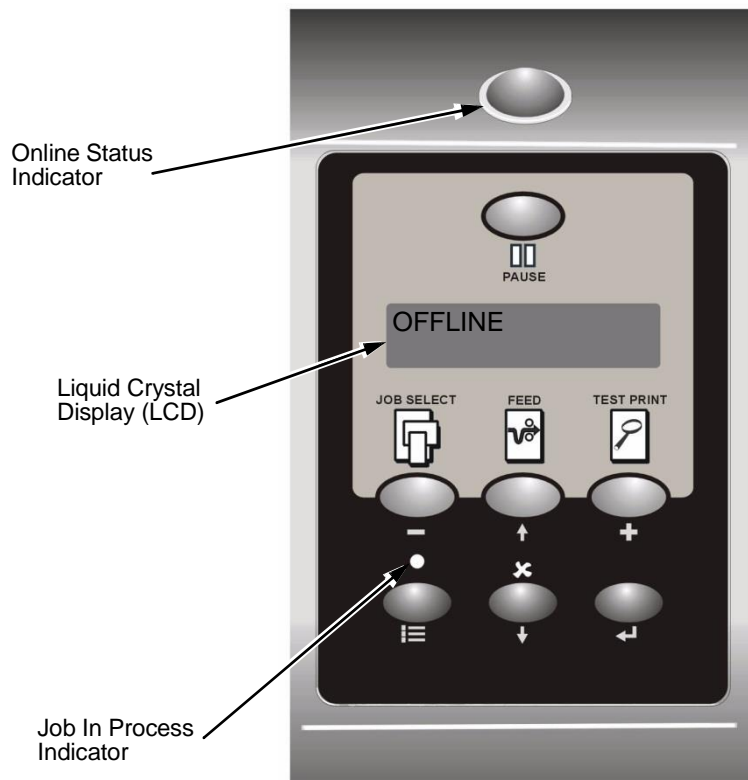


The control panel is located on the front of the printer and includes an LCD, indicators, and control keys (buttons). These are described in the following tables. (Also refer to Chapter 3.)







Status and Display Indicators

Indicator	Description	Function in Online Mode	Function in Offline Mode	Function in Menu Mode
Online Status	Indicates when the printer is online, offline, or when there is a fault condition.	Stays lit when the printer is online, ready to print, and accept data from the host. Flashes during a fault condition.	Off when the printer is offline. Flashes during a fault condition.	Off. Flashes during a fault condition.
Liquid Crystal Display (LCD)	A backlighted liquid crystal display with two rows of 16 characters each.	Displays "ONLINE," the interface type, and emulation in use. During a fault condition, displays the specific fault message and the corrective action.	Displays "OFFLINE." During a fault condition, displays the specific fault message and the corrective action.	Displays main menu, submenu, or option. During a fault condition, displays the specific fault message and the corrective action.
Job In Process	Indicates when the printer is receiving or processing data.	Flashes when receiving data. Stays lit when data has been processed and is waiting to be printed. Off when no data is being received or when no data remains in the buffer.	Flashes when receiving data. Stays lit when data has been processed and is waiting to be printed. Off when no data is being received or when no data remains in the buffer.	None

Control Panel Keys

Button	Description	Function in Online Mode	Function in Offline Mode	Function in Menu Mode
 PAUSE	PAUSE Key Toggles the printer between Online and Offline Modes.	Sets printer to Offline Mode.	Sets printer to Online Mode.	Sets printer to Offline Mode.
JOB SELECT  -	JOB SELECT Key DECREMENT Key in Menu Mode	None	Displays the name and number of the last loaded configuration and allows you to load the factory and/or pre-stored printer configurations.	Scrolls left through main menus. Decrements option values within submenus.
FEED  	FEED Key UP Key in Menu Mode	Advances the media one label length.	Advances the media one label length.	Scrolls the current menu selection one level up.
TEST PRINT  +	TEST PRINT Key Pressing the ↵ (ENTER) key with a Diagnostic Test displayed initiates the test. Pressing ↵ again terminates the test. INCREMENT Key in Menu Mode	None	Selects the Printer Tests menu and scrolls through the Test Print patterns. See “Printer Tests” on page 226.	Scrolls right through main menus. Increments option values within submenus.

Control Panel Keys (cont.)

Button	Description	Function in Online Mode	Function in Offline Mode	Function in Menu Mode
 	<p>CANCEL Key When the CANCEL key is enabled, pressing it will clear all data in the printer buffer and prevent printing of that data. Note: The factory default = Disable. However, when the Coax/Twinax Interface option is installed, the factory default = Enable.</p> <p>DOWN Key in Menu Mode</p>	None	Clears all data in the printer data buffer when enabled.	Scrolls the current menu selection one level down.
	MENU Key	Takes the printer Offline and selects the Menu Mode.	Selects the Menu Mode.	Scrolls between main menu selections.
	<p>ENTER Key Pressing the ↵ (ENTER) key in Menu Mode selects the displayed option or value. An asterisk then appears next to the option or value indicating it has been selected. Note: If the ENTER key is locked, "ENTER SWITCH LOCKED" displays on the LCD for one second. Press the ⌵ (DOWN) and ↵ (ENTER) keys at the same time to unlock the ENTER key.</p>	None	None	Selects the current menu value and displays an asterisk (*) next to the value.

Powering On the Printer

When you power on the printer, it executes a self-test. During the self-test, the LCD momentarily displays the DPI resolution (203 or 300 DPI) of the installed printhead. The default power-on state is online. Once the printer has successfully initialized, the ONLINE status indicator light illuminates, and the LCD indicates the communication interface selected and the emulation selected.

If there is a fault during the self-test, the ONLINE status indicator flashes, and a fault message appears on the display. The alarm may also sound, if configured to do so.

Operating Modes

The current operating mode can be selected through the control panel keys or can result from routine operations such as powering on the printer.

Online: In online mode, the printer can receive and print data sent from the host. Pressing the PAUSE key toggles the printer between the online and offline modes. The ONLINE status indicator is lit in online mode.

Offline: In offline mode, you can perform operator functions such as loading media or changing ribbon. Pressing the PAUSE key toggles the printer from offline to online mode. The ONLINE status indicator is not illuminated in offline mode.

Menu: Pressing the MENU key takes the printer offline and into Menu mode. In this mode, you can navigate through all configuration and status menus and change the printer configuration.

Fault: In fault mode, a fault condition exists that must be cleared before printing can continue. The ONLINE status indicator flashes, the alarm beeps (if configured to do so), and a descriptive fault message displays.

Before normal printing can continue, the fault must be corrected, the message cleared by pressing the PAUSE key, and the printer placed online.

Media Handling Modes

Before you load media, you must decide which media handling mode to use:

- **Continuous.** Prints on the media and sends it out the front of the printer. When the optional internal rewinder is installed, use “Continuous” for Batch Rewind mode (see page 43).
- **Tear-Off Strip.** Prints on the media and sends it out the front until the print buffer is empty then positions the last label over the tear bar for removal.
- **Tear-Off.** After each label is printed, the printer positions the label over the tear bar and waits for you to tear off the label before printing the next label (on-demand printing). A “Remove Label” message will display to remind you to remove the label before the next one can be printed.

- **Peel-Off.** When the optional internal rewinder is installed, the printer prints and peels die-cut labels from the liner without user assistance. The label liner is wound on the rewinder. The printer waits for you to take away the label before printing the next one (on-demand printing). A “Remove Label” message will display to remind you to remove the label before the next one can be printed. For Label Peel-off information, see page 48.
- **Cut.** When the optional media cutter is installed, the printer automatically cuts media after each label is printed or can cut the media after a specified number of labels have been printed using a software cut command.

Once you have decided on the mode, configure the printer. See Chapter 3 for more information.

Loading Media and Ribbon

NOTE: This section describes the procedures for loading various types of media and ribbon. You can also refer to instructions on the printer itself, on a label on the inside of the media cover.

The term “media” in this manual refers to all the different kinds of paper, label, or tag stock material that can be printed on by the printer. Your thermal printer can print on continuous paper, adhesive backed labels, or non-adhesive tags packaged in roll or fanfold form.


CAUTION **DO NOT TOUCH the printhead or the electronic components under the printhead assembly. The discharge of electrostatic energy that accumulates on the surface of the human body or other surfaces can damage or destroy the printhead or electronic components used in this device.**

CAUTION **Do not close the pivoting deck without label stock installed between the printhead and the platen, because debris on the platen may damage the printhead.**


IMPORTANT **Adhesive backed labels that DO NOT lay flat on the liner can jam the printer. This can cause the label to peel off the liner. The exposed edges can stick to the label guides and rollers inside the printer.**

If you run out of labels while printing, do not turn off the printer while reloading labels, because you can lose data.


Loading Roll Media

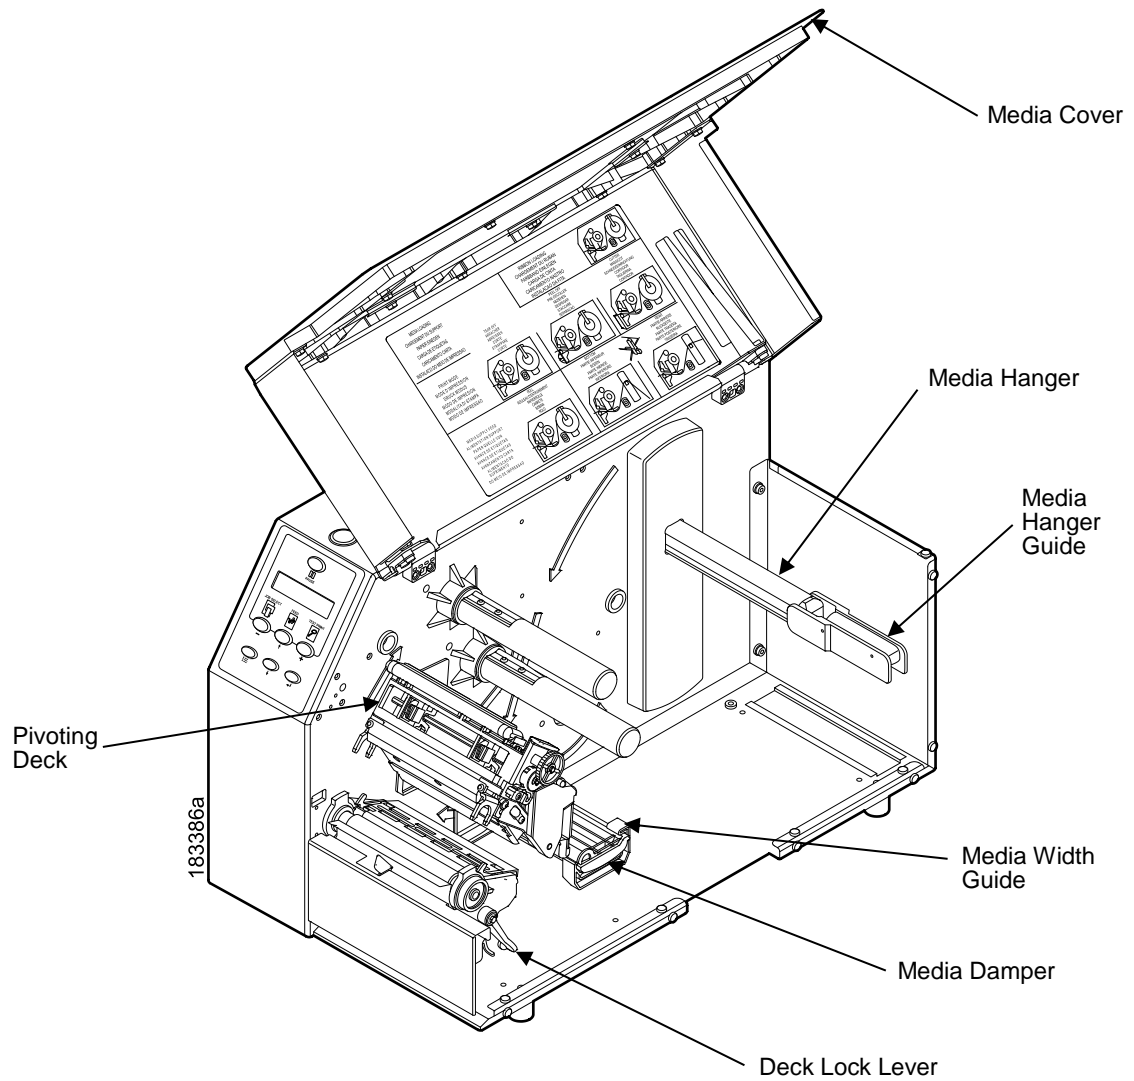

1. Open the media cover.
2. Slide the blue media hanger guide outward to the end of the media hanger, and flip it up horizontally.
3. Open the pivoting deck by rotating the blue deck lock lever fully clockwise.
4. Slide the blue media width guide close to the outside end of the media damper.

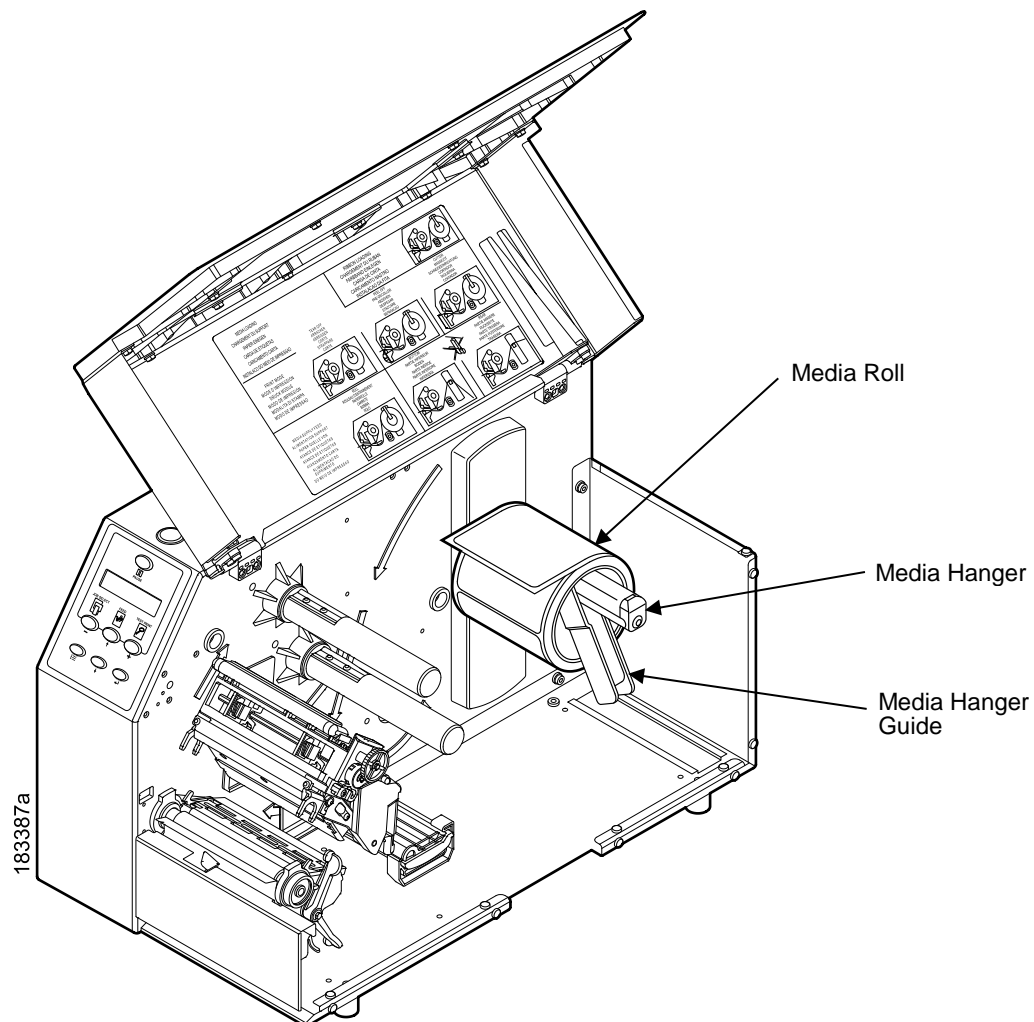


5. Slide a roll of media onto and towards the back of the media hanger. The media feeds from the top of the roll and towards the front of the printer.
6. Place the media hanger guide under the media hanger and against the lower part of the label core at a 45 degree angle (as shown). This position provides the required tension for a new label roll and the desired drag for a partial label roll.

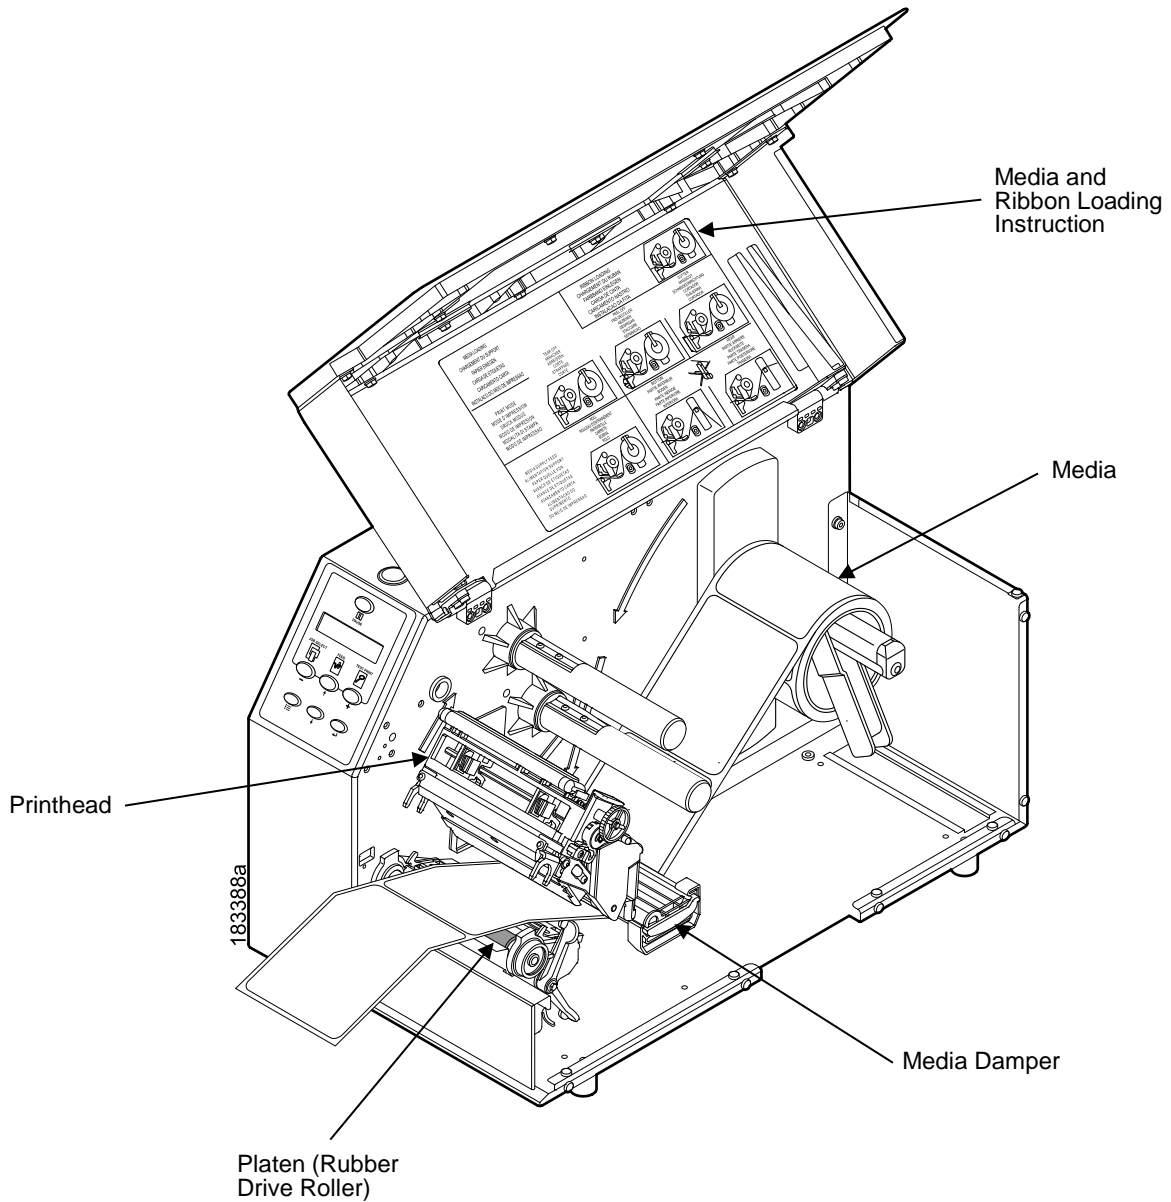


7. Thread the media under the media damper and then between the platen (rubber drive roller) and the printhead.


You can also refer to the arrows on the printer frame or to the label inside the media cover for media loading instructions.

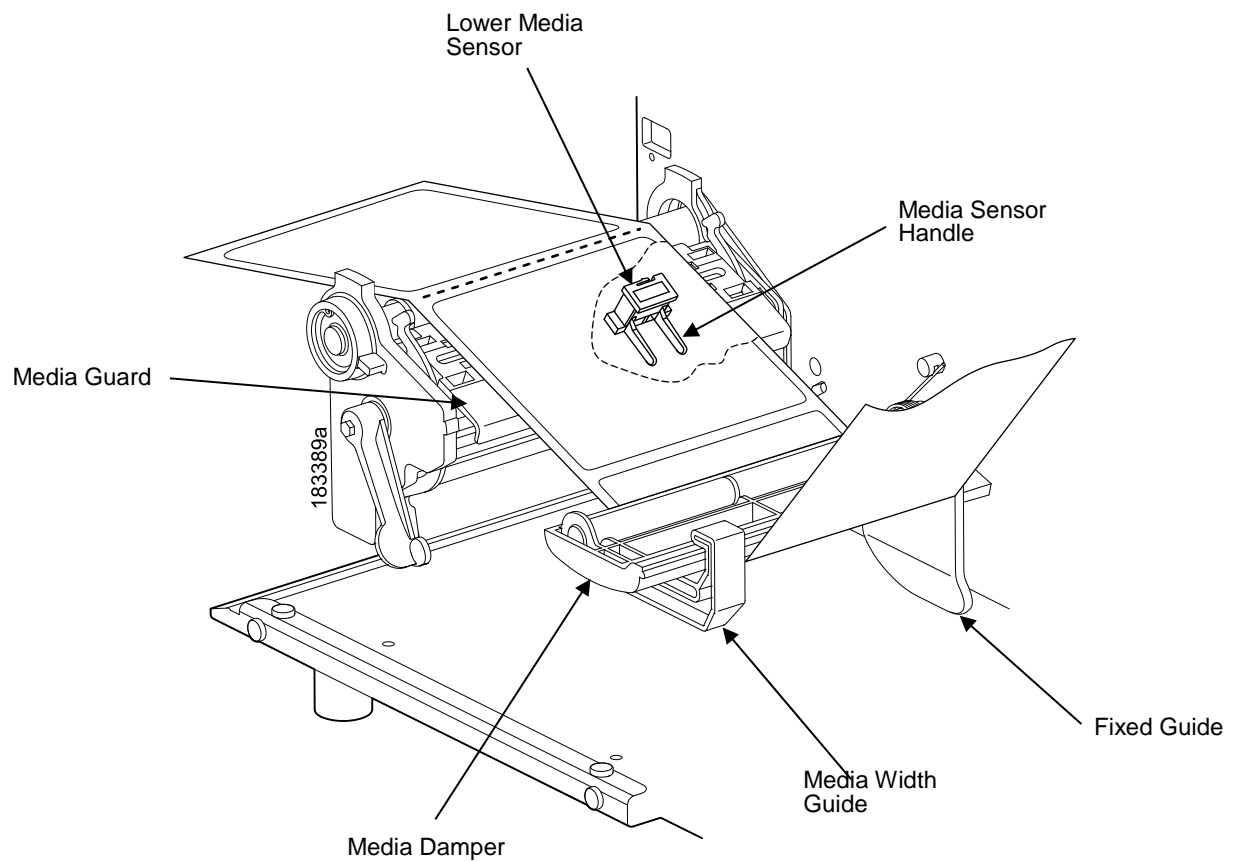


8. Verify that the left (inside) edge of the media is against the fixed guide on the bottom of the media damper.
9. Push the blue media width guide in until it is flush with the outer edge of the media.
10. Check the horizontal position of the lower media sensor (located under the media guard), and refer to "Positioning the Media Sensors" on page 54.

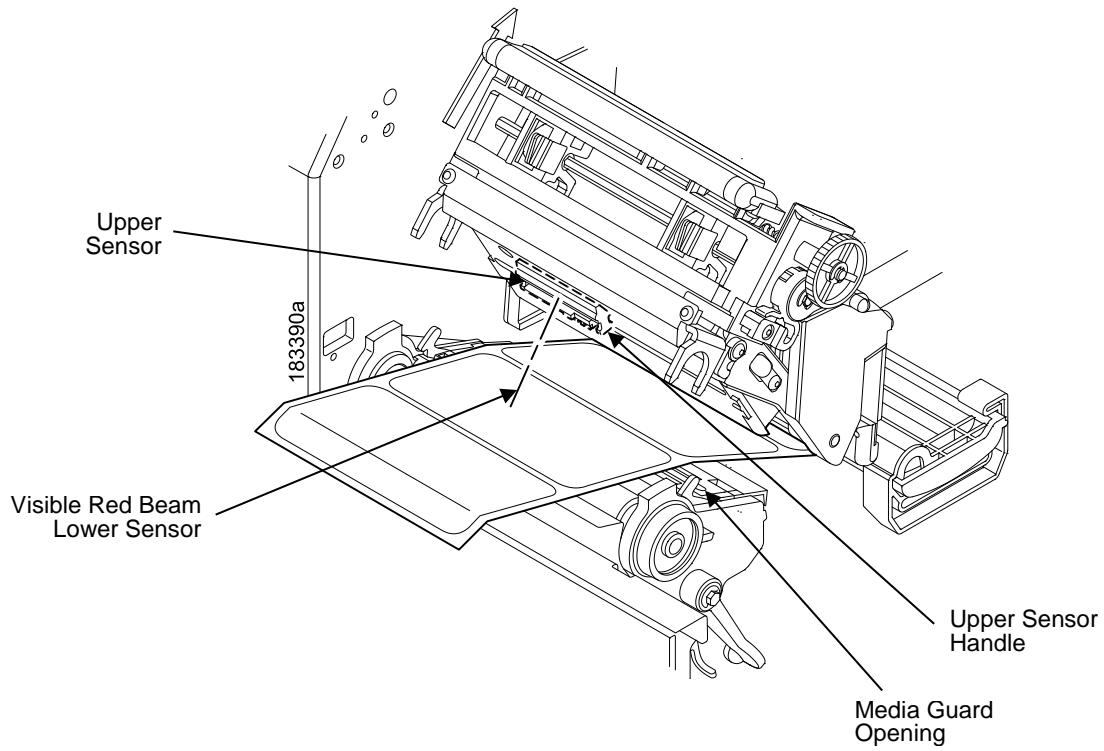

11. Slide the upper sensor directly over the lower sensor.

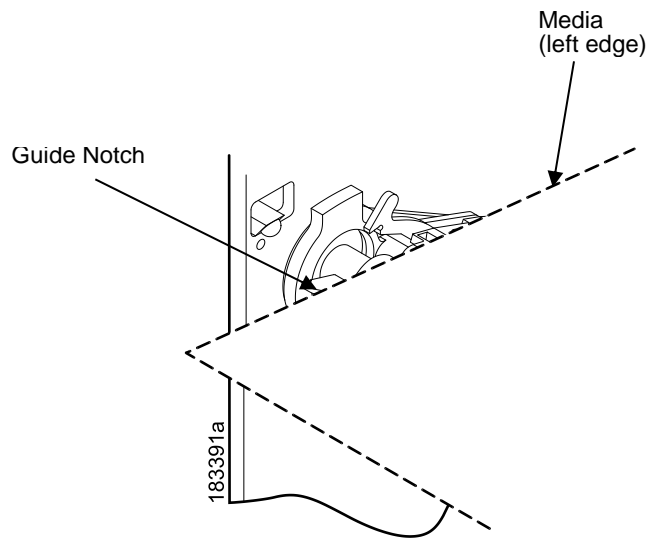

12. Align the left (inside) edge of the media with the guide notch located on the front edge of the tear bar.

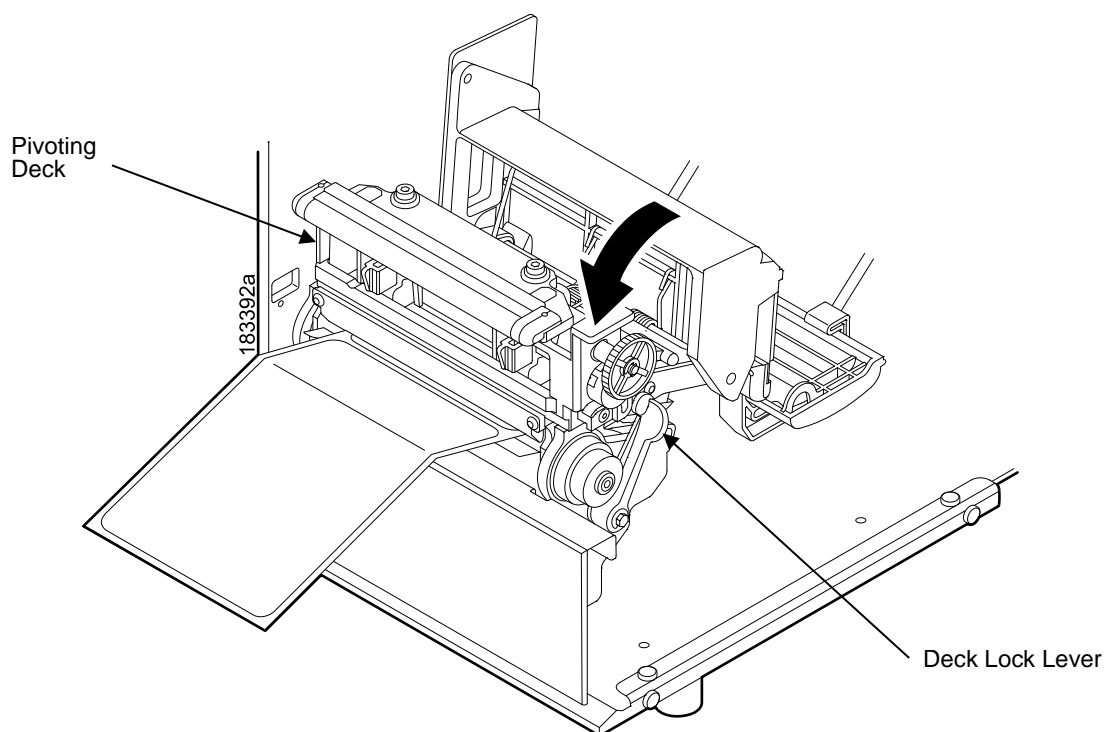

13. Close the pivoting deck and rotate the deck lock lever fully counterclockwise. This locks the pivoting deck and printhead assembly into the printing position.

IMPORTANT

Ensure the pivoting deck is down and locked before attempting to advance media or print. Failure to do so will cause the “PRINTHEAD UP” fault message to display.

14. Verify that Print Mode in the printer configuration menu is set for the media type installed (Direct or Transfer). The Print Mode submenu is located in the QUICK SETUP menu. See “Main Menu” on page 84 for details.
15. Verify the printhead pressure is properly set. See “Printhead Pressure Adjustment” on page 52.
16. Verify the pressure blocks are properly positioned. See “Printhead Pressure Block Adjustments” on page 53.
17. Verify the Gap/Mark Sensor selection matches the type of media installed. See “Sensing Different Media Types” on page 59.


For direct thermal operation (no ribbon required):

- If you have not run an Auto Calibrate, do so now. See “Running Auto Calibrate” on page 60.
- If you have already run an Auto Calibrate, complete the following steps:
 - a. Close the media cover.
 - b. Press the FEED key once to verify that the media advances.
 - c. Press the PAUSE key to place the printer online.

For thermal transfer operation (which uses a ribbon):

Complete the ribbon loading procedure (see “Loading Ribbon” on page 40).

Loading Fanfold Media

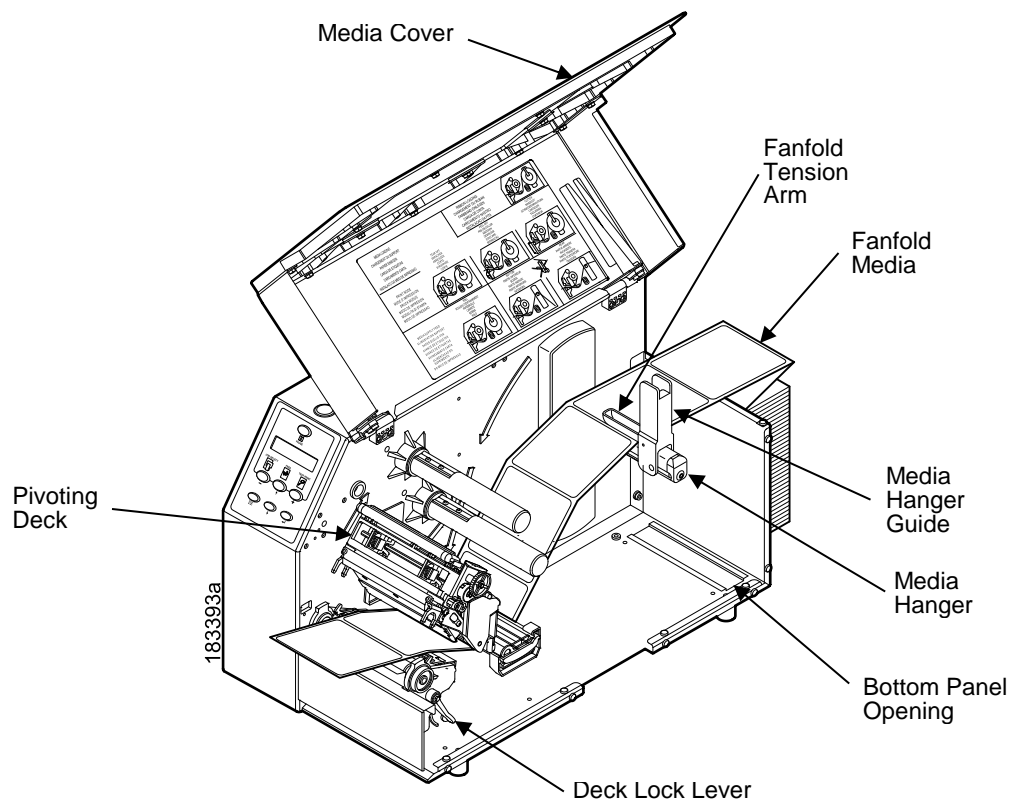


1. Open the media cover.
2. Slide the media hanger guide outward to the end of the media hanger and rotate it upward to a horizontal position to remove any roll media.
3. Place the fanfold media either behind or beneath the printer, depending on the desired fanfold supply location. Insert the first few labels through either the rear or bottom panel opening.
4. Place the media over the media hanger, flush against the back of the printer.
5. Flip up the media hanger guide and slide it in against the outer edge of the fanfold media.
6. Flip the fanfold tension arm down by pushing on it through the opening at the top of the media hanger guide.

CAUTION


Do not allow the tension arm to snap down on the media hanger, this could cause the tension arm to break. Instead, gradually lower the tension arm onto the media hanger.

7. Open the pivoting deck by rotating the deck lock lever fully clockwise until the deck swings upward.

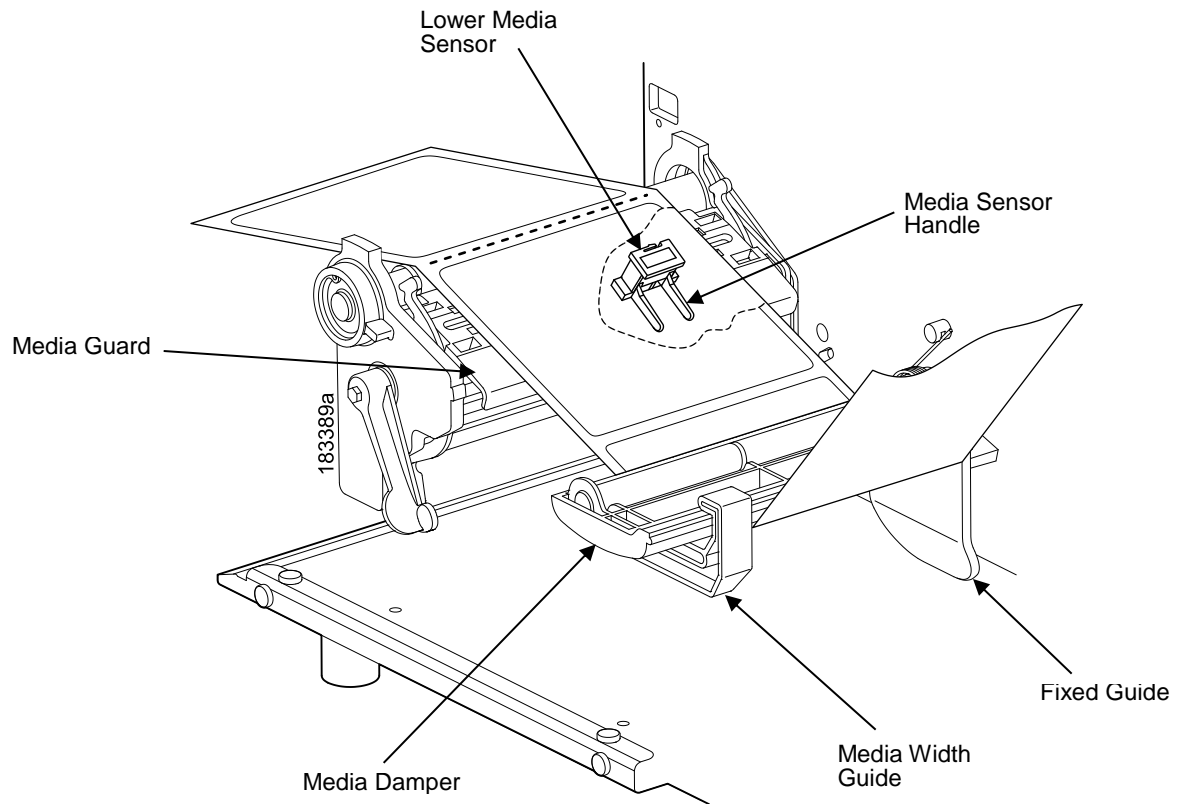


8. Slide the media width guide outward to the end of the media damper.
9. Thread the media under the media damper and then between the platen (rubber drive roller) and the printhead. You can also refer to the arrows on the printer frame or to the label inside the media cover for media loading instructions.

Verify that the left (inside) edge of the media is against the fixed guide on the bottom of the media damper.
10. Slide the media width guide inward against the outer edge of the media.
11. Check the horizontal position of the lower media sensor (located under the media guard), and refer to "Positioning the Media Sensors" on page 54.

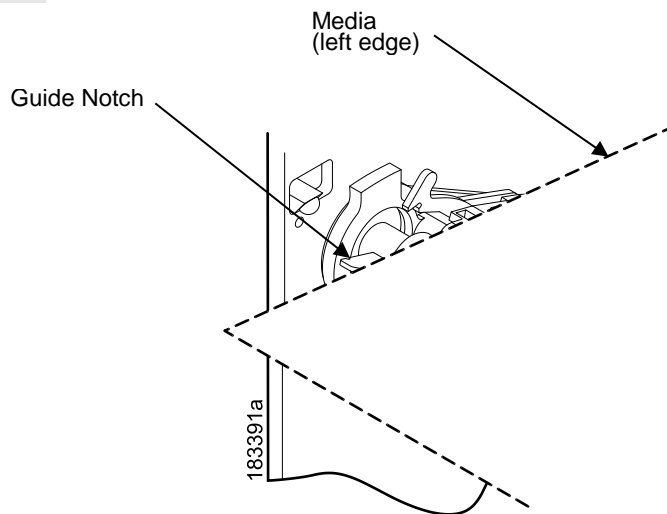

12. Align the left (inside) edge of the media with the guide notch located on the front edge of the tear bar.

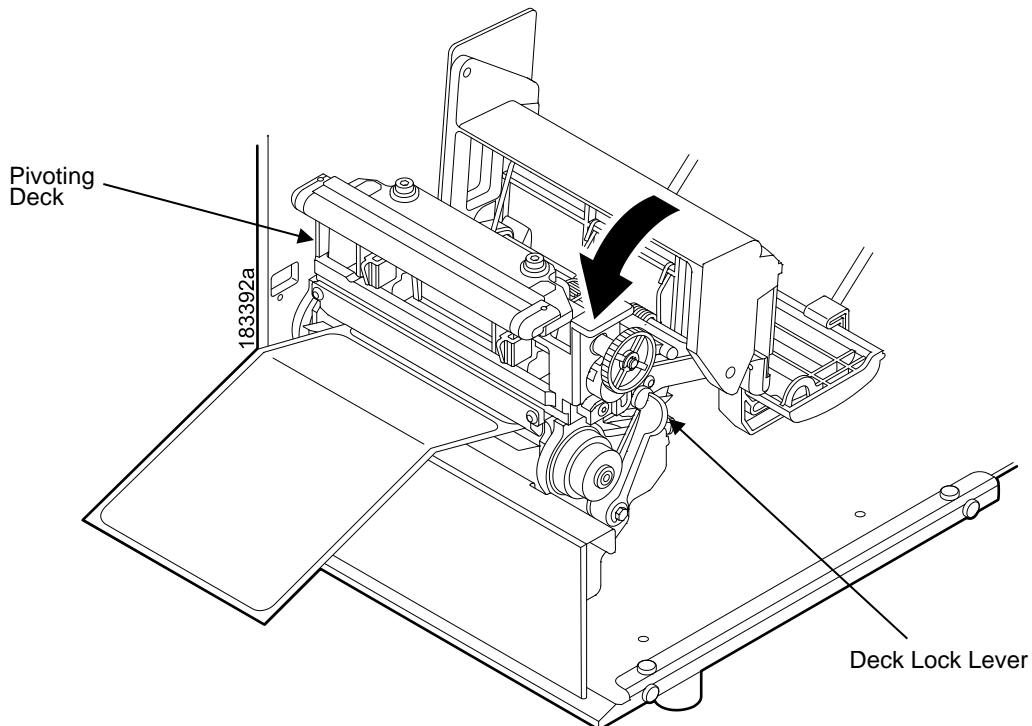

13. Close the pivoting deck and rotate the deck lock lever fully counterclockwise. This locks the pivoting deck and printhead assembly into the printing position.

IMPORTANT Ensure the pivoting deck is down and locked before attempting to advance media or print. Failure to do so will cause the “PRINTHEAD UP” fault message to display.

14. Verify that Print Mode submenu is set for the media type installed (direct or transfer). The Print Mode submenu is located in the QUICK SETUP menu. See “Main Menu” on page 84 for more information. Also, if thermal transfer media is installed, see “Loading Ribbon” on page 40.

15. Verify the printhead pressure is properly set. See “Printhead Pressure Adjustment” on page 52.
16. Verify the pressure blocks are properly positioned. See “Printhead Pressure Block Adjustments” on page 53.
17. Verify the Gap/Mark Sensor selection matches the type of media installed. See “Sensing Different Media Types” on page 59.

For direct thermal operation (no ribbon required):


- If you have not run an Auto Calibrate, do so now. See “Running Auto Calibrate” on page 60.
- If you have already run an Auto Calibrate, complete the following steps:
 - a. Close the media cover.
 - b. Press the FEED key once to verify that the media advances.
 - c. Press the PAUSE key to place the printer online.

For thermal transfer operation (which uses a ribbon):

Complete the ribbon loading procedure (see “Loading Ribbon” on page 40).

Loading Ribbon


Skip this section for 4 inch DT models or when using direct thermal printing.

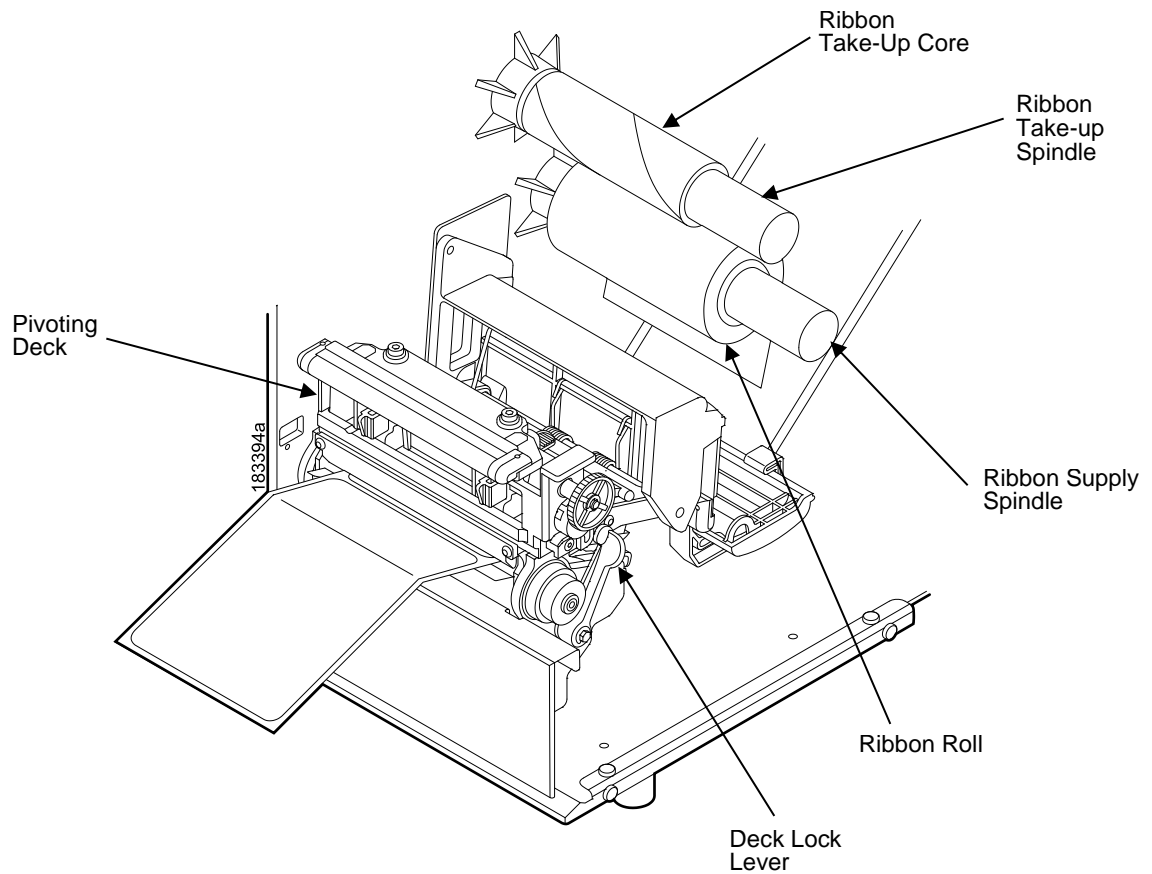

1. Install the ribbon take-up core on the ribbon take-up spindle.


NOTE: The first ribbon take-up core comes with the printer. Thereafter, use the core from the old (used up) ribbon.

2. Slide the ribbon roll onto the ribbon supply spindle until it stops against the spindle flange.
3. Open the pivoting deck by rotating the deck lock lever fully clockwise until the deck swings upward.

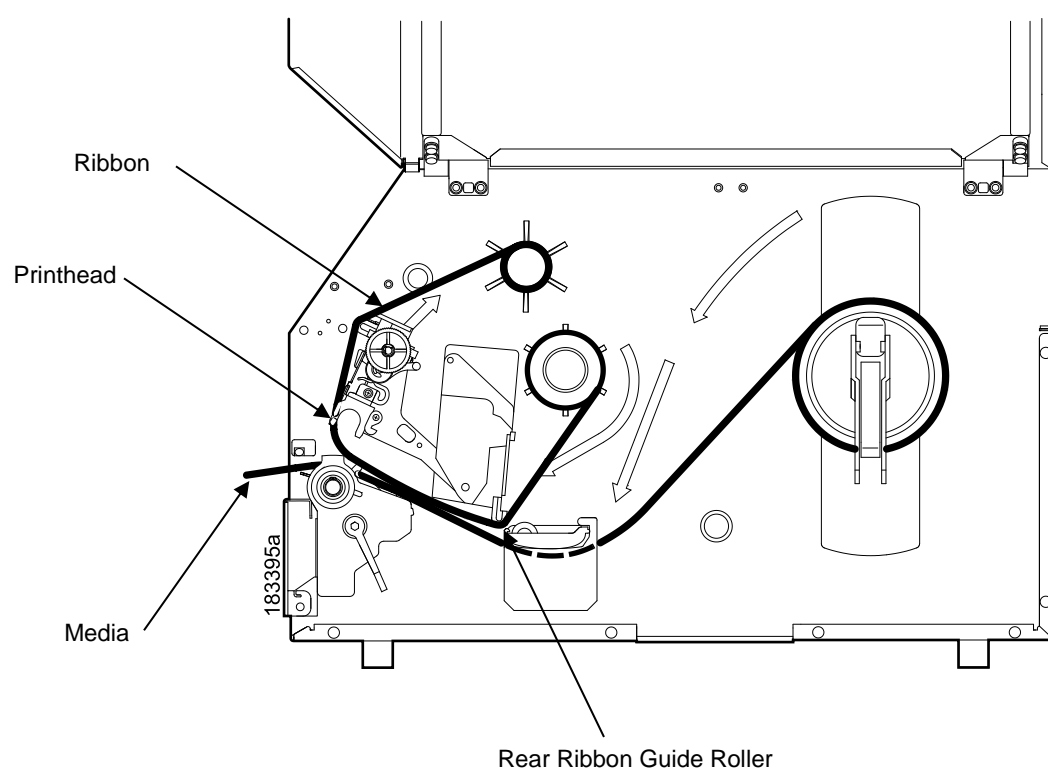

4. Thread the end of the ribbon under the rear ribbon guide roller, then between the platen and the printhead.

You can also refer to the arrows on the printer frame or to the upper-right corner of the label inside the media cover for ribbon loading instructions.

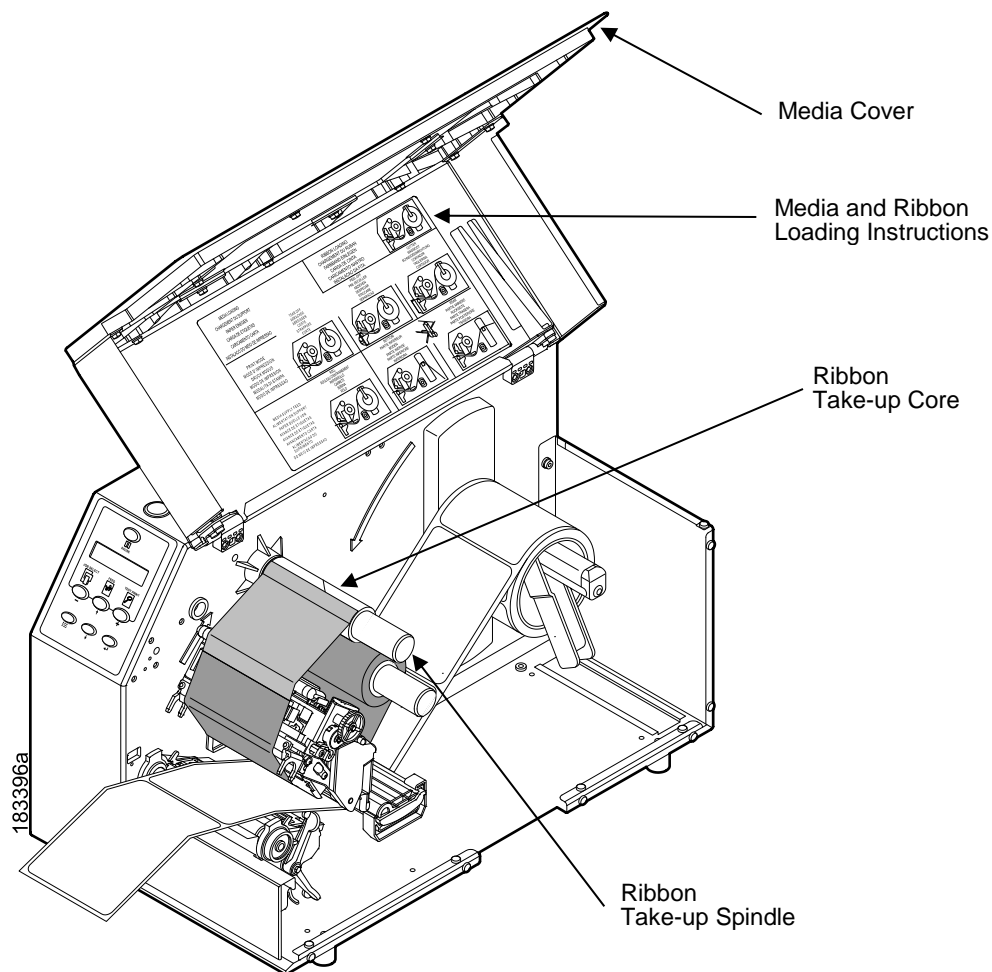

IMPORTANT Do not attach the ribbon to the ribbon take-up spindle without a fiberboard take-up core installed.

5. Attach the ribbon to the ribbon take-up core on the ribbon take-up spindle using the adhesive on the ribbon leader.
6. Manually rotate the spindle clockwise until the clear leader has passed the printhead.
7. Close the pivoting deck and rotate the deck lock lever fully counterclockwise.
8. Verify that Print Mode (in the QUICK SETUP menu) is set for Transfer. See "QUICK SETUP" on page 95 for more information.
9. If you have not run an Auto Calibrate with this media and ribbon, do so now. See "Running Auto Calibrate" on page 60.
10. Press the FEED key once to verify that the media and ribbon advance.
11. Press the PAUSE key to place the printer online.
12. Close the printer media cover if the rewinder is not needed.

Using the Optional Internal Rewinder

The printer can be set up to rewind labels after they have been printed (Batch Rewind Mode) or to automatically peel labels from their backing and dispense them one at a time while rewinding the liner (Peel-Off Mode). Both modes require an internal rewinder, which is available as a factory installed or a field unit option.

Batch Rewind Mode


Batch Rewind allows you to automatically rewind printed labels into a roll using the optional internal rewinder.

Configuring the Printer Menu

1. Set Media Handling to “Continuous” under the QUICK SETUP menu. (See Chapter 3, “Configuring The Printer” for more information.)
2. Press the PAUSE key until “OFFLINE” displays.

Installing the Paper Path

The paper path must be installed when using Batch Rewind mode.

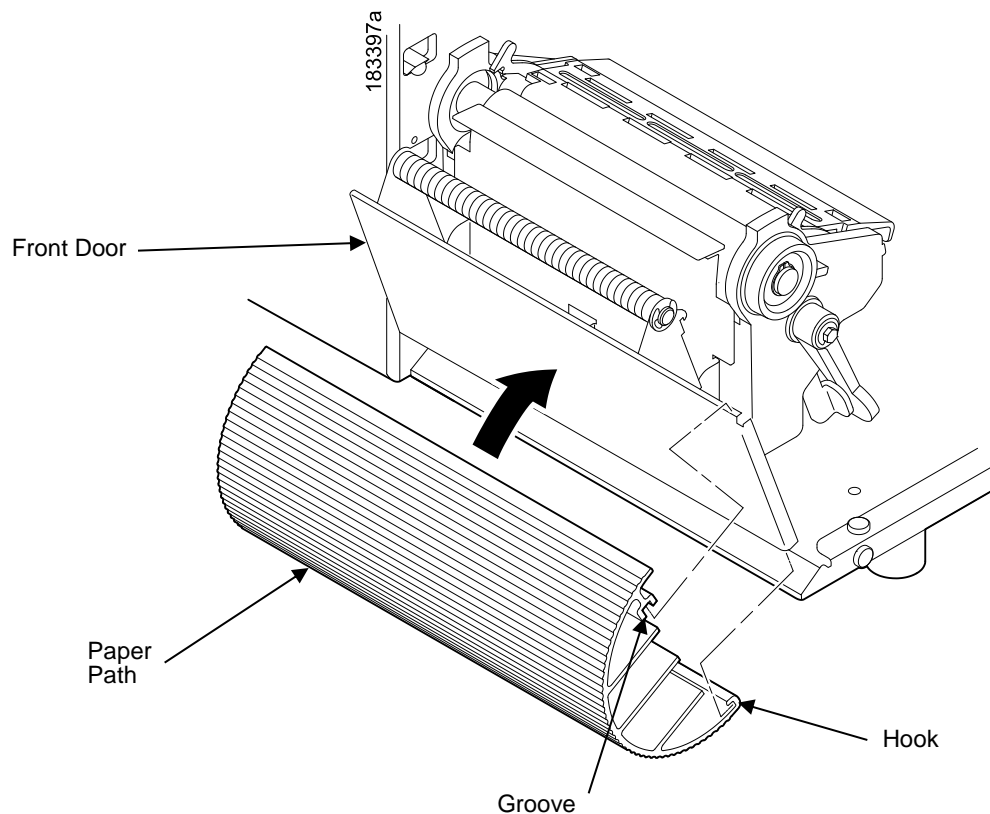


To install the paper path:


1. Open the front door by pulling it upwards, then forward.

2. The bottom of the plastic paper path is shaped like a hook and the top has a groove:
 - a. Hook the bottom of the paper path under the bottom edge of the front door.
 - b. Snap the groove on the paper path to the top edge of the front door.
3. Close the front door.

Loading Media

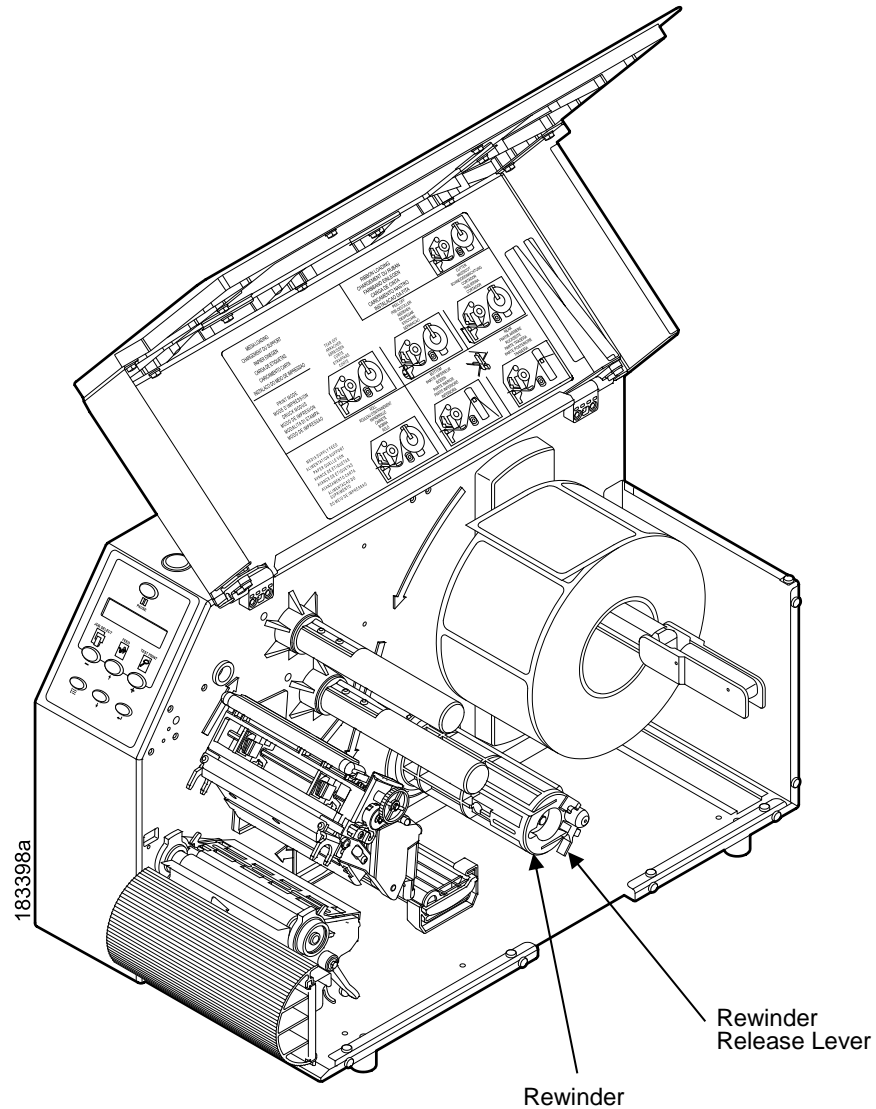


1. To load media, refer to "Loading Roll Media" on page 29 and complete steps 1 through 10.

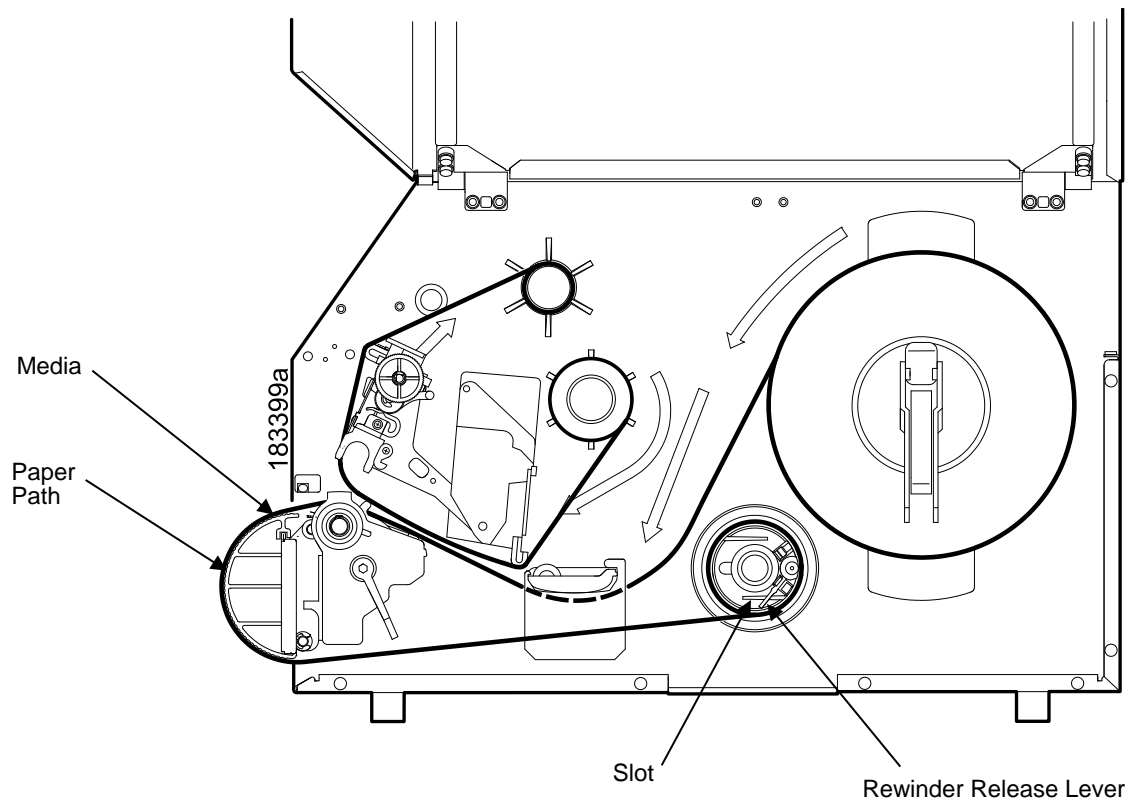


2. Thread the media over the front of the paper path and through the opening under the front door toward the internal rewinder.

IMPORTANT If you do not complete the following step, it will be extremely difficult to remove the printed labels from the rewinder.

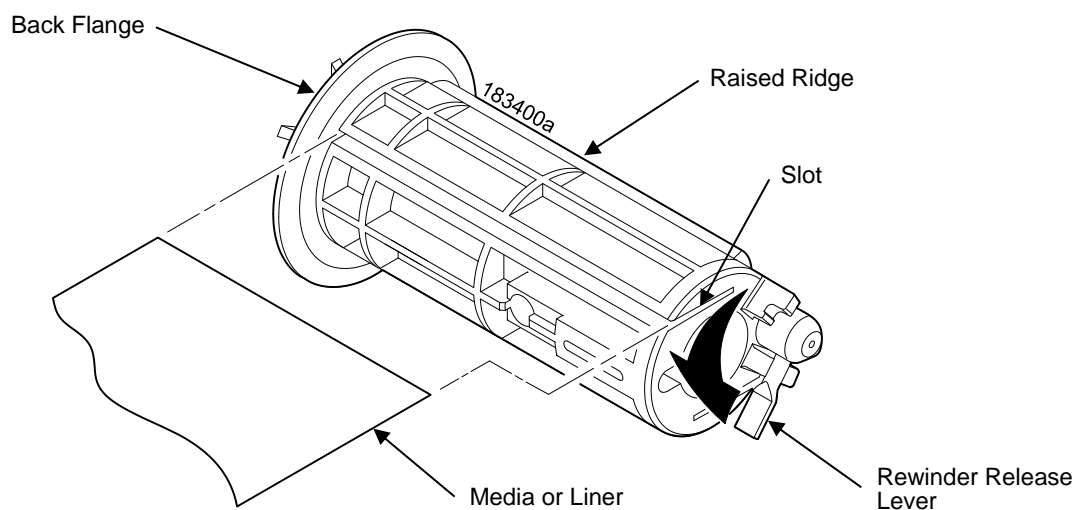

3. Turn the release lever on the rewinder counterclockwise and lock it in place. This forms a raised ridge along the width of the rewinder.
4. Insert the leading edge of the media into the closest slot of the rewinder, and slide the media against the back flange.
5. Hold the media edge in the slot and manually rotate the rewinder one full revolution counterclockwise until the media is taut.

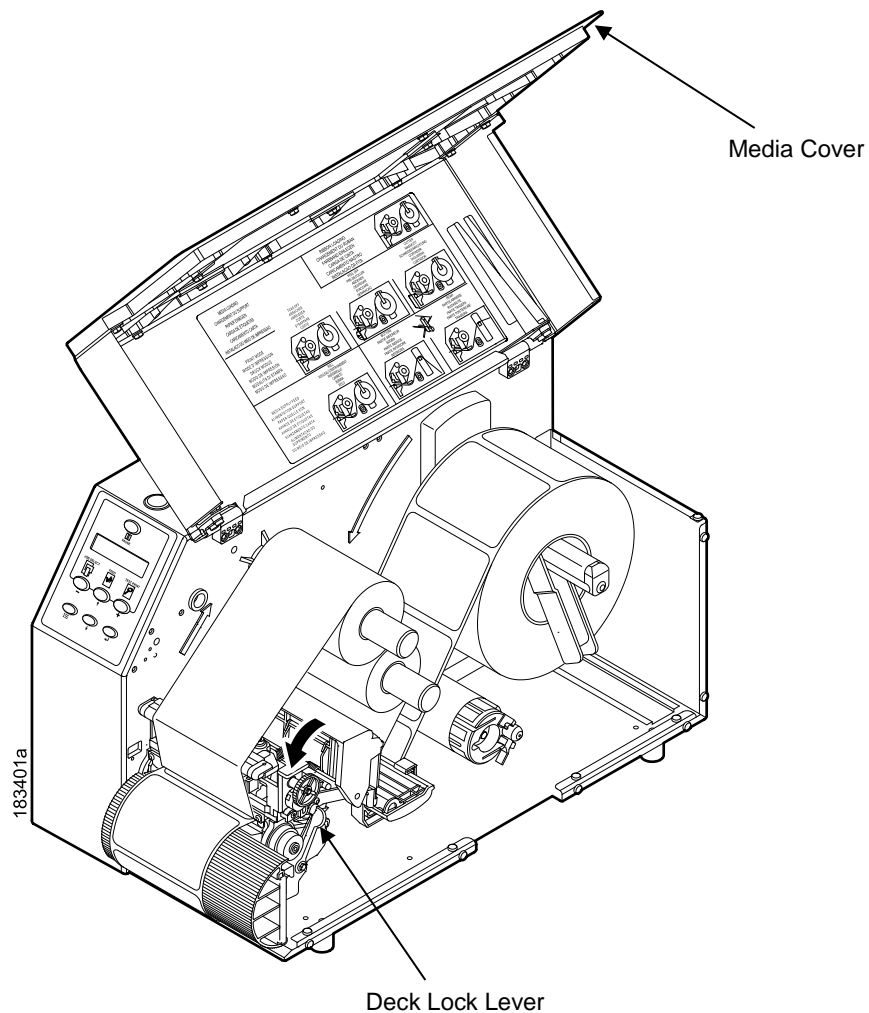


6. Press down on both sides of the pivoting deck and rotate the deck lock lever counterclockwise against its stop to place the printhead assembly into the printing position.
7. Press the FEED key to advance the media to the next TOF (Top-of-Form) position.
8. Press the PAUSE key until "ONLINE" displays.
9. Close the media cover.

IMPORTANT

The rewinder supports a maximum diameter of five inches of printed labels. Exceeding this diameter can cause printed labels to rub on the bottom pan.

Removing Printed Media from the Rewinder

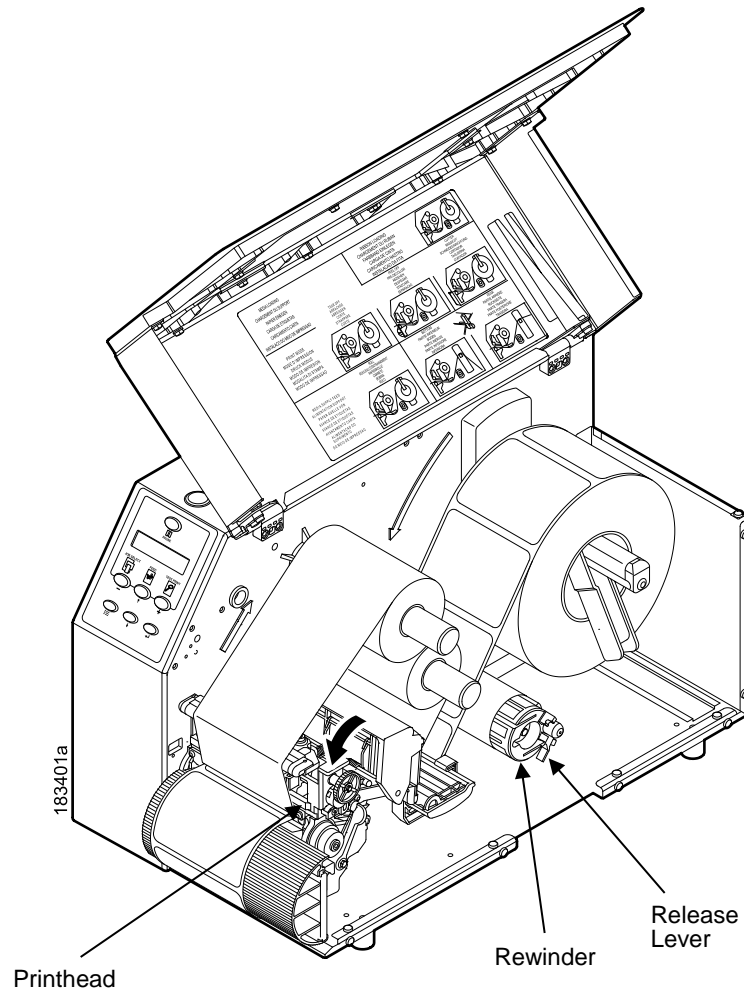

1. Open the media cover.
2. Press the FEED key to advance the last printed label past the printhead, and tear the liner from behind the last printed label.
3. Manually rewind the remaining printed labels onto the rewriter by turning the rewriter counterclockwise.
4. Turn the release lever on the rewriter clockwise.
5. Slide the roll of printed labels off the rewriter.

Label Peel-Off

You can set up the printer to automatically peel die-cut labels off their liner (backing) and dispense them one at a time while rewinding the liner.


You can install the paper path to prevent long labels from accidentally adhering to the front door assembly, but it is normally not needed when using labels less than two inches long (see “Installing the Paper Path” on page 43).

Configuring the Printer Menu


1. Set Media Handling to “Peel-Off” under the QUICK SETUP menu. (See Chapter 3, “Configuring The Printer” for more information.)
2. Press the PAUSE key until “OFFLINE” displays.

Loading Media

1. If you want to install the paper path to print long labels, do so now by completing the steps listed in “Installing the Paper Path” on page 43.
2. Open the media cover and refer to the Label Peel-Off illustration on the Ribbon and Media Loading instruction label on the inside of the cover.

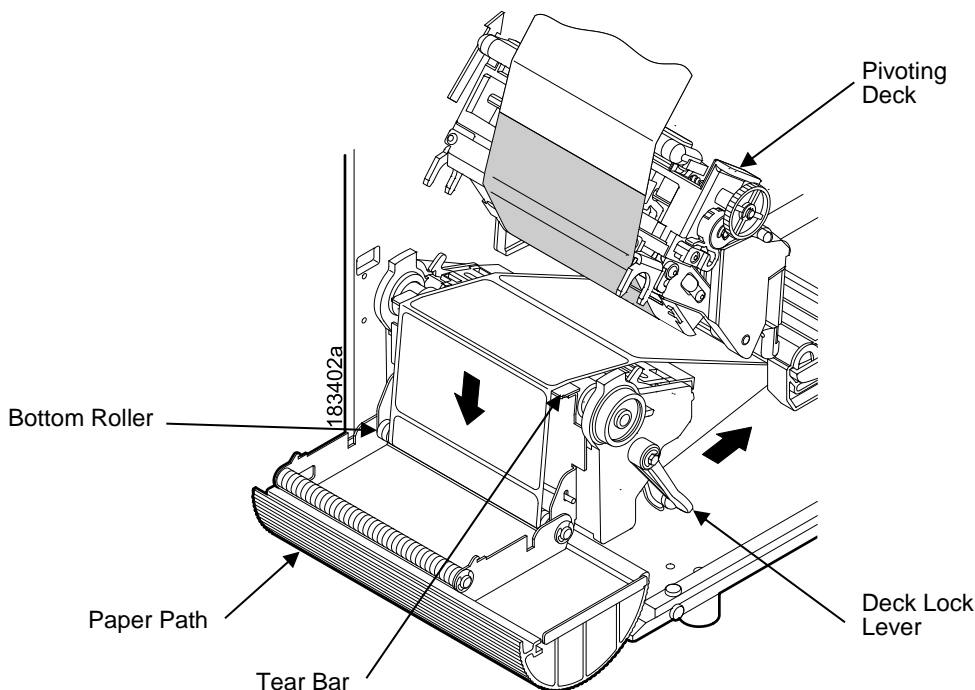


3. Open the front door by pulling it upward, then forward.
4. Open the pivoting deck by rotating the deck lock lever clockwise until the deck swings upward.
5. Thread the media (label and liner) over the tear bar and around the bottom roller, then through the opening at the bottom of the front door and into the printer.

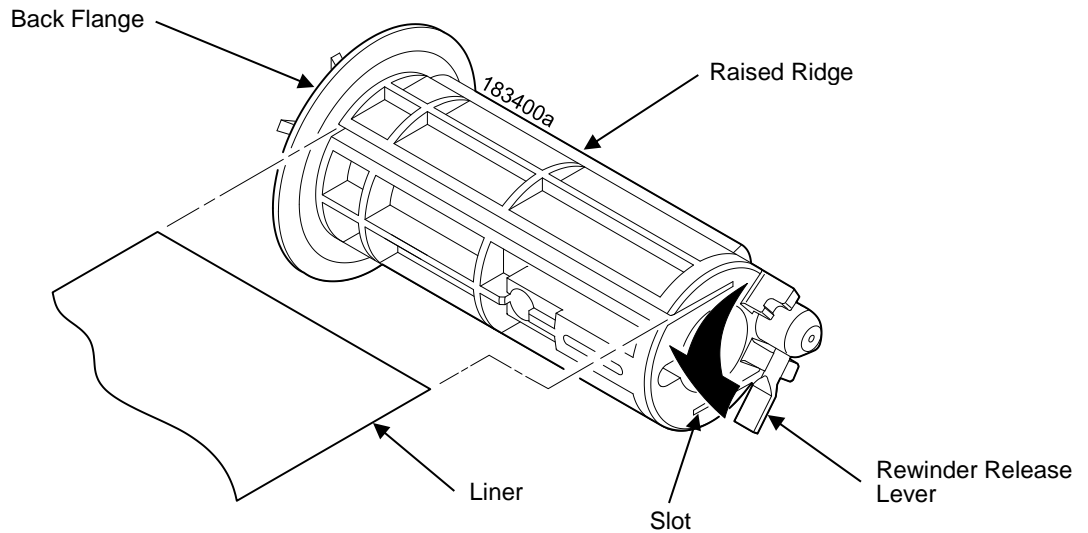


IMPORTANT If you do not complete the following step, it will be difficult to remove the liner from the rewinder.

6. Turn the release lever on the rewinder counterclockwise and lock it in place. This forms a raised ridge along the width of the rewinder.
7. Insert the leading edge of the media into the closest slot of the rewinder, and slide the media against the back flange.
8. Hold the media in the slot and rotate the rewinder one full revolution counterclockwise until the media is taut.
9. Remove labels from the liner so that behind the tear bar the liner is void of labels for about 1.5 inches and below the tear bar for about 2 inches.
10. Close the front door.

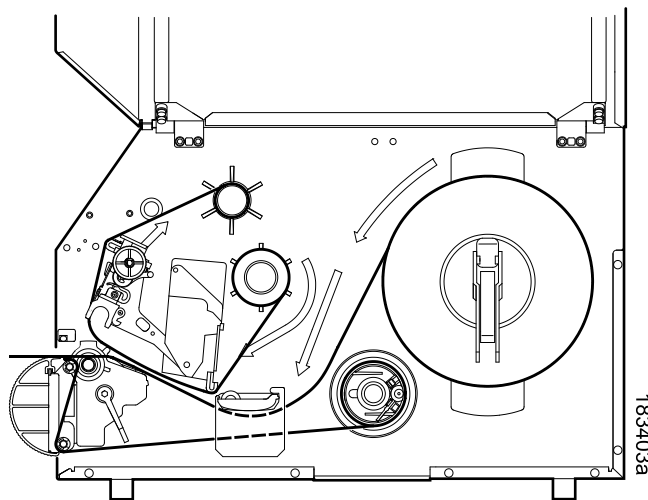

11. Complete the media routing as shown above.

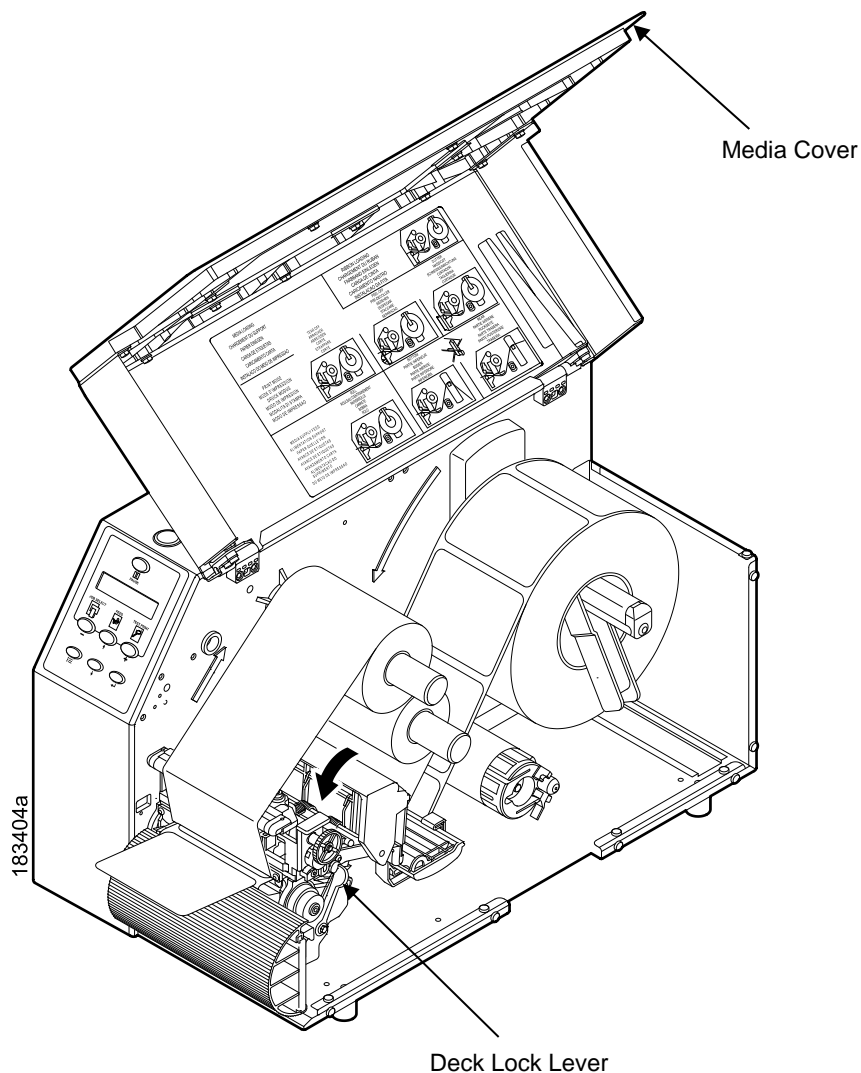

12. Press down on both sides of the pivoting deck and rotate the deck lock lever fully counterclockwise.
13. Press the FEED key. The label advances to the peel-off position, and "Remove Label" displays on the LCD.
14. Manually remove the peeled label from the printer.
15. Press the PAUSE key until "ONLINE" displays.
16. Close the media cover.

IMPORTANT


The rewinder supports a maximum diameter of 5 inches of liner. Exceeding this diameter can cause the liner to rub on the bottom pan. The rewinder is designed to support the full amount of liner from a standard 8 inch diameter media roll.

Removing Label Liner from the Rewinder

1. Open the media cover.
2. Open the front door.
3. Tear the liner at the tear bar.
4. Manually rewind the remaining liner onto the rewriter by turning the rewriter counterclockwise.
5. Turn the release lever on the rewriter clockwise.
6. Slide the roll of label liner off the rewriter and discard.

Removing the Paper Path


Remove the paper path from the front door when using Tear-Off or Tear-Off Strip media handling, because you will need to tear the label downward against the tear bar.

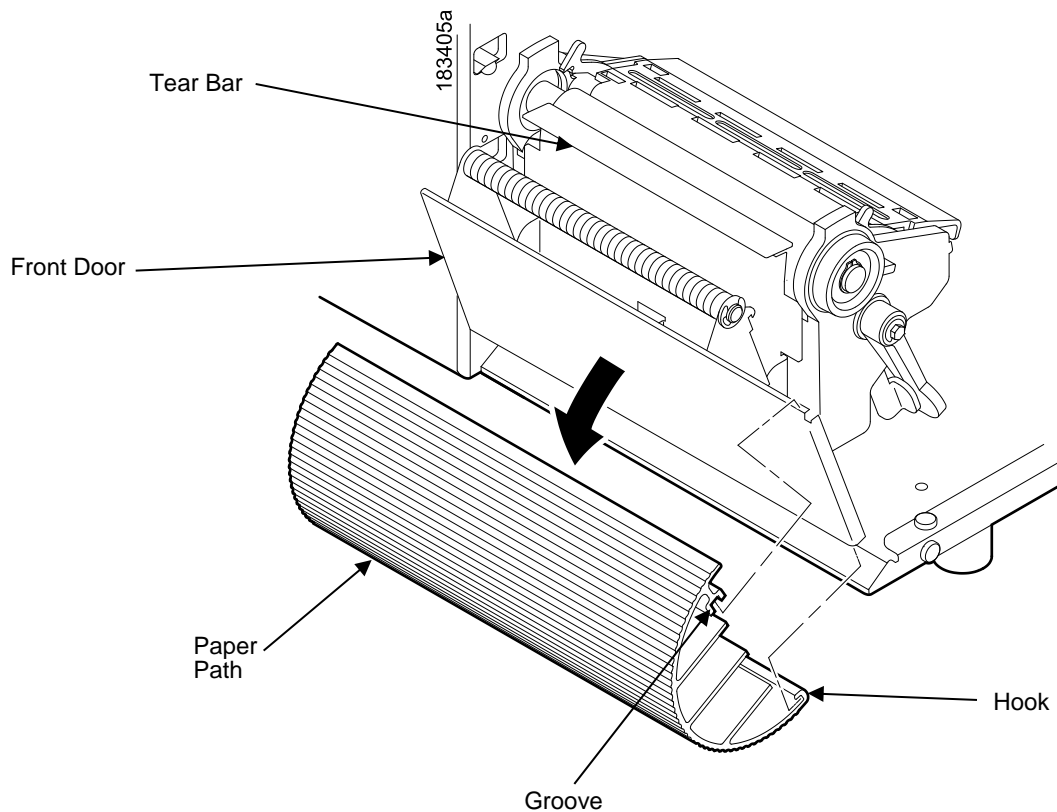

1. Open the front door by pulling it upward, then forward.
2. Grasp the upper right corner of the paper path and pry it off of the top of the front door.
3. After removing the paper path, close the front door.
4. Open the pivoting deck and load paper and ribbon normally (see “Loading Media and Ribbon” on page 28).

Printing Adjustments


Printhead Pressure Adjustment

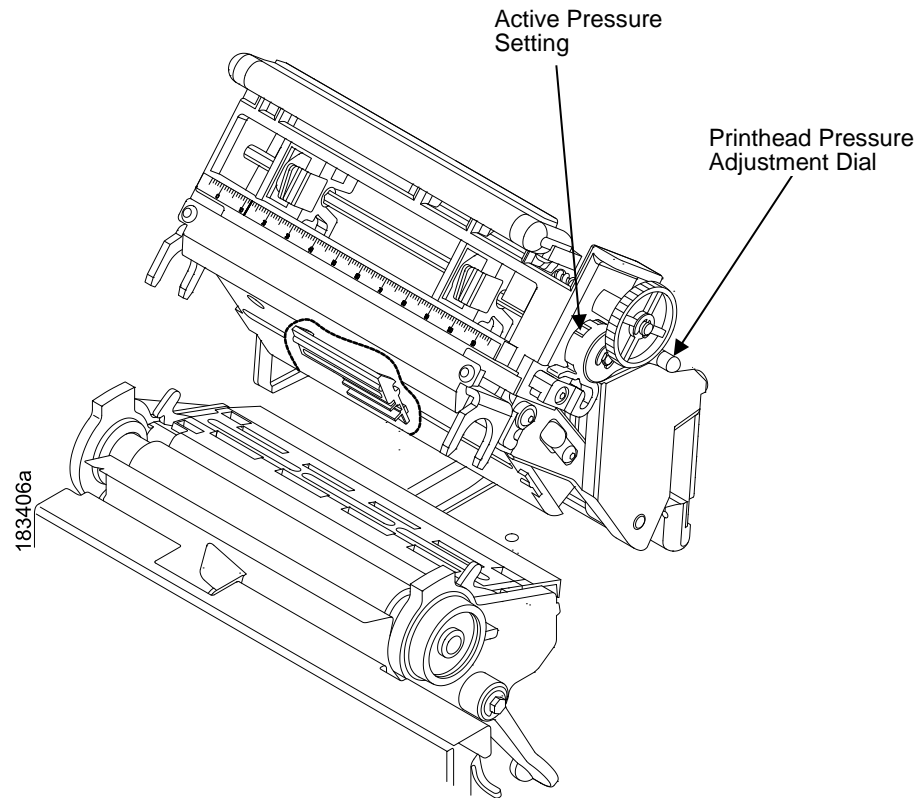

Sometimes you will need to adjust printhead pressure because of variations in media thickness and width. The printhead pressure adjustment dial is shown above. The value shown at the bottom of the dial is the active setting.

In general, adjust printhead pressure to the lowest value which produces the desired print quality. Die cut labels usually require a setting of 4, while heavy stock requires a setting of 6 to max. The numbers on the printhead pressure adjustment lever are relative only and do not indicate a specific printhead pressure or media thickness. By following this procedure, you will minimize printhead wear.

Printhead Pressure Block Adjustments

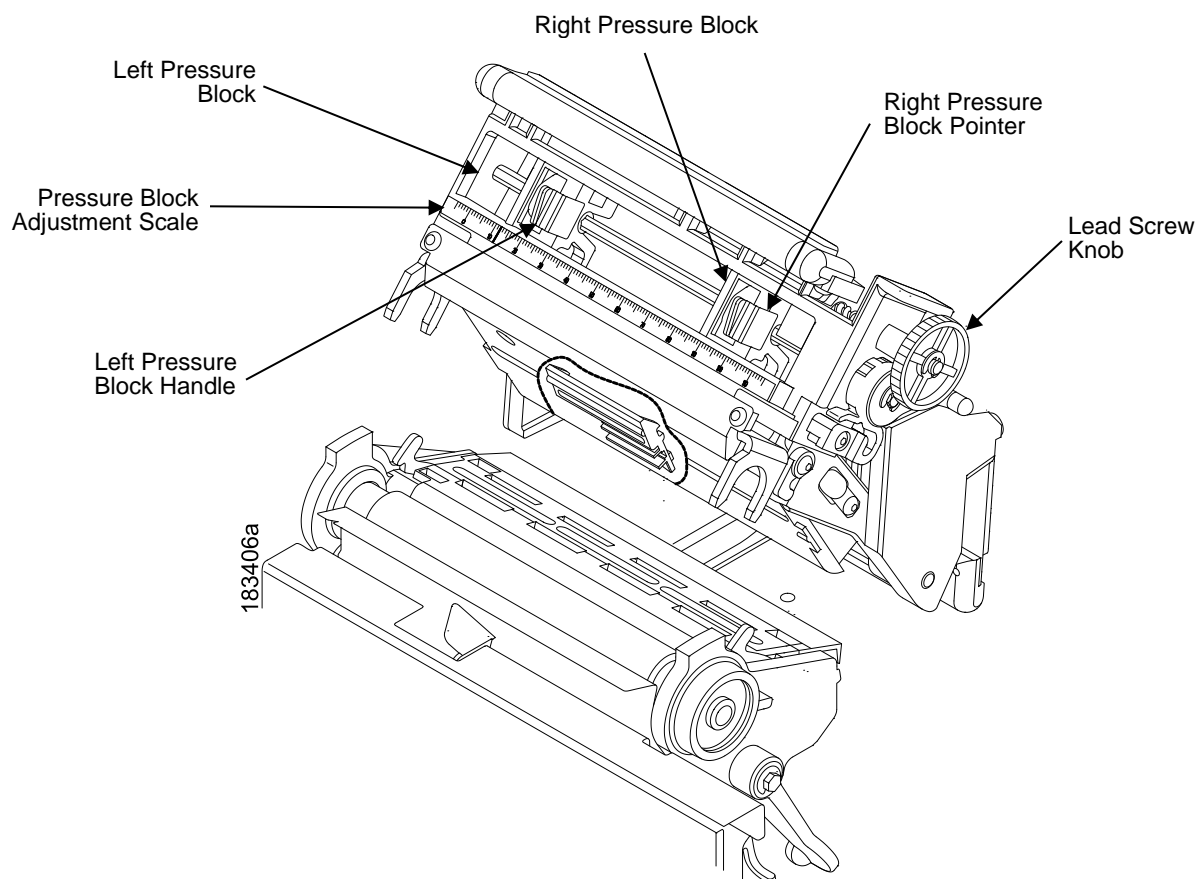

Printhead pressure block adjustments are used to obtain a uniform print density across the width of the installed media under a variety of media and ribbon conditions.

Left Pressure Block

Under normal printing conditions, the left block should be set with its handle aligned with the bold mark on the pressure block adjustment scale. When using media or ribbon widths less than one-third the printer's maximum printing width, you may need to manually slide the left pressure block further to the left.

Right Pressure Block

The right pressure block should be positioned with its pointer (handle on 4 inch printer models) near the right edge of the media or ribbon in use. Turn the lead screw knob clockwise to move the block right or counterclockwise to move it left.

Check the pressure block positioning by printing the Grey test pattern:


1. Press the PAUSE key until "OFFLINE" appears on the LCD.
2. Press the TEST PRINT key until "Printer Tests/Grey" displays.

3. Press the ⏏ key to start the Grey test pattern. The pattern will start and continue to print.
4. Press ⏏ again to stop printing.
5. Check the test pattern. If necessary reposition the pressure blocks to obtain a uniform print density across the media width. In most cases, only the right pressure block may need to be adjusted.
6. Whenever you reposition a pressure block, run the Grey test pattern to verify the print pattern is acceptable.


Positioning the Media Sensors

Your printer is equipped with upper and lower media sensors that detect the top-of-form position on media with label length indicators (gaps, notches, holes, or black marks). These sensors also detect when a Paper Out condition exists.

The media sensors should not be placed in the path of media features that could cause false gap detection or paper out faults. Such features are dark pre-printing, rounded die-cut label corners, vertical gaps associated with side-by-side labels, and extraneous cut-outs, as shown below.

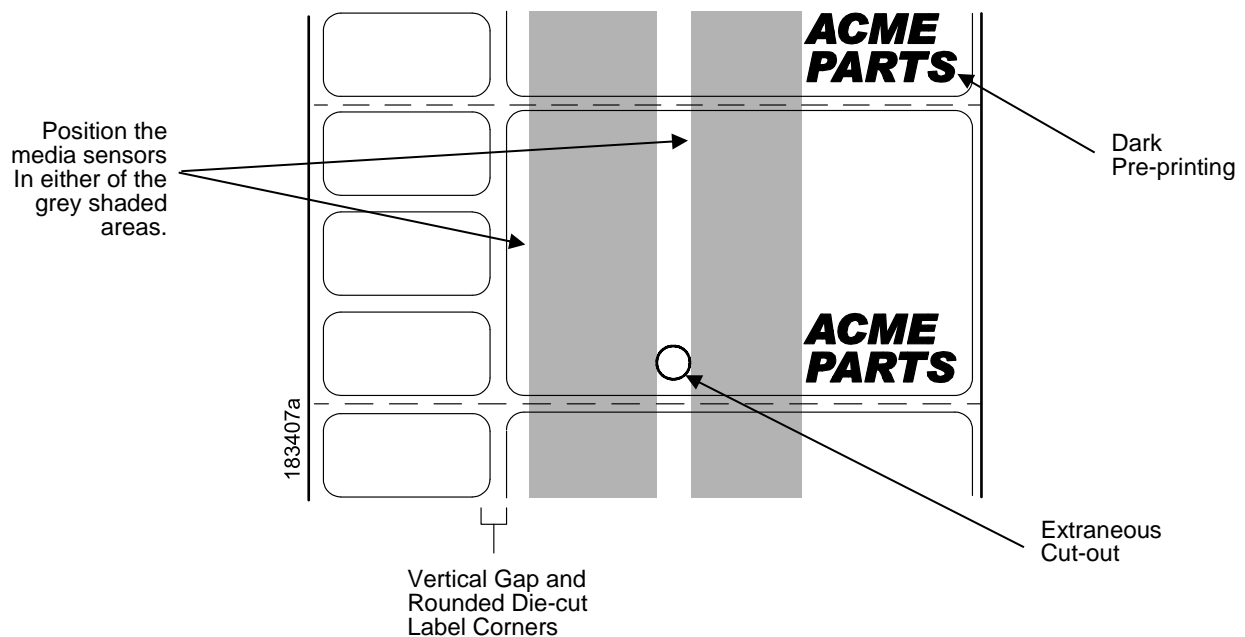

Sensing Media with Horizontal Black Marks (Mark) or Media with No Label Length Indicators (Disable)

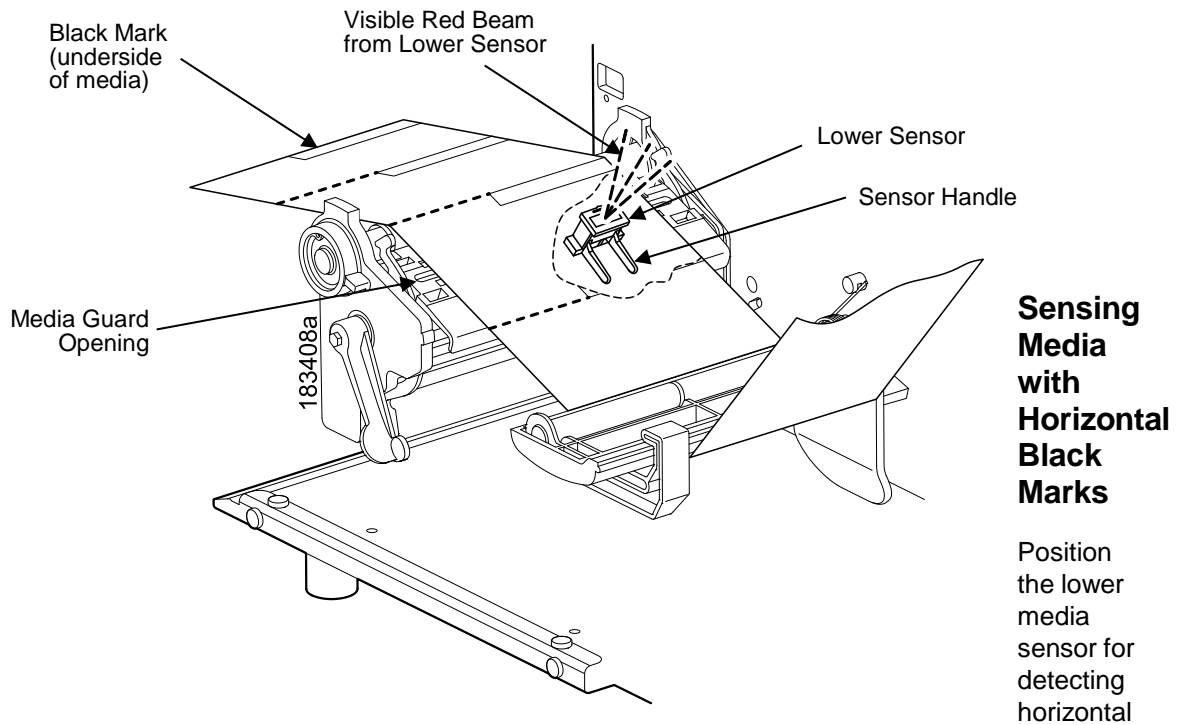


black marks located on the underside of media, and position the upper sensor above the lower sensor to provide a consistent background.

1. Check the position of the sensor by looking through the long, narrow opening in the media guard. Use the visible red light emitting from the lower sensor as a reference pointer.
2. Use the sensor handle to manually position the sensor to the center of the black mark on the media.
3. Select "Mark" in the Gap/Mark Sensor submenu under the CALIBRATE CTRL menu. See "Sensing Different Media Types" on page 59.
4. Perform an Auto Calibrate. See "Running Auto Calibrate" on page 60.

Sensing Media with No Label Length Indicators

1. When using media without label length indicators (no gaps, notches, holes, or marks) or when you want to ignore all existing length indicators, place the lower sensor in the center of the media so it can detect when a Paper Out condition exists. Also set the upper sensor above it.
2. Select "Disable" in the Gap/Mark Sensor submenu under CALIBRATE CTRL. See "Sensing Different Media Types" on page 59.
3. Perform an Auto Calibrate. See "Running Auto Calibrate" on page 60.

Sensing Media with Gaps, Notches, or Holes (Gap)

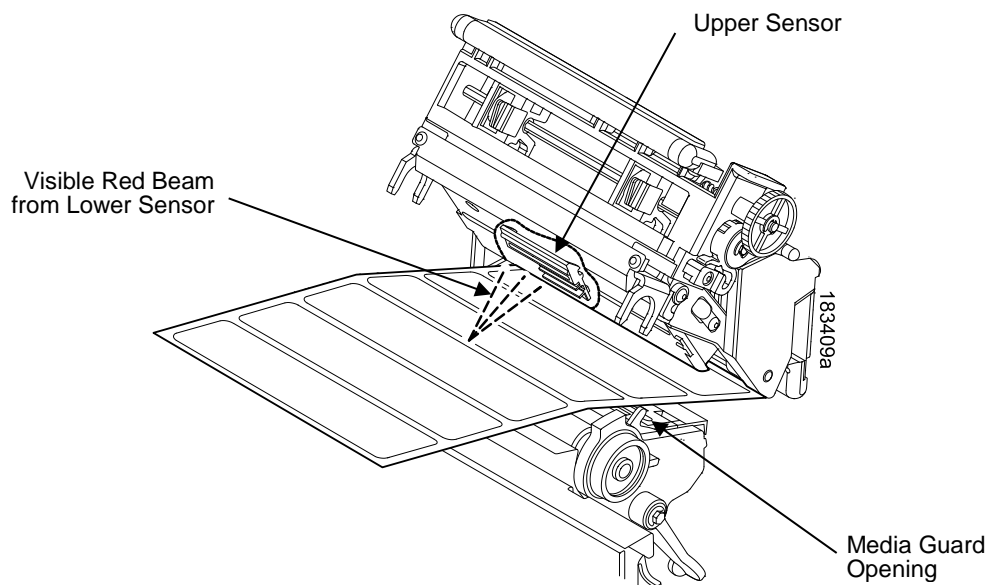


Position the lower media sensor for detecting gaps, notches, or holes in media with a white background. If using direct thermal media, position the upper sensor away from the lower sensor.

NOTE: The 4 inch SL/T5R media guard is divided into three open sensor areas. Make sure the media sensor is placed in an open area.

1. Position the lower sensor directly under the center of the gap, notch, or hole.
2. Check the position of the lower sensor by looking through the long, narrow opening in the media guard. Use the visible red light emitting from the lower sensor as a reference pointer.
3. Use the sensor handle to manually position the sensor to the center of the gap, notch, or hole in the media.
4. Select "Gap" in the Gap/Mark Sensor submenu under the CALIBRATE CTRL menu. See "Sensing Different Media Types" on page 59.
5. Perform an Auto Calibrate. See "Running Auto Calibrate" on page 60.

Sensing Media with Dark Background Labels with Gaps (Advanced Gap)

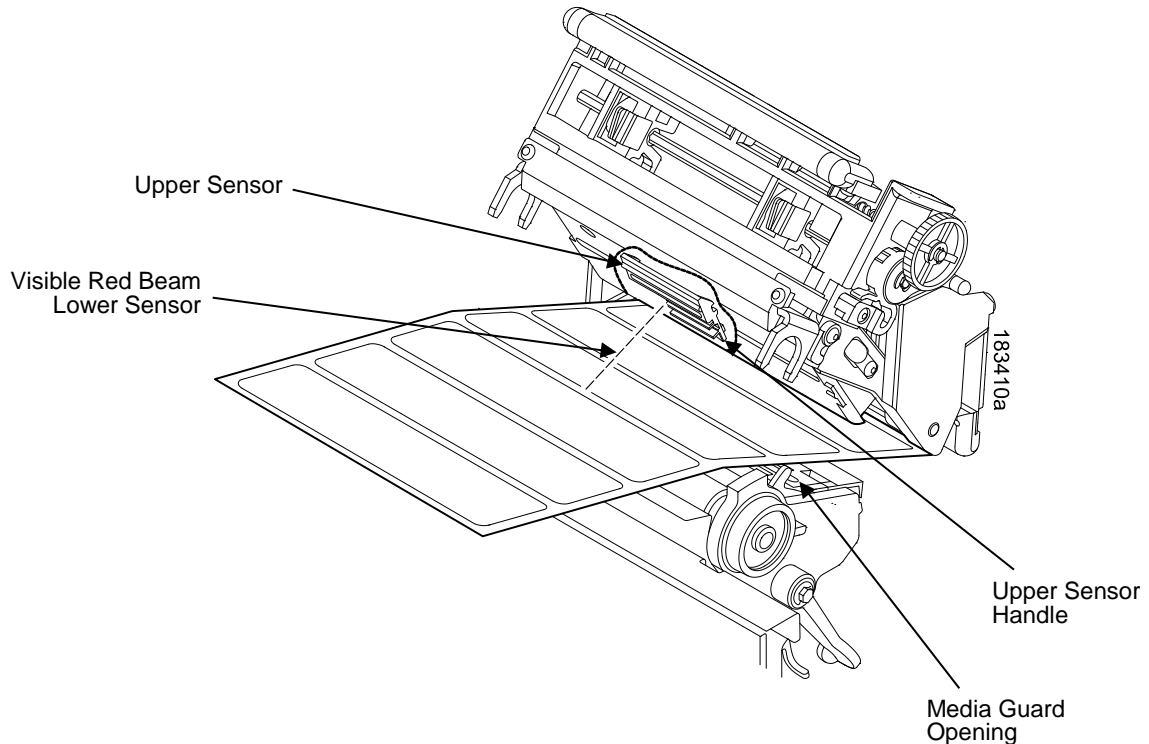

NOTE: Ribbon is not displayed in this illustration. The upper and lower sensors are designed to function with or without ribbon installed.


The upper sensor and lower sensor are used together to detect liner gaps between die cut labels that have a black or dark background on white or clear liner.

1. Position the lower sensor directly under the center of the gap, and then place the upper sensor directly over the lower sensor.
2. Check the position of the lower sensor by looking through the long, narrow opening in the media guard. Use the visible red light emitting from the lower sensor as a reference pointer.
3. Use the sensor handle to manually position the sensor to the center of the gap in the media. Then use the handle on the upper sensor to position it directly above the lower sensor.

NOTE: When using ribbon, you may need to slide the ribbon to one side to adjust the upper sensor.

4. Select "Advanced Gap" in the Gap/Mark Sensor submenu under the CALIBRATE CTRL menu. See "Sensing Different Media Types" on page 59.
5. Perform an Auto Calibrate. See "Running Auto Calibrate" on page 60.

Sensing Dark Background Media with Notches or Holes (Advanced Notch)

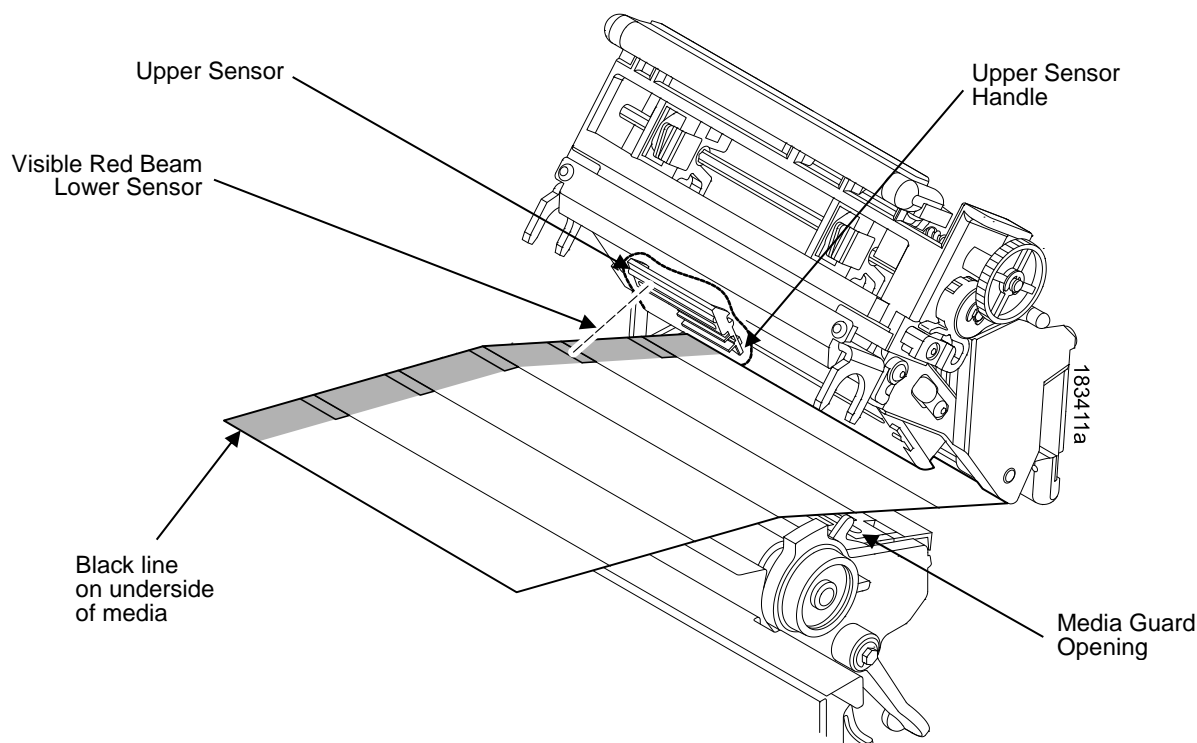

NOTE: Ribbon is not displayed in this illustration. The upper and lower sensors are designed to function with or without ribbon installed.

The upper sensor and lower sensor are used together to detect notches or holes in media with a black or dark underside. This combination can be found on tag stock that has a black vertical line along one edge on the underside of the label, interrupted by a notch or hole used as the label length indicator.






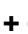
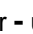
1. Position the lower sensor directly under the center of the notch or hole, and then place the upper sensor directly over the lower sensor.
2. Check the position of the lower sensor by looking through the long, narrow opening in the media guard. Use the visible red light emitting from the lower sensor as a reference pointer.
3. Use the sensor handle to manually position the sensor to the center of the notch or hole in the media. Then use the handle on the upper sensor to position it directly above the lower sensor.

NOTE: When using ribbon, you may need to slide the ribbon to one side to adjust the upper sensor.

4. Select "Advanced Notch" in the Gap/Mark Sensor submenu under the CALIBRATE CTRL menu. See "Sensing Different Media Types" on page 59.
5. Perform an Auto Calibrate. See "Running Auto Calibrate" on page 60.


Sensing Different Media Types

The printer's media sensors can detect the different types of label length indicators on a large variety of media types. This is accomplished by selecting the correct sensor option: Gap, Mark, Advanced Gap, Advanced Notch, or Disable under Gap/Mark Sensor in the CALIBRATE CTRL menu. Figure 9 on page 335 illustrates the different media types and label length indicators used on them.

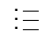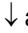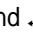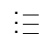1. Press  to place the printer in Menu mode.
2. Press  and  together until "ENTER SWITCH UNLOCKED" displays.
3. Press  until "CALIBRATE CTRL" displays.
4. Press  until "Gap/Mark Sensor/Advanced Gap" (the currently enabled) option displays.
5. Press  or  until the option that matches the type of label length indicators on the installed media displays:
 - **Mark.** Select when using media that has horizontal black marks located on the underside of the label liner or tag stock.
 - **Gap.** Select when using media with a liner space between die-cut labels or when using tag stock with notches or holes as label length indicators on white background media.
 - **Advanced Gap.** Select when using media that has liner gaps between die cut labels with black background.
 - **Advanced Notch.** Select when using media with notches or holes that interrupt a black vertical line on the underside of the media.
 - **Disable.** Select when using media with no label length indicators (no gaps, notches, holes, or black marks) or when you want the printer to ignore all existing label length indicators on the installed media.

NOTE: When you select Disable, the length of each label is based on the Label Length value entered in the QUICK SETUP menu or the value sent via host software.

NOTE: If the printer detects a false PAPER OUT message when you change from Advanced Gap or Advanced Notch to Gap or Mark sensing or vice-versa, press the PAUSE key and run Auto Calibrate.

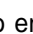2. Press  to enable the displayed option. An asterisk (*) appears next to the selection.
3. Press PAUSE until "OFFLINE" appears on the LCD.
4. Review "Calibrating the Media Sensors" on page 60.
5. Perform the Auto Calibrate procedure on page 60.

Calibrating the Media Sensors

Due to manufacturing differences in media and ribbon, the media sensors may have difficulty differentiating between the label and the liner or the label and the black mark. When this occurs, the printer may intermittently skip a label or display a fault message such as “GAP NOT DETECTED/See Manual” or “PAPER OUT/Load Paper.”

Media sensor sensitivity and reliability can be improved by changing the Gap/Mark Threshold and/or Paper Out Threshold values. You can change these values automatically by performing the Auto Calibrate or Manual Calibrate procedure in the CALIBRATE CTRL menu or change them manually by entering your own Gap/Mark Threshold or Paper Out Threshold values. (The changes take effect immediately within the current configuration menu.)

Auto or Manual Calibrate is completed successfully when the displayed Sensed Distance value correctly matches that of the installed media. When Gap is selected, the Sensed Distance should match the length from the trailing edge of one gap to the trailing edge of the next gap (or one label + one gap). When Mark is selected, the Sensed Distance should match the length from the leading edge of one black mark to the leading edge of the next black mark.

When you have completed Auto or Manual Calibrate, you can verify the new values are correct by pressing the FEED key several times. Each time you press FEED, media advances one label and stops at the correct Top-of-Form position of the next label.

Once you confirm the correct values, save them to the desired configuration menu before powering off the printer. See “Saving a Configuration” on page 76.

Running Auto Calibrate

You can initiate Auto Calibrate via the TEST PRINT key (described in detail below) or via the CALIBRATE CTRL or DIAGNOSTIC menus in Menu mode.

NOTE: Verify that the Gap/Mark Sensor option (Gap, Mark, Advanced Gap, Advanced Notch, or Disable) matches the installed media. See “Sensing Different Media Types” on page 59.

Check that the media sensors are horizontally positioned to permit sensing of the label length indicators. See “Positioning the Media Sensors” on page 54.

Make sure the Label Length value entered in the QUICK SETUP menu matches the physical length of the installed media. Entering the correct length forces the printer to advance media far enough during calibrate for long labels (so actual gaps, notches, and marks can be detected) and reduce the amount of media advanced for short labels.

If you try to do an Auto Calibrate when Peel-Off Media Handling is enabled, the LCD will display “CANNOT CALIBRATE/Disable Peel-Off.” Before you can do an Auto Calibrate, you must select another media handling mode.

1. Press the PAUSE key until "OFFLINE" appears on the LCD.
2. Press ↓ and ↵ together until "ENTER SWITCH UNLOCKED" displays.
3. Press the TEST PRINT key until "Printer Tests/Auto Calibrate" displays.
4. Press ↵. Media advances until it can accurately detect the label length indicators and then stops at the Top-of-Form position. The Sensed Distance value will then display for one second.
5. Auto Calibrate is successful when the Sensed Distance value correctly matches that of the installed media:

- **Gap/Mark Sensor = Gap, Advanced Gap, or Advanced Notch:** The Sensed Distance value is the physical length of one label plus the length of one gap, notch, or hole.
- **Gap/Mark Sensor = Mark:** The Sensed Distance value is the physical distance from the leading edge of one black mark to the leading edge of the next.
- **Gap/Mark Sensor = Disable:** Not applicable. If Gap/Mark Sensor is set to Disable, the Sensed Distance value will not be updated.

If "GAP NOT DETECTED" displays, run Auto Calibrate again.

If Auto Calibrate continues to end with an incorrect Sensed Distance value displayed or a fault message displayed, run Manual Calibrate as described on page 66 or see Table 18 on page 309.

NOTE: The amount of media sampled during Auto Calibrate is based on the length of a label and transitions detected, without error, between a label and its label length indicators.

6. Press the PAUSE key until "OFFLINE" displays.
7. Press the FEED key several times. Each time you press FEED, the media advances one label length and stops.

NOTE: After a form feed, the position of the leading edge of the next label depends on the type of Media Handling mode selected under the QUICK SETUP menu. Tear-Off and Tear-Off Strip Media Handling will position the label edge at the tear bar, while Continuous will position the label edge under the printhead.

8. Press the PAUSE key until "ONLINE" displays.
9. Once the Sensed Distance value is confirmed, you will need to save it to the desired configuration menu before powering off the printer. See "Saving a Configuration" on page 76.

Running Media Profile

The Media Profile printout shows the relationship of the Paper Out Threshold and the Gap/Mark Threshold values, illustrates if and when each label length indicator is detected, and shows the difference between the label length indicators and the label. The profile printout (see Figure 1 on page 63) helps you set the thresholds for difficult media. This includes pre-printed labels, labels with poor gap/media dynamic range, and smart labels that have embedded RFID tags.

Once Media Profile is initiated, the printer will continue to advance media and print the profile in landscape orientation until you press ↵ to stop printing.

NOTE: Verify the CALIBRATE CTRL menu Gap/Mark Sensor option (Gap, Mark, Advanced Gap, Advanced Notch, or Disable) matches the installed media. See “Sensing Different Media Types” on page 59.

You will need a minimum installed label width of two inches to support the Profile printout.

Ensure the media sensors are horizontally positioned to permit sensing of the label length indicators. See “Positioning the Media Sensors” on page 54.

Ensure the Print Mode option selected in the QUICK SETUP menu matches the media installed. Select “Direct” for heat sensitive media (no ribbon required) or “Transfer” for thermal transfer media (ribbon required).

1. Press ⏏ to place the printer in Menu mode.
2. Press ↓ and ↵ together until “ENTER SWITCH UNLOCKED” displays.
3. Press ⏏ until “CALIBRATE CTRL” displays.
4. Press ↓ until “Media Profile/Profile Print” displays and then press ↵. (The printer will continue to print the profile until you press ↵.)

The printer will advance media and continue to print a dynamic profile image depicting the relationship of the label and any label length indicators detected.

5. Press ↵. The printer will stop printing.
6. Press the PAUSE key until “OFFLINE” displays.

NOTE: The Gap/Mark and Paper Out Threshold values shown on the Profile printout represent the last values determined from a successful Auto or Manual Calibrate or the factory default values if no Auto or Manual Calibrate was performed.


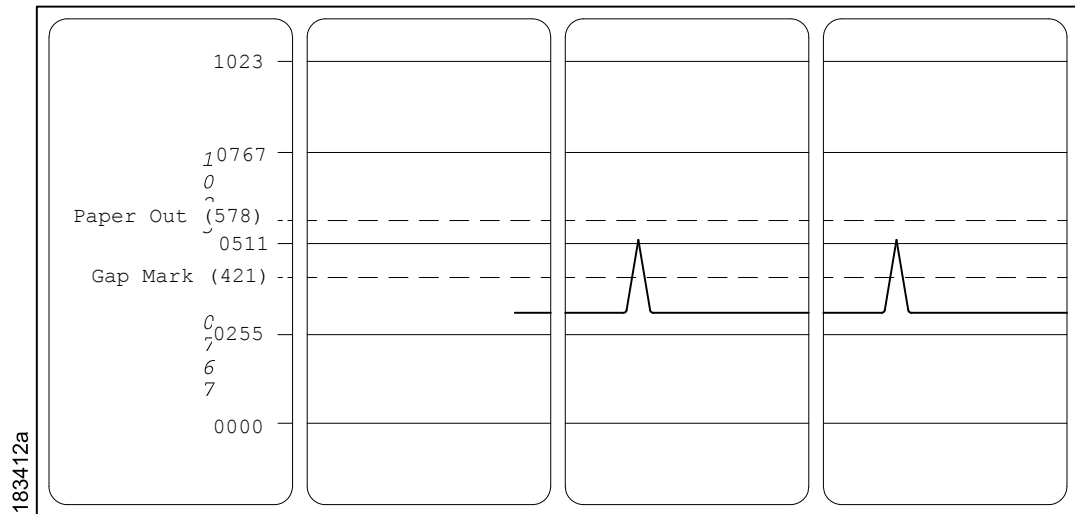


Figure 1. Media Profile Printout

Gap Sensing

This figure shows a Media Profile printout of a smart label where Gap/Mark Sensor is set to Gap in the CALIBRATE CTRL menu.


In this example, the gap threshold value the printer selected (represented by the Gap/Mark dotted line) is too close to the amplitude of the antenna pulse. This may cause the printer to falsely use the antenna as the gap (top-of-form).

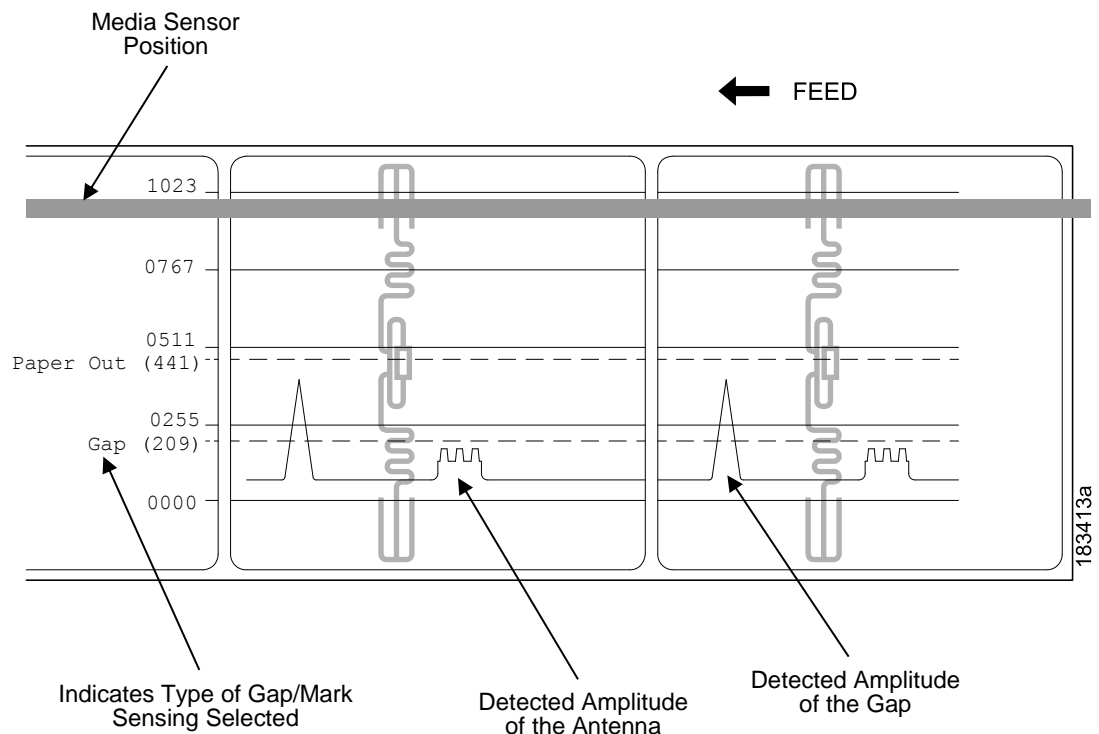

To avoid this problem, increase the Threshold Range value to 60% or 70% in the CALIBRATE CTRL menu (the default is 50%), then run an Auto Calibrate again (Cross-Ref to Auto Calibrate).

NOTE: Any changes to Threshold Range will not take effect until you run an Auto Calibrate again.


This will raise the Gap/Mark threshold high enough so that the printer will not falsely use the antenna as the gap (top-of-form).

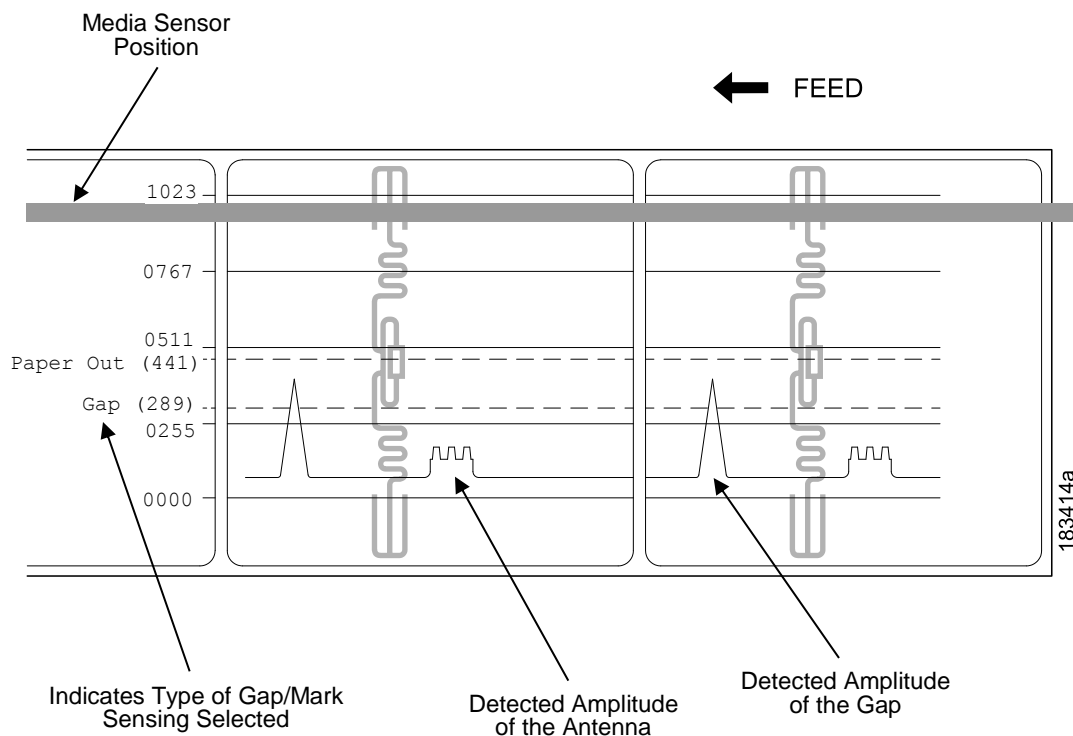

Advanced Gap Sensing

This figure shows a Media Profile printout of a smart label where Gap/Mark Sensor is set to Advanced Gap in the CALIBRATE CTRL menu.


In this example, the gap threshold value the printer selected (represented by the Gap/Mark dotted line) is too close to the baseline (die cut label). If there is an increase in noise or the opacity of the liner or ribbon, the printer may falsely use the noise as the gap (top-of-form).

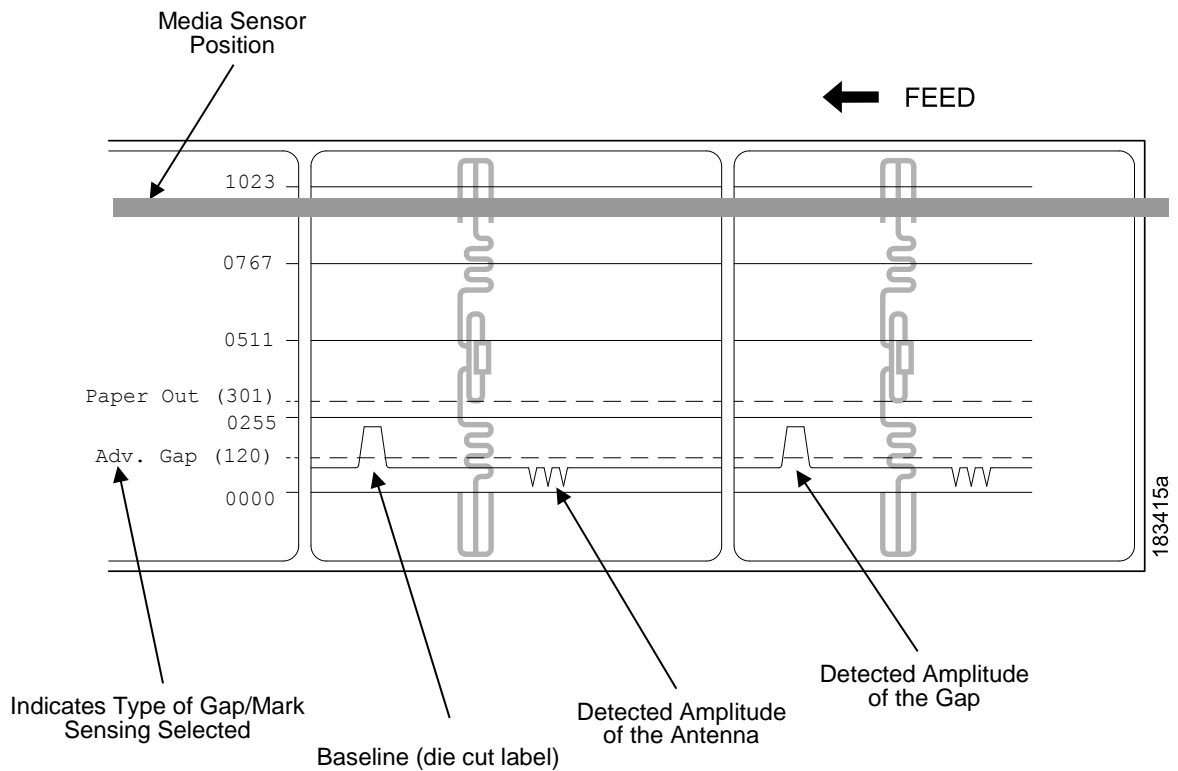

To avoid this problem, increase the Threshold Range value to 60% in the CALIBRATE CTRL menu (the default is 50%), then run an Auto Calibrate again (Cross-ref to Auto Calibrate).

NOTE: Any changes to Threshold Range will not take effect until you run an Auto Calibrate again.

This will raise the Gap/Mark threshold high enough so that the printer will not falsely use the antenna or noise as the gap (top-of-form).

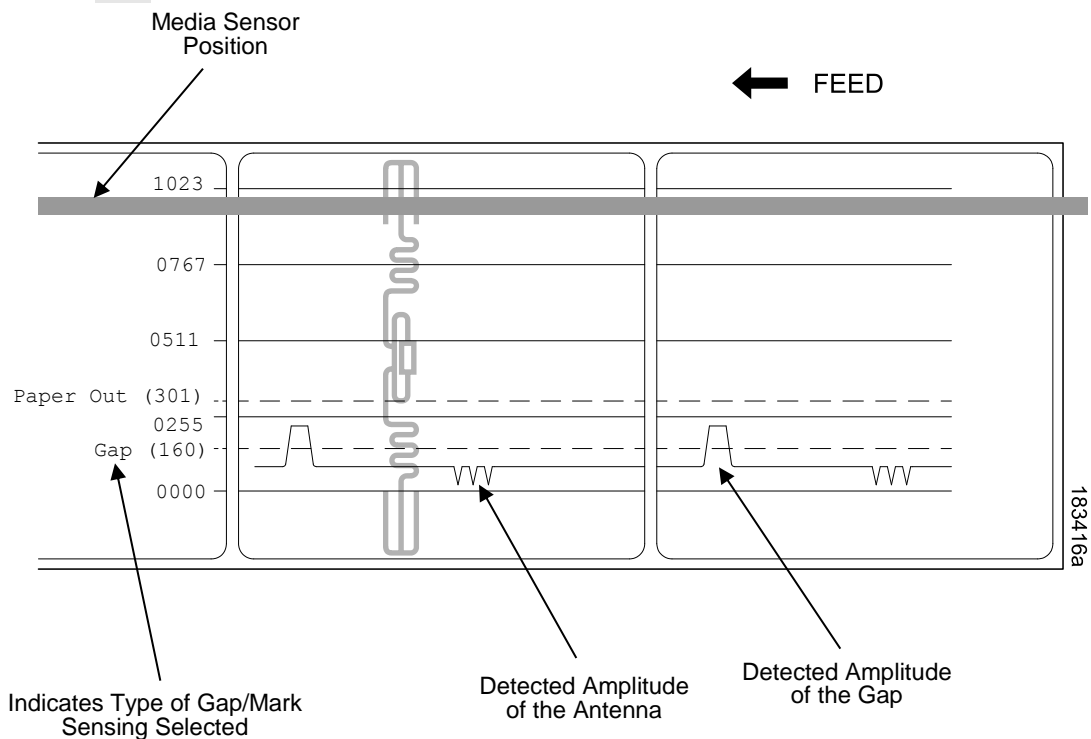

Running Manual Calibrate

Manual Calibrate should be performed only when the values derived from Auto Calibrate fail to improve the media sensors' ability to sense label length indicators on the installed media. You must first enable "Admin User" in the PRINTER CONTROL menu before accessing or initializing Manual Calibrate in the CALIBRATE CTRL menu.

NOTE: Verify the Gap/Mark Sensor option (Gap, Mark, Advanced Gap, Advanced Notch, or Disable) matches the installed media. See "Sensing Different Media Types" on page 59.

Ensure the media sensors are horizontally positioned to permit sensing of the label length indicators. See "Positioning the Media Sensors" on page 54.

Ensure the Print Mode option selected in the QUICK SETUP menu matches the media installed. Select "Direct" for heat sensitive media (no ribbon required) or "Transfer" for thermal transfer media (ribbon required).

If you try to do a Manual Calibrate when Peel-Off Media Handling is enabled, the LCD will display, "CANNOT CALIBRATE/Disable Peel-Off." Before you can do a Manual Calibrate, you must select another media handling mode.

1. Press ⏏ to place the printer in Menu mode.
2. Press the \downarrow and \leftarrow keys together until "ENTER SWITCH UNLOCKED" displays.
3. Press ⏏ until "PRINTER CONTROL" displays.
4. Press \uparrow until "Admin User" displays, then press $+$ until "Enable" displays.

5. Press \downarrow to select Enable. An asterisk (*) appears next to "Enable."
6. Press \equiv until "CALIBRATE CTRL" displays.
7. Press \downarrow until "Manual Calibrate/Run Calibrate" displays, then press the \downarrow .
8. Follow the instructions displayed on the LCD. Example: "REMOVE RBN&MEDIA/Press Enter" indicates that you must open the pivoting deck and remove the ribbon and media from under the printhead, close and lock the pivoting deck, and press the \downarrow key.
9. During the last step of Manual Calibrate, the printer will advance the media and attempt to detect the label length indicators and stop at the Top-of-Form position. The Sensed Distance value will then display for one second. The calibrate is successful when the Sensed Distance value correctly matches that of the installed media. If "CALIBRATION FAIL/See Manual" displays, run Manual Calibrate again.

NOTE: The amount of media sampled during Manual Calibrate is based on the length of a label and the transitions detected without error, between a label and its label length indicators.

10. Press the PAUSE key until "OFFLINE" displays.
11. Press the FEED key several times. Each time you press FEED, the media advances one label length and stops.

NOTE: After a form feed, the position of the leading edge of the next label depends on the type of Media Handling mode selected under the QUICK SETUP menu. Tear-Off and Tear-Off Strip Media Handling positions the label edge at the tear bar, while Continuous positions the label edge under the printhead.

12. Once the correct values are confirmed, save them to the desired configuration menu before powering off the printer. See "Saving a Configuration" on page 76.

Cleaning

Depending on the media used, the printer may accumulate residues (media dust, adhesives, etc.) as a by-product of normal printing. To maintain top printing quality, you should remove these residues by cleaning the printer periodically.

WARNING Set the printer power switch to O (Off) prior to performing any cleaning tasks. Leave the power cord connected to keep the printer grounded and to reduce the risk of electrostatic damage.

IMPORTANT When the printer is powered Off, menu settings that were changed and not saved or any print data remaining in the print buffer will be lost. To prevent the loss of recent menu changes, see “Saving a Configuration” on page 76.

CAUTION

- Do not wear rings or other metallic objects while cleaning any interior area of the printer.
- Use only the cleaning agents recommended in this section. Use of other cleaners may damage the printer and void its warranty.
- Do not spray or drip liquid cleaning solutions directly into the printer. Apply the solution on a clean lint-free cloth and then apply the dampened cloth to the printer.
- Do not use canned air in the interior of the printer as it can blow dust and debris onto sensors and other critical components.
- Only use a vacuum cleaner with a nozzle and hose that are conductive and grounded to drain off static build up.
- All reference in these procedures for use of isopropyl alcohol requires that a 99% or greater isopropyl alcohol content be used to reduce the risk of moisture corrosion to the printhead.

Exterior Cleaning

Clean the exterior surfaces with a clean, lint-free cloth. If necessary, use a mild detergent or desktop cleaning solution.

Interior Cleaning

Clean the interior of the printer by removing any dirt and lint with a vacuum cleaner, as described above, or use a brush with soft non-metallic bristles.

Cleaning the Printhead, Platen Roller, Media Sensors and Media Damper

NOTE: Even though the printhead, platen roller, media sensors and media damper are individually listed in these cleaning procedures, debris and adhesive on these components can ultimately travel to the printhead area and therefore should be cleaned and examined each time the printhead is cleaned and in the order shown.

Printhead Cleaning

As you use your printer, the printhead may become dirty with ribbon residue and label adhesives which can result in poor print quality. Keeping the printhead clean will help maintain its life.

- **Cleaning Agent** - Clean the printhead using a Printhead Cleaning Pen, Printronix PN 203502-002 or an Isopropyl Alcohol Wipe, Printronix PN 254945-901.
- **Schedule** - Clean the printhead each time you install a new roll of ribbon (thermal transfer print mode) or when you install a new roll or box of media (direct thermal print mode).

WARNING If you have just been printing, allow one minute for the printhead to cool down to avoid burns from accidental printhead contact.

- CAUTION**
- Avoid electrostatic damage to the printhead by first making hand contact with an unpainted part of the printer frame or by using an anti-static wrist strap grounded to the printer frame.
 - Do not use hard, sharp or abrasive objects to remove residue from the printhead.
 - Do not touch the heating element surface of the printhead with your hands to avoid printhead corrosion. Any accidental skin contact with the element surface should be immediately followed by a thorough cleaning with a Printhead Cleaning Pen or an Isopropyl Alcohol Wipe.
 - The heating element surface should be free from any condensation to avoid corrosion.
1. Rotate the blue deck lock lever clockwise to open the pivoting deck and remove the media and ribbon, if installed.
 2. Clean the printhead by gently rubbing an Isopropyl Alcohol Wipe or the felt tip of a Printhead Cleaning Pen across the printheads light brown heating elements area. Allow the printhead to dry for one minute before reloading ribbon or media.

NOTE: Even after a thorough cleaning with a Printhead Cleaning Pen or Alcohol Wipe, you may still see printouts with voids or streaks. This may be the result of baked-on ribbon resin that can be hard to remove when normal cleaning cycles are not maintained. Try using a Thermal Printer Cleaning Card or Sheet. When using a cleaning card or sheet, follow the directions on the packaging. Thermal printer cleaning cards and sheets are available on the internet.

Platen Roller Cleaning

Label parts, media dust, and adhesive residue on the platen can degrade print quality and cause voids in your label image.

- **Cleaning Agent** - Use an isopropyl alcohol wipe or small amount of isopropyl alcohol on a clean cloth to clean the platen roller.
 - **Schedule** - Clean the platen roller each time you clean the printhead.
3. Clean the platen roller by first removing any label parts from its surface by hand. Then use an isopropyl alcohol wipe or clean cloth moistened with isopropyl alcohol to remove any remaining paper dust, debris, or label adhesive. The platen roller can be rotated forward by hand to access and clean its entire surface area.

NOTE: Even though power is removed from the platen motor, some drag will be felt as you rotate the platen.

4. Check the platen roller for razor cuts, nicks, and gouges that may cause voids in the printed image. This type of damage usually requires platen roller replacement.

Media Sensor Cleaning

The upper and lower media sensors should be cleaned to ensure reliable Top of Form and Paper Out sensing.



CAUTION

Do not use isopropyl alcohol, solvents, or abrasive agents to clean the lower media sensor as they can damage the sensors lens cover.

- **Cleaning Agent** - Use a brush with soft non-metallic bristles or a vacuum cleaner, described above, to remove paper dust.

NOTE: An Isopropyl Alcohol Wipe or Printhead Cleaning Pen can be used to remove label adhesive from the upper sensor.

- **Schedule** - Clean the media sensors each time you clean the printhead.
5. Brush away or vacuum any dust or debris from the upper and lower sensor.

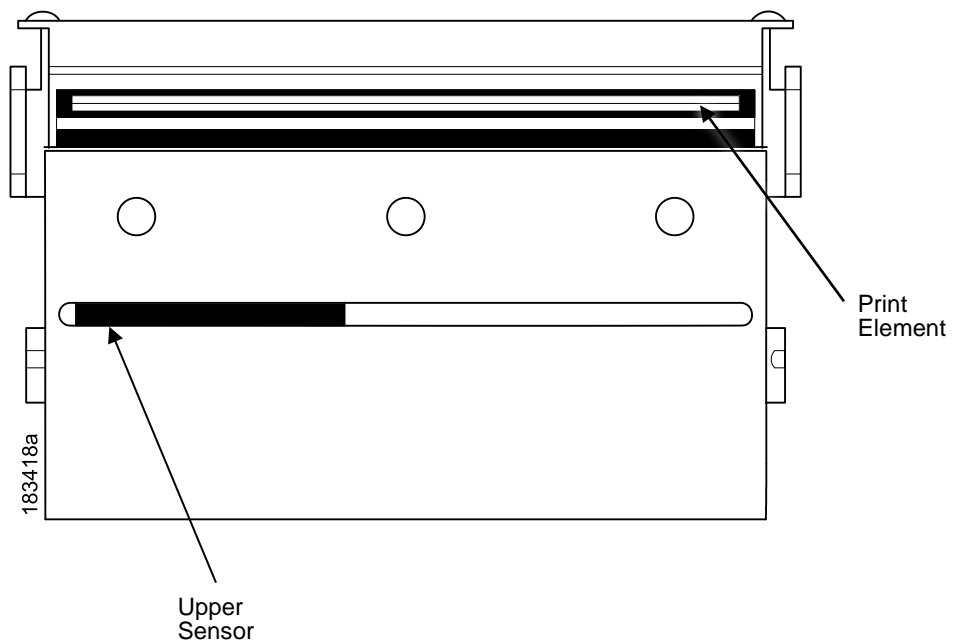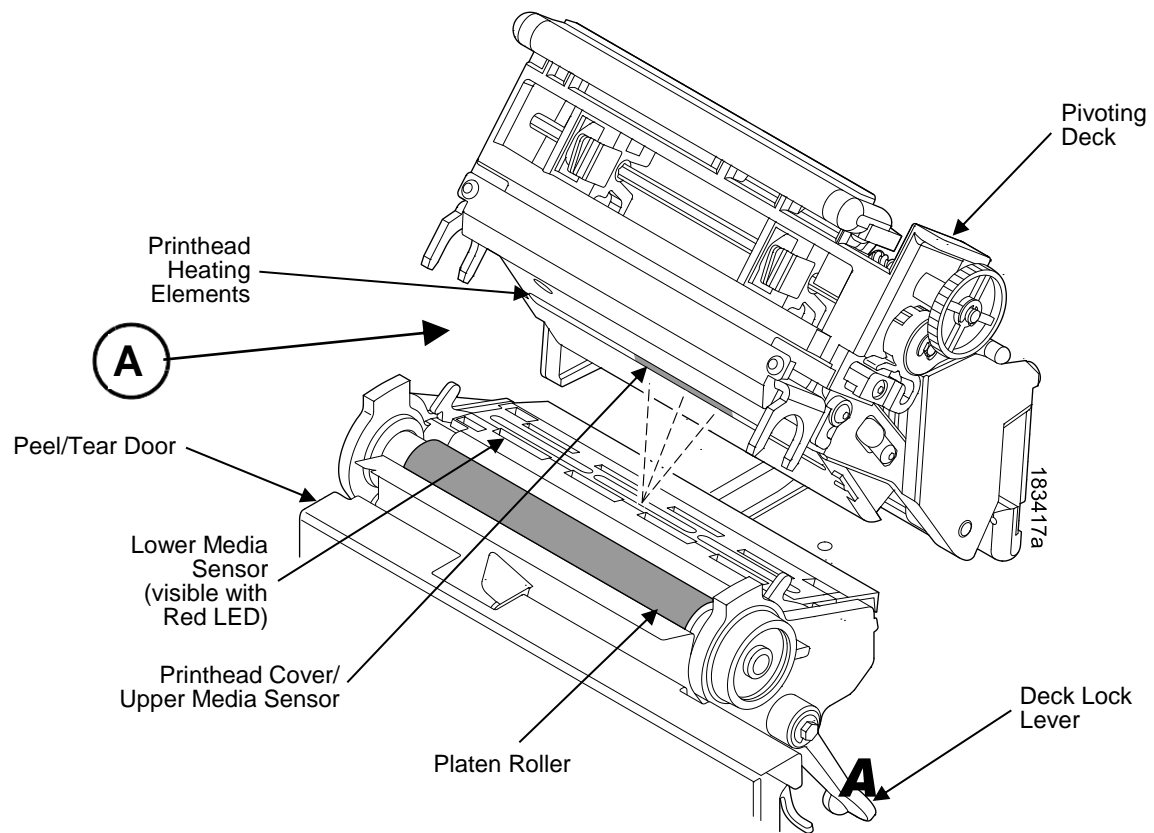

Media Damper Cleaning

The media damper and its media width guides (see page 32) can accumulate parts of labels, adhesive and paper dust residue that can prevent the proper guiding of labels.

- **Cleaning Agent** - Use an isopropyl alcohol wipe or isopropyl alcohol on a clean cloth.
 - **Schedule** - Clean the media damper and its width guides each time you clean the printhead.
6. Clean the media damper by rotating it counterclockwise and remove any label parts from its bottom surface. Then use an isopropyl alcohol wipe or clean cloth moistened with isopropyl alcohol to remove all remaining debris and adhesive from the damper and its inboard and outboard guides.

IMPORTANT All adhesive must be completely removed to prevent future die cut labels from being accidentally peeled away from their liner.

Cutter Option Cleaning

The cutter requires only periodic cleaning.

WARNING Keep your fingers away from the cutter blades. They are sharp.

Perform the following procedure whenever too much dust or debris is visible.

1. Set the printer power switch to O (Off).
2. Rotate the deck lock lever fully clockwise until the deck swings upward.
3. Remove the cutter top cover by loosening the two captive thumbscrews.
4. Place the cutter in the down (open) position.
5. Use a vacuum or can of compressed air with a nozzle around the area of the cutter blade to remove any dust or debris.
6. Use a cloth with a light amount of WD-40 oil to clean adhesive from the cutter blade and upper or lower stainless steel cutter guides. Adhesive oil must be cleaned from the blade and guides with a dry cloth to prevent dust attraction.

CAUTION Do not use isopropyl alcohol to clean the cutter blade – it dissolves oils required for lubrication.

7. Place the cutter in the up (closed) position.
8. Install the cutter top cover and tighten the two captive thumbscrews.
9. Properly route the media through the printer and cutter.
10. Close the pivoting deck and rotate the deck lock lever fully counterclockwise.
11. Set the printer power switch to I (On).
12. Test the printer cutting operation by pressing the TEST PRINT key and selecting one of the test patterns to print.

3

Configuring The Printer

Overview

This chapter provides information about:

- Setting, saving, modifying, and printing configurations
- Configuration menus
- Downloading emulation and operating system software

Setting Printer Configuration Parameters

Configuration parameters are set from the control panel or are retrieved from the printer's memory. The parameters define how the printer will respond to command and interface signals from the host computer.

The configuration menu structure consists of main menus and the options applicable to each menu.

NOTE: Some configurations refer to printer options that may not be present in your printer. If you select an option or feature that is not present, no action will be performed by the printer or an "OPTION NOT INSTALLED" message will display on the LCD.



Moving within the Configuration Menu

You can move through the configuration menus using the appropriate navigation keys, as shown in Figure 2. (See "Controls and Indicators" on page 23 for more details on the function of the operator panel keys.)

You can select different options and save them as the power on default; you can save up to 8 configurations with exception to the factory configuration. The factory configuration menu can be altered, but not saved.

When the printer is online, the first line of the LCD displays "ONLINE" and the second line lists the active interface port and type of emulation.

To configure the printer:

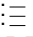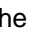1. Press the  key to enter the printer configuration menu system. "MENU MODE/QUICK SETUP" displays on the LCD.
2. You can move through configuration main menus in two ways:
 - Press the  key to move to the right.
 - Press the + key to move right or the – key to move left.

NOTE: In menus with numeric ranges of more than 50 numbers, hold down the + or – key for more than 2 seconds to move through the range in increments of 5. To move in increments of 1 again, release your hold on the + or – key.


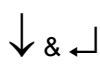
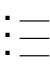





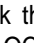

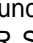
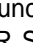
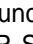
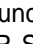
Step	Press	LCD	Notes
1	 PAUSE	OFFLINE	Allows you to make configuration changes. Enables the printer configuration menu. Cycles through the choices. Selects the Direct transfer mode.
2		ENTER SWITCH UNLOCKED	
3		MENU MODE QUICK SETUP	
4	↓ UNTIL	Print Mode Transfer*	
5	+ or –	Print Mode Direct	
6		Print Mode Direct*	



Figure 2. Moving within the Configuration Menu

Selecting a Menu Option

To select an option, you need to press the  key. By default, however, the  key is “locked” when the printer is turned on to prevent accidental changes to the configuration menu. If you press the  key when the key is locked, the message “ENTER SWITCH LOCKED” displays on the LCD for one second and the value will not be selected.

To unlock the  key, press the  and  keys simultaneously. This toggles the ENTER/LOCK function.

- If this function is performed while the  key is locked, the message “ENTER SWITCH UNLOCKED” displays for one second, and the  key will be unlocked.
- If this function is performed while the  key is unlocked, the message “ENTER SWITCH LOCKED” displays for one second, and the  key will be locked.

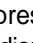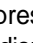When you press the  key (with the  key unlocked), you select the value or option that displays. An asterisk displays after the value you selected, and the configuration is changed immediately.

IMPORTANT This change takes effect for all subsequent data and operations for the printer as soon as the **↵** key is pressed and the asterisk (*) is displayed. The configuration change(s) stay in effect only while the printer is powered on. When the power is turned off, all current configurations will be lost unless changes made to it are saved via the **CONFIG. CONTROL** menu.

To save configuration information permanently or to select it as the power-up default, see “Saving a Configuration” on page 76.

Changing Printer Settings

You can change (or “configure”) printer settings, such as print speed or emulations, through the control panel as follows.

1. Press the **☰** key until the following message displays:

MENU MODE
QUICK SETUP

2. Press the **↓** key to cycle through these options:
 - Print Intensity
 - Print Speed
 - Print Mode
 - Media Handling
 - Paper Feed Shift
 - Label Length
 - Label Width
 - Ver Image Shift
 - Hor Image Shift
 - Orientation
 - Gap/Mark Sensor
 - Auto Calibrate
 - Validator Function (if the validator option is installed. Refer to the Online Data Validator User’s Manual.)
 - Active IGP Emul
 - xxx Diagnostics (xxx denotes Active IGP emulation)
 - Save Config.
 - Power-Up Config.

- SMT: Status (if RFID is installed. Refer to the RFID Labeling Reference manual.)
 - PAA: Status (if RFID is not installed)
3. When the desired submenu displays, press the + or – key to scroll through the values or options.
 4. Press the ↵ key to select a value. An asterisk (*) displays next to the selected value or option.
 5. If there are more submenu values or options you want to change, use the ⏏, ↑, ↓, +, and – keys to access the value and the ↵ key to select it. At any time, you may press the key ⏏ to return to the Main menu.
 6. At any time, you may press the PAUSE key twice to exit the Configuration menu and place the printer online. Once you have finished selecting all your options, save your configuration.

IMPORTANT

If you do not save your configuration, all your new values will be lost when you power off the printer.

Saving a Configuration

You can save up to eight different configurations to meet eight unique print job requirements. These configurations are saved and stored in the printer and are not lost when the printer is turned off.

NOTE: If the Protect Configs. option is enabled, the new configuration will not be saved until the existing configuration is deleted.

Follow these steps to save a new configuration:

1. Press the ⏏ key until the following message displays:

MENU MODE
CONFIG. CONTROL

2. Press the ↓ key until the following message displays:

Save Config.
1*

3. Press the + or – key to cycle through the options (1-8). Note that “Factory” is not listed, because no changes made to the factory configuration can be saved under Factory.

4. When the desired number displays, press the \downarrow key to select it. The following message displays briefly:

Saving
Configuration

When processing is completed, the display shows:

Save Config.
X*

NOTE: If the configuration number has been previously saved and Protect Configs. = Enabled under CONFIG CONTROL, the following error message displays:

CONFIG. EXISTS
Delete First

If the above occurs, see “Modifying a Saved Configuration” on page 79, step 4.

5. Print your configuration and store it in a safe place for future reference. Refer to “Printing a Configuration” on page 81.

Auto Save Configuration

If you make any changes to the current configuration menu items, you will be prompted to save the changes to “Config #” when you place the printer online. “#” equals the next available unassigned configuration number. When prompted, press one of the following keys:


- **Enter.** Saves to Config 1 or the next available Config, and becomes the Power-Up config.

NOTE: If all eight Configs are assigned, you will be prompted to select which Config to overwrite.


- **Pause.** Changes will be implemented but saved only temporarily until deliberately saved as a new configuration or until you power off the printer. All changes will be lost when you power off the printer.

Specifying a Power-Up Configuration


You can specify any one of the nine configurations (1-8 or Factory) as the power-up configuration:

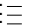1. Press the  key until the following message displays:

MENU MODE
CONFIG. CONTROL

2. Press the  key until the following message displays:

Power-Up Config.
1*

3. Press the + or – key to cycle through the options (1-8 and Factory). When the desired number displays, press the  key to select it. The following message displays:

Power-Up Config.
X*

NOTE: If the configuration number has not been saved previously, the following error message displays:

CONFIG. DOES NOT
EXIST/Save First

If this error message displays, see “Saving a Configuration” on page 76. Once you have saved a configuration, repeat the steps in this procedure.

Modifying a Saved Configuration

You can change a saved configuration by rewriting over it. For example, you can modify Config. 1, shown below. Suppose you want to keep all the settings but you want to select the parallel Centronics interface instead of the IEEE 1284 interface.

1. Load the configuration to be changed (for example, Config. 1).
 - a. Press the \equiv key until the following message displays:

MENU MODE
CONFIG. CONTROL

- b. Press the \downarrow key until the following message displays:

Load Config.
Factory

- c. Press the + or – key to cycle through the options: Factory 1-8.
 - d. When the desired number displays, press the \downarrow key to select it. The following message displays:

Loading Saved
Configuration

Then, the following message displays when it is loaded:

Load Config.
X*

2. Move through the menu and change all the desired values. (In this example, press the \equiv key until PARALLEL PORT displays. Press the \downarrow key until Port Type/IEEE 1284 displays. Press the - key until Centronics displays.)
3. Press the \downarrow key to select each new value. An asterisk (*) displays.

4. Before saving the modified configuration, you must delete the original configuration if the Protect Configs. option is enabled.

- a. Press the ↑ or ↓ key until the following message displays:

Delete Config.
1*

- b. Press the + or – key to cycle through the options (1-8). When the desired number displays, press the ↵ key to select it. The following message displays:

Deleting
Configuration

Then, the following displays when it is deleted:


Delete Config.
X*

5. Save the new configuration as described in the “Saving a Configuration” on page 76. Make sure you select the same number (e.g., Config. 1) when saving the modified configuration. The new configuration writes over the existing one.
6. Print a copy of this newest configuration and store it in a safe place. Refer to “Printing a Configuration” on page 81.


Printing a Configuration

We recommend that you print and store your configurations for future reference. The printout provides a list of the parameters that were set when you configured the printer.

To print a configuration:

1. Press the  key until the following message displays:


MENU MODE
CONFIG. CONTROL

2. Press the  key until the following message displays:

Print Config.
Current*

3. Press the + or – key to cycle through the following printout options:

Current*
Factory
Power-Up
All
1-8 customized configurations

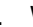4. When the desired option displays, press the  key. The printer prints the specified configuration.


NOTE: If the configuration you want to print has not been saved, the following message displays momentarily:

CONFIG. DOES NOT
EXIST/Save First


This message indicates that no configuration menu has been saved under the configuration value you have selected and therefore cannot be printed. You must either select another configuration to print or load and then save a configuration to that configuration value first.

Loading A Saved Configuration

To use a different configuration:

1. Press the PAUSE key until OFFLINE displays.
2. Press the JOB SELECT key until the desired configuration displays.
3. Press . Loading Saved/Configuration displays.

Menu Overview

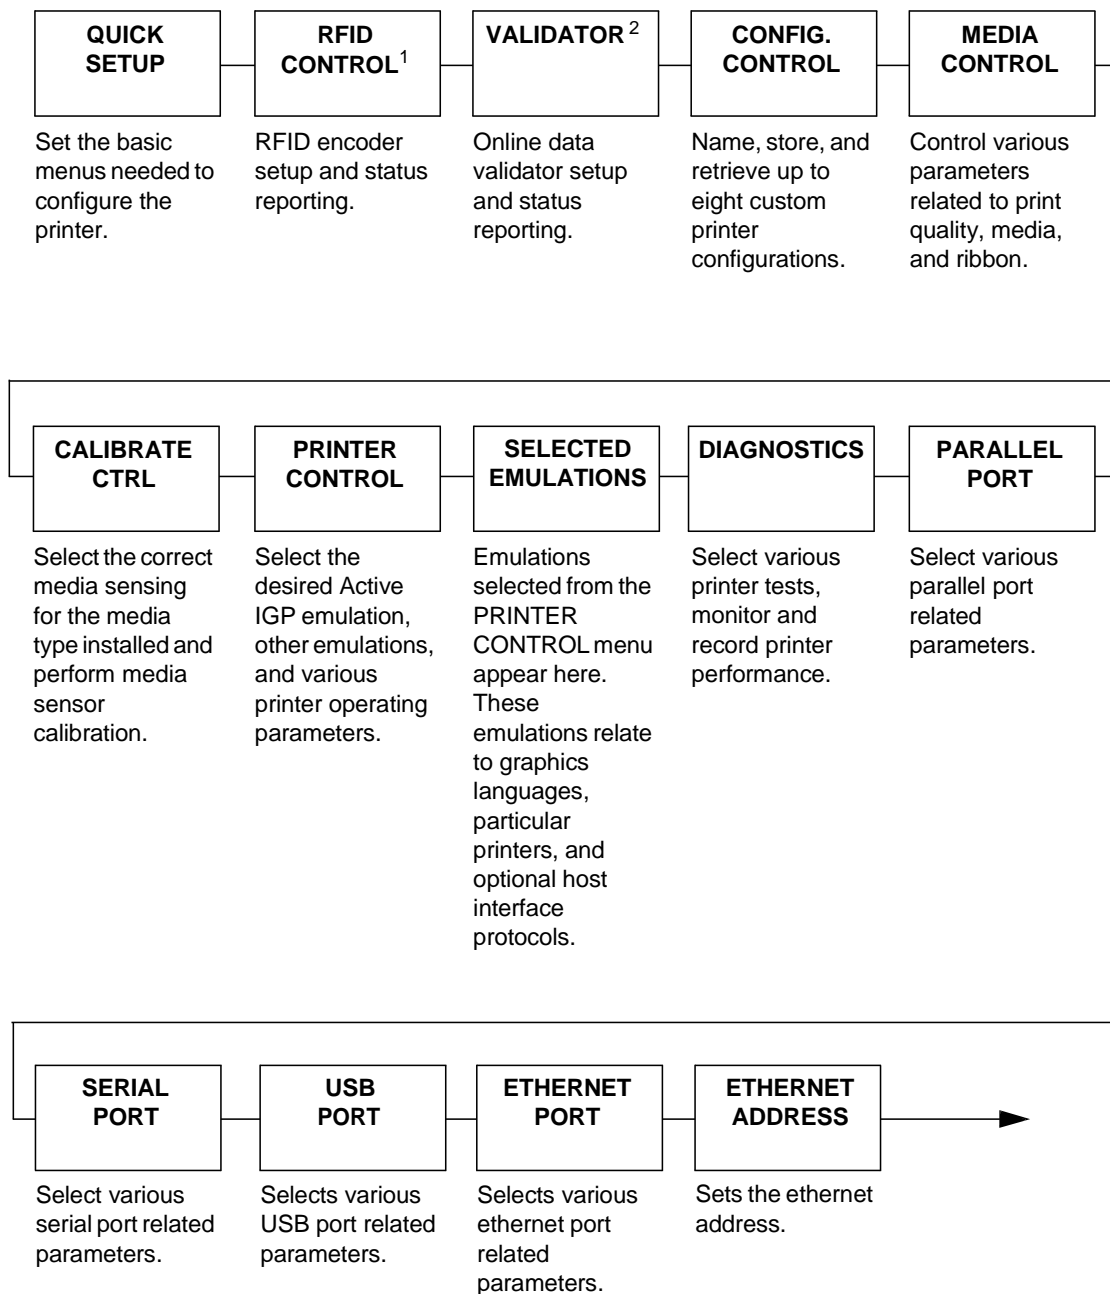


Press to select the next main menu.

Press ↓ or ↑ to move within each main menu.

NOTES:

¹ This menu appears only if an RFID encoder is installed. See the *RFID Labeling Reference Manual*.

 
² This menu appears only if a Validator is installed. See the *Online Data Validator User's Manual*.



Select optional
Host
interfaces.


Select optional
Features, such as
DATE for Real
Time Clock.

Select PNE port
type and port
number.

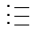Press  to select the next main menu.

Press ↓ or ↑ to move within each main menu.

Main Menu

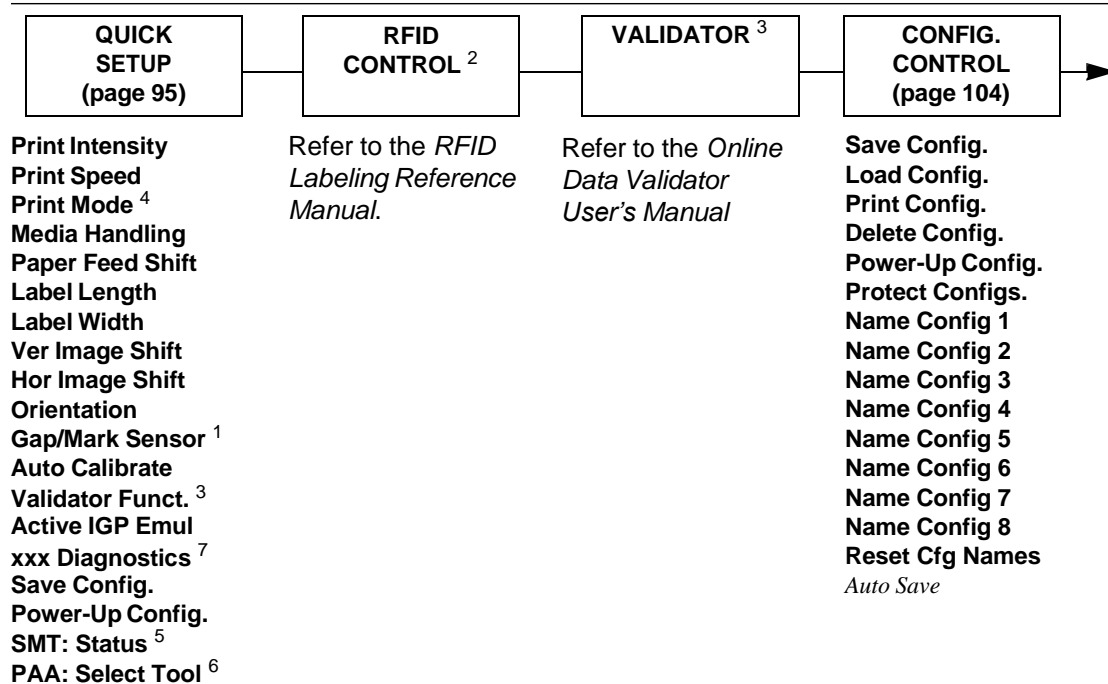

Press to select the next main menu.

Press ↓ or ↑ to move within each main menu.

Press + or – to cycle through each possible option or value.

NOTES:

Italicized items are available only when you enable Admin User (under PRINTER CONTROL).

¹ Gap/Mark Sensor and Paper Out Sensor work in conjunction, as shown in Table 6 on page 127. If you change the Gap/Mark Sensor or Paper Out Sensor, you must recalibrate the media.

² This menu appears only if an RFID encoder is installed.

³ This menu appears only if a Validator is installed.

⁴ This menu will not appear on Direct Thermal only printers.

⁵ This menu appears only if RFID is installed and there is no CST bundle in the Flash File System.

⁶ This menu appears only if RFID is not installed and there is a CST bundle in the Flash File System.

⁷ xxx represents the emulation name selected in the Active IGP Emul menu.

MEDIA CONTROL (page 107)	CALIBRATE CTRL (page 127)	PRINTER CONTROL (page 135)	
Print Intensity Print Speed Print Mode ³ Media Handling Paper Feed Shift Label Length Label Width Ver Image Shift Hor Image Shift Orientation <i>Auto Map Select</i> <i>Auto Label Width</i> <i>Num Auto Labels</i> <i>Slew Speed</i> <i>Print Direction</i> <i>Label Wait Time</i> <i>Pre-Peel Mode</i> <i>Pre-Peel Adjust</i> <i>Lbl Missing Flt</i> <i>Clip Page</i> <i>Error Recover</i> <i>Ribbon Width</i> ³ <i>Display Ribbon</i> ³ <i>Ribbon Low</i> ³ <i>Rbn Takeup Full</i> ³ <i>Units</i> <i>Set Label Length</i> <i>Peel Present</i> <i>Peel-Off Mode</i> <i>Continuous Mode</i> <i>TOF Detect Fault</i> <i>Ticket Save Mode</i> <i>TOF Adjust Mode</i> <i>TOF Adjust</i> <i>Ribbon Calibrate</i> ³ <i>Reverse Speed</i> <i>Vertical DPI Adj</i>	Gap/Mark Sensor ¹ Auto Calibrate Media Profile Sensed Distance Gap/Mark Thresh Paper Out Thresh <i>Paper Out Sensor</i> ¹ <i>Manual Calibrate</i> <i>Pwr Up Action</i> <i>HeadClose Action</i> <i>Online Auto-Cal</i> <i>Gap Windowing</i> <i>Gap Length</i> <i>Cal in Peel Mode</i> <i>Min Calib Delta</i> <i>Use Label Length</i> Threshold Range	SMT: Status ⁴ PAA: Select Tool ⁵ LP+ Emulation CTHI Emulation ² Active IGP Emul xxx Diagnostics ⁷ <i>Host Interface</i> Power Saver Time Pwr Save Control Display Language Alarm Power-up State Ptx Setup SFCC Cancel Key Rcv. Status Port Ret. Status Port Compatibility <i>Del Char frm Fls</i> <i>Ld Char from Fls</i> <i>Save Char to Fls</i> <i>Del Char frm RAM</i> <i>Ld Char at PwrUp</i> <i>Del Set frm Flsh</i> <i>Ld Set from Flsh</i> <i>Save Set to Flsh</i> <i>Del Set from RAM</i> <i>Ld Set at PwrUp</i> <i>Overwrite Files</i> <i>View File List</i> <i>Delete Files</i> Flash Avail. <i>Optimize&Reboot</i>	<i>Print File List</i> <i>Auto Locking</i> <i>Set Lock Key</i> <i>Ptx Setup Parse</i> <i>PJL Enable</i> ⁶ <i>Page Mem Adjust</i> <i>Max Font Buffer</i> <i>Max Cache Memory</i> <i>Max Cached Char</i> <i>Standard Chars.</i> <i>Bold Chars.</i> <i>Extra Bold Char.</i> <i>OCR-A Chars.</i> <i>OCR-B Chars.</i> <i>Tall Characters</i> <i>Batch Counter</i> Feed Key Online Admin User

(continued in next column)

NOTES:

Italicized items are available only when Admin User is set to Enable (in the PRINTER CONTROL menu).

¹ Gap/Mark Sensor and Paper Out Sensor work in conjunction, as shown in Table 6 on page 127. If you change the Gap/Mark Sensor or Paper Out Sensor, you must recalibrate the media.

²Appears only if the CTHI option is installed.

³ This menu will not appear on Direct Thermal only printers.

⁴ This menu appears only if RFID is installed and there is no CST bundle in the Flash File System.

⁵ This menu appears only if RFID is not installed and there is a CST bundle in the Flash File System.

⁶ Menu available if CTHI option and IPDS option are not installed.

⁷ xxx represents the emulation name selected in the Active IGP Emul menu.

COAX SETUP ^{2, 3, 7} (page 153)	TWINAX SETUP ^{2, 3, 7} (page 156)	SPC COAX SETUP ^{2, 3, 4} (page 158)	SPC TWINAX SETUP ^{2, 3, 4} (page 159)
Primary Sets Translation Tbl PA1 PA2 Buffer Reprint Buffer Print Coax Type <i>Active Char Set</i> <i>Secondary Sets</i> <i>Early Print Cmpl</i> <i>SCS Buffer Cntrl</i> <i>Alt. Set 80-9F</i> <i>Intervention Req</i> <i>CR At MPP + 1</i> <i>NL At MPP + 1</i> <i>Position Aft FF</i> <i>Last Char = FF</i> <i>Null Suppression</i> <i>FF Validity</i> <i>Auto Skip At End</i> <i>FF After Job</i> <i>CR, EM, & NL</i> <i>Translate Table</i> <i>Host Override</i> <i>Format Control</i> <i>Cancel IGP/DCU</i> <i>Lead-in Chars User-Defined St1</i> ⁵ <i>User-Defined St2</i> ⁵ <i>User-Defined Stp</i> ⁵ <i>Change Case</i> <i>Set Text Orientn</i> <i>Max. Print Width</i>	Primary Sets Translation Tbl ⁶ Buffer Print Twinax Type <i>Active Char Set</i> <i>Secondary Sets</i> <i>5225 World Trade</i> <i>Cancel IGP/DCU</i> <i>Lead-in Chars User-Defined St1</i> ⁵ <i>User-Defined St2</i> ⁵ <i>User-Defined Stp</i> ⁵ <i>Alt. Set 80-9F</i> <i>Graphic Chek Err</i> <i>Graphic Chek Cod</i> <i>LAC Option</i> <i>LAC Approx.</i> <i>Set Text Orientn</i> <i>Host Override</i> <i>Format Control</i> <i>Max. Print Width</i>	SPC Type Logical Buf Size <i>Intervention Req</i> Buffer Print Translation Tbl PA1 PA2 Buffer Reprint Null Handling SPC Null Supp SPC Space Supp SFCC Char User-Defined St1 ⁵ User-Defined St2 ⁵ User-Defined Stp ⁵ <i>NL At MPP + 1</i>	SPC Type SFCC Char User-Defined St1 ⁵ User-Defined St2 ⁵ User-Defined Stp ⁵ SPC Char Set Translation Tbl Buffer Print

NOTES:

Italicized items are available only when Admin User is set to Enable (in the PRINTER CONTROL menu).

¹ Gap/Mark Sensor and Paper Out Sensor work in conjunction, as shown in Table 6 on page 127. If you change the Gap/Mark Sensor or Paper Out Sensor, you must recalibrate the media.

² Appears only if the CTHI option is installed.


³ Appears only if selected as the Port Type (under C/T PORT).

⁴ Appears only if the CTHI emulation (under PRINTER CONTROL) is set to Simp Prot Conv.

⁵ Appears only if the "User Defined" option in the "Lead-in Chars" menu is selected.

⁶ Does not appear if IPDS is installed.

⁷ Does not appear if CTHI emulation (under Printer Control) is set to Simp Prot Conv..

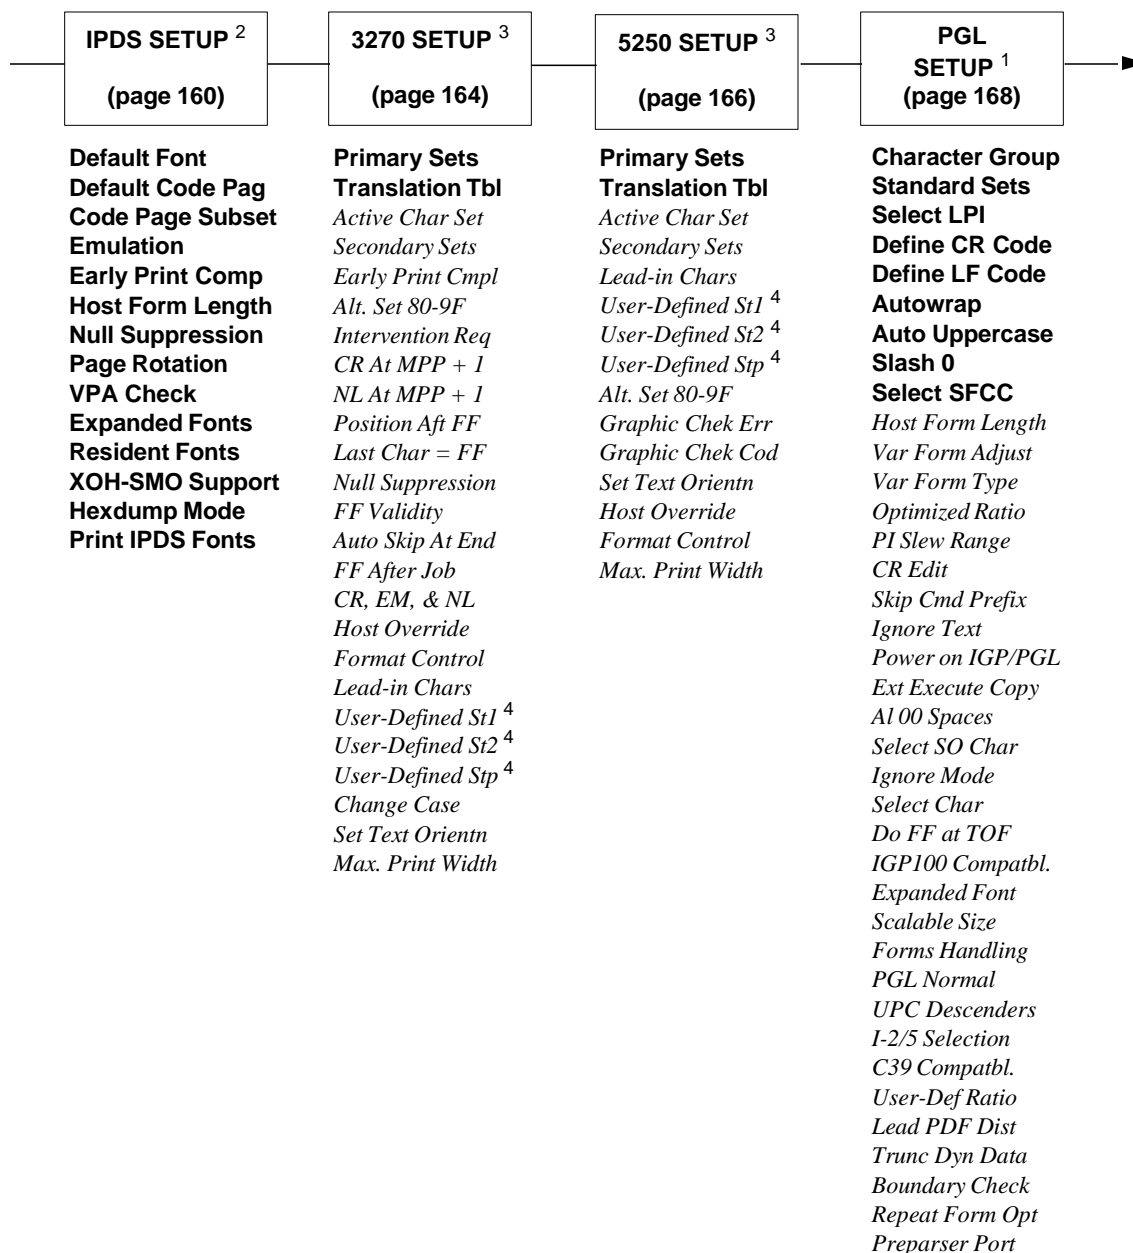

NOTES:


Italicized items are available only when Admin User is set to Enable (in the PRINTER CONTROL menu).

¹ Appears only if Active IGP Emul is set to PGL (in the Printer Control Menu).

² Appears only if the IPDS emulation is installed, the correct security key is used, and either the CTHI option is installed, the NIC is enabled, or the wireless NIC option is installed.

³ Appears only if the TN5250/3270 option is installed and either the NIC is enabled or the wireless NIC option is installed.


⁴ Appears only if the "User Defined" option in the "Lead-in Chars" menu is selected.

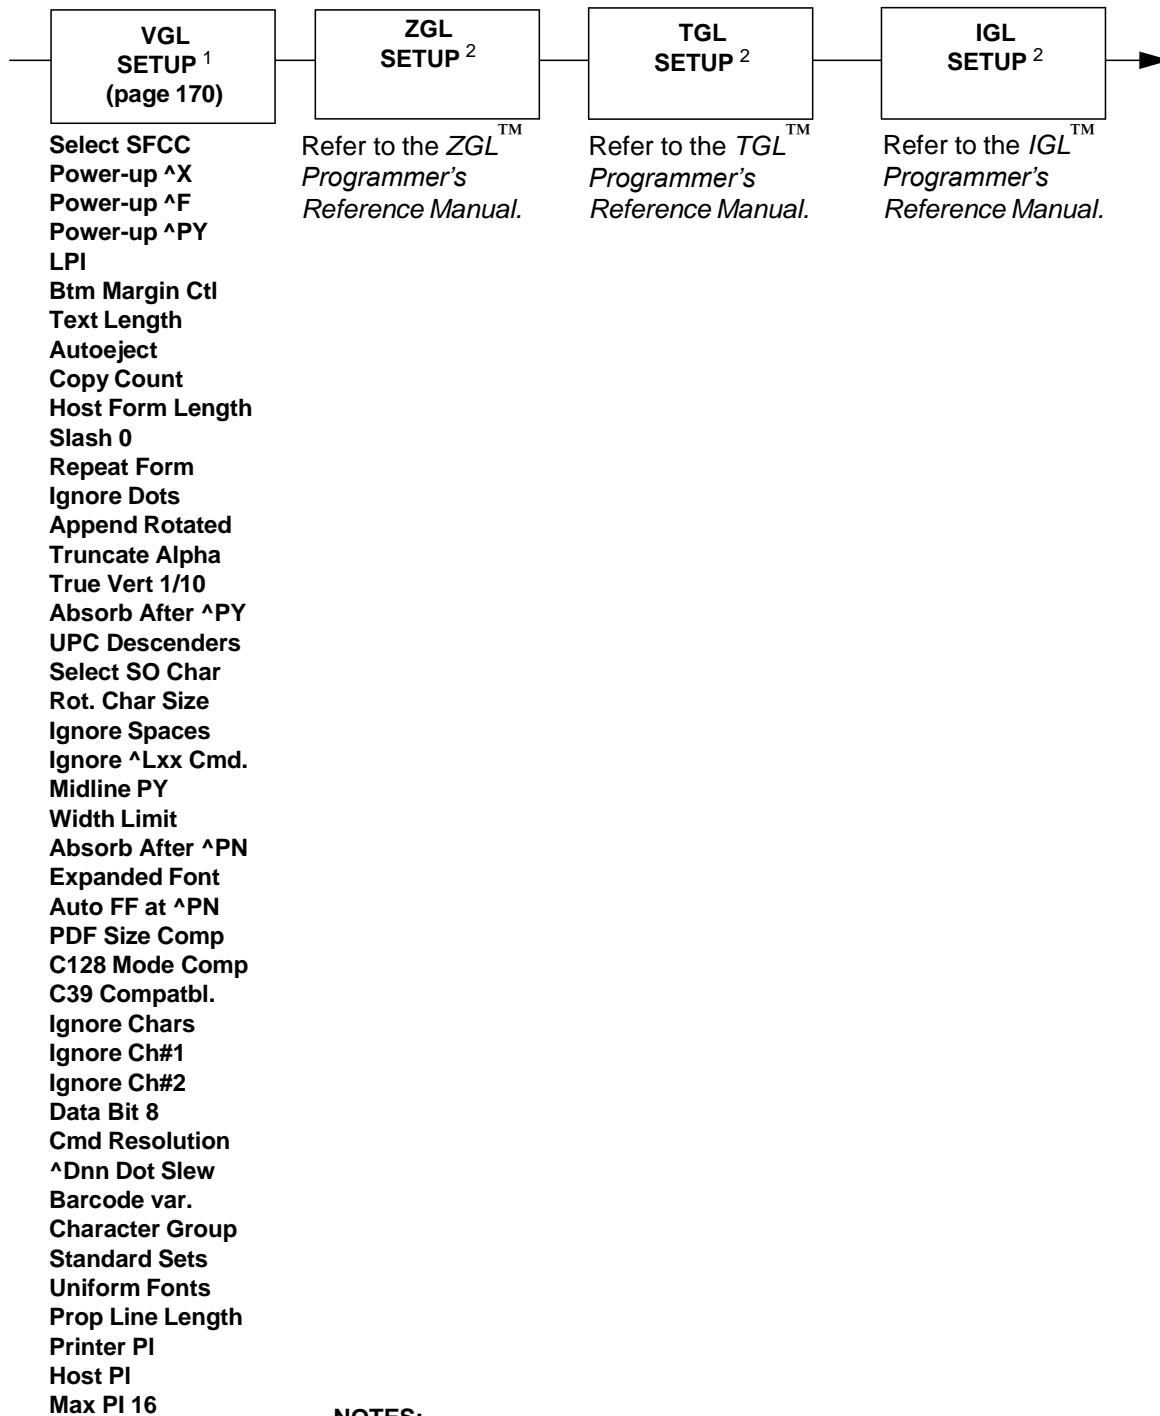**NOTES:**

Italicized items are available only when Admin User is set to Enable (in the PRINTER CONTROL menu).

¹ Appears only if Active IGP Emul is set to VGL (in the Printer Control Menu).

² Appears only if Active IGP Emul is set to this emulation.

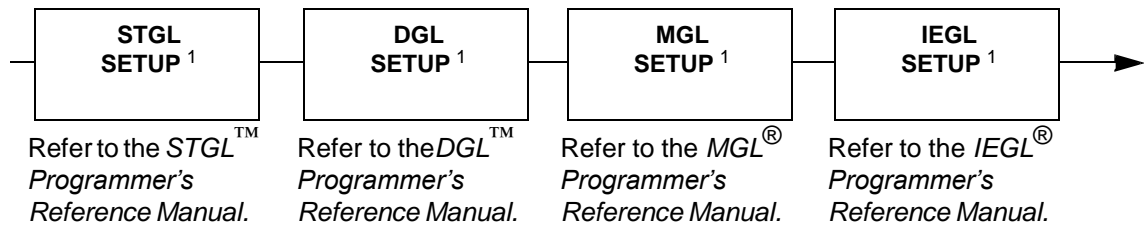

NOTES:

Italicized items are available only when Admin User is set to Enable (in the PRINTER CONTROL menu).

¹ Appears only if Active IGP Emul is set to this emulation.

P-SERIES SETUP^{1, 6} (page 172)	P-SERIES XQ SETUP^{1, 6} (page 174)	SER MATRIX SETUP^{1, 2} (page 176)	PROPRINTER SETUP^{1, 2} (page 178)
Select CPI Select LPI Typeface Character Group Character Set Primary Subset Extended Subset Horizontal DPI Vertical DPI Prop. Spacing Italic Print Slashed Zero Left Margin³ Right Margin³ Top Margin Bottom Margin Print Char. Set Define CR code Auto LF Define LF code Control Code 06 Control Code 08 Bold Overstrike Select SFCC EVFU Select Alt. Set 80-9F SFCC d command PSeries Dbl High FF valid at TOF Text Position Host Command Reset Cmd CFG Ld Form Length (inches)^{3, 4} Form Length (mm)^{3, 4} Form Length (lines)⁴ Form Width (inches)^{3, 5} Form Width (mm)^{3, 5} Form Width (char.)⁵	Select CPI Select LPI Typeface Horizontal DPI Vertical DPI Prop. Spacing Italic Print Slashed Zero Left Margin³ Right Margin³ Top Margin Bottom Margin Print Char. Set Define CR code Auto LF Define LF code Control Code 06 Compressed Print Bold Elong/Alt. Font Gothic Typeface EVFU Select Upr. Case Select Slew Relative Text Position Host Command Reset Cmd CFG Ld Form Length (inches)^{3, 4} Form Length (mm)^{3, 4} Form Length (lines)⁴ Form Width (inches)^{3, 5} Form Width (mm)^{3, 5} Form Width (char.)⁵	Select CPI Select LPI Typeface Character Group Character Set Primary Subset Extended Subset Horizontal DPI Vertical DPI Prop. Spacing Italic Print Slashed Zero Left Margin³ Right Margin³ Top Margin Bottom Margin Print Char. Set Define CR code Auto LF Define LF code Control Code 06 Bold Overstrike Printer Select Alt. Set 80-9F ESC d command Text Position Host Command Reset Cmd CFG Ld Form Length (inches)^{3, 4} Form Length (mm)^{3, 4} Form Length (lines)⁴ Form Width (inches)^{3, 5} Form Width (mm)^{3, 5} Form Width (char.)⁵	Select CPI Select LPI Typeface Character Group Character Set Horizontal DPI Vertical DPI Prop. Spacing Italic Print Slashed Zero Left Margin³ Right Margin³ Top Margin Bottom Margin Print Char. Set Define CR code Auto LF Define LF code 20 CPI Condensed Bold FF valid at TOF Alt. Char Set Text Position Host Command Reset Cmd CFG Ld Form Length (inches)^{3, 4} Form Length (mm)^{3, 4} Form Length (lines)³ Form Width (inches)^{3, 5} Form Width (mm)^{3, 5} Form Width (char.)³

NOTES:

Italicized items are available only when Admin User is set to Enable (in the PRINTER CONTROL menu).

¹ Available only when Admin User is set to Enable (in the PRINTER CONTROL menu).


² The presence of this menu depends on the LP+ Emulation selection (under PRINTER CONTROL).

³ These menus do not display when CT, TN5250, or TN3270 emulation is selected.

⁴ All three Form Length submenus work in conjunction. When you change the default in one submenu, the default value in the other two submenus change automatically.

⁵ All three Form Width submenus work in conjunction. When you change the default in one submenu, the default value in the other two submenus change automatically.

⁶ The presence of this menu depends on the LP+ Emulation selection (under PRINTER CONTROL).

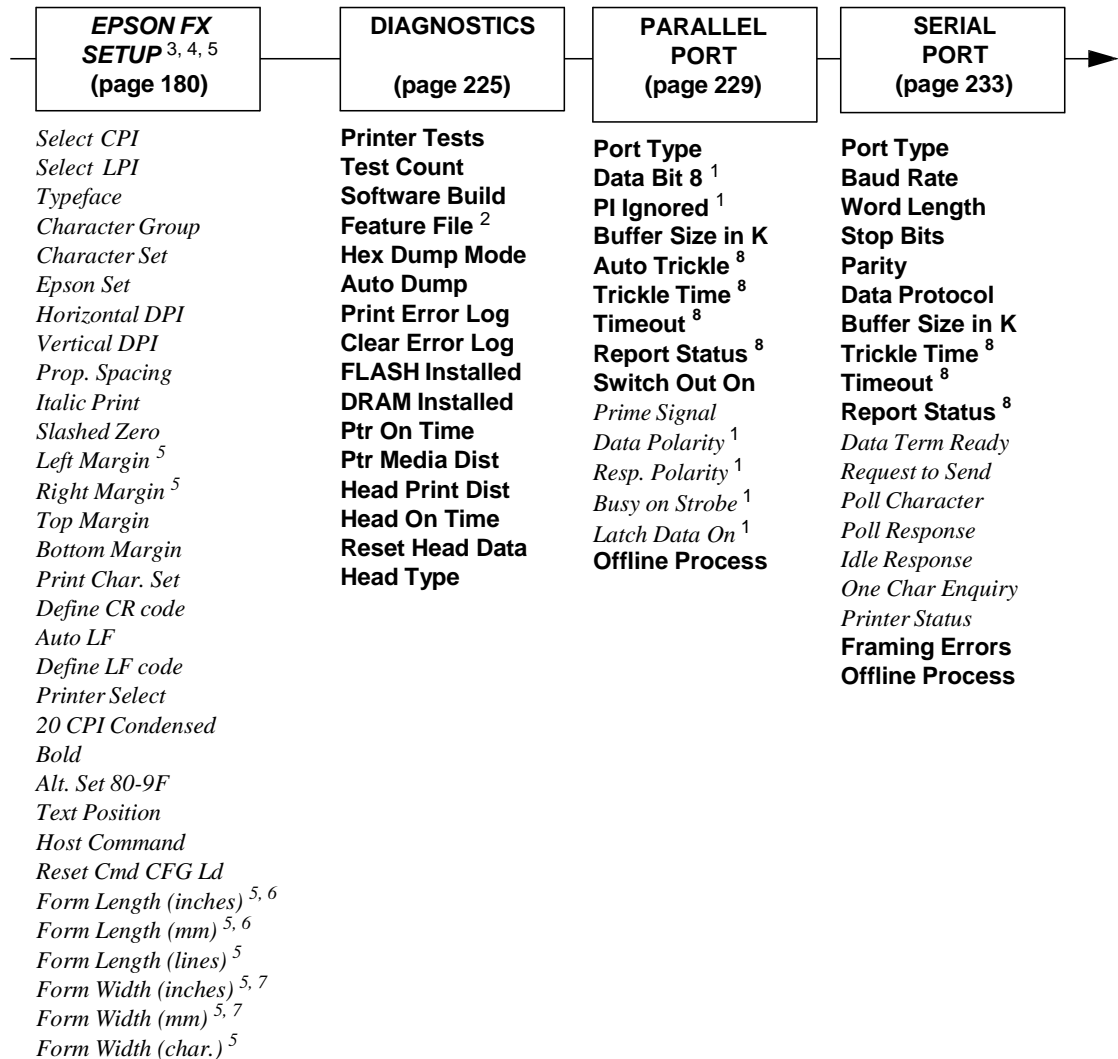

NOTES:

Italicized items are available only when Admin User is set to Enable (in the PRINTER CONTROL menu).

¹ Available only when the Centronics option is set to Enable (in the Port Type submenu of PARALLEL PORT).

² Menu shown only if Feature File has been loaded.

³ Available only when Admin User is set to Enable (in the PRINTER CONTROL menu).


⁴ The presence of this menu depends on the LP+ Emulation selection (under PRINTER CONTROL).

⁵ These menus do not display when CT, TN5250, or TN3270 emulation is selected.

⁶ All three Form Length submenus work in conjunction. When you change the default in one submenu, the default value in the other two submenus change automatically.

⁷ All three Form Width submenus work in conjunction. When you change the default in one submenu, the default value in the other two submenus change automatically.

⁸ Menu shown only if Host Interface is set to Auto Switching.

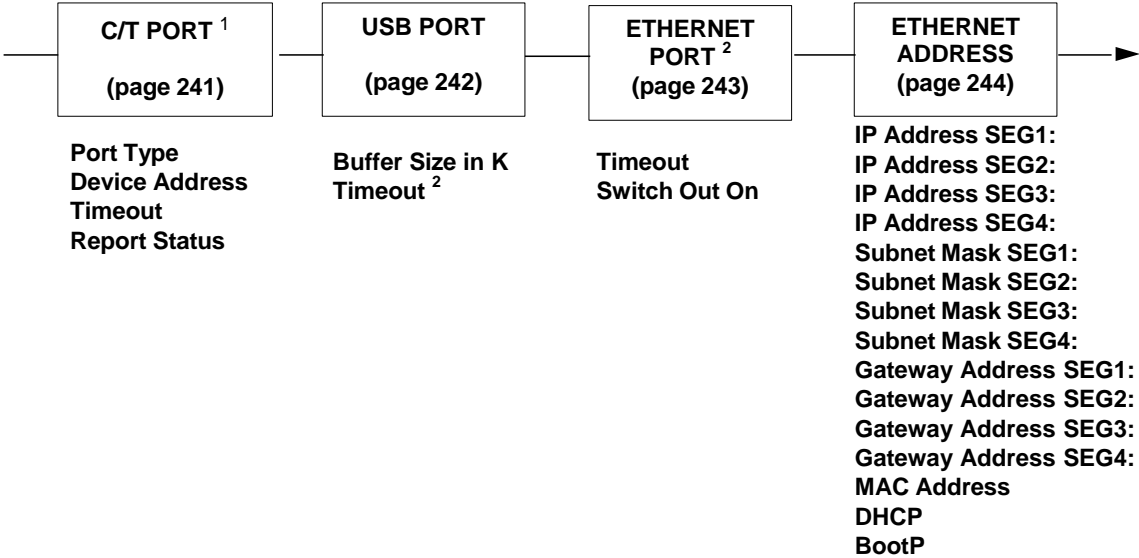

NOTES:

¹ Appears only if CTHI option is installed.
² Menu shown only if Host Interface is set to Auto Switching

ETHERNET PARAMS (page 246)	WLAN ADDRESS ¹ (page 249)	WLAN PARAMS ¹ (page 251)	
NetBIOS Protocol	IP Address SEG1:	Signal Strength	WEP Key 2 BYTE1:
ASCII Data Port	IP Address SEG2:	Operation Mode ⁷	WEP Key 2 BYTE2:
IPDS Data Port ⁸	IP Address SEG3:	SSID Name(01-15)	WEP Key 2 BYTE3:
Keep Alive Timer	IP Address SEG4:	SSID Name(16-30)	WEP Key 2 BYTE4:
Ethernet Speed	Subnet Mask SEG1:	SSID Name(31-32)	WEP Key 2 BYTE5:
Job Control	Subnet Mask SEG2:	Reset SSID Name	WEP Key 2 BYTE6: ³
Offline Process	Subnet Mask SEG3:	Min Xfer Rate	WEP Key 2 BYTE7: ³
	Subnet Mask SEG4:	Channel ⁷	WEP Key 2 BYTE8: ³
	Gateway Address SEG1:	Antenna ⁶	WEP Key 2 BYTE9: ³
	Gateway Address SEG2:	Ant. Diversity ⁷	WEP Key 2 BYTE10: ³
	Gateway Address SEG3:	Preamble ⁷	WEP Key 2 BYTE11: ³
	Gateway Address SEG4:	Power Mgmt	WEP Key 2 BYTE12: ³
	MAC Address	Transmit Power	WEP Key 2 BYTE13: ³
	DHCP	Internat. Mode	WEP Key 3 Format
	BootP	Default WEP Key	WEP Key 3 Width
		WEP Key 1 Format	WEP Key 3 BYTE1:
		WEP Key 1 Width	WEP Key 3 BYTE2:
		WEP Key 1 BYTE1:	WEP Key 3 BYTE3:
		WEP Key 1 BYTE2:	WEP Key 3 BYTE4:
		WEP Key 1 BYTE3:	WEP Key 3 BYTE5:
		WEP Key 1 BYTE4:	WEP Key 3 BYTE6: ⁴
		WEP Key 1 BYTE5:	WEP Key 3 BYTE7: ⁴
		WEP Key 1 BYTE6: ²	WEP Key 3 BYTE8: ⁴
		WEP Key 1 BYTE7: ²	WEP Key 3 BYTE9: ⁴
		WEP Key 1 BYTE8: ²	WEP Key 3 BYTE10: ⁴
		WEP Key 1 BYTE9: ²	WEP Key 3 BYTE11: ⁴
		WEP Key 1 BYTE10: ²	WEP Key 3 BYTE12: ⁴
		WEP Key 1 BYTE11: ²	WEP Key 3 BYTE13: ⁴
		WEP Key 1 BYTE12: ²	WEP Key 4 Format
		WEP Key 1 BYTE13: ²	WEP Key 4 Width
		WEP Key 2 Format	WEP Key 4 BYTE1:
		WEP Key 2 Width	WEP Key 4 BYTE2:
		(continued in next column)	WEP Key 4 BYTE3:
			WEP Key 4 BYTE4:
			WEP Key 4 BYTE5:
			WEP Key 4 BYTE6: ⁵
			WEP Key 4 BYTE7: ⁵
			WEP Key 4 BYTE8: ⁵
			WEP Key 4 BYTE9: ⁵
			WEP Key 4 BYTE10: ⁵
			WEP Key 4 BYTE11: ⁵
			WEP Key 4 BYTE12: ⁵
			WEP Key 4 BYTE13: ⁵
			Default WEP Key
			Reset WEP Keys
			WPA Mode ⁶
			WPA Cipher ⁶
			WPA P-Phs (01-15) ⁶
			WPA P-Phs (16-30) ⁶
			WPA P-Phs (31-32) ⁶
			Reset WPA P-Phs ⁶

NOTES:

¹ Appears only if a Wireless Option is installed.

² Appears only if "WEP Key 1 Width" is set to 128 Bits.

³ Appears only if "WEP Key 2 Width" is set to 128 Bits.


⁴ Appears only if "WEP Key 3 Width" is set to 128 Bits.

⁵ Appears only if "WEP Key 4 Width" is set to 128 Bits.

⁶ Appears only if a Symbol LA-5127 802.11 b/g RF card is installed.

⁷ Appears only if 802.11b only RF card is installed.

⁸ Appears only if the IPDS emulation is installed, the correct security key is used.

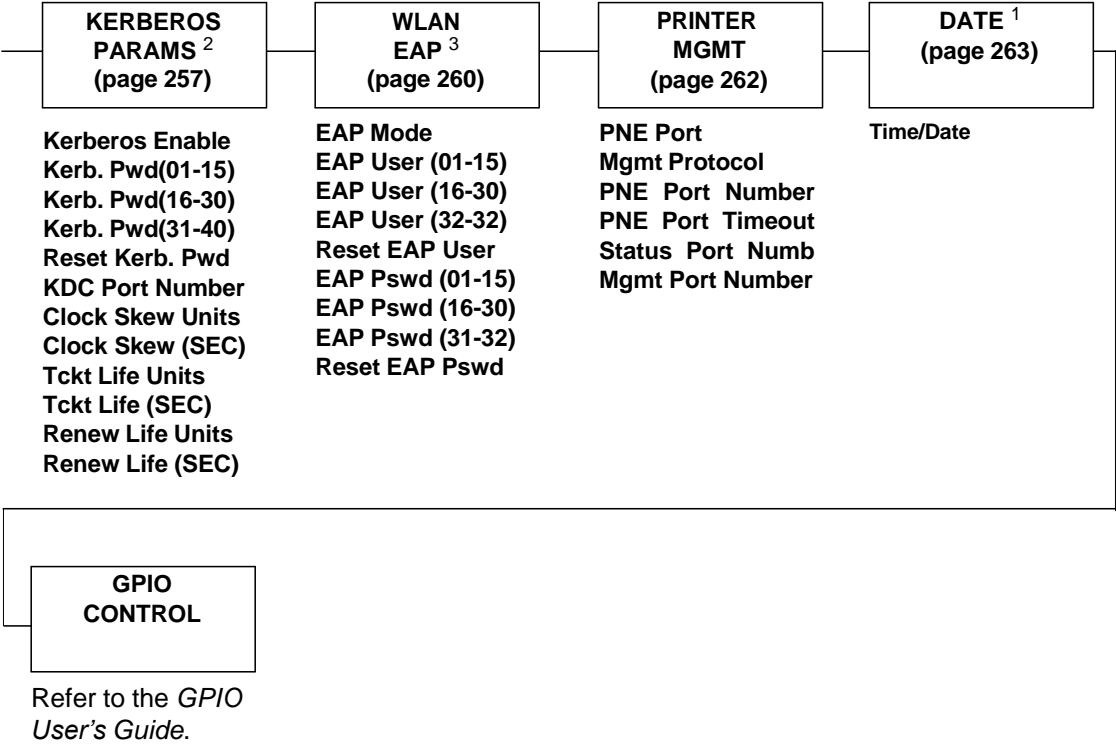


Notes:

¹ Appears only if the Real Time Clock option is installed.

² Appears only if a Symbol LA4121 RF card is installed.

³ Appears only if a Cisco card or Motorola LA5127 RF card is installed.

QUICK SETUP

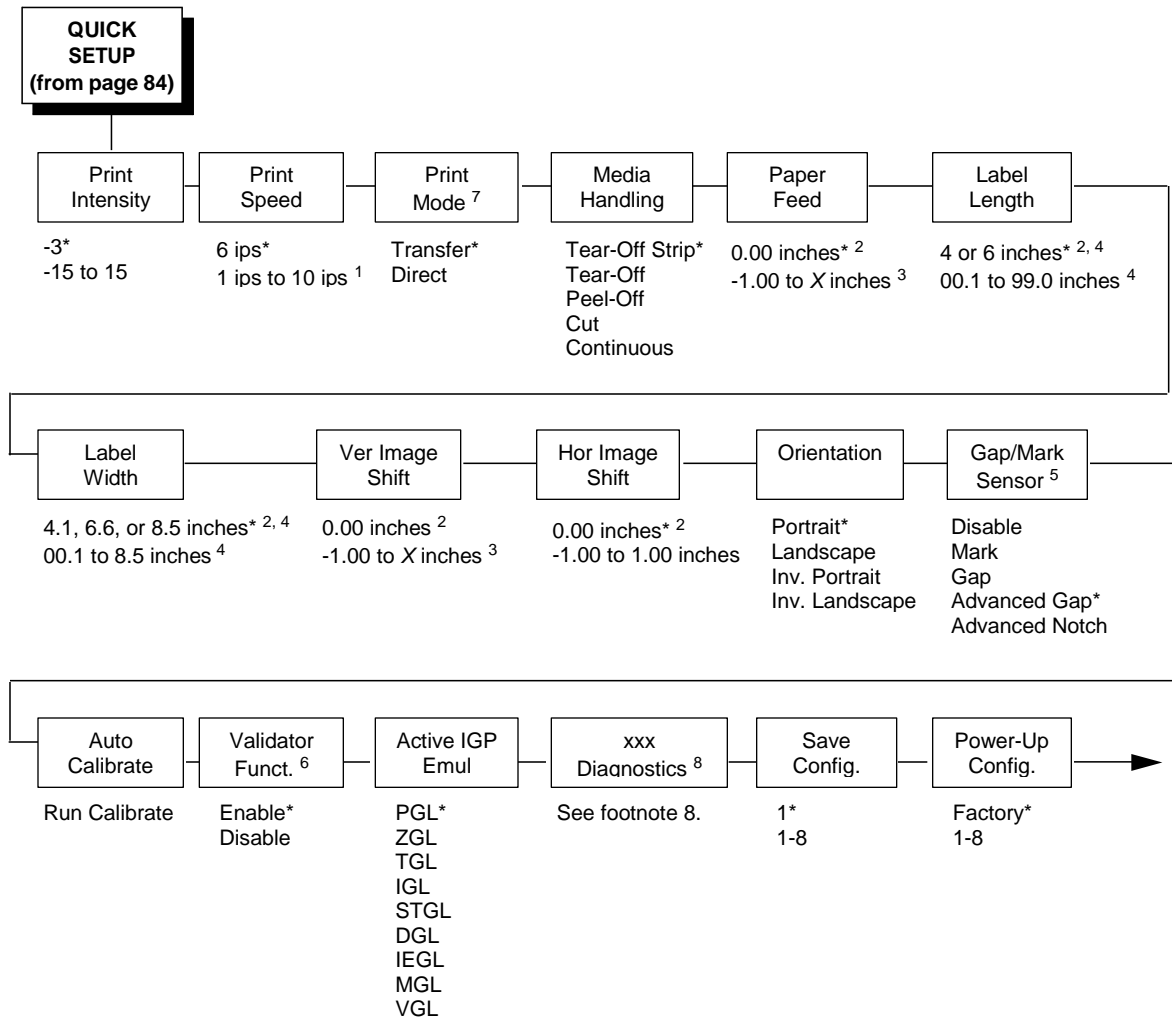

Notes:

* = Factory Default

¹ Maximum value depends on the printer model width (4, 6, or 8 inches) and printhead (203 or 300 dpi).

² You can change the unit value from inches to millimeters under Units (in MEDIA CONTROL) when Admin User is enabled.

³ Based on the current value setting for the Label Length (in QUICK SETUP), up to a maximum of 12.80 inches.


⁴ Maximum value depends on the width of the printer model (see Appendix A, "Specifications").

⁵ Gap/Mark Sensor and Paper Out Sensor work in conjunction, as shown in Table 6 on page 127. If you change the Gap/Mark Sensor or Paper Out Sensor, you must recalibrate the media.

⁶ Appears only if a validator is installed.

⁷ This menu will not appear on Direct Thermal only printers.

⁸ xxx represents the emulation name selected in the Active IGP Emul menu. The options in this menu vary and are described on page 140.

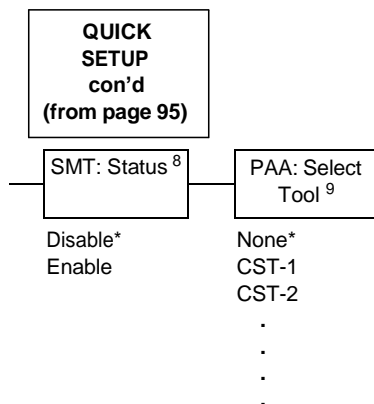**Notes:**

* = Factory Default

⁸ Appears only if RFID is installed and there is no CST bundle in the Flash File System.

⁹ Appears only if RFID is not installed and there is a CST bundle in the Flash File System.

QUICK SETUP Submenus

Print Intensity

This option specifies the level of thermal energy from the printhead to be used for the type of media and ribbon installed.

Large numbers imply more heat (thermal energy) to be applied for each dot. This has a significant effect on print quality. The print intensity and speed must match the media and ribbon type to obtain the best possible print quality and barcode grades.

The range is from -15 to +15.

The factory default is -3.

Print Speed

This option specifies the speed in inches per second (ips) at which the media passes through the printer while printing.

The range is from 1 to 10 ips (in increments of 1 ips).

The factory default is 6 ips.

NOTE: The maximum print speed varies based on maximum printer width and dot per inch (dpi) resolution of the printhead installed (203 or 300 dpi). See Table 19 on page 333.

Print Mode

This option specifies the type of printing to be done.

- **Transfer** (factory default). Indicates Thermal Transfer printing (ribbon installed).
- **Direct**. Indicates Direct Thermal printing (no ribbon) and requires special heat sensitive media.

Media Handling

This option specifies how the printer will handle the media (labels or tag stock).

- **Tear-Off Strip** (factory default). Printer prints on the media and sends it out the front until the print buffer is empty, then positions the trailing edge of the last label over the tear bar for removal.
- **Tear-Off**. After each label is printed, the printer positions the label over the tear bar and waits for you to tear off the label before printing the next one (on-demand printing). A "Remove Label" message will display to remind you to remove the label before the next one can be printed.
- **Peel-Off**. Prints and peels die-cut labels from the liner without assistance. The printer waits for you to take away the label before printing the next one (on-demand printing). When the optional internal rewinder is installed with liner attached, a "Remove Label" message will display to remind you to remove the label before the next one can be printed.
- **Cut**. When the optional media cutter is installed, it automatically cuts media after each label is printed or after a specified number of labels have been printed when a software cut command has been issued. It cuts continuous roll paper, labels, or tag stock.
- **Continuous**. Printer prints on the media and sends it out the front. See "Continuous Mode" on page 124 for more information.

Paper Feed Shift

This option represents the distance to advance (+ shift) or pull back (– shift) the stop position of a label when Tear-Off Strip, Tear-Off, Peel-Off, or Cut media handling option is enabled. The allowable range is -0.50 inches to the current Label Length value setting, up to a maximum of 12.80 inches, in .01 inch increments.

The factory default is 0.00 inches.

Label Length

This option specifies the user-selected Label Length in inches or millimeters. In most applications, the user-selected Label Length will match the *physical* label length. Physical label length is the actual label length of the media installed.

When setting label length, consider the following:

Label Length can also be manually entered via the control panel MEDIA CONTROL menu or sent via host computer using the appropriate software command.

A Host Forms Length (Label Length) value sent from the host computer will override and change the manually entered Label Length value in the QUICK SETUP or MEDIA CONTROL menu.

- **Physical Label Length** is the actual measurable length of the label. The following list of different media types explains how the physical label lengths are determined:
 - Die-cut labels – measurable length of the removable label (leading edge to trailing edge). This does not include the liner material or gap.
 - Tag Stock with notches or holes – measurable length from the trailing edge of one notch or hole to the leading edge of the next notch or hole.
 - Tag Stock with black marks on underside – measurable length from the leading edge of one black mark to the leading edge of the next black mark.
 - Continuous media (no label length indicators) – measurable length should be within $\pm 1\text{-}2\%$ the Label Length value entered in the QUICK SETUP, MEDIA CONTROL menu, or the value sent via host software command.
- **Logical Label Length** (Host Forms Length) is the length that a user or programmer bases his printable image on. In most cases this length should be slightly less than the Physical Label Length. This allows the entire image to be printed within the boundaries of the label length indicators (gaps, notches, holes, or black marks).

When the Logical Label Length is greater than the Physical Label Length and Clip Page = Enable (in the MEDIA CONTROL menu), the printer will clip the bottom portion of the image that exceeds the Physical Label length. In this case, the printable data that was not printed will be lost.

When the Logical Label Length is greater than the Physical Label Length and Clip Page = Disable, the printer will continue to print the image onto the next physical label and ignore the gap or mark based on the label length value set in the QUICK SETUP or MEDIA CONTROL menu.

When the Logical Label Length is less than the Physical Label Length, the printer will print the entire image and leave blank space the remaining length of the physical label as it advances to the Top-of-Form of the next label. This is true regardless of the Clip Page setting.

The allowable Label Length range is 00.1 to 99.0 inches (2.5 - 2514.6mm)
The factory defaults are listed below:

Table 2. Factory Default Label Length

Printer	Inches	mm	Lines
T5X04	6	152.4	36
T5X06	4	101.6	24
T5X08	6	152.4	36

Maximum Label Length range is dependent on the Label Width value selected and printhead installed (203 or 300 DPI). See Appendix A for specifications.

NOTE: See “Set Label Length” on page 123.

Label Width

This option specifies the physical width of the image to be printed. The value can be specified in inches or millimeters depending on the setting of the Units submenu under the MEDIA CONTROL menu. The allowable range in inches is 00.1 to the maximum print width of the printer. The allowable range in millimeters is 2.5 to the maximum width of the printer.

Ver Image Shift

This option specifies the amount to shift an image vertically up (-) or down (+) for precise positioning on the label. The actual height of the image is not affected by this parameter. The allowable range is -1.00 inches to the current Label Length value setting, up to a maximum of 12.80 inches, in .01 inch increments.

The factory default value is 0.00 inches.

Hor Image Shift

This option specifies the amount to shift an image horizontally left (-) or right (+) for precise positioning on the label. The actual width of the image is not affected by this parameter. The allowable range is -1.00 to +1.00 inches in .01 inch increments.


The factory default value is 0.00 inches.

Orientation

This menu item selects the image orientation to be used when printing the label.


- **Portrait** (factory default). Portrait refers to vertical page orientation, where the height of a page is greater than its width. The top edge of the image is parallel to the leading edge of the media. The following illustration is an example, with the operator viewing the front of the printer.

NOTE: Portrait orientation applies to PGL and VGL emulations. This is regarded as Inverse Portrait using PPI/ZGL.

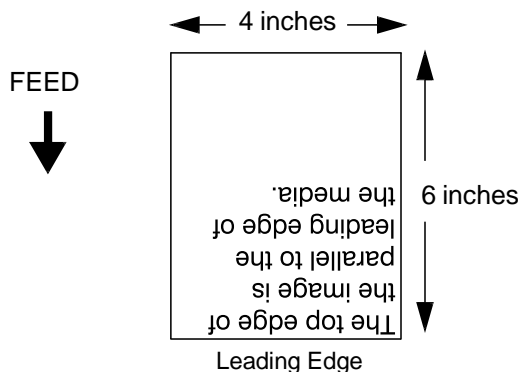


- **Landscape**. Landscape refers to horizontal orientation, where the width of a page is greater than its height. The top edge of the image is the left edge of the media. The following illustration is an example, with the operator viewing the front of the printer.

NOTE: Landscape orientation applies to PGL and VGL emulations. This is regarded as Inverse Landscape using PPI/ZGL.

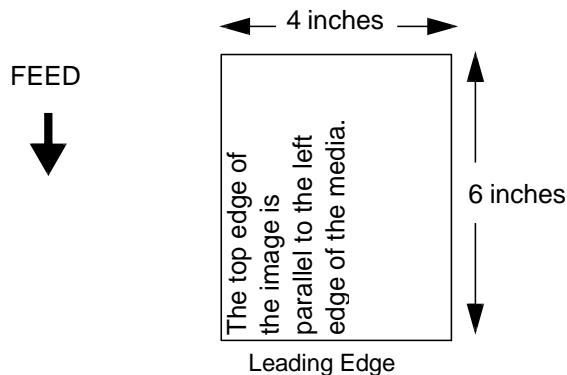


- **Inv. Portrait**. Inverse Portrait refers to vertical page orientation, where the height of a page is greater than its width. The top edge of the image is parallel to the trailing edge of the media. The following illustration is an example, with the operator viewing the front of the printer.

NOTE: Inverse Portrait orientation applies to PGL and VGL emulations. This is regarded as Portrait using PPI/ZGL.

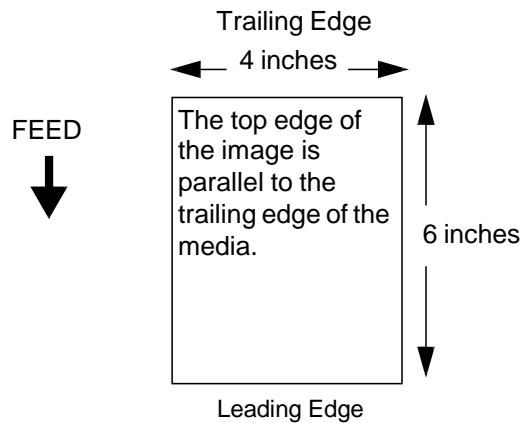

- **Inv. Landscape.** Inverse Landscape refers to horizontal orientation, where the width of a page is greater than its height. The top edge of the image is the right edge of the media (the left edge of the image is the trailing edge of the media). The following illustration is an example, with the operator viewing the front of the printer.

NOTE: Inverse Landscape orientation applies to PGL and VGL emulations. This is regarded as Landscape using PPI/ZGL.

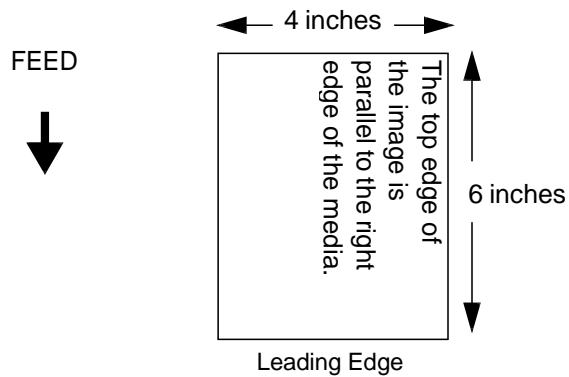

Gap/Mark Sensor

The available options specify the sensor type needed for detecting the Top-of-Form position on media with label length indicators (gaps, notches, holes, or black marks).

- **Disable.** Select when using media with no label length indicators (no gaps, notches, holes, or black marks), or when you want the printer to ignore all existing label length indicators on the installed media.

NOTE: When you select Disable, the length of each label is based on the Label Length value entered in the QUICK SETUP or MEDIA CONTROL menu or the value sent via host software.

- **Mark.** Select when using media that has horizontal black marks located on the underside of the label liner or tag stock. The Top-of-Form position is the leading edge of the black mark.

- **Gap.** An alternative to Advanced Gap. The Top-of-Form position is the leading edge of the die cut label (trailing edge of the gap, notch, or hole).
- **Advanced Gap** (factory default). Select when using media with a liner space between die-cut labels or when using tag stock with notches or holes as label length indicators on white background media or when using media that has liner gaps between die cut labels with black background. The Top-of-Form position is the leading edge of the die cut label (trailing edge of the gap, notch, or hole).
- **Advanced Notch.** Select when using media with notches or holes that interrupt a black vertical line on the underside of the media. The Top-of-Form position is the leading edge of the die cut label (trailing edge of the gap, notch, or hole).

Auto Calibrate

This feature is used to improve the sensitivity and reliability of the Media Sensor in detecting gaps, notches, holes, or black marks on the installed media, as well as a paper out condition.

NOTE: Prior to running Auto Calibrate you must enter the physical length of the installed media in the QUICK SETUP or MEDIA CONTROL menu. Selecting the correct Label Length forces Auto Calibrate to increase media advancement for long labels (to detect actual gaps, notches, or marks) and decrease advancement for short labels.

You can initiate Auto Calibrate from the TEST PRINT key, the CALIBRATE CTRL menu, or the DIAGNOSTIC menu. When “Auto Calibrate” displays on the LCD, press the \downarrow key. The printer advances media the distance needed to accurately detect the label length indicators, then stop at the Top-of-Form position and momentarily displays the Sensed Distance. The process takes a few seconds to complete and results in changes to the values the printer uses for Gap/Mark Threshold, Paper Out Threshold, and Sensed Distance. The changes in values take effect immediately within the current configuration menu.

Auto Calibrate is completed successfully when the Sensed Distance displayed correctly matches that of the installed media. When Gap is selected, the Sensed Distance should match the length from the trailing edge of one gap to the trailing edge of the next gap (one label + one gap). When Mark is selected, the Sensed Distance should match the length from the leading edge of one black mark to the leading edge of the next black mark.

Auto Calibrate supports label lengths up to 35 inches.

Validator Funct.

This menu appears only if a validator is installed.

- **Enable.** The printer will command the validator to begin scanning and errors will be reported. The counters will be incremented while the validator is enabled.
- **Disable.** The printer will not command the validator to begin scanning and no errors will be reported. The counters will not be incremented while the validator is disabled.

NOTE: If you save a configuration with the validator enabled, then power down and power up, and the validator is not connected or not functioning, the error message “Validator not communicating” will display briefly. The Validator menu will not display.

If the validator is installed, the default is Enable.

Active IGP Emulation

See page 139 for more details.

xxx Diagnostics

See page 140 for more details.

Save Config.

This option allows you to save up to eight unique configurations to meet different print job requirements. This eliminates the need to change the parameter settings for each new job. The configurations are stored in memory and will not be lost if you turn off the printer. If the Protect Configs. parameter is enabled, the new configuration will not be saved unless the existing configuration has been deleted first. The factory default configuration cannot be changed. See “Saving a Configuration” on page 76 for details.

The factory default is 1.

Power-Up Config.

You can specify any one of nine configurations (1-8 saved custom configurations or Factory) as the power-up configuration.

The factory default is Factory.


SMT:Status

You can enable or disable SMT functionality.

PAA: Select Tool

You can set the PAA:Select Tool to None (factory default), CST-1, or CST-2. Refer to the *PrintNet Enterprise Suite User's Manual*.

CONFIG. CONTROL

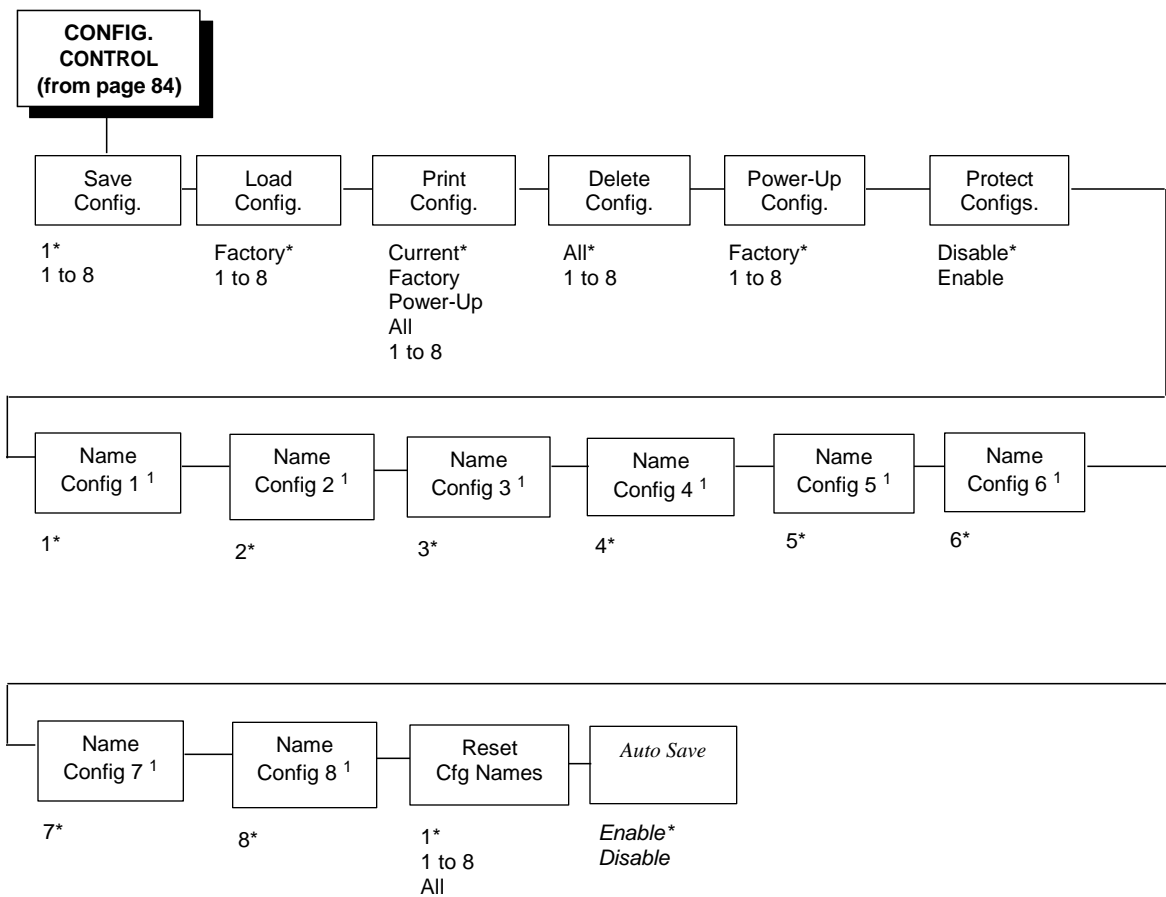

Notes:

* = Factory Default

Italicized items are available only when Admin User is set to Enable (in the PRINTER CONTROL menu).

¹ This menu allows a 15 character string.

CONFIG. CONTROL Submenus

Save Config.

This option allows you to save up to eight unique configurations to meet different print job requirements. This eliminates the need to change the parameter settings for each new job. The configurations are stored in memory and will not be lost if you turn off the printer. If the Protect Configs. parameter is enabled, the new configuration will not be saved unless the existing configuration has been deleted first. The factory default configuration cannot be changed. See “Saving a Configuration” on page 76 for details.

The factory default is 1.

Load Config.

The printer can store up to eight configurations in memory. This parameter allows you to select and load a specific configuration.

The factory default is Factory.

Print Config.

This option is used to print a listing of various stored printer configurations. We recommend you store printouts of your configurations in a safe place for quick referral.

The options are Current (factory default), Factory, Power-Up, All, and 1 to 8.

Delete Config.

You can delete one or all of your eight customized configurations. The factory default configuration cannot be deleted.

The factory default is All.

Power-Up Config.

You can specify any one of nine configurations (1-8 saved custom configurations or Factory) as the power-up configuration.

The factory default is Factory.

Protect Configs.

You can specify whether or not a new configuration should overwrite an existing configuration when you activate the Save Configs. parameter. When disabled (default), the new configuration will overwrite the existing configuration. When enabled, the new configuration will *not* overwrite the existing configuration, and the message “CONFIG. EXISTS / Delete First” displays.

The options are Disable (factory default) and Enable.

Name Config (1-8)

You may specify a 15-character name which can be used to refer to a configuration. The name you enter for a configuration will be used in the Load Config., Save Config., Print Config., Delete Config., and Power-Up Config. menus. The names can only be cleared by using the Reset Cfg Names menu.

When you move into the Name Configs. menu, the top line of the display shows the current configuration name. The second line of the display is initially the same as the top line. You can modify the second line of the display without affecting the top line until the \downarrow key is pressed, which sets the modified name as the current selection.

Press \uparrow or \downarrow to cycle through the values available for that character at the cursor location. Press $+$ to move to the next character to be modified. Press $-$ to go back to a character you have already modified. Continue until you have entered the name you want to give to this configuration, then press \downarrow to save. The name you entered will now represent this configuration on the printer's front panel. To exit this menu without saving, press any key other than \downarrow . The configuration name will revert to the last saved value.

The factory default is 1.

Reset Cfg Names

You can reset specific configuration names back to the default value of the configuration number.

The options are 1 to 8 and All. The factory default is 1.


Auto Save

- **Enable** (factory default). When a change has been made to a Config. menu, this option automatically prompts the user to save or not save the change to a Config #.

If you are currently in the Factory Config. menus and make a change, pressing Enter saves to Config 1 or the next available Config. and becomes the Power-Up Config. If the Current Config is Config 1 and a menu change is made, pressing Enter will save the change to Config 1.

- **Disable**. The printer will not prompt you to save any changes made.

MEDIA CONTROL

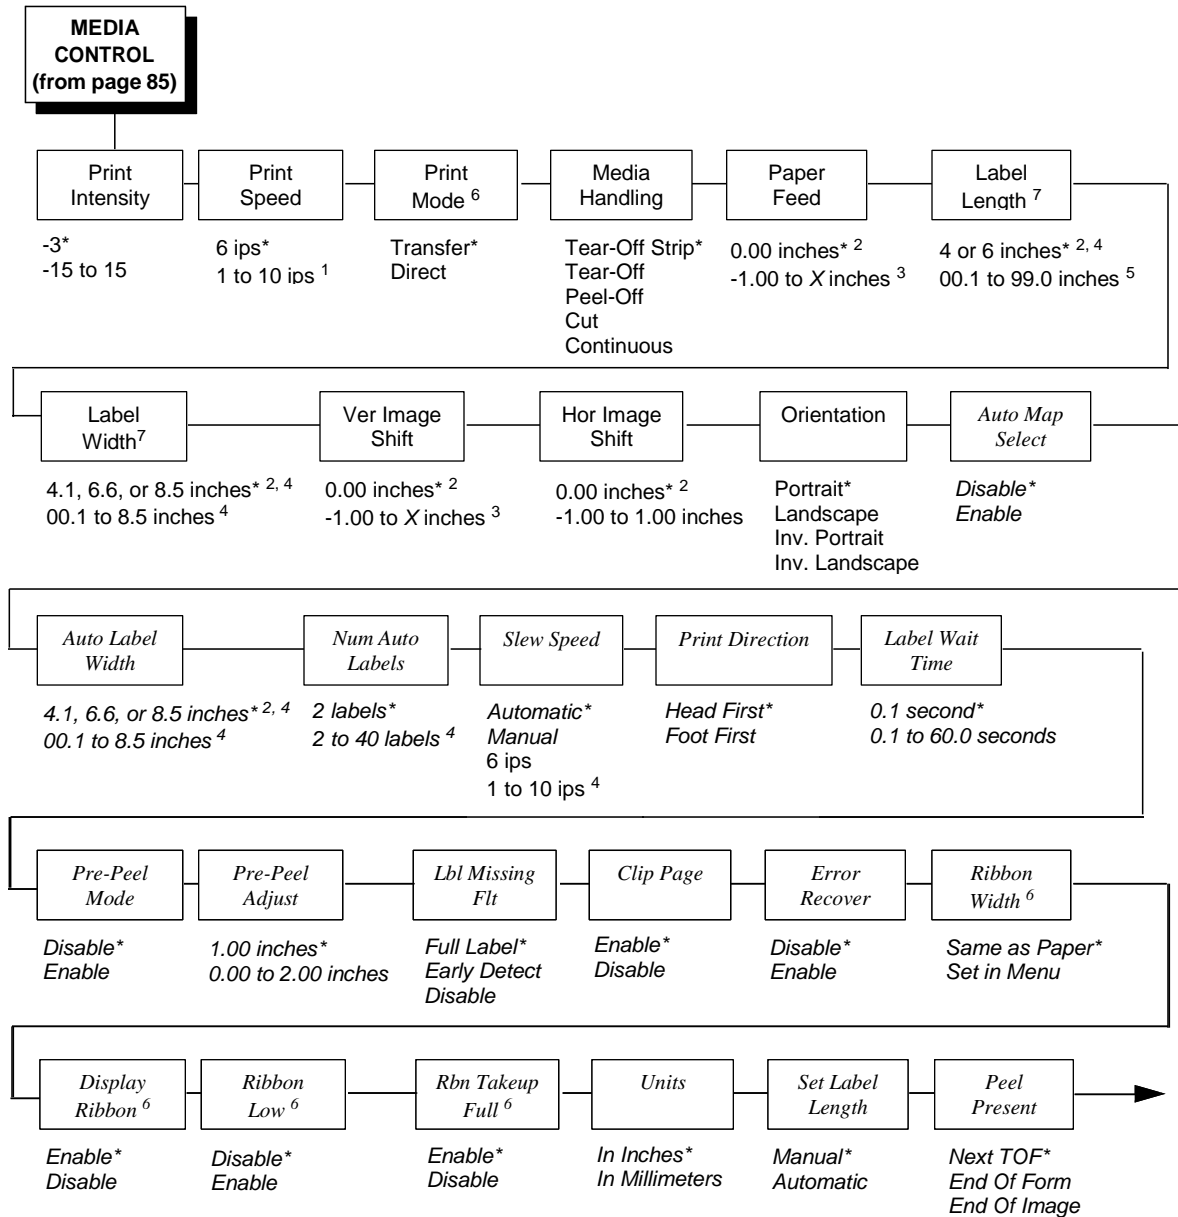

Notes:

* = Factory Default

Italicized items are available when Admin User is set to Enable (in the PRINTER CONTROL menu).

¹ Maximum value depends on the width of the printer model and printhead.

² You can change the unit value from inches to millimeters under Units (in MEDIA CONTROL) when Admin User is enabled.

³ Based on the current value setting for Label Length (in MEDIA CONTROL) up to a maximum of 12.80 inches.


⁴ Maximum value depends on the width of the printer model (see Appendix A, "Specifications").

⁵ Maximum value depends on model width and size of DRAM installed (see Appendix A, "Specifications").

⁶ This menu will not appear on Direct Thermal only printers.

⁷ Resolution changes based on "Label Resolution" menu under MEDIA CONTROL if Small Label Printer option is installed.

MEDIA CONTROL
(from page 107)

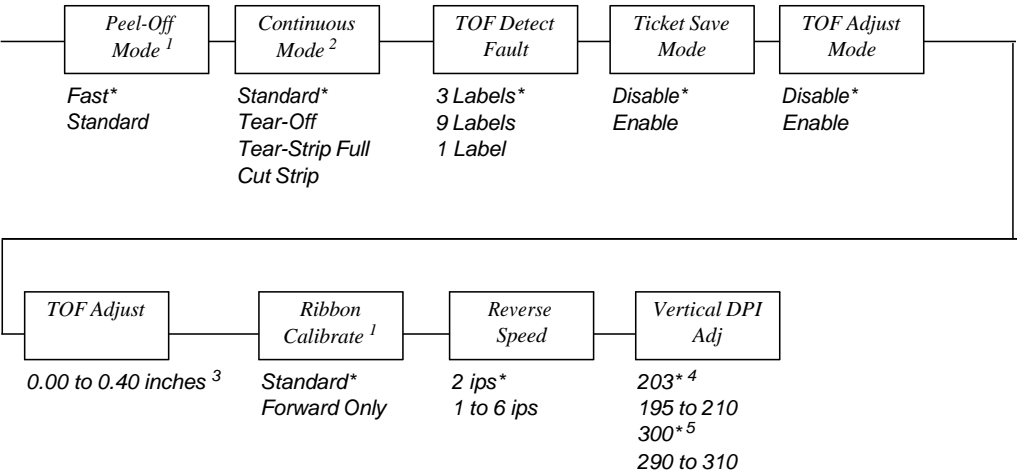

- Notes:**
- * = Factory Default
 - Italicized* items are available only when Admin User is set to Enable (in the PRINTER CONTROL menu).
 - ¹ The Peel-Off option under Media Handling must be enabled for this menu to function.
 - ² The Continuous option under Media Handling must be enabled for this menu to function.
 - ³ In increments of 0.01 inch.
 - ⁴ Available when a 203 DPI printhead is installed.
 - ⁵ Available when a 300 DPI printhead is installed.

MEDIA CONTROL Submenus

Print Intensity

This option specifies the level of thermal energy from the printhead to be used for the type of media and ribbon installed.

Large numbers imply more heat (thermal energy) to be applied for each dot. This has a significant effect on print quality. The print intensity and speed must match the media and ribbon type to obtain the best possible print quality and barcode grades.

The range is from -15 to +15.

The factory default is -3.

Print Speed

This option specifies the speed in inches per second (ips) at which the media passes through the printer while printing.

The range is from 1 to 10 ips (in increments of 1 ips).

The factory default is 6 ips.

NOTE: The maximum print speed varies based on maximum printer width and dot per inch (dpi) resolution of the printhead installed (203 or 300 dpi). See Table 19 on page 333.

Print Mode

This option specifies the type of printing to be done.

- **Transfer** (factory default). Indicates Thermal Transfer printing (ribbon installed).
- **Direct**. Indicates Direct Thermal printing (no ribbon) and requires special heat sensitive media.

Media Handling

This option specifies how the printer will handle the media (labels or tag stock).

- **Tear-Off Strip** (factory default). Printer prints on the media and sends it out the front until the print buffer is empty, then positions the last label over the tear bar for removal.
- **Tear-Off**. After each label is printed, the printer positions the label over the tear bar and waits for you to tear off the label before printing the next one (on-demand printing). A "Remove Label" message will display to remind you to remove the label before the next one can be printed.
- **Peel-Off**. Prints and peels die-cut labels from the liner without assistance. The printer waits for you to take away the label before printing the next one (on-demand printing). When the optional internal rewinder is installed with liner attached, a "Remove Label" message will display to remind you to remove the label before the next one can be printed. See "Peel-Off Mode" on page 124 and "Peel Present" on page 123 for more information.

NOTE: The Tear-Off and Peel-Off options are not allowed if the cutter is installed. The error message "INCOMPATIBLE WITH CUTTER" displays.

- **Cut**. When the optional media cutter is installed, it automatically cuts media after each label is printed or after a specified number of labels have been printed when a software cut command has been issued. It cuts continuous roll paper, labels, or tag stock.

NOTE: The Cut option is not allowed if the cutter is not installed. The error message "OPTION NOT INSTALLED" displays.

- **Continuous**. Printer prints on the media and sends it out the front. See "Continuous Mode" on page 124 for more information.

Paper Feed Shift

This option represents the distance to advance (+ shift) or pull back (– shift) the stop position of a label when Tear-Off Strip, Tear-Off, Peel-Off, or Cut media handling option is enabled. The allowable range is -1.00 inches to the current Label Length value setting, up to a maximum of 12.80 inches, in .01 inch increments.

The factory default is 0.00 inches.

Label Length

This option specifies the user-selected Label Length in inches or millimeters. In most applications, the user-selected Label Length will match the *physical* label length. Physical label length is the actual label length of the media installed.

When setting label length, consider the following:

Label Length can be manually entered via the control panel MEDIA CONTROL menu or sent via host computer using the appropriate software command.

A Host Forms Length (Label Length) value sent from the host computer will override and change the manually entered Label Length value in the MEDIA CONTROL menu.

- **Physical Label Length** is the actual measurable length of the label. The following list of different media types explains how the physical label lengths are determined:
 - Die-cut labels – measurable length of the removable label (leading edge to trailing edge). This does not include the liner material or gap.
 - Tag Stock with notches or holes – measurable length from the trailing edge of one notch or hole to the leading edge of the next notch or hole.
 - Tag Stock with black marks on underside – measurable length from the leading edge of one black mark to the leading edge of the next black mark.
 - Continuous media (no label length indicators) – measurable length should be within $\pm 1\text{-}2\%$ the Label Length value entered in the MEDIA CONTROL menu or the value sent via host software command.
- **Logical Label Length** (Host Forms Length) is the length that a user or programmer bases his printable image on. In most cases this length should be slightly less than the Physical Label Length. This allows the entire image to be printed within the boundaries of the label length indicators (gaps, notches, holes, or black marks).

When the Logical Label Length is greater than the Physical Label Length and Clip Page = Enable (in the MEDIA CONTROL menu), the printer will clip the bottom portion of the image that exceeds the Physical Label length. In this case, the printable data that was not printed will be lost.

When the Logical Label Length is greater than the Physical Label Length and Clip Page = Disable, the printer will continue to print the image onto the next physical label and ignore the gap or mark based on the label length value set in the MEDIA CONTROL menu.

When the Logical Label Length is less than the Physical Label Length, the printer will print the entire image and leave blank space the remaining length of the physical label as it advances to the Top-of-Form of the next label. This is true regardless of the Clip Page setting.

The allowable Label Length range is 00.1 to 99.0 inches (2.5 - 2514.6mm)
The factory defaults are listed below:

Table 3. Factory Default Label Length

Printer	Inches	mm	Lines
T5X04	6	152.4	36
T5X06	4	101.6	24
T5X08	6	152.4	36

Maximum Label Length range is dependent on the Label Width value selected, printhead installed (203 or 300 DPI), and the amount of DRAM installed in the printer. See Appendix A for specifications.

NOTE: See “Set Label Length” on page 123.

Label Width

This option specifies the physical width of the image to be printed. The value can be specified in inches or millimeters depending on the setting of the Units submenu under the MEDIA CONTROL menu. The allowable range in inches is 00.1 to the maximum print width of the printer. The allowable range in millimeters is 2.5 to the maximum width of the printer.

The default value depends on model width and size of DRAM installed.

Ver Image Shift

This option specifies the amount to shift an image vertically up (-) or down (+) for precise positioning on the label. The actual height of the image is not affected by this parameter. The allowable range is -1.00 inches to the current Label Length value setting, up to a maximum of 12.80 inches, in .01 inch increments.

The factory default value is 0.00 inches.

Hor Image Shift

This option specifies the amount to shift an image horizontally left (-) or right (+) for precise positioning on the label. The actual width of the image is not affected by this parameter. The allowable range is -1.00 through +1.00 inches in .01 inch increments.


The factory default value is 0.00 inches.

Orientation

This menu item selects the image orientation to be used when printing the label.


- **Portrait** (factory default). Portrait refers to vertical page orientation, where the height of a page is greater than its width. The top edge of the image is parallel to the leading edge of the media. The following illustration is an example, with the operator viewing the front of the printer.

NOTE: Portrait orientation applies to PGL and VGL emulations. This is regarded as Inverse Portrait using PPI/ZGL.

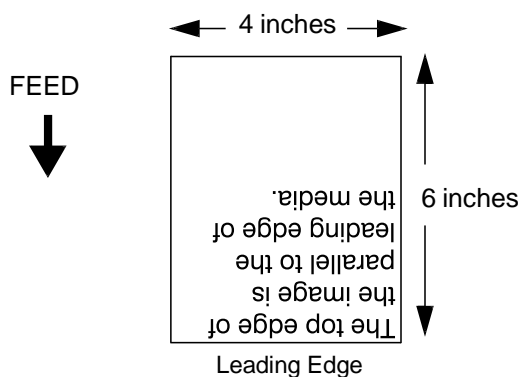


- **Landscape.** Landscape refers to horizontal orientation, where the width of a page is greater than its height. The top edge of the image is the left edge of the media. The following illustration is an example, with the operator viewing the front of the printer.

NOTE: Landscape orientation applies to PGL and VGL emulations. This is regarded as Inverse Landscape using PPI/ZGL.

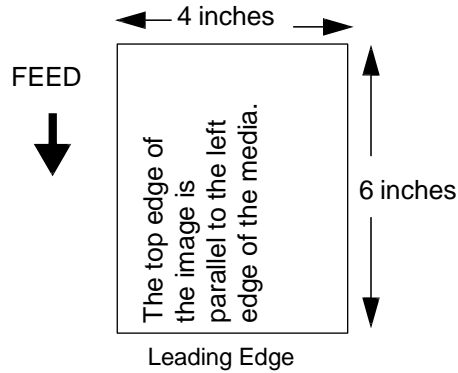


- **Inv. Portrait.** Inverse Portrait refers to vertical page orientation, where the height of a page is greater than its width. The top edge of the image is parallel to the trailing edge of the media. The following illustration is an example, with the operator viewing the front of the printer.

NOTE: Inverse Portrait orientation applies to PGL and VGL emulations. This is regarded as Portrait using PPI/ZGL.

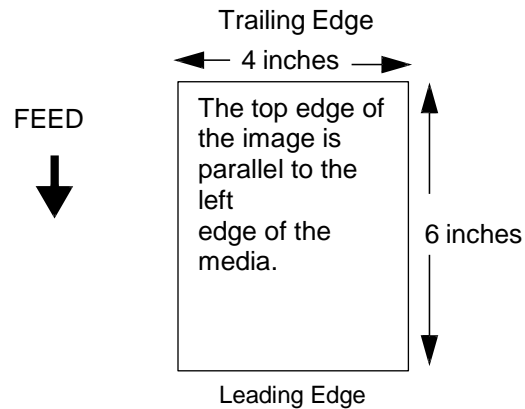

- **Inv. Landscape.** Inverse Landscape refers to horizontal orientation, where the width of a page is greater than its height. The top edge of the image is the right edge of the media (the left edge of the image is the trailing edge of the media). The following illustration is an example, with the operator viewing the front of the printer.

NOTE: Inverse Landscape orientation applies to PGL and VGL emulations. This is regarded as Landscape using PPI/ZGL.

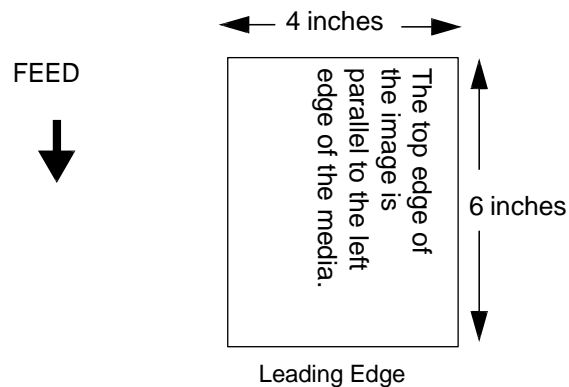

Auto Map Select

This option specifies the maximum print width to be used by the application. The IGP/Auto Label Mapping[®] feature allows backward compatibility of programs written for P5000 line-matrix printers using the Printronix PGL graphics language. It allows the printer to print two-up (or other multi-up) labels. Instead of printing multiple labels across the printer, it prints the leftmost label and the rightmost label, so the printout will be twice as long but half as wide.

When enabled, the printer will automatically reposition the horizontally adjacent labels to a vertically adjacent position, or a combination of horizontal and vertical positions based on the values selected under the Auto Label Width and Num Auto Labels menu items.

When disabled, excess data in any program sent to the printer with horizontally adjacent labels that exceed the physical page width of the printer will be clipped or wrapped depending upon the setting of the Autowrap menu option.

The options are Disable (factory default) and Enable.

Examples

All of the examples below assume that the logical form length is set to the label length.

Example 1: Simple Case

Problem: A file has been constructed with two horizontally adjacent 4” labels for a printer with a physical width of 8”. The user now wants to use this file with a printer that has a 4” physical width.


Solution: The user sets Auto Label Width to 4” (the width of the label), configures the Num Auto Labels to 2, and enables the Auto Label Mapping feature.

Printer Operation: The printer will print the first (leftmost) 4” label first. Once the first label has been completed, the printer will print the second 4” label. These labels will appear vertically adjacent on the form.

Line-Matrix Printer Output



Thermal Printer Output

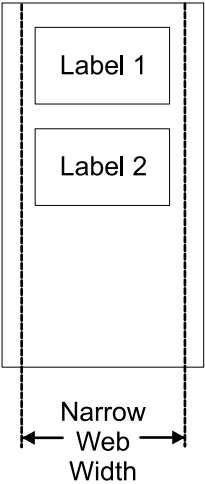


Example 2: Uneven Number Case

Problem: A file has been constructed with three horizontally adjacent 2" labels. The user now desires to use this file with a printer that has a 4" physical width.


Solution #1: The user sets *Auto Label Width* to 4" (the width of two labels), configures the Num Auto Labels to 2, and enables the Auto Label Mapping feature.

Printer Operation for Solution #1: The printer will print the first two labels at the same time. These first two labels will be horizontally adjacent. Once these labels have been completed, the printer will print the remaining 2" labels along with a blank 2" label.

File Contents:


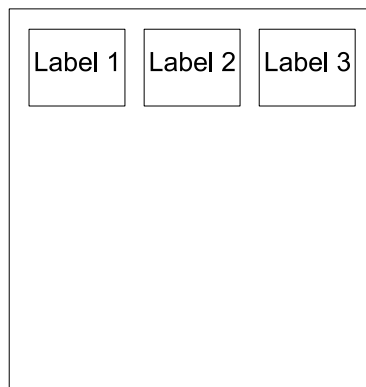


Print Output:

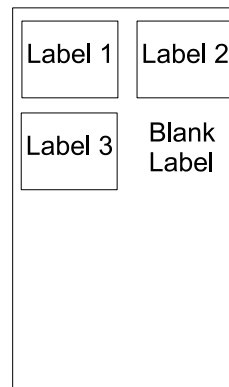

Solution #2: The user sets *Auto Label Width* to 2", configures the Num Auto Labels to 3, and enables the Auto Label Mapping feature.

Printer Operation for Solution #2: The printer will print the first 2" label by itself, the second 2" label by itself, and finally, the last 2" label by itself.

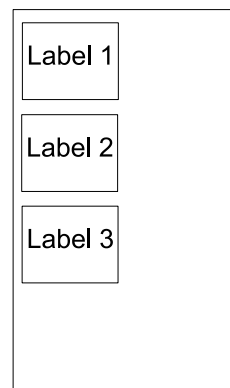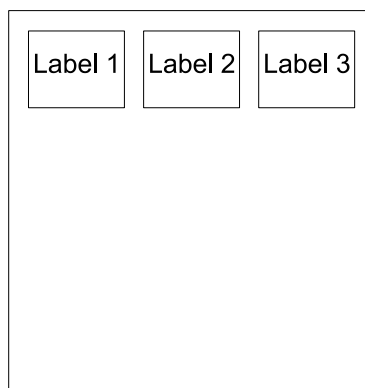

Example 3: Past Maximum File Width

Problem: A file has been constructed with three horizontally adjacent 4" labels. The user now desires to use this file with a printer that has a 8" physical width. The user should have used a solution similar to one of the solutions in the section above, but the user erroneously enters an *Auto Label Width* of 12" and a *Num Auto Labels* of 3.

Printer Operation: $Maximum\ Num\ Auto\ Labels = (20"/12") = 1.67$ rounded up to 2. The printer will automatically reduce the *Num Auto Labels* to 2.

Example 4: Blank Label Case

Problem: A file exists with two horizontally adjacent 4" labels. The user now wants to use this file with a printer that has a 4" physical width. The user decides to set the *Num Labels* to 3 and the *Label Width* to 4" despite the fact that these values are not optimum.

Printer Operation: The maximum $Num\ Auto\ Labels = (20"/4") = 5$. The selected value of 3 is legal. After the file is sent, the printer will begin by printing the first 4" width label. Once that label is complete, it will print the second 4" width label. Finally, once both of those labels have been printed, the printer will print a blank 4" label.



Auto Label Width

The width of a single label to be printed or the maximum width of the media that will be used for the print file. The value is selectable from 00.1 inch through the maximum print width of the printer.

NOTE: The maximum Auto Label Width value will be limited to the current MEDIA CONTROL/Label Width value selected in the configuration menu.

The default value depends on model width and size of DRAM installed.

Num Auto Labels

The desired number of labels to be printed vertically adjacent on the form. The value is selectable with a range of 2 through 40 (T5X04), 2 through 21 (T5X06) and 2 through 17 (T5X08).

The factory default is 2.

Slew Speed

The speed at which the printer moves media without actually printing on it.

- **Automatic** (factory default). Always the same as the print speed (see “Print Speed” on page 96).
- **Manual**. Allows you to set the slew speed. The maximum speed depends on your printer model (see Table 19 on page 333).

The slew speed can be set to Automatic, Manual, 6 ips, or 1 to 10 ips.

Print Direction


This option determines the basic print image orientation.

NOTE: Print Direction will not change the orientation of any print test patterns in the DIAGNOSTIC menu.

Print Direction has two options:

- Head First
- Foot First

For example, with Portrait orientation, when you select Head First, the top-of-form will come out of the printer first. Conversely, when you select Foot First, the bottom-of-form will come out first.

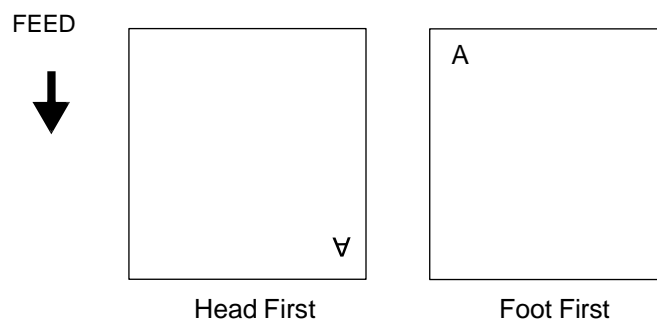

Print Direction and Orientation are two independent options that can be combined to produce the following results depending on the Active IGP Emulation:

Table 4. Head First

Print Direction Option	Orientation Option	Result in Active Emulations (PGL or VGL)
Head First	Portrait	Portrait
Head First	Landscape	Landscape
Head First	Inv. Portrait	Inv. Portrait
Head First	Inv. Landscape	Inv. Landscape

Table 5. Foot First

Print Direction Option	Orientation Option	Result in Active ZGL Emulation
Foot First	Portrait	Portrait
Foot First	Landscape	Inv. Landscape
Foot First	Inv. Portrait	Inv. Portrait
Foot First	Inv. Landscape	Landscape

The factory default is Head First when PGL or VGL is enabled.

The factory default is Foot First when ZGL is enabled.

Label Wait Time

When Media Handling is set to Tear-Off Strip or Continuous, and Continuous Mode is set to Tear Strip Full, Label Wait Time specifies the number of seconds after printing stops that the printer will wait before it advances media to the tear bar position.

When Media Handling is set to Peel-Off or Tear-Off, Label Wait Time specifies the number of seconds the printer will wait after a label is removed from the peel/tear bar before starting to print the next label.

The range is 0.1 to 60.0 seconds, and the factory default is 0.1 second.

Pre-Peel Mode

- **Disable** (factory default).
- **Enable.** When Media Handling = Peel-Off and Peel-Off Mode = Standard, enabling Pre-Peel Mode adds a forward and reverse motion to each label prior to printing. The added forward pre-peel motion temporarily breaks the die cut label from the liner, and the reverse motion places the label back on the liner prior to printing, peeling, or dispensing the label. Pre-Peel Mode is usually enabled only when using die cut labels with an aggressive adhesive that makes automatic label removal from the liner difficult.

Pre-Peel Adjust

When Pre-Peel Mode = Enable, Pre-Peel Adjust represents the selectable distance that the label advances during Pre-Peel Mode. The Pre-Peel Adjust distance selected is automatically used when Pre-Peel Mode is enabled.

The range is from 0.00 to 2.00 inches in .01 inch increments.

The factory default is 1.00 inch.

Lbl Missing Flt

Allows the Label Taken Sensor to first detect the presence of a label at the tear bar.

- **Full Label.** The printer generates a fault condition if a missing label is encountered. (Peel Off and Tear Off handling modes only).
- **Early Detect.** Once the label has moved forward 1.35 inches or the set label length (whichever is shorter), the sensor checks whether the label has advanced or not. (Tear Off, Tear Off Strip, and Continuous handling modes). If no label is detected by the label taken sensor after the first 1.35 inches of motion, the "LABEL WRAP:Open Head To Clear" fault is declared. When used in Cut handling the setting does nothing. When used in Peel-Off handling the settings behave the same as "Full Label".
- **Disable.** The printer does not generate a fault condition if a missing label is encountered.

The default is Full Label.

Clip Page

This option determines how the printer handles images that are too large for one physical page length when using gap or black mark media.

- **Enable** (factory default). When the user-selected page length is greater than the physical page length, the printer clips the excess data to fit the physical page. The excess data is lost. The media sensor constantly looks for the gap, notch, hole, or black mark and when detected, uses it as the Top-of-Form position for the next label and clips any remaining data from the label being printed.
- **Disable**. When the user-selected page length (logical length) is greater than the physical page length dictated by the gap, notch, hole, or black mark on media, the printer continues to print the remaining excess data onto the next physical page.

The media sensor looks for the gap, notch, hole, or black mark only after the media has advanced the distance specified by the Label Length value in the MEDIA CONTROL menu or by the Host Forms Length value sent via the software. Any gaps, notches, holes, or black marks that exist prior to reaching the Label Length or Host Forms Length value are ignored.

When Clip Page is set to Disable, Mark and Gap media sensing reliability can be improved and the sensor problems described below can be fixed:

- The image starts to print at an erroneous distance from the top-of-form, especially towards the end of a roll where the media is severely curled or scalloped.
- The image is incorrectly positioned as a result of the media sensor triggering off of a dark, pre-printed image on the label or multiple gaps within the label.
- The printer starts to print one label and then another all on the same physical label, especially at the end of a roll where the media is severely curled.
- An occasional blank label appears within a print job (in between printed labels).

When Clip Page is set to Disable, the printer ignores any pre-printed dark marks or multiple gaps on a label that could mistakenly be detected as the next top-of-form position based on the specified Label Length value. The Label Length option is in the MEDIA CONTROL menu.

NOTE: When Clip Page = Disable, the correct Label Length value must be entered. If the value is too long, the printer will ignore the actual gap or mark it needs to detect. When using Gap sensing, the Label Length value is equal to the physical length of a die cut or removable label. When using Mark sensing, the Label Length value is the physical distance from the leading edge of one black mark to the leading edge of the next black mark.

Error Recover

This option determines how the printer handles data that was printing when an error occurred.

- **Disable** (factory default). The printer will not reprint the label that was printing when the error condition occurred.
- **Enable**. The printer reprints the label that was printing when the error condition occurred.

Ribbon Width

When Same As Paper is selected, the printer automatically adjusts the ribbon operating parameters to match the installed media width. In those cases where the media width is less than the installed ribbon width, the Set In Menu option should be selected. After selection, the ribbon width is set to the proper value by pressing the ↓ key and choosing the actual ribbon width using the + and – keys. The chosen width is then selected by pressing the ↵ key. The factory default is Same As Paper.

Display Ribbon

When enabled and the printer online, 1 to 4 asterisks will display on the LCD indicating the approximate amount of ribbon remaining on the supply spindle:

Online Rbn	**** =	470 to 625m
	*** =	314 to 469m
	** =	157 to 313m
	* =	1 to 156m

The options are Enable (factory default) and Disable.

Ribbon Low

When enabled and the amount of ribbon remaining on the supply spindle is approximately 75 to 50 meters or less, the Online status indicator flashes and “Ribbon Low” displays on the second line of the LCD. A Ribbon Low warning message will not prevent printing.

The options are Disable (factory default) and Enable.

NOTE: The Display Ribbon option must be set to Enable for the warning to display.

Rbn Takeup Full

This enables or disables a fault message to display for a Ribbon Takeup Full condition.

The options are Enable (factory default) and Disable.

Units

This item selects either millimeters or inches as the unit of measure.

The options are In Inches (factory default) and In Millimeters.

Set Label Length

This feature selects whether the Sensed Distance value derived from an Auto or Manual Calibrate will be used to set the Label Length value in the MEDIA CONTROL menu (and the QUICK SETUP menu).

- **Manual** (factory default). The Sensed Distance value derived from an Auto or Manual Calibrate **will not override** or change the Label Length value.
- **Automatic**. When an Auto or Manual Calibrate is performed, the Sensed Distance value derived from either calibrate **will override** and change the Label Length value. If no Auto or Manual Calibrate is performed, the current Label Length value will be used.

NOTE: When Set Label Length = Automatic and Gap/Mark Sensor = Gap, Advanced Gap, or Advanced Notch, the printer will subtract the Gap Length value (in the CALIBRATE CTRL menu) from the Sensed Distance value obtained when the Auto or Manual Calibrate was performed.

Although the “Use Label Length” in the CALIBRATE CTRL menu keeps its value (enable/disable) at all times, it is ignored (disabled) when “Set Label Length” is set to “Automatic”.

Peel Present

This feature allows you to select which part of a label gets presented to the peel bar. The options include:

- **Next TOF** (factory default). Media is moved to next TOF after image printing before presenting media to the peel-off position. This option is for standard labels where the gap/mark length is less than the printhead to peel bar distance (about 1/2 inch).
- **End Of Form**. Media is moved to the end of form after image printing before presenting media to the peel-off position. This option is for labels that have wide gaps that result in labels falling off the peel bar. This setting works with non-mark media where the end of form is not the same as the next TOF. This setting is useful for die cut labels where the physical bottom of the label can be detected by the media sensor.
- **End Of Image**. Image prints and media moves to peel-off position. This option is for labels that have wide gap/marks that result in labels falling off the peel bar. This selection is intended for cases where presenting the next TOF or end of form still results in labels falling off the peel bar. This menu selection works best if the length of the image printed matches the physical length of the label.

“End of Image” printing is affected by the “Clip Page” option (under MEDIA Control). See “Clip Page” on page 121 for more details.

Peel-Off Mode

When Peel-Off Media Handling mode (see page 109) is enabled, this feature allows selection of two different media motions for automatic label peel-off.

- **Fast** (factory default). Reverse and forward media motion distance in Peel-Off mode is reduced, providing faster throughput. Primarily used for label lengths less than 2 inches long.
- **Standard**. Provides standard reverse and forward media motion distance in Peel-Off mode to ensure sufficient rewinder tension.

Continuous Mode

Allows selection of special media modes when Continuous Media Handling mode (see page 109) is selected.

- **Standard** (factory default). Labels are printed and sent out the front. The cross perforation following the last printed label is not aligned at the tear bar. No auto feeding of a blank label should exist between print jobs, but you may need to press the FEED key to move approximately .80 inches of the last printed label from under the printhead. If performed, this feed causes a blank label at the beginning of the next print job.
- **Tear-Off**. Same as Standard, but the cross perforation following the last printed label is aligned at the tear bar. No blank label is needed to remove the last printed label. No blank label should exist between print jobs. A no print zone, .80 inches long, exists from the leading edge of each printed label. This option supports label lengths 2.50 inches or longer.
- **Tear Strip Full**. Same as Standard, but the cross perforation following the last printed label is automatically aligned at the tear bar once the print buffer is empty for a period of Tear-Strip Time. (Media does not get aligned at tear bar until Tear-Strip Time expires.) When printable data is again detected, a blank label is automatically fed, resulting in one blank label between each print job. This option supports label lengths 2.50 inches or longer. Shorter label lengths cause two or more blank labels to be automatically fed at the beginning of each print job.
- **Cut Strip**. When Media Handling is set to Continuous and a cutter is installed, Cut Strip will use the respective host interface Timeout menu setting to determine the End Of Job (EOJ) and cycle the cutter. That is, the cutter will be cycled when there is no more data being received from the host. The cut will not be done for printing that is not initiated by the host such as form feeds and test printing or if the host interface is not set to Auto Switching.

TOF Detect Fault

Allows selection of three different TOF (Top-of-Form) detection faults.

NOTE: The correct Label Length value, equal to the physical length of the installed label, must be entered in the QUICK SETUP or MEDIA CONTROL menu.

- **3 Labels** (factory default). The printer displays a Gap Not Detected fault and stops printing when media has advanced a distance equal to three or more times the Label Length value set in menu.
- **9 Labels**
- **1 Label**

Ticket Save Mode

This option determines the action of the media for Continuous (std), Tear-Off, Tear-Off Strip and Cut Media Handling Modes after the printer is first powered up or after the printhead has been opened and then closed. When enabled, this option eliminates wasting label(s) or ticket stock when the printer advances media to search for the next TOF position.

- **Enable.** The printer will assume that media is at the TOF position after cycling power or after the printhead is opened and then closed. When a print job is sent it is printed without advancing media to search for the next TOF position.

NOTE: The user must ensure that media is at the correct TOF position (cross perforation, liner gap, notch or mark at the tear bar edge) before cycling power or before closing and locking the pivoting deck. In addition, media must be calibrated and the correct Media Handling Mode, Label Length and Gap/Mark Sensor selected and saved as the Power-Up Config. Option applies to .5 inch or longer label lengths only.

- **Disable** (factory default). The printer assumes that the media is not at the correct TOF position after cycling power or after the printhead is opened and then closed and advances media until the next gap, notch or mark is detected by the Media Sensor(s). When print data is sent, printing begins only after the next TOF is detected, resulting in one or more blank labels being advanced.

NOTE: When set to Enable, Online Auto-Cal and Head-Auto-Cal will automatically be set to Disable. The printer will not reset any settings to Enable when Ticket Save Mode is later disabled.

TOF Adjust Mode

- **Enable.** This option enables the “TOF Adjust” distance set using the TOF Adjust menu (see TOF Adjust below).
- **Disable** (factory default). This option disables the “TOF Adjust” distance set using the TOF Adjust menu (see TOF Adjust below).

TOF Adjust

This option sets the distance from the Top Of Form (TOF) that is left blank (unprinted) after a label has been removed in Tear-Off strip or Tear-Off mode. Normally printing is done starting at TOF, but when this mode is enabled the start position for printing can be adjusted from 0.00 to 0.40 inches from TOF (in increments of 0.01 inch). This adjustment can be helpful if a die cut label sticks to the platen by means of jagged edges created during a poor die cut label removal using the tear bar. By controlling how much blank space there is from TOF, you can control how much the media is called back after it is torn off.

Ribbon Calibrate

Determines the amount of ribbon remaining by performing a forward or reverse move. The options include:

- **Standard** (factory default). Normal forward and reverse ribbon calibration.
- **Forward Only.** Forward only ribbon calibration.

NOTE: When GPIO Print & Apply is set to Enable, Ribbon Calibrate is set to Forward Only. This automatic setting of the Ribbon Calibrate menu occurs only once per power cycle and only if the menu is changed with the control panel.

Reverse Speed

This option sets the speed at which the media moves in reverse direction.

The range is 1 to 6 ips (in increments of 1 ips). The factory default is 2 ips.


NOTE: Speeds above 2 ips may cause ribbon smudging depending on ribbon and media.

Vertical DPI Adjust

Adjusts the vertical print resolution. This can be used to compress or expand all printed forms by small amounts. When a 203 DPI printhead is installed, the range is 195 to 210. When a 300 DPI printhead is installed the range is 290 to 310.

The factory default for a 203 DPI printhead is 203. The factory default for a 300 DPI printhead is 300.

CALIBRATE CTRL

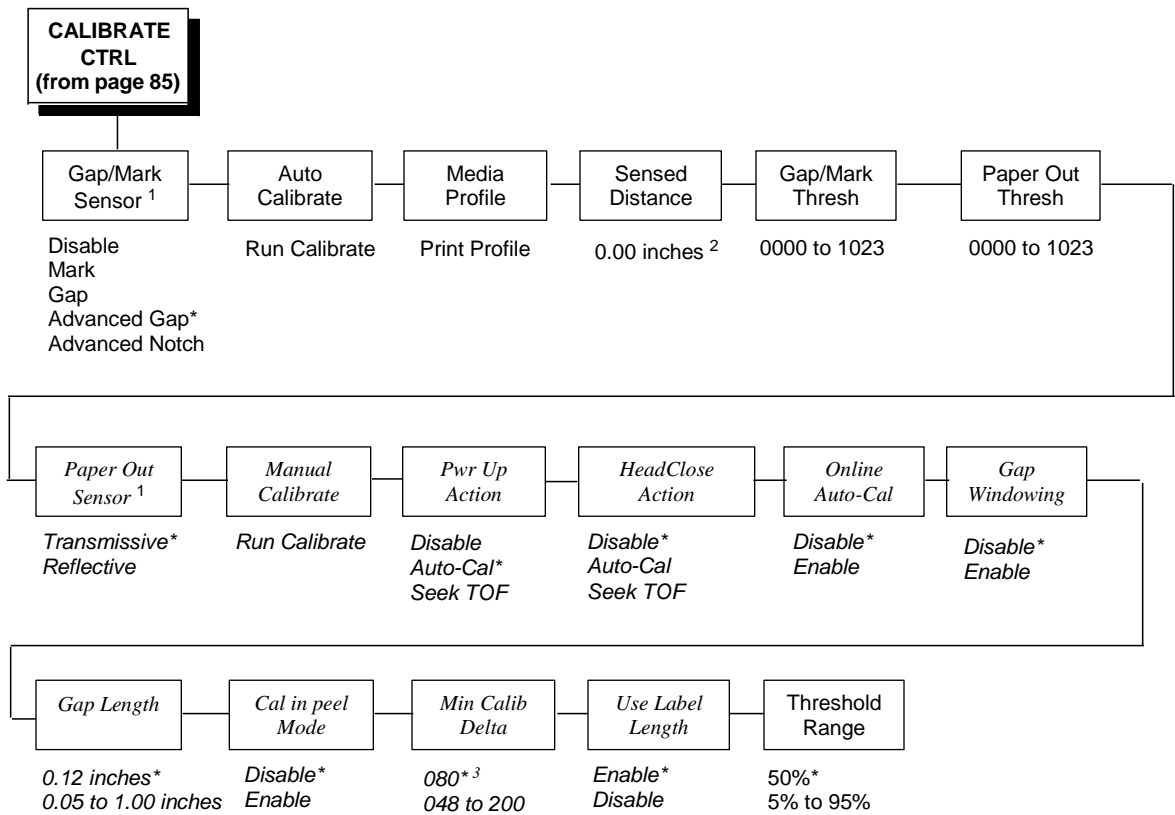

Notes:

* = Factory Default

Italicized items are available only when you enable Admin User (in the PRINTER CONTROL menu).

¹ Gap/Mark Sensor and Paper Out Sensor work in conjunction, as shown below:

Table 6

When you select an option in Gap/Mark Sensor...	Paper Out Sensor defaults to...
Disable	Reflective
Mark	Reflective
Gap	Reflective
Advanced Gap	Transmissive
Advanced Notch	Transmissive

If you change the Gap/Mark Sensor or Paper Out Sensor, you must recalibrate the media.

² When Admin User is enabled (in the PRINTER CONTROL menu), you can change the unit value to millimeters: Under the Units submenu (in the MEDIA CONTROL menu), enable the "In Millimeters" option.

³ When Gap/Mark Sensor = Disable, Gap, or Mark, the default is 48. When Gap/Mark Sensor = Advanced Gap or Advanced Notch, the default is 80.

CALIBRATE CTRL Submenus

Gap/Mark Sensor

The available options specify the sensor type needed for detecting the Top-of-Form position on media with label length indicators (gaps, notches, holes, or black marks).

- **Disable.** Select when using media with no label length indicators (no gaps, notches, holes, or black marks), or when you want the printer to ignore all existing label length indicators on the installed media.

NOTE: When you select Disable, the length of each label is based on the Label Length value entered in the MEDIA CONTROL menu or the value sent via host software.

- **Mark.** Select when using media that has horizontal black marks located on the underside of the label liner or tag stock. The Top-of-Form position is the leading edge of the black mark.
- **Gap.** An alternative to Advanced Gap. The Top-of-Form position is the leading edge of the die cut label (trailing edge of the gap, notch, or hole).
- **Advanced Gap** (factory default). Select when using media with a liner space between die-cut labels or when using tag stock with notches or holes as label length indicators on white background media or when using media that has liner gaps between die cut labels with black background. The Top-of-Form position is the leading edge of the die cut label (trailing edge of the gap, notch, or hole).
- **Advanced Notch.** Select when using media with notches or holes that interrupt a black vertical line on the underside of the media. The Top-of-Form position is the leading edge of the die cut label (trailing edge of the gap, notch, or hole).

Auto Calibrate

This feature is used to improve the sensitivity and reliability of the Media Sensors in detecting gaps, notches, holes, or black marks on the installed media, as well as a paper out condition.

NOTE: Prior to running Auto Calibrate you must enter the physical length of the installed media in the QUICK SETUP or MEDIA CONTROL menu. Selecting the correct Label Length forces Auto Calibrate to increase media advancement for long labels (to detect actual gaps, notches, or marks) and decrease advancement for short labels.

You can initiate Auto Calibrate from the TEST PRINT key, the CALIBRATE CTRL menu, or the DIAGNOSTIC menu. When “Auto Calibrate” displays on the LCD, press the ↵ key. The printer advances media the distance needed to accurately detect the label length indicators, then stops at the Top-of-Form position, and momentarily displays the Sensed Distance. This process takes a few seconds to complete and results in changes to the values the printer uses for Gap/Mark Threshold, Paper Out Threshold, and Sensed Distance. These value changes take effect immediately within the current configuration menu.

Auto Calibrate is completed successfully when the Sensed Distance displayed correctly matches that of the installed media. When Gap is selected, the Sensed Distance should match the length from the trailing edge of one gap to the trailing edge of the next gap (one label + one gap). When Mark is selected, the Sensed Distance should match the length from the leading edge of one black mark to the leading edge of the next black mark.

Auto Calibrate supports label lengths up to 35 inches.

Media Profile

This feature provides a graphical printout showing the relationship of the Paper Out Threshold and the Gap/Mark Threshold. The profile printout assists you in setting the thresholds for difficult media. This includes pre-printed labels, and labels with poor gap/media dynamic range.

When selected, the printer will advance media and print the media profile along the length of each label. The printer will continue to print the profile until you press ↵.

The factory default is Print Profile.

Sensed Distance

This value (in inches) represents the distance that was sensed between the TOF of one label to the TOF of the next label. With gapped media installed, the distance equals the physical label length plus one gap, notch, or hole (trailing edge of one gap, notch, or hole to the trailing edge of the next gap, notch, or hole). With black mark media installed, the distance equals the leading edge of one black mark to the leading edge of the next. This value is automatically determined only after successful completion of Auto or Manual Calibrate and cannot be changed manually.

The factory default is 0.00 inches.

Gap/Mark Thresh

This menu item sets a value that, when exceeded by the output of the media sensor, is recognized by the printer as a gap (or black mark). When Auto or Manual Paper Calibrate is performed, the value displayed is equal to the gap/mark threshold value set by this procedure. If running the procedure does not provide a reliable Top-Of-Form detection, e.g., when using unusual media, the Gap/Mark Thresh value can be manually set to the desired value.

The range is from 0000 to 1023.

Paper Out Thresh

This menu item selects a value that, when exceeded by the output of the media sensor, is recognized by the printer as a paper out condition. When Auto or Manual Calibrate is performed, the value displayed is equal to the paper out threshold value set by this procedure. If running the procedure does not provide a reliable paper out detection, e.g., when using non-standard media, the Paper Out Thresh value can be manually set to the desired value.

The range is from 0000 to 1023.

Paper Out Sensor

Selects which type of media sensing, Transmissive or Reflective, will be used to detect a paper out condition. The printer automatically selects the type of sensing based on the Gap/Mark sensing selected (see Table 6 on page 127).

NOTE: Whenever you select Transmissive, you must position the upper media sensor directly over the lower media sensor (see “Positioning the Media Sensors” on page 54).

The factory default is Transmissive.

Manual Calibrate

Manual Calibrate is another method of improving the printer’s media sensing and is only used when Auto Calibrate has failed or the Gap/Mark Threshold or Paper Out Threshold values derived from Auto Calibrate do not improve the media sensors’ gap or mark sensing capability.

To initiate Manual Calibrate, press \downarrow when “Manual Calibrate” displays under the CALIBRATE CTRL menu. You will then be prompted for the remaining steps.

Example: “REMOVE RBN&MEDIA/Press Enter” or
“LOAD RBN ONLY/Press Enter” etc.

During the last stage of Manual Calibrate, the printer uses the statically derived values, advances media, stops at the Top-of-Form position, and momentarily displays the Sensed Distance. This process takes longer than Auto Calibrate, and the end result is a change to the Gap/Mark Threshold, Paper Out Threshold, and Sensed Distance values that the printer will use. These value changes take effect immediately within the current configuration menu.

Manual Calibrate is completed successfully when the displayed Sensed Distance correctly matches that of the installed media. When Gap is selected, the Sensed Distance should match the length from the trailing edge of one gap to the trailing edge of the next gap (or one label + one gap). When Mark is selected, the Sensed Distance should match the length from the leading edge of one black mark to the leading edge of the next black mark.

Manual Calibrate supports label lengths up to 24 inches.

Pwr Up Action

- **Disable.** No movement at power up.
- **Auto-Cal** (factory default). When the printer is first powered on, it will complete its initialization and self-tests and then perform an Auto Calibrate. Once the Auto Calibrate is complete, the printer will momentarily display the Sensed Distance determined by the Auto Calibrate. Auto-Cal will not be performed if Ticket Save is set to Enable.
- **Seek TOF.** Assumes user has already calibrated media and used gap/mark sensor. This moves the media to TOF (Top of Form) at power up. Seek TOF will not be performed if the Gap/Mark Sensor is set to Disable or if the Ticket Save Mode is set to Enable.

NOTE: If Ticket Save mode is enabled, you will not be able to set Pwr Up Action to Enable. A temporary message, "Disable/Ticket Save Mode" will display.

HeadClose Action

Selects whether the printer performs a selected action after a print head open fault condition is cleared.

- **Disable** (factory default). No media motion after a print head open fault condition is cleared.
- **Auto-Cal.** Performs a media calibration every time the print head open fault condition is cleared.
- **Seek TOF.** Moves the media to TOF (Top Of Form) when the printhead is closed. The media should already be calibrated using Gap/Mark sensor.

NOTE: A seek to TOF will not occur if Gap/Mark Sensor is set to Disable or Ticket Save Mode is set to Enable.

NOTE: If Ticket Save Mode is enabled, you will not be able to set HeadClose Action to Auto-Cal or Seek TOF. A temporary message, "Disable/Ticket Save Mode" will display.

NOTE: If there is data pending (data in buffer) when the head open fault is cleared, Auto-Cal and Seek TOF are ignored.

Online Auto-Cal

NOTE: Online Auto-Cal will not function when the validator is enabled or when Error Recover (under MEDIA CONTROL) is enabled (see page 122) if there is data pending (data in buffer).

The options for Online Auto-Cal are:

- **Disable** (factory default).
- **Enable.** Whenever the printer is brought online, it automatically performs an Auto Calibrate (see “Auto Calibrate” on page 128). Once the Auto Calibrate is complete, the printer momentarily displays the Sensed Distance determined by the Auto Calibrate and then resumes printing any pending jobs.

NOTE: If using the Online Auto-Cal feature, you must first enable it prior to printing any data.

NOTE: If Ticket Save mode is enabled, you will not be able to set Online Auto-Cal to Enable. A temporary message, “Disable/Ticket Save Mode” will display.

Gap Windowing

This feature compensates for any early falling edges or spurious peaks and troughs that may appear within the gap length in media. These edges or peaks and troughs can cause unreliable detection of the leading edge of the next label (top-of-form). Use Gap Windowing to resolve the following problems:

- Loss of one or more complete (serialized) labels.
- Start of an image printed in the middle of a gap, especially with fanfold, perforated media.
- Top part of an image lost when printing in head-first orientation.

The options for Gap Windowing are Disable and Enable:

- **Disable** (factory default). When the leading edge of a gap is detected, the printer continuously looks for the leading edge of the next label and uses it as the TOF position. Perforations or unusual media discrepancies within the gap can cause inaccurate TOF detection.
- **Enable.** When the leading edge of a gap is detected, the printer ignores the first 90% of the gap length value specified in the Gap Length menu option. The result is that cross perforations or unusual media discrepancies within the gap are filtered out, allowing the printer to reliably detect the actual leading edge of the next label and use it as the TOF position.

Gap Length

Gap Length is the actual length (height) of a label gap measured in .01 inch increments. The range is 0.05 to 1.00 inches.

NOTE: You must enter the correct Gap Length. If the Gap Length is too long, the image will shift down from the leading edge (TOF) of the label.

The factory default is 0.12 inches.

Cal in Peel Mode

This option allows you to perform a calibration (Auto Calibrate or Pwr Up Auto-Cal) in Peel-Off Media Handling mode.

- **Disable** (factory default). The printer will not permit calibration and a “CANNOT CALIBRATE/Disable Peel-Off” message will briefly display. Additionally, if “Pwr Up Auto-Cal” is enabled, the printer will not perform calibration at power up.
- **Enable**. Auto Calibrate can be performed from the front panel, and if the Pwr Up Auto-Cal option is enabled, calibration will be performed at power up.

NOTE: Calibration in Peel-Off mode does not stop and wait for you to remove peeled labels. Therefore, be prepared to remove the labels as they are automatically peeled.

Min Calib Delta

Minimum Calibrate Delta changes the minimum threshold value the sensor(s) require to detect the difference between the label and a gap, notch, hole or black mark. This allows bolder gaps (such as notches or holes) to be used as the TOF while intermediate gaps (liner) can be ignored. Increasing the Min Calib Delta makes the sensor(s) less sensitive to intermediate gaps and noise. Decreasing the Min Calib Delta makes the sensor(s) more sensitive for detecting gaps on low contrast media, where there is very little difference between the label and the gap (liner).

The range is from 048 to 200.

NOTE: When Gap/Mark Sensor = Disable, Gap, or Mark, the default is 48. When Gap/Mark Sensor = Advanced Gap or Advanced Notch, the default is 80.

Use Label Length

Determines whether or not the Label Length value set in the QUICK SETUP or MEDIA CONTROL menu is used during Auto Calibrate.

- **Enable** (factory default). The Label Length value set in the QUICK SETUP or MEDIA CONTROL menu is used in the calibrate algorithm. This causes the Auto Calibrate process to advance media the minimum distance required to detect the true gap, notch, hole, or black mark used for TOF (Top-of-Form) sensing. This resolves problems where the sensor(s) may mistake high noise levels or preprinted images within the label as the gap, notch, hole, or black mark that could result in a sensed distance value much shorter than the actual label length. Example: A 0.2 inch calibrated Sensed Distance with a 3.0 inch long label installed.

NOTE: Setting the Label Length value less than half the actual length of the label in use will result in erroneous Sensed Distance values when Auto Calibrate is performed.

- **Disable.** Auto Calibrate relies exclusively in its ability to detect varying transitions between labels and gaps, notches, holes, or black marks while advancing media during the calibrate process to determine Sensed Distance. The amount of media advanced is based on the number of transitions detected.

NOTE: Although the “Use Label Length” keeps its value (enable/disable) at all times, it will always be disabled when “Set Label Length” is set to “Automatic”. The correct setting will take effect when “Set Label Length” is set to manual. Based on the setting on the “Set Label Length” menu in the Media Control menu, the “Use Label Length” menu will be ignored (disabled).

Threshold Range


This option allows the user to select the optimal threshold range for the label stock in use. The printer defaults to using a threshold range of 50% of the positive going pulse (see Media Profile) that represents each gap, notch or mark detected after doing an Auto or Manual Calibrate. The printer then detects anything within the label with that threshold range as TOF. While this range is ideal for most medias, some labels with a preprinted image, liner gap or inlay can confuse the media sensor(s) causing a false TOF detection. In most cases this can be resolved by selecting a higher threshold range so the printer will only trigger on the true TOF (gap, notch or mark) position.

NOTE: A new threshold range will not take affect until an Auto or Manual Calibrate is successfully performed. A Media Profile should be run after a Calibrate to visually verify that the new range is the best possible selection.

The range is: 5% to 95% in 5% increments

The factory default is 50%.

PRINTER CONTROL

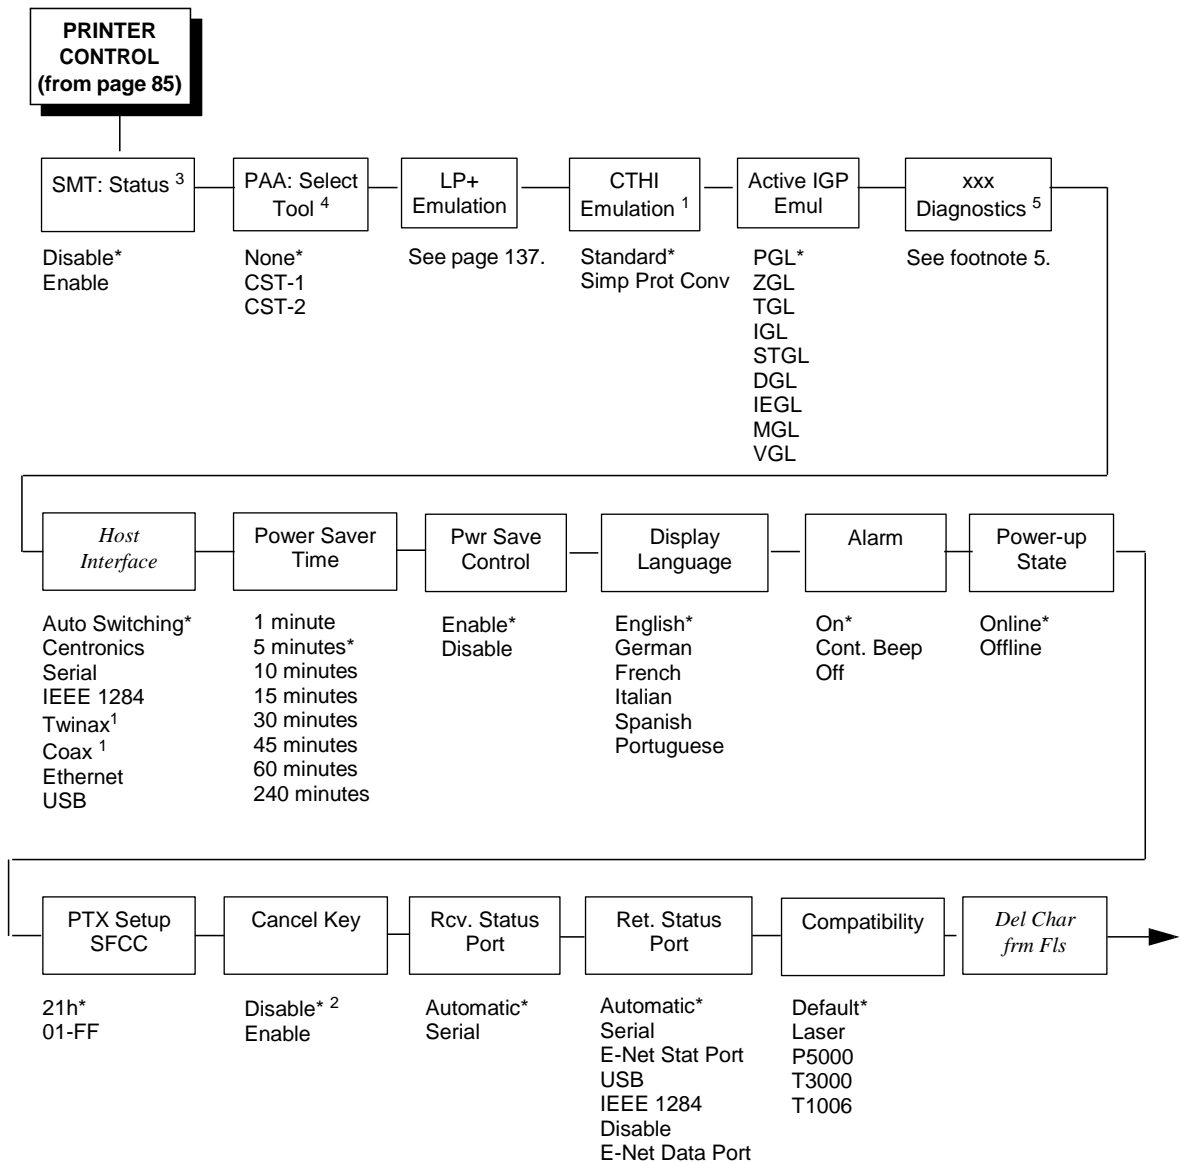

Notes:

* = Factory Default

Italicized items are available only when you enable Admin User (in the PRINTER CONTROL menu).

¹ Appears only if the CTHI option is installed.


² When Coax/Twinax interface is installed, the factory default is Enable.

³ Appears only if RFID is installed and there is no CST bundle in the Flash File System.

⁴ Appears only if RFID is not installed and there is a CST bundle in the Flash File System.

⁵ xxx represents the emulation name selected in the Active IGP Emul menu. The options in this menu vary and are described on page 140.

**PRINTER
CONTROL**
(from page 135)

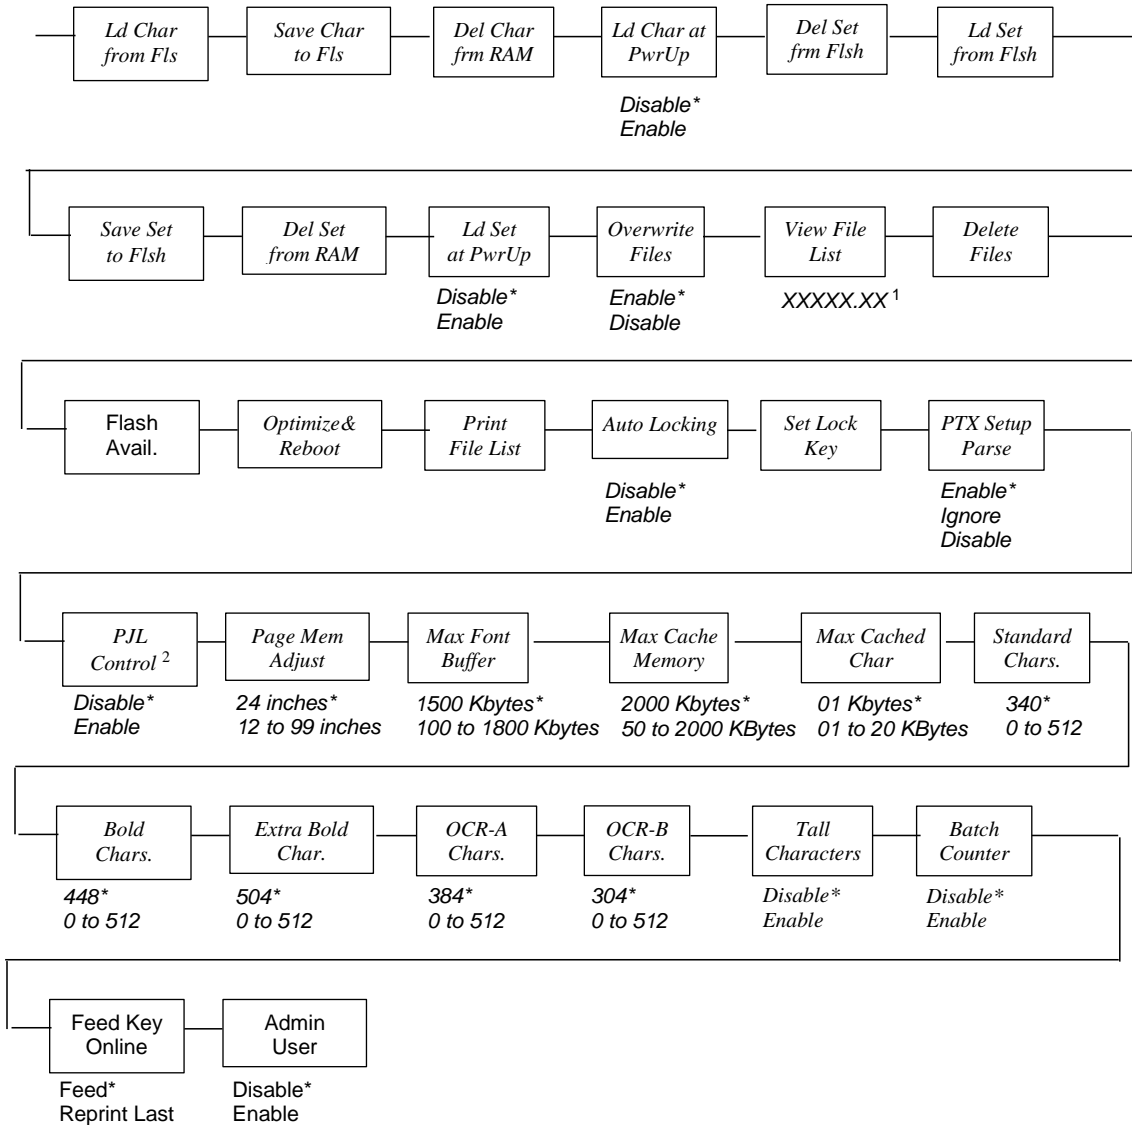


Notes:

* = Factory Default

Italicized items are available only when you enable Admin User (in the PRINTER CONTROL menu).

¹ You cannot change this value; it is a display only item.

² Does not appear if CT or IPDS is installed.

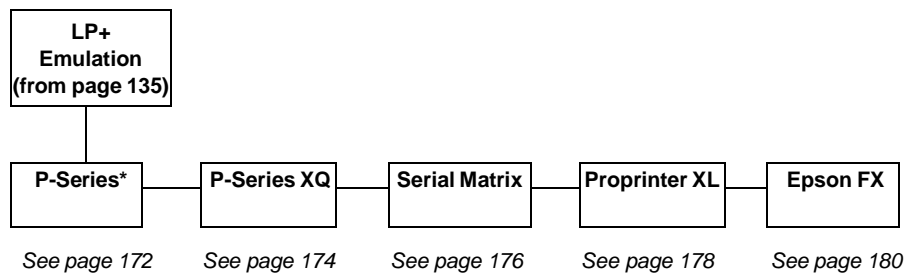

Notes:

* = Factory Default

PRINTER CONTROL Submenus

SMT: Status

See “Software Migration Tools (SMT)” in the RFID Labeling Reference Manual.

- **Disable** (factory default). The printer disables the use of the Software Migration Tools functionality.
- **Enable**. The printer enables the use of the Software Migration Tools functionality.

PAA: Select Tool

Refer to the *PrintNet Enterprise Suite User's Manual*.

- **Disable** (factory default). The printer disables the use of PAA functionality.
- **Enable**. The printer enables the use of PAA functionality.

LP+ Emulation

This item selects the line or dot matrix printer to be emulated by the printer.

- **P-Series** (see page 172)
- **P-Series XQ** (see page 174)
- **Serial Matrix** (see page 176)
- **Proprinter XL** (see page 178)
- **Epson FX** (see page 180)

The factory default is P-Series.

CTHI Emulation

This item appears only when the CTHI option is installed.

CTHI Emulation selects the operation of the CTHI option as either a standard or simple protocol converter.

- **Standard**

With a standard coax interface, the printer emulates the following IBM coax printer models:

- 3287 Models 1 and 2
- 4234 Model 1

With a standard twinax interface, the printer emulates the following IBM twinax printer models:

- 4234 Model 2
- 5225 Models 1, 2, 3, and 4

The standard Coax/Twinax emulation selection will only be available if Coax or Twinax is selected from the HOST INTERFACE menu.

NOTE: For more information, consult the *Coax/Twinax Programmer's Reference Manual*.

- **Simp Prot Conv (Simple Protocol Converter)**

The Simple Protocol Converter (SPC) option allows those who use add-on coax or twinax protocol converters to produce the same output on a Printronix thermal printer with the Coax/Twinax (CTHI) capability as done using a non-CT printer with the third party converter interfaces. The SPC gives the printer the operational ability to connect to any PC or network system supporting parallel or serial interfaces, and to three different IBM host systems.

- System 3x
- AS/400*
- 327x Control Units

The SPC will support the same models as Printronix standard Twinax printers.

The printer emulations supported by the SPC are Twinax 5225 and Coax 3287. The SPC also provides a range of interfaces available in your thermal printer: Centronics, serial, coax, and twinax. Also supported are Epson, Proprietary XL, P-Series, Serial Matrix, VGL, and PGL emulations.

The SPC has the ability to handle multiple print jobs concurrently through coax/twinax and parallel and serial interfaces. This is accomplished through the Auto Switching feature (see “Auto Switching” on page 281). Because of hardware restrictions, coax and twinax cannot be selected together.

For more information, refer to the *Coax/Twinax Programmer's Reference Manual* for the Simple Protocol Converter Option.

The factory default is Standard.

Host Interface

This option allows you to send print jobs through any interface with auto-switching selected as host interface. It also allows a particular interface from the menu to be selected.

The options are Auto Switching, Centronics, Serial, IEEE 1284, Twinax, Coax, Ethernet and USB.

NOTE: The Twinax and Coax options appear only if the CT emulation is installed.

The factory default is Auto Switching.

Active IGP Emul

This function allows you to activate any IGP emulation listed in the menu. The choices are PGL, ZGL, TGL, IGL, STGL, DGL, IEGL, MGL, and VGL. See page 12 for descriptions of each emulation. The default is PGL.

There are two methods for selecting the desired emulation:

- Select the emulation under the Active IGP Emulation menu option and save it as Power-up Config.
- Send a host command to switch the emulation automatically (refer to the appropriate *Programmer's Reference Manual* for details).

xxx Diagnostics

This menu sets the error reporting capability of the printer for emulation XXX (PGL, ZGL, TGL, IGL, STGL, DGL, MGL, IEGL, and VGL). XXX corresponds to the selected option of the Active IGP Emul menu.

For PGL, the options are as follows:

- **On** (default). Full error checking reported. Any element that falls off the current page is reported as an error.
- **Debug Mode**. Puts the printer in debug mode whenever a form is defined in CREATE mode. Each line of the CREATE form will be printed along with an error if one has occurred.
- **Fault**. Allows you to halt the printer if a PGL error occurs. If you select this option, the PGL error prints on the paper, the message "PGL Error" displays on the front panel, and the printer goes offline. You must clear the error before the printer can resume normal operation.
- **Host**. Full error checking reported. Error messages are sent back to the host through the port based on the menu "Ret. Status Port" instead of being printed on paper.
- **Off**. There is no error checking. Graphic elements such as alpha, line, barcodes, etc., will be clipped if they are beyond the page boundaries.

For VGL, the options are as follows:

- **Enable All**. Full error checking and report.
- **Disable** (default). No error checking and report.
- **Error Msgs**. Command syntax is checked and error messages printed when command parameters are incorrect.
- **Error Markers**. Prints the following error markers for those elements that print beyond the page boundaries:
 - >> for elements that begin off the right side of the page.
 - << for elements that begin at the indicated position but end off the page.
 - ♦ for elements where the starting position of the command contains an error other than an off-page error.
- **Offpage Errors**. Reports errors for elements that start or end beyond the right edge of the page.
- **Barcode Errors**. An error message will print when invalid barcode data is encountered.

For ZGL, TGL, IGL, STGL, DGL, MGL, and IEGL, the options are as follows:

- **Disable** (default). Full error checking and report.
- **Enable**. No error checking and report.

Power Saver Time

The time interval you specify for this parameter sets the amount of idle time before the printer goes into Power Saver mode.

Pressing any key removes the power saver message from the control panel. Sending a print job to the printer also turns off power saver mode.

The options are 1, 5, 10, 15, 30, 45, 60, and 240 minutes.

The factory default is 5 minutes.

NOTE: When ODV is installed and enabled, the printer will wait 20 seconds before exiting Power Saver mode. During the Power Saver mode exit a “PLEASE WAIT” message will display alerting user of the required delay.

Pwr Save Control

Pwr Save Control allows you to enable and disable Power Saver mode. If enabled, the menu for Power Saver Time is in effect.

The options are Enable (factory default) and Disable.

Display Language

This parameter chooses the language that will appear on the LCD: English, German, French, Italian, Spanish, or Portuguese.

The factory default is English.

Alarm

- **On** (factory default). An audible alarm sounds (3 beeps) when a fault occurs, such as a paper jam.
- **Cont. Beep.** A continuous audible alarm sounds when a fault occurs, which can be stopped by pressing CLEAR.
- **Off.** No audible alarm sounds.

Power-up State

- **Online** (factory default). The printer powers up in the online state.
- **Offline.** The printer powers up in the offline state. This selection must be saved as a power-up configuration to be used.

PTX Setup SFCC

Allows you to choose the hex value of the ASCII character you wish to use as the SFCC for the PTX SETUP command. Valid hex values are 01-FF.

The factory default value is hex 21, which corresponds to the “!” character.

Cancel Key

- **Disable.**
- **Enable.** When enabled, the **X** key may be used in offline mode to clear all data in the print buffer, and deleted data will not be printed.

The factory default is Disable. When the Coax/Twinax interface is installed, the factory default is Enable.

Rcv. Status Port

This option defines the interface being used to receive the emulation status command.

- **Automatic** (factory default). When selected, the status command is sent to the printer with the print data through the active host interface.
- **Serial.** When selected, the status command is sent to the printer through the serial interface regardless of the active host interface.

Ret. Status Port

This option selects the port for the Return Status Commands (i.e., ~STATUS (PGL) and ~HS (PPI/ZGL)) to send the status data back to the Host.

The options are Automatic (factory default), Serial, E-NET Stat Port, USB, IEEE 1284, Disable, and E-NET Data Port.

Compatibility

This parameter allows you to make T5R series thermal printers compatible with other printers.

When trying to preserve compatibility with respect to barcodes, you may not always be able to make them equal in size. This is due to the various dot-per-inch differences between printer types. When an exact match cannot be made, the barcode is reduced in size so that the form bounds will not be compromised and the barcode will be readable.

- **Default** (factory default). Use for optimum performance.
- **Laser.** Forces the output to correspond with the Printronix laser line of printers.
- **P5000.** Forces the output to correspond with the P5000 line of line matrix printers.
- **T3000.** Forces the output to correspond with the T3000 line of thermal printers.
- **T1006.** Forces the output to correspond with the T1006 line of thermal printers.

Del Char frm Fls

This option deletes downloaded character(s) from flash memory.

Ld Char from Fls

This option loads downloaded character(s) from flash memory.

Save Char to Fls

This option saves downloaded character(s) to flash memory.

Del Char frm RAM

This option deletes downloaded character(s) from RAM.

Ld Char at PwrUp

This option loads downloaded character(s) from flash memory at Power Up.
The options are Disable (factory default) and Enable.

Del Set frm Flsh

This option deletes downloaded overlay set(s) from flash memory.

Ld Set from Flsh

This option loads downloaded overlay set(s) from flash memory.

Save Set to Flsh

This option saves downloaded overlay set(s) to flash memory.

Del Set from RAM

This option deletes the downloaded overlay set(s) from RAM.

Ld Set at PwrUp

This option loads the downloaded overlay set from flash memory at Power Up.
The options are Disable (factory default) and Enable.

Overwrite Files

This allows you to prevent files from being overwritten by disabling the overwrite function.
The options are Enable (factory default) and Disable.

View File List

Displays the list of files in the file system. Pressing ↓ displays the file size.
Files with one of the filename extensions listed table on page 279 are not shown in the View File List menu.

Delete Files

Allows you to delete files in the file list. Contact your administrator for assistance. Files with one of the filename extensions listed table on page 279 are not shown in the View File List menu.

Flash Avail.

The amount of flash available for the user to save or download files into flash.

Optimize&Reboot

Reclaims flash space from deleted flash files. After pressing ↵ wait for the printer to reboot.

Print File List

Prints a summary of the files stored in flash memory and several statistics on File System usage.

Auto Locking

- **Disable** (factory default). The ↵ (ENTER) key must be locked manually.
- **Enable**. The printer automatically locks the ↵ key five minutes after the last control panel key press.

Set Lock Key

Normally, to lock or unlock the printer menu, the ↓ and ↵ keys are pressed at the same time. The Set Lock Key parameter lets you choose different keys to lock or unlock the printer menu. You may choose almost any group of keys as the new lock and unlock keys. You cannot use the ↵ key or any key combinations which are already used for another function. There is no limit to how many keys can be selected.

To set the new lock key:

1. Go to the PRINTER CONTROL main menu and select “Set Lock Key.”
2. Press ↵. The display reads, “Select a new lock key.”
3. Press the combination of keys that you want to be the new lock key. Make sure you press all keys selected at the same time.

4. If the selection is valid, the display will read, "Enter the new lock key again." Press the same combination of keys a second time. If the selection is invalid, the display will read, "Invalid key selection." Return to step 2 and start over.
5. If the new lock key combination is entered again correctly, the display will read, "Lock key has been changed." If it was entered incorrectly, the display will read, "Validation failed." Start over at step 1.
6. After entering the new lock combination successfully, press the PAUSE key to put the printer back online.

NOTE: The new lock combination will remain even if the printer is powered off and back on.

PTX Setup Parse

- **Enable** (factory default). Will parse and execute the PTX SETUP commands.
- **Ignore**. Will parse the PTX SETUP commands but not act on them.
- **Disable**. Will not parse the PTX SETUP commands so they will print out as text.

PJL Control

- **Enable** (factory default). Will parse and execute the PJL commands.
- **Disable**. Will not parse the PJL commands; they will not print out as text.

Page Mem Adjust

Page Mem Adjust should be set to the longest form length used on the printer. User applications that are less than or equal to the default setting of 24 inches do not need to modify the value. The value resets to the default when the printer firmware is downloaded and/or the printhead (203 DPI or 300 DPI) is changed.

The default is 24 inches, the minimum setting is 12 inches, and the maximum setting is 99 inches. The values adjust by 1 inch increments.

Max Font Buffer

The maximum amount of DRAM allocated to store the global font information of any resident and downloaded scalable font (e.g. Intellifont, TrueType). Each font contains its own global font information that is required for all character generation from that font. Some fonts may require more font buffer memory than others to generate characters. Insufficient font buffer memory causes characters to be missing on the page and print blank. If a font needs more memory for character generation, increase the Max Font Buffer value to allow the printer to print the missing character.

The range is from 100 to 1800 Kbytes, and the factory default is 1500 Kbytes.

Max Cache Memory

The Maximum Cache Memory option specifies the size of the memory block that can be allocated to the font cache. The font cache stores bitmaps that are created on demand from the font outlines stored on the printer flash. The cache allows the printer to print scalable fonts at optimum speed.

To calculate the memory requirement, use this equation:

horizontal resolution x	vertical resolution x	average character height (inches) x	average character width (inches) x	# of characters to be cached
<hr/>				
8				

The allowable range is 50 KBytes through 2000 KBytes in 50-KByte increments.

The factory default is 2000 KB.

Max Cached Char

The Maximum Cached Characters option specifies the size of the largest character that can be stored in the font cache. To calculate the memory requirement, use this equation:

horizontal resolution x	vertical resolution x	average character height (inches) x	character width (inches)
<hr/>			
8			

For example, with a print head that prints at 203 dpi you would use the following formula:

$$\frac{203 \times 203 \times 1 \times 1}{8} = 5,151$$

Therefore, select a value that is equal to or greater than 5,151. The closest available value is 6 KBytes.

The allowable range is 1 KByte through 20 KBytes, in 1-KByte increments.

The factory default is 01 KBytes.

NOTE: For most applications, the default settings for font memory are acceptable. Therefore, do not change the defaults unless your application requires an uncommon memory configuration.

Standard Chars.

This menu entry permits you to adjust the thickness or font weight of standard text fonts.

The factory default is 340 and the range is from 0 to 512.

Bold Chars.

This menu entry permits you to adjust the thickness or font weight of bold text fonts.

The factory default is 448 and the range is from 0 to 512.

Extra Bold Char.

This menu entry permits you to adjust the thickness or font weight of extra bold text fonts.

The factory default is 504 and the range is from 0 to 512.

OCR-A Chars.

Character weight adjustment of resident OCR-A characters.

The factory default is 384 and the range is from 0 to 512.

OCR-B Chars.

Character weight adjustment of resident OCR-B characters.

The factory default is 304 and the range is from 0 to 512.

Tall Characters

Increases the point height of resident Intellifont characters.

- **Enable.** Increases the point height of resident Intellifont characters approximately 10%.
- **Disable** (factory default). Standard resident font character point height is maintained.

Batch Counter

Displays the number of pages remaining in a print job.

- **Disable** (factory default). The # Pages remaining to be printed will not display. Instead, the Active emulation and interface will display on the second line of the control panel LCD.
- **Enable**. The # Pages remaining to be printed will display on the second line of the control panel LCD. This feature is supported in PGL and ZGL only. The PGL Execute command and parameters that support this feature is ~EXECUTE;formname;[:FC][:ICNTn][:FCNTn]. The ZGL Execute command is ^PQ(#Pages).

NOTE: If the correct execute command is absent from the print file, "0 Pages" will continually display on the control panel LCD.

Feed Key Online

This option changes the functionality of the Feed key when the printer is online.

- **Feed** (factory default). When selected, pressing the Feed key causes the printer to feed a form.
- **Reprint Last**. When selected, pressing the Feed key causes the printer to reprint the last printed form.

Admin User

- **Disable** (factory default). When disabled this function does not permit access to submenus which would not normally be changed by a typical user.
- **Enable**. When enabled, this function permits access to submenus which would not normally be changed by a typical user.

EMULATIONS

Overview

This section covers the following emulations:

- Coax (page 153)
- Twinax (page 156)
- SPC Coax (page 158)
- SPC Twinax (page 159)
- IPDS (page 160)
- TN3270 (page 164)
- TN5250 (page 166)
- PGL (page 168)
- VGL (page 170)
- ZGL (Refer to the *ZGL Programmer's Reference Manual*.)
- TGL (Refer to the *TGL Programmer's Reference Manual*.)
- IGL (Refer to the *IGL Programmer's Reference Manual*.)
- STGL (Refer to the *STGL Programmer's Reference Manual*.)
- DGL (Refer to the *DGL Programmer's Reference Manual*.)
- MGL (Refer to the *MGL Programmer's Reference Manual*.)
- IEGL (Refer to the *IEGL Programmer's Reference Manual*.)
- P-Series (page 172)
- P-Series XQ (page 174)
- Serial Matrix (page 176)
- Proprinter XL (page 178)
- Epson FX (page 180)

You can select emulation default parameters directly from the control panel, or by control codes as explained in the appropriate Programmer's Reference Manual.

IMPORTANT **BEFORE you reconfigure an emulation, print a configuration sheet to see all current settings.**

Standard C/T Interface

With a standard coax interface, the printer emulates the following IBM coax printer models:

- 3287 Models 1 and 2
- 4234 Models 1

With a standard twinax interface, the printer emulates the following IBM twinax printer models:

- 4234 Model 2
- 5225 Models 1, 2, 3, and 4

NOTE: The standard Coax/Twinax emulation selection will only be available if coax or twinax is selected from the C/T PORT menu.

For more information, refer to the *Coax/Twinax Programmer's Reference Manual*.

Simple Protocol Converter

The Simple Protocol Converter (SPC) option allows those who use third party add-on coax or twinax protocol converters to produce the same output on a Printronix thermal printer with the Coax/Twinax (CTHI) capability as done using a non-CT printer with the third party converter interfaces.

The SPC gives the printer the operational ability to connect to any PC or network system supporting parallel or serial interfaces and to three different IBM host systems:

- System 3x
- AS/400
- 327X Control Units

The SPC will support the following third party models for Twinax: MODE 219, MODE IBM, and MODE P5000.

The printer emulations supported by the SPC are Twinax 5225 and Coax 3287. The SPC also provides a range of interfaces available in your thermal printer: Centronics, Serial, Coax, and Twinax. Also supported are Epson, Proprinter XL, P-Series, Serial Matrix, VGL, and PGL emulations.

The SPC has the ability to handle multiple print jobs concurrently through coax/twinax and parallel and serial interfaces. This is accomplished through the Auto Switching feature. Because of hardware restrictions, coax and twinax cannot be selected together.

PGL

The PGL emulation is the software based Printronix Graphics Language (PGL) for the Printronix thermal printer family. It is based upon, and compatible with, the IGP-100/200/400 board. It includes the following features:

On-Line Form and Label Generation makes it easy to create forms or labels with a “preprinted” look for each application. PGL programs control all graphic functions, dramatically reducing host computer programming and processing time.

Graphic capabilities include boxes, vertical and horizontal lines with user-selectable thickness, logos, and special alphanumeric print features. Forms and graphic designs can be duplicated horizontally and vertically.

Alphanumeric data can appear as prepositioned “fixed” information (entered when the form is created), be overlayed onto the form (positioned in a specific location after the form is created), or may be dynamically merged with the form.

Selectable Bar Codes provide you with the appropriate bar code for your application using standard wide-to-narrow ratios. A wide selection of bar codes are available: Code 39, Interleaved 2 of 5, UPC-A, UPC-E, MSI A through D, Code 128 Subset A, B, and C, EAN/UCC-128, EAN 8, EAN 13, POSTNET, PostBar, USPS Intelligent Mail, Royal Mail, and PDF417. UPC and EAN bar codes can specify add-on data.

Expanded and Compressed Character Print attract attention where needed. Alphanumeric height and width are controlled independently for a wide range of character sizes up to 113 times the standard character size (up to 11.3 inches wide and tall). Compressed print sizes of 12, 13, 15, and 17 characters per inch (cpi) are available.

Logos are created using alphanumeric commands and add many print and shading features for a “customized” appearance to forms, reports, and labels.

Rotated Alphanumerics permit new concepts in form design. Normal, expanded, and compressed character strings can be rotated 90 degrees clockwise or counterclockwise, or they can be printed upside down.

Reversed Print permits highlighting and contrasting by printing white characters on a dark background.

Automatic Increment/Decrement Capability allows batch form processing. You can identify individual numeric and bar code data fields, which includes automatic increment or decrement functions.

Scaling Capability permits graphic elements, such as corners or boxes, to retain their physical shapes and sizes when printed in a horizontal and vertical density other than the base density of 60 x 72 dpi.

Multinational Character Sets provide 32 international character sets, each 96 characters in length. This feature also allows you to create your own character sets using characters defined and stored in memory.

Extended Character Sets provide 33 extended character sets, also containing 96 characters in length. These are also stored in memory.

VGL

The VGL Graphics language is a software emulation designed for the thermal printer. The VGL emulation of the QMS Code V Version II programming language produces on-line forms, bar codes, and alphanumeric text generation. It includes the following features:

On-Line Form and Label Generation makes it easy to create forms or labels with the “preprinted” look for each application. VGL programs control all graphics functions, dramatically reducing host computer programming and processing time. Graphics capabilities include boxes, vertical and horizontal, solid and dashed lines with a variety of thickness, logos, and special alphanumeric print features.

Variable Bar Codes allow the bar code for your application to print with standard or user-defined ratios in vertical or horizontal orientations. Available bar codes are: Codabar, Code 39, Code 93, Code 128 with Subsets A, B, and C, and Code EAN/UCC 128, EAN 8, EAN 13, Interleaved 2 of 5, MSI, UPC-A, UPC-E, POSTNET, PostBar, USPS Intelligent Mail, Royal Mail, and UPC Shipping. POSTNET is available only in the horizontal direction. A dark print mode is included for darker, high-contrast bar codes. The IBARC bar code command prints bar codes in four orientations: horizontal, rotated 90, rotated 180, or rotated 270 degrees.

Expanded and Compressed Print draws attention where needed. Alphanumeric height and width are controlled independently for a tremendous range of character sizes up to 9.9 inches wide and tall. Several compressed print sizes are available: 12, 13.33, 15, 17.65, and 20 cpi (characters per inch), permitting up to 170 columns in an 8.5 inch printed area (20 cpi).

Rotated Alphanumerics permit new concepts in form design. Normal, expanded, and compressed character strings can be rotated 90 degrees clockwise, counterclockwise, or printed upside down.

Logos are easily created using alphanumeric commands and a variety of print and shading features, providing a “customized” appearance for forms, reports, and labels. The registered trademark, copyright, TUV, GS-Mark, UL, and CSA symbols are provided as standard designs on the VGL, and you can also define custom symbols.

Reverse and Shaded Print permit highlighting and contrasting by printing white characters on a dark background or white characters on a gray, shaded background. Various levels or patterns of gray shading and reverse printing may combine with the many other print features to create distinctive designs.


Automatic Increment/Decrement Capability allows batch form processing. Individual alphabetic, numeric, and bar code data fields can be identified and automatically incremented or decremented by any amount, beginning from a specified reference point.

Standard Character Sets provide you with many different character sets. Based on the Multinational Character Set, you may create your own character sets using characters defined and stored in flash memory.

P-Series, P-Ser XQ, Ser Matrix, Proprietary, and Epson FX

These menus are available only when you enable Admin User (under the PRINTER CONTROL menu).

COAX SETUP

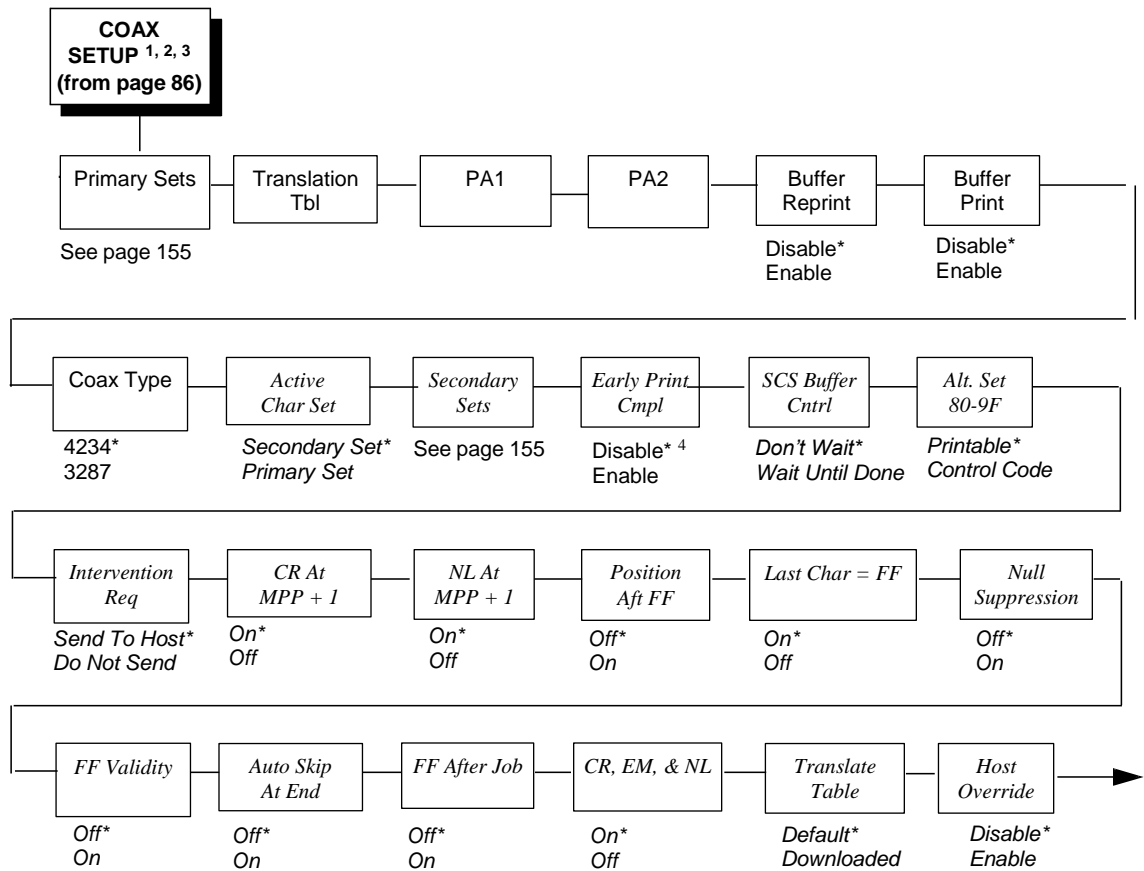

Notes:

* = Factory Default


Italicized items are available only when you enable Admin User (in the PRINTER CONTROL menu).

¹ This menu appears only if the CTHI option is installed.

² This menu appears only if Port Type (under C/T PORT) is set to Coax.

³ This menu appears only if the CTHI emulation (under PRINTER CONTROL) is set to Standard.

⁴ When in SPC Mode, the default is Enable.

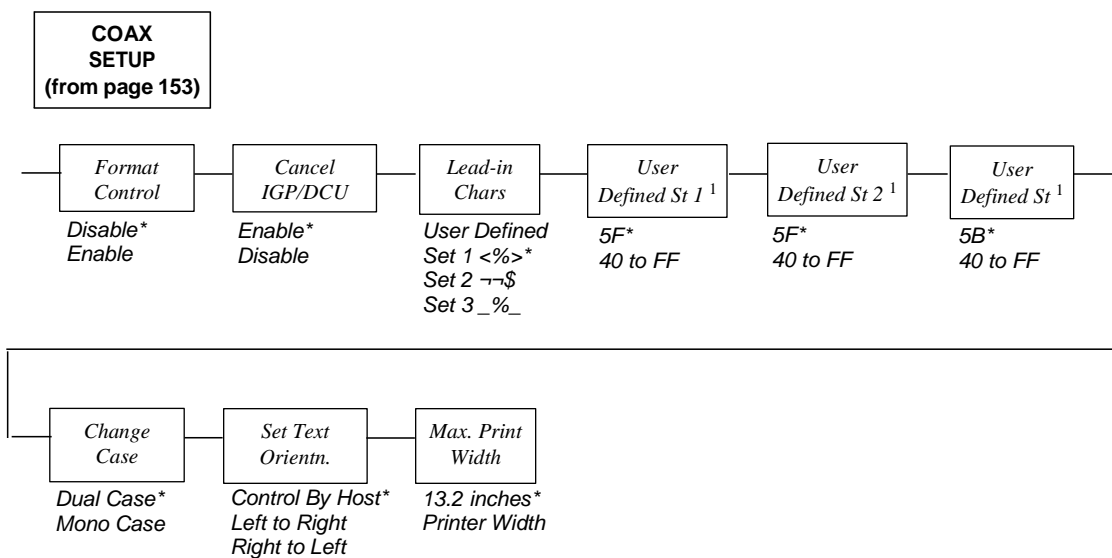

Notes:

* = Factory Default

Italicized items are available only when you enable Admin User (in the PRINTER CONTROL menu).

¹ This menu appears only if you select the "User Defined" option in the "Lead-in Chars" menu.

Coax Setup - Primary Sets and Secondary Sets

COAX SETUP (from page 153)

Primary Sets

0037 English US*
0037 Eng Nether
0285 English UK
0273 Austr/Germ
0274 Belg. Old
0275 Brazilian
0260 Canad Fren
0277 Danish
0287 Danish Alt
0278 Finnish
0288 Finn. Alt
0297 French
0500 Internat 5
0280 Italian
0281 Japan. Eng
0282 Portuguese
0284 Span Speak
0289 Span. Alt
0500 Swiss Bil
0500 Belg. New
0803 Hebrew Old
0424 Hebrew
0892 OCR A
0893 OCR B
0420 Arabic
0880 Cyril. Old
0423 Greek Old
875 Gr New Euro
0871 Icelandic
0290 Japan Kata
0870 Latin 2
0838 Thai
1026 Turkish
0890 Yugos. Old
1097 Farsi
1025 Cyrillic
0905 Turk. Old
0256 Intern. 1
0924 Euro Lat-9
1140 Euro Eng.
1141 Euro Aust.
1142 Euro Dan.
1143 Euro Finn.
1144 Euro Ital.
1145 Euro Span.
1146 Euro UK
1147 Euro Fren.
1148 Euro Swiss
1149 Euro Ice.

Secondary Sets


English US*
English UK
Austrian/German
German (Alt)
Belgian
Brazilian
Canadian French
Danish/Norweg.
Danish (Alt)
Finnish/Swedish
Finnish (Alt)
French
International
Italian
Japanese Eng.
Japanese Katak.
Portuguese
Portug. (Alt)
Spanish
Spanish (Alt)
Spanish Speak.
Swiss Fren/Ger
Old Hebrew
Hebrew
Farsi/Latin
Greek Old
Greek New
Arabic
Turkish
Turkish Old
Latin 2/ROECE
Yugoslavian

Notes:

* = Factory Default

Although these options are listed vertically here, use your plus (+) and minus (-) keys to cycle through the options when you are operating your printer.

TWINAX SETUP

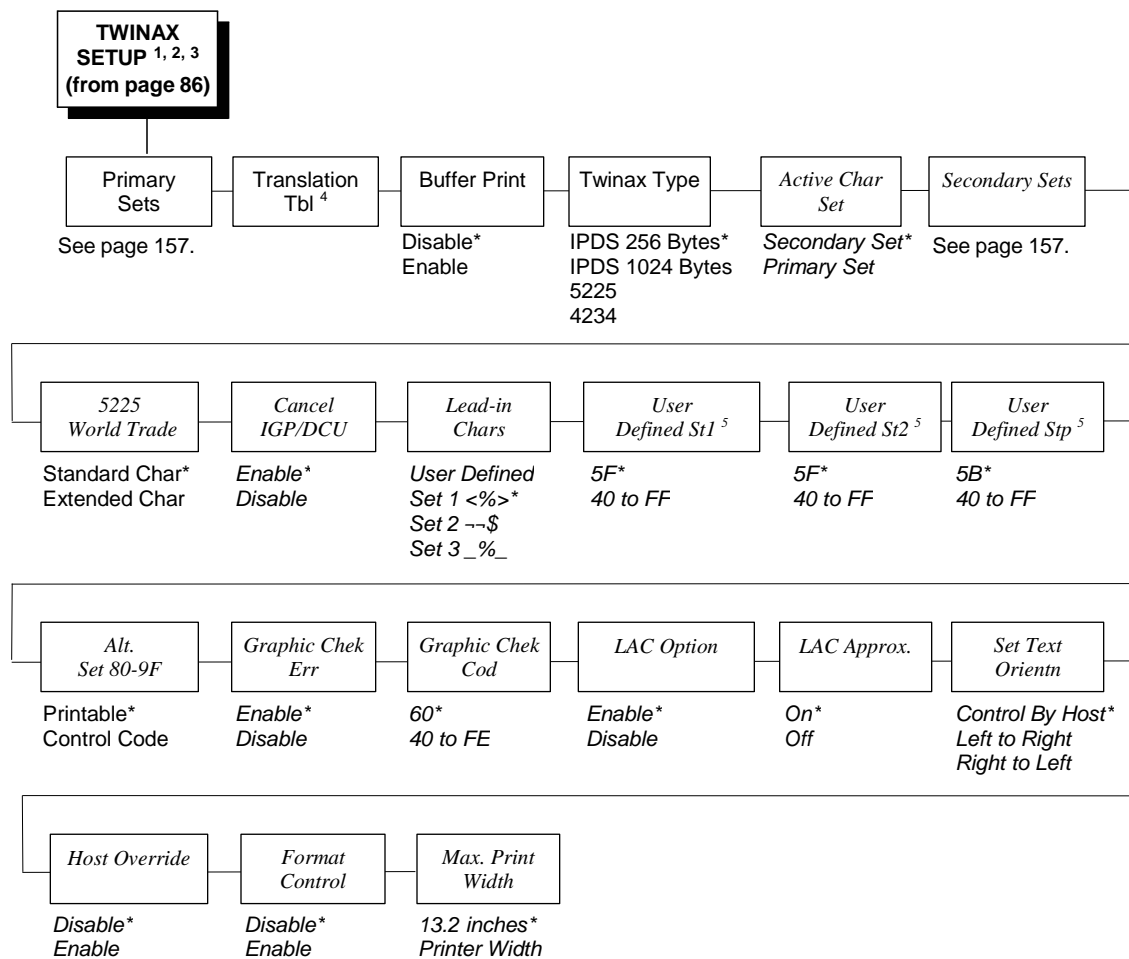

Notes:

* = Factory Default

Italicized items are available only when you enable Admin User (in the PRINTER CONTROL menu).

¹ This menu appears only if the CTHI option is installed.

² This menu appears only if Port Type (under C/T PORT) is set to Twinax.

³ This menu appears only if the CTHI emulation (under PRINTER CONTROL) is set to Standard.

⁴ This menu does not appear if the IPDS emulation is installed.

⁵ This menu appears only if you select the "User Defined" option in the "Lead-in Chars" menu.

Twinax Setup - Primary Sets and Secondary Sets

**TWINAX
SETUP**
(from page 156)

Primary Sets

0037 English US*
0037 Eng Nether
0500 Swiss Bil
0500 Belg. New
0273 Austr/Germ
0274 Belg. Old
0275 Brazilian
0260 Canad Fren
0277 Danish
0278 Finnish
0297 French
0280 Italian
0281 Japan. Eng
0282 Portuguese
0284 Span Speak
0285 English UK
0892 OCR A
0893 OCR B
0424 Hebrew
0803 Hebrew Old
0420 Arabic
0880 Cyril. Old
0423 Greek Old
875 Gr New Euro
0871 Icelandic
0290 Japan Kata
0870 Latin 2
0838 Thai
1026 Turkish
0890 Yugos. Old
1097 Farsi
1025 Cyrillic
0256 Intern. 1
1112 Balt Mult
0924 Euro Lat-9
1122 Estonian
1140 Euro Eng.
1141 Euro Aust.
1142 Euro Dan.
1143 Euro Finn.
1144 Euro Ital.
1145 Euro Span.
1146 Euro UK
1147 Euro Fren.
1148 Euro Swiss
1149 Euro Ice.
0500 Internat 5

Secondary
Sets


English US*
Austrian/German
Belgian
Brazilian
Canadian French
Danish/Norweg.
Finnish/Swedish
French
Italian
Japanese Eng.
Japanese Katak.
Portuguese
Spanish
Spanish Speak.
English UK
Old Hebrew
Hebrew
Farsi/Latin
Greek Old
Greek New
Arabic
Turkish
Latin 2/ROECE
Yugoslavian
Multinational

Notes:

* = Factory Default

Although these options are listed vertically here, use your plus (+) and minus (-) keys to cycle through the options when you are operating your printer.

SPC COAX SETUP

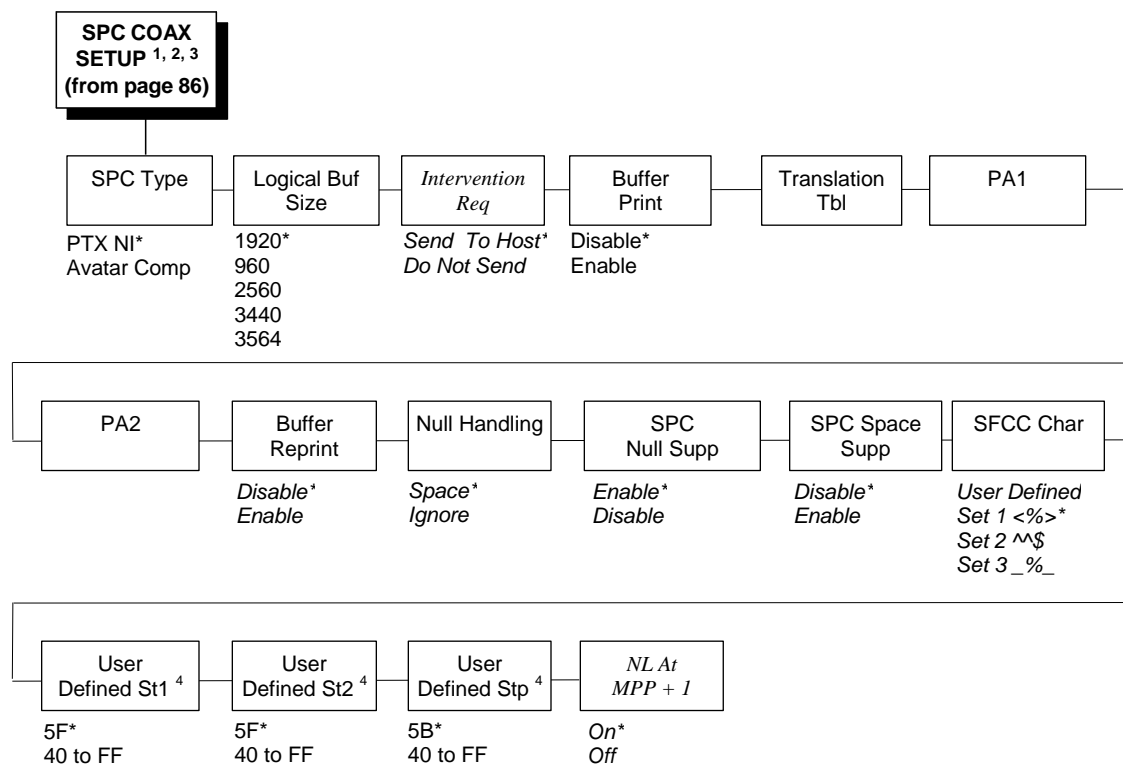

Notes:

* = Factory Default

Italicized items are available only when you enable Admin User (in the PRINTER CONTROL menu).


¹ This menu appears only if the CTHI option is installed.

² This menu appears only if Port Type (under C/T PORT) is set to Coax.

³ Appears only if CTHI emulation (under PRINTER CONTROL) is set to Simp Prot Conv.

⁴ This menu appears only if you select the "User Defined" option in the "Lead-in Chars" menu.

SPC TWINAX SETUP

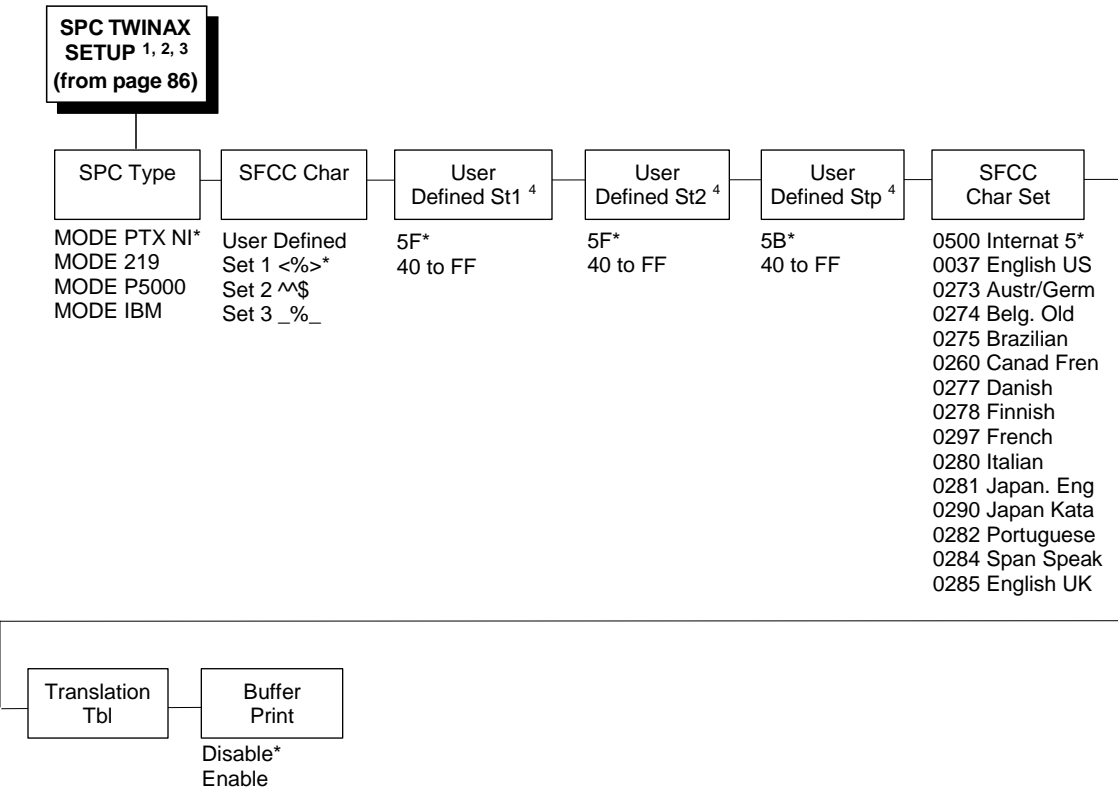

Notes:

* = Factory Default


¹ This menu appears only if the CTHI option is installed.

² This menu appears only if Port Type (under C/T PORT) is set to Twinax.

³ Appears only if CTHI emulation (under PRINTER CONTROL) is set to Simp Prot Conv.

⁴ This menu appears only if you select the "User Defined" option in the "Lead-in Chars" menu.

IPDS SETUP

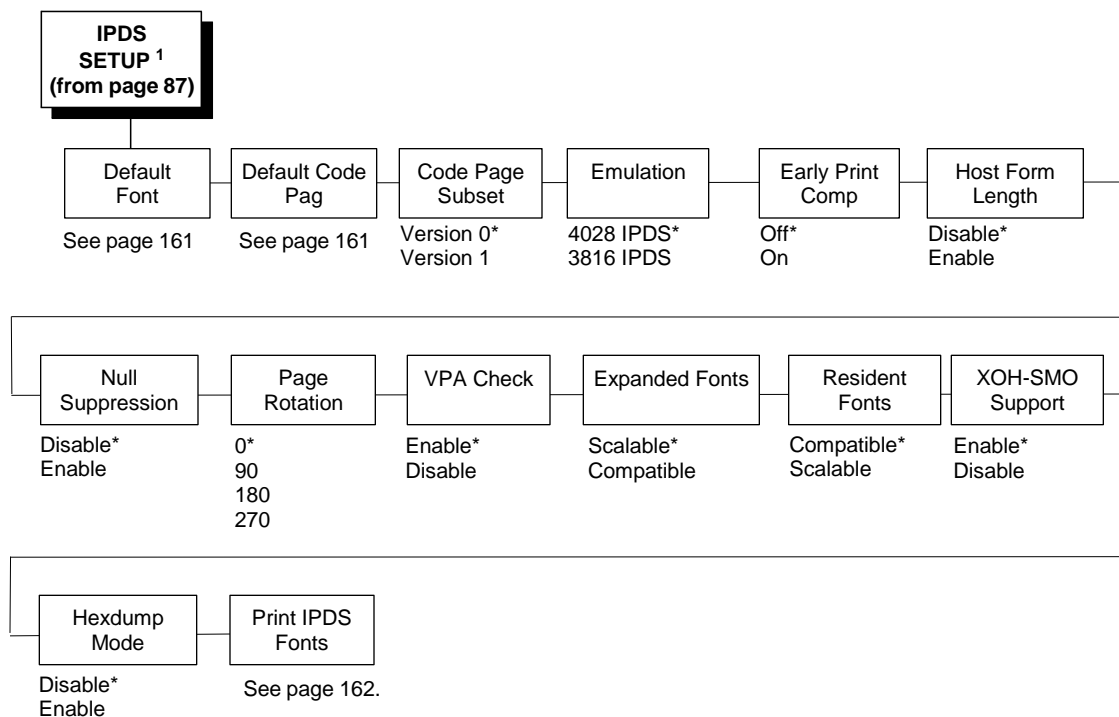

Notes:

* = Factory Default

¹ This menu appears only if the IPDS emulation and correct security key is installed.

IPDS Setup – Default Font and Default Code Pag

IPDS SETUP (from page 160)

Default Font ¹	Default Code Pag ²
Courier 10*	English/USA/Can*
Prestige 10	English/US/Intl
Courier it 10	Internat. Set 1
OCRA	Symbols Set 7
APL 12	Canadian/French
Courier 12	Austrian/German
Prestige 12	Belgian Old
Courier it 12	Brazilian
Prestige it 12	Canada (French)
Boldface PSM	Danish/Norw.
Courier 15	Finnish/Swedish
Courier 17.1	Italian
Gothic 20	Japanese Eng.
Times Roman 6	Portuguese
Times Roman 8	Spanish Speak.
Times Roman 10	English (UK)
Times Roman 12	Aust/Germ. (ALT)
Times Roman B10	Dan/Norw. (ALT)
Times Roman B12	Fin/Swed. (ALT)
Times Roman B14	Spanish (ALT)
Times Roman B18	Katakana
Times Roman B24	French Azerty
Times Roman I10	Graphic Escape
Times Roman I12	Int. Typographic
Times Roman BI10	Arabic
Times Roman BI12	Greek
OCRB	Hebrew
	PC
	Internat. Set 5
	Hebrew ALT
	PC-Multilingual
	Latin 2/ROECE
	Icelandic
	Cyrillic Old
	OCR A
	OCR B
	DCF
	US Text Subset
	Turkish Latin 5
	Euro US/Can.
	Euro Aust/Germ.
	Euro Dan/Norw.
	Euro Fin/Swed.
	Euro Italian
	Euro Spanish
	Euro UK/Ireland
	Euro French
	Euro Internat.
	Euro Icelandic

Notes:

* = Factory Default

Although these options are listed vertically here, use your plus (+) and minus (-) keys to cycle through the options when you are operating your printer.

¹ Refer to page 195 for a more detailed description of this submenu.

² Refer to page 195 for a more detailed description of this submenu.

IPDS Setup - Print IPDS Fonts

This feature allows you to print a list of all resident fonts currently available in the active IPDS emulation (4028 or 3816).

T5308 Resident IPDS Fonts 4028 Emulation					
FONT STYLE	FGID Hex Dec	FONT WIDTH	CPI	PT SIZE	PRINTSAMPLE
OCR B	0003 3	144	10		ABCDEFGHIJabcdefghij0123456789
Courier	000b 11	144	10		ABCDEFGHIJabcdefghij0123456789
Prestige Pica	000c 12	144	10		ABCDEFGHIJabcdefghij0123456789
Courier Italic	0012 18	144	10		ABCDEFGHIJabcdefghij0123456789
OCR A	0013 19	144	10		ABCDEFGHIJabcdefghij0123456789
Courier Bold	002e 46	144	10		ABCDEFGHIJabcdefghij0123456789
APL	004c 76	120	12		ABCDEFGHIJabcdefghij0123456789
Courier	0055 85	120	12		ABCDEFGHIJabcdefghij0123456789
Prestige Elite	0056 86	120	12		ABCDEFGHIJabcdefghij0123456789
Courier Italic	005c 92	120	12		ABCDEFGHIJabcdefghij0123456789
Prestige Elite Bold	006f 111	120	12		ABCDEFGHIJabcdefghij0123456789
Prestige Elite Italics	0070 112	120	12		ABCDEFGHIJabcdefghij0123456789
Document PSM	009f 159	120	PS		ABCDEFGHIJabcdefghij0123456789
Prestige PSM	00a4 164	120	PS		ABCDEFGHIJabcdefghij0123456789
Prestige elite	00dd 221	96	15		ABCDEFGHIJabcdefghij0123456789
Courier	00df 223	96	15		ABCDEFGHIJabcdefghij0123456789
Courier	00fe 254	84	17.1		ABCDEFGHIJabcdefghij0123456789
Prestige Elite	0100 256	84	17.1		ABCDEFGHIJabcdefghij0123456789
Gothic Text	0119 281	72	20		ABCDEFGHIJabcdefghij0123456789
Letter Gothic Bold	0194 404		SC		ABCDEFGHIJabcdefghij0123456789
Courier Bold	01a4 420		SC		ABCDEFGHIJabcdefghij0123456789
Times Roman	1637 5687	40	TYPO	6	ABCDEFGHIJabcdefghij0123456789
Times Roman	1637 5687	53	TYPO	8	ABCDEFGHIJabcdefghij0123456789
Times Roman	1637 5687	67	TYPO	10	ABCDEFGHIJabcdefghij0123456789
Times Roman	1637 5687	80	TYPO	12	ABCDEFGHIJabcdefghij0123456789
Times Roman Bold	164b 5707	67	TYPO	10	ABCDEFGHIJabcdefghij0123456789
Times Roman Bold	164b 5707	80	TYPO	12	ABCDEFGHIJabcdefghij0123456789
Times Roman Bold	164b 5707	93	TYPO	14	ABCDEFGHIJabcdefghij0123456789
Times Roman Bold	164b 5707	120	TYPO	18	ABCDEFGHIJabcdefghij0123456789
Times Roman Bold	164b 5707	160	TYPO	24	ABCDEFGHIJabcdefghij0123456789
Times Roman Italic	16b7 5815	67	TYPO	10	ABCDEFGHIJabcdefghij0123456789
Times Roman Italic	16b7 5815	80	TYPO	12	ABCDEFGHIJabcdefghij0123456789
Times Roman Bold Ital.	16cb 5835	67	TYPO	10	ABCDEFGHIJabcdefghij0123456789
Times Roman Bold Ital.	16cb 5835	80	TYPO	12	ABCDEFGHIJabcdefghij0123456789
32 Resident Bitmap Fonts			TYPO = Typographic		
2 Scalable Fonts			PS = Proportionally Spaced		
			SC = Scalable		
NOTE: The Scalable fonts are currently rendered at 12 points. They are scalable to any integer point size.					

Figure 3. IPDS Fonts - 4028 Emulation Sample Printout

IPDS Setup - Print IPDS Fonts (cont.)

T5308 Resident IPDS Fonts 3816 Emulation						
FONT STYLE	FGID		FONT WIDTH	CPI	PT SIZE	PRINTSAMPLE
	Hex	Dec				
OCR B	0003	3	144	10		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Orator	0005	5	144	10		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Courier	000b	11	144	10		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Prestige Pica	000c	12	144	10		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Courier Italic	0012	18	144	10		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
OCR A	0013	19	144	10		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Arabic Kateb	0021	33	144	10		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Gothic Text	0028	40	144	10		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Katakana Gothic	002c	44	144	10		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Gothic Text	0042	66	120	12		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Gothic Text Italic	0044	68	120	12		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Script	0054	84	120	12		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Courier	0055	85	120	12		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Prestige Elite	0056	86	120	12		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Letter Gothic	0057	87	120	12		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Prestige Italic	0070	112	120	12		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Boldface Italic PSM	009b	155	120	PS		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Essay PSM	00a0	160	120	PS		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Essay Italic PSM	00a2	162	120	PS		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Arabic Yasmin PSM	00a6	166	120	PS		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Arabic Expanded PSM	00a9	169	120	PS		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Essay Light PSM	00ad	173	120	PS		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Document PSM	00af	175	120	PS		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Gothic Text	00cc	204	108	13		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Serif Text	00e5	229	96	15		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Gothic Text	00e6	230	96	15		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Courier	00f4	244	288	5		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Courier	00fc	252	84	17		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Courier Super/Subscr.	00fe	254	84	17		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Arabic Kateb	0109	265	180	8		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Gothic Text	0119	281	72	20		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Gothic Text	0122	290	54	27		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Letter Gothic Bold	0194	404		SC		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Courier Bold	01a4	420		SC		ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Sonoran Serif	1137	4407	54	TYPO	8	ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Sonoran Serif	1137	4407	66	TYPO	10	ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Sonoran Serif	1137	4407	78	TYPO	12	ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Sonoran Serif Bold	114b	4427	66	TYPO	10	ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Sonoran Serif Bold	114b	4427	108	TYPO	12	ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Sonoran Serif Bold	114b	4427	162	TYPO	24	ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789
Sonoran Serif Italic	11b7	4535	66	TYPO	10	ABCDEFGHIJKLMNOPQRSTUVWXYZ0123456789


39 Resident Bitmap Fonts
2 Scalable Fonts

TYPO = Typographic
PS = Proportionally Spaced
SC = Scalable

NOTE: The Scalable fonts are currently rendered at 12 points.
They are scalable to any integer point size.

Figure 4. IPDS Fonts - 3816 Emulation Sample Printout

TN3270 SETUP

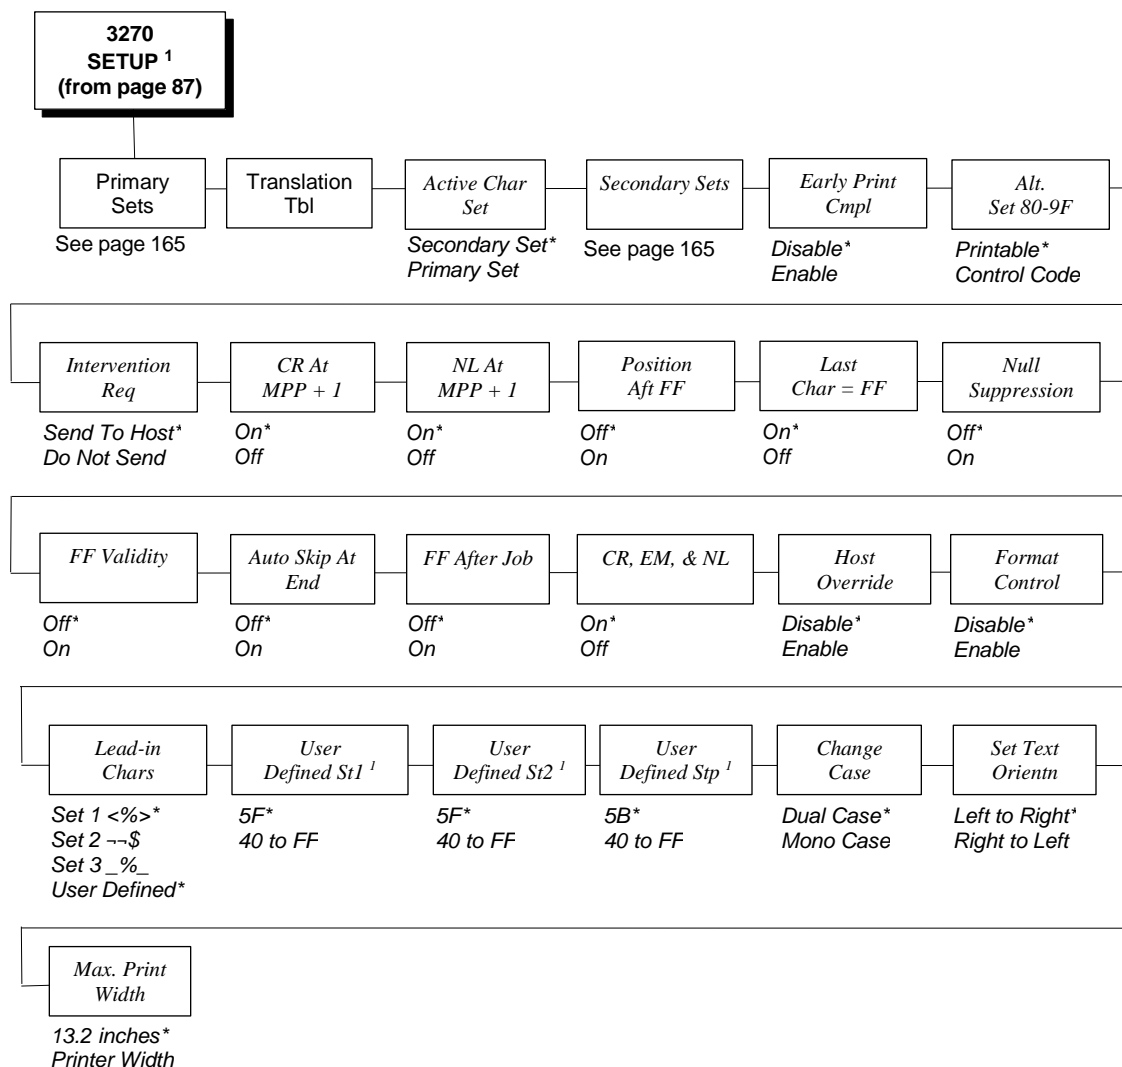

Notes:

* = Factory Default

Italicized items are available only when you enable Admin User (in the PRINTER CONTROL menu).

¹ This menu appears only if the TN5250/TN3270 option and the correct security key is installed.

TN3270 Setup – Primary and Secondary Sets

3270 SETUP (from page 164)

Primary Sets

0037 English US*
0037 Eng Nether
0285 English UK
0273 Austr/Germ
0274 Belg. Old
0275 Brazilian
0260 Canad Fren
0277 Danish
0287 Danish Alt
0278 Finnish
0288 Finn. Alt
0297 French
0500 Internat 5
0280 Italian
0281 Japan. Eng
0282 Portuguese
0284 Span Speak
0289 Span. Alt
0500 Swiss Bil
0500 Belg. New
0803 Hebrew Old
0424 Hebrew
0892 OCR A
0893 OCR B
0420 Arabic
0880 Cyril. Old
0423 Greek Old
875 Gr New Euro
0871 Icelandic
0290 Japan Kata
0870 Latin 2
0838 Thai
1026 Turkish
0890 Yugos. Old
1097 Farsi
1025 Cyrillic
0905 Turk. Old
0256 Intern. 1
0924 Euro Lat-9
1140 Euro Eng.
1141 Euro Aust.
1142 Euro Dan.
1143 Euro Finn.
1144 Euro Ital.
1145 Euro Span.
1146 Euro UK
1147 Euro Fren.
1148 Euro Swiss
1149 Euro Ice.

Secondary Sets


English US*
English UK
Austrian/German
German (Alt)
Belgian
Brazilian
Canadian French
Danish/Norweg.
Danish (Alt)
Finnish/Swedish
Finnish (Alt)
French
International
Italian
Japanese Eng.
Japanese Katak.
Portuguese
Portug. (Alt)
Spanish
Spanish (Alt)
Spanish Speak.
Swiss Fren/Ger
Old Hebrew
Hebrew
Farsi/Latin
Greek Old
Greek New
Arabic
Turkish
Turkish Old
Latin 2/ROECE
Yugoslavian

Notes:

* = Factory Default

Although these options are listed vertically here, use your plus (+) and minus (-) keys to cycle through the options when you are operating your printer.

TN5250 SETUP

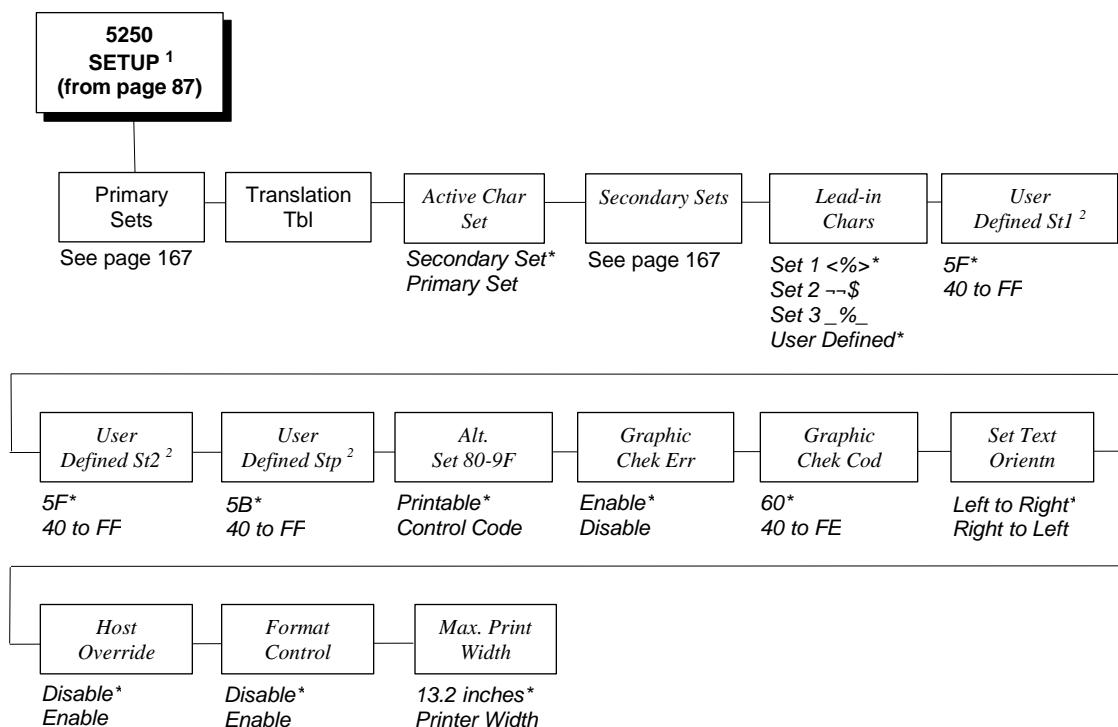

Notes:

* = Factory Default

Italicized items are available only when you enable Admin User (in the PRINTER CONTROL menu).

¹ This menu appears only if the TN5250/TN3270 option and the correct security key is installed.

² This menu appears only if you select the "User Defined" option in the "Lead-in Chars" menu.

TN5250 Setup – Primary and Secondary Sets

5250 SETUP (from page 166)

Primary Sets

0037 English US*
0037 Eng Nether
0500 Swiss Bil
0500 Belg. New
0273 Austr/Germ
0274 Belg. Old
0275 Brazilian
0260 Canad Fren
0277 Danish
0278 Finnish
0297 French
0280 Italian
0281 Japan. Eng
0282 Portuguese
0284 Span Speak
0285 English UK
0892 OCR A
0893 OCR B
0424 Hebrew
0803 Hebrew Old
0420 Arabic
0880 Cyril. Old
0423 Greek Old
875 Gr New Euro
0871 Icelandic
0290 Japan Kata
0870 Latin 2
0838 Thai
1026 Turkish
0890 Yugos. Old
1097 Farsi
1025 Cyrillic
0256 Intern. 1
1112 Balt Mult
0924 Euro Lat-9
1122 Estonian
1140 Euro Eng.
1141 Euro Aust.
1142 Euro Dan.
1143 Euro Finn.
1144 Euro Ital.
1145 Euro Span.
1146 Euro UK
1147 Euro Fren.
1148 Euro Swiss
1149 Euro Ice.
0500 Internat 5

Secondary Sets


English US*
Austrian/German
Belgian
Brazilian
Canadian French
Danish/Norweg.
Finnish/Swedish
French
Italian
Japanese Eng.
Japanese Katak.
Portuguese
Spanish
Spanish Speak.
English UK
Old Hebrew
Hebrew
Farsi/Latin
Greek Old
Greek New
Arabic
Turkish
Latin 2/ROECE
Yugoslavian
Multinational

Notes:

* = Factory Default

Although these options are listed vertically here, use your plus (+) and minus (-) keys to cycle through the options when you are operating your printer.

PGL SETUP

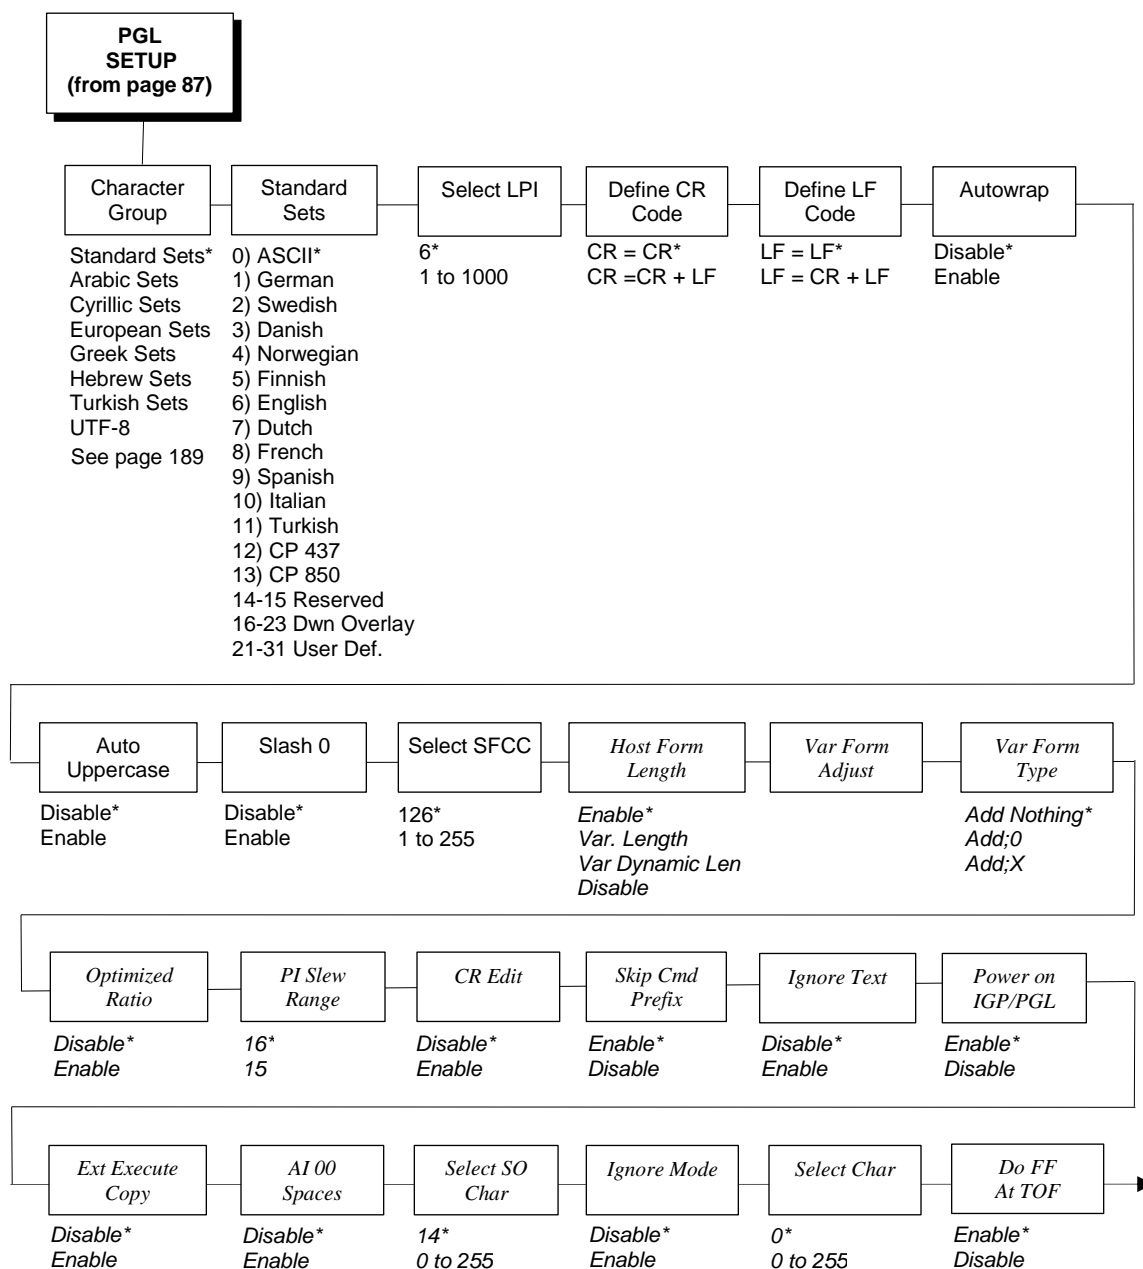


Notes:

* = Factory Default

Italicized items are available only when you enable Admin User (in the PRINTER CONTROL menu).

**PGL
SETUP**
(from page 168)

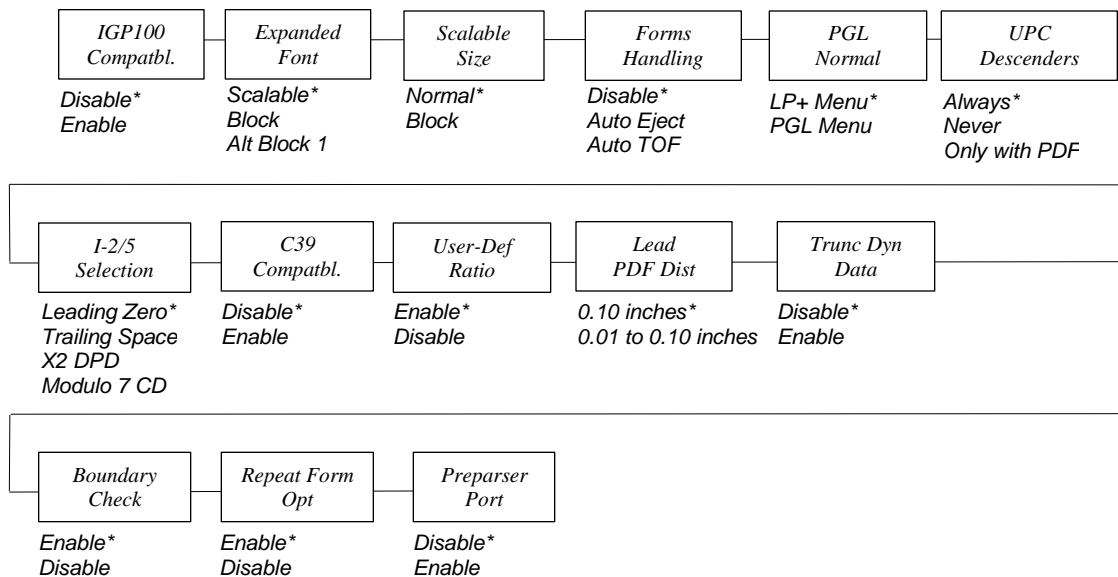


Notes:

* = Factory Default


Italicized items are available only when you enable Admin User
(in the PRINTER CONTROL menu).

VGL SETUP

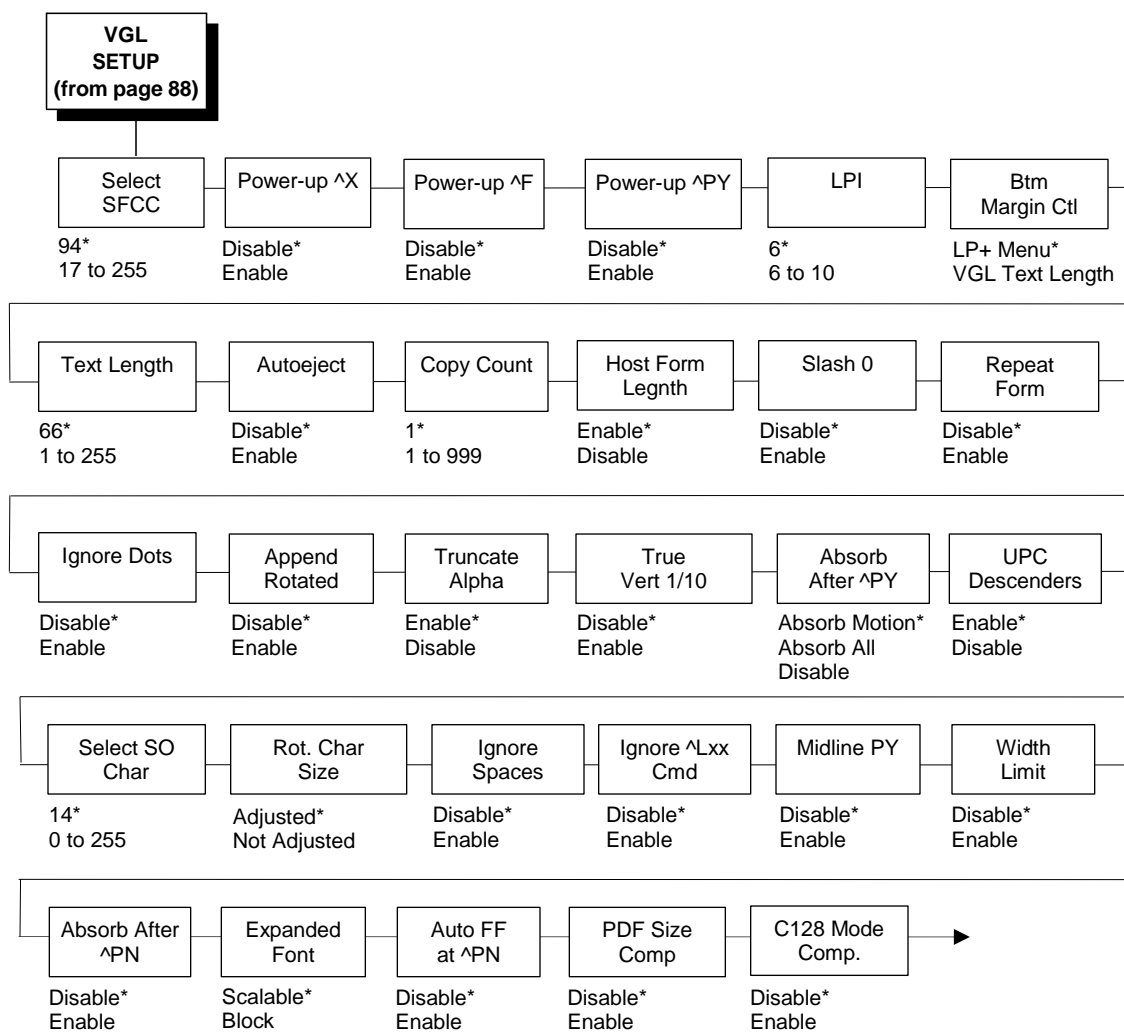

Notes:


* = Factory Default

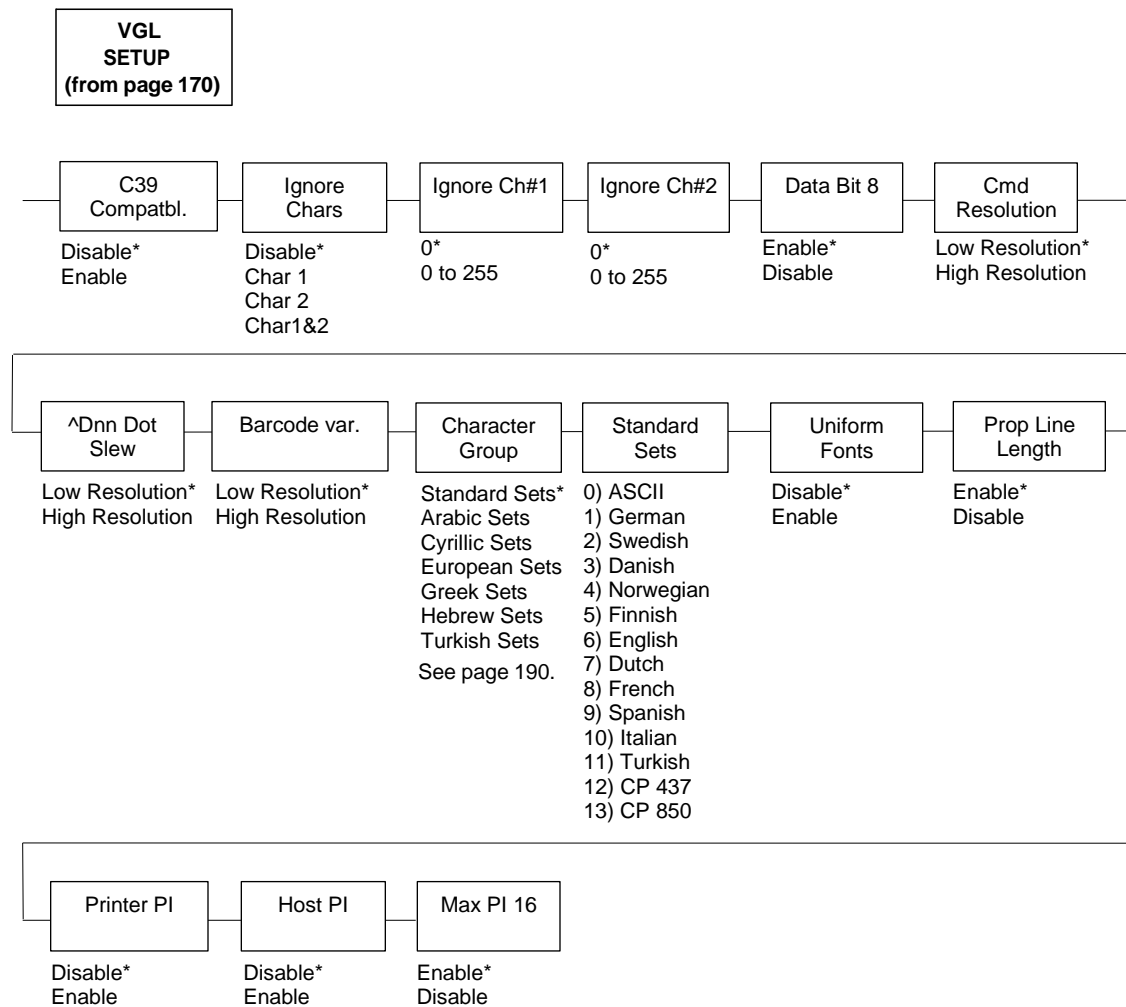

Notes:

* = Factory Default

P-SERIES SETUP

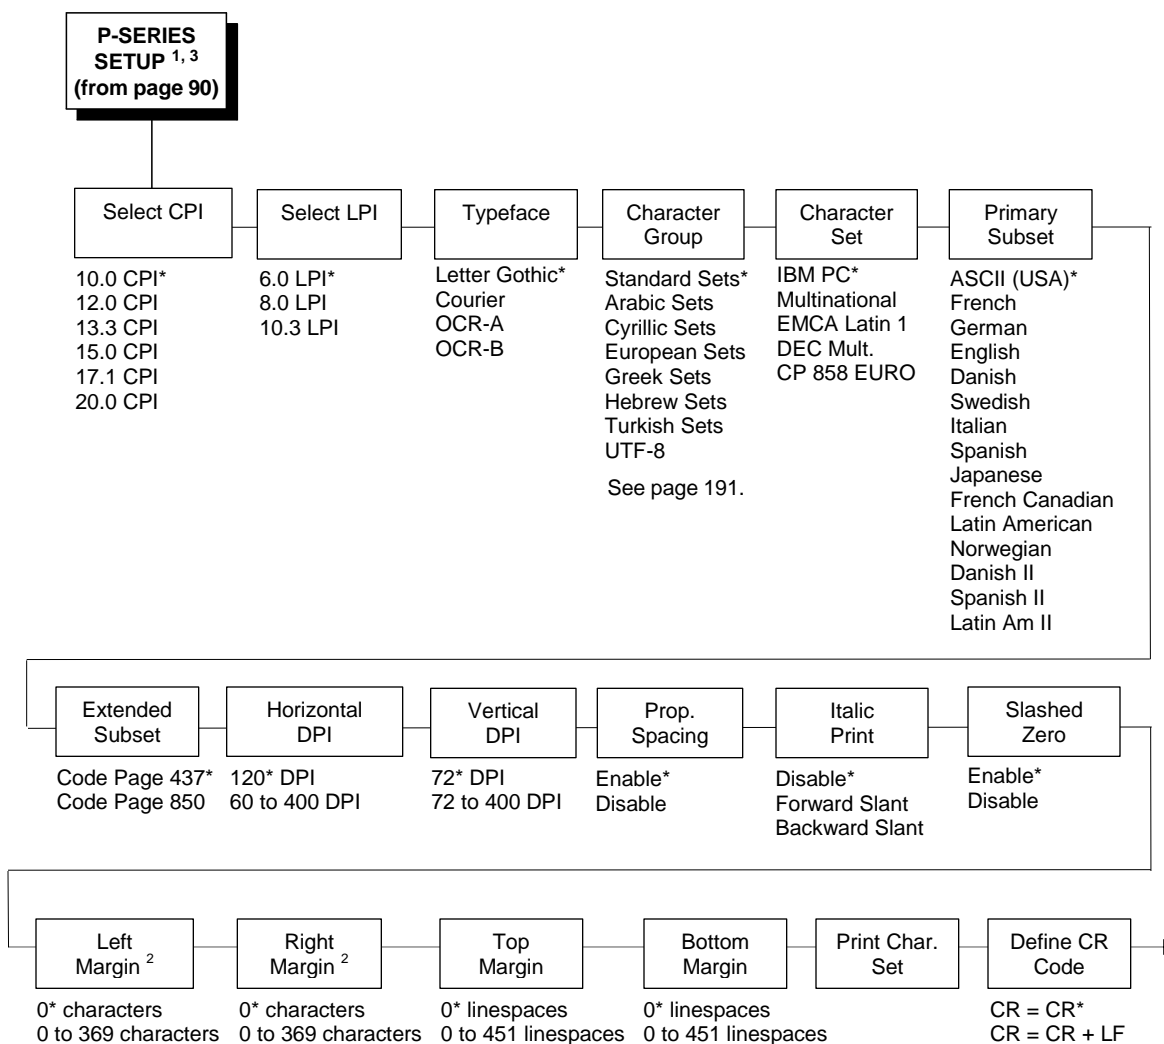


Notes:

* = Factory Default

¹ This menu is available only when you enable Admin User (under PRINTER CONTROL).

² This menu does not appear when the CT, TN5250, or TN3270 emulation is selected.

³ This menu appears only if the emulation is selected in the LP+ Emulation submenu.

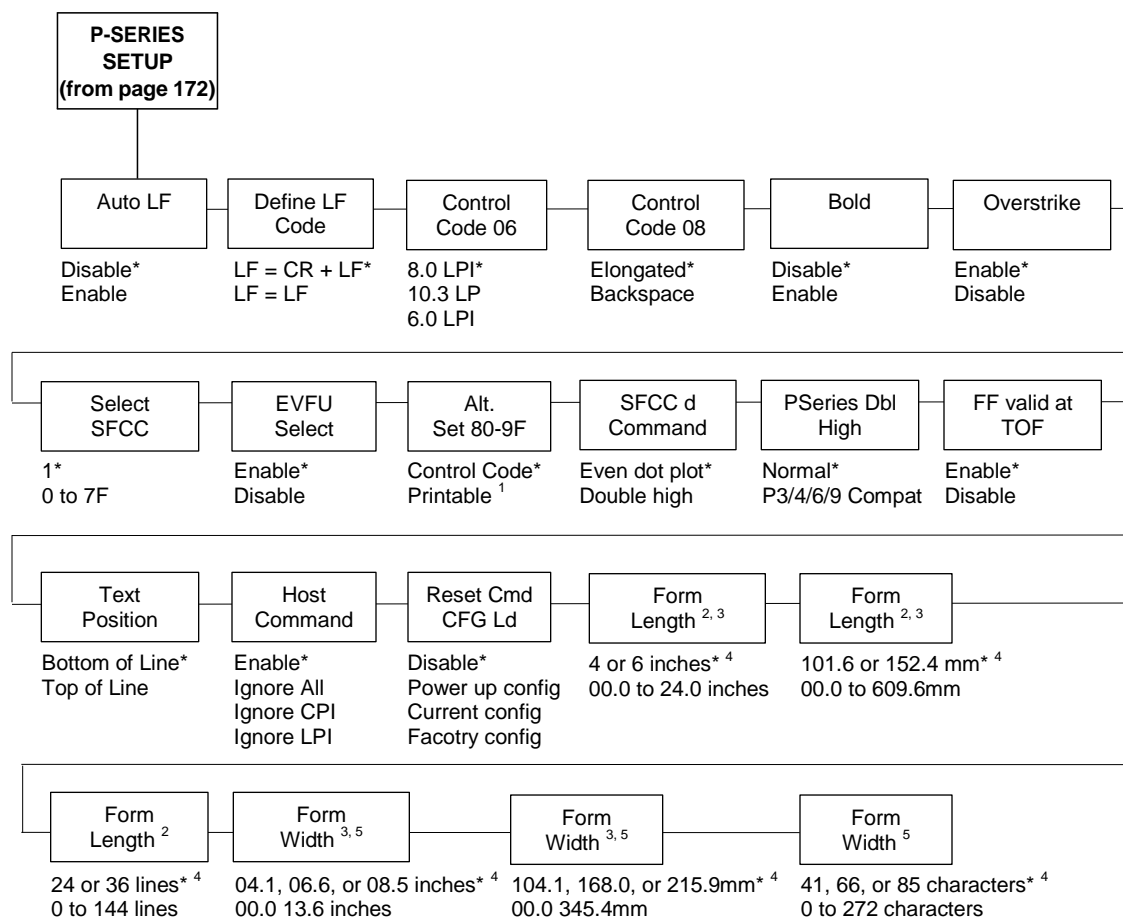

Notes:

* = Factory Default

¹ When the CTHI option is installed, the factory default is Printable.


² All three Form Length submenus work in conjunction. When you change the default in one submenu, the default values in the other two submenus change automatically.

³ This menu does not display when the CT, TN5250, or TN3270 emulation is selected.

⁴ The factory default value depends on the width of the printer model.

⁵ All Form Width submenus work in conjunction. When you change the default in one submenu, the default values in the other two submenus change automatically.

P-SER XQ SETUP

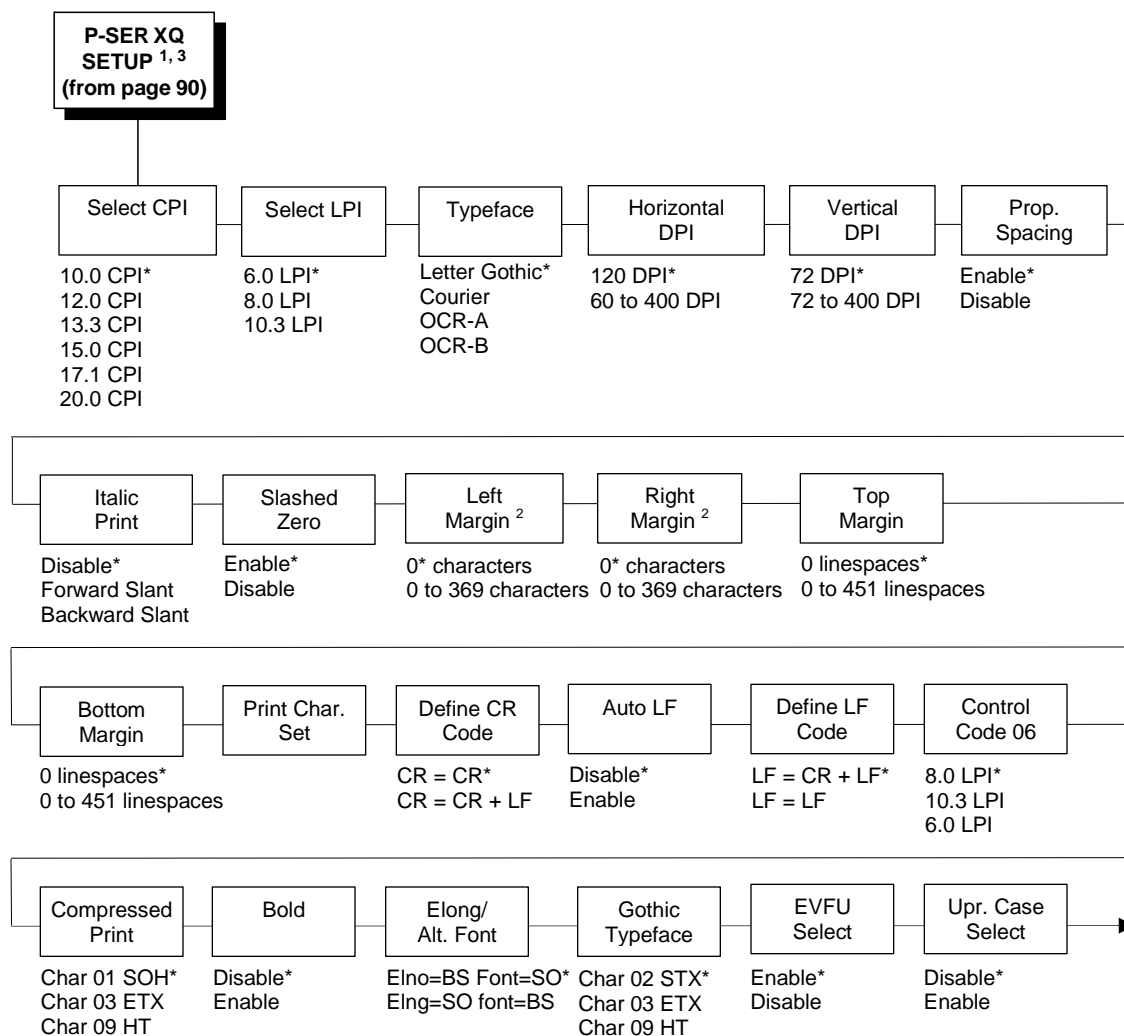

Notes:


* = Factory Default

¹ This menu is available only when you enable Admin User (under PRINTER CONTROL).

² This menu does not display when the CT, TN5250, or TN3270 emulation is selected.

³ The presence of this menu depends on the LP+ Emulation selection (under PRINTER CONTROL).

**P-SER XQ
SETUP
(from page 174)**

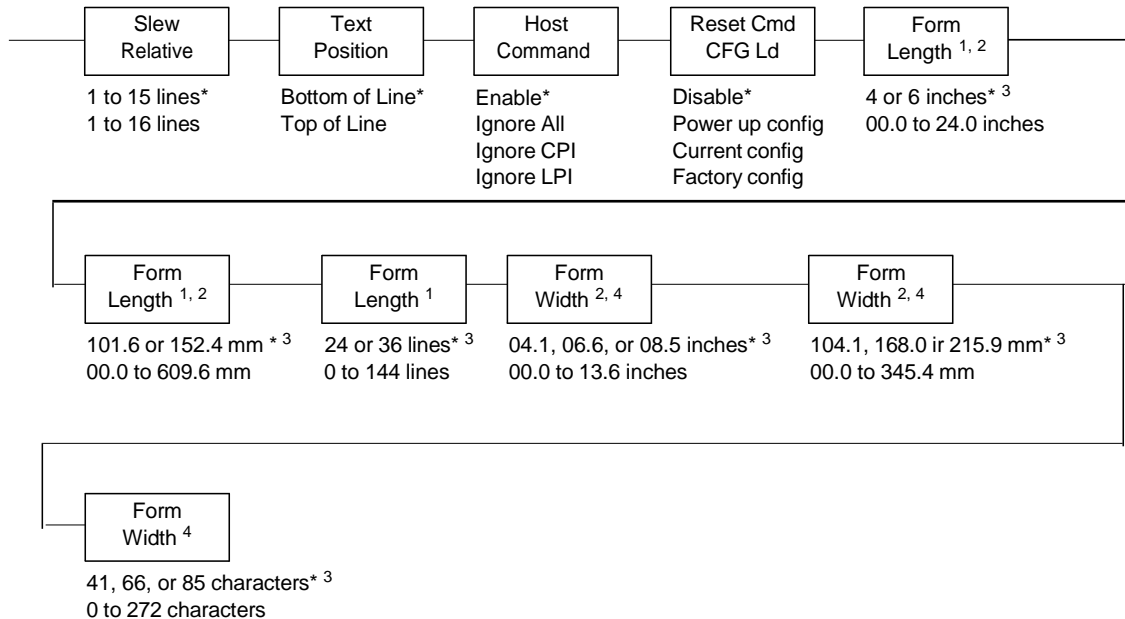

Notes:

* = Factory Default


¹ All three Form Length submenus work in conjunction. When you change the setting in one submenu, the values in the other two submenus change automatically.

² This menu does not display when the CT, TN5250, or TN3270 emulation is selected.

³ The factory default value depends on the width of the printer model.

⁴ All three Form Width submenus work in conjunction. When you change the setting in one submenu, the values in the other two submenus change automatically.

SERIAL MATRIX SETUP

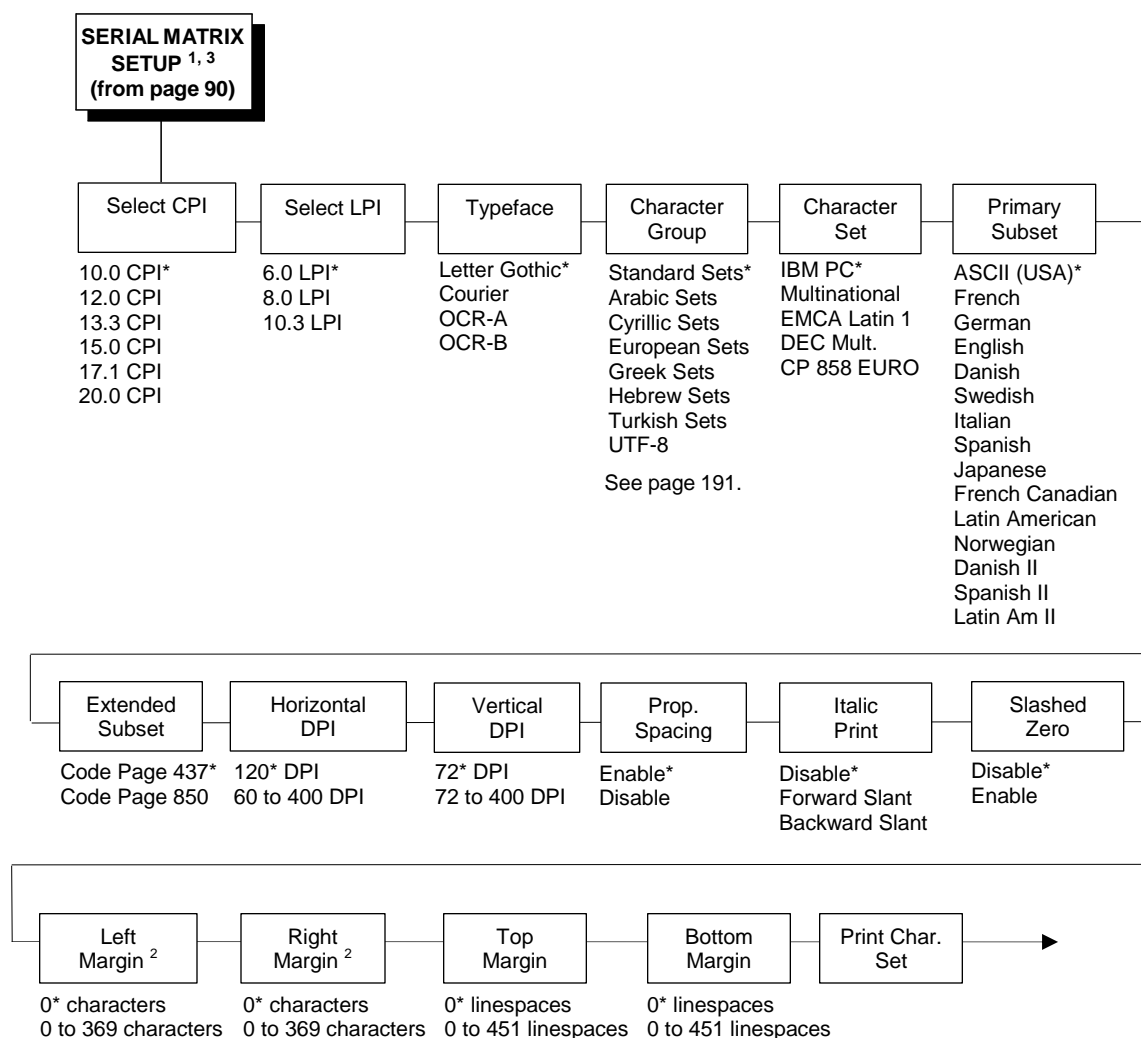

Notes:


* = Factory Default

¹ This menu is available only when you enable Admin User (under PRINTER CONTROL).

² This menu does not display when the CT, TN5250, or TN3270 emulation is selected.

³ The presence of this menu depends on the LP+ Emulation selection (under PRINTER CONTROL).

**SERIAL MATRIX
SETUP**
(from page 176)

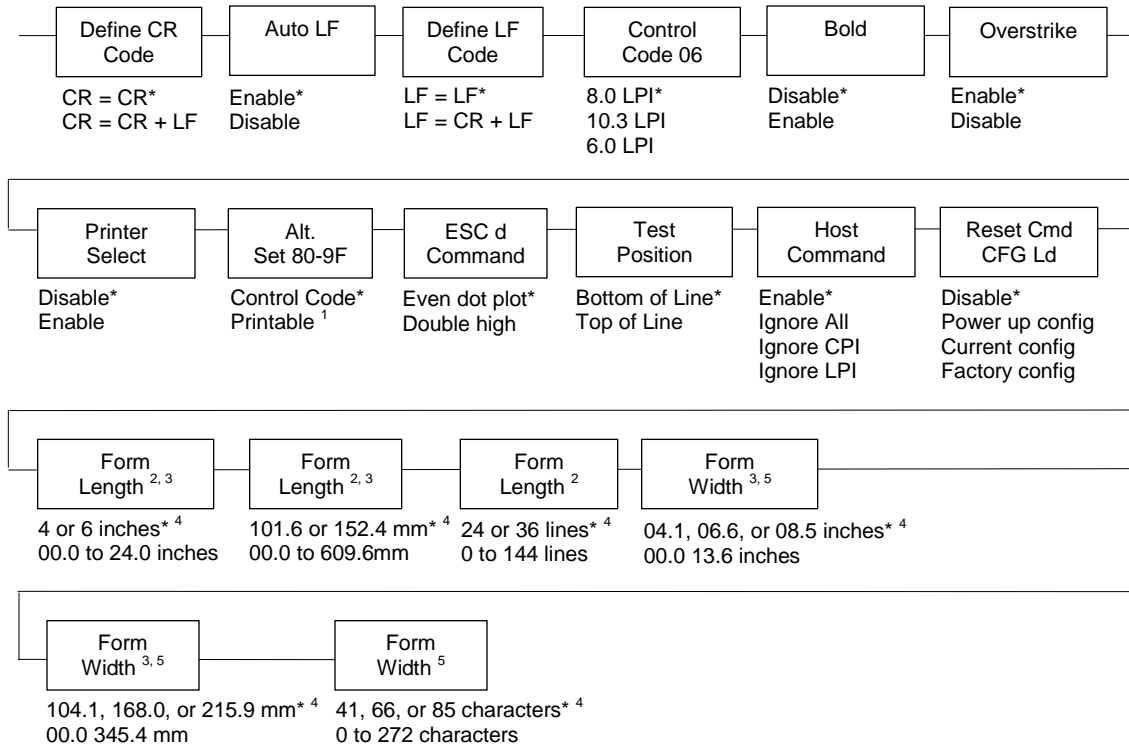

Notes:

* = Factory Default

¹ When the CTHI option is installed, the factory default is Printable.


² All three Form Length submenus work in conjunction. When you change the default in one submenu, the default values in the other two submenus change automatically.

³ This menu does not display when the CT, TN5250, or TN3270 emulation is selected.

⁴ The factory default value depends on the width of the printer model.

⁵ All three Form Width submenus work in conjunction. When you change the default in one submenu, the default values in the other two submenus change automatically.

PROPRINTER XL SETUP

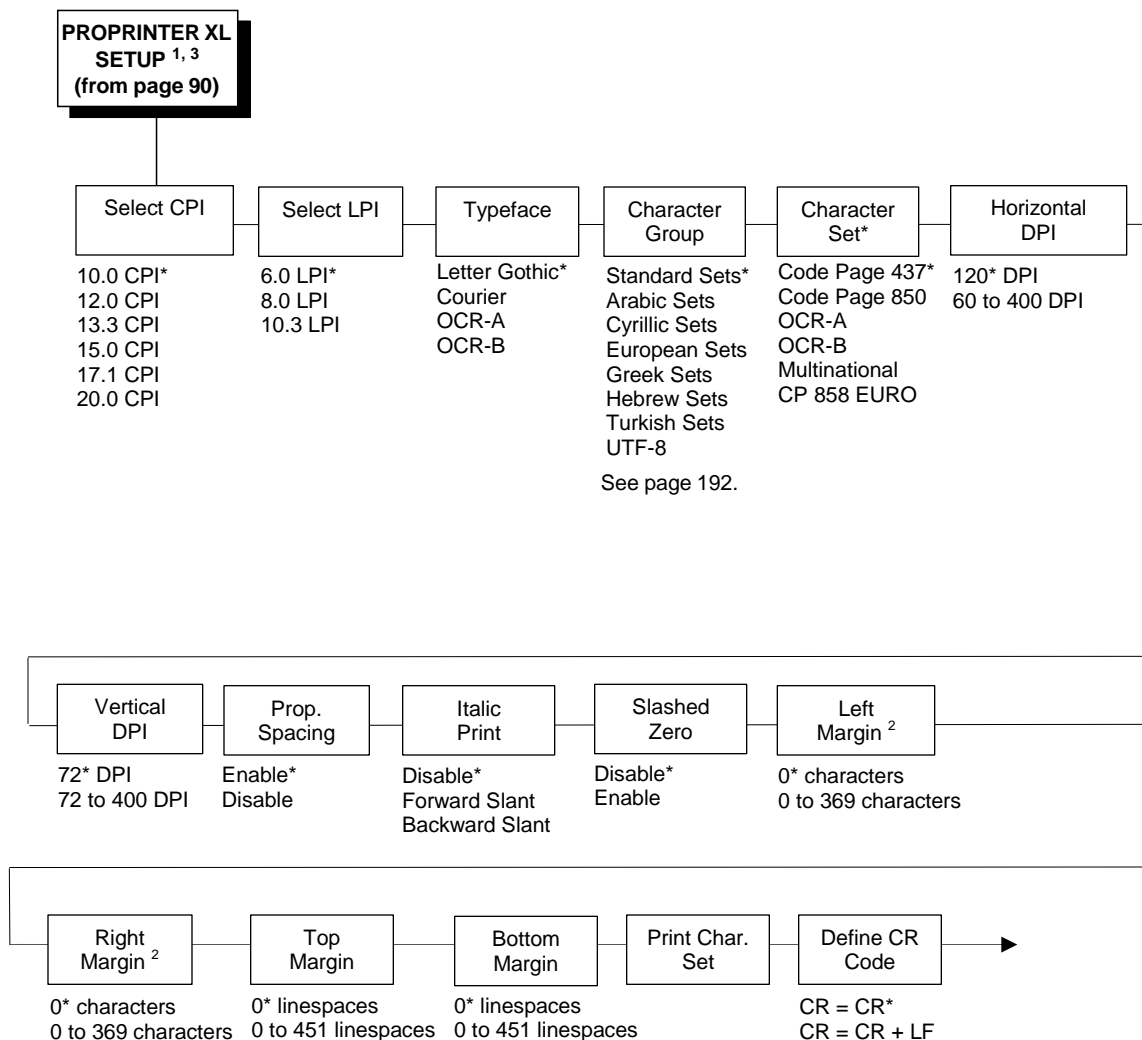

Notes:


* = Factory Default

¹ These menus are available only when you enable Admin User (under PRINTER CONTROL).

² This menu does not display when the CT, TN5250, or TN3270 emulation is selected.

³ The presence of this menu depends on the LP+ Emulation selection (under PRINTER CONTROL).

**PROPRINTER XL
SETUP
(from page 178)**

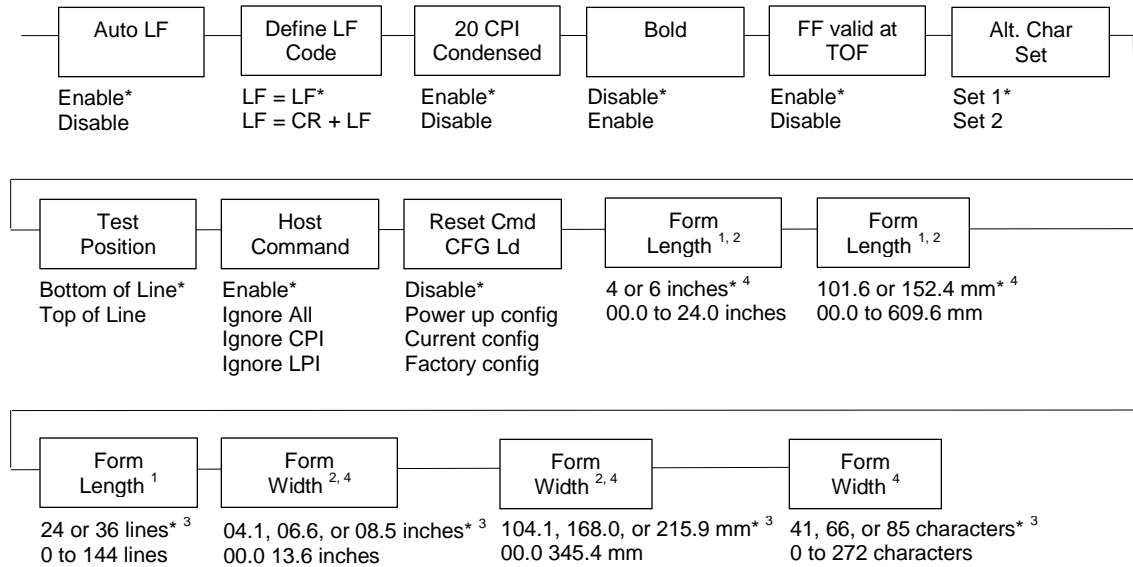

Notes:

* = Factory Default


¹ All three Form Length submenus work in conjunction. When you change the default in one submenu, the default values in the other two submenus change automatically.

² This menu does not display when the CT, TN5250, or TN3270 emulation is selected.

³ The factory default value depends on the width of the printer model.

⁴ All three Form Width submenus work in conjunction. When you change the default in one submenu, the default values in the other two submenus change automatically.

EPSON FX SETUP

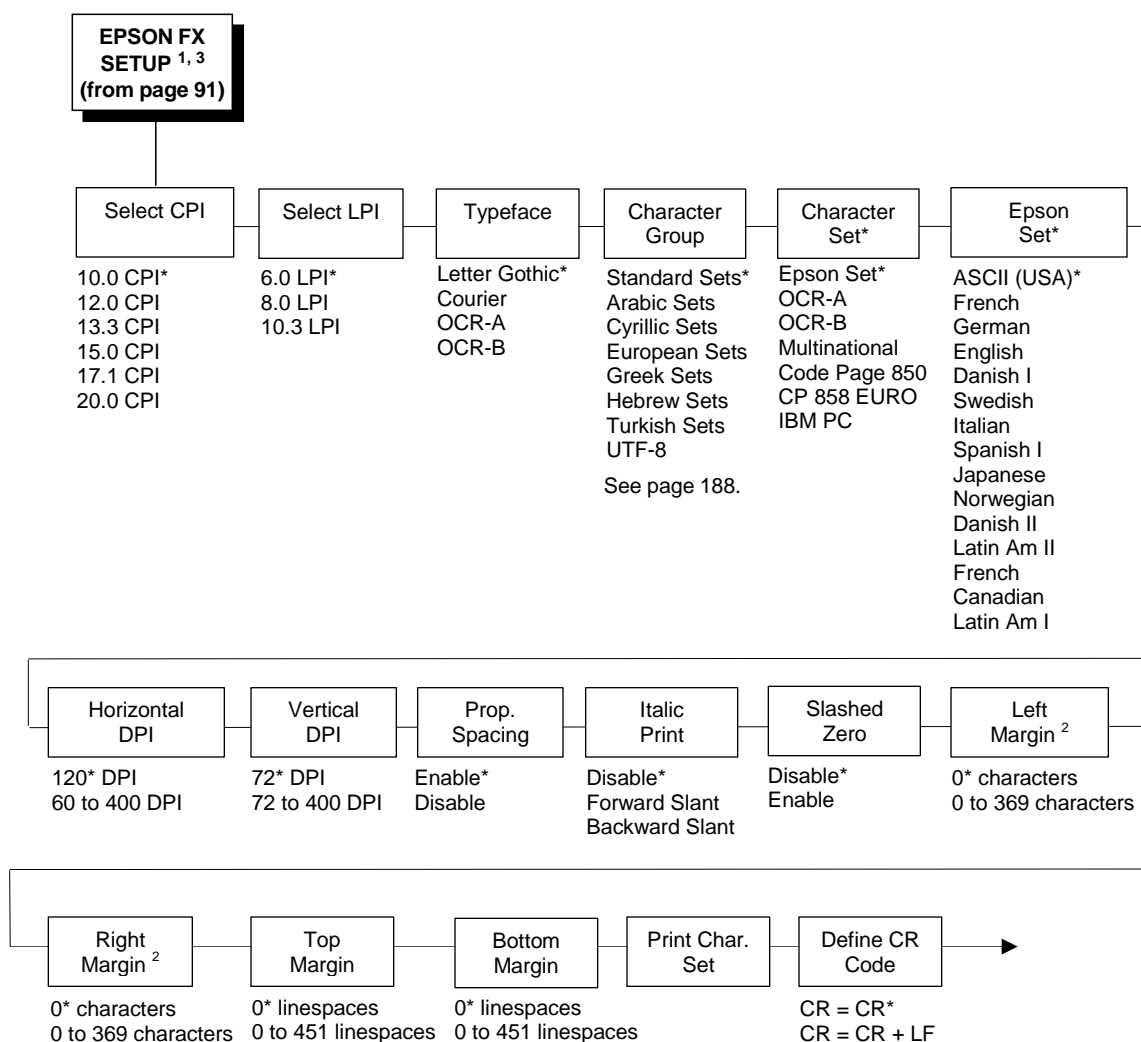

Notes:


* = Factory Default

¹ This menu is available only when you enable Admin User (under PRINTER CONTROL).

² This menu does not display when the CT, TN5250, or TN3270 emulation is selected.

³ The presence of this menu depends on the LP+ Emulation selection (under PRINTER CONTROL).

**EPSON FX
SETUP
(from page 180)**

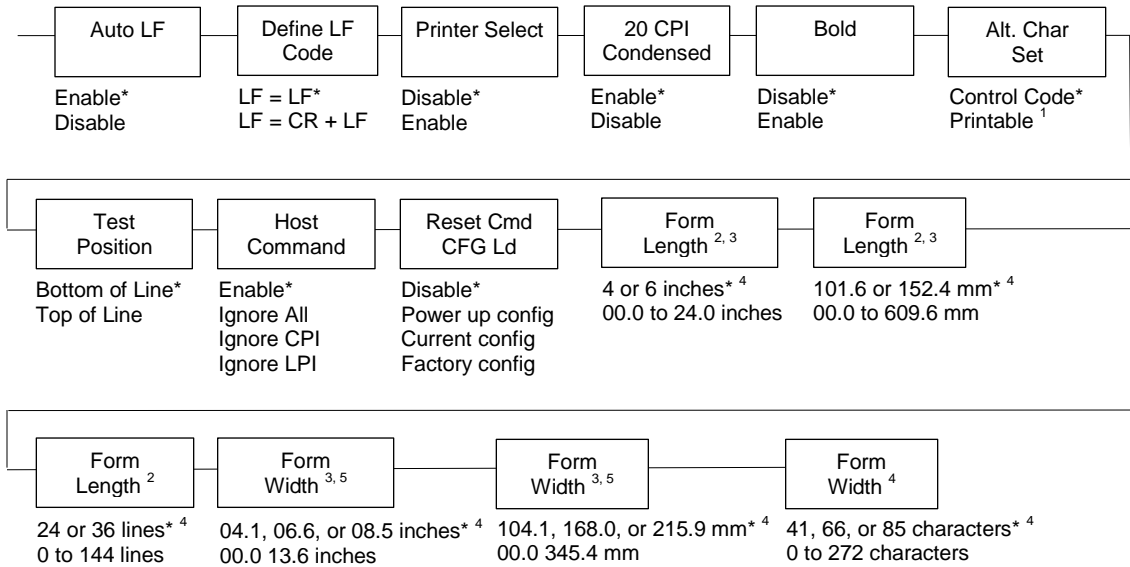

Notes:

* = Factory Default

¹ When the CTHI option is installed, the factory default is Printable.

² All three Form Length submenus work in conjunction. When you change the default in one submenu, the default values in the other two submenus change automatically.

³ This menu does not display when the CT, TN5250, or TN3270 emulation is selected.

⁴ The factory default value depends on the width of the printer model.

⁵ All three Form Width submenus work in conjunction. When you change the default in one submenu, the default values in the other two submenus change automatically.

Emulation Submenus

NOTE: The following descriptions are grouped together for all emulations and are listed in alphabetical order. The emulations do not include ZGL, TGL, IGL, STGL, DGL, MGL, and IEGL. See individual Programmer's Reference Manuals for more information.

^Dnn Dot Slew

- **Low Resolution** (factory default). Sets the dot slew command dot values to be interpreted as 60 dpi P-Series dots.
- **High Resolution**. Sets the dot slew command dot values to be interpreted as print engine dots.

20 CPI Condensed

Compressed print characters are narrower than the normal character set. This is helpful for applications where you need to print the maximum amount of information on a page.

- **Enable** (factory default). Prints about 60% of the width of normal characters when compressed print is chosen by the host computer.
- **Disable**. Does not compress print widths, even if condensed print is chosen by the host.

5225 World Trade

The 5225 emulation has a standard multinational character set that serves as a base and 14 extended world trade character set assortments.

The options are Standard Char (factory default) and Extended Char.

Absorb After ^PN

- **Disable** (factory default). The paper motion line terminators that immediately follow the ^PN command are sent to the printer and processed.
- **Enable**. The paper motion line terminators that immediately follow the ^PN command are ignored.

Absorb After ^PY

- **Absorb Motion** (factory default). The paper motion line terminator immediately following the graphics ^PY command will be ignored.
- **Absorb All**. The system ignores all the data following ^PY until a host generated terminator is detected and ignored.
- **Disable**. System terminators following a graphics command are sent to the printer and result in paper motion.

Active Char Set

Selects which group of character sets (Primary or Secondary) will be active. The factory default is Secondary Set.

AI 00 Spaces

This option is designated for EAN/UCC-128 barcodes whose application identifier (AI) is 00.

- **Disable** (factory default). The printable data field is printed with the AI enclosed in parentheses. This is the standard EAN/UCC-128 format.
- **Enable**. The printable data field is printed with the UCC fields separated by spaces. This option is IGP-X00 compatible.

Alt. Char Set

- **Set 1** (factory default). Interprets data in the range of hex 80 through hex 9F as a control code.
- **Set 2**. Prints data in the range of hex 80 through hex 9F.

Alt. Set 80-9F (P-Series, Serial Matrix, Epson FX)

- **Control Code**. Interprets data in the range of hex 80 through hex 9F as a control code.
- **Printable**. Prints data in the range of hex 80 through hex 9F.

The factory default is Control Code. However, when the CTHI option is installed, the factory default is Printable.

Alt. Set 80-9F (Coax, Twinax, TN3270, TN5250)

- **Printable** (factory default). Prints data in the range of hex 80 through hex 9F.
- **Control Code**. Interprets data in the range of hex 80 through hex 9F as a control code.

Append Rotated

- **Disable** (factory default). Logos and alphanumeric strings are treated as separate elements.
- **Enable**. Appends logos to an alphanumeric string rotated in a clockwise, counterclockwise, or inverted orientation.

Auto FF at ^PN

When enabled, an FF will be generated automatically to slew to the end of form when the ^PN command is encountered and when the current vertical position is not at the top-of-form.

The options are Disable (factory default) and Enable.

Auto LF (P-Series, P-Series XQ)

This option defines the printer action when print data is received past the forms width setting.

- **Disable** (factory default). Discards any data past the forms width.
- **Enable**. Performs an automatic carriage return and line feed when data is received past the forms width.

Auto LF (Serial Matrix, Proprinter XL, Epson FX)

This option defines the printer action when print data is received past the forms width setting.

- **Enable** (factory default). Performs an automatic carriage return and line feed when data is received past the forms width.
- **Disable**. Discards any data past the forms width.

Auto Skip at End

Specifies whether to perform an automatic form feed at the end of a print buffer. If form feed is the last character in the print order, the form feed function is supplied by the Auto Skip At End option.

- **Off** (factory default). Sets the printer to print at print position 1 of the next line.
- **On**. Sets the printer to print at print position 1 of the first line of the next form.

Auto Uppercase

This parameter enables the printer to print text in all uppercase when using the ALPHA command.

- **Disable** (factory default). The printer will print text in upper and lowercase.
- **Enable**. The printer will print text in uppercase only.

Autoeject (VGL)

Determines paper handling upon exiting the VGL Repeated Form and Dynamic Form commands.

- **Disable** (factory default). Holds the print position at the bottom of the form.
- **Enable**. Issues a form feed after the last form is printed so all pages will be physically printed.

Autowrap

This parameter determines if text will wrap to the next line when the line of text exceeds the right margin.

- **Disable** (factory default). Truncates the text beyond the right margin until a CR or CR + LF is received.
- **Enable**. Automatically inserts a CR + LF after a full print line.

Barcode var.

This command only applies for IBARC barcode command format.

- **Low Resolution** (factory default). Sets barcode ratio dot values to be interpreted as line matrix printer dots (60 x72).
- **High Resolution**. Sets barcode ratio dot values to be interpreted as print engine dots (300 x 300 or 203 x 203).

Bold

- **Disable** (factory default). Text is printed normally.
- **Enable**. Text is printed with a heavy line thickness.

Bottom Margin

Defined in linespaces, starting from line zero at the bottom of the page and incrementing from the bottom up.

The range is 0-451 linespaces, and the factory default is 0 linespaces.

Boundary Check

This option turns on or off the page boundary check for all print elements.

- **Enable** (factory default). When enabled, an out of bound error is reported if the print element is out of the page boundary.
- **Disabled**. When disabled, no out of bound error is reported. The out of bound print element prints over the page boundary.

Btm Margin Ctl

Determines the page's bottom margin. If this option is set to VGL Text Length, then text length changes the bottom margin value in the LP+ Emulation submenu as follows: bottom = physical page length-top margin-text length. If the option is set to LP+ Menu, then a change in text length has no effect, and the bottom margin setting in the LP+ Emulation menu will be used, although the new text length value still shows in the menu.

The options are LP+ Menu (factory default) and VGL Text Length.

Buffer Print

- **Disable** (factory default). The printer will print normally.
- **Enable**. The printer prints the EBCDIC data and control codes received from the host as hex values.

NOTE: Use of this parameter may alter print attributes set by the host computer. A power cycle may be required after changing Buffer Print from enable to disable.

Buffer Reprint

This option is valid only when the printer is printing in Coax SCS mode. When the ENTER key is pressed, "Buffer Reprint Enabled" displays and an Intervention Required status is sent to the host. Pressing ENTER again cancels the Buffer Reprint function and displays "Buffer Reprint Disabled" on the LCD.

C39 Compatbl.

This menu makes the old method of decoding C39 alternative character set compatible with the new.

- **Enable.** Matches the old method of decoding.
- **Disable** (factory default). Uses the current way of decoding.

C128 Mode Comp.

The menu is for compatibility of the old build in auto mode switch.

- **Enable.** Matches the old build on the auto mode switch.
- **Disable** (factory default). Uses auto mode switch.

Cancel IGP/DCU

- **Enable** (factory default). Cancels all buffers when a job is put on hold from the host or when the CANCEL key is pressed.
- **Disable.** Does not cancel any internal buffer in the printer when a job is put on hold from the host, or when the CANCEL key is pressed.

Change Case


Specifies the font as Mono or Dual Case. This option is available only in Coax non-SCS mode. The host will be notified of the change when the printer is put online. Mono Case prints the same as Dual Case if the character set is one of the following “right to left” sets: Katak, Hebrew, Old Hebrew, and Farsi.

SCS (Systems Network Architecture Character String) Mode is controlled by the host computer.

The options are Dual Case (factory default) and Mono Case.

Character Group and Character Sets (Epson FX)

(From page 180.) This menu item selects the character set used by the printer. The available character sets are shown below.

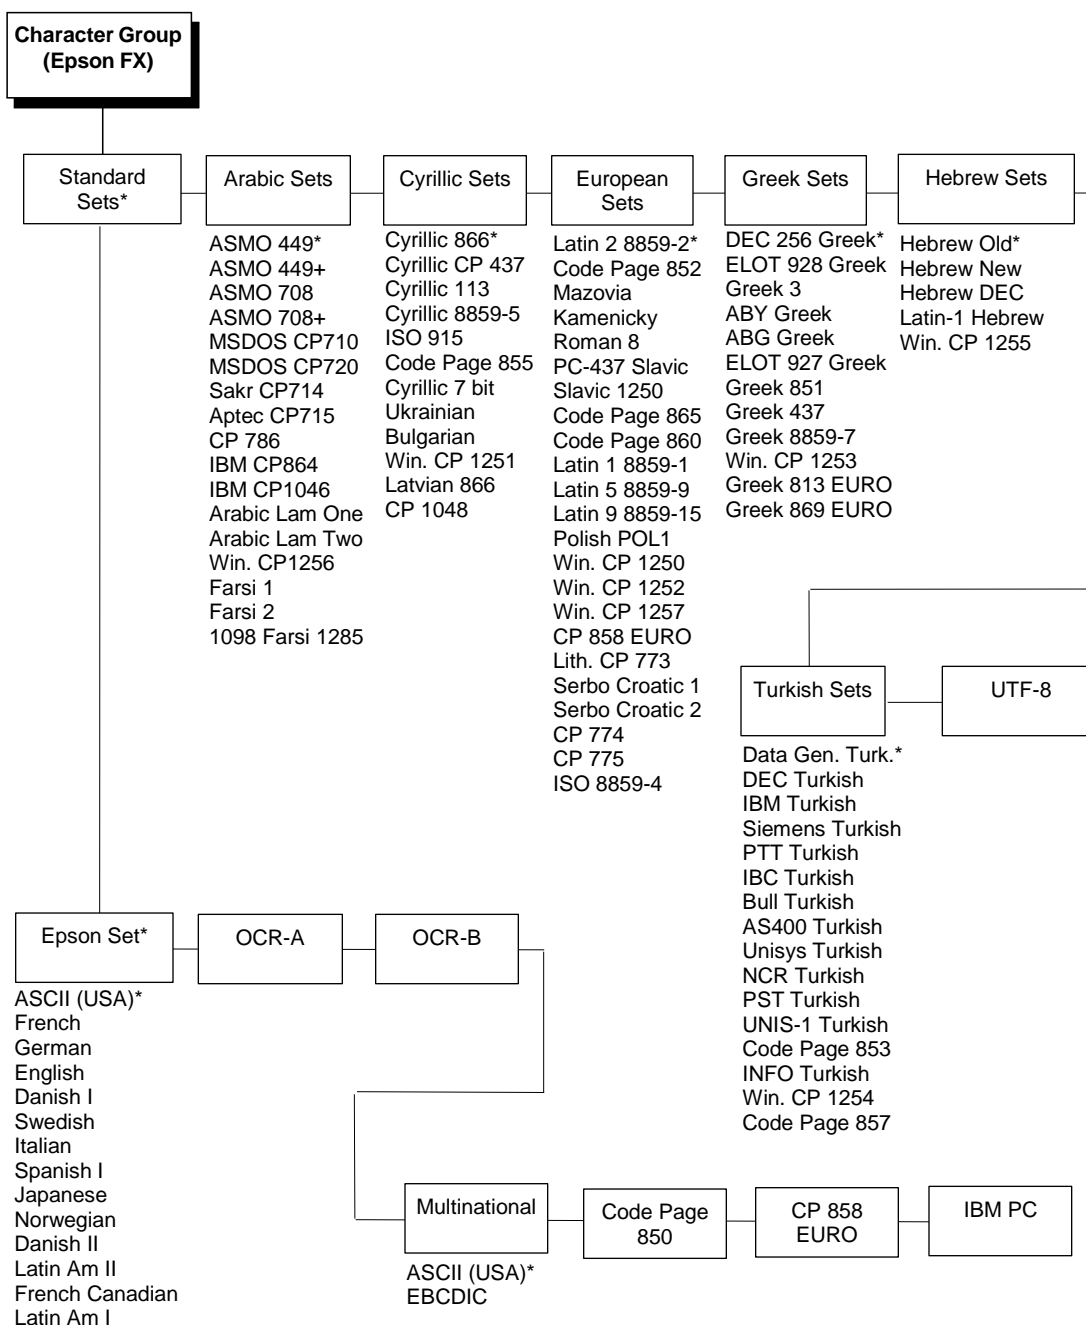


Notes:

* = Factory Default.

To access the desired basic character set, use the + and - keys. To select the set, press the \downarrow key. After you have selected the basic set, access the subset selection menu by pressing the \downarrow key. Once in the subset menu, access the desired subset by pressing the + and - keys and select it by pressing the \downarrow key. The Epson subset is accessed and selected in the same manner.


Character Group and Character Sets (PGL)

(From page 168.) This menu item selects the character set used by the printer. The available character sets are shown below.

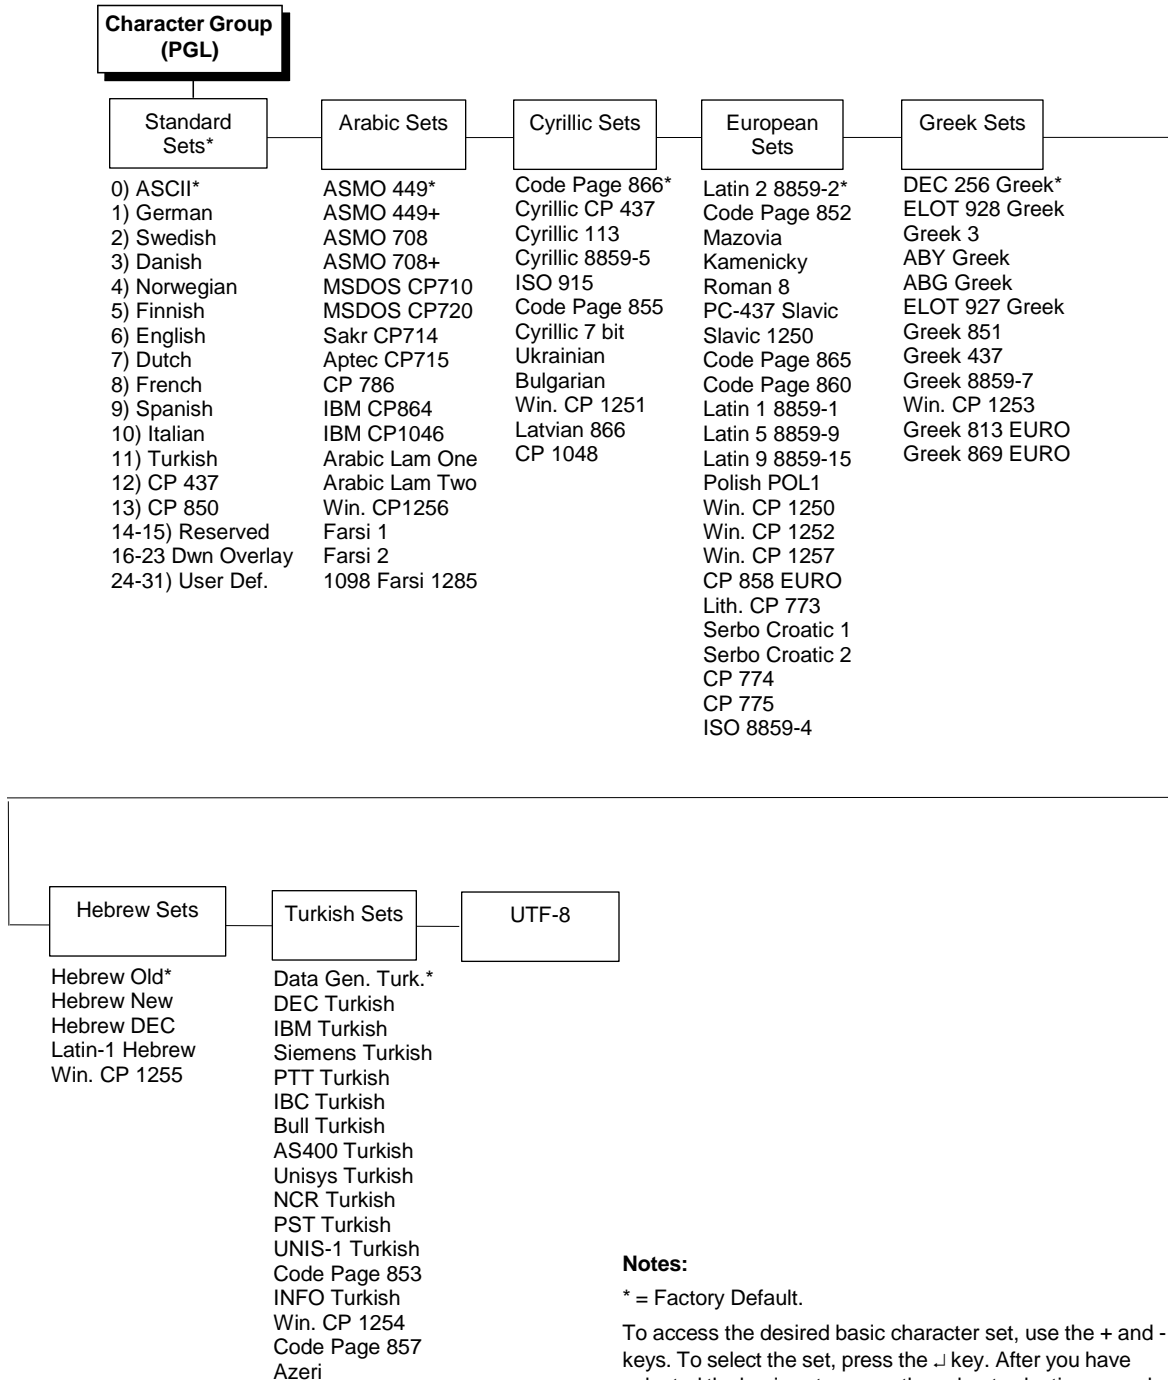

Character Group and Character Sets (VGL)

(From page 171.) This menu item selects the character set used by the printer. The available character sets are shown below.

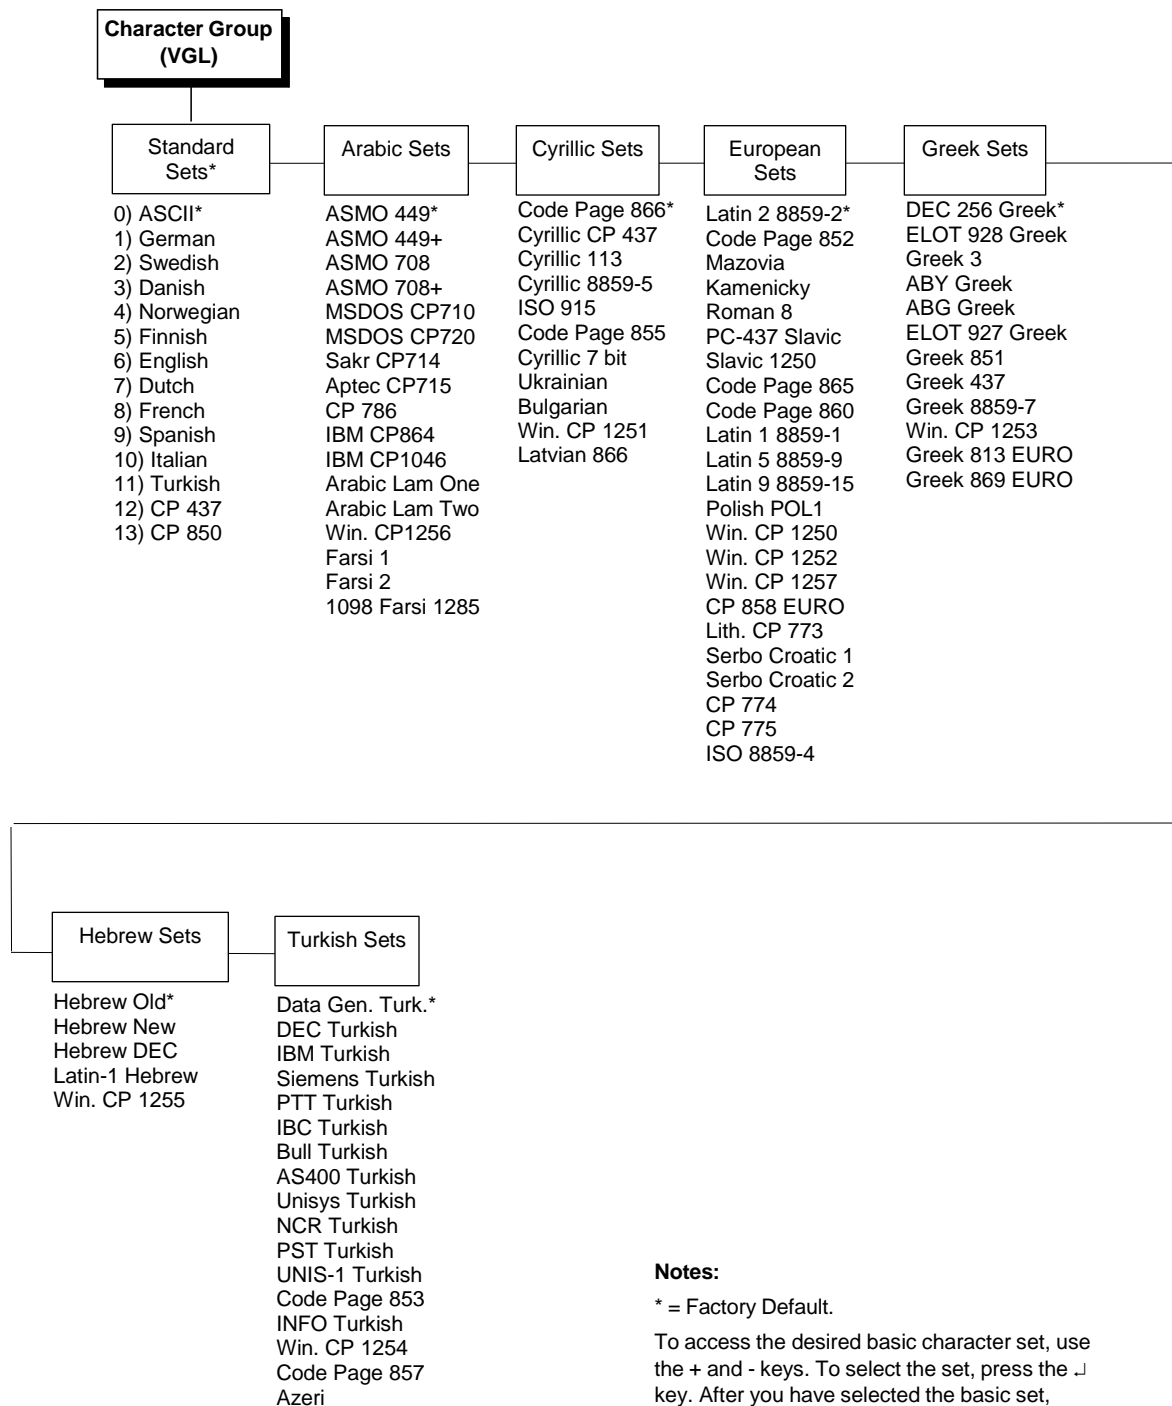


Notes:

* = Factory Default.

To access the desired basic character set, use the + and - keys. To select the set, press the ↵ key. After you have selected the basic set, access the subset selection menu by pressing the ↓ key. Once in the subset menu, access the desired subset by pressing the + and - keys and select it by pressing the ↵ key.


Character Group and Character Sets (P-Series, Serial Matrix)

(From page 172, page 176.) This menu item selects the character set used by the printer. The available character sets are shown below.

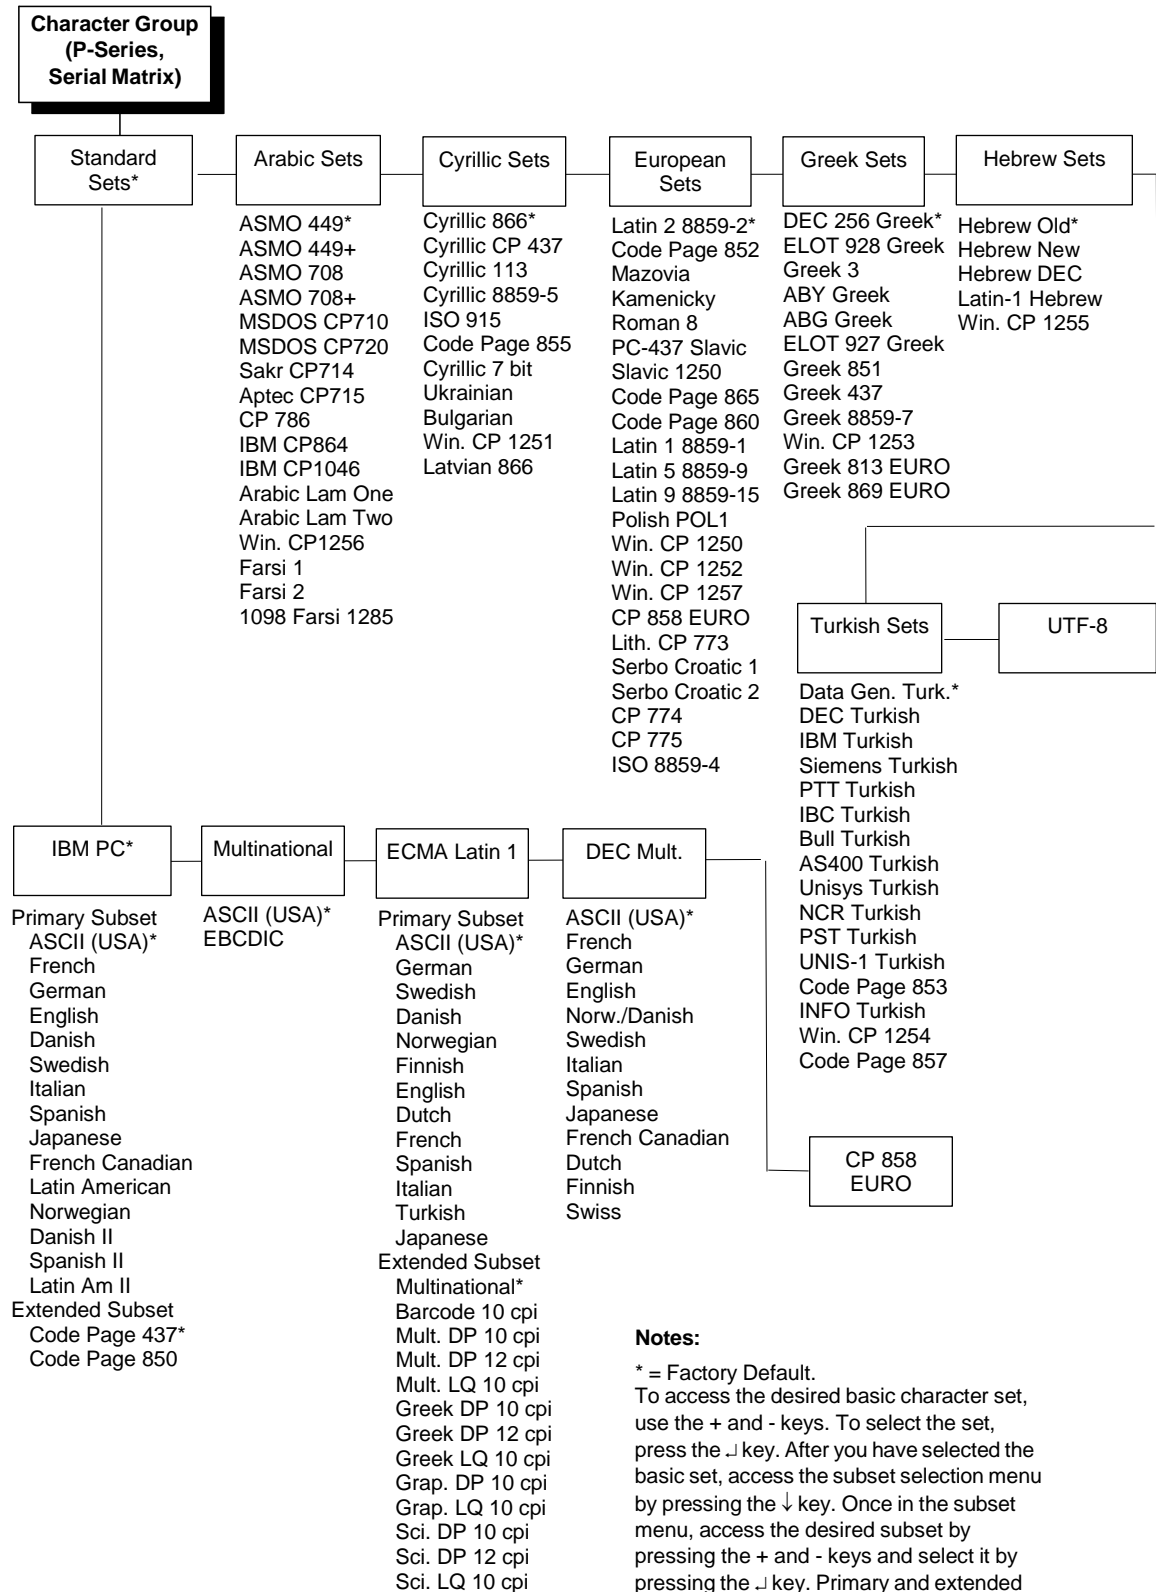

Character Group and Character Sets (Proprinter XL)

(From page 178.) This menu item selects the character set used by the printer. The available character sets are shown below.

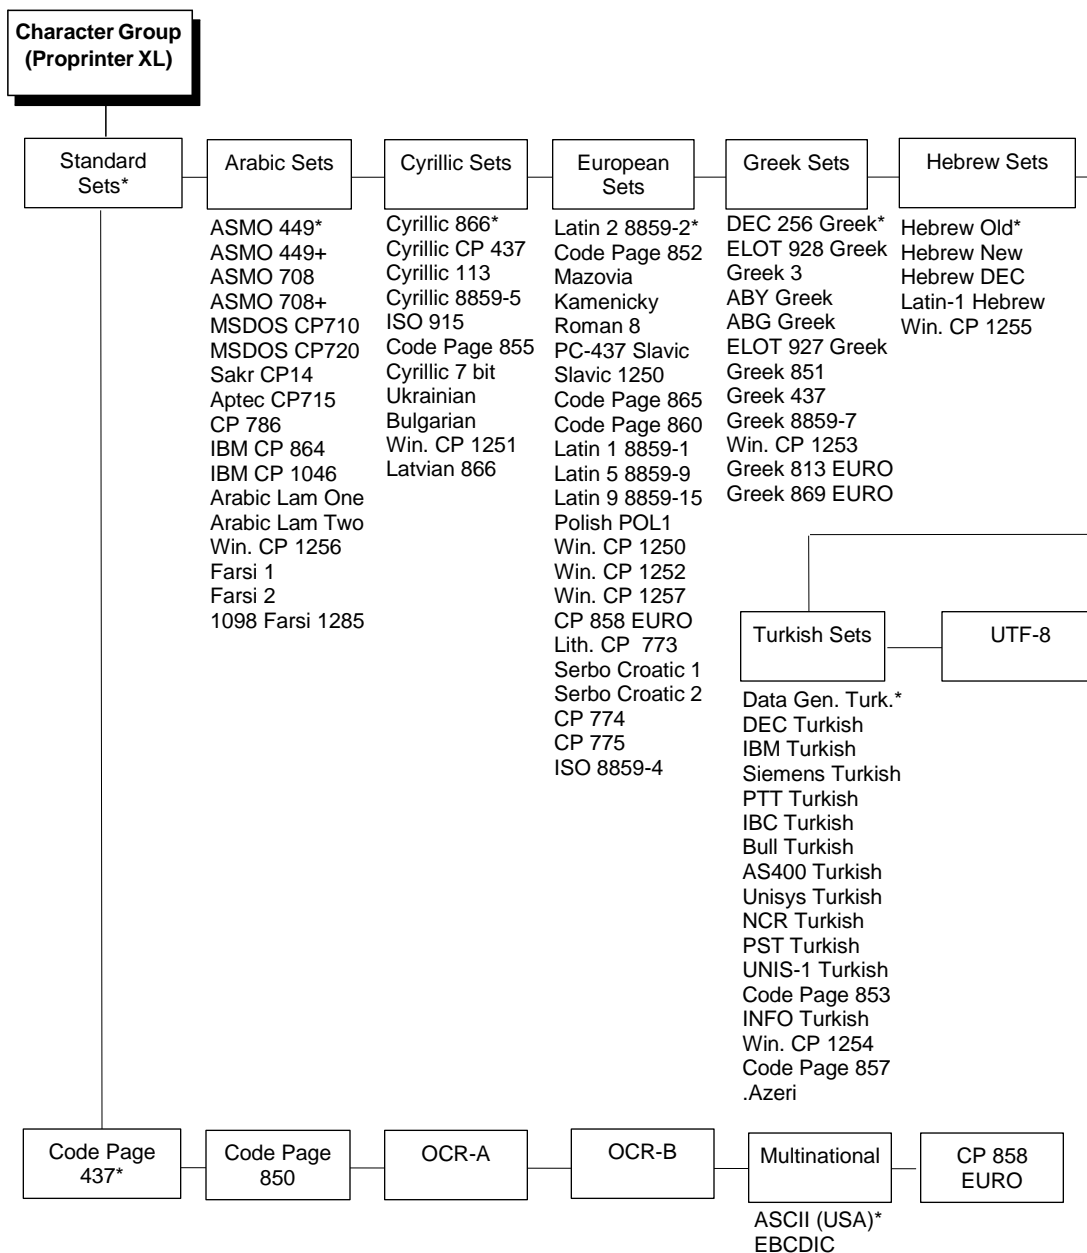

Notes:

* = Factory Default.

To access the desired basic character set, use the + and - keys. To select the set, press the ↓ key. After you have selected the basic set, access the subset selection menu by pressing the ↓ key. Once in the subset menu, access the desired subset by pressing the + and - keys and select it by pressing the ↓ key. Character subsets are accessed and selected in the same manner.

Character Set (P-Series, Serial Matrix, Proprinter, Epson FX)

This item allows selection of the character set to be used by the printer.

Printing UTF-8 Encoded Unicode Text

Normally, to print multinational characters on a printer, the user needs to select a character set that contains the correct characters. Character sets are groups of 256 locations; the first 128 locations are occupied by the ASCII set, and the locations in the upper half are reserved for graphics, symbols, or multinational characters. For example, to print Cyrillic, the user would select a Cyrillic set. To print Italian, the user would select a different set.

Unicode allows any character to be selected without switching character sets because it specifies a different number for every character in all languages. Thus Unicode has become the standard for multinational printing.

UTF-8 is a popular encoding of Unicode in which the first 128 characters are still occupied by the ASCII set. This makes it backwards compatible with older applications which use only ASCII data. It also allows the printing of all Unicode characters.

UTF-8 encoded Unicode can be enabled on the printer from the front panel or from a host command in the LP+, PGL, or ZGL emulation.

Cmd Resolution

- **Low Resolution** (factory default). Sets a low command resolution mode.
- **High Resolution**. Sets a high command resolution mode.

Coax Type

This parameter defines the printer emulation, as follows:

- 4234 (factory default)
- 3287

After the emulation has been changed, a POR status is sent to the host.

Code Page Subset

This item allows you to select the desired version of the following code pages - 037, 273, 274, 275, 277, 278, 280, 281, 282, 284, 285, 297, 500, and 871.

The options are Version 0 (factory default) and Version 1.

Compressed Print

Controls which host command sets compressed printing.

- Char 01 SOH (factory default)
- Char 03 ETX
- Char 09 HT

Control Code 06

Control Code 06 defines the function of ASCII code 06 hex (ACK). You can select an alternate line spacing of 6.0, 8.0, or 10.3 LPI.

The options factory default is 8.0 LPI.

Control Code 08

Control Code 08 defines the function of ASCII code 08 hex (BS). You can define the code to output an Elongated character or a Backspace. The factory default is Elongated.

Copy Count

Determines the number of identical copies of each physical page that will be printed.

The range is 1-999, and the factory default is 1.

CR at MPP+1

MPP is Maximum Print Position, which is also known as line length. This option controls a carriage return at the end of a print line and at MPP+1.

- **On** (factory default). Produces a carriage return to the first print position of the next line.
- **Off**. Produces a carriage return to the first print position of the current line.

CR Edit

This parameter determines if a carriage return will be followed by a line feed.

- **Disable** (factory default). The printer ignores all carriage returns that are not followed by line feeds.
- **Enable**. The printer processes all carriage returns, even for those that are not followed by line feeds.

CR, EM, & NL

CR (Carriage Return), EM (Error Message), & NL (New Line) specify that the printer treat the CR, EM, and NL control codes either as spaces or as control codes.

- **On** (factory default). Treats the CR, EM, and NL commands as control codes.
- **Off**. Treats the CR, EM, and NL commands as spaces.

Data Bit 8

- **Enable** (factory default). The PI line is not passed directly from host to printer; all 8 bits are used for data bits, and characters in the hex 80-FF range can be accessed.
- **Disable**. When the host PI line is enabled, data bit 8 internally indicates PI line status. To use the PI line, disable data bit 8, and enable the Host PI configuration option (under the PI Ignored option).

NOTE: Data bit 8 is interpreted as either data bit 8 or PI signal, but never both. When enabled as data bit 8, data bit 8 has priority over the PI signal, and all data above hex 7F is used to access character data and not to interpret PI line data.

Conversely, when data bit 8 is disabled and the PI signal is used, data bit 8 of the data is reserved for use as the PI function, and you cannot access characters in the hex 80-FF range. Therefore, to access characters in the hex 80-FF range, data bit 8 must be enabled.

Default Code Pag

This item allows you to select the desired default codepage to be used when IPDS is not activating a Code Page ID. Refer to the *IPDS Programmer's Reference Manual* for a list of the code pages.

The factory default is English/USA/Can.

Default Font

This item allows you to select the desired default resident font to be used when IPDS is not activating a Font Global ID. Refer to the *IPDS Programmer's Reference Manual* for a list of the fonts.

The factory default is Courier 10.

Define CR code

This option controls the action of the printer when it receives a Carriage Return code (0D hex) from the host computer. If this feature is enabled, each time the printer receives a carriage return, it inserts an additional Line Feed code (0A hex) into the data stream. Do not use this feature if the host computer sends line feeds to the printer.

NOTE: For this menu to take effect in PGL, PGL Normal needs to be set to PGL Menu.

- **CR = CR** (factory default). Does not insert an extra line feed after each carriage return.
- **CR = CR + LF**. Inserts an extra line feed after each carriage return. The next print position will be print position 1 of the next line.

Define LF code (PGL, Serial Matrix, Proprinter XL, Epson FX)

This parameter forces the printer to insert an automatic Carriage Return code into the data stream whenever a Line Feed code occurs. This can be used in most installations, but it is required if the host computer does not send carriage returns to the printer.

NOTE: For this menu to take effect in PGL, PGL Normal needs to be set to PGL Menu.

- **LF = LF** (factory default). Does not perform an automatic carriage return. The next print position will be at the current print character position on the next line.
- **LF = CR + LF**. Performs an automatic carriage return. The next print position will be print position 1 of the next line.

Define LF code (P-Series, P-Series XQ)

- **LF = CR + LF** (factory default). Forces an automatic carriage return with each Line Feed command received. The next print position is position 1 of the next line.
- **LF = LF**. Does not perform an automatic carriage return when a Line Feed command is received. The next print position will be the current print position on the next line.

Do FF at TOF

Determines whether the printer, with media already set at the TOF (Top-of-Form) position, will advance media to the next TOF position upon receipt of an FF command.

- **Enable** (factory default). The printer will advance media from the present TOF position to the next TOF position upon receipt of an FF command, causing a blank form.
- **Disable**. The printer will not advance media from the present TOF position to the next TOF position upon receipt of an FF command.

Early Print Cmpl (Coax, TN3270)

Early Print Complete capability allows the printer to send print (order) complete status to the host before the printer is actually done printing all data. This option is valid only when the printer is in DSC/DSE mode.

- **Disable** (factory default). The printer will suppress the Early Print Complete response until all printing is complete.
- **Enable**. The printer will send an acknowledgement to the host when it is able to accept more data.

NOTE: When an Early Print Complete is enabled and an error occurs, there may be data loss.

Early Print Comp (IPDS)

This parameter allows you to choose when to send a Print Complete to the Controller.

- **Off** (factory default). Print Complete is sent if the page is printed completely.
- **On**. Print Complete is sent immediately. The next page will be created. This improves the print performance when starting the next page, but degrades error recovery.

Elong./Alt. Font

Controls which host command sets elongated (double high) fonts and extended character set.

- ELNG=BS (hex 08) FONT=SO (hex 0E)
- ELNG=SO FONT=BS

The factory default is Elng=BS Font=SO.

Emulation

This item allows you to select the desired IPDS emulation, either 4028 IPDS or 3816 IPDS.

The factory default is 4028 IPDS.

Epson Set

This item allows you to select the Epson character subset used by the printer. The options are listed on page 188.

The factory default is ASCII (USA).

ESC d command

This item is for backward compatibility.

- **Even dot plot** (factory default). This option interprets the ESC d command as even dot plot.
- **Double high**. This option interprets the ESC d command as double high. Select this option for backward compatibility.

EVFU Select

Controls how the printer handles vertical formatting.

- **Enable** (factory default). Selects P-Series compatible Electronic Vertical Format Unit (EVFU).
- **Disable**. Disables all EVFU processing.

Expanded Font (PGL)

Expanded font allows you to print characters in different sizes with specified parameters and to select which font face to use.

- **Scalable** (factory default). Uses scalable fonts.
- **Block**. Uses block fonts.
- **Alt Block 1**. Uses alternative block fonts with a different character set.

Expanded Font (VGL)

Expanded font allows you to print characters in different sizes with specified parameters and allows you to select block or non-block font face.

- **Scalable** (factory default). Uses Gothic font as default. Other font faces can be selected by using the IFONT command.
- **Block**. Uses Block font.

Expanded Fonts (IPDS)

This option specifies which algorithm is used for expanding a character string in Write Graphics.

- **Compatible.** A resizing and smoothing algorithm will be performed on the bitmapped font.
- **Scalable** (factory default). A substitution will be done to a scalable outline font. Using Scalable will increase performance and quality, however, the substitution will only be done for Latin 1 characters of resident bitmapped fonts, and the type is limited to Courier and Gothic. A scalable font cannot be selected directly, and an LF3 format cannot be downloaded.

Ext Execute Copy

- **Disable** (factory default). Dynamic data, overlay data, etc. are not allowed if the optional Form Count parameter (number of forms to print) is specified as part of the Execute command. (This setting is IGP-100 compatible.)
- **Enable.** Dynamic data, overlay data, etc. are allowed within a form where the Form Count parameter is specified in the Execute command. In this case, the same form is printed for whatever the Form Count is. Incremental data is not incremented since the printing page is the same. The overlay data is only printed with the first form and not on subsequent forms, and each form is printed on a separate page.

Extended Subset

This item allows selection of the desired extended character subset used by the printer.

The options are Code Page 437 (factory default) and Code Page 850.

FF After Job

Determines the print position after an operator-initiated local copy (print screen function).

- **Off** (factory default). Performs an automatic new line command after completing a print buffer (unless a new line, form feed, or carriage return command was the last one executed). The printer is set to print at print position 1 of the next line.
- **On.** Performs an automatic form feed command unless a form feed was the last one executed. The printer is set to print at print position 1 of the first line on the next form.

FF valid at TOF

The FF valid at TOF option determines whether the printer will perform a Form Feed when the host sends a Form Feed command, if the printer is at the top of form.

- **Enable** (factory default). Performs a form feed when the host sends a Form Feed command and the printer is at the top of form.
- **Disable**. Will not perform a form feed when the host sends a Form Feed command and the printer is at the top of form.

FF Validity

Determines if the position of a Form Feed (FF) command affects its execution.

- **Off** (factory default). Performs a form feed only if it occurs at the first print position in a line or at Maximum Print Position +1. An FF command at any other position is recognized as a blank.
- **On**. Allows the printer to perform an FF command anywhere in the data stream.

Form Length (in.)

Form length is the number of lines that can be printed on a label. You can set forms length in inches.

The factory default is shown in Table 3 on page 111.

Form Length (lines)

Form length is the number of lines that can be printed on a label. You can set forms length as a function of the current LPI (lines per inch).

The factory default is shown in Table 3 on page 111.

Form Length (mm)

Form length is the number of lines that can be printed on a label. You can set forms length in millimeters.

The factory default is shown in Table 3 on page 111.

Form Width (char.)

The forms width can be specified as a function of the current CPI (characters per inch). The forms width set should not exceed the actual paper width.

The factory default is the maximum printing width divided by the selected number of characters per inch.

Form Width (in.)

In this submenu, form width is specified in inches. The form width set should not exceed the actual paper width.

The factory default is the maximum printing width.

Form Width (mm.)

In this submenu, form width is specified in millimeters. The form width set should not exceed the actual paper width.

The factory default is the maximum printing width.

Forms Handling

This submenu allows the user to handle the form in the following ways:

- **Disable** (factory default). No effect.
- **Auto Eject**. Automatically ejects a page at the end of the job to spill out the last page.
- **Auto TOF**. Automatically does a form feed (FF) at the end of each form to the next top of form.

Format Control

Enables the printer to reflect the same spacing as CTPC model printers after absolute and relative move commands are executed.

- **Disable** (factory default). Reflects distance, generated by the VGL feature, PGL feature, and Hex Transparent control code sequence, in the new position (after horizontal and vertical tabs are executed).
- **Enable**. Does not reflect distance, generated by the VGL feature, PGL feature, and Hex Transparent control code sequence, in the new position (after horizontal and vertical tabs are executed).

Gothic Typeface

Controls which host command sets Gothic printing.

- **Char 02 STX** (factory default)
- **Char 03 ETX**
- **Char 09 HT**

Graphic Chek Cod

Specifies the replacement character to print in place of any unprintable character that is received from the host. Choose a hex character from 40 through FE. The character becomes the printer default when:

- The printer is powered off and then powered on.
- An SGEA command specifies to use the operator panel default.
- The Graphic Chek Err parameter is disabled.

The range is 40 through F4, and the factory default is 60.

Graphic Chek Err

Allows overriding of the host setting for the SGEA (Set Graphic Error Action) command. For more information about the SGEA command, refer to the *Coax/Twinax Programmer's Reference Manual*.

- **Enable** (factory default). The host setting for the SGEA used by the printer. If the SGEA command is requested to stop on graphic errors, the printer will stop when a graphic error is detected.
- **Disable**. Ignores the SGEA command from the host. The printer does not stop when an error is detected; instead, it substitutes the character selected in the Graphic Chek Code parameter.

Hexdump Mode

Hexdump mode allows you to place the printer into the “hex dump” mode, in which the printer outputs a hexadecimal data stream. The purpose of hexdump mode is to see exactly what data is received by the printer, in order to debug forms, for example.

When enabled, the hexdump mode translates all host interface data to its hexadecimal equivalent, then prints the hex code and its printable symbol, if one exists. Figure 5 shows a partial example of a hex dump.

After the printer enters hexdump mode, all characters it prints (including any in the printer's input buffer) are printed in two forms: as a two-symbol hexadecimal code and as the character's printable symbol (if it has one). A non-printable code is printed as a period [.] symbol. Up to 16 characters can be printed per line of hexdump printout. While the printer is in hexdump mode, it does not act upon any control codes, other than to print their hexadecimal equivalents.

The 16 characters printed per line on the hexdump are formatted so that the 16 printable symbols are printed in columns 1 through 16. The 17th column is blank. Column 18 contains either a p (PI line active) or a blank (PI not active). Columns 19 and 20 contain the hexadecimal code for the first character, followed by a blank. The PI line condition and hexadecimal code for the second character are printed in columns 22, 23, and 24, followed by a blank. The third through 16th characters are printed in a similar manner. The hexadecimal code for the 16th character is printed in columns 78, 79, and 80.

NOTE: Values will vary based on printhead width.

Subsequent printing observes the current setting for skip-over perforation, form length, and top-of-form position parameters.

IMPORTANT You must have a minimum of 4.1 inches of media installed and have Label Width set to 4.1 inches. If not, the hexdump data will be truncated and lost.

If a fault occurs while printing a hexdump, the printer reverts to the normal fault state. When the fault is cleared, the printer resumes printing the hexdump (either a partial line with a form feed or nothing at all). Top-of-Form remains unaffected.

```
.The Impact Prin 09 54 68 65 20 49 6D 70 61 63 74 20 50 72 69 6E
ter Emulation pr 74 65 72 20 45 6D 75 6C 61 74 69 6F 6E 20 70 72
ints in one-up,. 69 6E 74 73 20 69 6E 20 6F 6E 65 2D 75 70 2C 0A
.two-up, and fou 09 74 77 6F 2D 75 70 2C 20 61 6E 64 20 66 6F 75
r up page window 72 20 75 70 20 70 61 67 65 20 77 69 6E 64 6F 77
s....          73 2E 0C 0D 0A
```

Figure 5. Sample Hex Dump

To begin a hex dump, first place the printer offline and enable the Hex Dump Mode option from the control panel. Next, place the printer online. Finally, send data to the printer from the host computer. Any data received from the host is “dumped” to the printout.

To cancel a hex dump, first place the printer offline. Then, disable the Hex Dump Mode option from the control panel. The paper may then be advanced to the next Top-of-Form.

The options are Disable (factory default) and Enable.

Horizontal DPI

This feature enables the thermal printer to print images as close as possible to the same size as those originally programmed for a line matrix or laser printer by selecting a horizontal resolution that matches that of the printer that the file was originally generated for.

Although the range allows a selection of up to 400 dpi, the T5R is capable of printing up to 203 dpi (T5204, T5206, T5208) and 300 dpi (T5304, T5306, T5308) horizontal resolution.

The range is 60-400 dpi, and the factory default is 120 dpi.

Host Command

This item allows you to select certain host commands to be ignored by the printer.

The options are Enable, Ignore All, Ignore CPI, and Ignore LPI.

The factory default is Enable (all host commands accepted by the printer).

Host Form Length (PGL)

Determines how the physical label length (see Label Length under the MEDIA CONTROL menu) is affected upon receiving an EXECUTE command.

- **Enable** (factory default). The physical label length will change to match the form length (specified in CREATE command). The physical label size remains at the new setting until another EXECUTE command is received, or the PRINTER CONTROL menu settings are changed.
- **Var. Length**. The physical label length is the longest print element defined in CREATE mode plus the setting of "Var Form Adjust." Works with CREATE;NAME;0
- **Var Dynamic Len**. The physical label length will change to the longest print element defined in EXECUTE mode plus the setting of "Var Form Adjust." Works with CREATE;NAME;0
- **Disable**. Forms printed in EXECUTE mode do not change the physical label size. Therefore, the size of the form (defined in CREATE mode) must fit within the current label dimensions, or errors may occur.

NOTE: Changing the form length via the EXECUTE command changes the LP+ Emulation logical dimensions.

The difference between Var. Length and Var Dynamic Len is as follows:

With CREATE;NAME;0, and the following parameters,

- 10 dynamic fields defined in CREATE mode (AF0, AF1,...,AF9) with different positions
- three dynamic fields are used in EXECUTE mode (provided with data)

when Var. Length is selected, the label length is based on the longest printed element among the 10 dynamic fields defined in CREATE mode.

When Var Dynamic Len is selected, the label length is based on the longest printed element among the three dynamic fields defined in EXECUTE mode.

If there is static data in the form, the static data position is taken into consideration when determining the longest printed element.

Host Form Length (IPDS)

Enables or disables changing the form length by the host.

- **Disable** (factory default). The host is unable to change the form length.
- **Enable**. The host may change the form length.

Host Form Length (VGL)

Sets the printer page size.

- **Enable** (factory default). Sets the printer label size equal to Label Length from the host form length command. (For more information, refer to the *VGL Programmer's Reference Manual*.)
- **Disable**. Sets the printer label size equal to the Label Length set in the front panel under the PRINTER CONTROL menu.

Host Override

Determines whether the printer accepts certain commands sent by the host, or continues to use the current operator panel settings.

- **Disable** (factory default). Allows these host commands to override operator panel settings: line length, forms length, lines per inch (LPI), characters per inch (CPI), print quality, and text orientation. Note the information appearing on the message display may not match the data stream setting. No values will change upon initial selection of the Disable option.
- **Enable**. The operator panel settings override the host commands.

Host PI

- **Disable** (factory default). The host does not send PI signals.
- **Enable**. The host sends PI signals. The Data Bit 8 configuration option must be disabled to transmit the PI line to the printer.

I-2/5 Selection

This option is added to be compatible with a special IGP-X00 customization. Usually, if Interleaved 2/5 bar codes have an odd number of digits, a leading zero is inserted in front of the data. However, this special IGP-X00 customization gives you the option of adding a space character at the end of the bar code instead.

- **Leading Zero** (factory default). A leading zero is inserted in front of the data.
- **Trailing Space**. A space is inserted at the end of the data instead of a leading zero.
- **X2 DPD**. When selected, I-2/5 bar code with a magnification X2 will use the specially configured ratios 3:3:6:5 rather than 3:6:9:12 for compatibility issues.
- **Modulo 7 CD**. The I-2/5 bar code uses a modulo 7 check digit instead of the default modulo 10 check digit.

Ignore Ch#1

Specifies character 1 for the character filtering option. Valid decimal values are from 0 through 255.

The factory default is 0.

Ignore Ch#2

Specifies character 2 for the character filtering option. Valid decimal values are from 0 through 255.

The factory default is 0.

Ignore Chars

- **Disable** (factory default). Character filtering is not enabled.
- **Char 1**. Character 1 will be filtered. Select the option “Ignore ch#1” to specify character 1.
- **Char 2**. Character 2 will be filtered. Select the option “Ignore ch#2” to specify character 2.
- **Char 1&2**. Characters 1 & 2 will be filtered. Select the options “Ignore ch#1” and “Ignore ch#2” to specify values for these characters.

Ignore Dots

- **Disable** (factory default). The VGL expects position values to be specified in tenth inches and dot rows.
- **Enable**. Causes the VGL to expect position values to be specified in only 1/10ths of an inch. If the dot position is also given, it is treated as text.

Ignore ^Lxx Cmd.

- **Disable** (factory default)
- **Enable**. The Form Length commands ^Lxx and ^Hxx will be ignored, and the form length will be determined by the “Form Length” menu in the LP+ menu.

Ignore Mode

This parameter instructs the IGP to ignore the character selected under the Select Character menu.

- **Disable** (factory default). The IGP does not ignore any characters.
- **Enable**. The IGP ignores the character specified in the Select Character menu.

Ignore Spaces

- **Disable** (factory default). Trailing spaces are not deleted from alphanumeric elements in a graphics pass.
- **Enable**. Trailing spaces are deleted from alphanumeric elements in a graphics pass.

Ignore Text

- **Disable** (factory default). When disabled, text in normal mode will be printed. Attributes to be printed depend on the PGL Normal menu setting.
- **Enable**. When enabled, any line of text (non-PGL commands) in normal mode will be ignored.

IGP100 Compatibl.

This parameter forces the output to correspond with IGP-100 printer output in cases where there are differences.

The options are Disable (factory default) and Enable.

Intervention Req

- **Send To Host** (factory default). The printer sends a signal to the host computer when a printer fault or hold mode time-out occurs.

NOTE: If you select Send To Host, make sure the Error Recover option (under MEDIA CONTROL) is set to Disable. If Error Recover is not set to Disable, Intervention Req will not work properly.

- **Do Not Send**. No signal will be sent to the host computer.

Italic Print

- **Disable** (factory default). Text is printed normally.
- **Forward Slant**. Text is printed with a forward slant.
- **Backward Slant**. Text is printed with a backward slant.

LAC Approx.

This item controls whether or not the LAC Approximation is used. (See the *Coax/Twinax Programmer's Reference Manual*.)

When set to On, then Approximation is used. When set to Off, Approximation is not used, and incoming data will print as is. The factory default is On.

LAC Option

Allows the host system to load alternate character images into the printer. This may be used for designing graphics, bar codes, and charts, or for printing in foreign languages.

- **Enable** (factory default). Prints the LAC character as defined.
- **Disable**. Ignores the LAC definition from the host and prints from the currently selected character set.

Last Char = FF

Determines the print line position when a Form Feed (FF) command is the last code encountered in the print buffer.

- **On** (factory default). Moves to the first print position on the second line of the next form.
- **Off**. Moves to the first print position on the first line of the next form.

NOTE: This option is ignored if Auto Skip At End is on.

If configured as a 3287, and a form feed occurs in the middle of a print buffer, the printer defaults to the first print position on the second line of the next form, regardless of the setting of this option.

Lead PDF Dist

Adjusts the leading and trailing character spacing distance of the PDF for UPC/EAN barcodes.

The range is 0.01- 0.10 inches in 0.01 inch increments, and the factory default is 0.10 inches.

Lead-in Chars

You can enable additional printer features which are not accessible through standard coax emulations. To access these features, send text commands in the data stream. The commands must have a start and end code. Three sets (each containing a start and end code) are available:

- **User Defined** (factory default)
- **Set 1** start code: <%
end code: >
- **Set 2** start code: ~~
end code: \$
- **Set 3** start code: _%
end code: _

Left Margin

Set in characters. Character zero is defined as the far left edge of the page, and column numbering increments from left to right.

The range is 0-369 characters, and the factory default is 0 characters.

Logical Buf Size

Refers to the size of the printer buffer, which should be set the same as the host screen (buffer) size. If the host screen size is unknown, use 1920.

The options are 960, 1920, 2560, 3440, and 3564.

The factory default is 1920.

LPI

This item selects the number of lines printed per inch.

The range is 6-10, and the factory default is 6.

Max PI 16

- **Enable** (factory default). A paper slew of 0-15 will move 1-16 lines.
- **Disable**. A paper slew of 1-15 will move 1-15 lines. A paper slew of 0 will always move 1 line.

Max. Print Width

Set the maximum print width the printer will print when using a C/T or TN5250 host interface. Set for 13.2 inches when printing files larger than the width of the printer. All data exceeding the width of the maximum Printer Width will be truncated.

- **13.2 inches** (factory default)
- **Printer Width** (the maximum width of the printer)

Midline PY (includes ^PN)

- **Disable** (factory default). The Graphics mode Enabled command, ^PY, must be the first three characters of a line.
- **Enable**. The ^PY or ^PN can occur anywhere in a line.

NL at MPP+1

Specifies the linespacing action when the printline exceeds the rightmost print position and text continues from the leftmost print position on a new line.

- **On** (factory default). Moves to the first print position two lines down from the current position.
- **Off**. Moves to the first print position of the next print line.

Null Handling

This item allows the printer to either treat nulls as blank spaces or ignore them. If nulls are ignored, the print position does not move.

- **Space** (factory default). Treats nulls as spaces.
- **Ignore**. Ignores nulls.

Null Suppression (Coax, TN3270)

This item allows the printer to either treat nulls as blank spaces or ignore them. If nulls are ignored, the print position does not move.

- **Off** (factory default). Ignores nulls.
- **On**. Treats nulls as spaces.

Null Suppression (IPDS)

- **Disable** (factory default). When disabled, an exception is generated when the IPDS data stream contains an 0x00.
- **Enable**. When enabled, this option ignores the EBCDIC value 0x00 in the IPDS data stream.

Optimized Ratio

This option selects different bar code ratios for certain bar codes including Code 39 and Interleaved 2 of 5. It is included for compatibility with the IGP-X00 printers.

- **Disable** (factory default). Use standard bar code ratios.
- **Enable**. Select the alternate bar code ratios.

Overstrike

Overstrike determines the action required when a line is printed over a previous line because a carriage return was received without a line feed.

- **Enable** (factory default). Prints the second line on top of the first line.
- **Disable**. Replaces the characters from the first line with the second line.

PA1

PA1 is only valid when the printer is in the offline state and the coax Systems Network Architecture Character Set (SCS) data stream is active. This function displays the “PA1 ENABLED” message when the ENTER key is pressed, and sends a special operator request to the host when the printer is put back online. Refer to the *Coax/Twinax Programmer's Reference Manual* for more information about SCS.

NOTE: Selecting PA1 again (“PA1 DISABLED” appears on the operator panel) or selecting PA2 will reset the pending PA1 function.

PA2

PA2 is only valid when the printer is offline and the coax SCS data stream is active. This function displays the “PA2 ENABLED” message when the ␣ key is pressed, and sends a special operator request to the host when the printer is put back online.

NOTE: Selecting PA2 again (“PA2 DISABLED” appears on the operator panel) or selecting PA1 will reset the pending PA2 function.

Page Rotation

This option rotates the physical IPDS page.

The options are 0, 90, 180, and 270.

The factory default is 0.

PDF Size Comp

This option is for compatability of the font size of the barcode printable data field on the old build.

- **Enable.** Matches the font size of the old build.
- **Disable** (factory default). Uses the normal font size.

PGL Normal

This option determines whether PGL passes the text data in Normal mode according to LP+ or whether PGL will print the text data itself.

- **LP+ Menu** (factory default). PGL will pass the text data to LP+ only in the default setting state (6 LPI, default character set, and font attribute).
- **PGL Menu.** PGL will always print the text data itself.

PI Slew Range

You can specify how many lines the paper will feed.

- **15.** A paper slew of 1-15 will move 1-15 lines. A paper slew of 0 will move 1 line.
- **16** (factory default). A paper slew of 0-15 will move 1-16 lines.

Position Aft FF

Allows you to select the location of the print position after a Form Feed command is sent.

- **Off** (factory default). Sets the printer to print at position 2 of the first print line on the next form.
- **On**. Sets the printer to print at print position 1 of the first print line on the next form.

Power on PGL

You can set the PGL feature so that it is enabled or disabled when the printer is powered on.

- **Enable** (factory default). The PGL is enabled when the printer is powered on. (The PGL feature is initialized in the Normal mode.)
- **Disable**. The PGL is disabled when the printer is powered on. (The PGL feature is initialized to the Quiet mode.)

Power-up ^F

- **Disable** (factory default).
- **Enable**. Selects free format mode as the power-up default, and selects the graphics mode ^PY as the power-up default. Free format causes the VGL to ignore carriage returns, line feeds, and all characters below 20 hex sent from the host.

Power-up ^PY

- **Disable** (factory default).
- **Enable**. Selects the graphics mode ^PY as the power-up default.

Power-up ^X

- **Disable** (factory default).
- **Enable**. Selects the ignore mode as the power-up default, and selects the graphics mode ^PY as the power-up default. All characters are ignored until a ^A command is received.

Preparser Port

Allows you to send preparser commands to the printer through any port.

- **Disable** (factory default). Not using the Preparser command.
- **Enable**. The preparser command can be accepted from any port.

Primary Subset

This item allows selection of the desired primary character subset used by the printer. The factory default is ASCII (USA).

Print Char. Set

Selecting this item by pressing the **↓** key causes the printer to print the currently selected character set.

Printer PI

- **Disable** (factory default). The LP+ Emulation is configured with the PI line disabled.
- **Enable**. The LP+ Emulation is configured with the PI line enabled.

Printer Select

- **Disable** (factory default). Ignores the ASCII DC1 and DC3 control codes.
- **Enable**. Disables the printer when a DC1 control code is received, and enables the printer when a DC3 control code is received.

Prop Line Length

- **Enable** (factory default). The position of the next graphic element will be determined by the physical length of a text string (when using a proportional spaced font).
- **Disable**. The position of the next graphic element will be determined as if the font was monospaced (all characters had the same specified width).

Prop. Spacing

Each printed character is contained inside a character cell. The width of the character cell includes the character and the space around the character.

- **Enable** (factory default). The width of each character cell varies with the width of the character. For example, [i] takes less space to print than [m]. Using proportional fonts generally increases the readability of printed documents, giving text a typeset appearance.
- **Disable**. Each character cell is printed with the same width. Each column in the printed text will line up.

PSeries Dbl High

This menu option allows printing compatibility between the current and older models of Printronix printers.

- **Normal** (factory default). This is normal Double High printing for current model printers.
- **P3/4/6/9 Compat**. Where older printers printed two dot rows higher, this option allows for compatibility by raising the print two dot rows to match the current models dot row value (two dot rows lower).

Repeat Form

When enabled, this menu speeds up the label printing for repeated form. This only applies to forms where the entire form is enclosed in the ^IREPV...^IREPE command.

- **Enable** (factory default). Speeds up the processing of repeated forms for PGL, thereby resulting in increased printer throughput. This option provides no speed benefit for forms that are unrelated to one another and should be disabled under those circumstances.
- **Disable**. Should be selected when subsequent forms are unrelated to one another.

Repeat Form Opt

- **Enable** (factory default). Speeds up the processing of repeated forms for PGL, thereby resulting in increased printer throughput. This option provides no speed benefit for forms that are unrelated to one another and should be disabled under those circumstances.
- **Disable**. Should be selected when subsequent forms are unrelated to one another.

Reset Cmd CFG Ld

When the printer receives a host data stream reset command (ESC@ or ESC[K) in addition to resetting printer variables, the selected configuration is loaded.

- **Disable** (factory default). The active emulation parameters are loaded when the reset command is executed.
- **Power up config**. The power-up configuration is loaded when the reset command is executed.
- **Current config**. The currently selected configuration is loaded when the reset command is executed.
- **Factory config**. The factory installed configuration is loaded when the reset command is executed.

Resident Fonts

This option selects either a bit-mapped font ("Compatible") or a scalable font ("Scalable") as the default font.

- **Compatible** (factory default). Selects a bit-mapped font as default.
- **Scalable**. Selects a scalable font as default.

Ret. Status Port

This option selects the port for the Return Status Commands (i.e., ~STATUS (PGL) and ~HS (PPI/ZGL)) to send the status data back to the Host. The options are Serial (factory default), E-NET Stat Port, USB, IEEE 1284, Disable, and E-NET Data Port.

Right Margin

Set in characters. Character zero is defined as the far right edge of the page, and column numbering increments from right to left.

The range is 0-369 characters, and the factory default is 0 characters.

Rot. Char Size

- **Adjusted** (factory default). Rotated (clockwise/counterclockwise), expanded characters have a different size than an unrotated character with the same size parameters.
- **Not Adjusted**. Rotated, expanded characters will be the same size as unrotated characters with the same size parameters.

Scalable Size

This option determines whether scalable characters are sized based on normal scaling or based on the size of block characters. If the option Block is set, then the scalable character are made to be the same size as block characters in the old IGP-X00 printers.

The options are Normal (factory default) and Block.

SCS Buffer Cntrl

This option functions like the Early Print Complete feature ("Early Print Cmpl (Coax, TN3270)" on page 197) but is for SCS only.

- **Don't Wait** (factory default). The printer does not wait until the buffer is printed before sending the print complete back to the host.
- **Wait Until Done**. The printer waits until the buffer has printed before sending the print complete back to the host.

NOTE: If set to Wait Until Done, printer speed may be reduced.

Select Char

Instructs the IGP which decimal character (0-255) to ignore from the host.

The range is 0-255, and the factory default is 0.

Select CPI

This item selects the characters per inch (CPI) value.

The options are 10.0, 12.0, 13.3, 15.0, 17.1, and 20.0 CPI.

The factory default is 10.0 CPI.

Select LPI

This is the number of lines to be printed per inch. For example, at 6 lpi there is 1/6 inch from the top of one print line to the top of the next print line.

The options are 6.0, 8.0, and 10.3 LPI.

The factory default is 6.0 LPI.

Select SFCC (PGL)

You can specify which decimal code (1-255) will be used as the Special Function Control Code (SFCC). The SFCC denotes that the following data is a PGL command.

The range is 1-255, and the factory default is 126.

Select SFCC (P-Series)

This P-Series feature allows you to select an ASCII code which defines the Special Function Control Code (SFCC) command code value. The factory default value is hex 01, but the P-Series options allow selection of any value ranging from hex 00 through hex 7F. This powerful feature permits the SFCC code to be assigned a value compatible with the application environment where the P-Series jobs originate. The most commonly used values include the following:

- **SOH (01 hex)**
- **ESC (1B hex)**
- **ETX (03 hex)**
- **Circumflex (5e hex)** - also called caret (^)
- **Tilde (7F hex)** - (~)

NOTE: Non-Printable ASCII code values range from hex 00 through hex 1F and also include hex 7F. Printable ASCII code values range from hex 20 through hex 7E. If a printable code value is chosen to define the SFCC code value, you must ensure that the printer data stream will not contain the same code value in printable text. Otherwise text containing the character for the SFCC control code value may be incorrectly processed as an SFCC command causing print errors.

The range is 0-7F, and the factory default is 1.

Select SFCC (IGP/VGL)

This option selects the Special Function Control Code. The default value is the caret ^ (decimal 94). Valid values are 17 through 255. Run a configuration printout to determine the currently selected SFCC.

The range is 17-255, and the factory default is 94.

Select SO Char

Allows you to specify a decimal code from 0 through 255 to be used in place of SO (Shift Out) as the control code which allows access for the alternate set of control function characters. See the description of the Code 128 barcodes in the *PGL Programmer's Reference Manual* for details.

The range is 0-255, and the factory default is 14.

Set Text Orientn (Coax, Twinax)

Specifies the direction in which characters are printed on the page. This allows the printer to print languages which are printed right to left instead of left to right.

- **Control By Host** (factory default). Allows printers configured as a 4234 to use the "Set Text Orientation" command from the host.
- **Left to Right.**
- **Right to Left.** When you select a right to left language, the host will be notified of print direction changes when the printer is put online.

Set Text Orientn (TN3270, TN5250)

Specifies the direction in which characters are printed on the page. This allows the printer to print languages which are printed right to left instead of left to right.

- **Left to Right** (factory default).
- **Right to Left.** When you select a right to left language, the host will be notified of print direction changes when the printer is put online.

SFCC Char (SPC Coax, SPC Twinax)

Determines what character is printed when an EBCDIC Logical Not character ¬ (Hex 5F) is received from the host.

- User Defined* (factory default)
- Set 1 <%>
- Set 2 ^^\$
- Set 3 _%_

SFCC d command

This menu option is for backward compatibility.

- **Even dot plot** (factory default). This option interprets the SFCC d command as even dot plot.
- **Double high.** This option interprets the SFCC d command as double high. Select this option for backward compatibility.

Skip Cmd Prefix

Stands for Skip Command Prefix. This parameter determines if the printer will print any data before a PGL command is received.

- **Enable** (factory default). The printer ignores all data before a PGL command.
- **Disable**. The printer will print all data before a PGL command.

Slash 0

This parameter allows you to print the numeral “0” with or without the slash. This option applies to all character sets except OCR A and OCR B.

- **Disable** (factory default). Zero is printed without a slash.
- **Enable**. Zero is printed with a slash.

Slashed Zero

This parameter allows you to print the numeral “0” with or without the slash. This option applies to all character sets except OCR-A and OCR-B.

- **Disable** (factory default). Zero is printed without a slash.
- **Enable**. Zero is printed with a slash.

Slew Relative

“Slewing” is rapid vertical paper movement. This parameter determines the number of lines slewed (either 1-15 lines or 1-16 lines) when an EVFU Slew Relative command is received.

The options are 1-15 lines (factory default) and 1-16 lines.

SPC Char Set

Allows you to select the print language character set. See page 159 for the options.

The default is 0500 Internat 5.

SPC Null Supp

SPC Null Supp stands for SPC Null Suppression.

- **Disable** (factory default). Ignores nulls. The print position does not move.
- **Enable**. Treats nulls as blank spaces.

SPC Space Supp

This option is only available in Coax SPC emulation and is used in LU3/DSC/DSE mode only.

- **Disable** (factory default). Treats nulls and spaces normally.
- **Enable**. If the entire line consists of spaces and nulls, the line will be discarded.

SPC Type (SPC Coax Setup)

- **PTX NI (Printronix Non-impact)** (factory default). This option causes the printer to not line wrap at 132 characters.
- **Avatar Comp**. This option causes the printer to line wrap at 132 characters despite the current print density allowing more characters per line.

SPC Type (SPC Twinax Setup)

Allows you to select a convertor which mimics a specific type of external protocol convertor:

- **MODE PTX NI** (factory default) for Printronix non-impact
- **MODE 219** for Model 219 protocol convertor
- **MODE P5000** for Printronix protocol convertor
- **MODE IBM** for the IBM protocol convertor

Standard Sets

This item allows you to select various character sets available from the "Character Group" item.

The options are Standard, Arabic, Cyrillic, European, Greek, Hebrew, and Turkish Sets.

The factory default is Standard Sets.

Text Length

Text Length is the printable length on the page below the top margin.


The range is 1-255, and the factory default is 66.

Text Position

Specifies where the text will be positioned in the line space.

- **Top of Line**. Text is positioned at the top of the line space.

- **Bottom of Line** (factory default). Text is positioned as if it were at the bottom of a 6 lpi line space. The following example shows both Top of Line and Bottom of Line text positions:

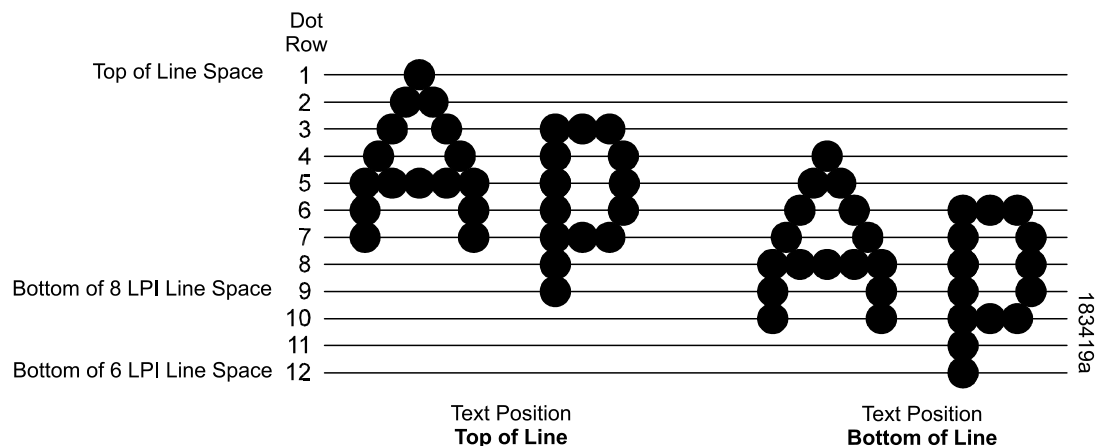

Top Margin

Defined in linespaces, starting from line zero at the top of the page and incrementing from the top down.

The range is 0-451 linespaces, and the factory default is 0 linespaces.

Translate Table

- **Default** (factory default). The option is disabled. The table is not stored in the real translation table until the option is enabled.
- **Downloaded**. The option is enabled. The LU3 Translation Table is loaded from the buffer into the permanent table.

Translation Tbl (Coax, TN3270)

Prints SCS and DSC/DSE tables of the coax interface's current character set. This operation is valid only when the coax interface is selected as the current interface.

Translation Tbl (SPC Coax)

Prints a table of the coax interface's current character set. This operation is valid only when the coax interface is selected.

Translation Tbl (SPC Twinax)

Prints a table of the twinax interface's current character set. This operation is valid only when the twinax interface is selected.

Translation Tbl (TN5250, Twinax)

Prints a table of the twinax interface's current character set. This operation is valid only when the twinax interface is the current interface.

True Vert 1/10

- **Disable** (factory default). When disabled and in High Resolution, a vertical line's length in one inch and 1/10 inch increments is interpreted as 70/72 inch and 7/72 inch respectively.
- **Enable**. When enabled, a vertical line's length is interpreted exactly, which is 72/72 inch in one inch increments.

Trunc Dyn Data

This submenu allows the user to truncate the dynamic data up to the maximum data length specified in Create Mode.

- **Disable** (factory default). If the dynamic data exceeds the maximum data length, an error will report.
- **Enable**. If the dynamic data exceeds the maximum data length, the data truncates.

Truncate Alpha

- **Enable** (factory default). Prevents the printing of Error 48 (Element Off Page Error) if alphanumeric data, including spaces, extends beyond the right side of the form.
- **Disable**.

Twinax Type

This parameter defines the printer emulation as follows:

- **IPDS 256 Bytes** (factory default)
- **IPDS 1024 Bytes**
- **5225**
- **4234**

After the emulation has been changed, a POR status is sent to the host.

Typeface

- **Letter Gothic** (factory default). Letter Gothic is a non-proportional font where all of the characters take up the same amount of space when printed.
- **Courier**. Courier is a non-proportional (monospaced) font where all characters take up the same amount of space when printed.
- **OCR-A / OCR-B**. Optical character recognition fonts printing at 120 dpi horizontally and 144 dpi vertically. Both fonts print only at 10 cpi.

Uniform Fonts

- **Disable** (factory default). The typeface selected while in Extended Graphics Mode will be cancelled when the graphics pass is complete.
- **Enable**. The typeface selected while in Extended Graphics Mode will also be used in Standard Graphics Mode and Normal Mode.

UPC Descenders (PGL)

This parameter allows you to print bar code descenders when human readable data is not presented in the UPC/EAN bar codes.

- **Always** (factory default). UPC/EAN bar codes are printed with descenders, even if there is no human readable data.
- **Never**. UPC/EAN bar codes are printed without descenders if the PDF command is present.
- **Only With PDF**. UPC/EAN bar codes are printed with descenders only when the PDF command is presented.

UPC Descenders (VGL)

- **Enable** (factory default). UPC/EAN bar codes are printed with descenders, even if there is no human readable data.
- **Disable**. UPC/EAN bar codes are printed without descenders if there is no human readable data.

Upr. Case Select

Controls how the printer handles lowercase characters it receives from the host computer. When enabled, all characters are printed in uppercase.

- **Disable** (factory default). Prints lowercase characters received from the host computer as lowercase; prints uppercase characters received from the computer as uppercase.
- **Enable**. Prints lowercase characters received from the host computer as their corresponding uppercase equivalents; prints uppercase characters received from the computer as uppercase.

User-Def Ratio

This option allows you to ignore the user-defined barcode ratio and replace it with the default ratio (X1).

- **Enable** (factory default). Allows the user-defined barcode ratio.
- **Disable**. The user-defined barcode ratio will be replaced with the default ratio (X1).

User-Defined St1 (Start Code 1)

This option allows you to define your own value (in ASCII characters) for the User Defined option in the Lead-in Chars menu. "St1" specifies Start Code 1. See "Lead-in Chars" on page 208 for additional information.

The range is 40 - FF, and the factory default is 5F.

User-Defined St2 (Start Code 2)

This option allows you to define your own value (in ASCII characters) for the User Defined option in the Lead-in Chars menu. "St2" specifies Start Code 2. See "Lead-in Chars" on page 208 for additional information.

The range is 40 - FF, and the factory default is 5F.

User-Defined Stp (Stop Code)

This option allows you to define your own value (in ASCII characters) for the User Defined option in the Lead-in Chars menu. "Stp" specifies Stop Code. See "Lead-in Chars" on page 208 for additional information.

The range is 40 - FF, and the factory default is 5B.

Var Form Adjust

This specifies an amount (in tenths of inches) to add to the length of variable-length forms. Variable-length forms use a semicolon at the end of the CREATE command: ~CREATE;<FORMNAME>;0.

Typically, variable-length forms are determined by the elements within the form. The longest form element becomes the overall form length. This option allows an additional space to be added to the form length.

The range is 00.0 to 03.0 inches, and the factory default is 00.0 inches.

Var Form Type

- **Add Nothing** (factory default). When selected, no action is taken.
- **Add ;0**. When selected, the form length ends at the longest printed element. (Same as ~CREATE;filename;0)
- **Add ;X**. When selected, the form length is the same as the physical page length (the Label Length menu under MEDIA CONTROL). (Same as ~CREATE;filename;X)

VPA Check

- **Enable** (factory default). The printer checks for dots that fall outside the intersection of the logical and physical pages. If dots fall outside the area, the printer reports an error to the host if the IPDS Exception Handling Control command setting requires error reporting.
- **Disable**. The printer does not report dots outside the valid printable area.

Width Limit

When enabled, the system will limit the length and width for expanded characters to a limit shown in Table 7, which shows the maximum width allowed for a specific height in the range of 00 through 40 (0.0 through 4.0 inches).

The factory default is Disable.

Table 7. Width Limit Table

Height Param.	Max. Width Allowed	Height Param.	Max. Width Allowed
00	99	21	51
01	99	22	53
02	3	23	56
03	6	24	58
04	8	25	61
05	11	26	63
06	13	27	66
07	16	28	68
08	18	29	71
09	21	30	73
10	23	31	76
11	26	32	78
12	28	33	81
13	31	34	83
14	33	35	86
15	36	36	88
16	38	37	91
17	41	38	93
18	43	39	96
19	46	40	98
20	48		


XOH-SMO Support

This option allows the user to disable reporting of XOH-SMO support in the STM reply.

This feature has been added because some hosts will not send an IPDS XOH-SMS to a printer that reports it is a Continuous Forms printer, and also supports XOH-SMO.

- **Enable** (factory default). The printer reports that it has support for XOH-SMO.
- **Disable**. The printer does not report that it has support for XOH-SMO.

DIAGNOSTICS

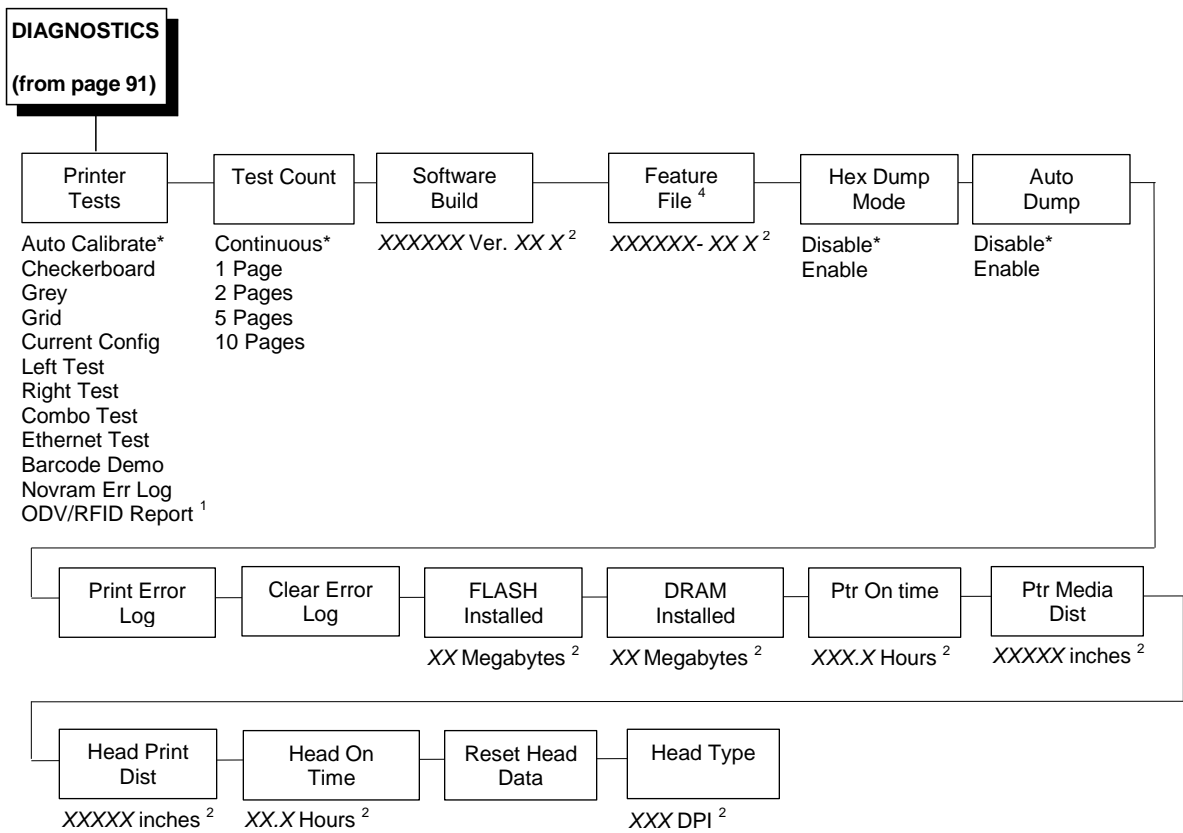

* = Factory Default
1 Appears only if the validator and/or RFID encoder is installed.
2 You cannot change this value; it is a display only item.
3 The menu appears only if a feature file has been downloaded to the printer.

DIAGNOSTICS Submenus

Printer Tests

The printer tests below allow you to check for proper printer operation and print quality:

- **Auto Calibrate** (factory default). Senses paperout, perforation, gap, or mark, and calibrates the printer for the currently installed media.
- **Checkerboard**. This pattern helps identify marginal printhead elements, quality of edge sharpness, and uneven print quality.
- **Grey**. This pattern helps identify burned out printhead elements and uneven print quality.
- **Grid**. This pattern helps identify edge sharpness and uneven print quality.
- **Current Config**. Prints the current printer configuration and helps identify the text print quality. Also prints Printhead statistical data in the header.
- **Left Test**. Prints a pattern containing a series of ladder-type bar code symbols, starting with four and decrementing by one symbol on each print until a single symbol prints on the *left* side. This pattern helps identify ribbon wrinkle problems.
- **Right Test**. Prints a pattern containing a series of ladder-type bar code symbols, starting with four and decrementing by one symbol on each print until a single symbol prints on the *right* side. This pattern helps identify ribbon wrinkle problems.
- **Combo Test**. Prints a combined left test and right test.
- **Ethernet Test**. Prints the Network Interface statistics.
- **Barcode Demo**. Prints text and barcodes with the barcodes positioned at the left and right margins of the standard label media supplied with the printer. The test automatically produces output for 4, 6, and 8 inch printers at 203 dpi and 300 dpi.
- **Novram Error Log**. Prints detailed information about the most recent Novram related failure. This option is useful when the control panel displays “Bad NVM” or “ILL NVM” type errors. Contact the Customer Support Center if such an error occurs.
- **ODV/RFID Report**. This item appears only if the validator and/or RFID encoder is installed. Prints a report of the validation and/or RFID statistics since the printer was turned on or since the last data reset.

Once you have selected the desired test pattern, press \downarrow to start printing. If the Test Count option (below) is set to Continuous (factory default), press \downarrow again to stop printing.

Test Count

This item selects the number of times the selected test pattern will be printed.

The options are Continuous (factory default), 1 Page, 2 Pages, 5 Pages, and 10 Pages.

Software Build

This is the reference number which includes the program file part number and revision number of the software installed in the printer, e.g., 358186 V1.07G.

Feature File

Displays the part number only when a feature file has been installed.

Hex Dump Mode

- **Disable** (factory default).
- **Enable.** The printer prints out data sent from the host in hexadecimal format.

Also see page 202.

Auto Dump

- **Disable** (factory default).
- **Enable.** When the printer displays an E03x type message on the control panel, a dump file is automatically created and stored in flash as “autodbg1.dbg” or “autodbg2.dbg” in the printer file system. This file can be uploaded to the host using the PrintNet Enterprise Suite application. Upon receipt of this file, it should be sent to the Printronix Customer Support Center for review and evaluation.

Print Error Log

Prints the current log of errors. Most non-routine faults (RIBBON FAULT, PRINT HEAD HOT) are stored in the error log.

Clear Error Log

Clears entries in the error log.

FLASH Installed

Displays the amount of FLASH memory installed in megabytes.

DRAM Installed

Displays the amount of DRAM installed in megabytes.

Ptr On Time

Displays the cumulative time in hours the printer has been powered on. This value is set to zero at the factory.

Ptr Media Dist

Displays the cumulative number of inches the printer has moved media. This value is set to zero at the factory.

Head Print Dist

Displays the length of media actually printed since the last Reset Head Data operation. This value is set to zero at the factory.

Head On Time

Displays the time that power has been applied to the printhead since the last Reset Head Data operation. This value is set to zero at the factory.


Reset Head Data

Resets all printhead statistics values (Head Prt Dist and Head On Time) to zero.

Head Type

Displays the printhead type installed in dots per inch (203 dpi or 300 dpi).

PARALLEL PORT

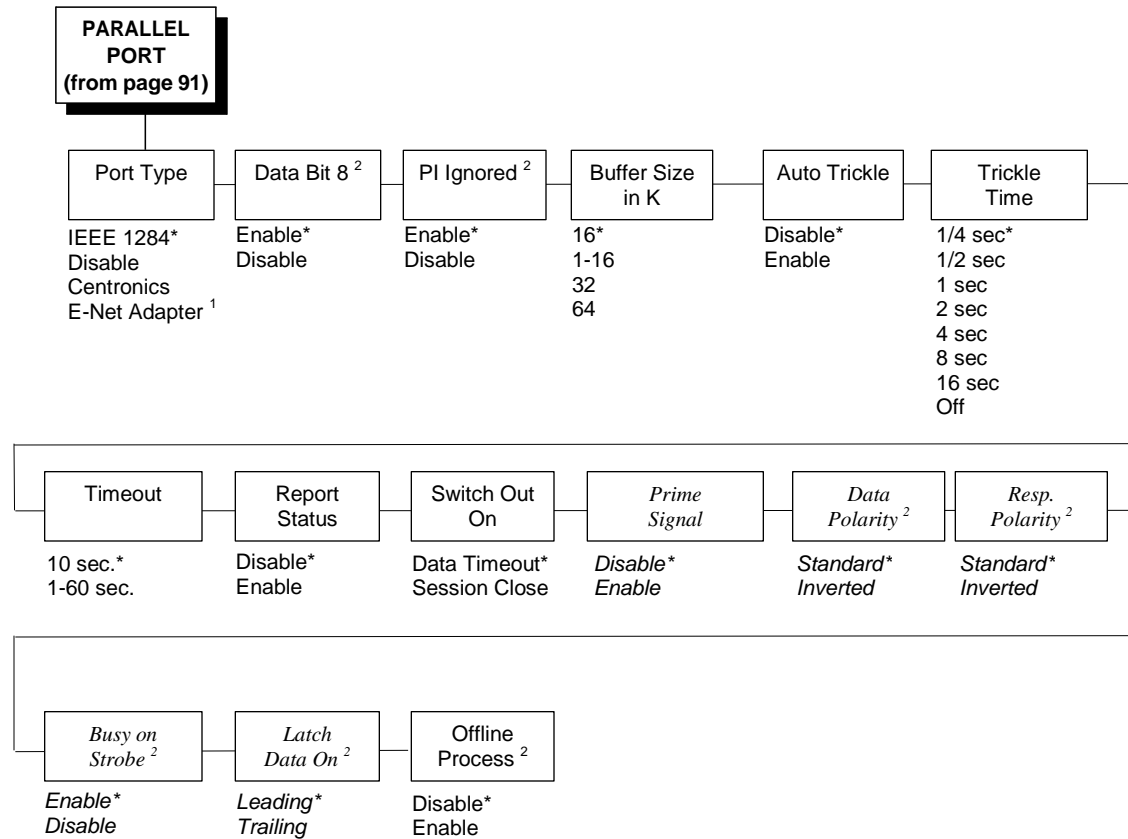

Notes:

* = Factory Default

Italicized items are available only when Admin User is enabled (in the PRINTER CONTROL menu).

¹ Available only when E-Net Adapter is installed.

² Available only when the Centronics option is enabled (in the Port Type submenu of PARALLEL PORT).

PARALLEL PORT Submenus

Port Type

This menu item selects the type of printer parallel port interface to be used with the host.

The options are IEEE 1284 (factory default), Disable, Centronics, and Ethernet.

Data Bit 8

- **Enable** (factory default). The PI line is not passed directly from host to printer; all 8 bits are used for data bits, and characters in the hex 80-FF range can be accessed.
- **Disable**. When the host PI line is enabled, data bit 8 internally indicates PI line status. To use the PI line, disable data bit 8, and enable the Host PI configuration option (under the PI Ignored option).

NOTE: Data bit 8 is interpreted as either data bit 8 or PI signal, but never both. When enabled as data bit 8, data bit 8 has priority over the PI signal, and all data above hex 7F is used to access character data and not to interpret PI line data.

Conversely, when data bit 8 is disabled and the PI signal is used, data bit 8 of the data is reserved for use as the PI function, and you cannot access characters in the hex 80-FF range. Therefore, to access characters in the hex 80-FF range, data bit 8 must be enabled.

PI Ignored

The PI (Paper Instruction) signal is used to control vertical paper motion.

- **Enable** (factory default). Ignores the PI signal and treats the data as characters or control codes.
- **Disable**. Causes the printer to interpret the eight data lines as VFU commands when the PI signal is true.

Buffer Size in K

This option configures the amount of memory allocated for the ethernet buffer. The range is 1-16 Kbytes, 32 Kbytes, and 64 Kbytes in 1-Kbyte increments.

The factory default is 16 Kbytes.

Auto Trickle

This feature is used to prevent a host computer from “timing out” because the parallel interface is “busy” for too long.

- **Enable** (factory default). When the printer’s buffers are almost full, the printer begins to trickle data in from the host (at the rate set in the Trickle Time menu) until the buffers start to empty out.
- **Disable**. The Auto Trickle feature is not used.

Trickle Time

When the printer is printing data from a host and a second print job is received by the printer from a different host, Trickle Time prevents the second host from timing out while it is waiting for its data to be printed. In order to support this feature, the port has to be able to accept data from the host and store it for future use.

For example, if the printer is printing a job from the serial port, and then receives a second print job from the parallel port, the data from the parallel port will “trickle” bit by bit into the printer buffer to prevent a timeout error from being sent back to the host connected to the parallel port.

The selected value is the time that the printer waits before getting the next byte of data from the host. The Trickle Time value should be less than the host time out value, but not too much shorter or else the printer fills up its buffer too fast. This function is not applicable for C/T hotport.

The options are 1/4, 1/2, 1, 2, 4, 8, and 16 seconds and Off.

The factory default is 1/4 second.

Timeout

This is the value used by the printer to time out from the current port and check the other selected port types for data to print. When the printer has not received data from the host after a certain period of time, it needs to time out in order to service the other ports.

The range is 1-60 seconds, and the factory default is 10 seconds.

Report Status

- **Disable** (factory default). When a fault occurs on the printer, only the active port reports the fault to the host.
- **Enable**. The port will report any fault even when it is not the current active port.

Switch Out On

- **Data Timeout** (factory default). Allows Autoswitching when no data has been received for the selected Time Out period.
- **Session Close**. Allows Autoswitching only when the Network Socket is closed.

Prime Signal

- **Disable** (factory default). The parallel port will not perform a warm start (reboot) if the host asserts the Prime Signal.
- **Enable**. The parallel port will perform a warm start (reboot) if the host asserts the Prime Signal.

Data Polarity

The Data Polarity parameter must be set to match the data polarity of your host computer.

- **Standard** (factory default). Does not expect the host computer to invert the data.
- **Inverted**. Expects the data received on the data lines from the host computer to be inverted. Ones become zeros and vice versa.

Resp. Polarity

The Response Polarity parameter must be set to match the response polarity of your host computer.

- **Standard** (factory default). Does not invert the response signal.
- **Inverted**. Inverts the response signal sent to the host computer.

Busy on Strobe

- **Enable** (factory default). Asserts a busy signal after each character is received.
- **Disable**. Asserts a busy signal only when the print buffers are full.

Latch Data On


Specifies whether the data is read on the leading or trailing edge of the data strobe signal.

The options are Leading (factory default) and Trailing.

Offline Process

- **Disable** (factory default). When set to disable, the printer does not process parallel/network data while offline.
- **Enable**. When set to enable, the printer continues to process (but not print) the current network/parallel job while the printer is offline until the printer's buffer is full.

SERIAL PORT

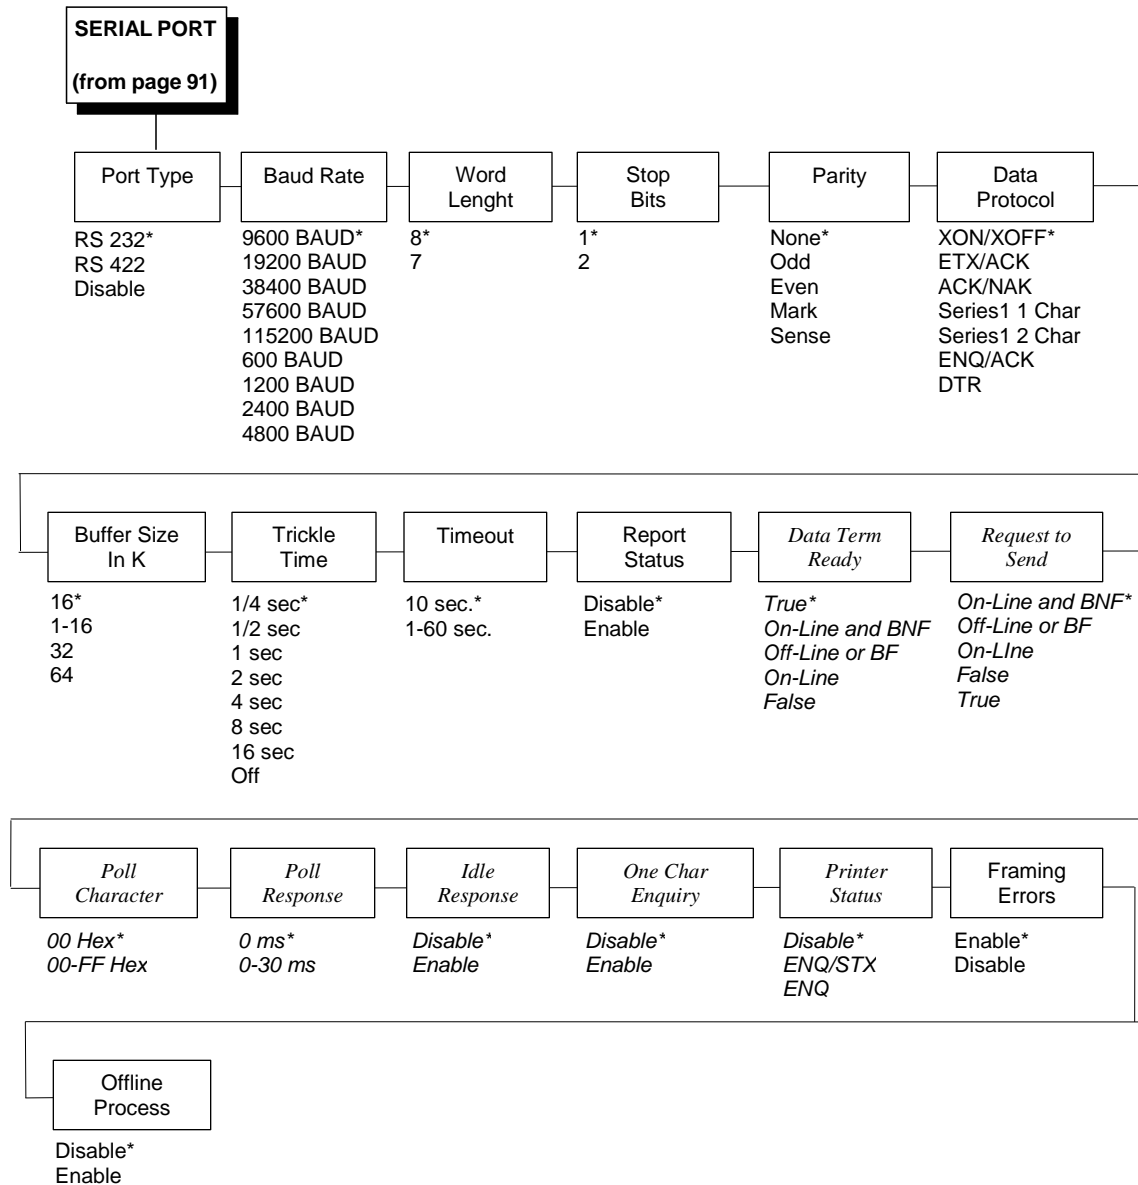

Notes:

* = Factory Default

Italicized items are available only when you enable Admin User (in the PRINTER CONTROL menu).

SERIAL PORT Submenus

Port Type

This item allows you to select the type of printer serial port interface, RS-232 or RS-422, to be used with its host. The serial port can also be disabled.

The factory default is RS 232.

Baud Rate

Sets the baud rate of the serial interface in the printer. Baud rate is the speed at which serial data is transferred between the host computer and the printer. The options for the RS-232 and RS-422 interfaces are 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200 Baud.

NOTE: If you select a baud rate that is greater than 19200 and you experience data loss, you may need to lower the baud rate or use RS-422. You also may need to increase the Buffer Size in K parameter to improve performance.

The factory default is 9600.

Word Length

Sets the length of the serial data word. The length of the data word can be set to 7 or 8 bits and must match the corresponding data bits setting in the host computer.

The factory default is 8.

Stop Bits

Sets the number of stop bits in the serial data word. Either 1 or 2 stop bits can be selected. The setting must match the corresponding stop bit setting in the host computer.

The factory default is 1.

Parity

The options are Odd, Even, Mark, Sense, or None. The setting must match the corresponding parity setting in the host computer.

The factory default is None.

Data Protocol

You can select one of the following serial interface protocols to meet the host interface requirements.

- **XON / XOFF** (factory default). The printer controls the flow of communication from the host by turning the transmission on and off. In some situations, such as when the buffer is full or the timing of signals is too slow or too fast, the printer will tell the host to stop transmission by sending an XOFF character. An XOFF character is sent when the number of empty bytes in the buffer is less than or equal to 25 percent of the buffer size. If the host keeps sending data after an XOFF is sent, the printer firmware will continue to send an XOFF for every 16 characters received. When cleared, the printer will resume receiving data (XON). The data does not have any End of Text codes; XON / XOFF is a non-block protocol.
- **ETX / ACK**. End of Text / Acknowledge. The host controls the flow of communication to the printer by sending a block of data and ending the block with an End of Text (ETX) signal. When the printer receives the ETX signal, it will acknowledge the ETX, thereby acknowledging it has received the entire block of data.
- **ACK / NAK**. ACK means acknowledge; the device acknowledges it has accepted a transmission. NAK means negative acknowledge; the device did not receive the transmission.
- **Series1 1 Char**. The printer controls the flow of communication from the host by turning the transmission on and off using response characters sent to the host. If the number of valid bytes in the buffer reaches 75 percent of the buffer size, the online or offline and buffer full response character is sent. If the buffer is completely full, an online or offline buffer full response is sent every time a character is sent from the host. Whenever the printer state changes to online or offline, the appropriate response character is sent. If the idle response option is enabled, the printer will send a response character every two seconds while the number of valid bytes in the buffer is less than 75 percent of the buffer size. If a poll character is received (configurable from the Poll Character xx Hex option on the front panel from hex 0 through FF), the printer will send a response character *n* milliseconds later (configurable from the Poll Character xx MS on the front panel from 0 through 30). This *n* milliseconds is called the poll delay. The poll character will be removed from the input data stream and will not be processed. This may cause problems with the transmission of binary data (e.g., control codes, bit image, etc.). If a poll delay is started due to the receipt of a poll character and another poll character is received, the second poll character has no effect and is removed from the input data stream. If a transition (from buffer full to empty or online to offline) occurs during a poll delay, the new printer state will be sent at the end of the poll delay.

The response characters are described below.

Printer State	Response
Online and Buffer Empty	CR
Online and Buffer Full	3
Offline and Buffer Empty	0
Offline and Buffer Full	2

- **Series1 2 Char.** This protocol behaves exactly the same as the Series 1 Char except there is a two-character response to the host. The response characters are described in the following table:

Printer State	Response
Online and Buffer Empty	1 CR
Online and Buffer Full	3 CR
Offline and Buffer Empty	0 CR
Offline and Buffer Full	2 CR

- **ENQ/ACK.** Enquiry/Acknowledge. The host controls the flow of communication to the printer by sending a block of data and ending the block with an Enquiry (ENQ) character. When the printer receives the ENQ Character, it acknowledges the ENQ, thereby acknowledging it has received the entire block of data. Status will also be sent before the ACK. The status is as follows:

Printer State	Status
Online	40 06
Online or Paper Motion Fault	43
Platen Open or Paper Out	47

- **DTR.** The printer controls the data flow by sending this hardware signal to the host. If there is enough room in the printer buffer, the printer will send a high signal; if the buffer is full, the printer will send a low signal. DTR tells the host if it is safe to send more data. (If the host sends data during an unsafe condition, data will be lost.) DTR is not available when RS-422 is selected.

Buffer Size in K

This option configures the amount of memory allocated for the serial port buffer. The range is 1-16 Kbytes, 32 Kbytes, and 64 Kbytes in 1-Kbyte increments.

NOTE: If you select a baud rate that is 19200 or greater, you may need to increase the Buffer Size in K parameter from the default to 16 Kbytes to improve performance.

The factory default is 16.

Trickle Time

When the printer is printing data from a host and a second job is received by the printer from a different host, Trickle Time prevents the second host from timing out while it is waiting for its data to be printed. In order to support this feature, the port has to be able to accept data from the host and store it for future use.

For example, if the printer is printing a job from the serial port and then receives a second print job from the parallel port, the data from the parallel port will “trickle” bit by bit into the printer buffer to prevent a timeout error from being sent back to the host connected to the parallel port.

The selected value is the time that the printer waits before getting the next byte of data from the host. The Trickle Time value should be less than the host time out value, but not too much shorter or else the printer fills up its buffer too fast. This function is not applicable for C/T hotport.

The options are 1/4, 1/2, 1, 2, 4, 8, and 16 seconds and Off.

The factory default is 1/4 sec.

Timeout

This is the value used by the printer to time out from the current port and check the other selected Port Types for data to print. When the printer has not received data from the host after a certain period of time, it needs to time out in order to service the other ports.

The range is from 1 to 60 seconds, and the factory default is 10 seconds.

Report Status

When a fault condition occurs in the printer, normally only the active port reports the fault to the host. With this menu item enabled, the port will report any fault even when it is not the current, active port.

The options are Disable (the factory default) and Enable.

Data Term Ready

Stands for Data Terminal Ready. This configuration is part of hardware flow control and determines when the Data Terminal Ready (DTR) signal is generated. This signal indicates if the printer is ready to receive data.

- **True** (factory default). Continuously asserts the DTR signal.
- **On-Line and BNF (buffer not full)**. Asserts the DTR signal when the printer is online and the internal serial buffer is not full.
- **Off-Line or BF (buffer full)**. Asserts the DTR signal when the printer is offline or the internal serial buffer is full.
- **On-Line**. Asserts the DTR signal when the printer is online.
- **False**. Never asserts the DTR signal.

Request to Send

This configuration is part of hardware flow control and determines when the Request to Send (RTS) signal is generated. This signal indicates whether or not the printer is ready to receive data.

- **On-Line and BNF** (factory default). Asserts the RTS signal when the printer is online and the internal serial buffer is not full.
- **Off-Line or BF**. Asserts the RTS signal when the printer is offline or the internal serial buffer is full.
- **On-Line**. Asserts the RTS signal when the printer is online.
- **False**. Never asserts the RTS signal.
- **True**. Continuously asserts the RTS signal.

Poll Character

This option is for the Series1 protocol. Whenever the printer receives this character, it sends a response to the host indicating the current state of the printer (see Series1 protocol).

The range is 00-FF Hex, and the factory default is 00 Hex.

Poll Response

This option is for the Series1 protocol. After receiving a poll character, the printer will wait the poll response time in milliseconds before sending the response.

The range is from 0 to 30 ms, and the factory default is 0 ms.

Idle Response

This option is for the Series1 protocol.

- **Disable** (factory default).
- **Enable**. The printer sends a response character every two seconds while the number of valid bytes in the buffer is less than 75 percent of the buffer size.

One Char Enquiry

The One Char Enquiry mode uses the Poll Character to detect a request from the host and sends a response back to the host. This option also allows you to turn on and off this feature.

Table 8. One Char Enquiry Response Characters

Printer State	Response (hex)
Online and Buffer Not Full	22
Online and Buffer Full	23
Offline and Buffer Not Full	20
Offline and Buffer Full	21

The Poll Character is removed from the data stream. If the Data Protocol is set to ETX/ACK, ACK/NAK, or Series1, One Char Enquiry is automatically disabled.

The options are Disable (factory default) and Enable.

Printer Status

- **Disable** (factory default). Printer status ignored.
- **ENQ/STX** (see Table 9).
- **ENQ** (see Table 10).

When enabled, the printer will respond to an ENQ character by sending a status byte to the host. The type of status byte is determined by a Front Panel Menu selection. The selections allowed are ENQ/STX and ENQ. The ENQ is removed from the data stream.

Table 9. ENQ/STX Status Byte

Bit	Printer Status
0	Set when the printer is not online or the buffer is full.
1	Set when the printer is offline.
2	Clear during a paper out or RibbonMinder fault.
3	Always set.
4	Set during a Head Open fault.
5	Set during a buffer overflow fault.
6	Set during a parity or framing error fault.
7	Always clear.

Table 10. ENQ Status Byte

Bit	Printer Status
0	Set when the label has printed.
1	Set when the label is presented.
2	Set while the printer is online.
3	Always set.
4	Set printing in the batch mode.
5	Set during a Ribbon fault.
6	Set during a Paper Out fault.
7	Set during a Head Open fault.

Framing Errors


These are possible errors that can occur when serial interface settings of the printer do not match those of the host computer.

- **Enable** (factory default). If a framing error occurs, a fault message will display on the control panel.
- **Disable**. If a framing error occurs, a fault message will not display on the control panel.

Offline Process

- **Disable** (default). When set to disable, the printer does not process serial data while offline.
- **Enable**. When set to enable, the printer continues to process (but not print) the current serial job while the printer is offline until the printer's buffer is full.

C/T PORT

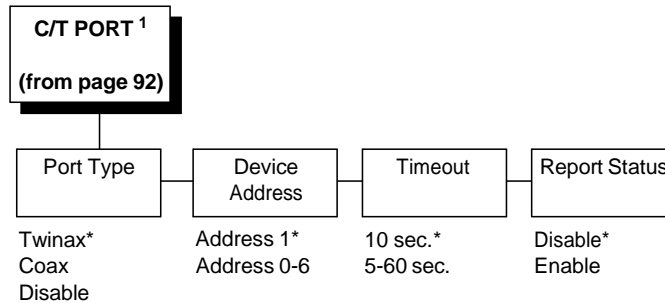

Notes:

* = Factory Default

¹ This menu appears only if the CTHI option is installed.

C/T PORT Submenus

Port Type

This item selects the desired active CTHI interface and appears only when the CTHI option is installed.

The factory default is Twinax.

Device Address

Allows you to set the device address from 0 through 6. The host directs data and commands on the twinax line to a specific device based on its unique device address. After the address has been changed, a Power On Reset (POR) status is sent to the host.

The factory default is 1.

Timeout

This item allows you to set the time that the printer, when it has not received data from its host, will begin to service all other host ports looking for data to print.

The range is from 5 to 60 seconds, and the factory default is 10 seconds.

Report Status

When a fault condition occurs in the printer, normally only the active port reports the fault to the host. With this item enabled, the port will report any fault even when it is not the current, active port.

The options are Disable (factory default) and Enable.

USB PORT

USB PORT ¹ (from page 92)

Buffer Size
in K

16*
1-16
32
64

Timeout

10 sec.*
1-60 sec.

Notes:

* = Factory Default

¹ This menu appears only if the USB option is installed.

USB Port Submenu

Buffer Size in K

This option configures the amount of memory allocated for the serial port buffer. The range is from 1 to 16 Kbytes, 32 Kbytes, and 64 Kbytes in 1-Kbyte increments.


The factory default is 16.

Timeout

This item allows you to set the time that the printer, when it has not received data from its host, will begin to service all other host ports looking for data to print.

The range is from 1 to 60 seconds, and the factory default is 10 seconds.

ETHERNET PORT

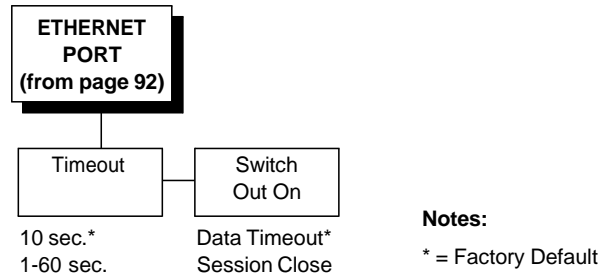

ETHERNET PORT Submenu

Timeout


This item allows you to set the time that the printer, when it has not received data from its host, will begin to service all other host ports looking for data to print.

The range is from 1 to 60 seconds, and the factory default is 10 seconds.

Switch Out On

- **Data Timeout** (factory default). Allows Autoswitching when no data has been received for the selected Time Out period.
- **Session Close**. Allows Autoswitching only when the Network Socket is closed.

ETHERNET ADDRESS

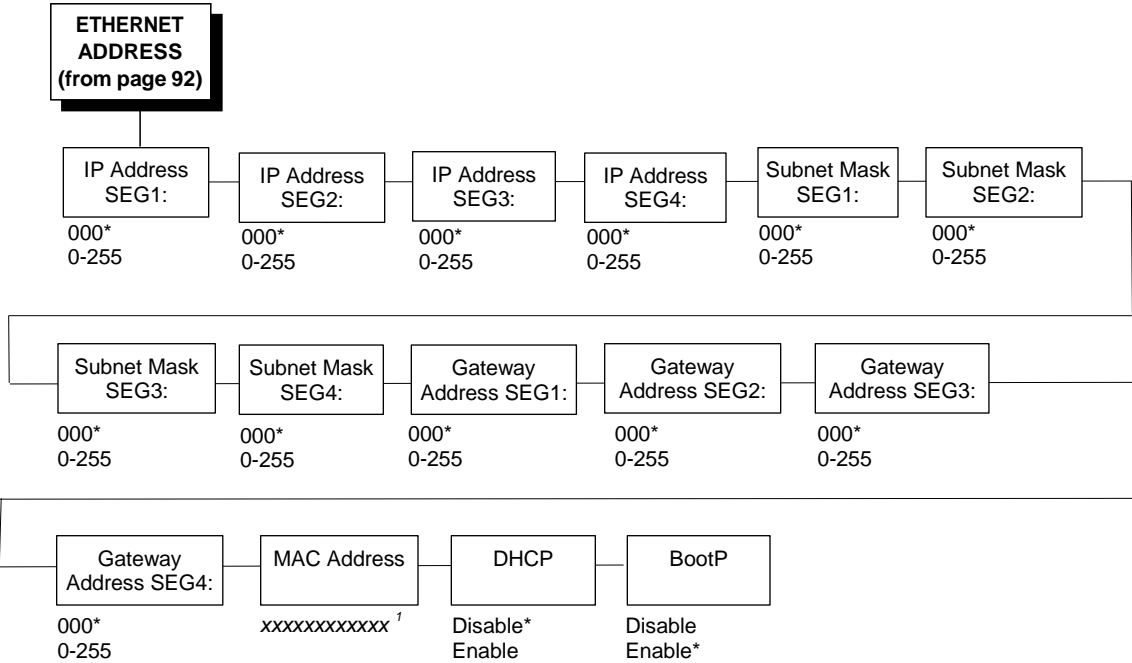

Notes:
* = Factory Default
¹ You cannot change this value; it is a display only item.

ETHERNET ADDRESS Submenus

IP Address

This item allows you to set the IP Address for the TCP/IP protocol in four three-digit segments (SEG1 through SEG4). If the IP Address is assigned by BootP, ARP or DHCP, it is dynamic and read-only.

The factory defaults for the SEG1 through SEG4 are 000, 000, 000, and 000.

NOTE: The printer reboots when it is placed online.

Subnet Mask

This item allows you to set the Subnet Mask for the TCP/IP protocol in four three-digit segments (SEG1 through SEG4). If the Subnet Mask is assigned by BootP, Arp or DHCP, it is dynamic and read-only.

The factory defaults for the SEG1 through SEG4 are 000, 000, 000, and 000.

NOTE: The printer reboots when it is placed online.

Gateway Address

This item allows you to set the Gateway Address for the TCP/IP protocol in four three-digit segments (SEG1 through SEG4). If the Gateway Address is assigned by BootP, ARP or DHCP, it is dynamic and read-only.

The factory defaults for the SEG1 through SEG4 are 000, 000, 000, and 000.

NOTE: The printer reboots when it is placed online.

MAC Address

This item is the Manufacturer's Assigned Number, and is unique for each NIC. It is read-only.

DHCP

You can enable/disable the DHCP protocol using this option, but consult your administrator for the appropriate setting.

The options are Disable (factory default) and Enable.

NOTE: The printer reboots when it is placed online.


BootP

You can enable/disable the BootP protocol using this option. Be sure to consult your administrator for the appropriate setting.

The options are Disable and Enable (factory default).

NOTE: The printer will reboot when it is placed online.

ETHERNET PARAMS

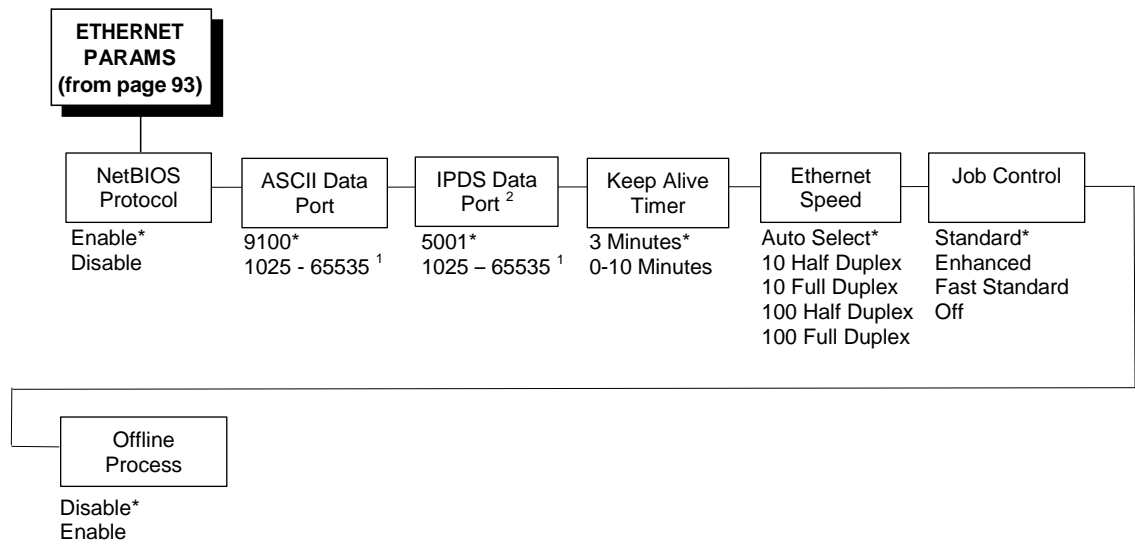

Notes:
* = Factory Default
¹ Set the port number that works with your host system.
² This menu appears only if the IPDS security key is used.

ETHERNET PARAMS Submenus

NetBIOS Protocol

- **Enable** (factory default). The NIC will respond to the NetBIOS protocol.
- **Disable**. The NIC does not recognize the NetBIOS protocol.

ASCII Data Port

This option allows you to set the port number for ASCII print jobs. The data port number needs to match your host system setting.

The range is 1025 - 65535, and the factory default is 9100.

IPDS Data Port (IPDS emulation only)

This option allows you to set the port number for IPDS print jobs.

The range is 1025 - 65536, and the factory default is 5001.

Keep Alive Timer

This is the time that the Keep Alive Timer will run. Keep in mind that with the Keep Alive Timer on, the tcp connection will stay connected even after the print job has terminated if the host system does not close the connection.

The range is 0-10 minutes, and the factory default is 3 minutes.

Ethernet Speed

This menu appears only if a 10/100Base-T Network Interface Card (NIC) is installed.

The Ethernet Speed menu has five different speed modes to allow compatibility with different systems and networks:

- **Auto Select** (factory default). Tells the 10/100Base-T NIC to perform an auto detection scheme and configure itself to be 10 Half Duplex, 10 Full Duplex, 100 Half Duplex, or 100 Full Duplex.
- **10 Half Duplex**. Tells the 10/100Base-T NIC to communicate at 10 Megabits per second using half duplex.
- **10 Full Duplex**. Tells the 10/100Base-T NIC to communicate at 10 Megabits per second using full duplex.
- **100 Half Duplex**. Tells the 10/100Base-T NIC to communicate at 100 Megabits per second using half duplex.
- **100 Full Duplex**. Tells the 10/100Base-T NIC to communicate at 100 Megabits per second using full duplex.

Job Control


- **Standard** (factory default). The NIC waits for the entire job to be *received* before it indicates the job is done.
- **Enhanced**. The NIC waits for the entire job to be printed before it indicates the job is done.
- **Fast Standard**. The EOJ (End of Job) packet is acknowledged immediately. Use this option if the job is timed out due to a delay in the acknowledgement of the EOJ packet because of the amount of data being printed.
- **Off**. There is no synchronization between the NIC and the printer when printing a job.

NOTE: For detailed information about using the NIC, refer to the *Network Interface Card User's Manual*.

Offline Process

- **Disable** (factory default). When set to disable, the printer does not process network data while offline.
- **Enable**. When set to enable, the printer continues to process (but not print) the current network/parallel job while the printer is offline until the printer's buffer is full.

WLAN ADDRESS

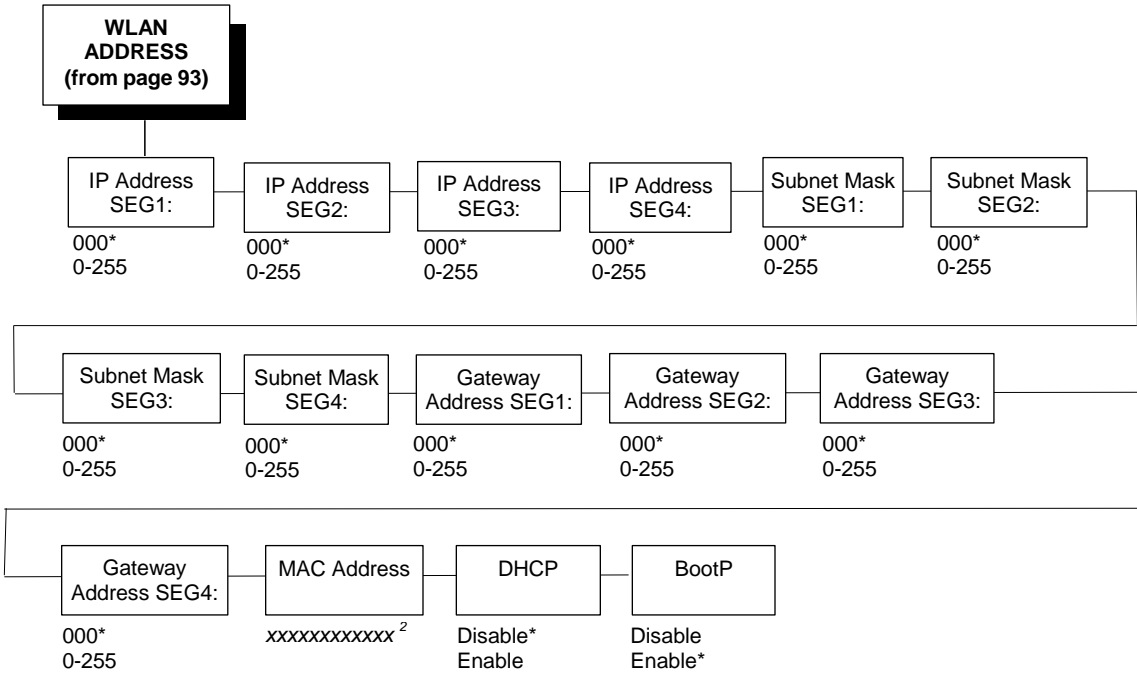

Notes:

* = Factory Default

¹ This menu appears only if a Wireless Option is installed.

² You cannot change this value; it is a display only item.

WLAN ADDRESS Submenus

IP Address

This item allows you to set the IP Address for the TCP/IP protocol in four three-digit segments (SEG1 through SEG4). If the IP Address is assigned by BootP, ARP or DHCP, it is dynamic and read-only.

The factory defaults for the SEG1 through SEG4 are 000, 000, 000, and 000.

NOTE: The printer reboots when it is placed online.

Subnet Mask

This item allows you to set the Subnet Mask for the TCP/IP protocol in four three-digit segments (SEG1 through SEG4). If the Subnet Mask is assigned by BootP, Arp or DHCP, it is dynamic and read-only.

The factory defaults for the SEG1 through SEG4 are 000, 000, 000, and 000.

NOTE: The printer reboots when it is placed online.

Gateway Address

This item allows you to set the Gateway Address for the TCP/IP protocol in four three-digit segments (SEG1 through SEG4). If the Gateway Address is assigned by BootP, ARP or DHCP, it is dynamic and read-only.

The factory defaults for the SEG1 through SEG4 are 000, 000, 000, and 000.

NOTE: The printer reboots when it is placed online.

MAC Address

This item is the Manufacturer's Assigned Number, and is unique for the NIC and the Wireless option. It is read-only.

DHCP

You can enable/disable the DHCP protocol using this option, but consult your administrator for the appropriate setting.

The options are Disable (factory default) and Enable.

NOTE: The printer reboots when it is placed online.


BootP

You can enable/disable the BootP protocol using this option. Be sure to consult your administrator for the appropriate setting.

The options are Disable and Enable (factory default).

NOTE: The printer will reboot when it is placed online.

WLAN PARAMS

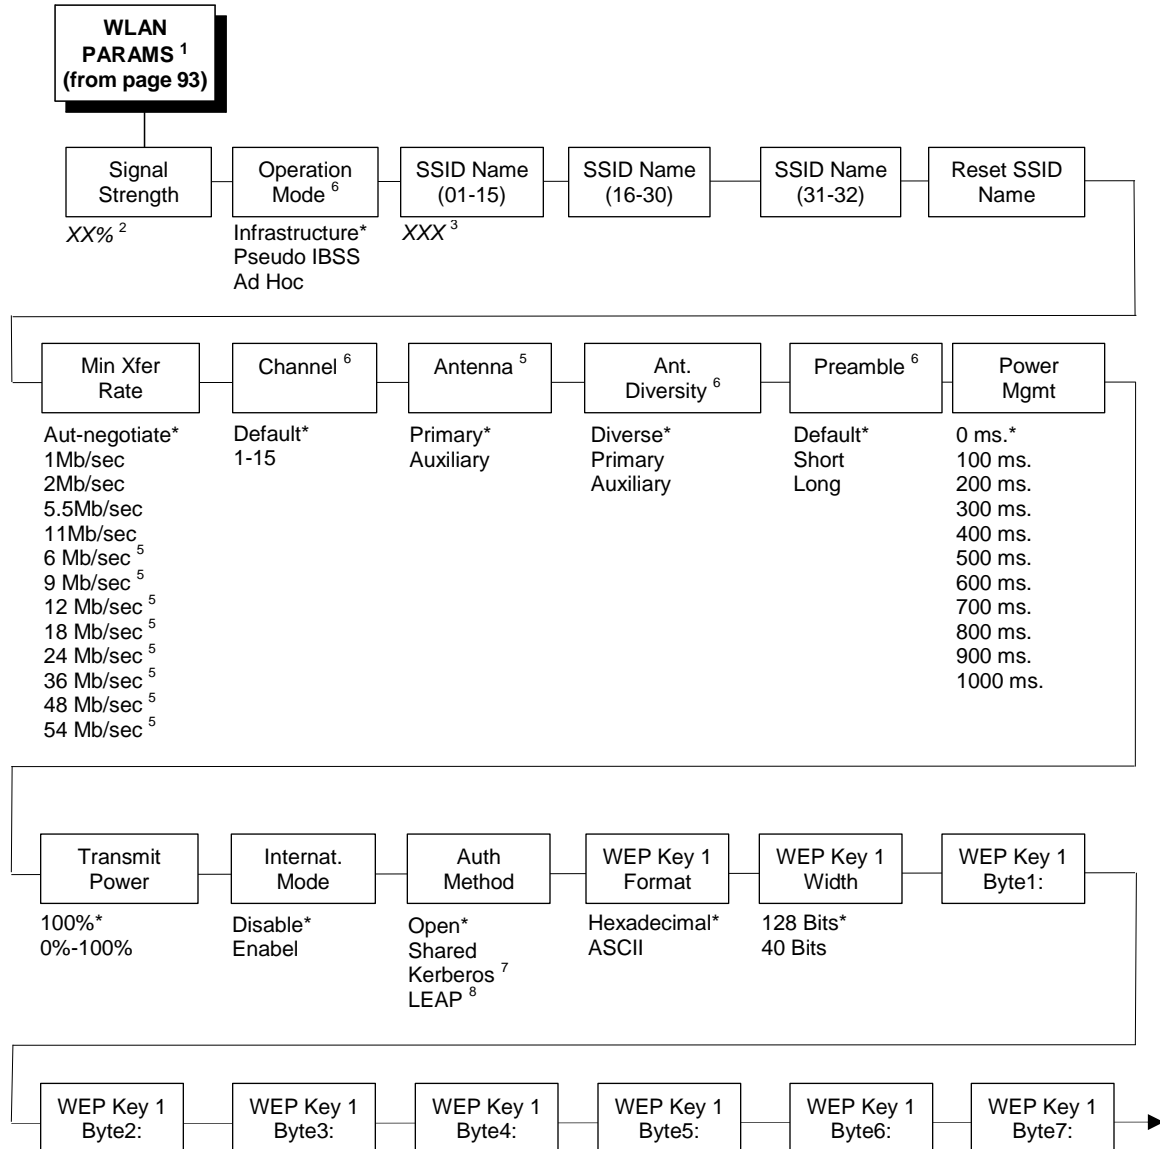

Notes:

* = Factory Default

¹ This menu appears only if a Wireless Option is installed.

² You cannot change this value; it is a display only item.

³ A 1-32 character, case-sensitive string. Characters can be alphanumeric, symbols, or spaces.

⁴ This menu appears only if "WEP Key 1 Width" is set to 128 Bits.

⁵ Appears only if a Symbol LA-5127 802.11 b/g RF card is installed.

⁶ Appears only if 802.11b only RF card is installed.


⁷ This option appears only if a Symbol 4121 radio card is installed.

⁸ This menu appears only if a Cisco Aironet 350 radio card is installed.

**WLAN
PARAMS**
(from page 251)
**Notes:**

* = Factory Default

⁴ This menu appears only if "WEP Key 1 Width" is set to 128 Bits.

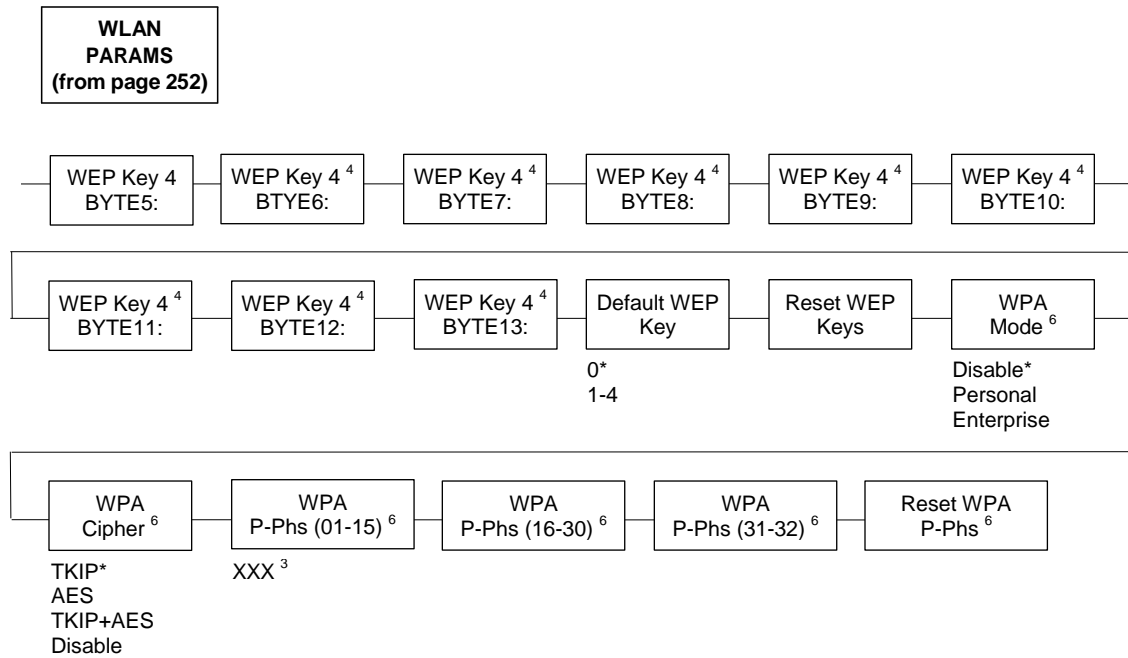**Notes:**

* = Factory Default

⁴ This menu appears only if “WEP Key 1 Width” is set to 128 Bits.⁶ This menu appears only if a Symbol LA5127 RF card is installed.

WLAN PARAMS Submenus

Signal Strength

This menu displays the strength of the wireless signal.

NOTE: This is a display value only and cannot be changed.

Operation Mode

Allows you to select the way the Wireless option communicates:

- **Infrastructure** (factory default). The Wireless option must go through an Access Point.
- **Pseudo IBSS**. Proprietary, peer-to-peer communication (without an Access Point). The two peers must be specific to one manufacturer.
- **Ad Hoc**. Standard, peer-to-peer communication (without an Access Point). The two peers can be from different manufacturers.

SSID Name

A 1-32 character, case-sensitive string that identifies the Extended Service Set Identification (ESS_ID) network the unit is part of. (ESS_ID is also called NET_ID.) These characters can be alphanumeric, symbols, or spaces.

Reset SSID Name

Allows you to reset the SSID name.

Min Xfer Rate

Allows you to set the minimum speed at which the Wireless Option will accept a connection (in millions bits per second). The options are Auto-negotiate, 1Mb/sec., 2Mb/sec., 5.5Mb/sec., and 11Mb/sec. When a Symbol LA-5127 card is installed, the options are extended to 6 Mb/sec, 9 Mb/sec, 12 Mb/sec, 18 Mb/sec, 24 Mb/sec, 36 Mb/sec, 48 Mb/sec, and 54 Mb/sec.

The factory default is Auto-negotiate.

Channel

Allows you to select the RF channel.

The options are Default (factory default) and 1-15.

Ant. Diversity (802.11b only) or Antenna (802.11b/g)

The RF antenna to use:

- **Diverse** (factory default). Select when you want to use the antenna with the best reception. (802.11b only)
- **Primary**. Select when you want to use the Primary antenna on the RF card. (802.11b and 802.11 b/g) Default setting for 802.11b/g.
- **Auxiliary**. Select when you want to use the Auxiliary antenna on the RF card. (802.11b and 802.11 b/g)

Preamble

The length of the preamble in transmit packets.

- **Default** (factory default). The Wireless option automatically determines the length.
- **Short**. For newer printers which can handle higher transfer rate speeds.
- **Long**. For older printers, which cannot handle higher transfer rate speeds.

Power Mgmt

This allows you to set power-save mode and sleep time. A value specifying the sleep time in milliseconds will be provided. If set to zero, power-save mode will be disabled.

The range is 0-1000 ms., and the factory default is 0 ms.

Transmit Power

The power level as a percentage of full power.

The range is 0 - 100%, and the factory default is 100%.

Internat. Mode

When enabled, the Wireless option adapts to international frequency requirements in Europe.

The options are Disable (factory default) and Enable.

Auth Method

The wireless authentication scheme.

- **Open** (factory default). This option allows all devices that have the authentication algorithm number for open system to authenticate.
- **Shared**. This option enables a four step authentication process using secure or encrypted text by means of WEP.
- **Kerberos**. Selects Kerberos authentication for use when a Symbol 4121 RF card is installed.
- **LEAP**. Selects LEAP authentication for use when a Cisco Aironet 350 RF card is installed.

Default WEP Key

This feature enables you to encrypt (scramble) information for security purposes. With this feature, you can set up to four encryption keys, in either ASCII or hexadecimal format, and in either 40 or 128 bits. (The more bits you choose, the more difficult it will be to decode the information.)

NOTE: None of the WEP Key Configuration menus display on the configuration printout.

WEP Key Format

Allows you to format the WEP keys in ASCII or hexadecimal code.

The factory default is Hexadecimal.

WEP Key Width

This is the encryption strength. The options are 40 Bits and 128 Bits; 40 bits are weaker and 128 bits are stronger.

NOTE: If you select 40 bits, the WEP Key BYTE6 through WEP Key BYTE13 menus will not display.

The factory default is 128 bits.

WEP Key BYTE1 through BYTE13

These are the individual characters of the encryption key.

Reset WEP Keys

Allows you to reset all four WEP keys (WEP Key 1 through WEP Key 4) at one time.

WPA Mode

Selects the WPA wireless security mode.

- **Disable** (factory default). WPA security is disabled.
- **Personal**. Selects personal or pre-shared key (PSK) mode for WPA2 security.
- **Enterprise**. 802.1x mode is more secure than WPA2 mode. Enterprise mode uses dynamic encryption keys distributed securely after a user logs in with their username and password, or provides a valid digital certificate. An Extensible Authentication Protocol (EAP) is used for authentication.

WPA Cipher

Selects the WPA wireless security cipher setting. Options include:

- **TKIP** (factory default)
- **AES**
- **TKIP+AES**
- **Disable**


WPA P-Phs

Allows you to set the individual bytes of the WPA passphrase.

Reset WPA P-Phs

Allows you to reset all 32 bytes of the WPA passphrase at once.

KERBEROS PARAMS

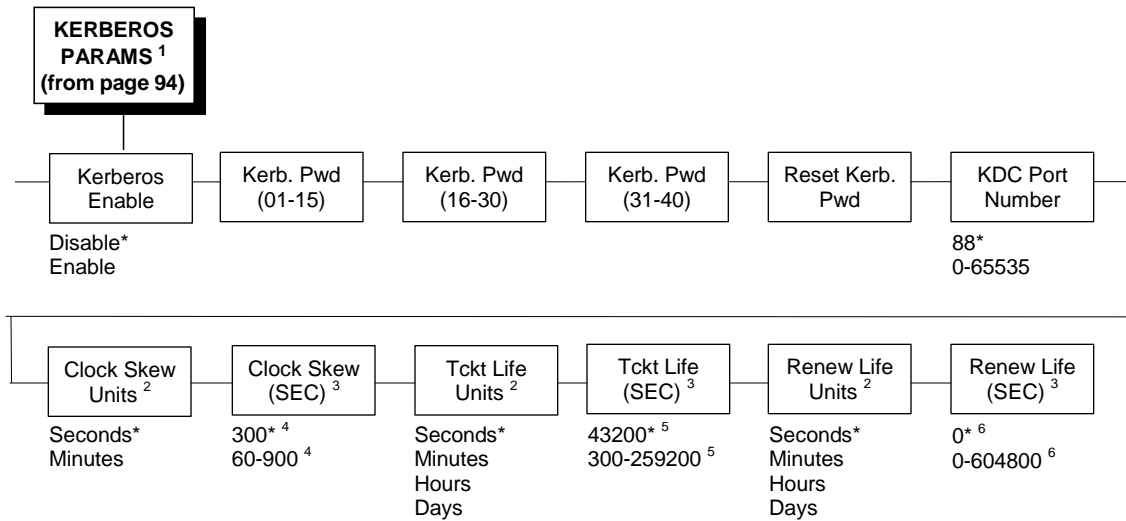

- Notes:**
- * = Factory Default
 - ¹ This menu displays only if a Symbol LA4121 RF card is installed.
 - ^{2,3} These two menus work in conjunction. Whatever submenu name is selected in the first menu will display on the second menu. For example if you select Minutes, (MIN) will display in the name of the second menu.
 - ⁴ The factory default and values depend on the unit selected in the Clock Skew Units menu. See "Clock Skew (SEC)" on page 258 for more information.
 - ⁵ The factory default and values depend on the unit selected in the Tckt Life Units menu. See "Tckt Life (SEC)" on page 259 for more information.
 - ⁶ The factory default and values depend on the unit selected in the Renew Life Units menu. See "Renew Life (SEC)" on page 259 for more information.

KERBEROS PARAMS Submenus

Kerberos Enable

- **Disable** (factory default). Disables Kerberos authentication in the wireless network interface.
- **Enable**. Enables Kerberos authentication in the wireless network interface.

Kerb. Pwd(01–15)

First 15 characters of the Kerberos password (maximum number of characters is 40).

Kerb. Pwd(16–30)

Characters 31 to 40 of the Kerberos password (maximum number of characters is 40).

Kerb. Pwd(31–40)

Characters 31 to 40 of the Kerberos password (maximum number of characters is 40).

Reset Kerb. Pwd

Resets Kerberos password to an empty string.

KDC Port Number

KDC (Key Distribution Center) port number is the 2-byte UDP/TCP port used for Kerberos Communication.

The range is 0-65535, and the factory default is 88.

Clock Skew Units

The options are Seconds and Minutes, and the factory default is Seconds.

Clock Skew (SEC)

Sets the maximum allowable amount of time in seconds (SEC) or minutes (MIN), as specified by the Clock Skew Units, that Kerberos authentication will tolerate before assuming that a Kerberos message is invalid.

- **Seconds:** The range is 60-900, and the default is 300.
- **Minutes:** The range is 1-15, and the default is 5.

NOTE: Whatever submenu is selected in Clock Skew Units will display on the Clock Skew (SEC) menu. For example, if you select Minutes, the Clock Skew (SEC) menu name will change to Clock Skew (MIN).

Tckt Life Units

Ticket lifetime unit in Seconds, Minutes, Hours, or Days.

The factory default is Seconds.

Tckt Life (SEC)

Sets the maximum allowable amount of time in Seconds (SEC), Minutes (MIN), Hours (HR), or Days (DAY), as specified by the Tckt Life Units, that a ticket obtained from the Kerberos server is valid before getting a new one.

- **Seconds:** The range is 300-259200, and the default is 43200.
- **Minutes:** The range is 5-4320, and the default is 720.
- **Hours:** The range is 1-72, and the default is 12.
- **Days:** The range is 1-3, and the default is 1.

NOTE: Whatever submenu is selected in Tckt Life Units will display on the Tckt Life (SEC) menu. For example, if you select Hours, the Tckt Life (SEC) menu name will change to Tckt Life (HR).

Renew Life Units

Renew lifetime unit in Seconds, Minutes, Hours, or Days.

The factory default is Seconds.


Renew Life (SEC)

Sets the maximum allowable amount of time in Seconds (SEC), Minutes (MIN), Hours (HR) or Days (DAY), as specified by the Renew Life Units, before warning that a new Kerberos password is needed.

- **Seconds:** The range is 0-604800, and the default is 0.
- **Minutes:** The range is 0-10080, and the default is 0.
- **Hours:** The range is 0-168, and the default is 0.
- **Days:** The range is 0-7, and the default is 0.

NOTE: Whatever submenu is selected in Renew Life Units will display on the Renew Life (SEC) menu. For example, if you select Days, the Renew Life (SEC) menu name will change to Renew Life (DAY).

WLAN EAP

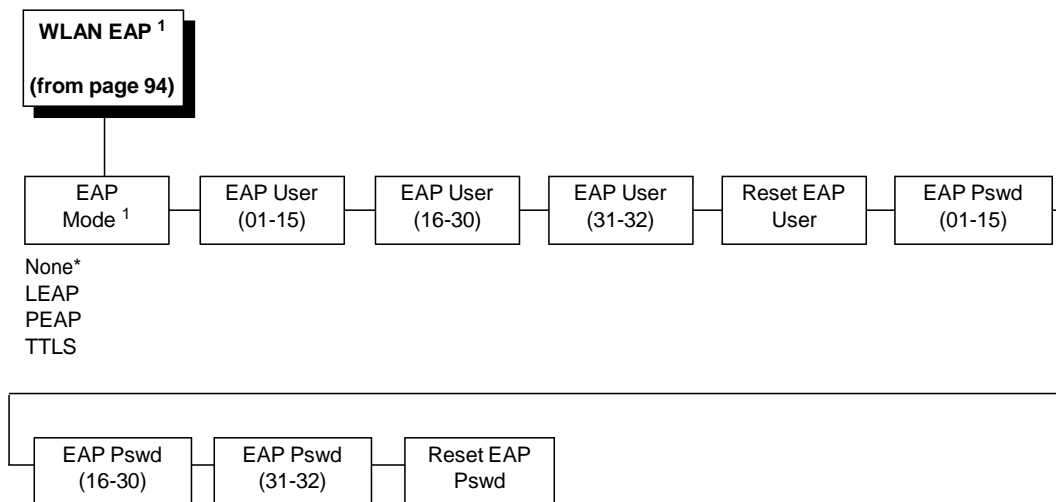

Notes:

* = Factory Default

¹ This menu appears only if Motorola 5127 RF card is installed.

WLAN EAP Submenus

EAP Mode

- **None** (default). EAP authentication is disabled.
- **LEAP**. Selects Cisco LEAP authentication.
- **PEAP**. Selects PEAP authentication.
- **TTLS**. Selects TTLS authentication.

EAP User (01-15)

The first 15 characters of the EAP user name (maximum number of characters is 32).

EAP User (16-30)

Characters 16 to 30 of the EAP user name (maximum number of characters is 32).

EAP User (31-32)

Characters 31 to 32 of the EAP user name (maximum number of characters is 32).

Reset EAP User

Resets the EAP user name to an empty string.

EAP Pswd (01-15)

The first 15 characters of the EAP password (maximum number of characters is 32).

EAP Pswd (16-30)

Characters 16 to 30 of the EAP password (maximum number of characters is 32).


EAP Pswd (31-32)

Characters 31 to 32 of the EAP password (maximum number of characters is 32).

Reset EAP Pswd

Resets the EAP password to an empty string.

PRINTER MGMT

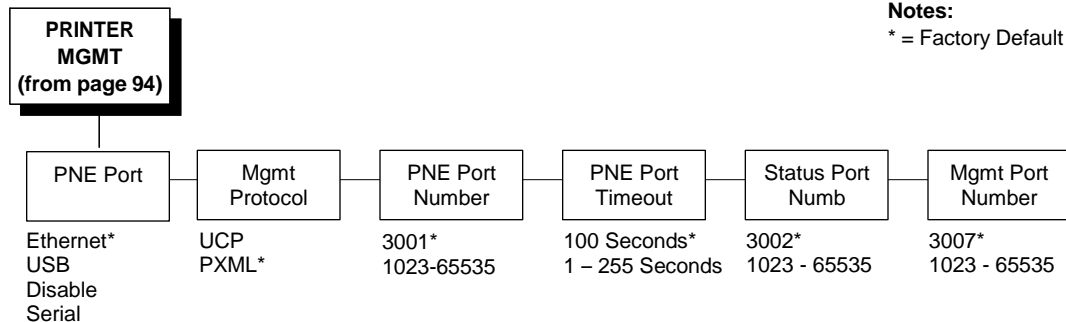

PRINTER MGMT Submenus

PNE Port

This menu selects which port the printer expects PNE to connect to, via ethernet, USB, or serial. The factory default is Ethernet.

Mgmt Protocol

Since PXML and UCP management protocols share the same ethernet port, only one can be active at a time. This menu selects the active Management Protocol Interface, either PXML or UCP. The factory default is PXML.

PNE Port Number

This menu selects the port number the printer expects PNE to connect through. The factory default is 3001 and the range is from 1023 to 65535.

PNE Port Timeout

If PNE has not communicated to the printer within a timeout period, the PNE session closes. The factory default is 100 seconds. The range is from 1 to 255 seconds.


Status Port Numb

This menu selects the port number the printer sends the emulation status. The factory default is 3002 and the range is from 1023 to 65535.

Mgmt Port Number

This menu selects the port number the printer expects the PXML or UCP to connect through. The factory default is 3007 and the range is from 1023 to 65535.

DATE

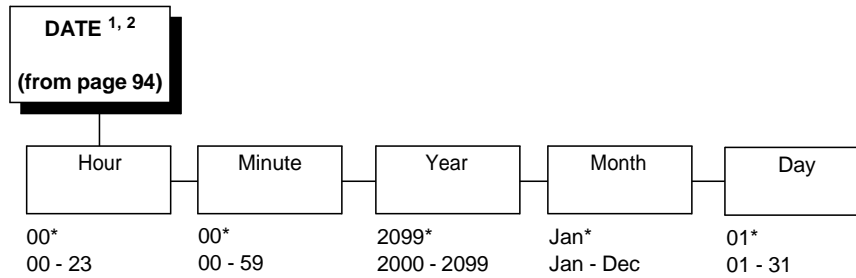

Notes:

* = Factory Default

¹ This menu appears only if the real time clock option is installed.

² Updates the set parameters only if the real time clock option is installed.

Date Submenus

Hour

This option allows you to set the hour. The factory default is 00 and the range is from 00 to 23 hours.

Minute

This option allows you to set the minutes. The factory default is 00 and the range is from 00 to 59 minutes.

Year

This option allows you to set the year. The factory default is 2099 and the range is from the year 2000 to 2099.

Month

This option allows you to set the month. The factory default is Jan and the range is from Jan to Dec.

Day

This option allows you to set the day. The factory default is 01 and the range is from 01 to 31 days.

4

Downloading Software

Loading Flash Memory

Flash memory is contained in a component located on the controller PCBA. Printer control languages (the “emulations”) and printer operating system software are loaded into flash memory at the factory, but there are occasions when you may have to download this software:

- You have replaced the controller PCBA
- The customer needs to upgrade printer software
- The customer needs TN emulation software
- The customer buys the RFID option after the printer is installed.

Emulation and operating system software are included as files on a CD that comes with the printer. You will copy the appropriate file from the CD to a computer's hard disk, then download the file from the computer into printer memory.

IMPORTANT When downloading emulation and operating system software to the printer, all other optional fonts, customer-supplied logos, setup files, feature files, and TIFF files will be erased. You will then need to reload those files. Before starting a download procedure, be sure that you have all the necessary files on hand.

You can download software through the serial, parallel, USB, or ethernet port of the printer, and you can do it four ways:

- You can download software through any printer port except USB by using the Firmware Download Utility included on the CD that comes with the printer. (See page 266.)
- You can use a command prompt session to download software through the parallel port. (See page 267.)
- You can use a command prompt session to download software through the ethernet port. (See page 270.)
- You can use a command prompt session to download software through the USB port. (See page 272.)

Downloading Software with the Firmware Download Utility



The Firmware Download Utility (FDU) allows you to download program files into the printer with an easy to use graphical interface. The FDU is a utility program included on the CD that comes with the printer. It can be used on computers running the Windows or UNIX® (such as Linux® or Solaris™) operating systems. With the FDU, you can choose the printer port through which to download software, configure the port, and initiate the download.

The FDU is a Java™-based program, so you need the Java 2 Platform, Standard Edition (J2SE™) Java Runtime Environment (JRE) installed on your computer. The Windows version of the J2SE JRE is included on the CD that comes with the printer in the form of an executable file. Copy this file to your computer and double-click it; it will self-extract and install the J2SE JRE on your computer.

NOTE: If you have a Linux or Solaris system, you can download the J2SE JRE for your system from <http://java.sun.com/j2se>.

If you have another UNIX system, see your system administrator.

Conditions for use of the included Java Software are set forth in the Sun Microsystems Binary Code License Agreement (<http://java.com/en/download/license.jsp>). In the event of any conflicting terms, the Binary Code License Agreement controls.

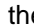
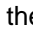
1. Make a configuration printout of all saved configurations. See page 81.
2. Set the printer power switch to O (Off).
3. Disconnect the data (signal) cable(s) from the printer interface connectors.
4. Connect a printer data cable to the parallel, serial, or ethernet port of the computer you will use to download the software.
5. Connect the printer data cable to the appropriate I/O port of the printer.
6. On the printer control panel, press and hold down the  and  keys. Without releasing the keys, power the printer on. When you see "B01: STATUS" on the LCD, release the keys.
7. Wait until you see "PROGRAM DOWNLOAD" on the LCD before doing the next step. This can take about a minute to appear, depending on the emulations and interfaces installed in the printer.
8. On your computer, create a directory named **download** at the root level of the hard drive (e.g., **C:\download** on a Windows computer).
9. Insert the printer emulation software CD into your computer's CD drive.
10. Copy the **FDU.jar** file from the CD to your computer.
11. Open the **readme.txt** file on the CD. There are two emulation sets with corresponding part number files from which to choose:
 CT / IPDS / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
 TN / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
 Both emulation sets include the LP+ emulation. They are offered in two file formats: .exe and .prg. You can use either format with the FDU.

-
12. Identify which emulation set you want to download into the printer and note the filename that corresponds to that emulation. The filename is a six digit number plus **.exe** or **.prg**. For example: 123456.exe or 123456.prg
This is the file you will download into the printer.
 13. Copy the file to the **download** directory you created in step 8.
 14. Double-click the **FDU.jar** file (for command line prompt users, type `java -jar fdu.jar`<Enter>). It will launch in its own window. Use the FDU to enter the emulation part number, to select the I/O connection and its corresponding settings, and to initiate the download.

IMPORTANT Do not interrupt the downloading process once it has started. Interrupting a download will leave the flash memory on the controller PCBA incompletely loaded, and the printer may not boot up.

15. When the new software has successfully downloaded into flash memory and the printer has reset itself, set the printer power switch to O (Off).
16. Remove the CD from your computer and store it with the printer.
17. If required, reconnect the data input cable(s) to the printer.
18. Set the printer power switch to I (On).
19. Using the configuration printout(s) you made in step 1, page 266, restore the printer configurations.

Downloading Software through the Parallel Port

1. Make a configuration printout of all saved configurations. See page 81.
2. Set the printer power switch to O (Off).
3. Disconnect the data (signal) cable(s) from the printer interface connectors.
4. Connect a parallel data printer cable to the LPT1 port of a computer running the Windows (95, 98, Me, NT, 2000, XP, Server 2003, or Vista) operating system.
5. Connect the data cable to the appropriate I/O port of the printer.
6. On the printer control panel, press and hold down the  and  keys. Without releasing the keys, power the printer on. When you see "B01: STATUS" on the LCD, release the keys.
7. Wait until you see "PROGRAM DOWNLOAD" on the LCD before proceeding. This can take about a minute to appear, depending on the emulations and interfaces installed in the printer.
8. Using Windows Explorer, create a directory named **download** at the root level of your C: hard drive (**C:\download**).
9. Insert the printer emulation software CD into your computer's CD drive.

10. Open the readme.txt file on the CD. There are two emulation sets with corresponding part number files from which to choose:
CT / IPDS / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
TN / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
Both emulation sets include the LP+ emulation. They are offered in two file formats: .exe and .prg. **Use .exe files to download through the parallel port.**
11. Identify which emulation set you want to download into the printer and note the filename that corresponds to that emulation. The filename is a six digit number plus .exe. For example: 123456.exe
This is the file you will download into the printer.
12. Copy the file to the **download** directory you created in step 8.
13. Start a command prompt session. (The Start Menu icon is usually labeled **MS-DOS® Prompt** or **Command Prompt**.)
14. At the command prompt type:
`C:><Enter>`
`cd \download<Enter>`
15. Enter the following command:
`filename.exe -pb<Enter>`
where *filename.exe* is the file name you noted in step 11. This command takes the file on the hard drive and copies it as a binary file into the flash memory on the printer controller board.

IMPORTANT

Do not interrupt the downloading process once it has started. Interrupting a download will leave the flash memory on the controller PCBA incompletely loaded, and the printer may not boot up.

While the file is copied into memory, the printer LCD informs you of the download process and status.

16. When the new software has successfully downloaded into flash memory and the printer has reset itself, set the printer power switch to O (Off).
17. Remove the CD from the host computer and store it with the printer.
18. If required, reconnect the data input cable(s) to the printer.
19. Set the printer power switch to | (On).
20. Using the configuration printout(s) you made in step 1 on page 267, restore the printer configurations.

Downloading Software through the NIC

IMPORTANT To download software through the NIC, you need the IP Address of the printer and the flash memory must contain basic printer code. If a download was interrupted (e.g., by a power outage), you must download software through the parallel port. (See “Downloading Software if Flash Contains Only Boot or Corrupt Code” on page 274.)

1. Make a configuration printout of all saved configurations. See page 81.
2. Set the printer power switch to O (Off).
3. Connect the ethernet cable to the printer interface.
4. Set the printer power switch to I (On).
5. Wait until you see “ONLINE” on the LCD before doing the next step. This can take about a minute to appear, depending on the emulations and interfaces installed in the printer.
6. Using Windows Explorer, create a directory named **download** at the root level of your C: hard drive (**C:\download**).
7. Insert the printer emulation software CD into your computer's CD drive.
8. Open the readme.txt file on the CD. There are two emulation sets with corresponding part number files from which to choose:
CT / IPDS / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
TN / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
Both emulation sets include the LP+ emulation. They are offered in two file formats: .exe and .prg. **Use .exe files to download through the NIC.**
9. Identify which emulation set you want to download into the printer and note the filename that corresponds to that emulation. The filename is a six digit number plus .exe. For example: 123456.exe
This is the file you will download into the printer.
10. Copy the file to the **download** directory you created in step 6.
11. Start a command prompt session. (The Start Menu icon is usually labeled **MS-DOS® Prompt** or **Command Prompt**.)
12. At the command prompt type:
C:><Enter>
cd \download<Enter>
13. Enter the following command:
filename.exe -n xxx.xxx.xxx.xxx<Enter>
where *filename.exe* is the file name you noted in step 9 and *xxx.xxx.xxx.xxx* is the IP address of the printer. This command takes the file on the hard drive and copies it as a binary file into the flash memory on the printer controller board.

NOTE: If the software does not download, use the Firmware Download Utility (page 266).

IMPORTANT Do not interrupt the downloading process once it has started. Interrupting a download will leave the flash memory on the controller PCBA incompletely loaded, and the printer may not boot up.


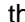
While the file is copied into memory, the printer LCD informs you of the download process and status.

14. When the new software has successfully downloaded into flash memory and the printer has reset itself, set the printer power switch to O (Off).
15. Remove the CD from the host computer and store it with the printer.
16. If required, reconnect the data input cable(s) to the printer.
17. Set the printer power switch to I (On).
18. Using the configuration printout(s) you made in step 1 on page 269, restore the printer configurations.

Downloading Software through the NIC using FTP

IMPORTANT

To download software through the NIC, you need the IP Address of the printer and the flash memory must contain basic printer code. If a download was interrupted (e.g., by a power outage), you must download software through the parallel port. (See “Downloading Software if Flash Contains Only Boot or Corrupt Code” on page 274.)

1. Make a configuration printout of all saved configurations. See page 81.
2. Set the printer power switch to O (Off).
3. Connect the ethernet cable to the printer interface.
4. On the printer control panel, press and hold down the  and  keys. Without releasing the keys, power the printer on. When you see “B01: STATUS” on the LCD, release the keys.
5. Wait until you see “PROGRAM DOWNLOAD” on the LCD before proceeding. This can take about a minute to appear, depending on the emulations and interfaces installed in the printer.
6. Using Windows Explorer, create a directory named **download** at the root level of your C: hard drive (**C:\download**).
7. Insert the printer emulation software CD into your computer's CD drive.
8. Open the readme.txt file on the CD. There are two emulation sets with corresponding part number files from which to choose:
CT / IPDS / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
TN / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
Both emulation sets include the LP+ emulation. They are offered in two file formats: .exe and .prg. **Use .prg files to download through the NIC using FTP.**
9. Identify which emulation set you want to download into the printer and note the filename that corresponds to that emulation. The filename is a six digit number plus .prg. For example: 123456.prg
This is the file you will download into the printer.
10. Copy the file to the **download** directory you created in step 6.
11. Start a command prompt session in Windows. (The Start Menu icon is usually labeled **MS-DOS Prompt** or **Command Prompt**.)
12. At the command prompt type:

```
c:<Enter>
cd \download<Enter>
```

13. Start the FTP (file transfer protocol) program by typing:

```
ftp xxx.xxx.xxx.xxx<Enter>
```

where xxx.xxx.xxx.xxx is the IP Address of the printer.

14. Log in to the printer by typing:

```
root<Enter>
```

You are given a password prompt.

NOTE: The default is no password. If the FTP program requires a password, contact the system administrator.

15. At the password prompt, press <Enter>.

16. Once logged in, type the following sequence at the command prompt to download the *filename.prg* file to the printer:

```
cd dest<Enter>
cd dlprn<Enter>
bin<Enter>
put filename.prg<Enter>
```

where *filename.prg* is the file name you noted in step 9.

IMPORTANT

Do not interrupt the downloading process once it has started. Interrupting a download will leave the flash memory on the controller PCBA and NIC incompletely loaded, and the printer may not boot up.

17. When the download is complete, exit the FTP program by typing:

```
quit<Enter>
```

18. When the new software has successfully downloaded into flash memory and the printer has reset itself, set the printer power switch to O (Off).
19. Remove the CD from the host computer and store it with the printer.
20. If required, reconnect the data input cable(s) to the printer.
21. Set the printer power switch to I (On).
22. Using the configuration printout(s) you made in step 1 on page 270, restore the printer configurations.

Downloading Software through the USB Port

Normally the host communicates with the printer's USB port with a Windows driver. To download a file using the USB port, it needs to be remapped.

To download software through the USB Port, perform the following steps:



1. Using Windows Explorer, create a directory named **download** at the root level of your C: hard drive (**C:\download**).
2. Insert the printer emulation software CD into your computer's CD drive.
3. Open the readme.txt file on the CD. There are two emulation sets with corresponding part number files from which to choose:
 CT / IPDS / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
 TN / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
 Both emulation sets include the LP+ emulation. They are offered in two file formats: .exe and .prg. **Use .prg files to download through the USB.**
4. Identify which emulation set you want to download into the printer and note the filename that corresponds to that emulation. The filename is a six digit number plus .prg. For example: 123456.prg
This is the file you will download into the printer.
5. Copy the file to the **download** directory you created in step 1.
6. Make the printer sharable on the host PC. This is done through the printer's Properties\Sharing tab. Make note of the printer's shared name.
7. Start a command prompt session. (The Start Menu icon is usually labeled **MS-DOS Prompt** or **Command Prompt**.)
8. At the command prompt type:
NET USE LPT1\\Comp_Name\Shared_Name /Persistent:YES
 <Enter>
 where *Comp_Name* is the computer name found in the computer's System Properties\Computer Name tab and *Shared_Name* is the printer's shared name found in the printer's Properties\Sharing tab.
 This command should be all on the same line. It redirects output on LPT1 to the shared printer.
9. To check status of connection type:
Net View \\Comp_Name<Enter>
 where *Comp_Name* is the computer name found in the computer's System Properties\Computer Name tab.
 Now the printer is ready.
10. To use the COPY command to send the program file to the printer type:
COPY /b filename.prg lpt1:<Enter>
 where *filename.prg* is the file name you noted in step 4.
11. To stop using LPT1 for USB, type:
NET USE LPT1 /DELETE<Enter>

Downloading Software through the Printronix Windows Driver

The Printronix Windows Driver contains an option that allows you to download software to the printer. To download software to the printer, perform the following steps:

1. Using Windows Explorer, create a directory named **download** at the root level of your C: hard drive (**C:\download**).
2. Insert the printer emulation software CD into your computer's CD drive.
3. Identify which emulation set you want to download into the printer and note the filename that corresponds to that emulation. The filename is a six digit number plus **.prg**. For example: 123456.prg

This is the file you will download into the printer.

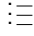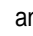4. Copy the file to the **download** directory you created in step 1.
5. On the printer control panel, press and hold down the  and  keys. Without releasing the keys, power the printer on. When you see "B01: STATUS" on the LCD, release the keys.

Wait until you see "PROGRAM DOWNLOAD" on the LCD before proceeding. This can take about a minute to appear, depending on the emulations and interfaces installed in the printer.

6. Load the Printronix Windows driver provided with your printer on the Manuals and Utilities CD on Windows 2000/NT/XP/Server 2003/Vista.
7. Once the printer driver is installed on the PC, right-click the printer driver and select **Properties**.
8. Click the **About/Help** tab to access the software download option.
9. Click the **Firmware Update** button.
10. Enter the full path and location to the printer software:
c:\download\firmware.prg where c:\download is the directory you created in step 1 and firmware.prg is the software you noted in step 3.
11. Click **OK** to send the software to the printer. To abort this operation, click the **Cancel** button.

Downloading Software if Flash Contains Only Boot or Corrupt Code

If the flash memory contains only boot code (e.g., if it is new), or if a download was interrupted (e.g., by a power outage), you must download software through the printer's parallel port using the three-key initialization sequence covered in this section.

1. Make sure the printer's parallel port is available. In some configurations, you may have to remove an external NIC. If you need to re-install the Centronics® I/O cable and connector, contact your support facility.
2. Set the printer power switch to O (Off).
3. Disconnect the data (signal) cable(s) from the printer interface connectors.
4. Connect a parallel data printer cable to the LPT1 port of a computer running the Windows (95, 98, Me, NT, 2000, XP, Server 2003, or Vista) operating system.
5. Connect the data cable to the Centronics port of the printer.
6. On the printer control panel, press and hold down the \equiv , \downarrow , and \swarrow keys. Without releasing the keys, power the printer on. When you see "B20: STATUS 00% / DOWNLOAD MODE" on the LCD, release the keys.
7. Using Windows Explorer, create a directory named **download** at the root level of your C: hard drive (**C:\download**).
8. Insert the printer emulation software CD into your computer's CD drive.
9. Open the readme.txt file on the CD. There are two emulation sets with corresponding part number files from which to choose:
CT / IPDS / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
TN / PGL/VGL / ZGL / TGL / IGL / STGL / DGL / MGL / IEGL
Both emulation sets include the LP+ emulation. They are offered in two file formats: .exe and .prg. **Use .exe files to download through the parallel port.**
10. Identify which emulation set you want to download into the printer and note the filename that corresponds to that emulation. The filename is a six digit number plus .exe. For example: 123456.exe
This is the file you will download into the printer.
11. Copy the file to the **download** directory you created in step 7.
12. Start a command prompt session. (The Start Menu icon is usually labeled **MS-DOS Prompt** or **Command Prompt**.)
13. At the command prompt type:
`C:><Enter>`
`cd \download<Enter>`

14. Enter the following command:

***filename.exe* -pb<Enter>**

where *filename.exe* is the file name you noted in step 10. This command takes the file on the hard drive and copies it as a binary file into the flash memory on the printer controller board.

15. After the software successfully downloads into flash memory, the printer will reset itself.

16. If you have an external NIC:

- a. Set the printer power switch to O (Off).
- b. Connect the external NIC to the parallel port.
- c. Connect the ethernet cable to the NIC.
- d. Starting at step 4, page 270, repeat the "Downloading Software through the NIC using FTP" procedure. (Or, use the two-key method to download software again.) This ensures that all necessary code downloads into printer memory.

Using TrueType Fonts

TrueType fonts allow you to customize the look of your forms and labels. You are able to download TrueType fonts purchased from various sources into your printer. The fonts are available for purchase on websites such as www.fonts.com and www.myfonts.com.



The following sections discuss how to:

- Download TrueType fonts (see below)
- Select and print TrueType fonts (see page 280).

Downloading TrueType Fonts

You can download TrueType fonts to your printer by using any of the following:

- Printronix Windows Driver
- PGL Emulation (Online)
- Download Mode (after adding a header)
- PTX_SETUP
- Labeling Applications

Once a TrueType font is downloaded, it will be stored in the Flash File System as a resident font. Regardless of printer power cycles, the downloaded font will stay in the printer until the user deletes it. The user can find the list of all printer resident fonts under **PRINTER CONTROL**  **View File List** after enabling Admin User in the Printer Control menu. To delete a downloaded font from the Flash File System, the user should select the font under **PRINTER CONTROL**  **Delete File List** and then select Optimize & Reboot.

NOTE: A “?” will be added in front of the selected file name to indicate that the file has been deleted. The deleted file name will not be removed from the “View File List” and “Delete File List” until the user selects Optimize & Reboot.

Printronix Windows Driver

A TrueType font can be downloaded from a PC through the Printronix Windows Driver.

1. Load the Printronix Windows driver provided with your printer on the Manuals and Utilities CD on Windows 2000/NT/XP/Server 2003/Vista.
2. Once the printer driver is installed on the PC, right-click the printer driver and select **Properties**.
3. Click the **TT Font Download** tab to access all the available system TrueType fonts.
4. Select the TrueType font(s) from the **Available System TrueType Fonts** pane you want to download.
5. Click the **Download** button to download font(s) to the printer while it is online.

PGL Emulation (Online)

A TrueType font can be downloaded by creating a file that appends a PGL command to the font and then sending that file to the printer. Use the PGL FONTLOAD command:

~FONTLOAD;FontName;FontSize;DISK
where

FontName - TrueType font name, e.g. arial.ttf

FontSize - TrueType font size, e.g. file size for arial.ttf

DISK - Specify the download location to Flash

For example:

~FONTLOAD;arial.ttf;60548;DISK

Insert binary data of arial.ttf here...

END

After the file is created, it can be copied to the appropriate I/O port of the printer while the printer is online, just like any other print file (for example: copy/b filename.ext 1pt1).

Download Mode

To download a TrueType font to the printer through Download mode, first add a header to the font, then place the printer in Download mode and download the font.

Adding a Header

A TrueType font can be converted to a downloadable format by appending a header to the font file using the `cnvt2fls.exe` utility.

1. Start a Command prompt window.
2. Copy `cnvt2fls.exe` and `addthdr.bat` from your startup CD to your working directory.
3. In your working directory, include the TrueType font file in .tff format (e.g., `arial.tff`).
4. Convert the TrueType font file .tff to a downloadable format .dwn with the following command: `addthdr (filename without extension)`.

Example: `addthdr arial`





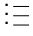

This creates the file `arial.dwn`.

5. Put the printer in download mode as described in “Downloading a Font in Download Mode” on page 277, and send the downloadable font file (e.g., `arial.dwn`) to the printer through the appropriate I/O port of the printer.

Downloading a Font in Download Mode

1. Set the printer power switch to O (Off).
2. Connect a parallel data cable to the LPT1 port or a serial cable to the COM1 port of a computer running the Windows (95, 98, Me, NT, 2000, XP, Server 2003, or Vista) operating system.

NOTE: You can connect the cable to the LPT2 port on the computer if the LPT1 port is already in use. The download commands are different if you use this port, as described in the notes after step 10.

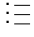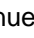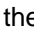3. Verify that the data cable is connected to the appropriate I/O port on the printer and to the host computer.
4. Power on the computer and allow it to boot up.
5. On the printer control panel, press and hold down the  and  keys. Without releasing the keys, power the printer on. Continue holding down the  and  keys.
6. When you see “B01 STATUS” on the LCD, release the  and  keys.
7. Wait until you see “PROGRAM DOWNLOAD” on the LCD before proceeding. This can take about a minute to appear, depending on the emulations and interfaces installed in the printer.
8. Start a command prompt session. (The Start Menu icon is usually labeled **MS-DOS Prompt** or **Command Prompt**.)
9. Make note of the file name with the .dwn extension of each file you want to download to the printer.

10. At the command prompt type:

```
copy /b filename.dwn LPT1<Enter>
(where filename.dwn is file name you noted in step 9.)
```

NOTE: If you are loading the file using the LPT2 port on the computer, type the following command:

```
copy /b filename.dwn LPT2<Enter>
(where filename.dwn is a file you noted in step 9.)
```

If you are loading the file using the serial port on the computer, type the following commands:

```
mode COM1:9600,N,8,1,P<Enter>
copy /b filename.dwn COM1<Enter>
(where filename.dwn is a file you noted in step 9.)
```

The 9600 baud rate is the only selection some systems can use. The baud rate information entered in the above commands must match the Baud Rate setting (in the SERIAL PORT menu) saved in the Power-Up Config.

You can download the fonts one at a time by entering one file name per the **copy** command or you can copy multiple files in one **copy** command.

To download one file at a time, enter the following at the command prompt:

```
copy /b filename.dwn LPT1<Enter>
```

To download multiple files, enter the following at the command prompt, for example:

```
copy /b filename1.dwn+filename2.dwn+...LPT1<Enter>
```

11. While the font file is copied into the flash memory, the printer LCD informs you of the download process and status. After the new file successfully downloads into memory, the printer resets itself and goes online.

12. To verify that the fonts have been downloaded:

NOTE: Admin User must be set to Enable in the PRINTER CONTROL menu. See page 136.

- a. Perform a configuration printout.

— OR —

- b. Select **PRINTER CONTROL** ► **View File List**. The new file names will appear with the same part number file name you downloaded, but with an **.ttf** extension.

NOTE: The font typefaces cannot be selected via the printer control panel. They can only be selected via a software command from the host.

13. Press the **PAUSE** key to place the printer online and return the printer to normal operation.

PTX_SETUP

PTX_SETUP can be used to download TrueType fonts into the file system. Please see the PTX_SETUP chapter in the PGL Programmer's Reference Manual for details.

Example:

```
!PTX_SETUP  
FILE_IO-CAPTURE;"ARIAL.TTF".  
PTX_END
```

Arial TrueType font binary data

NOTE: Do not add any LF/FF at the end of the binary data

```
!PTX_SETUP  
FILE_IO-CAPTURE;"".  
PTX_END
```

Labeling Applications

A TrueType font can be downloaded through several labeling applications, such as Codesoft, Loftware, and Bartender. Please contact the appropriate company for more details.

Filename Extensions Not Shown in Menus

Files with the one of the filename extensions below (upper or lower case) are considered system files and are not shown in the View File List or Delete Files menu. Do not download any user files with these extensions.

Table 11. File Extensions Not Shown in Menus

Extensions		
*.bin	*.inf	*.ras
*.cpg	*.lfi	*.rfv
*.eng	*.map	*.sec
*.fon	*.pat	
*.gz	*.qsm	

Select and Print Downloaded TrueType Fonts

After downloading the TrueType font using any of the above methods, the user can access the downloaded TrueType font by using the FONT;NAME command as described in the PGL Programmer's Reference Manual.

For Example:

```
~CREATE;FORM
FONT;NAME ARIAL.TTF
ALPHA
10;10;2;2;$01234$
STOP
END
~EXECUTE;FORM;1
```

The font can also be chosen and printed through LP+ using the TrueType Font Selection superset command as described in the LinePrinter Plus Emulation Programmer's Reference Manual.

For example:

```
SSCC arial.ttf;
```

where SSCC is the superset control code for the current LP+ emulation.

You can also choose and print the font using the ZGL interpreter.

Overview

This chapter describes the host interfaces provided with the printer. The printer interface is the point where the data line from the host computer plugs into the printer. The interface processes all communications signals and data to and from the host computer. Plus, with the Auto Switching feature, you can configure the printer to accept several interfaces at the same time.

In addition to descriptions for the multi-line interfaces, this chapter also provides instructions for configuration of terminating resistors for the parallel interfaces.

Auto Switching

This feature gives the printer the ability to handle multiple data streams sequentially. With Auto Switching, the printer can service hosts attached to the serial, parallel, USB, ethernet, coax and twinax ports as if they were the only interface connected.

For example, if the host computer sends one print job to the RS-232 serial port and a separate print job to the IEEE 1284 parallel port, the printer's Auto Switching is able to handle both jobs, in the order they were received, without the user having to reconfigure the selected interface between jobs.

Standard Host Interfaces

- Centronics parallel
- IEEE 1284 parallel bidirectional
- Serial Port (RS-232)
- USB 2.0 Universal Serial Bus
- Ethernet

Optional Host Interfaces

- Coax / Twinax
- Wireless NIC
- RS-422

Centronics Parallel Interface

Table 12. Centronics Interface Connector Pin Assignments

Input Signals		Output Signals		Miscellaneous	
Signal	Pin	Signal	Pin	Signal	Pin
DATA LINE 1	2	ACKNOWLEDGE	10	CHASSIS GROUND	17
Return	20	Return	28		
DATA LINE 2	3	ONLINE	13	GROUND	30
Return	21	Return	28		
DATA LINE 3	4	FAULT	32	Spares	14
Return	22	Return	29		
DATA LINE 4	5	PAPER EMPTY	12	No Connection	34,35,
Return	23	Return	28		36
DATA LINE 5	6	BUSY	11	+5 Volts	18
Return	24	Return	29		
DATA LINE 6	7				
Return	25				
DATA LINE 7	8				
Return	26				
DATA LINE 8	9				
Return	27				
DATA STROBE	1				
Return	19				
PAPER INSTRUCTION	15				
Return	29				
PRIME	31				
Return	30				

NOTE: The length of the data cable from the host computer to the printer must not exceed 15 feet (5 meters).

Centronics Parallel Interface Signals

Table 13. Centronix Parallel Interface Signals

Signals	Purpose
Data Lines 1 through 8	Provide eight standard or inverted levels from the host that specify character data, plot data, or a control code. Data Line 8 allows access to the extended ASCII character set. You may enable or disable this line via the Data Bit 8 parameter on the Centronics Parallel submenu.
Data Strobe	Carries a low true, 100 ns minimum pulse from the host that clocks data into the printer.
Acknowledge	A low true pulse from the printer indicating the character or function code has been received and the printer is ready for the next data transfer.
Online	A high true level from the printer to indicate the printer is ready for data transfer and the PAUSE key on the control panel has been activated. When the printer is in online mode, it may accept data from the host.
Paper Empty (PE)	A high true level from the printer to indicate the printer is in a paper empty or paper jam fault.
Busy	A high true level from the printer to indicate the printer cannot receive data.
Prime	A high true level from the host to indicate the printer should perform a warm start (printer is reset to the power-up configuration values).
Paper Instruction (PI)	Carries a VFU signal from the host with the same timing and polarity as the data line.
Fault	A low true level from the printer indicates a printer fault.

IEEE 1284 Parallel Interface

The IEEE 1284 supports three operating modes, which are determined by negotiation between the printer and the host.

Compatibility Mode

This mode provides compatibility with Centronics-like host I/O (see Table 12). Data is transferred from the host to the printer in 8-bit bytes over the data lines.

Compatibility Mode can be combined with Nibble and Byte Modes to provide bidirectional communication.

Nibble Mode

Eight bits equals one byte. When a byte of data is sent to the printer, the eight bits are sent over eight data lines.

Some devices cannot send data over their eight data lines. To bypass this, the IEEE 1284 permits data to be sent as half a byte over four status lines. (Half a byte equals one nibble.) Two sequential four-bit nibbles are sent over the lines.

Data is transferred from printer to host in four-bit nibbles over the status lines, and the host controls the transmission.

Byte Mode

The printer and host send data to each other along eight data lines (one bit per line).

If bidirectional communication is supported by the printer and the host, the host will take control of the data transfer.

Signals

Table 14 lists each of the signals associated with the corresponding pins on the IEEE 1284 interface. Descriptions of the signals follow.

Table 14. IEEE 1284 Signals

Pin	Source of Data	Type of Mode		
		Compatible	Nibble	Byte
1	Host	nStrobe	HostClk	Host/Clk
2	Host/Printer	Data 1 (LSB)		
3	Host/Printer	Data 2		
4	Host/Printer	Data 3		
5	Host/Printer	Data 4		
6	Host/Printer	Data 5		
7	Host/Printer	Data 6		
8	Host/Printer	Data 7		
9	Host/Printer	Data 8 (MSB)		
10	Printer	nAck	PtrClk	PtrClk
11	Printer	Busy	PtrBusy	PtrBusy
12	Printer	PErr	AckDataReq	AckDataReq
13	Printer	Select	Xflag	Xflag
14	Host	nAutoFd	Host Busy	HostAck
15		Not Defined		
16		Logic Grid		
17		Chassis Grid		
18	Printer	Peripheral Logic High		
19		Signal Ground (nStrobe)		
20		Signal Ground (Data 1)		
21		Signal Ground (Data 2)		
22		Signal Ground (Data 3)		
23		Signal Ground (Data 4)		
24		Signal Ground (Data 5)		
25		Signal Ground (Data 6)		

Table 14. IEEE 1284 Signals (continued)

Pin	Source of Data	Type of Mode		
		Compatible	Nibble	Byte
26		Signal Ground (Data 7)		
27		Signal Ground (Data 8)		
28		Signal Ground (PErr, Select, nAck)		
29		Signal Ground (Busy, nFault)		
30		Signal Ground (nAutoFd, nSelectIn, nInit)		
31	Host	nInit		
32	Printer	NFault	nDataAvail	aDataAvail
33		Not Defined		
34		Not Defined		
35		Not Defined		
36	Host	nSelectIn	1284 Active	1284 Active

NOTE: The length of the data cable from the host computer to the printer should not exceed 32 feet (10 meters).

Host Clock / nWrite. Driven by the host. Data is transferred from the host to the printer. When the printer sends data, two types are available. If it is Nibble Mode, the signal is set high. If it is Byte Mode, the signal is set low.

Data 1 through Data 8. These pins are host-driven in Compatibility Mode and bidirectional in Byte Mode. They are not used in Nibble Mode. Data 1 is the least significant bit; Data 8 is the most significant bit.

Printer Clock / Peripheral Clock / Interrupt. Driven by the printer. A signal from the printer indicating the character or function code has been received and the printer is ready for the next data transfer.

Printer Busy / Peripheral Acknowledge / nWait. Driven by the printer. Indicates the printer cannot receive data. (Data bits 4 and 8 in Nibble Mode.)

Acknowledge Data Request / nAcknowledge Reverse. Driven by the printer. Indicates the printer is in a fault condition. (Data bits 3 and 7 in Nibble Mode.)

Xflag. Driven by the printer. A high true level indicating the printer is ready for data transfer and the printer is online. (Data bits 2 and 6 in Nibble Mode.)

Host Busy / Host Acknowledge / NDStrobe. Driven by the host. Activates auto-line feed mode.

Peripheral Logic High. Driven by the printer. When the line is high, the printer indicates all of its signals are in a valid state. When the line is low, the printer indicates its power is off or its signals are in an invalid state.

nReverse Request. Driven by the host. Resets the interface and forces a return to Compatibility Mode idle phase.

nData Available / nPeripheral Request. Driven by the printer. Indicates the printer has encountered an error. (Data bits 1 and 5 in Nibble Mode.)

1284 Active / nAstrobe. Driven by the host. A peripheral device is selected.

Host Logic High. Driven by the host. When set to high, the host indicates all of its signals are in a valid state. When set to low, the host indicates its power is off or its signals are in an invalid state.

nInit. Resets init interface from the host.

RS-232 and Optional RS-422 Serial Interfaces

NOTE: The RS-232 and RS-422 serial interface circuit characteristics are compatible with the Electronic Industry Association Specifications EIA®-232-E and EIA-422-B.

The RS-232 and RS-422 serial interfaces enable the printer to operate with bit serial devices that are compatible with an RS-232 controller. The input serial data transfer rate (in baud) is selectable from the printer's control panel. Baud rates of 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200 are available.

NOTE: If you select a baud rate that is greater than 19200, you may need to use RS-422 to prevent data loss. You may also need to increase the Buffer Size in K parameter to improve performance.

The length of the data cable from the host computer to the printer must not exceed 50 feet (15 meters) for RS-232 or 4000 feet (1220 meters) for RS-422. (A copper conductor, twisted-pair telephone cable with a shunt capacitance of 16 pF/foot [52.5 pF/meter] terminated in a 100 ohm resistive load must be used for the RS-422.)

RS-232

Table 15. RS-232 Serial Interface Connector (9 Pin) Assignments

Input Signals		Output Signals		Miscellaneous	
Signal	Pin	Signal	Pin	Signal	Pin
Receive Data (RXD)	2	Transmit Status & Control Data (TXD)	3	Chassis/Signal Ground	5
Clear To Send (CTS)	8	Request To Send (RTS)	7		
Data Set Ready (DSR)	6	Data Terminal Ready (DTR)	4		
Data Carrier Detect (DCD)	1				

Received Data (RXD). Serial data stream to the printer.

Transmitted Data (TXD). Serial data stream from the printer for transmitting status and control information to the host. Subject to protocol selection.

Request To Send (RTS). Control signal from the printer. Subject to configuration.

Clear To Send (CTS). Status signal to the printer indicating the host is ready to receive data/status signals from the printer.

Data Set Ready (DSR). Status signal to the printer indicating the host is in a ready condition.

Data Carrier Detect (DCD). Status signal to the printer. The ON condition is required for the printer to receive data.

Data Terminal Ready (DTR). Control signal from the printer. Subject to configuration.

RS-422

NOTE: The RS-422 serial interface connector is optional.

Table 16. RS-422 Serial Interface Connector (9 Pin) Assignments

Input Signals		Output Signals		Miscellaneous	
Signal	Pin	Signal	Pin	Signal	Pin
- Receive Data (-RXD)	1	- Transmit Data (-TXD)	3	Chassis/Signal Ground	5
+ Receive Data (+RXD)	6	+ Transmit Data (+TXD)	8		

NOTE: \pm RXD and \pm TXD form signal and return paths of a differential line signal.

+RXD, -RXD. Serial data stream differentially received by printer.

+TXD, -TXD. Differentially driven serial data stream for transmitting status and control information to the host. Subject to protocol selection.

USB

Menus

The Universal Serial Bus (USB) port is part of Auto Switching and is active when the Host Interface menu is set to Auto Switching. It can also be selected as the only Host Interface under the Host Interface menu by selecting USB. The Host Interface menu is only available when the Admin User menu is enabled.

A top level USB Port menu with two submenus is also available:

- **Buffer Size in K** - the input buffer size used by the USB port. The range is from 1 to 16. The default is 16.
- **Timeout** - the Hotport Timeout value used to determine when the port is inactive. The range is from 1 to 60 seconds. The default is 10 seconds.

Ethernet and Wireless

Refer to the *Integrated Network Interface User's Manual* for detailed information on the ethernet and wireless interface.

6

Diagnostics and Troubleshooting

Printer Tests

A sequence of automatic tests is performed during printer power-up. If any faults are detected at that time, a fault message will display.

Before setting the printer for online operation, run test patterns to ensure proper operation and print quality. The printer has a number of tests which allow you to check for proper printer operation and print quality.

You can invoke the various test patterns from the TEST PRINT key or the DIAGNOSTICS menu. For more information, see page 226.

NOTE: Before attempting to print test labels, you must set up the printer for the type of media installed. See the MEDIA CONTROL menu on page 107 for more information.

Troubleshooting Common Situations

Occasionally, situations occur that require some troubleshooting skill. Possible problem situations and potential solutions are listed in this section. While not every conceivable situation is addressed here, you may find some of these tips helpful. Contact a qualified service technician for problems that persist or are not covered in this section.

Improving Processing Time

Before looking at solutions for decreasing processing time and increasing throughput, it may help to understand what happens during processing. When the printer receives a format command, it enters the label formatting mode. Label formatting requires time to process the label data into the printer buffers.

The time required varies, depending on the complexity of the label format and on the size of the area being printed. Once the data has been mapped into memory, the printer will start printing as many labels as requested by the quantity command. In most cases, there is no delay between labels, however, when using Automatic Label Peel-Off or Tear-Off media handling, the printer stops between each label and waits for the label to be removed.

Data Exchange

Many things can cause data loss or communications problems. This section suggests some ways to isolate these problems and determine their cause.

Handshaking

Handshaking is the exchange of signals between two computers (or a computer and a peripheral input or output device) to indicate the status of the data being transferred. In the serial mode, the printer uses both hardware and software handshaking and transmits both forms simultaneously when the input buffer is full.

The printer can be used with either serial or parallel host interfaces. Parallel interfaces are usually straightforward, with no special settings required. Serial interfaces; however, have a variety of possible communication parameter settings. The two methods of handshaking that can be used, hardware and software, are explained below.

- **Hardware Handshaking**

This electrical signal is controlled by the logic state on pin 20 of the serial interface connector J2 (at the back of the printer). The signal will go high when the printer is ready to receive data. The signal will go low when the printer is in the busy state, which indicates that the printer input buffer is full and can no longer receive data.

- **Software Handshaking**

XON and XOFF are software signals that control serial data flow between the printer and the host system. When the printer input buffer is full, the printer transmits an XOFF (CTRL S) character that signals the host to stop sending data. When memory space becomes available in the input buffer, the printer sends an XON (CTRL Q) character, which tells the host that the printer is ready to receive more data.

If the printer appears to have communication problems, the self-test configuration test labels (see page 226) and character hex dump mode (see page 227) should be checked. The tests can help identify printer configuration errors that can cause problems.

Both of these test procedures are covered in this chapter. Configuration items to check include the following:

- Check that the data string being sent to the printer contains the correct information.
- Verify that the correct host interface port is being used and that the communication parameters match those of the host (e.g., baud rate, parity, etc.).
- Verify that the correct interface cable is installed between the host and the printer.

Interfacing

The printer will not function properly with an incorrectly wired cable or the wrong interface cable installed. If the cable is suspect, contact Printronix or your authorized service representative.

When the printer is first powered up, it will reset itself to the communication default parameters. The parameters are listed in the following table:

PARAMETER	DEFAULT VALUE
Baud	9600
Data Bits	8
Parity	NONE
Stop Bits	1

The printer interface configuration settings may be entered from the control panel. See Chapter 3, “Configuring The Printer” for complete instructions.

Controlling Print Quality

Three factors have the greatest effect on print quality:

- The amount of heat applied by the printhead (print intensity)
- The speed at which media is moving under the printhead (print speed)
- The amount of printhead pressure.

For example, low-cost direct thermal media often has very high reaction temperatures, which means that it takes a great deal of heat to make a clear image. Resin ribbons and film media may require higher print intensity for a quality image.

The printer provides two ways to increase the heat:

- Running the printer slower by changing the print speed via the host or the MEDIA CONTROL menu.
- Setting the print intensity to a higher value with the Print Intensity function, accessed via the host or through the MEDIA CONTROL menu. This causes more heat to be transferred into the media, thereby generating a darker image.

Proper printhead pressure adjustment will affect print quality. To adjust pressure, rotate the printhead pressure adjustment dial (see Figure 6). For more information, refer to “Printhead Pressure Adjustment” on page 52.

Also, the printhead should be cleaned frequently to ensure that foreign material does not accumulate on the printhead and interfere with heat transfer. If smears, voids, or white lines appear in the printed form, the printhead should be cleaned with a printhead cleaning pen (see Figure 6).

The cleaning should be done as a matter of routine whenever you install a new ribbon (thermal transfer mode) or when you install new media (direct thermal mode).

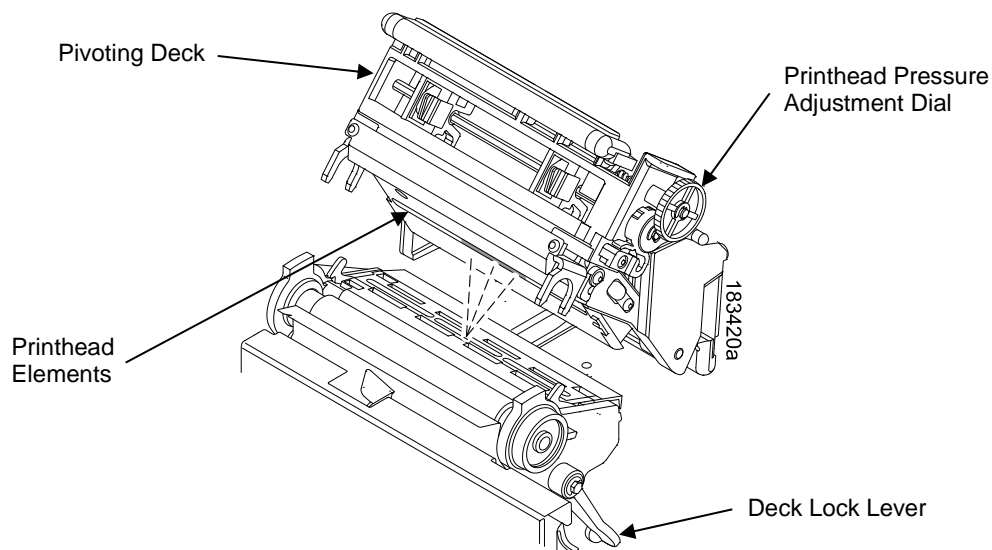


Figure 6. Cleaning the Printhead

Determining Printhead Wear

The most common signs of a worn printhead are fixed vertical streaks that are always the same size and in the same place on the printout. To determine if vertical streaks are caused by a worn printhead, follow these methods:

1. Clean the printhead thoroughly with the printhead cleaning pen. Test again for vertical streaks.
2. Remove the printhead (see page 296) and examine it for contamination or damage such as scratches, dents, or other marks on the light brown area containing the heating elements. Clean and install it, then test again for vertical streaks.
3. Load an alternate roll of media. Test again for vertical streaks.
4. Load an alternate roll of ribbon. Test again for vertical streaks.

If after performing all these tests you still see fixed vertical streaks, you must replace the printhead.

Replacing the Printhead

1. Set the printer power switch to O (Off).

WARNING Always unplug the printer power cord from the printer or power outlet before doing any installation procedure. Failure to remove power could result in injury to you and damage the equipment. When applicable, you will be instructed to apply power.

2. Unplug the printer power cord from the printer or the AC power source.
3. Remove the ribbon and media (e.g., paper, label, or tag stock material).

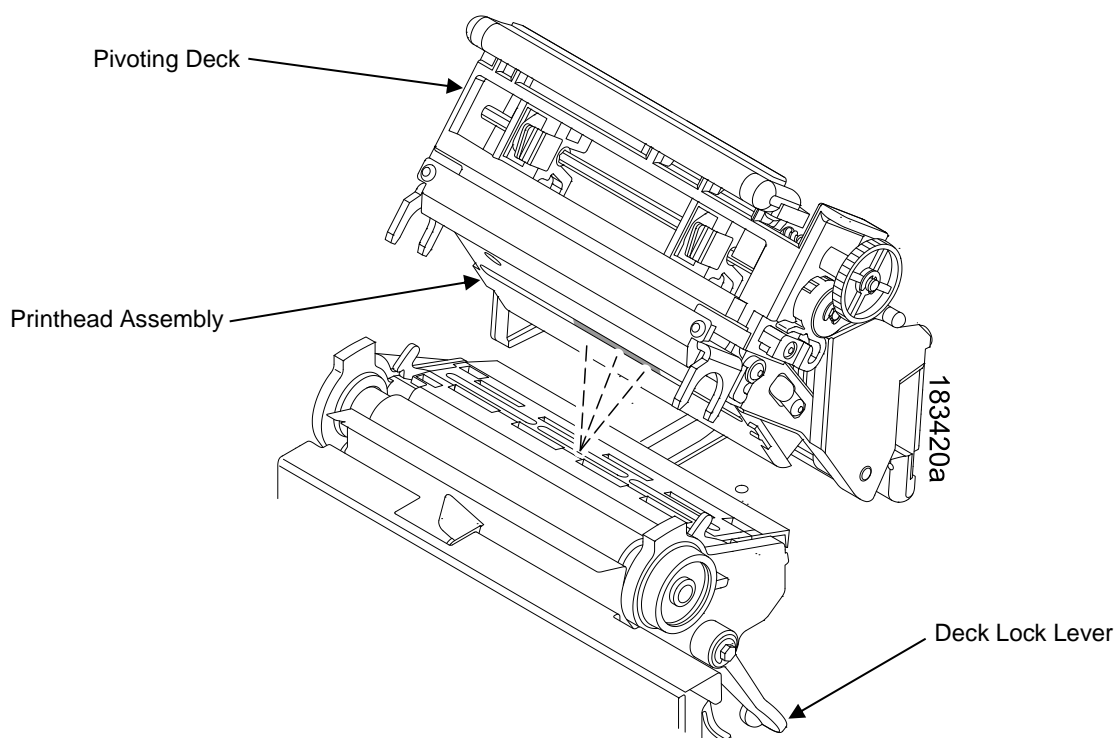


Figure 7. Opening the Pivoting Deck

CAUTION Oils from your hands can damage the light brown area (heating elements) of the printhead. Do not touch the light brown area when you handle the printhead assembly.

4. Open the pivoting deck by rotating the deck lock lever fully clockwise. The pivoting deck will swing upward, exposing the bottom of the printhead assembly.

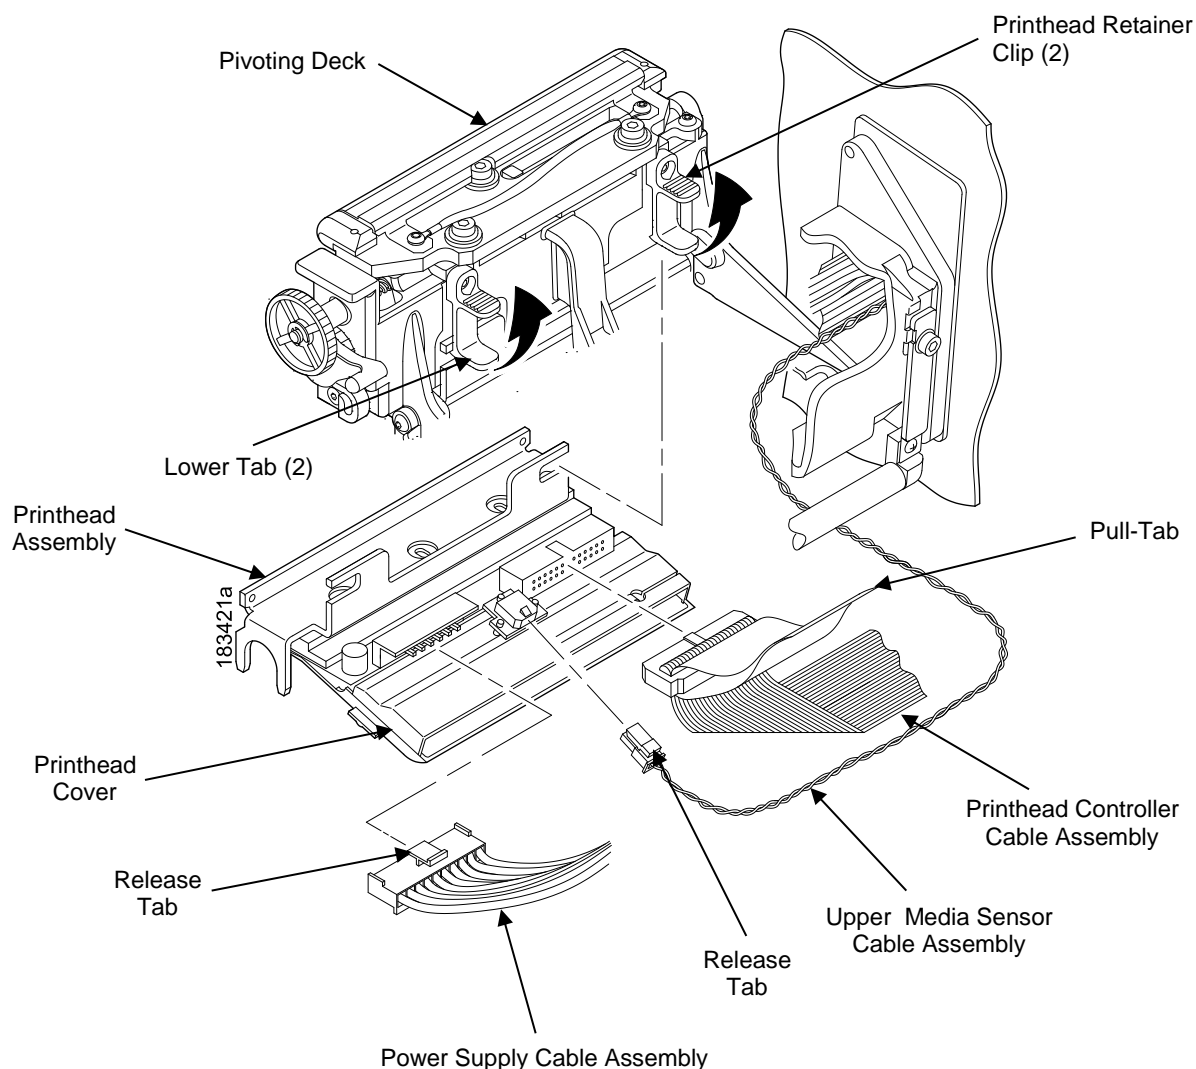


Figure 8. Replacing the Printhead Assembly

CAUTION To prevent electrostatic damage to electronic components, ground yourself by touching an unpainted part of the printer frame before handling and installing the printhead.

5. Touch an unpainted part of the printer frame before touching the printhead.
6. Behind the pivoting deck, gently pull the lower tabs of the retainer clips upward to release the printhead assembly. (You only need to pull the tabs a small amount to release the printhead assembly.)
7. Hold the printhead assembly by the printhead cover as it is released.
8. Push the release tab down on the power supply cable assembly and remove the cable from the printhead assembly.
9. Use the pull-tab to remove the printhead controller cable assembly from the printhead assembly.

10. Push the release tab down on the upper media sensor cable assembly and remove the cable from the printhead assembly.







NOTE: The upper media sensor cable assembly connects in the middle for 4 inch models, on the left side for 6 inch models (Figure 8), and on the right side for 8 inch models.

11. Position the new printhead assembly below the pivoting deck and connect the printhead controller, power supply, and upper media sensor cable assemblies.

NOTE: You may need to gently pull the lower tabs of the retainer clips upward to install the printhead assembly.

12. Slide the printhead assembly upward into the pivoting deck until the retainer clips snap it in place. Make sure that the cable assemblies do not extend past the printhead cover and into the media or ribbon path.

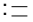Restore the Printer to Operation

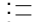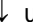1. Inspect the light brown area of the printhead for smudges or fingerprints. If necessary, gently clean the light brown area with a soft, lint-free cloth (or a cotton swab) moistened with isopropyl alcohol, or use a Cleaning Pen (P/N 203502-001).
2. Install the ribbon and media (e.g., paper, label, or tag stock material).
3. Close the pivoting deck and rotate the deck lock lever fully counterclockwise. (Figure 7.)
4. Close the media cover.
5. Plug the AC power cord into the printer and the power source.
6. Set the printer power switch to | (On).
7. Press  to place the printer in Menu mode.
8. Press the  and  keys at the same time until "ENTER SWITCH UNLOCKED" displays.
9. Press  until "DIAGNOSTICS" displays.
10. Press  until "DIAGNOSTICS/Reset Head Data" displays.
11. Press  to select "Reset Head Data." The message "RESETTING/HEAD DATA" displays. (This sets the Head Print Distance and Head On Time values to zero.)
12. Test printer operation and check print quality by selecting the **Diagnostics** → **Printer Tests** menu and printing one of the test patterns. (Refer to page 226.)

Diagnostics for E0xx, Bad NVM, or ILL NVM Errors

If the printer stalls with an LCD message such as 'E03E DSI CXIWX' or "NOVRAM ERR", reboot the printer and continue. If this situation persists, invoke a diagnostic option that will capture the failure dump in a flash file that can be later uploaded from PrintNet Enterprise Suite and sent to Printronix Customer Support Center (see page 371) for further analysis.

This diagnostic option must be enabled for the printer to capture the information. To perform this diagnostic do the following the procedure:

1. Enable the 'Admin User' option under PRINTER CONTROL. This will display the 'Auto Dump' option.
2. Enable the 'Auto Dump' option under the DIAGNOSTICS menu.
3. When the failure happens, reboot the printer and wait for it to power up again.
4. Under the PRINTER CONTROL menu, go to 'View File List'.
5. Check the file list to see if files 'autodmp1' or 'autodmp2' are present.
If present, use PrintNet Enterprise Suite to upload these files to your host computer.
6. Contact Printronix Customer Support Center and send them the files and the printer's configuration printout. Refer to the *PrintNet Enterprise Suite User's Manual* for instructions to accomplish these tasks.

Solving other Printer Problems

Table 17. Printer Problems and Solutions

Symptom	Solution/Explanation
Communications Failures.	<ol style="list-style-type: none"> 1. Check the interface cable. 2. Check the configuration to ensure the correct interface is enabled. 3. Verify the printer is receiving data by viewing the Job In Process indicator on the control panel.
CONTROL PANEL	
LCD message display is illuminated and the printer appears to be working, but nothing is printing.	<ol style="list-style-type: none"> 1. Verify that the active emulation set on the control panel matches the emulation data sent to the printer. 2. Verify that the SFCC selection on the control panel matches the SFCC utilized within the emulation data that is sent to the printer. 3. Verify that the labels are the correct type (direct or thermal transfer). 4. If using direct thermal media, check that the media is loaded with the direct thermal side facing up. 5. Check that the transfer ribbon is correctly routed. Route transfer ribbon with ink side down as it passes under the printhead. 6. Check that the printhead assembly is properly closed by making sure the printhead latch is fully engaged. 7. Verify that the ribbon and media are compatible; incompatibility can cause extremely light printing. Match the ribbon to the type of media being used. 8. Check the used sections of ribbon for a printed image. Often times when ribbon and media are incompatible, the image can be seen on the ribbon but it will not transfer to the media. 9. Check that the Print Intensity is correct. Set the Print Intensity in the MEDIA SETUP menu or via the host software. 10. Check that the Label Width parameter value does not exceed the width of the media installed. Set the Label Width in the MEDIA SETUP menu. 11. Run the Checkerboard test print pattern from the DIAGNOSTICS menu. Note: Any imbalance of the print on the page. The printhead pressure may need adjustment. 12. Remove the printhead completely and re-install it ensuring the cables are correctly seated.

Table 17. Printer Problems and Solutions (continued)

Symptom	Solution/Explanation
LCD message display is illuminated and the printer appears to be working, but nothing prints and “Invalid Data” displays.	<p>This message informs the user that the printer has received data, but no valid commands were found. This typically occurs when an incorrect emulation or SFCC was selected. This message will continue to display until new data is received or when the printer is put offline.</p> <ol style="list-style-type: none"> 1. If the emulation and SFCC are correct, additional diagnostic information can be obtained by selecting the desired option under the “xxx Diagnostics” menu, found under the Emulations menu. 2. After selecting the desired option, rerun the job to obtain the additional diagnostic information.
ONLINE status indicator is flashing.	<ol style="list-style-type: none"> 1. Check the LCD for a specific fault message. Press the PAUSE key, and if a fault message displays, refer to the LCD Message Troubleshooting table on page 309. 2. Check for an Out-of-Media condition or missing labels in the middle of a roll. Load the correct media. 3. Check that the ribbon and label stock are correctly routed. Load ribbon and label stock correctly.
POWER FAILURES	
Printer fails to turn on, the display is not backlit, and the fan is not running.	<ol style="list-style-type: none"> 1. Check that the printer AC power cord is correctly attached to the printer and to the AC power outlet. 2. Have a qualified electrician test the AC wall outlet for the correct power range. Locate the printer in an area that has the correct power range. 3. Check the AC power cord. Replace a damaged AC power cord or one that you suspect may be bad. 4. Call your authorized service representative.

Table 17. Printer Problems and Solutions (continued)

Symptom	Solution/Explanation
PRINT QUALITY	
<ul style="list-style-type: none"> Label(s) did not get printed within a multi label print job. A portion of the printed image was clipped off and the beginning of the next label was printed on the same physical label. 	<ol style="list-style-type: none"> If the serial interface is being used, verify that the correct data protocol is selected to match the host interface protocol. If Clip Page = Enable in the MEDIA CONTROL menu, the printer may have falsely detected a gap, hole, or black mark and then clipped (discarded) the remaining printable data for the label. To fix this: <ol style="list-style-type: none"> Perform Auto Calibrate. See “Running Auto Calibrate” on page 60. Decrease Gap Threshold value by 2 or 3 increments. See “Gap/Mark Thresh” on page 129. Set Clip Page to Disable. Set Label Length to correct physical length value. See “Clip Page” on page 121.
Media moves, but no image prints in ONLINE mode.	<ol style="list-style-type: none"> Make sure the J402 power supply cable has a good connection to the right side of the printhead. Place the printer offline and print the Checkerboard diagnostic test pattern (see page 226). If the pattern prints, there is a communication problem between the host computer and the printer.
Media moves, but no image prints in Direct Thermal mode.	<ol style="list-style-type: none"> Media is not the type for direct thermal printing. Install direct thermal media. Direct thermal media is installed wrong side up. Reinstall the media with the correct side facing the printhead.
Media and ribbon move, but no image prints in Thermal Transfer mode.	<ol style="list-style-type: none"> Print the Checkerboard diagnostic test pattern and check that the image appears on the used portion of ribbon. If the image is on the ribbon, the ribbon may be installed with the transfer side against the printhead, instead of against the media. The ribbon may be designed for another model printer. The ribbon may not be compatible with the media.
When narrow media is installed, the media moves but no image prints.	Verify the Label Width value in the QUICK SETUP or MEDIA CONTROL menu agrees with the width of the installed media. Too large a value will start the image too far to the right and off the media.

Table 17. Printer Problems and Solutions (continued)

Symptom	Solution/Explanation
Printing is faded or of poor quality.	<ol style="list-style-type: none"> 1. Clean the printhead. 2. Check that both latches on the pivoting deck are closed and latched. Close the printhead by pressing down on both sides of the pivoting deck and rotating the deck lock lever fully counterclockwise. 3. Verify that the head pressure adjustment dial is properly set. Try increasing the pressure. 4. Verify that the Print Speed and Print Intensity values are correct. Adjust Print Speed and Print Intensity in the QUICK SETUP menu, MEDIA CONTROL menu, or via host software.
Print is light on the left or right side of the label.	Check if the pressure blocks are set for the width of the media being used. Set each block near the edge of the media.
Prints strange characters instead of the correct label format.	<ol style="list-style-type: none"> 1. If the printer serial interface is being used, check that the printer serial baud rate setting matches the baud rate of the host computer. Reset the printer via software, or turn the printer off and then on. 2. Check if the printer serial host interface is set for 8 data bits but the transmitting device is set for 7 data bits (or vice-versa). Check the current setting by viewing it on the LCD, and use the SERIAL PORT menu to adjust the settings, if necessary. 3. If the printer parallel interface is being used, make sure the parallel interface terminating resistors are correct for the host computer drivers.
<ul style="list-style-type: none"> • Start of image is printed an erroneous distance from the top-of-form. • The printer starts to print one label and then another, all within the same physical label. 	<ol style="list-style-type: none"> 1. Make sure the Label Length value matches the actual physical length of the label installed and the run on Auto Calibrate (see page 60). These symptoms could be caused by: <ul style="list-style-type: none"> • severely curled labels near the end of a media roll • the media sensor triggering off of a dark, preprinted image on the label • multiple gaps within the physical label. 2. In the MEDIA CONTROL menu, set Clip Page to Disable. 3. Run a Media Profile (see page 62). 4. If the Media Profile printout shows that preprinted images or an RFID antenna tag has an amplitude approaching the Gap/Mark Threshold level, position the lower media sensor to avoid the image or increase the Threshold Range percent value in the Calibrate CTRL menu. Run Auto Calibrate again and Media Profile to verify there is an improvement.

Table 17. Printer Problems and Solutions (continued)

Symptom	Solution/Explanation
<ul style="list-style-type: none"> Loss of one or more serialized labels within a print job. Start of image is printed in the middle of the gap. The top part of the image is lost when printing with Head First orientation selected. 	<ol style="list-style-type: none"> In the CALIBRATE CTRL menu, set Gap Windowing to Enable. Set Gap Length to equal the physical gap length of the media installed. The range is 0.05 to 1.00 inches. <p>The likely cause of these symptoms is that Clip Page = Enable and a cross-perforation, radical fold or flaw in the liner has caused the media sensor to detect this as the leading edge (TOF) of the new label or end of label (EOF), or both.</p>
Smears or voids in printed image.	<ol style="list-style-type: none"> Clean the printhead. Make sure the printhead temperature (Print Intensity) is not too high. Change the Print Intensity value in the QUICK SETUP or MEDIA CONTROL menu. (See "Print Intensity" on page 108.) Verify that the printhead pressure blocks are positioned correctly to match the media width installed. (See "Printhead Pressure Block Adjustments" on page 53.) Make sure the printhead pressure dial is set properly for the media thickness installed. Skin oils can adhere to the surface of label stock, causing fingerprints which inhibit thermal transfer. Wipe label stock with a cloth, or remove a few feet of labels to expose a clean area. Handle labels by the edges. Check that the media has not been mishandled before or during installation in the printer. Soiled media or media with fingerprints will prevent proper ribbon transfer. Check that media has not been installed inside out. Surfaces on both sides may look identical but can produce big differences in print quality. Make sure the correct ribbon and media combination are being used. Use the correct ribbon type. Check the ribbon for creases or folds across its surface. Smooth out the ribbon to remove any creases. Reduce the Print Speed value through the QUICK SETUP menu, MEDIA CONTROL menu, or via host software. If using ribbon (Transfer Print mode), do not use direct thermal media.

Table 17. Printer Problems and Solutions (continued)

Symptom	Solution/Explanation
PRINTER OPERATION	
Advances several labels when FEED key is pressed.	<ol style="list-style-type: none"> 1. Check that labels are loaded correctly. (See “Loading Media and Ribbon” on page 28.) 2. Check that the Label Length (in the QUICK SETUP menu, MEDIA CONTROL menu, or sent by the host computer) agrees with the length of the media installed. Although gaps, holes, notches, or black marks are used to establish the Top-of-Form position, a larger page length will override the gap and skip a page or more if Clip Page (in the MEDIA CONTROL menu) is set to Disable. Set Page Length to match the media being used. 3. Check that the printer is optimized to detect the type of media installed. Perform Auto Calibrate for gapped and black mark media. (See “Running Auto Calibrate” on page 60.) 4. Adjust the media sensor horizontally to detect gaps, holes, notches, or narrow width black marks. (See “Positioning the Media Sensors” on page 54.) 5. If the problem persists, run the Media Profile printout to see if the label length indicators are being sensed. 6. Run Manual Calibrate. (See “Running Manual Calibrate” on page 66.)

Table 17. Printer Problems and Solutions (continued)

Symptom	Solution/Explanation
Label wraps around the platen roller.	<ol style="list-style-type: none"> 1. Open the pivoting deck by rotating the blue deck lock lever clockwise and then open the front door and loosen the two thumbscrews for better platen access. 2. Remove the wrapped label by slowly pulling and unwrapping it from the platen. <p>NOTE: Even though power is removed from the platen motor, some drag will be felt as the platen rotates.</p> <p>CAUTION</p> <p>Never use a sharp object against the platen as cuts and gouges in the platen may cause voids in the printed image and require platen replacement.</p> <ol style="list-style-type: none"> 3. When the entire label is removed from the platen, then use an isopropyl alcohol wipe, Printronix PN 254945-901, to remove all the adhesive from the platen to help prevent any future label wraps. Tighten the printer front door thumbscrews. 4. A label wrap occurs when a die cut label is incorrectly torn at the tear bar by the user and adhesive is exposed under the leading edge of the next label. When the printer pulls this next label back to TOF, the adhesive contacts the platen and when the label advances forward during printing or a Form Feed, it wraps around the platen. 5. Label wraps can be avoided by having the user practice careful tear off techniques and ensuring that the label across performances are ideally positioned at the tear bar edge by using the correct Paper Feed Shift value in the QUICK SETUP menu. 6. If Tear-Off Strip Media Handling mode is being used, you can reduce the length of a label wrap, should one occur, by setting the Lbl Missing Fault menu to Early Detect. This enables the Label Taken Sensor at the front of the printer so that it will look for the first 1.3 inches of a label. If no label is detected by the sensor during a Form Feed or while printing, the printer will stop and display LABEL WRAP: Open Head To Clear.
Pivoting deck is difficult to close and lock when heavy tag stock media is installed.	<ol style="list-style-type: none"> 1. Set the printhead pressure adjustment dial to the MIN position. 2. Close the pivoting deck and lock the deck lock lever. 3. Position the printhead pressure adjustment dial to the desired head pressure setting.
Print is too small or too large.	Ensure the proper printhead is installed (203 or 300 dpi).

Table 17. Printer Problems and Solutions (continued)

Symptom	Solution/Explanation
<ul style="list-style-type: none"> Print quality is good, but the printer skips every other label. An occasional blank label occurs within a print job, but no labels are lost. 	<ol style="list-style-type: none"> Make sure that the label is not formatted too close to the top edge of the form. Leave white space equal to eight dot rows at the top of the label. 300 dpi = .0264 inches. 203 dpi = .04 inches. Check that Clip Page = Enable in the MEDIA CONTROL menu. Clip Page = Enable causes any printable data to be clipped off and lost once the next TOF position (transmissive gap, notch, hole, or reflective mark) is detected. Clip Page = Disable allows the printer to ignore a gap or mark. The printer looks for the gap or mark after the specified Label Length is first reached.
RIBBON	
Printer advances media, but the ribbon does not advance.	<ol style="list-style-type: none"> Make sure the ribbon is installed correctly. A poor ribbon/media combination can cause insufficient friction between the media and ribbon. Verify that the correct ribbon and media are being used. The printhead pressure may not be set high enough. Set the pressure higher. There may be adhesive on the printhead. Clean the printhead. Verify that Print Mode in the QUICK SETUP or MEDIA CONTROL menu is set for Transfer and not Direct Thermal.
Printer cuts (melts) through the transfer ribbon.	<ol style="list-style-type: none"> Verify that Print Intensity is set to the proper level in the QUICK SETUP or MEDIA CONTROL menu. Verify that Print Mode in the QUICK SETUP or MEDIA CONTROL menu is set for Transfer and not Direct Thermal.
Printing stops and the ONLINE status indicator flashes.	<ol style="list-style-type: none"> Check that the media sensor is clean and undamaged. Check that the gap between the bottom of a label and the top of the next label is at least 0.100 inch. Use only labels and tag stock approved for this printer. Inspect for a jammed label. Remove the jammed label. Check that the transfer ribbon and label stock are routed correctly.

Table 17. Printer Problems and Solutions (continued)

Symptom	Solution/Explanation
Narrow width ribbon breaks frequently.	<p>The Ribbon Width value in the MEDIA CONTROL menu is set too large, which causes too great a ribbon take-up and ribbon supply spindle torque. Reduce the Ribbon Width value to decrease the torque on the ribbon spindles. The Ribbon Width value should be very close to the Label Width value.</p> <p>To reduce the torque further, set Ribbon Length (in the MEDIA CONTROL menu) from Save As Paper to Set In Menu. Then set a value less than the installed ribbon width.</p>
Wide width ribbon does not take up properly. The ribbon moves past the platen assembly.	<p>The Ribbon Width value in the MEDIA CONTROL menu is set too narrow for the ribbon installed. Set the Ribbon Width value to match the width of the ribbon installed. This will increase the torque on the ribbon take-up spindle.</p>

Printer Alarms

The printer has built-in alarms that monitor printer status and media stock conditions. Alarm messages display indicating the present status of the printer and media stock levels. The alarms also indicate if the printer electronics detect an error condition.

Fault Messages

If a fault condition occurs in the printer, the status indicator on the control panel flashes on and off and the message display indicates the specific fault. Fault messages are summarized in Table 18.

Displayed faults fall into one of two categories:

- Operator correctable
- Field service required

Operator-Correctable Fault Messages

For the operator-correctable faults, follow the suggested corrective action under the solution section of the table. After correcting the displayed fault, press the PAUSE key to clear the error message and status indicator and resume printing. If the fault message reappears, power off the printer and wait 15 seconds before powering on the printer again. If the error condition persists, contact your authorized service representative.

Fault Messages Requiring Field Service Attention

If a fault is not correctable by the operator, the fault message is followed by an asterisk (*). This usually indicates that an authorized service representative is needed. You should try two steps to clear the fault before calling your authorized service representative:

1. Set the printer power switch to O (off), wait 15 seconds, then turn the printer on again. Run your print job again. If the message does not appear, it was a false indication and no further attention is required.
2. If the message reappears, press the PAUSE key. If the message goes away, it was a false indication and no further attention is required. If the message reappears, call your authorized service representative.

Table 18. LCD Message Troubleshooting

Displayed Message	Can User Correct?	Explanation	Solution
06 HOST REQUEST	Yes	Status message: in CT emulation, the host computer or printer controller requires attention.	Not a printer problem.
08 HOLD PRINT TIMEOUT	Yes	Status message: in CT emulation, the printer was offline more than 10 minutes and the "Intervention Required" parameter is set to "Send to Host."	Press PAUSE to put the printer online.
15 COMM CHECK	Yes/No	Communication Check: a message that appears in the CT emulation meaning the line is not active on a twinax interface.	<ol style="list-style-type: none"> 1. Check your network for proper operation. 2. Try a different cable from a known good device. 3. If the problem persists, contact your authorized customer service representative.
22 INVALID ADDR	Yes	Invalid Address: poll time-out on the twinax interface indicating the unit address is not recognized by printer.	Have the system administrator make sure the printer address is correct.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
27 CU TIMED OUT	Yes	Controller Unit Timed Out: the printer was not enabled for one minute or more on a coax interface.	Check the cable connection and host system. (Refer to the line problem determination procedures, as recommended by the host system.)
28 CU NOT ENAB	Yes	Controller Unit Not Enabled. Poll time-out-error. The printer was not polled for one minute across a coax interface.	Check the cable connection and host system. (Refer to the line problem determination procedures, as recommended by the host system.)
33 HEAD OPEN TIMEOUT	Yes	Status message in the CT emulation: The printer was offline more than 10 minutes, and the "Intervention Required" parameter is set to "Send to Host."	Close and latch the printhead. Press PAUSE to put the printer online.
40V POWER FAIL	Yes	+40 VDC: an internal power failure.	Power off the printer for 15 seconds, then power back on. If the problem persists, contact your authorized customer service representative.
203 DPI Head Installed	Yes	Normal power-up message. The printer is running its initialization routine and indicating DPI resolution of the installed printhead.	No action required.
300 DPI Head Installed	Yes	Normal power-up message. The printer is running its initialization routine and indicating DPI resolution of the installed printhead.	No action required.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
Ambient light Validator failure	Yes	Ambient light is compromising proper scanning. NOTE: The Validator scanning laser cannot work properly in a room with excessive ambient light, including direct sunlight.	<ol style="list-style-type: none"> 1. Minimize the ambient light around the validator. This may require moving the printer to a darker area of the room. 2. Press the PAUSE key to clear the fault message.
BAD NVM CALL 1 BAD NVM CALL 2 BAD NVM CALL 3 BAD NVM CALL 4 BAD NVM CALL A	Yes	Printer firmware code error.	<ol style="list-style-type: none"> 1. Cycle power. 2. If the problem persists, follow the instructions for “Diagnostics for E0xx, Bad NVM, or ILL NVM Errors” on page 299 and contact your authorized customer service representative.
BAD VFU CHANNEL	Yes	The user tried to use an undefined VFU channel.	Use defined channels.
BAR CODE IMPROPER Data Format	Yes	Data validation error: improper data format.	Fix application so it sends data in the correct bar code format.
BAR CODE QUIET Zone too small	Yes	Data validation error: Quiet Zone error.	<ol style="list-style-type: none"> 1. Fix application. 2. Disable Quiet Zone Error reports.
BUFFER OVERFLOW	Yes	Host sent data after the printer buffer was full (serial interface).	<ol style="list-style-type: none"> 1. Make a configuration printout. 2. Verify that the printer matches the host serial interface configuration settings for Data Protocol, Baud Rate, Data Bits, Stop Bits, Parity, Data Terminal Ready, and Request to Send. 7. Set printer serial interface parameters to match those of the host.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
BUFFER OVERRUN	Yes	Receive overrun (serial interface).	<ol style="list-style-type: none"> 1. Make a configuration printout. 2. Verify that the printer matches the host serial interface configuration settings for Data Protocol, Baud Rate, Data Bits, Stop Bits, Parity, Data Terminal Ready, and Request to Send. 3. Set the printer serial interface parameter to match those of the host.
Calibration warning	Yes	The validator has detected that it needs calibration. This is a reminder message and does not halt printing.	Press the PAUSE key to clear the message. Perform the calibration procedure described in the <i>Data Validator User's Manual</i> .
CALIBRATION FAIL	Yes	Calibration values derived from Manual Calibrate were not acceptable.	Run Manual Calibrate again.
CANNOT CALIBRATE Disable Peel-Off	Yes	<p>Run Calibrate was attempted with Peel-Off Media Handling selected.</p> <p>NOTE: You can perform Auto Calibrate in Peel-Off mode if Cal in Peel Mode = Enable. Be prepared to catch labels during Auto Calibrate.</p>	<ol style="list-style-type: none"> 1. Select another Media Handling option in the QUICK SETUP or MEDIA CONTROL menu. 2. Enable Cal in Peel Mode in the CALIBRATE CTRL menu. NOTE: Admin User must = Enable.
Checksum Failure	Yes	The validator detected that the barcode fails checksum or is missing the checksum digit.	Verify that the checksum digit exists in the barcode and that it is the correct value.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
CLEARING PROGRAM FROM FLASH	Yes	Emulation software successfully loaded into printer RAM and the checksum matched. The old program is now being deleted from flash memory.	No action required.
CONTRAST TOO LOW Check media	Yes	Data validation error: symbol contrast.	<ol style="list-style-type: none"> 1. Adjust heat or change media. 2. Disable symbol contrast error reports.
CUTTER FAULT Jam or Cut Fail	Yes	<ol style="list-style-type: none"> 1. Cutter assembly is not in the closed position. 2. Cutter option was not able to complete a full cut cycle due to a jam. 3. Cutter PCBA detected current overload and opened circuit breaker on cutter PCBA. 	<ol style="list-style-type: none"> 1. Place the cutter assembly in the closed (up) position. 2. Clear obstruction from the cutter assembly. 3. Insure media thickness is within specification. Wait a few minutes for the cutter circuit breaker to automatically reset. Press PAUSE to clear the fault message and resume printing.
DIAGNOSTICS PASSED	Yes	The printer passed its memory and hardware initialization tests.	No action required.
DIRECT THERMAL Remove Ribbon	Yes	This is the normal reminder message when you change the Print Mode setting from Transfer to Direct in the QUICK SETUP or MEDIA CONTROL menu.	<ol style="list-style-type: none"> 1. Remove ribbon from the ribbon supply and ribbon take-up spindles in the printer. 2. If ribbon is required for printing, change the Print Mode back to Transfer.
DO NOT POWER OFF	No	This is a standard warning message that displays while the printer is downloading software.	Do not power off the printer until downloading is complete.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
DOWNLOADING TO VALIDATOR	Yes	Normal message when the printer is downloading validator firmware.	No action required. NOTE: The validator software update can be verified in the F/W Revision menu option of the VALIDATOR menu. Shown as: Example X326
E00 EXE @ ADDR0	Yes	An illegal or unsupported instruction was attempted in the application program.	<ol style="list-style-type: none"> 1. Cycle Power. Run the print job again. If the message appears, load the latest emulation software. 2. Cycle power. Run the print job again. If the message appears, record the display message and follow the instructions for “Diagnostics for E0xx, Bad NVM, or ILL NVM Errors” on page 299. 3. Contact your authorized customer service representative.
E01A TYPE 0x40 E01B TYPE 0x60 E02 MACHINE CHK E03A DSI HASH L E03B DSI HASH S E03C DSI BAT PL E03D DSI BAT PS E03E DSI CXIWX E03F DSI CXOWX E03G DSI ECXIWX E03H DSI ECXOWX E04A ISI NO TRA E04B ISI DIRECT E04C ISI PROTEC E06 NOT ALIGNED E07 ILLEGAL INS E08 FLOATINGPNT	Yes	An illegal or unsupported instruction was attempted in the application program.	<ol style="list-style-type: none"> 1. Cycle Power. Run the print job again. If the message appears, load the latest emulation software. 2. Cycle power. Run the print job again. If the message appears, record the display message and follow the instructions for “Diagnostics for E0xx, Bad NVM, or ILL NVM Errors” on page 299. 3. Contact your authorized customer service representative.
E-NET INIT	Yes	Ethernet is initializing.	No action required.
E-NET READY	Yes	Ethernet has finished initializing.	No action required.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
E-NET RESET	Yes	Ethernet interface is being reset.	No action required.
EC SOFTWARE FAIL	Yes/No	Engine control software failure.	Power off the printer for 15 seconds, then power back on. If the problem persists, contact your authorized customer service representative.
ENTER to Stop	Yes	Normal message when a test print pattern that will run continuously has been enabled.	Press the ENTER key to stop printing the test pattern.
ERROR: DC PROGRAM NOT VALID	Yes/No	The printer cannot find the data controller program or the validation checksum is corrupt.	Power off the printer for 15 seconds, then power back on. If the problem persists, contact your authorized customer service representative.
ERROR: DRAM AT ADDRESS XXXXXXXX	Yes/No	The printer found a defective memory location.	Power off the printer for 15 seconds, then power back on. If the problem persists, contact your authorized customer service representative.
ERROR: FLASH DID NOT PROGRAM	Yes/No	The printer encountered an error trying to program flash memory.	Power off the printer for 15 seconds, then power back on. Reprogram the printer again. If the problem persists, contact your authorized customer service representative.
ERROR: IPDS needs 300 DPI Head	Yes	The printer has detected a 203 DPI printhead installed with IPDS software downloaded. IPDS software only supports the 300 DPI printhead.	Power off the printer and replace the 203 DPI printhead with a 300 DPI printhead.
ERROR: NO DRAM DETECTED	Yes/No	The printer could not find any DRAM.	Contact your authorized customer service representative.
ERROR: PROGRAM NEEDS MORE DRAM	Yes/No	The program exceeds the memory limitations of the printer.	Download a smaller program.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
ERROR: PROGRAM NEEDS MORE FLASH	Yes/No	The printer requires more flash memory in order to run the downloaded program.	Delete any unused data file. Download the file again. If the problem persists, contact your authorized customer service representative.
ERROR: PROGRAM NOT COMPATIBLE	Yes	The printer is not compatible with the downloaded program.	Power off the printer for 15 seconds, then power back on. If the problem persists, contact your authorized customer service representative.
ERROR: PROGRAM NOT VALID	Yes	The printer does not see a program in flash memory.	Power off the printer for 15 seconds, then power back on. If the problem persists, contact your authorized customer service representative.
ERROR: SECURITY KEY NOT DETECTED	Yes/No	The security key is not present or has failed.	Power off the printer for 15 seconds, then power back on. If the problem persists, contact your authorized customer service representative.
ERROR: SHORT AT ADDRESS XXXX	Yes/No	Hardware failure in DRAM or Main PCBA controller circuitry.	Power off the printer for 15 seconds, then power back on. If the problem persists, contact your authorized customer service representative.
ERROR: WRITING TO FLASH	Yes/No	Hardware or software fault in flash memory.	Power off the printer for 15 seconds, then power back on. If the problem persists, contact your authorized customer service representative.
ERROR: WRONG CHECKSUM	Yes/No	The printer received the complete program but the checksum did not match. The data may have been corrupted during download.	Power off the printer for 15 seconds, then power back on. If the problem persists, contact your authorized customer service representative.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
ERROR OCCURRED FLUSHING QUEUES	Yes	An interim message displays while the printer discards host data it cannot use because a fault condition exists. While this message displays, the asterisk (*) rotates.	Wait. When the asterisk (*) stops rotating, a different fault message will appear; troubleshoot the final message. Contact your authorized customer service representative.
FAN FAULT	No	The printer detected that the power supply fan did not rotate.	<ol style="list-style-type: none"> 1. Verify that the fan rotates when the printer is first powered up and when the printer moves media or prints. 2. Call your authorized service representative.
FILE EXISTS Enable Overwrite	Yes	The printer operator tried to save a file using the name of an existing stored file.	Enter the PRINTER CONTROL menu and enable the Overwrite Files feature to overwrite the existing file.
FILE SYS FULL Add Flash	Yes/No	Insufficient flash memory available to store file.	For additional flash, contact your authorized service representative.
FILE SYS FULL Delete Files	Yes	Insufficient flash memory available to store file.	Enter the PRINTER CONTROL menu. Use Delete Files to delete unwanted files.
FILE SYS FULL Optimize & Reboot	Yes	Insufficient flash memory available to store file.	Enter the PRINTER CONTROL menu and use the Optimize & Reboot feature.
FILE SYS INVALID Optimize&Reboot	Yes/No	File system not detected or flash was corrupted.	Enter the PRINTER CONTROL menu and use the Optimize & Reboot feature.
FILE SYS WRITE Check Flash	Yes/No	Problem writing to flash memory.	Power off the printer for 15 seconds, then power back on. If the problem persists, contact your authorized customer service representative.
FILE UPLOADING Please Wait	Yes	File is uploading to PNE.	Wait for upload completion before accessing printer front panel.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
FPGA FILE NOT FOUND	Yes/No	The program file was not downloaded successfully.	<ol style="list-style-type: none"> 1. Download the program file again. 2. If the message reappears, contact your authorized customer service representative.
FRAMING ERROR	Yes	Serial framing error over a serial interface.	Match the serial interface settings of the printer to those of the host computer.
GAP NOT DETECTED	Yes	<p>The printer is set for Gap or Mark sensing, but a gap, notch, or black mark is not being detected.</p> <p>The lower media sensor is not positioned correctly.</p> <p>When Advanced Gap or Advanced Notch is selected, the upper media sensor is not positioned above the lower media sensor.</p> <p>Gap/Mark Threshold is set too high or Paper Out Threshold is set too low.</p>	<ol style="list-style-type: none"> 1. Check that the setting of the Gap/Mark Sensor in the CALIBRATE CTRL menu matches the installed media. 2. Check the position of the lower and upper media sensors. (See "Positioning the Media Sensors" on page 54.) 3. Clean the sensor assembly and paper path. 4. Run Auto Calibrate to improve the sensor's ability to detect the media in use. 5. Run the Media Profile printout in the CALIBRATE CTRL menu. 6. Run Manual Calibrate. (See "Running Manual Calibrate" on page 66.) 7. Manually change the Gap/Mark Threshold and/or Paper Out Threshold values.
GRF CHK ERROR PRESS PAUSE	Yes	In the CT emulation over a twinax interface, the printer received a non-printable character.	Press the PAUSE key twice.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
H00: PCI SLOT ?	No	The controller board is not communicating with a PCI card. This could indicate a bad PCI card, poor connection, or problem in the PCI bus.	Call your authorized service representative.
H01: PCI J24	No	The controller board is not communicating with the PCI card in PCI slot J24 or J25. This could indicate a bad PCI card, poor connection, or problem in the PCI bus.	Call your authorized service representative.
H02: PCI J25	No	The controller board is not communicating with the PCI card in PCI slot J24 or J25. This could indicate a bad PCI card, poor connection, or problem in the PCI bus.	Call your authorized service representative.
Half Speed Mode	Yes	<p>The printhead or power supply is approaching a hot state. Half Speed Mode helps the cooling process and should permit completion of print jobs.</p> <p>Half Speed Mode helps prevent a PRINT HEAD HOT or PWR SUPPLY HOT fault, which will stop the printer.</p>	<ol style="list-style-type: none"> 1. Allow printer to continue printing. Full speed will resume automatically when a lower printhead or power supply temperature is achieved. 2. Let the printer cool down. Full speed will be restored when printing is resumed. 3. Lower Print Intensity and Print Speed to reduce frequency of Half Speed Mode.
HEAD POWER FAIL	Yes/No	Printhead lost power.	<ol style="list-style-type: none"> 1. Replace the printhead. 2. Power off the printer for 15 seconds, then power back on again. If the problem persists, contact your authorized customer service representative.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
IGP/PGL ERROR	Yes	Appears when the "Fault" option is selected from Error Report in the front panel.	Deselect "Fault" from Error Report on the front control panel.
ILL NVM VALUE 5 ILL NVM VALUE 6 ILL NVM VALUE 7	Yes	Printer firmware code error.	<ol style="list-style-type: none"> 1. Cycle Power. Run the print job again. If the message appears, load the latest emulation software. 2. Cycle power. Run the print job again. If the message appears, record the display message and follow the instructions for "Diagnostics for E0xx, Bad NVM, or ILL NVM Errors" on page 299. 3. Contact your authorized customer service representative.
INCOMPATIBLE WITH CUTTER	Yes	Tear-Off or Peel-Off Media Handling selection was attempted with the cutter option still installed. These modes require that the front door assembly be installed to use the Label Taken Sensor.	<ol style="list-style-type: none"> 1. Select a different Media Handling Mode. 2. Power off the printer and remove the cutter option, install the front door assembly, power on the printer and select Tear-Off or Peel-Off Mode.
INSUFFICIENT RAM Reboot	Yes/No	Not enough RAM memory available for a printer function.	<ol style="list-style-type: none"> 1. If the message reappears, decrease the Page Mem Adjust value in the PRINTER CONTROL menu and reboot the printer. 2. If the message reappears, replace the controller PCBA. Write down the message and return it with the defective board.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
LABEL MISSING Check Paper Path	Yes	<p>The Label Taken Sensor did not detect the label present over the tear bar with Tear-Off or Peel-Off Media Handling mode enabled.</p> <ul style="list-style-type: none"> The label was removed before the printer stopped printing or before the LCD "Remove Label" message displayed. The label slipped behind the platen roller. The label wrapped around the platen roller. Tear-Off or Peel-Off Media Handling mode was mistakenly selected. 	<ol style="list-style-type: none"> Press the PAUSE key to continue printing and then wait for the LCD "Remove Label" message before removing the label. Open the pivoting deck, reinstall the label, close the deck, press the PAUSE key, and continue printing. Open the pivoting deck and remove wrapped labels from the platen. Clean all adhesive from the platen. Reinstall labels, close the deck, press the PAUSE key, and continue printing. Select the correct Media Handling mode in the QUICK SETUP menu.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
LABEL WRAP: Open Head To Clear	Yes	<p>Tear-Off Strip Media Handling was selected and the Lbl Missing Fault menu was set to Early Detect. The Label Taken Sensor did not detect the first 1.3 inches of a label, indicating that the label has likely wrapped around the platen roller.</p> <p>A label wrap occurs when a die cut label is incorrectly torn at the tear bar by the user and adhesive is exposed under the leading edge of the next label. When the printer pulls this next label back to TOF, the adhesive contacts the platen and when this label advances forward during printing or a Form Feed, it wraps around the platen.</p>	<ol style="list-style-type: none"> 1. Open the pivoting deck by rotating the deck lock lever clockwise 2. Open the front door and loosen the two thumbscrews for better platen access. 3. Remove the wrapped label by slowly pulling and unwrapping it from the platen. <p>NOTE: Even though power is removed from the platen motor, some drag will be felt as the platen rotates.</p> <p>CAUTION</p> <p>Never use a sharp object against the platen as cuts and gouges in the platen may cause voids in the printed image and require platen replacement.</p> <ol style="list-style-type: none"> 4. When all of the label is removed from the platen, use an isopropyl alcohol wipe, Printronix PN 254945-901, to remove all adhesive from the platen to help prevent any future label wraps. 5. Tighten the printer front door thumbscrews. 6. Avoid label wraps by having the user practice careful tear off techniques and ensuring that the label cross perforations are ideally positioned at the tear bar edge by using the correct Paper Feed Shift value in the QUICK SETUP menu.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
LOADING PROGRAM FROM PORT XX%	Yes	The new emulation program is loading into printer RAM. XX% indicates how much of the program has loaded.	No action required.
LOADING PROGRAM INTO FLASH	Yes	A program is getting loaded into flash.	No action required.
MENU MODE QUICK SETUP	Yes	Normal message that displays when you first press the MENU key to place the printer in Menu mode when no validator option is installed.	No action required.
NON VOLATILE MEMORY FAILED	Yes/No	The printer assigns a certain amount of simulated NVRAM for storage of saved configurations. Large emulations reduce the amount of space available for saving configurations, which means that sometimes fewer than eight configurations can be saved. If this message appears when saving a configuration, it means the printer is out of memory. Previously saved configurations will still be available, but the one that was “saved” when the message appeared is not in memory. If this message appears at power-up, it means the flash memory is defective.	<ol style="list-style-type: none"> 1. If the message appears at power-up, call your authorized customer service representative. 2. If the message appears while saving a configuration, the printer is out of memory and will not save that or subsequent configurations. (Previously saved configurations are still okay.) 3. Limit the number of saved configurations to seven.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
OPTION NOT INSTALLED	Yes	If the printer is powered on with the cutter enabled in the Media Handling menu, but the cutter itself is open (in the down position, or the cutter upper enclosure is removed) the printer cannot detect the cutter. When using the cutter, the printer must be powered on with the cutter in the up position and the cutter upper enclosure installed.	<ol style="list-style-type: none"> 1. Check that the cutter option is installed, connected in the up position and the upper enclosure installed before powering on the printer. 2. Install the cutter option or change to the correct Media Handling option in the QUICK SETUP menu. 3. If the error persists, contact your authorized customer service representative.
OVERALL GRADE FAIL	Yes	Overall data validation failure: decodeability, percent decode, defects, modulation, EC Min, Rmin, and/or symbol contrast.	<ol style="list-style-type: none"> 1. Press Pause to clear the message. 2. Adjust the parameter that is causing the failure. Run a Scan Report to see which parameter failed. 3. Lower the Overall Grade to a point where the worst parameter grade will be above the Overall Grade threshold.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
PAPER OUT Load Paper	Yes	<p>The printer does not sense media:</p> <ul style="list-style-type: none"> Media was not installed or has run out. A break in media has occurred. Media was not routed or installed correctly. The media sensor is not positioned correctly. Media is installed correctly, but the sensor is not detecting it. Gap/Mark Threshold value may be set too high and/or Paper Out Threshold may be set too low. The printer detected a false PAPER OUT when changing from Advanced Gap or Advanced Notch to Gap or Mark sensing or vice-versa. 	<ol style="list-style-type: none"> 1. Install media. If a break occurred, reinstall the media. Press the PAUSE key to clear the fault message. Check the media installation procedures on page 28. 2. Verify the lower media sensor is properly positioned under the media. If Advanced Gap or Advanced Notch is selected, verify the upper media sensor is positioned above the lower media sensor. Run Auto Calibrate to improve the ability of the sensor to detect the installed media. 3. Check if the Gap/Mark Threshold is too high or the Paper Out Threshold is too low. Lower the Gap/Mark Threshold or raise the Paper Out Threshold value. 4. If using media with no gaps or black marks, perform Auto Calibrate to establish a valid Paper Out Threshold. 5. If the printer detected a false PAPER OUT when changing from Advanced Gap or Advanced Notch to Gap or Mark sensing or vice-versa, press the PAUSE key and run Auto Calibrate.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
PAPER OUT TIMEOUT	Yes	In the CT emulation with a coax interface, a time-out message is sent to the host if paper is not loaded within 10 minutes after PAUSE was pressed to clear a paper out fault.	Load media and run a print test. If the message persists, contact your authorized service representative.
PARITY ERROR	Yes	Parity error (serial interface).	Check your serial host interface parameter settings. If necessary, change them so they match the settings of the attached host.
PLEASE WAIT	Yes	The printer is performing an operation that takes some time.	Wait until message clears.
POOR SCANNING Check Head&Heat	Yes	Data validation failure: The ratio between bar code elements is too small.	Adjust heat/speed/pressure.
POOR SCANNING Check media	Yes	Data validation failure: The bar code is only good in small bands that are difficult to scan.	Check for ribbon wrinkle. Roll wrinkled area onto take-up spindle.
POOR SCANNING Inspect head	Yes/No	Data validation failure: Defects failure; blemishes with the bar code are detected.	<ol style="list-style-type: none"> 1. Check paper and ribbon to make sure they are clean, unwrinkled, and installed properly. 2. Clean printhead. 3. If message persists, replace the printhead.
POWER SAVER MODE	Yes	This is a status message. The printer is in low-energy idle state, the fan and higher voltages are off, and only +5Vdc logic circuits are active.	No action required.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
PRINT HEAD COLD	Yes	Printer is in a cold environment or connector P401 has become dislodged from the back of the printhead.	<ol style="list-style-type: none"> 1. Reseat P401 on printhead. 2. Change the printhead. 3. Place printer in a warmer location. 4. If problem persists, contact your authorized service representative.
PRINT HEAD HOT	Yes/No	The printhead has become overheated.	<ol style="list-style-type: none"> 1. Allow the printhead to cool down for 5 minutes, then press PAUSE. Resume printing. 2. If possible, reduce print intensity. 3. If problem persists, contact your authorized service representative.
PRINT HEAD UP Close Print Head	Yes	Printhead is not closed and completely latched.	Close and latch the printhead pivoting deck.
PRINTER HOT	Yes/No	The printer has detected higher than usual temperatures on the controller PCBA.	<ol style="list-style-type: none"> 1. Determine that the fan is operating and that all air vents are unobstructed. 2. Power off the printer for 15 seconds, then power the printer back on. 3. Move the printer to a cooler location. 4. If the problem persists after moving the printer to a cooler location, contact your authorized customer service representative.
PRINTER UNDER REMOTE CONTROL	Yes	Indicates that PNE has control of the printer.	Press any key on the printer.
P/S MISMATCH Replace Supply	No	Incorrect power supply is mounted in the printer.	Contact your authorized customer service representative.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
PWR SUPPLY HOT	Yes	Power supply is hot.	<ol style="list-style-type: none"> 1. Determine that the fan is operating and that all air vents are unobstructed. 2. Move the printer to a cooler area. 3. If the problem persists, contact your authorized customer service representative.
RBN TAKEUP FULL Remove Used Rbn	Yes	The ribbon takeup spool is full.	<ol style="list-style-type: none"> 1. Empty the takeup spool. 2. If the takeup spool is not full, try re-threading the ribbon. 3. Disable Rbn Takeup Full in the MEDIA CONTROL menu.
Remove Label	Yes	<ul style="list-style-type: none"> • A label was detected at the front of the printer by the Label Taken Sensor. This is the normal reminder message when Peel-Off or Tear-Off Media Handling has been selected. • A label was removed, but the "Remove Label" message remained. • The incorrect Media Handling mode was selected. 	<ol style="list-style-type: none"> 1. Remove the label from the front of the printer to allow the next label to print. 2. Verify that a front door assembly is installed on the printer and that it is properly closed. Ensure that no debris is obstructing the door mirror or the Label Taken Sensor. 3. In the QUICK SETUP or MEDIA CONTROL menu, change Media Handling to the correct selection.
RESETTING PLEASE WAIT	Yes	Printer finished loading the program into flash memory and is automatically resetting itself.	No action required.
RESTORING BOOT CODE	Yes	Normal download initialization message.	No action required.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
RIBBON BROKEN Reload Ribbon	Yes	Ribbon is broken between the ribbon take up spindle and the printhead.	Reattach ribbon.
RIBBON FAULT Timeout	Yes	In the CT emulation with a coax interface, the ribbon has not moved for 10 minutes after PAUSE was pressed to clear a ribbon fault.	<ol style="list-style-type: none"> 1. Clean the printer. 2. Power off, wait 15 seconds, then power back on again. If the message persists, contact your authorized customer service representative.
RIBBON LOAD BAD Reload Ribbon	Yes	Ribbon was incorrectly loaded on the take-up or supply spindle.	<ol style="list-style-type: none"> 1. Reload the ribbon correctly. For ribbon loading instructions, see page 40.
Ribbon Low	Yes	<ol style="list-style-type: none"> 1. The supply spool is getting low. 2. If there is a large amount of ribbon still on the supply spool, then the Ribbon Low message is being displayed falsely. 	<ol style="list-style-type: none"> 1. Replace ribbon. 2. Disable Ribbon Low in the MEDIA CONTROL menu.
RIBBON OUT Load Ribbon	Yes	<ol style="list-style-type: none"> 1. The ribbon supply spool is empty. 2. The ribbon has broken. 	<ol style="list-style-type: none"> 1. Replace ribbon. 2. Reinstall ribbon.
SECURITY CODE VIOLATION	Yes	The software being used is not correct for the printer.	<ol style="list-style-type: none"> 1. Load the correct software. 2. If the problem persists, contact your authorized customer service representative.
SECURITY VIOLATION	Yes	The security key is missing.	Install the security key.

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
SOFTWARE ERROR* Recycle Power	Yes/No	<ol style="list-style-type: none"> 1. Application software tried to perform an illegal printer function. 2. There are damaged logic circuits on the controller PCBA. 	<ol style="list-style-type: none"> 1. Recycle the printer power. If possible, print a job that has previously worked. 2. If the problem persists, contact your authorized service representative.
Speed Exceeds Validator Limit	Yes	The Print Speed or Slew Speed value is above 6 IPS as the power-up default with the validator option installed, or the user attempted to increase Print Speed or Slew Speed above 6 IPS.	Change the Print Speed or Slew Speed value in the MEDIA CONTROL menu to 6 IPS or less when using the validator option, and save the new value as the power-up default.
TESTING HARDWARE PLEASE WAIT	Yes	Normal power-up message. Printer is running its initialization routine.	<ol style="list-style-type: none"> 1. No action required. 2. If the printer does not complete initialization and continues displaying this message when the CT emulation is installed, the expansion CT board may not be connected to the controller PCBA.
Unscannable: xx Missing Codes	Yes	Data validation error: missing barcode.	<p>Check the paper and ribbon for cleanliness, wrinkles, etc., or an obstructed validator beam. If there is no validator beam at all, or if the LED is not flashing as barcodes pass through the validator beam, recycle validator power. If the problem persists, contact your service representative.</p> <p>NOTE: xx represents the number of missing barcodes (on the form) that caused the warning/fault to be declared.</p>

Table 18. LCD Message Troubleshooting (continued)

Displayed Message	Can User Correct?	Explanation	Solution
Validator not communicating	Yes	The Validator Funct. = Enable in the VALIDATOR menu, but when the printer was first powered up it could not communicate with the validator.	Check that the validator signal cable is securely connected to the validator unit.
WAITING FOR PROGRAM DOWNLOAD	Yes	Normal message when the printer is powered up while holding down both the MENU key and the DOWN arrow key in preparation to download software to the printer.	<ol style="list-style-type: none"> 1. Complete the downloading software procedure. See "Downloading Software" on page 265. 2. Exit this procedure by cycling printer power.
WIRELESS ADAPTER NOT COMPATIBLE	No	The type of wireless card is incompatible with the printer software.	The PCMCIA radio card that you installed may be incompatible with the dual NIC interface in the printer. Verify the approved brand and model number of the radio card with your printer service provider and install the correct version. If using the correct radio card does not resolve this problem, call your service provider for further support.

A

Specifications

Print Method

Table 19. Printing Specifications

	T5204 SL5204	T5304 SL5304	T5206 SL5206	T5306 SL5306	T5208	T5308
Print Resolution (dpi)	203	300	203	300	203	300
Min. Dot Size (sq. in) (.127 mm)	.005 (.127 mm)	.0033 (.083 mm)	.005 (.127 mm)	.0033 (.083 mm)	.005 (.127 mm)	.0033 (.083 mm)
Bar Code Modulus (mils) Picket Fence Ladder	5 - 127 10 - 127	3.3 - 110 10 - 110	5 - 127 10 - 127	3.3 - 110 10 - 110	5 - 127 10 - 127	3.3 - 110 10 - 110
Max. Print Speed (ips)	10	8	10	8	8	6
Max. Slew Speed (ips)	10	10	10	10	10	10
Max. Print Width (in.) (104.1 mm)	4.1 (104.1 mm)	4.1 (104.1 mm)	6.6 (167.6 mm)	6.6 (167.6 mm)	8.5 (215.9 mm)	8.5 (215.9 mm)
Flash Memory (MB) Standard/Maximum	16	16	16	16	16	16
DRAM (MB) Standard/Maximum	64	64	64	64	64	64
Max. Print Length (in.) at max. width, std. DRAM ^(1,2)	99 (2515 mm)	99 (2515 mm)	99 (2515 mm)	99 (2515 mm)	99 (2515 mm)	99 (2515 mm)
NOTES: 1. These figures are approximate and depend upon the active emulation. 2. These values may not be supported at maximum throughput.						

Media

Table 20. Media - General Information

Type:	Roll-fed, die-cut continuous or fanfold labels, tags or tickets; most direct thermal or thermal transfer materials.
Supply Roll:	8 inch (203 mm) maximum diameter on 1.5-inch (37.5 mm) to 3-inch (76 mm) diameter cores.
Internal Rewinder:	Accepts up to a 5-inch diameter roll of label backing.
Label Material:	Thermal transfer plain-coated papers, vinyl, Mylar, metallized paper, non-woven fabric, fine woven fabric, thermal-visible light scannable paper, infrared scannable paper, thermal ticket/tag stock, thermally-sensitive plastic stock.
Media Sensing:	Horizontally moveable sensor assembly. When set to Mark, it senses a black mark on the underside of tag or label stock. When set to Advanced Gap, it detects die-cut labels on liner media and notches and holes in tag stock. When set to Advanced Notch, it detects notches or holes that interrupt a dark or black area on the underside of the media. When set to Disable, it senses no label indicators or ignores all existing label length indicators on the installed media. Gap is an alternative to Advanced Gap.
Label Taken Sensor:	Detects when a printed label is at the printer exit throat. Used only for Tear-Off and Peel-Off Media Handling modes.
Automatic Label Peel-Off:	Peels and presents label to the operator, one at a time. Automatic Label Peel-Off is supported only when the internal rewinder is installed. (The internal rewinder is a factory- or field-installed option.)

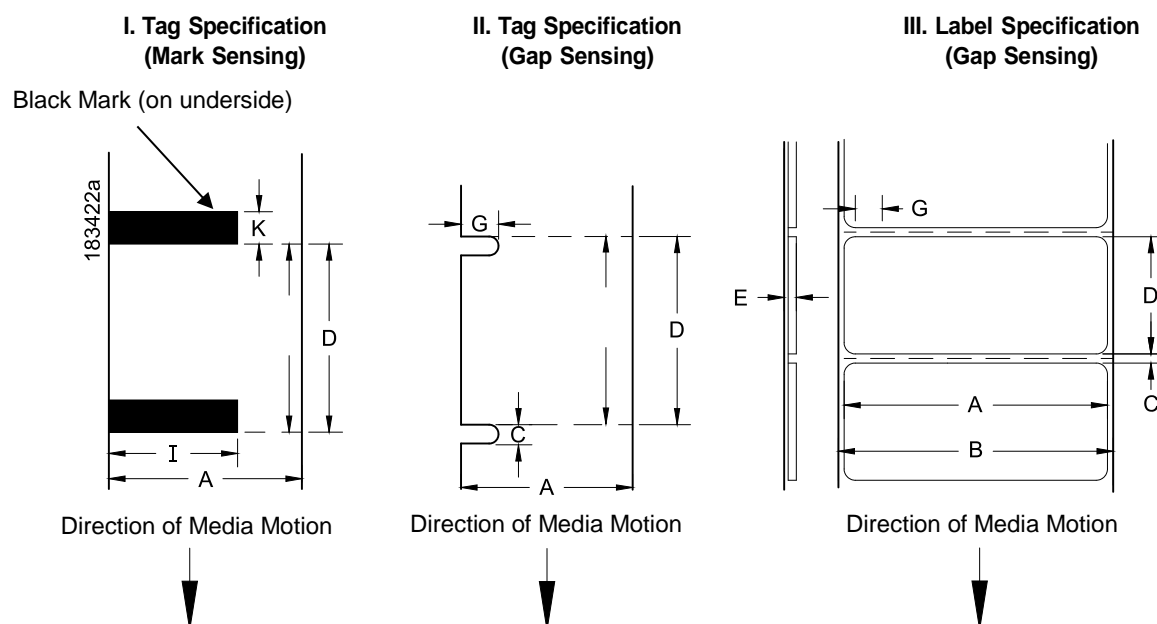


Figure 9. Media Dimensions

Table 21. Media Specifications

		T5X04R SL5X04R	T5X06R SL5X06R	T5X08R
A	Label Width Range	1.00 -4.5 in. 19.1-114.3 mm	2.0-6.8 in. 50.8-172.7 mm	3.0-8.75 in. 76.2-222.3 mm
B	Backing Width Range	0.75-4.5 in. 19.1-114.3 mm	2.0-6.8 in. 50.8-172.7 mm	3.0-8.75 in. 76.2-222.3 mm
C	Min. Gap/Hole/Notch Height	0.10 in. 2.54 mm	0.10 in. 2.54 mm	0.10 in. 2.54 mm
K	Min. Refl. Mark Height	0.10 in. 2.54 mm	0.10 in. 2.54 mm	0.10 in. 2.54 mm
I	Min Refl. Mark Width	0.5 in. 12.7 mm	0.5 in. 12.7 mm	0.5 in. 12.7 mm
E	Media Thickness Range	.0025-.010 in. .0635-.254 mm	.0025-.010 in. .0635-.254 mm	.0025-.010 in. .0635-.254 mm
G	Width of Inter-label gap/hole	0.25-0.50 in. 6.35-12.7 mm	0.25-0.50 in. 6.35-12.7 mm	0.25-0.50 in. 6.35-12.7 mm
D	Media Length Range			
	Continuous/Batch Mode	0.25 in. (6.35mm) - 99 in. (2515mm)		
	Tear-Off Strip Mode	0.25 in. (6.35mm) - 99 in. (2515mm)		
	Tear-Off Mode	1 in. minimum (25.4 mm) - 99 in. (2515 mm)		
	Peel-Off Mode	1 in. minimum (25.4 mm) - 99 in. (2515 mm) ⁽¹⁾		
	Cut Mode	1 in. minimum (25.4 mm) - 99 in. (2515 mm)		

These figures are approximate and depend upon the active emulation and application.

⁽¹⁾ 1.5 inch with validator support.

Ribbon

Table 22. Ribbon Specifications

	T5X04 SL5X04	T5X06 SL5X06	T5X08
Ribbon Width Range	0.75-4.5 in. 19 -114.3 mm	2.0-6.8 in. 50.8-172.7 mm	3.0-8.75 in. 76.2-222.25 mm
Max. Ribbon Length (m)	625	625	625
Max Ribbon Roll Diameter	3.60 in.	3.60 in.	3.60 in.

Indicators and Switches

Table 23. Indicators and Switches

Indicator Lights:	ONLINE, Job-In-Process
Switches:	POWER
Keys:	PAUSE, JOB SELECT/ - (Decrement), FEED/↑ (Up), TEST PRINT/+ (Increment), ≡ (Menu), ✕ (Cancel)/↓ (Down), ↵ (Enter)
Message Display:	2-row 16-characters per row for error messages, print status, and recalling stored formats

Memory

Table 24. Memory Specifications

Flash Memory (standard)	16MB soldered onto Controller PCBA
DRAM (standard)	64MB soldered onto Controller PCBA

Media Cutter Option

Cutters are designed to cut tags and label liner. Avoid cutting through the adhesive backed portion of any media.

Cutting through perforate liner is not recommended. In addition, although the cutter may operate with synthetic, foil, and woven materials, application testing is encouraged to ensure reliable operation and to assess cutter life.

Cutter

The cutter is designed to cut tags and label liner.

Table 25. 4, 6, and 8 inch Models

Typical Life	> 1,000,000 cuts
Warranty**	500,000 cuts
Environment	Same specifications as printer
Cutting Method	Rotating single-edged blade
Media Thickness Range	0.0025 to 0.010 in. (0.064 to 0.254 mm)
Media Width Range	Same range as printer
Media Length Range	1.00 to 99 in. (25.4 to 2515 mm)

** Warranty is based on cutting label liner and paper based tag stock only. All other materials (including synthetic, foil, and woven materials) may reduce cutter life to an indeterminate amount, even when they are within the rated media thickness specification. Qualification and life-testing is recommended for these cutter applications.

Host Interfaces

Table 26. Host Interface Characteristics

1. Serial RS-232 or RS-422 at 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, or 115200 baud. 2. Parallel (Centronics compatible) or IEEE 1284 bi-directional. 3. USB 2.0 4. Ethernet 10/100 or wireless The RS-232 and optional RS-422 host interfaces shall have the following characteristics:	
Word Length:	Selectable 7-bit or 8-bit data format
Handshaking:	XON/XOFF (in receive mode only) and CTS/DTR
Input Buffer:	Selectable from 1k through 16 kbytes. XOFF is transmitted and DTR goes low when buffer is equal to or less than 25% of full. XON is transmitted and DTR goes high when buffer is 25% above empty. Characters are transmitted with no parity from the printer

Power

Table 27. Power Source and Grounding

Power Source:	115 or 230 VAC 50/60Hz switching power supply.
Grounding:	Unit must be connected to a properly grounded receptacle.

Table 28. Power Consumption

	4 inch printers		6 inch printers		8 inch printers	
	203 dpi 10 ips	300 dpi 8 ips	203 dpi 10 ips	300 dpi 8 ips	203 dpi 8 ips	300 dpi 6 ips
Energy Power Saver Mode	9 Watts	9 Watts	9 Watts	9 Watts	9 Watts	9 Watts
Standby	40 Watts	40 Watts	40 Watts	40 Watts	40 Watts	40 Watts
25% Print Density	130 Watts	130 Watts	195 Watts	160 Watts	195 Watts	140 Watts
50% Print Density	190 Watts	195 Watts	340 Watts	280 Watts	310 Watts	250 Watts

Environmental

Table 29. Environmental Information

Operating Temperature:	41° F to 104° F (5° C to 40° C)
Storage Temperature:	-40° F to 150° F (-40° C to 60° C)
Operating Humidity: Storage Humidity:	20% to 85%, non-condensing 5% to 85% non-condensing
Ventilation:	Free air movement
Dust:	Non-conducting, non-corrosive

Physical

Table 30. Physical Dimensions

	T5X04 SL5X04	T5X06 SL5X06	T5X08
Outside Dimensions (in.)	13H x 11.7W x 20.5D	13H x 13.4W x 20.5D	13H x 15.4W x 20.5D
Weight (lbs/kg)	36.6 lbs. (16.6 kg) 37.2 lbs. (16.87 kg)	40 lbs. (18.14 kg) 40.6 lbs. (18.42 kg)	43 lbs. (19.5 kg)
Add 1.75" D with paper path installed Add 7.5" D and 6" H for validator option Add 1.4" D for media cutter option			

Acoustic Specifications

Table 31. T5R Acoustic Noise Levels per ISO 9296

	T5X04 SL5X04	T5X06 SL5X06	T5X08
Printing @ 6 IPS	68 dBA	62 dBA	62 dBA
Standby:	37 dBA	37 dBA	37 dBA

Maximum Page Length

The maximum page length is 99 inches. There is enough page memory allocated to support printing one 99 inch page. The Page Mem Adjust menu option represents the longest form length used on the printer (users should know the length of the applications they plan to run on the printer). User applications that are less than or equal to the default setting of 24 inches do not need to modify the value. Proper use of this menu facilitates optimal use of system memory.

NOTE: The Page Mem Adjust value resets when the printer firmware is downloaded and/or the printhead (203 DPI or 300 DPI) is changed.

Options are offered with the printer to enhance its capabilities and to provide a large degree of application flexibility. A description of the option complement is given below. Field-installable options include installation instructions.

Hardware Options

Media Cutter

The printer may be ordered with a cutter mechanism installed (for cutting tags and label liner), or the option can be installed by an authorized service representative at a later date. Once installed, the printer can be configured to automatically cut media after each or a specified number of labels is printed.

Internal Rewinder

The internal rewinder supports Peel-Off and Batch Rewind Media Handling modes. The printer can be ordered with a rewinder or it can be field installed at a later date by an authorized service representative.

Media Cutter Tray

This option is used exclusively with the media cutter option to collect cut labels or tag stock. This option can be field installed by the operator.

Online Data Validator

This option provides the capability for verifying printed barcode quality during the printing process.

The printer may be ordered with the Online Barcode Validator installed, or the option can be field installed by an authorized service representative.

Real Time Clock (RTC)

The RTC is a clock chip with internal battery. The clock keeps track of the year, month, day, hour, minute and second values. It will continue to operate when the printer is off.

NOTE: To preserve the battery, the clock will not run when it leaves the factory; it will start running when it is set for the first time.

Graphic languages can use the RTC values to program fields in labels to indicate the date and/or time. This is useful for printing production and expiration dates.

Interface Options

Coax/Twinax Host Interface

The coax/twinax host interface option mounts inside the printer and functions as a protocol converter to allow the direct connection of the printer to a host computer that uses either a coax or a twinax data interface. The printer may be ordered with the coax/twinax option installed, or it can be field installed by an authorized service representative.

Wireless NIC (802.11b/g wireless)

The Wireless NIC provides 802.11b connectivity. The card provides wireless connectivity without expensive cabling and reconfigurations required from a wired network. PNE (standard with the wireless NIC), is a printer management tool.

IPDS for Use with an ethernet or Twinax Host Interface

This option supports the IPDS language to allow a LAN connection as well as a direct connection of the printer to an IBM host computer that uses the twinax data interface. This option is applicable to non SL printers. The printer may be ordered with this option installed and the required hardware to support it, or it can be field installed by an authorized service representative. The printer must have an ethernet or Coax/Twinax interface and a 300 DPI printhead installed to support this field installed option.

General Purpose Input/Output (GPIO)

GPIO is both hardware and software. The hardware is the actual IO board to be mounted in the printer, and the software is the GPIO Manager which is part of PNE. The GPIO hardware is a printed circuit board containing optically isolated inputs and outputs as well as relays. The GPIO software is both a printer resident GPIO event parser and a PC-based GPIO manager that allows the user to define how the general purpose IO hardware should behave for the given application.

RS-422

An optional serial interface that enables the printer to operate with bit serial devices that are compatible with an RS232 controller. The printer may be ordered with an RS-422 serial interface installed or it can be installed by an authorized service representative at a later date.

Supplies and Accessories

The best printing solution is achieved when the printer, ribbon, and media are matched to the application requirements. The use of Genuine Printronix Thermal Media and Ribbons will ensure optimum image quality, consistent bar code performance, and extended life of the printhead.

Please refer to the Printronix Media Selection Guide for details concerning the application suitability for all media and ribbon products. To obtain a copy of this guide, or for any other questions concerning Genuine Printronix Thermal Supplies, please call:

Americas:	(800) 733-1900	Fax: (714) 368-2354
Europe, Middle East, Africa:	33 (0) 1 46 25 19 07	Fax: 33 (0) 1 46 25 1919
Asia:	(65) 548-4116	Fax: (65) 546-1588
China:	(86) 400-886-5598	(86-21) 5138 0564

Or visit our website at www.primtronix.com.

Genuine Printronix Thermal Transfer Ribbons

The following is a list of Genuine Printronix Thermal Transfer ribbons:

Printronix Wide Spectrum Wax Ribbon 8300

Provides superior print quality for coated and uncoated paper and tag stocks.

Printronix Wax Resin Blend Ribbon 8500

Provides excellent high speed print quality with premium durability performance on a wide range of thermal transfer receptive papers and films.

Printronix Flood-Coat Specialty Wax Resin Blend Ribbon 8550

Designed for use on spot-coated and flood-coated labels. With this ribbon, the need for protective varnishes on flood-coated labels is eliminated, which can reduce the cost of labels.

Printronix Specialty Resin Ribbon 8600

A premium resin formula for excellent image and scuff resistance, while achieving premium print quality on a wide range of synthetic films and coated papers.

Printronix Harsh Environment Resin Ribbon 8700

Provides the highest heat, chemical, and abrasion resistance for use with high-end synthetic facestocks. When used with the proper polyester media, meets UL/CSA regulatory requirements.

Printronix Gasoline Resistant Specialty Resin Ribbon 8770

Designed for high temperature and solvent resistance applications using synthetic facestocks media such as polypropylene, polyethylene, and polyester.

All ribbons are available in widths of: 2.36" (60mm), 3.15" (80mm), 4.33" (110mm), 5.12" (130mm), 6.00" (152.4mm), 6.70" (171mm), and 8.67" (220mm).

Genuine Printronix Media

Printronix provides a wide variety of sizes, colors, and shapes of labels and tags readily available to meet all of your labelling needs. The Printronix Expanded Die Library details hundreds of label sizes and configurations which are quickly obtainable through the Printronix custom order system without the typical added costs and delays associated with the creation and tooling of a special die to match your requirements.

Genuine Printronix ThermaLine Media		
ThermaLine Media Type	Description	Typical Applications
Media 110	Premium coated thermal transfer paper Permanent acrylic adhesive	Compliance shipping, general warehouse, address, AIAG, LOGMARS, product ID, hardware parts supply
Media 120R	Premium coated thermal transfer paper Removable adhesive	Temporary product ID, pricing, point of sale, shelf marking labels which can be cleanly removed
Media 180T	7.0 mil coated thermal transfer paper tag stock	Retail hangtag, warehouse bin and pouch inserts, inventory control, work in process, general purpose tag
Media 210	Economy direct thermal paper Permanent acrylic adhesive	Short life deli, grocery, shipping, work in process
Media 220	Premium direct thermal paper Permanent acrylic adhesive	Compliance shipping, general warehouse, address, AIAG, LOGMARS, product ID
Media 270	Infra-Red scannable direct paper Permanent acrylic adhesive	Infra-red scannability for overnight shipping and grocery environments
Media 280T	7 mil direct thermal paper tag stock	Economical ticket and tag stock for general retail and industrial use
Media 410	3.3 mil direct thermal film Permanent acrylic adhesive	Excellent moisture resistance and tear strength for applications such as baggage tags, etc.
Media 510	4.0 mil white thermal transfer polyolefin Permanent acrylic adhesive	Durable satin finish for chemical pails and drums and general outdoor and industrial use
Media 520	Smudge proof white thermal transfer polyolefin Permanent acrylic adhesive	Outdoor exposures especially chemical drums, etc. provides a markable smudge proof topcoat
Media 580T	8.5 mil smudge proof thermal transfer Poly tag stock	Outdoor nursery, lumberyard, and industrial environment hangtag and insert tag
Media 700's	2.0 mil polyester label stock thermal transfer White, bright & matte chrome	UL/CSA compliant nameplate labels, harsh environment and laboratory labels

Besides the standard roll label configuration, Genuine Printronix ThermaLine labels are also available in fanfold configurations.

Type	Media (Stock)	Ribbon	Features	Typical Applications
Direct Thermal	Paper Label Tag Synthetic Label	Not Used	Low cost. Ease of use. Low environmental durability. Limited label life. Will fade and/or discolor when exposed to heat, sunlight, or chemicals.	Shipping. Inventory tracking.
Thermal Transfer	Paper Label Tag	Printronix Wide Spectrum Wax	Lowest cost thermal transfer combination. Most commonly used. Low environmental durability. Low abrasion resistance. Longer life than direct thermal.	Shipping. Inventory tracking. Product labeling. Compliance labeling.
Thermal Transfer	Paper Label Tag Synthetic Label Tyvek® and Valeron®	Printronix Wax Resin Blend	Mid-range wax resin performance and characteristics at economy wax prices. Darker, razor-sharp, smudge-proof images.	Same as economy applications with advantage of supporting Polypropylene, Polyethylene, Polyolefin, and Valeron media.
Thermal Transfer	Paper Label Tag Synthetic Label	Printronix Specialty Resin	Better environmental durability. Better abrasion resistance than wax. More expensive than wax. Good aesthetic appearance.	Retail applications where labels are handled. Excellent for most applications. Compliance labeling.
Thermal Transfer	Synthetic Label	Printronix Harsh Environment Resin	High environmental durability. High physical durability. Excellent aesthetic appearance. Most expensive label/tag combination.	High temperature environments. Medical applications. Outdoor environments. Environments with chemicals. Compliance labeling.

Accessories

Field installable accessories available for your thermal printer are listed below. Contact your authorized supplier for more details.

- Coax/Twinax Host Interface
- GPIO
- Internal Rewind Kit
- Media Cutter (4, 6, and 8 inch)
- Media Cutter Tray (used with a Media Cutter option)
- Online Barcode Validator
- RFID Encoder
- RS-422
- Scalable Fonts
- Wireless NIC
- *Maintenance Manual*
- *LP+ Programmer's Reference Manual*
- *PGL Programmer's Reference Manual*
- *VGL Programmer's Reference Manual*
- *C/T Programmer's Reference Manual*
- *Network Interface Card User's Manual*
- *PrintNet Enterprise Suite User's Manual*

C

ASCII Control Codes

Char	Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char	Dec	Hex
NUL	0	00		32	20	@	64	40	`	96	60
SOH	1	01	!	33	21	A	65	41	a	97	61
STX	2	02	+	34	22	B	66	42	b	98	62
EXT	3	03	#	35	23	C	67	43	c	99	63
EOT	4	04	\$	36	24	D	68	44	d	100	64
ENQ	5	05	%	37	25	E	69	45	e	101	65
ACK	6	06	&	38	26	F	70	46	f	102	66
BEL	7	07	+	39	27	G	71	47	g	103	67
BS	8	08	(40	28	H	72	48	h	104	68
HT	9	09)	41	29	I	73	49	i	105	69
LF	10	0A	*	42	2A	J	74	4A	j	106	6A
VT	11	0B	+	43	2B	K	75	4B	k	107	6B
FF	12	0C	,	44	2C	L	76	4C	l	108	6C
CR	13	0D	-	45	2D	M	77	4D	m	109	6D
SO	14	0E	.	46	2E	N	78	4E	n	110	6E
SI	15	0F	/	47	2F	O	79	4F	o	111	6F
DLE	16	10	0	48	30	P	80	50	p	112	70
DC1	17	11	1	49	31	Q	81	51	q	113	71
DC2	18	12	2	50	32	R	82	52	r	114	72
DC3	19	13	3	51	33	S	83	53	s	115	73
DC4	20	14	4	52	34	T	84	54	t	116	74
NAK	21	15	5	53	35	U	85	55	u	117	75
SYN	22	16	6	54	36	V	86	56	v	118	76
ETB	23	17	7	55	37	W	87	57	w	119	77
CAN	24	18	8	56	38	X	88	58	x	120	78
EM	25	19	9	57	39	Y	89	59	y	121	79
SUB	26	1A	:	58	3A	Z	90	5A	z	122	7A
ESC	27	1B	;	59	3B	[91	5B	{	123	7B
FS	28	1C	<	60	3C	\	92	5C		124	7C
GS	29	1D	=	61	3D]	93	5D	}	125	7D

Char	Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char	Dec	Hex
RS	30	1E	>	62	3E	^	94	5E	~	126	7E
US	31	1F	?	63	3F	_	95	5F		127	7F

NOTE: For the hardware handshake XON/XOFF commands:
XON = Ctrl Q (DC1)
XOFF = Ctrl S (DC3)

D

Media Cutter Installation

Prepare the Printer

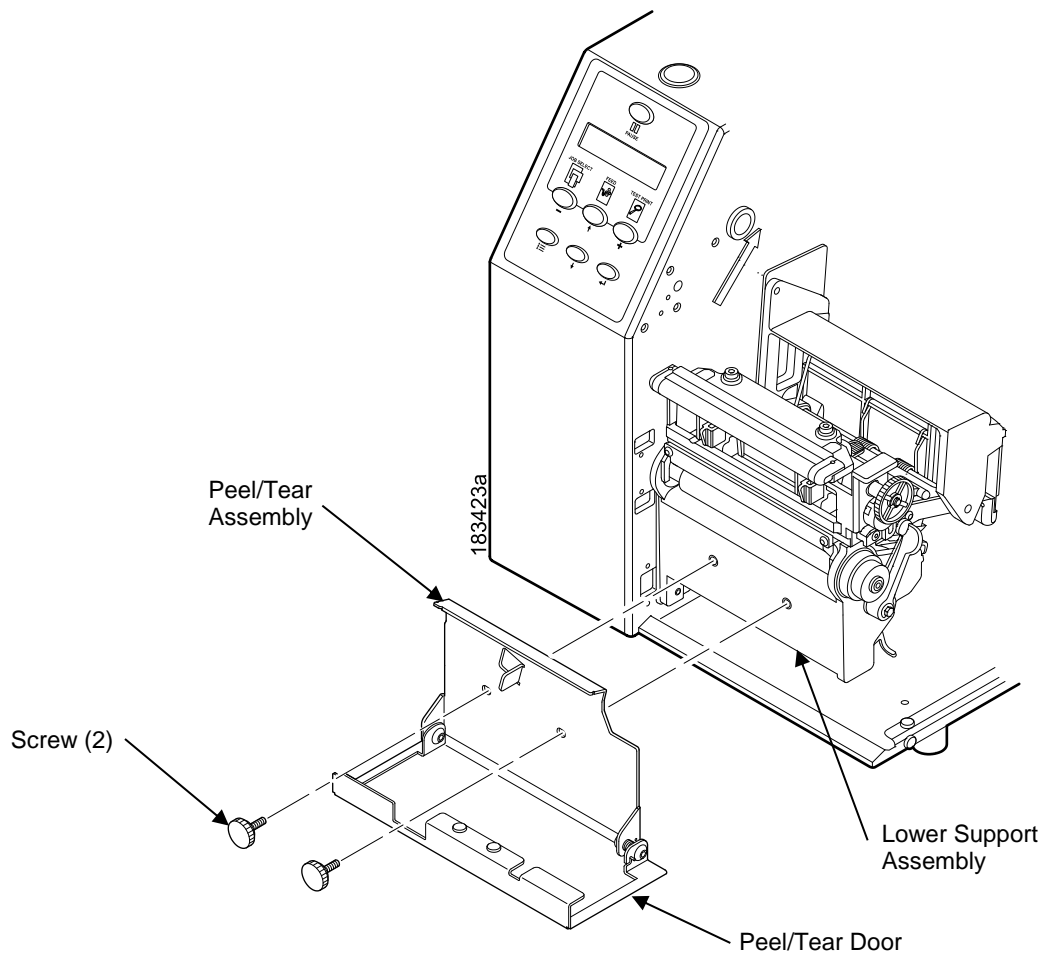


Figure 1. Peel/Tear Assembly

1. Set the printer power switch to O (Off).
2. Open the peel/tear door by pulling it upward, then forward.
3. Using the appropriate metric hex key, remove the two screws attaching the peel/tear assembly to the lower support assembly.

NOTE: Keep the two screws you have removed; you will use them to attach the cutter assembly to the lower support assembly.

Installing the Cutter

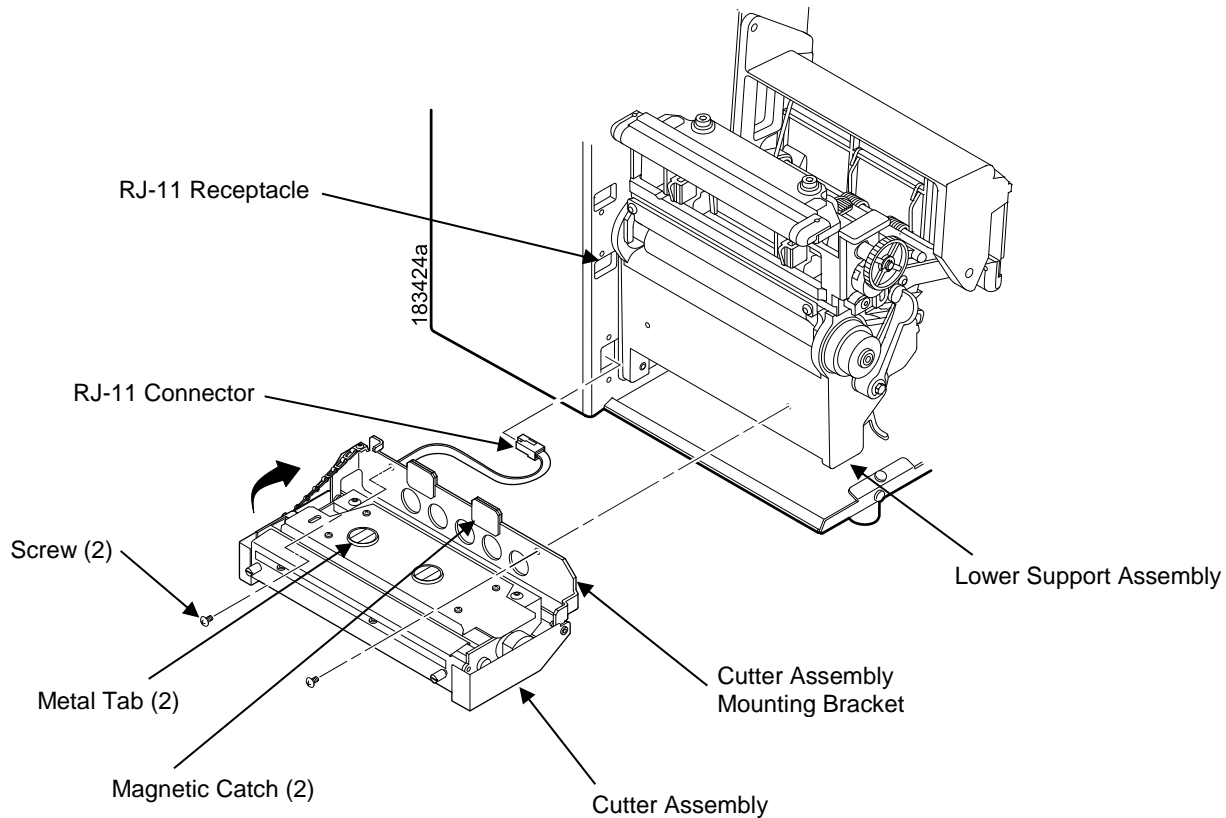


Figure 2. Cutter Assembly

1. Plug the RJ-11 connector into the RJ-11 receptacle.
2. Pull the metal tabs from the magnetic catches and swing open the cutter assembly mounting bracket from the cutter assembly.



WARNING The cutter blades are sharp. Keep your fingers away from the cutter blades.

3. Place the cutter assembly in position.
4. Install the two screws using the appropriate metric hex key.
5. Place the cutter assembly into the up (closed) position.

NOTE: The printer cannot detect the presence of the cutter unless the cutter is in the up (closed) position and the cutter top cover is installed when the printer is powered on.

Restore the Printer To Operation

NOTE: The printer cannot detect the presence of the cutter unless the cutter is in the up (closed) position and the cutter top cover is installed when the printer is powered on.

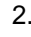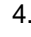1. Set the printer power switch to | (ON).
2. Press  to place the printer in Menu Mode.
3. Press the ↓ and ↵ keys at the same time until “ENTER SWITCH UNLOCKED” appears on the printer display.
4. Press  until “MEDIA CONTROL” displays.
5. Press ↓ until “Media Handling” displays.
6. Press + or - until the “Cut” option displays.
7. Press ↵ to select “Cut.” An asterisk (*) displays next to “Cut.”
8. Relock the ↵ key by pressing ↓ and ↵ at the same time, then press PAUSE to put the printer back online.
9. If the bar code validator is installed, adjust the validator beam. (See the Online Data Validator User’s Manual).
10. Make sure any media sticking out of the platen goes in the cutter entrance slot.
11. Test the printer cutting operation and print quality by selecting the **Diagnostics** → **Printer Tests** menu and printing one of the test patterns. (Refer to “DIAGNOSTICS” on page 225.)
12. To save the configuration parameters, refer to “Saving a Configuration” on page 76.

Removing the Media Cutter

1. Set the printer power to O (OFF).
2. Pull the cutter assembly to the down (open) position.
3. Using the appropriate metric hex key, remove the two screws securing the cutter bracket to the lower support assembly.
4. Unplug the RJ-11 connector from the RJ-11 receptacle.
5. Remove the media cutter from the printer.
6. Install the front door assembly on the printer lower support assembly.

E

Media Cutter Tray Installation

Assembling the Media Cutter Tray

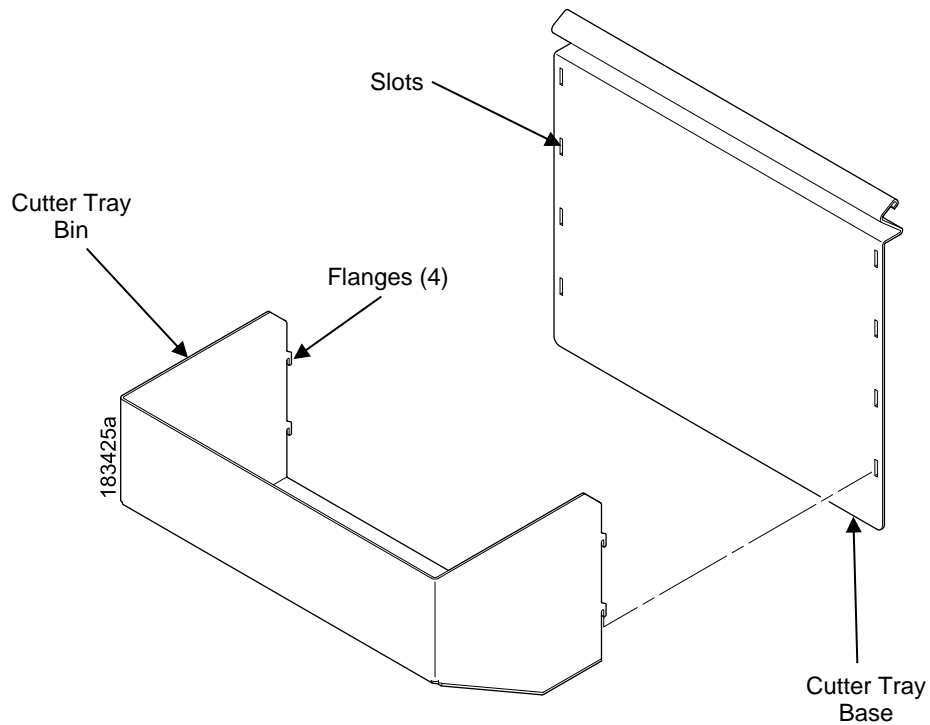


Figure 1. Attaching the Cutter Tray Bin to the Cutter Tray Base

1. Align the flanges of the cutter tray bin with the slots in the cutter tray base.
2. Push the flanges into the slots, then push the cutter tray bin downward to secure it.
3. Attach the cutter tray bin in a position so that the labels will not interfere with cutter operation. (For longer labels, attach the cutter tray bin to a lower position; for shorter labels, attach it to a higher position.)

Installing the Media Cutter Tray

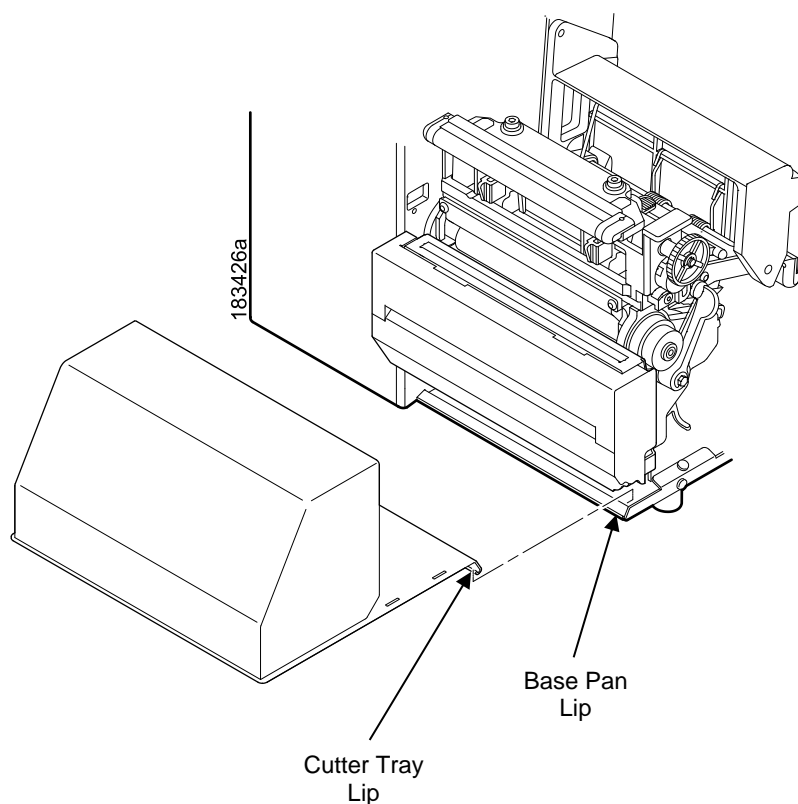


Figure 2. Placing the Media Tray Cutter in Position

1. Position the output area of the printer adjacent to the edge of the supporting table or stand.
2. Open the media cover and slide the lip of the media cutter tray over the lip of the printer base pan.

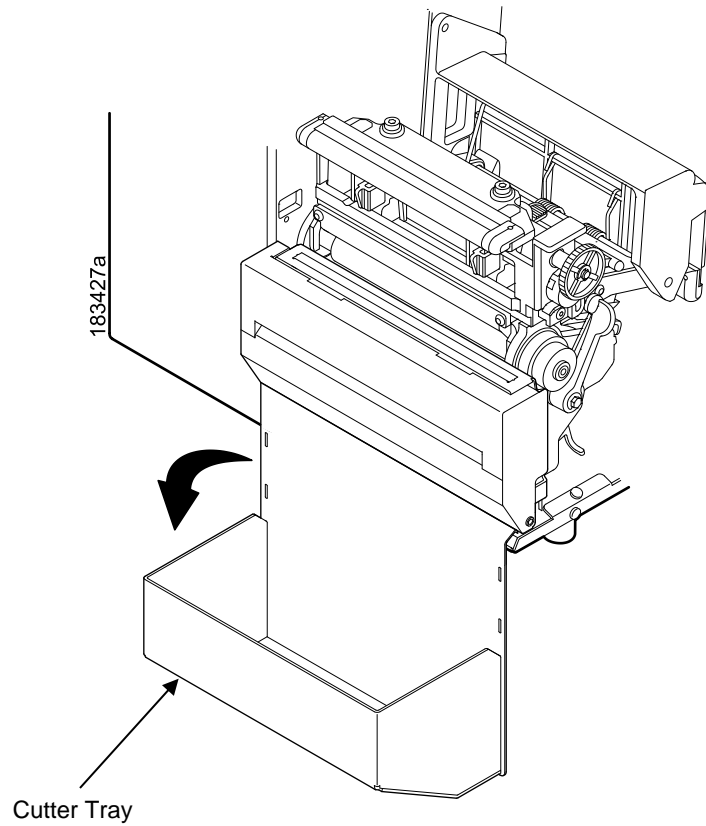


Figure 3. Installing the Media Cutter Tray

3. Rotate the media cutter tray into position with the tray resting against the table.
4. Close the media cover.

F

Selecting Supported RFID Tag Types

Read this First

Printronix RFID SL5000R printers support a number of RFID protocols and antenna configurations.

To view a complete list of tag types supported by Printronix RFID SL5000R printers, and a list of Certified RFID Smart Labels available from Printronix:

1. Go to www.printronix.com and select your Country/Language of choice.
2. Click RFID Printers.
3. Click Learn More under RFID Smart Label Specifications.








These web pages are updated regularly to include newly supported RFID tag types and newly Certified RFID Smart Labels available from Printronix.

To configure your printer to use an RFID tag type, see “Selecting RFID Tag Types” below.

Selecting RFID Tag Types

For additional information on menu operation, refer to the *RFID Labeling Reference Manual*.

To select an RFID tag type:

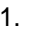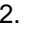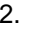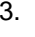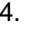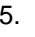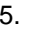1. Press the  key on the printer control panel to take the printer offline and into Menu mode.
2. Press  and  together until ENTER SWITCH / UNLOCKED displays.
3. Press  until RFID CONTROL displays.
4. Press  until Tag Type displays.
5. Press  or  until the desired tag type displays. If the desired tag type does not display, use the tag types listed in the Printer Menu Selection column on the RFID Smart Label Specifications web page referenced earlier.

6. Press ↵ to select the tag type. An asterisk (*) displays next to the selected tag type.
7. If you want this selection to remain permanent, save the configuration and set the configuration to be the Power-Up Config. (in the QUICK SETUP or CONFIG. CONTROL menu).

G

PTX_SETUP Commands

Overview

The PTX_SETUP commands are a superset of commands which allow the printer to perform several tasks by parsing commands either stored in flash or sent to the printer by the host. Commands range from re-routing debug statements to downloading complete printer configurations.

This appendix describes the PTX_SETUP commands specific to thermal printers, as well as the commands which are not platform specific.

The PTX_SETUP Commands

Some concepts to keep in mind are as follows:

1. PTX_SETUP commands are not emulation specific. In a system with an IGP, the IGP level emulation will process the PTX_SETUP commands. In a system without an IGP, the PTX_SETUP commands will be processed by the base emulation. The CTHI emulation will not process PTX_SETUP commands.
2. Since there is no disk on a flash-based printer, DISK_IO commands are now called FILE_IO. However, for backwards compatibility DISK_IO and FILE_IO are synonymous.
3. The PTX_SETUP command set is case sensitive; all PTX_SETUP commands are in upper case characters only.
4. The white space separating commands may be any number of spaces and tabs. This allows a PTX_SETUP file to be formatted for easier readability.
5. The PTX_SETUP and PTX_END command should be followed by a new line character.
6. Any unknown command will terminate the PTX_SETUP processing. The offending command will be the first line of printed text.
7. Although the original implementation of PTX_SETUP allowed for only a single parameter, separated from the sub-command by a single semicolon (;) character, the new PTX_SETUP command set allows for multiple parameters separated by commas, semicolons, spaces or tabs.

General Commands

The original PTX_SETUP commands were implemented on the disk-based legacy laser printers; however, many commands are also supported for thermal printers. This section describes the existing commands which work across all platforms, and provides a general description of how commands are formed.

Each emulation has modes in which the PTX_SETUP commands could get missed. For this reason, it is highly recommended that all PTX_SETUP commands be placed between print jobs, rather than attempting to imbed them within jobs.

PTX_SETUP commands have the following format:

(SFCC)PTX_SETUP

Command–Sub Command; Value

PTX_END

For example, if the SFCC assigned to PTX_SETUP is the default value of the exclamation mark (!, hex 21), and you wanted to load configuration number 4 and capture all incoming data to a file named “BIN”, you would use the following command:

```
!PTX_SETUP  
CONFIG–LOAD;4 FILE_IO–CAPTURE;BIN  
PTX_END
```

Table 32 lists all the command, sub-command, and parameter combinations and gives a brief description of the command. This section documents the existence of PTX_SETUP commands which work across all platforms. The following sections document commands which are specific to thermal.

NOTE: When a file system error occurs, a message will be displayed on the front panel indicating the error, and the action needed to take to correct the error.

Table 32. General PTX_SETUP Commands

Command	Sub-Command	Parameter	Description
CONFIG	LOAD	<i>Cfg</i>	<i>Cfg</i> can be 0-8. The PTX_SETUP will load configuration <i>Cfg</i> . If configuration <i>Cfg</i> was not previously saved, the operator panel will display an error message and the current configuration will be kept.
	SAVE	<i>Cfg</i>	<i>Cfg</i> must be 1-8. This command will save the current configuration as configuration <i>Cfg</i> . If <i>Cfg</i> is not in the range of 1-8, the command is ignored.
	SETMENU	<i>Value;Menu_tag</i>	<i>Menu_tag</i> is the name of the menu as defined in the menu file. <i>Value</i> is the value to which the menu is to be set.
	POWERUP	<i>Cfg</i>	Sets the power-up configuration to <i>Cfg</i> and loads Configuration <i>Cfg</i> . <i>Cfg</i> can be any value from 0-8, where 0 is the factory default.
	PRINT	<i>Cfg</i>	Print Configuration <i>Cfg</i> . <i>Cfg</i> can be a number 1-8, or one of four pre-defined configurations. The four non-numeric configurations are requested using the first character for the CURRENT, FACTORY, POWERUP, or ALL configuration(s).
	DELETE	<i>Cfg</i>	Deletes Configuration number <i>Cfg</i> . <i>Cfg</i> must be in the range of 1-8.
	UPLOAD	<i>Port;Cfg</i>	This command uploads the configuration stored in location <i>Cfg</i> to the port specified by <i>Port</i> . <i>Port</i> must either be 1284 or SERIAL. <i>Cfg</i> may be 1-8 or ALL.
	DOWNLOAD	<i>Cfg</i>	This command saves the configuration data that follows as configuration <i>Cfg</i> . <i>Cfg</i> must be 1-8 or END.

Table 32. General PTX_SETUP Commands

Command	Sub-Command	Parameter	Description
CONFIG	OVERLAY	<i>Cfg</i>	This command overlays the configuration data that follows on existing configuration Cfg. Cfg must be 1-8 (or END). If Cfg does not exist then command is treated the same as DOWNLOAD.
	RESET		Reboots the printer.
	GET_NAMES	<i>"Port"</i>	This command uploads the names of the configurations to the port specified by Port. Port must either be "1284" or "SERIAL".
	SET_NAME	<i>Cfg</i>	This command downloads a name for the configuration specified by Cfg. Cfg must be 1-8.
	CLEAR_NAMES		This command resets all of the configuration names to their default values.
	MPI_SELECT	<i>MPI</i>	This command selects the active Management Protocol Interface (MPI). Currently there are two selections "UCP" and "PXML".
	PNE_PORT	<i>Port</i>	<p>This command selects the port that the PNE will use to communicate to the printer.</p> <p>The valid ports are:</p> <ul style="list-style-type: none"> • DISABLE • HOST_SERIAL If Host I/O is set to Auto Switching or Serial, the port defaults to Debug Serial. • DEBUG_SERIAL • ETHERNET • USB <p>NOTE: If ETHERNET is selected but not enabled, the selection will revert to DISABLE.</p>

Table 32. General PTX_SETUP Commands

Command	Sub-Command	Parameter	Description
CONFIG	PANEL	<i>LOCK</i>	This command locks the operator out of the printer's configuration menu.
		<i>UNLOCK</i>	This command unlocks the printer's configuration menu and allows the operator access to the menus. By default, the menu is unlocked.
	PNE_PORT_NUM	<i>Port Number</i>	This command sets the Port Number the PNE uses to communicate to the printer if the PNE Port was set to Ethernet. This command causes the printer to automatically reboot.
	PXML_PORT_NUM	<i>Port Number</i>	This command sets the Port Number the PXML and UCP will use to communicate to the printer if the PXML Port is set to Ethernet. This command causes the printer to automatically reboot.
LP MODE	n/a	Protocol	<i>Protocol</i> must be 0-4. This command resets the software protocol, and is selected as follows: 0 - P-Series 1 - P-Series XQ 2 - Serial Matrix 3 - Proprinter III XL 4 - Epson FX-1050

Table 32. General PTX_SETUP Commands

Command	Sub-Command	Parameter	Description
FILE_IO (DISK_IO)	CAPTURE	Filename	Captures all incoming data into a file named <i>Filename</i> . Receipt of a FILE_IO–CAPTURE command without the <i>Filename</i> parameter will force the file data to be written to flash, and will end the file capture.
	DRIVE	Letter	This command is parsed for backwards compatibility. However, since the flash file system is a single device, the drive letter will be ignored.
	PROPS	File;Prop	The PROPS command will set the file properties of a given file. The file properties are a four letter, case sensitive file descriptor. The properties field can be used to ensure that a file is used for its intended purpose. Once properties have been associated with a file, they cannot be changed.
	DEL	Filename	The DEL command will mark a file as deleted. The space the file occupied will be freed the next time the printer is powered up.

Table 32. General PTX_SETUP Commands

Command	Sub-Command	Parameter	Description
FILE_IO (DISK_IO)	RUNFILE	File;Prop	The RUNFILE command will open the file named <i>File</i> for printing. After the PTX_END command is processed, the contents of <i>File</i> will get printed before any more data is read from the host. If the <i>Prop</i> field is present, RUNFILE will verify that <i>Prop</i> matches the saved file properties. Any mismatch will cause the command to be ignored.
	UPLOAD	File;Port	Reads the file named <i>File</i> out of the flash file system and sends it to a host computer via the <i>Port</i> I/O port. <i>Port</i> is either 1284 (for reverse nibble or byte mode transfer using the parallel port), or SERIAL. NOTE: if the Ethernet option is installed, 1284 is used to upload across the network.
	MAXSIZE	Kb	For backwards compatibility.
	MINSIZE	Kb	For backwards compatibility.
	OPTIMIZE	(none)	Causes the printer to optimize the Flash File System. The printer automatically reboots during this process.
PTX_END	(none)	(none)	Exits the PTX_SETUP.

Summary of the CONFIG Command

The UPLOAD and DOWNLOAD command can be used for uploading and downloading complete printer configurations. If a customer needs to configure 50 printers identically, the customer needs only configure one printer and UPLOAD the configurations. The UPLOADED configurations may then be DOWNLOADED to other printers eliminating the necessity for the operator to configure each printer manually.

The UPLOAD command will always place a header and a footer into the uploaded data. This header will be the DOWNLOAD command followed by the configuration number. The footer will be the DOWNLOAD END command. The operator should be aware that the UPLOAD and DOWNLOAD commands use a secondary copy of the menu structure which does not affect the printer's active configuration. This allows the UPLOAD and DOWNLOAD commands to operate without affecting the printer's current configuration. If the operator intends to use one of the DOWNLOADED configurations, the operator should reboot the printer to ensure proper operation. This can be accomplished by adding the RESET command as the last command in your

setup file. This is necessary because the printer caches the active configuration. Rebooting the printer ensures that the desired configuration is correctly read from FLASH.

NOTE: While an upload or download is in progress, the Front Panel will be unavailable.

The Configuration Save and Delete commands from the front panel can be blocked by using the Protect Configurations feature. This is intended to prevent someone from inadvertently reconfiguring a printer. The PTX_SETUP commands, however, will override the protect configurations feature. All PTX_SETUP commands will be honored regardless of the value of the Protect Configurations feature.

Operation of the FILE_IO Command

When a file is opened for writing with the FILE_IO-CAPTURE;*filename* command, the system will allocate RAM for file control blocks and 1 Kbyte for data. If the file already exists on the Flash File System and the Overwrite Enable feature in the Flash File System menu is set to disable, a warning will be displayed on the front panel. After clearing the warning, the file data will be printed. To overwrite the existing file, set the Overwrite Files option to enable.

Due to the nature of writing to flash, any data intended to be stored permanently in flash must first be copied into RAM. As a result, the ability to manipulate files in the Flash File System is dependent upon the printer having sufficient RAM. None of the captured file data will be committed to flash until the entire file is loaded. The PTX_SETUP parser will interpret the command "FILE_IO-CAPTURE<lf>" as an end of file marker. Receipt of the command will cause all file data to be written to flash. The file system allocates RAM for temporary data storage in 1 Kbyte blocks. If at any time during the file download the printer runs out of RAM, a warning will be displayed on the front panel and as much of the file as possible will be saved in flash.

Three things can limit the ability to save a file: insufficient RAM, insufficient Flash, and lack of empty file system entries. Flash can only be written once before it needs to be "optimized". As a result, the maximum file size is limited to the largest unwritten block of Flash. If any of these problems occur, the printer will display an error message and will attempt to provide the operator with a description of what steps to take to correct the error. Normally, the solution will involve optimizing the Flash File System. This can be accomplished by selecting the Optimize & Reboot function in the Flash File System menu under MAINT/MISC.

NOTE: After selecting the Optimize & Reboot function, do not shut off the printer's power until after the printer returns to the power-on state. Loss of power during the optimize process may corrupt the printer's program. If this occurs, first attempt to repeat the downloading process. If that fails, contact an authorized service representative.

Thermal Commands

Table 33 lists PTX_SETUP commands which apply to thermal printers.

Table 33. Thermal PTX_SETUP Commands

Command	Sub-Command	Parameter	Description
ENGINE	ALM_WIDE	<i>wide width</i>	Set the Auto Label Mapping <i>wide width</i> (in units of 1/1000"; e.g., a <i>wide width</i> value of 1000 = 1"), which represents the width of the image in the file sent from the host which is to be auto label mapped into several labels, each of which will have a width of <i>narrow width</i> . # of labels= <i>wide width</i> / <i>narrow width</i> (rounded down)
	ALM_NARROW	<i>narrow width</i>	Set the Auto Label Mapping <i>narrow width</i> , which represents the width of one auto mapped label (in units of 1/1000"; e.g., a <i>narrow width</i> value of 1000 = 1"). This width should be set prior to the <i>wide width</i> . In addition, it can never exceed the physical width of the printer. If it does, the <i>narrow width</i> will be automatically reduced to the Page Width value set in the configuration menu.
	ALM_ENABLE	<i>N/W/*</i>	Set Auto Label Mapping to Narrow, Wide, or Off. Enter N for Narrow, W for Wide, or any other letter to disable ALM. By default, only the Narrow option is implemented.
	EJECT		Performs a page eject.
	IMAGE_SHFT_H	<i>Value</i>	Shifts the image <i>Value</i> horizontally in 1/1000" units. If <i>Value</i> is out of the specified range (-1" to +1"), the command will be ignored.
	IMAGE_SHFT_V	<i>Value</i>	Shifts the image <i>Value</i> vertically in 1/1000" units. If <i>Value</i> is out of the specified range (-1" to +6"), the command will be ignored.
	LENGTH	<i>Value</i>	Sets the page length in 1/1000" units.

Table 33. Thermal PTX_SETUP Commands

Command	Sub-Command	Parameter	Description
ENGINE	MEDIA_HANDLING	Value	Sets the type of media handling: 0 - Continuous 1 - Tear-Off Strip 2 - Tear-Off 3 - Peel-Off 4 - Cut
	MIRROR	<i>Value</i>	Value of 0 turns mirroring off, non-zero turns mirroring on.
	MODE	<i>X</i>	Sets the print mode to Thermal Transfer.
		<i>D</i>	Sets the print mode to Direct Thermal.
	WIDTH	<i>Value</i>	Sets the page width in 1/1000" units.
	ODV	<i>1</i>	Enables the ODV unit so that ODV begins verifying printed barcodes.
RFID	OVERSTRIKE_REPORT	<i>ON/OFF</i>	Enables/disables reporting of RFID overstrikes to the host. The default is OFF (disabled).
	STATISTICS_REPORT	<i>ON/OFF</i>	Enables/disables reporting of RFID statistics to the host. The default is OFF (disabled).
	STATISTICS_CLEAR		Clears the RFID statistics.
PRINTJOB	START	<i>jobID</i>	Start of job marker. Results in a "start of job" message sent back to host through the PPM port when a job starts printing.
	END	<i>jobID</i>	End of job marker. Results in a "end of job" message sent back to host through the PPM port when the job finishes printing.

H

Customer Support

Printronix Customer Support Center

IMPORTANT Please have the following information available prior to calling the Printronix Customer Support Center:

- Model number
- Serial number (located on the back of the printer)
- Installed options (i.e., interface and host type if applicable to the problem)
- Configuration printout: See "Printing A Configuration" on page 81
- Is the problem with a new install or an existing printer?
- Description of the problem (be specific)
- Good and bad samples that clearly show the problem (faxing or emailing of these samples may be required)

Americas (714) 368-2686

Europe, Middle East, and Africa (31) 24 6489 311

Asia Pacific (65) 6548 4114

China (86) 800-999-6836

<http://www.primtronix.com/support.aspx>

Printronix Supplies Department

Contact the Printronix Supplies Department for genuine Printronix supplies.

Americas (800) 733-1900

Europe, Middle East, and Africa (33) 1 46 25 19 07

Asia Pacific (65) 6548 4116
or (65) 6548 4132

China (86) 400-886-5598

India (800) 102-7869

<http://www.primtronix.com/supplies-parts.aspx>

Corporate Offices

Printronix, Inc.
15345 Barranca Parkway
Irvine, CA 92618
U.S.A.
Phone: (714) 368-2300
Fax: (714) 368-2600

Printronix Inc.
c/o Printronix Nederland BV
Bijsterhuizen 11-38
6546 AS Nijmegen
The Netherlands
Phone: (31) 24 6489489
Fax: (31) 24 6489499

Printronix Schweiz GmbH
42 Changi South Street 1
Changi South Industrial Estate
Singapore 486763
Phone: (65) 6542 0110
Fax: (65) 6546 1588

Printronix Commercial (Shanghai) Co. Ltd
22F, Eton Building East
No.555, Pudong Av.
Shanghai City, 200120, P R China
Phone: (86) 400 886 5598
Fax: (86-21) 5138 0564

Visit the Printronix web site at www.primtronix.com

I

Glossary

Baud (rate)	Baud Rate is the number of information bits that can be transmitted between the printer and the computer in one second. For example, one baud equals one bit per second in a series of binary signals. Both the printer and the computer must be configured to the same baud rate.
BIT	Binary digIT. A digit in the binary number system, represented by a 0 or a 1. A bit is the smallest unit of storage in a digital computer.
Boot-up	The start-up procedure which causes a computer operating system to be loaded into main memory.
Buffer	An area of storage into which data is read or written temporarily during data transfers.
Coax	Coaxial cable. A type of cable with a single wire surrounded by insulation and a braided shield.
Configuration	Refers to the operating properties that define how the printer responds to signals and commands received from the host computer at the printer interface. These properties are called configuration parameters and are set to match the operating characteristics of the host computer system.
Continuous Media	Media comprised of one continuous length without a gap, notch, hole, or black mark to establish a predetermined label or tag length. With this media type, the Host Form Length or user-selected Label Length sets the desired length of each label.
Continuous Media Handling Mode	A media handling mode that advances media in the forward direction only.
Controller	An independent functional logic unit in a data processing system that controls data paths between one or more units of peripheral equipment.

Data Bits	Binary information sent to the printer; a character set grouping containing letters, digits, and punctuation marks to be printed.
Default	A value, parameter, attribute, or option that is assigned by a program or system when another has not been specified by the user.
Diagnostic	Pertaining to the detection and isolation of a printer malfunction or mistake.
Direct Thermal Media	Media coated with special chemicals that act as an accelerator, acceptor dye, and binder. In Direct Thermal mode, the heat from the selected rectangular elements in the thermal printhead makes direct contact with the media (no ribbon is used) and causes a chemical reaction that creates the image on the media.
Direct Thermal Printing	A printing method in which no ribbon is used to transfer data from the printhead to the media to create an image. The thermal printhead selectively heats small rectangular elements which make direct contact with the coated media.
DRAM	Dynamic Random Access Memory. Can be read from or written to at any time. DRAM is volatile: whatever is in DRAM is lost when power is turned off.
Fanfold Media	Media supplied in a fanfold stack instead of a roll format.
Flash Memory	Printer configurations, programs, downloaded files, and fonts are stored in Flash Memory. Data in Flash are not lost when power is turned off (Resident fonts are fonts permanently stored in Flash and available at any time, via software commands.)
Font	A collection of printing characteristics for printing alphanumeric characters, all of which combine to produce a distinctive style of print.
Host Computer	The computer that stores, processes, and sends data to be printed, which communicates directly with the printer. The term "host" is used to indicate the controlling computer, since modern printers are themselves microprocessor-controlled computer systems.
Interface	The hardware component used to link two devices by common physical interconnection, signal, and functional characteristics.

IPS	The speed at which the media is printed based on a rate of Inches-Per-Second.
Label Liner (backing)	The material labels are attached to during their manufacturing process. Attachment is usually accomplished with an adhesive. After printing, labels can be easily removed from the liner and the liner discarded or recycled.
Label Taken Sensor	A sensor located at the front of the printer to detect the presence of a label extended out the front of the printer. The sensor is used only during Peel-Off and Tear-Off Media Handling to sense a label and then detect its removal prior to printing the next label.
Media	Material onto which data is printed by the printer. The types of media supported by the printer are die-cut labels or tag stock, supplied in roll or fanfold format. Media is further described by the type of sensing used to detect the Top-of-Form position based on the label length indicators used. Transmissive (Gap) media uses a liner gap, notch, or hole between labels, and Reflective (Mark) media uses a horizontal black mark located on the underside of the tag stock or label liner. Continuous media (with no label length indicators) uses no sensing method, and the operator determines which label length is desired.
Media Sensor	The sensor used to detect the presence of media in the paper path as well as the gap, notch, or hole position of Transmissive media or the horizontal black mark on Reflective media.
Memory	See RAM, Nonvolatile Memory, DRAM, and Flash Memory.
Nonvolatile Memory	Nonvolatile memory stores variables that must be preserved when the printer is turned off, such as configuration parameters and printer usage statistics.
NVRAM	Acronym of Nonvolatile Random-Access Memory. See Nonvolatile Memory.
Parity (check)	Parity checking is the addition of a non-data bit to data, resulting in the number of “1 bits” being either always even or always odd. Parity is used to detect transmission errors. Parity represents value in the check digit of the received or transmitted data.
PCBA	Printed Circuit Board Assembly. A PCB with components (ICs, resistors, capacitors, etc.) installed.

PGL	Intelligent Graphics Printing software for the Printronix Graphics Language, designated for Printronix printers. PGL provides online forms, barcodes, and many alphanumeric text-generation capabilities and is compatible with earlier versions of Printronix PGL protocol and programming.
Pitch (RFID)	In the RFID industry, pitch is defined as the distance from one point on an inlay to the same point on the next inlay.
Port	A data channel used for receiving data from or transmitting data to one or more external devices.
Protocol	The rules and conventions that govern communication between a printer and a host computer. A protocol includes codes for printing text and graphics and codes instructing the printer to perform special operations.
RAM	Random-Access Memory. Also called “main memory” or “working memory.” It is the active memory of the printer into which programs are loaded. RAM is saved to volatile memory because data in RAM is lost when power is turned off or interrupted.
Reflective Sensing	Use of the lower media sensor only to transmit and receive infrared light off the underside of media to detect gaps, notches, holes, or horizontal black marks used for determining the Top-of-Form position on labels or for indicating a Paper Out condition.
Resolution	A measure expressing the number of component units in a given range used to create an image; in printing, expressed as the number of dots per inch (dpi) horizontally and vertically.
RFID Encoder	The RFID (Radio Frequency Identification) encoder programs smart labels (tags with embedded inlays).
Roll Media	Media supplied in a roll format, usually wound on a 1-inch or 3-inch cardboard core. The T5000 media hanger assembly accepts both core sizes.
Sensed Distance	<p>Gap/Mark Sensor = Gap, Advanced Gap, or Advanced Notch: The Sensed Distance value is the physical length of one label plus the length of one gap.</p> <p>Gap/Mark Sensor = Mark: The Sensed Distance value is the physical distance from the leading edge of one black mark to the leading edge of the next.</p>

Slew	Vertical paper movement.
Standard-Pitch RFID Labels	Labels with RFID inlays that typically have a pitch from 2.0 to 6.0 inches. These labels support encoding of the tag and provide ample space to print text, graphics, barcodes, or logos.
Stop Bits	The signal which indicates the end of a character or element.
Thermal Transfer Media	Media specifically designed to work with a ribbon for image transfer. In Thermal Transfer mode, compatibility between the ribbon and the media is critical in producing a high quality, long lasting image.
Thermal Transfer Printing	A printing method in which the printhead presses a specially coated ribbon against the media. The printhead elements react with the ribbon and bond the image to the media.
Transmissive Sensing	Use of the upper media sensor to transmit infrared light through the top of media which is then received by the lower media sensor to detect gaps, holes, or notches for determining the Top-of-Form position on labels or for indicating a Paper Out condition.
Twinax	Twinaxial. A type of cable with two wires surrounded by insulation and a braided shield.

J

Communication Notices and Warranties

This information was developed for products and services offered in the U.S.A.

Printronic may not offer the products, services, or features discussed in this document in other countries. Consult your Printronix representative for information on the products and services currently available in your area. Any reference to an Printronix product, program, or service is not intended to state or imply that only that Printronix product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Printronix intellectual property rights may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-Printronix product, program, or service.

Printronic may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Printronic, Inc.
15345 Barranca Parkway
Irvine, CA 92618
U.S.A.

The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law:

PRINTRONIX PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Printronix may make improvements and/or changes in the product(s) described in this publication at any time without notice.

Any references in this information to non-Printronix Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the

materials for this Printronix product and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurement may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Information concerning non-Printronix products was obtained from the suppliers of those products, their published announcements or other publicly available sources. Printronix has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-Printronix products. Questions on the capabilities of non-Printronix products should be addressed to the suppliers of those products.

Printronix encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. Printronix offers a variety of programs and services to assist equipment owners in recycling their IT products. Information on these product recycling offerings can be found on Printronix's Internet site at <http://www.printronix.com>.

Note!

Before using this information and the product it supports, read the information and Communication Notices on page 381.

If you are viewing this information softcopy, the photographs and color illustrations may not appear.

For online versions of this book, we authorize you to:

- Copy, modify, and print the documentation contained on the media, for use within your enterprise, provided you reproduce the copyright notice, all warning statements, and other required statements on each copy or partial copy.
- Transfer the original unaltered copy of the documentation when you transfer the related Printronix product (which may be either machines you own, or programs, if the program's license terms permit a transfer). You must, at the same time, destroy all other copies of the documentation.

You are responsible for payment of any taxes, including personal property taxes, resulting from this authorization.

Your failure to comply with the terms above terminates this authorization. Upon termination, you must destroy your machine readable documentation.

Communication Notices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modifications could void the user's authority to operate the equipment.


Any change or modification to this product voids the user's authority to operate it per FCC Part 15 Subpart A Section 15.21 regulations.

This product may contain an optimal intentional radiator with the following parameters:

Operating Frequency: 869.525 (AWID 869) or 902 to 928 MHz (AWID 915)

Typical RF Power: 25 to 100 milliwatts (SL5x04)

Maximum RF Power: 1 Watt under abnormal conditions

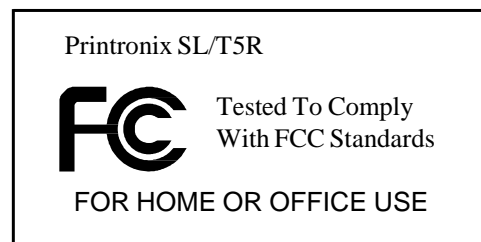

Canada

This Class B digital apparatus complies with Canadian ICES-003 and RSS 210.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 et RSS 210 du Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device has been designed to operate with the antennas having a maximum gain of -18 dBi. Antennas having a gain greater than -18 dBi dB are strictly prohibited for use with this device. The required antenna impedance is 50 ohms.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

Korea

기종별	사용자안내문
B급 기기 (가정용 방송통신기기)	이 기기는 가정용 (B 급) 으로 전자파적합등록을 한 기기로서 주로 가정에서 사용하는 것을 목적으로 하며 , 모든 지역에서 사용할 수 있습니다 .

CE Notice (European Union)

Marking by the CE symbol indicates compliance of this Printronix system to the EMC Directive and the Low Voltage Directive of the European Union. Such marking is indicative that this Printronix system meets the following technical standards:

- EN 300 220-1 (2000), Electromagnetic Compatibility and Radio Spectrum Matters; Short Range Devices; Radio equipment to be used in the 25 MHz to 1000 MHz frequency range with power levels ranging up to 500 mW.
- EN 55022 — “Limits and Methods of Measurement of Radio Interference Characteristics of Information Technology Equipment.”
- EN 55024 — “Electromagnetic Immunity Requirements for Information Technology Equipment”
- EN 60950 — “Safety of Information Technology Equipment.”

Printronix cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-Printronix option cards.

This product has been tested and found to comply with the limits of Class A Information Technology Equipment according to European standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication devices.

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

CE Symbol



Taiwan

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

China

Declaration:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may need to perform practical actions.

此为A级产品。在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

海拔高度和非热带性气候声明



仅适用于海拔 2000M 以下地区安全使用



仅适用于非热带气候条件下安全使用

Software License Agreement

Your printer contains, among other software, Printronix operating software including, but not limited to the Embedded Configurable Operating System (the “eCos Software”) as embedded software. The terms of this Agreement apply only to the eCos Software, and all other embedded software supplied with the printer. You accept the terms of this Agreement by your initial use of your printer.

1. Object Code License

Printronix grants you a nonexclusive license to use the Printronix Software, the eCos Software and all other embedded software (collectively, the “Embedded Software” or the “Software”) only in conjunction with the printer. As the rightful possessor of the printer, you may make a reasonable number of copies of the Software as necessary for backup, configuration, and restoration of the printer. You must reproduce the copyright notice and any other legend of ownership on each copy of the Software you make.

You may transfer possession of the Software and its media to another party only with the transfer of the printer on which the Software is used. If you do so, you must give the other party a copy of these terms and provide all user documentation to that party. When you do so, you must destroy any copies of Software not resident in the printer.

Your license for the Software terminates when you no longer rightfully possess the printer. No other rights under this license are granted.

2. Source Code

A source code version of eCos Software is available under the terms of a modified version of the GNU General Public License (GPL) located under PCM eCos 2.0+ at www.primtronix.com. Printronix grants no rights whatsoever in the source code for the Printronix Software.

3. No Warranty

THE EMBEDDED SOFTWARE IS PROVIDED UNDER THIS LICENSE ON AN “AS IS” BASIS, WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, WARRANTIES THAT THE EMBEDDED SOFTWARE IS FREE OF DEFECTS, MERCHANTABILITY, FIT FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE EMBEDDED SOFTWARE IS WITH YOU. SHOULD ANY OF THE EMBEDDED SOFTWARE PROVE DEFECTIVE IN ANY RESPECT, YOU (NOT RED HAT, PRINTRONIX, ANY OTHER CONTRIBUTOR OR ANY DISTRIBUTOR) ASSUME THE COST OF ANY NECESSARY SERVICING, REPAIR OR CORRECTION. THIS DISCLAIMER OF WARRANTY CONSTITUTES AN ESSENTIAL PART OF THIS LICENSE. NO USE OF ANY OF THE EMBEDDED SOFTWARE IS AUTHORIZED HEREUNDER EXCEPT UNDER THIS DISCLAIMER.

4. Conflicting Terms

You agree that this Agreement provides you no more rights with regards to warranty, support, indemnity or liability terms with respect to Printronix Inc, or any contributor to the Embedded Software than that provided by any express warranty that may be made by Printronix, Inc.

5. Limitation of Liability

UNDER NO CIRCUMSTANCES AND UNDER NO LEGAL THEORY, WHETHER TORT (INCLUDING NEGLIGENCE), CONTRACT OR OTHERWISE, SHALL RED HAT, PRINTRONIX, ANY OTHER CONTRIBUTOR, OR ANY DISTRIBUTOR OF THE EMBEDDED SOFTWARE, OR ANY PART THEREOF, OR ANY SUPPLIER OF ANY OF SUCH PARTIES, BE LIABLE TO YOU OR ANY OTHER PERSON FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY CHARACTER INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF GOODWILL, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION. OR ANY AND ALL OTHER COMMERCIAL DAMAGES OR LOSSES, EVEN IF SUCH PARTY SHALL HAVE BEEN INFORMED OF THE POSSIBILITY OF SUCH DAMAGES. THIS LIMITATION OF LIABILITY SHALL NOT APPLY TO LIABILITY FOR DEATH OR PERSONAL INJURY RESULTING FROM SUCH PARTY'S NEGLIGENCE TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH LIMITATION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THAT EXCLUSION AND LIMITATION MAY NOT APPLY TO YOU.

6. U.S. Government Users

The Embedded Software is a "commercial item," as that term is defined in 48 C.F.R. 2.101 (Oct 1995), consisting of "commercial computer software" and "commercial computer software documentation," as such terms are used in 48 C.F.R 12.212 (Sept. 1995). Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4 (June 1995), all U.S. Government End Users acquire Covered Code with only those rights set forth herein.

7. Miscellaneous

This Agreement represents the complete agreement concerning subject matter hereof. If any provision of this Agreement is held to be unenforceable. This Agreement shall be governed by California law provisions (except to the extent applicable law, if any, provides otherwise), excluding its conflict-of-law provisions.

8. eCos Software

eCos is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, version 2 or a later.

eCos is distributed WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANT ABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should receive a copy of the GNU General Public License along with eCos. If not, write to:

Free Software Foundation, Inc.
59 Temple Place, Suite 330
Boston, MA 02111-1307 USA.

As special exception, if other files instantiate templates or use macros or inline functions from this file, you could compile this file and link it with other works to produce work based on this file. This file does not by itself cause the resulting work to be covered by the GNU General Public License. However, the source code for this file must be made available in accordance with section (3) of the GNU General Public License.

This exception does not invalidate any other reasons why work based on this file might be covered by the GNU General Public License.

Alternative licenses for eCos may be arranged by contacting Red Hat, Inc. at <http://sources.redhat.com/ecos/ecos-license/>

OpenSSL License

The OpenSSL toolkit stays under a dual license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit.

See below for the actual license texts. Actually both licenses are BSD-style Open Source licenses. In case of any license issues related to OpenSSL please contact openssl-core@openssl.org.

```
/* =====
 * Copyright (c) 1998-2011 The OpenSSL Project. All rights reserved.
 *
 * Redistribution and use in source and binary forms, with or without
 * modification, are permitted provided that the following conditions
 * are met:
 *
 * 1. Redistributions of source code must retain the above copyright
 * notice, this list of conditions and the following disclaimer.
 *
 * 2. Redistributions in binary form must reproduce the above copyright
 * notice, this list of conditions and the following disclaimer in
 * the documentation and/or other materials provided with the
 * distribution.
 *
 * 3. All advertising materials mentioning features or use of this
 * software must display the following acknowledgment:
 * "This product includes software developed by the OpenSSL Project
 * for use in the OpenSSL Toolkit. (http://www.openssl.org/)"
 *
 * 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to
 * endorse or promote products derived from this software without
 * prior written permission. For written permission, please contact
 * openssl-core@openssl.org.
 *
 * 5. Products derived from this software may not be called "OpenSSL"
 * nor may "OpenSSL" appear in their names without prior written
 * permission of the OpenSSL Project.
 *
 * 6. Redistributions of any form whatsoever must retain the following
 * acknowledgment:
 * "This product includes software developed by the OpenSSL Project
 * for use in the OpenSSL Toolkit (http://www.openssl.org/)"
 *
 * THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS'' AND ANY
 * EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
 * IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
 * PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR
 * ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,
 * SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT
 * NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;
 * LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
 * HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT,
 * STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)
 * ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED
```

* OF THE POSSIBILITY OF SUCH DAMAGE.

* =====

*

* This product includes cryptographic software written by Eric Young
* (eay@cryptsoft.com). This product includes software written by Tim
* Hudson (tjh@cryptsoft.com).

*

*/

Original SSLeay License

/* Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com)

* All rights reserved.

*

* This package is an SSL implementation written
* by Eric Young (eay@cryptsoft.com).
* The implementation was written so as to conform with Netscapes SSL.

*

* This library is free for commercial and non-commercial use as long as
* the following conditions are aheared to. The following conditions
* apply to all code found in this distribution, be it the RC4, RSA,
* lhash, DES, etc., code; not just the SSL code. The SSL documentation
* included with this distribution is covered by the same copyright terms
* except that the holder is Tim Hudson (tjh@cryptsoft.com).

*

* Copyright remains Eric Young's, and as such any Copyright notices in
* the code are not to be removed.
* If this package is used in product, Eric Young should be given attribution
* as the author of the parts of the library used.
* This can be in the form of a textual message at program startup or
* in documentation (online or textual) provided with the package.

*

* Redistribution and use in source and binary forms, with or without
* modification, are permitted provided that the following conditions
* are met:

- * 1. Redistributions of source code must retain the copyright
* notice, this list of conditions and the following disclaimer.
- * 2. Redistributions in binary form must reproduce the above copyright
* notice, this list of conditions and the following disclaimer in the
* documentation and/or other materials provided with the distribution.
- * 3. All advertising materials mentioning features or use of this software
* must display the following acknowledgement:
* "This product includes cryptographic software written by
* Eric Young (eay@cryptsoft.com)"
* The word 'cryptographic' can be left out if the routines from the
* library being used are not cryptographic related :-).
* 4. If you include any Windows specific code (or a derivative thereof) from
* the apps directory (application code) you must include an
* acknowledgement: "This product includes software written by Tim Hudson
* (tjh@cryptsoft.com)"

*

* THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS" AND
* ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

* IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE
* ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE
* FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
* DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS
* OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT
* LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY
* OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF
* SUCH DAMAGE.

*

* The licence and distribution terms for any publically available version or
* derivative of this code cannot be changed. i.e. this code cannot simply
* be copied and put under another distribution licence
* [including the GNU Public Licence.]

*/

OpenSSL:

The version of OpenSSL used in the SL/T5R printer was prior to introduction of the Heartbleed vulnerability that occurred in December 2011. Therefore it is not affected.

WPA Supplicant License

Copyright (c) 2003-2013, Jouni Malinen <j@w1.fi> and contributors. All Rights Reserved.

This program is licensed under the BSD license (the one with advertisement clause removed). Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name(s) of the above-listed copyright holder(s) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Limited Software Product Warranty

Printronic, Inc. warrants that for ninety (90) days after delivery, the Software will perform in accordance with specifications published by Printronix, Inc. Printronix, Inc. does not warrant that the Software is free from all bugs, errors and omissions.

Remedy

Your exclusive remedy and the sole liability of Printronix, Inc. in connection with the Software is replacement of defective software with a copy of the same version and revision level.

Disclaimer of Warranties and Limitation of Remedies

1. THE PARTIES AGREE THAT ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY ARE EXCLUDED. Printronix, Inc. does not warrant that the functions contained in the Software will meet your requirements or that the operation of the Software will be uninterrupted or error free. Printronix, Inc. reserves the right to make changes and/or improvements in the Software without notice at any time.
2. IN NO EVENT WILL PRINTRONIX, INC. BE LIABLE FOR LOST PROFITS, LOST DATA, BUSINESS INTERRUPTIONS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR INABILITY TO USE THIS PRODUCT, EVEN IF PRINTRONIX, INC. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR ANY DAMAGES CAUSED BY THE ABUSE OR MANIPULATION OF THE SOFTWARE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.
3. Printronix, Inc. will not be liable for any loss or damage caused by delay in furnishing a Software Product or any other performance under this Agreement.

-
4. Our entire liability and your exclusive remedies for our liability of any kind (including liability for negligence except liability for personal injury caused solely by our negligence) for the Software Product covered by this Agreement and all other performance or nonperformance by us under or related to this Agreement are limited to the remedies specified by this Agreement.
 5. California law governs this Agreement.

Termination of License Agreement

This License shall continue until terminated. This license may be terminated by agreement between you and Printronix, Inc. or by Printronix, Inc. If you fail to comply with the terms of this License and such failure is not corrected within thirty (30) days after notice. When this License is terminated, you shall return to the place you obtained them, the printer and all copies of the Software and documentation.

U.S. Government Restricted Rights

Use, duplication or disclosure by the government is subject to restrictions as set forth in the Rights in Technical Data and Computer Software clause at FAR 242.227-7013, subdivision (b) (3) (ii) or subparagraph (c) (1) (ii), as appropriate. Further use, duplication or disclosure is subject to restrictions applicable to restricted rights software as set forth in FAR 52.227-19 (c) (2).

Acknowledgement of Terms and Conditions

YOU ACKNOWLEDGE THAT YOU HAVE READ THIS AGREEMENT, UNDERSTAND IT, AND AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS. NEITHER PARTY SHALL BE BOUND BY ANY STATEMENT OR REPRESENTATION NOT CONTAINED IN THIS AGREEMENT. NO CHANGE IN THIS AGREEMENT IS EFFECTIVE UNLESS WRITTEN AND SIGNED BY PROPERLY AUTHORIZED REPRESENTATIVES OF EACH PARTY. BY USING THIS PRINTER, YOU AGREE TO ACCEPT THE TERMS AND CONDITIONS OF THIS AGREEMENT.

Warranty Information

PRINTER WARRANTY

Printronix® warrants to the purchaser that under normal use and service, this printer (excluding the thermal printhead) purchased hereunder shall be free from defects in material and workmanship for a period of one year from the date of shipment from Printronix. (In the United States and Canada, this period provides for onsite support service in the first 90 days of ownership, with return-to-factory service provided from the 91st day of ownership until the end of one year, costs of shipping to be borne by the purchaser.)

Consumable items such as media and ribbons are not covered under this warranty. This warranty does not cover equipment or parts that have been misused, altered, or used for purposes other than those for which they were manufactured. This warranty also does not cover loss, shipping damage, damage resulting from accident or damages resulting from unauthorized service.

THERMAL PRINTHEAD

Printronix warrants the printhead for a period of one hundred eighty (180) days, or 1,000,000 linear inches for direct thermal use, or 2,000,000 linear inches for thermal transfer use, whichever comes first. The warranty does not cover printheads that have been misused, damaged due to improper cleaning, or damaged due to use of improper ribbons or media.

SUPPLIES

For the nearest Printronix full-service distributor that carries Printronix genuine supplies, please call 1-800-733-1900 or fax (714)-368-2354. Supplies design, specification, and selection are integral to the development of any computer imaging system. Printronix's extensive manufacturing and research capabilities, along with years of experience in the design of printers and their applications, assures that you will receive the exact materials that you require to maximize the performance of your Printronix printer. For more information, call the Printronix Customer Support Center at (714) 368-2686 or access the Printronix website at <http://www.printronix.com>.

ON-SITE MAINTENANCE SERVICE

Printronix offers on-site support services in the United States and Canada. Please contact the Printronix Maintenance Contracts Group at 800-854-6463 - option 1 for detailed service agreement information.

RFID


Intended use: non-specific short range device operating in the band 869.4 to 869.95 MHz for Home and Office environment in E.E.A and Switzerland.

Wireless Ethernet

Intended use: Low Power 802.11b/g radio LAN product operating indoor in 2.4 GHz bands for Home and Office environment in E.E.A and Switzerland.

Lithium Battery

WARNING The controller board contains a lithium battery sealed inside the real-time clock chip. Do not disassemble the chip to replace the battery. Do not dispose of the chip by incineration. Failure to comply may cause the battery to explode. Contact your local waste agency for the correct disposal procedure.

廢電池請回收 

eCos

eCos, the Embedded Configurable Operating System
Copyright © 1998, 1999, 2000, 2001, 2002, 2003 Red Hat, Inc.
Copyright © 2002, 2003 John Dallaway
Copyright © 2002, 2003 Nick Garnett
Copyright © 2002, 2003 Jonathan Larmour
Copyright © 2002, 2003 Andrew Lunn
Copyright © 2002, 2003 Gary Thomas
Copyright © 2002, 2003 Bart Veer
Copyright © 1982, 1986, 1991, 1993 The Regents of the University of California. All rights reserved.
© Unix System Laboratories, Inc.

All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.
Copyright © 1995, 1996, 1997, and 1998 WIDE Project. All rights reserved.
Copyright © 2000 Brian Somers
Copyright © 1998 The NetBSD Foundation, Inc. All rights reserved.
Copyright © 1997 Niklas Hallqvist. All rights reserved.
Copyright © 1998 Stephen Deering
Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Stephen Deering of Stanford University. Portions of eCos code are distributed under several BSD style licenses. Other portions of eCos code are distributed under the terms of the GNU General Public License with a non-copyleft exception with allows static links to non-copyleft programs.

Open SSL

Copyright © 1998-2004 The Open SSL Project. All rights reserved.
This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)
Copyright © 1995-1998 Eric Young. All rights reserved.
OpenSSL is distributed under the terms of the Open SSL and SSLeay licenses, which are both BSD style open source licenses.

Index

Symbols

^Dnn Dot Slew option, 182

Numerics

06 HOST REQUEST fault message, 309
08 HOLD PRINT TIMEOUT fault message, 309
1284 parallel interface, 284
15 COMM CHECK fault message, 309
20 CPI Condensed option, 182
203 DPI fault message, 310
22 INVALID ADDR fault message, 309
27 CU TIMED OUT fault message, 310
28 CU NOT ENAB fault message, 310
300 DPI fault message, 310
33 HEAD OPEN Timeout fault message, 310
40V POWER FAIL fault message, 310
5225 World Trade option, 182

A

Absorb After ^PN option, 182
Absorb After ^PY option, 183
Accessories, 343
ACK / NAK, 235
Acoustic noise levels, 339
Active Char Set option, 183
Active IGP Emul option, 139
Active IGP Emulation option, 103
Admin User option, 144, 148
Advanced gap, 59
Advanced notch, 59
AI 00 Spaces option, 183
Alarm option, 141
Alarm, printer, 308
Alt. Char Set option, 183

Alt. Set 80-9F option (Coax, Twinax, TN3270, TN5250), 184
Alt. Set 80-9F option (P-Series, Serial Matrix, Epson FX), 183
Ambient light Validator failure fault message, 311
Ant. Diversity option, 254
Antenna option, 254
Append Rotated option, 184
ASCII Data Port option, 247
Auth Method option, 255
Auto Calibrate option, 102, 128
Auto calibrate, running, 60
Auto Dump option, 227
Auto FF at ^PN option, 184
Auto Label Width option, 117
Auto LF option (P-Series, P-Series XQ), 184
Auto LF option (Serial Matrix, Proprinter XL, Epson FX), 184
Auto Locking option, 144
Auto Map Select option, 114
Auto Save Configuration, 77
Auto Save option, 106
Auto Skip at End option, 185
Auto switching, 281
Auto Trickle option, 230
Auto Uppercase option, 185
Autoeject option (VGL), 185
Autowrap option, 185

B

BAD NVM CALL 1, 311
BAD NVM CALL 2, 311
BAD NVM CALL 3, 311
BAD NVM CALL 4, 311
BAD NVM CALL A, 311

BAD VFU CHANNEL fault message, 311
 BAR CODE IMPROPER Data Format fault message, 311
 BAR CODE QUIET Zone too small fault message, 311
 Barcode var. option, 185
 Batch Counter option, 148
 Batch Rewind mode, 43
 Baud Rate option, 234
 Bold Chars. option, 147
 Bold option, 186
 BootP option, 245, 250
 Bottom Margin option, 186
 Boundary Check option, 186
 Btm Margin Ctl option, 186
 BUFFER OVERFLOW fault message, 311
 BUFFER OVERRUN fault message, 312
 Buffer Print option, 186
 Buffer Reprint option, 186
 Buffer Size in K option (Parallel Port), 230
 Buffer Size in K option (Serial), 237
 Buffer Size in K option (USB), 242
 Busy on Strobe option, 232
 Busy signal, Centronics parallel interface, 283
 Byte mode, 284

C

C/T PORT

- menu, 241
- submenus, 241

C128 Mode Comp. option, 187

C39 Compatbl. option, 187

Cable length

- Centronics parallel interface, 282
- IEEE 1284 parallel, 286
- RS-232 interface, 287
- RS-422 interface, 287
- serial, 287

Cal in Peel Mode option, 133

CALIBRATE CTRL

- menu, 127
- submenus, 128

Calibrating media sensors, 60

CALIBRATION Warning fault message, 312
 Calibration warning fault message, 312
 Cancel IGP/DCU option, 187
 Cancel Key option, 142
 CANNOT CALIBRATE Disable Peel-Off fault message, 312

Centronics

- acknowledge signal, 283
- busy signal, 283
- data lines 1 through 8 signals, 283
- data strobe signal, 283
- interface signals, 283
- online signal, 283
- Paper Empty signal, 283
- Paper Instruction (PI) signal, 283
- parallel interface, 282
- pin assignments, 282

Change Case option, 187

Changing printer settings, 75

Channel option, 254

Character Group option (Epson FX), 188

Character Group option (PGL), 189

Character Group option (Proprinter XL), 192

Character Group option (P-Series, Serial Matrix), 191

Character Set option, 193

Checksum Failure fault message, 312

Cleaning

- cutter option, 72
- exterior, 68
- interior, 68
- media damper, 72
- media sensor, 70
- platen roller, 70
- printhead, 69
- the printer, 68

Clear Error Log option, 227

Clear To Send (CTS) signal, RS-232 serial interface, 288

CLEARING PROGRAM FROM FLASH fault message, 313

Clip Page option, 121

Clock Skew (SEC) option, 258

Clock Skew Units option, 258
Cmd Resolution option, 193
COAX SETUP menu, 153
Coax Type option, 193
Coax/twinax host interface, 342
Code Page Subset option, 193
Command
 operation of FILE_IO, 368
Commands
 impact, 369
 PTX_SETUP, 361
Communication
 Centronics parallel, 282
 Dataproducts Long Lines, 282
 IEEE 1284 parallel (bidirectional), 284
Compatibility mode, IEEE 1284 interface, 284
Compatibility option, 142
Compressed Print option, 194
CONFIG command, summary, 367
CONFIG. CONTROL
 menu, 104
 submenus, 105
Configuration menu
 moving within, 73
 moving within (ill.), 74
 overview, 82
Configurations
 loading saved, 81
 modifying saved, 79
 printing, 81
 saving, 76
 specifying power-up, 78
Configuring the printer, 73
Continuous Mode option, 124
Continuous, media handling, 27
CONTRAST TOO LOW Check media fault message, 313
Control Code 06 option, 194
Control Code 08 option, 194
Control panel, 23
Control panel keys, 25
Controlling print quality, 294
Controls, 23
Copy Count option, 194
CR at MPP+1 option, 194
CR Edit option, 194
CR, EM, & NL option, 195
Create And Send Download File
 Download Mode, 277
 Online (PGL Only), 276
CSC, 371
CTHI, 342
CTHI Emulation option, 138
Customer Support Center, 371
Cut, media handling, 28
Cutter, 337
CUTTER FAULT Check Cutter fault message, 313
Cutter Option, cleaning, 72

D

Dark background labels with gaps, 57
Dark background media with notches or holes, 58
Data Bit 8 option, 195, 230
Data Carrier Detect (DCD) signal, RS-232 serial interface, 288
Data exchange, 292
Data lines 1 through 8 signal, Centronics parallel interface, 283
Data Polarity option, 232
Data Protocol option, 235
Data Set Ready (DSR) signal, RS-232 serial interface, 288
Data strobe signal, Centronics parallel interface, 283
Data Term Ready option, 238
Date
 submenu, 263
DATE menu, 263
Day option, 263
Default Code Pag option, 195
Default Font option, 195
Default WEP Key option, 255
Define CR code option, 196
Define LF code option (PGL, Serial Matrix, Proprinter XL, Epson FX), 196
Define LF code option (P-Series, P-Series XQ), 196

- Del Char frm Flsh option, 142
- Del Char frm RAM option, 143
- Del Set frm Flsh option, 143
- Del Set from RAM option, 143
- Delete Config option, 105
- Delete Files option, 144
- Device Address option, 241
- DHCP option, 245, 250
- Diagnostic tests, 226
- DIAGNOSTICS
 - menu, 225
 - submenus, 226
- Diagnostics, 291
 - Bad NVM Error, 299
 - E0xx Error, 299
- Diagnostics ILLNVM Error, 299
- DIAGNOSTICS PASSED fault message, 313
- Direct thermal printing, 14
- DIRECT THERMAL Remove Ribbon fault message, 313
- Display indicators, 24
- Display Language option, 141
- Display Ribbon option, 122
- Do FF at TOF option, 197
- DO NOT POWER OFF fault message, 313
- Download File
 - Download Mode, 277
 - Online (PGL Only), 276
- Downloading Software
 - Firmware Download Utility, 266
 - Flash contains Boot Code, 274
 - NIC, 269
 - NIC and FTP, 270
 - Parallel Port, 267
 - Printronix Windows Driver, 273
 - Serial Port, 266
 - USB Port, 272
- DOWNLOADING TO VALIDATOR fault message, 314
- Downloading TrueType Fonts, 275
- DRAM Installed option, 227
- DTR, 236

- Dual NIC, 342
- Dynamic print control, 15

E

- E00 EXE @ ADDR0 message, 314
- E01A TYPE 0x40 message, 314
- E01B TYPE 0x60 message, 314
- E02 MACHINE CHK message, 314
- E03A DSI HASH L message, 314
- E03B DSI HASH S message, 314
- E03C DSI BAT PL message, 314
- E03C DSI BAT PS message, 314
- E03E DSI CXIWX message, 314
- E03F DSI CXOWX message, 314
- E03G DSI ECXIWX message, 314
- E03H DSI ECXOWX message, 314
- E04A ISI NO TRA message, 314
- E04B ISI DIRECT message, 314
- E04C ISI PROTEC message, 314
- E06 NOT ALIGNED message, 314
- E07 ILLEGAL INS message, 314
- E08 FLOATINGPNT message, 314
- EAP Mode, WLAN EAP menu, 260
- EAP Pswd (01-15), WLAN EAP menu, 261
- EAP Pswd (16-30), WLAN EAP menu, 261
- EAP User (01-15), WLAN EAP menu, 260
- EAP User (16-30), WLAN EAP menu, 260
- EAP User (31-32), WLAN EAP menu, 260
- Early Print Cmpl option (Coax), 197
- Early Print Comp option (IPDS), 197
- EC SOFTWARE FAIL fault message, 315
- Elong./Alt. Font option, 197
- Emulation option, 198
- Emulation submenus, 182
- Emulations overview, 149
- E-NET INIT fault message, 314
- E-NET READY fault message, 314
- E-NET RESET fault message, 315
- ENTER to Stop fault message, 315
- Environmental information, 339
- Epson Set option, 198
- ERROR DC PROGRAM NOT VALID fault message, 315

ERROR DRAM AT ADDRESS XXXXXXXXX fault message, 315
 ERROR FLASH DID NOT PROGRAM fault message, 315
 ERROR IPDS needs 300 DPI Head fault message, 315
 ERROR NO DRAM DETECTED fault message, 315
 ERROR OCCURRED FLUSHING QUEUES fault message, 317
 ERROR PROGRAM NEEDS MORE DRAM fault message, 315
 ERROR PROGRAM NEEDS MORE FLASH fault message, 316
 ERROR PROGRAM NOT COMPATIBLE fault message, 316
 ERROR PROGRAM NOT VALID fault message, 316
 Error Recover option, 122
 ERROR SECURITY KEY NOT DETECTED fault message, 316
 ERROR SHORT AT ADDRESS XXXX fault message, 316
 ERROR WRITING TO FLASH fault message, 316
 ERROR WRONG CHECKSUM fault message, 316
 Errors
 Bad NVM, 299
 ILL NVM, 299
 Errors, E0xx, 299
 ESC d command option, 198
 Ethernet, 289
 wireless, 289
 ETHERNET ADDRESS
 menu, 244
 submenus, 245
 ETHERNET PARAMS
 menu, 246
 submenus, 247
 Ethernet Speed option, 247
 ETX / ACK, 235
 EVFU Select option, 198
 Exchange, data, 292
 Expanded Font option (PGL), 198

Expanded Font option (VGL), 198
 Expanded Fonts option (IPDS), 199
 Ext Execute Copy option, 199
 Extended Subset option, 199
 Extra Bold Char. option, 147

F

FAN FAULT message, 317
 Fanfold media, 36
 Fault, 283
 Fault Message
 BAD NVM CALL 1, 311
 BAD NVM CALL 2, 311
 BAD NVM CALL 3, 311
 BAD NVM CALL 4, 311
 BAD NVM CALL A, 311
 E01A TYPE 0x40, 314
 E01B TYPE 0x60, 314
 E02 MACHINE CHK, 314
 E03A DSI HASH L, 314
 E03B DSI HASH S, 314
 E03C DSI BAT PL, 314
 E03C DSI BAT PS, 314
 E03E DSI CXIWX, 314
 E03F DSI CXOWX, 314
 E03G DSI ECXIWX, 314
 E03H DSI ECXOWX, 314
 E04A ISI NO TRA, 314
 E04B ISI DIRECT, 314
 E04C ISI PROTEC, 314
 E06 NOT ALIGNED, 314
 E07 ILLEGAL INS, 314
 E08 FLOATINGPNT, 314
 Fault message
 06 HOST REQUEST, 309
 08 HOLD PRINT TIMEOUT, 309
 15 COMM CHECK, 309
 203 DPI, 310
 22 INVALID ADDR, 309
 27 CU TIMED OUT, 310
 28 CU NOT ENAB, 310
 300 DPI, 310
 33 HEAD OPEN Timeout, 310

40V POWER FAIL, 310
 Ambient light Validator failure, 311
 BAD VFU CHANNEL, 311
 BAR CODE IMPROPER Data Format, 311
 BAR CODE QUIET Zone too small, 311
 BUFFER OVERFLOW, 311
 BUFFER OVERRUN, 312
 CALIBRATION Warning, 312
 Calibration warning, 312
 CANNOT CALIBRATE Disable Peel-Off, 312
 Checksum Failure, 312
 CLEARING PROGRAM FROM FLASH, 313
 CONTRAST TOO LOW Check media, 313
 CUTTER FAULT Check Cutter, 313
 DIAGNOSTICS PASSED, 313
 DIRECT THERMAL Remove Ribbon, 313
 DO NOT POWER OFF, 313
 DOWNLOADING TO VALIDATOR, 314
 EC SOFTWARE FAIL, 315
 E-NET INIT, 314
 E-NET READY, 314
 E-NET RESET, 315
 ENTER to Stop, 315
 ERROR DC PROGRAM NOT VALID, 315
 ERROR DRAM AT ADDRESS
 XXXXXXXX, 315
 ERROR FLASH DID NOT PROGRAM, 315
 ERROR IPDS needs 300 DPI Head, 315
 ERROR NO DRAM DETECTED, 315
 ERROR OCCURRED FLUSHING
 QUEUES, 317
 ERROR PROGRAM NEEDS MORE
 DRAM, 315
 ERROR PROGRAM NEEDS MORE
 FLASH, 316
 ERROR PROGRAM NOT COMPATIBLE, 316
 ERROR PROGRAM NOT VALID, 316
 ERROR SECURITY KEY NOT
 DETECTED, 316
 ERROR SHORT AT ADDRESS XXXX, 316
 ERROR WRITING TO FLASH, 316
 ERROR WRONG CHECKSUM, 316
 FAN FAULT, 317
 FILE EXISTS Enable Overwrite, 317
 FILE SYS INVALID Optimize&Reboot, 317
 FILE SYS WRITE Check Flash, 317
 FILE SYSTEM FULL Add Flash, 317
 FILE SYSTEM FULL Delete Files, 317
 FILE SYSTEM FULL Optimize & Reboot, 317
 FILE UPLOADING, 317
 FPGA FILE NOT FOUND, 318
 FRAMING ERROR, 318
 GAP NOT DETECTED See Manual, 318
 GRF CHK ERROR PRESS PAUSE, 318
 Half Speed Mode, 319
 HEAD POWER FAIL, 319
 IGP/PGL ERROR, 320
 INCOMPATIBLE WITH CUTTER, 320
 INSUFFICIENT RAM Reboot/Add RAM, 320
 LABEL MISSING Check Paper Path, 321
 LABEL WRAP Open Head To Clear, 322
 LOADING PROGRAM FROM PORT XX%, 323
 LOADING PROGRAM INTO FLASH, 323
 MENU MODE QUICK SETUP, 323
 NON VOLATILE MEMORY FAILED, 323
 OPTION NOT INSTALLED, 324
 OVERALL GRADE FAIL, 324
 P/S MISMATCH, 327
 PAPER OUT Load Paper, 325
 PAPER OUT TIMEOUT, 326
 PARITY ERROR, 326
 PLEASE WAIT, 326
 POOR SCANNING Check Head&Heat, 326
 POOR SCANNING Check media, 326
 POOR SCANNING Inspect head, 326
 POWER SAVER MODE, 326
 PRINT HEAD COLD See Manual, 327
 PRINT HEAD HOT, 327
 PRINT HEAD UP Close Print Head, 327
 PRINTER HOT, 327
 PRINTER UNDER REMOTE CONTROL, 327
 PWR SUPPLY HOT, 328
 RBN TAKEUP FULL Remove Used Rbn, 328
 Remove Label, 328
 RESETTING PLEASE WAIT, 328
 RESTORING BOOT CODE, 328

- RIBBON BROKEN Reload Ribbon, 329
- RIBBON FAULT Timeout, 329
- RIBBON LOAD BAD Reload Ribbon, 329
- Ribbon Low, 329
- RIBBON OUT Load Ribbon, 329
- SECURITY CODE VIOLATION, 329
- SECURITY VIOLATION, 329
- SOFTWARE ERROR Recycle Power, 330
- Speed Exceeds Validator Limit, 330
- TESTING HARDWARE PLEASE WAIT, 330
- Unscannable xx Missing Codes, 330
- Validator not communicating, 331
- WAITING FOR PROGRAM DOWNLOAD, 331
- WIRELESS ADAPTER NOT COMPATIBLE, 331
- Fault Message ILL NVM VALUE 5, 320
- Fault Message ILL NVM VALUE 6, 320
- Fault Message ILL NVM VALUE 7, 320
- Fault Message Troubleshooting Table, 309
- Fault messages, 308
 - E00 EXE @ ADDR0, 314
 - Fault Message Troubleshooting Table, 309
 - H00: PCI SLOT ?, 319
 - H01: PCI J24, 319
 - H02: PCI J25, 319
 - operator-correctable, 308
 - requiring field service attention, 309
- Fault mode, 27
- Feature File option, 227
- Feed Key Online option, 148
- FF After Job option, 199
- FF valid at TOF option, 200
- FF Validity option, 200
- FILE EXISTS Enable Overwrite fault message, 317
- FILE SYS INVALID Optimize&Reboot fault message, 317
- FILE SYS WRITE Check Flash fault message, 317
- FILE SYSTEM FULL Add Flash fault message, 317
- FILE SYSTEM FULL Delete Files fault message, 317
- FILE SYSTEM FULL Optimize & Reboot fault message, 317
- FILE UPLOADING fault message, 317

- Filename extensions not shown in Menus, 279
- Firmware Download Utility, downloading software, 266
- Flash Avail. option, 144
- Flash Contains Boot Code, downloading software, 274
- FLASH Installed option, 227
- Flash Memory, load, 265
- Fonts, 13
 - Downloading TrueType, 275
 - TrueType, 275
- Form Length (lines) option, 200
- Form Width (char.) option, 200
- Form Width (in.) option, 200
- Form Width (mm.) option, 201
- Format Control option, 201
- Forms Handling option, 201
- Forms Length (in.) option, 200
- Forms Length (mm) option, 200
- FPGA FILE NOT FOUND fault message, 318
- FRAMING ERROR fault message, 318
- Framing Errors option, 240

G

- Gap, 59
- Gap Length option, 133
- GAP NOT DETECTED See Manual fault message, 318
- Gap Windowing option, 132
- Gap/Mark Sensor option, 101, 128
- Gap/Mark Thresh option, 129
- Gaps, 56
- Gateway Address option, 245, 250
- General PTX_SETUP commands, 362
- General Purpose Input/Output (GPIO) option, 343
- Gothic Typeface option, 201
- Graphic Chek Cod option, 202
- Graphic Chek Err option, 202
- GRF CHK ERROR PRESS PAUSE fault message, 318

H

H00: PCI SLOT ? message, 319
H01: PCI J24 message, 319
H02: PCI J25 message, 319
Half Speed Mode fault message, 319
Handshaking, 292
 hardware, 292
 software, 292
Hardware options, 341
Head On Time option, 228
HEAD POWER FAIL fault message, 319
Head Print Dist option, 228
Head Type option, 228
HeadClose Action option, 131
Hex Dump Mode option, 227
Hexdump mode option, 202
Holes, 56
Hor Image Shift option, 99, 112
Horizontal black marks, 55
Horizontal DPI option, 203
Host Command option, 203
Host Form Length option (IPDS), 204
Host Form Length option (PGL), 204
Host Forms Length option (VGL), 205
Host interface characteristics, 338
Host Interface option, 139
Host Override option, 205
Host PI option, 205
Hour option, 263

I

I-2/5 Selection option, 205
Idle Response option, 238
IEEE 1284
 interface, 284
 operating modes, 284
Ignore ^Lxx Cmd. option, 206
Ignore Ch#1 option, 206
Ignore Ch#2 option, 206
Ignore Chars option, 206
Ignore Dots option, 206
Ignore Mode option, 206
Ignore Spaces option, 207

Ignore Text option, 207
IGP/PGL ERROR fault message, 320
IGP100 Compatibl. option, 207
ILL NVM VALUE 5, 320
ILL NVM VALUE 6, 320
ILL NVM VALUE 7, 320
Impact commands, 369
Improving processing time, 292
INCOMPATIBLE WITH CUTTER fault message, 320
Indicators, 23
Indicators and switches, 336
Installing the paper path, 43
Installing the printer, 19
INSUFFICIENT RAM Reboot/Add RAM fault message, 320
Interface options, 342
Interfaces, 281
 Centronics parallel, 282
 Dataproducts Long Lines, 282
 IEEE 1284, 284
Interfacing, 293
Internal rewinder, 13, 43, 47, 341
Internat. Mode option, 255
Intervention Req option, 207
IP Address option, 245, 250
IPDS Data Port option, 247
IPDS for use with ethernet and twinax host interface, 342
IPDS SETUP menu, 160
Italic Print option, 207

J

Job Control option, 248
Job In Process indicator, 23

K

KDC Port Number option, 258
Keep Alive Timer option, 247
Kerb. Pwd(01–15) option, 257
Kerb. Pwd(16–30) option, 258
Kerb. Pwd(31–40) option, 258
Kerberos Enable option, 257

KERBEROS PARAMS

menu, 257

submenus, 257

L

Label Length option, 98, 110

LABEL MISSING Check Paper Path fault message, 321

Label Peel-Off, 48

Label Wait Time option, 119

Label Width option, 99, 111

Label Wrap, 306

LABEL WRAP Open Head To Clear fault message, 322

Labeling Applications, 279

Labels, printing test, 291

LAC Approx. option, 207

LAC Option option, 208

Last Char = FF option, 208

Latch Data On option, 232

Lbl Missing Flt option, 120

LCD, 23

LCD Fault Message Troubleshooting Table, 309

Ld Char at PwrUp option, 143

Ld Char from Fls option, 143

Ld Set at PwrUp option, 143

Ld Set from Flsh option, 143

Lead PDF Dist option, 208

Lead-in Chars option, 208

Left Margin option, 209

Left pressure block, 53

Liquid Crystal Display (LCD), 23

Load Config. option, 105

Load saved configuration, 81

Loading Flash Memory, 265

Loading media, 28

fanfold, 36

roll, 29

LOADING PROGRAM FROM PORT XX% fault message, 323

LOADING PROGRAM INTO FLASH fault message, 323

Loading ribbon, 28, 40

Logical Buf Size option, 209

LP+ Emulation option, 138

LPI option, 209

M

MAC Address option, 245, 250

Main configuration menu, 84

Manual Calibrate option, 130

Manual calibrate, running, 66

Manual conventions, 15

Mark, 59

Max Cache Memory option, 146

Max Cached Char option, 146

Max Font Buffer option, 145

Max PI 16 option, 209

Max. Print Width option, 209

Media, 16, 345

fanfold, 36

general information, 334

loading, 28

Printronix, 345

roll, 29

MEDIA CONTROL

menu, 107

submenus, 108

Media cutter, 13, 341, 351

installing, 351

Media cutter tray, 13, 341, 355, 359

installing, 355, 359

Media Damper, cleaning, 72

Media dimensions, 335

Media handling modes, 27

continuous, 27

cut, 28

peel-off, 28

tear-off, 27

tear-off strip, 27

Media Handling option, 97, 109

Media profile, 62

Media Profile option, 129

Media sensing
 dark background media with notches or holes, 58
 with dark background labels with gaps, 57
 with gaps, notches, or holes, 56
 with horizontal black marks, 55

Media sensor, 54
 calibrating, 60
 disable, 59
 gap, 59
 mark, 59
 positioning, 54

Media Sensor, cleaning, 70

Media specifications matrix, 335

Memory expansion (for non-IPDS printers only), 13

Memory specifications, 336

Menu mode, 27

MENU MODE QUICK SETUP fault message, 323

Menu options, selecting, 74

Menu overview, 82

Menus, filename extensions not shown, 279

Mgmt Port Number option, 262

Mgmt Protocol option, 262

Midline PY (includes ^PN) option, 209

Min Calib Delta option, 133

Min Xfer Rate option, 254

Minute option, 263

Modifying saved configurations, 79

Month option, 263

N

Name Config (1-8) option, 106

NetBIOS Protocol option, 247

Network Interface Card, 13

Nibble mode, 284

NIC and FTP, downloading software, 270

NIC, downloading software, 269

NL at MPP+1 option, 210

NON VOLATILE MEMORY FAILED fault message, 323

Notches, 56

Null Handling option, 210

Null Suppression option (Coax, TN3270), 210

Null Suppression option (IPDS), 210

Num Auto Labels option, 118

O

OCR-A Chars. option, 147

OCR-B Chars. option, 147

Offline mode, 27

Offline Process option, 232, 240, 248

One Char Enquiry option, 239

Online Auto-Cal option, 132

Online barcode validator, 14

Online data validator, 341

Online mode, 27

Online signal, Centronics parallel interface, 283

Online Status indicator, 23

Operating modes, 27

Operation Mode option, 253

Operation of FILE_IO command, 368

Optimize&Reboot option, 144

Optimized Ratio option, 210

OPTION NOT INSTALLED fault message, 324

Optional features, 13

Optional host interfaces, 281

Options
 dual NIC, 342
 fonts, 13
 hardware, 341
 internal label rewinder, 13
 internal rewinder, 341
 IPDS, 13
 media cutter, 13, 341
 media cutter tray, 13, 341
 memory expansion (for non-IPDS printers only), 13
 network interface card, 13
 NIC, 13
 online barcode validator, 14, 341
 PPI/TGL, 12
 PPI/ZGL, 12
 printer, 341
 TN5250/TN3270, 14
 twinax/coax host interface, 13

Orientation option, 100, 112
OVERALL GRADE FAIL fault message, 324
Overstrike option, 210
Overwrite Files option, 143

P

P/S MISMATCH fault message, 327
PA1 option, 211
PA2 option, 211
PAA option, 137
PAA Select Tool option, 103
Page Mem Adjust option, 145
Page Rotation option, 211
Paper Empty (PE) signal, Centronics parallel interface, 283
Paper Feed Shift option, 97, 110
Paper Instruction (PI) signal, Centronics interface, 283
PAPER OUT Load Paper fault message, 325
Paper Out Sensor option, 130
Paper Out Thresh option, 130
PAPER OUT TIMEOUT fault message, 326
Paper path
 installing, 43
 removing, 51
Parallel interfaces, Centronics, 282
PARALLEL PORT
 menu, 229
 submenus, 230
Parallel Port, downloading software, 267
PARITY ERROR fault message, 326
Parity option, 234
PDF Size Comp option, 211
Peel Present option, 123 Peel-Off option, 124
Peel-Off, media handling, 28
PGL, 151
PGL Normal option, 211
PGL SETUP menu, 168
Physical dimensions, 339
PI Ignored option, 230
PI Slew Range option, 211
Pin assignments, Centronics parallel interface, 282

PJL Control option, 145
Platen Label Wrap, 306
Platen Roller, cleaning, 70
PLEASE WAIT fault message, 326
PNE, 12
PNE Port Number option, 262
PNE Port option, 262
PNE Port Timeout option, 262
Poll Character option, 238
Poll Response option, 238
POOR SCANNING Check Head&Heat fault message, 326
POOR SCANNING Inspect head fault message, 326
POR option, 241
Port Type option (C/T Port), 241
Port Type option (Parallel Port), 230
Port Type option (Serial), 234
Position Aft FF option, 212
Positioning the media sensor, 54
Power consumption, 338
Power Mgmt option, 254
Power on IGP/PGL option, 212
Power On Reset option, 241
POWER SAVER MODE fault message, 326
Power Saver Time option, 141
Power source and grounding, 338
Power switch, 23
Powering on the printer, 27
Power-on, 27
Power-up ^F option, 212 Power-up ^PY option, 212 Power-up ^X option, 212
Power-Up Config. option, 103, 105
Power-up configuration, specifying, 78
Power-up State option, 141
PPI/TGL, 12
PPI/ZGL, 12
Preamble option, 254
Pre-Peel Adjust option, 120
Pre-Peel Mode option, 120
Primary Subset option, 212
Prime Signal option (Parallel Port), 231

Print Char. Set option, 213
 Print Config. option, 105
 Print Direction option, 118
 Print Error Log option, 227
 Print File List option, 144
 PRINT HEAD COLD See Manual fault message, 327
 PRINT HEAD HOT fault message, 327
 PRINT HEAD UP Close Print Head fault message, 327
 Print Intensity option, 96, 108
 Print Mode option, 97, 109
 Print quality, 294
 Print Speed option, 96, 109
 Printer
 alarms, 308
 changing settings, 75
 configuration parameters, 73
 dynamic print control, 15
 installation, 19
 interfaces, 281
 model specifications, 11
 options, 341
 printer tests, 226
 printhead replacement, 296
 problems and solutions, 300 self-test, 291
 set-up, 17
 the printing process, 14
 warranty, 393
 PRINTER CONTROL
 menu, 135
 submenus, 137
 PRINTER HOT fault message, 327
 PRINTER MGMT, 262
 submenus, 262
 Printer PI option, 213
 Printer Select option, 213
 Printer Status option, 239
 Printer tests
 auto calibrate, 226
 barcode demo, 226
 checkerboard, 226
 combo test, 226
 current config., 226
 Ethernet test page, 226
 grey, 226
 grid, 226
 left test, 226
 right test, 226
 validator report, 226
 Printer Tests option, 226
 PRINTER UNDER REMOTE CONTROL fault message, 327
 Printhead
 determining wear, 295
 pressure adjustment, 52
 pressure block adjustments, 53
 replacement, 296
 Printhead pressure adjustment, 52
 Printhead pressure block adjustments, 53
 Printhead, cleaning, 69
 Printing
 a configuration, 81
 adjustments, 52
 specifications, 333
 test labels, 291
 PrintNet Enterprise Suite, 12
 Printronix media, 345
 Printronix Windows Driver, 276
 Printronix Windows Driver, downloading software, 273
 Processing time, improving, 292
 Prop Line Length option, 213
 Prop. Spacing option, 213
 Protect Configs. option, 105
 PSeries Dbl High option, 213
 Ptr Media Dist option, 228
 Ptr On Time option, 227
 PTX Setup Parse option, 145
 PTX Setup SFCC option, 141
 PTX_SETUP, 279
 PTX_SETUP commands, 361
 general, 362
 PTX_SETUP Commands, overview, 361
 Pwr Save Control option, 141

PWR SUPPLY HOT fault message, 328

Pwr Up Action option, 131

Q

QUICK SETUP

menu, 95

submenus, 96

R

Rbn Takeup Full option, 122

RBN TAKEUP FULL Remove Used Rbn fault message, 328

Rcv. Status Port option, 142

Real time clock, 341

Received Data (RD) signal

RS-232 serial interface, 288

RS-422 serial interface, 288

Remove Label fault message, 328

Removing media from the rewinder, 47

Removing the media guide, 51

Renew Life (SEC) option, 259

Renew Life Units option, 259

Repeat Form Opt option, 214

Repeat Form option, 214

Report Status option (C/T Port), 241

Report Status option (Parallel Port), 231

Report Status option (Serial), 237

Request To Send (RTS) signal, RS-232 serial interface, 288

Request to Send option, 238

Reset Cfg Names option, 106

Reset Cmd CFG Ld option, 214

Reset EAP Pswd, WLAN EAP menu, 261

Reset EAP User, WLAN EAP menu, 261

Reset Head Data option, 228

Reset Kerb. Pwd option, 258

Reset SSID Name option, 254

Reset WEP Keys option, 256

Reset WPA P-Phs option, 256

RESETTING PLEASE WAIT fault message, 328

Resident Fonts option, 214

Resp. Polarity option, 232

RESTORING BOOT CODE fault message, 328

Ret. Status Port option, 142, 214

Rewinder, 13, 341

removing printed media from, 47

using, 43

RFID MP2 Encoder option, 14

RFID Tag Types, 359

Ribbon, 17

loading, 28, 40

Printronix, 344

Ribbon 8300, 344

Ribbon 8500, 344

Ribbon 8550, 344

Ribbon 8600, 344

Ribbon 8700, 344

Ribbon 8770, 344

specifications, 336

RIBBON BROKEN Reload Ribbon fault message, 329

Ribbon Calibrate option, 126

RIBBON FAULT Timeout fault message, 329

RIBBON LOAD BAD Reload Ribbon fault message, 329

Ribbon Low fault message, 329

Ribbon Low option, 122

RIBBON OUT Load Ribbon fault message, 329

Ribbon specifications, 336

Ribbon Width option, 122

Right Margin option, 215

Right pressure block, 53

Roll media, 29

Rot. Char Size option, 215 RS-232 serial interface

Clear To Send (CTS), 288

Data Carrier Detect (DCD), 288

Data Set Ready (DSR), 288

Received Data (RD), 288

Request To Send (RTS), 288

Transmitted Data (TD), 288

RS-422 option, 14, 343

RS-422 serial interface

received data (RD), 288

transmitted data (TD), 288

Running auto calibrate, 60
Running manual calibrate, 66
Running media profile, 62

S

Save Char to Fls option, 143
Save Config. option, 103, 105
Save Set to Flsh option, 143
Save, auto, 77
Saving new configurations, 76
Scalable Size option, 215
SCS Buffer Cntrl option, 215
SECURITY CODE VIOLATION fault message, 329
SECURITY VIOLATION fault message, 329
Select Char option, 215
Select CPI option, 215
Select LPI option, 216
Select SFCC option, 216
Select SFCC option (PGL), 216
Select SFCC option (P-Series), 216
Select SO Char option, 217
Selecting a menu option, 74
Self-test, printer, 291
Sensed Distance option, 129
Sensing different media types, 59
SERIAL PORT
 menu, 233
 submenus, 234
Serial Port, downloading software, 266
Series1 1 Char, 235
Series1 2 Char, 236
Set Label Length option, 123
Set Lock Key option, 144
Set Text Orientn option, 217
Setting printer configuration parameters, 73
Setting up the printer, 17
SFCC Char option (SPC Coax, SPC Twinax), 217
SFCC d command option, 217
Signal Strength option, 253
Signals, Centronics parallel interface, 283
Simple Protocol Converter, 138, 150
Skip Cmd Prefix option, 218
Slash 0 option, 218

Slashed Zero option, 218
Slew Relative option, 218
Slew Speed option, 118
SMT option, 137
SMT Status option, 103
Software Build option, 227
SOFTWARE ERROR Recycle Power fault message, 330
Software handshaking, 292
Software, downloading, 265
Solving printer problems, 300
SPC, 150
SPC Char Set option, 218
SPC COAX SETUP menu, 158
SPC Null Supp option, 218
SPC TWINAX SETUP menu, 159
SPC Type option (SPC Coax Setup), 219
SPC Type option (SPC Twinax Setup), 219
Specifications, 333
 acoustic noise levels, 339
 cutter, 337
 environmental information, 339
 host interface, 338
 indicators and switches, 336
 media, 334
 media dimensions, 335
 memory, 336
 physical dimensions, 339
 power, 338
 power consumption, 338
 printer model, 11
 printing, 333
 ribbon, 336
Specifying a power-up configuration, 78
Speed Exceeds Validator Limit fault message, 330
SSID Name option, 254
Standard C/T Interface, 150
Standard Chars. option, 147
Standard features, 12
Standard host interfaces, 281
Standard Sets option, 219
Status and Display Indicators matrix, 24
Status indicators, 24

Status Port Numb option, 262
Stop Bits option, 234
Subnet Mask option, 245, 250
Summary, CONFIG command, 367
Supplies Department, 371
Supported RFID Tag Types, 359
Switch Out On option, 231, 243

T

Tag Types, RFID, 359
Tall Characters option, 147
Tckt Life (SEC) option, 259
Tckt Life Units option, 258
Tear-Off strip, media handling, 27
Tear-Off, media handling, 27
Technical support, 371
Test Count option, 226
Test labels, printing, 291
TESTING HARDWARE PLEASE WAIT fault message, 330
Text Length option, 219
Text Position option, 219
Thermal consumables, 16
Thermal printer series product line, 11
Thermal printer technology, 14
Thermal transfer printing, 14
Thermal transfer ribbons, 344
Threshold Range option, 134
Ticket Save Mode option, 125
Time processing, improving, 292
Timeout option
 (C/T Port), 241
 (ETHERNET Port), 243
 (USB Port), 242
Timeout option (Parallel Port), 231
Timeout option (Serial), 237
TN3270 SETUP menu, 164
TN5250 SETUP menu, 166
TN5250/TN3270, 14
TOF Adjust Mode option, 126
TOF Adjust option, 126
TOF Detect Fault option, 125
Top Margin option, 220

Translate Table option, 220
Translation Tbl option (Coax), 220
Translation Tbl option (SPC Coax), 220
Translation Tbl option (SPC Twinax), 220
Translation Tbl option (TN3270, TN5250, Twinax), 221
Transmit Power option, 255
Transmitted Data (TD) signal
 RS-232 serial interface, 288
 RS-422 serial interface, 288
Trickle Time (Serial) option, 237
Trickle Time option (Parallel Port), 231
Troubleshooting, 291
 control panel, 300
 Fault Message Troubleshooting Table, 309
 fault messages, 308
 LCD Messages, 309
 power failures, 301
 print quality, 302
 printer operation, 305
 printer problems and solutions, 300
 ribbon, 307
True Vert 1/10 option, 221
TrueType Fonts, 275
TrueType Fonts, Downloaded, 280
Trunc Dyn Data option, 221
Truncate Alpha option, 221
TWINAX SETUP menu, 156
Twinax Type option, 221
Twinax/coax host interface, 13
Typeface option, 221

U

Unicode, 193
Uniform Fonts option, 222
Units option, 123
Unpacking the printer, 17
Unscannable xx Missing Codes fault message, 330
UPC Descenders option (PGL), 222
UPC Descenders option (VGL), 222
Upr. Case Select option, 222
USB, 289
USB PORT, 242

USB Port, downloading software, 272

Use Label Length option, 134

User-Def Ratio option, 222

User-Defined St1 (Start Code 1) option, 223

User-Defined St2 (Start Code 2) option, 223

User-Defined Stp (Stop Code) option, 223

Using Downloaded TrueType Fonts, 280

Using the internal rewinder, 43

UTF-8, 193

V

Validator Funct. option, 103

Validator not communicating fault message, 331

Var Form Adjust option, 223

Var Form Type option, 223

Ver Image Shift option, 99, 111

VGL, 152

VGL SETUP menu, 170

View File List option, 143

VPA Check option, 223

W

WAITING FOR PROGRAM DOWNLOAD fault message, 331

Warranty information, 393

WEP Key BYTE1 through BYTE13 option, 255

WEP Key Format option, 255

WEP Key Width option, 255

Width Limit option, 224

Windows Driver, 276

WIRELESS ADAPTER NOT COMPATIBLE fault message, 331

Wireless Ethernet, 289

WLAN ADDRESS

menu, 249

submenus, 250

WLAN EAP

menu, 260

WLAN EAP menu

EAP Mode, 260

EAP Pswd (01-15), 261

EAP Pswd (16-30), 261

EAP User (01-15), 260

EAP User (16-30), 260

EAP User (31-32), 260

Reset EAP Pswd, 261

Reset EAP User, 261

WLAN PARAMS

menu, 251

submenus, 253

Word Length option, 234

WPA Cipher option, 256

WPA Mode option, 256

WPA P-Phs option, 256

X

XON / XOFF, 235

xxx Diagnostics option, 140

Y

Year option, 263



254590-001J