Panasonic KX-UT13X KX-UT123, KX-UT133 & KX-UT136 Admin Guide





How To Find IP Address and MAC Address

Quick Steps

1. Press the "Setting" button.



2. Select "Information Display".



3. Scroll down to see either the IP address or the MAC address.



How To Set the Configuration Server

Quick Steps

1. Log into the Web Admin GUI of the phone.

?	Authentication Required
	A username and password are being requested by http://10.4.0.152. The site says: "Authorization"
User Name:	[
Password:	
	Cancel OK

2. Select the "Maintenance" tab at the top right.

Panasonic KX-UT136 Status Network System VolP Telephone Maintenance **Version Information** Web Port Close Version Information Status KX-TGP550T04 Model Operating BANK Bank2 IPL Version 01.02 Bank1: 12.12 Firmware Version Bank2: 12.12

3. Next select "Provisioning Maintenance".

Panasonic											
KX-UT136	Status	Network	System	VolP	Telephone	Maintenance					
Web Port Close	Provisioning Maintenance										
Maintenance	Provisioning Maintenance										
Firmware Maintenance	Enable	Provisioning	⊙ Yes ⊖ N	0							
Provisioning Maintenance Reset to Defaults	Standar	d File URL	http://10.10.0.1:2004/Config{MAC}.cfg								
Restart	Product File URL										
	Master File URL										
	Cyclic Auto Resync O Yes No										
	Resync	Resync Interval 10080 minute(s) [1-40320]									
	Save Cancel										

4. You can now specify the provisioning server information. In our example we are using tftp://10.10.0.1/Config{MAC}.cfg (*Reference the screen above*).

How To Factory Default

Quick Steps

1. Log into the Web Admin GUI of the phone

?	Authentication Required A username and password are being requested by http://10.4.0.152. The site says: "Authorization"								
User Name: Password:									
	Cancel OK								

2. Next select the "Maintenance" tab at the top right.

Panasonic										
KX-UT136	Status	Network	System	VolP	Telephone	Maintenance				
Web Port Close	Version Information									
Status	Version Information									
Version Information	Model			KX-TG	KX-TGP550T04					
Network Status VoIP Status	Operati	ng BANK		Bank2	Bank2					
	IPL Ver	sion		01.02	01.02					
				Bank1	Bank1: 12.12					
	Firmware Version			Bank2	Bank2: 12.12					

3. Now select "Reset to Defaults" on the left navigation menu.

Panasonic											
KX-UT136	Status	Network	System	VoIP	Telephone	Maintenance					
Web Port Close		Provisioning Maintenance									
Maintenance	Provision	Provisioning Maintenance									
Firmware Maintenance	Enable	Provisioning	💿 Yes 🔾 N	0							
Provisioning Maintenance Reset to Defaults	Standar	d File URL	http://10.10.0.1:2004/Config{MAC}.cfg								
Restart	Product File URL										
	Master File URL										
	Cyclic Auto Resync Yes • No Resync Interval 10080										
	Header Resync	Value for Event	check-syn	ic]						
	Save Cancel										

4. Finally click the "Reset Web Settings" button to complete the reset.

Panasonic							
KX-UT136	Status	Network	System	VoIP	Telephone	Maintenance	
Web Port Close			Res	et to D	efaults		
Maintenance	Reset Web	Data					
Firmware Maintenance Provisioning Maintenance	The Web	data for this	unit will be re	eset to it's	default values v	vhen you click [Res	set Web Settings].
Reset to Defaults Restart			Re	set Web S	Settings		



(920) 886-8130

http://schmoozecom.com