



AGEAGLE RX60 MODEL AGERGBL915 USER MANUAL

Rev. 12 (8/26/2016)
REDLINE V10/27/16



Introduction












Using This Manual

Legend



Disclaimer

READ THE ENTIRE USER MANUAL BEFORE FIRST FLIGHT
Operator Assumes All Responsibility for Safe Operation

-  Never fly within 5 miles of any airport or airstrip without authorization.
-  Do not allow children near the aircraft or launcher.
-  Never fly where any aerial operations or planes are flying.
-  Never fly over populated areas or busy roadways.
-  Never fly over or near wind turbines.
-  Never allow RX60 to fly beyond line of sight.
-  Keep children away from aircraft launcher.
-  Never stand near or to the side of rotating propeller.
-  Never leave launcher armed without the safety pin installed.

OBEY ALL FEDERAL AND LOCAL REGULATIONS

Always do a thorough preflight to ensure everything is ready for flight
Obtain proper FAA credentials
Follow FAA Guidelines

PLEASE VISIT RAVENHELP.COM FOR THE NEWEST UPDATES TO THE USER MANUAL

Limitations of Current Technology

It is important that AgEagle customers realize there are some limitations of the current aerial mapping technology. To understand this it is helpful to have a basic knowledge of how the software utilizes hundreds of individual images to create one mosaic.

To assemble aerial maps from a collection of separate images, large portions of each image must overlap each other. Within the overlapping area, the computer identifies unique points, which it uses to align the images. Like a big puzzle, the computer assembles the images by looking for unique features and patterns to help align the images. Such features might include a road, a large tree, a patch of weeds, or an area where the crop is missing.

Early in the crop life cycle, when bare ground can still be seen between the rows, there are many more unique points which make processing (stitching) simple and fast. However as some crops mature, the canopy of the plants cover the ground when viewed from above, making the stitching process slow and difficult. In fact, it is possible that in a large field of mature corn that the current technology may not stitch an image mosaic at all. To be clear, this is not a new problem. Photogrammetrists have had to deal with the same problem when handling imagery depicting large bodies of water for quite some time now; and frankly a gentle breeze blowing over a tall canopy can turn the field into a “sea of crops” where the mosaic process is concerned. Fortunately, most of the benefits from aerial imaging can be realized early in the season when crops benefit the most from precision applied nutrients, or when crop scouting for weeds, insects, or disease is most important.

As a customer, it is important to understand that you may not always get the ideal aerial image with the current technology. Sometimes the images are so homogenous that you may not get an aerial map at all or it may take several hours to process it or it will be a less desirable tiled map.

AgEagle realizes that this technology is going to continue to improve. When it does, AgEagle will do everything in our power to provide a way to upgrade your system, but whether or not that is possible will depend on the emerging technology.

We do not know what the future holds, nor do we know what the associated costs will be, but rest assured that we want you to realize value from the technologies.

In the meantime, there are some things you can do to minimize error and improve overall stitching success.

- Pay attention to details by following the checklists
- Fly with more overlap of narrower paths
- Fly at a higher altitude
- Fly during optimal conditions (completely clear or completely overcast, non-variable winds, etc.)



It is important to understand and appreciate that the AgEagle is an aircraft that requires extreme attention to details. Just like anything that flies, checklists must be followed and small details must be checked to ensure that the AgEagle is ready and safe to fly. If you forget just one thing in the checklist, or think that “close enough is good enough”, it is likely that the aircraft will crash and destroy itself as well as the payload. It is your responsibility to make sure every flight is successful. Failing to do proper preflight inspections and carefully following the checklist will likely result in catastrophic damage.

Typically the AgEagle RX60 will fly for 45 minutes with standard batteries. The acres that it can cover within the 45 minutes are affected by the path width (spacing), wind, battery conditions, and the altitude at which you choose to fly. When flying at 400 feet above the ground in no winds at 80% side overlap typically 300 acres can be covered. You should plan on around 250 acres per flight.

AgEagle ensures that your aircraft is free of any manufacturing defects because each aircraft is flight tested at our factory and it is test flown again upon the training and delivery to our each of our customers. AgEagle claims no warranty. Most damage can be corrected with gorilla glue and tape. It is rare that an aircraft is damaged beyond repair ability.

It is the operator’s responsibility to do a complete and thorough preflight inspection of each component. Just like a pilot of a manned aircraft, it is the pilot in command to ensure the drone is flight worthy. If anything about the drone does not look right, it should not be flown. “Good enough” is not good enough! Everything must be right for safe trouble free operations.

Only the person who has received training from AgEagle or an authorized dealer is authorized to operate the AgEagle. If additional people need to be trained, contact your AgEagle dealer or AgEagle directly to learn more about the cost to train more operators. Lastly, each person operating the AgEagle must have the appropriate credentials from the FAA. To learn about obtaining an FAA part 107-certification visit <http://www.faa.gov/uas/>.



Acknowledgements

At AgEagle, we want to give acknowledgements to the open-source hardware and web communities that have helped answer and create the AgEagle RX60.

We would like to thank these companies and web communities:

- 3DRobotics
- Botlink
- Ardupilot Open Source Community

All ideas and implementations for the AgEagle RX60 were created by employees at AgEagle. Issues relating to the system were accessed by AgEagle, and resolved using web community forums and ideas.

Our products and ideas are created and maintained solely by employees at AgEagle Aerial Systems.

Contents

Introduction	1
Using This Manual	2
Legend.....	2
Disclaimer.....	2
Limitations of Current Technology	3
Acknowledgements	5
Product Overview	8
Aircraft	9
Included in the Box.....	9
Key Features.....	10
Overview.....	11
Hardware.....	11
Recommended Spare Parts List.....	11
Recommended System Maintenance.....	12
Handheld Flight Controller	13
Overview.....	13
Controls and Operation.....	13
Flight	15
Operational Flying Conditions.....	16
Flight Limits and No Fly Zone.....	16
Initial Setup & Calibration.....	17
Takeoff & Flight.....	20
Landing.....	21
Post-Flight.....	22
Pre-flight Procedures & Checklist.....	24
Botlink	26
User Interface.....	27
Online Botlink XRD Registration.....	28
Updating Your Botlink XRD.....	29
Botlink First Flight.....	30
Binding Cameras.....	41
Tips for Binding the GoPro to your RX60.....	42
Saving Maptiles (Prefetching Maps).....	43
Uploading Offline Flight Images.....	45
Registering Your AgEagle RX60 for its First Flight.....	46
USB Connection.....	47



__ Managing Maps after Flight	48
__ Downloading Maps after Flight	50
Additional Information	51
__ Overlap and Sidelap	52
__ Tablet (Android Device)	53
__ Camera.....	54
__ Lens Cleaning	54
__ Charging.....	54
__ Additional Information	54
__ Charging	55
__ Camera.....	55
__ Aircraft LiPo Batteries	55
__ Handheld Flight Controller	56
__ Launcher.....	57
__ Quick Setup Guide	57
__ Rail.....	57
__ Carriage.....	57
__ Bungee Cords	59
__ Specifications Sheet.....	60
Troubleshooting Guide	62
__ FAQ.....	63
__ Emergency Landing Procedures.....	65
__ RX60 Wing.....	65
__ Launcher.....	67
__ Charger and Batteries.....	68
Index.....	69



Product Overview



Aircraft

Included in the Box

RX60 Flying Wing




Taranis RC Radio



Aircraft Launcher



**GoPro Camera Modified for Measuring
Crop Health
(Near-Infrared)**

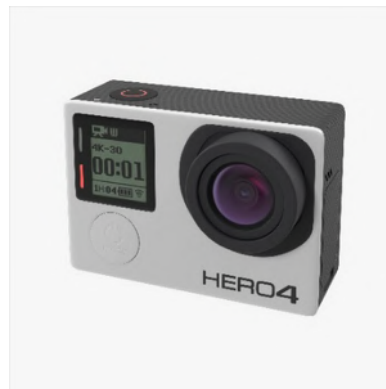


Ground Support Equipment



Key Features

- Strong Carbon Fiber Reinforcement
 - Carbon fiber infused and incased airframe.
 - This provides the end user with a more rugged and durable system.
- Automatic Flight
 - From launching to landing, the entire time the aircraft is in the air there is no need for pilot control inputs!
- Easy-to-Use Flight Planning
 - Simply click around the field your wish to fly and the scan pattern is automatically created. You can adjust for altitude, path width and other details quickly and easily.
- Easy post flight processing
 - After the flight, simply allow the images to transfer from the camera to the XRD and be combined with inertial data for each image. The image files and JSON logs can be uploaded to the Botlink processing server for hassle free aerial map creation.

Overview

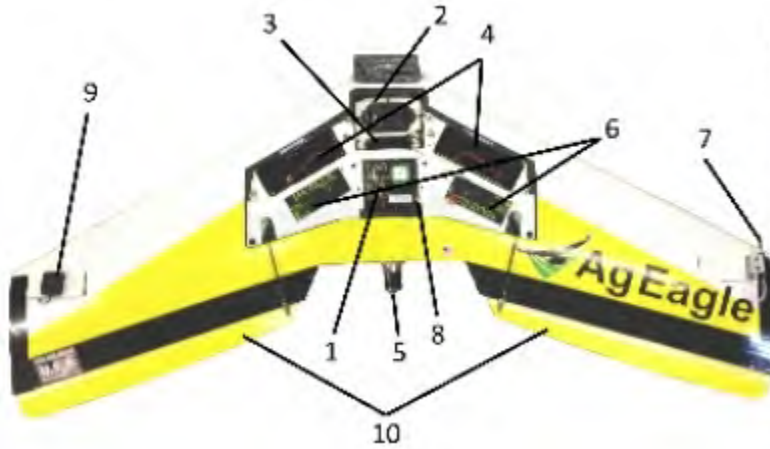

AgEagle RX60 Components	
1	Autopilot
2	GoPro NIR Camera
3	Botlink Module
4	Li-Po Batteries
5	Motor
6	Patch Cell Antennas
7	Airspeed Indicator (Pitot Tube)
8	RC Receiver
9	GPS Receiver
10	Elevons


Hardware

Autopilot



- Advanced autopilot system based on the PX4 open-hardware project.
- Records flight information on removable SD card.

GoPro NIR Camera

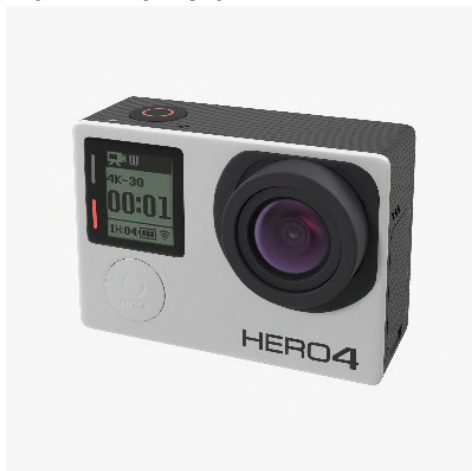

- Modified to allow infrared photos to be taken.
- Provides a stable photography platform and high quality images.

GPS Receiver






- High accuracy GPS antenna.
- Provides location-based signal to the autopilot to ensure that the mission plan is being correctly followed.

Botlink Module



- Manages flight data, aerial imagery and pilot controls

Airspeed Indicator

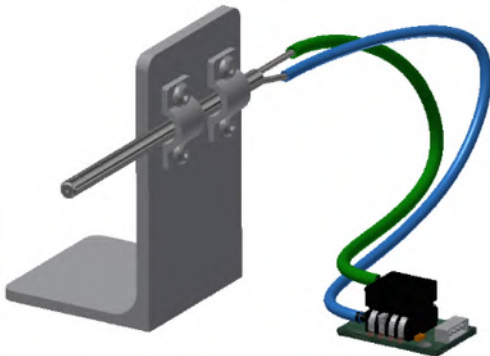

- Provides autopilot with airspeed readings.
- Critical component for accurate autopilot tracking and flight.

2 x Batteries



- 5500 mAh capacity
- 14.8V 10C
- Four Cell
- You must use the batteries sold from your Raven dealer. (Do not use the 3300 cell batteries from previous AgEagle system)

Patch Antennas



Patch antennas (currently not used)

NOT PICTURED IN DIAGRAM

Servos



- Actuates the control surfaces to control aircraft.
- Top quality servos to ensure reliability and longevity.

Electronic Speed Controller (ESC)



- Used to control the power that is sent to the motor.
- Communicates to the autopilot system to accurately control propeller RPMs.

Recommended Spare Parts List

Here's a list of recommended spare parts:

- Propeller (12 x 6, included in your ground support kit)
- Propeller Collet (included in your ground support kit)
- 2" Ext Launcher Springs (can be ordered from Raven)
- Lipo Battery Checker (included in your ground support kit)
- Socket Head Cap Screws M3 x 8
- Nylon Washer (included in your ground support kit)
- Pitot Tube Cleaner Assembly (included in your ground support kit)
- Winglets (extras can be ordered from Raven)
- Screw Driver Set (included in your ground support kit)
- Ball Wrench 2.4 mm (included in your ground support kit)
- Camera Lens Cleaning Kit (included in your ground support kit)
- Operators Manual (included in your ground support kit)


Recommended System Maintenance

This list describes the checks that should be done regularly to your system. Failing to do these checks and keeping the system maintained can result in system failure.

It is the drone operator's responsibility to conduct a thorough preflight of each component for a successful flight

Check Daily:

- Ensure antenna on Taranis Radio Controller is at a 90 degree angle for best connection range
- Check winglets for security with nylon screws
- Always use fully charged batteries
- Check Pitot tube (airspeed tube) for any obstructions/mud or pinched/damaged tubing. This is done by looking down the Pitot tube. If clear, you should be able to see light

 ***NEVER*** blow into the pitot tube to clear obstructions! This can damage the sensor beyond repair and result in aircraft failure.

- Pull servo control rods to ensure good connection to servo and elevon
- Check security of motor mounting
- Check propeller to ensure it is securely fastened. The writing on the propeller should be facing the aircraft. Make sure no debris (mud, dirt, etc.) is stuck to the prop
- Confirm GPS is securely attached
- Check aircraft for any damage from previous flights
- Check elevons to ensure they have full range of motion. (Do not move the elevons rapidly)
- Check nose bumper for security
- Check camera lens for cleanliness
- Check launcher lugs on bottom of aircraft to ensure they are securely attached
- Check winglet thumbscrews. Ensure they are tight and don't pull out
- Check pitot tube stand for security
- Check tubing to pitot for cuts or pinches
- Check connection between the camera and the Botlink XRD
- Check launcher carriage, ensure it is properly sliding on rail

Check Yearly:


- Change motor every 8,000 acres flown
- Replace batteries with any sign of damage



Handheld Flight Controller

Overview

The FrSky Taranis X9D is a radio transmitter used to control the aircraft. The primary purpose is to set up the aircraft and provide a means for manual control if needed. The majority of flying is done from the autopilot and will only require active use of the radio during set-up and takeoff, as well as flaring the aircraft during landing.

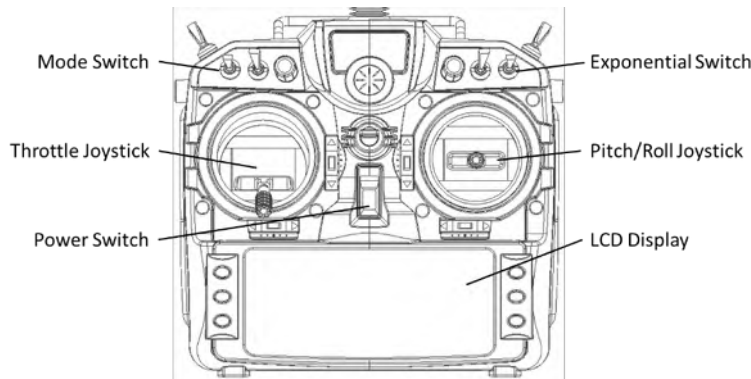

Please make note of the neutral positions of the joysticks. The throttle (left) joystick is zeroed at the lowest centered position. While the pitch/roll (right) joystick is zeroed at the center position.


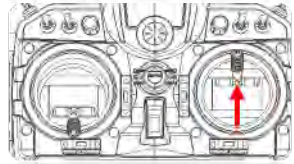

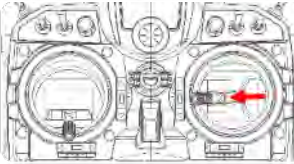


The throttle joystick does not automatically reset the forward/backward position while the pitch/roll joystick will automatically center.

Controls and Operation

Left Stick Operation		
Movement Direction	Input	Aircraft Response
	Throttle 100%	Propeller Rotates
	Throttle 0%	Propeller Stops
	Fully Arming Position	Long Tone *when successful

Right Stick Operation

Movement Direction	Input	Aircraft Response
	Pitch Up	Both Elevons Up
	Pitch Down	Both Elevons Down
	Roll Right	Right Elevon Up Left Elevon Down
	Roll Left	Right Elevon Down Left Elevon Up

Switch Operation

Switch Position	Left Switch (Mode Switch)	Right Switch (Exponential Switch)
Top	Manual (FBWA)	High Control Response
Middle	RTL	Moderate Control Response
Down	Auto	Mild Control Response



The trim switches are active on the controller. **NEVER** press on the trim switches (The trim switches can be confirmed to be centered by observing the (-) on the LCD display of the Taranis. If the dot is not centered in the middle of the () move the trim switch until it is centered in the (). Do NOT fly if the trim switches have been changed from center.

Flight

Operational Flying Conditions

- Avoid flying in adverse weather conditions including rain, sleet, snow, fog and wind conditions exceeding 30 mph.
- Only fly in open areas with no obstacles or obstructions.
- Avoid flying near large structures; large metal buildings may have an adverse effect on the onboard compass.
- Never fly over populated areas or busy roadways.
- Avoid flying close to electromagnetic producing devices (i.e. radio towers, cell towers, etc.)
- Avoid launching downwind of trees or buildings as severe turbulence may be encountered.

Flight Limits and No Fly Zone

RX60 operators should follow all regulations set forth by aviation regulation organizations such as the Federal Aviation Administration (FAA), International Civil Aviation Organization, Transport Canada and local aviation authorities. Please research local laws and/or regulations to ensure you are flying legally.

Initial Setup & Calibration

Pre-Arming Sequences

It is the drone operator's responsibility to conduct a thorough preflight of each component for a successful flight

1. Setup launcher and aim into the wind, and install the launcher legs
2. Arm and lock the trolley into the launch position and install the safety pin.



*The amount of bungee cords needed for launch may vary depending on wind speed. On average, 6-8 should be sufficient while **higher** wind speeds may require **fewer** bungees.*



The bungee cords may lose some strength over time due to heat and sunlight degradation. Replace launcher bungees yearly.

3. Install winglets and fully charged batteries.



Inspect each battery. If damaged or puffy, DO NOT FLY! Replace with new battery. See the [Charger and Batteries](#) section for further details.

4. Check elevons to ensure they have full range of motion. Do not move the elevons rapidly.
5. Check Pitot tube (airspeed tube) for any obstructions/mud or pinched/damaged tubing. This is done by looking down the Pitot tube. If clear, you should be able to see light through the Pitot tube. If plugged, pull off tubes before cleaning with Pitot tube rod included in the ground support kit.



***NEVER** blow into the pitot tube to clear obstructions! This can damage the sensor beyond repair and result in aircraft failure.*



The plastic pitot tube connected to the center port of the metal pitot tube must be connected to the top port of the airspeed sensor

6. Pull servo control rods to ensure good connection to servo and elevon
7. Ensure the servos are securely attached to the wing and not loose
8. Place aircraft on level surface on ground. Leave the aircraft in this position until the Takeoff section is reached.



Do not place the aircraft on launcher at this time!

9. Make sure the micro-SD card is inserted in the XRD (The maximum SD card that can be installed in the XRD is 32GB). Turn on the aircraft using the power plug. This will start the calibration procedures, it's important that the aircraft is not disturbed during this process.



*Do not disturb aircraft during calibration process! Wait at least **45 seconds** before pre-arming the aircraft.*

10. Turn on the GoPro camera. Press and hold the side wrench button to turn on the camera's Wi-Fi. The camera will blink blue when Wi-Fi is on.
11. The camera during this process should make 1 chirp, then 3-5 seconds later make 5 chirps. (About one minute after turning the aircraft on). This ensures the camera is wirelessly connected to the Botlink Co-Pilot. (Do not proceed to the next step until the camera is confirmed to be connected)
12. Turn on Taranis Radio Controller, and confirm setting is in MANUAL with the throttle (left stick down) at the bottom.



Aircraft propeller may turn on if the aircraft senses movement and the Taranis is in AUTO. For safety, make sure Taranis is in MANUAL with the throttle down.

13. Press and hold the pre-arm button on aircraft until it shows a solid red light.



When all pre-arming conditions are met, you will hear a "happy" tone (3 tone) from the autopilot.

Pre-Arming Conditions

- Barometer Calibrated
- Compass Calibrated
- GPS Lock
- INS Calibration Complete
- Parameter Checks
- Airspeed Sensor Functioning

14. Immediately after the "happy" tone is heard, move the left control stick of the flight controller to the lower right corner.



***NEVER** allow the left stick to be pushed forward during the pre-arming sequences. This can cause the propeller to start spinning unknowingly.*



Wait until a long solid tone is emitted from the Autopilot. This will indicate that the aircraft is FULLY ARMED.

15. As soon as the long solid tone is emitted press and hold the pre-arm button until it starts flashing, this will indicate that the aircraft is calibrated but disarmed.

Mission Planning

16. Open the Botlink application.



*If this is your first time flying, go to the section **Botlink First Flight (Page 30)***

17. Press the 3 line **Menu** button in the upper left corner

18. Press **Connect To Drone** and connect to your aircraft

18.1. If you are flying over telemetry radios, select the drone profile that is set up with the telemetry connection (Example name: USB001)

19. Press the **Menu** button and select **Missions**. In the lower right hand corner, press the plus button and select the **Survey** option

20. Pan to the field that you would like to survey and press **Place Your Survey**

21. Move the area to fit your field, and set the **Altitude** and **Overlap**. You may also name your mission

21.1. Read the Overlap and Sidelap portion of the manual for any questions concerning how much overlap you need

22. Once you are satisfied with the flight area, press **Save** in the upper right corner to save your mission

23. Select the mission you just created, and press the Upload to Drone button (lower right hand corner, image of a plane taking off)

Sensor Calibration

24. The first preflight calibration on Botlink is to set the wind direction. Slide the slider in the upper right hand corner to **Manual**, and select on the compass where the wind is coming FROM. Press **Next** when complete.

25. Follow the instructions on the screen and run the airspeed calibration. After pressing the “start airspeed calibration” cup your hands over the Pitot tube to protect it from the wind. Do not hold your finger over the end of the Pitot tube. Press **Next** when complete.



Make sure shown airspeed is fluctuating between 2-7 mph after calibration.

The Botlink application will tell you if the calibration is a success (If the airspeed is not fluctuating between 2-5 mph do not fly! There may be an obstruction in the pitot tube. Flying with an obstructed pitot tube will cause a crash)

26. Next step is to choose your camera. Select your camera profile from the drop down menu. If your camera is already connected, it should be already selected in the drop down menu. Press **Next** when complete.

27. Press the **Next** button, (we don't test the motor on the aircraft using the Botlink app for skip this step)

28. Aim your aircraft for takeoff and press **Next**.

29. Set the loiter area and the landing area. Make sure you land into the wind.



The landing sequence will be added once the survey has been finalized. Make sure to plan your landing with enough room in case of adverse flight conditions. The planning purposes the distance between the center of the loiter to the desired landing location can be set from a minimum of 600 feet to a maximum distance of 800 feet.

30. Press the Upload button to write the mission to the aircraft.

31. Install the white covers back onto the aircraft.



Make sure that the mode switch is still in the manual position prior to moving the aircraft.

Takeoff & Flight

Final Checks & Takeoff

32. Place the RX60 onto the launcher making sure that all four arms are properly fit into the launch lug receiver notches on the bottom of your aircraft.



***DO NOT** allow anybody to walk in front of the armed launcher. Accidental launches can happen and may cause serious injury to anybody in front of the launcher!*

33. Approach the aircraft from the nose and arm the aircraft by pressing the pre-arm button until it is illuminated solid red. (Do not reach over the propeller! The motor may inadvertently start up. Always keep hands, arms and fingers away from the propeller!)



*At this point the aircraft is fully armed and ready to fly. Treat the aircraft very carefully and **DO NOT** allow anybody to get close to or stand to the side of the propeller! Any bump or sudden movement of the drone may engage the motor.*

34. Make sure that the elevons deflect down when armed, this will indicate that the aircraft is still in manual mode (When the aircraft is on the launcher).

35. Check for proper aircraft operation using the flight controller.

35.1. Move the right stick down and observe that the elevons deflect up.

35.2. Move the right stick up and observe that the elevons deflect down.

35.3. Move the right stick left and observe that the left elevon deflects up.

35.4. Move the right stick right and observe that the right elevon deflects up.



Inspect the push rods to make sure nothing is loose or broken, also make sure the elevons move smoothly and don't jerk or jump around. This could indicate that a servo has become damaged. Also make ensure the servo's are securely attached to the wing and are not loose.

36. Make sure nobody is near or to the side of the propeller and announce to any bystanders “**Motor test, clear prop!**” Slowly move the left stick up to about ¼ throttle and hold for 3-4 seconds. The propeller should spin and you should feel airflow behind the aircraft.



Inspect the propeller and make sure that it is not loose or showing excessive vibration during this test.



***NEVER** fly the aircraft if any component is loose, missing or damaged!*

37. Toggle the mode switch between Manual and Auto position. Make sure that the elevons move drastically between the modes. **Do not pause in the middle mode (RTL) move the mode switch swiftly between modes not hesitating in the RTL mode. Doing so will cause flaws in the written flight plan .**



If the elevons don't move drastically in the UP direction (If the elevons are flat or turned downward), the mission isn't loaded on the aircraft. Do NOT fly if the elevons did not move up! Return to step 10 if this happens, and set your mode switch to Manual. Also if there is any question if the mode switch was paused in the RTL position, go back to step 10.



Check that both elevons deflect UP by the same amount, about 18 degrees. This will indicate that the aircraft is ready to fly with autopilot.

38. Remove the launcher safety pin and announce to bystanders, “**Launcher is armed!**”



Keep the safety pin on your person after removal; do not place on the ground.

39. Do another final check that both elevons are deflected up and that the airspeed is fluctuating and not exceeding 7 mph. (as indicated on the tablet)
40. Hold the right stick of the flight controller straight back and observe that the elevons deflect up slightly higher.
41. While holding the right stick back, approach the launcher and depress the foot pedal to launch the aircraft.



Keep the right stick back until the aircraft is airborne for at least 5 seconds.

Landing

1. Once aircraft has completed the mission, it will start its landing procedure.
2. The aircraft will circle at the area that you specified when setting up the mission.
3. Once aircraft is below 125 feet, it will come in for the final approach

4. The RX60 will automatically land, but flaring the aircraft about 5-7 feet off of the ground will help for a softer landing




“Flaring” is to gently pull the right stick of the Taranis back (to the bottom). This will bring the nose of the aircraft up, and slow down

5. Change modes from AUTO to MANUAL after landing, and make sure your throttle is all of the way down.
6. Keep your aircraft on until all of the images have transferred to the XRD. IF YOU TURN OFF THE PLANE BEFORE THE IMAGES FINISH TRANSFERING, THE IMAGES WILL CONTINUE TO TRANSFER WHEN TURNED BACK ON. You can fly during the day and unplug after flight, but turn the aircraft back on at the end of all of your flights to transfer the images to the XRD.

Post-Flight

Keep the aircraft on until your tablet gives the notification that the images have successfully transferred from the GoPro to the XRD. IF YOU TURN OFF THE PLANE BEFORE THE IMAGES FINISH TRANSFERING, THE IMAGES WILL CONTINUE TO TRANSFER WHEN TURNED BACK ON. You can fly during the day and unplug after flight, but turn the aircraft back on at the end of all of your flights to transfer the images to the XRD.

When the images start to transfer from the camera to the XRD, your tablet will get a notification that lets you know that your photos are undergoing post-flight processing (picture on the left). When the image transfer from the GoPro to the XRD is complete, you will get another notification letting you know (picture on the right). To see your notifications, drag down from the top of the screen.

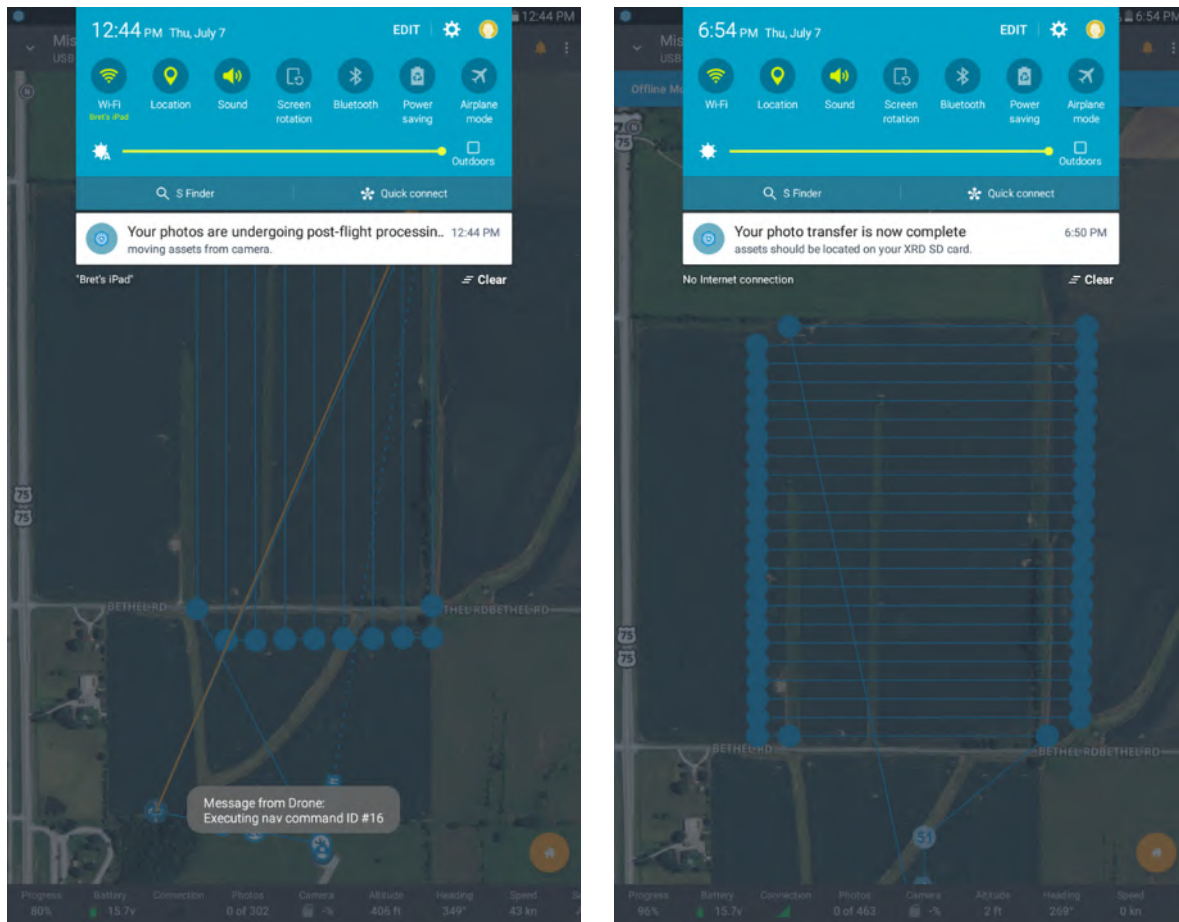

After the images have successfully transferred from the GoPro to the XRD, make sure to turn the GoPro off and the Wi-Fi off so the battery doesn't die before your next flight

Once the mission is complete and you have uploaded the images from the sd card in the XRD, you can log onto and view the processing of the map. The image will be located in your **Queue**.

After flight, you will need to upload the image set to the stitcher. To learn how to do this, visit the **Uploading Offline Flight Images** section of this manual.

Pre-flight Procedures & Checklist

Pre-flight Procedures

AgEagle RX60 MODEL AGERGBL915 - 8/24/16 RED 10/04/16

Follow this checklist for each and every flight

- Check Pitot tube for any obstructions (look down Pitot tube to see obstructions)
- Check the pitot tube for security and tubing is free from holes or pinched areas
- Pull servo control rods to ensure good connection to servo and elevon
- Ensure that the servos are securely attached
- Install camera, winglets, propeller and fully charged batteries
- Place aircraft on level surface on ground
- Turn on AgEagle with power plug (Do not move drone for 60 seconds)
- Turn on Camera and the Wi-Fi on the camera
- Listen for 6 beeps from the camera before the next step
- Turn on Taranis flight controller, place in manual mode with throttle down
- Press the pre-arm button on plane until the light glow continuously
- Arm the aircraft once you hear the 3 tone (happy tone) by holding the left stick on the Taranis to the bottom right side until a long tone is heard
- Press the pre-arm button to disarm until the light blinks
- Open the Botlink App and connect to the correct aircraft
- Clear the memory on the camera and the XRD from the app
- Set up mission plan in Botlink App
- Set the landing location clear of obstacles and the loiter area is downwind on the Botlink App
- Run the airspeed calibration on the Botlink app while cupping your hand over the Pitot tube. While doing so check again for holes in tubing or pinches.(Do not press your finger over the end of the Pitot tube!)
- Write the mission plan from Botlink App to the drone Place aircraft on launcher facing into the wind (Use caution not to drop or make sudden moves as the motor will engage if bumped)
- Press the pre-arm button to fully arm the plane (button turns solid red)
- Test elevons for correct movement with Taranis in manual mode and test the motor / propeller
- Swiftly move the mode switch on the Taranis to the AUTO MIDE = bottom position
- Check that elevons are BOTH UP. DO NOT LAUNCH IF BOTH ARE NOT UP!
- Hold the right stick of the Taranis to the bottom if winds are light
- Launch the aircraft
- Release the right stick when the drone launches



Post Flight Procedures

Follow these steps following each flight

- Disarm the drone by holding down on the “pre-arm” button until it begins blinking
- Leave drone on to allow the images to be transferred from the camera to the computer (Do not travel with the AgEagle on in the car). **IF YOU TURN OFF THE PLANE BEFORE THE IMAGES FINISH TRANSFERING, THE IMAGES WILL CONTINUE TO TRANSFER WHEN TURNED BACK ON.**
- Turn off the Taranis radio and charge if necessary
- Monitor the progress of the image transfer from the app, once transferred:
 - Turn off the drone (unplug the power plug)
 - Turn off the camera and the camera WiFi
- Remove micro SD card from the XRD computer
- Upload the image sets to your flybotlink.com web portal for processing

Preparing for next flights


- Charge drone batteries
- Charge camera
- Charge Taranis
- Charge tablet device
- Prefetch background maps for next flight areas
- Have extra micro SD cards handy for next flights

Botlink

User Interface

Botlink can be accessed by using an Android tablet and the Botlink application on the Google Play Store.

Familiarize yourself with the home screen. Reading this screen correctly will allow you to fly safer, smarter, and faster than ever before

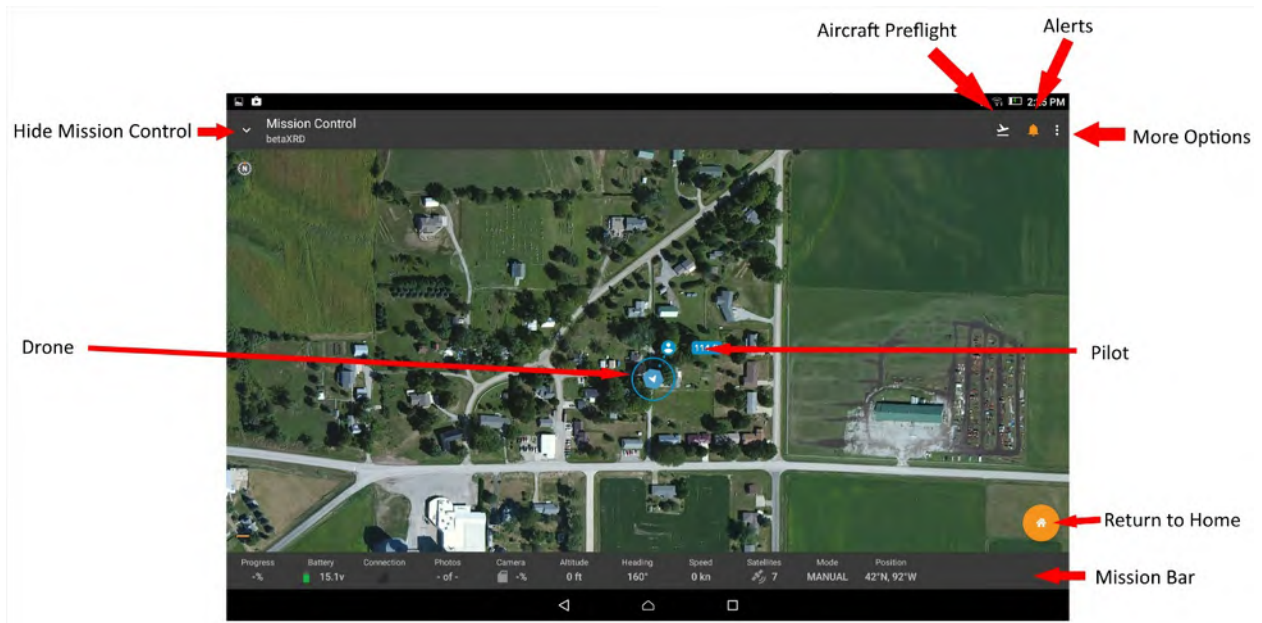

Online Botlink XRD Registration

To activate your XRD for its first flight, there are a few simple steps.

1. Fill out the **XRD Billing Form**
 - a. [Monthly Plan](#)
 - i. https://botlink.formstack.com/forms/xrd_monthly
 - b. [Yearly Plan](#)
 - i. https://botlink.formstack.com/forms/xrd_yearly
2. As long as the billing information was processed correctly, a Botlink Support agent will receive the request and begin processing. Once we process the activation request it may take up to **48 hours** before the XRD will be active.

A Botlink Support agent will reach out to the customer once we get confirmation of the completed activation.




Once hitting "Submit" within these forms the credit card information entered will be automatically processed.

Updating Your Botlink XRD


MAKE SURE YOUR AIRCRAFT HAS AT LEAST 50% BATTERY BEFORE STARTING THE UPDATE.

Download the update file from Botlink, and use your computer to transfer the file onto your XRD's microSD card. Insert the microSD card back into your XRD and power on your aircraft. The XRD will automatically update itself, and you can monitor the update by watching the LED on the XRD. It will blink normal for a while, then shut off as it is restarting itself. Once the LED comes back on, the update is complete, and you will be able to reconnect to the aircraft in the Botlink app. This process should take less than 20 minutes.

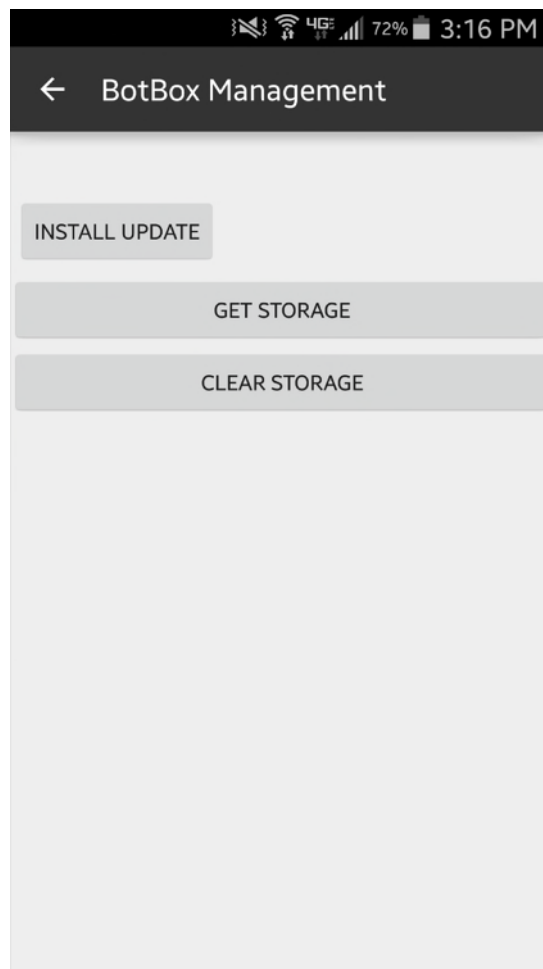


Botlink First Flight


1. Open the Botlink app (application) on Tablet

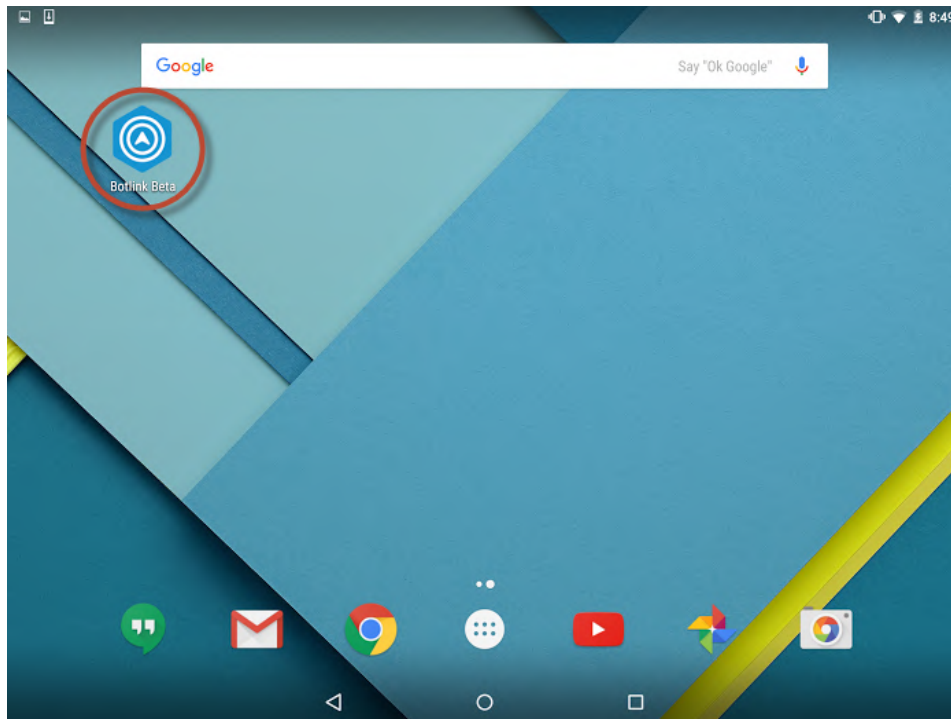


2. Once the app is opened, select the hamburger (three-lined menu drawer) icon in the upper left hand corner to access the main menu.

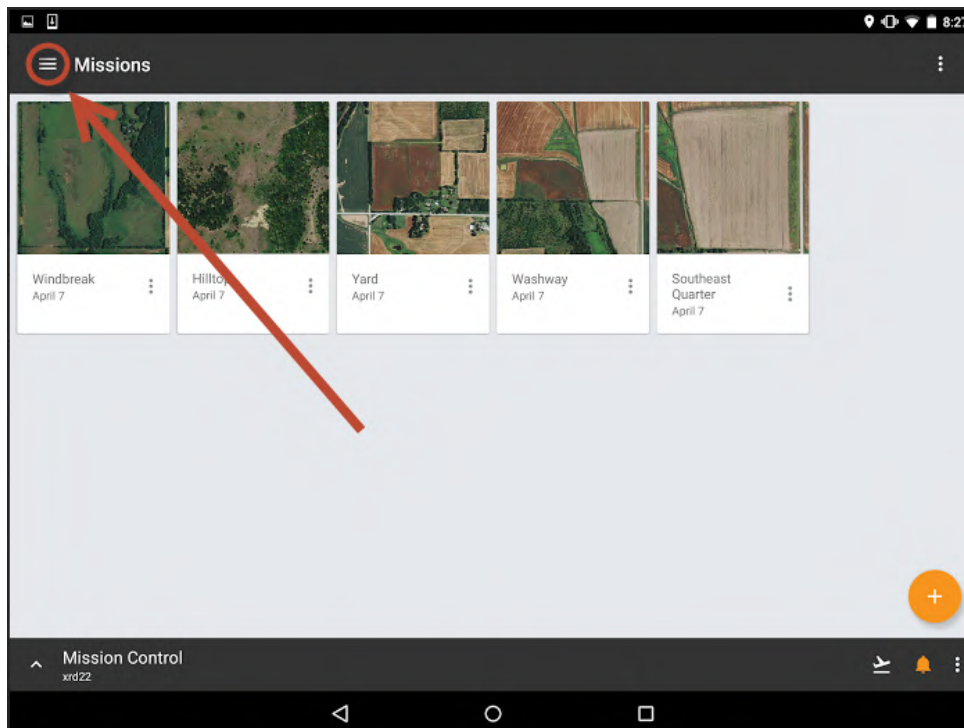


3. Go to the Settings option

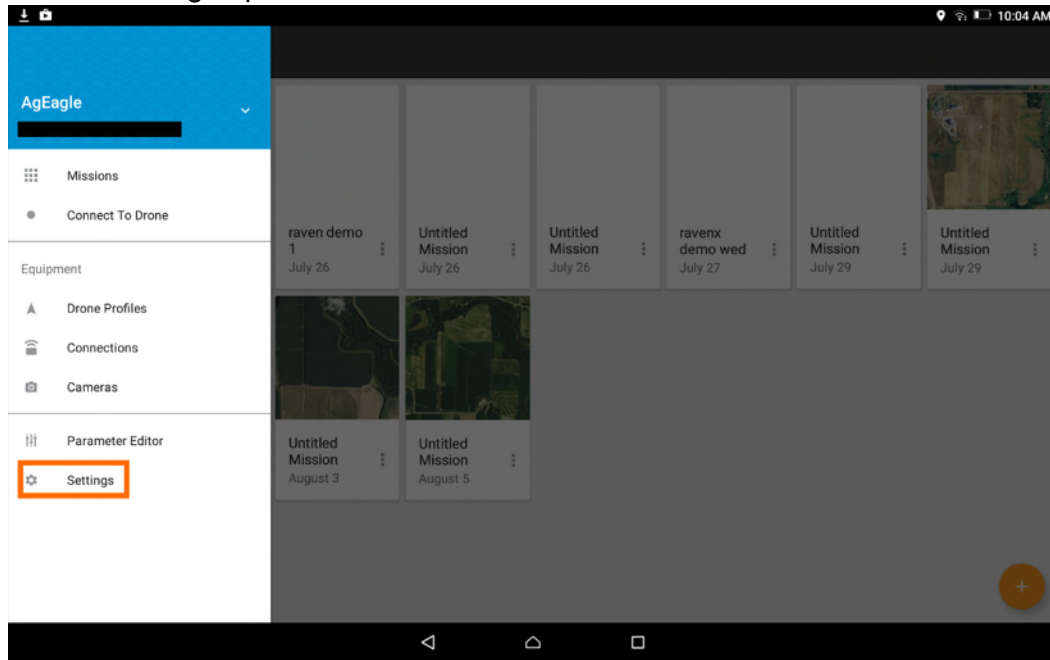


4. Select “Drone” in settings, and make sure the “Preflight Arming” is turned ON

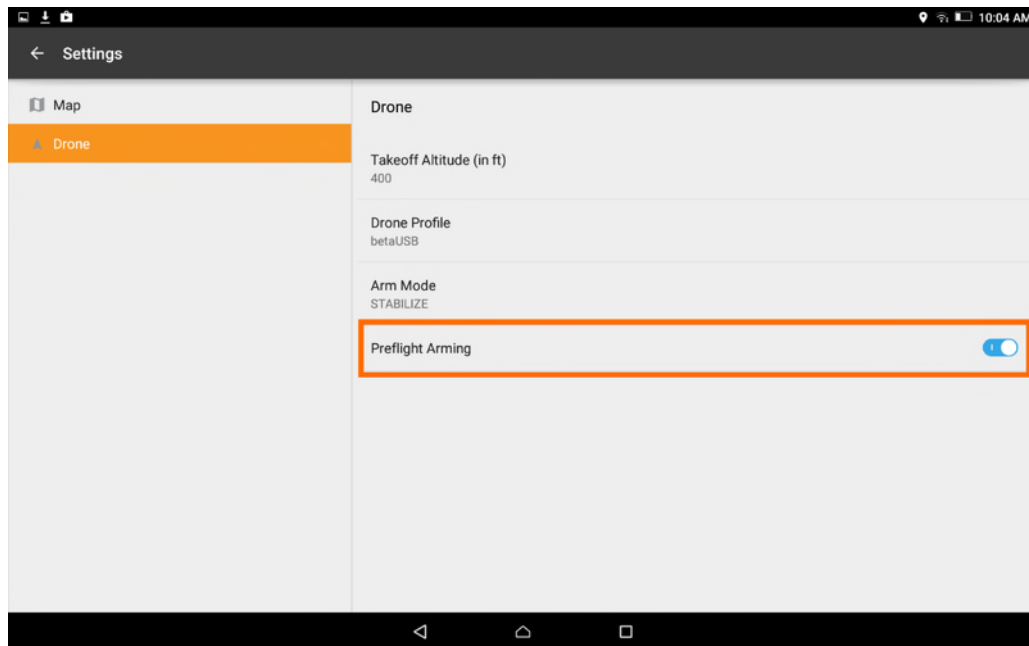

5. Press the Menu button again and select the **Connect to Drone** option.

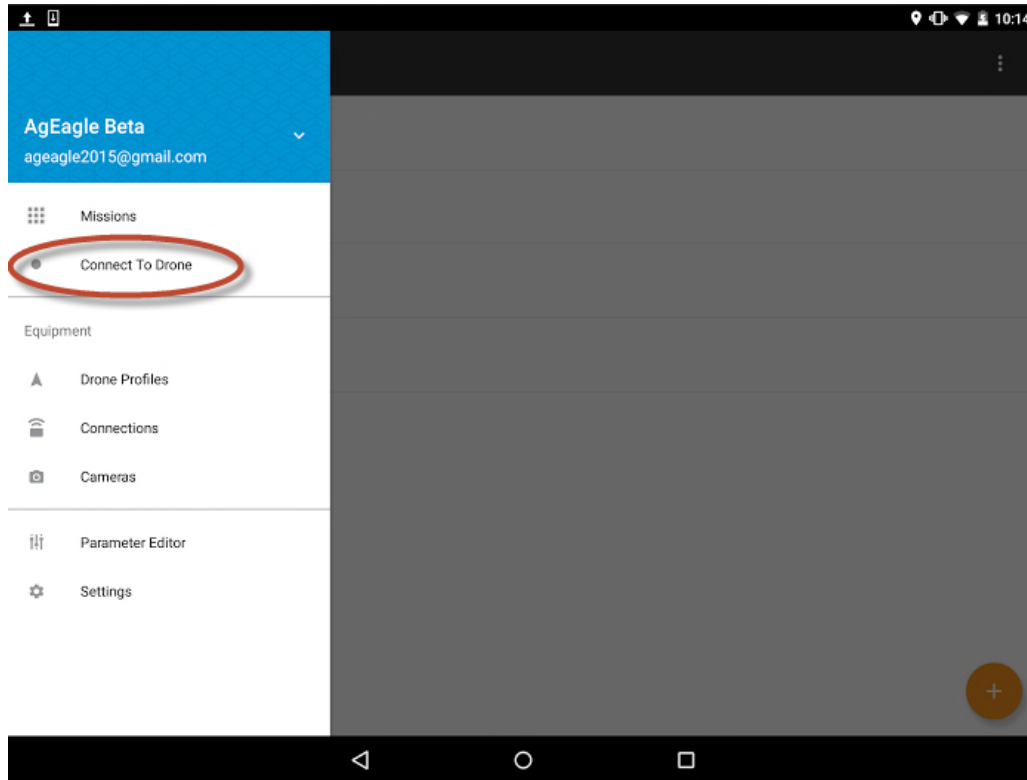

6. Select the overflow (three vertical dots) icon next to the drone being connected
NOTE: Select the USB connection (typical) for USB telemetry connectivity

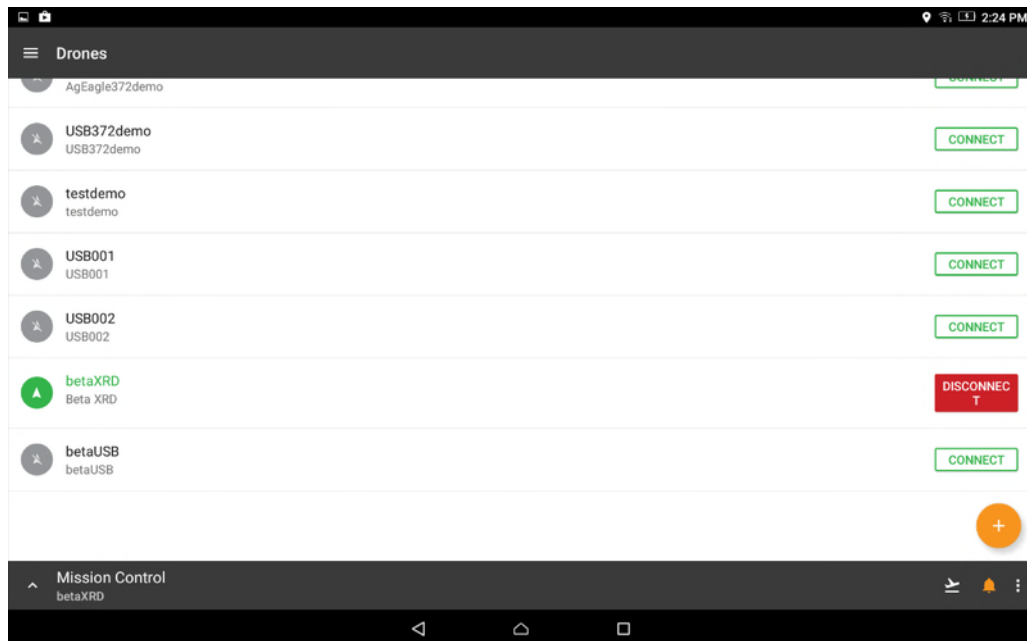


7. Once app starts to connect to the aircraft the app will advance to the Mission Control page and provide status updates including:
 - a. Connection status of aircraft
 - b. Camera connection status
 - c. Flight alerts within the current airspace requirements




Selecting the alarm icon in the upper right hand corner will display connection statuses and alerts.

8. Once the app is connected to the aircraft, the name of the drone profile will display under the Mission Control heading AND it will display “Connected” in the main menu. To get to the main menu use the down arrow (upper left hand corner) to navigate to the **Missions** (Mission Planning) page and then use the hamburger icon.

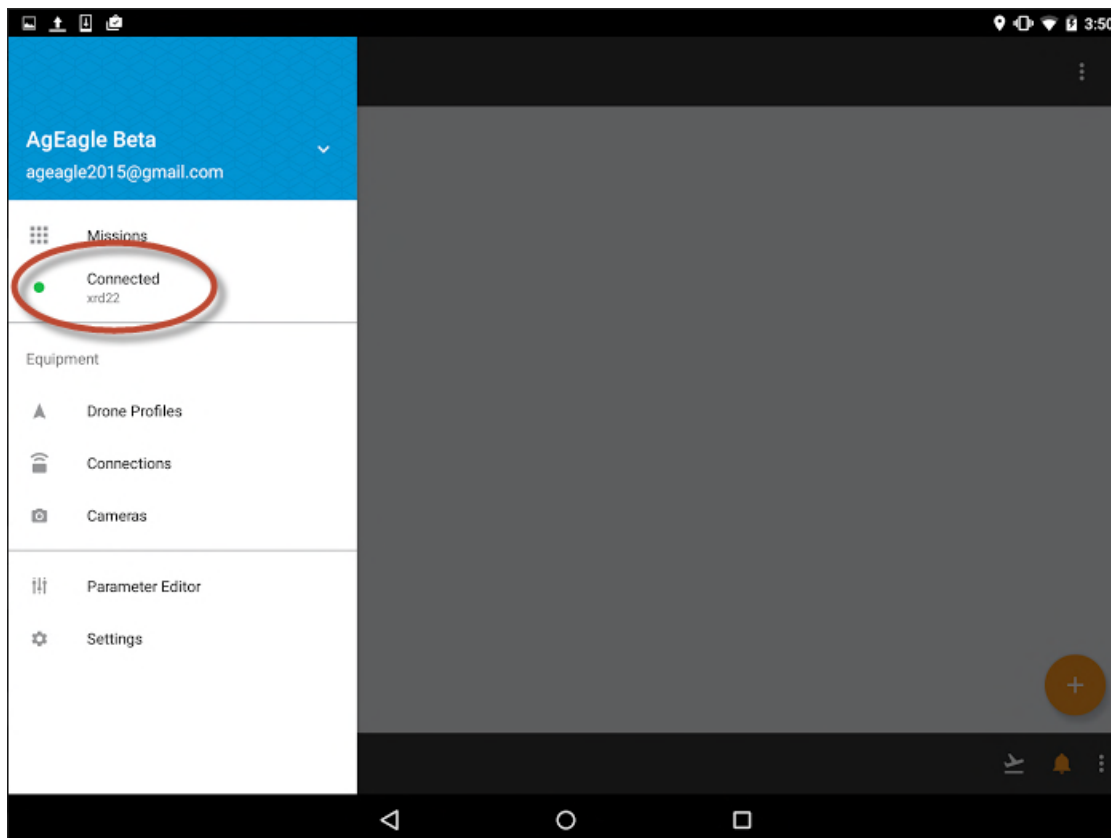


9. To load an existing mission go to step 13.

- To create a new mission navigate to the **Missions** (mission planning) page. Select the orange plus icon in the lower right hand corner and then select the green survey option to create a new mission.

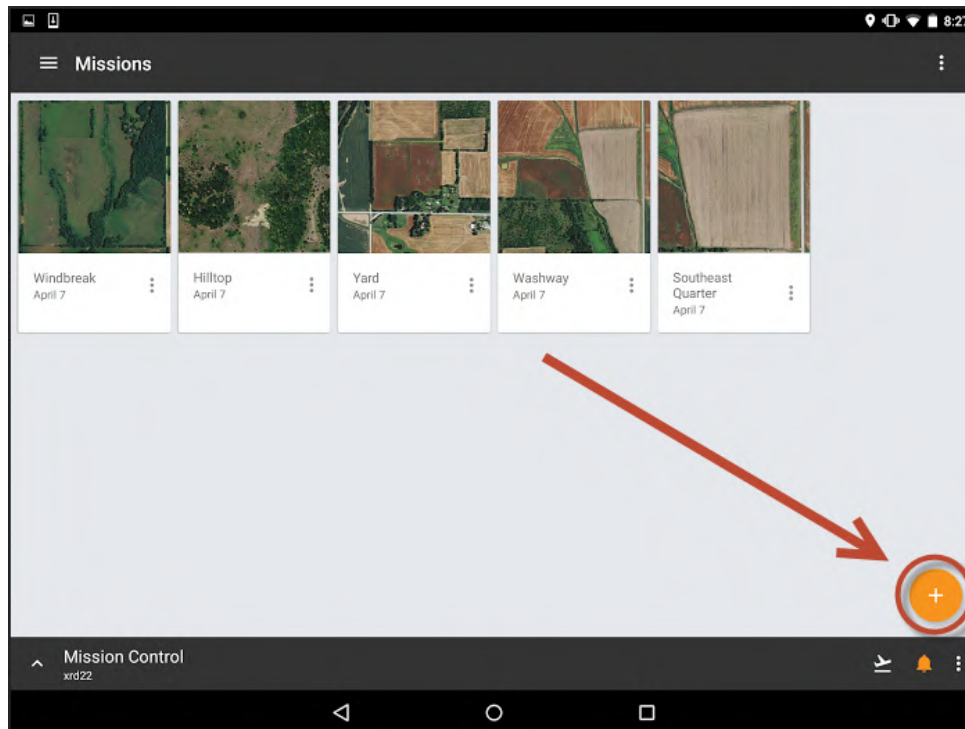

- The screen will now advance to a map and allow entry of the field points and details of the new mission.

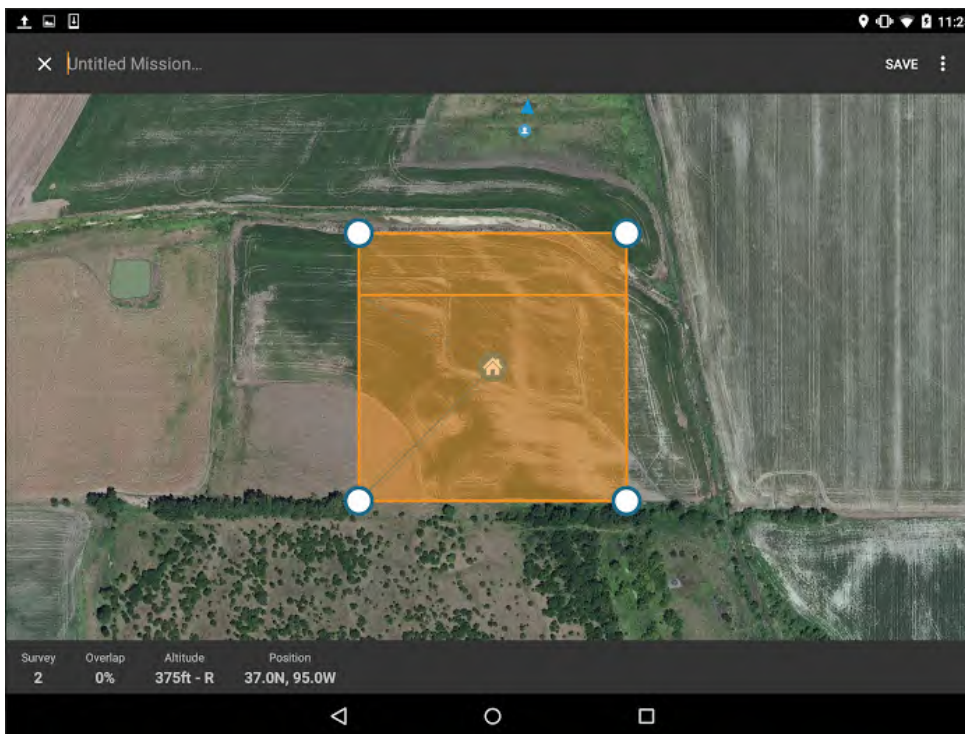


12. Name the mission, zoom in/out, and select **Place Your Survey** to define coordinates of the field.
 - a. A default map will provide 4 points (white dot with blue border) to define the default corners of the field.
 - b. Each point can be moved by touching the point and dragging it to a specific point on the map.
 - c. To add additional points, single tap anywhere on the border of the polygon and a new point will appear which can be dragged to any specific point on the map.
 - d. To delete points, press and hold the point until an orange banner appears with a trash can. Select the trash can to delete the point.

13. Select and define the Overlap and Altitude of the mission.
 - a. Overlap defines how much picture overlap is needed to properly stitch and process the photos during the mission. Using a range of 60% to 75% overlap will provide optimization for photo stitching.
 - b. Choose an altitude that abides with current local and federally mandated regulations.



To deselect items on the bottom ribbon touch the bottom ribbon again.

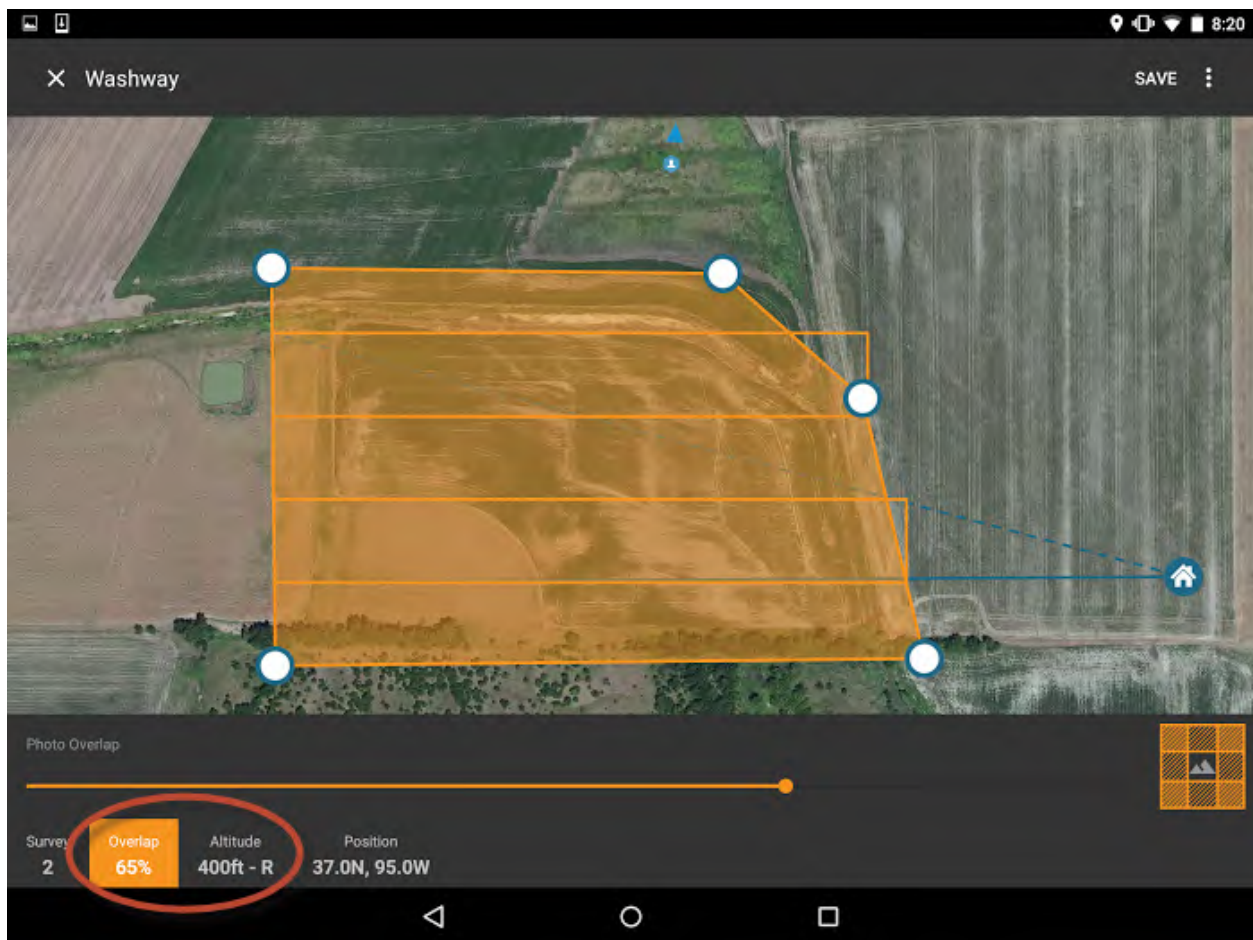


- Once the field polygon is defined, select **Save** and the screen will advance to the Missions (mission planner) page displaying all missions that have been saved.




If the mission is not saved, then there is risk that the created mission can be lost and the user will have to start over.


- Select the newly created mission or previously stored mission by single tapping the map portion of the selected mission.

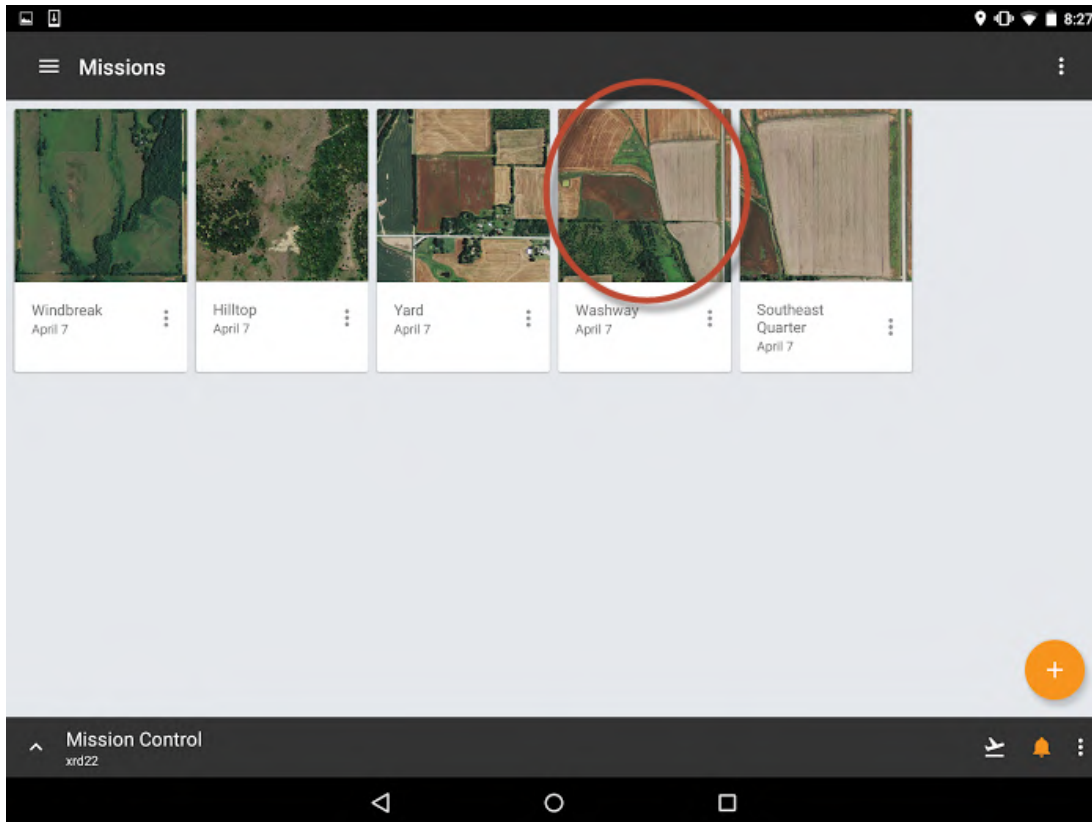


16. Select the orange cloud icon to set the current flight conditions and final aircraft parameters. These are the final steps to complete prior to launch.

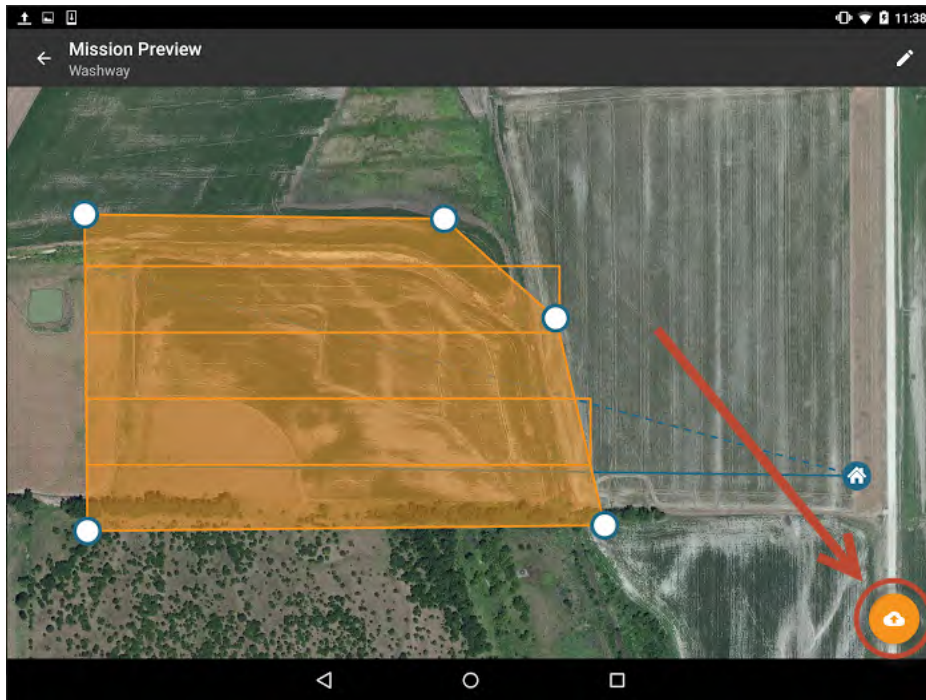

17. Deselect the auto compass calibration button in the upper right hand corner and then manually select the direction indicator to match the current wind direction. When complete, select the **Next** button.

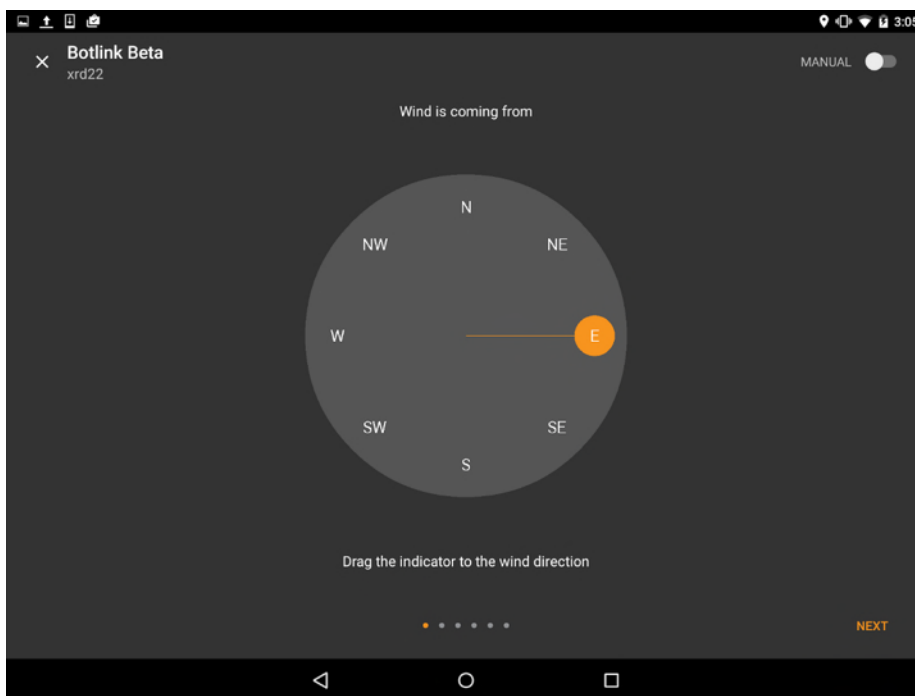

- Ensure the “Air Speed” has a value above zero and is active before pressing the **Calibrate** button. Cup hand around (not touching) the Pitot tube and then press the play triangle to start the calibration process. Wait for the timer to count down and verify the airspeed calibration was successful. When complete, select the **Next** button.

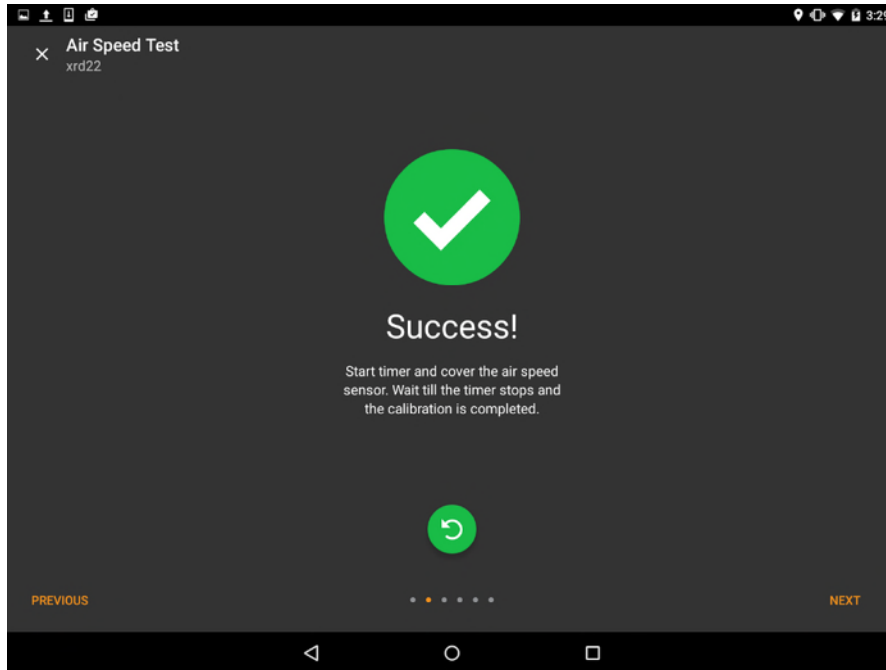

- Select the drop down menu and select the “GoPro Hero4 + AgEagle” camera. When complete, select the **Next** button.



20. Motor Test is not used for the AgEagle RX60 aircraft. Do not use this feature. Select **Next**.

21. The Take Off screen will illustrate a dashed green take off polygon that shows the direction the aircraft should take off. The blue (orange outlined) polygon is illustrating current orientation of the aircraft. Select the **Next** button.




Ensure both polygons are lined up prior to launch.


22. Zoom in/out to position the map to define the landing zone. Use the single white down arrow to move the landing zone around on the map and use the double white down arrow to orient the heading of the landing zone, position the loiter zone, and manipulate the length of decent. Once landing zone is finalized, select the **Upload** button which will send this mission to the aircraft.



The clockwise button changes the direction of the loiter in cases where wind may affect the loiter placement.

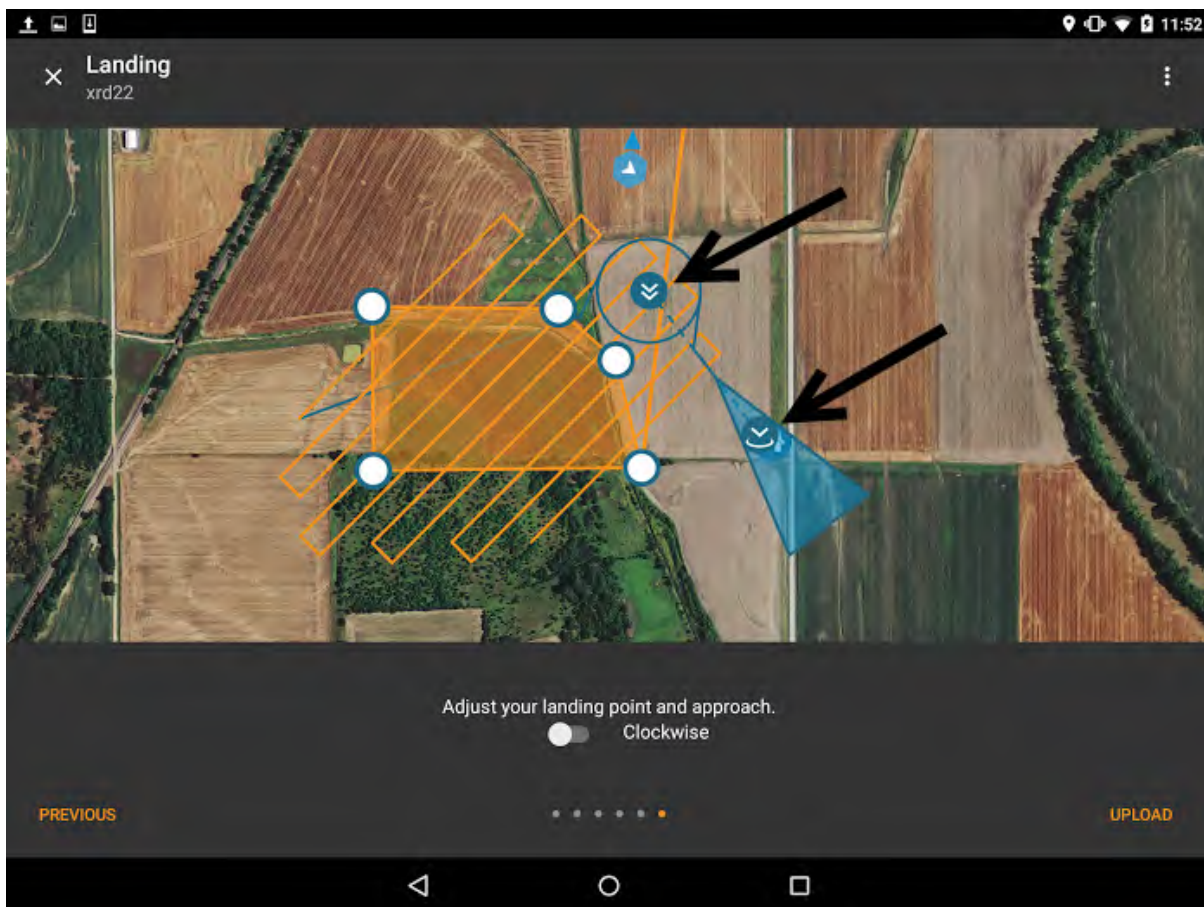


- 23. The screen will advance to Mission Control and the aircraft will be ready to use the current mission once launched.

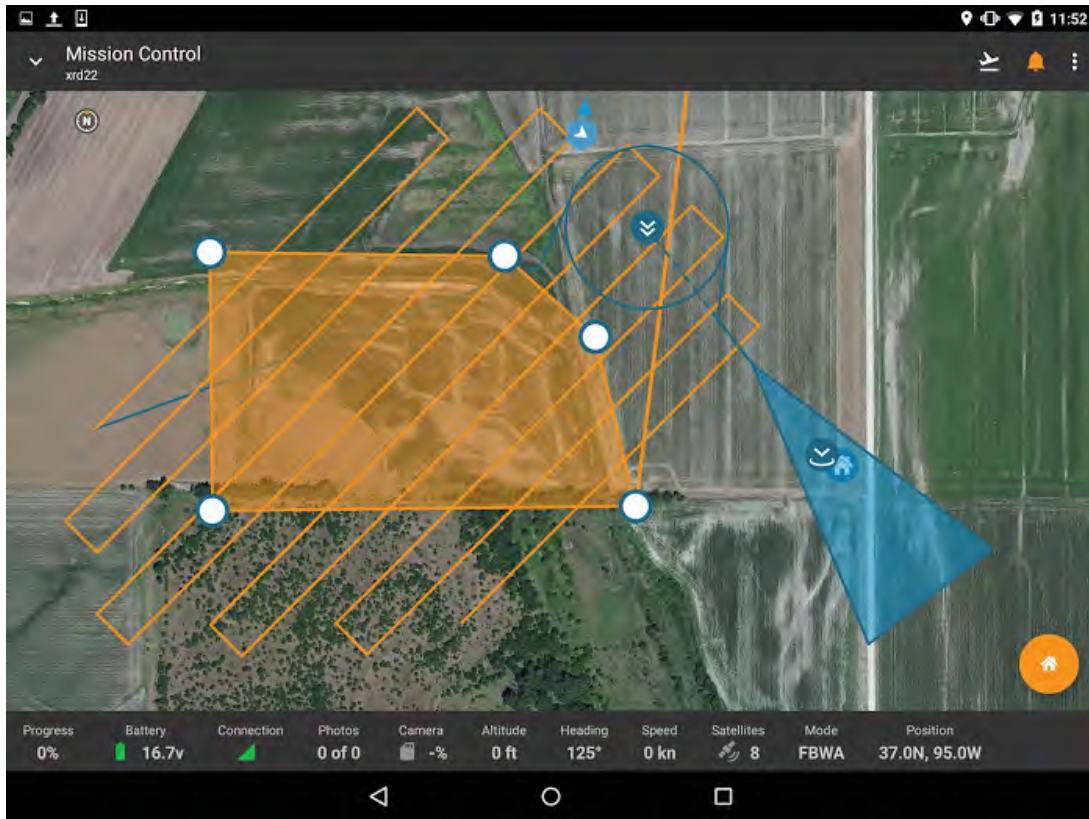

Binding Cameras

Most drones have some sort of sensor on-board, usually a camera, to accomplish a given task. Through Botlink you can add and manage your sensors and their actions.

To connect to a camera you need to first be connected via a Drone Profile. Once connected you can scan for Wi-Fi signals or manually connect using the plus button on the upper right. Simply follow the on-screen directions to create a camera connection. Currently the only cameras supported are the GoPro Hero 4 and Sony QX1.

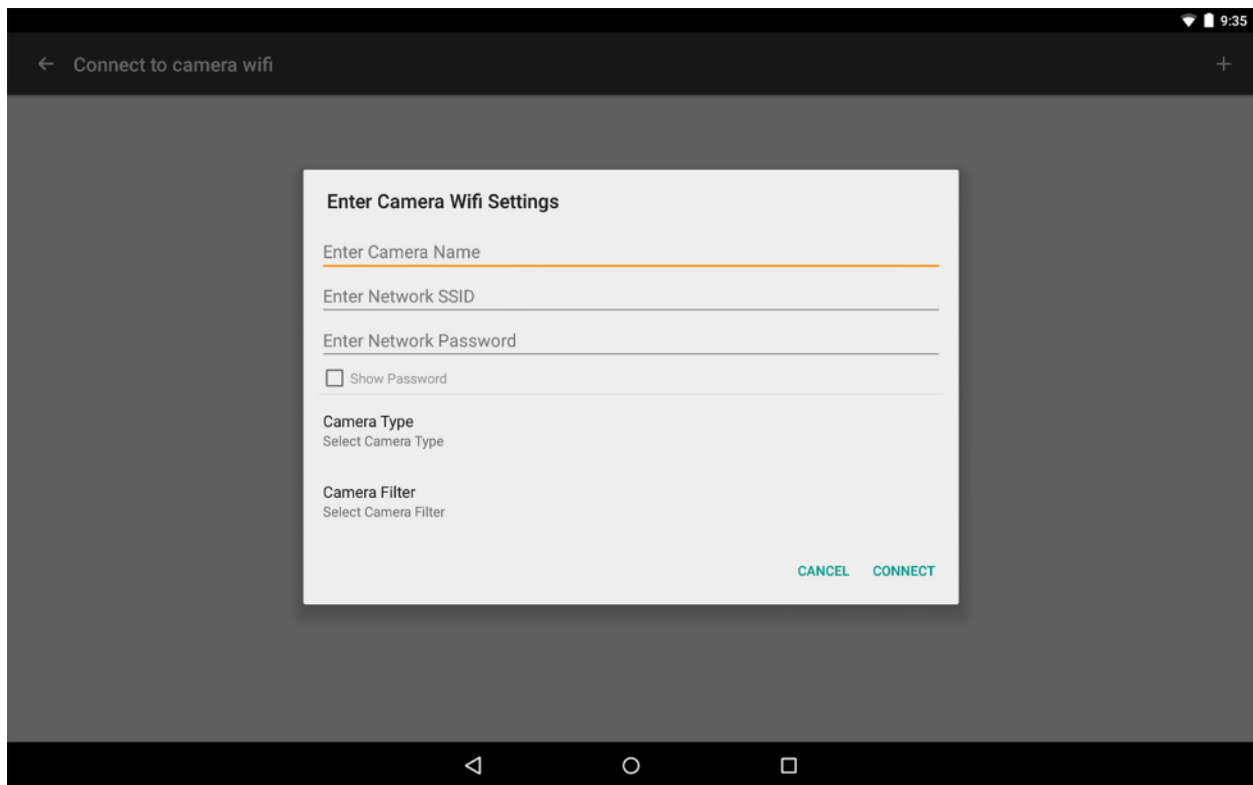

Do not bind the camera to other devices! This can cause connection problems to the aircraft.


Tips for Binding the GoPro to your RX60

1. Turn on the camera, then turn on Wi-Fi
2. Turn the aircraft on
3. Listen for the camera to connect. This usually is 5 or 6 beeps from the camera
4. Connect the tablet to the aircraft, and check to see if the camera is CONNECTED to the plane
5. Turn on Handheld flight controller


Saving Maptiles (Prefetching Maps)

To fly your aircraft without any cellular data, you must prefetch maps on the Botlink map. You will need to be connected to the internet to prefetch maps, so this process should be done before you travel to the field.

1. In order to have maptiles while flying without a cellular connection between the internet and your tablet you need to download them while you have an internet connection. So before you leave your home or head into the dead zone make sure to open Botlink and press **More Options** button (3 dot button in the upper right corner of your screen). Select **Save Maptiles** to download them to your device. A small, orange loading bar will appear on the bottom right of your screen to indicate the progress of the download.

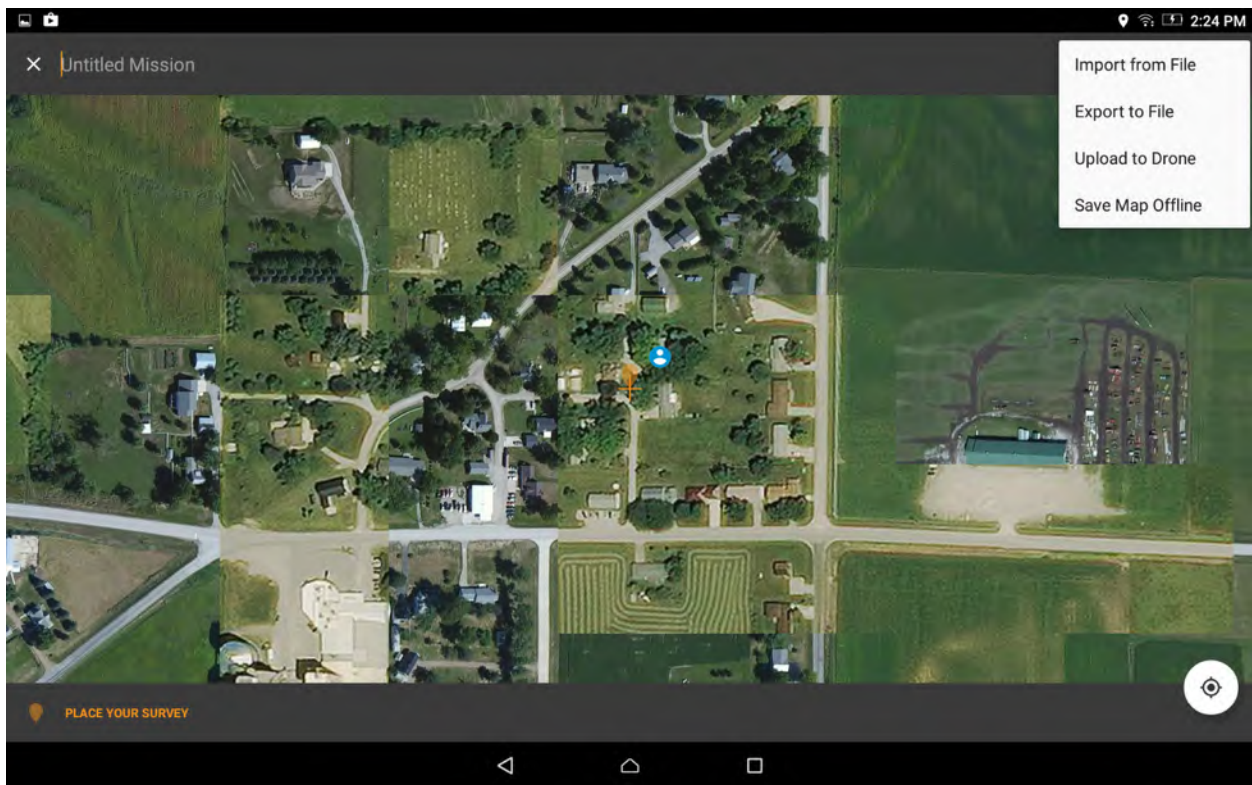


2. Make sure to be zoomed in fairly far in order to save the maptiles. The app will display a message letting you know if you are still too far out to save the tiles. The good news though is there is no limit to amount of maptiles you can download for offline use (aside from the available space on your device).

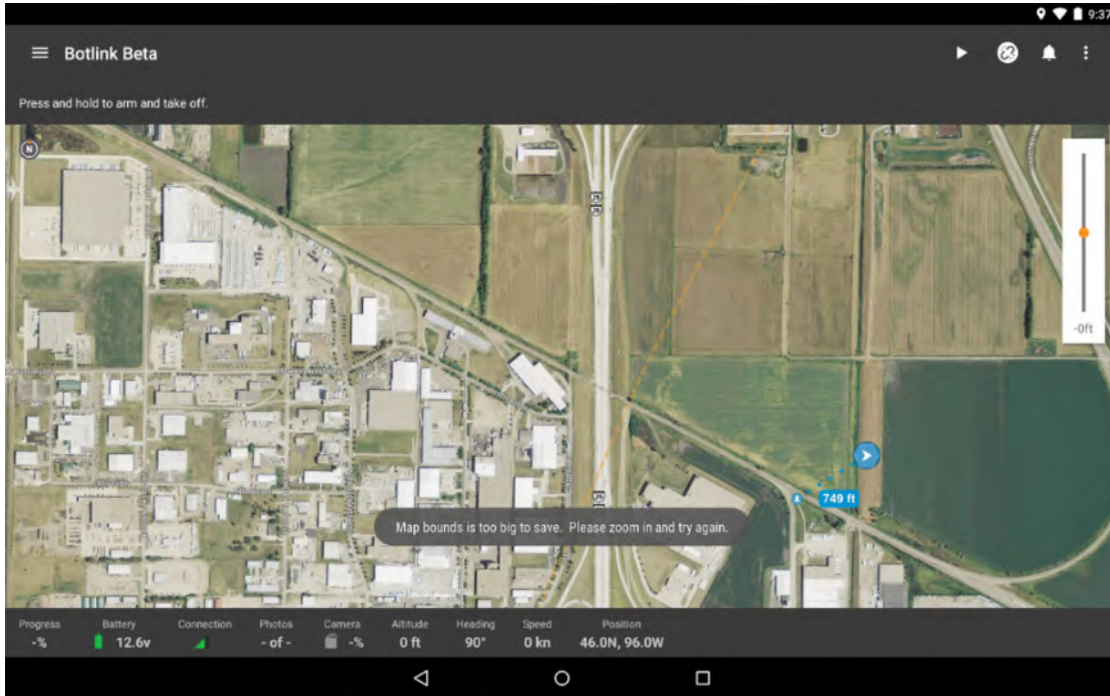

Uploading Offline Flight Images

Make sure to leave the aircraft and GoPro on until the images have transferred from the GoPro to the XRD. **IF YOU TURN OFF THE PLANE BEFORE THE IMAGES FINISH TRANSFERING, THE IMAGES WILL CONTINUE TO TRANSFER WHEN TURNED BACK ON.** You can fly during the day and unplug after flight, but turn the aircraft back on at the end of all of your flights to transfer the images to the XRD.


1. Put your micro SD card from the XRD into your computer. You will see a folder that is titled "pictures". Your flight images are in that folder. Once you are in "pictures" each flight will have its own folder of .JSON logs and .JPEG images.
2. To upload images after flight, go to your fly.botlink.com account and select the **UPLOADER** tab.

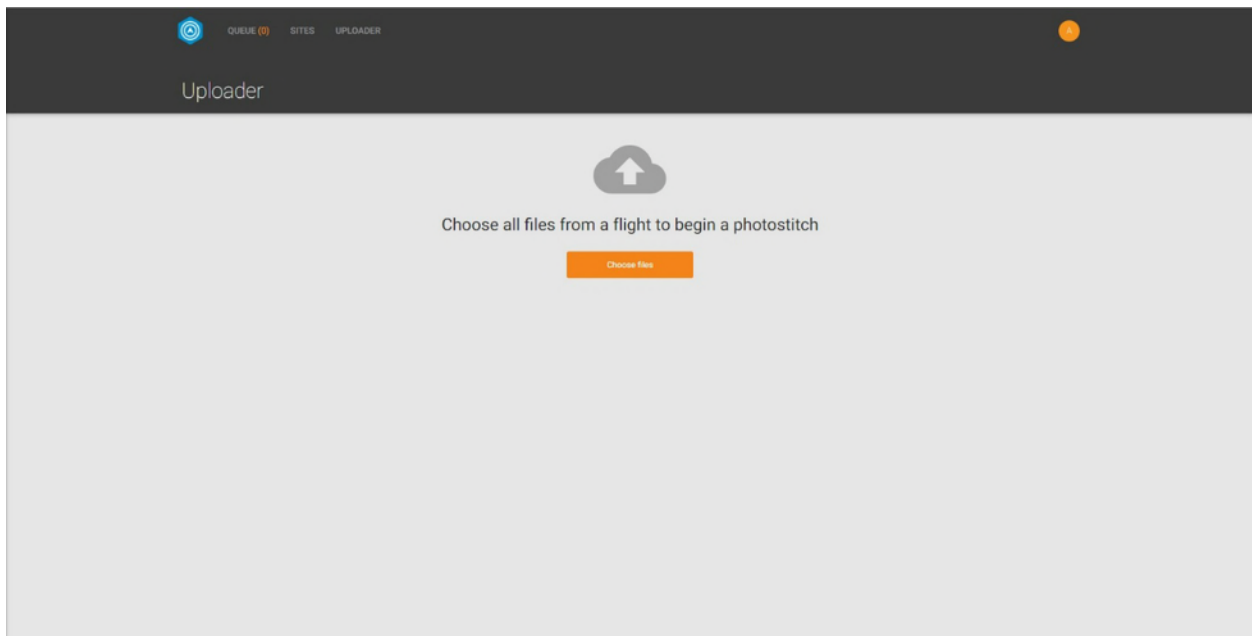

3. Select the images from your flight. Also, include the .JSON files as well. They are crucial to georeferencing the map, as well as producing a nice clean map. The .JSON files should be numbered the same as the images.
4. When upload is complete, let the stitcher process your images. You can check back in the Queue to see if the stitcher is complete with your map.


Registering Your AgEagle RX60 for its First Flight

The first step to being able to fly is creating a **Drone Profile** which once set up will allow you to get up in the air faster than ever before. To start, tap the **Add** button to create a new profile and give this newly created profile a name. This is helpful to differentiate between multiple airframes.

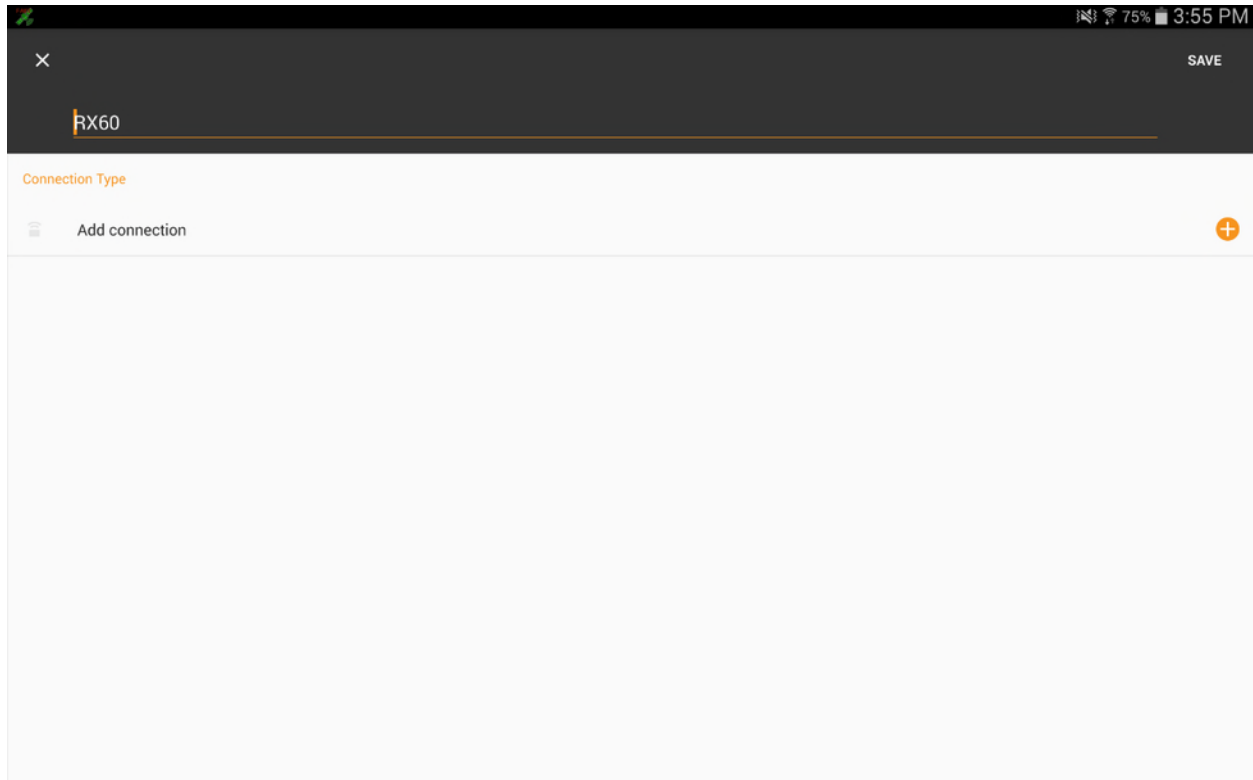

Connections

Once you have created a Drone Profile the next step is to define the Connection. This tells Botlink how to communicate to this specific airframe. The three connection types are XRD, USB, and Network. Again, make sure to give each a name to help differentiate between the multiple connections. Use the USB mode for flying over the telemetry radios.

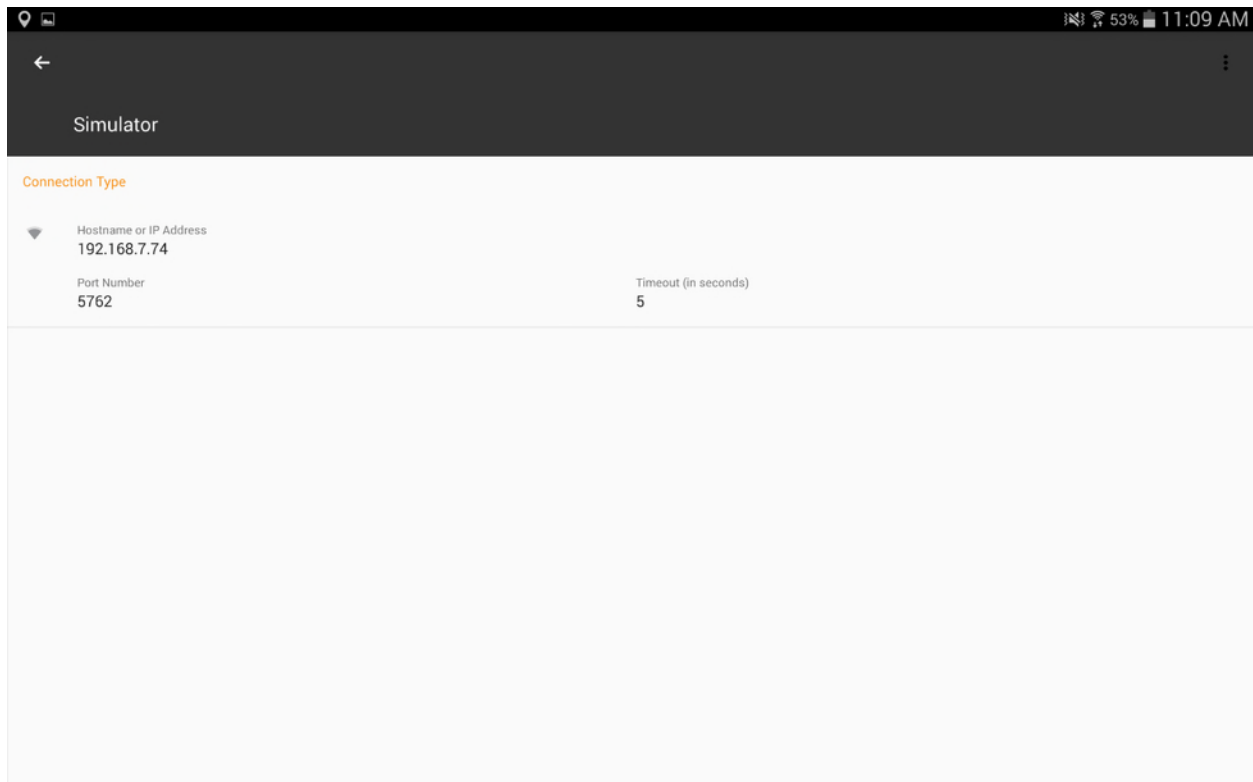

USB Connection

Use this to control your drone using a USB device (usually a 915 MHz Radio). Just make sure to choose the correct **Baud Rate**.


Connecting to your Drone

Once you have successfully created your Drone Profile and Connection you can connect to your drone. Go back to the Drone Profile, select your newly created profile, press **More Options**, press **Edit**, and press either "No Device Connected" or the **Add Button**. Select your Connection and press **Save**. To connect, simply press the **More Options** button next to the Drone Profile you'd like to connect with and select **Connect**. While connected, the corresponding Drone Profile and Connection will be highlighted in green to indicate the current state.

Managing Maps after Flight

In addition to the mobile app Botlink has created a web portal to allow you to manage your data collected in the field. Whenever you fly a survey mission and take images they are uploaded to our cloud to be stitched. These images can be viewed via this portal.


1. In order to get into your account head over to <https://fly.botlink.com> and sign in using the same credentials used on your mobile app.

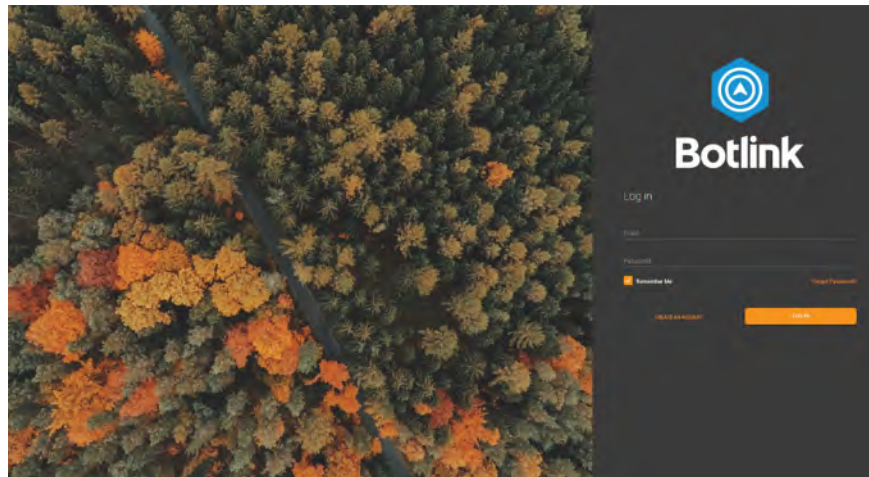


2. Once logged in you'll be able to view your **Sites**, which are the different locations that you have flown at. In order to add a new **Site** simply click the orange **Add New** button.




You can edit the name and description of each Site by clicking on the name at the top of the screen.

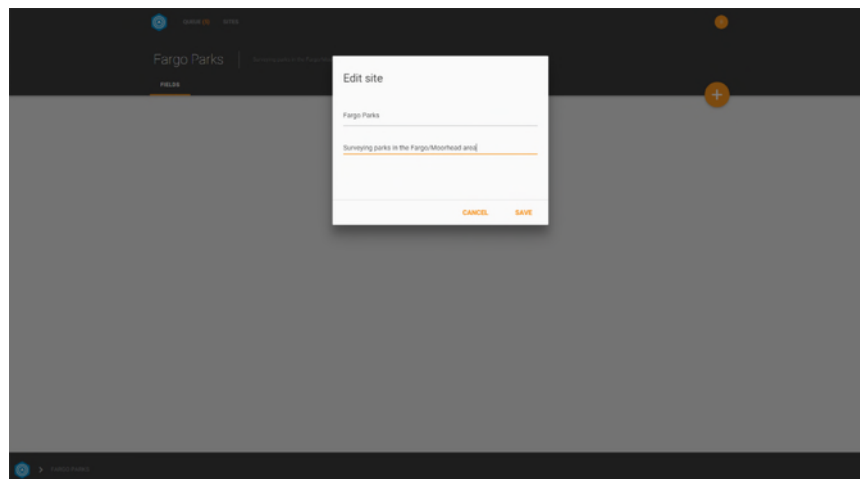

3. Now that you have created a **Site** the next breakdown is to create a **Field**. **Fields** are the subdivisions of a **Site**. Breaking a **Site** down into separate **Fields** allows you to specify exactly where each of your surveys are within your **Site**.

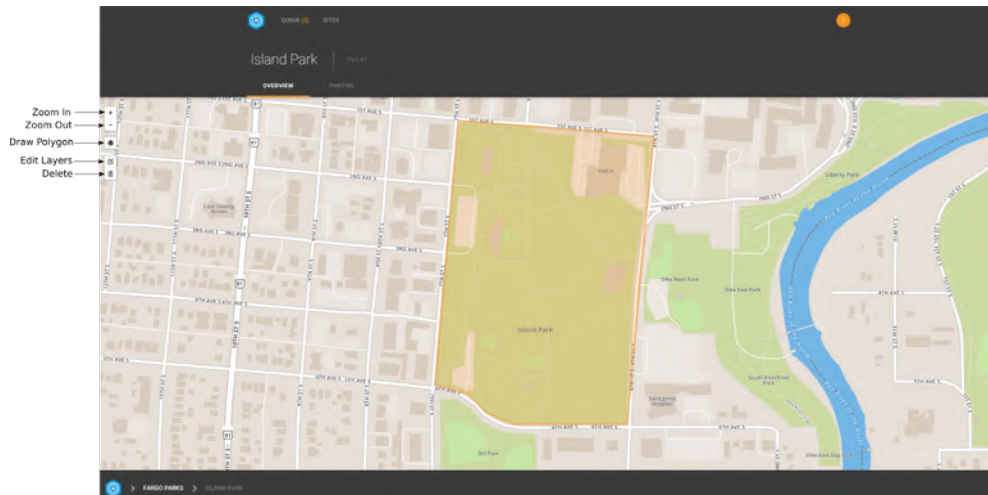

4. To create a **Field** simply press the **Add New** button while within a **Site**. This will bring you to a screen similar to the one above with a default polygon created on the map. First, use the **Delete** tool to discard the default polygon. Then use **Draw Polygon** to create the bounds of where your survey was on the map. This allows anybody who views your **Fields** to know exactly where that flight took place.
5. If you look below the Field name and description you will see two tabs; **Overview** and **Photos**. As you can see above the **Overview** is the main screen of a **Field**. The **Photos** tab is where your stitched images for that **Field** will be stored. In order to pair a stitched image to a **Field** we need to first assign them.

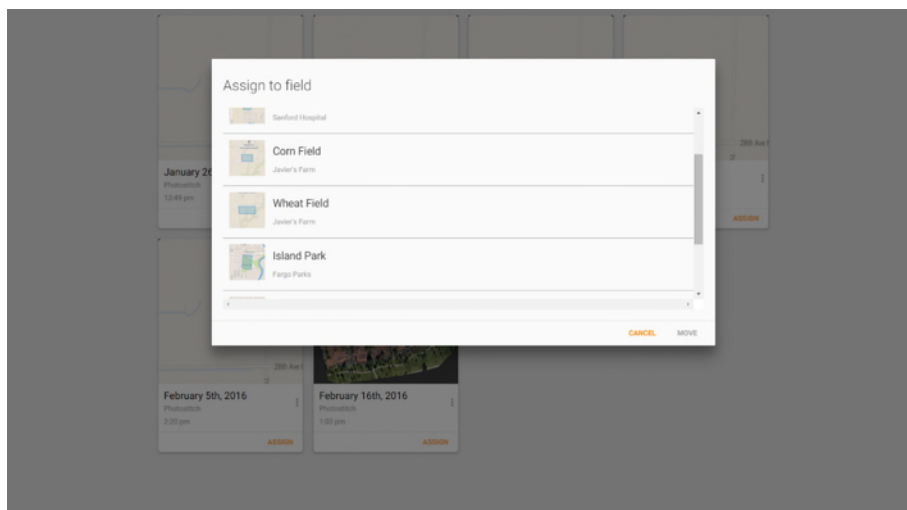

6. Your survey images, whether they are waiting to be stitched or are already complete, are stored in the **Queue**. On each photo stitch job there is an **Assign** button and a **More Options** button. **More Options** gives you a download link to save that image to your device. The **Assign** button brings up a list of all your **Fields**. Use this to assign that image to the correct **Field** and now when you navigate to the **Photos** tab within your **Field**, that image will be displayed.

Downloading Maps after Flight

Read the Managing Maps After Flight section before continuing.

TO DOWNLOAD GEOREFERENCED .TIFF IMAGES:

1. Your survey images, whether they are waiting to be stitched or are already complete, are stored in the **Queue**. On each photo stitch job there is an **Assign** button and a **More Options** button. **More Options** gives you a download link to save that image to your device. The **Assign** button brings up a list of all your **Fields**. Use this to assign that image to the correct **Field** and now when you navigate to the **Photos** tab within your **Field**, that image will be displayed.

TO DOWNLOAD GEOREFERENCED SHAPE FILES:

1. You must assign the image to a site and field to download a shape file.
2. Your survey images, whether they are waiting to be stitched or are already complete, are stored in the **Queue**. On each photo stitch job there is an **Assign** button and a **More Options** button. The **Assign** button brings up a list of all your **Fields**. Use this to assign that image to the correct **Field** and now when you navigate to the **Photos** tab within your **Field**, that image will be displayed.
3. Press the 3 dots on the image you want to download
4. Select DOWNLOAD OTHER IMAGES
5. Select the SHP and click download

Additional Information

Overlap and Sidelap

Overlap and Sidelap determine how often your camera takes a picture, as well as the width in-between each pass (swath width). Overlap and Sidelap are measured in percentages instead of feet. A higher percentage means that more of the picture that the camera is taking will be overlapping with the pictures beside it. So a higher overlap means that the camera will be taking pictures faster, and at the end of the flight the camera will have taken more pictures. A higher Sidelap means that more of the picture is overlapping with the pictures on the previous path, so the swath width will be narrower.

Botlink has combined Sidelap and overlap into one option to make it easier on the end user. They combined it into just Overlap.

For row crops:

- At the beginning of the growing season, it is good to fly around 65% overlap
- During the middle of the growing season, when the crop has very few unique points, it is good to fly around 70% even up to 80%

For other crops:

- The more unique points in the crop, the lower overlap is needed. Typically other crops (such as orchards or vineyards) can be as low as 60%. Other crops that have very few unique points (wheat) will need 70% to 80% during the growing season.



Tablet (Android Device)

- The tablet that is needed for flight is an android device that is running at least Android 4.4.2. We recommend using a Lenovo TAB 2 a10 device, or a tablet with similar specifications.
- The micro USB must have a full micro USB type A port to run the telemetry radio when flying. Most Android tablets have a full micro USB type A port.
- When using the telemetry radios to fly, the colored end of the micro USB cable (cable that connects the tablet to the telemetry radio) must plug into the tablet
- The tablet doesn't need to have its own cell plan to fly online. You can connect your tablet to a mobile hotspot.

Camera

The standard sensor included in the RX60 package is a GoPro HERO4 Black, modified for remote sensing of vegetation

- Camera modified with flat lens for better image processing
- Camera modified with high quality near infrared filter for mapping stress in crops

Lens Cleaning

Included in your Ground Support kit for the aircraft are paper wipes and lens cleaner. Make sure before every flight that your lens is clean of debris, as this can affect image processing. Do not spray directly on camera, as liquid can cause camera damage.

Charging

Please see the “Camera” tab under the “Charging” section of this manual

Additional Information

Please see the “Binding Cameras” tab under the “Botlink” section of this manual to bind your camera



After flight, make sure to turn the GoPro off and the Wi-Fi off so the battery doesn't die before your next flight

Charging

Camera

The GoPro camera is charged through the USB cable provided with your aircraft. Plug into computer or wall. The light is on solid red during charging, and off when fully charged.

Aircraft LiPo Batteries


The AgEagle RX60 comes with a LiPo battery charger to charge the batteries. The model is a Hitec LiPo charger x4 AC Plus. This charger has the capabilities to charge up to 4 batteries at once.

To charge your batteries, follow these steps:

1. Plug in the Li-Po charger into the wall
2. Installing the Leads to the Charger
3. There are two locations to install the jumper leads.
4. Balance Lead Port- In the photo below, the port is indicated by the red oval. The port has 7 pins, but only use the pins marked “-,1,2,3,4”. With the index guide lines facing UP (see arrow), insert the XH Balance 4S lead into the port as shown.
5. Installing the Leads to the Charger

There are two locations to install the jumper leads.

- a. **Balance Lead Port-** In the photo below, the port is indicated by the red oval. The port has 7 pins, but only use the pins marked “-,1,2,3,4”. With the index guide lines facing UP (see arrow), insert the XH Balance 4S lead into the port as shown.

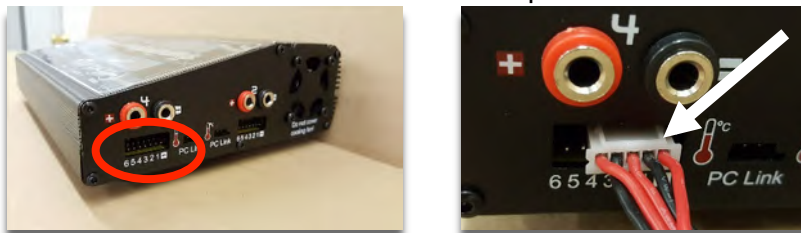

- b. **Deans Lead Port-** In the photo below, the port is indicated by the white oval. The port has a red positive (+) and black negative (-) plug.

Insert the leads, matching the colors as shown.




- c. **Battery Connections-** Plug the other ends into the battery as shown. Consult the charger Owner's Manual to set the charger functions to match the battery specifications



- d. **Charger Supplied Leads-** The leads supplied by the charger manufacturer (shown below) should be kept as back up leads should the others be lost or damaged.



6. Set the charger for LiPo Charge by pressing the **Increase** button

 *Every 5th charge on the batteries select the LiPo Balance option. This will take longer, but will balance the cells of the batteries*

7. Press **Start** and set the proper amps and voltage (5.5 amps and 14.8 4S)
 8. Hold the **Enter** button, and the charger will run a check on the battery
 9. If the check passes, press the **Enter** button to start charging

Handheld Flight Controller

The TARANIS handheld flight controller comes with its own charger included in the controller case. The port for the charger is on the side of the controller. A green LED light is on the back, blinking means that it is charging, a solid green light means it's fully charged.

Launcher

Quick Setup Guide

1. Assemble the launcher
2. Slide the carriage to the bottom so that the foot latch holds it
3. Insert "Remove Before Flight" safety pin
4. Install proper number of bungees
5. Raise and latch front arms
6. Raise aft arms
7. Set aircraft onto launcher

Rail

See the instructions below for assembling the launcher.

1. Tilt the front rail to remove the legs from inside the tube. Set aside.
2. Assemble the rail male to female until connection is flush.
3. In the leg receiver tube, one of the pins has a hex key attached. Use it to join the two rails. The male sleeve must be tightly expanded to firmly lock into the other rail.



Tighten connection by turning hex key COUNTER CLOCKWISE. To loosen, turn the hex key CLOCKWISE.




4. Insert the legs into the front receiver tubes and insert safety pin.




Carriage


5. Ensure the launcher arms are NOT in the up
6. Unhook bungees to allow the carriage to be pushed down to the end comfortably.

 Do not push with too many bungees as it makes it too difficult to push safely

- Roll the carriage to the bottom of the rail until it latches in the foot release by pushing with the heel of them palm of your hands forward axle bolts and nuts



 Never push carriage into position with the launching arms in the up position

- Immediately insert the “REMOVE BEFORE FLIGHT” flag through the rail. The holes are just in front of the carriage frame.

 Do not proceed without the safety pin correctly installed




- Raise the front release arms, pull back the center hammer bar and insert the release bar into the arm slots. Check both sides to make sure release bar is full engaged into the notches of the launcher arms.

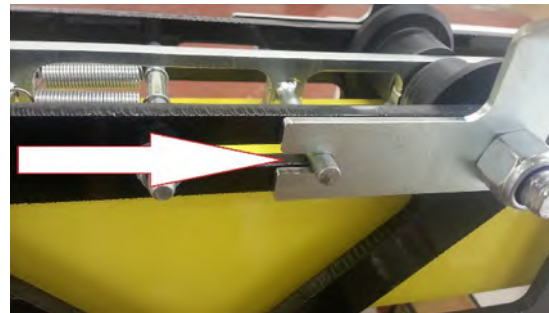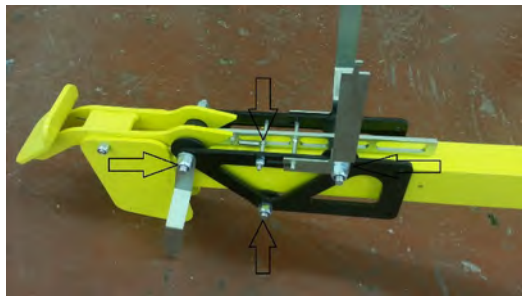

The carriage should be frequently checked for smooth operation from the top to the bottom of the rail by raising the carriage to the top of the rail with a slack cable and release. If the action is not smooth:

- *Check to make sure the axle bolts are not over tightened. The arms should swing freely when there are no bungees attached.*
- *Also check the spring retention bolt to make sure it has not been tightened so hard as to pinch the trolley carriage.*
- *Check the hammer springs for wear. If any of the four springs show spaces between the windings, it is becoming worn and will cause launching issues. Replace the springs if they show any signs of wearing (space between the windings).*
- *Also check the bottom trolley carriage bolt to make sure the rollers are not being pinched.*
- *Apply dry lubricant every 25 launches to help insure smooth operation.*


Bungee Cords

 *Never allow children near or around the aircraft or launcher*

10. To install the launcher, hold the pulley ring in one hand, and the end of a bungee in the other hand. Pull the bungee and attached the snap spring clip onto the pulley ring. Continue until the appropriate number of bungees are attached.




Generally speaking, the number of bungees required depends on the velocity of the wind and the condition of the rubber latex bungees. Over time and with much exposure to the sun, the bungees will lose of elasticity, thus requiring more bungees to launch.

 *It is NEVER recommended to you all 8 bungees all of the time. Doing so will cause excess wear and possible damage to the launcher triggering mechanism.*

Estimated Wind Speed (MPH)	Number of Bungees
0-6	8
7-19	7-6
20+	5

The launcher is now set and ready to use. To disassemble, reverse the steps noted above.

 *Never release the carriage without the aircraft installed! Doing so will damage the launcher*

Specifications Sheet

AgEagle RX60 Specifications

Manufacturer	
Manufacturer	AgEagle Aerial Systems, Inc. 117 S. 4th St. Neodesha, KS 66757 USA
Make and Model	AgEagle RX60
UAV Description	
Category	Fixed Wing (Flying Wing)
Composition	Composite/Hard Shell
Measurements	Wingspan: 54" (137.2 cm) Fuselage Length: 27" (68.58 cm) Prop. Dia.: 12" (30.48 cm)
Weight	Max Gross T.O.: 7.06 lb. (3.20 kg) Empty Weight: 4.36 lb. (1.97 kg) Payload Weight: 2.44 lb. (1.11 kg)
Propulsion System	Electric (Pusher)
Fuel/Energy System	2 x Li-Po Batteries 5500 mAh; 14.8V; 25C; 4 Cell
Take-Off Method	Catapult
Landing Method	Belly Landing
Navigation Equipment	PX4 Autopilot Dual GPS (L ₁ /L ₂ & Glonass) Handheld Flight Controller (Visual)
Electronic Surveillance Equipment	GPS through Tablet/PC/Smartphone
Flight Sensors	Barometric Altimeter, Airspeed Indicator, 2 x Accelerometer, 2 x Gyroscope, 2 x Magnetometer, GPS, Glonass
Redundant Systems	Low Battery Return to Launch No Radio Contact Return to Launch
Visual Detectability	High Visibility Graphics
Flight Performance	<i>Operating Airspeed:</i> 31-49 mph (13.8-22 m/s) <i>Cruise Airspeed:</i> 33 mph (14.7 m/s) <i>Max Descent Rate:</i> 394 ft./min (2 m/s) <i>Max Climb Rate:</i> 984 ft./min (5 m/s) <i>Max Turn Rate:</i> 150 deg/s <i>Endurance:</i> 60 mins. w/ Std. Batteries
Operating Limitations	<i>Operating Temp:</i> 32-170°F (0-76°C) <i>Demonstrated Wind:</i> 42 mph (18.8 m/s)



Max Recommended Wind: 30 mph (13.4 m/s)
 Daytime Operation Only
 Visual Line of Sight (VLOS) Required

Control Station	
Control Method	Pre-Programmed Autopilot Manual Flight Auto land
Flight Instrumentation	Altitude, Airspeed, Attitude, Heading, Climb/Descent Rate, Present Position
System Diagnostics and Monitoring	Low Battery
Environmental Warnings	N/A
Redundant Systems	N/A
Communications	
C2/Data Bands and Frequencies	2.4 GHz Handheld Flight Controller Cell Towers
Radio Range	2.4 GHz: ≈1 mile Cell Tower: Unlimited
Lost Link Indications	Low RSSI Radio Indication
Measures for Mitigation RF Interference	Remain in VLOS Stay clear of RFI sources (i.e. radio towers, etc.)
Single or Dual Redundant Control Links	Single
Voice Communication	
Primary ATC Communication	N/A (Pilot Defined)
Backup Communication	N/A (Pilot Defined)
Communication Latencies	N/A (Pilot Defined)
Ground Communication Systems	N/A (Pilot Defined)
Payload	
Payload Limitations	None
Dangerous Payload	Li-Po Batteries
Secondary Purpose of Payload	Aerial Photography
Increase to Pilot Workload	None



Troubleshooting Guide

FAQ

Q. Why do I have to make sure my aircraft travels into the wind throughout the mission?

- A. If the aircraft isn't flying into the wind during turns it will overshoot the next flight path. This can cause missing images at the turns throughout the mission and could result in inaccurate maps and/or missing data on maps.

Q. Why do I have to launch into the wind?

- A. When launching the aircraft it has to get up to flight speed in a very short amount of time. In order to make this achievable faster the aircraft must be launched into the wind to maximize airspeed. If launched with the wind, airspeed would be launch speed minus the wind speed, and most likely resulting in a failed launch.

Q. How do I locate a downed aircraft?

- A. There are two main methods for locating an aircraft if it doesn't land where you intended.
- *Using GPS coordinates from PC/Tablet.*
 - It's important that you do not turn off the PC/Tablet in case the aircraft is damaged or has lost signal and is not able to report its location.
 - Using the last reported position from Botlink and/or PC start heading towards the aircraft. Make note of the last known altitude and speed as the aircraft could glide farther from the last GPS location if still airborne.
 - *Using the Taranis Flight Controller RSS (Radio Signal Strength).*
 - The flight controller can be used as a radio beacon detector

Q. What happens if my flight controller loses power during flight?

- A. If flying in close proximity of any obstacles we recommend that you immediately cancel the flight. Without the ability to take manual control of the aircraft it can present a dangerous situation if something should go wrong. If no risks are present, the flight can be allowed to finish on autopilot mode.
- Emergency landing from PC/Tablet.
 - On the mission control screen of the Botlink application, there is a button that brings the aircraft back home.

Q. What happens if my PC/Tablet loses power during flight?

- A. If no risks are present the flight can be allowed to finish in autopilot mode. If a problem occurs during flight, use the flight controller to take manual control of the aircraft and land in a safe location.



This is why it's important to plan flights within the aircrafts endurance (battery life). It is also important to be able to take manual control at any time during the flight.

Q. What happens if my camera lens gets scratched?

- A. If your camera lens is scratched it could interfere with the imaging process and cause inaccurate mapping results. The lens should be replaced before any more missions are flown.

Q. Do weather conditions affect flight?

A. Yes! Do not fly in rain, sleet, or snow. Do not fly in winds above your comfort level, or above 30 mph. A very hot day may require more bungees than a cold day. A cold day (below 40 degrees) may affect the bungees on the launcher, and stretch them out.

Q. Does altitude affect flight?

A. Yes! Flying at a higher altitude requires a larger prop to get the aircraft airborne. We provide larger props for areas 4000 feet above sea level.

Q. What happens if you plan a mission longer than the aircraft endurance?


A. Although the AgEagle has a minimum safe voltage in the autopilot which will cause the flying wing drone to head home and land automatically, it should only be used as an emergency back up. A more responsible and safe way to operate the AgEagle drone is to monitor the battery voltage as displayed on the Android tablet. When the battery voltage approaches 14.2 volts, the landing sequence should be initiated by flipping the yellow switch on the Taranis to the middle position for "RTL" return to landing. Or hold the play button down on the top right hand corner of the Android tablet to begin the RTL.

Emergency Landing Procedures

- If your aircraft is set to land into an object
 - Let the aircraft loiter normally, but when the plane exits the loiter at 125 feet, kick it into manual mode. From here, nose the aircraft hard down and move left or right to avoid the object. When the aircraft is close to the ground, make sure to nose the aircraft back up for a softer landing. Safety features help the aircraft from nosing down too much, but if the aircraft doesn't nose down enough or have enough motor movement, it can drop below the stall speed and stall

RX60 Wing

- Carbon fiber servo push rods are damaged/disconnected
 - If the carbon fiber rods have come loose at the end of the carbon fiber, you can use 5 minute epoxy included in your ground support kit to attach the rods
 - If the carbon fiber rod has frayed or cracked, DO NOT FLY! Contact Raven for replacement carbon fiber rods
- Clearing Pitot Tube
 - Before every flight, you should look down the metal Pitot tube. The connecting tubes leading out of the back of the metal Pitot tube are clear, so you should see daylight through the Pitot tube. If you don't see daylight in the tube, the Pitot tube is plugged, DO NOT FLY! Also, if the pitot tube is ever damaged, bent or misaligned, do NOT fly until the pitot tube is replaced.
 - To clear the Pitot tube, remove the tube from the back of the Pitot tube, then, run the small metal wire through the tube. This will clear the debris, and you can reinstall the tubes. **WHEN CLEARING PITOT TUBE, DO NOT POKE A HOLE IN THE FLEXIBLE TUBE! MAKE SURE TO REINSTALL THE RUBBER TUBES ON THE CORRECT PITOT TUBE OUTLET!**
 - The photo below demonstrates the correct installation of the tubing. The top tube from the airspeed sensor should go to the main Pitot tube outlet.

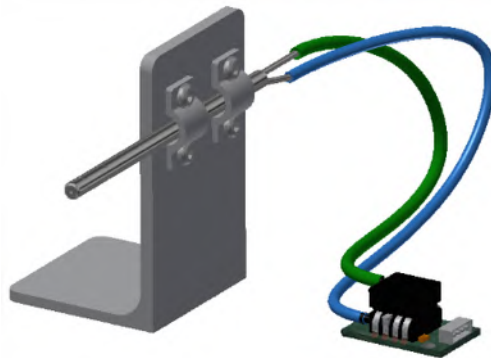

- If nylon screw for the winglets pulls the metal insert out

- Apply a small amount of Gorilla Glue to the metal insert. Gorilla Glue requires a small amount of water to start the chemical reaction. Since Gorilla Glue also expands, use painter's blue masking tape to hold the metal insert in place. Gorilla Glue takes about 2 hours for 80% of the reaction to take place.
- Bent motor shaft
 - If the motor shaft is bent, DO NOT FLY! This can cause blurry images, poor flight times, and possible crash
 - Contact Raven for support
- Installing a new propeller
 - Use a screwdriver or stiff metal rod inserted through the hold on the end of the collet by turning counter clockwise.
 - Remove the propeller from the collet, and replace with an undamaged propeller. **MAKE SURE THE WRITING ON THE PROPELLOR IS FACING TOWARDS THE MOTOR WHEN REINSTALLING**
 - Slide the collet back on the motor shaft as far as it will go. Tighten with the screwdriver or stiff metal rod.
- Launcher lug falls out/loose
 - Use Gorilla Glue to reinstall the launcher lug. Gorilla Glue requires a small amount of water to start the chemical reaction. Gorilla Glue also expands, so have something holding the metal insert in place. Gorilla Glue takes about 2 hours for 80% of the reaction to take place.
- Making simple repairs to leading edge.
 - Gorilla Tape can fix minor damage on the leading edge of the plane. After you have applied the tape, make sure the aircraft still has the correct center of gravity
 - You can check the center of gravity by putting 2 fingers on the balance line on the bottom of the aircraft. The aircraft should balance at that line. If that is balanced, then balance the aircraft left and right. This can be done by placing a finger in the center of the nose bumper and a finger by the motor, and check for balance.
- Making simple repairs to wing surfaces
 - Gorilla Tape can be used to fix minor damage to the wing surfaces. Check aircraft for balance.
 - You can check the center of gravity by putting 2 fingers on the balance line on the bottom of the aircraft. The aircraft should balance at that line. If that is balanced, then balance the aircraft left and right. This can be done by placing a finger in the center of the nose bumper and a finger by the motor, and check for balance.
 - You can also use a syringe and Gorilla Glue to fix minor cracks. Make sure the plane is held tightly together after applying, because Gorilla Glue expands. Check aircraft for balance.



- You can check the center of gravity by putting 2 fingers on the balance line on the bottom of the aircraft. The aircraft should balance at that line. If that is balanced, then balance the aircraft left and right. This can be done by placing a finger in the center of the nose bumper and a finger by the motor, and check for balance.
- How “bad” is bad. I had a hard landing, but how can I tell if the wing is OK and not bent out of shape?
 - If the aircraft has a crack or crease running through the plane, and if the plane wing can be bent while holding onto one side, DO NOT FLY!
 - If you ever question the integrity of the aircraft, DO NOT FLY and call Raven for questions.

Launcher

- Sluggish action (same weather conditions but just slow at launch)
 - Check the overall status of the launcher
 - This can be done with 2 tests. The first, undo all of the bungees and hold the cable above the launcher. Let the carriage go, and it should roll down the rail with ease. If it slows or gets hung up, you may have a problem with an overtightened carriage or the hex bolt isn't tight enough
 - The second test is dry launching with one bungee. This will slow the motion down so you can see if you have any issues
 - NEVER DRY LAUNCH WITH MORE THAN ONE BUNGEE
- Stiff action (carriage does not seem to roll smoothly).
 - Make sure to tighten the hex key until it's tight
 - Use a dry lubricant on the launcher rail
 - If anyone worked on the carriage, they may have over tightened the axle bolts or spring retention bolt. The arms should swing easily when not under tension and the spring retention bolt should allow for some slight free movement.
 - Should the problem persist, it could be due to a slight bowing of the launch rail at the connection joint. In this case, replace the BOTTOM ½” carriage axle bolt with a 7/16” x 4” hex head screw bolt. Do not over tighten.
- Identifying worn or degraded bungees
 - If the bungees are frayed or cracked, you should replace. Over time, bungees can show signs of wear when you stretch them, we recommend replacing at least every 2 years.
 - The life of the bungees can be extended by disconnecting at the end of the flying day or putting into storage. Never store the bungees in direct sunlight.
- Identifying worn or degraded springs.
 - If springs show signs of being stretched and no longer hold tension, replace all of them.
- Identifying worn or degraded bumpers



- The rubber stop bumpers are necessary to protect the hammer/trigger from excessive wear and to reduce the expended energy following each launch. Look for excessive cracking or being substantially out of round. The life of the bumpers can be extended by loosening their retention bolts and rotating them slightly a few times throughout the flying season.
- If they show excessive wear, replace all of them.
- Adjusting launcher arms. (became bent during transport or dropped)
 - Set the aircraft on the launcher and line up the launcher arms. The aircraft should sit at an 18 degree slope, and should face directly down the launcher rail. Bend the launcher arm until it fits in the aircraft's lugs, but make sure the aircraft still sits straight and level.
- Damage to center trigger bar/hammer (due to excessive use of bungees).
 - It is possible to damage the hammer it can be straightened, but once it's been bent, it will be subject to accelerated wear. Order a replacement as soon as possible.

Charger and Batteries

- Puffy batteries - What causes it? Are they dangerous?
 - Puffy batteries are a sign that the battery is damaged or worn. LiPo batteries are high energy devices and are more sensitive to shock or misuse. Never toss a battery; always place it gently. Do not place heavy or sharp edged items on a battery as any pressure could compromise the cells resulting in an unwanted, aggressive chemical reaction and possible fire.
 - Batteries can also become enlarged from being discharged too much. Aircraft batteries should always remain ABOVE 20% battery. If you drop below this often, the battery life will become significantly less
 - Make sure to use LIPO BALANCE on the charger at least every 5th time you charge
 - Batteries can also become puffy after a crash. If the battery is puffy after a crash, you should dispose of the battery
 - If a corner of the battery is dented, dispose of the battery
 - You should always remain in the same room as the battery charger if you are charging the batteries
 - To avoid charging or battery damage, THOROUGHLY read the charger manual.
- When batteries are not in use, do not store fully charged, but discharge them to 50% capacity. This will help reduce the chances of a battery dropping a cell, and becoming unsafe to use
- Use the battery checker included in your ground support kit
 - Do not fly on partially charged batteries.
 - Check each cell of the battery to make sure you don't have a dropped cell within a battery



Index

Hardware · 8

A

Aircraft · 8, 42, 43, 47

Airspeed Indicator · 9

Autopilot · 8

B

Batteries · 9

C

Controls and Operation · 12

D

Disclaimer · 1

E

Electronic Speed Controller (ESC) · 10

F

FAQ · 49, 51

Final Checks & Takeoff · 17

Flight · 14

Flight Limits and No Fly Zone · 14

G

GPS Receiver · 9

H

Handheld Flight Controller · 12

I

Included in the Box · 6

Initial Setup & Calibration · 15

K

Key Features · 7

L

Left Stick Operation · 12

Legend · 1

M

Mission Planning · 16

O

Operational Flying Conditions · 14

P

Pre-Arming Sequences · 15

Pre-flight Procedures & Checklist · 20

Product Overview · 6

R

Right Stick Operation · 13

S

Sensor Calibration · 17



Servos · 10

T

Switch Operation · 13

Takeoff & Flight · 17
