

RELAY PIN CODES - CROSS REFERENCE

This table lists Relays in Pin Code order to enable you to quickly identify the correct relay.
The configuration and BR Specification number is also given to ensure you have the correct item.

Note: Some relays are only available as repair items.

Code	Cat No.	Configuration	Spec
PC001	0085/000350	12F4B	BR930
PC001	0085/000360	8F4B	BR930
PC001	0085/000500	12F4B	BR930
PC001	0085/000510	8F4B	BR930
PC002	0085/000370	8F8B	BR930
PC002	0085/000380	6F6B	BR930
PC002	0085/000390	4F4B	BR930
PC002	0085/000520	8F8B	BR930
PC002	0085/000530	6F6B	BR930
PC002	0085/000540	4F4B	BR930
PC003	0085/000410	12F4B	BR930
PC003	0085/000420	8F4B	BR930
PC003	0085/000560	12F4B	BR930
PC003	0085/000570	8F4B	BR930
PC004	0085/000430	8F8B	BR930
PC004	0085/000440	6F6B	BR930
PC004	0085/000450	4F4B	BR930
PC004	0085/000580	8F8B	BR930
PC004	0085/000590	6F6B	BR930
PC004	0085/000600	4F4B	BR930
PC004	0088/047293	8B	
PC005	R082/214282	12F4B	
PC008	0085/001015	8F6B	BR935A
PC008	0088/047294	6B	
PC009	0085/001070	11F4B	BR935A
PC009	0088/044611	8F4B	
PC009	0088/044612	12F4B	
PC009	0088/044613	11F4B	
PC011	0085/001080	11F4B	BR935A
PC011	0088/044333	12F4B	
PC011	0088/044614	8F4B	BR935A
PC011	0088/044615	11F4B	
PC011	0088/047295	4B	
PC012	0088/030640		
PC012	0088/030687	8F8B	
PC014	0085/001130	8N8R	BR936A
PC014	0085/001140	4N4R	BR936A
PC015	0088/044179	12N4R	BR936A
PC016	0085/001160	8N8R	BR936A
PC016	0085/001170	4N4R	BR936A
PC017	0085/001860	4F4B4F4B	BR961
PC017	0085/001870	2F2B2F2B	BR961
PC019	0085/001431	4F4B	
PC020	0088/011094	4F4B	
PC020	0088/011095		
PC020	0088/030749		
PC020	0088/030832		
PC020	0088/047011		
PC020	0088/047089		
PC020	0088/047217		
PC020	0088/047261		
PC021	0085/000650	12F4B	BR931
PC021	0085/000660	8F4B	BR931
PC022	0085/000670	8F8B	BR931
PC022	0085/000680	6F6B	BR931
PC022	0085/000690	4F4B	BR931
PC023	0085/000710	12F4B	BR931
PC023	0085/000720	8F4B	BR931A
PC024	0085/000730	8F8B	BR931A

Code	Cat No.	Configuration	Spec
PC024	0085/000740	6F6B	BR931A
PC024	0085/000750	4F4B	BR931A
PC025	0085/000800	12F4B	BR932A
PC025	0085/000810	8F4B	BR932A
PC026	0085/000820	8F8B	BR932A
PC026	0085/000830	6F6B	BR932A
PC026	0085/000840	4F4B	BR932A
PC027	0085/000860	12F4B	BR932A
PC027	0085/000870	8F4B	BR932A
PC028	0085/000880	8F8B	BR932A
PC028	0085/000890	6F6B	BR932A
PC028	0085/000900	4F4B	BR932A
PC029	0085/002040	8F4B	BR966
PC030	0085/001730	2F2B	BR966
PC033	0088/030602	12F4B	
PC034	0088/030970	8F8B	
PC035	0088/044607	2F1B	
PC038	0088/044305	4F4B	
PC041	0085/000950	8F4B	BR933A
PC042	0088/044168	4F2B	
PC043	0085/000960	8F4B	BR933A
PC044	0088/044678	6F6B	
PC045	0088/030830	4F2B	
PC046	0088/030933	4F4B	
PC049	0085/001850	6F2B6F2B	BR961
PC049	0088/034302	6F2B6F2B	BR961
PC050	0088/030969	4F4B	
PC051	0088/030604	6F2B6F2B	
PC054	0085/001710	4F3B4F3B	BR960
PC054	0085/001720	2F1B2F1B	BR960
PC055	0085/001700	6F1B6F1B	BR960
PC056	0085/001740	6F1B6F1B	BR960
PC057	0085/001600	4F4B4F4B	BR960
PC057	0085/001610	2F2B2F2B	BR960
PC058	0088/044323	4F4B4F4B	
PC059	0088/044691	6F2B6F2B	
PC060	0085/001750	4F3B4F3B	BR960
PC060	0085/001760	2F1B2F1B	BR960
PC060	0088/047300		
PC061	0085/001010	8F4B	BR934A
PC062	0086/023451	TY206	
PC063	0085/001020	8F4B	BR934A
PC063	0088/047296		
PC065	0088/044622	4F	
PC066	0088/044134	4F4B	
PC067	0088/044626	2F2B	
PC068	0088/030587	4F4B	
PC069	0088/030588	4F4B	
PC070	0085/001400	2F2B	BR942
PC071	0085/001350	4F	BR941A
PC075	0088/044178	8F4B	
PC076	0088/047062	1F1B	
PC077	0085/001435	4F2B	
PC078	0088/030775		
PC079	0085/001426	4F2B	
PC081	0085/001290	4F2B	BR940A
PC081	0085/001300	4F	BR940A
PC082	0082/214284	4F2B	
PC085	0088/044142	4F4B	

**This table lists Relays in Pin Code order to enable you to quickly identify the correct relay.
The configuration and BR Specification number is also given to ensure you have the correct item.**

Note: Some relays are only available as repair items.

Code	Cat No.	Configuration	Spec
PC086	0088/044229	4F2B	
PC089	0088/044322	4F2B	
PC091	0085/001450	4F	BR945
PC092	0085/001590	6F2B6F2B	BR960
PC093	0088/030591	8F4B	
PC095	0088/030940	4F4B4F4B	
PC097	0085/001820	4F4B4F4B	BR961
PC097	0085/001830	2F2B2F2B	BR961
PC098	0085/001810	6F2B6F2B	BR961
PC101	0085/000200	2F	BR938A
PC104	0085/000230	2F	BR966
PC105	0085/000250	2F	BR939A
PC106	0088/047289		
PC107	0082/222809		
PC110	0085/000280	2F	BR966
PC111	0085/000300	2F	BR968
PC112	0088/030512	8F8B	BR930
PC117	0088/044627	4F2B	
PC118	0088/044608	2F1B	
PC120	0088/030563	3F1B4F4B	
PC120	0088/030564	3F1B4F4B	
PC120	0088/044198	3F1B4F4B	
PC123	0085/001220	2F1B	BR937A
PC124	0085/001240	2F1B	BR937A
PC131	0088/043875		
PC133	0085/001970	6F3B	BR930
PC133	0088/044580	6F3B	
PC135	0082/224005	1F1B	
PC136	0088/038107	2F	
PC137	0088/030863	2F	
PC138	0088/047242	1C/01C/0	
PC139	0088/030730	1F1B	
PC139	0088/030879	1F1B	
PC139	0088/030880	1F1B	
PC139	0088/030916	1F1B	
PC139	0088/030931	1F1B	
PC139	0088/044609	1F1B	
PC139	0088/044610	1F1B	
PC140	0085/001465	1F1B	BR947
PC142	0088/044093		
PC142	0088/047080		
PC142	0088/047260		
PC143	0088/017279	1F(HD)1F1B	
PC144	0088/047265	2C/0 BY 4	
PC145	0088/047266	3F BY 4	
PC146	0088/030933	4F4B	
PC147	0085/002510	2C/0 BY 4	
PC148	0088/037536	1F	
PC151	0088/038108	6F2B	
PC152	0088/044625	8F4B	
PC154	0088/000438		
PC155	0088/000431		
PC156	0088/047250		
PC156	0088/047290		
PC157	0088/000432		
PC158	0088/047268		
PC161	0088/033720	2F(HD)4F4B	BR943
PC163	0088/044047	2F(HD)4F4B	BR943
PC164	0088/044172	2F(HD)4F4B	BR943

Code	Cat No.	Configuration	Spec
PC165	0088/030780	2F(HD)4F4B	
PC166	0085/001545	2F(HD)4B	BR966
PC167	0085/001535	2F(HD)4B	BR966
PC168	0082/214257		
PC169	0088/044592	2MF2MB	
PC170	0085/001505	2F(HD)4B	BR943
PC172	0085/001515	2F(HD)4B	BR943
PC174	0088/047259	1F	
PC175	0088/047292		
PC176	0088/047291		
PC177	0082/224007		
PC179	0085/001595	6F2B	
PC181	0082/214260		
PC185	0086/024800		
PC186	0088/047288		
PC189	0085/001460	1F1B	BR947
PC189	0085/001461	ET-R1	
PC189	0088/030962	1F1B	BR947
PC190	0085/001462	1F/1B2B ET-R3	
PC190	0085/002272	2B1F1B	BR947
PC191	0085/001455	1F1B	BR947
PC192	0085/002271	2B1F1B	BR947
PC194	0085/001815	2F2B	BR961
PC199	0085/001463	2F1B ET-E4	BR930
PC201	0085/001955	2F2B	BR931A
PC203	0088/030571	2F	
PC207	0088/044681	12F4B	
PC208	0088/074236	8F8B	
PC209	0085/001665	6F2B6F2B	BR960
PC210	0085/001660	4F4B4F4B	BR960
PC211	0085/001640	4F4B4F4B	BR960
PC211	0085/001650	2F2B2F2B	BR960
PC211	0088/047297	4F4B	
PC212	0085/001630	6F2B6F2B	BR960
PC212	0088/047298	2F2B	
PC213	0085/001930	4F4B4F4B	BR963
PC214	0085/001920	6F2B6F2B	BR963
PC215	0085/001960	4F4B4F4B	BR963
PC216	0085/001950	6F2B6F2B	BR963
PC216	0088/047299	2B2B	
PC219	0088/030831	4F4B4F4B	
PC220	0082/214283	6F2B6F2B	
PC222	0088/030860	8F4B	
PC229	0088/035528		
PC230	0088/035527		
PC231	0088/044620	8F	
PC232	0085/002500	1F1B	BR946
PC233	0085/002502	1F1B	BR946
PC234	0085/002504	1F1B	BR946
PC235	0085/002506	1F1B	BR946
PC236	0085/002508	1F1B	BR946
PC237	0085/002509	3F1B	
PC238	0088/047234	2C/0	
PC239	0085/001180		
PC242	0085/002472	4F1B	
PC242	0088/047282	4F1B	
PC243	0088/000363	3C/0	
PC250	0088/047287		
PC251	0088/044605	1C/0	

This table lists Relays in Pin Code order to enable you to quickly identify the correct relay. The configuration and BR Specification number is also given to ensure you have the correct item.

Note: Some relays are only available as repair items.

Code	Cat No.	Configuration	Spec
PC252	0088/044606	1F1B	
PC254	0088/044086	1F1B	
PC255	0088/044248	1F1B	
PC256	0088/044124	4F4B	
PC257	0088/044127	8F4B	
PC258	0088/030641		
PC259	0088/044123	1F1B	
PC260	0088/044257	1F1B	
PC263	0088/044679	12F4B	
PC263	0088/044680	8F4B	
PC264	0088/044678	6F6B	
PC271	0088/044060	4F4B	
PC286	0085/001351	4F	BR948
PC289	0088/047302		
PC292	0088/044334	4F4B4F4B	
PC296	0088/044688	4F3B4F3B	
PC297	0088/044254	6F1B6F1B	
PC301	0088/044687	6F2B6F2B	
PC303	0088/030726	2F2B	
PC304	0082/214269		
PC323	0088/044604	1F1B3F1B4F4B	
PC338	0088/044690	4F4B4F4B	
PC339	0088/044176	6F2B6F2B	
PC340	0088/030739	4F4B	
PC341	0088/030648	8F4B	
PC458	0088/044288	6F3B	
PC568	0085/001667		
PC569	0085/001569	4F2B	
PC869	0085/001583	5F3B5F3B	
PC870	0085/001586	4F3B4F3B	
PC872	0088/030943	2F2B2F2B	
PC1044	0088/030850	5F3B5F3B	
PC1046	0088/043857	5F3B5F3B	
PC1048	0088/030812	2F	
PC1050	0088/025244		
PC1051	0088/047224		
PC1052	0085/001890	2F1B4F4B	BR962
PC1053	0085/001910	2F1B4F4B1F1B	BR962
PC1054	0085/001880	2F1B6F2B1F1B	BR962
PC1056	0088/030508	2F	
PC1056	0088/030509	2F	
PC1056	0088/030887	2F	
PC1056	0088/030919	2F	
PC1057	0085/000620	8F8B(HD)	BR966
PC1057	0085/000630	8F8B(HD)	BR966
PC1057	0088/030900	8F8B(HD)	BR966
PC1059	0085/001900	2F1B6F2B1F1B	BR962
PC6002	0088/002610		
PC6003	0088/002611		
PC6011	0088/030903		
PC6013	0088/030482		
PC6014	0088/047235		
PC6015	0088/047034		
PC6026	0085/001444	16F	
PC6027	0088/044684	4F(NS)4F4B	
PC6041	0088/030706	1F1B	
PC6042	0082/214261	2F	
PC6043	0088/047077	2F3F	
PC6044	0088/047079		

Code	Cat No.	Configuration	Spec
PC6045	0088/047076	2F3F	
PC6046	0085/001550	1F3B	BR949
PC6047	0085/001560	1F3B	BR949
PC6058	0088/028073	2F/B	
PC6058	0088/047286	3C/03C/0	
PC6059	0088/047101		
PC6061	0088/047074	4F4B	
PC6062	0088/047075		
PC6063	0088/047078		
PC6063	0088/047250		
PC6063	0088/047262		
PC6063	0088/047271		
PC6063	0088/047272		

If you are disposing of relays or for further assistance with relays and pincodes, please call 01270 847708.