

S8 Escape[™] System

Reorder number: 338175/2 05 01

USER'S MANUAL English


www.resmed.com Waking people up to sleep


RESMED


S8 Escape[™]


Component of 338175/2


ILLUSTRATIONS

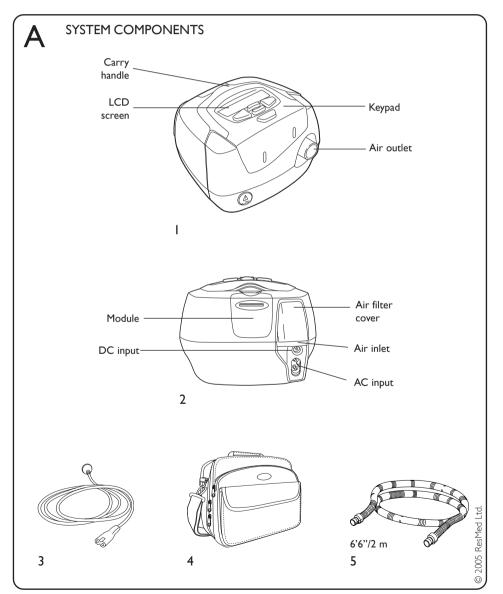


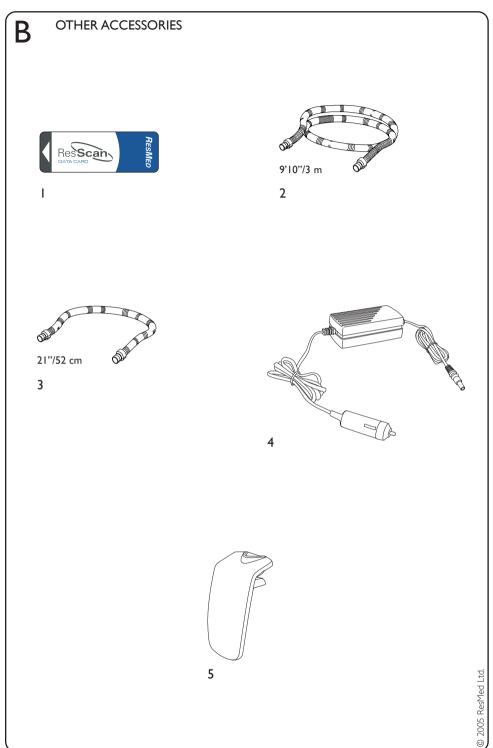


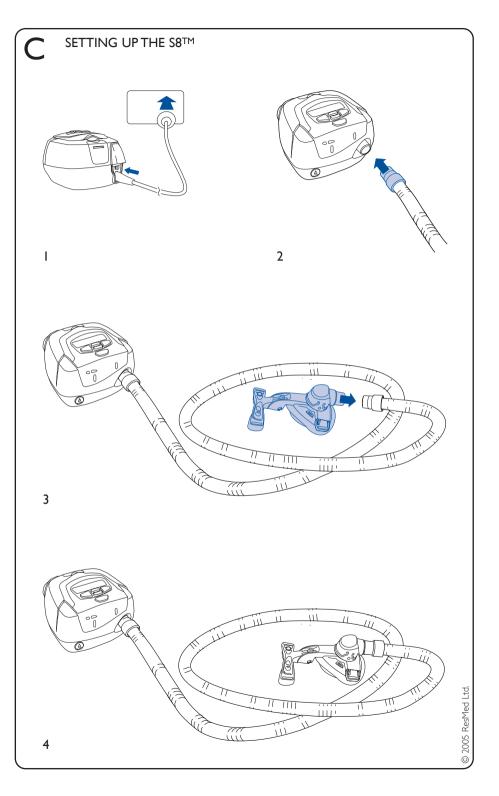

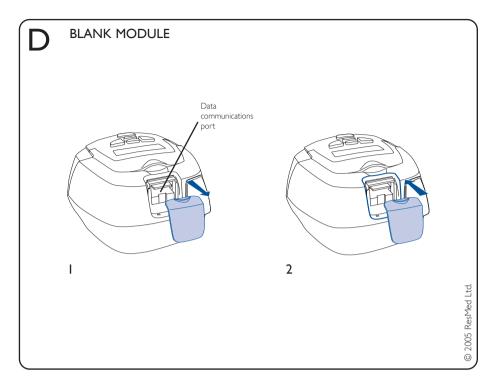


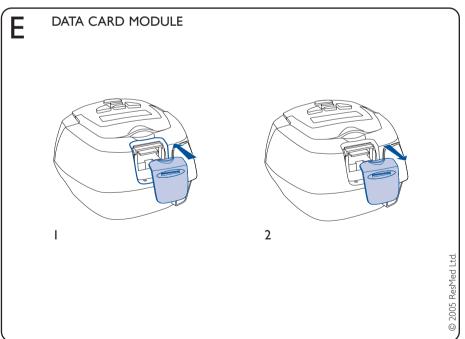


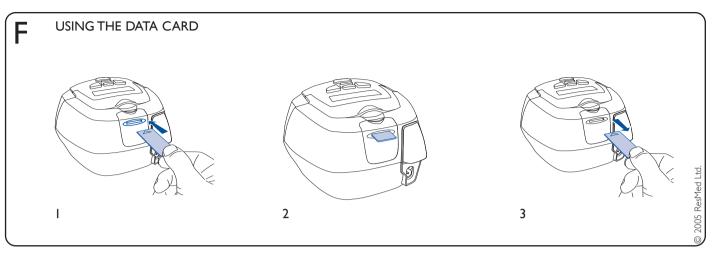

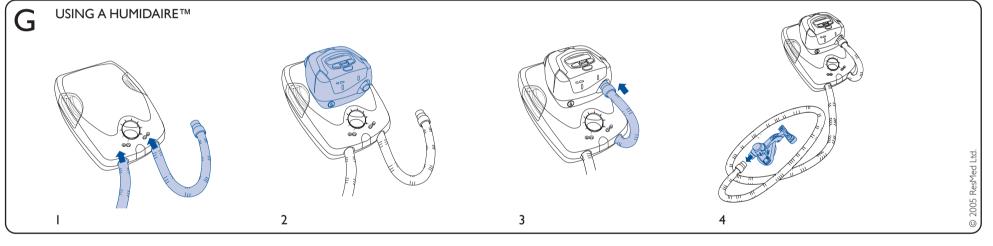

 Note: Some products not available in all regions

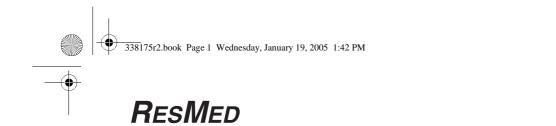




S8 Escape[™] System


Reorder number: 338175/2 05 01 USER'S MANUAL

  
English

 






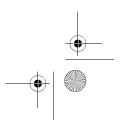





ResMed Ltd | I Elizabeth MacArthur Drive Bella Vista NSW 2153 Australia Tel: +61 (2) 8884 1000 or 1 800 658 189 (toll free) Fax: +61 (2) 8883 3114 Email: reception@resmed.com.au

ResMed Offices:

ResMed Corp 14040 Danielson Street Poway CA 92064-6857 USA

Tel: +1 (858) 746-2400 or I-800-424-0737 (toll free) Fax: +1 (858) 746-2900 Email: reception@resmed.com

ResMed (UK) Ltd 65 Milton Park Abingdon Oxfordshire OX14 4RX UK

Tel: +44 (1235) 862 997 Fax: +44 (1235) 831 336 Email: reception@resmed.co.uk

ResMed Asia Pacific Ltd 97 Waterloo Road North Ryde NSW 2113 Australia

Tel: +61 (2) 9886 5000 or 1 800 991 900 (toll free) Fax: +61 (2) 9889 1471 Email: reception@resmed.com.au

ResMed Finland Niittykatu 6 FIN 02200 Espoo Suomi

Tel: +358 9 8676820 Fax: +358 9 86768222 Email: reception@resmed.fi

ResMed GmbH & Co. KG Fraunhoferstraße 16, 82152 Martinsried Deutschland

Tel: +49 (0) 89 / 99 01 - 00 Fax: +49 (0) 89 / 99 01 - 10 55 Email: reception@resmed.de

ResMed Hong Kong Ltd Room 1714 Miramar Tower 132-134 Nathan Road Tsim Sha Tsui Hong Kong

Tel: +852 2366 0707 Fax: +852 2366 4546 Email: reception@resmed.com.hk

ResMed Japan Nihonbashi Hisamatsu Bldg. 4F 2-28-1 Nihonbashi-Hamacho Chuo-Ku Tokyo 103-0007 Japan Tel: +81 (3) 3662 5056 Fax: +81 (3) 3662 5040

ResMed Malaysia Sdn Bhd Suite E-10-20 Plaza Mon't Kiara No. 2 Jalan 1/70C Mon't Kiara 50480 Kuala Lumpur Malaysia Tel: +60 3 6201 7177 Fax: +60 3 6201 2177 Email: reception@resmed.com.my

ResMed NZ Ltd PO Box 51-048 Pakuranga Auckland New Zealand

Tel: +0800 737 633 (NZ toll free) or +64 274 737 633 Fax: +0800 737 634 (NZ toll free) or +64 9 239 0193 Email: reception@resmed.co.nz

ResMed SA Parc de la Bandonnière 2 rue Maurice Audibert 69800 Saint-Priest France

Tel: +33 (0) 4 37 251 251 Fax: +33 (0) 4 37 251 260 Email: reception@resmed.fr

ResMed Singapore Pte Ltd 238A Thomson Road # 12-03/04 Novena Square Tower A Singapore 307684 Tel: +65 6284 7177 Fax: +65 6284 7787 Email: reception@resmed.com.sg

ResMed Spain SL C/ Arturo Soria 245 28033 Madrid España

Tel: +34 (93) 590 8154 Fax: +34 (93) 590 8153 Email: angelo@resmed.es

ResMed Sweden AB Industrigatan 2 S-461 37 Trollhättan Sverige

Tel: +46 520 420 110 Fax: +46 520 397 15 Email: reception@resmed.se

Labhardt AG Thannerstrasse 57 CH-4054 Basel Schweiz

Tel: +41 (061) 307 9711 Fax: +41 (061) 307 9722 Email: info@labhardt.ch

US DESIGNATED AGENT: ResMed Corp

EU AUTHORISED REPRESENTATIVE: ResMed (UK) Ltd

www.resmed.com

Protected by patents: US 4944310, US 5199424, US 5522382, US 6705315. Other patents pending. Design registrations pending.

S8. S8 Escape. HumidAire. Mirage Activa. Mirage Vista. Ultra Mirage. Mirage Swift and ResScan are trademarks of ResMed Ltd. Papillon is a trademark of MAP Medizin-Technologie GmbH.

© ResMed Ltd 2005.


















CONTENTS

| Introduction | 1 |
|-----------------------------------|-------------|
| Your Responsibility | 1 |
| MEDICAL INFORMATION | 1 1 2 |
| WARNINGS | 2 |
| Cautions | 3 |
| ADVERSE EFFECTS | 3 |
| THE S8 ESCAPE SYSTEM | 5 5 |
| Masks | 5 |
| Humidifiers | 6 |
| RESSCAN DATA CARD MODULE | 6 |
| ACCESSORIES | 6 |
| HOW TO USE THE S8 ESCAPE | 7 7 |
| ASSEMBLE THE MASK | 7 |
| START TREATMENT | 7 |
| STOP TREATMENT | 8 |
| HOW TO ATTACH A HUMIDIFIER | 9 9 |
| HOW TO USE THE KEYPAD | 10 11 |
| S8 MODULES | 14 |
| Using a Blank Module | 14 |
| Using a ResScan Data Card Module | 14 |
| CLEANING AND MAINTENANCE | |
| Daily Cleaning Weekly Cleaning | 16 16 |
| PERIODIC CLEANING | 16 |
| REPLACING THE AIR FILTER | 17 |
| Servicing | 17 |
| FREQUENTLY ASKED QUESTIONS | 18 |
| TROUBLESHOOTING | |
| SYSTEM SPECIFICATIONS | 23 |
| S8 ESCAPE | 23 |

 










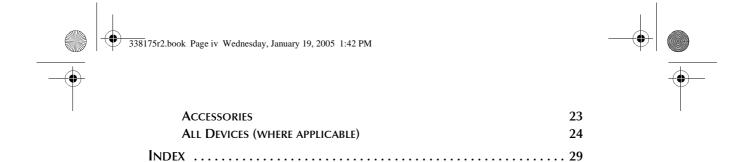





INTRODUCTION



Introduction

Thank you for choosing the **S8 ESCAPE**TM flow generator. The **S8 ESCAPE** is a compact, all-in-one package with an inbuilt power supply and the option of integrated data management and humidification.

This user manual contains the information you need for the correct use of your S8 ESCAPE.

YOUR RESPONSIBILITY

The owner or user of this system shall have sole responsibility and liability for any injury to persons or damage to property resulting from:

- operation which is not in accordance with the operating instructions supplied
- maintenance or modifications carried out unless in accordance with authorised instructions and by authorised persons.

Please read this manual carefully before use.

This manual contains special terms and icons that appear in the margins to draw your attention to specific and important information.

- Warning alerts you to possible injury.
- Caution explains special measures for the safe and effective use of the device.
- Note is an informative or helpful note.

MEDICAL INFORMATION

 
ABOUT THE S8 ESCAPETM

The S8 ESCAPE continuous positive airway pressure (CPAP) system is indicated for the treatment of obstructive sleep apnoea (OSA) in adult patients.

The S8 ESCAPE CPAP system is intended for home and hospital use.





















The S8 ESCAPE is not a life support device and may stop operating during power failure or certain fault conditions. It should not be used by patients who are dependent on continuous therapy.

Positive airway pressure therapy may be contraindicated in some patients with the following pre-existing conditions:

- severe bullous lung disease
- · pneumothorax
- · pathologically low blood pressure
- dehydration
- cerebrospinal fluid leak, recent cranial surgery, or trauma.

WARNINGS

 
- Read the entire manual before using the S8 ESCAPE.
- Advice contained in this manual should not supersede instructions given by the prescribing physician.
- A patient should not connect a device to the data communication port unless instructed to do so by their health care provider or physician. Only ResMed products are designed to be connected to the data communication port. Connecting other devices could result in injury, or damage to the S8 ESCAPE device.
- The S8 ESCAPE should only be used with masks (and connectors)* recommended by ResMed, or by a physician or respiratory therapist. A mask should not be used unless the S8 ESCAPE device is turned on and operating properly. The vent hole or holes associated with the mask should never be blocked.

Explanation: The S8 Escape is intended to be used with special masks (or connectors)* which have vent holes to allow continuous flow of air out of the mask. When the device is turned on and functioning properly, new air from the device flushes the exhaled air out through the mask vent holes.

However, when the device is not operating, insufficient fresh air will be provided through the mask, and the exhaled air may be rebreathed. Rebreathing of exhaled air for longer than several minutes can, in some circumstances, lead to suffocation. This applies to most models of CPAP devices.

- In the event of power failure or machine malfunction, remove the mask.
- The S8 ESCAPE can be set to deliver pressures up to 20 cmH₂O. In the unlikely event of certain fault conditions, pressures up to 30 cmH₂O are possible.

Ports may be incorporated into the mask or in connectors that are near the mask.














 338175r2.book Page 3 Wednesday, January 19, 2005 1:42 PM





• If oxygen is used with this device, the oxygen flow must be turned off when the device is not operating.

Explanation: When the CPAP device is not in operation and the oxygen flow is left on, oxygen delivered into the air delivery tubing may accumulate within the CPAP machine enclosure and create a risk of fire. This applies to most types of CPAP machines.

- Oxygen supports combustion. Oxygen should not be used while you are smoking or in the presence of an open flame.
- Always ensure airflow is being generated by the device before the oxygen supply is turned on.
- Always turn the oxygen supply off before stopping the airflow from the device.

Note: At a fixed rate of supplemental oxygen flow, the inhaled oxygen concentration will vary, depending on where the oxygen is introduced, the pressure settings, patient breathing pattern, mask selection and leak rate.

- Do not use the S8 ESCAPE if there are obvious external defects or unexplained changes in performance.
- Do not open the S8 ESCAPE case. There are no user serviceable parts inside.
 Repairs and internal servicing should only be performed by an authorised service agent.
- Explosion hazard—do not use in the vicinity of flammable anaesthetics.

 


- At low pressures, the flow through the exhalation ports of your mask may not clear all exhaled gas from the tubing. Some rebreathing may occur.
- The airflow for breathing produced by this device can be as much as 6°C higher than the temperature of the room. Caution should be exercised if the room temperature is warmer than 32°C.
- When AC mains power (100–240V AC) is not available, always use a ResMed DC-12 converter. (The DC-12 converter is available as an optional accessory. It is not supplied with all models.)
- If supplied, the Data Card module is designed for use with specific ResMed
 devices.
- Only use the Data Card module (if supplied) as specified in this manual.

Note: The above are general warnings and cautions. Specific warnings, cautions and notes appear with the relevant instructions in the manual.

ADVERSE EFFECTS

Patients should report unusual chest pain, severe headache or increased breathlessness to their prescribing physician. An acute upper respiratory tract infection may require temporary discontinuation of treatment.



 














The following side effects may arise during the course of therapy with the CPAP device:

 - drying of the nose, mouth or throat
- nosebleed
- bloating
- ear or sinus discomfort
- eye irritation
- skin rashes
- chest discomfort.







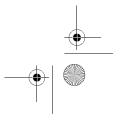



THE S8 ESCAPE SYSTEM



The S8 ESCAPE device is part of a system that consists of five elements:

- S8 ESCAPE flow generator
- Mask
- Humidifier
- Data management products
- · Accessories.

S8 ESCAPE

Please refer to the illustrations in section **A** of the illustration sheet.

FRONT VIEW (A-I)

Shows the keypad and LCD screen, and the air outlet.

REAR VIEW (A-2)

Shows where the module attaches, and the location of the air filter and power sockets.

Power cord (A-3)

Power cord to attach the S8 ESCAPE to the AC (mains) power.

CARRY BAG (A-4)

AIR TUBING

The 2 m air tubing (**A-5**) connects the S8 ESCAPE to your mask . You will need medium 52 cm air tubing (see **B-3**) to connect the S8 ESCAPE to the **HUMIDAIRE** $^{\text{TM}}$ humidifier.



MASKS

You will also need a **ResMed mask system** (supplied separately).

The ResMed mask systems that are recommended for use with the S8 ESCAPE are:

NASAL MASKS

 
- MODULAR NASAL MASK
- MIRAGE VISTA™ NASAL MASK
- Ultra Mirage™ Nasal Mask
- MIRAGE[™] NASAL MASK
- MIRAGE ACTIVA™ NASAL MASK
- PAPILLON[™].

NASAL PILLOWS SYSTEMS

MIRAGE SWIFT[™] NASAL PILLOWS SYSTEM.

FULL FACE MASKS

- MIRAGE™ FULL FACE MASK
- MIRAGE™ FULL FACE MASK SERIES 2
- Ultra Mirage™ Full Face Mask.



















WARNING

Only ResMed mask systems are compatible for use with the S8 Escape. Please refer to "Warnings" on page 2.

HUMIDIFIERS

A humidifier may be required if you are experiencing dryness of the nose, throat or mouth. The S8 ESCAPE is compatible for use with:

• HUMIDAIRE heated humidifier (Figure G on the illustrations sheet).

RESSCAN DATA CARD MODULE

The ResScan™ Data Card module and ResScan Data Card (**B-I**) may be used with the S8 Escape either to help your clinician to monitor your treatment or to provide you with updates to your device settings. See "Using a ResScan Data Card Module" on page 14 for information about how to use the Data Card module and Data Card.

ACCESSORIES

Please refer to the illustrations in section **B** of the illustration sheet.

 
Other accessories for use with the S8 ESCAPE:

- Air tubing 3 m (**B-2**)
- Medium air tubing 52 cm for HUMIDAIRE connection (**B-3**)
- DC-12 converter (**B-4**)
- Blank module (**B-5**).

 
Note: ResMed regularly releases new products. Please check our website at www.resmed.com.















HOW TO USE THE S8 ESCAPE

Please refer to the illustrations in section ${\bf C}$ of the illustration sheet.

SET UP THE S8 ESCAPE

Place the S8 ESCAPE on a table near the head of your bed.



CAUTION

Be careful not to place the device where it can be bumped or where someone is likely to trip over the power cord.

Note: You can also place your S8 Escape on the floor beside or underneath your bed. Ensure that the area is free from dust and clear of bedding, clothes or any other objects that could block the air inlet.

2 Connect the power cord to the socket at the rear of the flow generator (C-I). Plug the other end of the power cord into the power outlet.



WARNING

Make sure the power cord and plug are in good condition and the equipment is not damaged.

Connect one end of the air tubing firmly onto the air outlet (C-2).



WARNINGS

 
- Only ResMed air tubing should be used with your flow generator. A different type of air tubing may alter the pressure you actually receive, reducing the effectiveness of your treatment.
- Blocking the hose while in operation could lead to overheating of the device.
- In the clinical environment any personal computer that is used with your CPAP system must be at least 1.5 m away from, or at least 2.5 m above, the patient. It must also comply with the relevant test standard. For personal computers the international standard is IEC 60950 or equivalent.

ASSEMBLE THE MASK

- Assemble your mask system according to the mask user instructions.
- 2 Connect your mask system to the free end of the air tubing (C-3). The S8 ESCAPE is now ready for use (C-4).

START TREATMENT

- Make sure the power is on.
 - The product name is displayed briefly on the LCD screen, then the standby (Ramp) screen appears. The key and LCD backlights also turn on.
- 2 Lie down and arrange the air tubing so that it is free to move if you turn in your sleep.





















CAUTION

- Do not leave long lengths of air tubing around the top of your bed. They could twist around your head or neck while you are sleeping.
 - Make sure the area around the flow generator is dry and clean. It should also be clear of bedding, clothes and other potential blockages.
- 3 Alter the ramp time if required (see "How to Change the Ramp Time" on page 12).
- 4 To start treatment, press the **Start/Stop** key.
- 5 Fit your mask as described in the mask user instructions.



WARNING

A mask should not be used unless the S8 Escape device is turned on and operating properly.

 
6 When ramping begins the LCD will display the word "RAMPING", with the current pressure indicated as dashes. Each dash is approximately equivalent to 2 cmH₂O. For example, 6 dashes represents approximately 12 cmH₂O pressure.

STOP TREATMENT

 
To stop treatment at any time, remove your mask and press the **Start/Stop** key.













HOW TO ATTACH A HUMIDIFIER

ATTACH A HUMIDAIRE HUMIDIFIER

Please refer to the illustrations in section \boldsymbol{G} of the illustration sheet.

To connect your S8 ESCAPE to a HUMIDAIRE humidifier you need medium sized (52 cm) air tubing.

- 1 Fill the HUMIDAIRE water chamber and place inside the HUMIDAIRE. Connect the medium (52 cm) and long (2 m) air tubing (**G-I**), and close the humidifier lid.
- Place the S8 ESCAPE on top of the HUMIDAIRE (**G-2**) and connect the free end of the medium air tubing to the air outlet (**G-3**).

Note: To avoid water spilling into the S8 ESCAPE, do not put it underneath the humidifier.

- $3 \qquad \text{Assemble your mask system and connect it to the free end of the long air tubing } (\textbf{G-4}).$
- 4 Plug the HUMIDAIRE power cord into a power outlet. Connect the S8 ESCAPE power cord to the socket at the rear of the S8 ESCAPE and plug the other end into a power outlet.

Please refer to the HumidAire User's Manual for further details.




WARNING

Make sure that the power cord and plug are in good condition and the equipment is not damaged.

The S8 ESCAPE is now ready for use with the HUMIDAIRE.



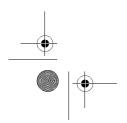
















The control panel of the S8 ESCAPE includes an LCD screen and keypad for navigating through the menus and delivering treatment.

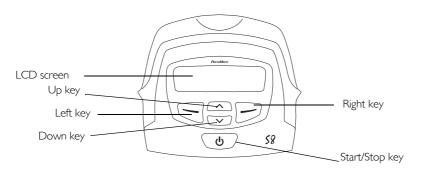

LCD SCREEN

The LCD screen displays the menus and treatment screens.




KEYPAD KEYS

The S8 ESCAPE keypad has the following keys:

| Key | Function |
|------------|---|
| Start/Stop | Starts or stops treatment. |
| Up | Allows you to increase settings options and scroll through the S8 ESCAPE menu. |
| Down | Allows you to decrease settings options and scroll through the S8 ESCAPE menu. |
| Left | Performs the function indicated by the guiding text displayed above it on the LCD screen. Guiding text includes menu, change and apply. |
| Right | Performs the function indicated by the guiding text displayed above it on the LCD screen. Guiding text includes exit and cancel. |

BACKLIGHTS

 The keypad and LCD are equipped with backlights that come on when the device is powered. The LCD backlight turns off after two minutes of inactivity, and comes back












338175r2.book Page 11 Wednesday, January 19, 2005 1:42 PM



HOW TO CHANGE THE SETTINGS ON YOUR \$8 ESCAPE

 You can change settings (such as Ramp Time, Altitude) on the S8 ESCAPE by using the keypad and LCD. When the S8 ESCAPE is in standby mode you can display a series of screens (a menu) on the LCD screen in order to view and change the settings for a particular function.



Use the menu screens to change the ramp time, altitude compensation and language. You can also view details about the usage and software version of your S8 ESCAPE.

HOW TO ENTER THE MENU SCREENS

When the S8 ESCAPE standby screen is displayed you will see the word 'Menu' in the left-hand corner. To select the S8 ESCAPE menu, press the **Left** key.

HOW TO SCROLL THROUGH THE MENU

When you are in the menu, scroll through items by pressing the **Up** or **Down** keys.

HOW TO CHANGE A SETTING OPTION

 
When you have scrolled to the item you require:

- I. Press the **Left** key (Change).
- 2. Press the **Up** or **Down** keys until you see the setting option that you require.
- 3. Press the **Left key** (Apply) to select the setting option.

If you wish to exit without changing the option, press the **Right** key (Cancel).

HOW TO EXIT OUT OF A MENU

Press the **Right** key (Exit). This will take you back to the Patient Menu screen.















Press the **Right** key (Exit).

HOW TO CHANGE THE RAMP TIME

During ramp time, the pressure increases from a low pressure to the prescribed treatment pressure. You can set the ramp time in 5-minute intervals, from 0 minutes (OFF) up to a maximum ramp time set by your clinician.

The standby screen displays the current ramp time in the right-hand corner. To change the ramp time, press the **Up** or **Down** key until the desired ramp time appears.

Once a ramp time is selected, begin therapy by pressing the **Start/Stop** key.

When ramping begins the LCD will display the word "RAMPING", with the current pressure indicated as dashes. Each dash is approximately equivalent to $2 \text{ cmH}_2\text{O}$. For example, six dashes represents approximately $12 \text{ cmH}_2\text{O}$ pressure.

HOW TO CHANGE THE ALTITUDE SETTING

If you move or travel with your S8 ESCAPE to areas of different altitude, you will need to adjust the altitude compensation setting. Changes in altitude will affect the pressure delivered by the S8 ESCAPE.

You can use the Altitude setting (ALT) to specify the altitude range at which you are using your S8 ESCAPE. Select the S8 ESCAPE menu by pressing the **Left** key in the standby (RAMP) screen. Scroll to ALT and select Change (**Left** key). Press the **Up** or **Down** keys until you see the setting option that you require.

There are four altitude settings to choose from:

- 0–609 m
- 610–1219 m
- 1220-1828 m
- 1829-2591m.

For example, if you are at an altitude of 947 m, your altitude compensation setting would be 610-1219 m, as 947 m falls within that range.

 
Press the **Left** key (Apply) to select the correct setting.

HOW TO CHANGE THE LANGUAGE SETTING


To display menus and messages in a different language, select the S8 ESCAPE menu by pressing the **Left** key in the standby (Ramp) screen. Scroll to LANG and select Change (**Left** key). Press the **Up** or **Down** keys until you see the language that you require.

OTHER VIEWABLE INFORMATION

You can also view the total number of hours of treatment (USED HRS); the number of sessions that the S8 ESCAPE was used in a usage period (USAGE); and the current software version installed on your unit (SW). Access to all of these screens is provided via the menu. See "How to enter the menu screens" on page 11.





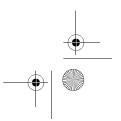



HOW TO USE THE KEYPAD






MESSAGES ON THE S8 ESCAPE LCD

Your clinician may have set your S8 ESCAPE to remind you about important events, such as when to replace your mask, when to insert your Data Card (if your device is Data Card enabled) and so on.

The reminder message is displayed on the LCD and is visible if the device is not delivering therapy. The backlight on the LCD flashes when a message is displayed. Your clinician can set any of the following reminders on your LCD:

| Message | Description | Action |
|-------------------|---|--|
| INSERT CARD | May appear if your device is Data Card enabled. | Insert your Data Card and follow any instructions that your clinician has given you. When you have done this, the message will disappear from the LCD. Pressing the Left (Ok) key will also remove the message. |
| REPLACE MASK | May appear when your mask is due for replacement. | Press the Left (Ok) key to remove the message from your LCD, and replace your mask with a new one. |
| CALL PROVIDER | May appear as a reminder to contact your clinician; for example to discuss how your therapy is going. | Press the Left (Ok) key to remove the message from your LCD, and contact your clinician. |
| REPLACE FILTER | May appear as a reminder to replace the air filter on your device. | Press the Left (Ok) key to remove the message from your LCD, and replace the air filter. |
| SERVICE DUE | May appear as a reminder to return your device for service. | Press the Left (Ok) key to remove the message from your LCD. |

 













S8 MODULES

Note: Do not remove modules while power is connected to the S8 Escape.

Your S8 ESCAPE will have one of two modules fitted to the back: a blank module or a RESSCAN™ Data Card module.

USING A BLANK MODULE

Please refer to the illustrations in section **D** of the illustration sheet.

The blank module is a protective cover on the S8 ESCAPE. At times, you may wish to remove or attach this module, for example to use the serial adapter.

To remove the blank module, pull it off the back of the S8 ESCAPE to show the data communications port (**D-I**).

To *attach* the blank module, push the blank module onto the data communications port, until the module clicks into place (**D-2**).

Note: To protect the data communications port, always ensure there is a module attached to the device.

USING A RESSCAN DATA CARD MODULE

Please refer to the illustrations in section **E** of the illustration sheet.

The ResScan™ Data Card module is an accessory to the S8 Escape. Use a ResScan Data Card with the Data Card module to collect data and update settings in the S8 Escape. The module and card give your clinician convenient access to data about your treatment, and can provide you with new device settings from your clinician without your having to leave home.

ATTACHING THE MODULE

To attach the Data Card module, push it onto the data communications port at the back of your S8 ESCAPE until it clicks into place (E-I).

REMOVING THE MODULE

To remove the Data Card module, pull it off the back of the S8 ESCAPE (E-2).

Note: To protect the data communications port, always ensure there is a module attached to the device.


USING THE DATA CARD TO COLLECT DATA

Please refer to the illustrations in section **F** of the illustration sheet.


If your clinician needs to review your treatment, they will ask you to use the Data Card to copy data from your S8 ESCAPE, and to return the card to them. The Data Card will be provided in a convenient mailback envelope.

Data that is copied to a Data Card is still stored and available on the S8 ESCAPE.

  It takes approximately five seconds to copy data onto the Data Card.












 338175r2.book Page 15 Wednesday, January 19, 2005 1:42 PM



1 INSERT THE DATA CARD

- Switch on the S8 ESCAPE and wait until you see the standby (Ramp) screen.
- Hold the Data Card with the arrow facing up and insert it into the slot in the Data Card module (**F-I**).
- Push the card in smoothly until it stops moving (F-2) and messages start appearing on the LCD.

2 COPY DATA ONTO THE DATA CARD

- Data copying starts automatically when the Data Card is inserted into the Data Card module.
- The "Card Inserted Please Wait" message is displayed on the S8 ESCAPE LCD while data is being copied. Copying takes approximately five seconds.
- The "Copy Complete Remove Card" message is displayed on the LCD when copying has finished.
- Remove the Data Card from the Data Card module.

3 REMOVE THE DATA CARD

Grip the end of the Data Card and pull it out of the Data Card module (F-3).

4 STORE THE DATA CARD

Your Data Card should be stored in its mailback envelope when not in use.

5 MAIL THE DATA CARD TO YOUR CLINICIAN

If your clinician has requested that you mail your Data Card back to them, make sure their name and address is on the mailback envelope. Then place the Data Card in the envelope and seal it, and mail it back immediately.

USING THE DATA CARD TO UPDATE SETTINGS

If your clinician has provided a Data Card with new device settings:

 
- With the device in standby (Ramp) mode, insert the Data Card into the slot on the Data Card module. Updating will start automatically.
- The "Card Inserted Please Wait" message is displayed on the LCD while updating is in progress. Updating takes approximately five seconds.
- The "Settings Success Remove Card" message is displayed on the LCD if the settings were updated successfully.

Note: This message only appears once. If you re-insert the Data Card after you have updated your settings, this message is not displayed.

 
- Remove the Data Card from the Data Card module.
- Store the Data Card in its mailback envelope when not in use.

WARNING If your clinician has told you to use this Data Card to update the settings on your

device and the "Settings Success" message does not appear, contact your clinician immediately.

















You should regularly carry out the cleaning and maintenance described in this section. Refer to your mask manual for detailed instructions.

DAILY CLEANING

Mask

Clean the mask according to the instructions supplied with the mask.

Disconnect the air tubing from the S8 ESCAPE (and humidifier, if used) and hang the tubing and mask in a clean, dry place until next use.

If you are using a humidifier, clean it according to the instructions in the humidifier user's manual.

WEEKLY CLEANING

 
- 1. Remove the air tubing from the S8 ESCAPE and the mask.
- 2. Wash the air tubing in warm water using mild detergent. Rinse thoroughly, hang, and allow to dry.
- 3. Before next use, assemble the mask and headgear according to the user instructions.
- 4. Reconnect the air tubing to the air outlet and mask.

PERIODIC CLEANING

 
- 1. Clean the exterior of the S8 ESCAPE with a damp cloth and mild detergent.
- 2. Check the air filter for blockage or holes (see "Replacing the Air Filter" on page 17).

WARNING

- Beware of electric shock. Do not immerse the unit or power cord in water. Always unplug the unit before cleaning and be sure it is dry before plugging back
 - The mask system and air tubing are subject to normal wear and tear. Inspect them regularly for damage.
















REPLACING THE AIR FILTER

To replace the air filter:

 1. Remove the air filter cover at the back of the S8 ESCAPE.



- 2. Remove and discard the old air filter.
- 3. Insert a new filter with the blue tinted side facing out from the device.
- 4. Replace the air filter cover.

Inspect the air filter every month to check if it is blocked by dirt or contains holes. With normal use of an S8 ESCAPE, the air filter needs to be replaced every six months (or more often if your device is in a dusty environment).



WARNING

- Do not wash the air filter. The air filter is not washable or reusable.
- The air filter cover protects the device in the event of accidental liquid spillage onto the device. Ensure the air filter and air filter cover are fitted at all times.



 


CAUTION

 
- Do not attempt to open the S8 Escape case. There are no user serviceable parts inside.
 - Inspection and repair should only be performed by an authorised agent. Under no circumstances should you attempt to service or repair the flow generator

This product (S8 ESCAPE) should be inspected by an authorised ResMed Service Center five years from the date of manufacture. Prior to this, the device is intended to provide safe and reliable operation provided that it is operated and maintained in accordance with the instructions provided by ResMed. Applicable ResMed warranty details are provided with the device at the time of original supply. Of course, as with all electrical devices, if any irregularity becomes apparent, you should exercise caution and have the device inspected by an Authorised ResMed Service Center.

If you feel that your flow generator is not performing properly, see "Troubleshooting" on page 20.



















HOW WILL IT FEEL WHEN I AM BREATHING WITH THE S8 ESCAPE?

When you first use your S8 ESCAPE, you may feel uncomfortable breathing against the airflow. This is normal. You will continue to breathe normally while you sleep. Take time to adjust to this new sensation.

WHAT DO I DO WHEN I WANT TO GET UP IN THE NIGHT?

If you need to get up during the night, remove your mask and stop therapy. Always remember to restart therapy and put your mask on when you return to bed.

WHAT DO I DO IF I FEEL AIR LEAKING OUT OF THE MASK?

The flow generator delivers the most effective treatment when the mask is well fitted and comfortable. Treatment can be affected by leaks, so it is important to eliminate any leaks that may arise. For example, try repositioning the mask and adjusting the straps.

If you are using a nasal mask, try to keep your mouth closed during treatment. Air leaks from your mouth can decrease the effectiveness of your treatment. If mouth leaks are a problem, a full face mask or chin strap may help. Contact your clinician or equipment supplier for further details.

If you are using a full face mask and you have problems trying to get a comfortable mask fit, contact your sleep clinic or equipment supplier. You may benefit from a different size or style of mask.

ANYTHING SPECIAL I SHOULD DO BEFORE PUTTING THE MASK ON?

Before wearing your mask, wash your face to remove excess facial oils. This will allow a better fit and prolong the life of the mask cushion.

Do not use moisturiser when wearing a mask.

MY MOUTH FEELS DRY DURING TREATMENT—WHAT CAN I DO?

You may experience dryness of the nose, mouth and/or throat during the course of treatment, especially during winter. In many cases, a humidifier may resolve this discomfort. Contact your clinician for advice.

 
MY NOSE IS IRRITATED DURING TREATMENT—WHAT CAN I DO?

You may experience sneezing and/or a runny or blocked nose during the first few weeks of treatment. In many cases, nasal irritation can be resolved with a humidifier. Consult your clinician or equipment supplier for advice.


CAN I TRAVEL WITH THE S8 ESCAPE?

International use

Your S8 ESCAPE flow generator has an internal power supply that enables it to operate in other countries. It will operate on power supplies of 100–240V and 50/60Hz. No special adjustment is necessary, but you may need a plug adapter for the power outlet.





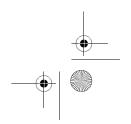





338175r2.book Page 19 Wednesday, January 19, 2005 1:42 PM







Altitude changes

If you are moving or travelling to a higher or lower altitude, see "How to change the Altitude setting" on page 12.

On an aircraft

Please consult the medical services department of your carrier if you intend to use your S8 ESCAPE on an aircraft. The S8 ESCAPE complies with US FCC Part 15, Class B

CAN I USE MY S8 ESCAPE IF MAINS (AC) POWER IS NOT AVAILABLE?

 
A DC-12 converter is available to connect the S8 ESCAPE to a 12V or 24V DC power source. Contact your clinician for details.



 
CAUTION

The device should not be connected to both AC and DC power sources simultaneously.


















If there is a problem, try the following suggestions. If the problem cannot be solved, contact your equipment supplier or ResMed. Do not attempt to open the device.

| Problem | Possible Cause | Solution |
|--|---|---|
| No display. | Power not connected. | Ensure the appropriate power cord is connected to your S8 Escape and the power switch (if available) is on. |
| Insufficient air delivered from S8 Escape. | Ramp Time is in use. | Wait for air pressure to build up or change ramp time. |
| | Air filter is dirty. | Replace air filter. |
| | Air tubing is kinked or punctured. | Straighten or replace tubing. |
| | Air tubing not connected properly. | Check air tubing. |
| | Mask and headgear not positioned correctly. | Adjust position of mask and headgear. |
| | Cap(s) missing from access port(s) on mask. | Replace cap(s). |
| | Altitude compensation setting is incorrect. | Adjust altitude compensation setting to the correct altitude range. |
| | Pressure required for treatment may have changed. | See your clinician to adjust the pressure. |
| Excessive air delivered from the S8 Escape. | Altitude compensation setting is incorrect. | Adjust altitude compensation setting to the correct altitude range. |

 









TROUBLESHOOTING



| Problem | Possible Cause | Solution |
|--|--|--|
| Display error message: EXXXX Call Service (where XXXX defines an error) or MOTOR FAULT Call Service or UPLOAD LANGUAGES Call Service or DATA LOST Call Service | Component failure. | Call service. |
| The following message is displayed on the LCD after you try to update settings using the Data Card: Card Error Remove Card | The Data Card is not inserted correctly. | Ensure that the Data Card is inserted with the arrow facing up and pointing towards the device. Ensure that the device is switched on and in standby mode before you insert the Data Card. |
| | The Data Card is only partly inserted. | Ensure that the Data Card is inserted into the slot on the Data Card module as far as it will go. |
| | You may have removed the Data Card before settings were copied to the S8 Escape. | Reinsert the Data Card and wait for the Settings Success Remove Card message to appear on the LCD. |
| | The card is not a ResScan Data Card. | Only use a ResScan Data Card. |
| The following message is displayed on the LCD after you try to | The Data Card is not inserted correctly. | Ensure that the Data Card is inserted with the arrow facing up and pointing toward the device. |
| copy data to a Data Card: Card Error Remove Card | The card is not a ResScan Data Card. | Use a ResScan Data Card, as specified in this manual. |
| The following message is displayed on the LCD after you try to update the settings using the Data Card: Settings Invalid | The identification details on the Data Card do not match the details on your device. | Contact your clinician immediately. |





Remove Card












| Problem | Possible Cause | Solution |
|--|--|-------------------------------------|
| The following message is displayed on the LCD after you try to update the settings using the Data Card: Settings Error Remove Card | There is a data error on the Data Card. | Contact your clinician immediately. |
| The following message is NOT displayed on the LCD after you try to update the settings using the Data Card: Settings Success Remove Card | The settings were not updated. | Contact your clinician immediately. |





 













S8 ESCAPE

Performance: Operating pressure range: 4 to 20 cm H_2O **Dimensions (H x W x D):** 112 mm x 164 mm x 145 mm

Weight: 1.3 kg

Power Supply

Input range:

- 100-240V, 50/60Hz; 110V, 400Hz; 2.5A.
- Refer to the DC-12 converter instructions for DC ratings. Only use the ResMed DC-12 converter for DC input.

Actual power consumption will vary, depending on factors such as the use of accessories, height above sea level and ambient temperature. Power consumption values for typical treatment conditions (using a breathing machine set to 0.5 L and 15 breaths/min with 2 m air tubing and an ULTRA MIRAGE mask) are given in the following table.

| Device | Pressure (cm H ₂ O) | Power (VA) | Power (W) |
|-----------|-----------------------------------|---------------|--------------|
| S8 ESCAPE | 5 | 17 | 8 |
| | 10 | 23 | 12 |
| | 15 | 29 | 16 |
| | 20 | 34 | 20 |

Power outlet for Accessory

Note: Accessory currently not available.

Outlet range: 100-240V, 50/60Hz; 110V, 400Hz; 2.0A

Air Filter: Two-layered, powder-bonded, polyester non-woven fibre

Air Tubing: Flexible plastic, 2 m

IEC 60601-1 Classifications: Class II (double insulation), Type CF


ACCESSORIES

DATA CARD


Dimensions (L x W x D): $65.04 \text{ mm} \times 22.15 \text{ mm} \times 0.85 \text{ mm}$

DATA CARD MODULE

 
Dimensions (H x W x D): 49.7 mm \times 42.2 mm \times 12 mm

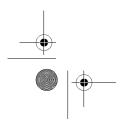



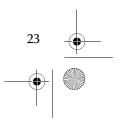





ALL DEVICES (WHERE APPLICABLE)

Housing Construction: Flame retardant engineering thermoplastic

Environmental Conditions

Operating Temperature: +5°C to +40°C
Operating Humidity: 10%–95% non-condensing
Storage and Transport Temperature: -20°C to +60°C
Storage and Transport Humidity: 10%–95% non-condensing
Operating Altitude: sea level to 2591 m

Electromagnetic Compatibility

Product complies with all applicable electromagnetic compatibility requirements (EMC) according to IEC60601-1-2, for residential, commercial, and light industry environments. For further details, see "Guidance and Manufacturer's Declaration - Electromagnetic Emissions and Immunity" on page 25.

Note: The manufacturer reserves the right to change these specifications without notice.

SYMBOLS WHICH APPEAR ON THE DEVICE



Attention, consult accompanying documents



Type CF equipment



Class II equipment



 
Drip proof



 
Dangerous voltage



Start/Stop







SYSTEM SPECIFICATIONS





GUIDANCE AND MANUFACTURER'S DECLARATION - ELECTROMAGNETIC **EMISSIONS AND IMMUNITY**

Guidance and manufacturer's declaration—electromagnetic emissions

The S8 series of devices is intended for use in the electromagnetic environment specified below. The customer or the user of the S8 device should assure that the device is used in such an environment.

| Emissions test | Compliance | Electromagnetic environment—guidance |
|---|------------|--|
| RF emissions CISPR11 | Group 1 | The S8 device uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment. |
| RF emissions CISPR 11 | Class B* | The S8 device is suitable for use in all |
| Harmonic Emissions IEC 61000-3-2 | Class A | establishments, including domestic establishments and those directly connected to the public low-voltage |
| Voltage Fluctuations/Flicker Emissions IEC 61000-3-3 | Complies | network that supplies buildings used for domestic purposes. |

 
* Class B for all system configurations except when a PC is attached to the S8 device via a serial adapter, in which case the system is Class A compliant. Class A is suitable for use in all establishments other than domestic and those directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

Medical Electrical Equipment needs special precautions regarding EMC and needs to be installed and put into service according to EMC information provided in this document.

Warnings: The S8 device should not be used adjacent to or stacked with other equipment. If adjacent or stacked use is necessary, the S8 device should be observed to verify normal operation in the configuration in which it will be used.

The use of accessories (eg humidifiers) other than those specified in this manual is not recommended. They may result in increased emissions or decreased immunity of the S8 device.







 












The S8 series of devices is intended for use in the electromagnetic environment specified below. The customer or the user of the S8 device should assure that the device is used in such an environment.

| Immunity test | IEC60601-1-2 test level | Compliance level | Electromagnetic environment—guidance |
|---|--|--|---|
| Electrostatic discharge (ESD) IEC 61000-4-2 | ±6 kV contact ±8 kV air | ±6 kV contact ±8 kV air | Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%. |
| Electrical fast transient/burst IEC 61000-4-4 | ±2 kV for power supply lines ±1 kV for input/ output lines | ±2 kV Not Applicable | Mains power quality should be that of a typical commercial or hospital environment. |
| Surge IEC 61000-4-5 | ±1 kV differential mode ±2 kV common mode | ±1 kV differential mode ±2 kV common mode | Mains power quality should be that of a typical commercial or hospital environment. |
| Voltage dips, short interruptions and voltage variations on power supply input lines. IEC 61000-4-11 | <5% Ut (>95% dip in Ut) for 0.5 cycle 40% Ut (60% dip in Ut) for 5 cycles 70% Ut (30% dip in Ut) for 25 cycles <5% Ut (>95%dip in Ut) for 5 sec | < 12V (>95% dip in 240V) for 0.5 cycle 96V (60% dip in 240V) for 5 cycles 168V (30% dip in 240V) for 25 cycles <12V (>95%dip in 240V) for 5 sec | Mains power quality should be that of a typical commercial or hospital environment. If the user of the S8 device requires continued operation during power mains interruptions, it is recommended that the S8 device be powered from an uninterruptible power source. |
| Power frequency (50/60 Hz) magnetic field IEC 61000-4-8 | 3 A/m | 3 A/m | Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment. |

NOTE: Ut is the AC mains voltage prior to application of the test level.


















Guidance and manufacturer's declaration—electromagnetic immunity

The S8 series of devices is intended for use in the electromagnetic environment specified below. The customer or the user of the S8 device should assure that the device is used in such an environment.

| Immunity test | IEC60601-1-2 test level | Compliance level | Electromagnetic environment—guidance |
|-------------------------------|-----------------------------|---------------------|---|
| | | | Portable and mobile RF communications equipment should be used no closer to any part of the S8 device, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. |
| | | | Recommended separation distance |
| Conducted RF IEC 61000-4-6 | 3 Vrms 150 kHz to 80 MHz | 3 Vrms | d = 1.17 √P |
| Radiated RF IEC 61000-4-3 | 10 V/m 80 MHz to 2.5 GHz | 10 V/m | d = 0.35 √P 80 MHz to 800 MHz |
| | | | d = 0.70 √P 800 MHz to 2.5 GHz |
| | | | where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m). Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, a should be less than the compliance level in each frequency range. Interference may occur in the vicinity of equipment marked with the following symbol: |

NOTE 1: At 80 MHz and 800MHz, the higher frequency range applies.

 NOTE 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.










^a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the S8 device is used exceeds the applicable RF compliance level above, the S8 device should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the S8 device.

  $^{^{\}rm b}$ Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 10 V/m.









The S8 series of devices is intended for use in an environment in which radiated RF disturbances are controlled. The customer or the user of the S8 device can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the S8 device as recommended below, according to the maximum output power of the communications equipment.

| | Separation distance according to frequency of transmitter m | | |
|---|---|--|--------------------------------------|
| Rated maximum output power of transmitter W | 150kHz to 80MHz d = 1.17 √P | 80 MHz to 800 MHz $d = 0.35 \sqrt{P}$ | 800MHz to 2.5 GHz $d = 0.7 \sqrt{P}$ |
| 0.01 | 0.17 | 0.04 | 0.07 |
| 0.1 | 0.37 | 0.11 | 0.22 |
| 1 | 1.17 | 0.35 | 0.7 |
| 10 | 3.69 | 1.11 | 2.21 |
| 100 | 11.70 | 3.50 | 7.0 |

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in metres (m) can be determined using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE 1: At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

NOTE 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.





 












INDEX

INDEX

| A |
|-----------------------------|
| accessories 6 |
| air filter 5, 20 |
| replacing 17 |
| air pressure 20 |
| air tubing 5 |
| cleaning 16 |
| connect to air outlet 7 |
| kinked 20 |
| positioning 7 |
| aircraft 19 |
| airflow |
| breathing with 18 |
| altitude setting 12, 19, 20 |
| |

B backlight LCD and keypad 10

C carry bag 5 cleaning daily cleaning 16 periodic 16 contraindications 2 CPAP 1

D Data Card 14 copying data 15 data card 21 inserting 15 mailback envelope 15 removing 15 Data Card module 14 DC-12 converter 19 down key 10 dryness mouth, nose or throat 18

error message 21 **F** frequently asked questions 18

H headgear 20

HumidAire attaching 9 humidifier 18 cleaning 16 humidifiers 6

I international use 18

K keypad 5, 10 keypad keys functions 10

L language setting 12 LCD 5, 7, 10 error messages 21 messages 13 left key 10

mailback envelope 15 mask 18, 20 air leak 18 attaching 7 cleaning 16 removing 18 mask leak 18 mask port 20 masks 5 medical information 1 menu screens 11 access 11 change 11 exit 11 scrolling 11 module attaching 5 blank 14

N nasal irritation 18

Data Card 14

modules 14 blank 14

