

SkyCaddie® SGX User Guide



SkyCaddie® **SGX™**

Table of Contents

- Chapter 1: Getting Started 3**
- 1.1 SkyCaddie Overview 3
 - 1.1.1 Button Layout 3
 - 1.1.2 Navigation Keys 3
 - 1.1.3 Button Descriptions 3
 - 1.1.4 On-screen Indicators 4
- 1.2 System Requirements 4
- 1.3 Charging Your SGX 4
- 1.4 Downloading and Installing the CaddieSync® Desktop Software 5
- 1.5 Activating and Registering Your SGX 5
- 1.6 SkyCaddie Membership Benefits 5
- Chapter 2: Ground-Mapped Courses For Your SGX 7**
- 2.1 About Course Maps 7
- 2.2 About Basic Green Courses (Preloaded Courses) 7
- 2.3 About Advanced Feature Courses 7
 - 2.3.1. Overview of Advanced Course Management Features 8
- 2.4 Downloading Courses To Your SGX 8
- Chapter 3: Playing Golf With Your SGX 9**
- 3.1 Acquiring Signals 9
- 3.2 Selecting a Course to Play 9
 - 3.2.1 Manually Selecting a Basic Green Course (Preloaded Course) 9
 - 3.2.2 Manually Selecting an Advanced Feature Course 10
- 3.3 Target Views (Available on Advanced Feature Courses through Membership Only) 10
 - 3.3.1 Interactive HoleVue™ With Zoom 10
 - 3.3.2 QuickVue™ 11
 - 3.3.3 IntelliGreen® 12
 - 3.3.4 IntelliGreen® Pro 12
 - 3.3.5 Target List (Hazards, Carries and Layups) 12
 - 3.3.6 Big Number and Center Only 12
- 3.4 Determining Shot Distance Using Mark Ball 13
- 3.5 Viewing Course Information 13
- 3.6 Digital Scorecard 13
 - 3.6.1 Turning on the Scoring Feature 13
 - 3.6.2 Using the Scoring Feature During Play 13
 - 3.6.3 Viewing the Digital Scorecard 14
 - 3.6.4 Setting Your Handicap or MyPar™ Target 14
 - 3.6.5 Optional Scoring Information 15
- 3.7 AutoView Technology 16
- Chapter 4: SkyCaddie Menu Items 17**
- 4.1 Main Menu 17
- 4.2 Settings Menu 17
 - 4.2.1 Preferences 18
 - 4.2.2 Member 18
 - 4.2.3 ID/Version 18
 - 4.2.4 Scoring 18
 - 4.2.5 Targets 18
 - 4.2.6 System 19
 - 4.2.7 GPS 19
 - 4.2.8 Diagnostics 19
 - 4.2.9 Clock 19
- Chapter 5: Recording Your Own Course 20**
- 5.1 Naming Personal SkyCaddie Courses 20
- 5.2 Recording Green Targets 20
- 5.3 Setting Par and Handicap 20
- 5.4 Playing Personal SkyCaddie Courses 20
- 5.5 Re-Recording Personal SkyCaddie Courses 20
- 5.6 Renaming or Deleting Personal SkyCaddie Courses 21
- 5.7 Publishing Personal SkyCaddie Courses 21
- Appendices 22**
- Appendix A: Helpful Hints 22
- Appendix B: Target Icons and Target Descriptors 23
- Appendix C: Battery Information and Safety Requirements 24

IMPORTANT!

Please register your SkyCaddie at www.myskycaddie.com within 30 days of purchase to activate your Consumer Limited Warranty and 30-Day Basic Green Course Preload trial.

Questions?

Visit us on the web at www.SkyGolf.com

© 2011 SkyHawke Technologies, LLC. All Rights Reserved.
 U.S. Patent Numbers 7,118,498; 6,456,938; 5,740,077; 5,507,485 & Patent Pending.

SkyCaddie® User's Guide. All content within is copyrighted by SkyHawke Technologies, LLC and may not be reprinted without permission. The content of this guide is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by SkyHawke Technologies, LLC. SkyHawke assumes no responsibility or liability for any errors or inaccuracies that may appear in the informational content contained in this guide. SkyGolf®, SkyCaddie®, SGX™, ClubSG™, TrueGround™, TruePoint™ GPS, SkyCourse®, IntelliGreen®, IntelliGreen® Pro, HoleVue™, CaddieSync™, XTarget™, XMark™ and Nothing Else Comes Close™ are trademarks of SkyHawke Technologies, LLC. SkyHawke Technologies, LLC, Ridgeland Technology Center, 274 Commerce Park Drive, Suite M, Ridgeland, Mississippi 39157 USA.

Register your SGX at www.SkyGolf.com using CaddieSync within 30 days of purchase to activate your Consumer Limited Warranty and complementary 30-Day Course Preload Trial.

CHAPTER 1 Getting Started

1.1 SkyCaddie Overview

1.1.1 Button Layout



Note

If you need to perform a soft reset on the SGX, press the Center Key and Joystick at the same time and hold them down for several seconds until the device reboots.

1.1.2 Navigation Keys

- **Power Button:** Powers the SGX on and off. To power on the SGX, press and hold the button approximately 3 seconds until the display turns on. To power off the SGX, press the button and a confirmation message on the LCD screen will ask you if you want to power off the device; select "Off" to turn it off or "No" to cancel.
- **Left and Right Keys:** Selects options displayed above the key on the LCD screen. *Left and Right Key selections always override on-screen options.*
- **Joystick:** Quickly and easily navigate through menu items and settings, screen features and crosshairs on a HoleVue/IntelliGreen/IntelliGreen Pro graphic. The joystick is multi-directional and can select options by pressing the button. You can also press the Left and Right Keys to select on-screen options once you've highlighted them with the joystick.





Power off confirmation

Note

The Joystick is pressure-sensitive. When navigating through on-screen options using the Joystick, be careful not to press the button in too much or you may select an option prematurely.

Multi-directional Joystick allows for smooth on-screen movement.

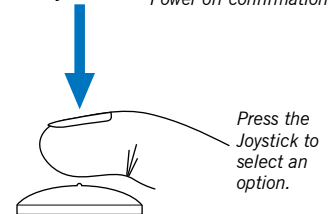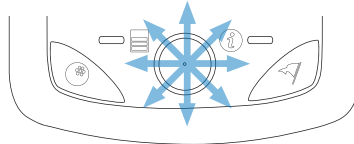

Press the Joystick to select an option.

1.1.3 Button Descriptions

- **Info:** When not in Play or Demo mode, the Info Button shows SGX information: your name, your phone number, the serial number, software version, the version of the basic green data installed, and the version of the SkyCaddie operating system. During Play or Demo mode, the Info screen will show the course name, contact information, hole in play, and the hole's par and handicap.
- **Menu:** The Menu button is used to display the SkyCaddie's Main Menu while powered on.




Info (Non-Play mode)



Info (Play mode)

- **Hole:** During play, press the Hole Button to manually advance to a different hole than the one you are on. If Auto-Hole Advance is turned on, you will not need to press this button to go to the next hole, since the SGX will know to change holes automatically. Choose to select that hole or advance to a different hole by scrolling through the list of holes using the Joystick.
- **Mark Ball:** The SGX's Mark Ball feature calculates your shot distance. This feature is useful in determining how far you typically hit each club in your bag, leading to better club selections and an overall improvement in course management. To use, press the Mark Ball Button, then select "Mark" before taking your shot. Press the Mark button again when you get to the location where your ball landed. The shot distance will be displayed. Mark Ball is discussed later in this guide, in Chapter 4.

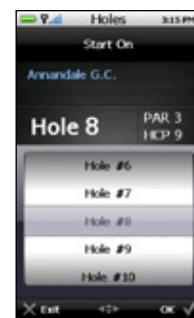

Hole selection screen

1.1.4 On-Screen Indicators

- **Battery Gauge:** Displays the SGX's remaining battery level.
- **Digital Clock:** Displays the current time, based on the signal that the SGX receives from the satellites.
- **Satellite Signal Indicator:** Shows real-time GPS satellite signal strength. The plus sign (+) above the signal bars indicates that SBAS (Satellite-Based Augmentation System) has been acquired. This is the preferred signal level for optimal performance.

1.2 System Requirements

Before registering and activating your SGX with SkyGolf using the free CaddieSync desktop software, please make sure your computer meets the minimum system requirements:

- PC with Windows® XP/Vista/7 (32- or 64-bit) — OR —
- Mac OS® 10.5 or higher, Intel® or PowerPC® processor
- 512 MB of RAM (1 GB of RAM recommended)
- 25 MB of available hard disk space
- Available USB 1.1 or 2.0 port
- Internet access (High-speed recommended)
- Microsoft® Internet Explorer® 7.0 or later (recommended)
- Safari® 4.0 or later (Mac)

COMPATIBLE WITH
PC and Mac®

Have a New Computer?


If you recently purchased a new PC or Mac (within the last year or so), it should be compatible with the SkyCaddie SGX system.

1.3 Charging Your SGX

We recommend charging the SGX each time before playing a round. The battery should hold a single charge for up to 14 hours of continuous play. If the battery level is low, a full recharge may take up to 4 hours.

Charging Your SGX Using a Wall Outlet

1. Gently pull back the rubber cover located on the upper left side of the SGX to gain access to the Micro-USB Port. Using the cable included in the box, insert the micro-USB connector (small end) into the open port.
2. Take the other end of the cable (the USB connector) and insert it into the power adapter that is included in the box.
3. Plug the power adapter into an open wall outlet or surge protector.
4. The SGX's display will turn on and display the Sync screen. Select "Charge" using the Right Key to see the Battery Charging screen. After 10 seconds, this screen will fade out and the device will be in a hibernation mode while it is charging, unless you select "Exit" in order to use the SGX while it is charging. There is not a charging indicator light on the device itself.

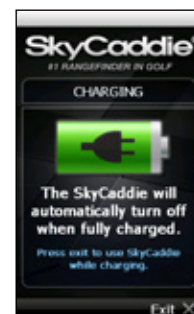

Battery Charging screen

IMPORTANT!

When charging the SGX for the first time, please use a wall outlet instead of your computer. DO NOT sync your SGX to a computer prior to installing Caddiesync.

DO NOT power the SGX off while it is charging. Keeping the device ON so that it may recharge in a timely manner.

Charging Your SGX Using Your Computer

Your SGX will recharge when it is connected to a computer that is powered on. With the SGX powered off, connect the micro-USB end of the cable into the SGX, then plug in the USB end into an open port on your computer. Your SGX will power on and recharge through this connection. Please do not turn off the SGX while it is charging.

IMPORTANT!

If your computer is protected by a firewall, it may need to be set up to allow our SkyCaddie software programs to access the web. If your firewall software displays any warning messages during the activation process, simply indicate that you wish to allow access.

Connecting the SGX...

When connecting and disconnecting the SGX to your computer, make sure that it is powered OFF when you connect the cable. As soon as the cable is plugged into the computer, the SGX should power on automatically.

CaddieSync®

If you have multiple SkyCaddies, make sure you select each model when you download CaddieSync.

Note

*You can browse the SkyCourse library anytime through the public area of www.SkyGolf.com. However, in order to obtain the courses for use with your SGX, you **MUST** have a Membership Plan and use CaddieSync to download them.*

1.4 Downloading and Installing the CaddieSync® Desktop Software

CaddieSync allows your SGX to communicate with SkyGolf (a process called *syncing*). It is used to register your SGX, search for Advanced Featured Course maps from our online library, upload your round data to ClubSG^{BETA}, personalize your SGX software, receive course map updates and receive software maintenance updates.

To install the latest version of CaddieSync onto your computer:

1. Using a computer with Internet connection, launch a web browser and type the following address in the address field: <http://www.myskycaddie.com>.
2. In the right column, select the type of computer you own (PC or Mac), select “SGX” under model(s) you own, then click on “Download CaddieSync”.
3. Should a security pop-up window appear in your web browser, please allow the download to proceed. Choose “Run” in the download dialog window if you want to have CaddieSync automatically begin the installation process after downloading.
4. Once you've install CaddieSync, a desktop icon will appear on your computer. You can click on this icon to launch CaddieSync. If you click on the “Sync” link in CaddieSync, the software will try to detect whether or not your SGX is connected to your computer. If it is, you will be automatically logged into your account. If not, CaddieSync will prompt you to manually log into your SkyCaddie online account. If you do not yet have a SkyCaddie online account, one will be created using product registration.

1.5 Activating and Registering Your SGX

Within 30 days of purchase, you MUST register your SGX. Registration is free, and it will allow you to activate the complementary 30-Day Course Preload Trial, Basic Consumer Limited Warranty and associate the SGX's Serial Number to your contact information for support purposes. You can be assured that your registration information is held in the strictest confidence at SkyGolf. We do not sell or share our customers' information to anyone outside of our organization without their consent.

To register your SGX:

1. Launch CaddieSync on your computer. If you are upgrading from another SkyCaddie, you will need to re-download CaddieSync to ensure you have the latest version that is compatible with the SGX.
2. Click on the “Activate a New SkyCaddie” button on the CaddieSync welcome page (if you do not see “Activate a New SkyCaddie, simply press the Sync button).
3. Follow the *Get Connected* setup assistant to register and activate your SkyCaddie. If you did not purchase your SkyCaddie online and have never had a SkyGolf website account, you will be able to setup a free online website account during this process. You will also have the option to choose one of several nominally-priced annual Membership Plans that best serves the needs of your game.

1.6 SkyCaddie Membership Benefits

You should expect the best in a rangefinder, and SkyCaddie believes your game is worth it. That's why we invest thousands of man-hours and millions of dollars every year to train, equip, send out and support our worldwide network of experienced SkyCaddie Mappers. We're moving beyond rangefinders to become the ultimate destination for golf knowledge, connecting you to *your game, your equipment, your course, your PGA Teaching Professional, and other golfers.*

During registration, you'll be given the option to select an annual Membership plan, providing you with a host of benefits and value. You can significantly increase the value of your SkyCaddie with these member benefits:

- **You'll enjoy unlimited access to the most reliable course information in golf.** SkyCaddie maintains the largest ground-verified course map library in the world, now approaching 30,000 courses. ONLY SkyCaddie walks the ground of EVERY course you play, using survey-grade GPS equipment for precision mapping. *Nothing else comes close.*[™]
- **You can trust that the information on your SkyCaddie is always up-to-date.** By working with — and not circumventing — local golf course professionals, SkyCaddie is notified when a course's layout has changed so that we can update our map for that course. It doesn't matter if it's a major renovation or just the removal of a critical tee target. We will send out a SkyCaddie Mapper to re-map the course in a timely manner, and notify you if a course map you've downloaded has changed. In 2010 alone, we re-mapped over 1,000 courses a month!

- **Powerful distance information is presented in an understandable way, so you only need to focus on your swing.** Our proprietary features such as IntelliGreen®, IntelliGreen Pro, and HoleVue™ (where available) show you real-time distances to key areas on the hole from your angle of approach, so you can make better club selections and make better shots.
- **Improve your game off the course and share your experiences with others on ClubSG^{BETA}:** Sync your SkyCaddie to our new exclusive online community to upload scores and track key stats with charts and graphs to help visualize your game and connect with other golfers.
- **Get exclusive, member-only offers to popular goods, services and destinations through Member Benefits+.** Through our relationship to some of the world's biggest brands, our members can receive discounts, packages, and other offers not available anywhere else!
- **You'll receive the latest software updates for your SkyCaddie to keep it running at peak performance.** Whether you are a PC user or a Mac user, software updates are common. The software that runs on your SkyCaddie needs to be updated too. By regularly syncing with our CaddieSync desktop software, your SkyCaddie will download software maintenance updates and the latest map updates for the courses you play.
- **Keep your favorite courses altogether in your personal online account.** Manage and save the courses you play regularly in your Favorites list within CaddieSync™. Your membership plan ensures your favorite courses are easily accessible when you're ready to play.
- **You'll receive anytime, anywhere access to your courses, uploaded scorecards and personal game statistics.** Access your personal golf information 24 hours a day, 7 days a week, anywhere in the world where there is a computer with Internet access!
- **And remember, SkyCaddie Customer Support is always here if you need us.** Should anything interfere with your SkyCaddie experience, our knowledgeable staff is always available by web, email, or phone to walk through a resolution with you. Or check out our Support forum on ClubSG^{BETA} to see if the answer to your question is already available!

The screenshot shows the ClubSG homepage with the following sections:

- Navigation:** PRODUCTS, MEMBERSHIP, COURSES, CLUB SG BETA, SUPPORT. Links for Sync, Download Courses, Activate a New SkyCaddie, Renew Your Plan, and Home.
- Main Banner:** "WELCOME TO THE SKYGOLF CLUBHOUSE" with a list of features: Sync the Digital Scorecard from SkyCaddie, Track Golf Stats & Analyse Your Game, Get a Recreational Handicap, Create Groups and Invite Friends, and View Online SkyCaddie Support.
- Fun Facts:** 14,630,725 total holes played, The average par 3 score is 3.87, The average par 5 score is 5.85.
- Live Rounds:** A table listing users, courses, and their times.
- Week's Best Scores:** A table listing users, courses, and their scores.
- Latest Blog Posts:** "The Wedge Guy - 8 hours ago Playing Your Best", "Daily Links - 24 hours ago Should The Tour Force Players To Play?", and "Golfers Of The Week - Thursday Chris Elton".
- Popular Forum Topics:** "Did I really lose my Balls?", "Best course you played", "5 - 25 handicap, does the type of golf ball...", "How do you tell your golf partner that he's..."


ClubSG^{BETA} homepage at <http://clubsg.skygolf.com>. ClubSG^{BETA} delivers timely golf articles, equipment reviews, community leaderboards, forums, golf course ratings, and much more! SkyCaddie Members automatically receive free ClubSG Premium access, with the ability to upload round data from the SGX and access to over 50 game tracking stats, as part of their annual Membership plan.

CHAPTER 2

Ground-Mapped Courses For Your SGX

2.1 About Course Maps

Your SkyCaddie® SGX™ requires the use of maps to provide distance information on the device (also known as SkyCourses®). SkyCaddie uses the only method that Tour caddies use to provide distances to their Pros: we walk the course. With a course library approaching 30,000 maps, SkyCaddie maintains the largest ground-mapped course database in the world. No one else uses this method, because it is very expensive in terms of labor and money. But SkyCaddie invests thousands of man-hours and millions of dollars every year to maintain our ground-mapped course library because we believe your game is worth it. Our members trust the information that their SkyCaddie provides them, which is why SkyCaddie has remained the leader in this technology for the last 10 years.

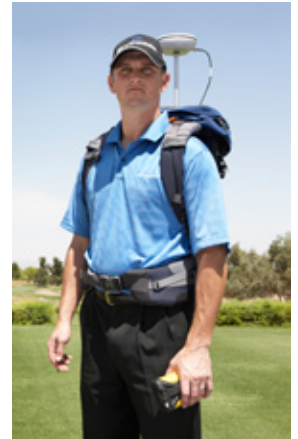

Professional SkyCaddie Mapper wearing our survey-grade GPS backpack while ground-mapping a golf course

Our course map library is growing daily. Whenever we receive a notification that a course layout has changed, we send a mapper out to re-map the course, so that our members have the most up-to-date distance information in the game. We update thousands of courses a month.

The SGX is capable of storing and using two types of professionally-mapped courses: 1) Basic Green course maps (also referred to as “preloaded courses”) and 2) Advanced Feature course maps.

Did You Know?


Since SkyGolf started back in 2001, until the release of the SGX, our Mappers have walked approximately **290,850 miles** — a distance that is the equivalent of walking nearly 12 times around the Earth!

Note

Preloaded course maps will ONLY show the distances to the front, center, and back of the green. If you wish to see other targets on the hole, or some of the other views as shown on the SGX packaging, you will need to use an Advanced Feature course map, available through a SGX Membership.

2.2 About Basic Green Courses (Preloaded Courses)

The SGX comes preloaded with Basic Green information (front, center, back distances) for up to 30,000 of our ground-verified courses for 30 days. This allows it to be ready-to-play out of the box. Your complimentary 30-day trial period will begin once you register your device or after three holes of golf, whichever is first.

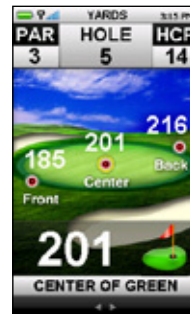

Basic Green course play screen with yardages



Preload Course expiration message

On Day 31, your SGX will only display the benefits that correspond to the membership plan you purchased. Should you choose one of our SGX membership plans, you will receive the Basic Green information related to the plan you selected only for the region you specified.

The green image used for the background for Basic Green courses is NOT intended to represent the true shape of the green for the hole you are on; only IntelliGreen, IntelliGreen Pro, and HoleVue on Advanced Feature course maps display the true shape of the green.

During the preload trial period, the scoring and mark ball features are available. However, the SGX will only maintain a scorecard for the round you’re playing (while the device is on), until a Membership plan has been purchased; then the number of rounds that can be saved on the device will increase to 10 rounds.

Basic Green Distances

The front, center and back of the green for the hole you are playing show distance calculations based on a line of approach from the center of the fairway. Basic Green distances do not adjust based on a different angle of approach. This is different from IntelliGreen, which rotates the green and recalculates distances from your angle of approach.

2.3 About Advanced Feature Courses

Advanced Feature, ground-mapped SkyCourses are available only to SkyCaddie Members. These courses unlock the full potential of your SGX by displaying not only basic green information, but distances to hazards, carries and layups as well. Any feature on a golf course that comes into play or is typically marked is called a Target. When a SkyCaddie Mapper walked the course you are on, he identified and recorded several tee, fairway and green targets per hole that you would want to know the distance to in order to choose the best club for your shot.



Interactive HoleVue with Zoom may be available with an Advanced Feature course map

Almost all Advanced Feature course maps include IntelliGreen and distances to hazards, carries, and layups. With this information, you will have everything you need to play your best golf.

Feature Availability

IntelliGreen Pro and HoleVue started being added to SkyCaddie's course database in 2009, so availability of these features may be limited in your area initially, but those quantities will grow rapidly as the hole images are corrected and rectified through our mapping process. While this process is tedious and may delay release of HoleVue in mass quantities, the reliability factor is overriding our temptation to provide images with less reliability.

IMPORTANT!

When your SGX is in the process of syncing with CaddieSync, please DO NOT remove the cable or interrupt the syncing process. Syncing typically takes less than a minute.

Did You Know?

You do not have to have your SGX with you to access the course list in CaddieSync. You can manually enter in your SkyGolf.com login and manage your Favorites list prior to downloading them to your SGX.

Note

If you are syncing up to 50 Advanced Feature SkyCourses to your SGX — or if there is a new software update — please expect the download and installation process to take a few minutes, as there will be a lot of data being transferred to your SGX.

2.3.1 Overview of Advanced Course Management Features

- **Hazards, Carries and Layups:** SkyCaddie records thousands of points on each golf course with sub-meter precision. Distances to hazards, carries and layups are displayed automatically as you move down the course. Knowing these critical distances lets you manage your game and eliminate those 6, 7, and 8s from your scorecard.
- **Interactive HoleVue™ With Zoom:** SkyCaddie is creating, at a rate of hundreds per week, the only high-precision graphics library of every golf hole, based on ground-corrected data. With HoleVue, you'll know the distance to any point on a hole in order to play that hole with the fewest strokes. Need a close-up view to strategize your next shot? HoleVue includes a patented zoom function to dial into the exact area you need to see. *The number of course maps with Interactive HoleVue, while growing weekly, is limited; please go to www.SkyGolf.com and search our course database to see if your course is HoleVue-ready.*
- **IntelliGreen®:** With SkyCaddie's patented IntelliGreen® technology, the exact shape of the green automatically rotates to match your angle of approach to provide all of the distances you need to hit more greens and avoid 3-putts. This proprietary feature gives you a chance to turn every shot into a scoring opportunity by providing front carry and back distances, depth of green, and distances to any other point on the green — *simultaneously.*
- **IntelliGreen® Pro:** Built on proven IntelliGreen technology, IntelliGreen Pro is another proprietary feature that adds distances to major green contours, false fronts, front carry and back distances — plus any other point on the green from your angle of attack. This kind of crucial scoring information is only possible by using our ground-verified mapping process. *The number of course maps with IntelliGreen Pro, while growing weekly, is limited; please go to www.SkyGolf.com and search our course database to see if your course has IntelliGreen Pro. Not all courses have significant green contours that require this feature.*
- **QuickVue™:** SkyCaddie's exclusive QuickVue provides a virtual preview of the safest path from the tee to green. At a single glance, golfers know the exact green shape with IntelliGreen®, the total distance from tee to the green, the shape of the golf hole, the distance and direction to the perfect fairway position and the distance remaining from that position for the approach shot to the green. All information is derived from SkyCaddie's exclusive TrueGround™ mapping technology to provide golfer's with the highest reliability in the industry.

2.4 Downloading Courses To Your SGX

If you have installed CaddieSync and selected a Membership Plan, then you will have unlimited access to our rapidly growing database of professionally-mapped courses for the region that your plan covers.

To Search and Download SkyCourses to your SGX:

1. Connect the SGX to your computer using the micro-USB cable.
2. Start CaddieSync.
3. When the welcome page displays, turn on your SGX and click on the "Sync" button in CaddieSync.
4. Click on "Courses" in the main navigation bar, then "Course Search" link in the sub-navigation bar to search for courses.
5. On the course results page, you will see the *Facility Name* (with the location beneath it), *Number of Holes* (with the course type, such as "Public" or "Private"), *Course Features*, and *Add to Favorites* column.
 - a. Clicking on the course's name will take you to that course listing on ClubSG^{BETA} so that you can see details about the course, such as address, phone number, hours of operation, fees, and user ratings.
 - b. You will see icons listed under the Course Features column. This shows you what features are available on the course map you are interested in. If you hover your mouse cursor over an icon, you will see what that icon means. Clicking on the icon will take you to a details page on that feature.
6. When you see a course map that you want, click on the "+ Add to Favorites" button to the right of the course. This will save this map to you personal favorites list for download later.
7. Once you are finished selecting courses, click on "Favorites" on the sub-navigation bar. From this page, you can select the courses you want (up to 50 at a time) then click on the button that is labeled "Download to My SkyCaddie".


When a course in your Favorites list is updated, you will need to re-download the course to your SGX to get access to the update. We recommend re-downloading your courses each time you sync to ensure you have the most up-to-date information available.

CHAPTER 3

Playing Golf With Your SGX

3.1 Acquiring Signals

While standing outside prior to play, power on the SGX by pressing and holding down the Center Key for 1-2 seconds. After boot-up, the SGX will display the Main Menu. Choose "Play Golf" to begin. The SGX will search for satellite signals, keeping you informed of its status using the progress bar.

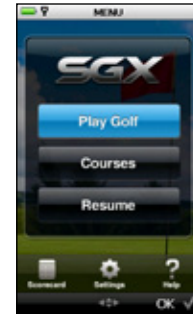

Main Menu



Satellite Search screen


Once satellite signals have been acquired, the Satellite Signal Indicator will show the signal strength, represented by a series of bars. The SGX will then automatically advance to the next screen (or you may choose to manually advance to the next screen while the GPS continues to search for signals).

Note

If you have the Scoring option turned on under "Settings > Scoring", then when you select "Play Golf" or "Courses", the SGX will ask you if you wish to start a new round before the Course Selection screen appears.

3.2 Selecting a Course to Play

Once the SGX has acquired satellite signals, the Auto-Course Select feature will attempt to determine your location and automatically select the closest installed course. In the event that you have a Basic Green (Preloaded) map and an Advanced Feature Course map of the same golf course installed on the SGX, the SGX will select the Advanced Feature Course by default.

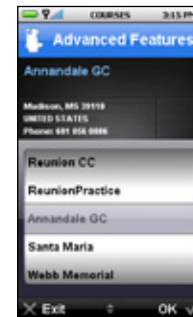

Course Selection screen



Hole Selection screen

When a course is displayed on the Course Selection screen, either select that course to play, or simply scroll to another course. Courses will be sorted by distance from your current location. "Preloaded Courses..." will let you search for Basic Green courses on the SGX. "Nearby Courses..." will tell the SGX to auto-search for the closest golf courses from your location and display them.

Once a course has been selected, the SGX will ask you for the hole to start on or you may choose to select the Driving Range. If the course you are playing has a driving range that has been mapped by a SkyCaddie Mapper, the Driving Range feature will display the actual distance to each yardage sign based on the location of the hitting area.

3.2.1 Manually Selecting a Basic Green Course (Preloaded Course):

1. On the *Main Menu*, select either "Courses" or "Play Golf"
2. On the *Course Selection* screen, scroll to the option that says "Preloaded Courses..." then press the Right Key under "OK".
3. Choose the Region (typically the country) of the golf course's location by moving the Joystick up/down, then select "OK".
4. Choose the State/Province or other sub-region where the course is located by scrolling up/down, then select "OK".
5. Search for the course by name by scrolling through the list of courses shown on the SGX. Once you have discovered the course, press the Right Key under "OK". The SGX will load that course map so you can play using that information.

Note


After the 30-day Basic Green Course Preload trial period is over, you will only see courses for the region your Membership plan covers. If you sign up for a SGX Membership before the 30 day trial is over, you will still have access to all of the preloaded courses.



Choosing the country of the Basic Green course



Choosing the state of the Basic Green course

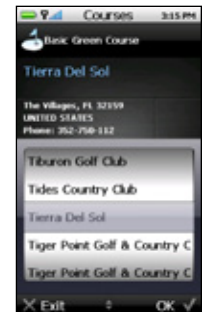

Selecting the course name within the state

3.2.2 Manually Selecting an Advanced Feature Course:


1. You must have a Membership and have downloaded an Advanced Feature Course map to be able to select it on the SGX. See Section 2.4 for more information.
2. On the *Main Menu*, select either “Courses” or “Play Golf”.
3. On the *Course Selection* screen, scroll to the course name you want, then press the Right Key under “OK”.

3.3 Target Views (Available on Advanced Feature Courses through Membership Only)


The SGX offers three target views to represent key distance information in a variety of ways. Choose the target views that best fit your style of play. By default, all three are turned ON. However, you may choose the target views you prefer to see on each hole by changing the Target View setting.

To change the Target View setting:


- Go to the *Main Menu* and highlight the “Settings” icon. Press the Joystick to select it.
- Under *Settings*, go to “Targets” using the Joystick. Press the Joystick to select that option.
- Using the Joystick, make sure that “Target Views” is selected with a checkmark to the left of the option. Press the Joystick or the Right Key (under “Set”) to see the view options. A dot to the left of the target view option means that the option is turned on. Use the Joystick to scroll through the options, pressing it to toggle the target view selection on/off.
- When done, press the Left Key (“Exit”) to return to the previous screen.

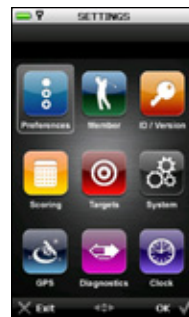

Settings menu

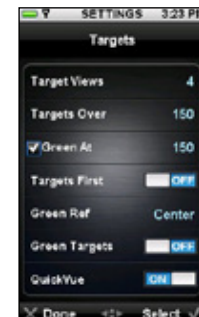

Target preferences

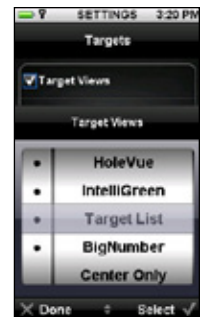

Target View setting

Note

The number of course maps with HoleVue, while growing weekly, is limited; please go to www.SkyGolf.com and search our course database to see if your course is HoleVue-ready.

Note

If the Advanced Feature course map you have installed on your SGX does not include Interactive HoleVue with Zoom, the next default screen is IntelliGreen Pro. If IntelliGreen Pro is not currently available on the map you're playing, then IntelliGreen will display as the initial play screen.

Note

On Par 3s, you will not be able to create a custom target and the HoleVue the image will display without a yellow line.


3.3.1 Interactive HoleVue™ With Zoom:

HoleVue offers a ground-rectified graphic of every golf hole. With HoleVue, you'll see the ideal line of play for that hole, real-time distances for the tee shot and approach shot, plus you can re-position the line of play to know the distance to any point on a hole in order to play with fewer strokes. Additionally, HoleVue includes a patented zoom function to dial into the exact area you need to see.

- **Know Your Location:** Indicated by a red “X”, XMark™ displays your actual position on HoleVue, automatically updating as you move. Powered by SkyGolf's proprietary TruePoint™ GPS Precision Positioning Technology, XMark always shows where you are in relation to hole features that affect play – even if you can't see them!
- **To See Distances to Any Point on the Hole (Par 4s and 5s only):** XTarget™ is a feature of Interactive HoleVue With Zoom that allows you to create a personal fairway targets. With XTarget, you'll get the distance you need to any target, layup or safe area on a hole, and from that target to the center of the green. Knowing this critical distance information will help you save strokes by staying in the smart zones and getting out of trouble areas.

Creating a personal fairway target with XTarget:

The line of play (yellow line) will indicate the distance between your location and the center of the green. Use the Joystick to drag the target down from the green to any where on the hole. The distance from your location to the target and the remaining distance to the green will instantly appear. Move the target to your desired position.

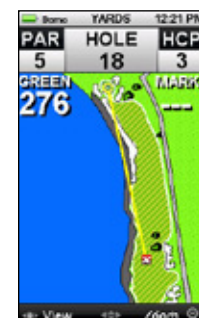


Line of Play




Custom Target Line




Interactive HoleVue

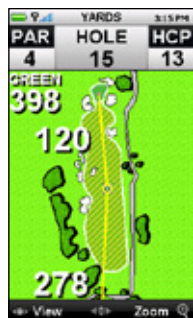

Zoomed in 1x

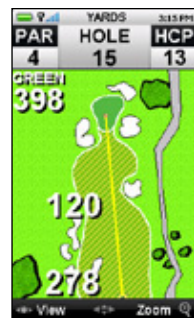

Zoomed in 2x

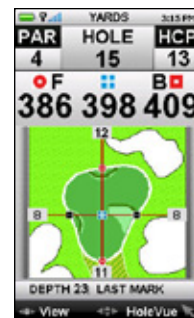

Zoomed in 3x

Note

On Par 4s and 5s, a yellow line appears by default from the fairway target to the green. To see the yellow line from your location to the fairway target, press the Mark Ball button.


As you approach the fairway target, HoleVue will update and the yellow line from the fairway target to the green will disappear. To see it again, you can create a custom target with XTarget or use the Joystick to drag the target down from the green.

- **To Zoom In or Out:** Selecting “Zoom” above the Right Key allows you to zoom three levels of the HoleVue graphic. The first level of zoom provides a closer look at the fairway, the second level shows a closer view of the hazards that will affect your approach shot, and the third level zooms directly to IntelliGreen. Press the Right Key to get back to HoleVue.
- **Tracking Shot Distance Within HoleVue:** Using the Mark Ball button, mark your location prior to taking your tee shot. Once marked, the SkyCaddie will display the total yards of the hole at the top of the display. Additionally, the distance from your last mark (noted as “Mark” on the display) will automatically update as you advance down the fairway. (See section “Determining Shot Distance” for more instructions on marking your shots.)
- **Recording Distance Off Tee:** You can use the SGX to store your driving distance. Press the Mark Ball button before your tee shot and again when you arrive at the location of your tee shot (make sure to press “Mark” in the confirmation screen). Next time you sync the driving distance will upload automatically to ClubSG^{BETA}.

3.3.2 QuickVue:

QuickVue shows the safest path from the tee to green and displays hazards and reliable targets that will come into play as you move down the course. The hazards and targets update automatically as you move down the course.

- **Identify the Hazards:** QuickVue indicates hazards and targets by the following:
 - White squares = hazards
 - Blue squares = water
 - Tall green rectangles = trees
 - Red squares = tee-shot targets
- **Knowing the Numbers:** The “Tee Shot” distance plus the “Leaves” distance provides the total distance from the tee box to the green following the safe path down the fairway. The “Center” distance is the linear distance (a straight line) from the tee box to the center of the green. If you add up the “Tee Shot” distance and the “Leaves” distance, it will not be the same as “Center” distance because they are displaying the distance to the green following two different paths to the green.

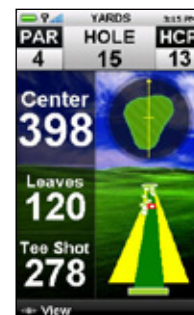

QuickVue

QuickVue will display on courses where HoleVue is not available. For the SGX, QuickVue is turned “ON” by default and can be viewed on courses not currently mapped with HoleVue.

To Toggle QuickVue On or Off

1. Go to “Menu” then select “Settings”
2. Under “Settings”, highlight “Targets” and select
3. Highlight “QuickVue” and select to toggle ON/OFF

If a course has both HoleVue and QuickVue, HoleVue will display instead of QuickVue. To view QuickVue instead of HoleVue (available only for the SGX):

1. Make sure QuickVue is set to ON (see above)
2. Under “Targets”, highlight “Target Views” and select
3. Highlight “HoleVue” and select. The black dot next to “HoleVue” will disappear and it will be turned off (see 3.3 for image reference)



Target preferences



QuickVue setting

3.3.3 IntelliGreen®

SkyGolf's proprietary IntelliGreen technology graphically displays the true shape of the green, automatically rotating it to match your angle of approach. It turns every shot into a scoring opportunity by providing front carry and back distances, depth of green, and distances to any other point on the green — *simultaneously*.

If the Advanced Feature Course you are playing has the HoleVue feature, you will be able to see greenside hazards including bunkers and water with IntelliGreen.


The front carry, a point on the green (determined by the position of the crosshair) and back distance are displayed along the top of the screen. Each distance corresponds to a unique icon that is displayed on the green shape for quick reference. Use the joystick to re-position the crosshair by moving it in the desired direction and release. The distances will recalculate automatically based on the new position of the line.

This view also includes the automatic depth of the green and the distance from your last mark, if you used the Mark Ball feature on the hole. Green depth is an automatic calculation of the depth of the green for your line of approach. The last mark measures, displays and updates the distance of your shots as you advance down the course toward your ball. (See section "Determining Shot Distance" for more instructions on marking your shots.)

While viewing the IntelliGreen screen, select "View" with the Left Key to see another target view. Continuing to select "View" will return you to the IntelliGreen view.



IntelliGreen with Green Hazards

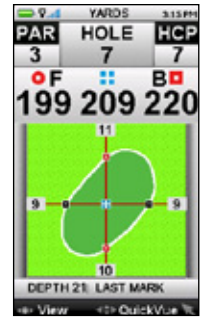


IntelliGreen without Hazards

3.3.4 IntelliGreen® Pro

Built on proven IntelliGreen technology, IntelliGreen Pro offers all of the functionality of IntelliGreen, plus the ability to display major tiers, contours, false fronts and mounds from your angle of approach to the green. By simply moving the IntelliGreen crosshairs to the ridge lines on the image of the green, you'll get instant distances and depth information to major tiers. This kind of crucial scoring information is only possible by precision-mapping a golf course from the ground.

If an Advanced Feature Course map has an IntelliGreen Pro feature, this version of IntelliGreen will be used by the SGX.

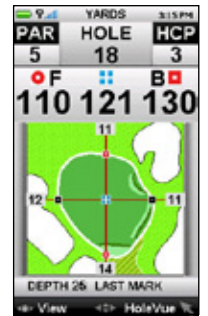


IntelliGreen Pro feature

3.3.5 Target List (Hazards, Carries and Layups)

The Target List displays a list of distances to hazards, carries and layups located ahead from your position on the hole. You may use the Joystick to scroll up or down through the targets manually, or let the SGX automatically update the list of targets ahead, as you move down the fairway. The Target List also calculates and displays the "Leaves" distance to the Center of Green from the highlighted target.

If you marked your previous shot using the Mark button, the distance from that last mark (labeled "Last Mark") will be displayed in the center of the Target List screen.

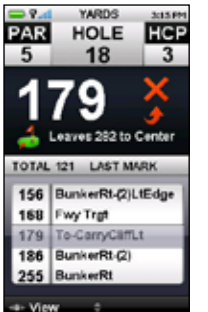


List of Hazards, Carries and Layups

3.3.6 Big Number and Center Only

Big Number View displays the selected target distance as a very large number for easy viewing. Press up/down on the Joystick to switch between one target at a time.

Center Only displays the distance to the center in a large, big number format. If Center Only is select, it will automatically turn OFF all other targets views. By default, Center Only will be turned OFF.

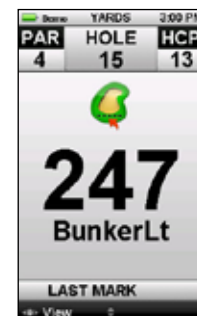

Big Number



Center Only

Note

If an Advanced Feature Course has the HoleVue feature, you will see greenside hazards in both IntelliGreen and IntelliGreen Pro.

Note

Not all greens or all courses have noteworthy major green contours to require this feature. In conformance with USGA regulations, SkyCaddie does not factor slopes or gradients into distance calculations.

Note

The number of course maps with IntelliGreen Pro, while growing weekly, is limited; please go to www.SkyGolf.com and search our course database to see if your course has IntelliGreen Pro.

Note

You can also simply double-tap the Mark Ball button to record your location.

Note

The SGX will only hold scoring data for the round you are playing while the device is on, unless you have signed up for a Membership plan. If you power off the SGX and turn it back on during a round, you will lose that scorecard data. With a Membership, you will be able to store 10 rounds on the SGX. Syncing regularly will allow your rounds to be stored on ClubSG^{BETA} so that you may free storage space on the SGX.


Note

If you select “No: Skip Scoring” the scoring feature for that round; therefore, the rest of the information in this section will not apply.

3.4 Determining Shot Distance Using Mark Ball

Simply press the Mark Ball button at the location where you are going to take your shot. The “Mark New Ball Location?” screen will display. Select “Mark” by pressing the Right Key to record your current location and then take your shot.

When you get to the location where your ball came to rest, press the Mark Ball button again to record and display the distance. You may return to your previous screen by selecting “Exit” or choose “Mark” to mark the distance for another shot.

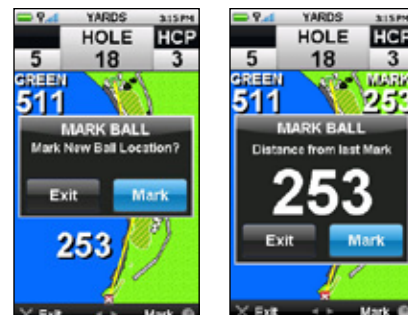

Mark Ball confirmation

Shot distance displayed

3.5 Viewing Course Information

To view information regarding the current hole while in Play Mode at any time, simply press the Info button. The course’s name, address, the hole number you are on and the par and handicap for that hole will appear. Press the Right Key under “OK” to exit from this screen.


3.6 Digital Scorecard

3.6.1 Turning on the Scoring Feature

By default, the Digital Scorecard on the SGX is set to OFF.

To turn on the Digital Scorecard from the Main Menu:

1. Scroll down to “Settings” using the Joystick, then press the Right Key for “OK”
2. Navigate to the Scoring icon, then select “OK”
3. Under Scoring preferences, make sure that “Scoring” is checkmarked. If it is, either press the Joystick or press the Right Key under “Set” to toggle Scoring to ON.
4. Press the Left Key to save and exit to the previous screen.

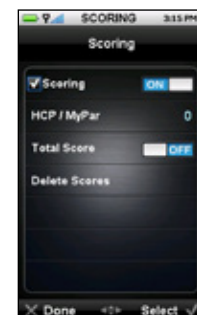


Scoring preferences

Once the Digital Scorecard is activated, the SGX will ask you if you would like to use the scoring feature before each round you play.


3.6.2 Using the Scoring Feature During Play

Once activated, whenever you select “Play Golf” or “Courses” you will be asked if you wish to use scoring for the round. Three options are provided:

- **Yes: Continue Round:** Select if you started a scorecard for a round, were interrupted during the round, and want to get back to the round where you left off.
- **Yes: Start New Round:** Select if you are starting a new round and wish to maintain a scorecard for the round.
- **No: Skip Scoring:** Select if you don’t want to use the Digital Scorecard for the round you are playing.

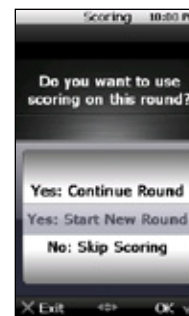


Scoring confirmation (without Membership)

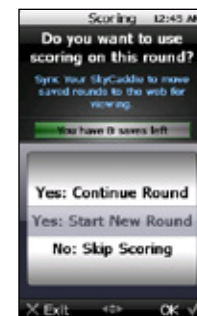

Scoring confirmation (with Membership)

Maintaining your score with the Digital Scorecard is a manual process. In other words, you need to manually input your scores to the SkyCaddie after you play each hole. The SkyCaddie does not automatically track your scores.

At the end of each hole, you will be prompted with the Digital Scorecard where you can input the number of shots it took to complete the hole. You can enter your total score for each hole by moving the Joystick left/right on the Scorecard screen (the score will default to par). When you are finished, simply press “Next” using the Right Key key to continue to the next hole.

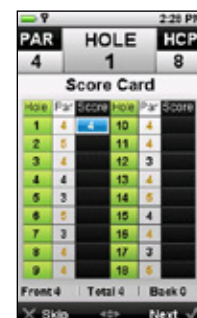


Entering the score

Edit Scorecard

You can also edit your Digital Scorecard during or after your round on your SkyCaddie. Simply highlight the hole you want to edit from the Scorecard Summary page and use the Joystick to select. You will then be prompted to edit the score.

If you want to track additional stats including Putts and Fairways Hit, select the hole using the Joystick. To enter additional stats:


1. Move downward on the Joystick, then left/right to adjust the number of Putts. No putts will be recorded until you scroll to highlight "Putts". When you highlight "Putts", it will default to 2.
2. Move downward again, then left/right to select whether your shot hit the fairway or missed it (i.e. missed left or missed right).
3. Press the Right Key under "OK" when done.

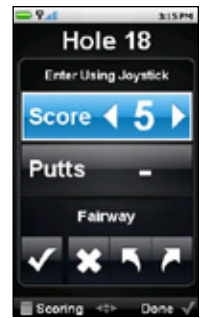

Tracking Stats

The SGX will display a summary of how many holes have been played to that point in your round, how much over or under par you are, your total score, and number of putts. You have one of two options:

1. Press the Left Key under "Back" to edit your score for that hole, or
2. Press the Right Key under "OK" to proceed to the next hole.

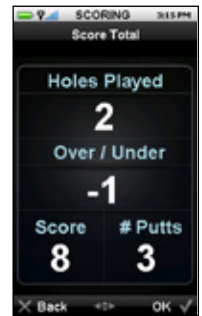

Score Summary

If you want scoring ON but do not want to be automatically prompted to enter a score between every hole, you have to option to turn Prompt Scoring OFF. By default, Prompt Score will be turned ON. To change Prompt Score settings:

1. From the Main Menu, select "Settings" < "Scoring"
2. Highlight and select "Prompt Score"

3.6.3 Viewing the Digital Scorecard

You may view your entire Digital Scorecard on your SGX during play by pressing the Menu Button and selecting the "Scorecard" option at the bottom left corner. The Scorecard shows you the established Pars and Handicaps for each hole, plus the scores you entered as you completed each hole. From this screen you can:

1. Use the Joystick to highlight the hole you are interested in viewing
2. Select "Exit" by pressing the Left Key, or
3. Select "OK" to see the Over/Under Summary

The Over/Under Summary screen tracks your performance against the pars for each hole. A negative number represents strokes under par, a positive number represents strokes over par. An "E" displays if you complete a hole at par.

When you are finished viewing this screen, you can either select "Exit" or "OK" with the Left or Right Key.

PAR	HOLE	HCP
5	2	10

Hole	Par	Score	Hole	Par	Score
1	4	4	10	4	
2	5	6	11	4	
3	4		12	3	
4	4		13	4	
5	3		14	5	
6	5		15	4	
7	3		16	4	
8	4		17	3	
9	4		18	5	

Front 9 | Total 9 | Back 0

Digital Scorecard


If you are still in the middle of a round at this point, you can choose "Resume" on the Main Menu, and the SGX will display the Hole Selection screen. Choose the hole you are about to play, and continue with your round.

3.6.4 Setting Your Handicap or MyPar™ Target

You can adjust the Digital Scorecard to factor in your Handicap or MyPar Target for the course you're playing. A MyPar Target is the target score for a particular golf course that you want to achieve in order to improve your game.



Setting HCP

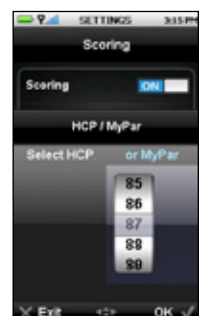

Setting MyPar

To Customize Your Handicap or MyPar Target From The Main Menu:

1. Using the Joystick, select "Settings" at the bottom center of the *Main Menu*.
2. Scroll down one on the *Settings* menu and select "Scoring".
3. Make sure that *Scoring* is turned ON, or you won't be able to track your scores using your Handicap or MyPar settings.
4. Using the Joystick, scroll down to HCP / My Par. If this option is selected, there will be a checkmark next to it. Either press the Joystick to select, or the Right Key under "Set".
5. Choose which you prefer the SGX to use: Handicap or MyPar.
 - a. If you want to use Handicap, make sure "Select HCP" is highlighted and a selection dial is displayed. Then move the Joystick up/down to your Handicap value and press the Right Key ("OK").
 - b. If you prefer to use MyPar, press right on the Joystick to highlight "or MyPar", then move the Joystick up/down to select a value. Remember, the MyPar value correspond to the target score for the particular golf course you are about to play. When you have selected your target score, press the Right Key under "OK".
6. Press "Exit" a couple of times to leave the Settings menu in order to return to the Main Menu (or press the Menu Button).


3.6.5 Optional Scoring Information

If you are using the Digital Scorecard to score your round, you can track Total Score, Putts, Fairways Hit and Tee Shot Distance.

By default, all of these stats will be ON. However, you can choose to track Putts, Fairways Hit and Tee Shot Distance (Total Score will always be ON when Scoring is ON).

To Turn OFF The Optional Scoring Information:

3. From the Menu screen select "Settings"
4. Select "Scoring" > "Optional Info"
5. Highlight and select the stat you want to turn OFF and press "OK" (NOTE: the black dot will go away)
6. After you have made your desired selection, press "Exit" to save your settings (you will be able to adjust your settings at anytime)

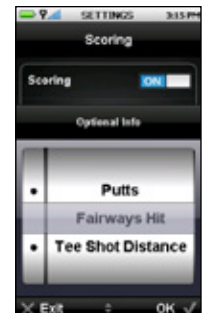


Scoring Preferences

To Record The Tee Shot Distance:

1. Press the Mark Ball button as you stand next to your ball when you are in the Tee Box
2. Press "Mark" in the Mark Ball confirmation screen and take shot
3. When you arrive to the new location of your tee shot, press the Mark Ball button again and select "Mark" in the confirmation screen
4. The distance will be saved and the SGX will start measuring a new distance

PLEASE NOTE: You will not be notified that the distance was saved. When you sync your SGX, the Tee Shot Distance will automatically upload to ClubSG^{BETA}.

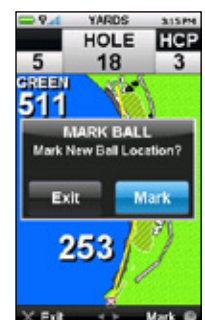

Mark Ball confirm

Note

It's OK to rotate the SkyCaddie with AutoView; however, to maintain optimal GPS accuracy, the device needs to be oriented at a 45° or 90° angle. After you obtain your distance information or enter/check your scorecard, please rotate the device back to a vertical position (see Appendix A "Helpful Hints" for more tips).

3.7 AutoView Technology

AutoView is designed to provide golfers with a hands-free way of switching between multiple play screens including HoleVue, IntelliGreen and their Digital Scorecard, with just a simple turn of the wrist. AutoView Technology is controlled by the SGX's built-in accelerometer to provide three viewing positions – one "portrait position" and two additional "landscape positions". By default, AutoView is enabled for the SGX.



AutoView, when combined with SkyCaddie's other standard features including AutoCourse Select, AutoHole Advance, HoleVue's AutoZoom and IntelliGreen's AutoGreen rotation (aligns with your angle of approach), allows the SkyCaddie to operate from the first tee to the 18th green with virtually no button pushes or touching your screen.

The default view in a portrait position is Interactive HoleVue With Zoom. When you rotate the device to the right (clockwise), you will see IntelliGreen or IntelliGreen Pro in a landscape view. If you rotate the device to the left (counter clockwise), you can access the Digital Scorecard. To view HoleVue again, rotate the device to a portrait position.


To Change Your AutoView Settings:

1. From the *Main Menu*, select "Settings" > "Preferences"
2. Highlight "Landscape View" and make the desired selection

You can also adjust the sensitivity of AutoView. This controls the level of rotation needed to trigger the accelerometer to switch between portrait and landscape positions. By default, the sensitivity is set to medium.

To Adjust the AutoView Sensitivity:

1. From the *Main Menu*, select "Settings" > "Systems"
2. Highlight "AutoView Sensitivity"
3. Highlight the desired sensitivity and select "OK"

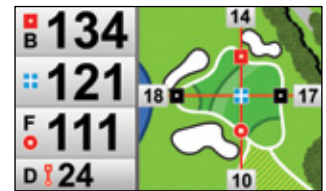

Landscape View of IntelliGreen

Pebble Beach Golf Links												
HOLE	1	2	3	4	5	6	7	8	9	IN	TOTAL	
HCP	8	10	12	16	14	2	18	6	4			
PAR	4	5	4	4	3	5	3	4	4	36	72	
SCORE	4	5										
HOLE	10	11	12	13	14	15	16	17	18	OUT	TOTAL	
HCP	7	5	17	9	1	13	11	15	3			
PAR	4	4	3	4	5	4	4	3	5	36	72	
SCORE												

Landscape View of Digital Scorecard

Note

For a course that is not enabled with HoleVue, the default position will depend on your Target View settings.

CHAPTER 4

SkyCaddie Menu Items

4.1 Main Menu


- **Play Golf:** To begin a round of golf using your SGX, highlight *Play Golf* and choose “OK” to open it. When a Main Menu item is highlighted, it will appear blue. Upon opening *Play Golf*, the SGX will display the Searching For Satellites screen. The SkyCaddie will advance to the next screen automatically upon acquiring satellite signals. To cancel the satellite search and return to the Main Menu, press the Left Key under “Exit”.

Within *Play Golf*, a listing of downloaded courses and detailed information about each course will appear. If satellite signals are acquired, the SGX will attempt to determine your location and auto-select the closest installed course. You may choose to select a course manually by using the Joystick to scroll through the list of courses. Upon selecting a course, choose the hole to begin on and choose “OK” to begin.




Main Menu

- **Courses:** To quickly view a listing of all courses installed on your SGX, scroll to the *Courses* menu item and choose “OK” to open. The course list, along with detailed information about each course, will appear. Using the Joystick, move up or down the listing to view each course.
- **Resume:** Upon exiting a course during play, highlight and select *Resume* to return to that course.
- **Scorecard:** Access the Digital Scorecard by selecting the *Scorecard* menu item.
- **Settings:** Takes you to a menu that includes a number of options, settings and information used to customize your SGX to best fit your needs. Specific details regarding all Settings menu options are listed in Section 4.2.
- **Help:** Selecting this option provides help screens on how to use Interactive HoleVue with Zoom, measuring shot distance, using the Target List screen, IntelliGreen, and IntelliGreen Pro.

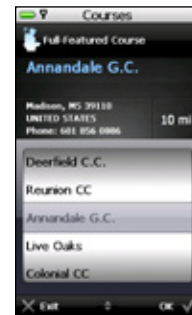

Courses screen

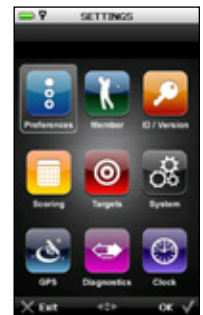

Settings Menu


4.2 Settings Menu

The Settings Menu is accessible from the Main Menu. From the Main Menu, use the Joystick to scroll to the Settings icon located at the bottom of the screen. Once highlighted, press the Joystick or choose “OK” using the Right Key to access the menu.


4.2.1 Preferences

Preferences contains a list of settings that you can adjust to fit your style of play. Within Preferences, use the Joystick to move up and down the list to highlight the desired item. A blue checkmark will appear next to the item that is highlighted. Press the Joystick or the Right Key under “Set” to modify the setting.

- **Distance:** Set the desired distance of measure as Yards, Meters, Miles, or Kilometers.
- **Demo Mode:** Select this item to turn Demo Mode ON or OFF. This option allows you to simulate a round with the SGX without being on an actual course or having satellite lock.
- **Backlight:** Adjust the brightness level of the backlight as needed. To adjust the Backlight percentage level, scroll to Backlight and choose “Set”. Then scroll up/down through the options from 0% to 100% then choose “OK” to save your selection..

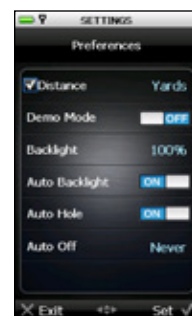

Preferences menu

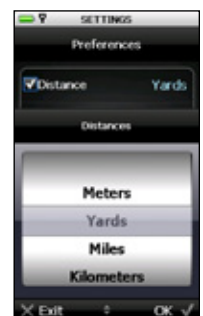

Distance setting


Demo Mode vs. Course

When Demo Mode is ON, any SkyCourse that you have installed on your SGX will show simulated distances when you select “Play Golf”. However, you must turn Demo Mode OFF before you actually play a round so that you receive real-time distances on your SGX.

Demo Course, on the other hand, is a sample course map that is initially loaded on the SGX so that you can see the SGX functionality without installing another course map. If selected, you do not need to turn Demo Mode on to see simulated distances with the Demo Course.

- **Auto Backlight:** The SGX includes a light sensor designed to activate the LCD display's backlight when it is needed. This functionality is controlled by the Auto Backlight setting. When set to ON, the Auto Backlight feature will turn on the backlight when a low light condition is detected (tree cover, indoors, etc). The preferred setting for this feature is ON. When set to OFF, the backlight sensor is disabled and the backlight will remain on at all times (even outdoors). To get the most battery life on a single charge, it is recommended to leave the Auto Backlight ON.

To turn ON Auto Backlight, scroll to the menu item to highlight it. Move the Joystick left or right to toggle between ON and OFF.

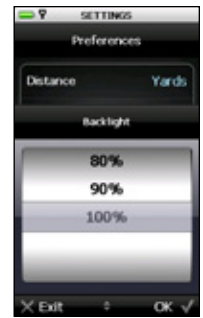

Auto Backlight setting

- **Auto Hole:** Enable the Auto Hole feature to automatically advance to the next hole during play. To turn ON Auto Hole, scroll to the menu item to highlight it. Move the joystick left or right to toggle between ON and OFF.
- **Auto Off:** Set the interval of time to automatically power off your SkyCaddie after no activity. Intervals are 30/60/90 minutes or "Never". Within Preferences, scroll to "Auto Off" and choose "Set" to open the setting. Using the Joystick, scroll up or down to the desired time interval and choose "OK" to save your selection.

Note


The Demo Course will be included in the total course count stored on your device. You can remove it from your SGX if you deselect it in CaddieSync the next time you download a new course map set to your SGX.

4.2.2 Member

The Member section contains detail regarding your SkyCaddie Membership Plan, Serial Number, and Number of Courses currently stored on your SGX.

4.2.3 ID/Version

This screen shows your name, SkyCaddie's customer support phone number (in the event that your SGX is lost), the SGX's unique Serial Number and software versions currently installed. The "Owned by" information is created in CaddieSync and downloaded to your SkyCaddie upon performing a Sync.

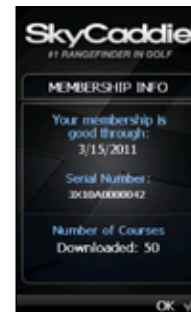

Member screen



ID/Version screen

4.2.4 Scoring


The Scoring functions are customized through this menu. You can turn digital scoring ON or OFF. You can also set your handicap or MyPar™ Goal. For more information on these settings, see Section 3.6.

4.2.5 Targets

Your SGX will automatically display targets in front of you during play. You can always manually scroll back to targets behind you if needed (by moving the Joystick up or down). In addition to automatically scrolling targets, you can customize how your SGX displays targets:

- **Target Views:** Three target view options are available to display during play: *HoleVue* (Interactive HoleVue with Zoom), *IntelliGreen* (IntelliGreen or IntelliGreen Pro), and *Target List* (Hazards, Carries and Layups). The default is to display all three views for each hole. However, you can combine the options to best fit your style of play. Within Targets, scroll to Target Views and choose "Set" to open the item.

Using the Joystick, scroll through each option and choose "OK" to either turn ON or OFF the desired options. If a target view is set to display, a dot will appear to the left of it in the listing of views. To return to the main Targets menu, choose "Exit".

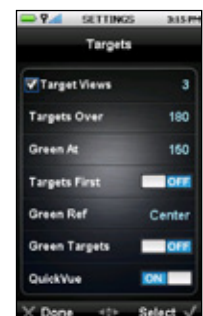

Target preferences


- **Targets Over:** Adjusts the SGX to display targets at beyond the set distance value. Set the distance from 50 to 500 yards. The default setting is to display targets over 150 yards. This means that the SGX will automatically show targets at least 150 yards or beyond when looking at the Target List.

- **Green At:** Automatically switches to the IntelliGreen view when you reach a set distance. The default to switch to IntelliGreen is 150 yards. You may adjust this setting from 50-500 yards.
- **Targets First:** Enabling this setting displays the target list from the tee first when you go to the next hole (instead of displaying the IntelliGreen). The default setting is to display the IntelliGreen first.
- **Green Ref:** Sets the green target that you want to know the distance to when you make your approach shot. When the Green Reference is set to “Front”, a small square will appear on the IntelliGreen where the front is marked. The word “Front” will replace “Center” on target lists. The distance will be based on the Front marker.
- **Green Targets:** Enable this option to display additional green targets (Example: Grn-RtCy, Grn-BackRt) in the target list views.
- **QuickVue:** From here, you can toggle QuickVue OFF/ON.

4.2.6 System

System Settings offers additional configuration specific to the operation of the SGX.


- **Reset to Factory:** Resets the SGX settings to the factory defaults when “Yes” is selected.
- **Joystick Sel.:** Allows you to turn the selection function of the Joystick ON or OFF. When set to “ON”, you can press the Joystick to select on-screen options. When set to “OFF”, you must use the Left and Right Keys to select options on the SGX.
- **Clear Data:** Erases Courses, Scoring and Membership data attached to the SGX. If you clear the data, you will need to sync your SGX to restore your membership details on the device.

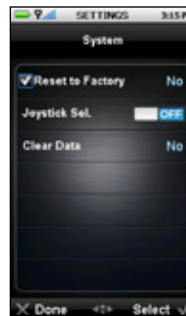

System settings



GPS reset

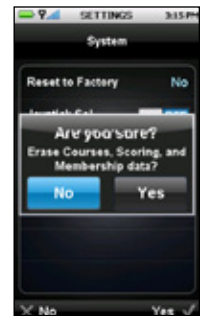

Clear Data


4.2.7 GPS

Selecting the GPS icon on the *Settings Menu* will take you to a GPS Reset screen. The reset option will reset the GPS receiver. This function may be used while troubleshooting with SkyGolf Customer Support or if you notice that your satellite signal appears to be poor. Press the Right Key under “Yes” to proceed with the reset, or the Left Key under “No” to exit without a reset.


4.2.8 Diagnostics

Should you encounter any issues with the SGX, a SkyGolf Customer Support representative may ask you to run the Diagnostics tool. The Diagnostics tool will automatically perform three tests: a LCD Test, a Backlight Test, and a Button Test.

- The **LCD Test** determines whether the SGX's high-resolution TFT-LCD display has dead pixels, a blank screen, or other problems. The test will cause the screen to display all black, then all white.
- The **Backlight Test** checks the display's backlight by automatically scrolling through different brightness levels in 10% increments.
- The **Button Test** determines whether the SGX software recognizes keys when you press them. During this test, every button you press should show the name of that key on the display. To exit this test, press the Left Key twice.

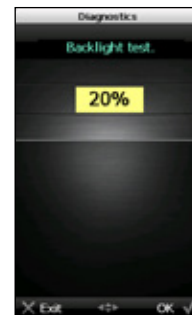


Backlight Test

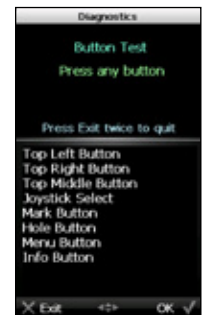

Button Test

4.2.9 Clock

Selecting this option on the Settings Menu will display the digital clock. Press the Left Key beneath “Exit” to return to the previous screen.

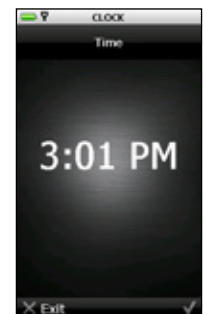

Digital Clock

CHAPTER 5

Recording Your Own Course

The SkyCaddie allows you to record three green targets (Front, Center, and Back per hole) for up to five personal courses that are stored on your SGX. If you have purchased a SkyCaddie Membership Plan, you can backup and store courses in your own online membership account using CaddieSync. Your personal recorded courses will be stored in CaddieSync under Courses > "Courses I've Mapped".

Joystick Selection

The Joystick will select even if you have turned the Joystick Selection OFF in your settings.

Record Mode

You must have a satellite fix to be in Record Mode before you can record or re-record any distance information, to set or change the par or handicap, to edit the course name or to delete the course.


Changing Modes

You change between Record Mode and Play Mode at any time by selecting Mode using the Left Key.

5.1 Naming Personal SkyCaddie Courses

To record a course, select Courses from the Menu screen then scroll up to New Course and select "OK". If scoring is on, you will be prompted to make a selection. It does not matter if you select scoring or not.

Create a name for your course (up to 16 characters) using the on-screen keyboard using the Joystick to move and to select. To clear a letter, highlight and select the "Backwards" key (bottom right above "Enter" key). If you select "OK" (Right Key) or select the "Enter" key before choosing any letters, the course name will default to "MYCOURSE#" and sequentially add a number for each course.

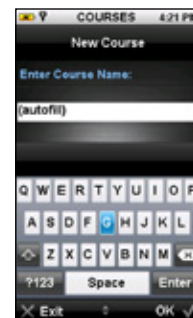


On-screen keyboard

5.2 Recording Green Targets

After entering the course name, highlight and select "Enter" or use the Right Key to select "OK" to save and to advance to the "Start On" screen showing the hole spinner. Scroll to the desired hole to record and select "OK".

You are now ready to record the distance. Press the Right Key to record your location and you will be prompted to stand still for 5 seconds while the SkyCaddie records the location. Repeat this process for each of the green targets. The location will default to the Center of the green, however, the recommended sequence to record targets is to record the front of the green, record the back of the green, then walk to the center of the green and, when the two distances are equal, record that location.

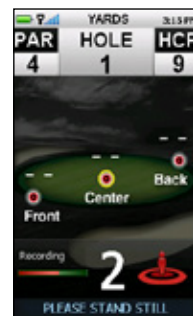


Recording

5.3 Setting Par and Handicap

To set the par and handicap for a recorded hole, press the Info button (you must be in Record Mode to set the Par and Handicap). Move the Joystick to set the par and Handicap (HCP) to the desired number. You can also edit the course name or delete the course. Use the Joystick to select.

We recommend setting the Par and Handicap on each hole after you record the distance information.

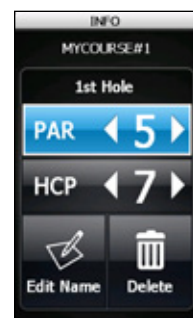

Info screen

5.4 Playing Personal SkyCaddie Courses

To play a personal SkyCaddie course, press the Menu button and select "Courses". Scroll to the appropriate course name and select. Next, scroll UP/DOWN to select the desired hole number and press the Joystick to select.

5.5 Re-Recording Personal SkyCaddie Courses

Press the Menu button and select "Courses". Scroll to the appropriate course to re-record and select "OK". scroll UP/DOWN to select the desired hole number and press the Joystick to select. Select "Mode" (Left Key) then press "Record" in the Record Mode confirmation box. Repeat steps outlined in Section 5.2 ("Recording Green Targets").

New locations will overlay previously recorded locations for those holes selected. The entire course does not have to be re-recorded.

Note

In the effort of producing more HoleVue and IntelliGreen Pro courses on the SkyCaddie website, Member-Mapped Course processing is currently in a major backlog. We still encourage members to submit their courses to SkyGolf, but please be aware that the turnaround time for these courses will take a great deal of time. Please contact Customer Support if you have an exceptional circumstance requiring a quick turnaround time for your course.

5.6 Renaming or Deleting Personal SkyCaddie Courses

To rename or delete a personal SkyCaddie course, press the Menu button and select "Courses". Scroll to the appropriate course name to rename or delete and select. Press "Ok" and choose the starting hole number from the hole spinner.

Select "Mode" (Left Key) and select "Record" in the confirmation box to switch to Record Mode. After you are in Record Mode, press the Info button ("i" icon). From here you will be able to edit the name of the course and/or delete it. Use the Joystick to select. When you are finished, select "Save" (Right Key) to save the changes.

5.7 Publishing Personal SkyCaddie Courses

You have the option to publish your personal recorded courses so other SkyCaddie users can take advantage of the information you recorded. Simply click the "Publish" button within the "Courses I've Mapped" area in CaddieSync to begin the process. You will be asked to complete a form to document the Par and Handicap for the course and to accept an end-user agreement. Your course is then sent to the SkyGolf Quality Control Department for review. Upon review and approval, the course will be listed in the SkyGolf course database for other users to download.

APPENDIX A

Helpful Hints

- **DO turn the SGX on outside, away from buildings and other obstructions.** The SGX needs to warm up approximately 5-10 minutes prior to play. For optimal performance while playing, ensure that the SGX has a clear view of the sky at all times. While the omni-directional, high-performance GPS antenna has been designed to lock quickly to more satellites and stay locked to maintain performance in all terrains, it is still a good idea to avoid being around buildings, obstructions, heavy foliage, low areas with adjacent obstructions, or reflective objects (such as metal/glass structures) while using the SGX.
- **DO sync your SGX with CaddieSync regularly.** Syncing regularly allows the SGX to keep running at peak performance. Syncing allows you to check alerts for new features and software updates; automatically upload your latest scorecard to ClubSG; and download new courses and change your Favorites list.
- **DO perform a Soft Reset if the SGX appears to be unresponsive.** To perform a soft reset on the SGX, press and hold the center Power Button and the Joystick for several seconds until the SGX reboots.
- **DO watch your signal strength indicator.** The higher the signal strength, the more accurate the system will be. The best signal strength is obtained in open areas, with the antenna pointing toward the sky at a 45° to 90° angle. Holding the SGX away from your body may improve signal strength in weak areas. It is normal for the satellite signal strength indicator to fluctuate as you move around the golf course.
- **DO make sure** that the SGX's battery is fully-charged before play.
- **DO NOT press the Joystick when you want to move the on-screen cursor or crosshairs.** The Joystick on the SGX is multi-directional and sensitive to the slightest finger movements. Pressing the Joystick will select options on the screen, while gently sliding the Joystick up, down, right left, etc. will move the on-screen cursor or crosshairs. You do not need to press down on the Joystick to move it.
- **DO NOT use** AC chargers or USB cables that did not come with or are not authorized for use with your SGX. The wrong adapters or cables may damage the SGX.
- **DO NOT turn the SGX on and off during play.** The SGX is a “smart system” that continues to download data from satellites to adjust to your environment during play. It is designed to stay on continuously during a round of golf. Turning it on and off will interrupt satellite communication and slow down play. If you take a long break at the turn, you may turn the SkyCaddie off to conserve battery power, but allow 5-10 minutes for it to return to optimal accuracy.
- **DO NOT make** any sudden or jerking movements with the SGX.
- **DO NOT expose your SGX to extreme temperatures.** Treat it like you would your cell phone. Do not leave your SGX in a super-heated vehicle when not in use.
- **DO NOT drop the SGX in water or leave exposed in a hard rain.** The SGX is water-resistant but NOT waterproof!

APPENDIX B

Target Icons and Target Descriptors

 Back of Green	 Zone	 Hazard	 Marker
 Center of Green	 Lay Up To	 Ditch	 Water Carry
 Front of Green	 Fairway Target	 Mound	 Water
 Green	 End of Fairway	 To	 Creek
 Bunker Right Carry	 Bunker	 Upslope	 Out of Bounds
 Bunker Right	 Bunker in Fairway	 Downslope	 Tree
 Bunker Left Carry	 Bunker Left	 Leaves	 Pro Front

Target Name	Target Descriptor	Target Name	Target Descriptor	Target Name	Target Descriptor
Green	Gn	Leaves	Lv	Black	Blk
Plate	Plt	Last	Lst	Orange	Orng
Fairway Target	FT	Point	Pnt	Yellow	Ylw
End of Fairway	EoF	Pond	Pnd	Gold	Gld
Fairway	Fwy	Path	Pth	False	Flse
Bunker Right	BkrRt	Bush	Bsh	Pole	Pol
Bunker Left	BkrLt	Range	Rng	Sign	Sgn
Bunker	Bkr	Hole	Hle	LayUpTo	LayUp
Carry	Cy	Marsh	Mrsh	Dogleg	DogLg
Creek	Crk	Sprinkler	Sp	Target	Trgt
Mound	Mnd	Water Cooler	Wtrcolr	Stone	Stn
UpSlope	UpSlp	Water	Wtr	Front	Frt
DownSlope	DnSlp	Bridge	Brdg	Left	Lt
Tee	T	Post	Pst	Right	Rt
PopUp	PU	Over	Ovr	Center	Ctr
BallWasher	Bwash	Island	Isld	Middle	Ctr
Bottom	Btm	Flag	Flg	Marker	Mkr
Disc	Dsc	White	Wht		

APPENDIX C

Battery Information and Safety Requirements

NOTE: FAILURE TO COMPLY WITH ALL OF THE FOLLOWING PRECAUTIONS COULD

- **Cause personal injury or property damage**
 - **Cause abnormal chemical reactions which would make the battery over heat, smoke, distort, leak, explode, or catch on fire**
 - **Destroy internal protections built into the battery**
 - **Shorten battery life**
 - **Reduce battery performance**
-
- Read this manual completely before using your SGX.
 - The SGX battery has been rigorously tested, and is in fully in compliance with applicable UN, ITC, IATA, and other regulatory requirements for batteries of this type.
 - The SGX with battery installed has been further tested and is in full compliance with MIL-STD 810F standards for surviving high and low air pressure environments; storage and operation at extremes of temperature and humidity; rapid changes in temperature; extended periods of vibration; repeated drops onto a hard surface on each side, edge, and corner; blowing dust and sand; and drenching, torrential rain.
 - The SGX battery life will be maximized if it is recharged at a moderate temperature, between 32°F and 104°F (0°C to 40°C).
 - The SGX operates normally between 14°F and 140°F (-10°C to 60°C).
 - The SGX battery will safely survive temperatures between -40°F to 167°F (-40°C to 75°C). Avoid allowing the temperature of the SGX or its battery to exceed 167°F / 75°C.
 - Use only a SkyGolf-supplied charger with your SGX.
 - Do not leave your SGX attached to a charger or a USB port for over 24 hours. Under the recommended conditions, a completely discharged SGX battery should completely re-charge in about 4 to 4.5 hours when on the charging screen.
 - Do not charge the SGX in a place where it could become over heated by direct sunlight, a stove, a fire, or other source of extreme heat.
 - CAUTION: Do not replace the SGX battery with an incorrect battery type.
 - Keep the SGX away from sources of high voltage or static discharge.
 - If your SGX will be stored for an extended period, allow the battery to discharge to approximately one half capacity before storage.
 - Store the SGX in a place where it will not experience temperatures or absolute humidity over 85%.
 - Do not put the SGX into a microwave oven.
 - Do not allow the SGX to be crushed.
 - Do not incinerate or burn an SGX.
 - Do not leave an SGX where it could become submerged in water.
 - If your SGX is over heating, leaking, smoking, or if you detect an unusual odor, do not touch it. Using the end of the USB cable away from the SGX, immediately disconnect the cable from any charger or USB port.
 - Do not touch a leaking SGX. Avoid leaked-out materials. Do not allow these materials to touch your skin or clothes. If touched, immediately rinse affected areas thoroughly with water. Leaked materials may cause skin irritation. Seek medical attention if irritation persists. If leaked material contacts your eyes, do not rub your eyes. Rinse the eyes thoroughly with water, and see a doctor immediately.
 - Opening the SkyCaddie will void your warranty.
 - If you were to open an SGX, you would have access to a Lithium Ion battery. Do not open the SGX, do not handle the SGX battery.
 - If you have access to an SGX battery, always follow these precautions in addition to all the above:
 - Read this entire manual and the label on the exterior of the battery.
 - Keep the battery away from sources of excessive heat such as fire, stoves, or direct sunlight.
 - Keep the battery away from sources of high voltage or static discharge.
 - Do not use or store the battery with other batteries or where it could touch metal.
 - Do not put the battery into a microwave oven.
 - Do not allow the battery to be crushed.
 - Keep the battery away from children.
 - Do not drop the battery.
 - Do not allow anything to touch any of the battery contacts, or to connect two or more of the contacts.
 - Do not disassemble, destroy, or attempt reassembly of the battery.
 - Do not place or leave the battery in a damp or wet environment.

Battery Information and Safety Requirements (cont.)

- Do not allow water to touch the battery.
- Do not wrap the battery with conductive material.
- Properly dispose of the battery.
- Do not incinerate or burn the battery.
- Do not leave or discard the battery where it could get wet or become submerged in water.
- Do not damage the battery.
- Do not weld or solder anything to the battery, the attached wires, or the connector.
- Do not use this battery in any device other than a SkyCaddie SGX.
- Do not touch a leaking battery. Avoid leaked-out materials. Do not allow it to touch your skin or clothes. If touched, immediately rinse affected areas thoroughly with water. Leaked materials may cause skin irritation. Seek medical attention if irritation persists. If it contacts your eyes, do not rub your eyes. Rinse the eyes thoroughly with water, and see a doctor immediately.
- Use of this battery in other devices could result in unsafe conditions. Do not use this battery in any device other than your SkyCaddie SGX.

U.S. Federal Communications Commission Regulatory Agency Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interferences received, including interference that may cause undesired operation.

NOTICE: The FCC warns that user modifications of this device without the express approval of SkyHawke Technologies could void the user's authority to operate this device.

Canadian Regulatory Agency Compliance

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference causing equipment standard entitled: "Digital Apparatus", ICES-003 of Industry Canada

© 2011 SkyHawke Technologies, LLC. All Rights Reserved.
U.S. Patent Numbers 7,118,498; 6,456,938; 5,740,077; 5,507,485 & Patent Pending.

SkyCaddie® User's Guide. All content within is copyrighted by SkyHawke Technologies, LLC and may not be reprinted without permission. The content of this guide is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by SkyHawke Technologies, LLC. SkyHawke assumes no responsibility or liability for any errors or inaccuracies that may appear in the informational content contained in this guide. SkyGolf®, SkyCaddie®, SGX™, ClubSG™, TrueGround™, TruePoint™ GPS, SkyCourse®, IntelliGreen®, IntelliGreen® Pro, HoleVue™, CaddieSync™, and Nothing Else Comes Close™ are trademarks of SkyHawke Technologies, LLC. SkyHawke Technologies, LLC, Ridgeland Technology Center, 274 Commerce Park Drive, Suite M, Ridgeland, Mississippi 39157 USA.

Register your SGX at www.myskycaddie.com using CaddieSync within 30 days of purchase to activate your Consumer Limited Warranty and complementary 30-Day Course Preload Trial.

Questions? Visit us on the web at www.skygolf.com