



TM12D0LBL

Temporizador para exteriores con 1 tomacorriente  
Minuterie extérieure à 1 prise

## Outdoor 1-Outlet Timer

### Instruction Manual & Warranty

# TM12D0LBL

#### Getting Started

- 1 Make sure the lamp or appliance is working, by plugging it into the wall outlet and turning it on.
- 2 While it is on, remove the plug from the wall outlet.
- 3 The cover protects the timer "face" from dirt and dust, and it "hides" the operating controls when not in use. You will need to open the cover when programming the time and settings, and then you should always close the cover (water shield) after programming has been completed.
- 4 There are 48 non-removable pegs on the front of the timer. These pegs can be pulled up or pushed down. Make sure that all of the pegs are pushed DOWN.
- 5 Holding the pegs, rotate the dial clockwise through at least one complete revolution.

#### Programming On/Off Times

- 1 Locate the time(s) at which you wish the lamp or appliance to turn ON and OFF, paying attention to the AM or PM designation.
- 2 Each peg represents 30 minutes. Pull the pegs UP during the time periods when you would like the lamp or appliance to be turned ON.
- 3 Push the pegs DOWN during the time periods when you would like the lamp or appliance to be turned OFF.

#### Setting Current Time

 
You must set the current time, in order for the timer to turn ON and OFF correctly at the programmed times.

- 1 Holding the pegs, rotate the dial clockwise until the current time aligns with the ► arrow, paying attention to the AM or PM designation.

#### Installation/Use

**INSTALL THE CORD AND UNIT AT LEAST 1.4M (55.1") ABOVE GROUND LEVEL WITH THE OUTLET RECEPTACLE FACING DOWNWARD. LET THE SWITCH HANG DOWNWARD SO MOISTURE DOESN'T ACCUMULATE IN THE OUTLET.**

- 1 To attach the timer to a wall, drive 2 screws into the wall, 1-9/16" (40mm) apart, leaving about 1/4" to 1/2" protruding. We recommend that you use a number 6 panhead screw, #27 (7mm) in diameter. You can use the template (Fig. 1) to mark the screw locations on the wall. Make sure the screws are secure.



- 2 Insert the screw heads into the slots at the back of the timer, making sure the outlet is facing downward.
- 3 Drive a third screw through the front hole on the timer (that is near the outlet). This will secure the timer to the wall.
- 4 Plug the light or appliance into outlet at the bottom of the timer. Plug the timer into the wall outlet. Make sure the lamp or appliance is set to ON.

#### Manual Override Function

You can override the programmed setting temporarily (i.e. turn the lamp/appliance ON when the timer is set to OFF or turn the lamp/appliance OFF when the timer is set to ON.) There is a small ON/OFF knob that can be turned clockwise, so that the dot • aligns with either ON or OFF.

- 1 When the lamp or appliance is OFF at the programmed time, turn the knob so that the dot • aligns with ON. The lamp or appliance will turn ON.
- 2 When the lamp or appliance is ON at the programmed time, turn the knob so that the dot • aligns OFF. The lamp or appliance will turn OFF.

#### WARNING:

- ▶ Suitable for indoor and damp locations, not for water immersion or for use where directly exposed to water.
- ▶ Install the cord and unit at least 55.1 inches (1.4M) above ground level with the receptacle facing downward.
- ▶ Always close the water shield.
- ▶ Store indoors when not in use.
- ▶ In case of power failure, reset timer.
- ▶ Wattage of lamp or appliance must not exceed capacity of timer.
- ▶ Do not use the timer with heaters or similar appliances.
- ▶ Always ensure the plug of the lamp/appliance is fully inserted into the timer outlet.
- ▶ To clean timer, remove from wall outlet and wipe with a dry cloth.

#### Specifications

125V~, 60Hz / 15A, 1875 Resistive / 8A, 1000W Tungsten  
Minimum ON/OFF Switching Interval: 30 minutes

#### Limited One Year Warranty

AmerTac™ warrants this product to be free from defects in material and workmanship for a period of one year from the date of purchase. AmerTac's obligations are limited to repairing or replacing any defective unit and are effective only if such units are returned within one year of the purchase date to AmerTac, Saddle River Executive Centre, One Route 17 South, Saddle River, NJ 07458. Warranty void if damage is due to misuse or improper installation. In no circumstance will AmerTac™ be liable for consequential or incidental damages relating in any way to this product.

Questions? Preguntas? 800-777-0802

©2009 AmerTac™

Saddle River Executive Centre  
One Route 17 South  
Saddle River, NJ 07458

www.amertac.com

Made in China / Hecho en China / Fabriqué en Chine

Questions? 800-777-0802

109-0048-A



0148297



0144506



0140599



0156020



0155671

0192773



0141224



0149289

