

Valve User's Guide

Version 3.7.0

May 7, 2019

I Summary

Valve is a web-based application used to view and export volcano monitoring data plots. Primary categories of data used in volcano monitoring are deformation (e.g GPS, tilt), seismic (e.g. hypocenters, waveforms, helicorders, RSAM), and gas (e.g. CO₂, SO₂). However, other types of data can also be displayed. Valve, in conjunction with its middle-ware VDX, provides for a one-stop shop for viewing all types of data viewable as time-series.

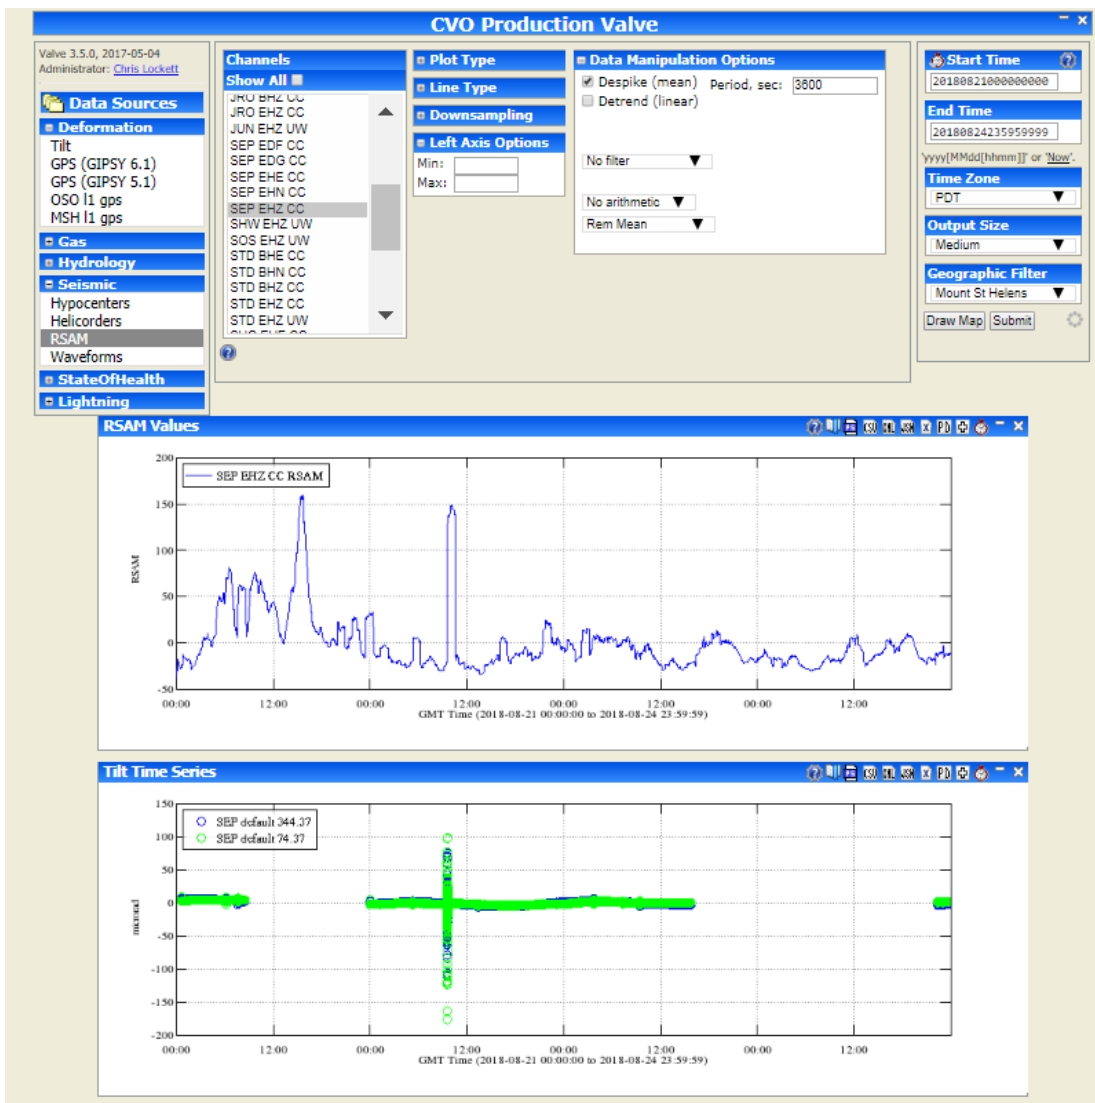


Figure 1 Valve displaying RSAM and Tilt data

2 Data Sources

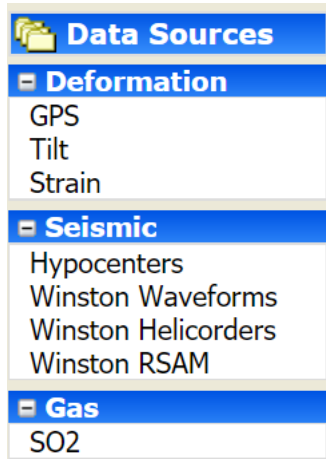


Figure 2 Data Sources

The left hand-side menu of Valve allows user to choose the data source to plot from. The categories and menu items are configured based on local needs and may vary. The default data types are shown in the image to the left.

2.1 Deformation

2.1.1 GPS

GPS data that is loaded into Valve typically comes from STACOV files and contains time series option for East, North, and Up components in meters.

2.1.2 Tilt

Tilt data time series options contain x (East), and y (North) values, usually in micro radians.

2.2 Seismic

2.2.1 Hypocenters

Hypocenters are the locations of earthquakes. Valve can either plot the location on a map, or show the number of hypocenters in a given bounding box or circle.

2.2.2 Winston Waveforms

Valve can plot Winston wave data as waveform, spectra, or spectrogram.

2.2.3 Winston Helicorders

Valve can plot Winston helicorders.

2.2.4 Winston RSAM

Valve can plot Winston RSAM as values or event count (given a threshold). Note, filtering the RSAM value under Data Manipulation options does not result in RSAM calculated from filtered RSAM.

Winston RSAM is pre-calculated at 1 second periods so the filter would apply to these values.

2.3 Gas

Gas monitoring systems used varies between observatories, but common ones used are FLYSPEC, NOVAC Scanning and Mobile DOAS, and Multi-Gas. CO₂ and SO₂ emissions are commonly measured gases.

3 Plot Options

There are some plot options that are common across time-series data types, and some that are specific to the data type.

3.1 Generic Time-Series Plot Options

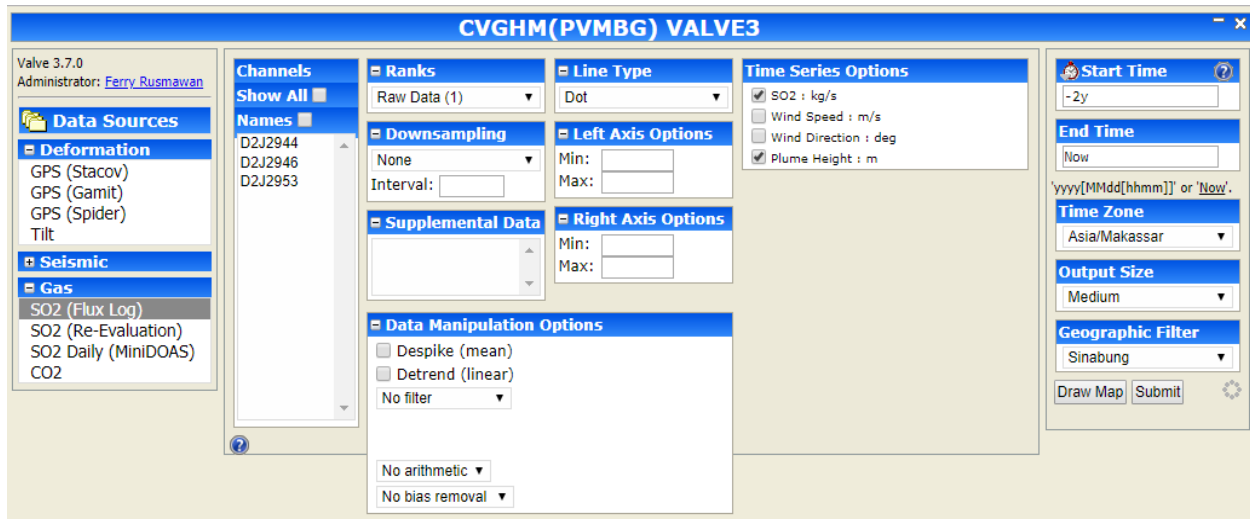


Figure 3 Time Series Plot Options

Channels

This option lists the channels available for the selected data source. The list can be filtered by geographic region if locations for the stations and filters are configured properly. Select channels to plot. To display channel names instead of code, check the 'Names' option. It will then use the channel name as defined in the channels table.

Ranks

Valve may contain variations of the same data, such as raw vs aggregate or multiple sensors on same station. In such cases the Ranks option helps differentiate between the different data.

Downsampling

Valve offers option to reduce the sample rate of the data, either through decimation or mean filtering.

Supplemental Data

This option is currently not used.

Data Manipulation Options

Data manipulation options allows user to modify the displayed data in various ways through despiking, detrending, filtering, multiplication, division, and bias removal.

Line Type

Users may choose to plot the data as a continuous line, or points represented by circle, square, star, triangle, or dot.

Left Axis Options

Users may specify min and max for the left axis.

Right Axis Options

Users may specify min and max for the right axis.

Time Series Options

Shows the data type available to plot on same time series. Users may select or deselect data to plot.

3.2 GPS

The screenshot shows a web-based interface for configuring GPS plot options. It features a sidebar with a list of station names (AHUP, AINP, ALAL, ALEP, APNT, BLBP, BYRL, CNPK, CRIM, DEVL, ELEP, EPLA, ERL2, GOPM, HILR). The main area is divided into several panels: 'Plot Type' (radio buttons for Time Series, Velocity Field, Displacement Field), 'Channel Filter' (Baseline Channel), 'Line Type' (dropdown menu set to Circle), 'Left Axis Options', and 'Time Series Options' (checkboxes for East, North, Up, Length in meters). There are also expandable sections for 'Ranks', 'Downsampling', 'Supplemental Data', and 'Data Manipulation Options'.

Figure 4 GPS Plot Options

Plot Type

GPS data can be plotted as Time Series, Velocity Field, or Displacement Field.

Time Series - Perhaps the most common use of the GPS section is plotting time-series.

Velocity Field - Valve can also be used to estimate average velocities over time and plot them spatially. Select the stations you want estimated, optionally select a baseline station, choose your options, and press submit.

Displacement Field - Valve can also be used to estimate a displacement using subset of points at the beginning and end of an interval. Select the stations you want estimated, optionally select a baseline station, enter the displacement times (unfortunately this must be done by hand), choose your options, and press submit.

Time Series Options (if selected)

Valve can plot four different components of a time-series: east, north, up, and, if a baseline station is selected, length.

Velocity Field Options (if selected)

The Scale Errors option scales the error ellipse by the model misfit, the Horizontal option draws the velocity vector, and the Vertical option shows the vertical component.

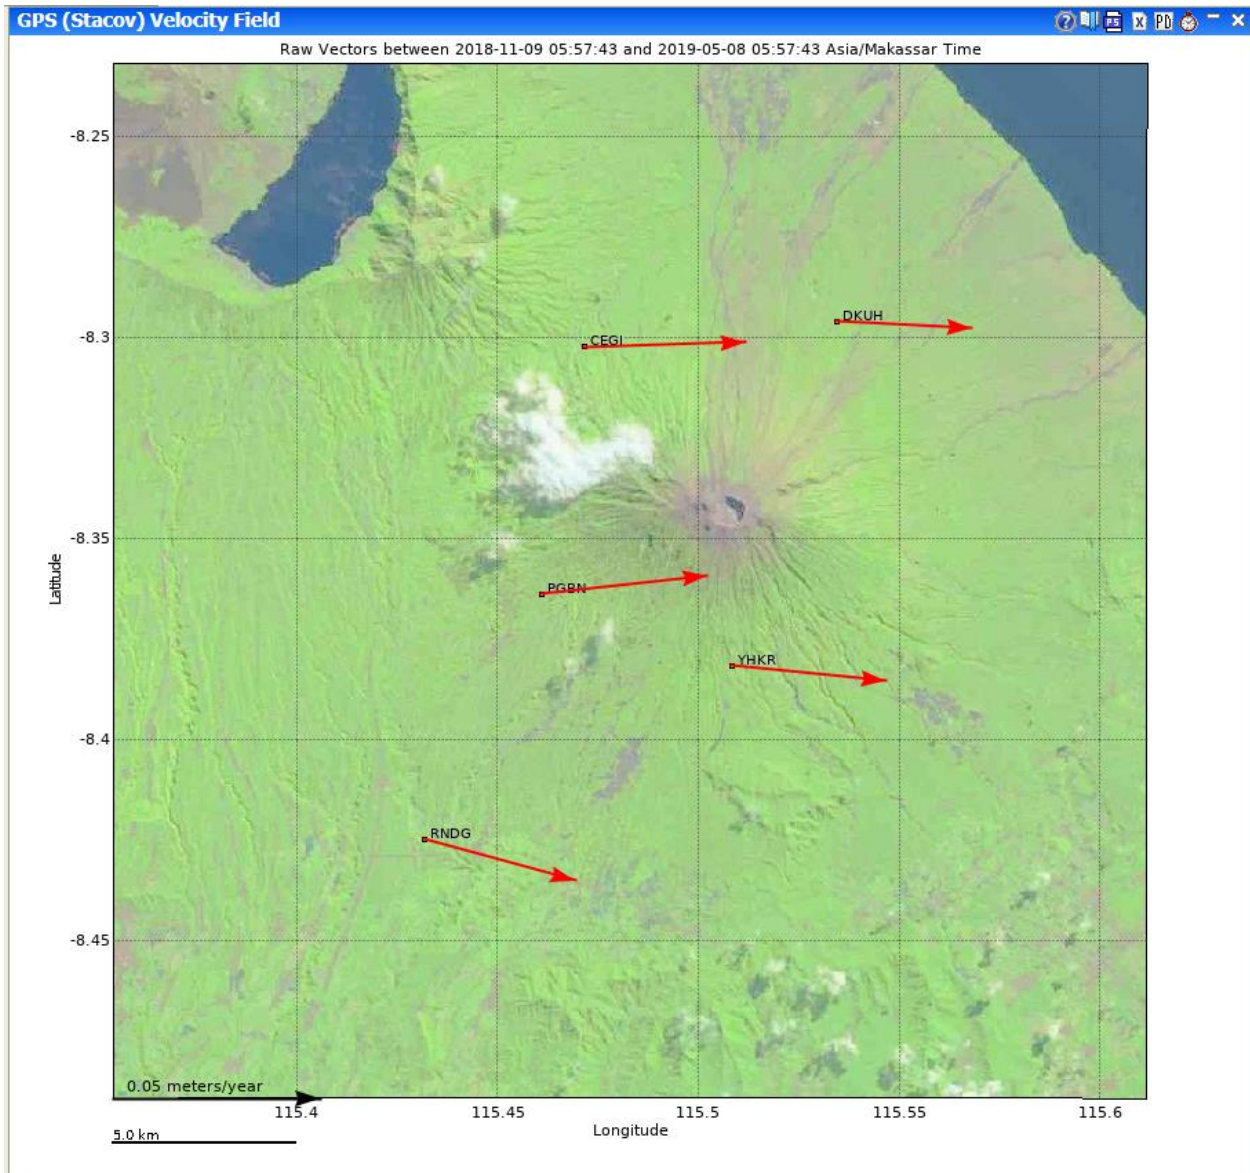


Figure 5 Velocity Field Plot

Displacement Options (if selected)

The Detrend option removes the linear trend from the positions first, the Scale Errors option scales the error ellipse by the model misfit, the Horizontal option draws the displacement vector, and the Vertical option shows the vertical component.

Baseline Channel

A single station can be set as the baseline station. This subtracts that station's velocity from all other observations. When using a baseline station only epochs in which both the source station and the baseline station have data will be used. To get channels to show up under Baseline Channel option it must be marked 'Continuous' in the database. This can be done in the channel_types table and assigning the 'Continuous' ctid to the channel in channels table.

3.3 Tilt

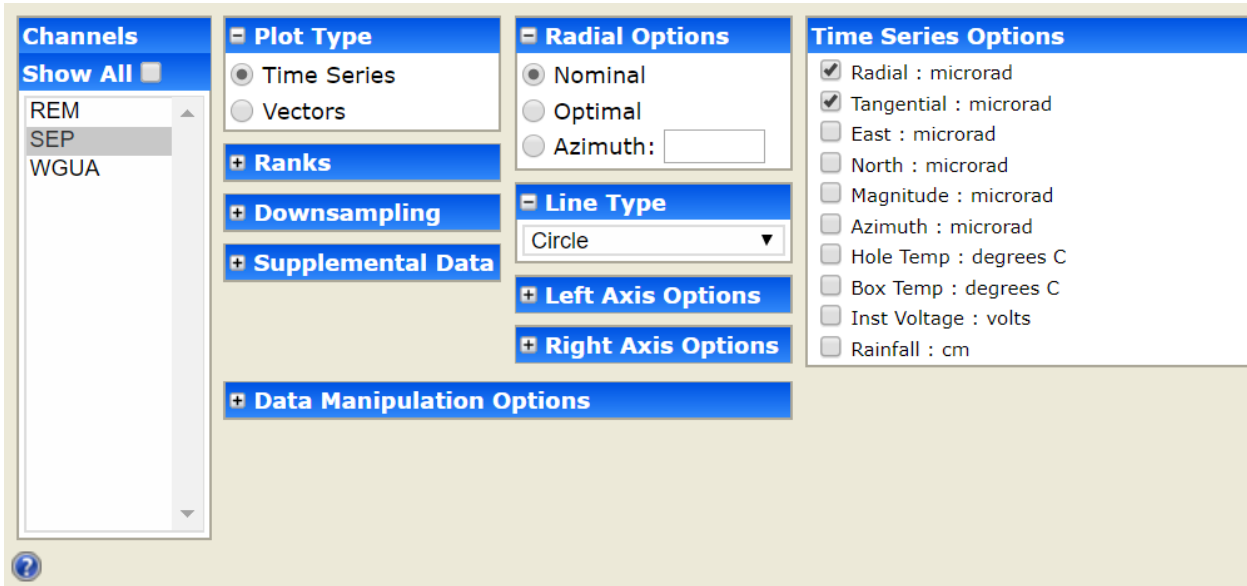


Figure 6 Tilt Plot Options

Plot Type

Select Time Series or Vector option. Plotting Tilt Vectors shows a spatial plot with representations of the direction of tilt at the specified Tilt Sites (control-click/shift-click to specify multiple sites) over the specified time interval.

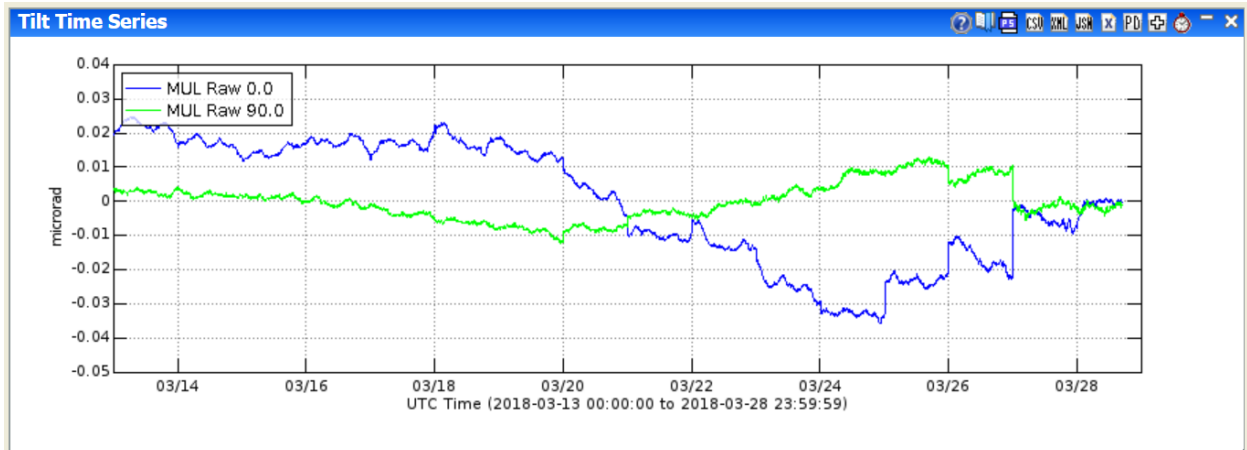


Figure 7 Tilt Time Series Example

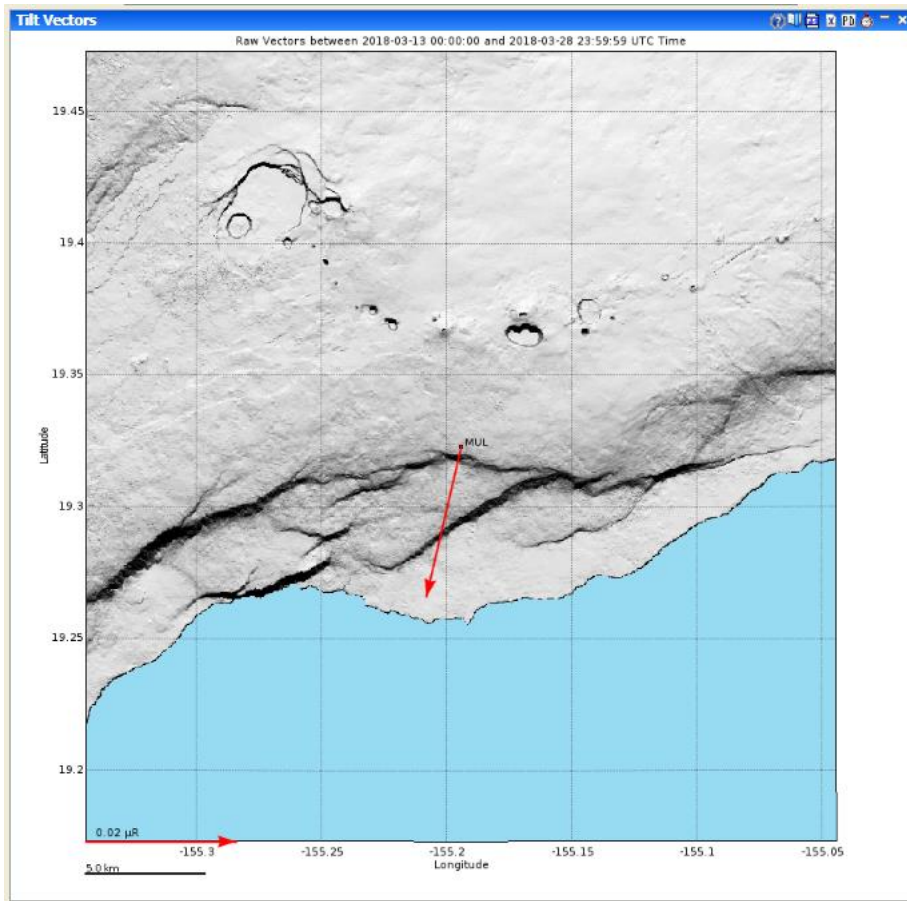


Figure 8 Tilt Vector Example

Radial Options

If either of the radial or tangential components is selected, then an azimuth must be specified in one of three ways:

Nominal - The nominal azimuth to the assumed source of inflation or deflation. This number is stored outside of Valve at the source.

Optimal - The azimuth is optimized to place the maximum tilt in the radial direction.

Azimuth - User-specified azimuth: 0 to 360 degrees.

3.4 Hypocenters

The screenshot displays a web-based interface for configuring hypocenter plots. It is organized into several panels:

- Area of Interest:** Includes input fields for North, South, East, and West coordinates, and a 'Set from Filter' button.
- Point & Radius:** Includes input fields for Latitude, Longitude, and Radius (km).
- Plot Type:** Features radio buttons for 'Map View' (selected) and 'Counts'.
- Magnitude Filter:** Has 'Min' (-2) and 'Max' (10) input fields.
- Depth Filter (km):** Has 'Min' (-4) and 'Max' input fields.
- NPhases Filter (N):** Has 'Min' (0) and 'Max' (100) input fields.
- Remarks Filter:** A dropdown menu currently set to '[none]'.
- Ranks:** A dropdown menu set to 'Earthworm (1)'.
- H Err Filter (km):** Has 'Min' (0) and 'Max' (50) input fields.
- V Err Filter (km):** Has 'Min' (0) and 'Max' (50) input fields.
- RMS Filter (secs):** Has 'Min' (0) and 'Max' (5) input fields.
- Gap Filter:** Has a 'Max' input field.
- Stn Dst Filter (km):** Has 'Min' and 'Max' input fields.
- Map View Options:** Includes a dropdown for 'Axes' (set to 'Lon-Lat'), a dropdown for 'Color' (set to 'Auto'), a 'Width (km)' input field (set to 100), a checkbox for 'Density View' (unchecked) with a 'Log' checkbox, and a 'Bin Size' input field (set to 5).

Figure 9 Hypocenters Plot Options

Area of Interest

Specify the bounding box for display or count of hypocenters. This can be set from the geographic filter that is currently selected.

Point and Radius

Alternative to specifying a bounding box. Specify coordinate and radius to filter display on.

Plot Type

Hypocenters can be plotted on map or

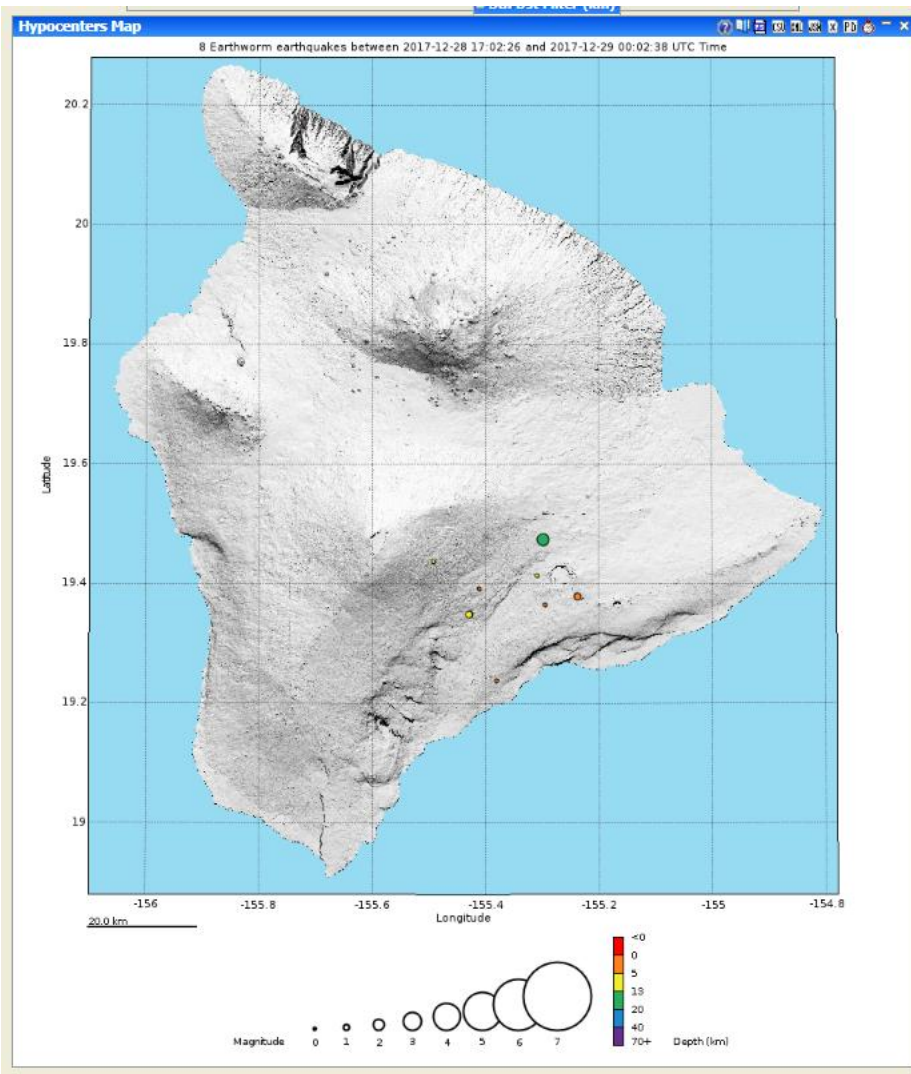


Figure 10 Hypocenter Map View

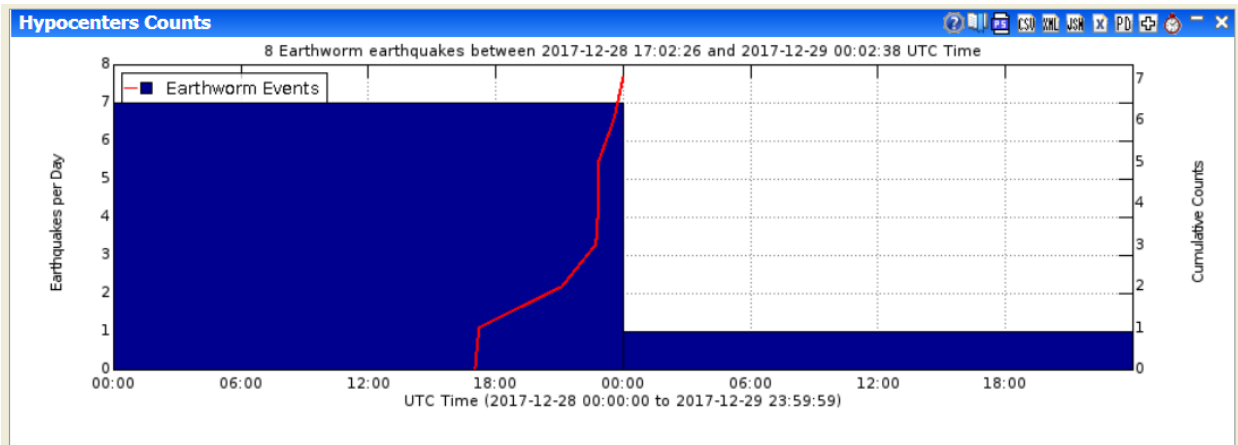


Figure 11 Hypocenter Counts View

3.5 Winston Waveforms

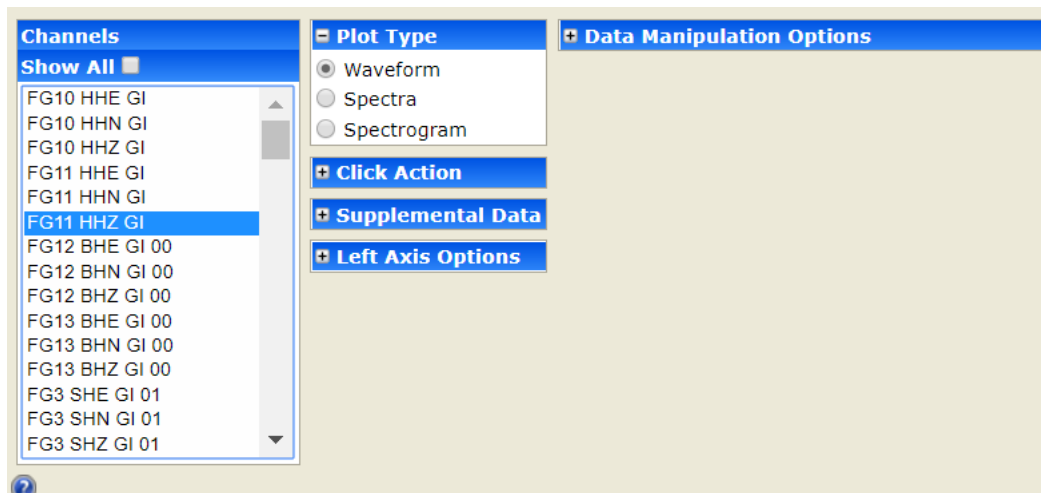


Figure 12 Winston Waveform Plot Options

Plot Type

Select Waveform, Spectra, or Spectrogram.

Waveform shows the raw data.

Spectra is a graph with power on the y-axis and frequency on the x-axis.

Spectrogram shows the power of the frequency as a color. The y-axis is the frequency band and the x-axis is time.

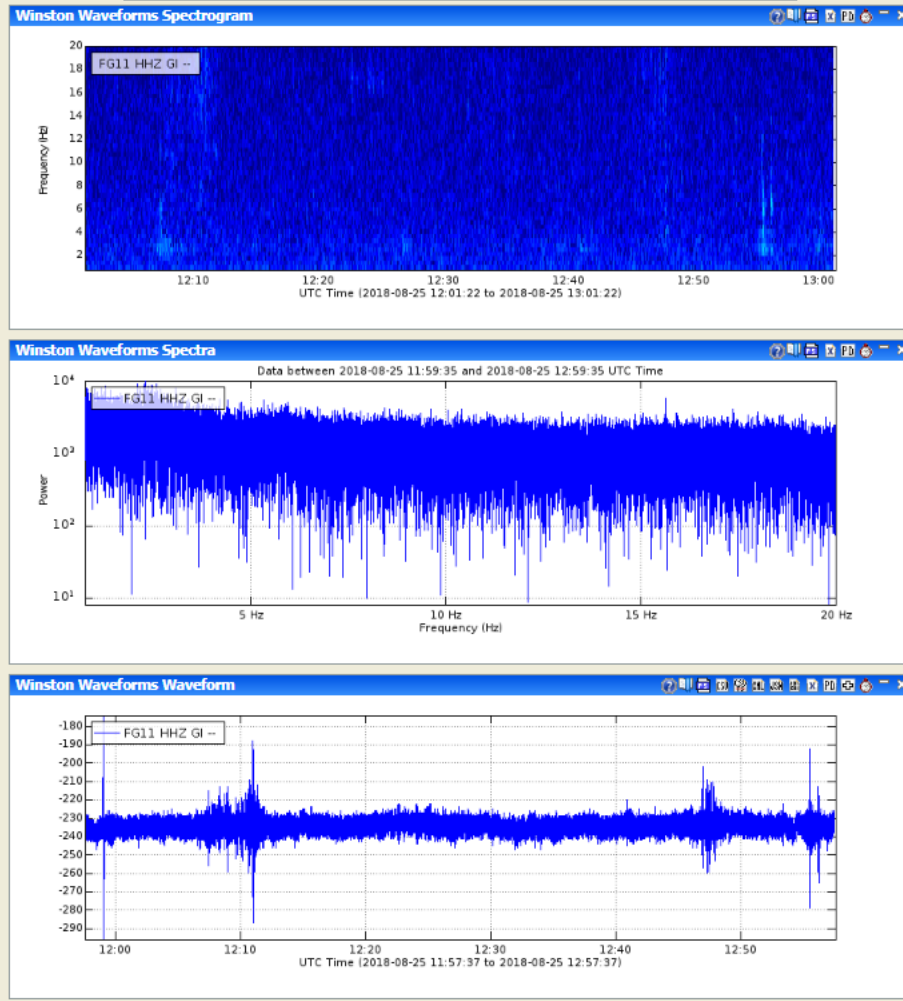


Figure 13 Waveform plots. From top to bottom: Spectrogram, Spectra, Waveform.

Spectra Options (if selected)

Specify Minimum Frequency and Maximum Frequency. Select/de-select Log Power and Log Frequency options.

The frequency range allows you to look at certain frequency ranges specifically, essentially they allow you to control the size of the frequency axis. Checking the log button takes the log of the power before plotting.

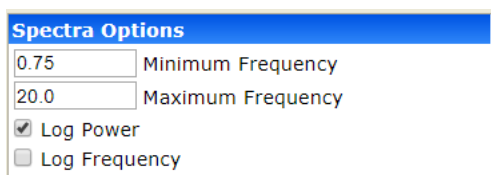


Figure 14 Spectra Options

Spectrogram Options (if selected)

Enter NFFT, Bin Size, Overlap, Minimum Power, Maximum Power, Minimum Frequency, and Maximum Frequency.

Spectrogram Options	
0	NFFT
256	Bin Size
0.859375	Overlap
20	Minimum Power
120	Maximum Power
0.75	Minimum Frequency
20.0	Maximum Frequency

Figure 15 Spectrogram Options

3.6 Winston Helicorders

Channels	Helicorder Options
Show All <input type="checkbox"/>	X-Axis Time (minutes) 15 ▼
FG10 HHE GI	Zoom Factor 3
FG10 HHN GI	<input checked="" type="checkbox"/> Show clip
FG10 HHZ GI	
FG11 HHE GI	
FG11 HHN GI	
FG11 HHZ GI	
FG12 BHE GI 00	
FG12 BHN GI 00	
FG12 BHZ GI 00	
FG13 BHE GI 00	
FG13 BHN GI 00	
FG13 BHZ GI 00	
FG3 SHE GI 01	
FG3 SHN GI 01	
FG3 SHZ GI 01	

Figure 16 Helicorder Plot Options

Helicorder Options

Specify X-Axis Time and Zoom Factor. Select/de-select 'show clip' option.

3.7 Winston RSAM

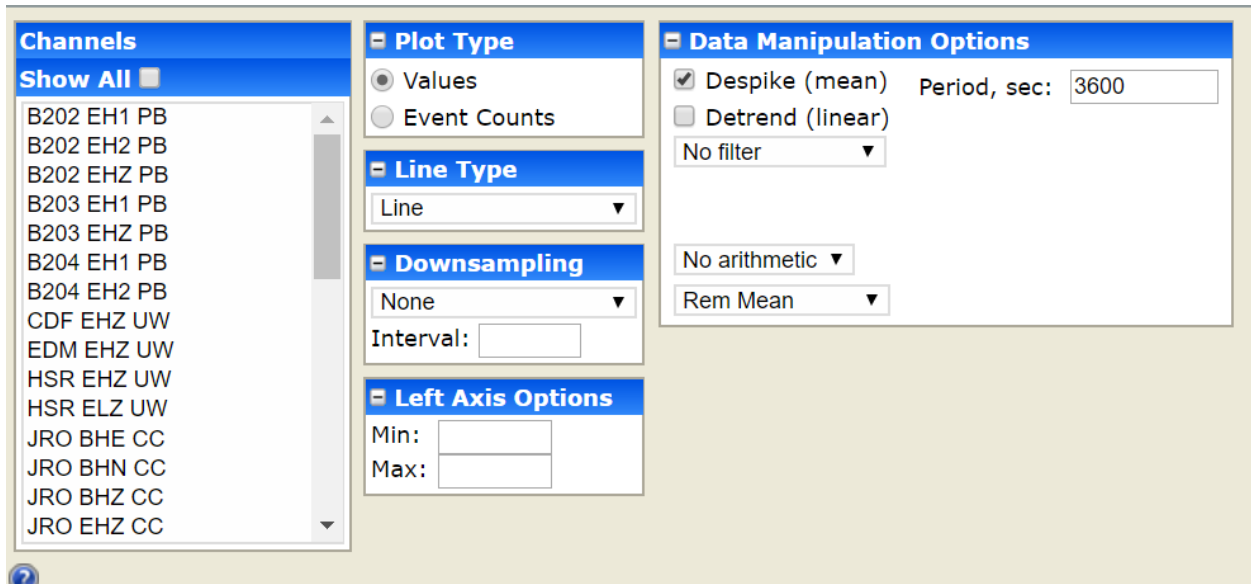


Figure 17 RSAM Plot Options

Plot Type

Select Values or Event Counts.

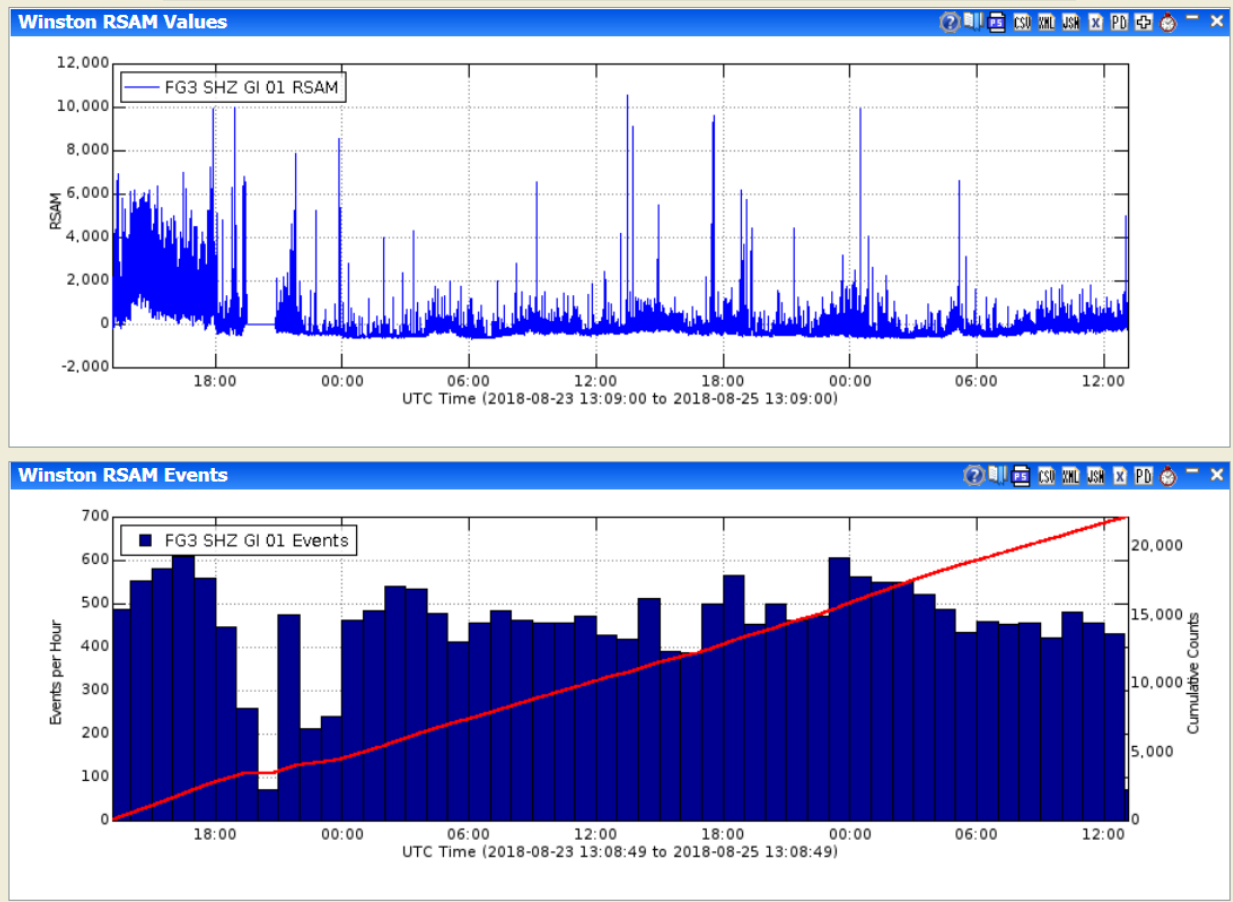


Figure 18 RSAM Plots. Values on top, Counts on bottom.

4 Other Plot Options

Start Time

End Time

'yyyy[MMdd[hhmm]]' or 'Now'.

Time Zone

UTC ▼

Output Size

Medium ▼

Geographic Filter

Guatemala ▼

Figure 19 Other Options

On the right side of the web-interface are the other options. Here you can specify the start time, end time, time zone, output size, and geographic filter.

4.1 Start Time

This is the starting time for a given request. Incomplete formats such as yyyy (e.g., 2002) are rounded to the earliest time for start time and latest time for end time. Valid entry formats are:

Format	Example
yyyy	2002 becomes 200201010000
yyyyMMdd	20020405 becomes 200204050000
yyyyMMddHHmm	200204051200
-#i	-30i is last 30 minutes
-#h	-2h is last 2 hours
-#d	-3d is last 3 days
-#w	-6w is last 6 weeks
-#m	-9m is last 9 months

-#y	-15y is last 15 years
All	All data, if supported

4.2 End Time

This is the ending time for a given request. Clicking the 'Now' link replaces the text with 'Now'. Incomplete formats are rounded to the latest time. Valid entry formats are:

Format	Example
yyyy	2002 becomes 200212312359
yyyyMMdd	20020405 becomes 200204052359
yyyyMMddHHmm	200204051200
Now	Data up until now

4.3 Time Zone

Select the time zone to plot the data in. Typically, available options are the local time zone and UTC.

4.4 Output Size

Choose output size of tiny, small, medium, or large.

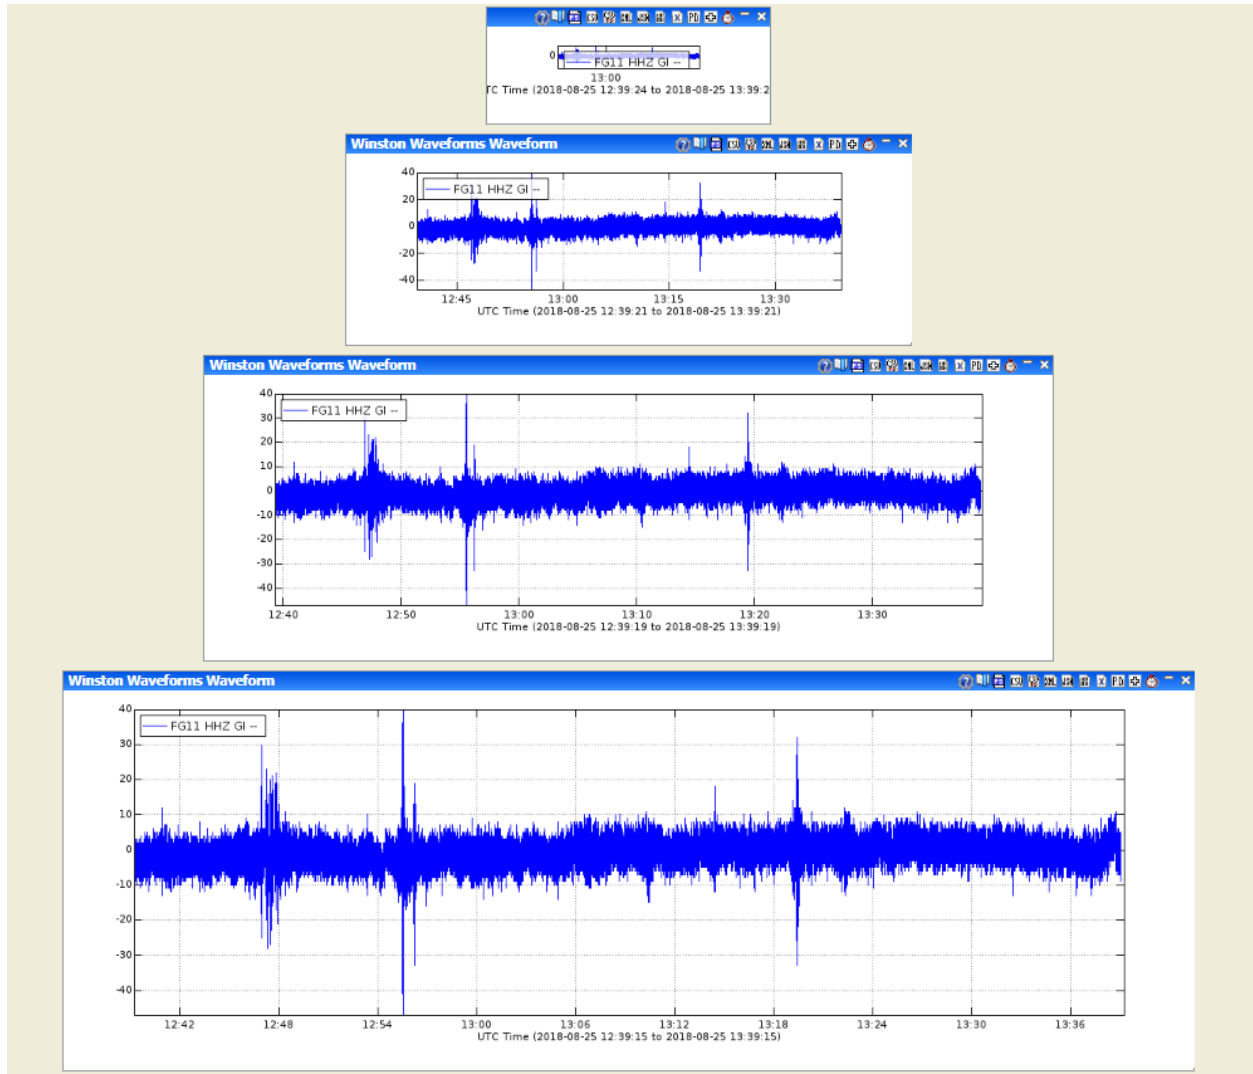


Figure 20 Example output sizes. From top to bottom: tiny, small, medium, large.

4.5 Geographic Filter

Selecting a geographic filter will limit the channels displayed

4.6 Draw Map

Will draw a map of selected geographical filter. If an image for the geographic filter is not configured by your Valve Administrator, you will get a blank map based on the filter bounding box. Any stations for the current selected data source in the bounding box will be displayed.

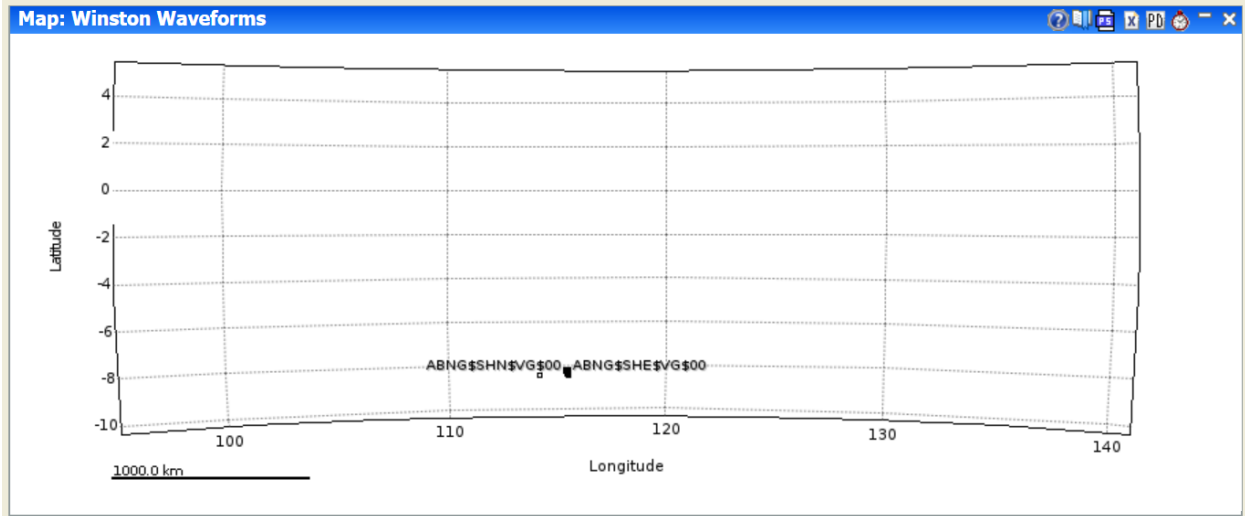


Figure 21 Map with no image configured

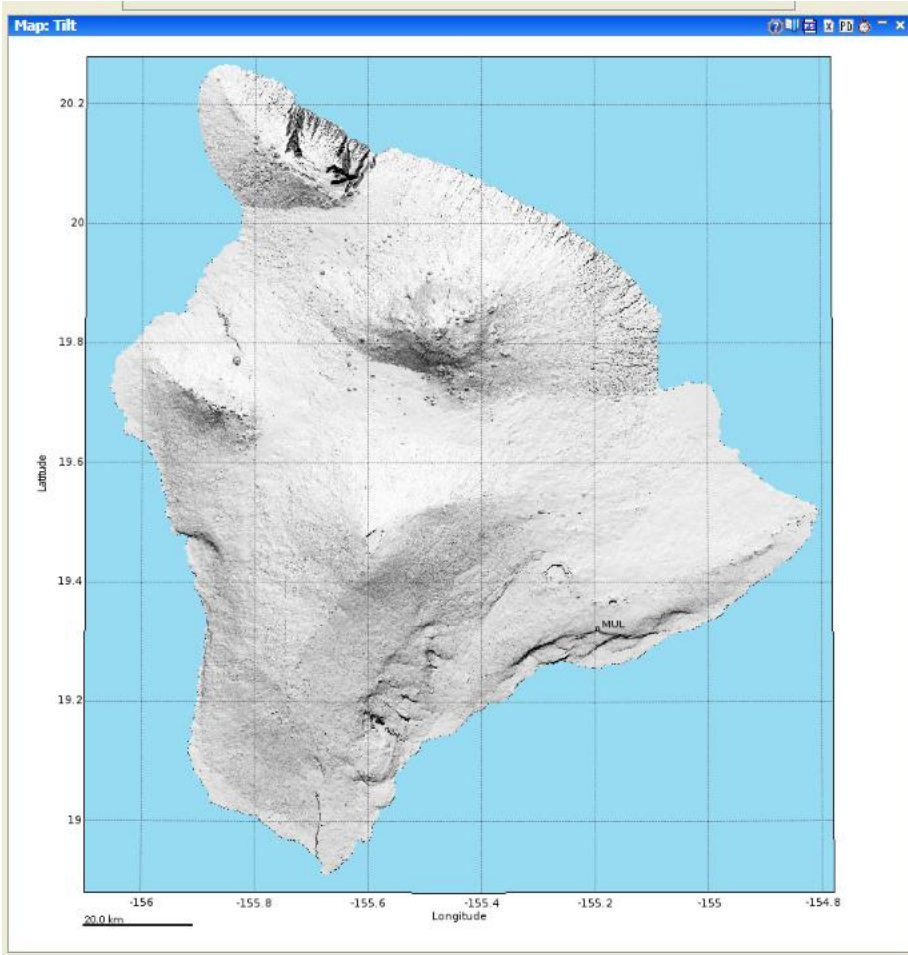



Figure 22 Map with image configured

4.7 Submit

Clicking this button will draw the plot given the current selected options.








5 Interacting with Graphs

Most graphs that Valve produces allow extensive interaction. These graphs can be used to select time intervals on other graphs, select map bounding boxes, earthquake cross-sections.

- To select a subset of the time represented on the x-axis in this graph simply move the mouse over the graph (a red line and crosshair cursor will appear) and click the time the start and end times respectively. A green marker arrow will appear over the start time you selected and a red arrow over the end time.
- Or to set the time interval to exactly what is on the x-axis, click the clock icon () on the graph menu bar. Graphs that do not have time as the x-axis (like a frequency power chart) will not allow this. This functionality allows the user to quickly look at interesting time intervals on a variety of different instruments or to find interesting events and plot them in other, perhaps more insightful, ways. For example, a user could plot earthquake counts over a region for the last 25 years, select a time interval that has a swarm, then plot the swarm's hypocenters on an earthquake map.
- Valve also produces many spatial plots. These plots can be interacted with to select area boundaries, assuming that the tab currently visible is 'interested' in boundary selection.
- If the Valve UI was open to a tab that was interested in spatial boundaries or other user-selected spatial information, clicking on the spatial graph would provide that input. In the case of selecting a boundary for an earthquake plot, for example, simply click on the upper-left corner of the new boundary (a rubber-band type box will appear), then click on the lower-right. The coordinates in the 'Area of Interest' should change. Unfortunately, due to browsers interpreting a dragged mouse as a drag-and-drop event, dragging (the intuitive way of selecting a space) the clicked mouse will not work.

5.1 Exporting Graphs

Follow export options may be available from the graph menu depending on the Valve configuration for that data set:

-  - PNG as URL
-  - Post Script (PS)
-  - CSV as file
-  - XML as file
-  - JSON as file
-  - XML as pop-up
-  - Binary data