



Avaya Aura[®] Application Enablement
Services TSAPI and CVLAN Client and
SDK Installation Guide

Release 6.3
October 2013
Issue 2

© 2013 Avaya Inc.
All Rights Reserved.

Notice

While reasonable efforts were made to ensure that the information in this document was complete and accurate at the time of printing, Avaya Inc. can assume no liability for any errors. Changes and corrections to the information in this document might be incorporated in future releases.

Documentation disclaimer

Avaya Inc. is not responsible for any modifications, additions, or deletions to the original published version of this documentation unless such modifications, additions, or deletions were performed by Avaya. Customer and/or End User agree to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation to the extent made by the Customer or End User.

Link disclaimer

Avaya Inc. is not responsible for the contents or reliability of any linked Web sites referenced elsewhere within this documentation, and Avaya does not necessarily endorse the products, services, or information described or offered within them. We cannot guarantee that these links will work all the time and we have no control over the availability of the linked pages.

Warranty

Avaya Inc. provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product, while under warranty, is available through the Avaya Support Web site: <http://www.avaya.com/support>

Licenses

USE OR INSTALLATION OF THE PRODUCT INDICATES THE END USER'S ACCEPTANCE OF THE TERMS SET FORTH HEREIN AND THE GENERAL LICENSE TERMS AVAILABLE ON THE AVAYA WEB SITE <http://support.avaya.com/LicenseInfo/> ("GENERAL LICENSE TERMS"). IF YOU DO NOT WISH TO BE BOUND BY THESE TERMS, YOU MUST RETURN THE PRODUCT(S) TO THE POINT OF PURCHASE WITHIN TEN (10) DAYS OF DELIVERY FOR A REFUND OR CREDIT.

Avaya grants End User a license within the scope of the license types described below. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the Documentation or other materials available to End User. "Designated Processor" means a single stand-alone computing device. "Server" means a Designated Processor that hosts a software application to be accessed by multiple users. "Software" means the computer programs in object code, originally licensed by Avaya and ultimately utilized by End User, whether as stand-alone Products or pre-installed on Hardware. "Hardware" means the standard hardware Products, originally sold by Avaya and ultimately utilized by End User.

License type(s)

Designated System(s) License (DS). End User may install and use each copy of the Software on only one Designated Processor, unless a different number of Designated Processors is indicated in the Documentation or other materials available to End User. Avaya may require the Designated Processor(s) to be identified by type, serial number, feature key, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

Concurrent User License (CU). End User may install and use the Software on multiple Designated Processors or one or more Servers, so long as only the licensed number of Units are accessing and using the Software at any given time. A "Unit" means the unit on which Avaya, at its sole discretion, bases the pricing of its licenses and can be, without limitation, an agent, port or user, an e-mail or voice mail account in the name of a person or corporate function (e.g., webmaster or helpdesk), or a directory entry in the administrative database utilized by the Product that permits one user to interface with the Software. Units may be linked to a specific, identified Server.

Database License (DL). Customer may install and use each copy of the Software on one Server or on multiple Servers provided that each of the Servers on which the Software is installed communicate with no more than a single instance of the same database.

CPU License (CP). End User may install and use each copy of the Software on a number of Servers up to the number indicated by Avaya provided that the performance capacity of the Server(s) does not exceed the performance capacity specified for the Software. End User may not re-install or operate the Software on Server(s) with a larger performance capacity without Avaya's prior consent and payment of an upgrade fee.

Named User License (NU). Customer may: (i) install and use the Software on a single Designated Processor or Server per authorized Named User (defined below); or (ii) install and use the Software on a Server so long as only authorized Named Users access and use the Software. "Named User," means a user or device that has been expressly authorized by Avaya to access and

use the Software. At Avaya's sole discretion, a "Named User" may be, without limitation, designated by name, corporate function (e.g., webmaster or helpdesk), an e-mail or voice mail account in the name of a person or corporate function, or a directory entry in the administrative database utilized by the Product that permits one user to interface with the Product.

Shrinkwrap License (SR). With respect to Software that contains elements provided by third party suppliers, End User may install and use the Software in accordance with the terms and conditions of the applicable license agreements, such as "shrinkwrap" or "clickwrap" license accompanying or applicable to the Software ("Shrinkwrap License"). The text of the Shrinkwrap License will be available from Avaya upon End User's request (see "Third-party Components" for more information).

Copyright

Except where expressly stated otherwise, the Product is protected by copyright and other laws respecting proprietary rights. Unauthorized reproduction, transfer, and or use can be a criminal, as well as a civil, offense under the applicable law.

Third-party components

Certain software programs or portions thereof included in the Product may contain software distributed under third party agreements ("Third Party Components"), which may contain terms that expand or limit rights to use certain portions of the Product ("Third Party Terms"). Information identifying Third Party Components and the Third Party Terms that apply to them is available on the Avaya Support Web site:

<http://support.avaya.com/ThirdPartyLicense/>

Preventing toll fraud

"Toll fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya fraud intervention

If you suspect that you are being victimized by toll fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support Web site:

<http://www.avaya.com/support>

Trademarks

Avaya and Avaya Aura are registered trademarks of Avaya Inc.

All non-Avaya trademarks are the property of their respective owners.

Downloading documents

For the most current versions of documentation, see the Avaya Support Web site: <http://www.avaya.com/support>

Contact Avaya support

Avaya provides a telephone number for you to use to report problems or to ask questions about your product. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya Support Web site:

<http://www.avaya.com/support>

Contents

About This Document	7
Intended Audiences	7
TSAPI and CVLAN backward compatibility	8
TSAPI	8
CVLAN	8
Conventions Used in This Document	9
About file naming conventions	9
TSAPI and CVLAN client and SDK documentation	10
Customer Support	10
Chapter 1: Getting the files for your installation	11
Downloading software from PLDS	12
Downloading clients and SDKs from Avaya Support	14
Downloading clients from Avaya DevConnect.	15
Chapter 2: Installing the AE Services TSAPI clients and SDKs	17
TSAPI client and SDK operating system requirements	17
Gathering Pre-Installation Data	20
If you do not have the host name or IP address	20
Installing and Configuring the TSAPI Windows Client	21
Installing the TSAPI Windows client	21
Accessing the TSAPI Windows client desktop components	23
Verifying the TSAPI Windows client installation	24
Using TSAPI Spy while running TSAPI Test	25
Removing the TSAPI Windows client	25
Removing the TSAPI Windows client from a non-Windows 8 system	25
Removing the TSAPI Windows client from a Windows 8 system	26
Upgrading the TSAPI Windows client	26
Editing the TSAPI Windows client configuration file (tslib.ini)	27
Specifying Alternate Tlinks for the TSAPI Windows client	28
About Specifying the location of certificates (tslib.ini)	29
Adding Certificate Configuration statements to the tslib.ini file	30
Network-based installations for the TSAPI Windows client	33
Copying the software and installing the first TSAPI client	34
Installing the next client: customizing the tslib.ini file prior to installation	35
Installing the next client: sharing a single tslib.ini file among clients	36
Installing and Configuring the TSAPI Linux Client	37
Installing the TSAPI Linux client	37
Using TSAPI Test to verify Linux client installations	38
Removing the TSAPI Linux client	40

Contents

Upgrading the TSAPI Linux client	40
Editing the Linux client configuration file	40
Specifying the location of the tslibrc file.	40
Making basic changes to the tslibrc file	41
Specifying Alternate Tlinks for the Linux client	41
About specifying the location of certificates (tslibrc).	43
Adding certificate configuration statements to the tslibrc file	43
About TSAPI Links (Tlinks)	47
Administering port settings for a firewall	47
Installing and Managing the TSAPI Windows SDK	48
The AE Services TSAPI SDK and the programming environment	48
How to obtain the TSAPI SDK.	48
Installing the TSAPI Windows SDK.	48
Viewing the TSAPI Windows SDK Components.	50
Removing the TSAPI Windows SDK	50
Removing the TSAPI Windows SDK from a non-Windows 8 system	50
Removing the TSAPI Windows SDK from a Windows 8 system	51
Upgrading the TSAPI Windows SDK	51
Installing and Managing the TSAPI Linux SDK	52
Installing the TSAPI Linux SDK.	52
Removing the TSAPI Linux SDK	53
Upgrading the TSAPI Linux SDK	53
Chapter 3: Installing the AE Services CVLAN Client/SDK	55
The CVLAN Client	55
CVLAN client and certificate management.	55
The CVLAN SDK	56
CVLAN client connections with AE Services	56
CVLAN Client/SDK requirements	57
Installing the CVLAN Windows Client/SDK	60
Removing the CVLAN Windows Client/SDK	61
Removing the CVLAN Windows Client from a non-Windows 8 system	61
Removing the CVLAN Windows Client from a Windows 8 system.	61
Upgrading the CVLAN Windows Client/SDK.	62
Installing the CVLAN Linux Client/SDK	63
Removing the CVLAN Linux Client/SDK	64
Upgrading the CVLAN Linux Client/SDK.	64
The ASAI test utility	65
Using the ASAI test utility.	65

Appendix A: Managing certificates	67
An overview of certificate management for TSAPI and CVLAN clients	67
Server authentication	68
Using the default certificate - no certificate configuration required	70
If you use TSAPI and your own certificates -- the "default location" option	70
Using certificates issued by a trusted in-house or third-party certificate authority	72
AE Services certificate administration	73
Appendix B: File naming conventions	75
Appendix C: TSAPI client message tracing	77
TSAPI Spy - a Windows client message tracing tool	77
Overview of the TSAPI Spy for Windows interface	78
Using the Log to File option to direct output to a trace file.	80
Procedure for creating a trace file	81
Working with the streams list	83
Understanding trace output.	83
TSAPI Spy Trace Records	84
TSAPI Spy Error Records	86
Using the TSAPI Spy with Windows Server 2003	86
Client message tracing for Linux-based TSAPI clients	87
How to enable message tracing	87
Examining trace files	88
Glossary	91
Index	95

Contents

About This Document

Use this document to install the following Avaya Aura® Application Enablement Services (AE Services) clients and software development kits (SDKs):

- Telephony Services Application Programming Interface (TSAPI)
- CVLAN (CallVisor LAN)

Note:

The CVLAN Client/SDK is provided for maintaining existing applications. It is not intended for new application development.

This document no longer includes information about the AE Services JTAPI SDK. For information about the JTAPI SDK, see the following document:

- *Avaya Aura® Application Enablement Services JTAPI Programmer's Guide, 02-603488*

Intended Audiences

This document is intended for anyone who is responsible for installing AE Services TSAPI or CVLAN clients or SDKs. This document addresses two primary audiences:

- **User** - A user refers to someone who uses an AE Services TSAPI or CVLAN client along with a Computer Telephony Integration (CTI) application. Users, in this sense, are concerned with installing, removing, upgrading an AE Services TSAPI or CVLAN client, and possibly running TSAPI Test or TSAPI Spy. You install the clients only; you do not need to install the SDKs.
- **Application Developer** - An application developer refers to someone who creates or maintains a TSAPI or CVLAN based CTI application. AE Services provides you with an SDK that you can use for developing TSAPI or CVLAN based CTI applications. To develop applications that run in an AE Services/Communication Manager environment, you must install the client and the SDK.

TSAPI and CVLAN backward compatibility

TSAPI

The TSAPI Client, Release 6.3.1, is compatible with the following server releases:

- AE Services Release 6.3.1 TSAPI Service
- AE Services Release 6.3 TSAPI Service
- AE Services Release 6.2.x TSAPI Service
- AE Services Release 6.1.x TSAPI Service
- AE Services Release 5.2.x TSAPI Service

CVLAN

The CVLAN Client, Release 6.3.1, is compatible with the following server releases:

- AE Services Release 6.3.1 CVLAN Service
- AE Services Release 6.3 CVLAN Service
- AE Services Release 6.2.x CVLAN Service
- AE Services Release 6.1.x CVLAN Service
- AE Services Release 5.2.x CVLAN Service

Conventions Used in This Document

Use this section to familiarize yourself with the conventions used in this document.

- [Table 1](#) lists examples of typographical conventions.
- [About file naming conventions](#) provides some guidelines for working with filenames. For more information about file names, see [File naming conventions](#) on page 75.

Table 1: Typographical conventions

Convention	Example	Usage
bold monospace	add station	Indicates a Linux-based or DOS command line interface. Bold monospace indicates that you input (type) characters exactly as depicted.
italic monospace in angle brackets	<i><modname></i>	Indicates a Linux-based or DOS command line interface. Italic monospace indicates that you input (type) an appropriate substitution for the term in italics. Angle brackets are used as visual cues, do not type them.
plain monospace	Port:	Indicates a Linux-based or DOS command line interface. Plain monospace indicates standard output from the terminal display or command prompt.
bold	Start	Indicates a Graphical User Interface (GUI). Bold can indicate the following: <ul style="list-style-type: none"> ● Mouse and keyboard selections ● Web page displays ● Text you would type in a text box or a selection you would make from a drop-down list.
bold italic	<i>service name</i>	Indicates a GUI. Bold italic indicates that you input (type) an appropriate substitution for the term in italics.

About file naming conventions

This document contains many instructions that include file names of the TSAPI and CVLAN client and SDK components, for example: `tsapi-client-linux-6.3.1-x.i386.rpm`

In most cases, build numbers in file names are expressed as `x` because build numbers change frequently (an example of an actual file name would be `tsapi-client-linux-6.3.1-170.i386.rpm`)

When you type a command containing a file name, substitute `x` with the actual build number. For more information about file names, see [File naming conventions](#) on page 75.

TSAPI and CVLAN client and SDK documentation

Title	Description
TSAPI Client and SDK	
<i>Avaya Aura® Application Enablement Services TSAPI and CVLAN Client and SDK Installation Guide, 02-300543</i>	Use this document to install the TSAPI client and SDK.
<i>Avaya Aura® Application Enablement Services TSAPI for Avaya Communication Manager Programmer's Reference, 02-300544</i>	Use this document if you are developing or maintaining a TSAPI application. It contains information about the function calls and events that the AE Services TSAPI Service supports. For example, you will need to use this document to set up your application to open a stream to the AE Services TSAPI Service and to negotiate private data.
<i>Avaya Aura® Application Enablement Services TSAPI Programmer's Reference, 02-300545.</i>	Use this document if you are developing or maintaining a TSAPI application, and you need information about generic TSAPI syntax.
CVLAN Client and SDK	
<i>Avaya Aura® Application Enablement Services TSAPI and CVLAN Client and SDK Installation Guide, 02-300543</i>	Use this document to install the CVLAN client/SDK.
<i>Avaya Aura® Application Enablement Services CVLAN Programmer's Reference, 02-300546</i>	Use this document if you are developing or maintaining a CVLAN application. It contains information about the function calls and messages that CVLAN supports.
<i>ASAI Technical Reference, 02-300549</i>	Use this document if you are developing or maintaining a CVLAN application and you need more information about ASAI capabilities, event reports, and cause values.
<i>ASAI Protocol Reference, 02-300550</i>	Use this document if you are developing or maintaining a CVLAN application and you need information about the contents of message fields or the layout of ASAI messages.

Customer Support

For information about contacting Avaya Customer Support, see the *Avaya Aura® Application Enablement Services Overview, 02-300360*.

Chapter 1: Getting the files for your installation

You can download the clients and SDKs from the following Web sites:

- Avaya Product Licensing and Delivery System (PLDS) Web site
<https://plds.avaya.com>
- Avaya Support Web site (for Avaya customers with maintenance agreements)
<http://support.avaya.com>
- Avaya DevConnect Web site (for DevConnect members)
<http://devconnect.avaya.com>

Downloading software from PLDS

Use the following procedure to download the TSAPI client or the CVLAN client and SDK from the Avaya Product Licensing and Delivery System (PLDS) Web site. This procedure assumes that you are an Avaya customer and you have registered on the Avaya PLDS Web site.

Note:

The TSAPI client and CVLAN client and SDK are available from the Avaya PLDS Web site, but the TSAPI SDK is not. To obtain the TSAPI SDK, contact an authorized Avaya Business Partner or an Avaya Account Executive.

1. Type **https://plds.avaya.com** in your web browser to open the Product Licensing and Delivery System Web site.
2. From the LOGIN NOW page, type your email address and password, and click **SUBMIT**.
3. From the main menu on the Home page, click **Assets > View Downloads**.
4. From the Downloads page, with the Search by Download tab displaying, follow these steps.
 - a. In the Company name field, enter your company's name.
 - b. From the Application field, select **Application Enablement Services**.
 - c. From the Download Type field, select **Software Downloads**.
 - d. From the Version field, select the current release, **6.3.1**, for example.
 - e. Click **Search Downloads**.
5. On the Software Downloads list, locate the appropriate download, and click **Download**.
 - **Avaya Aura Application Enablement Services TSAPI Client Linux 6.3.1**
 - **Avaya Aura Application Enablement Services TSAPI Client MS Windows 6.3.1**
 - **Avaya Aura Application Enablement Services CVLAN Client Windows 6.3.1**
 - **Avaya Aura Application Enablement Services CVLAN Client Linux 6.3.1**
6. From the About Download Manager page, click **Click to download your file now**.

Note:

The first time you use the Download Manager, your browser displays a Security Warning and asks if you want to install the Download Manager. Click **Install** and complete the procedure for installing the Download Manager.

7. From the Save As dialog box, which displays the file name (for example, **tsapi-client-win32-6.3.1-454.zip**), browse to a folder on your file system and click **Save**. (Keep in mind that this is an example file name. The numbers following tsapi-client-win32-6.3.1 are subject to change.)

8. Your system displays the Avaya Download Manager window. Use this window to monitor the status of your download.

When the status is "Finished," your file has been saved to the folder you specified in the Save As dialog box.

9. Click **Exit** to exit the Avaya Download Manager. Your browser displays the PLDS Downloads page. A check mark appears next to the software you downloaded.
10. Click **Log out** to log out of PLDS.
11. Close your browser.

Next steps

For the Windows clients, go to the folder you specified in the Save as dialog box, and extract the .zip file.

Start the installation as directed in the following chapters. The installation instructions assume that you have downloaded (and, when necessary, extracted) the files to an appropriate directory on your file system.

- [Chapter 2: Installing the AE Services TSAPI clients and SDKs](#)
- [Chapter 3: Installing the AE Services CVLAN Client/SDK](#)

Downloading clients and SDKs from Avaya Support

Use the following procedure to download the TSAPI client from the Avaya Support Web site. This procedure assumes that you are an Avaya customer and you have registered on the Avaya Support Web site.

Note:

The TSAPI client is available from the Avaya Support Site, but the TSAPI SDK is not. To obtain the TSAPI SDK, contact an authorized Avaya Business Partner or an Avaya Account Executive.

1. Log in to the Avaya Support Web site, <http://support.avaya.com>.
2. From the main menu on the Welcome to Avaya Support page, click **Downloads & Documents**.
3. Enter *Application Enablement Services* in the Enter Your Product Here box.
4. From the Choose Release menu, select **6.3.x**.
5. Select **Downloads** for content type.
6. Click **Enter**.
7. From the Downloads list, click the appropriate download.
 - **Avaya Aura Application Enablement Services TSAPI Client MS Windows 6.3.1**
 - **Avaya Aura Application Enablement Services TSAPI Client Linux 6.3.1**
 - **Avaya Aura Application Enablement Services CVLAN Client Windows 6.3.1**
 - **Avaya Aura Application Enablement Services CVLAN Client Linux 6.3.1**
8. From the Downloads & Documents page, click the file name; for example, **tsapi-client-win32-6.3.1-454.zip**. (Keep in mind that this is an example of a file name. The numbers following **tsapi-client-win32-6.3.1** are subject to change.)

Next steps

Save the file to your computer. For the Windows clients, extract the .zip file in a separate directory on your computer. It can be any directory on your file system.

Start the installation as directed in the following chapters. The installation instructions assume that you have downloaded (and, when necessary, extracted) the files to an appropriate directory on your file system.

- [Chapter 2: Installing the AE Services TSAPI clients and SDKs](#) on page 17
- [Chapter 3: Installing the AE Services CVLAN Client/SDK](#) on page 55

Downloading clients from Avaya DevConnect

Use the following procedure to download the TSAPI clients from the Avaya DevConnect Web site.

Note:

This procedure assumes that you are an Avaya DevConnect member and that you have registered on the Avaya DevConnect Web site.



Important:

The TSAPI client is available from the DevConnect Web site, but the TSAPI SDK is not. If you are a Gold or Platinum DevConnect member, you can order the TSAPI SDK through DevConnect. For more information, contact an authorized Avaya Business Partner or an Avaya Account Executive.

1. Log in to the Avaya DevConnect Web site, <http://devconnect.avaya.com>
2. Click **Products and SDKs**.
3. Click **Avaya Aura® Application Enablement Services**.
4. From the Avaya Aura Application Enablement Services page, select **AE Services: TSAPI SDK**.
5. From the TSAPI SDK page, select **Avaya Aura AE Services Release 6.3.1 Contents: TSAPI Downloads**.
6. From the Avaya Aura AE Services Release 6.3.1 Contents page, select the appropriate download.
 - **Avaya Aura AE Services 6.3.1 TSAPI Client [Win32]**
 - **Avaya Aura AE Services 6.3.1 TSAPI Client [Linux]**
7. Read and accept the license agreement, and then click the **Download** button.
8. Save the file to your computer; for example, **tsapi-client-win32-6.3.1-454.zip**. (Keep in mind that this is an example of a file name. The numbers following **tsapi-client-win32-6.3.1** are subject to change.)

Next steps

For the Windows clients, extract the .zip file in a separate directory on your computer. It can be any directory on your file system.

Start the installation as directed in the following chapter. The installation instructions assume that you have downloaded (and, when necessary, extracted) the files to an appropriate directory on your file system.

- [Chapter 2: Installing the AE Services TSAPI clients and SDKs](#) on page 17

Chapter 2: Installing the AE Services TSAPI clients and SDKs

This chapter describes the installation process for Avaya Aura Application Enablement Services (AE Services) Telephony Services Application Programming Interface (TSAPI) clients and software development kits (SDKs). For TSAPI applications to run in an AE Services/Communication Manager environment, you must install the TSAPI client.

TSAPI client and SDK operating system requirements

The AE Services TSAPI client can be installed on the following client platforms:

- Windows, see [Table 2: TSAPI Windows client and SDK - operating system requirements](#) on page 18
- Linux, see [Table 3: TSAPI Linux client and SDK - hardware and software requirements](#) on page 19
- Citrix - Avaya supports multiple Citrix clients connected to a single Citrix Server running a TSAPI Windows client application. AE Services supports Citrix Client Metaframe XPE v4.0. For more information refer to the Citrix documentation at www.citrix.com.

Table 2: TSAPI Windows client and SDK - operating system requirements

Component	Requirements
CPU	Intel 8086 instruction set architecture
Windows 32-bit Client Platform Operating Systems	<ul style="list-style-type: none"> ● Windows 8 Pro ● Windows 8 Enterprise ● Windows 7 Professional ● Windows 7 Enterprise ● Windows 7 Ultimate ● Windows XP Professional ● Windows 2003 Server Standard Edition
Windows 64-bit Client Platform Operating Systems supporting TSAPI applications running in 32-bit compatibility mode	<ul style="list-style-type: none"> ● Windows 8 Pro ● Windows 8 Enterprise ● Windows 7 Professional ● Windows 7 Enterprise ● Windows 7 Ultimate ● Windows Server 2008 R2

Table 3: TSAPI Linux client and SDK - hardware and software requirements

Component	Requirements
CPU	Intel 8086 instruction set architecture
Red Hat Enterprise Linux (RHEL) 32-bit Versions	<ul style="list-style-type: none"> ● Red Hat Enterprise Linux ES v4.0 Update 6 ● Red Hat Enterprise Linux ES v5.0 Update 7 ● Red Hat Enterprise Linux ES v5.0 Update 8
Red Hat Enterprise Linux (RHEL) 64-bit Versions supporting TSAPI applications running in 32-bit compatibility mode	<ul style="list-style-type: none"> ● Red Hat Enterprise Linux ES v5.0 Update 7 ● Red Hat Enterprise Linux ES v5.0 Update 8

Note:

Before installing the TSAPI Linux Client on a Red Hat Enterprise Linux ES v5.0 system, you may need to perform a separate installation of the following RPM:

`openssl097a-0.9.7a-9.el5_4.2.i386.rpm`

This RPM may be available with your Red Hat Linux installation media and is also available for download at <http://rpm.pbone.net>.

Gathering Pre-Installation Data

Before you install the TSAPI client, obtain the following information:

- IP address or Host Name of the AE Server from the AE Services administrator
- whether the TSAPI links are encrypted and, if so, whether the default CA certificate is being used for encryption. If the TSAPI links are encrypted, and the default CA certificate is not being used, you will need to supply and configure the appropriate CA certificate on the client.
- whether alternate TSAPI links are administered. If alternate TSAPI links are administered, you should configure the alternate Tlinks after the installation.

If you do not have the host name or IP address

If you do not have the Host name or IP address of the AE Server, you can still install the client. Follow the installation procedure ([Installing the TSAPI Windows client](#) on page 21), and at Step 7 complete the **AE Services Server Configuration** dialog box as follows.

In the **Host Name or IP Address** field, type a place holder, such as **myserver** or **1.2.3.4** and accept the default port number. The setup program issues a Warning dialog when you click **Add to List** or **Next**, but it lets you continue with the installation.

After installation, when you get a valid host name or IP address, you will need to edit the `tslib.ini` file and add the appropriate host name or IP address for the AE Server. For more information, see [Editing the TSAPI Windows client configuration file \(tslib.ini\)](#) on page 27.

Installing and Configuring the TSAPI Windows Client

Installing the TSAPI Windows client

Use the following procedure to install the TSAPI Windows client.

Note:

Use the network drive based installation procedure if you need to install a significant number of TSAPI Windows clients. For information about network-based installation and setting up configuration files (tslib.ini), see [Network-based installations for the TSAPI Windows client](#) on page 33.



Important:

Make sure you have completed the instructions for downloading the installation files and saving them to your computer. See [Chapter 1: Getting the files for your installation](#).

1. Log on to your computer as a user with administrator-equivalent permissions.
2. Go to the directory that contains the TSAPI Windows client files that you downloaded, and double-click **setup.exe**.

Setup displays the Welcome dialog box.

3. Click **Next**.

Setup searches for any older versions of the TSAPI client.

- If Setup detects the Avaya CT TS Win32 client, it issues the warning "The Avaya CT Win 32 Client needs to be uninstalled before the installation can continue." When you click **OK**, the installation program exits. For information about uninstalling the Avaya CT client, see [Removing the TSAPI Windows client on page 25](#).
- If Setup detects an earlier, incompatible version of the Avaya Application Enablement Services TSAPI client, it displays a dialog box with the message "Setup has detected an older version of the Avaya Application Enablement Services TSAPI Client on your system. This version needs to be removed before the installation can continue. Would you like Setup to remove this version for your now?"

Click **Yes** to have Setup remove the earlier version of the TSAPI client software for you automatically. Your existing TSAPI client configuration settings will be preserved.

After completing the search, Setup displays the **Choose Destination Location** dialog box.

4. Click **Next** to accept the default destination folder. For 32-bit Windows platforms, the default destination folder is C:\Program Files\Avaya\AE Services\TSAPI Client. For 64-bit Windows platforms, the default destination folder is C:\Program Files (x86)\Avaya\AE Services\TSAPI Client.

Setup displays the **AE Services Server Configuration** dialog box.

5. Complete the **AE Services Server Configuration** dialog box.

The information you specify in this dialog box is saved in the tslib.ini file. If you do not have this information, see [If you do not have the host name or IP address](#) on page 20.

- a. In the **Host Name or IP Address** field type a valid host name or IP address of the AE Server, for example:

192.168.123.44 (IP address)

aeserver1 or **aeserver.company.com** (host name)

- b. In the **Port Number** field, accept the default **450**. If your installation uses more than one AE Server, click **Add to List**.

You can repeat substeps a and b to add multiple host names or IP addresses to the **Configured AE Services Servers** list box.

Note:

If Setup detects a previously installed TSAPI client or a previous tslib.ini file, it will display the list of previously configured AE Servers (along with the default port) in the **Configured AE Services Servers** dialog box. If you are re-using any of the same AE Servers from the list, you can click **Next** to proceed. Otherwise, you can delete the AE Servers that are not required.

- c. Click **Next**.

Setup displays the **Ready to Install the Program** dialog box.

6. Click **Install** to begin the installation.

Setup displays the **Setup Status** dialog box as it installs files, and then displays the **Installation Wizard Complete** dialog box.

7. From the **Installation Wizard Complete** dialog box, click **Finish**.

Setup exits.

This completes the procedure to install the TSAPI Windows client. Your next step is to verify that the components in your configuration can communicate. See [Verifying the TSAPI Windows client installation](#) on page 24.

Accessing the TSAPI Windows client desktop components

After you have installed the TSAPI Windows client, access AE Services TSAPI Windows client components:

1. Perform one of the following steps:
 - If you are using Windows 8:
Access the Start page, and go to Step 2.
 - If you are not using Windows 8:
Click **Start > All Programs > Avaya AE Services > TSAPI Client**.
2. Select any of the following:
 - **Edit TSLIB.INI** - When you select **Edit TSLIB.INI**, Windows opens the tslib.ini file. For more information about editing this file, see [Editing the TSAPI Windows client configuration file \(tslib.ini\)](#) on page 27.
 - **TSAPI Spy** - When you select **TSAPI Spy**, Windows opens the TSAPI Spy application. TSAPI Spy is a client message tracing application that allows you to see the flow of messages through the Telephony Services client library. For more information, see [TSAPI Spy - a Windows client message tracing tool](#) on page 77.
 - **TSAPI Test** - When you select **TSAPI Test**, Windows opens the TSAPI Test application. The TSAPI Test application allows you to test your TSAPI Client installation by opening a stream and making a call.
 - **TSAPI Client Readme** - When you select **TSAPI Client Readme**, Windows opens the TSAPI Windows Client Readme file. Review the Readme file for information about this release of the TSAPI Windows client.
 - **OpenSSL License** - When you select **OpenSSL License**, Windows opens the OpenSSL License file. Open the OpenSSL License file to review the terms of the license.
 - **Apache Software Foundation License** - When you select **Apache Software Foundation License**, Windows opens the Apache Software Foundation License file. The TSAPI Spy application includes software developed by the Apache Software Foundation.
 - **Apache Software Foundation Notice** - When you select **Apache Software Foundation Notice**, Windows opens the Apache Software Foundation Notice file. This file describes the software components developed by the Apache Software Foundation that are included with the TSAPI Spy application.

Verifying the TSAPI Windows client installation

After you have installed the TSAPI Windows client, use TSAPI Test to verify that the components in your configuration can communicate.

Follow this procedure to run the TSAPI Test application.

1. Perform one of the following steps:
 - If you are using Windows 8:
On the Start page, click on **TSAPI Test**.
 - If you are not using Windows 8:
Click **Start > All Programs > Avaya AE Services > TSAPI Client > TSAPI Test**.AE Services displays the TSAPI Test Application dialog box.
2. Complete the TSAPI Test Application dialog box as follows:
 - a. In the **Server** field, select the tlink that corresponds to the AE Services server and Avaya Communication Manager that you want to test. Tlinks are names that the TSAPI Service assigns to the TSAPI CTI links between the AE Server and Communication Manager.
 - b. In the **User** field, type your CT User user ID.

Note:

A CT User is a person or an application administered in the AE Services User database with the "CT User" field set to "yes." CT User authorization is controlled by the AE Services Security Database.

- c. In the **Password** field, type your CT User password.
- d. In the **From** field, under Make Telephone Call, type a phone number that is administered in Avaya Communication Manager.

Note:

If the Security Database is enabled for the TSAPI Service, the CT User entered in step 2b must have permission in the AE Services Security Database to control this phone number.

- e. In the **To** field, under Make Telephone Call, type a second phone number that is administered in Avaya Communication Manager.
- f. Click **Dial**.

If the call is successful TSAPI Test displays a message box with the following message:

Call successfully originated. Dismiss this message box to terminate call.

Note:

If the call is not successful, TSAPI Test displays a message box with a message that indicates the reason for failure. See [Using TSAPI Spy while running TSAPI Test](#).

- g. Click **Close** to exit TSAPI Test.

This completes the procedure to verify the TSAPI Windows client installation

Using TSAPI Spy while running TSAPI Test

If your call fails while you are running TSAPI Test, use TSAPI Spy to monitor the activity between the AE Server and the client running TSAPI Test. For more information about TSAPI Spy, see [Appendix C: TSAPI client message tracing](#).

Follow this procedure to monitor your call with TSAPI Spy.

1. Perform one of the following steps:
 - If you are using Windows 8:
On the Start page, click on **TSAPI Spy**.
 - If you are not using Windows 8:
Click **Start > All Programs > Avaya AE Services > TSAPI Client > TSAPI Spy**.
AE Services displays the TSAPI Spy dialog box.
2. Perform the procedure [Verifying the TSAPI Windows client installation](#) and monitor the activity between the AE Services TSAPI Service and TSAPI Test.

Removing the TSAPI Windows client

Removing the TSAPI Windows client from a non-Windows 8 system

Use the following procedure to remove either the TSAPI Windows client or the Avaya CT Windows client from a non-Windows 8 system.

Note:

If you are upgrading from the Avaya Computer Telephony TS Win32 client, you must remove it before you can install the AE Services TSAPI Windows client.

1. Click **Start > Control Panel**.
2. From the Control Panel, click **Add or Remove Programs**.

Windows displays the **Add or Remove Programs** dialog box.

3. Select **Avaya Application Enablement Services TSAPI Client**, and click **Remove**. (Select **Avaya Computer Telephony TS Win32 Client** if you are removing the Avaya CT Win32 Client.)

A confirmation dialog box appears.

4. Click **Yes**.

Setup uninstalls the software, and displays the Uninstall Complete dialog box. (If you are removing the Avaya Computer Telephony TS Win32 client, Setup does not display the Uninstall Complete dialog box).

5. Click **Finish**.

This completes the procedure to remove the TSAPI Windows client. Note that the tslib.ini file does not get removed from the TSAPI Client installation folder.

Removing the TSAPI Windows client from a Windows 8 system

Use the following procedure to remove either the TSAPI Windows client or the Avaya CT Windows client from a Windows 8 system.

1. Access **Control Panel**.
2. From the Control Panel, click **Uninstall a program**.
Windows displays the **Programs and Features** window.
3. Select **Avaya Application Enablement Services TSAPI Client**, and click **Uninstall**.
A confirmation dialog box appears.
4. Click **Yes**.
Setup uninstalls the software, and displays the Uninstall Complete dialog box.
5. Click **Finish**.

This completes the procedure to remove the TSAPI Windows client. Note that the tslib.ini file does not get removed from the c:\Program Files\Avaya\AE Services\TSAPI Client folder.

Upgrading the TSAPI Windows client

If you are upgrading the Avaya Computer Telephony (Avaya CT) TSAPI Windows (TS Win32) client to the Avaya Application Enablement Services TSAPI Windows client, perform the following procedure:

1. Remove the Avaya CT TS Win32 client. See [Removing the TSAPI Windows client on page 25](#).
2. Install the latest version of the client.

If you are upgrading from an older version of the Avaya Application Enablement Services TSAPI Windows client to a newer version, you do not need to remove the older version first. Follow the installation procedure in [Installing the TSAPI Windows client](#) on page 21.

Editing the TSAPI Windows client configuration file (tslib.ini)

You can customize the behavior of TSAPI Windows clients by editing the TSAPI client configuration files. The tslib.ini file is a file that contains configuration information for the TSAPI client. It is installed with the TSAPI Client installation folder. You can open the file by performing one of the following steps:

- Windows 8 system:
On the Start page, click on **Edit TSLIB.INI**.
- non-Windows 8 system:
Click **Start > All Programs > Avaya AE Services > TSAPI Client > Edit TSLIB.INI**.

The configuration file is organized into several sections. Before you edit the configuration, read through the following list to familiarize yourself with the contents of each section.

- **[Telephony Servers]**- When you install the TSAPI Client and complete the AE Services Server Configuration dialog box, AE Services adds the host name or IP address to the **[Telephony Servers]** section of the tslib.ini file.

You can edit **[Telephony Servers]** to change the Host Name or IP address of the AE Server or to create entries for additional AE Servers. Each entry must be in the following format (spaces are not valid in host names): **hostname=port_number** or **IPaddress=port_number**. For example: **aeserver.domain.com=450** or **192.168.123.44=450**

Note:

If you use a firewall, see [Administering port settings for a firewall](#) on page 47.

- **[Config]** - If you are using secure (encrypted) TSAPI links, use this section to specify where the certificate for your trusted Certificate Authority (CA) is stored. This section only applies if your AE Services Server is not using the default certificate and you are not using the predefined location (aesCerts.cer) for your CA certificates. If you are not sure whether you need to use this section, see [About Specifying the location of certificates \(tslib.ini\)](#) on page 29. If you do plan to set up the **[Config]** section, see [Adding Certificate Configuration statements to the tslib.ini file](#) on page 30.
- **[Alternate Tlinks]** - Use this section if you want your TSAPI Windows clients to use the Alternate Tlinks feature. See [Specifying Alternate Tlinks for the TSAPI Windows client](#) on page 28.
- **[Shared Admin]** - Use this section when you want to use a pointer to a server-based tslib.ini file. See [Installing the next client: sharing a single tslib.ini file among clients](#) on page 36.

Specifying Alternate Tlinks for the TSAPI Windows client

The Alternate Tlinks feature allows the TSAPI client library to select an alternate Tlink if the preferred Tlink is unavailable when trying to establish a session. To put this feature into effect, you must specify the alternate Tlinks in the TSAPI Configuration file. For a brief description of Tlinks, see [About TSAPI Links \(Tlinks\)](#) on page 47.



Important:

When multiple AE Servers are used as alternates, the CT User user ID and password used by the application must be configured identically on each AE Server.

Follow these steps to set up a list of alternate Tlinks in the tslib.ini file. You are essentially adding statements that specify a list of alternate Tlinks for the TSAPI Service.

1. Perform one of the following steps:
 - Windows 8 system:
On the Start page, click on **Edit TSLIB.INI**.
 - non-Windows 8 system:
Click **Start > All Programs > Avaya AE Services > TSAPI Client > Edit TSLIB.INI** to open the tslib.ini file.
2. Locate the line **[Alternate Tlinks]** in the tslib.ini file, or add this line to the end of the file if it is not present. This line is required if you want your TSAPI Windows clients to use the Alternate Tlinks feature.
3. Following the **[Alternate Tlinks]** line, add a list of alternate Tlink entries.

Alternates (TLINK) = TLINK1 : TLINK2 : TLINK3 : TLINK4

where:

- **Alternates** is the label for the first ordered list (you can have up to 16 lists)
- **(TLINK)** is the name of the preferred Tlink, for example (AVAYA#CM1#CSTA#AESRV1). Be sure to enclose the preferred Tlink name in parentheses.
- **=** The equal sign is a separator between the preferred Tlink, and the list of 1 to 4 alternate Tlinks. You must use the equal sign (=) to separate the preferred Tlink and the list of alternate Tlinks.
- **TLINK1 : TLINK2 : TLINK3 : TLINK4** is an ordered list of Tlink names that are used as alternates if the preferred Tlink is not available. Be sure to separate each Tlink name with a colon. You can specify from 1 to 4 Tlinks as alternates for the preferred Tlink.

Examples

In Example 1, there are two AE Servers, AESRV1 and AESRV2, that each have a TSAPI link to the same switch, CM1. When opening a stream, if AESERV1 is unavailable, the TSAPI client will attempt to use AESRV2 instead of AESRV1.

Example 1

[Alternate Tlinks]

Alternates(AVAYA#CM1#CSTA#AESRV1)=AVAYA#CM1#CSTA#AESRV2

In Example 2, there are four AE Servers that each have a TSAPI link to the same switch, CM1.

When opening a stream:

- If AESRV1 is unavailable, the TSAPI client will attempt to use AESRV2 instead of AESRV1.
- If AESRV2 is also unavailable, then the TSAPI client will attempt to use AESRV3.
- If AESRV3 is also unavailable, then the TSAPI client will attempt to use AESRV4.
- If AESRV4 is also unavailable, then the TSAPI client will not be able to establish a connection with an AE server.

Example 2

[Alternate Tlinks]

Alternates(AVAYA#CM1#CSTA#AESRV1)=AVAYA#CM1#CSTA#AESRV2:AVAYA#CM1#CSTA#AESRV3:AVAYA#CM1#CSTA#AESRV4

About Specifying the location of certificates (tslib.ini)

The TSAPI Service may be configured to provide Transport Layer Security (TLS) for encrypting links between the TSAPI client and the AE Services server. If you plan to use encrypted links, you have the option of using the Avaya Product Root Certificate Authority (CA) certificate (this is the default), or the CA certificate issued by a trusted in-house or third-party certificate authority (also referred to as your own certificate). For more information about certificates, see [Appendix A: Managing certificates](#) on page 67.

Note:

You do not have to add any certificate configuration settings under the following conditions:

- You do not use encrypted links, and, hence, certificates.
- You use encrypted Tlinks with the default AE Services certificate. The default AE Services certificate is signed by the Avaya Product Root Certificate Authority (CA). The certificate for the Avaya Product Root CA is installed with the TSAPI client in **<installation-directory>\certs\ca\avayaprca.cer**. Therefore, you do not need to configure the location of the Trusted CA File in the tslib.ini file.

- You use encrypted Tlinks with your own certificates, and you have copied the trusted CA certificate to the client computer as **<installation-directory>\certs\ca\aesCerts.cer**. When establishing a secure connection, the TSAPI client checks to see if you have provided this file. If so, you do not need to configure the location of the Trusted CA File in the tslib.ini file.

Adding Certificate Configuration statements to the tslib.ini file

If you are using your own certificates, and you are not using the predefined location for storing certificates (that is, the aesCerts.cer file), you must add statements to the tslib.ini file that specify where your certificates are located. For example:

[Config]

Trusted CA File=certificate_location

Verify Server FQDN=0

where:

- **Trusted CA File** is the label for the file specification. The equal sign (=) is a separator between the label and the file specification.

certificate_location is the full pathname of a file containing the certificate(s) for your trusted CA in Privacy Enhanced Mail (PEM) format.

C:\Program Files\Avaya\AE Services\TSAPI Client\certs\ca\ExampleCorpServCert.cer

Note that the specified file may contain several certificates.

- **Verify Server FQDN** is a setting that determines whether the TSAPI client verifies the Fully Qualified Domain Name (FQDN) in the Server Certificate (for added security).

Note:

This setting should be set to 0 when the AE Server is using the Avaya Product Root CA Certificate.

- If you want the client to check the certificate for the FQDN, use this setting:
Verify Server FQDN=1.
- If you do not want the client to check the certificate for the FQDN, use this setting:
Verify Server FQDN=0.

Figure 1: Sample tslib.ini file - Part 1

TSLIB.INI

The [Telephony Servers] section specifies the AE Services servers that your installation uses.

[Telephony Servers]

```

; List your Telephony Servers and Application Enablement (AE) Services
; servers that offer TSAPI Telephony Services above.
; Each entry must have the following format:
; host_name=port_number
; where:
; - host_name is either the domain name or IP address of the
; AE Services server.
; - port_number is the TSAPI Service port number. The default port
; number used by AE Services is 450.
; For example:
; aeserver.mydomain.com=450
; 192.168.123.45=450
; 3ffe:ffff:100:f101:2e0:18ff:fe90:9205=450

```

The [Config] section specifies where your Trusted CA certificate is stored. This line is required if you are using your own certificates, and you already have a predefined location for your certificates.

[Config]

```

; When accessing Telephony Services via a secure, encrypted
; connection, the Application Enablement (AE) Services server
; sends its certificate to the TSAPI client, and the TSAPI client
; verifies that the certificate is signed by a trusted Certificate
; Authority (CA).
; If your organization has installed its own certificate on the AE
; server, then the TSAPI client must have access to the trusted
; CA certificate(s) for the AE Services server certificate. Provide
; the location of a file containing the trusted CA certificate(s) here.
; For example:
; Trusted CA File=c:\certificates\verisign.cer

```

Figure 2: Sample tslib.ini file - Part 2

The diagram shows a sample `tslib.ini` file with two callout boxes. The first callout points to the `[Alternate Tlinks]` section, explaining that it allows specifying alternate TSAPI links (Tlinks) for a preferred Tlink. It provides the format `Alternates(preferred_Tlink)=alternate_Tlink_1:alternate_Tlink2:...` and an example: `Alternates(AVAYA#CM1#CSTA#AES1)=AVAYA#CM1#CSTA#AES2:AVAYA#CM1#CSTA#AES3`. The second callout points to the `[Shared Admin]` section, explaining that it allows pointing to a shared `tslib.ini` file on a network file system, for example `tslib.ini=n:\csta\tslib.ini`, which overrides the `[Telephony Servers]` section.

TSLIB.INI

The [Alternate Tlinks] section provides you with a way to specify links to an alternate AE Server or Switch Connection.

[Alternate Tlinks]
; This file may specify alternate TSAPI links (Tlinks) for a preferred Tlink.
; The format of each entry is:
; Alternates(preferred_Tlink)=alternate_Tlink_1:alternate_Tlink2:...
; Each entry may specify between one and four alternate Tlinks for the preferred Tlink. Up to 16 entries are allowed.
; For example:
; Alternates(AVAYA#CM1#CSTA#AES1)=AVAYA#CM1#CSTA#AES2:AVAYA#CM1#CSTA#AES3
; specifies that both AVAYA#CM1#CSTA#AES2 and AVAYA#CM1#CSTA#AES3 are alternate Tlinks for AVAYA#CM1#CSTA#AES1.

[Shared Admin]
; Instead of each workstation maintaining its own list of servers, a shared tslib.ini file may be placed on a network file system, for example:
; tslib.ini=n:\csta\tslib.ini
; This entry overrides the [Telephony Servers] section, if any.

The [Shared Admin] section provides you with a way point to another tslib.ini file. The local tslib.ini file on the client machine goes to the shared tslib.ini file for the list of AE Servers.

Network-based installations for the TSAPI Windows client

This section provides two installation scenarios for network-based installation. Use the following table as your guide for the installation scenario that you want to use.

Scenario 1: Customizing the tslib.ini file prior to installation		Scenario 2: Sharing a single tslib.ini file among clients	
		<p>Caution: Although this method allows you to maintain only one centrally-located configuration file, the drawback is that an outage of the file server where the configuration file resides could prevent all of your TSAPI clients from connecting to the AE Server.</p>	
1	Copy the software and install the first TSAPI client as described in Copying the software and installing the first TSAPI client on page 34.	1	Copy the software and install the first TSAPI client as described in Copying the software and installing the first TSAPI client on page 34.
2	Install the next TSAPI client and all subsequent clients as described in Installing the next client: customizing the tslib.ini file prior to installation on page 35.	2	Install the next TSAPI client using the [Shared Admin] settings in the tslib.ini file as described in Installing the next client: sharing a single tslib.ini file among clients on page 36.

Copying the software and installing the first TSAPI client

To install the Windows client software from a network drive, you must first transfer the TSAPI Windows client installation software to the network drive. Then client computers can install from the file server.

1. Create or locate a directory such as `\TSAPI\Client` on a network drive (you can do this remotely from a client computer, or directly from the file server).
2. Copy the files for the TSAPI Windows client installation software to the `\TSAPI\Client` directory on the network drive. (If the TSAPI Windows client installation software is provided as a .zip file, then extract the files from the .zip file to the `\TSAPI\Client` directory on the network file server.)
3. [Initial client installation] On the client computer, go to the `\TSAPI\Client` directory on the network drive, and double-click **Setup.exe** to install the TSAPI Windows client. At this point you would follow Steps 3 through 7 of the procedure to install the TSAPI Windows client (see [Installing the TSAPI Windows client](#) on page 21). Notice that in Step 5 of the TSAPI Windows client installation procedure you are providing the Host Name or IP Address of the AE Services Server that gets added to the `tslib.ini` file.
4. Make any other changes to the `tslib.ini` file, such as specifying alternate Tlinks or configuration settings for secure Tlinks.

Installing the next client: customizing the tslib.ini file prior to installation

Follow these steps if you want each client to have its own local copy of the tslib.ini file. Using this approach means that if there is a change that affects all of your clients (for example, the IP address of the AE Server changes), you will need to update the tslib.ini files on all your client computers individually.

1. After you have installed the TSAPI Windows client on the first client computer, copy the client's local tslib.ini file to the `\TSAPI\Client` directory on the network server.

The purpose of this step is to make subsequent client installations easier. By copying the tslib.ini file to the network server, you are enabling Setup to provide the contents of the updated tslib.ini file the next time a client computer runs the Setup program.

2. **Next client installation and all subsequent clients** - From the next client computer, go to the `\TSAPI\Client` directory on the network drive, and double-click **Setup.exe** to install the TSAPI Windows client. This time you do not have to complete the AE Services Server Configuration dialog box. Setup will get this information from the tslib.ini file on the server. When Setup completes the installation, it will create a local tslib.ini file with the appropriate host name or IP address.

Installing the next client: sharing a single tslib.ini file among clients

Follow these steps if you want all of your clients to share a single copy of the `tslib.ini` file. Using these settings means that the local `tslib.ini` file on each client will direct the TSAPI Windows client library to obtain the host name or IP address of the AE Services server from the shared `TSLIB.INI` file.



CAUTION:

This method allows you to maintain only one centrally-located configuration file, and the drawback is that an outage of the file server where the configuration file resides could prevent all of your TSAPI clients from connecting to the AE Server.

1. After you have installed the TSAPI Windows client on the first client computer, perform the following steps:
 - a. Copy the client's local `TSLIB.INI` file to the network file server (for example, `h:\TSAPI\Client\sharedtslib.ini`). Do not overwrite the `TSLIB.INI` file in the `\TSAPI\Client` folder containing the TSAPI Windows client installation software.
 - b. Edit the `[Shared Admin]` section of the client's local `tslib.ini` file to contain the full pathname of the shared `TSLIB.INI` file on the network file server. For example:
`tslib.ini=h:\TSAPI\Client\sharedtslib.ini` (where `h:\TSAPI\Client` specifies the network drive and path to the `tslib.ini` file on your server).

```
[Shared Admin]
; Instead of each workstation maintaining its own list of servers, a shared
; tslib.ini file may be placed on a network file system.
tslib.ini=h:\TSAPI\Client\sharedtslib.ini
```

- c. Now copy the client's local `TSLIB.INI` file to the `\TSAPI\Client` directory on the network file server, overwriting the `TSLIB.INI` file in the directory that contains the TSAPI Windows client installation software.
2. **Next client installation and subsequent installations** - From another client computer, go to the `\TSAPI\Client` directory on the network drive, and double-click **Setup.exe** to install the TSAPI Windows client. This time you do not have to complete the AE Services Server Configuration dialog box. Setup will install the updated `TSLIB.INI` file that points to the shared `TSLIB.INI` file.

Installing and Configuring the TSAPI Linux Client

Installing the TSAPI Linux client

Follow this procedure to install the TSAPI Linux client.

Note:

Make sure you have completed the instructions for downloading the installation files and saving them to your computer. See [Chapter 1: Getting the files for your installation](#).

1. Log in to the client computer as **root**.
2. Go to the directory that contains the TSAPI Linux client files that you downloaded.
3. Install the TSAPI Linux client using the **rpm** command. For example:

```
rpm -i tsapi-client-linux-version-build.i386.rpm
```

where:

- **version** is the current version number.
- **build** is the current build number.

For example:

```
rpm -i tsapi-client-linux-6.3.1-155.i386.rpm
```

Note:

Before installing the TSAPI Linux Client on a Red Hat Enterprise Linux ES v5.0 system, you may need to perform a separate installation of the following RPM:

```
openssl097a-0.9.7a-9.el5_4.2.i386.rpm
```

This RPM may be available with your Red Hat Linux installation media and is also available for download at <http://rpm.pbone.net>.

4. Use the **rpm** command to verify that the Linux client is installed. For example:

```
rpm -q tsapi-client-linux
```
5. The system will display the file name of the Linux client if it is installed; for example:

```
tsapi-client-linux-6.3.1-x
```

This completes the procedure to install the TSAPI Linux client. Your next step is to edit the `tslibrc` file. See [Editing the Linux client configuration file](#) on page 40).

Using TSAPI Test to verify Linux client installations

To verify the TSAPI Linux client installation, use TSAPI Test to make a call.

Follow this procedure to run a TSAPI Test session for the Linux clients. See [Figure 3](#) an example of a TSAPI Test session.

Note:

Before performing this procedure, you must edit the `/usr/lib/tslibrc` file (or the `.tslibrc` file in your home directory) so that it contains the host name or IP address of the AE Services server. See [Making basic changes to the tslibrc file](#) on page 41.

1. Log into the client computer.
2. Start the TSAPI Test program by typing `/usr/lib/tstest` at the command prompt. The TSAPI Test program displays a numbered list of the available servers.
3. At the prompt to enter a server number (the range of numbers varies according to your configuration), type an appropriate number.
4. At the Server login prompt type your CT User user id.

Note:

A CT User is a person or an application administered in the AE Services User database with the "CT User" field set to "yes." CT User authorization is controlled by the AE Services Security Database.

5. At the Server password prompt enter your CT User password.
6. At the calling number prompt, enter a valid extension number, for example: **72412**.

Note:

If the Security Database is enabled for the TSAPI Service, the CT User entered in Step 4 must have permission in the AE Services Security Database to control this phone number.

7. At the called number prompt, type another valid extension number, for example: **75587**.

After entering all the information, TSAPI Test attempts to open a stream and make a call from the calling number to the called number. TSAPI Test indicates the results of the test. If the open stream request cannot open a stream to the server, TSAPI Test will display an error message, and TSAPI Test will terminate.

- For information about Application control services (ACS) error messages, see Appendix A: Universal Failure Events, in the *Avaya Aura® Application Enablement Services TSAPI for Avaya Communication Manager Programmer's Reference*, 02-300544.
- For information about CSTA messages see, Chapter 4 of the *Avaya Aura® Application Enablement Services TSAPI for Avaya Communication Manager Programmer's Reference*, 02-300544.

Figure 3: Sample TSAPI Test session**Start the session**

```
Telephony Services
*** Make Call Test ***
```

```
Searching for Servers...
```

- 1) ATT#G3_SWITCH#CSTA#SERVER1
- 2) ATT#G3_SWITCH#CSTA#POOH
- 3) ATT#G3_SWITCH#CSTA#DAGOTTO

```
Enter a server number between 1 and 3 (default 1):
Server login (default admin):
Server password:
Calling number: 72412
Called number: 75587
```

If the open stream succeeds, TSAPI Test displays the following:

```
cstaMakeCall() succeeded!
cstaClearConnection() succeeded!
```

If the open stream fails, TSAPI Test will display an ACS error, for example:

```
acsOpenStream() failed with ACS Universal Failure
Error 25:
Bad password or login.
```

If a CSTA service fails, TSAPI Test will display a CSTA error, for example:

```
cstaMakeCall() failed with CSTA Universal Failure
Error 12:
Invalid CSTA device identifier
```

Removing the TSAPI Linux client

Follow this procedure to remove the TSAPI Linux client.

1. Log in as **root**.
2. Use the **rpm -e** command to remove the TSAPI client. For example:

```
rpm -e tsapi-client-linux
```

The Red Hat package manager removes the TSAPI Linux client

3. To verify that the software has been removed, type the following command:

```
rpm -q tsapi-client-linux
```

The system responds with the following message:

```
package tsapi-client-linux is not installed
```

This completes the procedure to remove the TSAPI Linux client.

Upgrading the TSAPI Linux client

Follow these steps to upgrade the AE Services TSAPI Linux client.

1. Remove the previous version of the client (see [Removing the TSAPI Linux client](#) on page 40)
2. Install the latest version of the client (see [Installing the TSAPI Linux client](#) on page 37).

Editing the Linux client configuration file

You can customize the behavior of TSAPI Linux clients by editing the TSAPI client configuration files. The TSAPI Linux client uses a configuration file called **tslibrc**, which, by default, is located in `/usr/lib/tslibrc`.

Specifying the location of the tslibrc file

TSAPI Linux clients rely on the `tslibrc` configuration file to identify the AE Servers that are available on the network. To provide TSAPI Linux clients with access to the AE Servers, you must edit the `tslibrc` configuration file.

You can specify an alternate location for this file by setting and exporting the shell environment variable `TSLIBRC`. If the `TSLIBRC` variable is not set, the client library searches your `$HOME` directory for a file named `.tslibrc`. If the client library cannot locate a configuration file after looking in both `TSLIBRC` and `.tslibrc`, it looks for the file `/usr/lib/tslibrc`.

Making basic changes to the tslibrc file

Follow this procedure to edit the tslibrc file.

1. Use your text editor to open the /usr/lib/tslibrc file.
2. Replace **127.0.0.1** with either the fully qualified domain name or the IP address of the AE Server that you want to access, and the port number you want to use (450 is the default port number for the TSAPI Service).

```
host_name           port_number      # comment
```

where:

- *host_name* is an Internet domain name or IP address (spaces are not valid in host names)
- *port_number* is the TCP port for the TSAPI Service's name. If the port number is omitted, a default value of 450 is assumed.
- *# comment* is the area to the right of the pound sign for comments.

If you use a firewall, see [Administering port settings for a firewall](#) on page 47.

Specifying Alternate Tlinks for the Linux client

The Alternate Tlinks feature allows the TSAPI client library to select an alternate Tlink if the preferred Tlink is unavailable when trying to establish a session. To put this feature into effect, you must specify the alternate Tlinks in the TSAPI Configuration file. For a brief description of Tlinks, see [About TSAPI Links \(Tlinks\)](#) on page 47.



Important:

When multiple AE Servers are used as alternates, the CT User user id and password used by the application must be configured identically for each AE Server.

Follow these steps to set up a list of alternate Tlinks in the tslib.ini file.

1. Use your text editor to open the /usr/lib/tslibrc file.
2. Add a list of alternate Tlink entries, using the following format.

```
Alternates (TLINK) = TLINK1 : TLINK2 : TLINK3 : TLINK4
```

where:

- **Alternates** is the label for the first ordered list (you can have up to 16 lists)
- **(TLINK)** is the name of the preferred Tlink, for example (AVAYA#CM1#CSTA#AESRV1). Be sure to enclose the preferred Tlink name in parentheses.
- = The equal sign is a separator between the preferred Tlink, and the list of 1 to 4 alternate Tlinks. You must use the equal sign (=) to separate the preferred Tlink and the list of additional alternate Tlinks.

- **TLINK1:TLINK2:TLINK3:TLINK4** is an ordered list of Tlink names that are used as alternates if the preferred Tlink is not available. Be sure to separate each Tlink name with a colon. You can specify from 1 to 4 Tlinks for each list of alternates.

Examples

In Example 1, there are two AE Servers, AESRV1 and AESRV2, that each have a TSAPI link to the same switch, CM1. When opening a stream, if AESRV1 is unavailable, the TSAPI client will attempt to use AESRV2 instead of AESRV1.

Example 1

#[Alternate Tlinks]

Alternates(AVAYA#CM1#CSTA#AESRV1)=AVAYA#CM1#CSTA#AESRV2

In Example 2, there are four AE Servers that each have a TSAPI link to the same switch, CM1.

When opening a stream:

- If AESRV1 is unavailable, the TSAPI client will attempt to use AESRV2 instead of AESRV1.
- If AESRV2 is also unavailable, then the TSAPI client will attempt to use AESRV3.
- If AESRV3 is also unavailable, then the TSAPI client will attempt to use AESRV4.
- If AESRV4 is also unavailable, then the TSAPI client will not be able to establish a connection with an AE server.

Example 2

#[Alternate Tlinks]

Alternates(AVAYA#CM1#CSTA#AESRV1)=AVAYA#CM1#CSTA#AESRV2:AVAYA#CM1#CSTA#AESRV3:AVAYA#CM1#CSTA#AESRV4

About specifying the location of certificates (tslibrc)

The TSAPI Service may be configured to provide Transport Layer Security (TLS) for encrypting data exchanged between the TSAPI client and the AE Services server. If you plan to use encrypted links, you have the option of using the Avaya Product Root Certificate Authority (CA) certificate (this is the default), or using certificates issued by a trusted in-house or third-party certificate authority (also referred to as your own certificates). For more information about certificates, see [Appendix A: Managing certificates](#) on page 67.

Note:

You do not have to add any configuration settings for certificates under the following conditions:

- You do not use encrypted links, and, hence, certificates.
- You use encrypted Tlinks with the default AE Services certificate. The default AE Services certificate is signed by the Avaya Product Root Certificate Authority (CA). The certificate for the Avaya Product Root CA is installed with the TSAPI Linux client in `/opt/mvap/tsapi/client/certs/CA/avayaprca.pem`.
- You use encrypted Tlinks with your own certificates, and you have copied the trusted CA certificate to the client computer as `/opt/mvap/tsapi/client/certs/CA/aesCerts.pem`. When establishing a secure connection, the TSAPI client checks to see if you have provided this file. If so, you do not need to configure the location of the Trusted CA File in the `tslibrc` file.

Adding certificate configuration statements to the `tslibrc` file

If you are using your own certificates, and you are not using the predefined location for storing certificates (that is, `/opt/mvap/tsapi/client/certs/CA/aesCerts.pem`), you must add statements to the `tslibrc` file that specify where your certificates are located. For example:

Trusted CA File=certificate_location

Verify Server FQDN=0

where:

- **Trusted CA File** is the label for the file specification. The equal sign (=) is a separator between the label and the file specification.

certificate_location is the full pathname of a file containing the certificate(s) for your trusted CA in Privacy Enhanced Mail (PEM) format. For example:

`/opt/mvap/tsapi/clients/certs/CA/exampleCA.pem`

Note that the specified file may contain several certificates.

- **Verify Server FQDN** is a setting that determines whether the TSAPI client verifies the Fully Qualified Domain Name (FQDN) in the Server Certificate (for added security).

Note:

This setting should be set to 0 when the AE Server is using the Avaya Product Root CA Certificate.

- If you want the client to check the certificate for the FQDN, use this setting: **Verify Server FQDN=1**
- If you do not want the client to check the certificate for the FQDN, use this setting: **Verify Server FQDN=0**

Alternatively, you could just omit this line.

Figure 4: Editing the tslibrc file - Part 1

```
# /usr/lib/tslibrc - Linux Telephony Services Library Configuration File
# Blank lines and text beginning with "#" are ignored.
#
# [Telephony Servers]
#
# List your Telephony Servers and Application Enablement (AE) Services
# servers that offer TSAPI Telephony Services below.
#
# Each entry must have the following format:
#
# host_name [port_number]
#
# where:
#
# - host_name is either the domain name or IP address of the AE Services
#   server.
# - port_number is the TSAPI Service port number. The default port number
#   used by AE Services is 450.
#
# For example:
#
# aeserver.mydomain.com 450                # host name example
# 192.168.123.45          450                # IPv4 address example
# 3ffe:ffff:100:f101:2e0:18ff:fe90:9205 450 # IPv6 address example
#
# Edit the following entry to use the actual host name or IP address of
# your AE Services server.

127.0.0.1                450                # Edit this entry

# [Config]
#
# When accessing Telephony Services via a secure, encrypted connection,
# the Application Enablement (AE) Services server sends its certificate
# to the TSAPI client, and the TSAPI client verifies that the certificate
# is signed by a trusted Certificate Authority (CA).
#
# If your organization has installed its own certificate on the AE
# Server, then the TSAPI client must have access to the trusted CA
# certificate(s) for the AE Services server certificate. Provide the
# location of a file containing the trusted CA certificate(s) here.
# For example:
#
# Trusted CA File=/usr/local/ssl/certs/verisign.pem
```

Figure 5: Editing the tslibrc file - Part 2

```
# [Alternate Tlinks]
#
# This file may specify alternate TSAPI links (Tlinks) for a preferred
# Tlink.
#
# The format of each entry is:
#
# Alternates(preferred_Tlink)=alternate_Tlink_1:alternate_Tlink_2:...
#
# Each entry may specify between one and four alternate Tlinks for the
# preferred Tlink. Up to 16 entries are allowed.
#
# For example:
#
# Alternates(AVAYA#CM1#CSTA#AES1)=AVAYA#CM1#CSTA#AES2:AVAYA#CM1#CSTA#AES3
#
# specifies that both AVAYA#CM1#CSTA#AES2 and AVAYA#CM1#CSTA#AES3 are
# alternate Tlinks for AVAYA#CM1#CSTA#AES1.

# Individual users may override the contents of this file by setting
# the TSLIBRC environment variable to the pathname of an alternate file
# (in this same format) or by creating a ".tslibrc" file in their $HOME
# directory.
```

About TSAPI Links (Tlinks)

A TSAPI Link (Tlink) represents the availability of the TSAPI Service for a particular switch connection by way of a particular AE Server. The AE Services administrator creates a Tlink by adding a TSAPI Link through the AE Services Management Console (**AE Services > TSAPI > TSAPI Links**). A Tlink name has the following format:

AVAYA#switch_connection_name#service_type#AE-server-name

where:

- **AVAYA** indicates that the TSAPI Service is provided by Avaya.
- *switch_connection_name* represents the Switch Connection name. The AE Services administrator determines the switch connection name when he/she administers a Switch Connection in AE Services OAM.
- *service_type* refers to the CSTA service type. It can be either of the following:
 - CSTA - If the TSAPI Link is administered as unencrypted (nonsecure).
 - CSTA-S - If the TSAPI Link is administered as encrypted (secure).
- *AE_server_name* is the name of the AE Server providing the TSAPI Service for the switch connection. The AE Server name is assigned by the person who performs the AE Services installation.

Example

AVAYA#CM1#CSTA-S#AESRV1

Administering port settings for a firewall

If you use a firewall, make sure that the address in the TSLIB.INI or tslibrc configuration file uses the externally facing IP address of your firewall instead of the IP address of the AE Server.

Installing and Managing the TSAPI Windows SDK

The AE Services TSAPI SDK and the programming environment

AE Services recommends that you install the TSAPI client when you install the TSAPI SDK. The TSAPI client provides the run-time libraries that are necessary for running your application in the AE Services-Communication Manager environment, and it provides tools for verifying the installation. Also, if you plan to use the TSAPI Exerciser, you must install the TSAPI Windows client.

Note:

The TSAPI Exerciser is available for the TSAPI Windows client only.

After you install the AE Services TSAPI client and SDK for your particular operating system, see the *Avaya Aura® Application Enablement Services TSAPI for Communication Manager Programmer's Reference*, 02-3005444, for information about using the SDK components.

How to obtain the TSAPI SDK

The TSAPI SDK must be purchased. If you are a customer, contact an authorized Avaya Business Partner or an Avaya Account Executive to obtain the TSAPI SDK. If you are a Gold or Platinum DevConnect member, you can order the TSAPI SDK through DevConnect.

Installing the TSAPI Windows SDK

Follow this procedure to install the TSAPI Windows SDK.

Note:

For information about obtaining the TSAPI SDK, see [How to obtain the TSAPI SDK](#) on page 48.

1. Log on to your computer as a user with administrator-equivalent permissions.
2. Insert the TSAPI SDK CD into your computer's CD-ROM drive.
3. From the toolbar, click **Start > Run**.
4. In the Run window, type the drive ID of your CD-ROM drive (for example, **D:**), and click **OK**.
5. From the window displaying the files on the CD, navigate to the `sdk\Windows` folder, open the file **tsapi-sdk-win32-6.3.1-build.zip**, and double-click **Setup.exe**.

Setup displays the **Welcome** dialog box.

6. Click **Next**.

Setup searches for any previously installed files.

- If Setup detects the Avaya Computer Telephony version of the SDK, it issues the following warning and stops the installation: "The Avaya CT SDK needs to be uninstalled before the installation can continue." For more information about uninstalling the Avaya CT SDK, see [Removing the TSAPI Windows SDK](#) on page 50.
- If Setup detects an earlier, incompatible version of the Avaya Application Enablement Services TSAPI SDK, it displays a dialog box with the message: "Setup has detected an older version of the Avaya Application Enablement Services TSAPI SDK on your system. This version needs to be removed before the installation can continue. Would you like Setup to remove this version for you now?"

Click **Yes** to have Setup remove the earlier version of the TSAPI SDK software for you automatically.

Setup displays the **License Agreement** dialog box.

7. Carefully review the license agreement, select **I accept the terms of the license agreement**, and then click **Next**.

Setup displays the **Choose Destination Location** dialog box with the default destination folder. For 32-bit Windows platforms, the default destination is C:\Program Files\Avaya\AE Services\SDKs\TSAPI . For 64-bit Windows platforms, the default destination is C:\Program Files (x86)\Avaya\AE Services\SDKs\TSAPI .

8. Click **Next**.

Setup displays the **Select Features** dialog box with all of the TSAPI SDK Components selected by default: **Headers and Libraries**, **Sample Code**, and **TSAPI Exerciser**.

9. Click **Next**.

Setup displays the **Ready to Install the Program** dialog box

10. Click **Install** .

Setup installs the files. When it has finished installing files, Setup displays the **InstallShield Wizard Complete** dialog box.

11. Click **Finish**.

This completes the procedure to install the Windows TSAPI Windows SDK. Continue with [Viewing the TSAPI Windows SDK Components](#) to learn about the TSAPI SDK.

Viewing the TSAPI Windows SDK Components

To view the TSAPI Windows SDK components:

1. Perform one of the following steps:
 - If you are using Windows 8:
On the Start page, click on **Avaya AE Services**.
 - If you are not using Windows 8:
Click **Start > All Programs > Avaya AE Services > SDKs > TSAPI**.
2. Select any of the following components:
 - **Explore Sample Code** - When you select **Explore Sample Code**, Windows displays the Samples directory which includes additional directories that contain coding examples for developing applications. For more information about Sample Code, see “Contents of the TSAPI SDK,” in Chapter 2 of the *Avaya Aura® Application Enablement Services TSAPI for Communication Manager Programmer’s Reference*, 02-300544.
 - **Read Me** - When you select **Read Me**, Windows displays the TSAPI Windows SDK Readme file, which contains late-breaking information that might be not included in the documentation.
 - **TSAPI Exerciser** - When you select **TSAPI Exerciser**, Windows opens the TSAPI Exerciser. The TSAPI Exerciser is an application that enables you to send CSTA requests across a TSAPI CTI link and view the exchange of messages between the TSAPI Exerciser and the AE Server. For more information about using the TSAPI Exerciser, see TSAPI Exerciser Help, which is included with the TSAPI Exerciser.
 - TSAPI Exerciser Scripting Instructions - When you select TSAPI Exerciser Scripting Instructions, Windows opens a PDF file that describes the TSAPI Exerciser script integrator.

Removing the TSAPI Windows SDK

Removing the TSAPI Windows SDK from a non-Windows 8 system

Use the standard Windows procedure to remove either the TSAPI Windows SDK or the Avaya CT Windows SDK from a non-Windows 8 system.

1. From the desktop, open the Control Panel. For example, click **Start > Control Panel**.
2. From the Control Panel, click **Add or Remove Programs**.

Windows displays the **Add or Remove Programs** dialog box.

3. Select **Avaya Application Enablement Services TSAPI SDK**, and click **Remove**. (Select **Avaya Computer Telephony TS Win32 SDK** if you are removing the Avaya CT Win32 SDK.)

A confirmation dialog box appears.

4. Click **Yes**.

Setup uninstalls the software, and displays the Uninstall Complete dialog box. (If you are removing the Avaya Computer Telephony TS Win32 SDK, Setup does not display the Uninstall Complete dialog box).

5. Click **Finish**.

This completes the procedure to remove the TSAPI Windows SDK.

Removing the TSAPI Windows SDK from a Windows 8 system

Use the following procedure to remove either the TSAPI Windows SDK or the Avaya CT Windows SDK from a Windows 8 system.

1. Access **Control Panel**.
2. From the Control Panel, click **Uninstall a program**.
Windows displays the **Programs and Features** window.
3. Select **Avaya Application Enablement Services TSAPI SDK**, and click **Uninstall**.
A confirmation dialog box appears.
4. Click **Yes**.
Setup uninstalls the software, and displays the Uninstall Complete dialog box. (

Upgrading the TSAPI Windows SDK

If you are upgrading the Avaya Computer Telephony (Avaya CT) TSAPI Windows (Win32) SDK to the Avaya Application Enablement Services TSAPI Windows SDK, follow this procedure.

1. Remove the Avaya CT TS Win32 SDK. See [Removing the TSAPI Windows SDK](#) on page 50.
2. Remove the Avaya CT TS Win32 client. See [Removing the TSAPI Windows client on page 25](#). This step is necessary because the Avaya CT Windows SDK installed the Windows client (TS Win32) by default.
3. Install the AE Services TSAPI Windows client. See [Installing the TSAPI Windows client](#) on page 21.
4. Install the AE Services TSAPI Windows SDK. See [Installing the TSAPI Windows SDK](#) on page 48.

Installing and Managing the TSAPI Linux SDK

Installing the TSAPI Linux SDK

Follow this procedure to install the TSAPI Linux SDK.

Note:

The TSAPI Linux Client must be installed before the TSAPI Linux SDK can be installed.

Note:

For information about obtaining the TSAPI SDK, see [How to obtain the TSAPI SDK](#) on page 48.

1. Log in to the computer where you are installing the SDK as **root**.
2. Insert the TSAPI SDK CD into your computer's CD-ROM drive.
3. Type **mount /mnt/cdrom/** to mount the file system.
4. Type **cd /mnt/cdrom/sdk/Linux** to change to the directory containing the TSAPI Linux SDK .rpm file.
5. Install the TSAPI Linux SDK using the **rpm** command:

```
rpm -i tsapi-sdk-linux-version-build.i386.rpm
```

where:

- **version** is the current version number.
- **build** is the current build number.

For example:

```
rpm -i tsapi-sdk-linux-6.3.1-155.i386.rpm
```

6. Use the rpm command to verify that the TSAPI Linux SDK is installed. For example:

```
rpm -q tsapi-sdk-linux
```

The system will display the file name of the TSAPI Linux SDK if it is installed; for example:

```
tsapi-sdk-linux-6.3.1-155.i386.rpm
```

This completes the procedure to install the TSAPI Linux SDK.

Removing the TSAPI Linux SDK

Follow this procedure to remove the TSAPI Linux SDK.

1. Log in as **root**.
2. Use the **rpm -e** command to remove the TSAPI Linux SDK. For example:

```
rpm -e tsapi-sdk-linux
```

The Red Hat package manager removes the TSAPI Linux SDK.

3. To verify that the software has been removed, type the following command:

```
rpm -q tsapi-sdk-linux
```

The system responds with the following message:

```
package tsapi-sdk-linux is not installed
```

This completes the procedure to remove the TSAPI Linux SDK.

Upgrading the TSAPI Linux SDK

Follow these steps to upgrade the AE Services TSAPI Linux SDK.

1. Remove the previous version of the SDK (see [Removing the TSAPI Linux SDK](#) on page 53).
2. If a previous version of the TSAPI Linux client is installed, remove the previous version of the client (see [Removing the TSAPI Linux client](#) on page 40).
3. Install the latest version of the TSAPI Linux client (see [Installing the TSAPI Linux client](#) on page 37).
4. Install the latest version of the SDK (see [Installing the TSAPI Linux SDK](#) on page 52).

Chapter 3: Installing the AE Services CVLAN Client/SDK

The Avaya Aura Application Enablement Services CVLAN Client/SDK, which can be installed on a client workstation, provides client computers with remote access to Communication Manager third-party call control capabilities. Access is provided by the CVLAN Service running on an AE Services Server (referred to as the AE Server).

The CVLAN Client and the CVLAN Software Development Kit (referred to in this document as the CVLAN Client/SDK) are packaged together.

Note:

The CVLAN Client/SDK is provided for maintaining existing applications. It is not intended for new application development.

The CVLAN Client

The CVLAN client provides the runtime libraries (cvlancli.dll for Windows-based systems, and libasai.so for Linux-based systems) that are required by CVLAN applications.

CVLAN client and certificate management

The CVLAN client/SDKs uses the OpenSSL mechanism of a trusted certificate directory that contains a Privacy Enhanced Mail (PEM) file for the Avaya Root CA certificate. AE Services provides a directory structure for the trusted certificates, and the Avaya Product Root Certificate is installed as follows:

- Windows CVLAN clients: Avaya Product Root Certificate is installed in the following location: **<installation-directory>\certs\ca\avayaprca.cer**
- Linux CVLAN client: **/usr/adm/cvlan/certs/CA/avayaprca.pem**.

If you use certificates issued by a trusted in-house or third-party certificate authority (also referred to as your own certificates), you may overwrite this file with your trusted CA certificate.

The CVLAN SDK

The CVLAN SDK provides additional software for developing and maintaining CVLAN based applications. The CVLAN SDK contains the following components for developing or updating your applications:

- CVLAN client (cvlancli.dll for Windows based systems and libasai.so for Linux systems)
- header files
- sample code
- utilities

For information about developing and maintaining CVLAN applications, see the *Avaya Aura® Application Enablement Services CVLAN Programmer's Reference*, 02-300546.

CVLAN client connections with AE Services

CVLAN application programs use the `asai_open()` and `asai_open_port()` functions to initiate connections to the AE Server.

Use the **`asai_open()`** function in your program to specify a non-secure connection for port number 9999 and a secure connection for any other port number. For more information, see the *Avaya Aura® Application Enablement Services CVLAN Programmer's Reference*, 02300546. See **`asai_open (3ASAI)`**.

The **`asai_open_port()`** API call allows your program to specify a specific port number in the `port_number` parameter and to explicitly indicate whether the connection is secure. For more information, see *Avaya Aura® Application Enablement Services CVLAN Programmer's Reference*, 02300546. See **`asai_open_port (3ASAI)`**.

CVLAN Client/SDK requirements

The AE Services CVLAN Client/SDK can be installed on the following client platforms.

- Windows - for more information, see [Table 4: CVLAN Windows Client/SDK - hardware and software requirements](#) on page 57
- Linux - for more information, see [Table 5: CVLAN Linux Client/SDK - hardware and software requirements](#) on page 57

Table 4: CVLAN Windows Client/SDK - hardware and software requirements

Component	Requirements
CPU	Intel 8086 instruction set architecture
Windows 32-bit Client Platform Operating Systems	<ul style="list-style-type: none"> • Windows 8 Pro • Windows 8 Enterprise • Windows 7 Professional • Windows 7 Enterprise • Windows 7 Ultimate • Windows XP Professional • Windows 2003 Server Standard Edition
Windows 64-bit Client Platform Operating Systems supporting CVLAN applications running in 32-bit compatibility mode	<ul style="list-style-type: none"> • Windows 8 Pro • Windows 8 Enterprise • Windows 7 Professional • Windows 7 Enterprise • Windows 7 Ultimate • Windows Server 2008 R2

Table 5: CVLAN Linux Client/SDK - hardware and software requirements

Component	Requirements
CPU	Intel 8086 instruction set architecture

Table 5: CVLAN Linux Client/SDK - hardware and software requirements

Component	Requirements
Red Hat Enterprise Linux (RHEL) 32-bit Versions	Red Hat Enterprise Linux ES v5.0 Update 8
Red Hat Enterprise Linux (RHEL) 64-bit Versions supporting CVLAN applications running in 32-bit compatibility mode	Red Hat Enterprise Linux ES v5.0 Update 8

Before installing this release of the CVLAN Linux Client on a Red Hat Enterprise Linux ES v5.8 system, you may need to perform a separate installation of the following RPM:

openssl097a-0.9.7a-9.el5_4.2.i386.rpm

This RPM may be available with your Red Hat Linux installation media and is also available for download at <http://rpm.pbone.net>.

Installing the CVLAN Windows Client/SDK

Follow this procedure to install the CVLAN Windows Client/SDK on a Windows workstation.



Important:

Make sure you have completed the instructions for downloading the installation files and saving them to your computer. See [Chapter 1: Getting the files for your installation](#).

1. Log on to your computer as a user with administrator-equivalent permissions.
2. Go to the directory that contains the CVLAN Windows client/SDK files that you downloaded, and double-click **setup.exe**.

Setup displays the Welcome dialog box.

3. Click **Next**.

Setup displays the **License Agreement** dialog box.

4. Carefully review the license agreement, select **I accept the terms of the license agreement**, and then click **Next**.

Setup displays the **Choose Destination Location** dialog box with the default destination folder. For 32-bit Windows platforms, the default destination folder is C:\Program Files\Avaya\AE Services\CVLAN. For 64-bit Windows platforms, the default destination folder is C:\Program Files (x86)\Avaya\AE Services\CVLAN.

5. Click **Next**.

Setup displays the **Ready to Install the Program** dialog box.

6. Click **Install**.

Setup installs the files. Next, Setup displays a Question box asking if you want to view the Readme file now.

7. Click **Yes** to view the Readme file. After reviewing the Readme file, either close the file or minimize the display.

Setup displays the **InstallShield Wizard Complete** dialog box.

8. Click **Finish**.

Continue with [Using the ASAI test utility](#) on page 65.

Removing the CVLAN Windows Client/SDK

Removing the CVLAN Windows Client from a non-Windows 8 system

Follow this procedure to remove the CVLAN Windows Client/SDK from a non-Windows 8 system.

1. From the desktop, click **Start > Control Panel**.
2. From the Control Panel, click **Add/Remove Programs**.
Windows displays the **Add/Remove Programs Properties** dialog box.
3. Select **Avaya Application Enablement Services CVLAN Client**, and click **Remove**.
A confirmation dialog box appears.
4. Click **Yes**.

The uninstall program removes the software and displays an Information box indicating that the program and all of its components have been removed.

5. Click **Finish**.

This completes the procedure to remove the CVLAN Windows Client/SDK.

Removing the CVLAN Windows Client from a Windows 8 system

Use the following procedure to remove the CVLAN Windows Client/SDK from a Windows 8 system.

1. Access **Control Panel**.
2. From the Control Panel, click **Uninstall a program**.
Windows displays the **Programs and Features** window.
3. Select **Avaya Application Enablement Services CVLAN Client**, and click **Uninstall**.
A confirmation dialog box appears.
4. Click **Yes**.

The uninstall program removes the software and displays an Information box indicating that the program and all of its components have been removed.

5. Click **Finish**.

This completes the procedure to remove the CVLAN Windows Client/SDK.

Upgrading the CVLAN Windows Client/SDK

If you are upgrading a previous CVLAN Windows client the recommended steps are as follows:

1. Remove the previous version of the Client/SDK. See [Removing the CVLAN Windows Client/SDK](#) on page 61)
2. Install the latest version of the Client/SDK. See [Installing the CVLAN Windows Client/SDK](#) on page 60).

Although it is not a requirement that you remove the previous version of the Client/SDK, it is strongly recommended.

Installing the CVLAN Linux Client/SDK

Follow this procedure to install the CVLAN Linux Client/SDK.

Note:

Make sure you have completed the instructions for downloading the installation files and saving them to your computer. See [Chapter 1: Getting the files for your installation](#).

1. Log in to the computer where you are installing the CVLAN Linux client/SDK as **root**.
2. Go to the directory that contains the CVLAN Linux client/SDK files that you downloaded.
3. Install the CVLAN Linux client/SDK using the **rpm** command. For example:

```
rpm -i cvlan-client-linux-6.3.1-x.i386.rpm
```

where:

x is the latest build number.

4. Use the **rpm** command to verify that the CVLAN Linux client is installed. For example:

```
rpm -q cvlan-client-linux
```

The system will display the file name of the CVLAN Linux client if it is installed; for example: **cvlan-client-6.3.1-1.1linux.rpm**

This completes the procedure to install the CVLAN Linux Client/SDK.

Note:

Review the readme file (`/usr/adm/cvlan/readme`) for release-specific information.

- Continue with [Using the ASAI test utility](#) on page 65.

Removing the CVLAN Linux Client/SDK

Follow this procedure to remove the CVLAN Linux Client/SDK.

1. Log in to the client computer as **root**.
2. To remove the CVLAN Linux client, type the following command:

```
rpm -e cvlan-client-linux
```

3. To verify that the software has been removed, type

```
rpm -q cvlan-client-linux
```

The system responds with the following message:

```
package cvlan-client-linux is not installed
```

This completes the procedure to remove the CVLAN Linux Client/SDK.

Upgrading the CVLAN Linux Client/SDK

Use the following guidelines to upgrade the AE Services CVLAN Linux Client/SDK.

1. Remove the previous version of the Client/SDK. See [Removing the CVLAN Linux Client/SDK](#) on page 64.
2. Install the latest version of the Client/SDK. See [Installing the CVLAN Linux Client/SDK](#) on page 63.

Although it is not a requirement that you remove the previous version of the Client/SDK, it is strongly recommended.

The ASAI test utility

Use the ASAI test utility (**asai_test**) to determine if the CVLAN client and AE Server are communicating. The format of the **asai_test** command is as follows:

Linux

```
/usr/adm/cvlan/bin/asai_test -m <server> <link number>
```

where:

<server> is the host name or IP address of the AE Server.

<link number> is the link number (1-16) of the CVLAN link to be tested. (The link number is also known as the "signal number.")

Windows

```
\Program Files\Avaya\AE Services\CVLAN\utils\asai_test -m <server> <link number>
```

where:

<server> is the host name or IP address of the AE Server.

<link number> is the link number (1-16) of the CVLAN link to be tested. (The link number is also known as the "signal number.")

Using the ASAI test utility

Follow this procedure to using the ASAI test utility.

1. At the command prompt (Linux based systems) or MS-DOS prompt (Windows), type the following command.

Linux

```
/usr/adm/cvlan/bin/asai_test -m abcserver 2
```

where: **abcserver** is the host name or IP address of the AE Server.

Windows

```
\Program Files\Avaya\AE Services\CVLAN\utils\asai_test -m abcserver 2
```

where: **abcserver** is the host name or IP address of the AE Server.

If the test is successful, the CVLAN Service responds with results similar to the following:

```
=== Test for CVLAN Link 2===
```

```
Heartbeat test with switch for CVLAN Link 02 was successful
```

```
===Test Completed===
```

2. If `asai_test` fails, take the appropriate course of action:
 - Contact the AE Services administrator.
 - If you are authorized to perform AE Services OAM administration, continue with the following steps.
 - a. Log into the AE Server, and select **Utilities > Diagnostics > AE Services > ASAI Test**.
AE Services OAM displays the ASAI Test page.
 - b. Select the link numbers you want to test with the ASAI Test utility, and click **Test**.
OAM displays the ASAI Test Result page, which indicates the results of the test. A successful test will display the following message on the ASAI Test Result page.
Heartbeat test with switch for CVLAN Link 02 was successful.

Appendix A: Managing certificates

An overview of certificate management for TSAPI and CVLAN clients

 **Important:**

The information in this appendix applies only if you are using encrypted links.

This overview of certificate management describes the authentication method that TSAPI and CVLAN clients use, which is server authentication. Additionally it describes how to configure the TSAPI and CVLAN clients if you plan to use certificates issued by a trusted in-house or third-party certificate authority instead of using the default certificate, which the TSAPI and CVLAN installation program installs. Certificates issued by a trusted in-house or third-party certificate authority are also referred to as "your own certificates."

Note:

Application Enablement Services (AE Services) does not support client authentication for TSAPI and CVLAN. Client authentication refers to the AE Server authenticating a TSAPI or CVLAN client computer's certificate.

Server authentication

In terms of certificate management, AE Services TSAPI and CVLAN clients rely on the server authentication process. This process is the same if you use your own certificates or if you use the AE Services default server certificate, which is signed by the Avaya Product Certificate Authority certificate. See [Figure 6: Server Authentication](#) on page 69 for an illustration.

The process of server authentication occurs on the client, as follows:

1. The client sends a request to the server for a secure session.
2. The server sends its server certificate to the client.
3. The client checks the server certificate to determine the following:
 - a. If the server certificate is issued by a certificate authority that the client trusts. The client checks the name of the CA.


To comply, the name of the certification authority (CA) on the certificate must match the name of the CA on the client's trusted certificate.
 - b. If the server certificate is within its validity window.

The client checks to see if the current time falls between the Not Before and Not After dates in the server certificate.
 - c. If the common name in the server certificate matches the name of the server to which the client is connected.

If the names do not match, the client can not trust the certificate. This only applies if the client has been configured with "Verify Server FQDN=1".

When all the security checks are satisfied the client and server can exchange secure messages.

Figure 6: Server Authentication

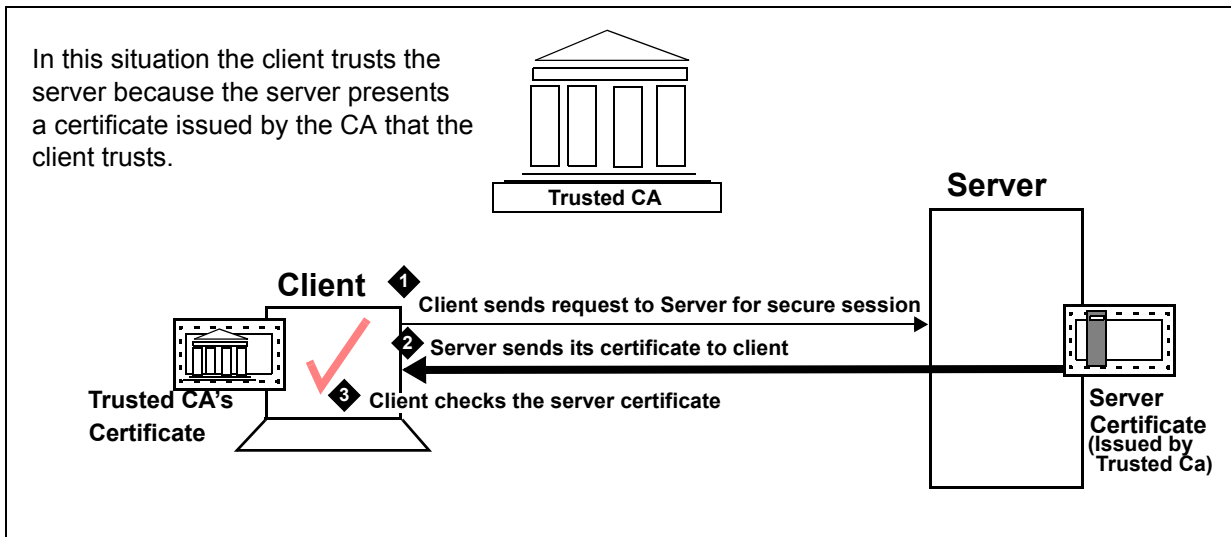

Using the default certificate - no certificate configuration required

The AE Services license file installs a default server certificate, which is signed by the Avaya Product Certificate Authority (CA). Also, by default the AE Services client installation programs for TSAPI and CVLAN install the Avaya Product CA certificate on the client computer. See [Figure 7](#) for an illustration.



Important:

If you plan to use the default certificate you do not have to perform any additional client configuration.

Table 6: Where AE Services installs the default CA certificate

TSAPI Win32 client	C:\Program Files\Avaya\AE Services\TSAPI Client\certs\ca\avayaprca.cer
TSAPI Linux client	/opt/mvap/tsapi/client/certs/CA/avayaprca.pem
CVLAN Linux client	/usr/adm/cvlan/certs/CA/avayaprca.pem
CVLAN Win32 client	C:\Program Files\Avaya\CT\CVLAN\certs\ca\avayaprca.cer

If you use TSAPI and your own certificates -- the "default location" option

Notice in [Figure 7](#) that frame B is labeled as the "default location" option.

Note:


This option is available for TSAPI clients only.

If you use your own certificates, and you copy your certificates to a specified location, you do not have to update the configuration files (tslib.ini, for Win32 clients and tslibrc, for Linux clients). The specified locations are listed in [Table 7](#).

Table 7: TSAPI - if you use your own certificates: the "default location option"

TSAPI Win32 client	C:\Program Files\Avaya\AE Services\TSAPI Client\certs\ca\aesCerts.cer
TSAPI Linux client	/opt/mvap/tsapi/client/certs/CA/aesCerts.pem

Figure 7: Where AE Services installs the CA certificate (per-client)

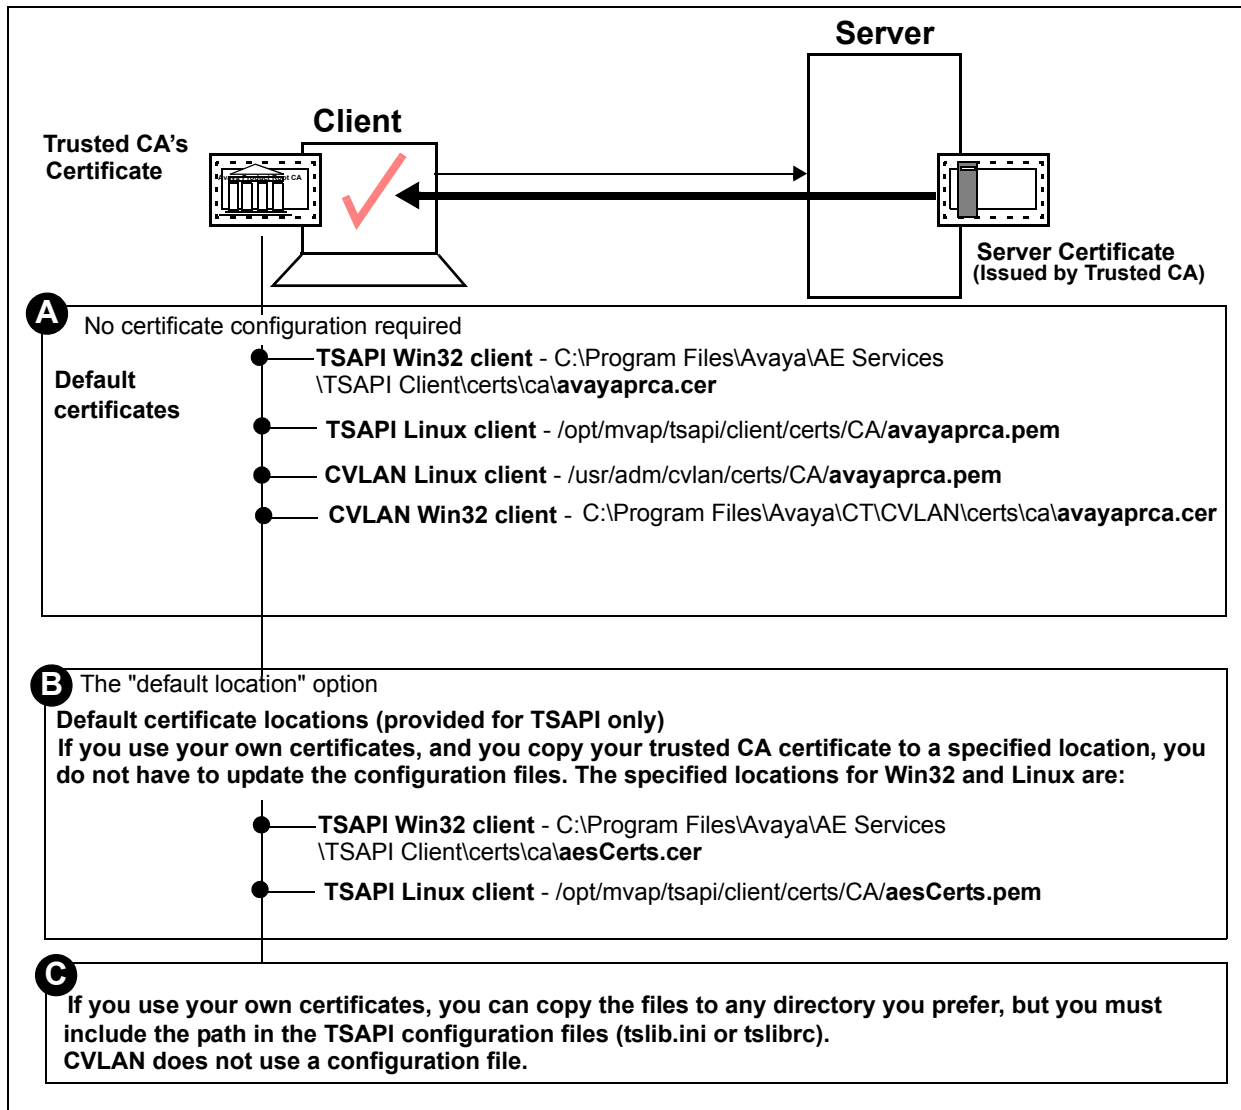

Using certificates issued by a trusted in-house or third-party certificate authority

If you plan to use your own certificates, as opposed to using the default Avaya certificate, familiarize yourself with the tasks described in [Table 8](#).

Table 8: Scenario for setting up AE Services - if you use your own certificates

	Task	Interface
TSAPI		
1	Install the Trusted CA's Certificate on your client.	On the computer where the client software is installed.
2	If you are using your own certificates, and you are not using the predefined location for storing certificates, you must add statements to the configuration file that specify where your certificates are located.	On the Windows computer where the TSAPI client software is installed. Edit the tslib.ini file. See About Specifying the location of certificates (tslib.ini) on page 29.
		On the Linux computer where the TSAPI client software is installed. Edit the tslibrc file. See About specifying the location of certificates (tslibrc) on page 43.
CVLAN		
1	Install the Trusted CA's Certificate on your client.	On the computer where the client software is installed.
2	Make sure the certificate is installed in the proper location.	On the computer that the client is installed on. See CVLAN client and certificate management on page 55.
3	Set up your application to open a connection to the AE Server.	On the computer where the client software is installed. See the AE Services CVLAN Programmer's Reference, 02300546 (asai_open and asai_open_port).

AE Services certificate administration

If you are using your own certificates, the scope of both AE Services client and AE Services server administration tasks increases. To be able to use your own certificates for the AE Services TSAPI and CVLAN clients, certificate administration is required on the AE Services server.

If you are configuring TSAPI and CVLAN clients in an environment that uses certificates issued by a trusted in-house or third-party certificate authority, [Table 9](#) provides you with a general frame of reference for the related AE Services administrative tasks.

Table 9: Scenario for setting up TSAPI and CVLAN - if you use your own certificates

	Description	Notes
1	Create a server certificate request for AE Services.	See "Creating a server certificate signing request for the AE Services server" in the <i>Avaya Aura® Application Enablement Services Administration and Maintenance Guide, 02-30357</i> (AE Services Administration and Maintenance Guide).
2	Create an AE Services server certificate.	See "Creating a server certificate for AE Services" in the AE Services Administration and Maintenance Guide.
3	Import the server certificate into AE Services.	See "Importing the server certificate into AE Services" in the AE Services Administration and Maintenance Guide.
TSAPI-related administrative tasks		
1	Administer TSAPI links as encrypted.	See "Administering TSAPI Links" in the AE Services Administration and Maintenance Guide.
CVLAN-related administrative tasks		
1	Add a CVLAN link.	See "Administering CVLAN Links" in the AE Services Administration and Maintenance Guide.
2	Add a CVLAN client.	See "Adding CVLAN Clients" in the AE Services Administration and Maintenance Guide.

Appendix B: File naming conventions

The following file naming convention provides you with a convenient way of interpreting the file names of AE Services deliverables. This naming convention is not a formal standard, it is simply a guideline for reading file names.

<api>- <type>- <target>- <version> - <build> [.<platform>] .<suffix>

Where:

<api>-	Refers to the name of the API. For example, tsapi or cvlan
<type>-	Refers to the type of deliverable. Can be client- , sdk- ,or client-sdk (for ISOs).
<target>	Refers to the name of the operating system.
<version>	Refers to the software version.
- <build>	Refers to the software build number, preceded by a dash. Note: This number changes frequently. It is often represented in this document by x instead of an actual build number.
[.<platform>]	Refers to a platform designation. An optional field, currently used for Linux rpms only.
.<suffix>	Refers to the file or package type.

Examples

- TSAPI Windows client - **tsapi-client-win32-6.3.1-170.zip**
- TSAPI Linux client - **tsapi-client-linux-6.3.1-170.i386.rpm**
- TSAPI Windows SDK - **tsapi-sdk-win32-6.3.1-170.zip**
- CVLAN Windows client - **cvlan-client-win32-6.3.1-70.zip**
- CVLAN Linux client - **cvlan-client-linux-6.3.1-70.i386.rpm**

[Table 10](#) applies the naming convention to the AE Services deliverables.

Table 10: AE Services TSAPI and CVLAN software deliverables -- file names

<i><api></i> -	<i><type></i> -	<i><target></i> -	<i><version></i>	<i>-<build></i> ¹	[<i>.<platform></i>]	<i>.<suffix></i>
tsapi-	client-	linux-	6.3.1	-170	.i386	.rpm
tsapi-	client-	win32-	6.3.1	-170	n/a	.zip
tsapi-	sdk-	linux-	6.3.1	-170	.i386	.rpm
tsapi-	sdk-	win32-	6.3.1	-170	n/a	.zip
cvlan-	client-	linux-	6.3.1	-70	n/a	.rpm
cvlan-	client-	win32-	6.3.1	-70	n/a	.zip

1. Build numbers change frequently. These numbers are provided as examples only.

Appendix C: TSAPI client message tracing

TSAPI Spy - a Windows client message tracing tool

The TSAPI Client includes TSAPI Spy, a client message tracing application that lets you see the flow of messages through the client TSAPI Library (TSLIB). TSAPI Spy traces messages as they enter and leave the library in both directions: from application(s) to the TSAPI Service; from the TSAPI Service to application(s). This section includes the following topics:

- [Overview of the TSAPI Spy for Windows interface](#) on page 78
- [Using the Log to File option to direct output to a trace file](#) on page 80
- [Working with the streams list](#) on page 83
- [TSAPI Spy Trace Records](#) on page 84
- [TSAPI Spy Error Records](#) on page 86
- [Using the TSAPI Spy with Windows Server 2003](#) on page 86

Overview of the TSAPI Spy for Windows interface

Use this section to familiarize yourself with the TSAPI Spy for Windows interface.

- Read [Table 11](#) and [Table 12](#) for an operational summary of TSAPI Spy.

Table 11: Summary of TSAPI Spy main window

Tracing...	<ul style="list-style-type: none"> ● Enabled - the default setting. When Tracing is enabled, message tracing information is displayed in the two display areas of the TSAPI Spy main window. ● Disabled - Select Disabled to disable message tracing. Tracing can be disabled at any time while TSAPI Spy is running. If you disable tracing, and then exit TSAPI Spy (File > Exit), the next time you start TSAPI Spy, it will be Disabled.
Open Streams (+)	Indicates the number of streams currently open from the TSLIB to all telephony servers. This number is updated in real time as applications open and close connections.
Closed Streams (-):	Indicates the number of streams previously open from the TSLIB to all AE Servers, but which are now closed. This number is updated in real time as applications close streams.
Streams list (white background) - displays information about currently and previously open connections from the TSLIB to all telephony servers. For more information see, Working with the streams list on page 83.	
● Handle:	The internal ID for a stream. All the message lines in the trace file are prefixed with the handle of the connection to which the message belongs. The handle is generated by the TSLIB. Currently open connections are indicated with a "+" prefix on the Handle. Streams that were previously open but are now closed are indicated with a "-" prefix on the Handle
● Server ID	The Tlink to which this connection has been opened. This information is provided to the TSLIB by the application when a request is made to open a connection.
● Appl	The name of the application that has opened this connection. This information is provided to the TSLIB by the application when a request is made to open a connection.
● Login	The login ID under which the application has opened this connection. Multiple applications may be opened under the same or different login IDs at a single client. This information is provided to the TSLIB by the application when a request is made to open a connection.
Output display window (grey background) - displays the trace output in real time as messages are passed through TSLIB. This output window can display approximately 30,000 characters of trace history. Once the output limit has been reached, the oldest trace information is deleted in favor of the newer trace information. For long trace outputs, it is recommended that the trace be logged to a file. For more information, see Using the Log to File option to direct output to a trace file on page 80.	
Trace file status This line, below the Output window, indicates whether the Log To File option has been selected, and tracing. The default is "No trace file." When file logging is active, this line indicates the file name (with full path) and file size.	

Table 12: TSAPI Spy Menu Options

<p>File:</p>	<ul style="list-style-type: none"> ● Exit - Use menu item is used to exit TSAPI Spy. The system menu may also be used to exit the application.
<p>Edit:</p>	<ul style="list-style-type: none"> ● Copy - copies the selected text (if any) from the Output window onto the Clipboard. The text is then available to be pasted into any application of your choosing. If no text is selected in the Output window, this menu item is grayed and disabled. ● Clear Buffer - clears out the contents of the Output window. Once this is done, the original contents are lost (the data is NOT copied to the Clipboard). ● Select All - selects all of the text in the Output window. The Copy menu item can then be used. ● Purge Closed Streams - deletes all closed connections (indicated with a "-" prefix) from the streams list and resets the Closed Streams count to 0, leaving only currently open connections in the Streams List.
<p>Options All options, except Auto-Trace New Streams, are disabled by default.</p>	<ul style="list-style-type: none"> ● Always On Top - causes the TSAPI Spy window to be topmost on the screen display. This setting is disabled by default (a check mark does not appear next to it). ● Auto-Trace New Streams - causes newly opened connections (which open after TSAPI Spy is started) to be traced automatically. This option is described in more detail in Working with the streams list on page 83. This setting is enabled by default (a check mark appears next to it). ● Show Internal Events - causes non-application messages to be traced. The majority of messages normally traced through the CSTA32.DLL are application-to-telephony server and telephony server-to-application messages. There are, however, a small number of messages that the TSLIB generates to facilitate application/telephony server communications. This setting is disabled by default (a check mark does not appear next to it). ● Log To File - causes all trace messages to be logged to a file specified by the user. See Using the Log to File option to direct output to a trace file on page 80. This setting is disabled by default (a check mark does not appear next to it).

Using the Log to File option to direct output to a trace file

The TSAPI Spy application allows you to trace the TSAPI messages exchanged by the TSAPI Windows client library and the TSAPI Service. The trace output is displayed in the main window, but you may also direct the trace output to a file by enabling the "Log to File" option.

Prior to Release 5.2, this option created a single log file that would grow without bound. Beginning with Release 5.2, you can limit the amount of disk space used by the TSAPI Spy "Log to File" option:

Within the TSAPI Spy "Log to File" dialog box, set the check box for "Use Multiple Trace Files". Then adjust the values for "Maximum Number of Trace Files to Create" and "Maximum Size for Each Trace File" based on your preferences.

Each time the trace file reaches its maximum size, the trace file will "roll over". This means that if messages are being logged to file `tsapispy.trc`, then the first time the trace file rolls over, that file is renamed as `tsapispy.trc.1` and a new `tsapispy.trc` file is created to receive additional log output.


To generalize, if the Trace File Name is `tsapispy.trc` and the "Maximum Number of Trace Files to Create" is some value n , then each time the `tsapispy.trc` file reaches the maximum size:

- The file `tsapispy.trc.n` is removed.
- Any trace files (`tsapispy.trc.1`, `tsapispy.trc.2`, ..., `tsapispy.trc.n-1`) that exist are renamed as (`tsapispy.trc.2`, `tsapispy.trc.3`, ..., `tsapispy.trc.n`).
- The file `tsapispy.trc` is renamed `tsapispy.trc.1`.
- A new `tsapispy.trc` file is created to receive additional log output.

Procedure for creating a trace file

Follow this procedure to create a trace file.

1. Perform one of the following steps:
 - If you are using Windows 8:
On the Start page, click on **TSAPI Spy**.
 - If you are not using Windows 8:
Click **Start > All Programs > Avaya AE Services > TSAPI Client > TSAPI Spy**.
AE Services displays the TSAPI Spy for Win32 window.
2. From the Telephony Services Spy for Win32 window, select **Options > Log To File...** .
Windows displays the **Log to File** dialog box.

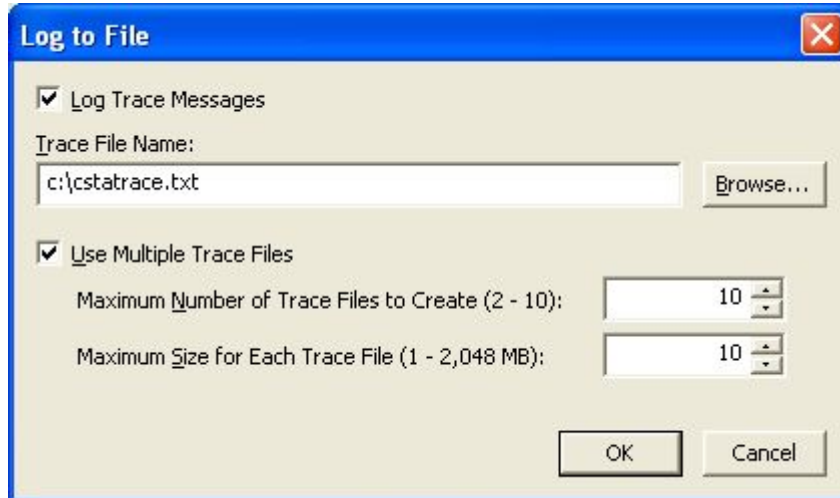

3. Follow these steps to complete the **Create Trace File** dialog box:
 - a. Accept the default for Log Trace Messages (enabled).
 - b. In the Trace File Name field, type a name for the trace file (for example, c:\cstatrace.txt), or, choose a location by clicking **Browse**.
The default extension assigned to trace files is .trc, but you can use any filename and extension.
 - c. If you would like the trace messages to be logged to a single file that grows without bound, clear the check box for Use Multiple Trace Files and click **OK**.



Important:

Use this option with care to avoid using excessive disk space.

Appendix C: TSAPI client message tracing

- d. If you would like to control the amount of disk space consumed by the trace files, set the check box for **Use Multiple Trace Files**. Then adjust the values for "Maximum Number of Trace Files to Create" and "Maximum Size for Each Trace File" based on your preferences and click **OK**.

Turning off Log to File

When you want to stop TSAPI Spy from writing output to the trace file, follow this procedure.

1. Select **Options > Log To File** (the Log to File option will have a check mark).
2. Uncheck the **Log Trace Messages** check box.
All of the options become disabled.
3. Click **OK**.
TSAPI Spy displays an information box that prompts you to confirm that you want to close the trace file.
4. Click **OK**.
TSAPI Spy closes the trace file.

Working with the streams list

When you first start TSAPI Spy, **Tracing** and **Auto-Trace New Streams** are enabled by default. When **Tracing** is enabled, all connections that are currently open are traced. When **Auto-Trace New Stream** is enabled, tracing is enabled when a new connection is opened.

To indicate that tracing is enabled for a connection (or connections), TSAPI Spy highlights the connection displayed in the streams list.

- To disable Tracing for all streams, select the **Disabled** option button.
- To disable Auto-Trace New Streams, select **Options > Auto-Trace New Streams**. When you clear the check mark for **Auto-Trace New Streams**, tracing is not enabled for a new connection when it is opened.

Understanding trace output

To understand trace output, think of the client library as a two-way pipeline, with messages entering and leaving both ends. Messages may originate or terminate in one of three places:

- the application
- the TSAPI Service
- the client library (for internal events)

The trace records track the progress of a message through the pipeline, enabling you to determine which messages have been sent and whether or not they have reached their destination.

Normally, two trace records are generated for each message: one as it enters the pipeline, and one as it exits. Messages entering and leaving the application side (or the library itself) are presented in detail, with the value of each data element displayed in an appropriate format. The corresponding trace records to/from the TSAPI Service only indicate successful transport of the message across the network.

TSAPI Spy Trace Records


Trace records displayed in the Output window (or trace file) are separated by blank lines. Each begins with a time stamp and one of the following phrases which describes the record:

- RECEIVED FROM APPLICATION - the application has generated a message to be delivered to the TSAPI Service. The message is displayed in detail.
- RECEIVED FROM TSERVER - a message from the TSAPI Service has arrived in the client library receive queue. Notification only.
- DELIVERED TO APPLICATION - the application has accepted the message from the client library. The message is displayed in detail.
- FROM LIBRARY - the client library has generated an internal message to be delivered to the TSAPI Service. The message is displayed in detail.
- FOR LIBRARY - the client library has accepted an internal message from the TSAPI Service. The message is displayed in detail.

A typical request from an application generates three trace records, in the following sequence: RECEIVED FROM APPLICATION, RECEIVED FROM TSERVER, DELIVERED TO APPLICATION. An event report from the TSAPI Service generates only the latter two records. Trace records from multiple messages may be interleaved.

Figure 8 shows a portion of the trace output resulting from a cstaMakeCall request:

Figure 8: Trace Output sample display

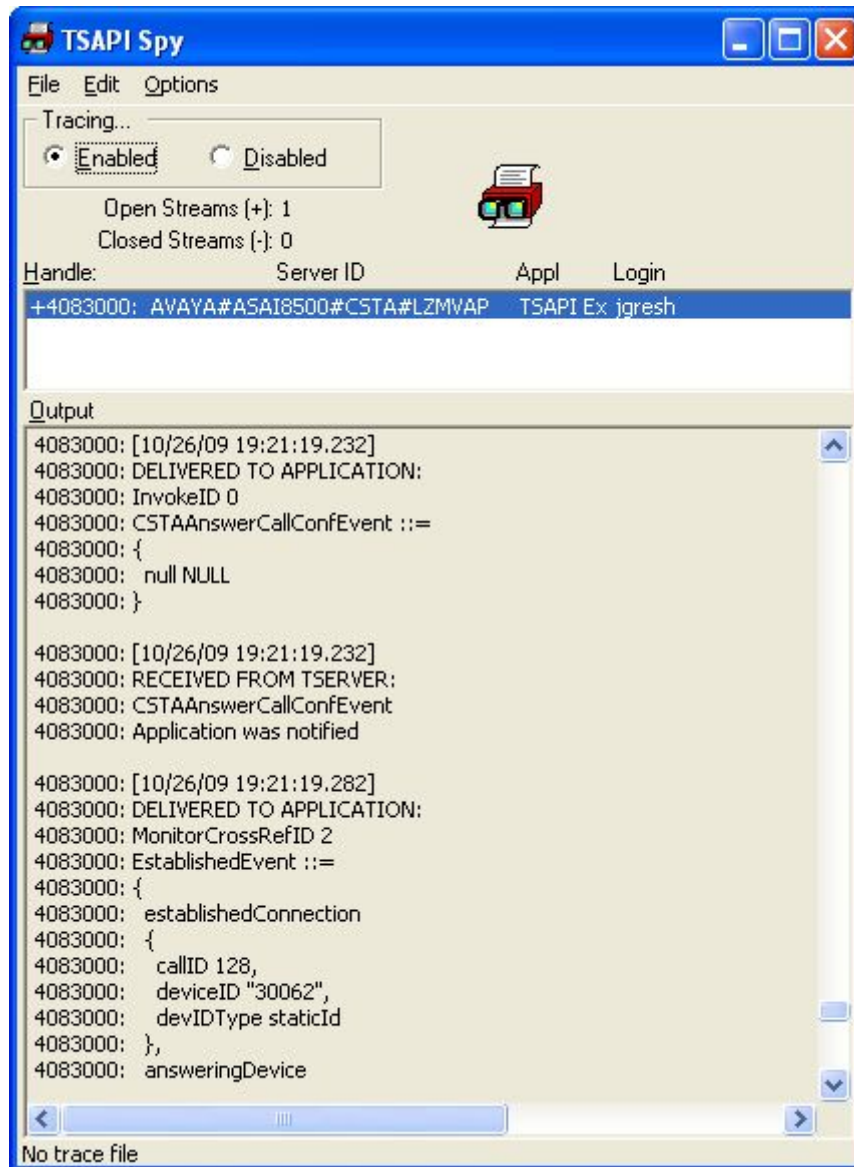

TSAPI Spy Error Records

Certain network errors are also reported by TSAPI Spy. These reports are displayed in the following form:

- CONNECTION TERMINATED BY TSERVER (condition code = xxxx)
where xxxx is a numerical error code in hexadecimal notation. The most common error codes reported are:
 - 2745 (this means the connection is aborted)
 - 2746 (the connection has been reset)
 - 2742 (the network is down)
- CONNECTION TERMINATED BY CLIENT LIBRARY (condition code = 0), which indicates that the client has detected a loss of connectivity with the AE Services server

Other codes are possible under unusual conditions. Report the code to technical support when you request assistance.

Using the TSAPI Spy with Windows Server 2003

When using a standard Windows Remote Desktop Connection to start the TSAPI Spy on a Windows Server 2003-based server where the TSAPI application is running as a Windows service, the TAPI Spy will not provide any trace messages. To capture the messages sent and received by the TSAPI application, the Remote Desktop Connection used to start the TSAPI Spy must connect to the console session.

Use the following procedure to open a console session to a Windows Server 2003-based server:

1. Click **Start > Run**.
The Run dialog box appears.
2. Enter **c:\windows\system32\mstsc.exe /console** and click **OK**.
A Remote Desktop Connection window appears.
3. Complete the host name or IP address of the application, and configure any other options you want.
4. Click **Connect**.

Note:

Each computer has only one console session. When you connect to the console session remotely, other users may be unable to log on to the computer locally.

Client message tracing for Linux-based TSAPI clients

For Linux-based clients, the message tracing ability is built into the shared client library file (`libcsta.so`). The tracing capability allows a user to log the flow of messages through applications using the TSAPI Linux clients.

Messages are traced as they enter and leave the library in both directions: from applications to the TSAPI Service and from the TSAPI Service to applications. Trace messages are written directly to a file specified by the user. Message tracing is performed on an application-by-application basis, according to each application's environment settings.

How to enable message tracing

To enable the TSAPI Message Tracing feature, set and export the environment variable `CSTATRACE` before starting your TSAPI application. The `CSTATRACE` environment variable specifies the name of the file where the TSAPI messages will be logged.

Beginning with Release 5.2 of the AE Services TSAPI Linux client, you can control the amount of disk space used by the TSAPI Message Tracing feature by setting and exporting the following additional environment variables:

- `CSTATRACE_MAX_FILE_INDEX` - This environment variable controls the number of TSAPI trace files that will be created.

Each time the trace file reaches its maximum size (see `CSTATRACE_MAX_FILE_SIZE`, described below), the trace file will "roll over". This means that if messages are being logged to file `cstatrace`, then the first time the trace file rolls over, that file is renamed as `cstatrace.1` and a new `cstatrace` file is created to receive additional log output.

To generalize, if messages are being logged to file `cstatrace` and `CSTATRACE_MAX_FILE_INDEX` is set to some value `n`, then each time the `cstatrace` file reaches its maximum size:

- The file `cstatrace.n` is removed.
- Any trace files (`cstatrace.1`, `cstatrace.2`, ..., `cstatrace.n-1`) that exist are renamed as (`cstatrace.2`, `cstatrace.3`, ..., `cstatrace.n`).
- The file `cstatrace` is renamed `cstatrace.1`.
- A new `cstatrace` file is created to receive additional log output.

In effect, the number of TSAPI trace files that may be created is limited to `CSTATRACE_MAX_FILE_INDEX + 1`.

Valid values for `CSTATRACE_MAX_FILE_INDEX` are 1-9. If `CSTATRACE_MAX_FILE_SIZE` is set but `CSTATRACE_MAX_FILE_INDEX` is not set, then `CSTATRACE_MAX_FILE_INDEX` defaults to 9.

Appendix C: TSAPI client message tracing

- `CSTATRACE_MAX_FILE_SIZE` - This environment variable controls the maximum size of each TSAPI trace file.

Valid values for `CSTATRACE_MAX_FILE_SIZE` are 1-10000 (MB). If `CSTATRACE_MAX_FILE_INDEX` is set but `CSTATRACE_MAX_FILE_SIZE` is not set, then `CSTATRACE_MAX_FILE_SIZE` defaults to 10 (MB).

When neither `CSTATRACE_MAX_FILE_INDEX` nor `CSTATRACE_MAX_FILE_SIZE` is set, then messages will be logged to a single file that grows without bound. Use caution when collecting TSAPI trace messages this way to avoid using excessive disk space.

Also, note that the TSAPI Message Tracing feature is provided for troubleshooting purposes only. Enabling this feature will degrade the performance of the TSAPI Linux client library.

Examining trace files

[Figure 9](#) depicts sample output from a tracing session started by setting `CSTATRACE`. The number that appears at the beginning of each line is the ACS handle for the stream.

Figure 9: Sample output from CSTA Trace

```

:
00722aa0: [10/26/09 19:26:44.444]
00722aa0: RECEIVED FROM APPLICATION:
00722aa0: InvokeID 00000002
00722aa0: ACSOpenStream ::=
00722aa0: {
00722aa0:   streamType stCsta,
00722aa0:   serverID "AVAYA#SCORPION#CSTA#LZMVAP244",
00722aa0:   loginID "jgresh",
00722aa0:   cryptPass '3A2578E343C2F56B95B84571FBF0F56B95 ...'H,
00722aa0:   applicationName "TSTEST",
00722aa0:   level acsLevel1,
00722aa0:   apiVer "TS1-2",
00722aa0:   libVer "AES6.3.1 Build 415",
00722aa0:   tsrvVer ""
00722aa0: }

00722aa0: [10/26/09 19:26:44.451]
00722aa0: DELIVERED TO APPLICATION:
00722aa0: InvokeID 00000002
00722aa0: ACSOpenStreamConfEvent ::=
00722aa0: {
00722aa0:   apiVer "ST2",
00722aa0:   libVer "AES6.3.1 Build 415",
00722aa0:   tsrvVer "6.3.1 Build 415",
00722aa0:   drvrVer "6.3.1 Build 415"
00722aa0: }

00722aa0: [10/10/13 19:26:44.452]
00722aa0: RECEIVED FROM APPLICATION:
00722aa0: InvokeID 00000003
00722aa0: CSTAMakeCall ::=
00722aa0: {
00722aa0:   callingDevice "32201",
00722aa0:   calledDevice "32202"
00722aa0: }
00722aa0: [10/26/09 19:26:44.599]
00722aa0: DELIVERED TO APPLICATION:
00722aa0: InvokeID 00000003
00722aa0: CSTAMakeCallConfEvent ::=
00722aa0: {
00722aa0:   newCall
00722aa0:   {
00722aa0:     callID 2261,
00722aa0:     deviceID "32201",
00722aa0:     devIDType staticId
00722aa0:   }
00722aa0: }

```

Appendix C: TSAPI client message tracing

Glossary

API	Application Programming Interface. An API is a published specification that describes how to access the functions of a software-based service.
ASAI	Adjunct Switch Application Interface - ASAI is a protocol that enables software applications to access call processing capabilities provided by Avaya Communication Manager.
Certificate Authority (CA)	A certificate authority is an organization that issues and manages security credentials, including digitally signed certificates containing public keys for message encryption and decryption.
Computer Telephony Integration	Abbreviated as CTI. The integration of services provided by a computer and a telephone. In simplest terms, it means connecting a computer to a communications server (or switch) and having the computer issue commands that control calls. All services running on the AE server (TSAPI, CVLAN, DLG, and DMCC) are CTI services.
CTI	Computer Telephony Integration. CTI is the use of computers to manage telephone calls.
CTI Link	The term CTI link refers to a generic link type that is used in the context of Communication Manager administration. As a generic link type, it can refer to any of the following AE Services links: CVLAN links, DLG links, and TSAPI links (JTAPI and the Telephony Web Service use TSAPI links). When an OAM Web page, such as TSAPI Service Summary, displays a column heading for a CTI link type, it is referring to TSAPI link as it is administered on Communication Manager. Up to 64 links can be administered on Communication Manager.

CT User**CT User**

Computer Telephony User. A user (or an application) administered in the AE Services User Service as a CT User derives authorization from the Security Database. CT Users include the following users or applications: TSAPI Service users (including JTAPI users), Telephony Web Service users, and Device, Media and Call Control users who use the Call Control Services (CSTA III Single-Step Conference, Snapshot Call, and Snapshot Device).

CVLAN

CallVisor/LAN - CallVisor/LAN is a C programming API based on the ASAI message set.

JTAPI

Java Telephony Application Programming Interface. JTAPI is a scalable, extensible API integrating both first-party and third-party call control models. The AE Services JTAPI implementation provides access to the complete set of Third Party call control features provided by the TSAPI Service. JTAPI uses the TSAPI Service for communication with Avaya Communication Manager. For information about JTAPI, see the *Avaya Aura® Application Enablement Services JTAPI Programmer's Guide*, 02-603488.

Link

A communications channel between system components.

**Operations,
Administration, and
Maintenance**

Abbreviated as OAM. The administrative interface for the Application Enablement Services platform.

PEM

Privacy Enhanced Mail - A file format for storing private keys, public keys, and certificates. A PEM file may contain either personal certificates or certificates from a Certificate Authority.

Private Data

Private data is a switch-specific software implementation that provides value added services.

Routing

Selecting an appropriate path for a call. When a routing application is started, it sends route registration requests, which contain a device ID, to Communication Manager. Routing requests instruct Communication Manager to send all incoming calls to these device IDs (in the TSAPI Service). The TSAPI Service sends the call to the application for routing. Communication Manager does not route these calls. Also referred to as adjunct routing.

SDK	Software Development Kit. An SDK is a package that enables a programmer to develop applications for a specific platform. Typically, an SDK includes one or more APIs, documentation, and, in some cases, programming tools.
Tlink	A Tlink is a service identifier that is created when the administrator adds a TSAPI Link in AE Services OAM. A Tlink refers to a switch connection between a specific switch and a specific AE Server.
TLS	Transport Layer Security. TLS is a protocol intended to secure and authenticate communications across public networks through data encryption. TLS is an enhancement to SSL version 3, and is a proposed Internet Standard.
TSAPI	Telephony Services API. TSAPI is a C- language based API for third-party call and device control, and based on CSTA standards.

Index

A

ASAI test utility [65](#)
 Avaya CT Windows SDK [50](#), [51](#), [61](#)

C

CVLAN
 installing Linux Client [63](#)
 installing Linux SDK. [63](#)
 installing Windows Client [60](#)
 installing Windows SDK. [60](#)

E

Errors
 reported by TS Spy [86](#)

G

Glossary [91](#)

I

Installing CVLAN Linux Client and SDK [63](#)
 Installing CVLAN Windows Client and SDK [60](#)
 Installing TSAPI Linux client [37](#)
 Installing TSAPI Linux SDK. [52](#)
 Installing TSAPI Windows client. [21](#)
 Installing TSAPI Windows SDK [48](#)

O

operating system requirements [17](#)

R

Removing
 TSAPI Windows SDK [50](#), [51](#), [61](#)
 Removing CVLAN Windows client [61](#)
 Removing TSAPI Linux client [40](#), [53](#)
 Removing TSAPI Linux SDK [53](#)
 Removing, TSAPI Windows client. [25](#)

S

Software

 downloading [12](#)

T

TS Spy
 client library model [83](#)
 error records [86](#)
 file logging [80](#)
 trace records [84](#)
 TS Spy menu options [79](#)
 TSAPI Linux client, removing [40](#), [53](#)
 TSAPI Linux SDK, removing [53](#)
 TSAPI Test, verifying installation [24](#)
 TSAPI Win32 client, verifying installation [24](#)
 TSAPI Windows client, installing. [21](#)
 TSLIB
 tracing client messages with TS Spy [77](#)

V

Verifying installation of CVLAN client. [65](#)

