

DIAGRAM 1.0


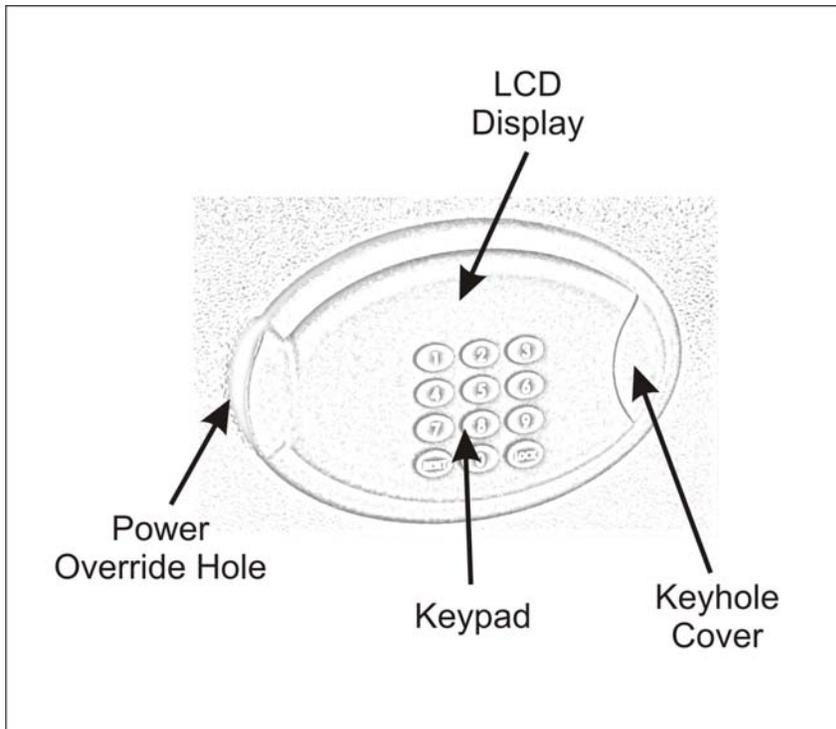


DIAGRAM 2.0

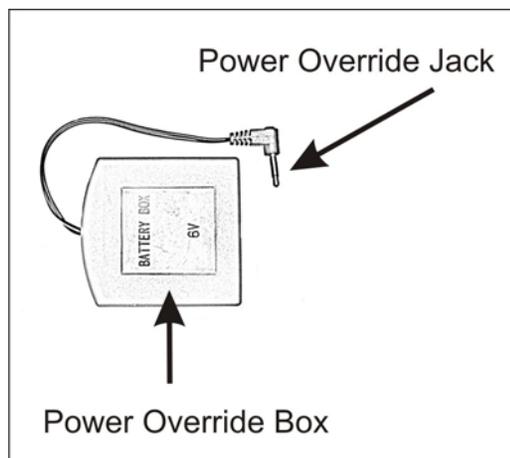

WELCOME:

STEP 1 – OPENING THE SAFE:

1. Install the 4 AA batteries in the Power Override Box. We recommend using high-quality batteries such as Duracell or Energizer.
2. Plug the Power Override Jack to the Power Override Hole.
3. Enter code. Factory default code is: 1-2-3-4
4. If the correct code is entered, the LCD Display will show "OPEN". If a wrong code was entered the LCD Display will show "E-CODE". Please re-enter the right code.
5. The door will automatically open and the display will show "OPENED" for 4 seconds.

NOTE: Remove the batteries from the Power Override Box and install them in the battery box that is located in the back of the safe door.

ENROLLING:

STEP 2 – CHANGING USER CODE:

1. Open the safe using the code.
2. Enter your new 4-Digit code and press the "LOCK" key.

STEP 3 – CHANGING MASTER CODE:

1. Open the safe using the code.
2. Enter your existing master code. Factory default code is: 8-8-8-8-8-8
3. Press the "LOCK" key. The LCD Display will show "NEU".
4. Enter your new 6-Digit master code and press the "LOCK" key. The LCD Display will show "AGAIN".
5. Enter your new 6-Digit master code again and press the "LOCK" key. If procedure is successful LCD Display will show "DONED", in case of a wrong code the LCD Display will show "E-CODE". Please repeat steps 2 thru 5.

EMERGENCY OPENING:

POWER OVERRIDE:

1. Open the safe by following STEP 1.

KEY OVERRIDE:

1. Gently slide the Keyhole Cover to the right, this will reveal the Keyhole.
2. Insert the key and turn the key clockwise (right) to open the safe.

Note: The safe keeps the code in memory up to 6 months without power.

TIPS:

- Use digits 1 – 0 to enter your code.
- Use the "RESET" key as backspace to clear the last digit.
- If you don't want your code showing on the LCD Display, before you enter your code press the "RESET" key twice followed by the "LOCK" key. The LCD Display will show squares instead of digits.
- When the LCD Display shows "LO-BAT" it is highly recommended to change the batteries as soon as possible.



User's manual For Electronic safe

Models:

BG Series