

SERVICE MANUAL

M660SU / M665SU

notebook



Notebook Computer

M660SU/M665SU

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
June 2007

Trademarks

Intel, **Celeron**, and **Intel Core** are trademarks/registered trademarks of Intel Corporation.

Windows® is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and./or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *M660SU*/*M665SU* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.

Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit (DC Output 19V, 3.42A or 18.5, 3.5A AC/DC Adapter).

CAUTION

Always disconnect all telephone lines from the wall outlet before servicing or disassembling this equipment.

**TO REDUCE THE RISK OF FIRE, USE ONLY NO. 26 AWG OR LARGER,
TELECOMMUNICATION LINE CORD**

This Computer's Optical Device is a Laser Class 1 Product


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.




2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

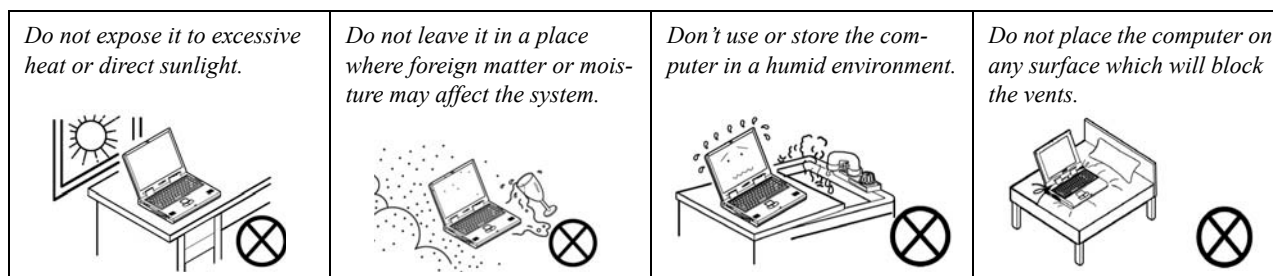

3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

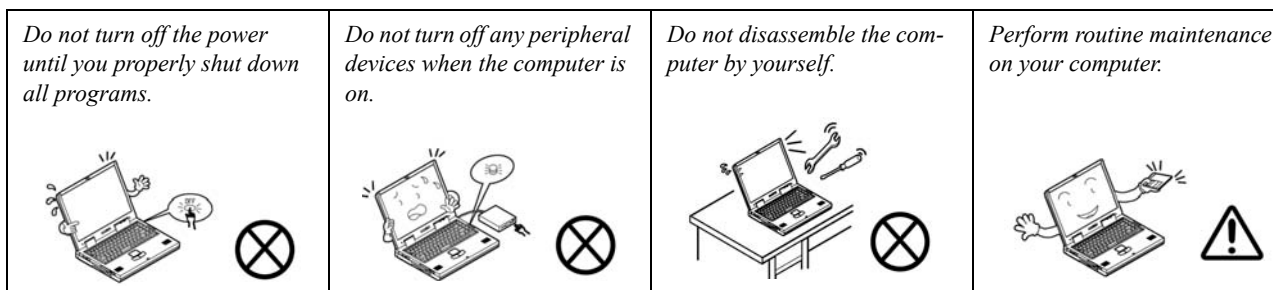


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

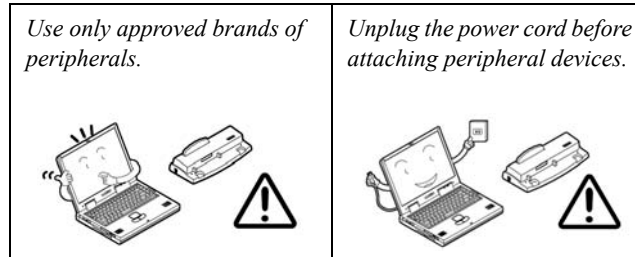

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

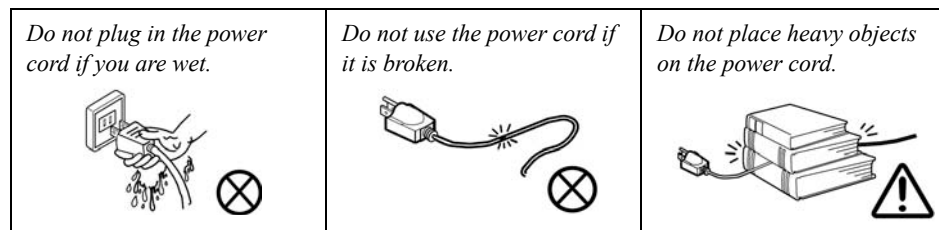

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.



Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on CD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

Contents

Introduction	1-1	Top without Fingerprint (M660SU)	A-4
Overview	1-1	Top with Fingerprint (M665SU)	A-5
System Specifications	1-2	Top without Fingerprint (M665SU)	A-6
Model Differences	1-5	Bottom (M660SU/M665SU)	A-7
External Locator - Top View with LCD Panel Open	1-6	LCD (M660SU/M665SU)	A-8
External Locator - Front & Rear Views	1-7	CDRW (M660SU/M665SU)	A-9
External Locator - Left & Right Side Views	1-8	Combo (M660SU/M665SU)	A-10
External Locator - Bottom View	1-9	DVD RW (M660SU/M665SU)	A-11
M660SU Mainboard Overview - Top (Key Parts)	1-10	Schematic Diagrams.....	B-1
M660SU/M665SU Mainboard Overview - Bottom (Key Parts) ..	1-11	SYSTEM BLOCK DIAGRAM	B-2
M660SU/M665SU Mainboard Overview - Top (Connectors)	1-12	CLOCK GENERATOR	B-3
M660SU/M665SU Mainboard Overview - Bottom (Connectors) ..	1-13	CPU-1	B-4
Disassembly	2-1	CPU-2	B-5
Overview	2-1	VN896-1	B-6
Maintenance Tools	2-2	VN896-2	B-7
Connections	2-2	VN896-3	B-8
Maintenance Precautions	2-3	VN896-4	B-9
Removing the Battery	2-5	DDR2-1	B-10
Removing the Hard Disk Drive	2-6	DDR2-2	B-11
Removing the System Memory (RAM)	2-8	VGA G72M-1	B-12
Removing the Processor	2-10	VGA G72M-2	B-13
Removing the Wireless LAN Module	2-12	VGA G72M-3	B-14
Removing the Modem	2-13	VGA G72M-4	B-15
Removing the Bluetooth Module	2-14	VT8237A-1	B-16
Removing the Optical (CD/DVD) Device	2-15	VT8237A-2	B-17
Removing the Keyboard	2-16	VT8237A-3	B-18
Part Lists	A-1	HDD & CDROM	B-19
Part List Illustration Location	A-2	CARD READER	B-20
Top with Fingerprint (M660SU)	A-3	NEW CARD SOCKET	B-21
		LAN	B-22

Preface


USB & CCD	B-23
HITACHI H8	B-24
CRT & LVDS	B-25
CPU FAN, LPC ROM	B-26
MINI-PCI & BLUETOOTH	B-27
AUDIO VT1708A/ALC883	B-28
LED	B-29
CHARGER, DC IN	B-30
1.05VS, 1.5V, 2.5VS	B-31
VCORE	B-32
1.8V, 0.9VS	B-33
VDD3, VDD5	B-34
EXT GPU 1.0VS/1.2VS	B-35
HOTKEY LT BOARD	B-36
PWR HOT BOARD	B-37
AUDIO & MODEM BOARD	B-38
CLICK BOARD	B-39
USB BOARD	B-40
FINGERPRINT BOARD	B-41
.....	B-42

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the *M660SU/M665SU* series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in *User's Manual*. That manual is shipped with the computer.

Operating systems (e.g. *Windows XP*, *Windows Vista*, etc.) have their own manuals as do application software (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The *M660SU/M665SU* series notebook is designed to be upgradeable. See “*Disassembly*” on page 2 - 1 for a detailed description of the upgrade procedures for each specific component. Please note the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

System Specifications



Latest Specification Information

The specifications listed in this Appendix are correct at the time of going to press. Certain items (particularly processor types/speeds and CD/DVD device types) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for details.

Feature	Specification
Processor	Intel® Core™2 Duo Processor (478-pin) Micro-FC-PGA Package T7200/ T7400/ T7600 65nm (65 Nanometer) Process Technology 4MB On-die L2 Cache & 667MHz FSB 2.0/ 2.16/ 2.33 GHz
	Intel® Core™2 Duo Processor (478-pin) Micro-FC-PGA Package T5500/ T5600 65nm (65 Nanometer) Process Technology 2MB On-die L2 Cache & 667MHz FSB 1.66/ 1.83 GHz
	Intel® Core™ Duo Processor (478-pin) Micro-FC-PGA Package T2300/ T2400/ T2500/ T2600/ T2700 65nm (65 Nanometer) Process Technology 2MB On-die L2 Cache & 667MHz FSB 1.66/ 1.83/ 2.0/ 2.16/ 2.33 GHz
	Intel® Core™ Solo Processor (478-pin) Micro-FC-PGA Package T1300/ T1400 65nm (65 Nanometer) Process Technology 2MB On-die L2 Cache & 667MHz FSB 1.66/ 1.83 GHz
	Intel® Celeron® M Processor (478-pin) Micro-FCPGA Package 410/ 420/ 430/ 440/ 450 65nm (65 Nanometer) Process Technology 1MB On-die L2 Cache & 533MHz FSB 1.46/ 1.60/ 1.73/ 1.86/ 2.0 GHz
Core Logic	VIA VN896 + VT8237A Chipset
Memory	Two 200 Pin SO-DIMM Sockets Supporting DDRII (DDR2) 533/667 MHz 64-bit Wide DDRII (DDR2) Data Per Channel Memory Expandable up to 2GB (256/ 512/ 1024 MB DDRII Modules)

Feature	Specification	
Security	Security (Kensington® Type) Lock Slot	BIOS Password
BIOS	One 4Mb Flash ROM	Phoenix™ BIOS
LCD	15.4" WXGA (1280 * 800) TFT LCD 15.4" WSXGA (1680 * 1050) TFT LCD	
Video Adapter	NVIDIA GeForce 8400M G (NB8M-SE) Discrete Video System (External On Board) TurboCache™ Total Graphics Memory up to 895MB (with System Memory) 128MB DDR3 Video RAM on Board Supports Dual Display and Ergonomic Refresh Rates up to 2045 * 1536 at 85Hz Supports Microsoft DirectX 10.0 OR NVIDIA GeForce Go 7300 (G72M-V) Discrete Video System (External On Board) TurboCache™ Total Graphics Memory up to 512MB (with System Memory) 64MB/128MB DDR2 Video RAM on Board Supports Dual Display and Ergonomic Refresh Rates up to 2045 * 1536 at 85Hz Supports Microsoft DirectX 9.0	
Storage	One Changeable 12.7mm(h) Optical Device (CD/DVD) Type Drive One Easy Changeable 2.5" 9.5 mm (h) SATA (Serial) HDD	
Audio	Integrated AZALIA Compliant Interface (HDA) 3D Stereo Enhanced Sound System Sound-Blaster PRO™ Compatible	2 * Built-In Speakers Built-In Microphone
Keyboard & Pointing Device	Winkey Keyboard	Built-In TouchPad with Scrolling Function
Interface	Three USB 2.0 Ports One External Monitor Port One Headphone-Out Jack One Microphone-In Jack One Line-In Jack	One S/PDIF Out Jack One RJ-11 Modem Jack One RJ-45 LAN Jack One DC-in Jack
Card Reader	Embedded 7-in-1 Card Reader (MS/ MS Pro/ SD/ Mini SD/ MMC/ RS MMC/ MS Duo) Note: MS Duo/ Mini SD/ RS MMC Cards require a PC adapter	
ExpressCard Slot	One ExpressCard/34(54) Slot	

Introduction

Feature	Specification	
Communication	AZALIA 56K Plug & Play Fax/Modem V.90/92 Compliant 10M/100Mb Base-T Ethernet LAN 802.11 b/g USB Wireless LAN Module (Option) USB (2.0) Bluetooth Module - Version 2.0 (Factory Option) 300K or 1.3M Pixel USB PC Camera Module (Factory Option)	
Power Management	Supports ACPI 2.0 and PCI Bus Power Management 1.1 Compliant	Battery Low Suspend Supports Wake on LAN
Power	Full Range AC/DC Adapter 19V, 3.42A or 18.5V, 3.5A (65W), 100~240V, 50~60Hz	
Battery	6 Cell Smart Lithium-Ion Battery Pack, 4000mAh or 4400mAh	
Environmental Spec	Temperature Operating: 5°C ~ 35°C Non-Operating: -20°C ~ 60°C	Relative Humidity Operating: 20% ~ 80% Non-Operating: 10% ~ 90%
Dimensions & Weight	360mm (w) * 267mm (d) * 25.4-34mm (h)	2.6 kg With 6 Cell Battery
Optional	<u>Optical Drive Module Options:</u> DVD/CD-RW Combo Drive Module DVD-Dual Drive Module Fingerprint Reader Module (Factory Option)	802.11 b/g USB Wireless LAN Module 300K , 1.3M or 2.0M Pixel USB PC Camera Module (Factory Option) USB (2.0) Bluetooth Module - Version 2.0 (Factory Option)

Model Differences

The models vary slightly in external cover design and color.




Figure 1
Model Differences

Introduction

Figure 2
Top View

External Locator - Top View with LCD Panel Open

1. Optional Built-In PC Camera
2. LCD
3. Speakers
4. Power Button
5. Hot Key Buttons
6. Keyboard
7. TouchPad and Buttons
8. Built-In Microphone
9. LED Indicators
10. Fingerprint Reader (Factory Option)

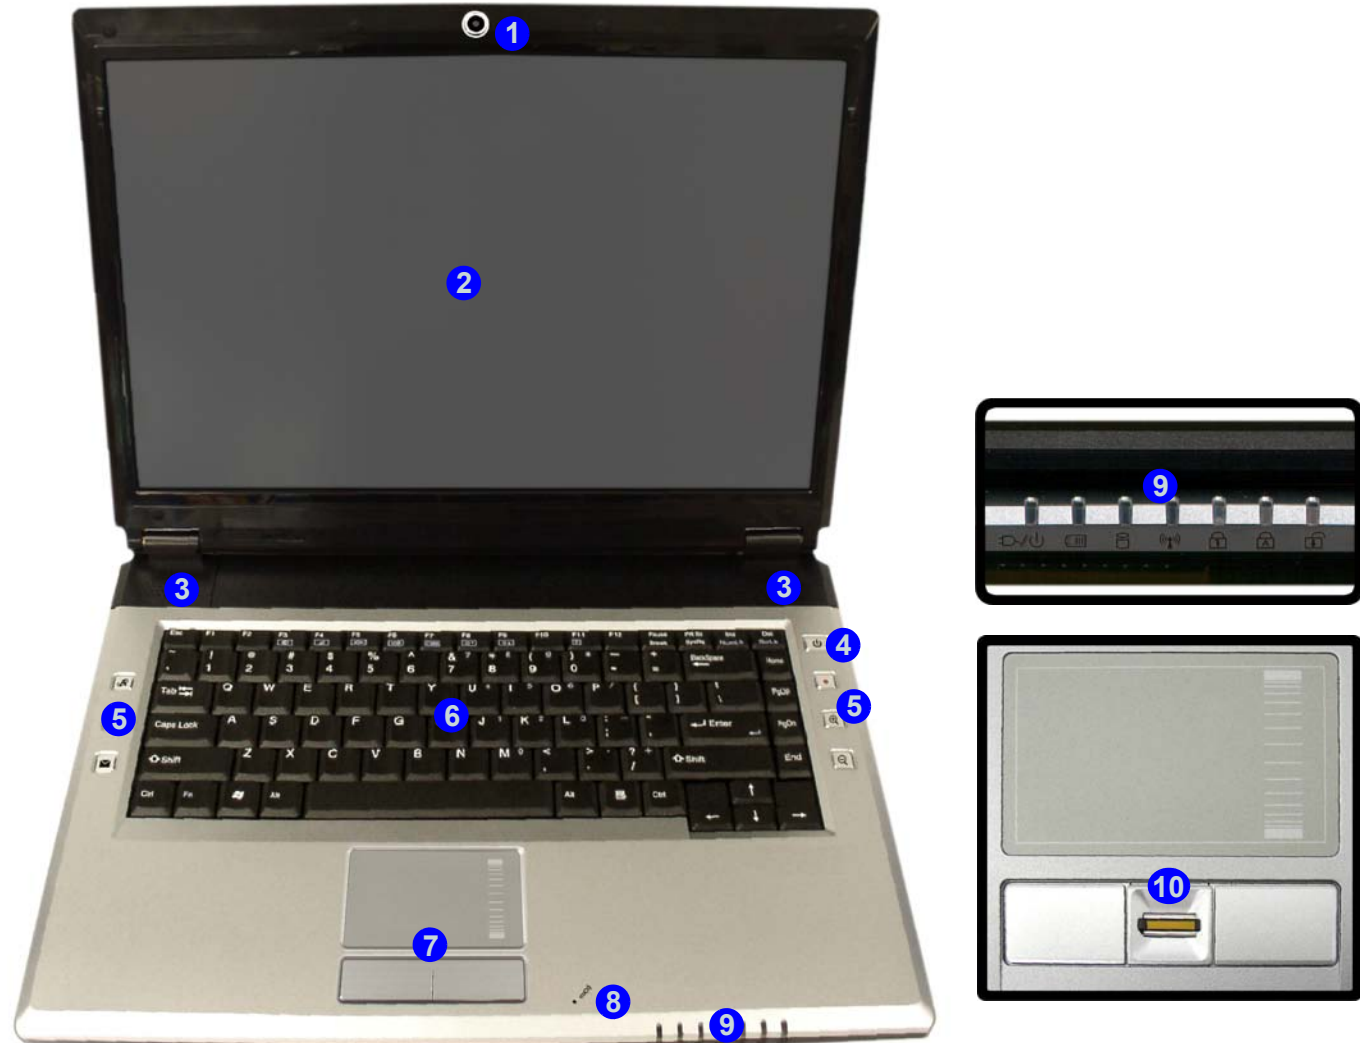

External Locator - Front & Rear Views



Figure 3
Front Views
1. LED Indicators



Figure 4
Rear Views
1. 1 * USB Port
2. DC-In Jack
3. Battery

Introduction

External Locator - Left & Right Side Views

Figure 5

Left Side View

1. Security Lock Slot
2. Optical Device Drive Bay
3. RJ-11 Modem Jack
4. S/PDIF-Out Jack
5. Microphone-In Jack
6. Headphone-Out Jack
7. Line-In Jack



Figure 6

Right Side View

1. ExpressCard Slot
2. 7-in-1 Card Reader
3. 2 * USB 2.0 Ports
4. RJ-45 LAN Jack
5. External Monitor Port



External Locator - Bottom View

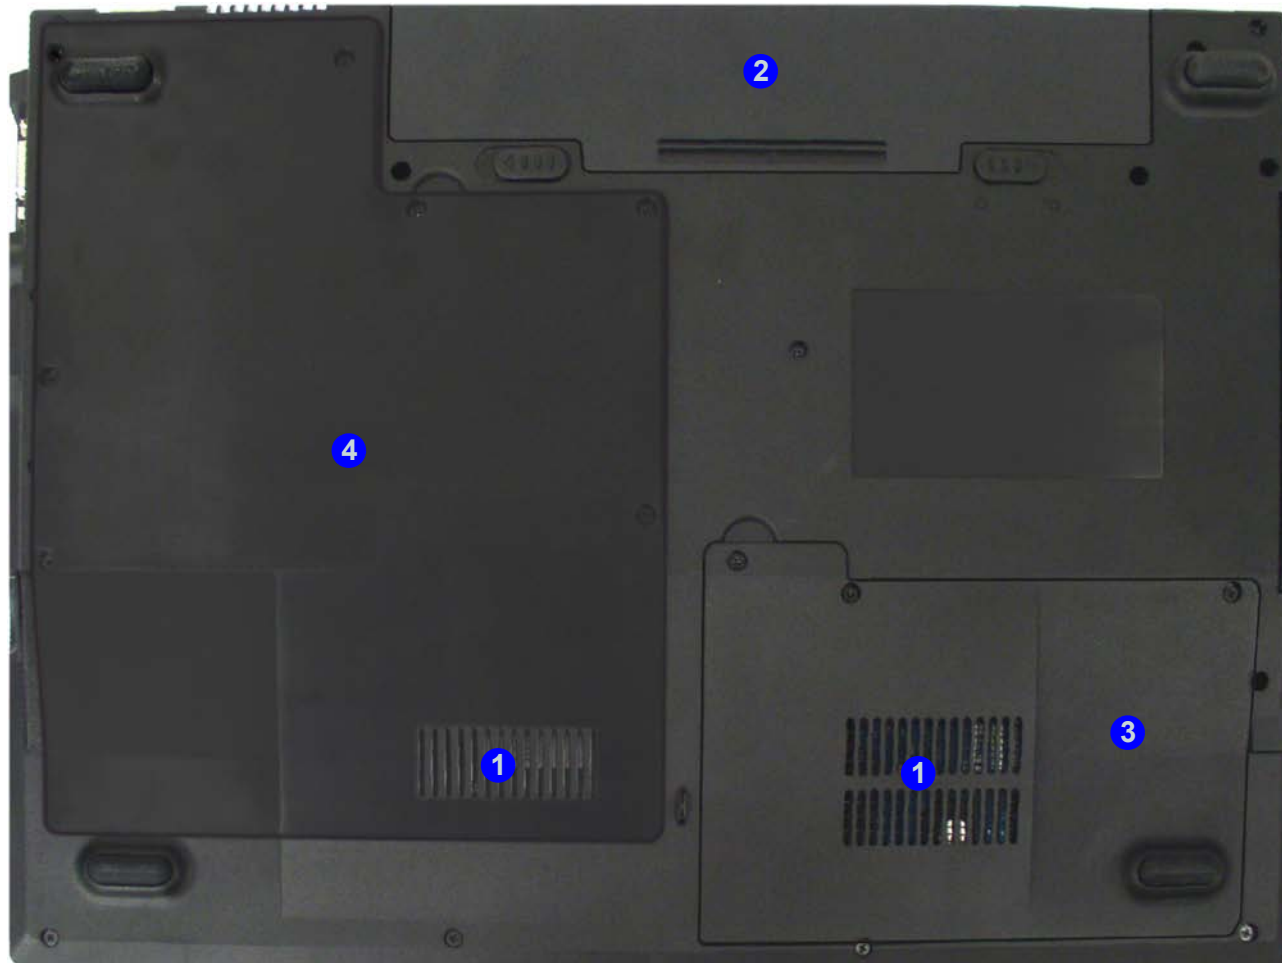


Figure 7
Bottom View

1. Vent/Fan Intake
2. Battery
3. Hard Disk Bay Cover
4. CPU/RAM Bay Cover



Overheating


To prevent your computer from overheating make sure nothing blocks the vent/fan intakes while the computer is in use.

Introduction

Figure 8
Mainboard Top
Key Parts

1. Audio Codec
VT1613
2. Audio Amp
3. Hitachi H8
4. Card Reader
Control
5. ExpressCard
Assembly

Mainboard Overview - Top (Key Parts)

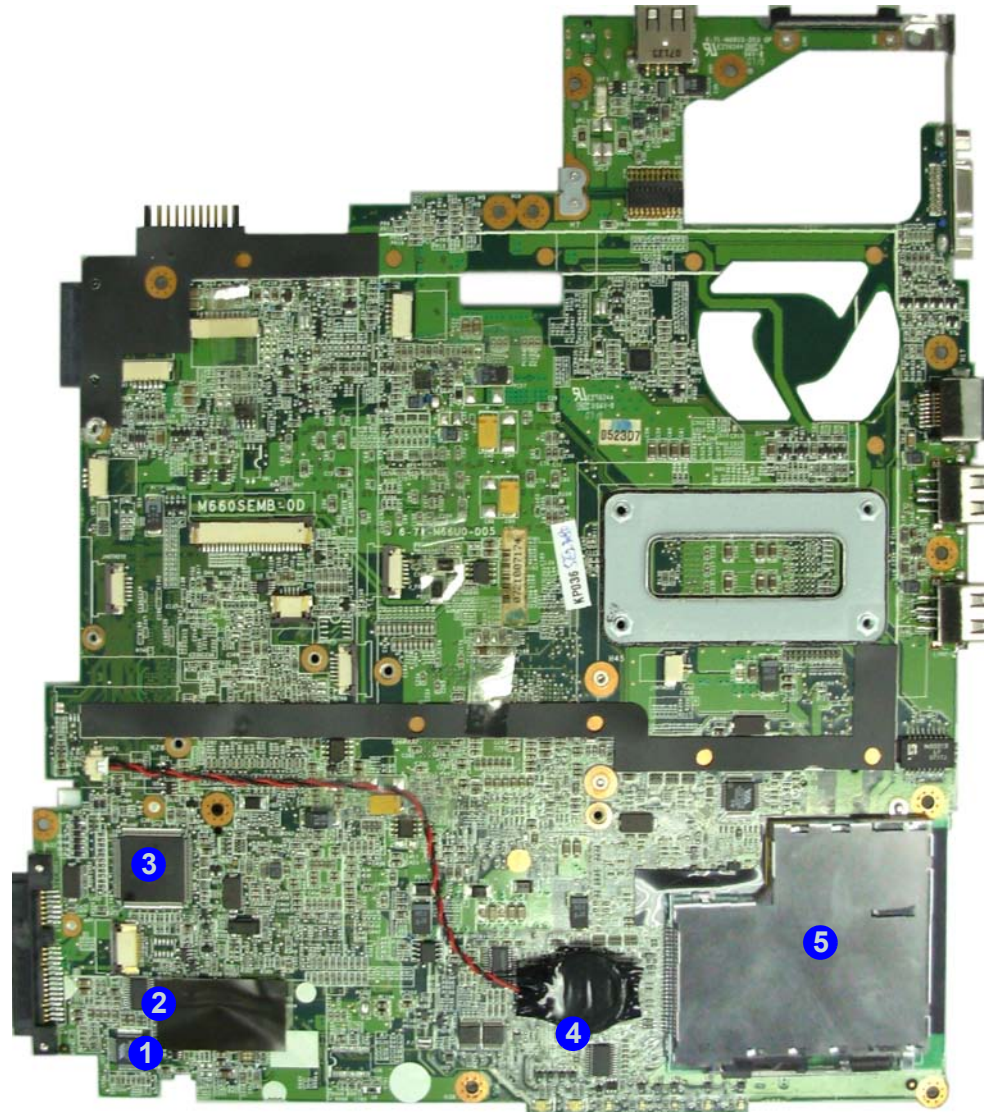

Mainboard Overview - Bottom (Key Parts)

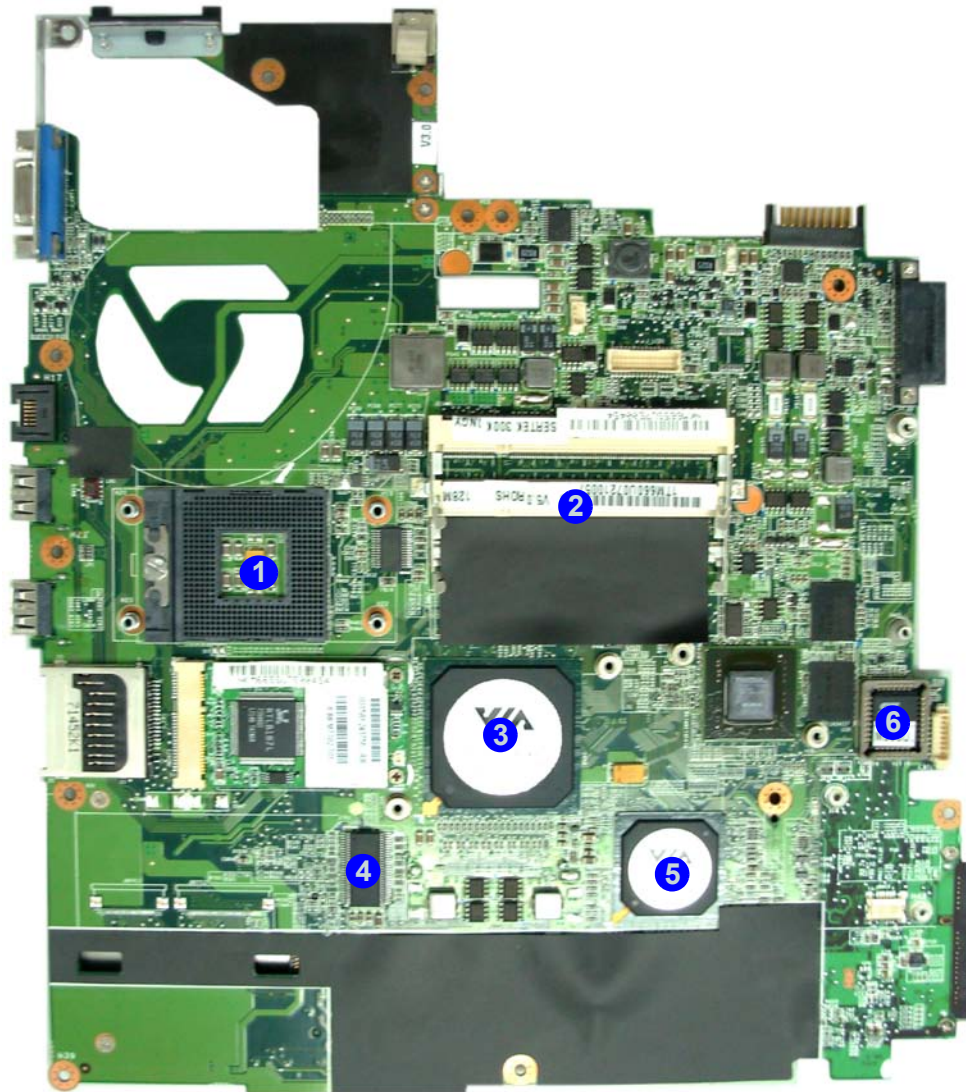


Figure 9
**Mainboard Bottom
Key Parts**

1. CPU Socket (no CPU installed)
2. Memory Slots DDRII So-DIMM
3. Northbridge-VN896
4. ICS Clock Generator
5. Southbridge-VT8237A
6. Flash BIOS ROM

Introduction

Figure 10
**Mainboard Top
Connectors**

1. External Monitor Port
2. RJ-45 LAN Jack
3. USB Port
4. HDD Connector
5. Hotkey Cable Connector
6. Power Hotkey Cable Connector
7. Touch Pad Cable Connector
8. Keyboard Cable Connector
9. Speaker Cable Connector
10. Inverter Cable Connector
11. CCD Cable Connector

Mainboard Overview - Top (Connectors)



Mainboard Overview - Bottom (Connectors)



Figure 11
**Mainboard Bottom
Connectors**

1. DC-In Jack
2. Fan Cable Connector
3. LCD Cable Connector
4. Battery Connector
5. Optical Device Drive Connector
6. Bluetooth Cable Connector
7. Card Reader


Chapter 2: Disassembly



Overview

This chapter provides step-by-step instructions for disassembling the *M660SU/M665SU* series notebook's parts and sub-systems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).



We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, CD device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

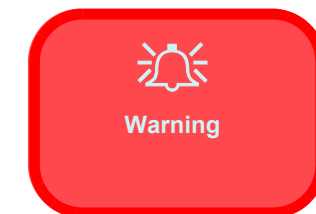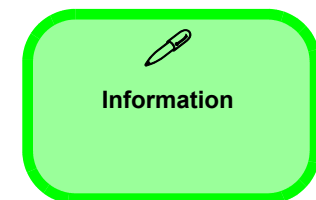

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-borne particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery [page 2 - 5](#)

To remove the HDD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)

To remove the System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the system memory [page 2 - 8](#)

To remove the Processor:

1. Remove the battery [page 2 - 5](#)
2. Remove the processor [page 2 - 10](#)

To remove the Wireless LAN Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the wireless LAN [page 2 - 12](#)

To remove the Modem :

1. Remove the battery [page 2 - 5](#)
2. Remove the modem [page 2 - 13](#)

To remove the Bluetooth:

1. Remove the battery [page 2 - 5](#)
2. Remove the bluetooth [page 2 - 14](#)

To remove the Optical Device:

1. Remove the battery [page 2 - 5](#)
2. Remove the Optical device [page 2 - 15](#)

To remove the Keyboard:

1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 16](#)

Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latches (1 & 2) the direction of the arrow, and hold latch 2 in place.
3. Slide the battery in the direction of the arrow 3.
4. Lift the battery 4 out.


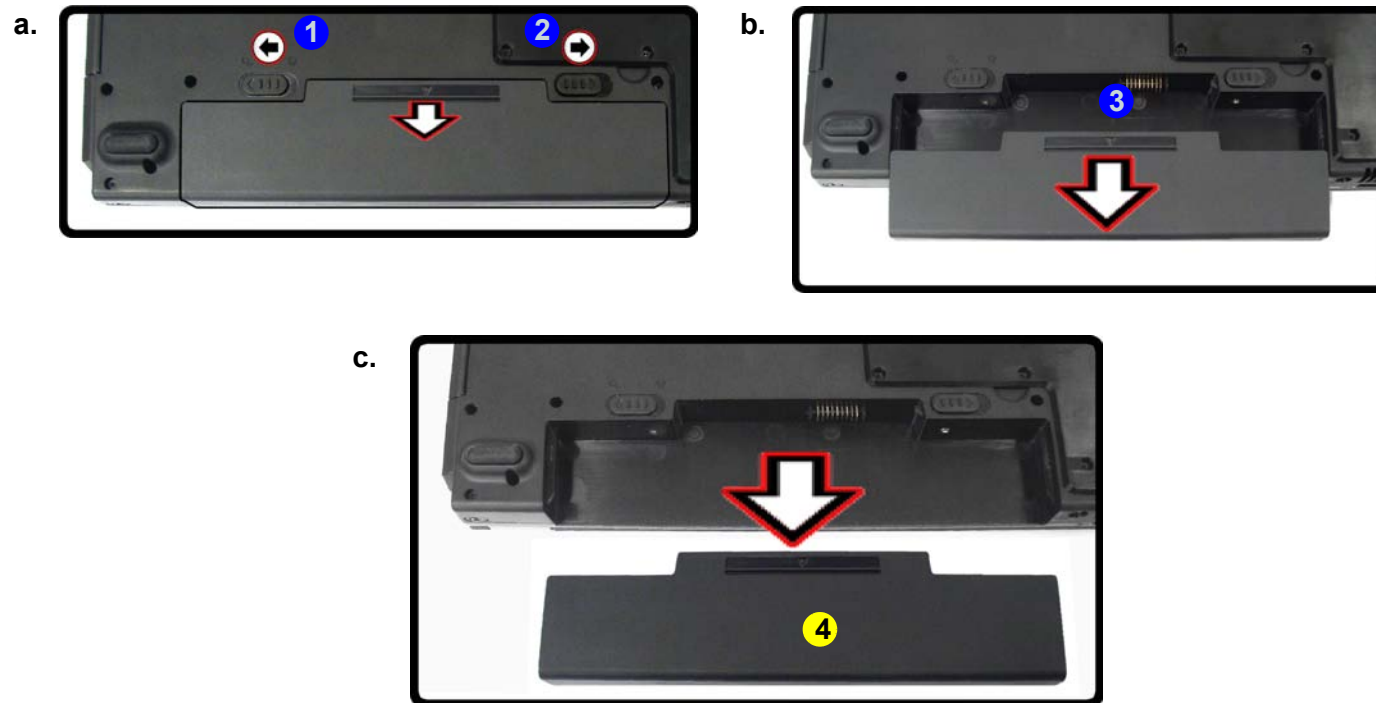


Figure 1
Battery Removal

- a. Slide the 2 latches and hold latch 2 in place.
- b. Slide the battery in the direction of the arrow.
- c. Lift the battery out.

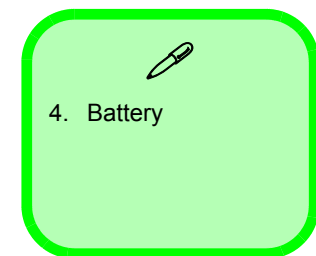

Disassembly

Figure 2
**HDD Assembly
Removal**


- Locate the HDD bay cover and remove the screws.
- Remove the bay cover.

Removing the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Upgrade Process:

- Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
- Locate the hard disk bay cover and remove the screws (1 - 3).
- Remove the bay cover (4).

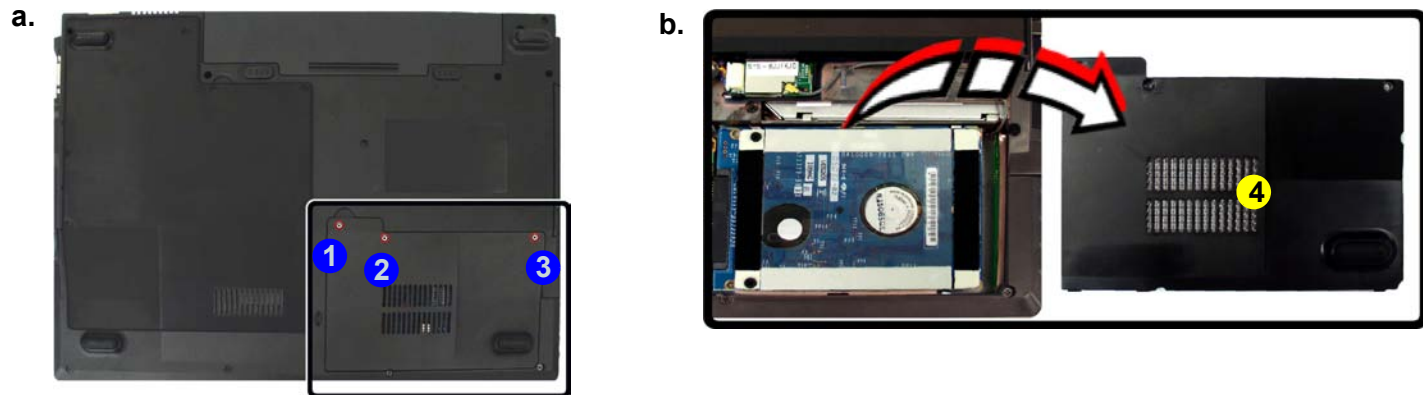

4. HDD Bay Cover

- 3 Screw



HDD System Warning


New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

- Carefully grip the mylar tab **5** and slide the hard disk in the direction of arrow.
- Lift the hard disk up (**Figure d**) in the direction of arrow.
- Remove the screws **6** - **7** and separate the mylar cover **8** from the hard disk **9**.
- Reverse the process to install any new hard disk.

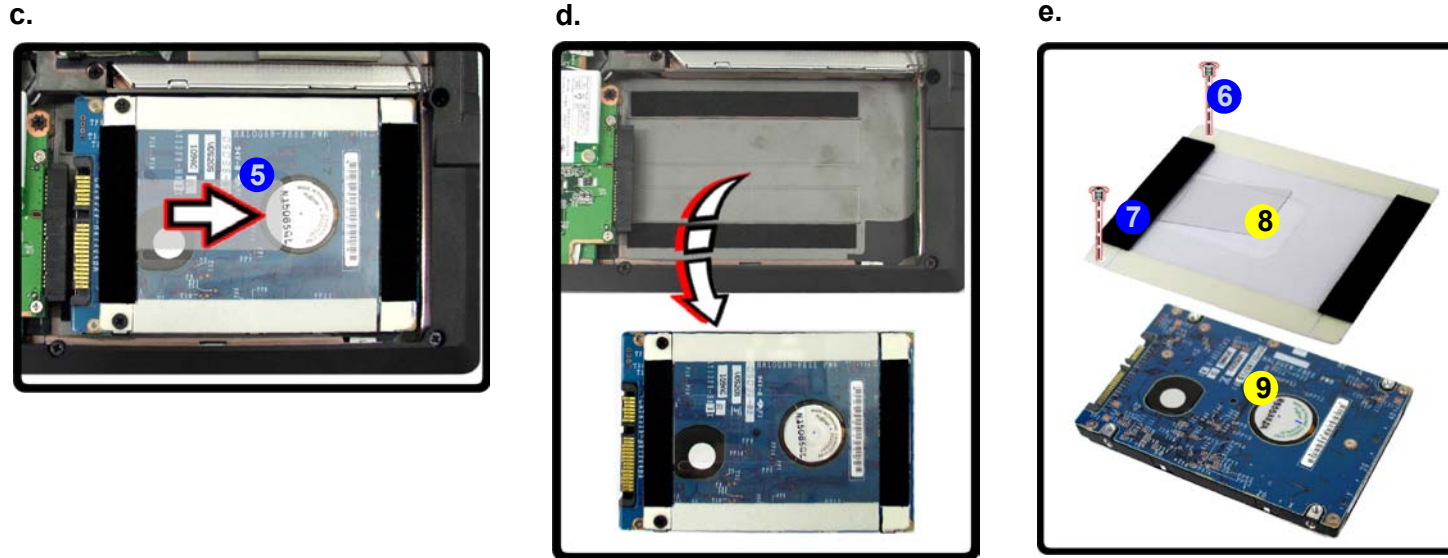

- Figure 3*
**HDD Assembly
Removal Sequence**
- Slide the HDD in the direction of the arrow.
 - Lift the HDD out of the bay.
 - Remove the screws and separate the mylar cover from the HDD.

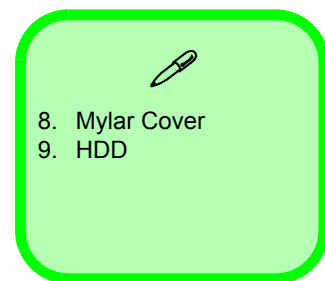


Figure 4
**RAM Module
Removal**



- Remove the screws.
- Remove the cover.

Removing the System Memory (RAM)

The computer has two memory sockets for 200 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting **DDRII** 533/667MHz. The main memory can be expanded up to 2GB. The SO-DIMM modules supported are 256MB, 512MB and 1024MB **DDRII** Modules. The total memory size is automatically detected by the POST routine once you turn on your computer.

Memory Upgrade Process

- Turn **off** the computer, remove the battery ([page 2 - 5](#)).
- Locate the CPU/RAM bay cover, and remove screws **1** - **7**.
- Remove the bay cover **8**.
- The RAM will be visible at point **9** on the mainboard.

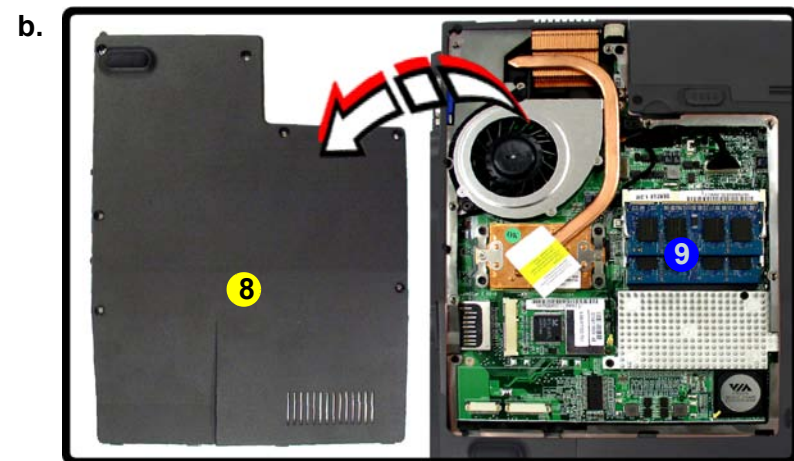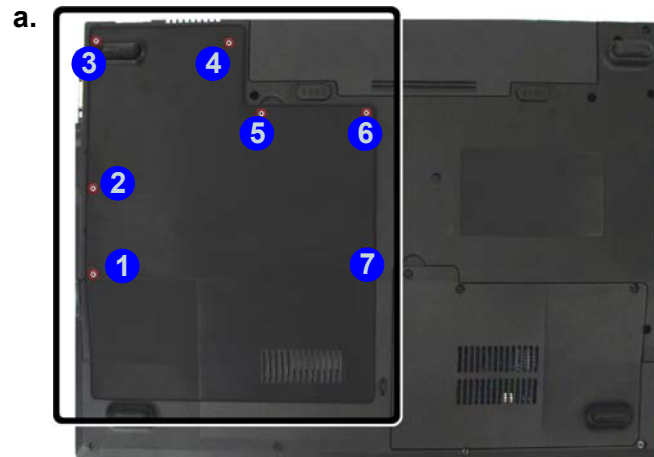

Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.





8. CPU/RAM Bay Cover

- 7 Screws

Figure 5
Memory Removal Sequence

- c. Push the release latch(es).
- d. Remove the module(s).

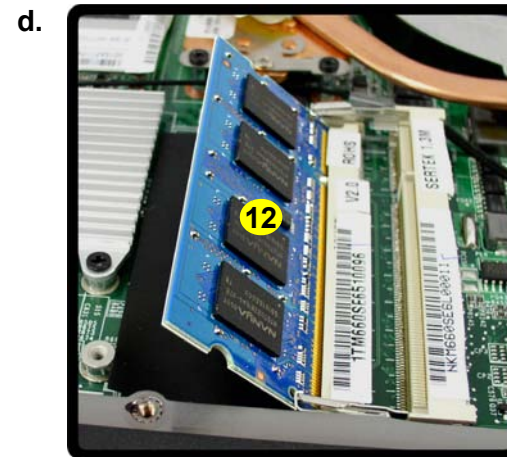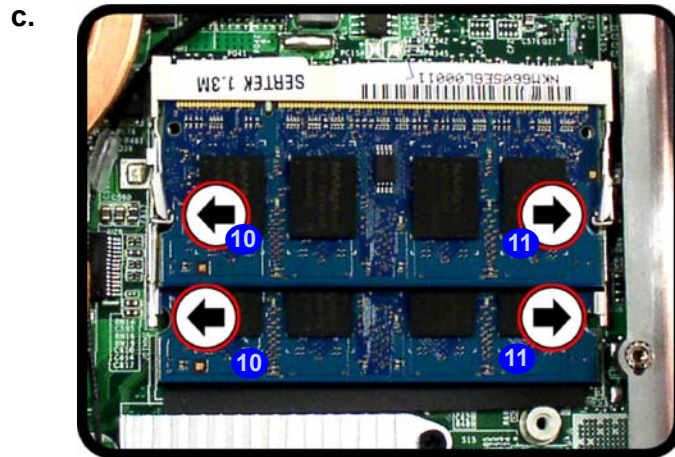

- 7. Push the latches to release the second module if necessary.
- 8. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
- 9. The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE IT**; it should fit without much pressure.
- 10. Press the module down towards the mainboard until the slot levers click into place to secure the module.
- 11. Replace the bay cover and the screws (see [page 2 - 8](#)).
- 12. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.



12 RAM Module(s)

Disassembly




Figure 6

Processor Removal

- Remove the cover and locate the heat sink.
- Remove the 4 screws in the order indicated.
- Remove the heat sink.

Removing the Processor

- Turn off the computer, and remove the battery ([page 2 - 5](#)) and the CPU/RAM bay cover ([page 2 - 8](#)).
- The CPU heat sink will be visible at point **1** on the mainboard.
- Remove screws **2 - 5** from the heat sink in the order indicated.
- Carefully lift up the heat sink **6** ([Figure c](#)) off the computer.

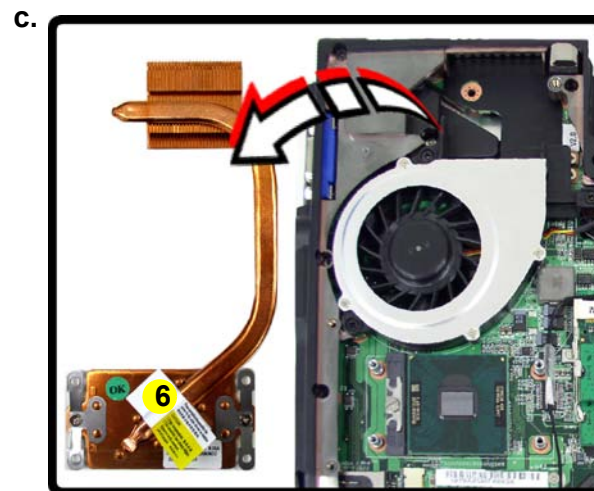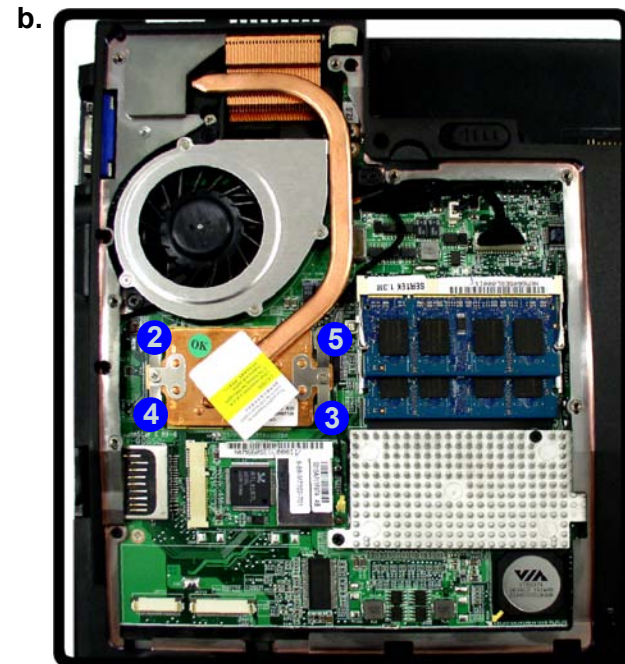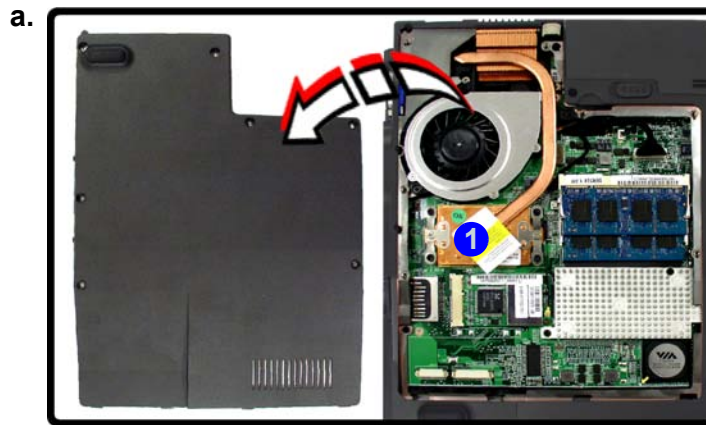

6. Heat Sink

- 4 Screws


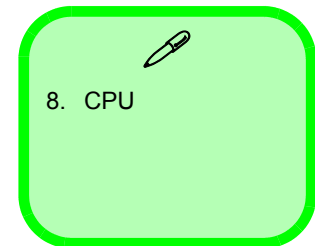
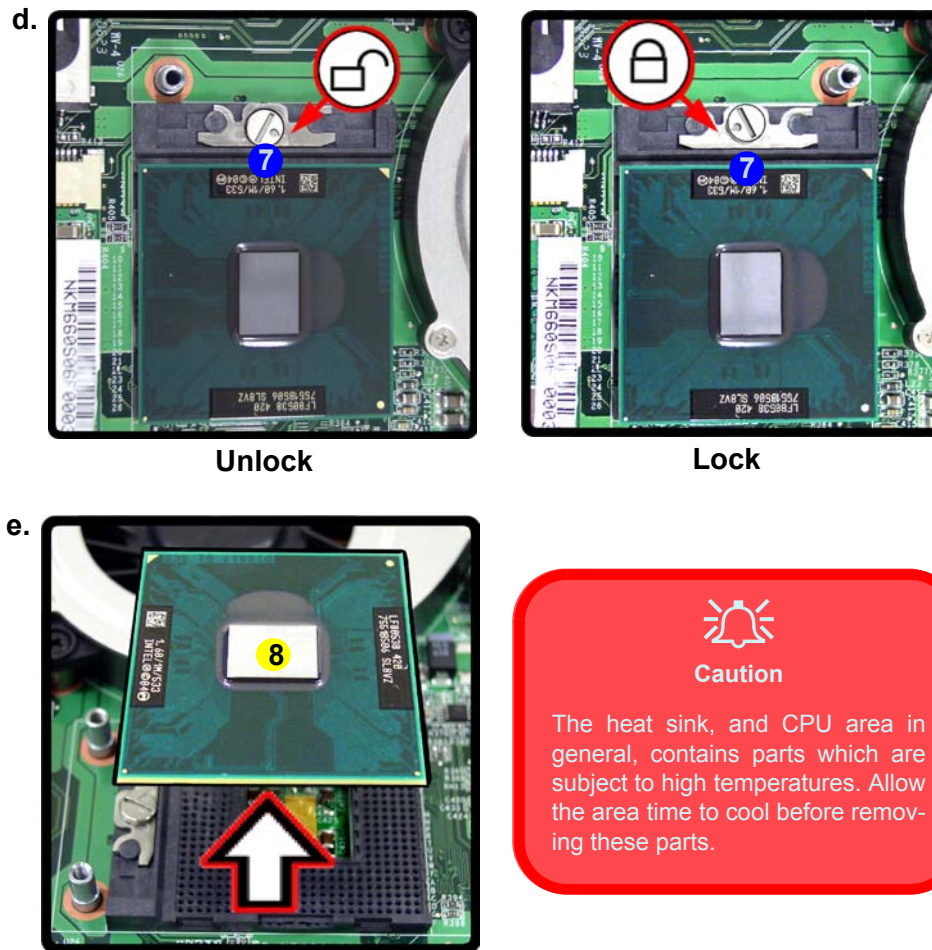
- Turn the release latch **7** towards the unlock symbol , to release the CPU (*Figure d*).
- Carefully (it may be hot) lift the CPU **8** up out of the socket (*Figure e*).
- Reverse the process to install a new CPU.
- When re-inserting the CPU, pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!).

Figure 7
Processor Removal
(cont'd)

- Turn the release latch to unlock the CPU.
- Lift the CPU out of the socket.




Disassembly

Figure 8
**Wireless LAN
 Module Removal**


- a. Remove the cover and locate the heat sink.
- b. Disconnect the cable and remove the 2 screws.
- c. The WLAN module will pop up.
- d. Remove the WLAN module.

Note: Make sure you reconnect the antenna cable to the “Main” socket (*Figure b*).

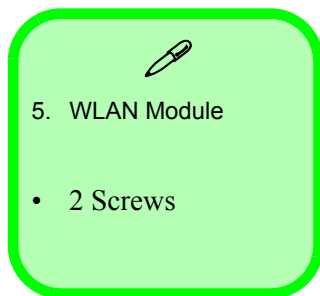

Removing the Wireless LAN Module

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)) and the module bay cover ([page 2 - 8](#)).
1. The Wireless LAN module will be visible at point **1** on the mainboard.
2. Carefully disconnect cable **2**, then remove the screws **3** - **4** from the module socket.
3. The wireless LAN module **5** will pop-up.
4. Lift the wireless LAN module (*Figure d*) up and off the computer.

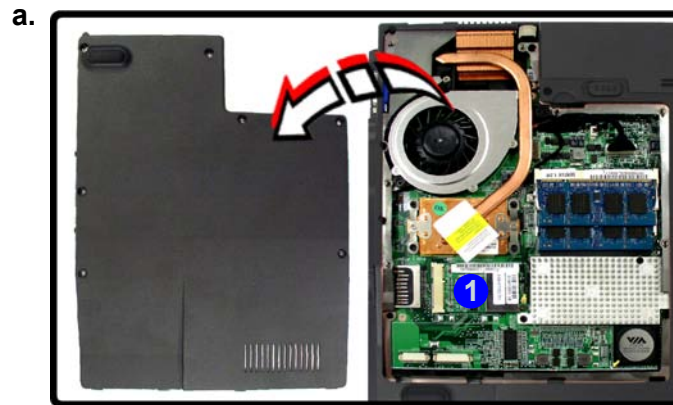


Removing the Modem

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), and remove the hard disk bay cover ([page 2 - 6](#)).
2. The modem will be visible at point **1** on the mainboard.
3. Remove screws **2** - **3** from the modem module.
4. Lift the modem up off the socket **4** and separate the modem from the connector **5**.
5. Lift the modem **6** up and off the computer.

Figure 9
Modem Removal

- a. Remove the cover and locate the modem.
- b. Remove the screws.
- c. Lift the modem up off the socket and disconnect the connector.
- d. Lift the modem out.

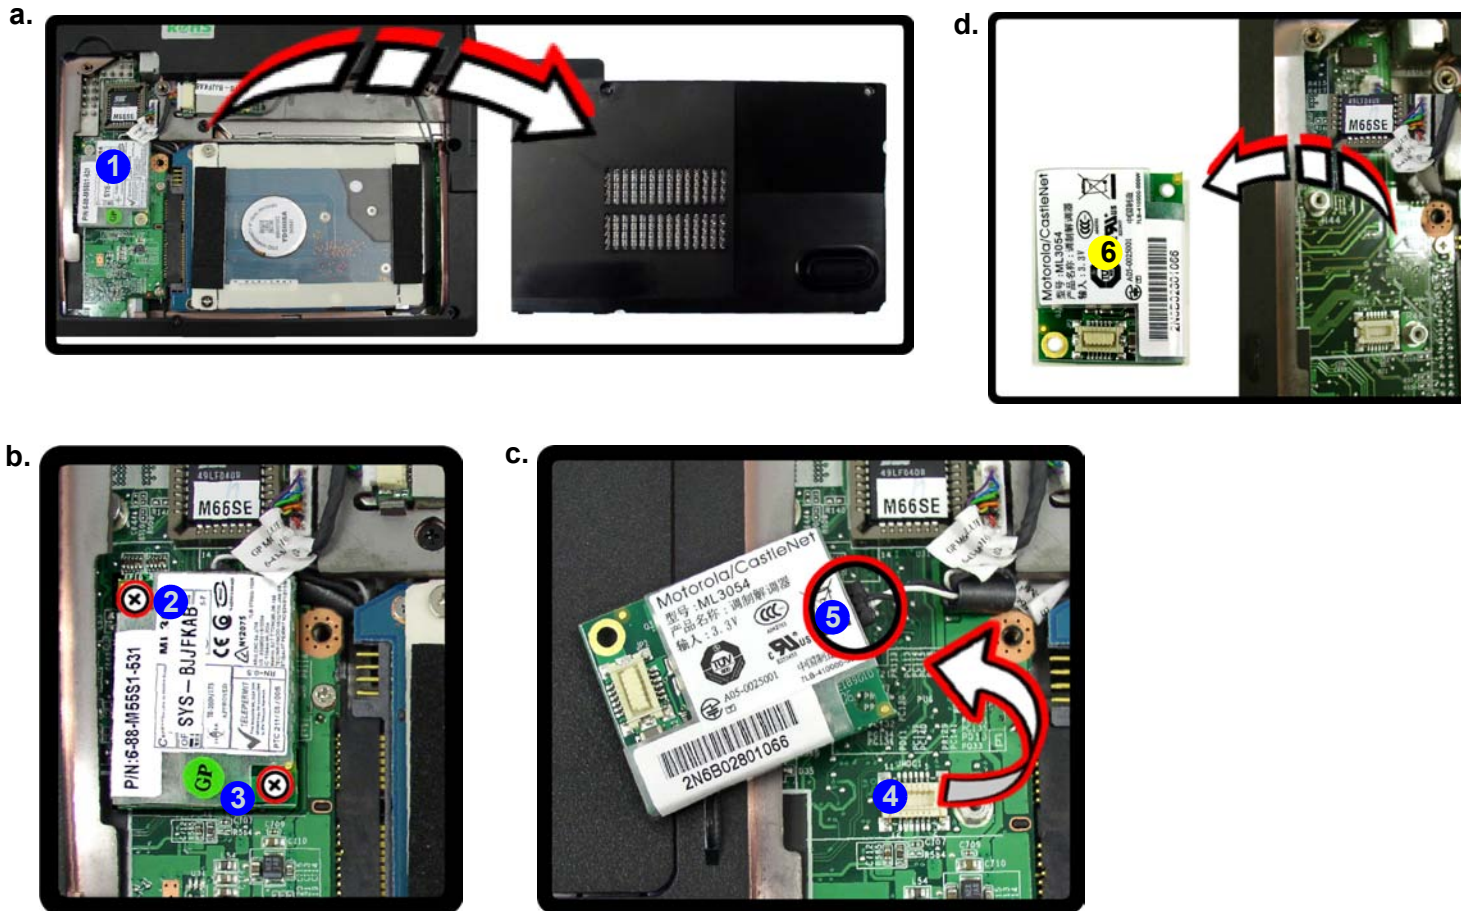

✎

6. Modem

- 2 Screws


Disassembly

Figure 10
Bluetooth Removal

- a. Remove the cover and locate the Bluetooth module.
- b. Separate the the module from connector and disconnect the cable.
- c. Remove Bluetooth module.

Removing the Bluetooth Module

1. Turn off the computer, remove the battery ([page 2 - 5](#)) and remove the hard disk bay cover ([page 2 - 6](#)).
2. The Bluetooth module will be visible at point ① on the mainboard.
3. Carefully separate the module from the connector ② and disconnect the cable ③.
4. Lift the Bluetooth module ④ ([Figure c](#)) up and off the computer.

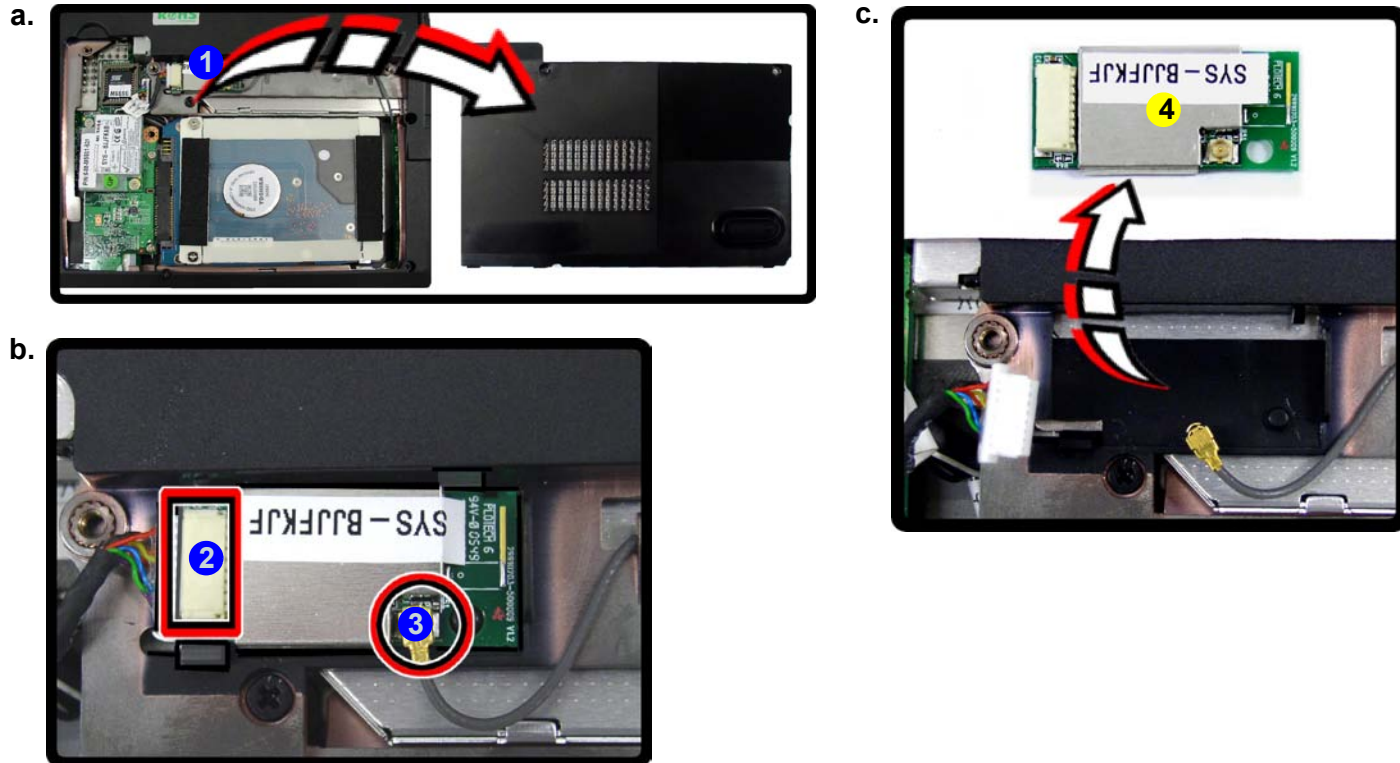


4. Bluetooth Module


Removing the Optical (CD/DVD) Device

1. Turn off the computer, remove the battery ([page 2 - 5](#)).
2. Locate the hard disk bay cover and remove screws (1 - 3).
3. Remove the bay cover (4).
4. Remove the screw at point (5), and use a screwdriver to carefully push out the optical device at point (6).
5. Insert the new device and carefully slide it into the computer (the device only fits one way. DO NOT FORCE IT; The screw holes should line up).
6. Restart the computer to allow it to automatically detect the new device.

Figure 11
Optical Device Removal

- a. Remove the screws.
- b. Remove the cover.
- c. Remove the screw and push the optical device out off the computer at point 6.
- d. Remove the optical device.

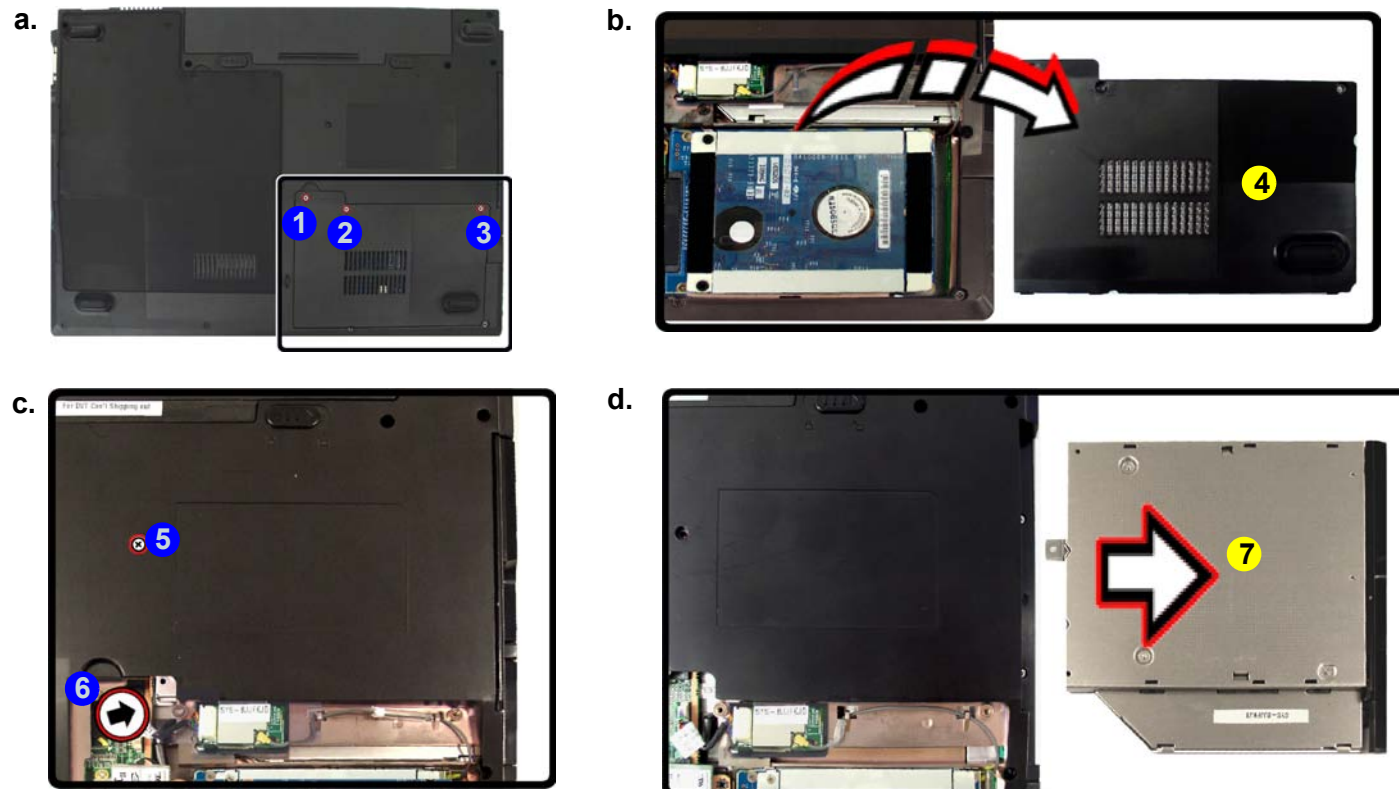



4 HDD Bay Cover
7 Optical Device

- 4 Screws


Disassembly

Figure 12
Keyboard Removal

- a. Press the three latches to release the keyboard.
- b. Lift the keyboard up and disconnect the cable from the locking collar.
- c. Remove the keyboard.

Removing the Keyboard

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Press the **three** keyboard latches at the top of the keyboard to elevate the keyboard from its normal position (you may need to use a small screwdriver to do this).
3. Carefully lift the keyboard up, being careful not to bend the keyboard ribbon cable ([Figure b](#)).
4. Disconnect the keyboard ribbon cable **4** from the locking collar socket **5**.
5. Carefully lift up the keyboard **6** ([Figure c](#)) off the computer.

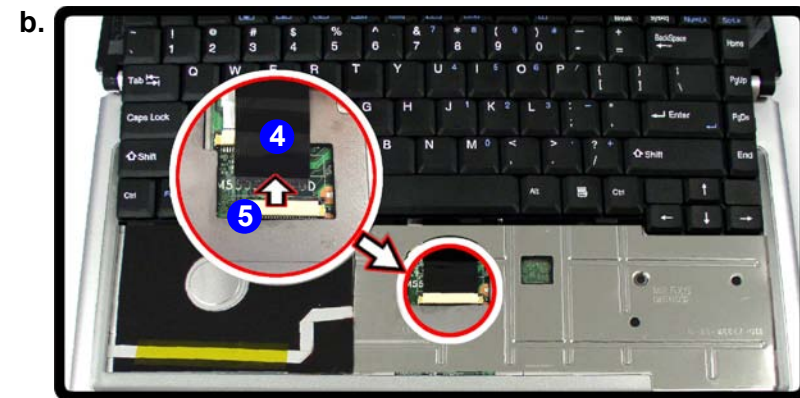

Keyboard Tabs



Re-Inserting the Keyboard

When re-inserting the keyboard firstly align the **five** keyboard tabs at the bottom of the keyboard with the slots in the case.



6. Keyboard

Appendix A:Part Lists

This appendix breaks down the *M660SU/M665SU* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A - 1
**Part List Illustration
Location**

Part	Pages#
Top with Fingerprint - (M660SU)	<i>page A - 3</i>
Top without Fingerprint - (M660SU)	<i>page A - 4</i>
Top with Fingerprint - (M665SU)	<i>page A - 5</i>
Top without Fingerprint - (M665SU)	<i>page A - 6</i>
Bottom - (M660SU/M665SU)	<i>page A - 7</i>
LCD - (M660SU/M665SU)	<i>page A - 8</i>
CDRW - (M660SU/M665SU)	<i>page A - 11</i>
Combo - (M660SU/M665SU)	<i>page A - 10</i>
DVDRW - (M660SU/M665SU)	<i>page A - 11</i>

Top with Fingerprint (M660SU)

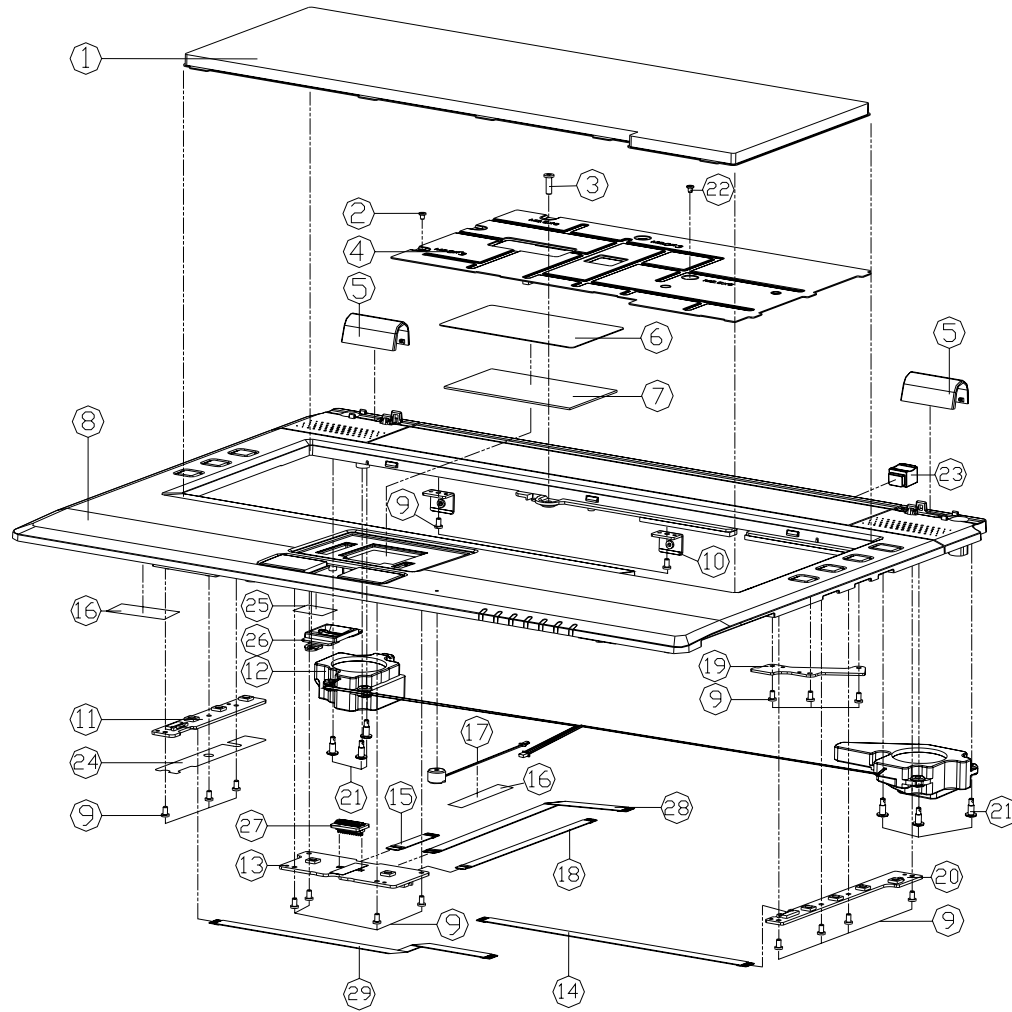



Figure A - 1
Top with Finger-
print (M660SU)

ITEM	PART NAME	PART NO	REMARK
1	KEY BOARD(OPTION)	6-80-M55G0-011-1	
2	SCREW M2*3L KI NI ICT GY-PATCH	6-35-B1120-3RE	
3	SCREW M2.5*6L KI BK/Z NY ICT	6-35-B6125-BRD	
4	KEYBOARD SHIELDING M660JE	6-33-M66E7-010	
5	HINGE COVER FOR M660N	6-42-M66N2-011	
6	TRACK PAD MYLAR (KZ) 200805 2835 M55G	6-40-M55G2-025	
7	TOUCH PAD TM61P0ZIR389 M660JE	6-49-M66E2-010	
8	REAR REINFORCE BRACKET M660JE	6-33-M66N2-031	
9	SCREW M2*3L KI NI ICT NY	6-35-B1120-3RA	
10	REAR REINFORCE BRACKET	6-33-M66N2-031	
11	HOTKEY LT BOARD	6-77-M66NS-D11	
12	SPEAKER-L/R 25MMØBH 15W 40MM 105MM/240M	6-23-5M66N-012	
13	CLICK BOARD	6-77-M66U2-D02	
14	FFC CABLE FOR PWR-HOTKEY 6P PITCH=1.0MM	6-43-M66N0-010	
15	FFC CABLE FOR TOUCHPAD BOARD 12P PITCH=0.5	6-43-M66N0-030	
16	TAPE MYLAR (C),MYLAR M550J	6-40-M55J2-030	
17	MICPHONE 6MM*3.5E M660S-FIL-UD 10V2V 22K	6-23-EM55G-010	
18	FFC CABLE FOR CLICK BOARD 4P PITCH=1.0MM	6-43-M66N0-020	
19	CABLE ALIGN BRACKET	6-33-M66N2-040	
20	POWER HOT BOARD	6-77-M66NS-D01	
21	SCREW FOR SPEAKER M2	6-35-Z0Z20-000	
22	SCREW M2.5*5L KI BK/Z ICT NY	6-35-B6125-5RA	
23	MINI-1394 RUBBER	6-47-M66SP-010	
24	MYLAR (FR-83,77) 2411.250MM DR 70P M660N	6-40-M66NS-090	
25	TOUCH PAD GRIND AL FOLIOGRAPH FOR CHIA M55G	6-47-M55G2-020	
26	FINGER PRINT COVER PC+ABS M660N	6-42-M66N2-0B0	
27	FINGERPRINT BOARD V2.0 FOR M660SU	6-77-M66UF-D02	
28	FFC CABLE FOR FINGERPRINT 6P PITCH=1.0MM	6-43-M66E6F-010	
29	FFC CABLE FOR HOTKEY 6P PITCH=1.0MM	6-43-M66E60-010	

A.Part Lists

Top without Fingerprint (M660SU)

Figure A - 2
Top without Fingerprint (M660SU)

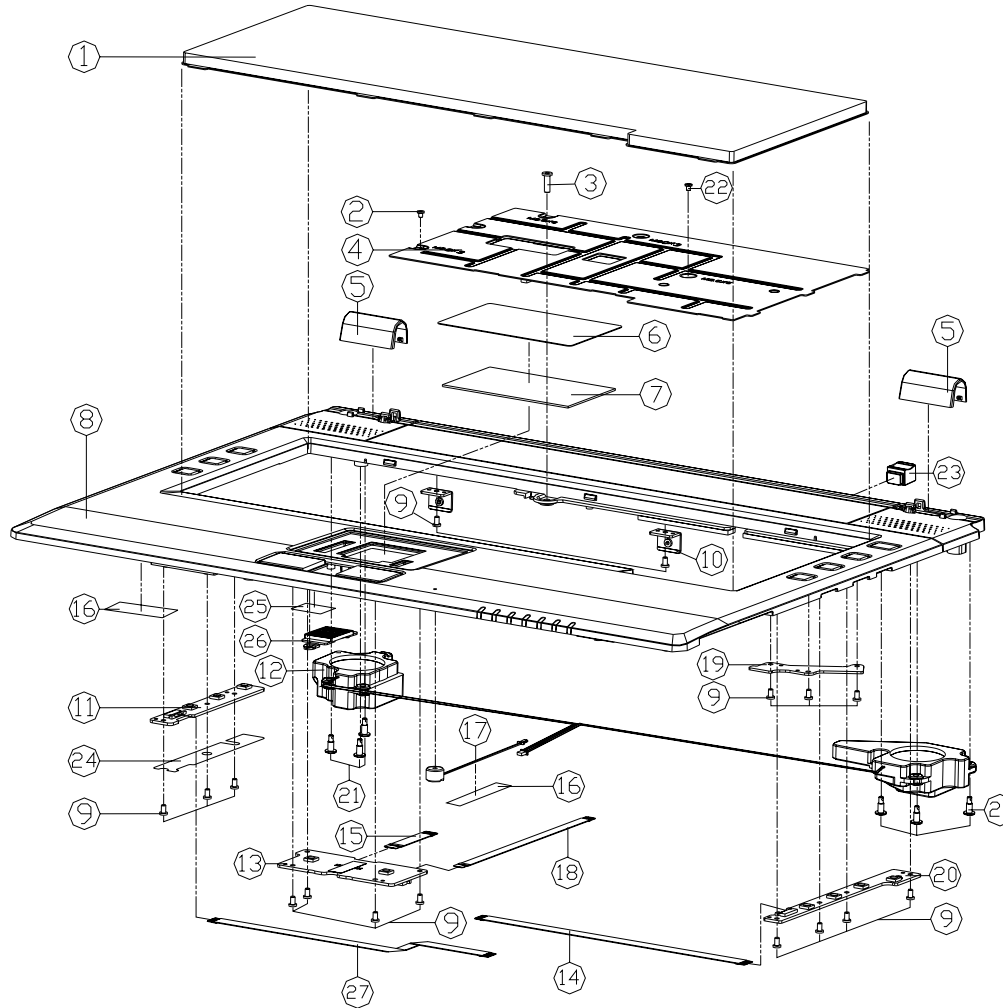

ITEM	PART NAME	PART NO	REMARK
1	KEYBOARD(OPTION)	6-80-M550-01-1	
2	SCREW M2*3L KI NI ICT GTY-PATCH	6-35-B1120-3RE	
3	SCREW M2.5*8L KI BK/Z NY ICT	6-35-B6125-8R0	
4	KEYBOARD SHIELDING M660JE	6-33-M6627-010	
5	HINGE COVER FOR M660N	6-42-M66N2-011	
6	TOUCH PAD NYLAR (C)MYLAR M550J	6-40-M55G2-025	
7	TOUCH PAD TM61PDZIR389 M660JE	6-49-M66E2-010	
8	TOUCH PAD NYLAR (C)MYLAR M550J	6-39-M66U2-020	
9	SCREW M2*3L KI NI ICT NY	6-35-B1120-3RA	
10	REAR REINFORCE BRACKET	6-33-M66N2-031	
11	HOTKEY LT BOARD	6-77-M66NS-D11	
12	SPEAKER-L/R 25*10*8H 15W 40MM 185MM/24MM	6-23-SM66N-012	
13	CLICK BOARD	6-77-M66U2-D02	
14	FFC CABLE FOR PWR-HOTKEY 6P PITCH=1.0MM	6-43-M66N0-010	
15	FFC CABLE FOR TOUCHPAD BOARD 12P PITCH=0.5	6-43-M66N0-030	
16	TAPE NYLAR (C)MYLAR M550J	6-40-M55J2-030	
17	MICPHONE 6MM*35CM*6.05-FIL-10 10V/22V 22K	6-23-EM55G-010	
18	FFC CABLE FOR CLICK BOARD 4P PITCH=1.0MM	6-43-M66N0-020	
19	CABLE ALIGN BRACKET	6-33-M66N2-040	
20	POWER HOT BOARD	6-77-M66NS-D01	
21	SCREW FOR SPEAKER M2	6-35-Z0220-000	
22	SCREW M2.5*5L KI BK/Z ICT NY	6-35-B6125-5RA	
23	MINI-1394 RUBBER	6-47-M66SP-010	
24	NYLAR (FR-8377)M4*11.25MM (FR 750F) M660N	6-40-M66NS-090	
25	TOUCH PAD GRAB A. FOLIO2H40 FOR ORAL M550J	6-47-M55G2-020	
26	FINGER PRINT FLAT COVER PC+ABS M660N	6-42-M66N2-040	
27	FFC CABLE FOR HOTKEY 6P PITCH=1.0MM	6-43-M66E0-010	

A - 4 Top without Fingerprint (M660SU)

Top with Fingerprint (M665SU)

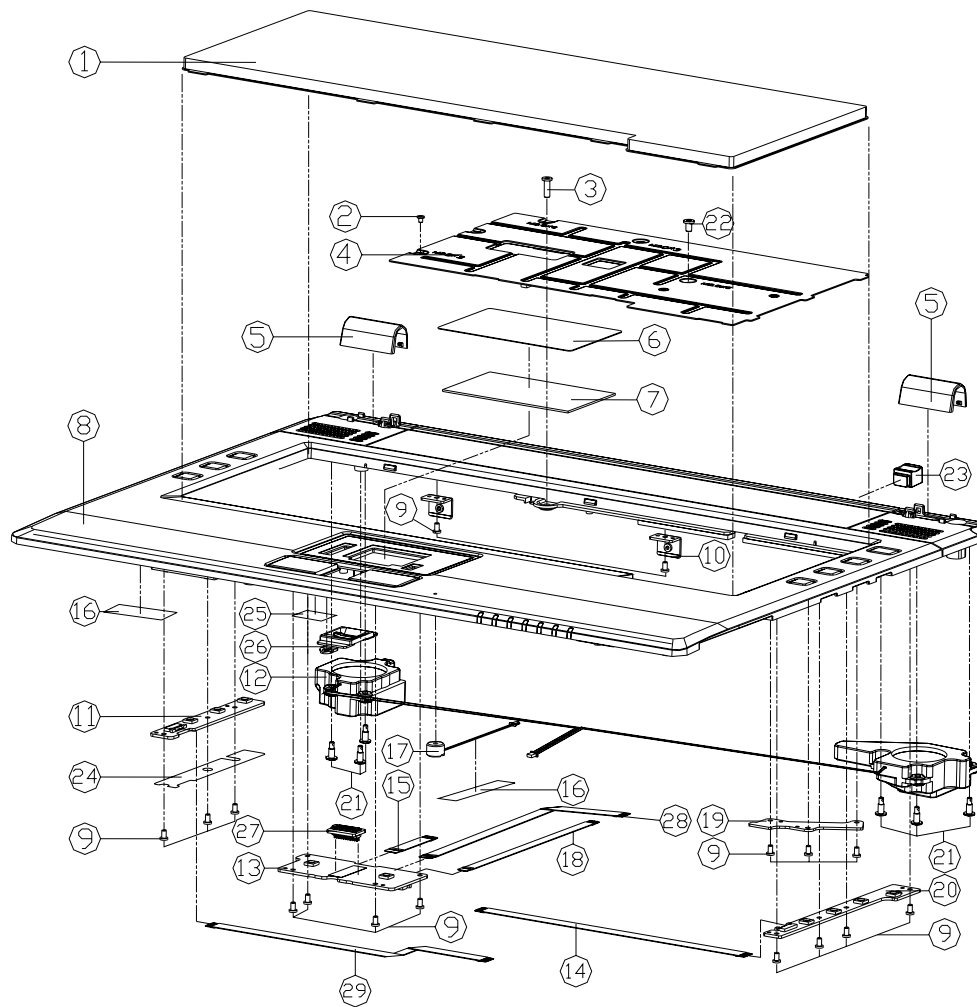



Figure A - 3
Top with Finger-
print (M665SU)

ITEM	PART NAME	PART NO	REMARK
1	KEYBOARD(OPTION)	6-80-M55G0-011-1	
2	SCREW M2*3L KI NI ICT GY-PATCH 無鉛	6-35-B1120-3RE	
3	SCREW M2.5*3L KI BK/Z NY ICT 無鉛	6-35-B6125-8R0	
4	KEYBOARD SHIELDING M660JE 無鉛	6-33-M66E7-010	
5	HINGE COVER FOR M665N 無鉛	6-42-M6652-010	
6	TRACK PAD MYLAR (C)MYLAR M550J 無鉛	6-40-M55G2-025	
7	TOUCH PAD TM61PZ1R389 M660JE 無鉛	6-49-M66E2-010	
8	TOP CASE MODULE M665N (OPTION) 無鉛	6-39-M6652-014	
9	SCREW M2*3L KI NI ICT NY 無鉛	6-35-B1120-3RA	
10	REAR REINFORCE BRACKET (OPTION) 無鉛	6-33-M66N2-031	
11	HOTKEY LT BOARD	6-77-M66NS-D11	
12	SPEAKER-L/R 250MM*15W 40MM 185MM*24MM	6-23-SM66N-012	
13	CLICK BOARD W/D FP V1.0	6-77-M66U2-D01-1	
14	FFC CABLE FOR PWR-HOTKEY 6P PITCH-1.0MM 無鉛	6-43-M66N0-010	
15	FFC CABLE FOR TOUCHPAD BOARD 12P PITCH-0.5	6-43-M66N0-030	
16	TAPE MYLAR (C)MYLAR M550J 無鉛	6-40-M55J2-030	
17	MICPHONE 6MM*35CM665S-FIL-10 10V-2V 22K	6-23-EM55G-010	
18	FFC CABLE FOR CLICK BOARD 4P PITCH-1.0MM	6-43-M66N0-020	
19	CABLE ALIGN BRACKET 無鉛	6-33-M66N2-040	
20	POWER HOT BOARD	6-77-M66NS-D01	
21	SCREW FOR SPEAKER M2 無鉛	6-35-Z0220-000	
22	SCREW M2.5*3L KI BK/Z ICT NY 無鉛	6-35-B6125-5RA	
23	MINI-1394 RUBBER 無鉛	6-47-M66SP-010	
24	MYLAR (FR-837)24HIT, 180SHIN (FR-750) M66N 無鉛	6-40-M66NS-090	
25	TOUCH PAD GRABAL FIL(22*4) FOR ORAL M66G 無鉛	6-47-M55G2-020	
26	FINGER PRINT COVER PC+ABS M665N 無鉛	6-42-M6652-080	
27	FINGERPRINTER BOARD V1.0 FOR M665SU 無鉛	6-77-M66UF-D01	
28	FFC CABLE FOR FINGERPRINT 6P PITCH-1.0MM 無鉛	6-43-M66E6F-010	
29	FFC CABLE FOR HOTKEY 6P PITCH-1.0MM 無鉛	6-43-M66E60-010	

A.Part Lists


Top without Fingerprint (M665SU)

Figure A - 4
Top without Fingerprint (M665SU)

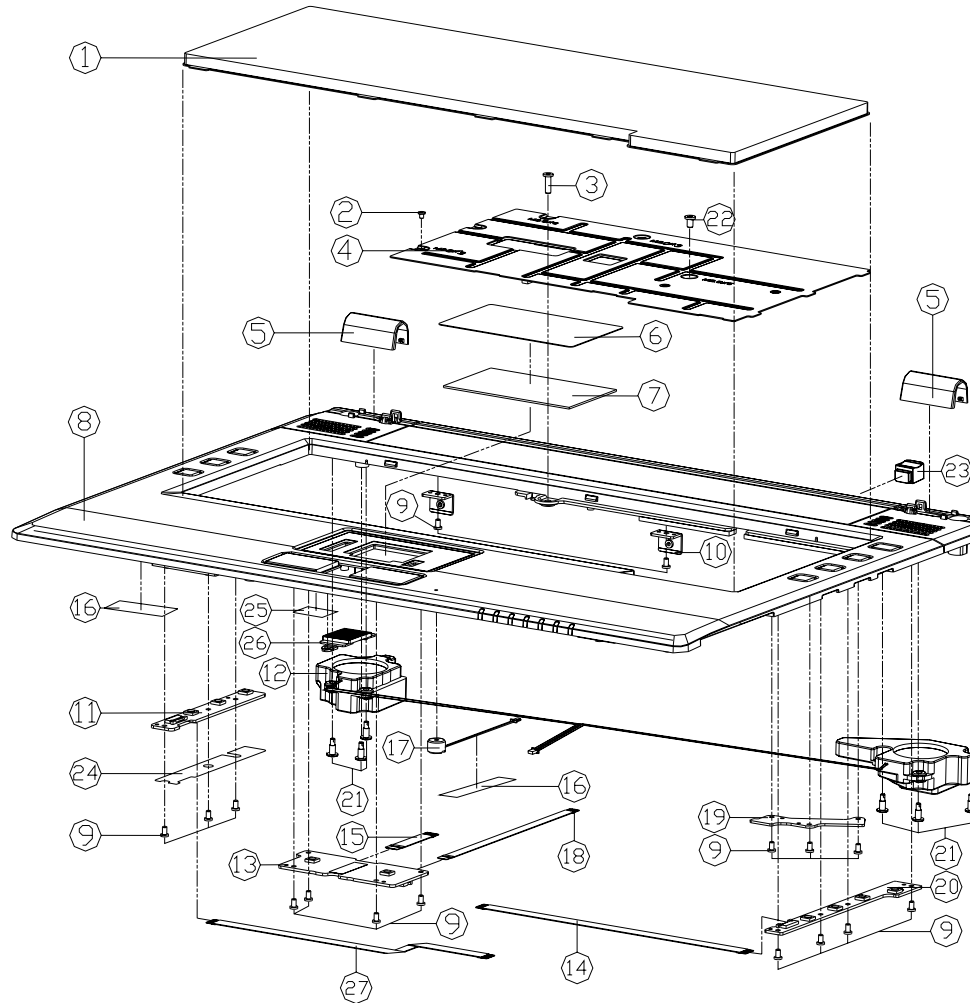

ITEM	PART NAME	PART NO	REMARK
1	KEYBOARD(OPTION)	6-80-M55G0-011-1	
2	SCREW M2*3L KI NI ICT G1Y-PATCH 無鉛	6-35-B1120-3RE	
3	SCREW M2.5*BL KI BK/Z NY ICT 無鉛	6-35-B6125-8R0	
4	KEYBOARD SHIELDING M660JE 無鉛	6-33-M66E7-010	
5	HINGE COVER FOR M665N 無鉛	6-42-M6652-010	
6	TRACK PAD MYLAR (A)之加強版 M665 M55G 無鉛	6-40-M55G2-025	
7	TOUCH PAD TM6IPDZIR389 M660JE 無鉛	6-49-M66E2-010	
8	TOP CASE MODULE M665N (無印) 無鉛	6-39-M6652-014	
9	SCREW M2*3L KI NI ICT NY 無鉛	6-35-B1120-3RA	
10	REAR REINFORCE BRACKET (有印) 無鉛	6-33-M66N2-031	
11	HOTKEY LT BOARD	6-77-M66NS-D11	
12	SPEAKER-L/R 25D*108*15W 40MM 185MM/24MM	6-23-5M66N-012	
13	CLICK BOARD W/D FP V2.0	6-77-M66U2-D02-1	
14	FTC CABLE FOR PWR-HOTKEY 6P PITCH:1.0MM 無鉛	6-43-M66N0-010	
15	FTC CABLE FOR TOUCHPAD BOARD 10P PITCH:0.5 無鉛	6-43-M66N0-030	
16	TAPE MYLAR (C)MYLAR M550J 無鉛	6-40-M55J2-030	
17	MICROPHONE 6MM*35MM*025-FIL-10 10V-2V 22K	6-23-EM55G-010	
18	FTC CABLE FOR CLICK BOARD 4P PITCH:1.0MM 無鉛	6-43-M66N0-020	
19	CABLE ALIGN BRACKET 無鉛	6-33-M66N2-040	
20	POWER HOT BOARD	6-77-M66NS-D01	
21	SCREW FOR SPEAKER M2 無鉛	6-35-Z0Z20-000	
22	SCREW M2.5*SL KI BK/Z ICT NY 無鉛	6-35-B6125-SRA	
23	MINI-1394 RUBBER 無鉛	6-47-M66SP-010	
24	MYLAR 6P-827H*040L*025 SOIN (B) FOR T501 M66N 無鉛	6-40-M66NS-090	
25	TOUCH PAD GRABAL FTL22*40 FOR ORAL M55G 無鉛	6-47-M55G2-020	
26	FINGER PRINT FLAT COVER PC-ABS M665N 無鉛	6-42-M6652-0A0	
27	FTC CABLE FOR HOTKEY 6P PITCH:1.0MM 無鉛	6-43-M6E60-010	

Bottom (M660SU/M665SU)

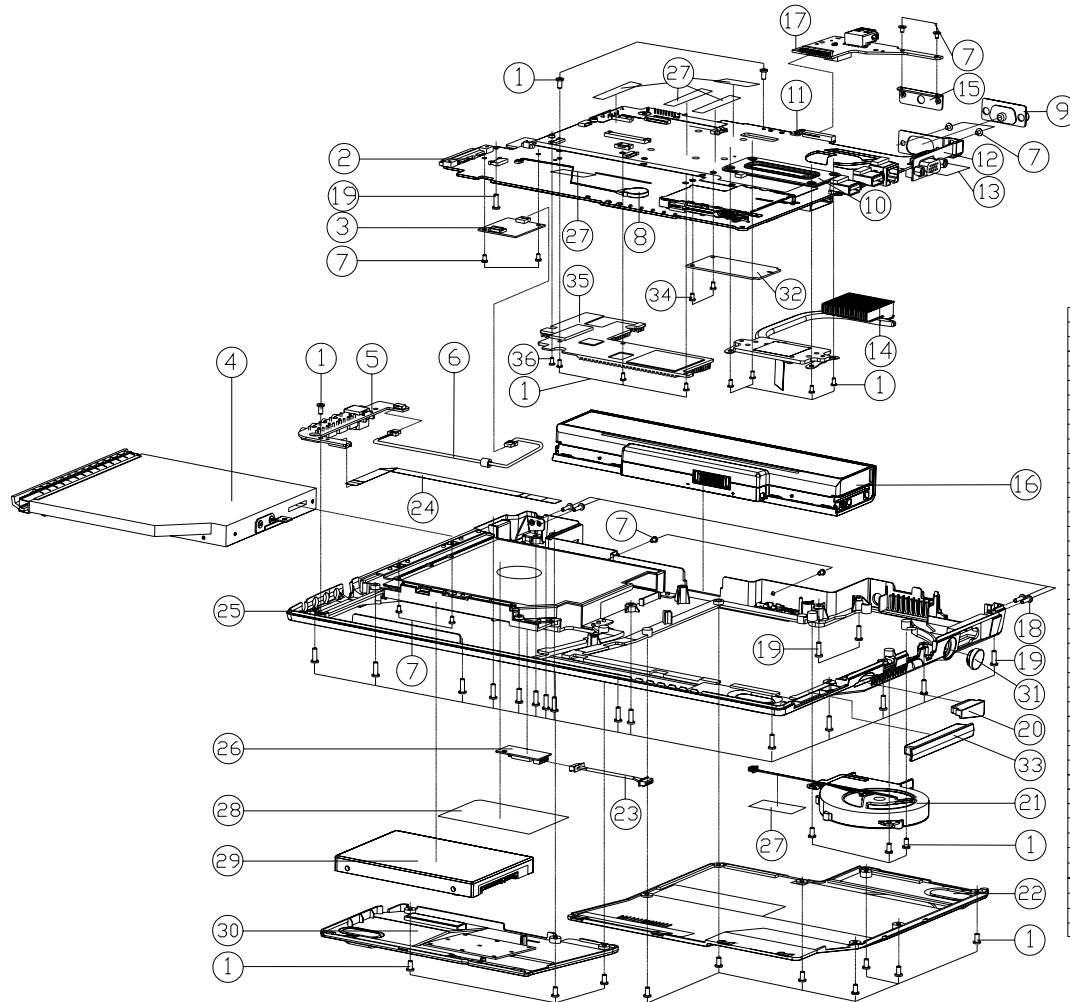


ITEM	PART NAME	PART NO	REMARK
1	SCREW M2.5xL KI BK/Z ICT NY	6-35-B6125-SRA	
2	MAIN BOARD V D2.0 M660SU	6-77-M66UJ-002	
3	HEAT SINK FOR VIDEO SOLUTION M660SU	6-88-M66S1-020	
4	HEAT SINK FOR VIDEO SOLUTION M660SU	6-88-M66S1-031	
5	DIVIDUAL RW (SUPER MULTI BK DSI)	6-79-M66ND-040	
6	DIVIDUAL RW (SUPER MULTI BK DSI)	6-79-M66UJ-010	
7	CORD 24X 15T 15-1420D ASSY M660SU	6-79-M66UX-010	
8	CORD 24X 15T 15-1420D ASSY M660SU	6-79-M66NX-000	
9	AUDIO BOARD V D1.0 M660SU	6-77-M66UB-001	
10	MDC CABLE 2P AWG30 M660SU	6-43-M66N0-050	
11	SCREW M2xL KI NI ICT GY-PATCH	6-35-B1120-SRE	
12	BAT 2000 mAh V D1.0 M660SU	6-23-22015-F39	
13	SERIAL-PORT RUBBER COVER	6-47-M66SS-011	
14	CPU SUPPORTER M660SU	6-33-M66NS-030	
15	REINFORCE BRACKET FOR I/O BOARD	6-33-M66NS-051	
16	I/O BRACKET FOR M660SU	6-33-M66NS-011	
17	HEX STUD SMD2 NI-PL 10mm NY	6-34-9C002-00A	
18	CPU HEATSINK MODULE M660SU	6-31-M66SN-101	
19	SERIAL-PORT BRACKET	6-33-M66SS-020	
20	BATTERY 4000mAh FOR M660SU / M665SU	6-87-M66NS-453	
21	BATTERY 4000mAh FOR M660SU / M665SU	6-87-M66NS-4C3	
22	USB BOARD V D2.0 M660SU	6-77-M66UJ-002	
23	SCREW M2xL KI BK/Z ICT NY	6-35-B6120-BR0	
24	SCREW M2.5xL KI BK/Z NY ICT	6-35-B6125-BR0	
25	CARD READER RUBBER COVER	6-47-M66NE-010	
26	CPU FAN MODULE	6-31-M66NN-204	
27	CPU COVER MODULE M660SU	6-42-M66S3-103	
28	BLUETOOTH CABLE 2P AWG30 M660SU	6-43-M66NB-010	
29	ITC CABLE FOR AUDIO JACK BOARD TOP PRIO	6-43-M66ND-041	
30	HEAT SINK FOR VIDEO SOLUTION M660SU	6-88-M66S1-010	
31	BLUETOOTH 2.0 8 PIN MODULE (GATEWAY HILL)	6-88-M55-J5-390	
32	TAPE NYLON (C) NYLON M550J	6-40-M55-J2-030	
33	PRODUCT LABEL FOR M660SU	6-45-M66UJ-010	
34	PRODUCT LABEL FOR M665SU	6-45-M65UJ-010	
35	W/D HDD ASS'Y M660SU	6-79-M66NJ-010	
36	HDD COVER MODULE	6-42-M66NJ-103	
37	TV-OUT RUBBER	6-47-M66S3-010	
38	BEZEL (PG MINI CARDS) REALTEK CHIPSET	6-88-M7702-701	
39	RUBBER COVER FOR NEW CARD SOCKET	6-47-M66NS-020	
40	SCREW M2xL KI BNI ICT NY	6-35-B9120-ARA	
41	HEAT SINK FOR VGA (M660SU)	6-33-M66UN-010	
42	SCREW M2xL KI NI ICT NY	6-35-B1120-SR0	

Figure A - 5
Bottom (M660SU/
M665SU)

A.Part Lists

LCD (M660SU/M665SU)

Figure A - 6
LCD (M660SU/
M665SU)

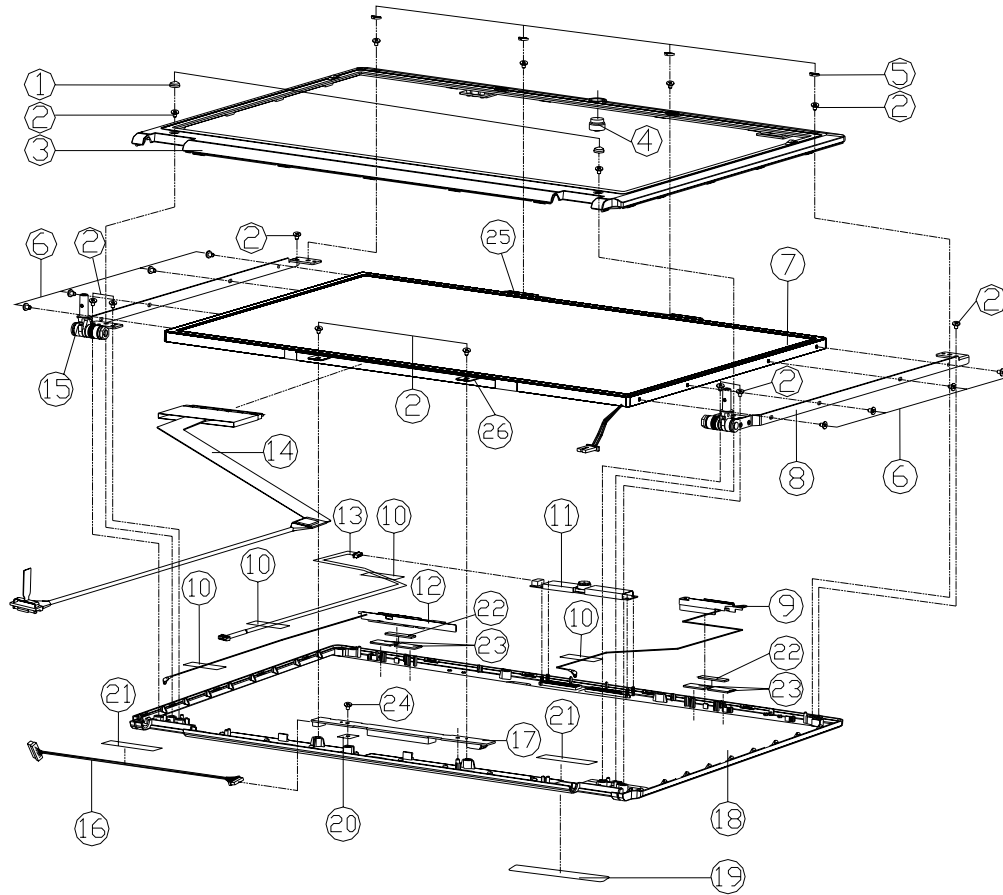

ITEM	PART NAME	PART NO	REMARK
1	LCD RUBBER	6-47-M56A1-010	
2	SCREW M2.5*5L KI NI ICT NY	6-35-B6125-5RA	
3	LCD FRONT COVER MODULE	6-39-M66NI-012	
4	W/O CCD RUBBER,RUBBER M550G	6-47-M55GT-020	
5	LCD RUBBER 06	6-47-M66NI-030	
6	SCREW M4*3L KI NI ICT GY-PATCH	6-35-B1120-3RE	
7	LCD T AU RESERVE(VOLARE TYPE) V9 IS4 VY	6-50-L8262-000	FOR AU
7	LCD T OPT CLANS(VOLARE) IS4 VYGA (280000)	6-50-L8262-C00	FOR CPT
7	LCD T OPT CLANS(VOLARE) IS4 VYGA(280000) 62M	6-50-L8262-C06	FOR CPT
7	LCD T AU RESERVE V9 IS4 VYGA(280000) 58M	6-50-L8258-001	FOR AU
8	LCD HINGE ASSY R M660N	6-33-M66NI-011	
9	MAIN W/IN ANTENNA WITH BULKY CABLE AND PEEL CONECT	6-23-7M66NI-024	
10	TAPE MYLAR (C)MYLAR M550J	6-40-M55J2-030	
11	ONS VIDEO CAMERA INCE-DV760-3 300K PIXEL	6-88-M66NC-491	(OPTION)
11	ONS VIDEO CAMERA INCE-DV950-D-300K 1.5M	6-88-M55GC-612	(OPTION)
12	M66N BT ANTENNA WITH GRAY CABLE AND PEEL	6-23-7M66NI-013	
13	CCD CABLE 5P AVG30 M660N-DD4	6-43-M66NI-062	
14	VIRE CABLE FOR IS4 VYGA(VOLARE) M660N	6-43-M66UI-010	
15	LCD HINGE ASSY L M660N	6-33-M66NI-021	
16	INVERTER MODULE FOR M660N	6-43-M66NI-053	
17	INVERTER MODULE FOR M660S	6-76-M66SR-011	
17	INVERTER MODULE IS166-IR EPS M660J	6-76-M66ER-010	
18	LCD BACK COVER MODULE FOR M660N	6-39-M66NI-024	FOR M660SU/SE
18	LCD BACK COVER MODULE (ROSS ADD RIB) FOR M665SU/SE	6-39-M6651-023	FOR M665SU/SE
19	FOR M550G LOGO(STYLE-NOTE)	6-45-M55G1-020	
20	MYLAR FOR INVERTER (440*404) M660N	6-40-M66NS-060	
21	TAPE MYLAR (A)MYLAR M550J	6-40-M55J2-010	
22	SPONGE (L23*W5*H0.65MM)	6-47-M6651-010	
23	SPONGE (L22*W10*H1.65)	6-47-M6651-020	
24	SCREW M2*3.5L KI NI ICT NY	6-35-B1120-350	
25	BRACKET(TOP) FOR LCD ODI	6-33-M66NI-0A0	FOR LCD AU/RESERVE/2
26	BRACKET(BOTTOM) FOR LCD ODI	6-33-M66NI-0B0	FOR LCD AU/RESERVE/2

CDRW (M660SU/M665SU)


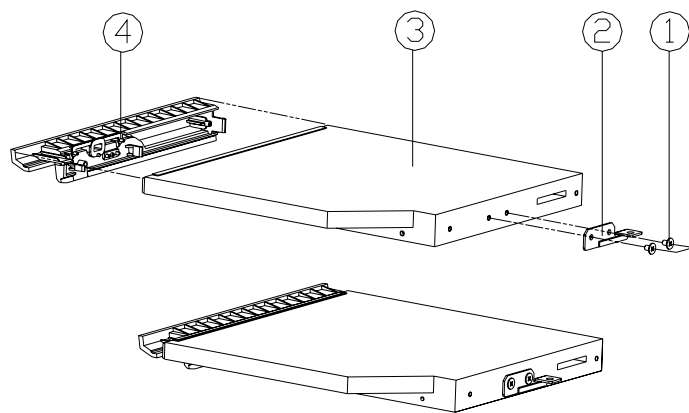


Figure A - 7
CDRW (M660SU/
M665SU)

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*3L KI NI ICT GTY-PATCH	6-35-B1120-3RE	
2	DDD FIX BRACKET M660N	6-33-M66NZ-010	
3	CD-RW/DVD 5 1/4' 24X 12.7MM UJDA770CL-A	6-85-907PX-P00	
3	CD-RW/DVD 5 1/4' 24X 12.7MM SCR5265 PHILIP	6-85-907PX-C02	
4	G BEZEL MODULE FOR DVD COMBO	6-42-M66NX-101	

Combo (M660SU/M665SU)

Figure A - 8
Combo (M660SU/
M665SU)

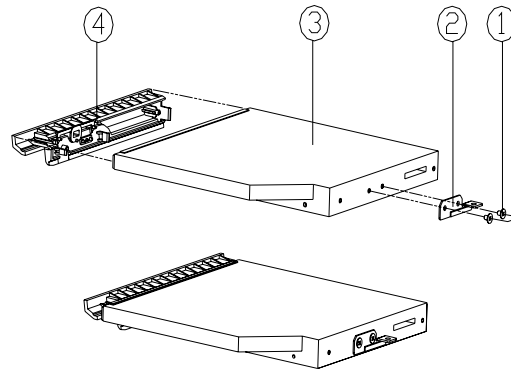

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*3L KI NI ICT GTY-PATCH	6-35-B1120-3RE	
2	ODD FIX BRACKET M660N	6-33-M66NZ-010	
3	CD-RW/DVD S 1/4" 24X 12.7MM TS-L462B	6-85-907PX-101	
4	G BEZEL MODULE FOR DVD COMBO	6-42-M66NX-101	

DVDRW (M660SU/M665SU)

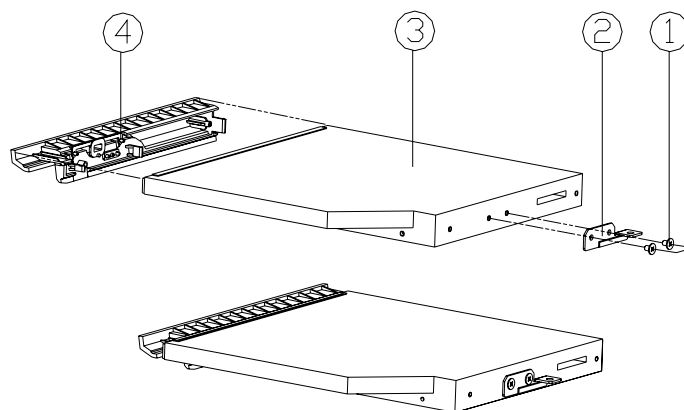


Figure A - 9
DVDRW (M660SU/
M665SU)

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*3L KI NI ICT GTY-PATCH	6-35-B1120-3RE	
2	DDD FIX BRACKET M660N	6-33-M66NZ-010	
3	CD-RW/DVD 5 1/4" 24X 12.7MM UJDA770CL-A	6-85-907PX-P00	
3	CD-RW/DVD 5 1/4" 24X 12.7MM SCB5265 PHILIP	6-85-907PX-C02	
4	G BEZEL MODULE FOR DVD COMBO	6-42-M66NX-101	

A.Part Lists

Appendix B:Schematic Diagrams

This appendix has circuit diagrams of the *M660SU/M665SU* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
<i>SYSTEM BLOCK DIAGRAM - Page B - 2</i>	<i>VT8237A-1 - Page B - 16</i>	<i>CHARGER, DC IN - Page B - 30</i>
<i>CLOCK GENERATOR - Page B - 3</i>	<i>VT8237A-2 - Page B - 17</i>	<i>1.05VS, 1.5V, 2.5VS - Page B - 31</i>
<i>CPU-1 - Page B - 4</i>	<i>VT8237A-3 - Page B - 18</i>	<i>VCORE - Page B - 32</i>
<i>CPU-2 - Page B - 5</i>	<i>HDD & CDROM - Page B - 19</i>	<i>1.8V, 0.9VS - Page B - 33</i>
<i>VN896-1 - Page B - 6</i>	<i>CARD READER - Page B - 20</i>	<i>VDD3, VDD5 - Page B - 34</i>
<i>VN896-2 - Page B - 7</i>	<i>NEW CARD SOCKET - Page B - 21</i>	<i>EXT GPU 1.0VS/1.2VS - Page B - 35</i>
<i>VN896-3 - Page B - 8</i>	<i>LAN - Page B - 22</i>	<i>HOTKEY LT BOARD - Page B - 36</i>
<i>VN896-4 - Page B - 9</i>	<i>USB & CCD - Page B - 23</i>	<i>PWR HOT BOARD - Page B - 37</i>
<i>DDR2-1 - Page B - 10</i>	<i>HITACHI H8 - Page B - 24</i>	<i>AUDIO & MODEM BOARD - Page B - 38</i>
<i>DDR2-2 - Page B - 11</i>	<i>CRT & LVDS - Page B - 25</i>	<i>CLICK BOARD - Page B - 39</i>
<i>VGA G72M-1 - Page B - 12</i>	<i>CPU FAN, LPC ROM - Page B - 26</i>	<i>USB BOARD - Page B - 40</i>
<i>VGA G72M-2 - Page B - 13</i>	<i>MINI-PCI & BLUETOOTH - Page B - 27</i>	<i>FINGERPRINT BOARD - Page B - 41</i>
<i>VGA G72M-3 - Page B - 14</i>	<i>AUDIO VT1708A/ALC883 - Page B - 28</i>	
<i>VGA G72M-4 - Page B - 15</i>	<i>LED - Page B - 29</i>	


Table B - 1
**Schematic
Diagrams**



Version Note


The schematic diagrams in this chapter are based upon version 6-7P-M66U7-005. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

SYSTEM BLOCK DIAGRAM

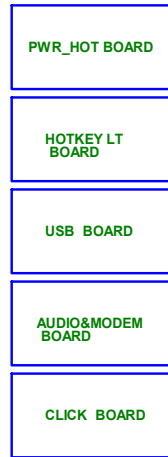


Sheet 1 of 40
SYSTEM BLOCK
DIAGRAM

M660SU BLOCK DIAGRAM

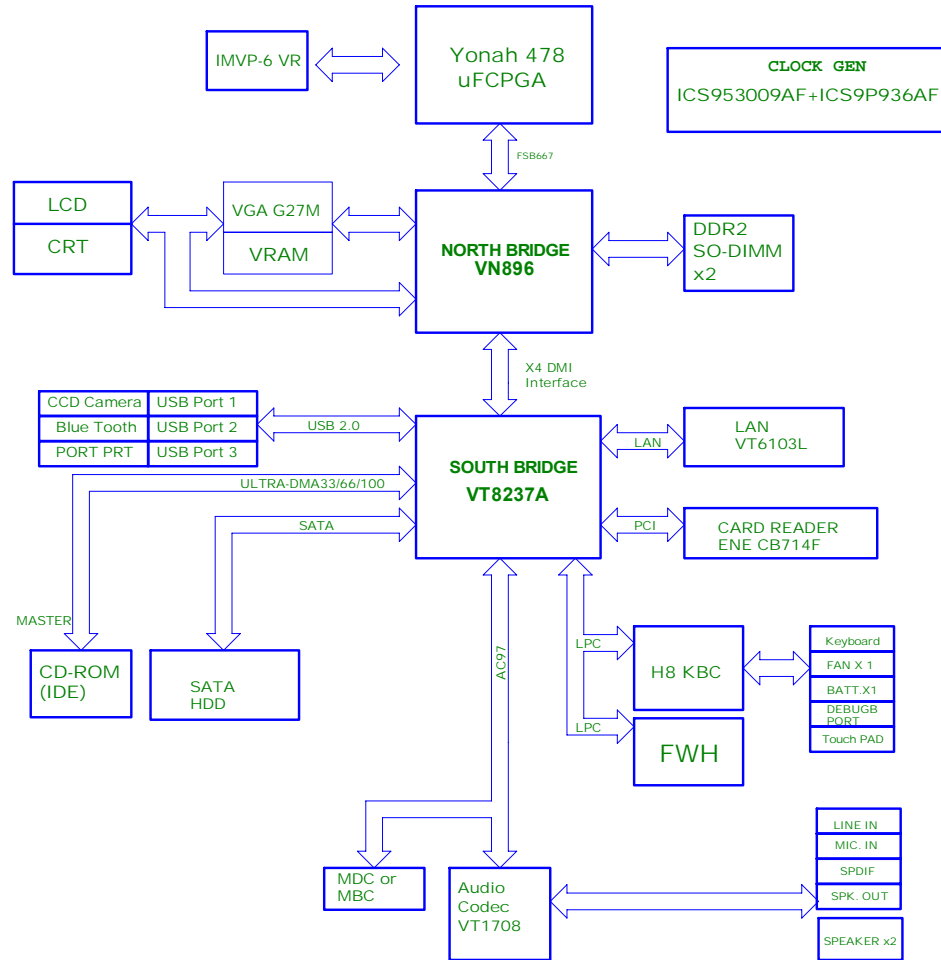

CLOCK GENERATOR




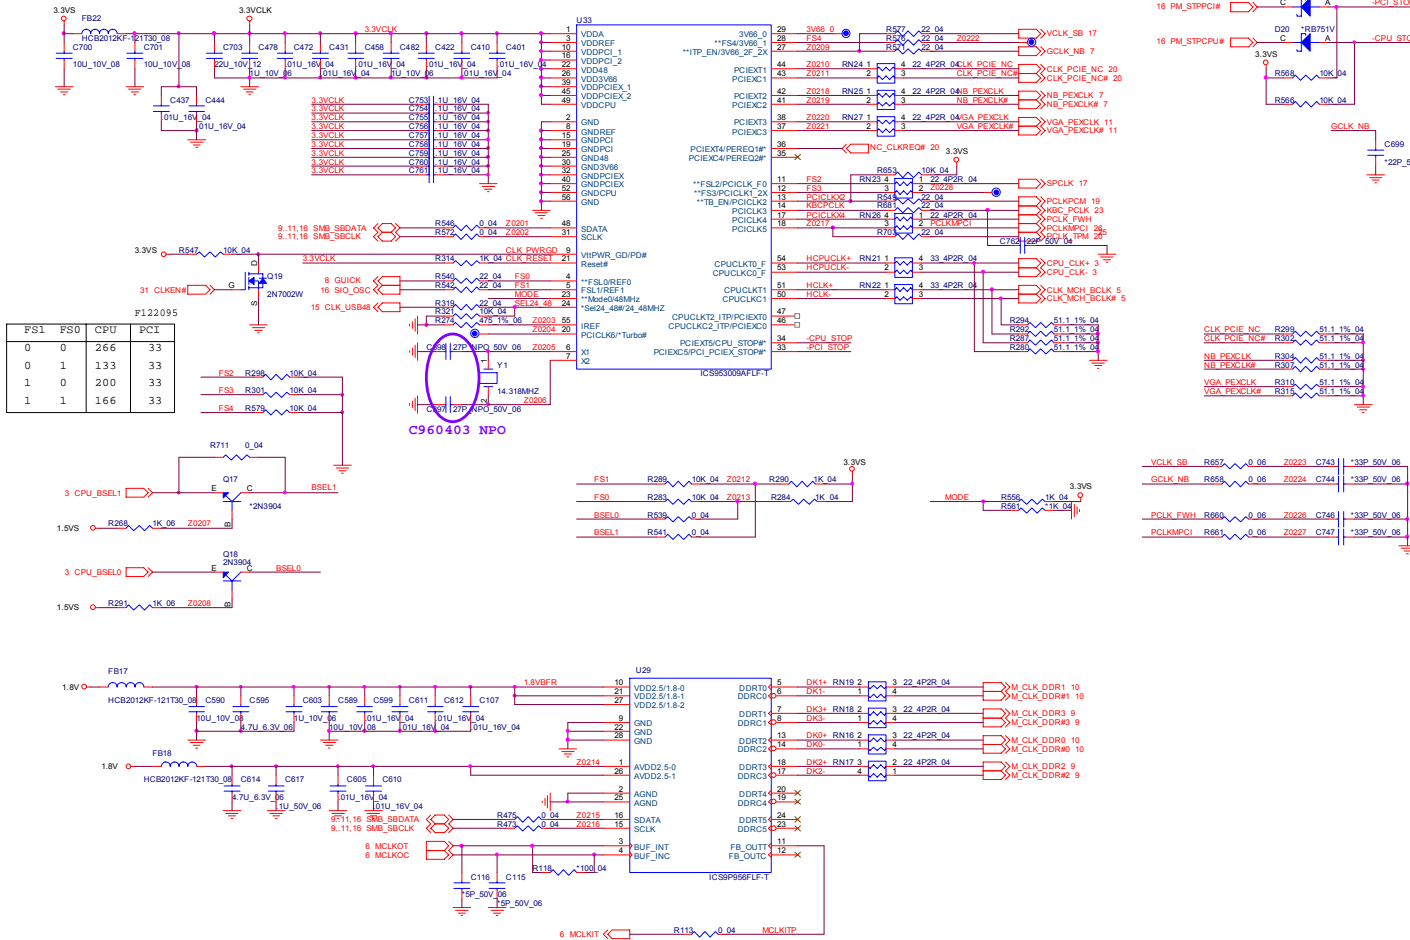


Sheet 2 of 40
CLOCK
GENERATOR

B.Schematic Diagrams

CPU-2

B.Schematic Diagrams

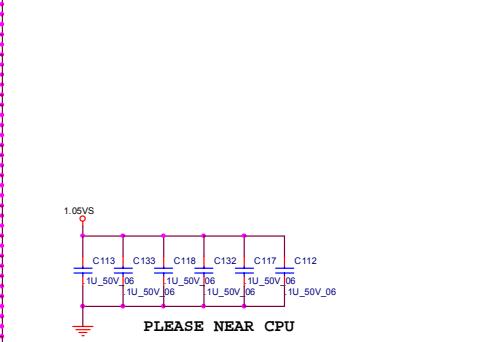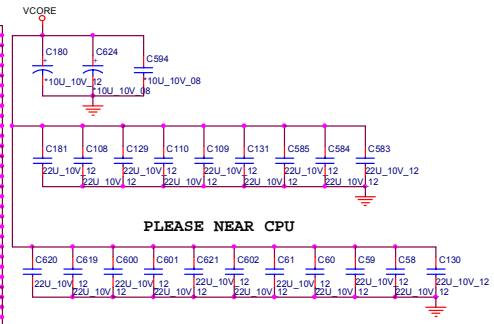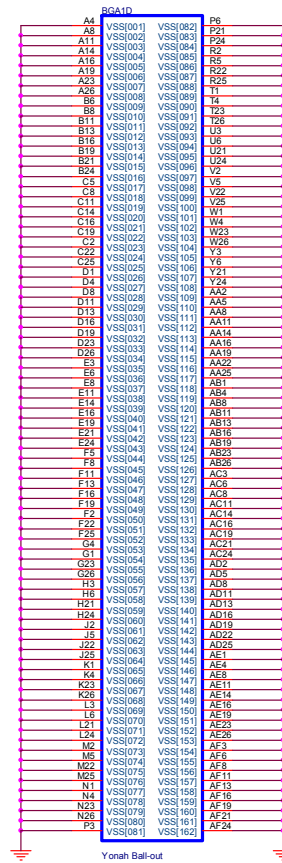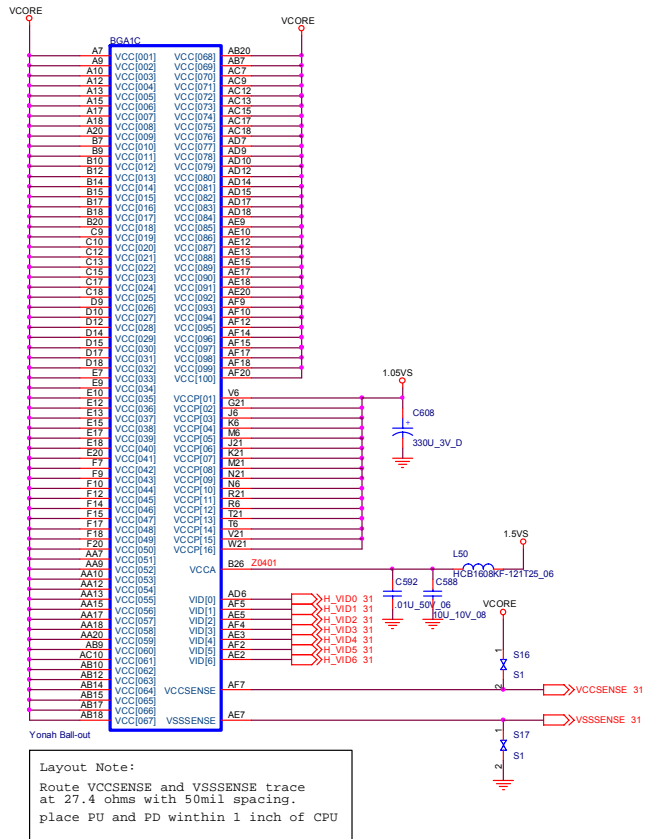


Sheet 4 of 40 CPU-2


Schematic Diagrams

VN896-1

Sheet 5 of 40
VN896-1

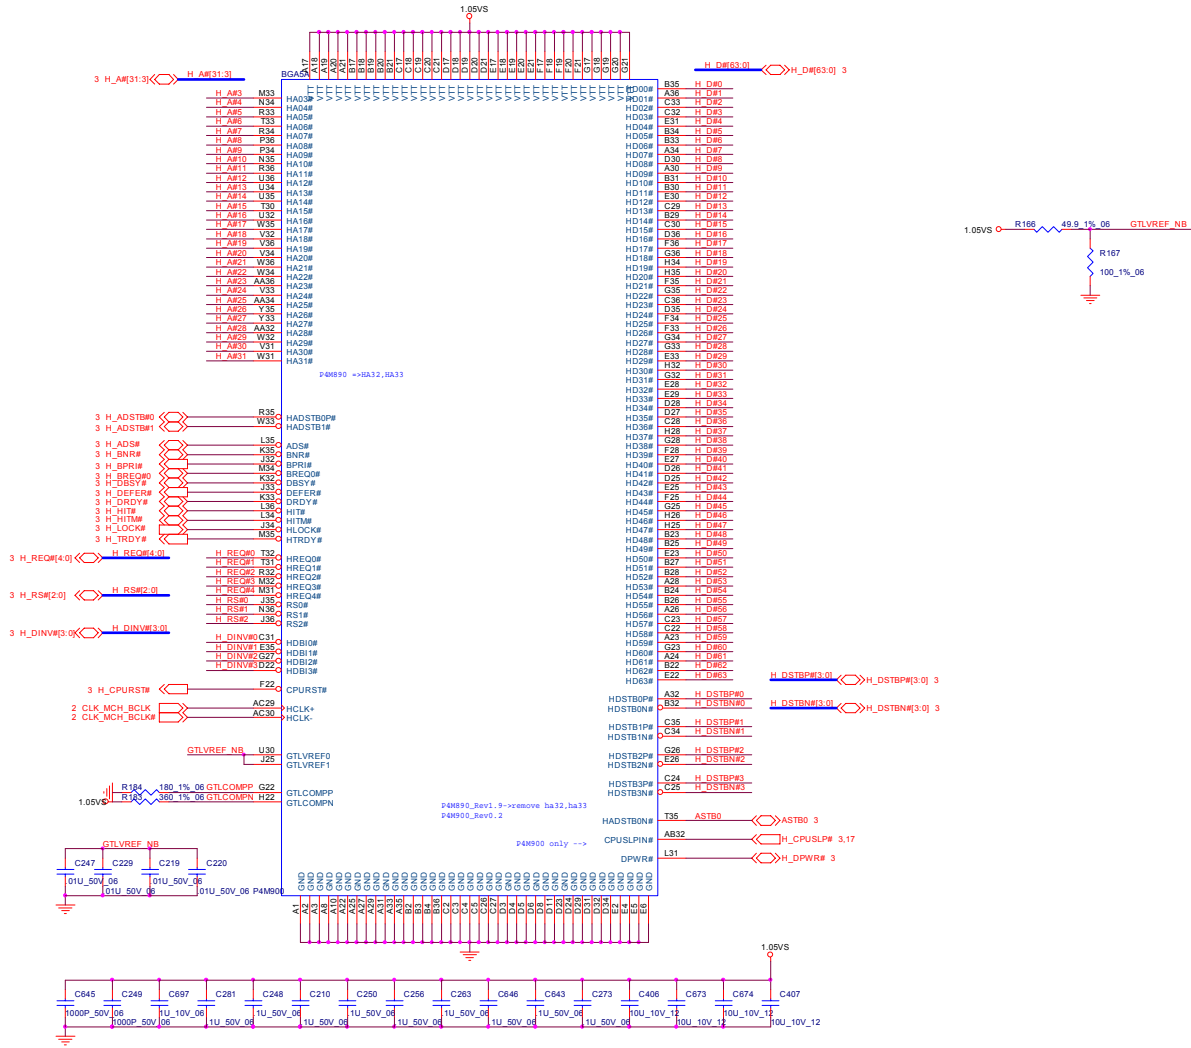

VN896-2

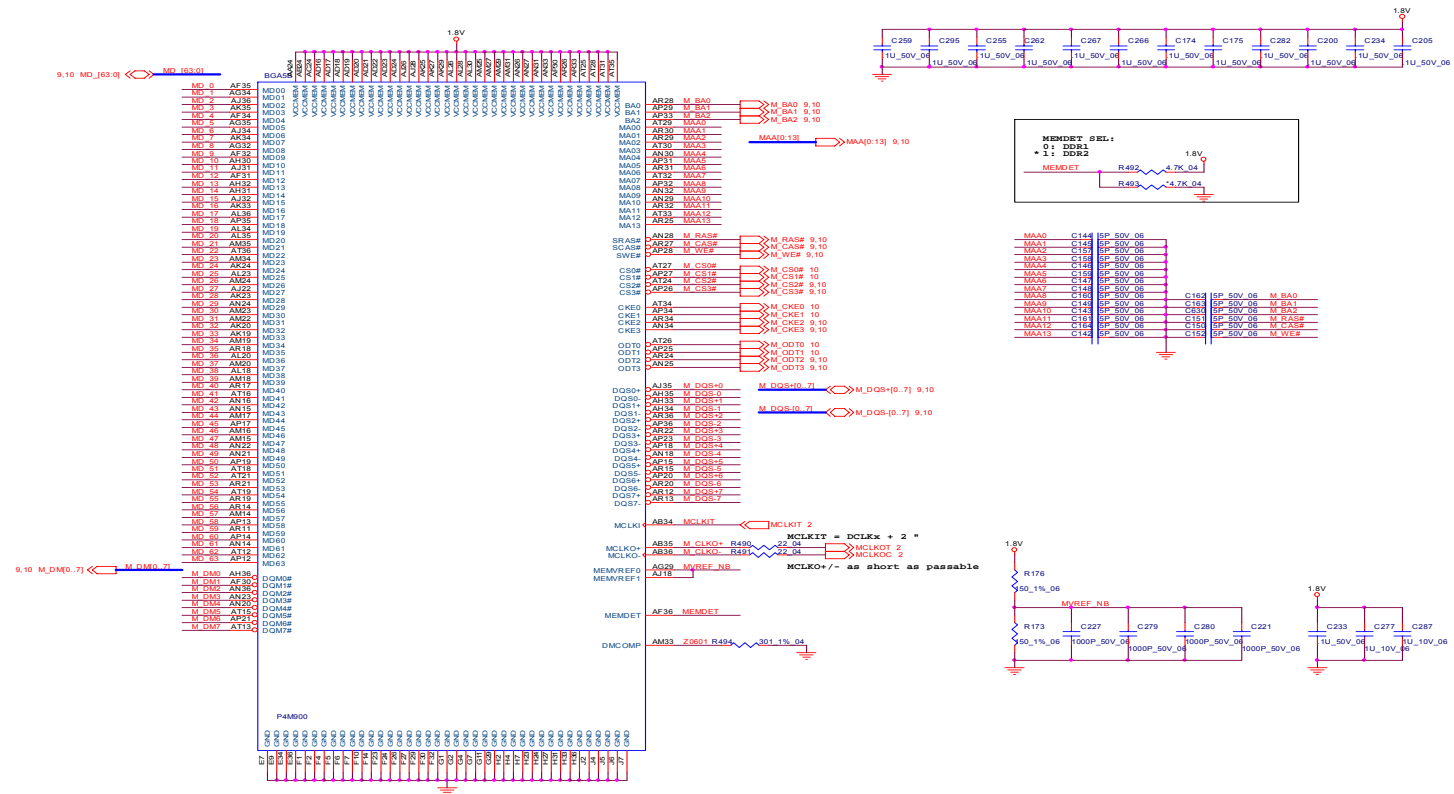


Schematic Diagrams


VN896-3

B.Schematic Diagrams

Sheet 7 of 40
VN896-3

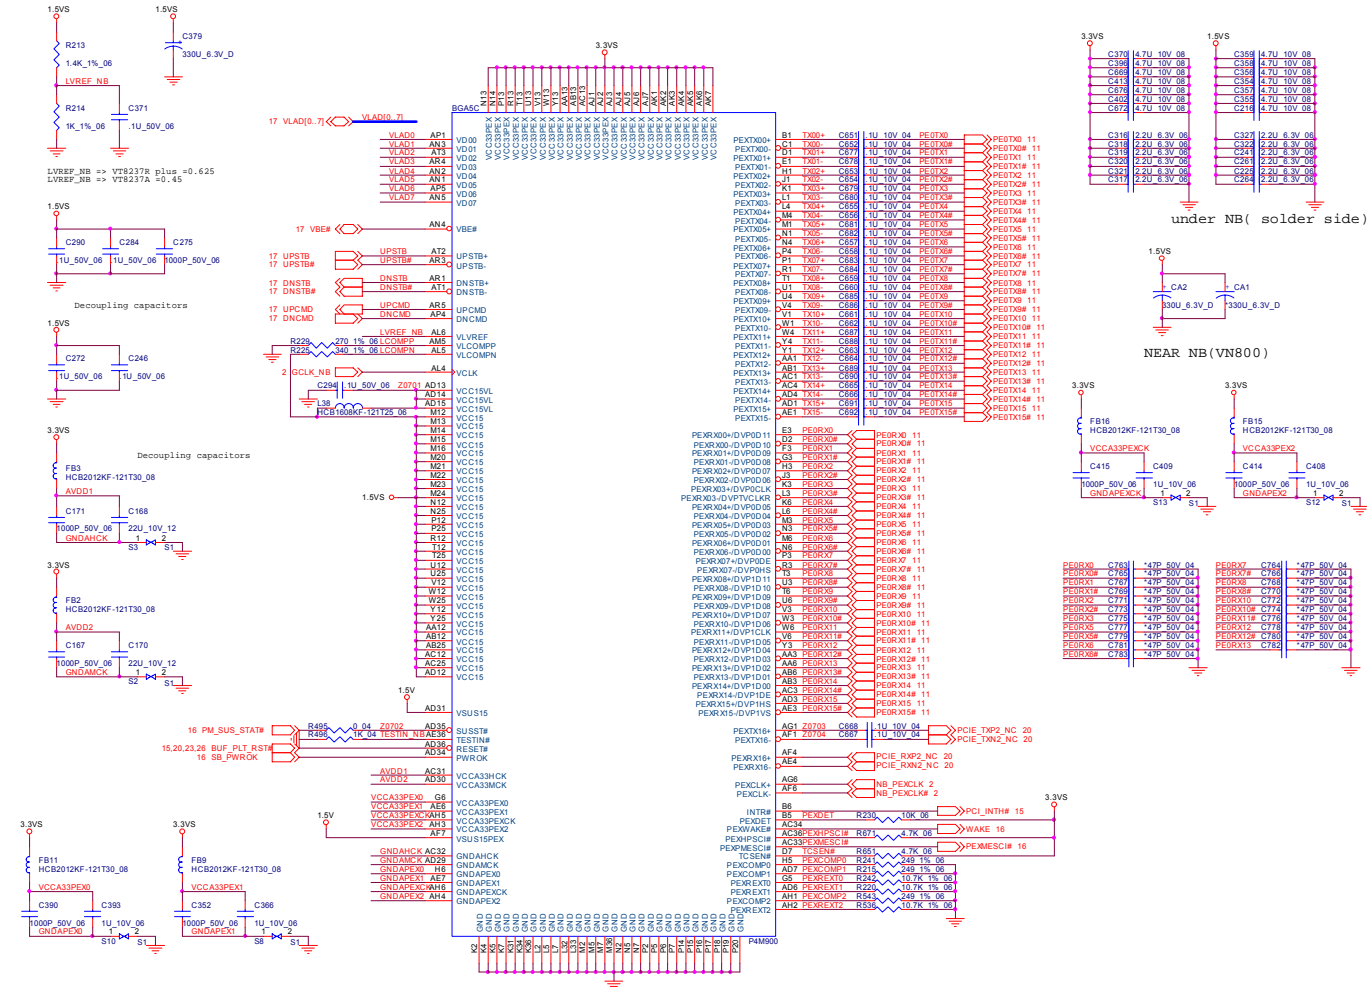

VN896-4

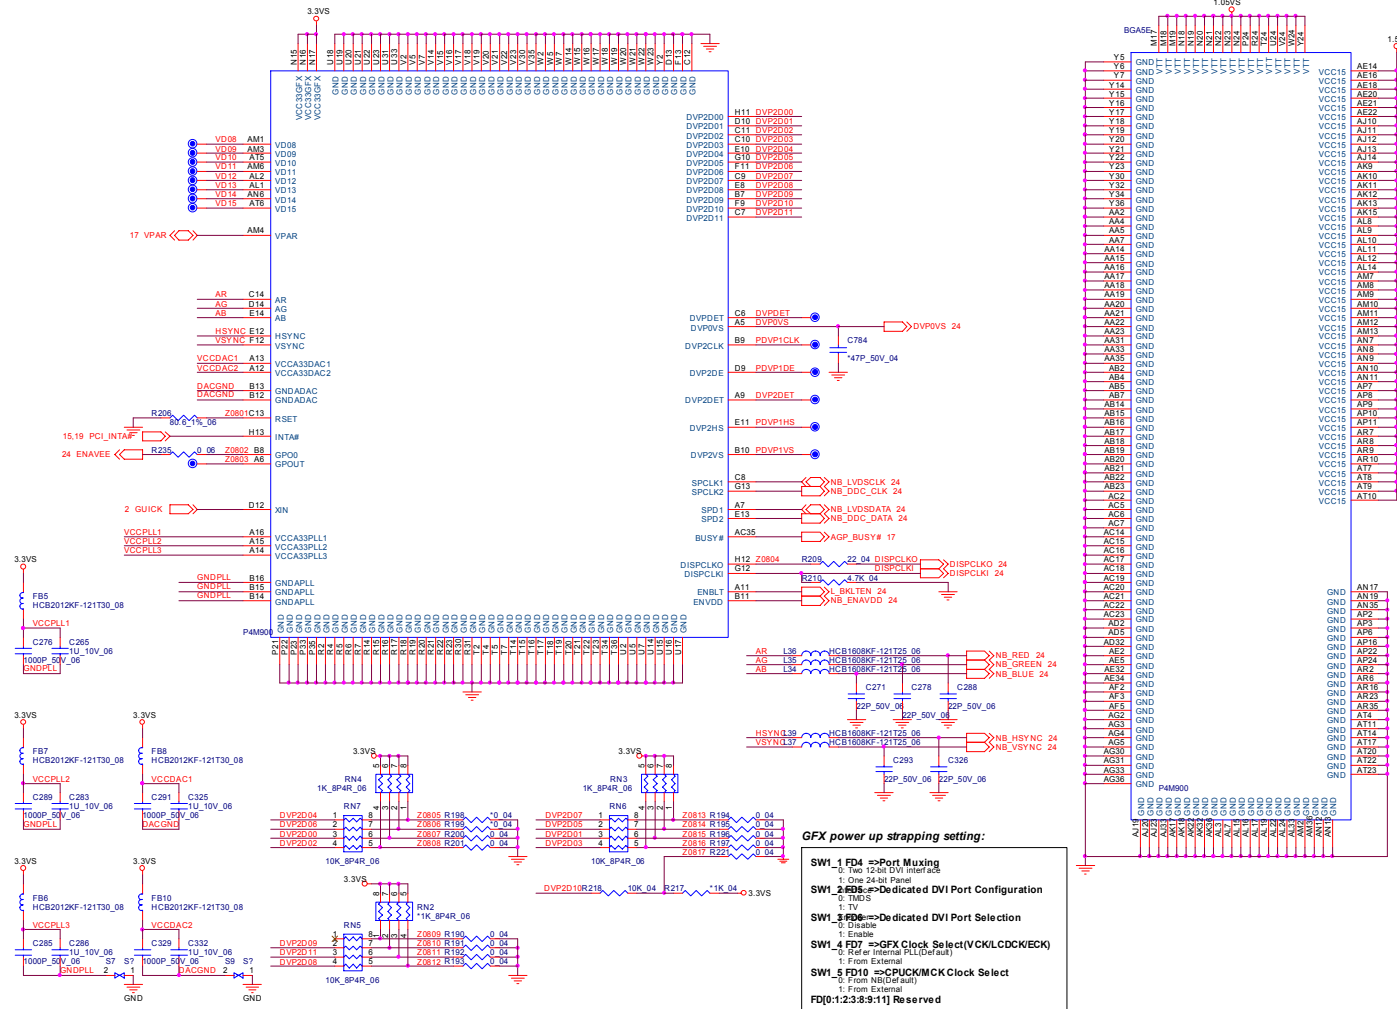




Sheet 8 of 40
VN896-4

B. Schematic Diagrams


Schematic Diagrams

DDR2-1

 Sheet 9 of 40
DDR2-1

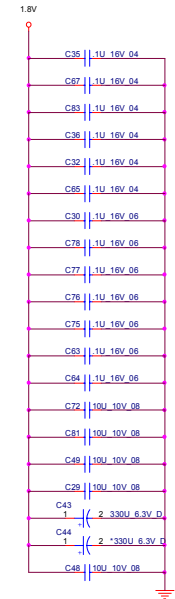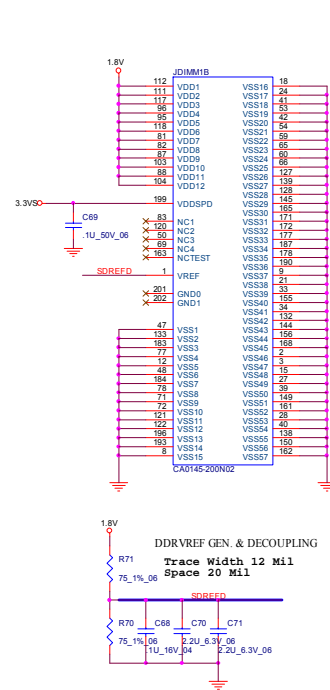


DDR2-2

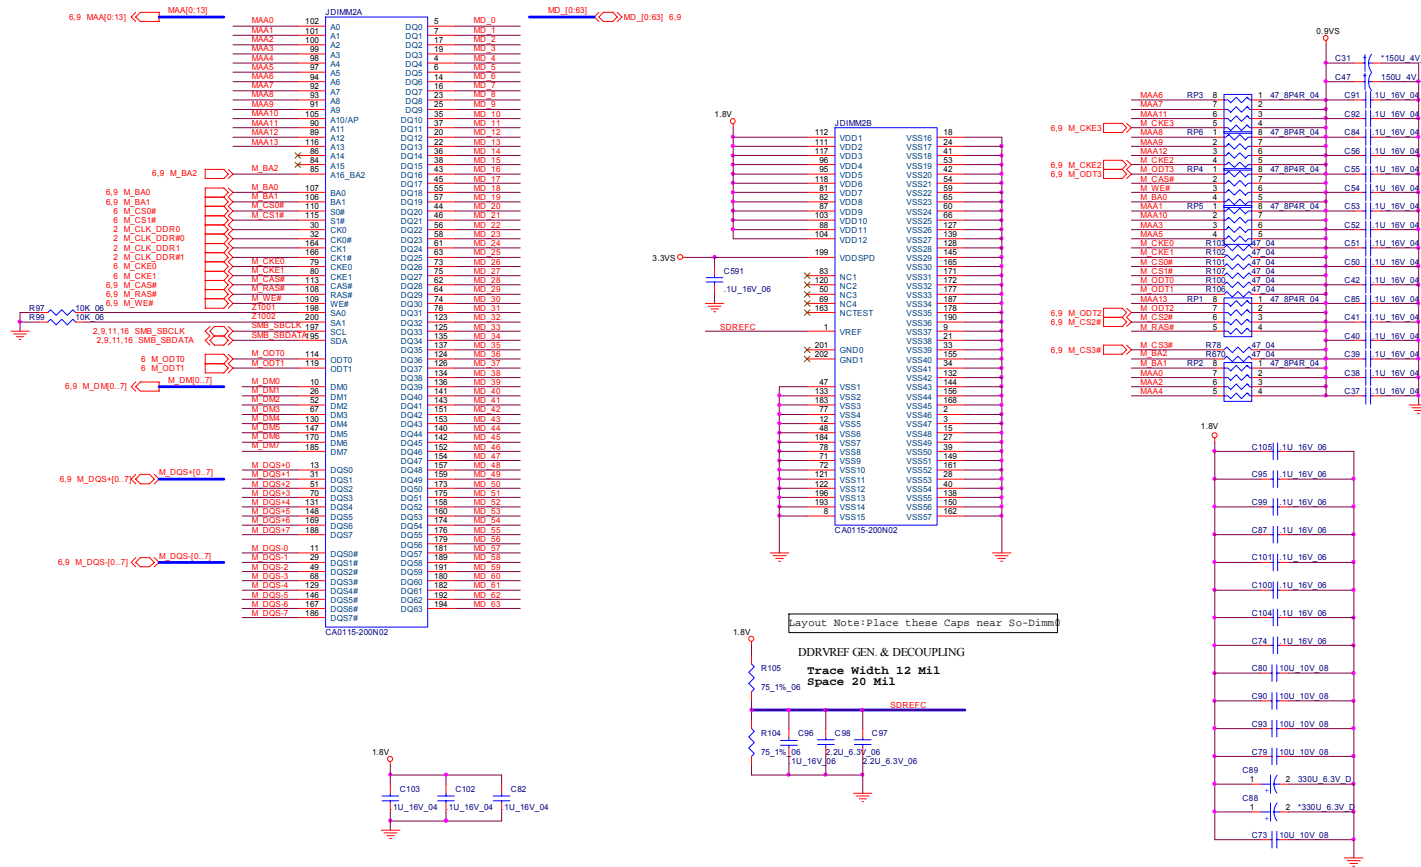


Sheet 10 of 40
DDR2-2

VGA G72M-2

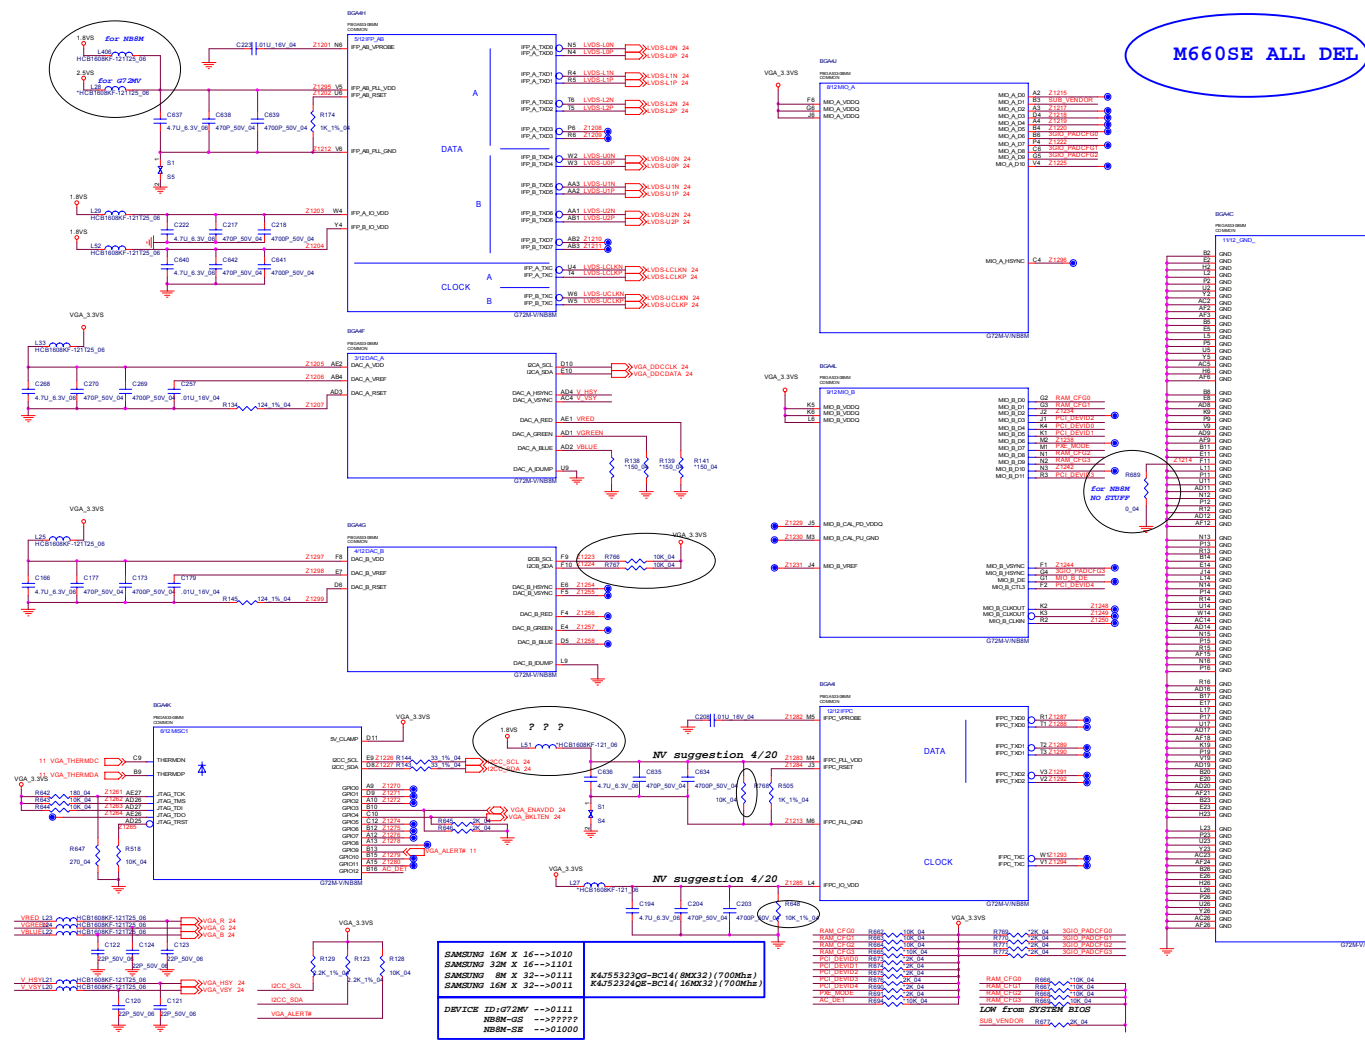

VGA G72M-4

B.Schematic Diagrams

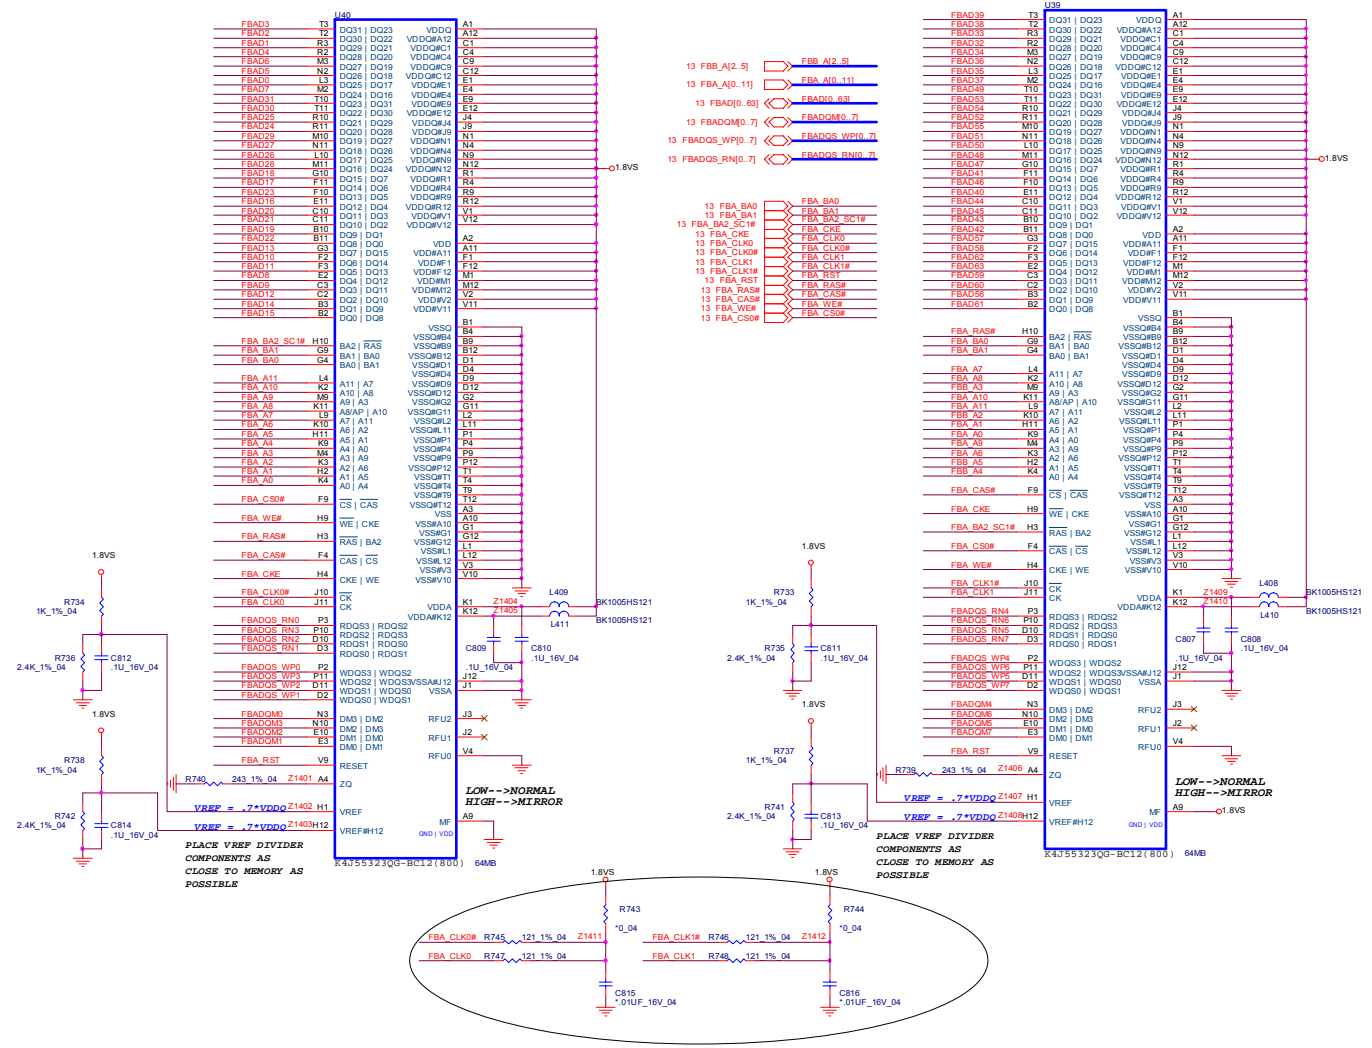


Schematic Diagrams


VT8237A-1

B.Schematic Diagrams

Sheet 15 of 40
VT8237A-1

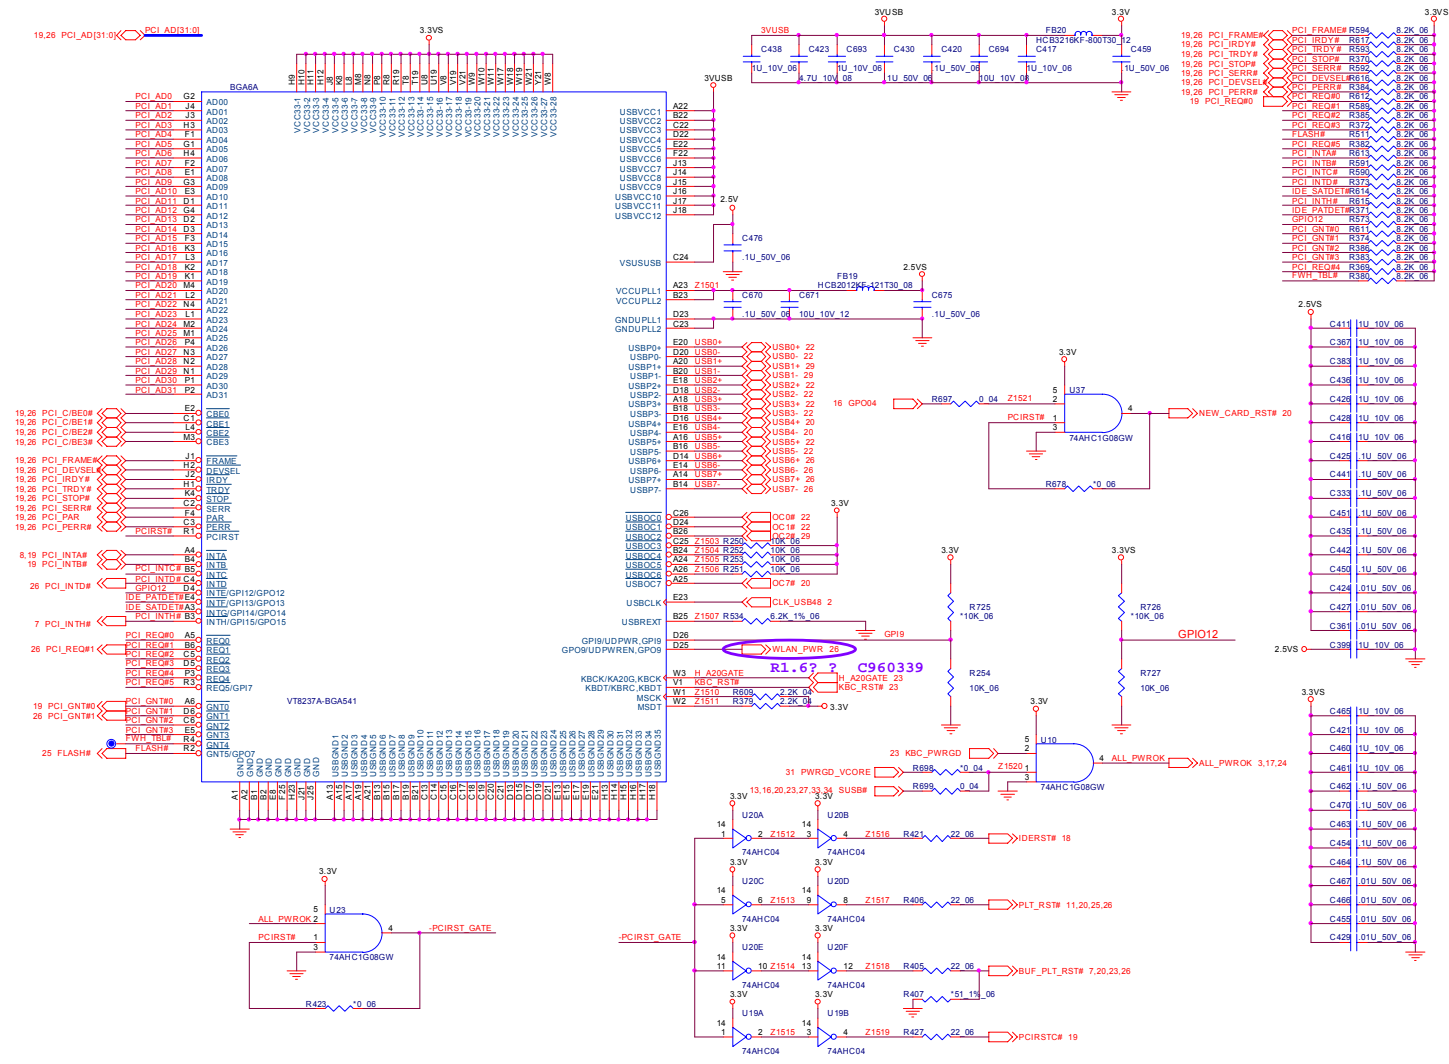

VT8237A-2









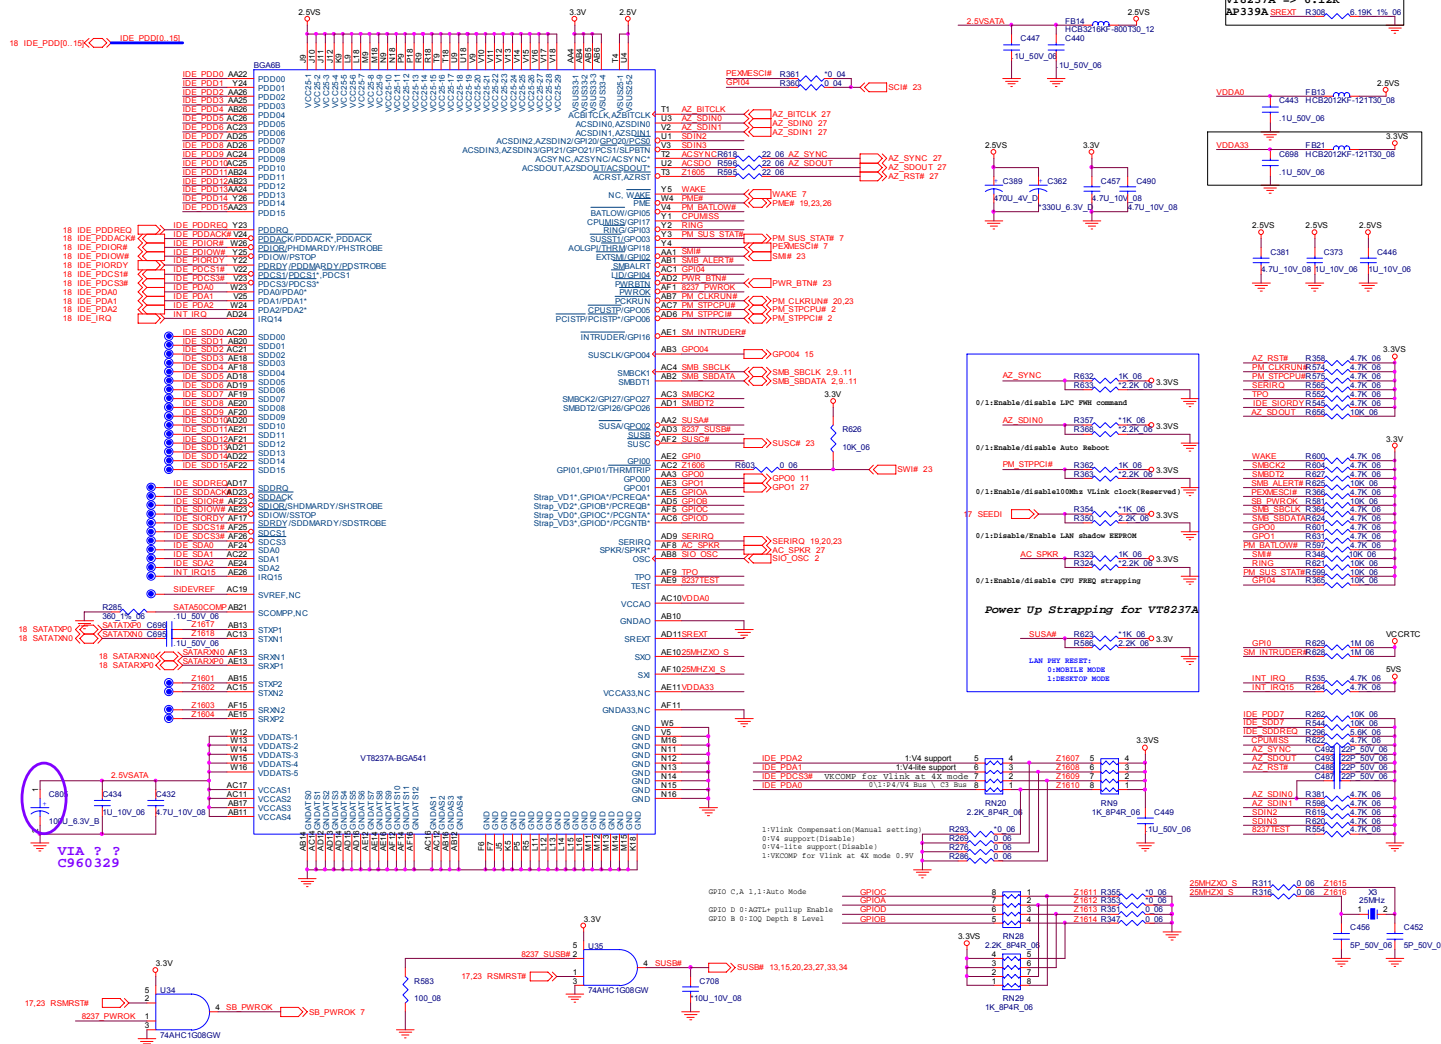


Sheet 16 of 40
VT8237A-2

B.Schematic Diagrams



VT8237A-3

   Sheet 17 of 40
VT8237A-3

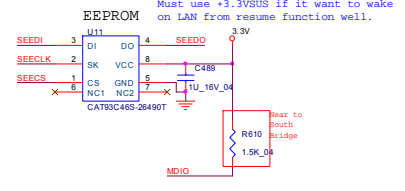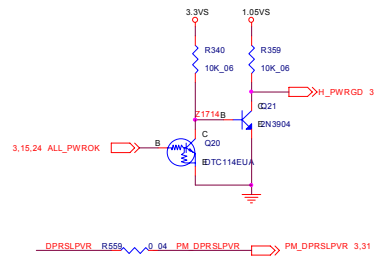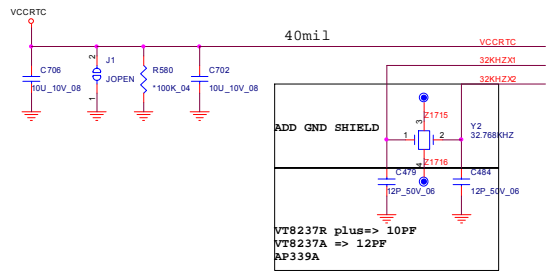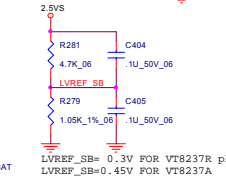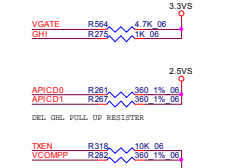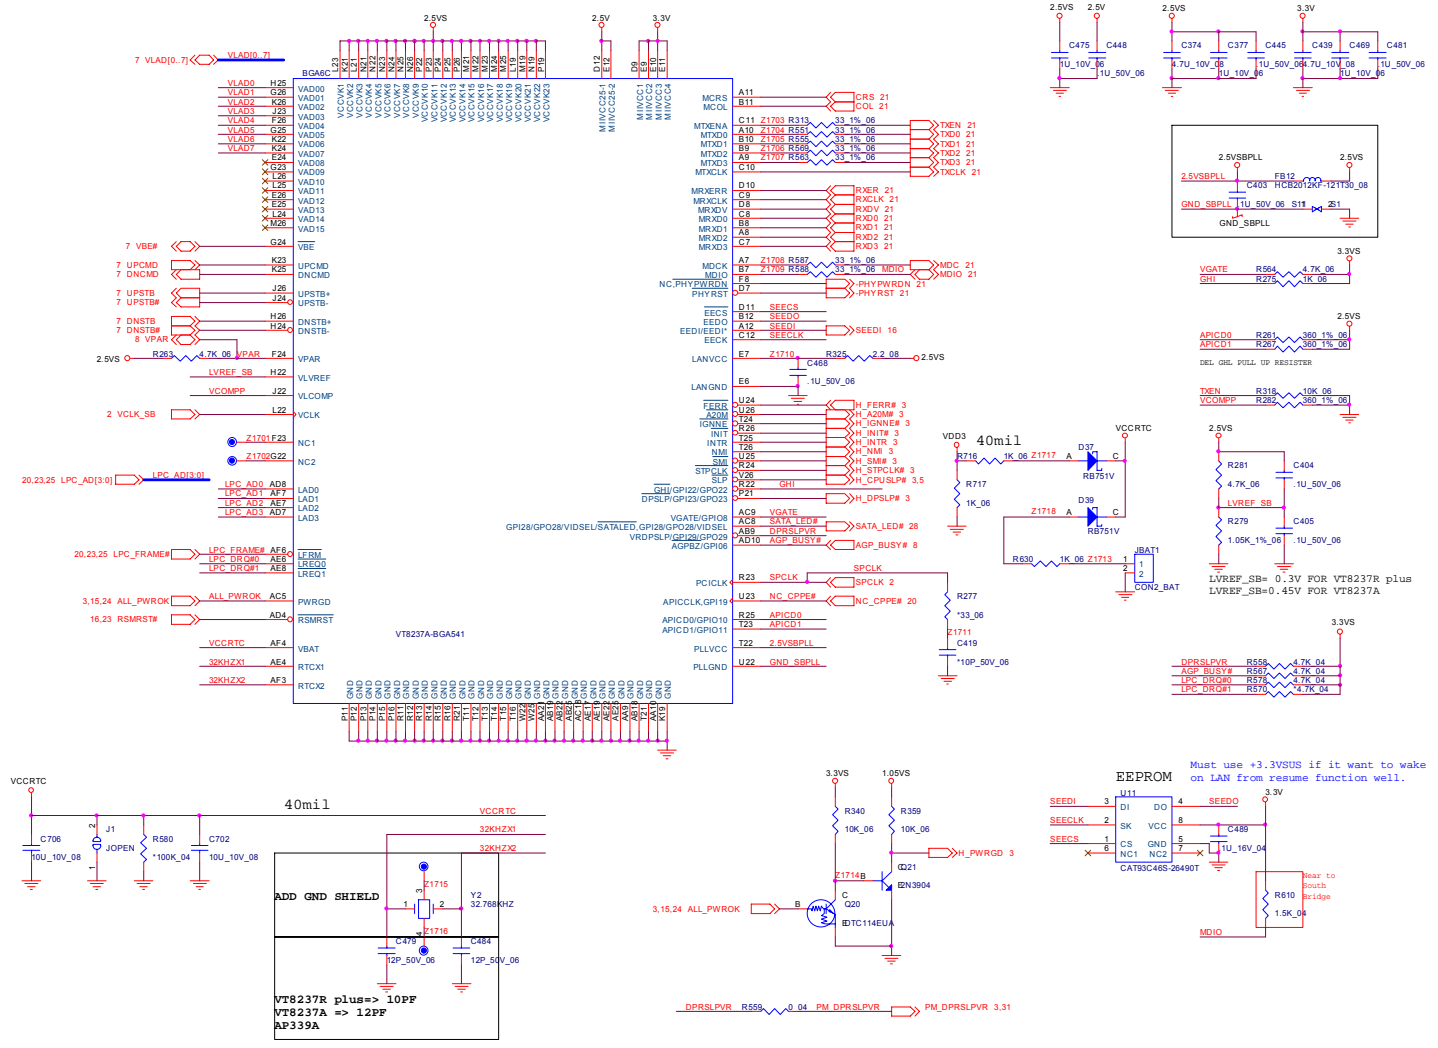


HDD & CDROM

SATA HDD

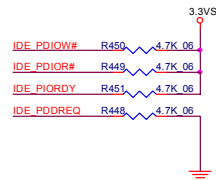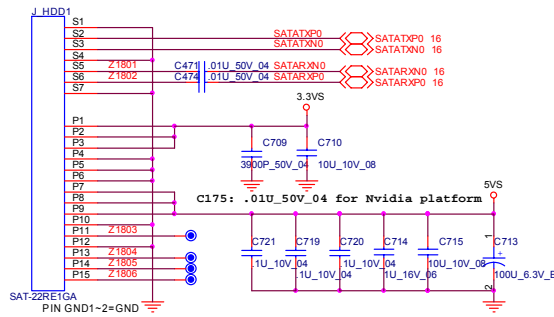

CD-ROM

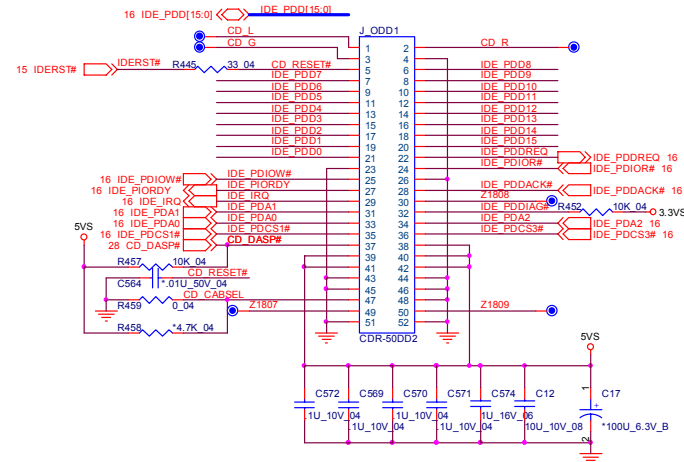

Layout note:
 CD_R & CD_G & CD_L must parallel routing to Audio Codec. The wide is 12mils and space must be equal.

Other Signal	CD_R	From
To AUDIO CODEC	CD_G	CD-ROM
	CD_L	
Other Signal		

Signal:Space = 1:2
 Signal:Space = 1:1
 Signal:Space = 1:1
 Signal:Space = 1:2




Sheet 18 of 40
 HDD & CDROM

B.Schematic Diagrams

CARD READER


B.Schematic Diagrams

Sheet 19 of 40
CARD READER

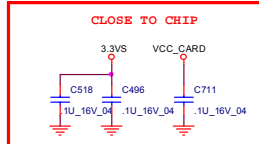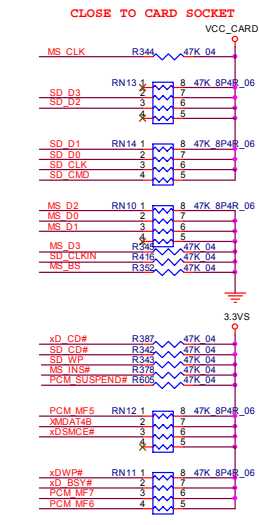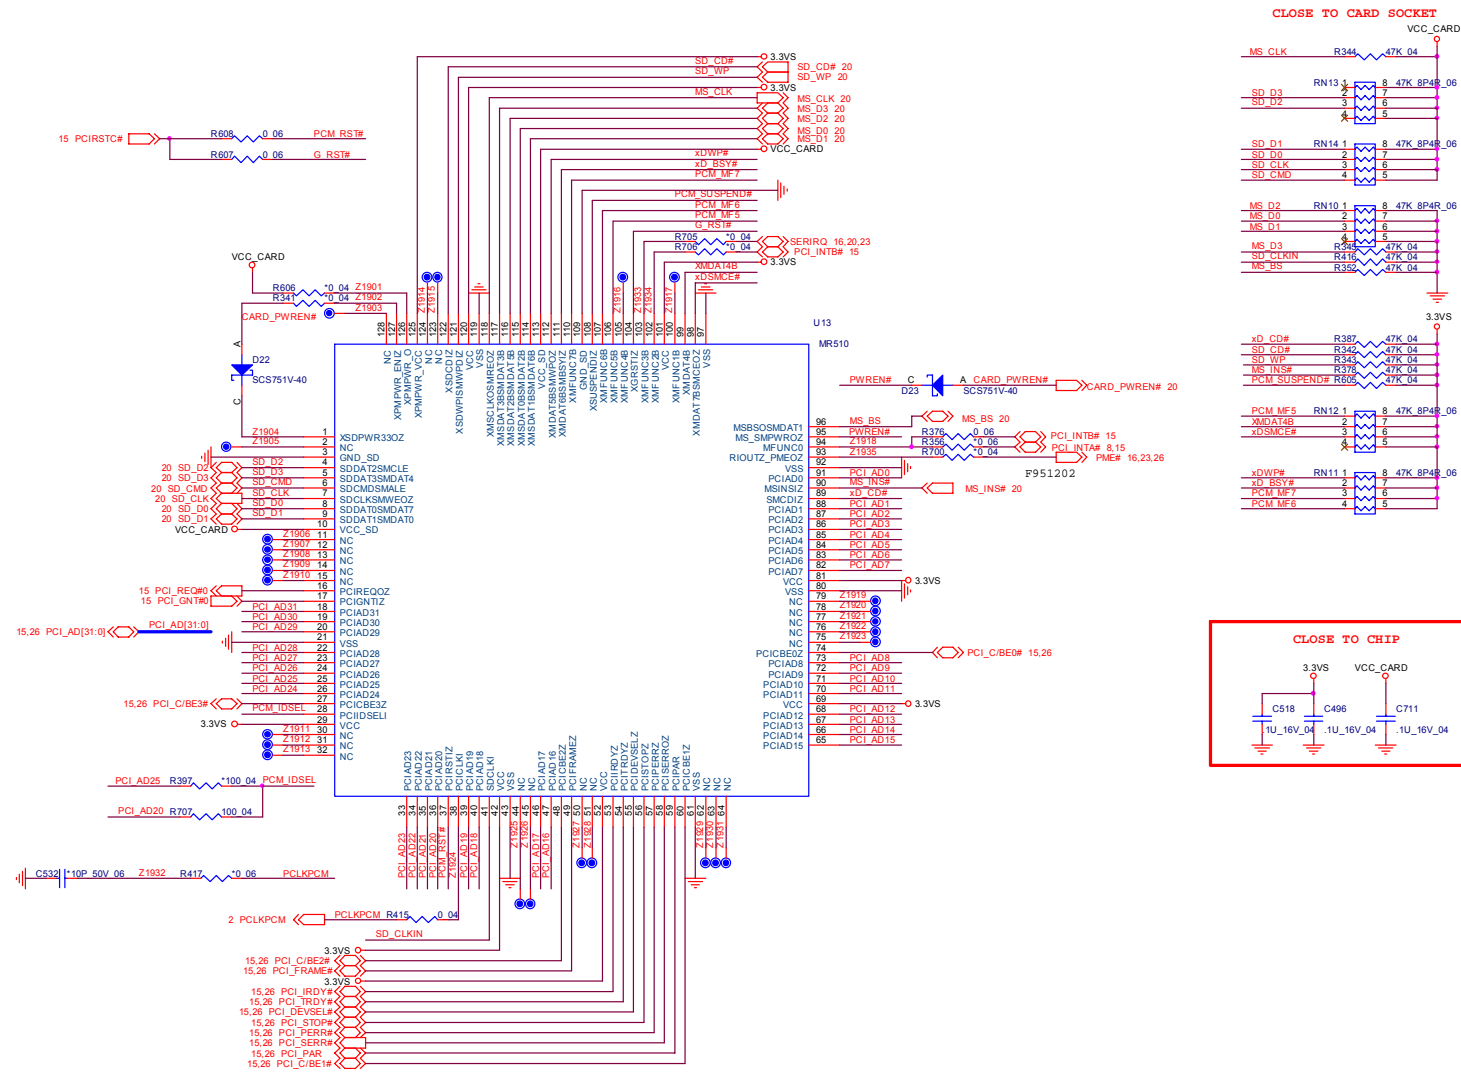


NEW CARD SOCKET

3 IN 1 SOCKET SD/MMC/MS(Pro)

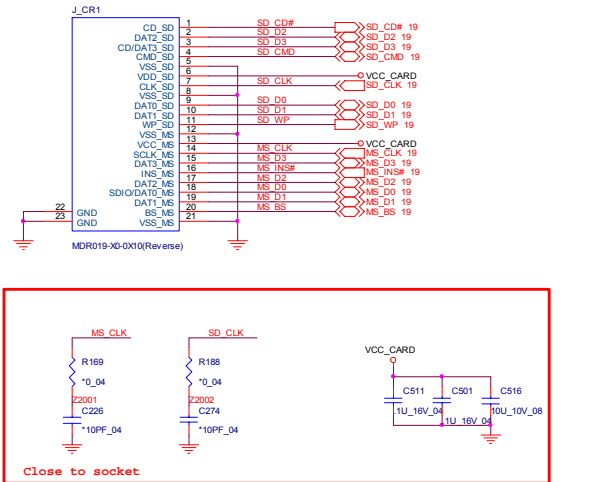


TPM 1.2

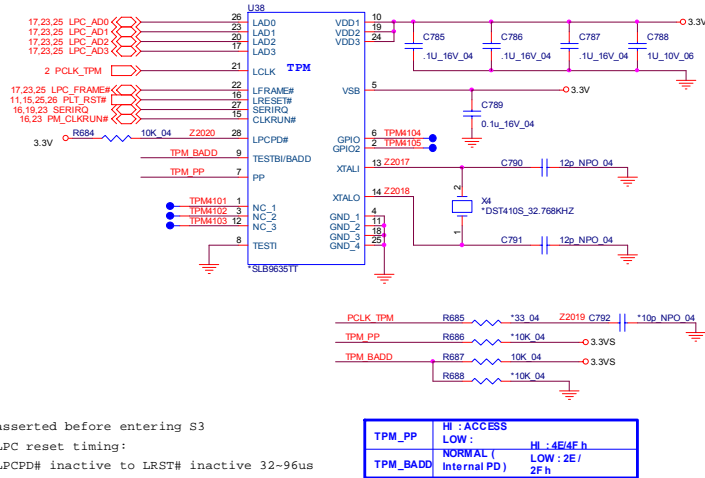

asserted before entering S3
LPC reset timing:
LPCPD# inactive to LRST# inactive 32-96us

NEW CARD

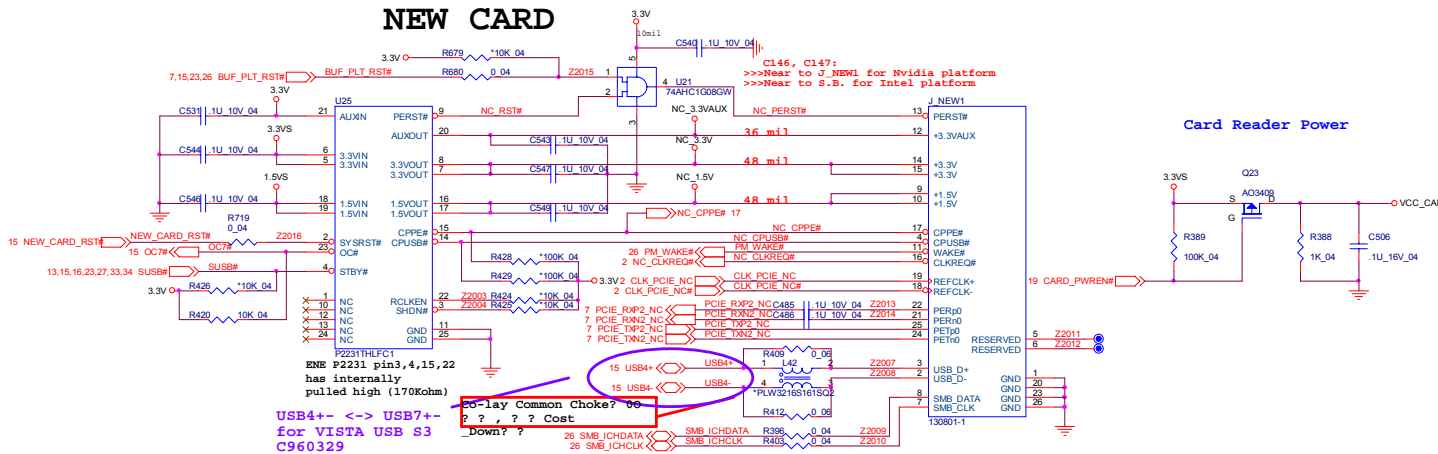


Sheet 20 of 40
NEW CARD
SOCKET




B.Schematic Diagrams

LAN

Sheet 21 of 40
LAN

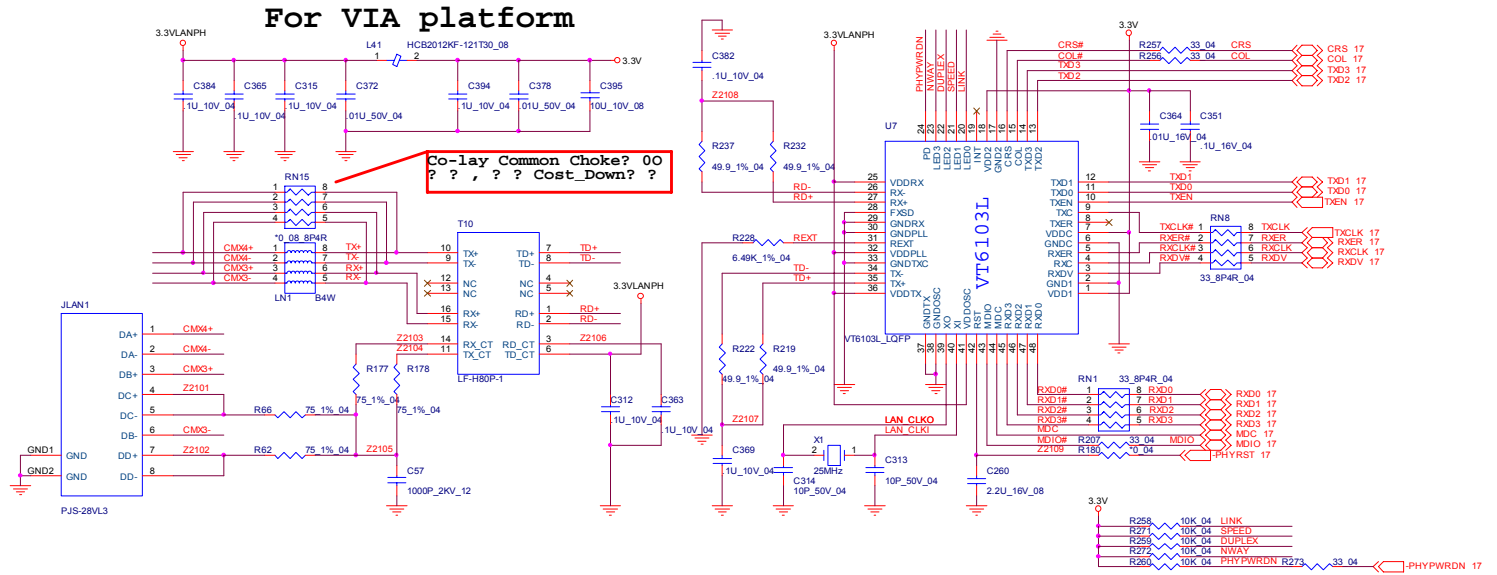


USB & CCD

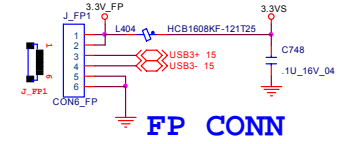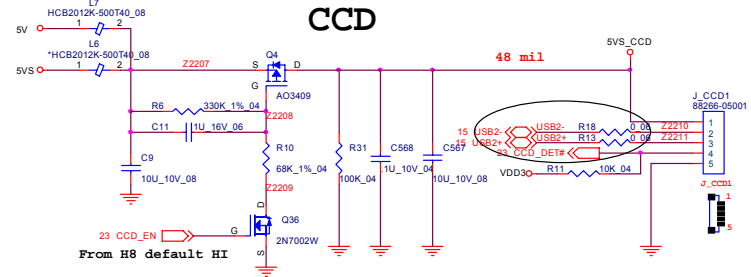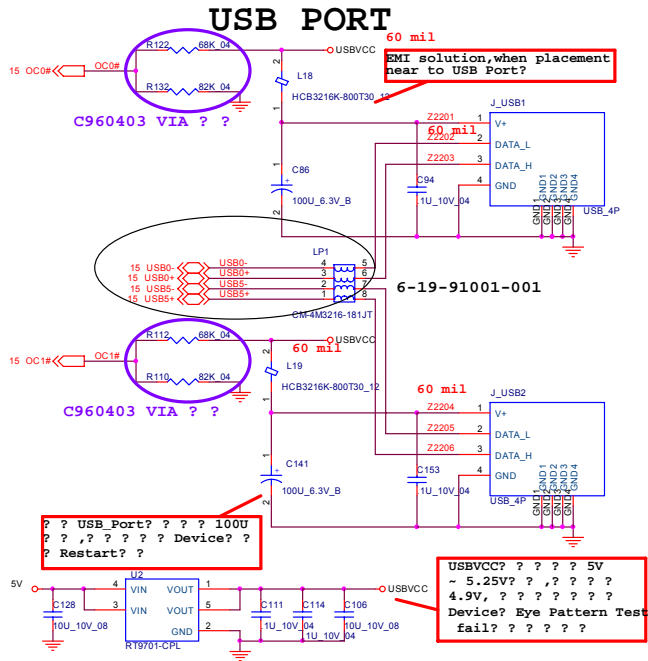

Sheet 22 of 40
USB & CCD



HITACHI H8

Sheet 23 of 40
HITACHI H8

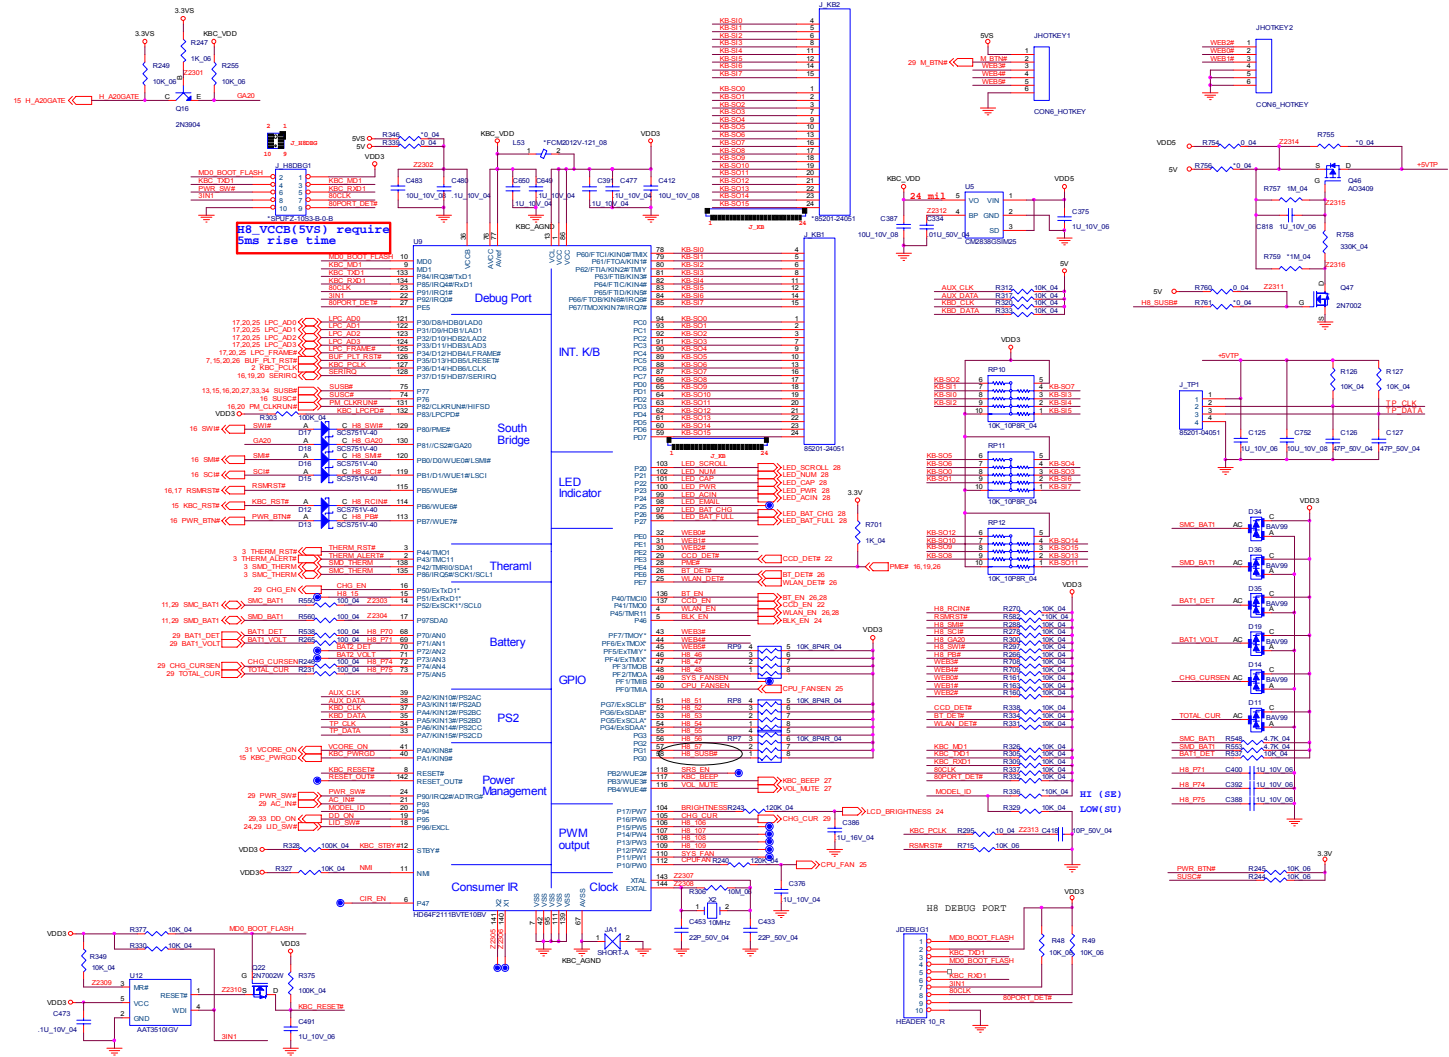


CRT & LVDS


PANEL INTERFACE

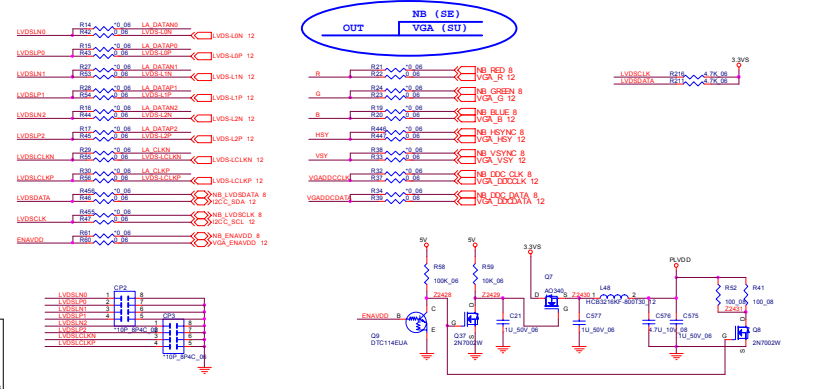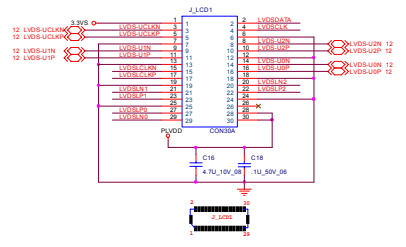


CRT PORT

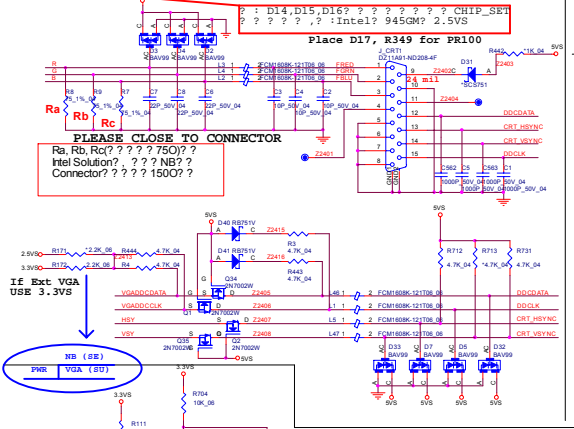

For M660SE USE

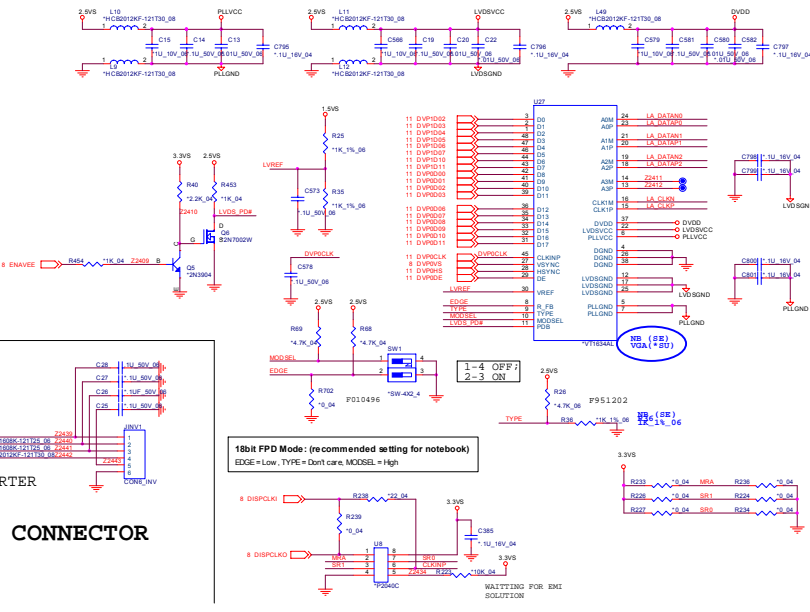

INVERTER CONNECTOR

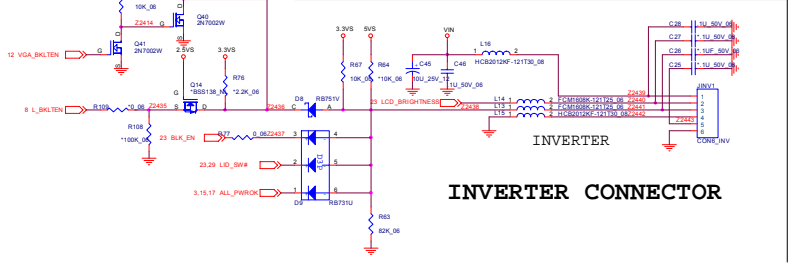


Sheet 24 of 40
CRT & LVDS


CPU FAN, LPC ROM

Sheet 25 of 40
CPU FAN,
LPC ROM

FAN CONTROL

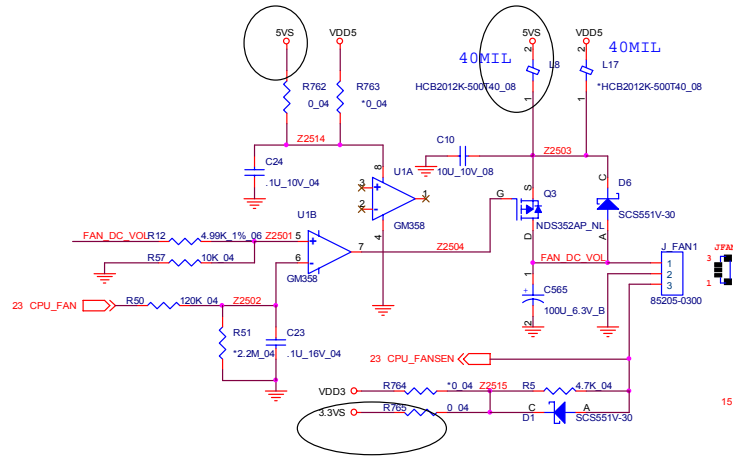

FW ROM

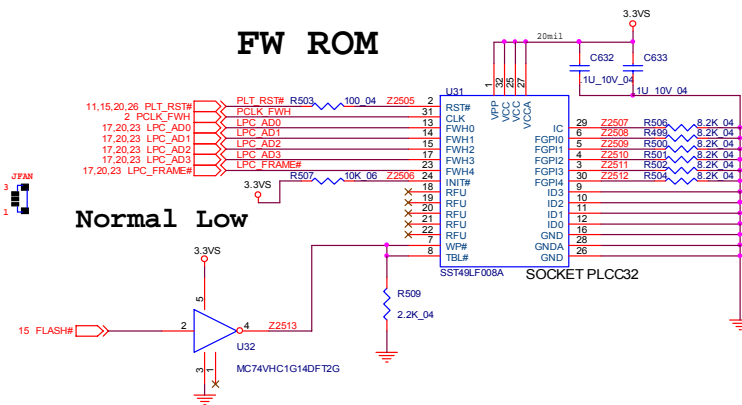


Normal Low


FWH_TBL#	FWH_WP#	Flash Mode
Low	Low	Protected
Low	High	Block 1-7
High	Low	Block 0
High	High	Block 0-7

MINI-PCI & BLUETOOTH


MINI-PCI CARD

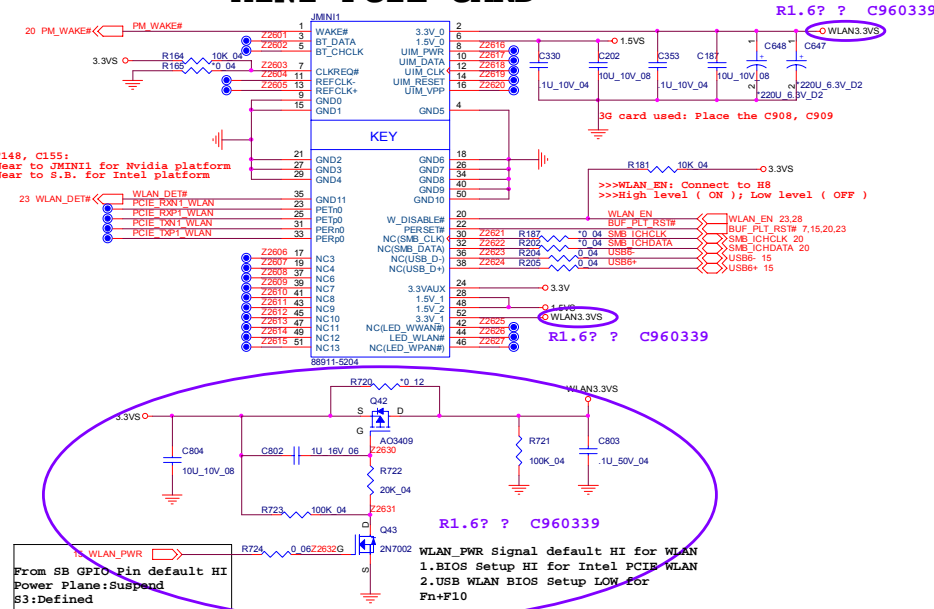

MINI FFC CONN

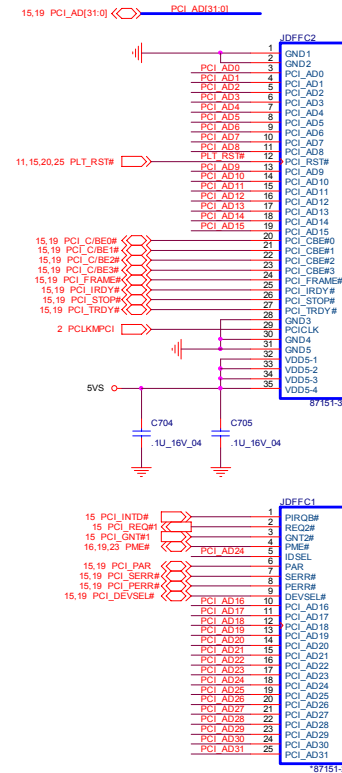


Bluetooth

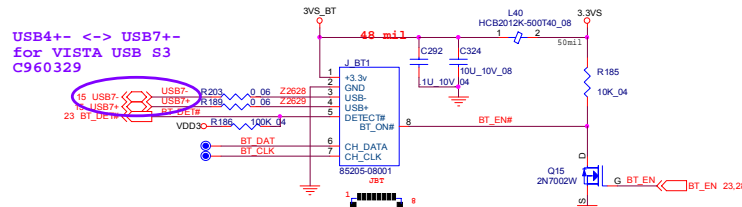

Sheet 26 of 40
MINI-PCI &
BLUETOOTH

LED

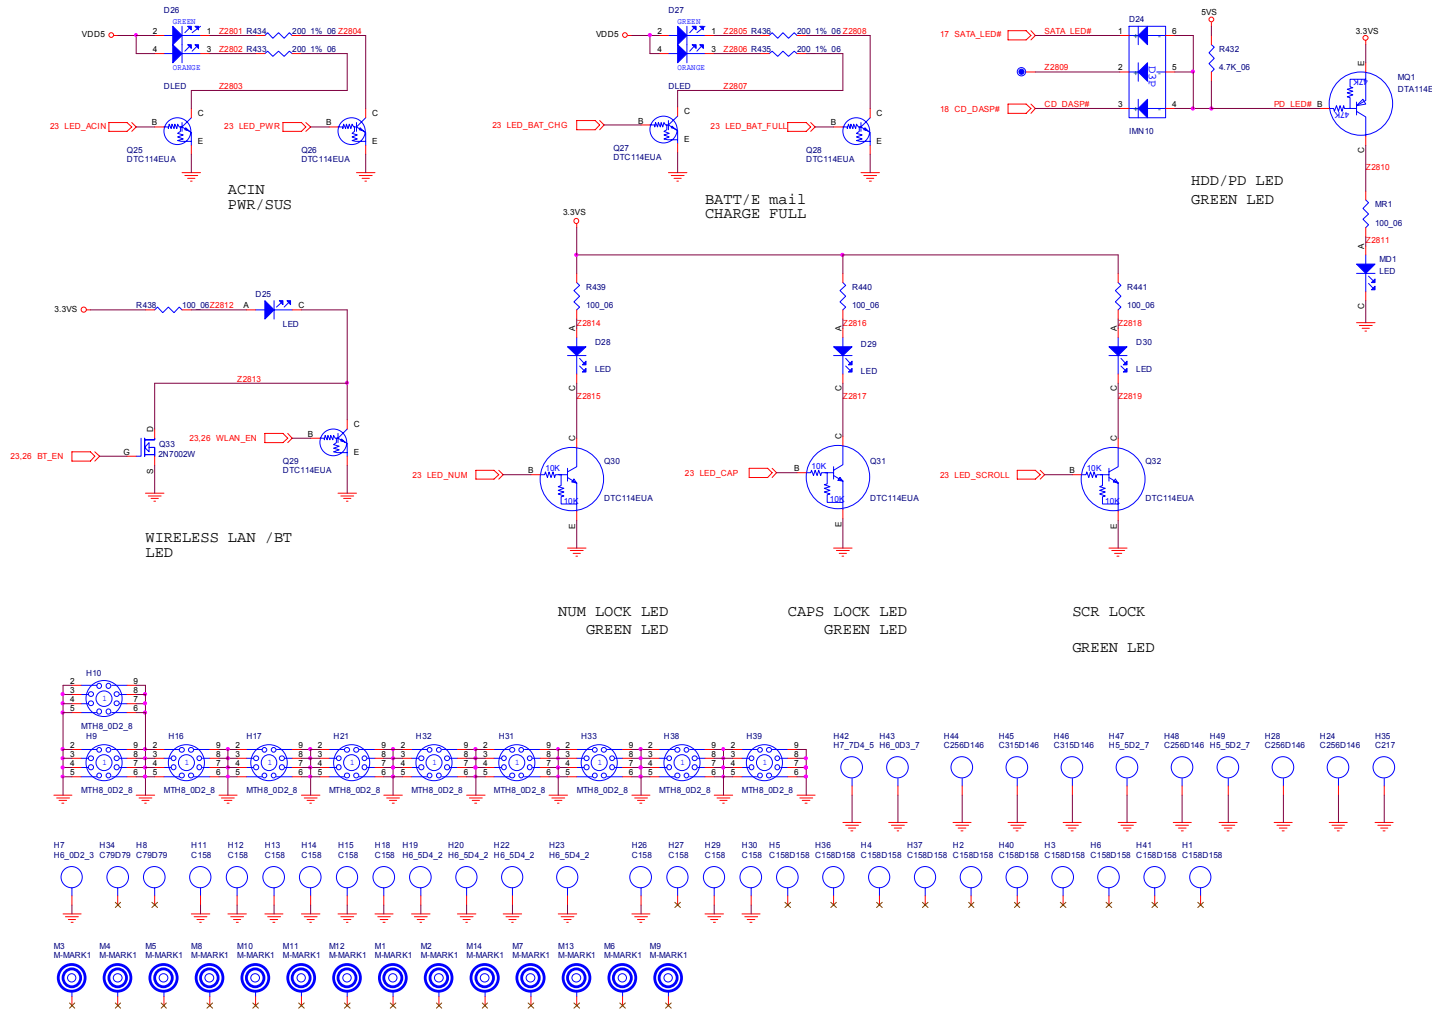


Sheet 28 of 40
LED


B.Schematic Diagrams

CHARGER, DC IN

Sheet 29 of 40
CHARGER, DC IN

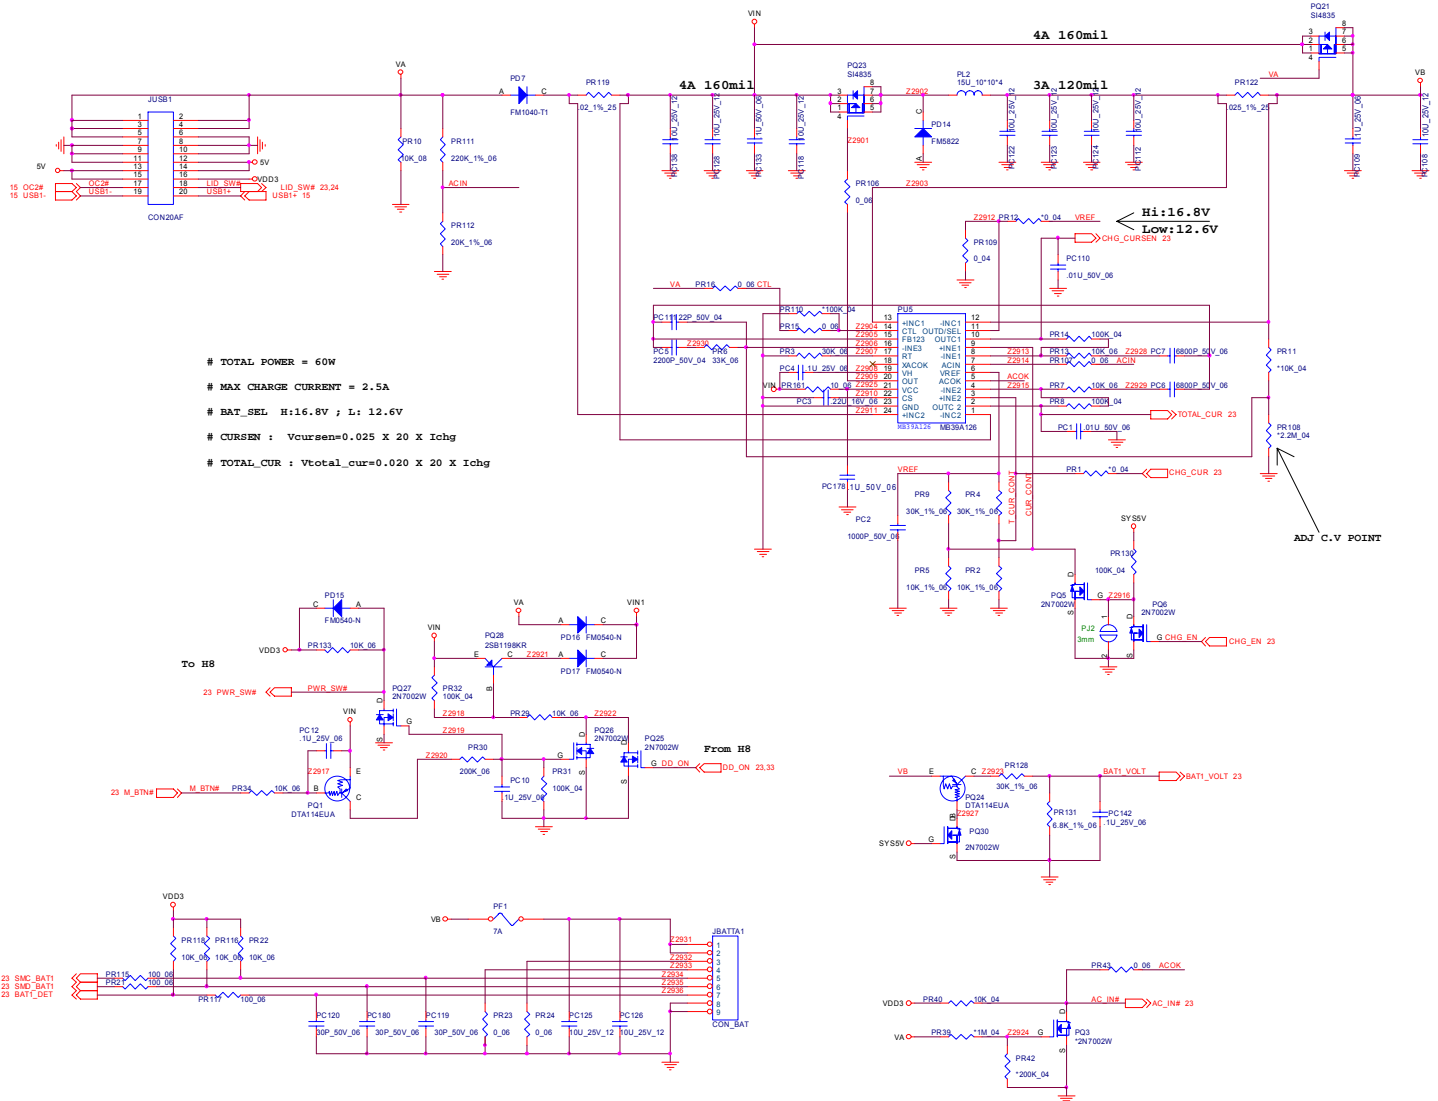

1.05VS, 1.5V, 2.5VS

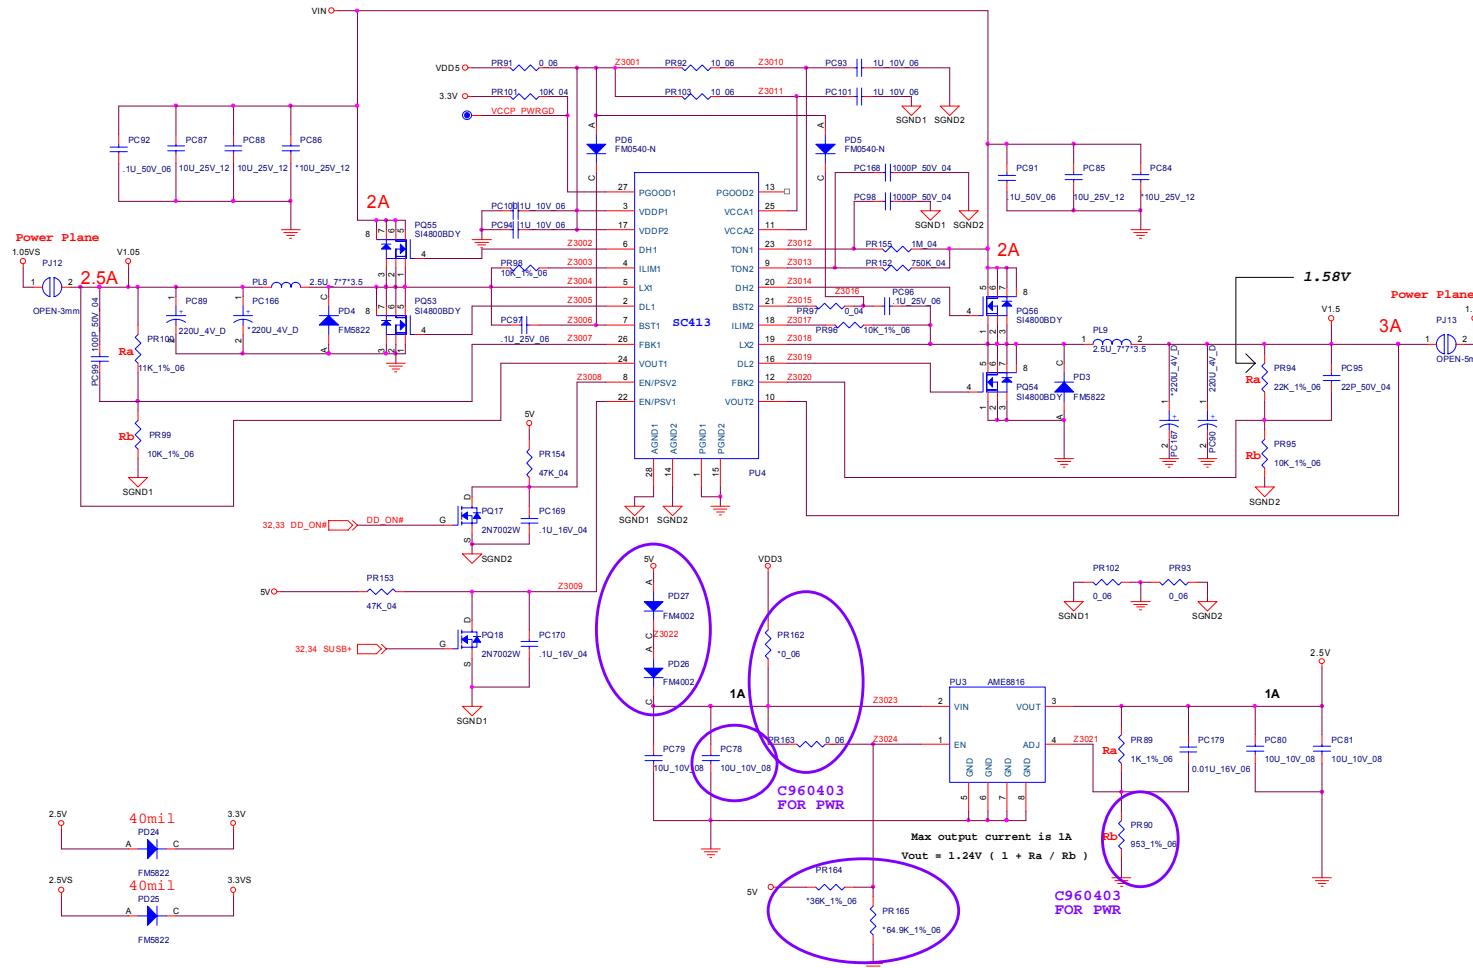


Sheet 30 of 40
1.05VS, 1.5V, 2.5VX

B. Schematic Diagrams


VCORE

VCORE FOR YUNA AND NAPA CPU

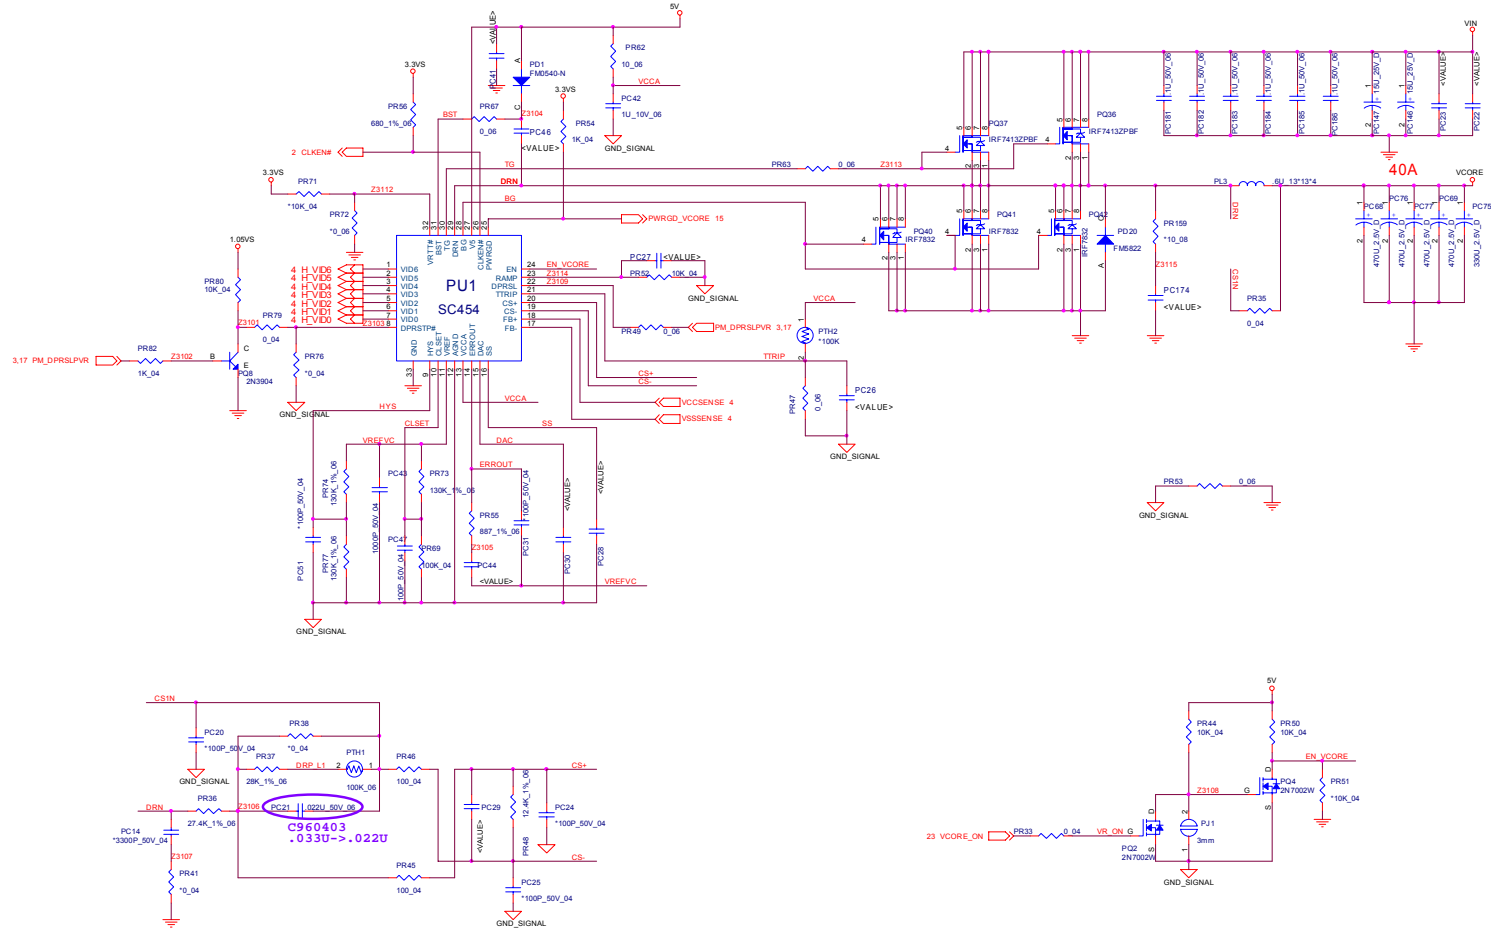

Sheet 31 of 40
VCORE


1.8V, 0.9VS

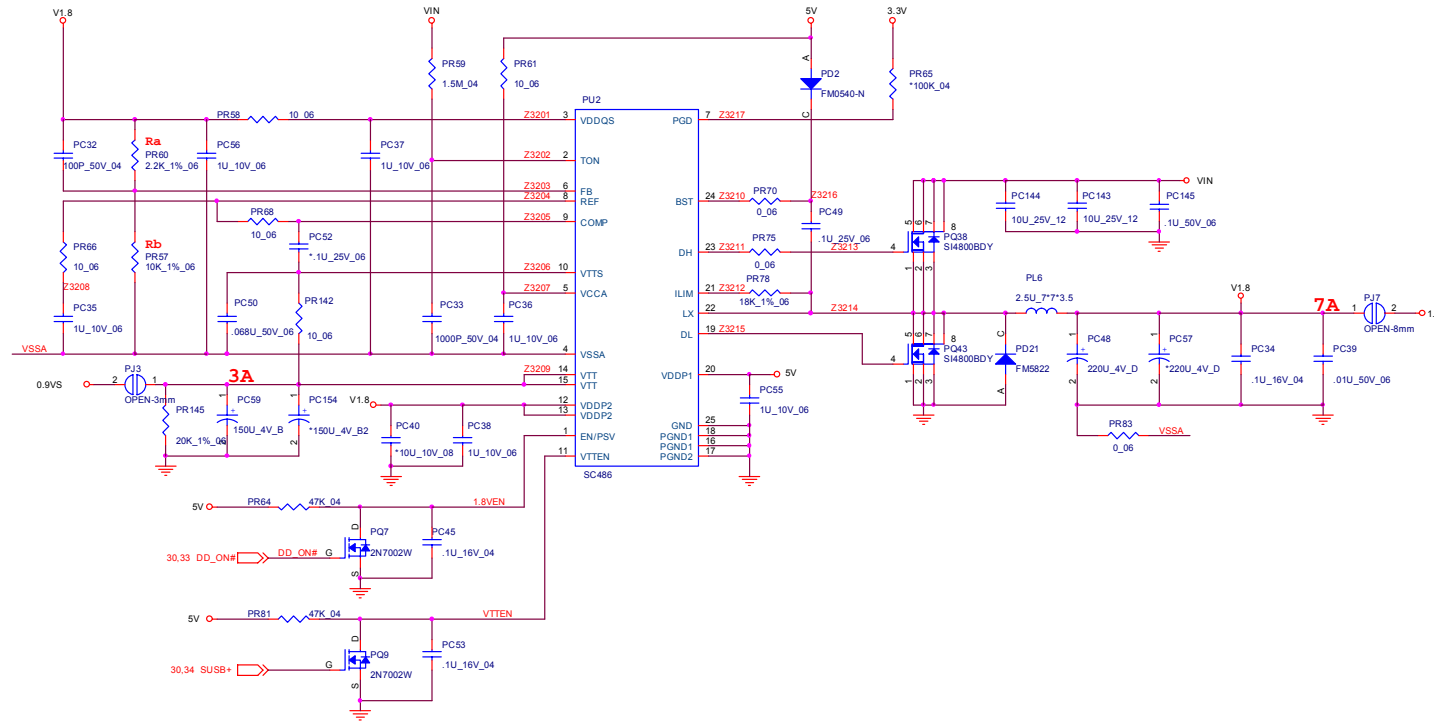


Sheet 32 of 40
1.8V, 0.9VS

VDD3, VDD5

Sheet 33 of 40
VDD3, VDD5

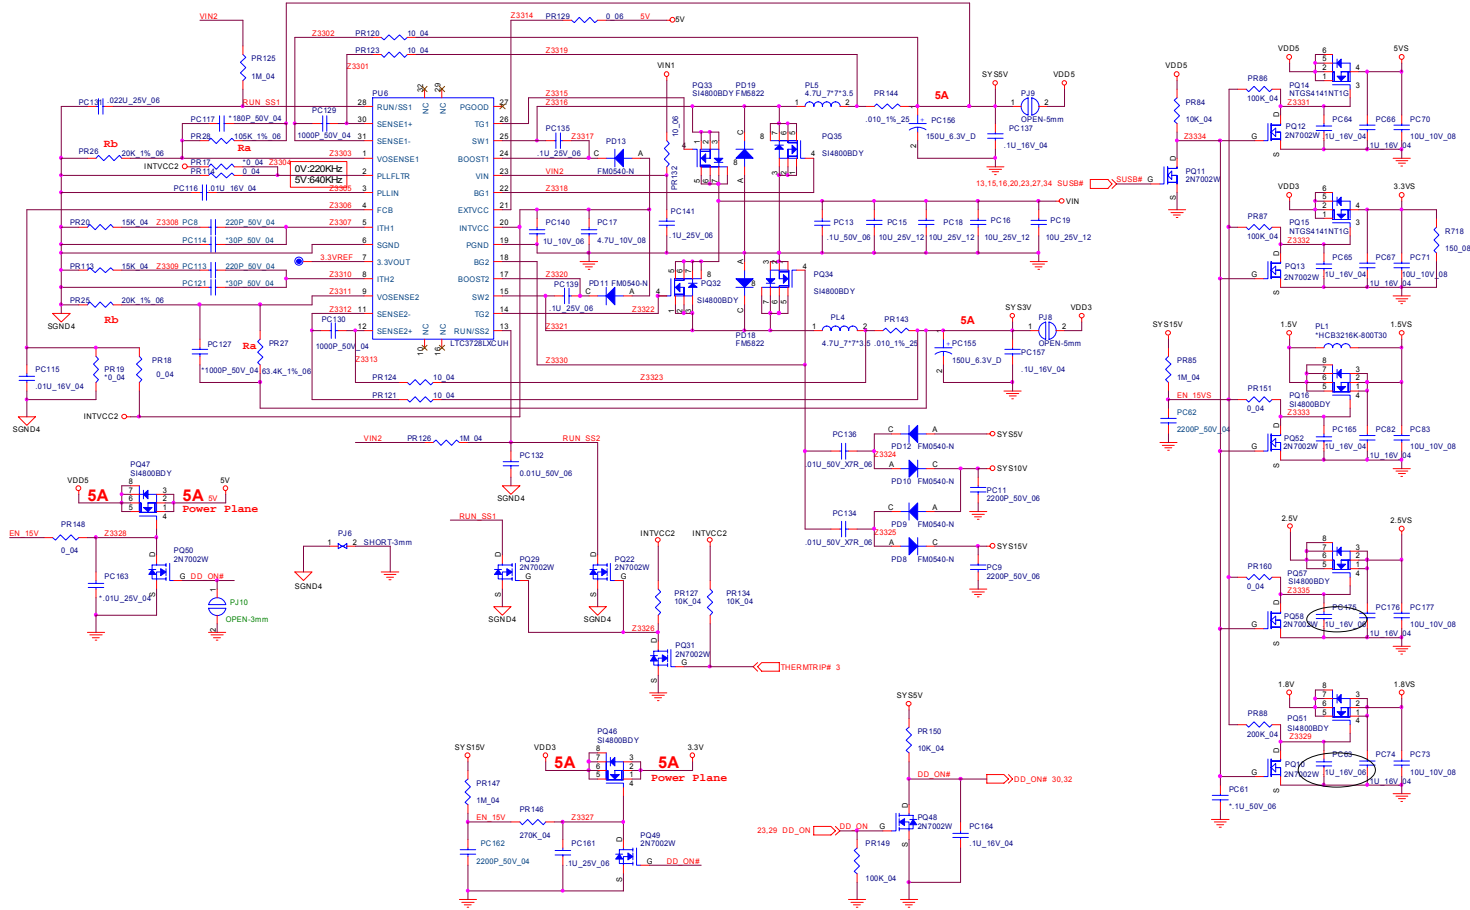


EXT GPU 1.0VS/1.2VS

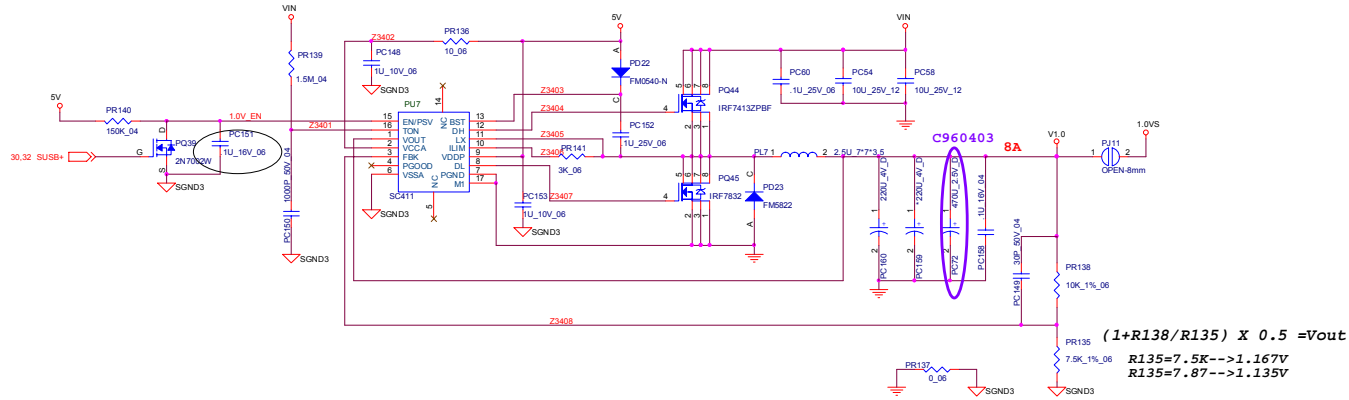


Sheet 34 of 40
EXT GPU 1.0VS/
1.2VS



B.Schematic Diagrams

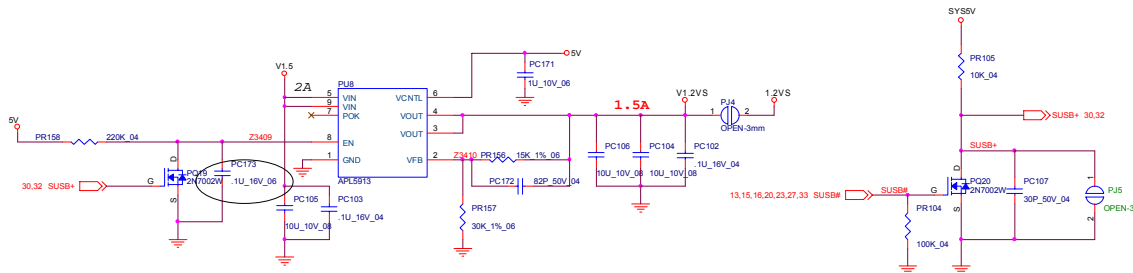




HOTKEY LT BOARD

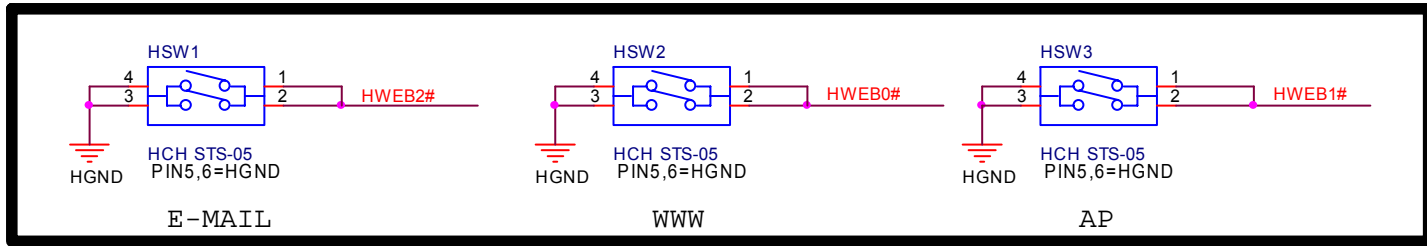

Sheet 35 of 40
HOTKEY LT
BOARD

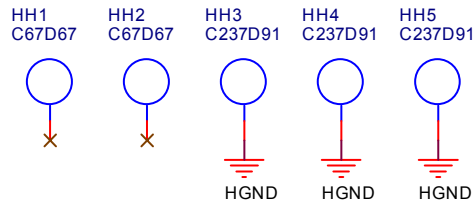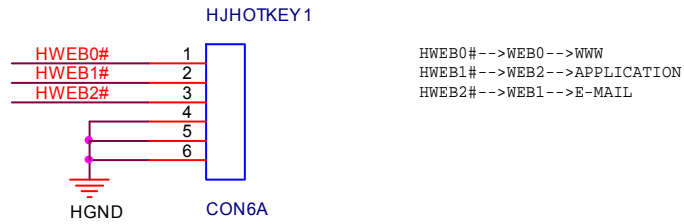

PWR HOT BOARD






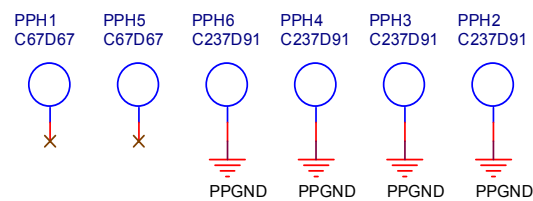
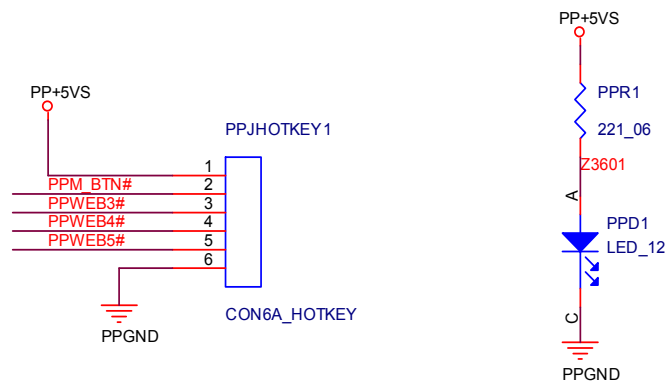
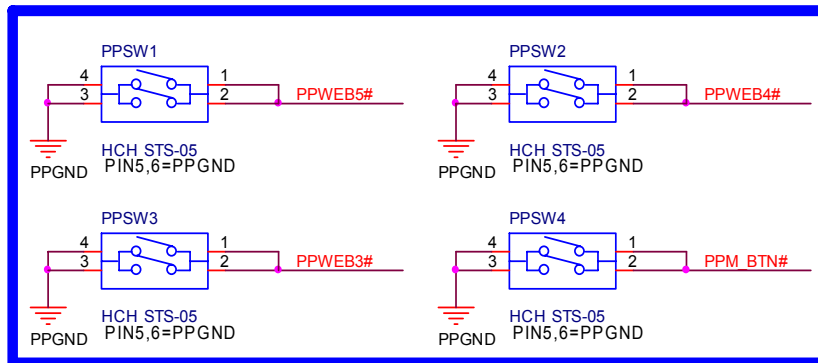


Sheet 36 of 40
PWR HOT BOARD


B.Schematic Diagrams

AUDIO & MODEM BOARD

Sheet 37 of 40
AUDIO & MODEM BOARD

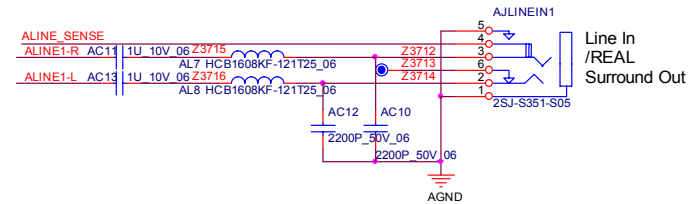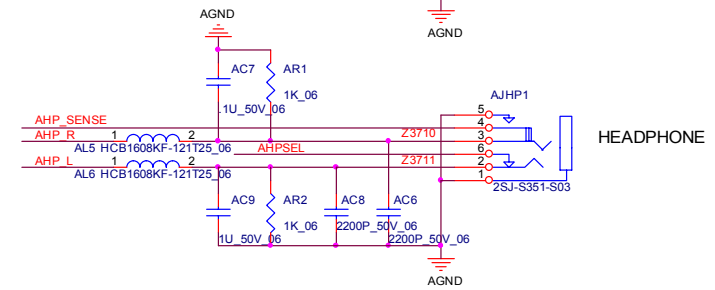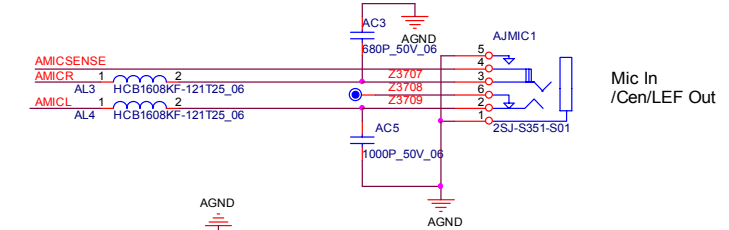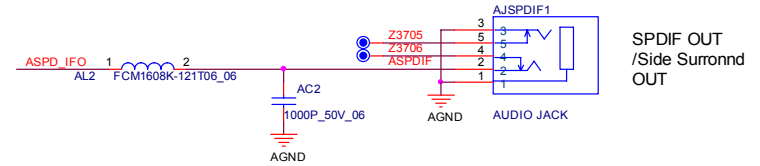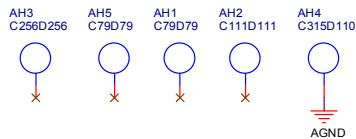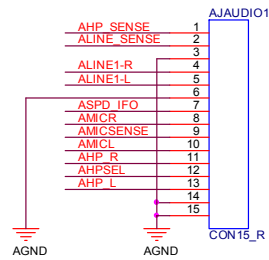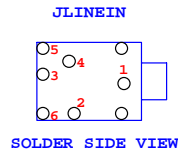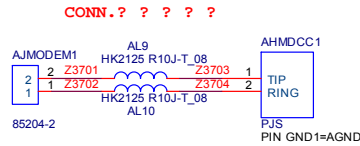

CLICK BOARD

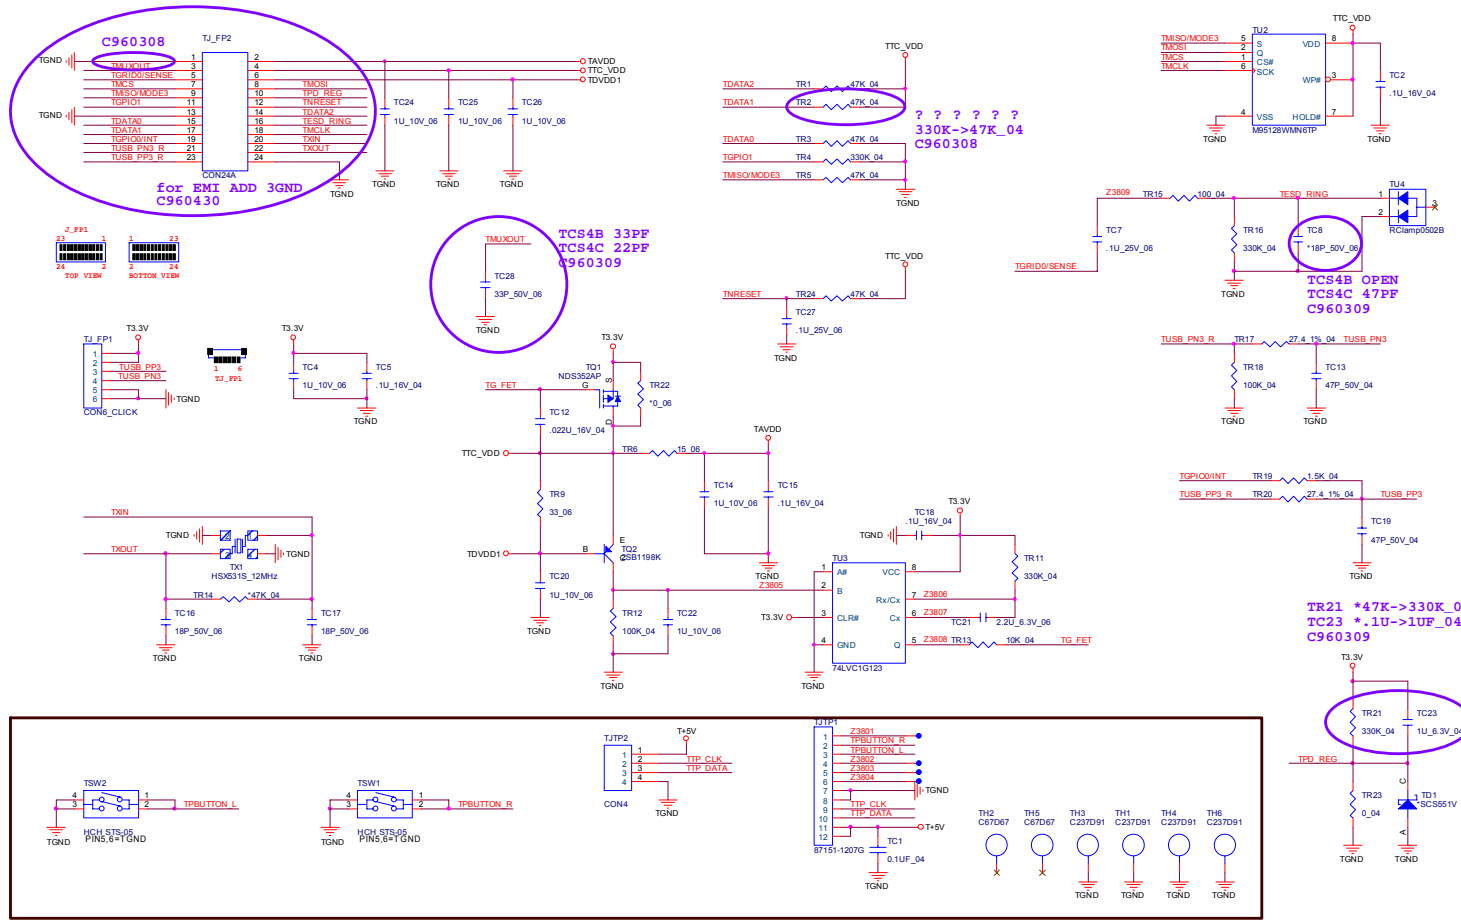

Sheet 38 of 40
CLICK BOARD


B.Schematic Diagrams

Schematic Diagrams



USB BOARD

B.Schematic Diagrams


Sheet 39 of 40
USB BOARD

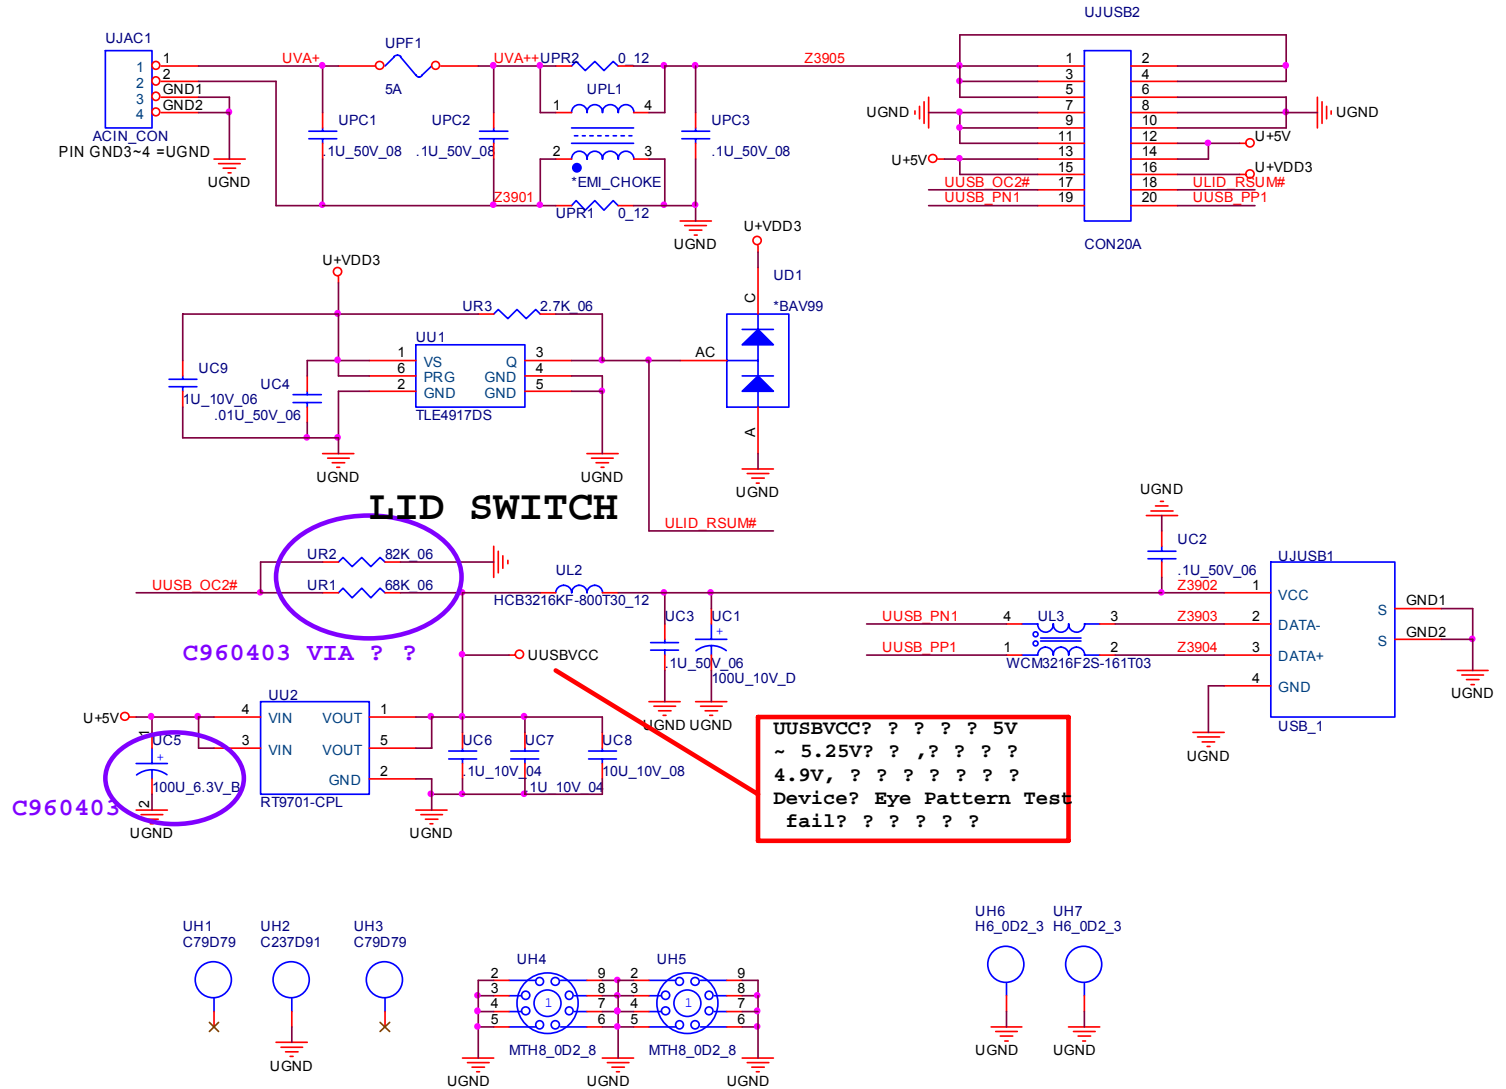

FINGERPRINT BOARD

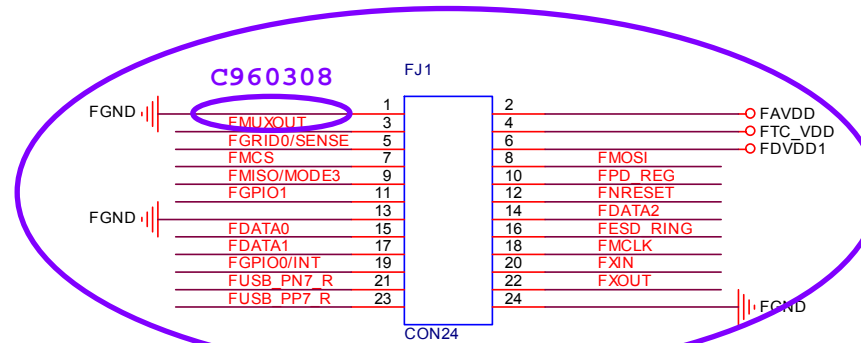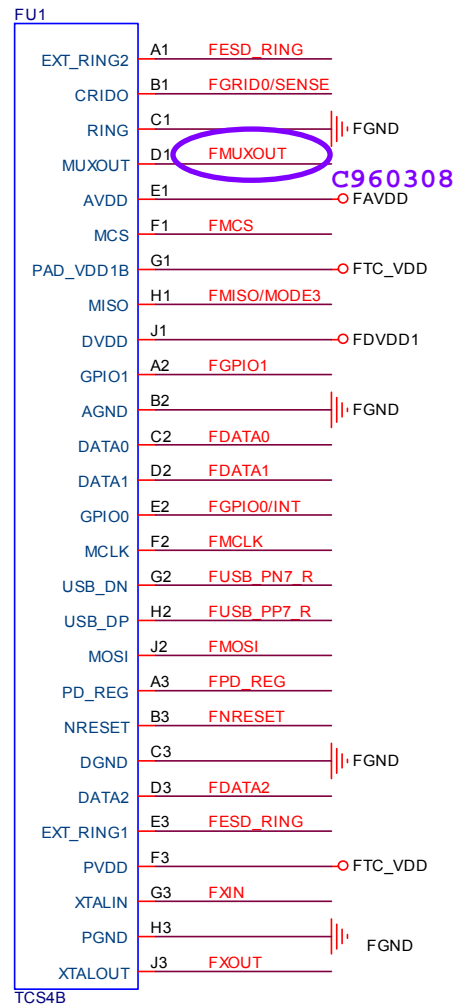

for EMI ADD 3GND
C960430

 

Sheet 40 of 40
FINGERPRINT
BOARD

Schematic Diagrams

www.s-manuals.com