

TABLE OF CONTENTS



Chapter 1: Getting Started	1-1
Introduction	1-2
Conventions Used	1-3
Mounting Clips – New Style	1-3
Product Overview	1-4
Part Number Key – Touch Panels	1-5
EZTouch Conversion and Mounting	1-6
EZTouch Touch Panel Cross Reference to C-more	1-7
Quick Start Steps	1-9
Step 1 – Unpack and Inspect	1-9
Step 2 – Assemble Temporary Support Stand	1-10
Step 3 – Install Optional Hardware Accessories	1-11
Step 4 – Become Familiar with Available Communication Ports	1-12
Step 5 – Install the Programming Software and Develop a Project	1-13
Step 6 – Connect Touch Panel to Computer	1-14
Step 7 – Provide Power to the Touch Panel	1-15
Step 8 – Access the Touch Panel Setup Screens	1-16
Step 9 – Choose Touch Panel to PLC Protocol & Cables	1-17
Step 10 – Connect Touch Panel to PLC	1-20
Chapter 2: Specifications	2-1
Available Models	2-2
Model Specifications	2-3
6" Base Feature Models	2-4
6" Full Feature Models	2-5
6" Obsolete Models	2-6

Table of Contents

8" and 10" Full Feature Models	2-8
12" and 15" Full Feature Models	2-9
EA7-S6M-R, S6C-R, T6CL-R, S6M, S6C, T6C, T6CL (Dimensions and Ports & Memory Exp.)	2-10
EA7-T8C (Dimensions and Ports & Memory Exp.)	2-12
EA7-T10C (Dimensions and Ports & Memory Exp.)	2-14
EA7-T12C (Dimensions and Ports & Memory Exp.)	2-16
EA7-T15C (Dimensions and Ports & Memory Exp.)	2-18
Mounting Clearances	2-20
Communications Ports	2-21
Audio WAV File Specifications	2-23
Memory Organization	2-24
Handling External Memory Devices	2-25
Power Loss Detection and Power Retention Period	2-26
Data Logging Function and Logging Media	2-26
Data Logging - Memory Device Full	2-26
Chemical Compatibility	2-27
Chapter 3: Accessories	3-1
Accessories	3-2
Accessories Overview	3-3
Accessories at a Glance	3-4
AC/DC Power Adapter – EA-AC	3-5
Expansion Assembly – EA-EXP-OPT	3-9
CF Card Interface Module – EA-CF-IF	3-12
CompactFlash Memory – EA-CF-CARD	3-14
6" Adapter Plate – EA-6-ADPTR	3-17
D-SUB 15-pin 90 degree Comm Port Adapter – EA-ADPTR-4	3-19
D-SUB 15-pin to Terminal Block Adapter – EA-COMCON-3	3-20
Non-glare Screen Covers – EA-xx-COV2, xx = 6, 8, 10, 12 or 15	3-22

Chapter 4: Installation and Wiring	4-1
Safety Guidelines	4-2
Introduction	4-3
EA7-S6M-R, S6C-R, T6CL-R, S6M, S6C, T6C, T6CL – Cutout Dimensions	4-4
EA7-T8C – Cutout Dimensions	4-5
EA7-T10C – Cutout Dimensions	4-6
EA7-T12C – Cutout Dimensions	4-7
EA7-T15C – Cutout Dimensions	4-8
6" Adapter Plate – EA-6-ADPTR	4-9
Mounting Clearances	4-11
Wiring Guidelines	4-12
Agency Approvals	4-12
Marine Use	4-12
Providing Power to the Touch Panel	4-13
DC Wiring Diagram	4-13
AC Wiring Diagram (EA-AC)	4-14
Chapter 5: System Setup Screens	5-1
Introduction	5-2
Chapter Organization	5-3
Accessing the System Setup Screens (no project loaded)	5-4
Accessing the System Setup Screens (with project loaded)	5-5
System Setup Screens – Enable Password in Software	5-7
System Setup Screens Flowchart	5-13
Main Menu	5-14
Information Menu	5-15
Setting Menu	5-19
Test Menu	5-25
Memory Menu	5-35

Chapter 6: PLC Communications	6-1
Introduction	6-2
DirectLOGIC PLCs Password Protection	6-2
PLC Communication Cables & Wiring Diagrams	6-5
PLC Communication Cables & Wiring Diagrams	6-6
AutomationDirect PLCs RS-232C Serial:	6-7
AutomationDirect PLCs RS-422A/RS-485A:	6-10
Direct LOGIC Universal Isolated Network Adapter, p/n FA-ISOCAN:	6-16
Direct LOGIC Universal Converter, p/n F2-UNICON:	6-17
RS-422A/RS-485A Multi-Drop Wiring Diagram Examples	6-18
Allen-Bradley:	6-22
GE:	6-27
GE VersaMax Micro:	6-27
Mitsubishi:	6-27
Omron:	6-29
Modicon ModBus RS-232:	6-30
Modicon Micro Series:	6-30
Modicon ModBus with RJ45:	6-30
Siemens:	6-31
Chapter 7: Maintenance	7-1
Project Backup	7-2
Check Operating Environment	7-2
Check Operating Voltage	7-2
Check Status Indicators	7-2
Check Physical Conditions	7-3
Run Tests under System Setup Screens	7-3
Check Memory Usage via System Setup Screens	7-4
Check/Adjust Display Brightness or Contrast	7-4
Check Error Log via System Setup Screens	7-4
Adjust Touch Panel via System Setup Screens	7-4
Replace Battery Periodically	7-5

Cleaning the Display Screen	7-5
Check Project Functionality	7-6
Checks from <i>C-more</i> Programming Software	7-6
Chapter 8: Troubleshooting	8-1
Common Problems	8-2
Toubleshooting Flow Chart	8-3
Touch Panel does not Power up	8-4
Display is Blank	8-5
Display is Dim	8-6
No User Program	8-7
No Communications between Panel and PC (Personal Computer) via USB	8-8
USB Driver Troubleshooting	8-10
No Communications between Panel and PC (Personal Computer) via Ethernet	8-12
No Communications between Panel and PLC	8-16
IP Address in System Setup Screens displays 0.0.0.0	8-19
Difficulty Connecting to the Panel over the Internet (Web server and Remote Access features)	8-20
PLC Protocol Error Codes	8-21
Touch Panel Runtime Errors	8-22
Panel Constantly Displays “Initializing” when Powering up	8-23
Data not Logging Problems	8-23
Loss of Date/Time and Retentive Data	8-24
Electrical Noise Problems	8-24
Chapter 9: Replacement Parts	9-1
Replacement Parts Overview	9-2
Replacement Parts at a Glance	9-2
Battery Replacement & Installation Instructions	9-3
6” Panel Mounting Clip Replacements & Installation	9-5

8-15" Panel Mounting Clip Replacements & Installation	9-6
DC Panel Power Connector Replacement	9-7
AC Power Adapter Connector Replacement	9-7
8-15" Panel Backlight Bulb Replacements & Installation	9-8
6-15" Panel Gasket Replacement & Installation	9-11
8-15" Panel Bezel Replacement & Installation	9-12
6" Adapter Plate Gasket Replacement & Installation	9-14
Appendix A: PLC Protocol Error Codes	A-1
Introduction	A-2
C-more Touch Panel Error Code Table	A-3
DirectLOGIC – Panel Error Code PLC-499 Explanation	A-5
DirectLOGIC K-Sequence Protocol – PLC Error Code Table	A-5
DirectLOGIC DirectNET Protocol – PLC Error Codes	A-5
Modbus Protocols Error Code P499 Explanation	A-6
AutomationDirect CLICK	A-6
AutomationDirect DirectLOGIC - Modbus (Koyo)	A-6
Modicon Modbus RTU	A-6
Entivity Modbus RTU	A-6
DirectLOGIC ECOM Protocol – PLC Error Codes	A-6
Productivity3000 Error Code P499	A-7
Allen-Bradley – Panel Error Code PLC-499 Explanation	A-8
Allen-Bradley DF1 & DH485 Protocols – PLC Error Code Tables	A-9
Allen-Bradley EtherNet/IP Protocol –Panel Error Code PLC-496, 497 and 498 Explanation	A-11
Allen-Bradley – EtherNet/IP Protocol – PLC Error Code TablesControlLogix, CompactLogix, & FlexLogix	A-12
Allen-Bradley – EtherNet/IP Protocol – PLC Error Code TablesMicroLogix 1100, 1400 & SLC 5/05, both via native Ethernet port;MicroLogix 1000, 1100, 1200, 1400, 1500, SLC 5/03/04/05, all via ENI Adapter	A-16
Generic EtherNet IP Protocol – PLC Error Codes	A-21

GE 90-30 – Panel Error Code PLC-499 Explanation	A-22
GE 90-30 SNPX Protocol – PLC Error Code Tables	A-23
Mitsubishi FX Protocol – PLC Error Codes	A-32
Omron – Panel Error Code PLC-499 Explanation	A-32
Omron Host Link Protocol – PLC Error Code Table	A-33
Omron FINS Protocol – PLC Error Code Table	A-34
Omron – Panel Error Code P495 Explanation	A-37
Omron CS/CJ FINS Ethernet Protocol – PLC Error Code Table	A-38
Siemens – Panel Error Code P499 Explanation	A-39
Siemens PPI Protocol – PLC Error Code Table	A-40
Siemens ISO over TCP Protocol – PLC Error Code Table	A-41
Appendix B: Touch Panel Runtime Errors	B-1
Introduction	B-2
Runtime Errors	B-3
Appendix C: Mounting Clips Prior April 2006	C-1
Introduction	C-2
EA7-S6M-R, S6C-R, S6M, S6C & T6C	C-3
EA7-T8C	C-5
EA7-T10C	C-7
EA7-T12C	C-9
EA7-T15C	C-11
Index	