

# Table of Contents

---

## Chapter 1: Getting Started

<b>Introduction</b> .....	<b>1-2</b>
The Purpose of this Manual .....	1-2
Where to Begin .....	1-2
Supplemental Manuals .....	1-2
Technical Support .....	1-2
Chapters .....	1-3
Appendices .....	1-3
<b>What is Remote I/O?</b> .....	<b>1-4</b>
When Do You Need Remote I/O? .....	1-4
How Does the DL205 Support Remote I/O? .....	1-5
Number of Masters and Slaves Allowed (RM-NET) .....	1-6
Distance Between Slaves and Master, Baud Rates (RM-NET) .....	1-6
Number of Masters and Slaves Allowed (SM-NET) .....	1-7
Distance Between Slaves and Master, Baud Rates (SM-NET) .....	1-7
<b>Remote Master (D2-RMSM) Features</b> .....	<b>1-8</b>
Functional Specifications .....	1-8
Physical Specifications .....	1-9
<b>Remote Slave (D2-RSSS) Features</b> .....	<b>1-10</b>
Functional Specifications .....	1-10
Physical Specifications .....	1-11
<b>Assigning the Remote Input and Output Addresses</b> .....	<b>1-12</b>
Assign the Addresses .....	1-12
Remote I/O Data Types .....	1-12
<b>How the CPU Updates Remote I/O Points</b> .....	<b>1-14</b>
<b>3 Easy Steps for Setting Up Remote I/O</b> .....	<b>1-15</b>
Design the Remote I/O System .....	1-15
Install the Components .....	1-15
Write the Setup Program .....	1-15
<b>Frequently Asked Questions</b> .....	<b>1-19</b>

## Chapter 2: Designing a Remote I/O System

<b>Determining the System Layout</b> .....	<b>2-2</b>
Determine the Hardware Configuration .....	2-2
Which Modules can go in the Remote Bases .....	2-3
Determine I/O Needed and How Many Masters & Slaves .....	2-4
Define the System Details By Using Worksheets .....	2-5
Choosing the Protocol Mode – RM-NET vs. SM-NET .....	2-5
Choosing the Output Default Mode – Hold Last State vs. Clear .....	2-6
Auto Return to Network Option .....	2-6
Completing the Channel Configuration Worksheet (top half) .....	2-7
Completing the Remote Slave Worksheet for Slave #1 .....	2-8
Completing the Remote Slave Worksheet for Slave #2 .....	2-9
Completing the Remote Slave Worksheet for Slave #3 .....	2-10
Completing the Channel Configuration Worksheet (bottom half) .....	2-11
<b>Calculating the Power Budget</b> .....	<b>2-12</b>
Managing your Power Resource .....	2-12
Base Power Specifications .....	2-12

---

Module Power Requirements .....	2-13
Power Budget Calculation Example .....	2-14
<b>Chapter 3: Installation &amp; Field Wiring Guidelines</b>	
<b>Introduction</b> .....	<b>3-2</b>
4 Easy Steps: .....	3-2
<b>Step One: Setting the Rotary Switches</b> .....	<b>3-3</b>
<b>Step Two: Setting the Rear DIP Switches</b> .....	<b>3-4</b>
Example Showing Proper Setting of Switches .....	3-6
<b>Step Three: Inserting the Module in the Base</b> .....	<b>3-7</b>
<b>Step Four: Connecting the Wiring</b> .....	<b>3-8</b>
General Wiring Guidelines .....	3-8
Cable Recommendation .....	3-8
Cabling Between the D2-RMSM Master and Slaves .....	3-8
Termination Resistors .....	3-9
Cabling Between the D2-250 CPU bottom port and Slaves .....	3-10
Cabling Between the D3-350 CPU bottom port and Slaves .....	3-11
<b>Using the Slave Unit Communications Port</b> .....	<b>3-12</b>
Port Specifications .....	3-12
Port Pinout .....	3-12
Port Cabling .....	3-12
<b>Chapter 4: D2-RMSM Setup Programming</b>	
<b>Getting Started with Your Programming</b> .....	<b>4-2</b>
<b>Writing Your Remote I/O Setup</b> .....	<b>4-3</b>
Step 1: Decide How You Are Going to Call Your Program .....	4-3
Step 2: Write the Setup Logic for Each Channel .....	4-4
<b>Examples for Typical Configurations</b> .....	<b>4-5</b>
Example 1: Addressing using X and Y memory .....	4-5
Example 2: Addressing using Control Relay memory .....	4-10
<b>Changing Configurations</b> .....	<b>4-13</b>
<b>Shared Memory Table for D2-RMSM Remote Master</b> .....	<b>4-14</b>
<b>Chapter 5: DL250/DL350 CPU Setup &amp; Programming</b>	
<b>DL250/DL350 CPU Bottom Port as Remote Master</b> .....	<b>5-2</b>
<b>Writing Your Remote I/O Setup for a DL250/DL350 CPU</b> .....	<b>5-3</b>
Step 1: Decide How You Are Going to Call the Program .....	5-3
Step 2: Write the Setup Logic for Each Channel .....	5-4
<b>Examples for Typical Configurations</b> .....	<b>5-5</b>
Example 1: Using X and Y addresses as the remote I/O memory types .....	5-5
Example 2: Using Control Relays as a remote I/O memory type .....	5-10
Example 3: Using V memory as a remote I/O type .....	5-13
<b>Configuring the bottom port of the DL250 or DL350 CPU</b> .....	<b>5-16</b>
<b>DL250/DL350 Reserved Memory for 2nd Port as Remote Master</b> .....	<b>5-17</b>

## Chapter 6: Diagnostics and Troubleshooting

<b>Troubleshooting Remote I/O</b> .....	<b>6-2</b>
Module Indicators .....	6-2
Troubleshooting Quick Steps .....	6-3
Troubleshooting Chart .....	6-4
<b>Special CPU Memory for Diagnostics</b> .....	<b>6-6</b>
Communication Status Flags in V-memory .....	6-6
Error Flags in V-memory .....	6-7
<b>D2-RMSM Memory for Diagnostics</b> .....	<b>6-8</b>
Hardware Status .....	6-8
Bus Scan Status .....	6-8
Network Errors .....	6-9
<b>How to Access Diagnostics Information</b> .....	<b>6-11</b>
Example 1: Reading Diagnostic Errors .....	6-12
Example 2: Writing Bus Scan Overlimit and Reading Bus Scan Status .....	6-13

## Appendix A : Remote I/O Worksheets

## Appendix B: Reserved Memory Tables

<b>Standard Input (X) Addresses</b> .....	<b>B-2</b>
<b>Standard Output (Y) Addresses</b> .....	<b>B-3</b>
<b>Control Relay (C) Addresses</b> .....	<b>B-4</b>

## Appendix C: Determining I/O Update Time

<b>Overview</b> .....	<b>C-2</b>
<b>Remote I/O Update Table</b> .....	<b>C-3</b>
Remote Scan Time Formula .....	C-3
<b>Calculating Total Delay for the System</b> .....	<b>C-4</b>
Total Delay Time Formulas .....	C-5
Delay Time Example .....	C-6