



# **TABLE OF CONTENTS**

## **Chapter 1: Introduction**

<b>Introduction</b>	<b>1-2</b>
The Purpose of this Manual	1-2
Who Can and Should Use DirectSOFT 6	1-2
Only One DirectSOFT 6 Version	1-3
Supplemental Manuals	1-4
Technical Support	1-4
<b>Conventions Used</b>	<b>1-5</b>
Menu Selections and Keystrokes	1-5
Key Topics for Each Chapter	1-5

## **Chapter 2: Quick Start**

<b>Getting to Know Windows</b>	<b>2-2</b>
Recommended System Requirements	2-2
Power Supply	2-2
<i>DirectSOFT 6</i> Package Contents	2-2
<b>Installation of <i>DirectSOFT 6</i></b>	<b>2-3</b>
<b>Getting Started</b>	<b>2-8</b>
<b>Welcome to <i>DirectSOFT 100</i></b>	<b>2-12</b>
<b>Begin Editing a Program</b>	<b>2-14</b>
<b>Establish the Communication Link</b>	<b>2-24</b>

Connect the PC to the PLC .....	2-24
<b>Monitor the Program .....</b>	<b>2-30</b>

Chapter 3: Managing Projects

<b>Get Started Using <i>DirectSOFT 6</i> .....</b>	<b>3-2</b>
Understanding the Launch Window .....	3-2
<b>Create a New Project .....</b>	<b>3-4</b>
New Program .....	3-4
Enter the New Project Information .....	3-4
<b>Importing Projects .....</b>	<b>3-5</b>
Program Documentation Mapping from TISOFT and Logicmaster .....	3-6
<b>Copy or Save Existing <i>DirectSOFT</i> Files .....</b>	<b>3-7</b>

Chapter 4: Programming Environment

<b>Offline Toolbar Components .....</b>	<b>4-2</b>
Offline Toolbar .....	4-2
<b>Online Toolbar Components .....</b>	<b>4-5</b>
Online Toolbar .....	4-5
<b>Additional Toolbars .....</b>	<b>4-6</b>
The File Toolbar .....	4-7
The Edit Toolbar .....	4-8
The Search Toolbar .....	4-9
The View Toolbar .....	4-10
The Tools Toolbar .....	4-11
The PLC Toolbar .....	4-12
The PLC Diagnostics Toolbar .....	4-13
The PLC Setup Toolbar .....	4-13
The Debug Toolbar .....	4-15
The Window Toolbar .....	4-16
The Help Toolbar .....	4-17

The Custom Toolbar .....	4-17
<b>Status Bar Components .....</b>	<b>4-19</b>
PLC System Information .....	4-19
Communication/Link Information .....	4-20
PLC Mode .....	4-20
Program Memory Usage .....	4-20
PLC Type .....	4-20
Program Location .....	4-20
<b>The Options Dialog .....</b>	<b>4-21</b>
Ladder Options .....	4-22
Global Options .....	4-23
<b>Colors in <i>DirectSOFT</i> 6 .....</b>	<b>4-24</b>
Select New Colors .....	4-24
Color Selections .....	4-25
The Default Settings .....	4-25
Monochrome .....	4-25
Colors Conveying Information .....	4-26
Select a Theme .....	4-27
<b>The Ladder Palette .....</b>	<b>4-28</b>
Be Familiar with the Ladder Palette .....	4-28
<b>The Split Screen Feature .....</b>	<b>4-30</b>
Split Screen Bar .....	4-30
<b>The New Window Feature .....</b>	<b>4-31</b>

## Chapter 5: Edit a Program

<b>I/O Configuration .....</b>	<b>5-2</b>
<b>Referencing Program Elements .....</b>	<b>5-4</b>
Data Types .....	5-4
Aliases .....	5-5
Timer/Counter Current Values .....	5-5
Accessing I/O Points as Memory Locations .....	5-5

**Entering Program Instructions . . . . . 5-6**

    The Instruction Editor . . . . . 5-6

    Using the Ladder Palette . . . . . 5-8

    Opening the Instruction Browser . . . . . 5-8

**Shortcuts for Entering Instructions . . . . . 5-11**

    Entering NO and NC Contacts . . . . . 5-12

    Entering Instructions in Parallel . . . . . 5-13

    Entering Power Flow Instructions . . . . . 5-14

    Entering Special Case Elements . . . . . 5-16

    End Coil . . . . . 5-17

    Setting and Resetting a Bit . . . . . 5-18

    Using Floating Point Math . . . . . 5-18

**Drawing/Deleting Connecting Lines. . . . . 5-19**

    Drawing the Lines . . . . . 5-19

    Create Midline Outputs . . . . . 5-20

    Deleting Connecting Lines . . . . . 5-20

**Selecting Rungs for Deleting, Cutting or Copying . . . . . 5-21**

**Deleting Rungs . . . . . 5-22**

**Copying Rungs. . . . . 5-23**

**Cut and Paste Rungs . . . . . 5-25**

**Merge (Combine) Rungs . . . . . 5-26**

**Inserting Columns, Rows and Rungs . . . . . 5-27**

    Insert a Column to Add an Instruction . . . . . 5-27

    Insert a Row or Rung . . . . . 5-28

**Using Search and Replace . . . . . 5-29**

    Using the Object Section . . . . . 5-29

    The Search Range Section . . . . . 5-30

    The Document Section. . . . . 5-30

    The Object Table Section . . . . . 5-30

**Common Mistakes . . . . . 5-31**

    Failure to Enter the Edit Mode . . . . . 5-31

AND above a Join .....	5-31
Forgetting to Select Rungs .....	5-31

## Chapter 6: Documentation

<b>Turn Documentation On and Off .....</b>	<b>6-2</b>
The Options Dialog .....	6-2
Documentation Selections .....	6-3
General Documentation .....	6-3
<b>Using the Documentation Editor .....</b>	<b>6-4</b>
Using the Scroll Buttons .....	6-4
Copying Documentation Between Elements .....	6-5
<b>Documenting and Assigning Nicknames .....</b>	<b>6-6</b>
Create an Unassigned Nickname .....	6-6
Assign the Nickname to an Element .....	6-6
<b>Entering Rung Comments .....</b>	<b>6-9</b>
Comments are Free-form .....	6-9
Selecting Rungs for Comments .....	6-9
Using the Scroll Buttons .....	6-10
Use the Editing Keys .....	6-10
Move Rung Comments .....	6-11
<b>Entering Stage Comments .....</b>	<b>6-12</b>
Use Stage View .....	6-12
Comments are Free-form .....	6-13
Selecting Stages to Comment .....	6-13
Editing the Comments .....	6-13
<b>Importing and Exporting .....</b>	<b>6-14</b>
Exporting Program Documentation .....	6-14
Export Element Documentation .....	6-16
Export Rung Comments .....	6-18
Importing a Program .....	6-19
Importing Element Documentation .....	6-22

Table of Contents

Importing Program Comments . . . . .	6-24
Insert Instructions . . . . .	6-24
Restore . . . . .	6-27
<b>Prevent Documentation Loss . . . . .</b>	<b>6-28</b>
Save Project . . . . .	6-28
Backup Project . . . . .	6-29

Chapter 7: Other Views

<b>Tabbed Views . . . . .</b>	<b>7-2</b>
The Primary Views . . . . .	7-2
<b>Stage (RLL<sup>PLUS</sup>) View . . . . .</b>	<b>7-4</b>
Troubleshooting RLL <sup>PLUS</sup> vs. RLL . . . . .	7-4
Stage Components . . . . .	7-5
<b>Mnemonic View . . . . .</b>	<b>7-6</b>
Handheld Programmer Aid . . . . .	7-6
<b>Cross Reference (XRef) View . . . . .</b>	<b>7-7</b>
XRef Mode . . . . .	7-7
Change the XRef Query . . . . .	7-8
XRef Toolbar . . . . .	7-9
Usage Mode . . . . .	7-10
Usage Mode Toolbar . . . . .	7-10
XRef DB . . . . .	7-11
<b>PID View . . . . .</b>	<b>7-12</b>
PID Setup . . . . .	7-12
<b>Trend View . . . . .</b>	<b>7-14</b>
Creating a new Trend View . . . . .	7-14
<b>Output Window . . . . .</b>	<b>7-16</b>
<b>Bookmark . . . . .</b>	<b>7-18</b>
<b>View Terminology . . . . .</b>	<b>7-19</b>

## Chapter 8: Printing

<b>Print the Current View</b> .....	<b>8-2</b>
Print the Ladder View .....	8-2
Other Print Views .....	8-3
<b>Print Multiple Views</b> .....	<b>8-5</b>
<b>Print View Common Setup</b> .....	<b>8-7</b>
<b>Using Print Preview</b> .....	<b>8-8</b>
Print Preview Setup .....	8-8
Print Preview .....	8-9
<b>Print Troubleshooting</b> .....	<b>8-10</b>
Parts of Program not Printed .....	8-10
Program Prints “Garbage” .....	8-10
<i>DirectSOFT 6</i> Crashes .....	8-10
Print Setup Dialog .....	8-11

## Chapter 9: Setup & Manage Communication Links

<b>Establish the Communication Link</b> .....	<b>9-2</b>
<b>Setup a Serial Link</b> .....	<b>9-2</b>
Link Status .....	9-6
<b>Setup an Ethernet Link</b> .....	<b>9-7</b>
NetEdit3 Troubleshooting Tips .....	9-12
<b>Setup a Modem Link</b> .....	<b>9-14</b>
Modem Setup .....	9-14
Configuring the Link .....	9-18
<b>Comm Link Options</b> .....	<b>9-22</b>
<b>Going Online</b> .....	<b>9-24</b>
Connect the PLC .....	9-24
Use the Project Folder .....	9-24

Use the Link . . . . .	9-24
------------------------	------

Chapter 10: Debugging and Monitoring

<b>Monitor with Data View . . . . .</b>	<b>10-2</b>
Using Data View. . . . .	10-2
Open a New Data View Window . . . . .	10-2
A Closer Look. . . . .	10-3
Data View Options . . . . .	10-4
Select Bits for Display . . . . .	10-5
Data View Documentation Options . . . . .	10-7
Apply Options. . . . .	10-7
Data View Mode Options . . . . .	10-8
Make Data View Entries. . . . .	10-8
Data Format and Size . . . . .	10-10
Write the Edits . . . . .	10-11
Auto-increment. . . . .	10-12
Editing Entries . . . . .	10-12
Save the Data View Window . . . . .	10-13
Using Pause Bits . . . . .	10-14
Use Override Bits to Control I/O (DL05/06/240/250-1/260/350/450/454 Only) . . . . .	10-15
<b>Change Value Dialog . . . . .</b>	<b>10-16</b>
Use the Change Value Dialog . . . . .	10-16
Specify an Element Reference or Nickname . . . . .	10-17
Enter a New Value . . . . .	10-18
<b>Using the Memory Editor. . . . .</b>	<b>10-20</b>
Select the Locations to View . . . . .	10-20
<b>Test Mode Operations for Debugging . . . . .</b>	<b>10-22</b>
Select Test Mode. . . . .	10-22
Test Program Operations. . . . .	10-23
The Test Operations Window . . . . .	10-24
<b>Trap Monitor . . . . .</b>	<b>10-25</b>



Access the Trap Monitor .....	10-25
Use with Data View .....	10-27
<b>Stack Monitor (DL440 Only) .....</b>	<b>10-28</b>
Access the Stack Monitor .....	10-28
<b>Trend View .....</b>	<b>10-29</b>
Using Trend View .....	10-29
The Crosshair Cursor .....	10-30
<b>Check <i>DirectSOFT</i> 6 File Revision .....</b>	<b>10-33</b>

## Appendix A: Protocols and Cable Diagrams

Cables and Protocols .....	A-2
Programming Cable Diagrams .....	A-6

## AppendixB: Communications Troubleshooting

<b>Communications Resources .....</b>	<b>B-2</b>
Startup .....	B-2
USB-TO-SERIAL Devices .....	B-9
DUMP .....	B-10
<b>Editing the DSxxx.ini File .....</b>	<b>B-10</b>
Windows XP and Windows 7/8 .....	B-10
Windows Vista .....	B-11
UAC = ON .....	B-11
UAC = OFF .....	B-12
Other Editable Parameters .....	B-12
<b>Other Possible Issues .....</b>	<b>B-15</b>
How to Change USB-Serial Port Assignment .....	B-15
“PORT UNAVAILABLE OR IN USE” .....	B-15
Laptop AC Adapter Issue .....	B-15

Notes: