

# Table of Contents

---

## Chapter 1: How to Use this Manual

<b>Introduction</b> .....	<b>1-2</b>
The purpose of this manual .....	1-2
Who should read this manual .....	1-2
Where to begin .....	1-2
How this manual is organized .....	1-3
Supplemental Manuals .....	1-3

## Chapter 2: Getting Started with *DirectNET* Communications

<b>The <i>DirectNET</i> Basics</b> .....	<b>2-2</b>
It's an Easy-to-use Data NETWORK .....	2-2
It has Advantages... ..	2-2
It has Disadvantages... ..	2-2
How Does it Work? .....	2-3
Network Protocol .....	2-3
Network Specifications .....	2-3
<b>What can I use as a network master station?</b> .....	<b>2-4</b>
DL405/DL205 PLCs with a DCM or DL340 CPU .....	2-4
Operator Interface .....	2-5
Host Computer .....	2-5
<b>What can I use as a network slave station?</b> .....	<b>2-6</b>
CPUs with Built-in <i>DirectNET</i> Port .....	2-6
Data Communications Modules and Data Communications Units .....	2-6
Compatible Products .....	2-6
<b>Choosing a Configuration</b> .....	<b>2-8</b>
Three Basic Configurations .....	2-8
PLC as Master .....	2-8
Host as Master .....	2-8
Peer as Master .....	2-8
Configuration Limits .....	2-8
Combination Networks .....	2-9
<b>What communications program should I use?</b> .....	<b>2-10</b>
Two Options .....	2-10
RLL Programs .....	2-10
<i>DirectNET</i> Programs .....	2-11
<b>How can I create a network?</b> .....	<b>2-12</b>
Follow Four Simple Steps .....	2-12

---

## Chapter 3: Network Design and Setup

<b>Choosing the Configuration</b> .....	<b>3-2</b>
Analyze your Application .....	3-2
Identify Your System Requirements .....	3-3
Examine Data Sharing Requirements .....	3-3
Sketch the Network Diagram .....	3-4
Now you're ready to build the network cables. ....	3-5
<b>Cable Selection and Installation Guidelines</b> .....	<b>3-6</b>
Things to Consider .....	3-6
Consideration 1: Physical Configuration .....	3-7
Consideration 2: Electrical Specification RS232C or RS422 .....	3-8
Consideration 3: Cable Schematics .....	3-9
Consideration 4: Cable Specifications .....	3-9
Consideration 5: Installation Guidelines .....	3-10
Consideration 6: A Quick Test Cable .....	3-11
<b>DL430 and DL440 Port Pinouts</b> .....	<b>3-12</b>
<b>DL405 DCM Port Pinouts</b> .....	<b>3-13</b>
<b>DL340 CPU Port Pinouts</b> .....	<b>3-14</b>
<b>DL305 DCU Port Pinouts</b> .....	<b>3-15</b>
<b>DL240 CPU Port Pinouts</b> .....	<b>3-16</b>
<b>Point-to-point Cables</b> .....	<b>3-17</b>
Host as Master .....	3-17
Host as Master (continued) .....	3-18
Host as Master (continued) .....	3-19
DL405 DCM as Master .....	3-20
DL405 DCM as Master (continued) .....	3-21
<b>Multi-Drop Cables</b> .....	<b>3-22</b>
More Considerations .....	3-22
Network Amplifiers .....	3-22
Cable Termination Resistors .....	3-23
Host as Master .....	3-24
Host as Master (continued) .....	3-25
Host as Master (continued) .....	3-26
DL405 DCM Master .....	3-27
DL405 DCM as Master (continued) .....	3-28
DL405 DCM Master (continued) .....	3-29
<b>Network Design Checklist</b> .....	<b>3-30</b>
You can avoid problems .....	3-30

## Chapter 4: Communication Settings

<b>Selecting the communication settings.</b> .....	<b>4-2</b>
What do I have to select? .....	4-2
Baud Rate .....	4-2
Parity .....	4-2
Response Delay .....	4-2
HEX or ASCII Data .....	4-2
Station Address .....	4-2
<b>Setting the station parameters</b> .....	<b>4-3</b>
For all Masters and Slaves .....	4-3
Host as a Master .....	4-3
DL405 DCM Communication Switches .....	4-4
Online / Offline Switch .....	4-5
Address Switch .....	4-5
DL305 DCU Communications Switches .....	4-6
Online / Offline Switch .....	4-7
Address Switch .....	4-7
DL430 and DL440 PLC Communication Switches .....	4-8
DL430 and DL440 Station Addresses .....	4-9
Enter the Address (in decimal) .....	4-9
Select HEX or ASCII .....	4-9
Select the Parity Option .....	4-9
Clear the Display .....	4-9
DL340 Network Address Selection for Ports 1 and 2 .....	4-10
DL340 Station Type Selection and Address Ranges .....	4-10
DL340 Baud Rate Selection .....	4-11
DL340 Selecting the Response Delay Time .....	4-11
DL340 Selecting Data Format (ASCII/HEX) .....	4-11
DL240 Communication Settings .....	4-12
Select AUX 56 .....	4-13
Enter the Address (in decimal) .....	4-13
Select Hex or ASCII .....	4-13
Select the Parity Option .....	4-13
Select the baud rate .....	4-13
To clear the display and show the current address (instructions) .....	4-13
<b>Communications Settings Checklist</b> .....	<b>4-14</b>
You can avoid problems .....	4-14
<b>What part of the manual should you use next?</b> .....	<b>4-14</b>
Do you have a PLC as a master or a Peer as a Master network? .....	4-14
Do you have a Host as a master network? .....	4-14

## Chapter 5: RLL Communications Programs

<b>Why do you need a communications program?</b> .....	<b>5-2</b>
The Master Initiates Requests .....	5-2
Why Ladder Logic? .....	5-2
<b>Identifying the Master and Slave</b> .....	<b>5-4</b>
Location of Master and Slave .....	5-4
<b>Specifying the Amount of Data</b> .....	<b>5-5</b>
Number of Bytes to Transfer .....	5-5
<b>Designating the Master Station Memory Area</b> .....	<b>5-6</b>
Memory Area of Master .....	5-6
<b>Identifying the Slave Station Memory Area</b> .....	<b>5-7</b>
Memory Area of Slave to Read or Write .....	5-7
<b>Controlling the Communications</b> .....	<b>5-8</b>
Communications Special Relays .....	5-8
Multiple Read and Write Interlocks .....	5-9
<b>What part of the manual should you use next?</b> .....	<b>5-10</b>
Start the Network .....	5-10

## Chapter 6: *DirectNET* Host Communications Programs

<b>Why do you need a communications program?</b> .....	<b>6-2</b>
The Master Initiates Requests .....	6-2
<i>DirectNET</i> Programs .....	6-2
<b>Modes of Operation</b> .....	<b>6-4</b>
Transmission Bytes .....	6-4
HEX or ASCII Mode .....	6-4
Data Type Byte Requirements .....	6-5
<b>Protocol Components</b> .....	<b>6-6</b>
<b>Controlling the Communications</b> .....	<b>6-8</b>
Control Codes .....	6-8
<b>Initiating the Request</b> .....	<b>6-10</b>
Enquiry ENQ .....	6-10
<b>Acknowledging the Request</b> .....	<b>6-11</b>
Acknowledge ACK – NAK .....	6-11
Delayed Response to an Enquiry .....	6-11
<b>Defining the Request</b> .....	<b>6-12</b>
Header – HDR .....	6-12
Byte 1: Start of Header .....	6-12
Bytes 2 & 3: Target Slave Address .....	6-12
Byte 4: Read or Write .....	6-13
Byte 5: Data Type .....	6-13
Bytes 6 & 7: Starting Address MSB .....	6-13
Bytes 8 & 9: Starting Address LSB .....	6-13

Bytes 10 & 11: Complete Data Blocks .....	6-13
Bytes 12 & 13: Partial Data Block .....	6-13
Bytes 14 & 15: Master Station ID .....	6-13
Byte 16: End Transmission .....	6-13
Byte 17: Longitudinal Redundancy Check .....	6-13
<b>Transferring Data .....</b>	<b>6-14</b>
Data Blocks .....	6-14
Transmission Sequence .....	6-14
Start of Text, End of Block, End of Text .....	6-15
<b>Calculating the Header Checksum .....</b>	<b>6-16</b>
Longitudinal Redundancy Check .....	6-16
<b>Calculating the Data LRC .....</b>	<b>6-17</b>
LRC Example for HEX and ASCII Transfers .....	6-17
<b>Ending the Request .....</b>	<b>6-18</b>
End of Transmission – ETB .....	6-18
Master to Slave Data Transfer Summary Sheet .....	6-18
<b>Timing Considerations .....</b>	<b>6-19</b>
Timeouts .....	6-19
DL405 Timeouts .....	6-19
DL205 Timeouts .....	6-19
DL305 Timeouts .....	6-20
Managing Timeouts .....	6-20
Communication Retries .....	6-20
Delays .....	6-20
<b>What part of the manual should you use next? .....</b>	<b>6-21</b>
Start the Network .....	6-21

## Chapter 7: Network Operation and Troubleshooting

<b>Starting the Network .....</b>	<b>7-2</b>
PLC as Master Networks .....	7-2
PLC Peer as Master Networks .....	7-2
Host as Master Networks .....	7-2
Slave Stations .....	7-2
<b>Troubleshooting .....</b>	<b>7-3</b>
First Place to Look .....	7-3
Try an Example Program .....	7-3
CPUs with Built-in <i>Direct</i> NET Ports .....	7-3
Host Masters .....	7-3
Communication Interface Indicators .....	7-3
DL405 DCM Indicators .....	7-4
DL305 DCU Indicators .....	7-6

## Appendix A: PLC Master / Slave Example

<b>The Example</b> .....	<b>A-2</b>
Example Equipment .....	A-2
Master Station .....	A-2
Slave Station #1 .....	A-2
Slave Station #2 .....	A-2
Install the Equipment .....	A-3
<b>Remember these Four Steps!</b> .....	<b>A-4</b>
<b>Step 1: Design the Network</b> .....	<b>A-5</b>
The Example Configuration .....	A-5
The Example Cable .....	A-6
<b>Step 2: Select the Communication Settings</b> .....	<b>A-7</b>
Set the DCM Switches for the Master Station .....	A-7
Set the DCM Switches for Slave #1 .....	A-8
Install the DCM and Connect the Cables .....	A-8
Set the PLC Switches for Slave #2 .....	A-8
Set the Station Address for Slave #2 .....	A-9
<b>Step 3: Create the Communications Program.</b> .....	<b>A-10</b>
Program Description .....	A-10
Connect the Programming Device .....	A-10
RLL Instructions .....	A-11
Master Program RLL Example .....	A-12
Master Program RLL <sup>PLUS</sup> Example .....	A-13
Slave Station #2 Program RLL Example .....	A-14
Slave Station #2 Program RLL <sup>PLUS</sup> Example .....	A-14
<b>Step 4: Start the Network</b> .....	<b>A-15</b>
Switch the PLCs to Run Mode .....	A-15
Verify the Network .....	A-16
Verify the Write Command .....	A-16
Verify the Read Command .....	A-17
<b>What should I do if it isn't working correctly?</b> .....	<b>A-18</b>
Troubleshooting Steps .....	A-18

## Appendix B: Peer Master Example

<b>The Example</b> .....	<b>B-2</b>
Example Equipment .....	B-2
Peer Station #1 .....	B-2
Peer Station #2 .....	B-2
Install the Equipment .....	B-3
<b>Remember these Four Steps!</b> .....	<b>B-4</b>
<b>Step 1: Design the Network</b> .....	<b>B-5</b>
The Example Configuration .....	B-5
The Example Cable .....	B-5

<b>Step 2: Select the Communication Settings</b> .....	<b>B-6</b>
Set the DCM Switches for Peer #1 .....	B-6
Set the DCM Switches for Peer #2 .....	B-7
Install the DCMs and Connect the Cables .....	B-7
<b>Step 3: Create the Communications Programs</b> .....	<b>B-8</b>
Two Programs are Required .....	B-8
Peer Station #1 Program Description .....	B-8
Peer Station #2 Program Description .....	B-8
Connect the Programing Device .....	B-9
Peer Station #1 RLL Instructions .....	B-10
Peer Station #1 RLL Example .....	B-11
Peer Station #2 RLL Instructions .....	B-12
Peer Station #2 RLL Example .....	B-13
<b>Step 4: Start the Network</b> .....	<b>B-14</b>
Switch the PLCs to Run Mode .....	B-14
Verify the Network .....	B-15
Verify the Write Command .....	B-15
Verify the Read Command .....	B-16
<b>What should I do if it isn't working correctly?</b> .....	<b>B-16</b>
Troubleshooting Steps .....	B-16

## Appendix C: Host Master Example

<b>The Example</b> .....	<b>C-2</b>
Example Equipment .....	C-2
Master Station .....	C-2
Slave Station #1 .....	C-2
Install the Equipment .....	C-3
<b>Remember these Four Steps!</b> .....	<b>C-4</b>
<b>Step 1: Design the Network</b> .....	<b>C-5</b>
The Example Configuration .....	C-5
The Example Cable .....	C-6
<b>Step 2: Select the Communication Settings</b> .....	<b>C-7</b>
Set the Personal Computer Switches for the Master Station .....	C-7
Set the PLC Switches for the Slave Station .....	C-7
Set the Station Address for the Slave Station .....	C-8
<b>Step 3: Create the Communications Program</b> .....	<b>C-9</b>
<i>Direct</i> NET Programs .....	C-9
Example Program .....	C-9
Entering the Program .....	C-9
Slave Station Programs .....	C-9
Example Program to Read Data .....	C-10
Example Program to Write Data .....	C-12
<b>Step 4: Start the Network.</b> .....	<b>C-14</b>
Execute the PC Master Program .....	C-14
Verify the Read Command .....	C-14
Verify the Write Command .....	C-14
<b>What should I do if it isn't working correctly?</b> .....	<b>C-15</b>
Troubleshooting Steps .....	C-15

## Appendix D: DL405 Data Types and Memory Maps

<b>DL405 Data Types</b> .....	<b>D-2</b>
Data Type 31 V Memory .....	D-2
Data Type 31 (continued) .....	D-3
Data Type 32 Inputs .....	D-4
Data Type 33 Outputs .....	D-5
Data Type 39 Diagnostic Status .....	D-6
<b>DL430 Memory Map</b> .....	<b>D-7</b>
<b>DL440 Memory Map</b> .....	<b>D-8</b>
<b>X Input Bit Map</b> .....	<b>D-9</b>
<b>Y Output Bit Map</b> .....	<b>D-10</b>
<b>Remote I/O Bit Map</b> .....	<b>D-11</b>
<b>Control Relay Bit Map</b> .....	<b>D-13</b>
<b>Stage Control / Status Bit Map</b> .....	<b>D-15</b>
<b>Timer Status Bit Map</b> .....	<b>D-17</b>
<b>Counter Status Bit Map</b> .....	<b>D-18</b>

## Appendix E: DL305 Data Types and Memory Map

<b>DL305 Data Types</b> .....	<b>E-2</b>
Data Types 31 and 33 .....	E-2
Data Type 39 Diagnostic Status .....	E-3
<b>DL330 Memory Map</b> .....	<b>E-5</b>
<b>DL330P Memory Map</b> .....	<b>E-6</b>
<b>DL340 Memory Map</b> .....	<b>E-7</b>
<b>I/O Point Bit Map</b> .....	<b>E-8</b>
<b>Control Relay Bit Map</b> .....	<b>E-9</b>
<b>Special Relays</b> .....	<b>E-11</b>
<b>Timer / Counter Registers and Contacts</b> .....	<b>E-12</b>
External Timer/Counter Setpoint Unit .....	E-12
<b>Data Registers</b> .....	<b>E-13</b>
<b>Stage Control / Status Bit Map</b> .....	<b>E-15</b>
<b>Shift Register Bit Map</b> .....	<b>E-16</b>
<b>Special Registers</b> .....	<b>E-17</b>
<b>DL305 / 405 Cross Reference</b> .....	<b>E-18</b>
Data Type 31: Register Access .....	E-18
Data Type 33: I/O Point Access .....	E-18



---

## Appendix F: DL205 Data Types and Memory Map

<b>DL205 Data Types</b> .....	<b>F-2</b>
Data Type 31 V-Memory Addresses .....	F-2
Data Type 31 V-Memory Addresses (continued) .....	F-3
Data Type 32 Input Points .....	F-4
Data Type 33 Outputs .....	F-5
Data Type 39 Diagnostic Status .....	F-6
<b>DL230 Memory Map</b> .....	<b>F-7</b>
<b>DL240 Memory Map</b> .....	<b>F-8</b>
<b>X Input Bit Map</b> .....	<b>F-9</b>
<b>Y Output Bit Map</b> .....	<b>F-9</b>
<b>Control Relay Bit Map</b> .....	<b>F-10</b>
<b>Stage Control / Status Bit Map</b> .....	<b>F-11</b>
<b>Timer Status Bit Map</b> .....	<b>F-12</b>
<b>Counter Status Bit Map</b> .....	<b>F-12</b>

---