

TABLE OF CONTENTS



Chapter 1: Getting Started

Introduction	1-2
The Purpose of this Manual	1-2
Supplemental Manuals	1-2
Technical Support	1-2
Conventions Used.....	1-3
Key Topics for Each Chapter.....	1-3
DL06 Micro PLC Overview.....	1-4
The DL06 PLC Features	1-4
DirectSOFT Programming for Windows™	1-4
Handheld Programmer	1-5
I/O Quick Selection Guide.....	1-5
Quick Start	1-6
Steps to Designing a Successful System	1-10
Questions and Answers about DL06 Micro PLCs.....	1-12

Chapter 2: Installation, Wiring, and Specifications

Safety Guidelines	2-2
Plan for Safety	2-2
Three Levels of Protection	2-3
Emergency Stops.....	2-3
Emergency Power Disconnect	2-4
Orderly System Shutdown.....	2-4
Class 1, Division 2 Approval	2-4
Orientation to DL06 Front Panel	2-5
Terminal Block Removal	2-6
Mounting Guidelines.....	2-7

Table of Contents

Unit Dimensions	2-7
Enclosures	2-7
Panel Layout & Clearances	2-8
Using Mounting Rails	2-9
Environmental Specifications	2-10
Agency Approvals.....	2-10
Marine Use.....	2-10
Wiring Guidelines	2-11
External Power Source.....	2-12
Planning the Wiring Routes	2-12
Fuse Protection for Input and Output Circuits	2-13
I/O Point Numbering	2-13
System Wiring Strategies	2-14
PLC Isolation Boundaries	2-14
Connecting Operator Interface Devices	2-15
Connecting Programming Devices	2-15
Sinking / Sourcing Concepts	2-16
I/O "Common" Terminal Concepts.....	2-17
Connecting DC I/O to "Solid State" Field Devices.....	2-18
Solid State Input Sensors.....	2-18
Solid State Output Loads.....	2-18
Relay Output Wiring Methods.....	2-20
Relay Outputs-Transient Suppression For Inductive Loads in a Control System.....	2-21
Prolonging Relay Contact Life	2-26
DC Input Wiring Methods.....	2-27
DC Output Wiring Methods.....	2-28
High-Speed I/O Wiring Methods	2-29
Wiring Diagrams and Specifications	2-30
D0-06AA I/O Wiring Diagram	2-30
D0-06AR I/O Wiring Diagram	2-32
D0-06DA I/O Wiring Diagram	2-34
D0-06DD1 I/O Wiring Diagram	2-36
D0-06DD2 I/O Wiring Diagram	2-38
D0-06DR I/O Wiring Diagram.....	2-40
D0-06DD1-D I/O Wiring Diagram.....	2-42
D0-06DD2-D I/O Wiring Diagram.....	2-44
D0-06DR-D I/O Wiring Diagram	2-46

Glossary of Specification Terms	2-48
---------------------------------------	------

Chapter 3: CPU Specifications and Operation

Overview 3-2

DL06 CPU Features	3-2
-------------------------	-----

CPU Specifications	3-3
--------------------------	-----

CPU Hardware Setup.....	3-4
-------------------------	-----

Communication Port Pinout Diagrams	3-4
--	-----

Connecting the Programming Devices	3-5
--	-----

CPU Setup Information	3-5
-----------------------------	-----

Status Indicators.....	3-6
------------------------	-----

Mode Switch Functions.....	3-6
----------------------------	-----

Changing Modes in the DL06 PLC	3-7
--------------------------------------	-----

Mode of Operation at Power-up	3-7
-------------------------------------	-----

Using Battery Backup	3-8
----------------------------	-----

Battery Backup	3-8
----------------------	-----

Auxiliary Functions	3-9
---------------------------	-----

Clearing an Existing Program	3-9
------------------------------------	-----

Initializing System Memory	3-9
----------------------------------	-----

Setting Retentive Memory Ranges.....	3-10
--------------------------------------	------

Using a Password	3-11
------------------------	------

CPU Operation.....	3-12
--------------------	------

CPU Operating System.....	3-12
---------------------------	------

Program Mode.....	3-13
-------------------	------

Run Mode	3-13
----------------	------

Read Inputs	3-14
-------------------	------

Service Peripherals and Force I/O	3-14
---	------

CPU Bus Communication	3-15
-----------------------------	------

Update Clock, Special Relays and Special Registers.....	3-15
---	------

Solve Application Program	3-16
---------------------------------	------

Solve PID Loop Equations.....	3-16
-------------------------------	------

Write Outputs	3-16
---------------------	------

Write Outputs to Specialty I/O	3-16
--------------------------------------	------

Diagnostics.....	3-17
------------------	------

I/O Response Time	3-17
-------------------------	------

Is Timing Important for Your Application?.....	3-17
--	------

Table of Contents

Normal Minimum I/O Response	3-18
Normal Maximum I/O Response	3-18
Improving Response Time	3-19
CPU Scan Time Considerations	3-20
Reading Inputs	3-20
Writing Outputs	3-20
Service Peripherals.....	3-21
CPU Bus Communication	3-21
Update Clock/Calendar, Special Relays, Special Registers	3-21
Application Program Execution	3-22
PLC Numbering Systems	3-23
PLC Resources	3-23
V-Memory	3-24
Binary-Coded Decimal Numbers	3-24
Hexadecimal Numbers	3-24
Memory Map	3-25
Octal Numbering System	3-25
Discrete and Word Locations.....	3-25
V-memory Locations for Discrete Memory Areas	3-25
Input Points (X Data Type).....	3-26
Output Points (Y Data Type)	3-26
Control Relays (C Data Type)	3-26
Timers and Timer Status Bits (T Data Type).....	3-26
Timer Current Values (V Data Type)	3-27
Counters and Counter Status Bits (CT Data type).....	3-27
Counter Current Values (V Data Type)	3-27
Word Memory (V Data Type)	3-28
Stages (S Data type).....	3-28
Special Relays (SP Data Type).....	3-28
DL06 System V-memory	3-29
System Parameters and Default Data Locations (V Data Type)	3-29
DL06 Aliases	3-31
DL06 Memory Map.....	3-32
X Input/Y Output Bit Map	3-33
Stage Control/Status Bit Map	3-34
Control Relay Bit Map	3-36

Timer Status Bit Map.....	3-38
Counter Status Bit Map.....	3-38
GX and GY I/O Bit Map	3-39
Chapter 4: System Design and Configuration	
DL06 System Design Strategies	4-2
I/O System Configurations	4-2
Networking Configurations	4-2
Module Placement.....	4-3
Slot Numbering.....	4-3
Automatic I/O Configuration.....	4-4
Manual I/O Configuration	4-4
Power Budgeting.....	4-5
Power supplied	4-5
Power required by base unit	4-5
Power required by option cards	4-5
Configuring the DL06's Comm Ports.....	4-7
DL06 Port Specifications.....	4-7
DL06 Port Pinouts	4-7
Choosing a Network Specification.....	4-8
RS-232 Network	4-8
RS-422 Network.....	4-8
RS-485 Network.....	4-8
Connecting to MODBUS and DirectNET Networks.....	4-9
MODBUS Port Configuration.....	4-9
DirectNET Port Configuration.....	4-10
Non-Sequence Protocol (ASCII In/Out and PRINT).....	4-11
Non-Sequence Port Configuration.....	4-11
Network Slave Operation.....	4-12
MODBUS Function Codes Supported	4-12
Determining the MODBUS Address	4-12
If Your Host Software Requires the Data Type and Address	4-13
Example 1: V2100	4-14
Example 2: Y20	4-14
Example 3: T10 Current Value.....	4-14

Table of Contents

Example 4: C54.....	4-14
If Your MODBUS Host Software Requires an Address ONLY	4-15
Example 1: V2100 584/984 Mode	4-16
Example 2: Y20 584/984 Mode	4-16
Example 3: T10 Current Value 484 Mode	4-17
Example 4: C54 584/984 Mode	4-17
Network Master Operation	4-17
Step 1: Identify Master Port # and Slave #.....	4-18
Step 2: Load Number of Bytes to Transfer.....	4-18
Step 3: Specify Master Memory Area.....	4-19
Step 4: Specify Slave Memory Area	4-20
Communications from a Ladder Program.....	4-21
Multiple Read and Write Interlocks.....	4-21
Network Master Operation (using MRX and MWX Instructions)	4-22
MODBUS Function Codes Supported.....	4-22
MODBUS Read from Network(MRX)	4-23
MRX Slave Memory Address.....	4-24
MRX Master Memory Addresses.....	4-24
MRX Number of Elements.....	4-24
MRX Exception Response Buffer	4-24
MODBUS Write to Network (MWX)	4-25
MWX Slave Memory Address	4-26
MWX Master Memory Addresses.....	4-26
MWX Number of Elements.....	4-26
MWX Exception Response Buffer.....	4-26
MRX/MWX Example in DirectSOFT	4-27
Multiple Read and Write Interlocks.....	4-27

Chapter 5: Standard RLL Instructions

Introduction.....	5-2
Using Boolean Instructions	5-5
END Statement	5-5
Simple Rungs	5-5
Normally Closed Contact	5-6
Contacts in Series.....	5-6
Midline Outputs.....	5-6

Parallel Elements.....	5-7
Joining Series Branches in Parallel.....	5-7
Joining Parallel Branches in Series.....	5-7
Combination Networks	5-7
Comparative Boolean	5-8
Boolean Stack.....	5-8
Immediate Boolean	5-9
Boolean Instructions	5-10
Comparative Boolean	5-26
Immediate Instructions	5-32
Timer, Counter and Shift Register Instructions.....	5-39
Using Timers	5-39
Timer Example Using Discrete Status Bits	5-41
Timer Example Using Comparative Contacts.....	5-41
Accumulating Timer Example using Discrete Status Bits	5-43
Accumulator Timer Example Using Comparative Contacts	5-43
Using Counters.....	5-44
Counter Example Using Discrete Status Bits	5-46
Counter Example Using Comparative Contacts	5-46
Stage Counter Example Using Discrete Status Bits.....	5-48
Stage Counter Example Using Comparative Contacts	5-48
Up / Down Counter Example Using Discrete Status Bits.....	5-50
Up / Down Counter Example Using Comparative Contacts.....	5-50
Accumulator/Stack Load and Output Data Instructions	5-52
Using the Accumulator.....	5-52
Copying Data to the Accumulator.....	5-52
Changing the Accumulator Data.....	5-53
Using the Accumulator Stack.....	5-54
Using Pointers	5-55
Logical Instructions (Accumulator)	5-69
Math Instructions	5-86
Transcendental Functions.....	5-118
Bit Operation Instructions	5-120
Number Conversion Instructions (Accumulator).....	5-127
Shuffle Digits Block Diagram	5-139

Table of Contents

Table Instructions	5-141
Copy Data From a Data Label Area to V-memory.....	5-143
Clock/Calendar Instructions	5-171
CPU Control Instructions.....	5-173
Program Control Instructions	5-175
Interrupt Instructions	5-183
Message Instructions	5-186
Move Block Instruction (MOVBLK)	5-189
Copy Data From a Data Label Area to V-memory.....	5-189
Intelligent I/O Instructions.....	5-194
Read from Intelligent Module (RD).....	5-194
Write to Intelligent Module (WT)	5-195
Network Instructions	5-196
Direct Text Entry	5-200
Embedding date and/or time variables.....	5-201
Embedding V-memory data	5-201
Data Format Suffixes for Embedded V-memory Data.....	5-202
Text Entry from V-memory.....	5-203
MODBUS RTU Instructions	5-204
MRX Slave Address Ranges.....	5-205
MWX Slave Address Ranges.....	5-208
MWX Master Memory Address Ranges.....	5-208
MWX Number of Elements	5-208
MWX Exception Response Buffer.....	5-208
ASCII Instructions	5-210
Reading ASCII Input Strings.....	5-210
Writing ASCII Output Strings.....	5-210
Managing the ASCII Strings	5-211
Intelligent Box (IBox) Instructions.....	5-230

Chapter 6: Drum Instruction Programming

Introduction.....	6-2
--------------------------	------------

VOLUME TWO:

TABLE OF CONTENTS



Purpose	6-2
Drum Terminology	6-2
Drum Chart Representation	6-3
Output Sequences	6-3
Step Transitions	6-4
Drum Instruction Types	6-4
Timer-Only Transitions	6-4
Timer and Event Transitions	6-5
Event-Only Transitions	6-6
Counter Assignments	6-6
Last Step Completion	6-7
Overview of Drum Operation	6-8
Drum Instruction Block Diagram	6-8
Powerup State of Drum Registers	6-9
Drum Control Techniques	6-10
Drum Control Inputs	6-10
Self-Resetting Drum	6-11
Initializing Drum Outputs	6-11
Using Complex Event Step Transitions	6-11
Drum Instruction	6-12
Timed Drum with Discrete Outputs (DRUM)	6-12
Event Drum (EDRUM)	6-14
Handheld Programmer Drum Mnemonics	6-16
Masked Event Drum with Discrete Outputs (MDRMD)	6-19
Masked Event Drum with Word Output (MDRMW)	6-21

Table of Contents

Chapter 7: RLL^{PLUS} Stage Programming

Introduction to Stage Programming	7-2
Overcoming "Stage Fright"	7-2
Learning to Draw State Transition Diagrams.....	7-3
Introduction to Process States	7-3
The Need for State Diagrams	7-3
A 2-State Process	7-3
RLL Equivalent.....	7-4
Stage Equivalent.....	7-4
Let's Compare	7-5
Initial Stages.....	7-5
What Stage Bits Do	7-6
Stage Instruction Characteristics.....	7-6
Using the Stage Jump Instruction for State Transitions	7-7
Stage Jump, Set, and Reset Instructions.....	7-7
Stage Program Example: Toggle On/Off Lamp Controller.....	7-8
A 4-State Process	7-8
Four Steps to Writing a Stage Program	7-9
1. Write a Word Description of the application.	7-9
2. Draw the Block Diagram.	7-9
3. Draw the State Transition Diagram.	7-9
4. Write the Stage Program.....	7-9
Stage Program Example: A Garage Door Opener.....	7-10
Garage Door Opener Example	7-10
Draw the Block Diagram	7-10
Draw the State Diagram.....	7-11
Add Safety Light Feature	7-12
Modify the Block Diagram and State Diagram	7-12
Using a Timer Inside a Stage	7-13
Add Emergency Stop Feature	7-14
Exclusive Transitions	7-14
Stage Program Design Considerations.....	7-15
Stage Program Organization	7-15
How Instructions Work Inside Stages.....	7-16
Using a Stage as a Supervisory Process.....	7-17

Stage Counter	7-17
Power Flow Transition Technique	7-18
Stage View in DirectSOFT	7-18
Parallel Processing Concepts.....	7-19
Parallel Processes	7-19
Converging Processes.....	7-19
Convergence Stages (CV)	7-19
Convergence Jump (CVJMP).....	7-20
Convergence Stage Guidelines	7-20
RLL^{PLUS} (Stage) Instructions	7-21
Stage (SG).....	7-21
Initial Stage (ISG)	7-22
Jump (JMP).....	7-22
Not Jump (NJMP).....	7-22
Converge Stage (CV) and Converge Jump (CVJMP)	7-23
Block Call (BCALL).....	7-25
Block (BLK).....	7-25
Block End (BEND).....	7-25
Questions and Answers about Stage Programming	7-27

Chapter 8: PID Loop Operation

DL06 PID Control.....	8-2
DL06 PID Control Features	8-2
Introduction to PID Control.....	8-4
What is PID Control?	8-4
Introducing DL06 PID Control	8-6
Process Control Definitions.....	8-8
PID Loop Operation.....	8-9
Position Form of the PID Equation.....	8-9
Reset Windup Protection	8-10
Freeze Bias	8-11
Adjusting the Bias.....	8-11
Step Bias Proportional to Step Change in SP	8-12
Eliminating Proportional, Integral or Derivative Action	8-12
Velocity Form of the PID Equation.....	8-12

Table of Contents

Bumpless Transfer	8-13
Loop Alarms	8-13
Loop Operating Modes	8-14
Special Loop Calculations	8-14
Ten Steps to Successful Process Control.....	8-16
PID Loop Setup.....	8-18
Some Things to Do and Know Before Starting	8-18
PID Error Flags.....	8-18
Establishing the Loop Table Size and Location	8-18
Loop Table Word Definitions.....	8-20
PID Mode Setting 1 Bit Descriptions (Addr + 00)	8-21
PID Mode Setting 2 Bit Descriptions (Addr + 01)	8-22
Mode/Alarm Monitoring Word (Addr + 06)	8-23
Ramp/Soak Table Flags (Addr + 33)	8-23
Ramp/Soak Table Location (Addr + 34).....	8-24
Ramp/Soak Table Programming Error Flags (Addr + 35).....	8-24
Configure the PID Loop.....	8-25
PID Loop Tuning.....	8-40
Open-Loop Test	8-40
Manual Tuning Procedure	8-41
Alternative Manual Tuning Procedures by Others.....	8-44
Tuning PID Controllers.....	8-44
Auto Tuning Procedure	8-45
Use DirectSOFT 5 Data View with PID View	8-49
Open a New Data View Window.....	8-49
Open PID View.....	8-50
Using the Special PID Features	8-53
How to Change Loop Modes	8-53
Operator Panel Control of PID Modes	8-54
PLC Modes Effect on Loop Modes.....	8-54
Loop Mode Override.....	8-54
PV Analog Filter.....	8-55
Creating an Analog Filter in Ladder Logic.....	8-56
Use the <i>Direct</i> SOFT Filter Intelligent Box Instructions	8-57
FilterB Example.....	8-57
Ramp/Soak Generator.....	8-58

Introduction	8-58
Ramp/Soak Table	8-59
Ramp/Soak Table Flags.....	8-61
Ramp/Soak Generator Enable	8-61
Ramp/Soak Controls.....	8-61
Ramp/Soak Profile Monitoring.....	8-62
Ramp/Soak Programming Errors.....	8-62
Testing Your Ramp/Soak Profile.....	8-62
DirectSOFT Ramp/Soak Example	8-63
Setup the Profile in PID Setup	8-63
Program the Ramp/Soak Control in Relay Ladder.....	8-63
Test the Profile	8-64
Cascade Control.....	8-65
Introduction	8-65
Cascaded Loops in the DL06 CPU	8-66
Tuning Cascaded Loops	8-67
Time-Proportioning Control.....	8-68
On/Off Control Program Example	8-69
Feedforward Control	8-70
Feedforward Example.....	8-71
PID Example Program	8-72
Program Setup for the PID Loop	8-72
Troubleshooting Tips.....	8-75
Glossary of PID Loop Terminology	8-77
Bibliography	8-79

Chapter 9: Maintenance and Troubleshooting

Hardware System Maintenance	9-2
Standard Maintenance	9-2
Diagnostics.....	9-2
Diagnostics.....	9-2
Fatal Errors	9-2
Non-fatal Errors	9-2
V-memory Error Code Locations.....	9-3
Special Relays (SP) Corresponding to Error Codes	9-3

Table of Contents

DL06 Micro PLC Error Codes.....	9-4
Program Error Codes.....	9-5
CPU Indicators	9-6
PWR Indicator	9-6
RUN Indicator	9-7
CPU Indicator.....	9-7
Communications Problems	9-7
I/O Point Troubleshooting	9-8
Possible Causes	9-8
Some Quick Steps	9-8
Handheld Programmer Keystrokes Used to Test an Output Point	9-9
Noise Troubleshooting	9-10
Electrical Noise Problems.....	9-10
Reducing Electrical Noise.....	9-10
Machine Startup and Program Troubleshooting	9-11
Syntax Check	9-11
Special Instructions.....	9-12
Duplicate Reference Check.....	9-13
Run Time Edits	9-14
Run Time Edit Example	9-15
Forcing I/O Points	9-16
Regular Forcing with Direct Access.....	9-18
Bit Override Forcing	9-19
Bit Override Indicators.....	9-19
Reset the PLC to Factory Defaults	9-20

Chapter 10: LCD Display Panel

Introduction to the DL06 LCD Display Panel	10-2
Keypad ..	10-2
Snap-in installation.....	10-3
Display Priority	10-4
Menu Navigation	10-5
Confirm PLC Type, Firmware Revision Level, Memory Usage, Etc.	10-6
Examining Option Slot Contents	10-8

Menu 2, M2:SYSTEM CFG.	10-8
Monitoring and Changing Data Values	10-10
Menu 3, M3:MONITOR	10-10
Data Monitor	10-10
V-memory values	10-10
Pointer values	10-12
Bit Monitor	10-13
Bit status	10-13
Changing Date and Time	10-14
Menu 4, M4 : CALENDAR R/W	10-14
Setting Password and Locking	10-17
Menu 5, M5 : PASSWORD R/W	10-17
Reviewing Error History	10-20
Menu 6, M6 : ERR HISTORY	10-20
Toggle Light and Beeper, Test Keys	10-21
Menu 7, M7 : LCD TEST&SET	10-21
PLC Memory Information for the LCD Display Panel	10-22
Data Format Suffixes for Embedded V-memory Data	10-22
Reserved memory registers for the LCD Display Panel	10-23
V7742 bit definitions	10-24
Changing the Default Screen	10-25
Example program for setting the default screen message	10-25
DL06 LCD Display Panel Instruction (LCD)	10-26
Source of message	10-26
ASCII Character Codes	10-27
Example program: alarm with embedded date/time stamp	10-28
Example program: alarm with embedded V-memory data	10-29
Example program: alarm text from V-memory with embedded V-memory data ..	10-30

Appendix A: Auxiliary Functions

Introduction	A-2
Purpose of Auxiliary Functions	A-2
Accessing AUX Functions via DirectSOFT	A-3
Accessing AUX Functions via the Handheld Programmer	A-3

Table of Contents

AUX 2* — RLL Operations	A-4
AUX 21 Check Program	A-4
AUX 22 Change Reference	A-4
AUX 23 Clear Ladder Range	A-4
AUX 24 Clear Ladders	A-4
AUX 3* — V-memory Operations.....	A-4
AUX 31 Clear V-memory	A-4
AUX 4* — I/O Configuration.....	A-5
AUX 41 Show I/O Configuration	A-5
AUX 5* — CPU Configuration	A-5
AUX 51 Modify Program Name.....	A-5
AUX 53 Display Scan Time	A-5
AUX 54 Initialize Scratchpad	A-5
AUX 55 Set Watchdog Timer	A-5
AUX 56 CPU Network Address	A-6
AUX 57 Set Retentive Ranges	A-6
AUX 58 Test Operations.....	A-6
AUX 59 Bit Override.....	A-7
AUX 5B Counter Interface Configuration.....	A-7
AUX 5D Select PLC Scan Mode	A-7
AUX 6* — Handheld Programmer Configuration	A-8
AUX 61 Show Revision Numbers.....	A-8
AUX 62 Beeper On/Off.....	A-8
AUX 65 Run Self Diagnostics	A-8
AUX 7* — EEPROM Operations.....	A-8
Transferrable Memory Areas.....	A-8
AUX 71 CPU to HPP EEPROM.....	A-8
AUX 72 HPP EEPROM to CPU.....	A-9
AUX 73 Compare HPP EEPROM to CPU	A-9
AUX 74 HPP EEPROM Blank Check.....	A-9
AUX 75 Erase HPP EEPROM	A-9
AUX 76 Show EEPROM Type.....	A-9
AUX 8* — Password Operations	A-9
AUX 81 Modify Password	A-9
AUX 82 Unlock CPU	A-10
AUX 83 Lock CPU.....	A-10

Appendix B: DL06 Error codes

DL06 Error Codes.....	B-2
------------------------------	------------

Appendix C: Instruction Execution Times

Introduction.....	C-2
V-Memory Data Registers	C-2
V-Memory Bit Registers	C-2
How to Read the Tables	C-2
Instruction Execution Times	C-3
Boolean Instructions	C-3
Comparative Boolean Instructions	C-4
Immediate Instructions.....	C-11
Bit of Word Boolean Instructions	C-12
Timer, Counter and Shift Register.....	C-13
Accumulator Data Instructions	C-14
Logical Instructions.....	C-15
Math Instructions	C-16
Differential Instructions	C-19
Bit Instructions	C-19
Number Conversion Instructions	C-20
Table Instructions	C-20
CPU Control Instructions.....	C-22
Program Control Instructions	C-22
Interrupt Instructions.....	C-22
Network Instructions	C-22
Intelligent I/O Instructions.....	C-23
Message Instructions	C-23
RLL ^{PLUS} Instructions.....	C-23
Drum Instructions	C-23
Clock/Calendar Instructions.....	C-24
MODBUS Instructions.....	C-24
ASCII Instructions	C-24

Appendix D: Special Relays

DL06 PLC Special Relays.....	D-2
Startup and Real-Time Relays	D-2

Table of Contents

CPU Status Relays.....	D-2
System Monitoring.....	D-3
Accumulator Status	D-3
HSIO Input Status.....	D-4
HSIO Pulse Output Relay	D-4
Communication Monitoring Relay.....	D-4
Option Slot Communication Monitoring Relay.....	D-4
Option Slot Special Relay	D-4
Counter 1 Mode 10 Equal Relays	D-5
Counter 2 Mode 10 Equal Relays	D-6

Appendix E: High-speed Input and Pulse Output Features

Introduction	E-2
Built-in Motion Control Solution	E-2
Availability of HSIO Features.....	E-2
Dedicated High- Speed I/O Circuit.....	E-3
Wiring Diagrams for Each HSIO Mode	E-3
Choosing the HSIO Operating Mode.....	E-4
Understanding the Six Modes	E-4
Default Mode.....	E-5
Configuring the HSIO Mode	E-6
Configuring Inputs X0 – X3.....	E-6
Mode 10: High-Speed Counter	E-7
Purpose	E-7
Functional Block Diagram.....	E-7
Wiring Diagram.....	E-8
Interfacing to Counter Inputs	E-8
Setup for Mode 10.....	E-9
Presets and Special Relays	E-9
Absolute and Incremental Presets.....	E-10
Preset Data Starting Location	E-11
Using Fewer than 24 Presets	E-11
Equal Relay Numbers	E-12
Calculating Your Preset Values.....	E-13
X Input Configuration	E-14
Writing Your Control Program.....	E-15
Program Example 1: Counter Without Presets.....	E-16
Program Example 2: Counter With Presets	E-18

Program Example 3: Counter With Preload	E-21
Troubleshooting Guide for Mode 10	E-23
Symptom: The counter does not count.....	E-23
Symptom: The counter counts but the presets do not function.	E-23
Symptom: The counter counts up but will not reset.	E-23
Mode 20: Up/Down Counter	E-24
Purpose	E-24
Functional Block Diagram.....	E-24
Quadrature Encoder Signals	E-25
Wiring Diagram.....	E-25
Interfacing to Encoder Outputs	E-26
Setup for Mode 20.....	E-27
Presets and Special Relays	E-27
X Input Configuration	E-28
Mode 20 Up/Down Counter	E-28
Writing Your Control Program.....	E-29
Program Example 1: Quadrature Counting with an Interrupt.....	E-30
Program Example 2: Up/Down Counting with Standard Inputs	E-32
Program Example 3: Quadrature Counting	E-34
Troubleshooting Guide for Mode 20	E-37
Symptom: The counter does not count.....	E-37
Symptom: The counter counts in the wrong direction	E-37
Symptom: The counter counts up and down but will not reset.....	E-37
Mode 30: Pulse Output	E-38
Purpose	E-38
Functional Block Diagram.....	E-39
Wiring Diagram.....	E-40
Interfacing to Drive Inputs.....	E-40
Motion Profile Specifications	E-41
Physical I/O Configuration.....	E-41
Logical I/O Functions	E-41
Setup for Mode 30.....	E-42
Profile/Velocity Select Register.....	E-43
Profile Parameter Table.....	E-43
Automatic Trapezoidal Profile	E-43
Step Trapezoidal Profile	E-44
Velocity Control	E-44

Table of Contents

Step Trapezoidal Profile	E-44
Choosing the Profile Type	E-45
Automatic Trapezoidal Profile Defined.....	E-45
Step Trapezoidal Profiles Defined	E-46
Velocity Control Defined	E-46
Automatic Trapezoidal Profile Operation	E-47
Program Example 1: Automatic Trapezoidal Profile without External Interrupt	E-48
Preload Position Value	E-49
Program Example 2: Automatic Trapezoidal Profile with External Interrupt	E-50
Program Example 3: Automatic Trapezoidal Profile with Home Search.....	E-53
Step Trapezoidal Profile Operation	E-58
Program Example 4: Step Trapezoidal Profile	E-59
Velocity Profile Operation.....	E-62
Program Example 5: Velocity Profile.....	E-63
Automatic Trapezoidal Profile Error Codes.....	E-65
Troubleshooting Guide for Mode 30	E-65
Symptom: The stepper motor does not rotate.	E-65
Symptom: The motor turns in the wrong direction.	E-66
Mode 40: High-Speed Interrupts	E-67
Purpose	E-67
Functional Block Diagram.....	E-67
Setup for Mode 40	E-68
Interrupts and the Ladder Program	E-68
External Interrupt Timing Parameters	E-69
Timed Interrupt Parameters.....	E-69
X Input/Timed INT Configuration	E-69
Program Example 1: External Interrupt	E-70
Program Example 2: Timed Interrupt	E-71
Mode 50: Pulse Catch Input.....	E-72
Purpose	E-72
Functional Block Diagram.....	E-72
Pulse Catch Timing Parameters	E-72
Setup for Mode 50	E-73
X Input Configuration	E-74
Program Example 1: Pulse Catch	E-75
Mode 60: Discrete Inputs with Filter	E-76
Purpose	E-76

Functional Block Diagram.....	E-76
Input Filter Timing Parameters	E-76
Setup for Mode 60.....	E-77
X Input Configuration	E-77
Program Example: Filtered Inputs	E-78

Appendix F: PLC Memory

DL06 PLC Memory.....	F-2
Non-volatile V-memory in the DL06.....	F-3

Appendix G: ASCII Table

ASCII Conversion Table	G-2
------------------------------	-----

Appendix H: Product Weights

Product Weight Table	H-2
----------------------------	-----

Appendix I: Numbering Systems

Introduction	I-2
Binary Numbering System	I-2
Hexadecimal Numbering System.....	I-3
Octal Numbering System	I-4
Binary Coded Decimal (BCD) Numbering System	I-5
Real (Floating Point) Numbering System.....	I-5
BCD/Binary/Decimal/Hex/Octal -What is the Difference?.....	I-6
Data Type Mismatch.....	I-7
Signed vs. Unsigned Integers.....	I-8
AutomationDirect.com Products and Data Types	I-9
<i>DirectLOGIC</i> PLCs.....	I-9
C-more/C-more Micro-Graphic Panels.....	I-9

Appendix J: European Union Directives (CE)

European Union (EU) Directives	J-2
Member Countries	J-2

Table of Contents

Applicable Directives	J-2
Compliance.....	J-2
General Safety	J-3
Special Installation Manual	J-4
Other Sources of Information	J-4
Basic EMC Installation Guidelines	J-5
Enclosures	J-5
Electrostatic Discharge (ESD).....	J-5
AC Mains Filters	J-6
Suppression and Fusing.....	J-6
Internal Enclosure Grounding	J-6
Equi-potential Grounding	J-7
Communications and Shielded Cables	J-7
Analog and RS232 Cables	J-8
Multidrop Cables.....	J-8
Shielded Cables within Enclosures	J-8
Analog Modules and RF Interference	J-9
Network Isolation	J-9
DC Powered Versions	J-9
Items Specific to the DL06	J-10

Appendix K: Introduction to Serial Communications

Introduction to Serial Communications	K-2
Wiring Standards.....	K-2
Communications Protocols.....	K-3
DL06 Port Specifications.....	K-5
DL06 Port Pinouts	K-5
Port Setup Using DirectSOFT 5 or Ladder Logic Instructions	K-6
Port 2 Setup for RLL Using K-Sequence, DirectNET or MODBUS RTU	K-7
K-Sequence Communications.....	K-10
DirectNET Communications	K-10
Step 1: Identify Master Port # and Slave #.....	K-10
Step 2: Load Number of Bytes to Transfer.....	K-10
Step 3: Specify Master Memory Area.....	K-11
Step 4: Specify Slave Memory Area	K-12
Communications from a Ladder Program.....	K-13
Multiple Read and Write Interlocks.....	K-13

MODBUS RTU Communications.....	K-14
ASCII Communications.....	K-14

Index

Notes