

Adorable Humidifiers

INSTRUCTION MANUAL

Tower Fan MODEL# EE-5605





PLEASE READ THESE AND SAVE ALL INSTRUCTIONS TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS APPLIANCE.

TABLE OF CONTENTS

| Table of Contents | P.1 |
|--|-----|
| Important Safety Instructions | P.2 |
| General Safety Instructions | P.3 |
| List of Main Parts, Tech. Specifications, Contents of Packaging | P.4 |
| Assembly | P.5 |
| Maintenance, Service | P.5 |
| Warranty Information | P.6 |
| Warranty Card | P.8 |



IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should also be observed, including the following. PLEASE READ AND SAVE ALL INSTRUCTION BEFORE USING THE TOWER FAN.

- 1. Always turn the fan off before removing the plug from the outlet.
- 2. Always turn the fan off and unplug it immediately after using and before cleaning.
- 3. To protect against electrical hazards, do not place the fan in water or other liquids. Do not allow the fan to become wet or damp.
- 4. Do not store the fan where it can fall into water or other liquids.
- 5. Do not store the fan unattended when it is plugged in. Turn the fan off when leaving it for an extended period.
- 6. Use the fan only for its intended use as described in these operating instructions.
- 7. Do not operate any appliance if its cord or plug is damaged or after the appliance has malfunctioned, or after it has been dropped or damaged in any way. Always follow the warranty instructions.
- 8. Place fan on a flat, level surface to avoid it overturning.
- 9. Avoid contact with moving parts.
- 10. Never drop or insert any object into any opening. Do not insert any objects into the area protected by wire guards.
- 11. Do not obstruct the airflow.
- 12. Do not operate the fan without the guard.
- 13. Close supervision is necessary when any appliance is operated near children.

WARNING: To reduce the risk of fire or electrical shock, do not use this fan with any solid –state speed control device

THIS APPLIANCE HAS A POLARIZED PLUG (ONE PIN IS WIDER THAN THE OTHER) TO REDUCE THE RISK OF ELECTRICAL SHOCK. THIS PLUG IS DESIGNED TO FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY INTO THE OUTLET, TRY THE PLUG THE OTHER WAY AROUND. IF THE PLUG STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. DO NOT ATTEMPT TO ALTER, DISMANTLE OR FIND ANOTHER WAY AROUND THIS SAFETY FEATURE.

SAVE THESE INSTRUCTIONS

GENERAL SAFETY INSTRUCTIONS



WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire or serious personal injury. The warnings, cautions, and instruction discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are a factor which cannot be built into this product, but must be supplied by the operator.

SAVE ALL INSTRUCTIONS!

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

ELECTRIC POWER

If electric circuit is overloaded with other appliances, your appliances may not operate properly. The appliances should be operated on a separate electrical circuit from other operating appliances.



SAFETY WARNING

Although your appliance is easy to operate, for your safety, the below warnings must be followed:


- 1. Do not place the appliance near a heat source.
- 2. Use the appliance on a stable surface.
- 3. Do not unplug by pulling on the supply cord.
- 4. The appliance must be unplugged:
 - A. Before any cleaning or maintenance
 - B. If it appears to be faulty

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

LIST OF MAIN PARTS

- 1. Remote Controller
- 2. Main Body
- 3. Base
- 4. Base Screw
- 5. Clamp Screw
- 6. Power Cord & Plug

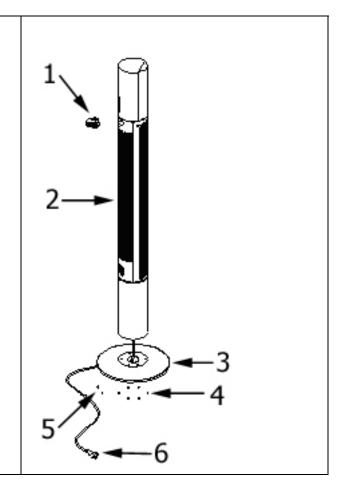

TECHNICAL SPECIFICATIONS:

| Model Number | EE-5607 |
|----------------|-------------|
| Rating Voltage | 120VAC 60Hz |
| Rated Wattage | 40W |

CONTENTS OF PACKAGING

- a. Instruction Manual
- b. Tower Fan main body
- c. Base
- d. Base Screws
- e. Clamp Screws

If any of the above items are missing, please contact our service department at 1-888-599-0992 (http://www.crane-usa.com) for replacement. Business hours Mon-Fri 9:00am-4:00 pm CT.


HOW TO ASSEMBLY

- 1. Lay fan main body gently on floor, take the base (3) and place power cord (6) in the cord groove.
- 2. Attach the fan body and the base by tightening the base screws (4) with a screwdriver.
- 3. Sccure power cord (6) to base (3) with clamp screws (5).

HOW TO USE

How to extract the remote controller

The remote controller can be extracted from remote controller holder, at top of rear enclosure as shown.

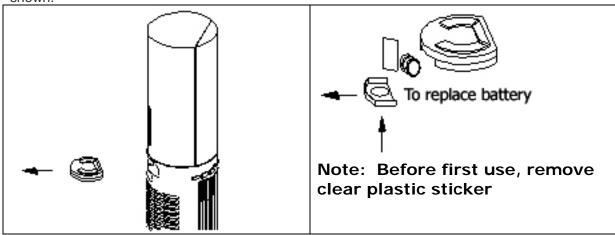


How to operate controls

| On - Green Off - Light Off | | To Start or stop the fan |
|--|-----|--|
| Low speed - Red Mid speed - Orange High speed -Green | (F) | To adjust the Speed Level of the fan: Low / medium / high |
| On -Green Off - Light off | | To start or stop the oscillation of fan |
| On -Green Off - Light off | | To switch the LED light on or off for the clock |
| 2 hours - Red 4 Hours - Orange 8 hours - Green | B | To set the timer level: 2 / 4 / 8 hours |

Operating Instructions for digital clock

- 1. Open the battery compartment gently
- 2. Please follow the batteries polarity directions.
- 3. Set time and date.
 - Press 'MODE' to activate setting of time and date. Complete setting through pressing UP/DOWN
- 4. Setting of alarm clock.
 - Press 'MODE' once into alarm mode on normal condition.
 - Press 'SET' to activate setting of alarm clock on alarm condition.
 - Complete setting through pressing UP/DOWN.

Temperature conversion: Press 'SET' t

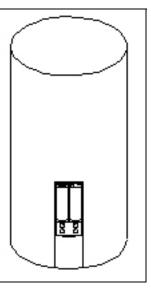



MAINTENANCE

CAUTION:

Always be sure that the appliance is switched OFF before cleaning the appliance or attempting to store the item.

Before cleaning, turn the fan off and unplug from electrical outlet. Wipe off excess dust with a lint free cloth. A vacuum cleaner hose can be used to clean this area if desired. Should the fan housing become soiled, it can be cleaned with warm (not hot) soapy, mild detergent solution. Wipe dry. Do not submerse your fan in water or any other liquid. Do not allow any liquid to get into the fan or motor

Please Note:

Take care not to stain the plastic parts with oil. Avoid using in places where oil is liable to spill on fan. Damage deterioration is always caused by oil sticking.

STORING

Store the appliance in a dry location. Do not place any heavy items on top of appliance during storage as this may result in possible damage of appliance.

SERVICE CENTER

If you have any question in regards to the operation of this appliance or are in need of a spare part please contact our service center at:

Crane USA Inc. Tel: 1-888-599-0992

(Business hours Mon-Fri 9:00am - 4:00pm CT)

Website: http://www.crane-usa.com



ENVIRONMENTAL PROTECTION

If the appliance should no longer work at all, please make sure that it is disposed in an environmentally friendly way. Please do not put it with your household waste.

LIMITED WARRANTY

Thank you for purchasing a top quality **Crane** product. This Tower Fan was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects under normal use and conditions for 1 year.

In case you find this product to have a manufacturing defect please proceed as follows:

- A. within 90 days of purchase: return the product to your retailer for a replacement or a refund.
- B. After 90 days and within the warranty period: send the product and all of it's accessories to our service center. The consumer will be responsible for all shipping costs to the Crane Service Center. Crane will not assume responsibility for loss or damages to the product being returned to us. To avoid transport damages carefully package the product and insure it with the carrier. Be sure to fill out the warranty card and include it with a copy of the dated sales receipt. In return you will receive your repaired item, or a new product at the service center's discretion.

WARRANTY IS ONLY VALID WITH A <u>DATED PROOF OF PURCHASE</u>.

The warranty is void if the defect is due to accidental damage, misuse, abuse, neglect, improper repair or alteration by unauthorized persons or failure to follow operation instructions provided with the product. This warranty does not apply to normal wear and tear, as well as commercial use.

The warranty is non-transferable and applies only to the original purchase and does not extend to subsequent owners of the product. Liability under this warranty is limited to repair, or replacement. In no event shall liability exceed the purchase price paid by the purchaser of the product. Under no circumstances shall there be liability for any loss, direct, indirect, incidental, special or consequential damage arising out of in connection with use of this product.

This warranty is only valid in the 48 contiguous states plus the District of Columbia. Excluding Alaska, Hawaii, Puerto Rico, and the Virgin Islands. This warranty is effective only if the product is purchase and operated in the United States of America.

This Warranty gives you specific legal rights. However you may have other rights that vary from state to state. Some states do not allow limitation on implied warranties or exclusion of consequential damages therefore these restrictions may not apply to you.

Any instruction or warranty included in this manual my be subject to change with out notice. For the most up to date set of instructions and warranty please contact us or visit our web site.

Crane USA Inc.

Tel: 1-888-599-0992 (Business Hours Mon-Fri 9:00am-4:00 pm CT)

Website: http://www.crane-usa.com

1800 Nicholas Blvd

Elk Grove Village, Illinois 60007

WARRANTY CARD



WARRANTY CARD

Ultrasonic Humidifier

In case you find this product to be defective please proceed as follows:

- A. within 90 days of purchase: return the product to your retailer for a replacement or a refund.
- B. After 90 days and within the warranty period: send the product and all of it's accessories to our service center. The consumer will be responsible for all shipping costs to the Crane Service Center. Crane will not assume responsibility for loss or damages to the product being returned to us. To avoid transport damages carefully package the product and insure it with the carrier. Be sure to fill out the warranty card and include it with a copy of the dated sales receipt. In return you will receive your repaired item, or a new product at the service center's discretion.

This Ultrasonic Humidifier was tested and meets our stringent quality standards. This product is warranted to be free from manufacturing defects in original materials, including original parts, and workmanship for 1 year with proof of purchase.

Please print clearly and fill in your details below. Send it together with the product and purchase receipt. Please read the Limited Warranty conditions mentioned in this instruction manual.

| Customer Name | |
|-------------------------|--|
| Street | |
| City | |
| State | |
| ZIP Code | |
| Phone # | |
| Model #/Style | |
| Purchase Date | |
| Description of Defect : | |
| | |
| C | |



Service Center Address:

Crane USA Inc.

1800 Nicholas Blvd Elk Grove Village, Illinois 60007

Tel: 1-888-599-0992 (Business Hours Mon-Fri 9:00am-4:00 pm

CT)Website: http://www.crane-usa.com