

Digital Camera's Model
Agfa Digital

ephoto CL 45
Ephoto CL18
Ephoto CL30
Ephoto CL30 clik
Ephoto CL45
Ephoto CL50
Ephoto 1280
Ephoto 1680

Fuses and location

Memory card

CANON DIGITAL

Canon Powershot A5zoom
Canon Powershot A5
Canon PowershotA10
Canon Powershot A20
Canon Powershot A30
Canon Powershot A40
Canon Powershot A50
Canon Power shot A60
Cano Powershot A70
Canon Power shot A75
Canon Powershot A80
Canon Powershot A85
Canon Powershot A95
Canon Powershot A100
Canon Powershot A200
Canon Powershot A300
Canon Power shot A310
Canon Powershot A400
Canon Powershot S1 1s
Canon Powershot S10
Canon Powershot S20
Canon Powershot S30
Canon Powershot S40
Canon Powershot S45
Canon Powershot S50
Canon Powershot S60
Canon Powershot S70
Canon Power Shot S100
Canon PowershotS110
Canon Powershot S200
Cano Powershot S230
Canon Powershot S300
Canon Powershot S330
Cano Powershor S400
Canon Powershot 350
Canon Powershot 600
Canon Powershot Pro 1
Canon Powershot Pro 70
Canon Powershot Pro 90 IS
Canon G1
Canon G2
Canon G3
Canon G5

Fuses and location

wd1-5063-000 fuse Matsu denki
wd1-5063-000 fuse Matsu denki

wd1-5063-000 fuse Matsu denki
wd1-5063-000 fuse Matsu denki
cy4-6067-000 fuse matsu denki unhs205

CY4-6076-000

ck9-0416-000
ck9-0416-000

Wd1-5064-000 fuse Matsy denki

cy4-6071-000 fuse Daito kmc 30
cy4-6071-000 fuse Daito kmc 30

Wd1-5064-000 fuse Matsy denki

Wd1-5064-000 fuse Matsy denki
Wd1-5064-000 fuse Matsy denki
CY4-6074-000 FUSE MATSU

Daito fuses part no cy4-6069-000
Daito fuses part no cy4-6069-000
Daito fuses part no cy4-6069-000
cy4-6073-000 \$ cy4-6074-000

Memory card

Compact flash Type 1

Compact flash Type 1

Compact flash Type 1

Compact flash Type 1

Ganon G6		
Canon ixus		
Canon IXUS i	CY4-6074-000 FUSE MATSU	dc-dc cm1-2142-000
Canon IXUS II		
Canon IXUS lis		
Canon Ixus 300	Wd1-5064-000 fuse Matsy denki	dc-dc cm1-1129-000
Canon IXUS 330	Wd1-5064-000 fuse Matsy denki	dc-dc conv cm1-1401-000
Canon ixus 400	cy4-6074-0000	Compact flash Type 1
Canon Ixus 430	cy4-6074-0000	
Canon IXUS 500	cy4-6074-0000	
Canon IXUS V		
Canon ixus v2	Wd1-5064-000 fuse Matsy denki	Compact flash Type 1
Canon Ixus v3		Compact flash Type 1
Canon Eos 1D	shutter CG2-0701-000	DC-DCPCB CG2-0713-00
Canon Eos 1D Pro Kit		
Canon EOS-1Ds		
Canon Eos -1Ds Pro Kit		
Canon Eos 10D body	SHUTTER CG2-0961-000	DC-DC PCB CH9-1026-00
Canon Eos 10D Pro Kit		
Canon EOS 20D		
Canon Eos 300D	SHUTTER CG2-1050-000	DC-DC PCB CG2-1017-00
Canon EOS - D30	SHUTTR CG1-3807-000	
Canon EOS - D60	shutter CG2-0761-000	DC-DC PCB CH9-0322
Contax	Fuses and location	Memory card
Contax N digital		
Contax TVs Digital		
Casio		
EXILIM EX-S3		sd card
EXILM- Z3		sd card
QV-3 EX		sd card
QV-10		sd card
QV-20		sd card
QV-R3		sd card
QV-R4		sd card
QV-300		sd card
QV-700		sd card
QV-770		sd card
QV-2000UX		sd card
QV-2100		sd card
QV-2300UX		sd card
QV-2400UX		sd card
QV-2800UX		sd card
QV-2900UX		sd card
QV-3000EX		sd card
QV-3500EX		sd card
QV-4000		sd card
QV-5500SX		sd card
QV-5000SX		sd card
QV-5700		sd card
QV-7000 SX		sd card
QV-8000SX		sd card

Hanimex

Fuses and location

Memory card

Mamiya Pro digital

Mamiya 645

Olympus DiGITAL

Fuses and location

Memory card

Olympus C-1	DB1258	
Olympus C-1zoom		
Olympus C-2		
Olympus C-2i		
Olympus C-2 zoom		
Olympus C-40zoom		
Olympus C-50 zoom		
Olympus C-120		
Olympus C-150		
Olympus C-200		
Olympus C-200zoom	510model	
Olympus C-220 zoom		
Olympus C-300 Zoom		
Olympus C-320		
Olympus C-340L		
Olympus C-340R		
Olympus C350zoom		
Olympus C360Z		
Olympus C-440		
Olympus C-450		
Olympus C-460z		
Olympus C-500		
Olympus c-510z	c200zoom	
Olympus C520		
Olympus C-550		
Olympus C-600		
Olympus C-650		
Olympus C-700		
Olympus C-700ultra		
Olympus C-720UZ		
Olympus C-725uz		
Olympus C-730UZ		
Olympus C-740 UZ		
Olympus C-750 UZ		
Olympus C-765uz		
Olympus C-860L		
Olympus C-960zoom		
Olympus C-990zoom		
Olympus C-2000		
Olympus C-2020		
Olympus C-2040 zoom		
Olympus C-2100ultrazoom		
Olympus C-2500L		
Olympus C-3000zoom		
Olympus C-3020zoom		
Olympus C-3030zoom		
Olympus C-3100zoom		
Olympus C-4000zoom		
Olympus C-4040zoom		
Olympus C-4100zoom		
Olympus c-5000zoom		
Olympus C-5060wide zoom		

Olympus D-40Zoom
 Olympus D-100
 Olympus D-150 Z
 Olympus D200 L Fuse v2 Marking "22"
 Olympus D220L
 Olympus D300L Fuse v2 Marking "22"
 Olympus D-340 L Fuse v2 Marking "22"
 Olympus D360 L
 Polympus D370
 Olympus D-380
 Olympus D-390
 Olympus D-400L
 Olympus D 400 Zoom
 Olympus D450
 Olympus D460 zoom fuse 2,2 amp vc856400
 Olympus D490 Zoom
 Olympus D500L Fuse v2 Marking "22"
 Olympus D510 Z
 Olympus D-520Zoom
 Olympus D560 Zoom
 Olympus D600L
 Olympus D620L
 Olympus D490 zoom
 Olympus C-2100ultrazoom
 Olympus C-2500i
 Olympus C-2000
 Olympus C-2020
 Olympus C-2040 zoom
 Olympus C-2100ultrazoom
 Olympus C-3000zoom
 Olympus C-3020 zoom
 Olympus C-3030zoom
 Olympus C-3040zoom
 Olympus C-4000zoom
 Olympus C-4040zoom
 Olympus C-5050 zoom
 Olympus C-5060Czoom
 Olympus U mini Digital 4.0meg

Olympus E-10
 Olympus E-20P
 Olympus E-100RY
 Olympus E-100RS

discriptio part no

Olympus Mju 400
 Olympus Mju 300
 Olympus Mju 410

Pentax DiGITAL

ist D
 Ist Ds
 Optio Ei-100
 Optio Ei-200
 Optio Ei-2000
 Optio S
 Optio S4
 Optio S4i

Fuse And Location

Memory card Type

Optio S5i	
Optio S30	
Optio S40	sd card
Optio S43WR	
Optio 30	
Optio 33L	
Optio 33LF	
Opti 33wr	
Optio 450	Compact flash type 1
Optio 555	Compact flash type 1
Optio 550	Compact flash type 1

Note; Several assy's for Optio 555 are available as individual parts.

Optio 330

Optio 330GS	
Optio 330 RS	
Optio 430	
Optio 430 RS	
Optio 100	
Optio 230	Compact flash type 1
Optio 330	Compact flash type 1
Optio 430	Compact flash type 1

Fuse And Location

Memory card Type

Minolta DiGITAL

Dimage Xi		mmc/sd
Dimage X20		
Dimage XG		
Dimage 5		
Dimage Xt		
Dimage Xt B12		
Dimage 7Hi		
Dimage 7i		Compact flash type 1
Dimage 7		
Dimage X		
Dimage F-100	2776-4901-01	mmc/sd
Dimage F-200		
Dimage F-300		
Dimage E-201		
Dimage E-203		
Dimage E223		
Dimage E323		
Dimage G400		
Dimage G500		
Dimage G600		
Dimage S-304		
Dimage S-404		
Dimage S-414		
Dimage V		
Dimage Z1		
Dimage Z2		
Dimage Z300		
Dimage Z330		
Dimage RD -3000		
Dimage EX 1500 Wide		
Dimage EX 1500 Zoom		
Dimage A 1		

Dimage A 2
Dimage 2300
Dimage 2300zoom

Nikon DiGITAL

Coolpix 700
Coolpix 100
Coolpix 300
Coolpix 600
Coolpix 775
Coolpix 700
coolpix 800
Coolpix 880
Coolpix 885
coolpix 900
Coolpix 900 S
Coolpix 950
Coolpix 990
Coolpix 995
Coolpix 2000
Coolpix 2100
Coolpix 2200
Coolpix 2500
Coolpix 3100
Coolpic 3200
Coolpix 3500
Coolpix 3700
Coolpix 4300
Coolpix 4500
Coolpix 5000
Coolpix 5400
Coolpix 5700
Coolpix 8700
Coolpix SQ

Fuse And Location

control pcb

423-028-0904

fuse 432-028-0904 32volt 2A

fuse marking N

Memory card Type

Compact flash type 1

switch unit

Compact flash type 1

Compact flash type 1
sd-memory card

fitted on power pcb st 1

Compact flash type 1

Nikon D1
Nikon D1H series
Nikon D2H
Nikon D1X
Nikon D70
Nikon D100

Ricoh DiGITAL

RDC 1
RDC 2
RDC 2E
RDC -7
RDC 200G
RDC 300
RDC 300Z
RDC 330
RDC i500
RDC i700
RDC 4000
RDC4200

Fuse And Location

Memory card Type

compact flash

RDC 4300	
RDC 5000	smart media
RDC 5300	smart media
RDC 6000	
Ricoh Capilo R 1	
Caplio G3	
Caplio PR 120	
Caplio PR-1	
Caplio RR 10	sd card
Calio RR30	
Caplio RR230	

Sony DiGITAL

Cybershot DSC P2

D700

D770

S30

S50

S70

S75

S85

P1

P2

P3

P5

P7

DSc-P8

P9

DSC-P10

P20

P30

P31

DSC-P32

P50

P51

DSC-P52

P71

DSC-P72

DSC-P92

DSC-V1

U10

DSC-U20

F55

F55V

F505

F505V

F707

DSC-FX77

DSC-F717

Mavica CD200

CD250

CD300

CD350

CD400

CD500

Fuse And Location

Memory card Type

sony memory

CD1000
FD71
FD73
FD75
FD81
FD85
FD85
FD87
FD88
FD90
FD91
FD92
FD95
FD97

Fuse And Location

Memory card Type

Konica DiGITAL

KD-200zoom
KD-300zoom
KD-310Z
KD-400zoom
KD-500Zoom
E-Mini
E-Mini D
E-Mini M

Fuse And Location

Memory card Type

Fuji DiGITAL

Fine Pix 30i

Fine Pix 40i
Fine Pix 50i
Fine Pix 1300
Fine pix 1400
Fine Pix 2300
Fine Pix 2400 zoom
Fine Pix 2600 zoom
Fine Pix 2700 zoom
Fine Pix 2800zoom
Fine Pix 3800
Fine Pix 4700zoom
Fine Pix 4900zoom
Fine Pix 4800zoom
Fine Pix 6800zoom
Fine Pix 6900 zoom
Fuji Fine Pix A101
Fine Pix A120
Fine Pix A200
Fine Pix A201
Fine Pix A202
Fine Pix A203
Fine Pix A204
Fine Pix A205
Fine Pix A210
Fine Pix A310 zoom
Fine Pix A301
Fine Pix A303
FinePix A310

smart media

5 fuses on board main cap

Fine Pix A330
Fine Pix A340
Fine Pix A410
Fine Pix DS-300
Fine Pix DS-260?
Fine Pix F401
Fine Pix F402
Fine Pix F410 zoom
Fine Pix F420zoom
Fine Pix F440
Fine Pix F450
FinePix F601Z
FinePix F610
Fine Pix F700
Fine Pix F710
Fine Pix Si-Pro
Fine Pix S2-Pro
Fine Pix S20Pro
Fine Pix S304
Fine PIX S 601Z
Fine Pix S602 Z
Fine Pix S602 Z Pro
Fine Pix s3000
Fine Pix S5000
Fine Pix S7000
Fine Pix 301
Fine Pix M603
Fine Pis MX-500
Fine Pix MX-600zoom
Fine Pix MX-700
Fine Pix MX-1200
Fine Pix MX-1400
Fine Pix MX-1500
Fine Pix MX-1700
Fine Pix MX-2700
Fine Pix MX2900zoom
Fine Pix Z 650
Fine Pix E500
Fine Pix E510

Fuse And Location

Memory card Type

Toshiba DiGITAL

PDR M1
PDR M3
PDR M4
PDR M5
PDR M11
PDR M21
PDR M25
PDR M60
PDR M61
PDR M65
PRD M70
PRR M71
PDR M81
PDR Li 300

PDR T10
PDR 3310
PDR 3330
PDR 4300
PDR5300

CASIO DiGITAL

ex-p600

EX-S3

EX-Z3

EX-Z4

EX-Z30

EX-Z40

EX-s3

EX-S20

EXM-2

QV-3EX

QV-R3

QV-R4

QV-R10

QV-R20

QV-R40

QV-R41

QV-R51

QV-300

QV-700

QV-770

QV-2000UX

QV-2100

QV-2300UX

QV-2400UX

QV-2800UX

QV-2900UX

QV-3000

QV-3000EX

QV-3500EX

QV-4000

QV-5000SX

QV_5500SX

QV-5700

QV-7000 SX

QV-8000SX

Fuse And Location

Memory card Type

ViVITAR DiGITAL

Vivitar 2700 DiGicam

Fuse And Location

Memory card Type

JVC DiGITAL

GC-QX3HD

GC-QX5HD

Fuse And Location

Memory card Type

EPSON DiGITAL

Photo Pc 500

PhotoPC 550

PhotoPc 600

PhotoPc 650

PhotoPC 700

PhotoPC 750Z
PhotoPC 800
PhotoPC 800Z
PhotoPC 850
PhotoPC 3000Z
PhotoPC 3100Z Digilas
PhotoPC R-D1
PhotoPCI 300
PhotoPCL 400
PhotoPC Imac

Sharp DiGITAL

Sigma

SD-9

Sanyo

DSC-J1
DSC-AZ1
DSC-MZ1
VPC-2400
VPC-x350

Samsung

Digimax V3
Digimax V4
Digimax 101
Digimax 130
Digimax 201
Digimax 202
Digimax 220 se
Digimax 230
Digimax 240
Digimax 300
Digimax 301
Digimax 340
Digimax 350SE
Digimax 360
Digimax 370
Digimax 410
Digimax 420
Digimax 430

Fuse And Location

Memory card Type

Fuse And Location

Memory card Type

H P DIGITAL

Photo smart 320
Photosmart 435
Photo smart 620
Photosmart 635
Photo smart R707
Photo smart 715
Photo smart 720
Photo smart 735
Photo smart 812
Photo smart 850

Photo smart 935
Photosmart 945
Photosmart R707
Photo smart C 20
Photo smart C 30
Photo smart C200
Photo smart C 215
Photo smart C 315
Photo smart C500
Photo smart C618
Photo smart C912

Fuse And Location

Memory card Type

Panasonic DiGITAL

Panasonic DMC-LC20A-S
Panasonic DMC-LC5A-K
Panasonic LC-5
Panasonic LC20
Panasonic LC40
Panasonic DMC-FZ-1
Panasonic DMC- F7

LEICA

Digilux

Digilux 4.3
Digilux zoom
Leica Digilux 1
Leica Digilux 2

Kyocera

Finecam 3300
Finecam L4v
Finecam L3v
Finecam L30
Finecam M400r
Finecam M400R
Finecam M410R
Finecam S3
Finecam S3R
Finecam S3L
Finecam S3V
Finecam S3x
Finecam S4
Finecam S5R
Finecam SL400R
Finecam S5

Kodak DiGITAL

DC50

DC 120Zoom
DC 200
DC 210 Zoom
DC 215 Zoom
DC 220
DC 240 Zoom
DC 260 Zoom
DC 265 Zoom
DC 280 Zoom

Fuse And Location

vsfw0004
vsfw0004

Memory card Type

DC 290 Zoom

DC3200

DC3400

DC3500

DC3600

DC3800

DC3900

DC4200

Dc4230

DC4330

DC4530

DC4800

DC4900

DC5000

Compact flash standard

DC6340

DCS-slr/1

DCS-slr/N

DCS200+

DCS210+

DCS215

DCS220

DCS240

DCS260

DSC265

DCS280

DCS290

Kodak DiGITAL

Fuse And Location

Memory card Type

DCS315

DCS330

DCS420

DCS460

DCS520

DCS560

DCS620

DCS620x

DCS220

DCS660

DCS720x

DCS 760

DCS 14N

DX3215

DX3500

DX3600

DX3700

DX3900

DX4330

DX4530

DX4900

DX6340

Dx6440

DX6490

DX7440

DX7630

LS420

LS633

LS443
LS633
LS743
LS753
MC3
CX330
CX4200
CX4230
CX4300
CX6200
CX6230
CX7220
CX7300
CX7330
CX7430
CX7530
PCS-14N

Lcd assy Battery cover Front cover Rear cover CF card slot&pcb topcover

Lcd assy	Battery cover	Frontcover	Rear cover	CF card slot&pcb	Topcover
	FC2-9410-000				
	FC2-8681-000				
FG2-9650-000					
wg2-5213-000	cm1-1176-000	cm1-1175-000	cm1-1164-000		
wg2-5213-000	cm1-1166-000	cm1-1163-000	cm1-1164-000		
wg2-5213-000	cm1-1388-000	cm1-1387-000	cm1-1374-000		
wg2-5213-000	cm1-1375-000	cm1-1373-000	cm1-1374-000		
	FC3-0005-000				
ck9-1022-000	cm1-2100-000	cm1-2099-000	switch play/record		
ck9-1022-000	cm1-2105-000		switch play/record		
ck9-1050-0000	cm1-2290-000	cm1-2291-000	cm1-2292-000		
cm1-2222-000				cm1-2220-000	
ck9-1050-000	cm1-2559-000	cm1-2560-000	cm1-		
ck5-0051-000	cd1-4124-000	cm1-1307-000	cm1-1308-000		
ck5-0051-000	cd1-4124-000	cm1-1440-000	cm1-1308-000		
CK9-1075-000	CD3-0412-000	CY1-6321-000	CY1-6322-000		
cy4-6031-000	FC3-0072-000	FG3-0576-000	Fg3-0573-000		FG3-0572-000
WG2-5219-000		CM1-1237-000	CM1-1233-000		Cm1-1229-000
WG2-5219-000		Cm1-1298-000	CM1-1295-000		Cm1-1229-000
		cm1-1591-000	cm1-1594-000		cm1-1595-000
WG2-5267-000		Cm1-24087-000	CM1-2409-000		
	cd1-3101-000				
	cd1-4238-000		cm1-1337-000		
WG2-5212-000		CY1-6089-000	CM1-1146-000		
	cd3-0657-000	cm1-2113-000	cm1-2111-000		
cy2-8102-000	cy2-8135-000	cy2-8137-000			
	FG5-6989-000				
	CY1-6053-000				
				CD1-3244-000	
WG2-5219-000	CD1-3987-000	CM1-1258-000	CM1-1256-000	CM1-1077-000	cm1-1263-000
wg2-5219-000		cm11472-0000	cm1-4837-000		
	cm1-1617-000	cm1-1607-000			cm1-1610-000

ck5-0054-000	cd3-1159-000white		cd3-1155-000bronze		
wg2-5212-000		cy1-6089-000	cm1-1146-000		
wg2-5227-000	cd1-3687-000	cm1-1412-000	cm1-1408-000		
wg2-5243-000	cd3-0657-000	cm1-2115-000	cm1-2111-000	cm1-2084-000	
ck9-1073-000	cd3-2325-000	cm1-2466-000		cm1-2361-000	
ck9-1073-000	cd3-2325-000	cm1-2464-000		cm1-2361-000	
	cd1-4238-000		cm1-1337-000		
WG2-5226-000	cd1-4238-000	CM1-1458-000	cm1-1337-000		
CG2-0721-000	CB3-0203-000			CG2-0748-000	
CG2-0721-000	CB3-0203-000		CY3-1372-000	CG2-0748-000	
CG2-0933-000	CG2-0942-000	CG2-0940-000	CG2-0941-000	CG2-0952-000	CG2-0938-000
JO	CF1-5103-000	CG2-1011-000	CB3-1196-000	CH9-1037-000	CG2-1439-000
CY1-6062-000		CG1-3785-000	CG1-3800-000		CG1-3774-000
CG2-0782-000	CB2-0652-000	CG2-0778-000	CG2-0783-000	CG1-1968-000	CG2-0786-000
Lcd Assy	Battery cover	Frontcover	Rear Cover	CF card slot&pcb	Top cover

Lcd assy Battery cover Front cover Rear cover CF card slot&pcb topcover

Lcd assy	Battery cover	Front cover	Rear cover	CF card slot&pcb	topcover
vj355400	ve386500	vj363401	vj331200		
vj355400	ve386500	vj363401	vj331200		
vj387500	ve420000	vj420200	vj421000		
vc884600	vc180900	vc180000	vc180300		
vc891600	vc206200	vc206700	vc206500		
vc264500	vc161000	vc164000	vc160900		
vj355400	ve383900	vj363601	ve384900		
	vc108900				
vc892500	vc212700	vc211600	vc210300		
vc797600	vc286300	vc278600	vc284500		
vc862900					
vc797600	vc286200	vc291500	vc283300		
vj355400	ve383900	vj459501	ve384900		
	ve323700				
vc874700	ve323700	vj284100	vj247100		
vj350400	ve323700	vj349000	vj366900		
vc888000	ve323700	vj384700	vj385700		
vc894200	vc221800	vc217700	vc215800		
vc894200	vc221800	vc221600	vc221300		
ve087400	vc114500				
	vc114500	vc127100			
vc872300	ve310800	ve310300	vj203500		
vc868000	vc137200	vc142100	vc142000		vc141700
vj316200(pal)	vj315500	vj315800	vj315400		vj314700
vc864400	ve208800	ve209300	vj214700		ve288600
vc883600	ve372000	ve371700	vj286600		vc177800
vc864400	ve208800	ve209300	vj214700		vc129900
vc883600	vc372000	ve372300	vj286600		vc177800
vc886800	vc189100	ve414200	vj382600		vc187700
vc872300	ve208800	ve357000	vj266900		vc168100
vc886800	vc189100	ve414200	vj382600		vc187700
vj530200		vc233200	vc235300		
vc899700	vc240800	vc246400	vc248100		

			d100kit		vccardcover
	ve348000		d150kit		shutter button
	vc104500		vc107100		
	vc108900				
	vc106000				
	D340LKIT				
	vc110800		d360lkit		
			d370kit		shutter button
vc884600			vc181800		
vc891600	vc206200		vc220800		
	vc112200				dec monitor
	vc11700		d450kit		dec monitor
			d460kit		
			d490kit		
	vc161000				
vc892500					
vc868000					
	ve143000				
	vc114500				
	vc114500				
vc872300	vc155400				
vc868000	vc137200				
vc864400	vc130000				
vc883600					
					VJ140200
vc886800					
vc872300					
	vc240500	vc246600	vc248100		vc242200
part of rear cover	vj325300	hotshoe cover	vj322800		ve316900
		hotshoe cover			
		assembly hood			
Lcd assy	Battery cover	Front cover	Rear cover	CF card slot&pcb	top cover
vj392900		vj463700	mju 40(ve521800	mju 4 vj471600
vj392900		vj453600	blue 3(VE52100	styule vj456300
vj568000		VJ72100		VJ620500	vj567500
76140-0500	76140-A124	76140-0-A101	76140-0-A201		

76210-0500 76210-0-A124 76210-0-A101 76210-0-A201

76130-0500 76130-A10 76130-0-A100 76130-0-A201
io 550 are available as individual parts.

76100-0500 76100-0-A110 76100-0-A101 76100-0-A201

Lcd assy Battery cover Front cover Rear cover CF card slot&pcb top cover

2776-0460-01 2776-1303-01 2776-0131-01 2776-0132-01
2777-0460-01 2776-1301-01 2777-0131-01 2777-1302-01

2755-0137-01

Lcd assy	Battery cover	Front cover	Rear cover	CF card slot&pcb	top cover
645-033-1305	636-054-3881	636-054-4918	636-054-3867		
636-063-0161	636-061-1863	636-061-1849	636-0611856	636-061-1870	
645-033-1305	636-054-3881	636-054-4918	636-054-3867	636-054-0484	
645-040-7338	636-054-3881	636-055-9585	636-055-9592	636-054-4079	
645-040-7338	636-057-9828	636-057-9804	636-057-9811	636-058-0251	
645-047-2640	636-061-8343	636-061-8336		636-061-6790	
645-028-0498	636-052-1827	636-051-8339			
645-028-0498					
645-033-8809	636-054-4482				
645-040-4832	636-057-4106	636-057-4335, grip housing		636-057-4434	
645-045-8590	636-060-8092			636-060-7569	
VEK9783	VYF2846	VKM5913	VYK0H33		
645-052-5896		636-064-4670	636-064-5752		636-064-4670
645-065-0093	636-073-6405	636-073-6115	636-073-6382		636-073-6245
645-055-9174	636-061-8503	636-064-4618	636-064-4625	636-064-4878	636-066-7570
645-055-9174	636-066-6139	636-066-6115	636-066-6092	636-066-2728	
645-052-6992	636-065-1043	636-065-0961	636-065-0978		
636-064-9262		636-063-4558	636-063-4565	636-063-4862	
645-052-6992	636-065-2743	636-066-8164		636-065-2750	

Lcd assy	Battery cover	Front cover	Rear cover	CF card slot&pcb	top cover
	L102-1052				

L210 1024 L210 1022 L210 1027

Lcd assy Battery cover Front cover Rear cover CF card slot&pcb top cover

1-803-857-21 X-3950-656-1 x-3950-658-1 x-3950-659-1

1-803-036-21 (md7 #x-3949-918-1 x-3949-574-1 x-3948-762-1
1-803-036-21 #x-3949-587-1 x-3948-761-1 x-3949-575-1

Lcd assy Battery cover Front cover Rear cover CF card slot&pcb top cover

Lcd assy Battery cover Front cover Rear cover CF card slot&pcb top cover

BU01725-200

BU01725-200

Lcd assy

Battery cover Front cover

Rear cover

CF card slot&pcb

top cover

357037
356980

Lcd assy Battery cover Front cover Rear cover CF card slot&pcb top cover

5947S

Lcd assy Battery cover Front cover Rear cover CF card slot&pcb top cover

Lcd assy Battery cover Front cover Rear cover CF card slot&pcb top cover

Lcd assy

Battery cover Front cover

Rear cover

CF card slot&pcb

top cover

Lcd assy

Battery cover Front cover

Rear cover

CF card slot&pcb

Top cover

Lcd assy Battery cover Front cover Rear cover CF card slot&pcb top coiver

Lcd assy Battery cover Front cover Rear cover CF card slot&pcb top cover
1c5323
1c5376

1C5392 1E5909
5E8029 1e8029 1e5954
3c5841
5e8113
3C5841

3E1010

3e1183
5e8198
5e8113
5e8320
5e8320

5e8265
5e8390
5e8390
5e8407
5e8407
5e8051
5e8328
5e8068
3f2068

5e8378
5e8405

Lcd assy

Battery cover Front cover

Rear cover

CF card slot&pcb

top cover

Lens Barrier power pcb battery case Lith.batt.cov cf cardcover optical unit

Lens Barrier	Power PCB	Battery Case	Lith.batt.cov.	cf cardcover	Optical unit
			FC2-8687-000	FC2-9435-000	
			Fc2-8687-000	FC2-8682-000	
	cm1-1179-000			cd1-3478-000	cy1-6111-000
cd1-3449-000	cm1-1168-000			cd1-3478-000	cy1-6110-000
cd1-4254-000		cm1-1383-000	cd1-4262-000	cd1-4261-000	cy1-6134-000
cd1-4254-000		cm1-1383-000	cd1-4262-000	cd1-4261-000	cy1-6133-000
			FC2-8687-00	FC2-8682-000	
		cm1-2279-000		cd3-1800-000	cy1-6323-000
		cm1-2279-000			CM1-2119-000
					cy1-6347-000
				cd1-4126-000	cy1-6156-000
				cd1-4126-000	cy1-6156-000
				CD3-0417-000	Cy1-6283-000
		Fg3-0559-000		Fc3-0073-000	FG3-0589-000
CM1-1296-000		CM1-1219-000			CM1-1218-000
CM1-1297-000		CM1-1219-000			CM1-1296-000
cm1-1592-000	cm1-1601-000				cm1-1574-000
		CM1-2406-000			CM1-2521-000
				cd1-3107	
				cd1-4236-000	cm1-1333-000
					CM1-1143-000
cy2-8140-000		cy2-8136-000		cd3-0699-000	cm1-2062-000
				FB3-5041-000	cy2-8123-000
			CY1-6054-000		
	cm1-1632-000			cd13988-000	cy1-6114-000
				cd1-4780-000	cm1-1484-000
				cd1-5010-000	cm1-1602-000

cm1-2131-000

cm1-1249-000
cm1-1417-000
cm1-2074-000

cm1-1143-000
cm1-1416-000
cm1-2062-000
cd1-3646-000
cd3-2361-000
cd3-2326-000
cm1-2365-000
cm1-2365-000

cm1-1460-000

cm1-145 2-000 cm1-2022-0000

CG2-0747-000

bottom/cover

SOCKET/CONNECTORS

CB3-1147-000

CB3-1202-000

CG2-0773-000

Lens Barrier Power Pcb Battery case Lith bat.cover cf cardcover Optical cover

Lens Barrier power pcb Battery case lith.battcov cf cardcover optical unit

Lens Barrier **power pcb** **Battery case** **lith.battcov** **cf cardcover** **optical unit**

vj363101

vj363101

vj420200
vc180200
vc220700

vc161100
vj363301

vc211400
vc271900

vc292800

vj363201

vc137600

vc144600

ve209200

ve347800

ve131300

vc181900

terminal cover
terminal cover vc9333800
vc129700
terminal cover
connector cover
vc164100

ve044300
veo44300
ve044300
ve181000

connector cover
connector cover

VC863300

vj572600

Grip assy

vj325800

vc155200

Lens Barrier	power pcb	battery case	lith batt.cov	CF Cover	optical unit
vj463900silver				vj454500	vj437600
vj463900silver				vj454500	vj437600
vj712200 blue				vj620900 cham	vj437600

76140-0-X101

76140-0-X000

76300-0-x000

76210-0-X101

76210-0-A205

76130-0-X101

76130-0-X000

76100-0-X101

76100-0-A211 76100-0-X000

Lens Barrier **power pcb** **Battery case** **lith batt.cov** **CF Cover** **optical unit**
card cover

2777-2203-01

2777-1309-01

Lens Barrier	power pcb	batter case	lith batt.cov	CF Cover	optical unit
	636-054-1467				
6b100-192D	636-061-3041	636-061-2006		636-061-1870	6b100-192B-1
	636-054-6638			636-054-3928	
	636-058-0275			636-057-9835	
	636-061-6813				
636-051-8360					
					6B100-185
				636-060-8115	6b100-190
6B100-200B				VKF3568	
636-064-4700	636-064-1945				
a3a-07321		636-073-6450		636-073-6412	
	636-066-6405	636-065-4433			
				636-066-6153	
		636-065-1203		636-065-1067	
				636-063-4862	
	636-064-9187	636-065-2736		636-066-9093	

Lens Barrier power pcb battery case litbatcover CF Cover optical unit

L209-1072

Fuse L209 9001

Lens Barrier **power pcb** **battery case** **litbatcover** **CF Cover** **optical unit**

1-758-925-11

Lens Barrier power pcb Battery case lith batcover CF Cover optical unit

Lens Barrier power pcb Battery case lith batcover CF Cover optical unit

Lens Barrier power pcb Battery case lithbatcover CF Cover optical unit

Lens Barrier power pcb Battery case lithbatcover CF Cover optical unit

Lens Barrier power pcb Battery case lithbatcover CF Cover optical unit

Lens Barrier power pcb Battery case lithbatcover CF Cover optical unit

Lens Barrier power pcb battery case lithbatcover CF Cover optical unit

Lens Barrier power pcb battery c ase lithbatcover CF Cover optical unit

Lens Barrier **power pcb** **battery case** **card cover** **CF Cover** **optical unit**

Lens Barrier **power pcb** **battery case** **card cover** **CF Cover** **optical unit**

1e5901			3c5805	1c5394	
1e5901			3c5805	1c5394	
1e5957			1e5973		
3c5847		3c5844		3c5852	
3e1012				3e1030	
3c5846m		3c5844			
3c5846		3c5844			

3c5846

3e1184

5e8066

Lens Barrier **power pcb** **battery case** **card cover** **CF Cover** **optical unit**

finder unit	Flashunit	Main PCB	Lens assy	Digital Camera's Model
				Agfa Digital
				Ephoto CL 45
				Ephoto CL18
				Ephoto CL30
				Ephoto CL30 clik
				Ephoto CL45
				Ephoto CL50
				Ephoto 1280
				Ephoto 1680

Finder unit	Flashunit	Main pcb	Lens Assy	CANON DIGITAL
			FG29957	Canon Powershot A5zoom
cm1-1180-000	cm1-1178-000	cm1-1177-000		Canon Powershot A5
cm1-1180-000	cm1-1169-000	cm1-1167-000		Canon PowershotA10
cm1-1180-000	cm1-1391-000	cm1-1376-000		Canon Powershot A20
cm1-1180-000	cm1-1391-000	cm1-1389-000		Canon Powershot A30
	FG3-0529-000			Canon Powershot A40
				Canon Powershot A50
				Canon Power shot A60
cm1-2035-000	cm1-2277-000	ck1-1108-000	cy1-6323-000	Canon Power shot A70
			CM1-2119-000	Canon Powershot A75
	cm1-2277-000	ck1-1108-000	cy1-6347-000	Canon Powershot A80
				Cano Powershot A85
	cm1-1305-000	cm1-1301-000		Canon Powershot A100
	cm1-1305-000	cm1-1439-000		Canon Powershot A200
				Canon Powershot A300
	CM1-2002-000	CM1-2440-000	Cy1-6283-000	Canon Powershot a310
FG3-0568-000	FG3-0566-000	FG3-0567-000	FG3-0589-000	Canon Powershot S10
CM1-1229-000	CM1-1222-000		CM1-1218-000	Canon Powershot S30
CM1-1229-000	CM1-1222-000		CM1-1296-000	
cm1-123-000	cm1-1525-000		cm1-1596-000	Canon Powershot S45
CM1-2520-000	CM1-2402-000		CM1-2521-000	Canon Powershot S50
				Canon Powershot S60
cm1-1002-000			cm1-1001-000	Canon Powershot S70
	cm1-1342-000			Canon PowershotS110
				Canon Powershot S200
CM1-1144-000	CM1-1248-000		Cm1-1143-000	Cano Powershot S230
				Canon Powershot S300
cm1-2090				Canon Powershot S330
	cv2-8107-000			Cano Powershor S400
				Canon Powershot 350
				Canon Powershot 600
				Canon Powershot Pro 70
				Canon Powershot Pro 90 IS
				Canon G1
cy1-6115-000	cm1-1060-000			Canon G2
				Canon G3
cm1-1463-000		cm1-1489-000		Canon G5

cm1-2132-000

cm1-2131-000

Canon ixus

cm1-1144-000	cm1-1248-000	cm1-1129-000	cm1-1143-000
cm1-1144-000	cm1-1414-000	cm1-1403-000	cm1-1416-000
cm1-2090-000		cm1-2085-000	cm1-2062-000
cm1-2090-000		cm1-2369-000	cm1-2365-000
cm1-2090-000		cm1-2346-000	cm1-2365-000

Cano ixus 330
Canon ixus 400

cm1-1340-000 cm1-1342-000

CG2-0747-000 motor charge unit

Canon ixus v2
Canon Ixus v3

Canon EOS-1Ds

CG2-0944-000

CG2-1025-000	CG2-1005-000
	CG1-1955-000
	CG2-0770-000

Canon Eos-300
Canon EOS - D30
Canon EOS - D60

Finder unit	Flashunit	Main pcb	Lens assy
--------------------	------------------	-----------------	------------------

Contax
Contax N digital
Contax TVs Digital

Casio
EXILIM EX-S3
EXILM- Z3
QV-3 EX
QV-10
QV-20
QV-R3
QV-R4
QV-300
QV-700
QV-770
QV-2000UX
QV-2100
QV-2300UX
QV-2400UX
QV-2800UX
QV-2900UX
QV-3000EX
QV-3500EX
QV-4000
QV-5500SX
QV-5000SX
QV-5700
QV-7000 SX
QV-8000SX

finder unit	fash unit	Main pcb	Lens unit
--------------------	------------------	-----------------	------------------

Hanimex

Mamiya Pro digital

Mamiya 645

finder unit	fash unit	Main pcb	Lens unit	Olympus DiGITAL
				Olympus C-1 Olympus C-1zoom Olympus C-2 Olympus C-2i Olympus C-2 zoom Olympus C-40zoom Olympus C-50 zoom Olympus C-120
vj264200			vj257200	Olympus C-200 Olympus C-200zoom Olympus C-220 zoom Olympus C-300 Zoom Olympus C-320 Olympus C-340L Olympus C-340R Olympus C350zoom
			vj424800 vj424800	Olympus C-440
				Olympus C-500
				Olympus C520 Olympus C-550 Olympus C-600 Olympus C-650 Olympus C-700 Olympus C-700ultra Olympus C-720UZ
	vc966300		vj437000	Olympus C-730UZ Olympus C-740 UZ Olympus C-750 UZ
				Olympus C-860L Olympus C-960zoom Olympus C-990zoom Olympus C-2000
	vc941500 vj313100		vc144600	
			vj140200	
				Olympus C-4040zoom

				Olympus D-40Zoom Olympus D-100 Olympus D-150 Z Olympus D200 L Olympus D220L Olympus D300L Olympus D-340 L Olympus D360 L Polympus D370 Olympus D-380 Olympus D-390
	vc932700			
			vj112700	Olympus D 400 Zoom Olympus D450 Olympus D460 zoom Olympus D490 Zoom Olympus D500L Olympus D510 Z Olympus D-520Zoom Olympus D560 Zoom Olympus D600L Olympus D620L Olympus D490 zoom Olympus C-2100ultrazoom Olympus C-2500i Olympus C-2000 Olympus C-2020 Olympus C-2040 zoom
		ve087400		
				Olympus C-3000zoom Olympus C-3020 zoom Olympus C-3030zoom Olympus C-3040zoom Olympus C-4000zoom Olympus C-4040zoom Olympus C-5050 zoom Olympus C-5060Czoom
vj520900	vc970000		vj572600	
vc155200	vj3220000	vj326800	ve316900	Olympus E-10 Olympus E-20P Olympus E-100RY Olympus E-100RS discriptio part no Olympus Mju 400 Olympus Mju 300 Olympus Mju410 Pentax DiGiTAL ist D
finder unit	flash unit	main pcb	lens assy	
vj458600	vj456500		vj437600	
vj458600	vj456500		vj437600	
vj458600	vj621400		vj437600	
				Optio Ei-100 Optio Ei-200 Optio Ei-2000 Optio S Optio S4 Optio S4i
76140-0-M1	76140-Q100			

		76300-c-100	76300-0-x000	Optio S30 Optio S40
	76210-0-A2			Optio 30 Optio 33L Optio 33LF Opti 33wr Optio 450 Optio 555 Optio 550
76130-0-M1	76130-Q300			Note; Several assy's for Optio 555 are a
				Optio 330GS Optio 330 RS
76100-0-M1	76100-Q300	76100-A215		Optio 430 RS Optio 100 Optio 230 Optio 330 Optio 430
finder unit	flash unit	main pcb	lens assy	

Minolta DiGITAL

Dimage Xi

Dimage 5
Dimage Xt

Dimage 7Hi
Dimage 7i
Dimage 7
Dimage X
Dimage F-100
Dimage F-200
Dimage F-300
Dimage E-201
Dimage E-203
Dimage E223

Dimage S-304
Dimage S-404
Dimage S-414
Dimage V

Dimage Z300
Dimage Z330
Dimage RD -3000
Dimage EX 1500 Wide
Dimage EX 1500 Zoom

finderunit	flash unit	Main pcb	Lens assy	Nikon DiGITAL
	EFN-KTQ42	VEP06F03A	68100-181	Coolpix 700 Coolpix 100 Coolpix 300 Coolpix 600 Coolpix 775
6B100-192A	636-061-3041	636-061-3058	6B100-192	Coolpix 775
	636-058-3481 636-061-7704 6B060-222			coolpix 800 Coolpix 880 Coolpix 885 coolpix 900 Coolpix 900 S Coolpix 950
6b100-189	636-057-4335 6B060-286 EFN-KTQ42	VEP06F03A	6B100-185 6b100-190 6B100-200	Coolpix 990 Coolpix 995 Coolpix 2000 Coolpix 2100 Coolpix 2200 Coolpix 2500 Coolpix 3100
a3a07003	636-064-5141 636-073-9581	636-064-1938 636-073-2667 636-066-6399	6b100-196 1B150-094 6b100-206	Coolpix 3200 Coolpix 3500 Coolpix 3700 Coolpix 4300
6b100-195a		636-065-0541 636-062-8373 636-064-1969	6b100-199 6b100-194 6b100-202	Coolpix 4500 Coolpix 5000 Coolpix 5400 Coolpix 5700 Coolpix 8700 Coolpix SQ
				Nikon D1 Nikon D1H series Nikon D2H Nikon D1X Nikon D70 Nikon D100

finder unit	flash unit	Main pcb	Lens assy	Ricoh DiGITAL
				RDC 1 RDC 2 RDC 2E RDC -7 RDC 200G RDC 300 RDC 300Z RDC 330 RDC i500 RDC i700 RDC 4000 RDC4200

Fuse 9002

RDC 4300
RDC 5000
RDC 5300
RDC 6000

Caplio G3
Caplio PR 120
Caplio PR-1
Caplio RR 10
Calio RR30
Caplio RR230

finder unit

flash unit

Main pcb

Lens assy

Sony DiGITAL

Cybershot DSC P2

D700

D770

S30

1-476-005-11

1-758-415-11

S50

S70

S75

S85

P1

P2

P3

P5

P7

DSc-P8

P9

DSC-P10

P20

P30

P31

DSC-P32

P50

P51

DSC-P52

P71

1-758-925-11

DSC-P72

DSC-P92

DSC-V1

U10

DSC-U20

F55

F55V

F505

F505V

F707

DSC-FX77

DSC-F717

Mavica CD200

CD250

CD300

CD350

CD400

CD500

CD1000
FD71
FD73
FD75
FD81
FD85
FD85
FD87
FD88
FD90
FD91
FD92
FD95
FD97

finder unit Flash unit Main pcb Lens assy

Konica DiGITAL

KD-200zoom
KD-300zoom
KD-310Z
KD-400zoom
KD-500Zoom
E-Mini
E-Mini D
E-Mini M

finder unit Flash unit Main pcb Lens assy

Fuji DiGITAL

Fine Pix 40i
Fine Pix 50i
Fine Pix 1300
Fine pix 1400
Fine Pix 2300
Fine Pix 2400 zoom
Fine Pix 2600 zoom

Fine Pix 2800zoom
Fine Pix 3800
Fine Pix 4700zoom
Fine Pix 4900zoom
Fine Pix 4800zoom
Fine Pix 6800zoom
Fine Pix 6900 zoom
Fuji Fine Pix A101

Fine Pix A200
Fine Pix A201
Fine Pix A202
Fine Pix A203
Fine Pix A204
Fine Pix A205
Fine Pix A210
Fine Pix A310 zoom
Fine Pix A301
Fine Pix A303

Fine Pix A410
Fine Pix DS-300
Fine Pix DS-260?
Fine Pix F401
Fine Pix F402
Fine Pix F410 zoom

Fine Pix F700

Fine Pix Si-Pro
Fine Pix S2-Pro

Fine Pix S304
Fine PIX S 601Z
Fine Pix S602 Z
Fine Pix S602 Z Pro
Fine Pix s3000
Fine Pix S5000
Fine Pix S7000
Fine Pix 301
Fine Pix M603
Fine Pis MX-500
Fine Pix MX-600zoom
Fine Pix MX-700
Fine Pix MX-1200
Fine Pix MX-1400
Fine Pix MX-1500
Fine Pix MX-1700
Fine Pix MX-2700
Fine Pix MX2900zoom
Fine Pix Z 650

finder unit **flash unit** **main pcb** **lens assy**

Toshiba DiGITAL

PDR M1
PDR M3
PDR M4
PDR M5
PDR M11
PDR M21
PDR M25
PDR M60
PDR M61
PDR M65
PRD M70
PRR M71
PDR M81
PDR Li 300

PDR T10

PDR 3330

CASIO DiGITAL

EX-S3

EX-Z3

EXS-2

EXM-2

finder unit **flash unit** **main pcb** **lens assy**

finder unit **flash unit** **main pcb** **lens assy**

finder unit **flash unit** **main pcb** **lens assy**

QV-5700

QV-7000 SX

QV-R3

VIVITAR DiGITAL

Vivitar 2700 DiGicam

JVC DiGITAL

GC-QX3HD

GC-QX5HD

EPSON DiGITAL

Photo Pc 500

PhotoPC 550

PhotoPc 600

PhotoPc 650

PhotoPC 700

PhotoPC 750Z
PhotoPC 800
PhotoPC 800Z

PhotoPC 3000Z
PhotoPC 3100Z Digilas

PhotoPC Imac

Sharp DiGITAL

Sigma
SD-9

Sanyo
DSC-J1
DSC-AZ1
DSC-MZ1
VPC-2400
VPC-x350

Samsung

Digimax V4

Digimax 130

Digimax 230

Digimax 350SE

Digimax 410

finder unit **flash unit** **main pcb** **lens assy**

finder unit **flash unit** **main pcb** **lens assy**

H P DiGITAL

Photo smart 320

Photo smart 620

Photo smart 715
Photo smart 720
Photo smart 735
Photo smart 812
Photo smart 850

Photo smart 935

Photo smart C 20
Photo smart C 30
Photo smart C200
Photo smart C 215
Photo smart C 315
Photo smart C500
Photo smart C618
Photo smart C912

finder unit **flash unit** **main pcb** **lens assy**

Panasonic DiGITAL

Panasonic DMC-LC20A-S
Panasonic DMC-LC5A-K
Panasonic LC-5
Panasonic LC20
Panasonic LC40
Panasonic DMC-FZ-1
Panasonic DMC- F7

LEICA

Digilux

Digilux 4.3
Digilux zoom

Leica Digilux 1

Kyocera

Finecam 3300
Finecam L4v
Finecam L3v

Finecam S3

Finecam S3L
Finecam S3V

Finecam S4

Finecam S5

Kodak DiGITAL

DC 120Zoom
DC 200
DC 210 Zoom
DC 215 Zoom
DC 220
DC 240 Zoom
DC 260 Zoom
DC 265 Zoom
DC 280 Zoom

finder unit **flash unit** **main pcb** **lens assy**

DC 290 Zoom
DC3200
DC3400
DC3500
DC3600
DC3800
DC3900
DC4200
Dc4230
DC4330
DC4530
DC4800
DC4900
DC5000
DC6340

DCS200+
DCS210+
DCS215
DCS220
DCS240
DCS260
DSC265
DCS280
DCS290

finder unit flash unit main pcb main pcb

Kodak DiGITAL
DCS315
DCS330
DCS420
DCS460
DCS520
DCS560
DCS620
DCS620x
DCS220
DCS660

DCS 760
DCS 14N
DX3215
DX3500
DX3600
DX3700
DX3900
DX4330

DX4900
DX6340

LS420
LS633

LS443
LS633

MC3

CX4200
CX4230

available as individual parts.

