

USER GUIDE

Lucid™ by LG


Lucid™ by LG



USER GUIDE

P/N: MF167378201 (1.0) G

GUÍA DEL
USUARIO

 This booklet is made from 60% post-consumer recycled paper. Printed in Mexico.



Lucid™ by LG

*Copyright©2012 LG Electronics, Inc. **All rights reserved.**
LG and the LG logo are registered trademarks of LG Group
and its related entities. Lucid is a trademark of LG
Electronics, Inc. All other trademarks are the property of
their respective owners.*

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages.

Retain and follow all product safety and operating instructions. Observe all warnings in the product operating instructions. To reduce the risk of bodily injury, electric shock, fire, and damage to the equipment, observe the following precautions.

ELECTRICAL SAFETY

This product is intended for use when supplied with power from the designated battery or power supply unit. Other usage may be dangerous and will invalidate any approval given to this product.

SAFETY PRECAUTIONS FOR PROPER GROUNDING INSTALLATION

CAUTION: Connecting to improperly grounded equipment can result in an electric shock to your device. This product is equipped with a USB cable for connecting to a desktop or notebook computer. Be sure your computer is properly grounded (earthed) before connecting this product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet which is properly installed and grounded in accordance with all local codes and ordinances.

SAFETY PRECAUTIONS FOR POWER SUPPLY UNIT

Use the correct external power source

A product should be operated only from the type of power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your authorized service provider or local power company. For a product that operates from battery power or other sources, refer to the operating instructions that are included with the product.

Handle battery packs carefully

This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly. Do not attempt to open or service the battery pack. Do not disassemble, crush, puncture, short external contacts or circuits, dispose of in fire or water, or expose a battery pack to temperatures higher than 60°C (140°F).

WARNING: *Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), or dispose of in fire or water. Replace only with specified batteries. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.*

Take extra precautions

- Keep the battery or device dry and away from water or any liquid as it may cause a short circuit.
- Keep metal objects away so they don't come in contact with the battery or its connectors as it may lead to short circuit during operation.
- The phone should be only connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Do not use a battery that appears damaged, deformed, or discolored, or one that has any rust on its casing, overheats, or emits a foul odor.
- Always keep the battery out of the reach of babies and small children, to avoid swallowing of the battery. Consult a doctor immediately if the battery is swallowed.
- Only use the battery with a charging system that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage or other hazard.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- If the battery leaks:
 - Do not allow the leaking fluid to come in contact with skin or clothing. If contact occurs, flush the affected area immediately with clean water and seek medical advice.
 - Do not allow the leaking fluid to come in contact with eyes. If contact occurs, DO NOT rub; rinse with clean water immediately and seek medical advice.
 - Take extra precautions to keep a leaking battery away from fire as there is a danger of ignition or explosion.

SAFETY PRECAUTIONS FOR DIRECT SUNLIGHT

Keep this product away from excessive moisture and extreme temperatures. Do not leave the product or its battery inside a vehicle or in places where the temperature may exceed 140°F (60°C), such as on a car dashboard, window sill, or behind glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

PREVENTION OF HEARING LOSS

CAUTION: *Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.*

SAFETY IN AIRCRAFT

Due to the possible interference caused by this product to an aircraft's navigation system and its communications network, using this device's phone function on board an airplane is against the law in most countries. If you want to use this device when its use is restricted on board an aircraft, remember to switch to Airplane Mode which turns off RF functions that could cause interference.

ENVIRONMENT RESTRICTIONS

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in progress, or in potentially explosive atmospheres such as fueling areas, fuel storehouses, below deck on boats, chemical plants, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

EXPLOSIVE ATMOSPHERES

When in any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling points such as service or gas stations, and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

ROAD SAFETY

Vehicle drivers in motion are not permitted to use communication services with handheld devices, except in the case of emergency. In some countries, using hands-free devices as an alternative is allowed.

SAFETY PRECAUTIONS FOR RF EXPOSURE

- Avoid using your phone near metal structures (for example, the steel frame of a building).
- Avoid using your phone near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain any metal.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

INTERFERENCE WITH MEDICAL EQUIPMENT FUNCTIONS

This product may cause medical equipment to malfunction. The use of this device is prohibited in most hospitals and medical clinics.

If you use any personal medical device(s), consult the manufacturer of your device(s) to determine if the device(s) are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider, or call the customer service line to discuss alternatives.

NON-IONIZING RADIATION

Your device has an internal antenna. This product should be operated in its normal-use position to ensure the radiative performance and safety from interference. As with other mobile radio transmitting equipment, users are advised that for satisfactory operation of the equipment and for personal safety, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment. Use only the supplied internal antenna. Use of unauthorized or modified antennas may impair call quality and damage the phone, causing loss of performance and SAR levels exceeding the recommended limits as well as result in non-compliance with local regulatory requirements in your country. To assure optimal phone performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antenna area may impair call quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the phone is IN USE optimizes the antenna performance and the battery life.

HAC

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Important Customer Information.....	1
Table of Contents	7
Technical Details.....	10
The Basics.....	15
Phone Overview	15
Installing the Battery and microSD Card	18
Charging the Phone	21
Optimizing Battery Life.....	22
Turning the Phone On and Off	23
Guided Tours.....	27
SmartShare	27
Phone's Status Icons	28
Getting to Know the Home Screen.....	30
Mini canvas view	31
Touchscreen.....	32
Applications: How to View, Open and Switch	35
Working With Menus	40
Managing Notifications.....	41
Searching Your Phone and the Web	43
Locking the Screen.....	44
Customizing the Home Screen	47
Connecting Quickly With Your Contacts	50
Connecting to Networks and Devices	51
Connecting to Wi-Fi Networks.....	51
Make Your Device a Mobile Hotspot	57
microSD Card	59
Calls	61
Placing and Ending Calls.....	61
Answering or Rejecting Calls.....	64
Working with the Call Log.....	66
Calling Your Contacts.....	68
Voice Dialer.....	69

Options During a Call.....	69
Managing Multiple Calls	70
Listening to Your Voicemail.....	72
Web.....	73
Browser	73
Maps.....	79
Checking the Weather.....	81
Changing Weather Settings.....	82
Backup Assistant Plus.....	83
Communication	87
Contacts.....	87
Email	97
Voicemail	100
Gmail.....	101
Talk	115
The Phone Application.....	123
Voice Dialer.....	125
Camera	126
Video Camera.....	130
Gallery.....	132
Video Producer	142
Market.....	144
Music.....	148
SmartShare	155
Video Player	157
YouTube™	158
Voice Recorder.....	160
Tools.....	162
Calendar	162
Calculator	170
Alarm/Clock	171
Polaris Office.....	173
ShareGenie.....	174
Settings	176

Safety	193
TIA Safety Information.....	193
Safety Information.....	197
Caution: Avoid potential hearing loss.....	200
FDA Consumer Update.....	203
10 Driver Safety Tips	210
Consumer Information on SAR.....	212
FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	214
Specifications	216
FAQ	217
LIMITED WARRANTY STATEMENT	224
Index	227

Technical Details

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps Radio Link Protocol and Inter-band Operations IS-95 Adapted for PCS Frequency Band CDMA2000 1xRTT Air Interface
Network	TIA/EIA/IS-634 TIA/EIA/IS-651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem Operations Non-Signaling Data Communications
Service	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short Message Service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
1x EV-DO Related Interface	TIA/EIA/IS-856 TIA/EIA/IS-878 TIA/EIA/IS-866 TIA/EIA/IS-890	CDMA2000 High Rate Packet Data Air Interface 1x EV-DO Inter-Operability Specification for HRPD Access Network Interfaces Recommended Minimum Performance Standards for HRPD High Rate Packet Data Access Terminal Test Application Specification (TAS) for High Rate Packet Data Air Interface

LTE Standard	Designator	Description
Basic Air Interface	TS 36.101	Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) radio transmission and reception
	TS 36.104	Evolved Universal Terrestrial Radio Access (E-UTRA); Base Station (BS) radio transmission and reception
Conformance Test		Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) conformance specification; Radio transmission and reception; Part 1: Conformance testing
	TS 36.521-1	Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) conformance specification;
	TS 36.521-2 TS 36.521-3	Radio transmission and reception; Part 2: Implementation Conformance Statement (ICS) Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) conformance specification; Radio transmission and reception; Part 3: Radio Resource Management (RRM) conformance testing

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and those international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.39 inches (1.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.39 inches (1.0 cm) must be maintained between the user's body and the back of the phone, including the antenna. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.39 inches (1.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted external antenna. For more information about RF exposure, visit the FCC website at www.fcc.gov.

FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules.

Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

Part 15.19 statement

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received, including interference that may cause undesired operation.

Part 15.21 statement

Changes or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a

particular installation. If you experience interference with reception (e.g., television), determine if this equipment is causing the harmful interference by turning the equipment off and then back on to see if the interference is affected. If necessary, try correcting the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The phone operates on Verizon's 4G network, based on Long Term Evolution (LTE) technology and Mobile Broadband 4G networks in the United States*.

Now you can connect easily at high speeds to the Internet, your corporate Intranet, and your email while you're away from the office.

* Service not available everywhere. Visit website (verizonwireless.com/4G) for a complete list of available areas.

* Information subject to change.

Cautions

- ▶ The user interface of Google applications (Google Search, Google Maps, Navigation, etc.) can vary depending on its software version.
- ▶ Locations are inaccurate when GPS and WIFI are not set.
- ▶ With the Android operating system, some available Market applications only operate correctly with phones that have a specific screen resolution.

Please be advised that some of the applications on the Android Market may not be available for your phone due to LCD resolution requirement that does not match your phone. In addition, please be aware that 3rd party applications with programming defects may cause issues with your phone, including lock ups and resets.

Phone Overview

Front View



NOTES • All screen shots in this guide are simulated. Actual displays may vary.

- Instructions to perform tasks in this guide are based on the default phone settings and may change depending on the software version on your phone.

- 1. Earpiece** Lets you hear callers and automated prompts.
- 2. Quick Keys**
 - **Phone Key** Opens the **Phone** application for access to the dialpad, Call log, Contacts list, and Groups.
 - **Contacts Key** Opens the **Contacts** application.
 - **Messaging Key** Opens the **Messaging** application.
 - **Apps Key** Opens the **Applications** screen, where you can view all of your installed applications.
- 3. Menu Key** Opens an Options menu with options that affect the current screen or application.
- 4. Home Key** Returns to the Home screen. If you're already viewing one of the Home screen extension canvases, it navigates you to the central Home screen canvas. Touch and hold to view the most recently used applications.

5. **Microphone** Transmits your voice to the other caller and for voice-activated functions.
6. **Back Key** Returns to the previous screen. Also closes pop-up display items, such as menus, dialog boxes, and the on-screen keyboard.
7. **Search Key** Opens the Quick Search Box™ from the Home screen to search the phone and the web.
8. **Home screen** Displays all of the information needed to operate your phone, such as applications, call status, date, time, signal status, and battery strength.
9. **Proximity Sensor** Senses proximity toward other objects (such as your head) so that touch commands are not accidentally activated during a call.
NOTES
 - Do not block the sensor or near the sensor to avoid problems with the touch operations.
 - The use of a film cover produced by manufacturers other than LG can cause a disturbance in touch operations, the display, etc.
10. **Front Camera Lens** Use for taking pictures and recording videos of yourself. You can also use this for video chatting. Keep it clean for optimal performance.


Rear View



11. **LED Flash** This would brighten the image up when you turn on the flash.

12. **Rear Camera Lens** Use for taking pictures and recording videos. Keep it clean for optimal performance.
13. **Back Cover** Encloses the battery compartment.
14. **Speaker** Sound comes from the rear speaker instead of the earpiece (e.g., the speakerphone function, music player function, etc.).

Top View and Side Views

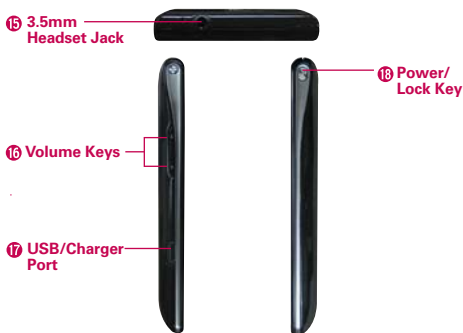

15. **3.5mm Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations. You can also plug in headphones to listen to music.
16. **Volume Keys** Allow you to adjust the ringer, media volumes, or the in-call volume during a call.
17. **USB/Charger Port** Allows you to connect the phone charger, USB Cable, or other compatible accessories.
18. **Power/Lock Key** Press and hold to power the phone on or off. If your screen turns off, press the Power/Lock Key to turn it back on.

Installing the Battery and microSD Card

NOTE It is important to fully charge the battery before initial use of the phone.

Installing the battery

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk, use, and standby time. The battery charge level is shown at the top right corner of the screen.



1 Use the fingertip cutout at the bottom of the phone to remove the back cover.



2 Align the battery contacts with the terminals in the battery compartment and push the battery down until it clicks into place.



3 Place the back cover over the battery compartment, then press it downward until it clicks into place.

Removing the battery

1. Turn the phone off and use the fingertip cutout at the bottom of the phone to remove the back cover.



2. Use the fingertip cutout at the bottom of the battery compartment to lift the battery out.



NOTE Be careful not to scratch or damage the inside of the back cover as there is antenna located.

Installing the SIM card

NOTE If not already inserted, follow the instructions below to insert your SIM Card.

Turn the power off. Remove the back cover and the battery (as demonstrated in the previous instructions). Locate the SIM card slot (a SIM card graphic is inscribed near the slot opening). Position the SIM card with the label side facing up and slide it into place until it is fully inserted and locked in place.



Removing the SIM card

Turn the power off. Remove the back cover and take the battery out. Locate the SIM card slot. Gently slide the SIM card out to remove it.



CAUTION When switching to a new SIM, the device displays the message saying all e-mail accounts would be deleted. On other Android devices, if you change SIMs it asks the user to enter their password to keep all the accounts on the device.

Inserting a microSD card

NOTE The microSD card is sold separately.



Turn the power off. Remove the back cover (as demonstrated in the previous instructions) and locate the microSD card slot (microSD is inscribed near the slot opening). Position the microSD card with the label side facing up and slide it into place until it is fully inserted and locked in place.



NOTE The microSD card can be easily damaged by improper operation. Please be careful when inserting, removing or handling it.

To unmount the microSD card

It is important to unmount the microSD card before removing it from the slot to avoid damage to the card or data saved on the card.


1. From the Home Screen, touch the **Apps Key** .
2. Touch **Settings**  > **Storage**.
3. Touch **Unmount SD card** > **OK**.

To remove the microSD card

Turn the power off. Remove the cover and locate the microSD card slot. Carefully push the microSD card in to release it from the slot, then gently pull the microSD card out to remove it.



Memory encryption

 
- ▶ Internal data for Email, Contacts, and Calendar is encoded.
- ▶ Data cannot be encoded when the battery level is less than 50%.
- ▶ Encoding can only be done when there is sufficient storage space available; a minimum of 650MB of free space in the internal memory and 500MB in the microSD card is needed for encoding.
- ▶ While encoding, you cannot access Email, Contacts, and Calendar. Some settings will not be available as well.
- ▶ Do not connect the USB Cable while encoding.
- ▶ Do not take out the microSD card while encoding.
- ▶ Do not take out the battery while encoding.
- ▶ Do not press the **Power/Lock Key**  while encoding.
- ▶ After encoding, your phone will reboot to arrange the data.
- ▶ If you encode the microSD card then perform a factory reset without the microSD card inserted, you cannot decode the microSD card.

Charging the Phone

Your phone comes with a Wall Charger and a USB Cable which connect together to charge your phone. To charge your phone:

NOTICE Please use only an approved charging accessory to charge your phone. Improper handling of the USB/Charger Port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

1. Connect the USB Cable into the Wall Charger.
When connecting, as shown below, the LG logo on the USB Cable will face toward you.
2. Plug the USB Cable (as shown below) into the phone's USB/Charger Port.



NOTE Correctly orient the USB Cable with the phone's port. The 'B' side of the USB Cable should be facing upwards.

Charging with the USB Cable

You can use your computer to charge your phone. To be able to charge with the USB Cable, you need to have the necessary USB drivers installed on your PC first. Connect one end of the USB Cable to the USB/Charger Port on your phone and connect the other end to a USB port on your PC. It is best to use the rear USB port when connecting to a desktop PC. The USB hub should be powered by an external power source.



NOTE If there is not enough charge in the battery to turn on the phone, the LED lights at the bottom of the keypad flash to indicate that the battery is charging. Once the battery has enough charge to turn the phone on, the flashing stops and the battery charge animation appears on the touchscreen.



Optimizing Battery Life

You can extend your battery's life between charges by turning off features that run in the background. You can also monitor how applications and system resources consume battery power.

Tips to extend the life of your battery



- ▶ Turn off radio communications that you aren't using. If you aren't using Wi-Fi, Bluetooth, or GPS, use the Settings menu to turn them off (Note that the GPS receiver is only turned on when you're using an application that makes use of it).
- ▶ Turn down screen brightness and set a shorter screen timeout.
- ▶ Turn off automatic syncing for Gmail, Calendar, Contacts, and other applications if you don't need it.
- ▶ Use the Power Saver in the Settings menu or the Power Control widget to control the wireless connections, GPS connection, Bluetooth power, display brightness, and syncing activity.

To check the battery charge level

- ▶ From the Home Screen, touch the **Apps Key**  > **Settings**  > **About phone** > **Battery**.
The battery status (Charging or Discharging) and level (as a percentage of fully charged) will be displayed at the top of the screen.



To monitor and control what uses the battery

The Battery use screen allows you to see which applications are consuming the most battery power. Information on this screen allows you to identify downloaded applications you may want to turn off when not being used, so you can get the most out of your battery power.

- ▶ From the Home Screen, touch the **Apps Key**  > **Settings**  > **About phone** > **Battery** > **Battery use**. This screen displays battery usage times. It lists all of the applications or services using battery power from the greatest amount of energy used to the least amount.

- ▶ Touch an application or service in the Battery use screen to see the details about its power consumption, including either how long since last connected to a power source or how long you were last running on battery power. Different applications or services offer different kinds of information, and they may even include options to modify the settings so you can reduce power consumption by that application.



Power Saver mode

If the battery charge level drops to low levels, the phone automatically activates Power Saver mode to conserve battery power until you can recharge it. You can set the phone to activate Power Saver mode at 10%, 30%, 50%, 70%, or Never. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Power Saver**. When the battery charge is low, a notification is displayed prompting you to turn on Power Saver.

Power Control Widget


The Power Control widget helps users to conserve battery life easier.

- ▶ Easy to control battery usage when battery life is low.
- ▶ The **Turn off all** option disables all the setting items on the Power control widget to save battery life.
- ▶ The **Power Saver** option launches the Power Saver application.

To access the Power Control widget, touch and hold an empty space on a Home screen canvas. With **Widgets**  selected, touch **Power Control** . Tap the screen to add the widget to the display canvas.

Turning the Phone On and Off

Turning the phone on


- ▶ Press and hold the **Power/Lock Key**  for a couple of seconds until the screen turns on.

Turning the phone off

1. Press and hold the **Power/Lock Key**  until the Phone options menu appears.


2. Touch **Power off** in the dialog box that appears.
3. Touch **OK** to confirm that you want to turn off the phone.

Restarting the phone

1. Press and hold the **Power/Lock Key**  until the Phone options menu appears.
2. Touch **Restart** in the dialog box that appears.
3. Touch **OK** to confirm that you want to restart the phone.

To unlock the phone

If you don't use the phone for a while, the screen and backlight will shut off to conserve battery power. To unlock the phone:

1. Press the **Power/Lock Key** . Your Lock Screen will appear.
2. Slide the screen up to unlock it. The last screen you were working on opens.

NOTE The default Lock Screen simply locks the screen to prevent unintentional actions. For more security to guard against unauthorized use, you can set a pattern, PIN, or password that will need to be entered to unlock it.



Shortcuts on the lock screen


There are four icons in the center of your lock screen that you can use for quick access to the **Phone** application, the **Messaging** application, the **Voicemail** application, and the **Camera** application. Touch and drag any of these icons downward to immediately open and use its application. There's no need to unlock the screen or touch any other keys.

TIP Four frequently used shortcut icons are provided on the lock screen. Slide the icon you want to use downwards to unlock the screen and provide the direct access to the chosen application.





To turn the phone sounds off

If you're in a place where your phone sounds may disturb others, you can quickly silence your phone from the Home screen.

1. Press and hold the **Power/Lock Key**  until the Phone options menu appears.
2. Touch **Silent mode**.

OR

1. Press the down **Volume Key**  on the side of the phone until all sounds are turned off.

NOTE You can also use these keys to quickly turn the phone sounds back on. Press and hold the **Power/Lock Key** , then touch **Silent mode** to toggle between on and off. While in Silent mode, press the up **Volume Key**  once to activate Vibration mode and twice to turn on phone sounds (continue pressing to increase volume).

Setting Up Your Device

When you turn on your wireless device for the first time, you have the option to quickly set up various accounts. Simply follow the on-screen instructions to complete the initial setup of your wireless device.

To set up your device, follow the steps below:

1. Select your language and touch **Next**.
2. Your SIM card will be activated now (if necessary). Otherwise, touch **Start the Setup Wizard**.
3. Read the Welcome message and touch **Continue**.
4. Select whether to **Skip** or **Start** the Backup Assistant Plus application.
5. Set up your email accounts or touch **Skip**.
6. Read the Verizon backup information and touch **Next** to continue or **Skip**.
7. Select whether to **Skip** or **Start** the Google Account setup. With a Google Account, Google applications are automatically synced between your phone and computer regardless of where you make an update.
8. Read the Privacy caution and touch **Next**. Then set your Location settings (**VZW Location Services/ Standalone GPS Services/ Google Location Services**) and touch **Next**.

NOTE After successfully setting up your device, you can choose to view options that teach you about your new phone including **Watch & Learn / My Verizon Mobile Video / Guided tours / Go to My Verizon**. These options can be viewed later by accessing the Tools section of the Applications screen.

9. Touch **Finish** to start using the phone.

For more information on how to set up your email, visit **smartphones.verizonwireless.com/**. Hover over the **Support tab** and under **Get Help With Your** click on **Device**. Then search for your phone.

Setting up your Google Account

1. At the setup screen, touch **Create** or **Sign in**.
2. Enter your username and password or any other necessary information (if creating an account).

NOTE Touch the **Back Key**  to close the keyboard.

3. Touch **Sign in** to sign in to your account.

Now your Gmail, Google Contacts, and Google Calendar events will all be loaded to your phone automatically.

NOTE This is automatic for the first Google account added. When adding additional Google accounts, you have to select which options to synchronize.

You can use the area below to record your Google Account information for future reference.

Username: _____@gmail.com

Password: _____

Your Google Account

You must sign into a Google Account to use Gmail, Google Talk, Google Calendar, and other Google Applications; to download applications from Android Market; to back up your settings to Google servers; and to take advantage of other Google services on your phone.

IMPORTANT

- If you want to restore your settings to this phone, from another phone that was running Android release 2.0 or later, you must sign into your Google Account now, during setup. If you wait until after setup is complete, your settings are not restored.
- If you don't have a Google Account, you're prompted to create one.
- If you have an enterprise account through your company or other organization, your IT department may have special instructions on how to sign into that account.
- When you sign in, your contacts, Gmail messages, Calendar events, and other

information from these applications and services on the web are synchronized with your phone.

- If you don't sign into a Google Account during setup, you are prompted to sign in or to create a Google Account the first time you start an application that requires one, such as Gmail or Android Market.
- When you sign in, you're prompted to enter your username and password using the on-screen keyboard.



Guided Tours

The Guided Tours application allows you to quickly view information about your phone, including the user guide and video tutorials.

To access Guided Tours, From the Home Screen, touch the **Apps Key**  > **Guided Tours** .

SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature.

To share your media files using SmartShare, From the Home Screen, touch the **Apps Key**  > **SmartShare** .

SmartShare Tips

SmartShare requires a Wi-Fi or Wi-Fi Direct network connection. Please connect device to network you want to share content.

Touch to select the device from the **content library** list, such as another phone or PC.




Touch to select the device from the **renderer device** list, such as a TV.

Select an item to share.

Phone's Status Icons




The Status Bar appears at the top of every screen. It displays icons indicating that you've received notifications (on the left) and icons indicating the phone's status (on the right), along with the current time.



If you have more notifications than can fit in the Status Bar, a plus icon  prompts you to open the Notifications panel to view them all. To open the Notifications panel, touch and drag the Status Bar down.

The following icons indicate the status of your phone.










Call icons

	Microphone muted during a call		Missed call
	In call		In call using Bluetooth device
	Speaker is on		Privacy call




Calendar & Alarm icons

	Calendar event notification		An alarm is set
	Alarm notification		Memo reminder alert





















Email and Messaging icons

	Others Email event received		Sending Others Email failed
	New message received		High priority message received
	Sending message failed		New Voicemail received
	New Visual Voicemail received		Playing Visual Voicemail in background
	Google Talk message received		




 





Sound icons

	Music currently playing		Silent mode is on
	Vibrate mode is on		Wired headset connected
















Network icons

	4G network connected		4G network is in use
	Download through 4G network		Upload through 4G network
	3G network connected		3G network is in use
	Download through 3G data network		Upload through 3G data network
	Downloading data		Uploading data
	Acquiring GPS access		GPS is on
	No service		Weak network signal
	Strong network signal		Connected to Network extender service
	Airplane mode is on		Roaming
	Location service is on		Location service is off

Connectivity icons

	Wifi connection detected		No Wi-Fi signal
	Strong Wi-Fi signal		Android Debugger connected
	USB connected		Bluetooth is on
	Bluetooth device connected		USB tethering is on
	Wifi Direct on		

 System icons

	More notifications		CarHome mode
	System secured		System Alert
	SD card inserted		Preparing the SD card to use
	Memory processing error		No SIM card
	Unknown SIM card		Google sync started
	Google sync error		Battery empty
	Battery full		Battery Charging
	Battery status unknown (error)		

Getting to Know the Home Screen

The Home screen is your starting point to access all of the features on your phone. It displays application shortcuts, icons, widgets, and other features.

Status Bar

Shows device status information, including the time, signal strength, battery status, and notification icons.

Application Icon

Touch an icon (application, folder, etc.) to open the application and use it.


Quick Keys

Provide easy, one-touch access to the phone functions used most often.





Quick Keys


The Quick Keys are located at the bottom of the Home screen and the Applications screen.

: Opens the **Phone** application which displays a dial pad so you can dial an unsaved number. You can also make calls using your Call log, Contacts, and Groups by touching the tabs across the top of the screen.


TIP The Dial Pad and your Contacts provide easy access to a flick-able list of 12 frequently reached contacts.

: Opens the **Contacts** application and displays your Contact list. You can also access the Phone application, Call log, and your Groups by touching the tabs across the top of the screen.

: Opens the **Messaging** application. You can send text messages or multimedia messages, which can contain pictures, videos, audio, maps of your location, slideshows, and vCard files.

: Opens the **Applications screen** which displays phone options and applications.

To return to the Home screen


- ▶ Touch the **Home Key**  at any time, from any application.


To view other Home screen canvases

- ▶ Slide your finger left or right across the Home screen. The Home screen spans up to seven screen widths, allowing more space for icons, widgets, shortcuts, and other items.

Home Screen Canvas Indicator

The dots near the top of the screen indicate which Home screen canvases you are viewing.

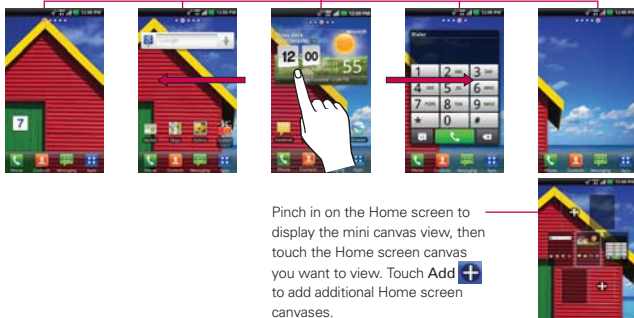



Pinch in on the Home screen to display the mini canvas view, then touch the Home screen canvas you want to view. Touch **Add**  to add additional Home screen canvases.

Mini canvas view

Mini canvas view allows direct access to any of the canvases and also allows you to manage your Home screen canvases. You can add up to two additional Home screen canvases (from 5 screens to 7 screens), delete canvases, and even rearrange canvas order to suit your needs.

Pinch in on any of the Home screen canvases to change from full screen view to mini canvas view. From mini canvas view you have the following options:

- ▶ To go directly to any Home screen canvas, simply touch the one you want.
- ▶ To add another Home screen canvas, touch **Add**  on an empty canvas space.

- ▶ To delete a Home screen canvas, touch and hold the canvas to delete, then drag it to **Remove**  at the bottom of the screen. When the Remove icon turns red, lift your finger.
- ▶ To rearrange your canvases, touch and hold the canvas to move, drag it on top of the canvas position where you want it, then lift your finger. The canvases swap places.

Touchscreen

Your touchscreen provides an excellent way to interact with and use your Android phone. With the touch of your finger, you can download and use available applications, make menu selections, and access data saved to your phone.

The following terms are used for describing the different available actions using the touchscreen:

Touch or tap A single finger touch selects an item. For example, touch an icon (e.g., application or menu item), touch words (e.g., menu selection or to answer an on-screen question), or touch letters and numbers to type.

Touch and hold Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a Context menu for customizing the Home screen, touch an empty area on the Home screen until the Context menu appears.


Drag Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them and drag the Status Bar downward to open the Notifications panel.

Swipe or slide Move your finger quickly across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll a list, or browse through the different Home screens by swiping from left to right (and vice versa).


Double-tap Double-tap to zoom a web page or a map. For example, quickly double-tap a section of a web page to zoom in or out on that section to fit the width of the screen. You can also double-tap to control the zoom in Maps and in other applications.

Pinch-to-Zoom Use your index finger and thumb in a pinch or spread motion to zoom in or out when using the Browser, a map, or pictures. This motion can also be used to expand or compress the Applications screen items. It also changes the Home screen to mini canvas view.

Rotate the screen From many applications, the orientation of the screen rotates with the phone as you turn it from upright to sideways and back again.

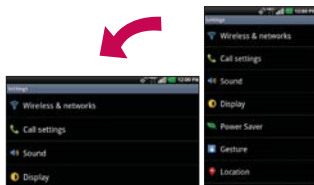

Rotate the phone sideways for landscape orientation.

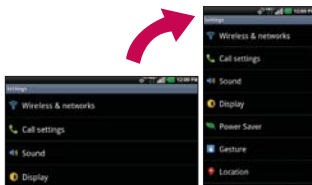

Rotate the phone upright for portrait orientation.


Text Input Methods







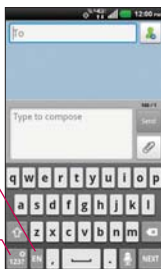

On-screen Keyboard

You can easily enter text using the on-screen keyboard. The on-screen keyboard displays automatically when you need to enter text. To manually display the keyboard, simply touch a text field where you want to enter text.



Toggles between different languages.

Toggles from 123/SYM mode to ABC mode.



Typing tips	
Enter other characters	From the numbers keyboard, touch the Symbols Key  . Touch the Numbers Key  or the Letters Key  to exit from the symbols keyboard.
Enter one capital letter	Touch the Shift Key  .
Enter all capital letters	Touch the Shift Key  twice. Touch again to revert to lowercase.
Highlight text	Double-tap a word to highlight it. To highlight a range of text, double-tap the screen, then drag the blue highlight markers to highlight the text you want.
Cut or copy selected text	Touch and hold the highlighted text, then touch Cut or Copy in the Context menu.
Paste cut or copied text	Touch and hold the location to paste the text, then touch Paste in the Context menu.
Delete a character	Touch the Delete Key  .
Language toggle	Touch and hold the Language Key  to open a menu to set alternate languages. Then while typing, simply touch the Language Key  to toggle between your language keyboards.


Text input settings

To change your text entry settings and see the dictionary of terms you've used, from the Home Screen, touch the **Apps Key**  > **Settings**  > **Language & keyboard**.

- ▶ To change the default language, touch **Select language**, then touch the language you want to use.

NOTE See page 113 to access information about the Swype keyboard for reference.

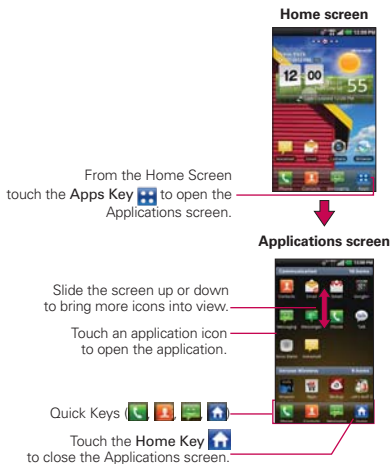

Applications: How to View, Open and Switch





All of the applications on your phone, including any applications that you downloaded and installed from Android Market™ or other sources, are grouped together on the Applications screen, which you access from your Home screen. If you have more applications than can fit on the Applications screen, you can slide the screen up or down to view more.

Opening and Closing the Applications screen

Opening the Applications screen

It's easy to access the Applications screen no matter what feature you're currently using. Simply touch the **Home Key** , then touch the **Apps Key** .

Closing the Applications screen

To manually close the Applications screen, touch the **Home Key**  or touch the **Home Key** .


NOTE The Applications screen closes automatically when you touch an icon to open its application. Dragging an icon onto your Home screen also closes the Applications screen automatically.

Customizing the Applications screen

The phone includes a wide variety of applications and you can download even more applications to your device. You can customize these items on the Applications screen for faster access (less scrolling) to the applications you use most often.




The application items on the Applications screen are listed alphabetically within each application category, but you can customize the screen to optimize how you use it. For example, you can condense or expand the application categories, display in an alphabetical list, move application icons to more convenient positions, and even add additional categories to organize your files.

Condensing and expanding the application categories




1. From the Home Screen, touch the **Apps Key** .
2. Place your thumb and index finger on the screen and move them together in a pinch motion.
3. The screen condenses displaying the application categories in a bar format that lists the number of items within it. Simply touch the category you want to access.

NOTE To return to the expanded view, place your thumb and index finger on the screen and spread them apart.




Displaying applications by category or in an alphabetical list

1. From the Home Screen, touch the **Apps Key** .
2. Touch the **Menu Key** , then touch **Layout** .
3. Touch **Category** or **List**.

Moving application positions (Category layout only)

1. From the Home Screen, touch the **Apps Key** .
2. Touch the **Menu Key**  > **Manage apps** .
3. Touch and hold the application icon and drag it to the position you want, then lift your finger. Application icons to the right of the position shift accordingly.

Adding a category

1. From the Home Screen, touch the **Apps Key** .
2. Touch the **Menu Key**  > **Manage category**  > **Add**.
3. Enter the category name, then touch **Save**.
4. Touch the application(s) or service(s) you want to move into your newly created category, then touch **Move**.

Opening and Switching Applications


Multi-tasking is easy with Android™ because open applications keep running even when you open another application. There's no need to quit an application before opening another. You can use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

Opening an application


- ▶ Open an application simply by touching its icon on the screen.

TIP You can customize your Home screen with the application icons you use most often. Applications are located on the Applications screen, but you can copy any application icon to your Home screen for faster access. No matter where the icon is, on the Applications screen or your Home screen, just touch it to open and use it.



Opening multiple applications


1. Touch an application icon to open it.
2. Touch the **Home Key** .

NOTE If the application icon you want is on your Home screen, simply touch the icon to open and use it.

3. From the Home Screen, touch the **Apps Key** .
4. Touch the icon for the other application you want to open.

Switching between multiple applications

1. Touch and hold the **Home Key** . A screen with the icons of applications that you've used recently will appear.
2. Touch the application icon you want to open or touch the **Back Key**  to return to the current screen.

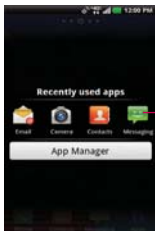

Touch an icon to open an application you've used recently.


Adding application icons to the Home screen

Customize your Home screen with the applications you use most often.


1. Open the Applications screen.
2. Touch and hold the application icon you want to add to your Home screen. Your Applications screen will close so that you can place the icon on the Home screen.
3. Lift your finger to place it or drag the icon to where you want it on the screen, then lift your finger.

Moving applications to other Home screens

You can place application icons on any of the Home screen canvases.

- ▶ Simply touch and hold, then drag the icon to the left or right edge of the screen to advance to the other screen canvases before lifting your finger.
- ▶ The **Relocate item** option must be enabled under the Gesture settings. From the Home Screen, touch the **Menu Key**  > **Settings** > **Gesture** and then checkmark **Relocate item** under the Home screen section. Touch and hold the icon to move, then tip the device in the direction of the canvas you want. The Home screen canvases slide in the tipped direction. Lift your finger to drop it on the canvas you want.

Setting the Theme



Four different themes are provided, which come with a dedicated Home screen wallpaper, Lock screen and applications list per theme. To change your theme, touch the **Menu Key**  from the Home screen and touch **Theme**. Select from the following themes: **Optimus**, **Playworld**, **Opart**, and **Cozywall**.



Working With Menus

There are two kinds of Android menus: Options menus and Context menus.

Options menus

Options menus contain tools that apply to the activities of the current screen or application, not to any specific item on the screen. To open the available Options menu, touch the **Menu Key** . Not all applications have Options menus; if you touch the **Menu Key**  on a screen that has no Options menu, nothing will happen.

Some applications have more Options menu items than can fit in the Options menu. To view the additional menu items, touch **More** .




Touch **More**  to view additional Options menu items.

Context menus

Context menus contain options that apply to a specific item on the screen. To open a Context menu, touch and hold an item on the screen. Not all items have Context menus. If you touch and hold an item that has no Context menu, nothing will happen.




When you touch and hold certain items on a screen, a Context menu opens.

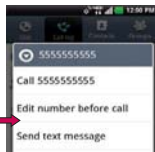



Managing Notifications

Notification icons report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you are on a call. When you receive a notification, the notification icon will be displayed in the Status Bar. You can open the Notifications panel to view a list of all recent notifications. Depending on your settings, you may hear a notification sound and/or the phone may vibrate.

To open the Notifications panel

- ▶ Touch and drag the Status Bar to the bottom of the screen.
- OR
- ▶ From the Home Screen, touch the **Menu Key**  > **Notifications**. The Notifications panel displays your wireless provider and a list of your current notifications, organized into ongoing and event-based notifications.

NOTE The Status Bar is sensitive to the drag motion so just beginning the downward drag will open the Notifications panel.

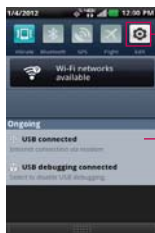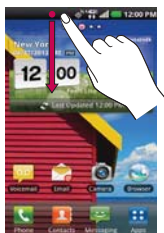

Touch to edit which icons are displayed on the Notifications panel. You can add up to seven icons.

Touch a notification to open it.

To respond to a notification

1. Open the Notifications panel. Your current notifications are listed in the panel, each with a brief description.
2. Touch a notification to view it. The Notifications panel will close and the application that corresponds to your response will open. For example, new voicemail notifications dial your voicemail box, and Gmail notifications open the **Gmail** application so you can read your new messages.

To clear all notifications

1. Open the Notifications panel.
2. Touch **Clear**.
All event-based notifications will be cleared; ongoing notifications will remain in the list.


To close the Notifications panel

Touch and drag the tab at the bottom of the Notifications panel to the top of the screen or just touch the **Back Key** .












The panel will also close when you touch a notification.

NOTE The Notifications tab at the bottom of screen is sensitive to the drag motion so just beginning the upward drag will close the panel.

Quick settings on the Notifications panel

The top of the Notifications panel includes Quick Settings. These icons allow quick and easy access to set modes including Sound, Bluetooth, GPS, Airplane and Data. Touch **Edit**  to open a dialog box to customize your Quick Settings by checking the items you want to appear and then touching **Save**.

Tap any of the Quick Settings to toggle through the available settings:

- ▶ Sound , Vibrate , and Silent .
- ▶ Bluetooth On  and Bluetooth Off .
- ▶ GPS On  and GPS Off .
- ▶ Airplane mode On  and Airplane mode Off .
- ▶ Data On  and Data Off .


NOTE If necessary, scroll horizontally to see all of the available icons.

Searching Your Phone and the Web

You can search for information on your phone and on the web using the **Search** application. Some applications, such as **Gmail**, **Contacts**, and **Browser** have the ability to search contents within those specific applications.

You can conduct the search by typing in the search terms or saying what you're looking for. Typing can be useful because the search application can provide suggestions so you don't necessarily have to type out your full request.

Phone and Web search using text entry

1. Touch the **Search Key**  on the Home screen or in the other applications that support this feature. The Quick Search Box will open automatically.



Voice Search

Touch to search by voice.

Search results




Provides a one-touch shortcut to matching search items and past searches.



2. Enter the text you're searching for in the Quick Search Box.




The **Voice search** icon changes to the **Go** icon as soon as you begin entering text.

As you type, search results from your phone, previous search terms, and web search suggestions appear. Touch an item to activate that search result.

You can use the Search preferences to configure some aspects of web search (for example, whether it makes suggestions below the Quick Search Box as you type), and what phone features you want to include in searches. To access these settings, touch the **Search Key**  to open the **Search** application and touch the **Menu Key**  > **Search Settings** .

3. Touch the **Enter Key**  on the keyboard or the **Go icon**  next to the search box to search for the entered terms.

TIP You can touch the Google icon  in the top left corner to select where to conduct the search. Choices include **All**, **Web**, **Applications**, and **Contacts**. You can touch the Settings icon to select additional search locations, such as Messaging and Music.





Locking the Screen

Your phone automatically uses a default Lock Screen to simply prevent unintentional function activation. You can choose to secure your phone so that only you can unlock it to make calls, access your data, buy applications, and so on. For added security to guard against unauthorized use, you can set a pattern, PIN, or password that will need to be entered to unlock.

Setting an Unlock Pattern, PIN, or Password

Follow these steps to set an unlock sequence for the first time or after you disable a previously set unlock sequence.

1. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Security**.
2. Touch **Set up screen lock** (under the **Screen unlock** section of the Security settings).

NOTE If you already have a set sequence, you have to touch **Change screen lock**.

3. Touch **Pattern**, **PIN**, or **Password**.

Pattern: Locks the screen using a pattern you draw with your finger. The first time you set an unlock pattern, you will see a tutorial with instructions on how to create it. Read the tutorial and touch **Next** (twice). Draw your pattern (connect at least 4 dots) and touch **Continue**. Then redraw your pattern and touch **Confirm**.



PIN: Locks the screen with a number sequence. Enter a PIN (at least 4 digits) and touch **Continue**. Reenter your PIN and touch **OK** to confirm it.

Password: Locks the screen with an alphanumeric sequence. Enter a password (at least 4 characters) and touch **Continue**. Reenter your password and touch **OK** to confirm it.



From then on, any time you want to turn the phone on or unlock the screen, you will need to draw your unlock pattern or enter your PIN or password to unlock the screen.

Disabling the lock sequence



If you change your mind about using a lock sequence to secure your phone, you can disable it.

1. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Security**.
2. Touch **Change screen lock** (under the **Screen unlock** section).
3. Draw your current pattern or enter your current PIN or password.
4. Touch **Slide up** to disable the previously set lock security.

Changing Your Unlock Pattern

1. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Security**.
2. Touch **Change screen lock** (under the **Screen unlock** section).
3. Draw your current unlock pattern.
4. Touch **Pattern** to change it (or touch **Slide up** to disable it).
5. You're prompted to draw and redraw your new pattern.

Changing your PIN or Password to Lock the Screen

1. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Security**.
2. Touch **Change screen lock** (under the **Screen unlock** section).
3. Enter your current lock sequence, then touch **Continue**.



4. Touch **PIN** to change your number lock sequence, touch **Password** to change your alphanumeric lock sequence, or touch **Slide up** to disable the lock sequence.
5. You're prompted to enter and reenter your new lock sequence.

From then on, you will need to enter the sequence and touch **OK** to unlock the screen.

- NOTES**
- You have 5 opportunities to enter your unlock pattern, PIN or password. If you used all of opportunities, you can try again after 30 seconds.
 - If you have set up a Microsoft Exchange account, you are only allowed to set up a password.
 - When you can't recall your unlock pattern:
 - If you've created a Google Account on the phone, touch **Forgot pattern?**. Then you are required to sign in with your Google Account to unlock your phone.

Security lock timer



If a security lock is enabled, touch **Security lock timer** in the Screen unlock section to set the amount of time before the screen automatically locks due to inactivity.


To adjust the Security lock timer, touch the **Menu Key**  from the Home Screen. Then touch **Settings** then **Security**. If you touch  next to **Security lock timer**, you can select the time.

Customizing the Home Screen

You can personalize your Home screen by adding application icons, shortcuts, widgets, and other items to any Home screen canvas. You can also change the wallpaper.

To add an item to the Home screen

1. Go to the Home screen canvas where you want to add the item.
2. Touch the **Menu Key**  then touch **Add** . Or, just touch and hold an empty spot on the Home screen canvas.

NOTE If space is not available on a particular Home screen canvas, **Add**  will not be available; you must delete or remove an item before you can add another item. Or, switch to another Home screen canvas.

3. In the menu that opens, touch the type of item to add.

You can add the following types of items to the Home screen:

Shortcuts Add shortcuts to applications, a bookmarked web page, a favorite contact, a destination in Maps, a Gmail label, a music playlist, and more. The shortcuts available depend on the applications you have installed.

Widgets Add any of a variety of widget applications to your Home Screen. Choose from any widgets available or download new widgets from the Android Market™.


Folders Add a folder where you can organize other Home screen shortcuts and icons. Your folders' contents are kept up-to-date automatically.

To move an item on the Home screen



1. Touch and hold the item.
2. Drag the item to a new location on the screen.
Pause at the left or right edge of the screen to drag the item onto the next available Home screen canvas.
3. When the item is where you want it, lift your finger.

NOTE If **Relocate item** is enabled in the **Gesture settings**, simply tilt the device in the direction you want to move the item to one of the canvases.

To remove an item from the Home screen

1. Touch and hold the item (note that the Quick Keys are replaced by an icon of a trash can).
2. Drag the item to the **Remove** icon .
3. When the icon and the item to be removed turn red, lift your finger.

To change the Home screen wallpaper


1. From the Home Screen, touch the **Menu Key**  > **Wallpaper** .
You can also touch and hold an empty spot on the Home screen and then touch **Wallpapers** in the menu that opens.
2. Touch **Charging wallpapers**, **Gallery**, **Live wallpapers**, or **Wallpapers**.
 - ▶ Touch **Charging wallpapers** to choose the wallpaper you want to be displayed when you charge your phone.
 - ▶ Touch **Gallery** to use a picture you've taken with your camera as the wallpaper. You can crop the picture before setting it as your wallpaper.
 - ▶ Touch **Live Wallpapers** to choose from animated wallpapers installed on your phone.
Live wallpapers can change according to the time of day, respond to touching the screen, tell the time, or offer other information.
 - ▶ Touch **Wallpapers** to choose from picturesque static images to apply to your device.
3. Touch **Set wallpaper** or **Save** (if necessary).

To change the Home screen Theme

Four different themes are provided, which come with a dedicated Home screen wallpaper, Lock screen and applications list per theme.

1. From the Home Screen, touch the **Menu Key**  and select **Theme**.

- Swipe to the left and right to choose from **Optimus**, **Playworld**, **Opart**, and **Cozywall**.

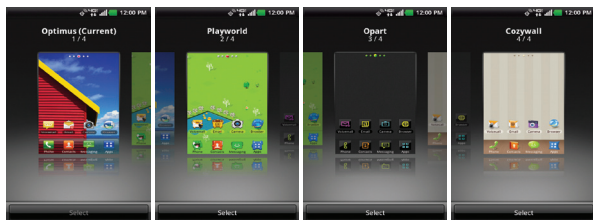


To rename a folder

- Touch the folder icon to open it.
- Touch and hold the folder window's title bar.
- Enter the new folder name.
- Touch **OK**.

To reposition Home screen canvases


- Pinch in on the Home screen to display the mini canvas view.
- Touch and hold the canvas you want to move, then drag it to the new position and lift your finger. If the position has an existing canvas, the canvases swap places.

To add additional Home screen canvases

There is enough space for up to seven Home screen canvases. While in the mini canvas view, touch the **Add** icon  on an empty Home screen canvas to add an additional canvas to that spot.


NOTE The Add icon  is only available when one or more canvases have been deleted.

To remove Home screen canvases

While in the mini canvas view, touch and hold the canvas that you want removed. Drag the canvas to the **Remove** icon  and lift your finger when the canvas and the icon turn red.

Connecting Quickly With Your Contacts

As you build up your list of contacts on your phone, you can use Quick Contact for Android to quickly chat, email, text message, place a call, or locate your contacts. Quick Contact for Android is a special set of icons that you can use to quickly and easily connect to a contact.

- ▶ Open your Contacts list and touch the contact's picture  Jane Walker . Touching the contact's picture opens a Quick Contact bubble displayed directly above the contact's name. This bubble displays icons for all of the ways you can communicate with that contact. The available icons depend on the information you have saved for that contact.



- ▶ Touch a Quick Contact icon to communicate with the contact. Depending on the icon you've touched, a different application will open.
- TIP** Adding a shortcut for a contact to your Home screen allows you to open Quick Contact for that contact without opening the **Contacts** application.

 
Connecting to Wi-Fi Networks



Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

To use Wi-Fi on your phone, you must connect to a wireless access point, or “hotspot.” Some access points are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.



Turn off Wi-Fi when you’re not using it, to extend the life of your battery.

The following Status Bar icon indicates your Wi-Fi status.



When you connect to a Wi-Fi network, the phone obtains a network address and other information it needs from the network, using the DHCP protocol. To configure the phone with a static IP address and other advanced settings, from the Wi-Fi settings screen touch the **Menu Key**  > **Advanced** .

To turn Wi-Fi on and connect to a Wi-Fi network

1. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Wireless & networks** > **Wi-Fi settings**.
2. If the Wi-Fi box is not checkmarked, touch **Wi-Fi** to turn it on and scan for available Wi-Fi networks.
3. Touch a network to connect to it.
 - If the network is open, you will be prompted to confirm that you want to connect to that network by touching **Connect**.
 - If the network is secured, you will be prompted to enter a password (Ask your network administrator for details).
 - When you’re connected to a network, you can touch the network name in the Wi-Fi settings screen for details about the speed, security, address, and related settings.

New network detection and notification

Checkmark the **Notify me** checkbox in the Wi-Fi settings screen to be notified when new networks are detected.

- ▶ When Wi-Fi is on and the user launches an application that uses Wi-Fi, a dialog box will appear when new networks are detected.
- ▶ When Wi-Fi is off and the user launches an application that uses Wi-Fi, the device will turn on Wi-Fi and display a dialog box when new networks are detected.
- ▶ If the **Notify me** checkbox is not marked and Wi-Fi is off, the device will not display a dialog box when new networks are detected.

Optimizing Wi-Fi usage


Touch **Optimize Wi-Fi usage** in the Wi-Fi settings screen to customize the following settings.

- ▶ Checkmark the box for **Automatically turn on Wi-Fi while charging phone** to set the device to automatically turn on Wi-Fi when connected to a power supply. If not checkmarked, Wi-Fi will not be turned on while charging. Touch **Save** to activate the setting.
- ▶ Checkmark the box for **When launching applications, connect to known Wi-Fi networks when Wi-Fi is off** to set the device to automatically turn on and connect Wi-Fi when applications are launched. This setting is helpful for frequently used internet capable applications. Touch **Save** to activate the setting.

To add a Wi-Fi network

You can add a Wi-Fi network so the phone will remember it, along with any security credentials, and connect to it automatically when it is in range. You can also add a Wi-Fi network manually if it does not broadcast its name (SSID) or if you want to add a Wi-Fi network when you are out of its range. To add a secured network, you need to contact the network's administrator to obtain the password or other required security credentials.

1. Turn on Wi-Fi, if it's not already on.

2. From the Wi-Fi settings screen, touch **Add Wi-Fi network**.
3. Enter the **Network SSID** (name) of the network.
If the network is secured, touch the **Security** dropdown menu  and touch the type of security deployed on the network.
4. Enter the required passwords and security credentials.
5. Touch **Save**.

The phone will connect to the wireless network. Any credentials that you entered are saved, so you're connected automatically the next time you come within range of this network.



To forget a Wi-Fi network

You can make the phone forget about the details of a Wi-Fi network that you added. For example, if you don't want the phone to connect to it automatically or if it's a network that you no longer use.

1. Turn on Wi-Fi, if it's not already on.
2. In the Wi-Fi settings screen, touch and hold the name of the network that you want to forget.
3. Touch **Forget network** in the Context menu that appears.

Wi-Fi Direct connection

You can make a connection directly with Wi-Fi devices without any access point. Your device can create a group connection or individual connection.

1. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Wireless & networks**.
2. Touch **Wi-Fi Direct settings** to set up your Wi-Fi Direct connection settings.
 - ▶ Checkmark the **Wi-Fi Direct** checkbox to turn it on. A pop-up screen with instructions on how to connect with Wi-Fi Direct and Wi-Fi devices appears after checking the Wi-Fi Direct checkbox.
 - ▶ Touch **Device name** to open a dialog box to enter a name for your device.
 - ▶ Touch **Password** to set or change your password for Wi-Fi direction connection.

- ▶ Touch **Discoverable mode** to make your device discoverable on other Wi-Fi devices.

Connecting Your Device to Your Computer

Before using your device's mass storage capabilities, you need to prepare your device's data services to synchronize with your desktop or laptop computer. Once you have connected the device to the computer, you can transfer your data to or from the device memory.

To connect your device to a computer via USB:

1. Use the USB Cable that came with your phone to connect the phone to a USB port on your computer.
2. Open the Notifications panel and touch **USB connected**.
3. Touch the connection mode you want to use to connect to the PC. Choose from the following options: **Charge only**, **Mass storage**, or **Internet connection**.



USB Autorun

USB Autorun is a feature that allows your phone to connect to a PC using a USB Cable and set it up on that PC without a physical CD-ROM.

- ▶ Automatically installs the LG USB Modem driver.
- ▶ Allows the phone to be used as mass storage when a microSD card is present in the phone. It allows transfer of unprotected content from the phone to the PC and vice versa.

NOTE User content such as photos, videos, and voice recordings can be stored on a removable microSD card that is inserted in your phone.

To select USB mode for Autorun

1. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Connectivity** > **Default connection mode**.
2. Touch **Mass storage** to connect to the PC for Autorun.
 - ▶ Touch **Charge only** to use only the charging USB function and not the USB function.
 - ▶ Touch **Internet connection** to use the ethernet function and not the

default USB function.

- NOTES**
- USB Autorun only works with Windows® XP, Windows® Vista, and Windows® 7 operating systems.
 - Log on to the PC as Administrator. Non-Administrator accounts have insufficient privilege to install the USB Modem driver and don't run the Autorun feature.
 - Do not unplug the USB Cable during Autorun.
 - If Autorun doesn't function properly, unplug and plug the USB Cable to set Mass storage mode.



Autorun automatically installs the USB device driver for every USB mode.

Internet connection mode

Autorun may automatically use Internet connection mode in certain circumstances.

- ▶ Autorun automatically switches to Internet connection mode if the connection fails while syncing or connecting.

You can share your phone's internet connection with your PC using a USB Cable. After connecting with a USB Cable, set the USB connection mode to Internet connection. Then select either **Ethernet** or **Modem**.

- ▶ **Ethernet** This mode changes the phone to USB tethering mode from the PC. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Wireless & networks** > **Tethering** > **Mobile Broadband Connection**.

NOTE This mode can only be used by a Tethering registered user.

- ▶ **Modem** This mode changes the phone to Modem mode from the PC.

Always ask



You can choose to be asked to confirm the USB connection when connecting to a computer.

When **Always ask** is checkmarked, the USB selection window is displayed when the USB Cable is connected.

Autorun is not available when:

- ▶ Phone is booting (powering up).
- ▶ PC operating system is not set to Autorun (automatic execute command).

To change the Connection mode settings while Autorun is running:

You can change the settings while Autorun is running. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Connectivity** > **Default connection mode** > **Mass storage**.

NOTE Be sure to checkmark the box **Always ask** if you want to be asked to confirm the USB connection mode when the phone is connected to a computer.

Using the Status Bar to change the settings

The Status Bar shows the current USB connection mode so you can easily open the Status Bar and change the settings as needed.

When connected via USB, the current USB connection mode also appears on the Notifications panel. Touch the connection setting to display a screen where you can change the USB connection mode.

NOTE If the **Always ask** checkbox is marked, the screen is only provided during USB connection, but is not provided in the notification area.

Step 1. Connecting the phone to a PC

 
- ▶ Connect your phone to your PC with a compatible USB Cable (supplied). LG Autorun starts automatically.
- ▶ Click 'I accept the terms in the agreement' then 'Yes'.



NOTES • Autorun is only supported for Windows® XP, Windows® Vista, and Windows®7.


- The USB Autorun feature works only under an Administrator account. The installer has insufficient privileges under a Non-Administrator account. Log on as Administrator. The device is switched back to the user set mode within 30 seconds.

Step 2. Downloading the LG USB Modem Driver.




- NOTES**
- If a previous version of the LG USB Modem driver is installed in the computer, it will automatically be updated to the recent version.
 - If a recent version of the LG USB Modem driver is installed in the computer, LG Autorun skips 'Step 2.'

 Step 3. Installing the LG USB Modem Driver.



 Step 4. Installing the Utility Application.





Make Your Device a Mobile Hotspot

The **Mobile Hotspot** application can share the phone's 4G data connection with any Wi-Fi capable devices.

WARNING!

There are security risks associated with creating a Wi-Fi network open to the public. It is highly recommended that you take steps to protect your Wi-Fi network from unauthorized access. To add encryption to your Wi-Fi Hotspot:

1. From the Home Screen, touch the **Apps Key**  > **Mobile Hotspot** .
2. Touch the **Mobile Hotspot** checkbox to enable this feature.
3. Read the disclaimers and Help information, then touch **OK**.

4. Your portable Wi-Fi Hotspot is now created.

You can use this menu to enable and disable the connection. Once the connection is active, go to the device you want to connect and configure its wireless connection to the Network SSID for your Android device and input the password (if you are using WPA2 PSK). You will now have wireless access on your device.

NOTE WEP is highly vulnerable to hacking. WPA2 is recommended by the IEEE.

The following Status Bar icon indicates your Wi-Fi Hotspot status.





microSD Card

NOTE The microSD card is sold separately.

Unmounting and removing the microSD Card



To safely remove the microSD card from your device, you must first unmount it before removing it from the phone.

1. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Storage** > **Unmount SD card** > **OK**. Now you can safely remove the microSD card.
2. Turn off the phone and remove the back cover.
3. Carefully push the edge of the microSD card in to release it from the slot, then gently pull it out of the slot.

NOTE You can easily damage the microSD card and its adapter by improper operation. Please be careful when inserting, removing, or handling them.



microSD Card Settings

Viewing Memory in the microSD Card

1. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Storage**.
2. Review the available information.
 - ▶ The storage page is divided into six sections: Backup Assistant Plus Storage, SD card, Internal memory, System memory, Backup and restore, and Personal data.

Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Storage**.
2. Touch **Unmount SD card** to release the microSD card from device use. An icon appears within the Notifications panel to indicate an unmounted microSD card.
3. Once released, touch **Erase SD card** > **Erase SD card** > **Erase everything**.

- ▶ Once completely formatted, the card is automatically re-mounted (reconnected for use by the device).

NOTE The formatting procedure erases all of the data on the microSD card, after which the files CANNOT be retrieved. To prevent the loss of important data, please check (and backup, if necessary) the contents before you format the card.


Using Mass storage mode

When you connect the phone and PC using a USB Cable and set your device's USB connection mode to Mass storage, you will see two removable disks on the PC. You can copy files to/from the removable microSD card.

Placing and Ending Calls

You place calls using the **Phone** application. Calls can be manually dialed using the **Dial** tab. You can also dial from your phone's memory using the **Call log** tab, the **Contacts** tab, or the **Groups** tab.

To open the Phone application



- ▶ From the Home Screen, touch the **Phone Key**  in the Quick Keys bar.

To place a call by dialing


1. Open the **Phone** application.







2. Touch the keys on the dialpad to manually enter a phone number.

- ▶ If you enter a wrong number, touch the **Delete Key**  to erase digits one by one.
- ▶ To erase the entire number, touch and hold the **Delete Key** .
- ▶ To dial an international number, touch and hold the **0+** Key to enter the plus (+) symbol. Then, enter the international prefix for the country; followed by the full phone number.

3. Touch the **Call Key**  to dial the number that you entered.


- ▶ You can use other phone features while the call is underway. If you open another application, the **Call icon**  appears in the Status Bar for the duration of the call.
- ▶ Press the **Volume Keys** to adjust the call volume.
- ▶ Use the on-screen buttons to enter additional numbers, place the call on hold and take an incoming call, add another call, use the speakerphone, end the call, and other options.

NOTE If you opened other applications while on a call, you'll need to return to the Call screen and touch **End call**  to end the call. You can touch the **Home Key** , then the **Phone Key**  (in the Quick Keys bar) or touch the Contact's name or number at the top left corner of the Home screen. You can also drag the Notifications panel down and touch the **Current call icon** .


Instant List


Instant list is displayed on the Dial tab to help you to use the information stored in your Contacts list and Call log without needing to open and search those application first. Once you enter three or more numbers you want to dial, Instant list displays entries from your Contacts list or Call log that match the sequence that you entered.

Sequence matches

The device searches for the entered sequence anywhere in the number, beginning, end, or anywhere in-between. The matching number sequence is displayed within the number in orange text. The name associated with the number is displayed above the number and the number type (mobile, home, etc) is displayed before the number, if known. When there are multiple matches, touch the Instant list dropdown icon  to view more matching entries.

Selecting an Instant list entry

Touch an entry in the Instant list to insert it on the dialpad and touch the Call Key  to dial it.

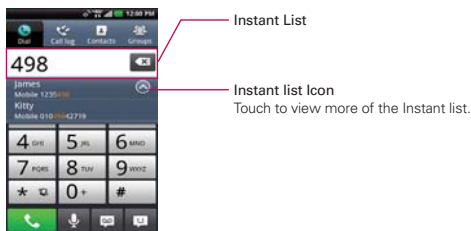


Frequent List

The Frequent list is displayed on the **Dial** tab above the dialpad. It displays your outgoing call phone numbers. Unlike the Sent calls list in the Call log, entries are only listed once, no matter how many times they have been called. If a name is associated with the number, the name is displayed instead of the phone number.

NOTE Only the 12 frequently called numbers are displayed.


Selecting a Frequent list entry

Swipe left and right to scroll through the list. Touch an entry in the Frequent list to insert it on the dialpad and touch the Call Key  to dial it.



Airplane mode

Some locations may require you to turn off your phone's wireless connections by placing your phone in Airplane mode.



1. Press and hold the **Power/Lock Key** .
2. Touch **Airplane mode**.

NOTE The Wireless & networks setting also has a checkbox to enable or disable Airplane mode and the Notifications panel has an Airplane mode icon which toggles it on or off.

Answering or Rejecting Calls


When you receive a phone call, the Incoming call screen opens with the caller ID and any additional information about the caller that you have saved in the Contacts list. All incoming calls are recorded in the Call log.

To answer a call

- ▶ If the screen is unlocked, simply touch the **Answer Key** .
- ▶ If the screen is locked, slide the screen up to answer (enter the pattern, PIN, or password if necessary).
- ▶ If you were already on a call, touch the **Answer Key**  to place the first call on hold while you answer the new call.


NOTE To silence the incoming call ringer, press the **Volume Keys**.

Unlocked Screen

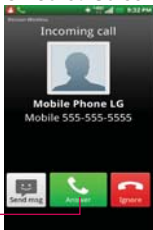



Touch the Answer Key to answer the call.

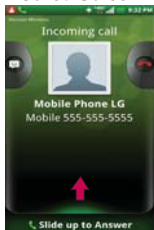
Locked Screen



To decline a call and divert it to voicemail

- ▶ If the screen is unlocked, touch the Ignore Key .
- ▶ If the screen is locked, drag the Ignore icon  to the left.
- ▶ The caller is sent directly to your voicemail box to leave a message.


Unlocked Screen

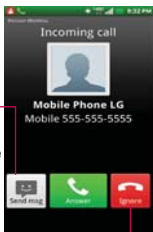

Touch the Send msg Key to send a quick message to the caller and forward them to your voicemail.

Touch the Ignore Key to decline the call and send the caller directly to your voicemail box to leave a message.

Locked Screen

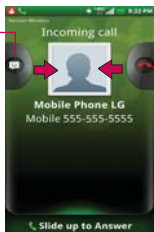



Drag the Send msg icon to the right to send a quick message to the caller and forward them to your voicemail.

Drag the Ignore icon to the left to ignore the call and forward the caller to your voicemail.

NOTE To silence the ringer, press the Volume Keys.

To decline a call and send a text message



1. When you receive an incoming call and the screen is unlocked, touch the **Send msg Key** . If the screen is locked, drag the **Send msg icon**  to the right.
2. Touch the text message you want to send in place of answering the call.

NOTE This feature can only be used to send a message to another mobile phone. It is not applicable to incoming landline calls.

Working with the Call Log

The Call log is a list of all of the calls you've dialed, received, or missed. It offers a convenient way to redial a number, return a call, or add a number to your Contacts list.


To open the Call log

- ▶ Touch the **Phone Key**  (in the Quick Keys bar) and then the **Call log** tab  at the top of the screen.

All calls (sent, received, and missed) are listed in the **Call log** tab. The most recent calls are located at the top of the list. Scroll down to see older entries.



To dial a number in the Call log

- ▶ From the Call log, touch the **Call Key**  at the right of the call entry. You can also touch and hold the entry to open a Context menu with more options to communicate with that contact in other ways.

To add an entry's number to your Contacts





1. Touch and hold the call entry.
2. Touch **Add to contacts** in the Context menu.
3. Touch **Create new contact** and enter the Contact information or touch **Update contact** and choose an existing contact to add the new number to.

To take other actions on a Call log entry





- ▶ Touch a Call log entry to open a screen where you can call the contact, send the contact a message, add the number to your Contacts list (or view contact information), delete the call from the log, and learn more about the original call.
- ▶ Touch and hold a Call log entry to open a Context menu where you can call the contact, view contact information, edit the number before you redial, and more.

To clear the Call log

Clearing the Call log all at once





1. Touch the **Phone Key**  (in the Quick Keys bar), then the **Call log tab**  at the top of the screen.
2. Touch the **Menu Key** .
3. Touch **Clear all**  > OK.

Selectively clearing the Call log

1. Touch the **Phone Key**  (in the Quick Keys bar), then the **Call log tab**  at the top of the screen.
2. Touch the **Menu Key** .
3. Touch **Clear**  and then checkmark the call entries you want to delete.
4. Touch **Delete** > OK .

NOTE You can also selectively delete by touching and holding a Call log entry, then touch **Remove from call log** > OK.

Filtering Call log entries

1. Touch the **Phone Key**  (in the Quick Keys bar), then the **Call log** tab  at the top of the screen.
2. Touch the **Menu Key**  > **Filter** .
3. Touch **Received calls only**, **Sent calls only**, or **Missed calls only**.

NOTE You can also access advanced filters by touching **Advanced filtering**, selecting your criteria, then touching **Apply**.


Calling Your Contacts

Instead of manually dialing phone numbers using the dial pad, you can use your Contacts list to dial quickly and easily.



You can also quickly call a contact using Quick Contact.

If you have contacts on the web, you can choose whether to synchronize with your phone when you first set up your Google™ Account.

To call a contact

1. Touch the **Contacts Key**  in the Quick Keys bar.
2. Touch the contact you want to call.
3. Touch the contact's phone number you want to call.

To call a favorite contact

1. Touch the **Contacts Key**  in the Quick Keys bar, then touch the **Groups** tab  at the top of the screen.
2. Touch **Favorites** and then touch the contact you want to call.
3. Touch the contact's phone number you want to call at the top of the screen.

Voice Dialer

You can use the **Voice Dialer** application to place a phone call by speaking the name of a contact or a phone number.


To place a call by speaking


1. Touch **Voice Dialer**  in the Applications screen.

If you have a Bluetooth device that supports "voice-recognition" or "voice dialing" you may be able to open Voice Dialer by pressing your headset's main button or in some other way, and dial by voice using your headset. For details, see the documentation that came with your headset.

2. Say "Call" followed by the name of the contact or say "Dial" followed by a phone number.


Options During a Call

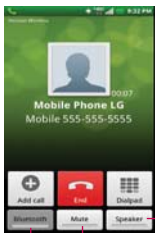


Touch **Speaker**  to turn the speakerphone on or off. The light bar on the **Speaker** button illuminates blue to indicate that the speakerphone is on.

WARNING!

 To avoid damage to your hearing, do not hold the phone against your ear when the speakerphone is turned on.

 Touch **Mute**  to mute the microphone during a call. The light bar on the **Mute** button illuminates blue to indicate that the microphone is muted.

Touch to **Bluetooth**  switch between a Bluetooth device and the phone. The light bar on the **Bluetooth** button illuminates blue to indicate that the call is using a Bluetooth device. This button is greyed out when there is no Bluetooth device available.

To mute the microphone during a call

- ▶ Touch **Mute** .


The light bar on the **Mute** button illuminates blue to indicate that the microphone is muted. The **Mute icon**  will appear in the Status Bar to remind you that the microphone is turned off.

While viewing the in-call screen, you can unmute the microphone by touching **Mute** again.

The microphone is unmuted automatically when the call ends.

To turn the speakerphone on or off

- ▶ Touch **Speaker** .

The light bar on the **Speaker** button illuminates blue to indicate that the speakerphone is on. The **Speaker icon**  will appear in the Status Bar and the sound from your call is played through the phone's speaker on the back of the device.

While viewing the in-call screen, you can turn the speakerphone off by touching **Speaker** again.

The speaker is turned off automatically when the call ends.

 
WARNING!

To avoid damage to your hearing, do not hold the phone against your ear when the speakerphone is turned on.

To switch between a Bluetooth device and the phone

When a Bluetooth device is paired and connected to your phone, you can conduct calls on it for hands-free conversations. During a call, you can easily switch between using the Bluetooth device and your phone.

When using the Bluetooth device during a call, the Ongoing Call notification icon is blue in the Status Bar (the icon is green when using the phone).

- ▶ Touch **Bluetooth**  to switch the call from the headset to the phone, or vice versa.

Managing Multiple Calls

Contact your wireless service provider to learn whether they support conference calls and how many participants you can include.







To switch between current calls

- ▶ Touch **Swap** .

The current call will be placed on hold and you will be connected with the other call.


To set up a conference call

Contact your wireless service provider to learn whether they support conference calls and how many participants you can include.

1. Place a call to the first participant.
2. When you're connected, touch **Add call** .
3. The **Phone** application opens. Enter a phone number, then touch the **Call Key** 
 - ▶ Touch the keys on the dialpad to manually enter a phone number.
 - ▶ Touch the **Contacts** tab  to select a number from your Contacts list.
 - ▶ Touch the **Call log** tab  to select an entry in your Call log.
 - ▶ Touch the **Groups** tab  to select one of your Favorites.
 - ▶ Touch a **Frequent list** entry to enter it.
4. After you're connected, touch **Merge calls** . The participant is added to the conference call.



Listening to Your Voicemail

When you have a new voicemail message, the **Voicemail notification** icon  appears in the Status Bar. If you have not set up your voicemail number, or if you need to change it, you can do that in the Call settings.



To listen to your Voicemail

- ▶ Open the Notifications panel and touch **New voicemail**.




OR

Touch the **Voicemail** icon  on the Home screen.




OR

- ▶ Touch the **Phone Key**  in the Quick Keys bar, then touch the **Voicemail Key** . Typically, your carrier's voicemail system guides you through the process of listening to and managing your voicemail. The first time you call your voicemail, it also guides you through the process of recording greetings, setting a password, etc.

To set up your Voicemail

1. Touch the **Phone Key**  in the Quick Keys bar on the Home screen. (The **Phone** application can also be accessed from the Applications screen.)
2. Touch the **Voicemail Key**  to dial your voice mailbox.
3. If you hear a system greeting, touch the **Pound Key**  to interrupt it, if applicable.
4. Follow the setup tutorial.
5. Select a password.
6. Record a voice signature and greetings for your voice mailbox.





To access your voicemail from your wireless device

1. Touch the **Phone Key**  in the Quick Keys bar on the Home screen.
2. Touch the **Voicemail Key**  to dial your voice mailbox. If you hear a system greeting or your own greeting, touch the **Pound Key**  immediately to interrupt the system greeting and follow the prompts.
3. Follow the prompts to enter your password and retrieve your messages.

Browser

The **Browser** application allows you to access the internet from your Verizon Wireless device. Access and selections within this feature are dependent upon your service provider. For specific information on Browser access through your phone, contact your service provider.

Browse web pages

1. From the Home Screen, touch the **Apps Key**  > **Browser**  or touch the **Browser icon**  directly from Home screen. To access a specific web page, touch the URL input field, enter the web address (URL) of the web page, then touch the **Go Icon** .

URL Input Field

Touch here to enter a web address for the web page you want to access.



Go Icon











Touch to go to the web page of the URL you entered.

2. While browsing the web page, navigate using the following options:
 - ▶ To zoom in or out, double-tap the screen. You can also use the pinch-to-zoom method. Place your two fingers on the screen and slowly pinch or spread them apart.
 - ▶ To reload the current web page, touch the **Refresh Icon** . The Refresh Icon reappears after the web page finishes loading. If the Refresh icon is not displayed, touch the **Menu Key**  to quickly display it.

- ▶ To stop loading a web page, touch the **Stop Icon** ✕ .
The Stop Icon appears while a web page is loading. If the Stop icon is not displayed, touch the **Menu Key** ⌵ to quickly display it.
- ▶ To view the list of bookmarks, touch **Bookmarks** 📑 next to the URL field. You can also add, edit, or delete a bookmark from the Bookmarks screen.
- ▶ To bookmark the current web page, touch **Bookmarks** 📑 > **Add** .
Enter an identifying name for the bookmark and touch **OK**.
- ▶ To go to the previous page, touch the **Menu Key** ⌵ > **Back** ⬅ or touch the **Back Key** ⬅ .
- ▶ To go to a next page in history, touch the **Menu Key** ⌵ > **Forward** ➡ .
- ▶ To view the currently active windows, touch the **Menu Key** ⌵ > **Windows** 📄 . Swipe left or right to easily switch back and forth between multiple open pages.



- ▶ To open a new window, touch the **Menu Key** ⌵ > **New window** 📄 .
- ▶ To customize the Browser settings, touch the **Menu Key** ⌵ > **Settings** ⚙ .
- ▶ To mark and save web pages to read later, touch the **Menu Key** ⌵ > **More** ⌵ > **Read it later** .
- ▶ When a web page finishes loading, the RSS Indicator will appear if an RSS feed is available. Touch the **Menu Key** ⌵ > **More** ⌵ > **Add RSS feed** and select the feed you want to save.
- ▶ To send the web address (URL) of the web page to others, touch the **Menu Key** ⌵ > **More** ⌵ > **Share page** .

- ▶ To search for text on the web page, touch the **Menu Key**  > **More**  > **Find on page**.
 - ▶ To select text on the web page, touch the **Menu Key**  > **More**  > **Select text**. Use your finger to highlight the text you want to select. Touching the screen displays begin and end markers. Move the markers to highlight the text you want, then tap the highlighted text to copy it. The highlighted text is copied to the clipboard and you can paste it anywhere that allows text to be entered.
 - ▶ To add a shortcut of this web page to your Home screen, touch the **Menu Key**  > **More**  > **Add shortcut to home**.
 - ▶ To view the web page details, touch the **Menu Key**  > **More**  > **Page info**.
- NOTE** When you are in a secure page, touch **View certificate** on the Page info. screen to see the certificate for the current page.
- ▶ To view the download history, touch the **Menu Key**  > **More**  > **Downloads**.




Internet

Learn to access and bookmark your favorite web pages.

- NOTES**
- You may incur additional charges for accessing the web and downloading media. For details, contact your service provider.
 - Available icons may vary depending on your region.

Bookmark your favorite web pages




If you know the web address of the web page, you can manually add a bookmark. To add a bookmark:

1. From the Home Screen, touch the **Apps Key**  > **Browser** .
2. Touch **Bookmarks**  next to the URL field.
3. Touch **Add**.
4. Enter a page title and a web address (URL).
5. Touch **OK**.

From the bookmarks list, touch and hold a bookmark to use the following options:

- ▶ To open the web page in the current window, touch **Open**.
- ▶ To open the web page in a new window, touch **Open in new window**.
- ▶ To edit the bookmark details, touch **Edit bookmark**.
- ▶ To add the bookmark as a shortcut to one of the Home screen canvases, touch **Add shortcut to home**.
- ▶ To send the web address (URL) of the web page to others, touch **Share link**.
- ▶ To copy the web address (URL) of the web page, touch **Copy link URL**.
- ▶ To delete a bookmark you have created, touch **Delete bookmark**. This option is not available for pre-configured bookmarks.
- ▶ To use the web page as your Browser homepage, touch **Set as homepage**.



From the Bookmarks screen, touch the **Menu Key**  and use the following options:

- ▶ **List view**  Shows the bookmarks in list format.
- ▶ **Edit mode**  Displays bookmark thumbnails with an X button  on the top right corner of each bookmark. Touch it to delete the bookmark then touch **OK** to confirm.



Changing Browser settings

You can configure a number of Browser settings, including how you view and use pages as well as allowing you to manage your privacy.

- ▶ To open the Browser settings screen, touch the **Menu Key**  from the Browser and then touch **Settings** .

Page content settings

Text size Opens a dialog box where you can increase or decrease the size of the text that the Browser uses when displaying web pages.

Default zoom Opens a dialog box where you can increase or decrease the magnification level that the Browser uses when first opening a web page.

Open pages in overview Checkmark to open web pages zoomed out, in an overview. Uncheckmark to open web pages at 100% size, displaying the top-left corner of the page.

Text encoding Opens a dialog box where you can change the character-encoding standard that the Browser uses when displaying text on a web page.

Block pop-up windows Checkmark to prevent websites from opening windows unless you request it.

Load images Remove the checkmark to omit images when the Browser displays a web page. This speeds the web page loading, which can be useful if you have a slow connection.



Auto-fit pages Checkmark to have the Browser optimize the presentation of text and other elements of web pages to fit your phone's screen. Checkmarking this option also causes the Browser to reflow a column of text to fit the screen if you double-tap the screen directly after zooming with your fingers. Remove the checkmark to view pages as designed for a computer screen so that double-tapping simply switches between zoomed-in and default view.

Landscape-only display Checkmark to display pages in landscape (horizontal) orientation on your screen, regardless of how you are holding the phone.

Enable javascript Remove the checkmark to prevent JavaScript from running on web pages. Many web pages function correctly only if they can run JavaScript features on your phone.

Enable plug-ins Opens a dialog box to select when to enable plug-ins from web pages.

Open in background Checkmark to open new windows in the background when you touch and hold a link, then touch **Open in new window**. This

is useful when you are working with windows that take a long time to download and display. Touch the **Menu Key**  > **Windows**  and then select the window to view it. Remove the checkmark if you prefer new windows that you open in this way to open in place of the current window.

Set home page Opens a dialog box where you can enter the URL of a page that you want to access whenever you open a new Browser window. If you prefer to open new Browser windows more quickly, by not opening any page by default, leave the dialog box blank.

Privacy settings

Clear cache Allows you to clear locally cached content and databases.

Clear history Allows you to clear the Browser history.

Accept cookies Checkmark to allow websites to save and read cookie data.

Clear all cookie data Allows you to clear all of the Browser cookie data.

Remember form data Checkmark to allow the Browser to remember data entered into forms for later use.

Clear form data Allows you to clear all saved form data.

Enable location Checkmark to allow sites to request access to your location.

Clear location access Allows you to clear location access for all websites.

Security settings

Remember passwords Checkmark to allow the Browser to save user names and passwords for websites.

Clear passwords Allows you to clear all saved passwords.

Show security warnings Checkmark to show a warning if there is a problem with a site's security.

Advanced settings

Set search engine Allows you to set the default search engine.

Website settings Allows you to manage advanced settings for individual websites.




Download storage Opens a dialog box to select location (internal memory or microSD card) for downloaded data.

Reset to default Allows you to restore the Browser settings to the default.

Maps

To search for a location





NOTE A pop-up appears upon initial use. Read the information and touch **OK** to continue.

1. From the Home Screen, touch the **Apps Key**  > **Maps** .
2. Touch the search box at the top of the screen.
3. In the search box, enter the place you're looking for. You can enter an address, a city, or a type of business or establishment. For example, "theater in New York".
4. Touch the **Search** Icon  to the right of the search box (or the **Search Key** on the keyboard).




Red markers indicate search matches on the map.






You can touch a marker to open a balloon that contains a label. Touch the balloon to open a screen with more information about the location, as well as options for obtaining directions.

To get directions

1. From the Home Screen, touch the **Apps Key**  > **Maps** .
2. Touch the **Menu Key**  > **Directions** .
3. Enter a starting point in the first text box and your destination in the second text box. You can also select an address from your Favorites, Contacts list, or Contacts History tab.

NOTE When you search for a location in the **Maps** application, the Directions function automatically enters your location as the starting point and the last red marker you touched as the destination.




4. Touch the **Car** icon  for driving directions, the **Transit** icon  for transit directions, or the **Walking** icon  for walking directions.

5. Touch **Get directions**.
6. Your route is displayed on a map.
 - ▶ Touch an orange marker on the map to see direction change indicators.
 - ▶ Touch the arrow icon  to display each direction instruction sequentially in a bubble at each juncture. You can touch the arrow icon  to step backward through the direction instructions.
 - ▶ To view the directions in text format, tap the destination box at the top of the screen. You can also touch the **List view**  at the bottom left corner of the screen.
 - ▶ Touch the **Layers** icon  to open a dialog box to display different map layers.
 - ▶ Touch the **Back Key**  to return to map view.

NOTE To reverse directions, touch the **Menu Key**  > **Reverse Start & End** .

Switching between common features

The **Maps** application has a toolbar at the top of the screen for easy access to many common features used when searching for the places you want to go.


- ▶ Touch the **Maps menu** icon  in the top left corner of the screen to access Map, Places, Navigation, Latitude, Location history and My Places.
- ▶ Touch the **Layers** icon  near the top right of the screen to access Traffic, Satellite, Terrain, Transit Lines, Latitude, My Maps, Bicycling, Wikipedia, Search, and your search history.
- ▶ Touch the **My Location** icon  in the top right corner of the screen to display your current location on the map.



Checking the Weather

The **Weather** application provides weather forecasts. You can place a Weather widget on your Home screen for a summary of your local weather. Access the **Weather** application for more detailed weather information.


To get details about the weather

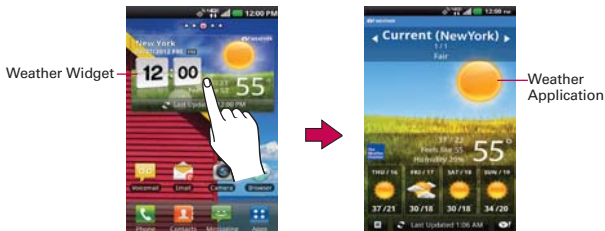Touch the Weather widget on the Home screen to open the **Weather** application to view summarized and detailed weather information.



- ▶ Swipe right or left to scroll through the weather information for each of the cities in your list.
- ▶ Touch the **Refresh** Icon  in the lower left corner of the Weather application screen to update the current weather of the city displayed on the weather application screen.
- ▶ Touch the **Yahoo!** Icon  in the lower right corner of the Weather application screen to view current local information for the city displayed on the weather screen.

 To update or add city

The City list screen allows you to manage a list of cities that you want to monitor. Touch the **City list** icon  in the lower left-hand corner of the **Weather** application screen.

- ▶ Touch **Current** at the top of the screen to update your current location.
- ▶ Touch **Add** at the bottom of the screen to add a city, then enter the name of the city.



- ▶ Touch **Remove** at the bottom of the screen to remove a city from your list of cities, touch the checkbox(es) for the city (or cities) to remove, then touch **Remove** to confirm.
- ▶ Touch a city in the list to display the weather information for that city.




Changing Weather Settings

You can configure a number of settings for the **Weather** application.

The location and related settings also affect the display of the Weather widget application.

- ▶ To open the Weather settings screen, touch the **Menu Key**  > **Settings** .

List Settings

City list Manages the list of cities you monitor. Touch **Add** at the bottom of the screen to add a new city to your list. To remove a city, touch **Remove** at the bottom of the screen. To rearrange the order of the cities viewed when you swipe across the **Weather** application screen, touch  on the right side of the screen and drag it to where you want it in the list.

General settings

These settings control how frequently the information on the Weather widget is updated and the temperature unit to use.

Refresh interval Allows you to set how often to update (Manual, Every 1 hour, Every 3 hours, Every 6 hours, Every 12 hours, Daily) the weather.

More frequent updates trade the convenience of current information for increased data use and decreased battery life between charges.


Temperature unit Allows you to set it to display degrees in Fahrenheit or Celsius.

NOTE Google Location Services must be checkmarked to update the current weather. From the Home Screen, touch the **Apps Key**  > **Settings**  > **Location** > **Google location services**.


Backup Assistant Plus

How to Access and Register Contacts backup settings from Backup Assistant Plus

If you didn't set up Backup Assistant Plus when you turned on your phone for the first time, you can enable it in the **Settings** application.

1. Touch **Backup Assistant Plus**  directly from the Applications screen.
2. Read the information provided on the screen and touch **Start**.
3. Enter your PIN code and confirm it, then touch **Submit**.
4. The Registration complete screen appears and your first back-up process begins. Touch **Next** > **Done**.

Backup Assistant Plus can be accessed directly from the Contacts application

1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **Backup now**.





If you've already registered your Backup Assistant Plus account, a background backup will be performed. If not, the Backup Assistant Plus registration screen will be displayed for you to complete registration then back up your files.

How to Access and Register Media backup settings from Backup Assistant Plus

1. Open the **Backup Assistant Plus** application.
2. Touch **Media backup settings**.
3. Select the storage amount and touch **Subscribe**.
4. Touch **OK** when the pop-up appears.
5. You can insert your email account by touching **Email account**.

TIP: Touch **Video tutorial** if you need instructions.



Backup Assistant Plus can be accessed directly from the various multimedia applications


- ▶ From **Music** , use the **Backup Assistant Plus** to upload the files from your device, to download the file from the server and for the file streaming from the server.
- ▶ From the **Gallery** , use **Backup Assistant Plus** to upload the files from your device, to download the file from the server and to open the file from the server.
- ▶ From the **Camera** , you can upload the captured image to Backup Assistant Plus.
- ▶ From the **Video Player** , touch **Menu > Storage > Backup Assistant Plus**.

Using Backup Assistant Plus



On the schedule you selected, the **Backup Assistant Plus** application checks the phone's address book to see if any changes have occurred since the last Backup. If changes are detected, the application will launch and the Backup process will start. If no changes are detected, Backup Assistant Plus sleeps until the next daily automatic backup is triggered.

Manually backing up your contacts

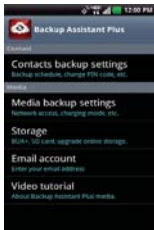

1. From the Home Screen, touch the **Apps Key** .
2. Touch **Backup Assistant Plus** .
3. Touch **Contacts backup settings** for Contacts backup settings.
4. Touch **Media backup settings** to set the backup settings for media.



Changing the backup schedule

1. From the Home Screen, touch the **Apps Key** .
2. Touch **Backup Assistant Plus** .
3. Touch **Contacts backup settings** and edit the contact backup time. Then touch **Media backup settings** to edit media backup time.
4. Touch **Backup time**, then touch the timeframe you want. For example, **Every late night (12am-6am)**.



Change your PIN code

1. From the Home Screen, touch the **Apps Key** .
2. Touch **Backup Assistant Plus** .
3. Touch **Contacts backup settings**.
4. Touch **Change PIN code** on the Backup Assistant Plus settings screen.
5. Enter your current PIN and touch **Next**.
6. Enter your new PIN. Then reenter it for confirmation and touch **Next**.



Media Backup Settings

The Media Backup Settings allows you to subscribe to a service for media file management. With this service, you can manage, store, protect, share, and play your media from virtually anywhere. The fee is based on your storage level requirements.

1. From the Home Screen, touch the **Apps Key** .
2. Touch **Backup Assistant Plus** .
3. Touch **Media backup settings**.
4. Read the service agreement, then touch **Subscribe**.

Email account

Displays the email address that was used to register Backup Assistant Plus.

Video tutorial

The video tutorial teaches you how to use Backup Assistant Plus. To view a video about Backup Assistant Plus media, follow the instructions below:

1. Access **Backup Assistant Plus**.
2. Touch **Video tutorial**. You will be directed to the Watch and learn video tutorials screen.
3. Touch **Backup Assistant Plus**.

Contacts

The **Contacts** application allows you to store names, phone numbers and other information in your phone's memory.

Using Your Contacts

Use the **Contacts** application to add, view, and communicate with your friends and acquaintances.

To open your Contacts application


- ▶ From the Home Screen, touch the **Apps Key**  > **Contacts** .

OR

Touch the **Contacts Key**  in the Quick Keys bar.

All of your contacts are displayed alphabetically in a list. If you have a new phone and haven't added any contacts yet, the **Contacts** application will display hints on how to start adding contacts to your phone.


To open a list of your favorite contacts

- ▶ Open your **Contacts** application and touch the **Groups** tab  at the top of the screen, then touch **Favorites**.





Favorites lists the contacts you've added to the list, followed by a list of your most frequently called contacts.

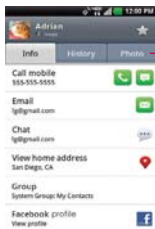
To view details about a contact

1. Open your **Contacts** application.
2. Touch the contact whose details you want to view.



Contacts synced from a social networking application will display their photo albums in the Photo tab.

3. The Contact Info tab displays by default. Touch an icon to call, message, or open other applications.
 - ▶ The **Dial icon**  places a call to the number.
 - ▶ The **Message icon**  starts a message.
 - ▶ The **Mail icon**  starts an email.
 - ▶ The **Chat icon**  starts a chat.

Touch the **Menu Key**  for the following menu options: **Edit contact**, **Share**, **Delete contact**, **Add to homescreen**, **Options (Ringtone and Incoming calls)**, and **More (Export and Set speed dial)**.

Contact History Tab

By default when you open a Contacts entry, the Contact **Info** tab is displayed so you can see all of the details you stored. You can also view your history of communication with the contact, including calls, messages, email, etc. Simply touch the Contact **History** tab at the top of the Contact entry screen.

Photo Tab






The Photo tab displays your Contact's photo albums if their contact information is synced with their profile from a social networking application.

Adding Contacts

You can add contacts on your phone and synchronize them with the contacts in your Google™ Account, Microsoft Exchange account, or other accounts that support syncing contacts.

Since your contacts can come from a variety of sources, the **Contacts** application attempts to join new information with existing similar contact entries, to create a single entry. You can also manage that process manually by joining or splitting entries.

To add a new contact



1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **New contact** .
- NOTE** You can also touch the New contact icon  to the left of the Search box to start a new contact entry.
3. If you have more than one account with contacts, touch **Contact type** at the top of the screen and choose the account to which you want to add the contact.
4. Enter the contact's name.
5. Touch a category of contact information, such as phone number or email address, to enter that kind of information about your contact.
6. Touch a category's plus icon  to add more than one entry for that category. For example, in the phone number category, enter a work number and add a home number. Touch the label button to the left of the entered information to open a dialog box of preset labels. For example, **Work** or **Home** for a phone number.
7. Touch the **Picture frame** icon  to select a picture to display next to the name in your list of contacts and in other applications.
8. When you're finished, touch **Save**.

Importing, Exporting, and Sharing Contacts

If you have contacts stored in vCard format on a microSD card you can import them into your **Contacts** application on your phone. You can also export contacts in vCard format onto a microSD card. Exporting your contacts to a microSD card allows you to back them up to a computer or other device. It also allows you to send the contact via email.



To import contacts from your microSD card

You can copy contacts, in vCard format, onto your microSD card then import them into your phone.

1. Insert the microSD card (that contains the vCard files) into your phone.
2. Open the **Contacts** application.
3. Touch the **Menu Key**  > **More**  > **Import/Export**.
4. Touch **Import from SD card**.
5. When the dialog box appears, select the storage type.
6. If you have more than one account on your phone, touch the account into which you want to import the contacts.
7. Touch the contacts you want to import from the microSD card. Then touch **Import** and **OK** to confirm.



To export contacts to your microSD card

You can export all of the contacts on your phone to your microSD card, as vCard files. You can then copy this file to a computer or another device that is compatible with this format, such as an address book application.

1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **More**  > **Import/Export**.
3. Touch **Export to SD card**.
4. When the dialog box appears, select the storage type.
5. Touch the contacts you want to export to the microSD card. To export all of the contacts, touch the **Select all** checkbox in the top left corner of the screen.
6. Then touch **Export** and **OK**.


To share a contact

You can share a contact with someone by sending it to them as a vCard file.

1. Open the **Contacts** application.
2. Touch the contact you want to share to view its details.
3. Touch the **Menu Key**  > **Share** .

4. Choose the method for sending.
5. Enter the necessary information and share it.


Adding a Contact to Your Favorites

The **Groups** tab  contains a short list of the contacts you communicate with most often, including your list of **Favorites**.

To add a contact to your Favorites list

1. Open the **Contacts** application.
2. Touch a contact to view its details.
3. Touch the star to the right of the contact's name.
When the contact is added to your Favorites list, the star will be blue-colored.


To remove a contact from your Favorites list

1. Open the **Contacts** application.
2. Touch the contact to view its details.
TIP If you have a long list of contacts, it may be faster to touch the **Groups** tab  > **Favorites**, then touch the contact entry to view its details.
3. Touch the blue star to the right of the contact's name.
The grey-colored star indicates that the contact was removed from your Favorites list.

Searching for a Contact

It's easy to search for a contact by name.

To search for a contact

1. Open the **Contacts** application.
2. Touch the search box or touch the **Search Key** .
3. Start entering the name of the contact you're searching for. As you type, contacts with matching names will appear below the search box.
4. Touch a matching contact in the list to view its details.

You can also search by nickname, email, organization and number.

NOTE The pinch-to-zoom gesture can be used in your Contacts list. Pinch in to compress the entries into horizontal alphabetical bars, then simply touch the bar with the desired letter to open the entries that begin with that letter.

Editing Contact Details

You can change or add details saved in your contact entries. You can also set specific ringtones to specific contacts or determine whether calls from specific contacts are diverted to your voicemail.

Some contact entries contain information from multiple sources: information that you added manually, information that Contacts joined from multiple accounts to consolidate duplicates, etc.

If you find duplicate entries in Contacts, you can join them into a single entry.

Changes made to information from one source do not automatically change the information on the other sources. For example, if you have information about a contact from a Google Account and an Exchange account and both are configured to sync contacts, changes to the contact from the Google Account are synced to that account on the web, but the information from the Exchange account will remain unchanged.

To edit contact details

1. Open the **Contacts** application.
2. Touch and hold the contact whose details you want to edit. In the Context menu that opens, touch **Edit contact**.
3. Edit the contact information.
4. Touch **Save** to save the changes.




To change a contact's default phone number

The default phone number is used when you initiate a call or send a text message using the Context menu that opens when you touch and hold the contact's entry.

1. Open the **Contacts** application.
2. Touch the name of a contact in the list to view its details.



3. Touch and hold the phone number to use as the contact's default phone number.
4. Touch **Make default number** in the dialog box that opens. The default phone number is indicated by a checkmark.

To divert calls from a contact to your voicemail



1. Open the **Contacts** application.
2. Touch the name of a contact in the list to view its details.
3. Touch the **Menu Key**  > **Options** .
4. Touch **Incoming calls** to checkmark the option and enable it.
5. Touch the **Back Key** .

When this contact calls you, your phone will not ring and the caller will be forwarded directly to your voicemail.

To set a ringtone for a contact

1. Open the **Contacts** application.
2. Touch the name of a contact in the list to view its details.
3. Touch the **Menu Key**  > **Options** .
4. Touch **Ringtone** then touch a ringtone from the dialog box to preview and select it.
5. Touch **OK** to save the ringtone for the contact.

To delete a contact

1. Open your **Contacts** list or **Favorites** list.
2. Touch the name of a contact in the list to view its details.
3. Touch the **Menu Key**  > **Delete contact** 
 - ▶ If you delete a contact from Google Contacts (or another account with editable contacts), the contact is also deleted from Contacts on the web the next time you sync your phone.

- ▶ If the contact contains information from both editable accounts (such as Contacts) and from a read-only account, a dialog box informs you that the information from the read-only account will be hidden, not deleted.

4. Touch **OK** to confirm that you want to delete the contact.


Communicating with Your Contacts

From the **Contacts** or **Groups** tab, you can quickly call or send a text (SMS) or multimedia (MMS) message to a contact's default phone number. You can also open a list of all of the ways you can communicate with that contact.

This section describes ways to initiate communication when viewing your list of contacts. The **Contacts** application shares your contacts with many other applications, such as Gmail™ and Messaging.

To connect using Quick Contact for Android™

1. Touch a contact's picture to open Quick Contact for Android.

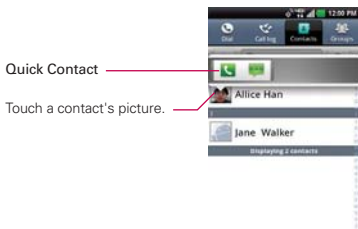





2. Touch the icon corresponding to the type of communication you want to start.


The communication icons displayed in Quick Contact depend on the types of information you saved in the contact information.

To communicate with a contact

1. Open the **Contacts** application.
2. Touch the contact with whom you want to communicate.

3. In the contact's details screen, touch the way to start communicating with the contact.

- ▶ The **Dial icon**  places a call to the number.
- ▶ The **Message icon**  starts a message.
- ▶ The **Mail icon**  starts an email.
- ▶ The **Chat icon**  starts a chat.

NOTE Anytime you see the **Dial icon**  next to a number, such as in your Favorites or Call log, just touch it to call that number.

To call a contact's default number

1. Open the **Contacts** application.
2. Touch and hold the contact you want to call.
3. Touch **Call contact** in the Context menu that opens.

To send a text or multimedia message to a contact's default number



1. Open the **Contacts** application.
2. Touch and hold the contact you want to message.
3. Touch **Text contact** in the Context menu that opens.

Selecting Which Contacts are Displayed

You can hide contacts that don't have phone numbers. You can also configure which groups of contacts you want to display in the Contacts list.

To set whether contacts without phone numbers are displayed



If you use your list of contacts only to call people, you can hide any contacts that don't have phone numbers.

1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **More**  > **Display options**.
3. Touch **Only contacts with phones** to select or deselect this option. When selected, a checkmark will appear.
4. Touch **Apply** to save your settings.

- NOTES**
- You can sort the Contact list by First name or Last name.
 - You can also view contact names with the first name first or the last name first.



To change which groups are displayed





1. Open the **Contacts** application.
2. Touch the **Menu Key**  > **More**  > **Display options**.
3. Touch an account to display its list of available groups.
4. Touch each group whose contacts you want to view in your **Contacts** application. Contact types with a checkmark will appear in your **Contacts** list. This action affects only which contacts are displayed. Your sync settings will not be affected.
5. Touch **Apply** to save your settings.

Joining Contacts

When you add an account or add contacts in other ways, such as by exchanging emails, the **Contacts** application attempts to avoid duplication by joining contact information automatically. You can also join contacts manually.

To join contacts

1. Open the **Contacts** application.
2. Touch the contact entry to which you want to add information. The contact name for this entry will remain unchanged after you join it with another contact.





3. Touch the **Menu Key**  > **Edit contact** .
4. Touch the **Menu Key**  > **Join** .
5. Touch the contact whose information you want to join with the first contact. The information from the two contacts will be merged and displayed under the name from the first contact.
6. Touch **Save** to confirm you want to join the entries. The contact information will be displayed in one contact entry.

Separating Contact Information

Each contact entry on your phone may contain 'joined' information from a variety of sources.

If contact information from different sources was joined in error, you can separate the information back into individual contact entries on your phone.





To separate contact information











1. Open the **Contacts** application.
2. Touch the contact entry whose information you want to separate.
3. Touch the **Menu Key**  > **Edit contact** .
4. Touch the **Menu Key**  > **Separate** .
5. Touch **OK** to confirm you want to separate the entries. The contact information will be separated into individual contact entries in the Contacts list.

Email

NOTE AOL, Yahoo and Hotmail icons only appear when the SIM card is inserted.

Email icons

	New Exchange mail message received or sending succeeded		Exchange mail message sending or receiving failed
	AOL mail message received or sending succeeded		AOL mail message sending or receiving failed

	Yahoo mail message received or sending succeeded		Yahoo mail message sending or receiving failed
	Gmail message received or sending succeeded		Gmail message sending or receiving failed
	Hot mail received or sending succeeded		Hot mail message sending or receiving failed
	Verizon.net mail received or sending succeeded		Verizon.net mail message sending or receiving failed
	Other mail received or sending succeeded		Other mail message sending or receiving failed

Opening Email and the Accounts Screen

You can use the **Email** application to read email from services other than Gmail™. The **Email** application supports the following account types: Microsoft Exchange, Windows Live Hotmail, Yahoo! Mail, Gmail, AOL Mail, Verizon and other accounts.


To open the Email application

- ▶ From the Home Screen, touch the **Apps Key**  > **Email**  or touch the **Email** icon  directly from Home screen.

The first time you open the **Email** application, a setup wizard opens to help you add an email account. After the initial setup, the **Email** application displays the contents of your Inbox.

The Accounts screen

The Accounts screen lists all of your accounts.

- ▶ Open the **Email** application. If you're not on the Accounts screen, touch the **Menu Key**  > **More**  > **Accounts**.

Each account on the Accounts screen displays the number of unread mail.

You can touch an account to view its Inbox.



The account from which you send email by default is indicated with a checkmark.

Reading Your mail

You can read mail from the Inbox, or from other folders within each individual account.


To read a mail

From the Accounts screen, simply touch any account to display that account's folders and contents.

You can also go to the folder list of the account by touching the **Menu Key**  > **Folders**  from the Inbox.

NOTE When new email arrives, a notification appears in the Status Bar. Drag the Notifications panel downward and touch the email notification.

Email settings

To access the Email account settings, touch the **Menu Key**  > **More** > **Settings** from the Inbox.

Accounts

- ▶ Touch an account to access settings specific to that email account.

General settings

- ▶ Touch **Set default account** to open a dialog box to select which email account to designate as your default account.
- ▶ Touch **Roaming** to checkmark this setting to automatically retrieve email while roaming outside your home network. Data fee will be charged.

Notification

- ▶ Touch **New email notification** to set whether you want to be notified of new email notifications.
- ▶ Touch **Notification sound** to open a dialog box to set the sound when you receive a new email notification.
- ▶ Touch **Vibration** to open a dialog box to set a vibration when you receive a new email notification.

Misc.

- ▶ Touch **Ask before deleting** to checkmark this setting if you want to be asked before deleting mail.
- ▶ Touch **Show image** to open a dialog box to set when to show images.
- ▶ Touch **Conversational view** to checkmark this setting if you want your email Inbox to display your email messages by conversation threads.
- ▶ Touch **Mail preview** to open a dialog box to set how many lines of email text to download for previewing on your device.
- ▶ Touch **Exchange server policy** to view this information if you use an exchange server email account.
- ▶ Touch **Save attachment to** to open a dialog box to select where attachments are saved.

Voicemail

The **Voicemail** application allows the management of voicemail directly from the device rather than accessing voicemail via traditional methods.

Voicemail displays a list of your messages and allows you to choose which message(s) to listen to or delete, without having to dial into your mailbox and listen to voice instructions or prior messages.

To be able to use Voicemail


1. From the Home Screen, touch the **Apps Key**  > **Voicemail** .


 

NOTE Listening to voicemail and setting up the voicemail service depends if you are subscribed to the visual mail service.

If the you are not subscribed to the visual mail service and you press the Voicemail Key, then you will be dialed into your traditional voicemail box. But if you are subscribed to Visual voicemail, then on touching the Voicemail Key, visual voicemail application will be launched.

2. The first time you access it, you will have to subscribe to Voicemail to use it.
3. After subscription, you are required to enter the password. You are only allowed to change the password by calling voicemail (dial *86).

4. After entering the password, you are allowed to see voicemail entries in your Inbox.

While viewing the voicemail list, you can select an entry (see step 5). For additional options, touch the **Menu Key**  > **New, Delete, Save as, Set as Heard, Sort by, or More (Saved messages, Refresh, Settings, Search, Logout)**.

5. Touch a voicemail entry to listen to it. Then you can touch **Call back, Save, or Delete**. To forward or reply to a message, touch the **Menu Key**  > **Forward**  or **Reply** .
6. If you decide to reply with a voicemail or forward it, record a message. The keys at the bottom of the screen allow you to record, stop, re-record, or cancel the message.


NOTE To send a voice message to a number in your Contacts list, use the **To:** field to search for it.

Gmail

Opening Gmail and Your Inbox

When you open the **Gmail** application, the most recent conversations are displayed in your Inbox.

To open the Gmail application

From the Home Screen, touch the **Apps Key**  > **Gmail** .

All of your conversations are displayed in your Inbox unless you delete, archive, or filter them.


The current Google Account is displayed at the top right of the Inbox. If you have more than one account, you can switch accounts to view the messages in each Inbox.

Conversations with new messages are displayed with bold subject lines. To read a message in a conversation, touch its subject line text.

- ▶ indicates that this message was sent directly to you.
- ▶ indicates that you were CC'd on this message.

No indicator indicates that this message was sent to a group that includes you.


To open your Inbox when Gmail is running

If you are viewing a message or another label, touch the **Back Key**  until you return to your Inbox.

OR


- ▶ While reading a message, touch the **Menu Key**  > **Go to inbox** .

OR

- ▶ While viewing a list of labeled conversations, touch the **Menu Key**  > **More**  > **Go to inbox** .

To switch accounts

Gmail displays conversations and messages from one Google Account at a time. If you have more than one account, you can open the Accounts screen to view how many unread messages you have in each account and to switch accounts.

1. From your Gmail Inbox, touch the **Menu Key**  > **Accounts** .



2. Touch the account that contains the email you want to read.

Reading Your Messages

While viewing a list of conversations in your Inbox or in any list of labeled conversations, you can open a conversation to read its messages.

To read a message

- ▶ Touch a conversation that contains the message you want to read.

The conversation opens to the first new (unread) message, or to the first starred message, if you've previously starred a message in the conversation.



The Google Talk online status will appear next to the name of the sender of each message if the sender has a Google Account. Touch the contact's picture to open Quick Contact.



While reading messages in a conversation, you can use the keys at the bottom of the screen to archive the entire conversation or delete it. After you delete a conversation, you can touch **Undo** in the green bar that appears at the top of the screen to undo the last action and restore the message to its previous location.

You can also touch the arrow keys / at the bottom of the screen to read the next, oldest, unread message in a conversation in your Inbox (or the conversation list you're working in).

Touch the message actions icon on the message header to access message actions options which include to mark it as important, to reply to the sender, to reply to all addressees, and to forward the message to someone else.

To reread a message



When you open a conversation, messages that you've already read are minimized into a tab that indicates the number of hidden messages.

1. From the Home Screen, touch the **Apps Key**  > **Gmail** . Then touch the conversation you want to view.



2. Touch the contact name to open that message.







While reading a message you can touch the **Menu Key**  > **Mark unread**  to return a read message to the unread state. For example, to remind yourself to read it again later.





Composing and Sending a Message


You can compose and send a message to people or groups with Gmail addresses or other email addresses.

To compose and send a message

1. From the Home Screen, touch the **Apps Key**  > **Gmail**  > **Menu Key**  > **Compose** .
2. Enter a recipient's address.

As you enter text, matching addresses are offered from your Contacts list. You can touch a suggested address or continue entering text to enter a new one.

3. Touch the **Menu Key**  > **Add Cc/Bcc**  to copy (normal or blind status) recipients, if necessary.
4. Enter a subject for the message in the Subject field.
5. Continue into the next field to enter your email message.
6. Touch the **Menu Key**  > **Attach** to add an attachment to the email.
7. Touch **Send**  at the top of the screen to send your message.

If you're not ready to send the message, touch **Drafts**  at the top of the screen to save the message as a Draft. You can read your drafts by opening messages with the Draft label.





To erase the message, touch the **Menu Key**  > **Discard**  (including any saved drafts).

If you aren't connected to a network, for example, if you're working in Airplane mode, the messages that you send are stored on your phone with the Outbox label until you connect to a network again.

Replying to or Forwarding a Message

You can continue an email conversation by replying to a message or by forwarding it.

To reply to or forward a message

1. Touch the message actions icon  on the message header to access action options for the message.
2. Touch **Reply** , **Reply all** , or **Forward** .

Replying to or forwarding messages without changing the subject adds your reply to the current conversation.

Changing the subject starts a new conversation.

The message will open in a new screen where you can add or remove addresses, edit the subject, and add or remove text or attachments.

You can add one or more people to an ongoing conversation by replying



to all and then adding the new person's address(es) to the reply.

Note that the conversation text and previous messages are also included in your reply (or forward).

 
3. Touch **Send**  at the top of the screen to send your message.

Messaging

To open Messaging

- ▶ Touch the **Home Key** , then touch the **Messaging Key**  in the Quick Keys bar.

The Messaging screen will open, where you can create a new message or open an ongoing message thread.



- ▶ Touch **New message** to start a new text or multimedia message.
- ▶ Touch an existing message thread to open it.

TIP QUICK REPLY

When a New Message notification pops up, choose to reply quickly without accessing the Messaging application by touching the **Text** field in the notification to respond with a text message, or touch **Call** to dial the contact or **Delete** to delete the message.

To delete a message thread from the Messaging window

1. Touch and hold the message thread.
2. Touch **Delete thread** in the Context menu that opens.
3. Touch **OK** to confirm you want to delete the message thread.

Exchanging Messages

You can send text messages (SMS) of up to 160 characters to another mobile phone. If you type more than the allotted text amount (up to 7 pages of 153 characters), the message is delivered as a series of messages (EMS). If you keep typing after the limit, your message is delivered as Multimedia messages (MMS).

Multimedia messages (MMS) can contain text and a picture, location, a recorded voice, an audio file, a video, or a picture slideshow.

The **Messaging** application automatically converts a message into a multimedia message if you add a subject or attach a media file.

To send a text message

1. On the Messaging screen, touch **New message**.
2. Enter a mobile phone number in the **To** field.

As you enter the mobile phone number, matching contacts appear. You can touch a suggested recipient or continue entering the phone number.


3. Touch the text field to start entering your message.



Character counter
Displays number of characters entered and amount remaining.




A counter is displayed in the top right corner of the text field to tell you how many characters are left and the number of pages.



If you touch the **Back Key**  while composing a message, it's saved as a draft in your **Messaging** application. Touch the message to resume composing it.

4. Touch **Send** to send the message.
Your message is displayed and responses appear in the same window, creating a message thread with that contact.


To create and send a multimedia message

1. On the Messaging screen, touch **New message**.
2. Enter a mobile phone number or email address in the **To** field. As you type, matching contacts appear. You can touch a suggested contact or continue typing.
3. Touch the text field to start entering your message.
4. Touch the **Menu Key**  > **Add subject**  to add a message subject.
5. Touch the **Attachment** icon  to open a dialog box where you can choose the type of media file to attach to the message.
 - ▶ If you touch **Pictures**, you're prompted to select a picture from your Gallery.
 - ▶ If you touch **Capture picture**, the **Camera** application opens so you can take a picture and attach it.
 - ▶ If you touch **Videos**, you're prompted to select a video from your Gallery.

- ▶ If you touch **Capture video**, the **Camcorder** application opens so you can record a video and attach it.
- ▶ If you touch **Audio**, you're prompted to select an audio file from your microSD card.
- ▶ If you touch **Record audio**, the voice recording function opens and allows you to record an audio message and attach it.
- ▶ If you touch **Location**, you can attach **My current location**, **Places of Interests**, **Enter Address**, **Contacts** and **From geotagged media**.
- ▶ If you touch **Slideshow**, a dialog box opens and allows you to assemble photos, audios, videos, texts into a slideshow (up to 10 slides) to attach to the message. Use the buttons in the slideshow screen to preview the message, replace or add a picture, or remove a slide. Touch **Done** when you finish editing the slideshow.
- ▶ If you touch **Contact (vCard)**, you're prompted to select the contact(s) you want to send as vCard file(s).
- ▶ If you select a particular address or location from the **Maps** application and touch **Attach**, you can send the location by MMS.

6. Touch **Send MMS** to send the message.

To attach a location in a message


1. Create a new message and add a recipient.
2. Touch the **Attachment** icon  and touch **Location**.
3. Select a location and touch **Attach**.
4. Type in the message and touch **Send**.

To send a group message.


1. On the Messaging screen, touch **New message**.
2. Add the recipient(s).
3. If more than one recipient is entered, you will be asked to choose between a group conversation and an individual message.

- ▶ Touch **Group Conversation** to allow all of the recipients to be viewed by each other so they can respond to you and the group. The message is sent as as a multimedia message (MMS).
- ▶ Touch **Individual Message**, so that none of the recipients can see the other recipients (similar to BCC). Each individual can only respond to you.

To respond to messages you receive

If you receive a new message while you're working in a message window, the new message is displayed. If not, you'll receive a new message notification and the new message icon  appears in the Status Bar. When you touch the new message notification, the Message screen opens where you can reply to the message. The new message notification also appears on the screen, where you can quickly reply to the message, call the person, or delete the message.

If Auto-retrieve is uncheckmarked, you must touch **Download** to view the message.



If the message contains a media file, touch **Play**  to view, watch, or listen to it. Touch and hold the media file to open a Context menu with additional options.

To view details about a message

1. Touch and hold a message in the message window.
2. Touch **View message details** in the Context menu that opens.

Changing Messaging Settings

You can change a number of Messaging settings.

- ▶ To change your Messaging settings, open the **Messaging** application, touch the **Menu Key**  > **Settings** .

Storage settings

Delete old messages Checkmark this setting to allow the phone to delete older messages in a thread when the **Text message limit** or **Multimedia**.

message limit is reached. Remove the checkmark to keep all of your messages.

Text message limit Touch to set the number of text messages to save per thread.

Multimedia message limit Touch to set the number of multimedia messages to save per thread.

Signature Opens a dialog box to enter a signature to automatically send with your messages. Checkmark appears after a signature is entered.

Callback number Opens a dialog box to view or edit the callback number sent with your messages. Checkmark appears after the dialog box is closed.

Text message (SMS) settings

Delivery reports Checkmark this setting to allow your phone to receive delivery reports for the text messages you send.

Set priority Opens a dialog box that allows you to set the default priority for your text messages.

Multimedia message (MMS) settings

Delivery reports Checkmark this setting to allow your phone to receive delivery reports for the multimedia messages you send.

Auto-retrieve Remove the checkmark to download only the heading of multimedia messages, allowing you to manually download the whole message when you're ready. This is useful for controlling how much data you download.

Roaming auto-retrieve Checkmark this setting to allow messages to be received even if you are roaming outside of the network.

Set priority Opens a dialog box that allows you to set the default priority for your multimedia messages.

Group conversation settings

Group conversation Checkmark this setting so that message recipients can see who received the message and reply to them.

Help Displays a pop-up with information describing the Group Messaging feature.

Notification settings

Notifications Checkmark this setting to allow your phone to receive a notification in the Status Bar whenever you receive a new message.

Notification sound Opens a dialog box where you can select the sound when you receive new message notifications.

Vibrate Opens a dialog box to set the phone vibration setting when you receive a new message notification.

New message popup Checkmark this setting to enable a dialog box to alert you to new message arrival(s).

Receive emergency alerts

Presidential alert Checkmark this setting to allow presidential alerts to be always presented.

Extreme threat alert Checkmark this setting to allow Extreme alerts to be always presented.

Severe threat alert Checkmark this setting to allow Severe alerts to be always presented.

AMBER alert Checkmark this setting to allow AMBER alerts to be always presented.

Alert reminder Opens a dialog box to set how often to be reminded.

How to select the type of keyboard to use for messaging

1. Touch and hold a text field.
2. Touch **Input method** in the Context menu that appears.
3. Choose between **LG Keyboard** and **Swype**.

You will now be able to enter text using the new keyboard.

LG Keyboard



Swype Keyboard




Touch and hold the composing area.




Touch **Input method**.




Choose the type of keyboard you want.

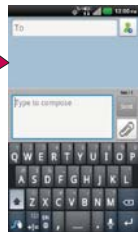

To change the LG keyboard layout

1. Touch and hold the Numbers/Symbols Key .
2. Touch Keyboard layout.
3. Touch QWERTY or 3x4 keypad.

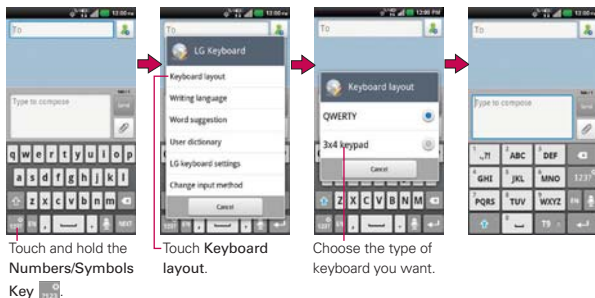

Using the Swype Keyboard

The Swype™ keyboard uses error correcting algorithms and also includes a predictive text system.





Swype Text Entry Tips

You can access Swype tips and watch a tutorial on using Swype. You can also use the following Swype text entry tips.

- ▶ Put your finger on the first letter of the word and draw a path from letter to letter, lifting your finger up after the final letter.



- ▶ Create a squiggle (like an S shape) to create a double letter (such as pp in apple).
- ▶ Touch and hold a key to enter the alternate letter or symbol located at the top right corner of the key.
- ▶ Move your finger over the apostrophe to enter contractions.
- ▶ Double-tap the word you want to change or correct a misspelled word.
- ▶ Touch the **Delete Key**  to erase one character. Touch and hold the **Delete Key**  to erase an entire word.

Talk

To open Google Talk and sign in

- ▶ From the Home Screen, touch the **Apps Key**  > **Talk** .

When you first open Google Talk, your Friends list will be displayed. This list includes all of the friends you've added by using Google Talk on the web or on the phone.



To return to your Friends list

You can return to your Friends list while chatting with a friend so that you can invite another friend to chat, add a friend, etc.

- ▶ Touch the **Menu Key**  > **Friends list** .

To sign out of Google Talk





You can sign out of Google Talk. For example, if you want to limit Google Talk conversations to your computer. Also, signing out can extend your battery life.

- ▶ From your Friends list, touch the **Menu Key**  > **Sign out** .

You will no longer receive chat notifications or see others' Google Talk status in other applications, such as Gmail™.



Chatting with Friends

To chat with a friend

1. From the Home Screen, touch the **Apps Key**  > **Talk** .
If you're already chatting with someone, you can touch the **Menu Key**  > **Friends list**  to return to the Friends list.
2. Touch the friend you want to chat with.
3. Enter your message then touch **Send**.



The messages that you exchange are displayed on the screen and include information about the chat, such as whether it's on-the-record, the time a message was sent (if there's no response after a short while), etc.

To enter an emoticon (smiley), just touch the **Menu Key**  > **More**  > **Insert smiley** to open a list of emoticons.

Your chat session will remain open until you end it.

Friends you're chatting with are displayed at the top of your Friends list, with the most recent message displayed in a black-on-white balloon.

To accept an invitation to chat

When a friend sends you a Google Talk message, you will receive a notification. The friend's name in the Friends list turns white and displays the message.

- ▶ Touch the name of the person in your Friends list.

OR



- ▶ Open the Notifications panel then touch the chat notification. A chat window will open where you can exchange messages with your friend.

To switch between active chats

If you have more than one chat going, you can switch between chats.

- ▶ From the Friends list, touch the name of the person you want to chat with.

OR



- ▶ From a chat screen, touch the **Menu Key**  > **Switch chats**  and then the friend you want to chat with.

OR

- ▶ While chatting with a friend, swipe left or right across the screen.

To invite a friend to join a group chat

While you're chatting, you can invite additional friends to join a group chat.



1. On a chat screen, touch the **Menu Key**  > **Add to chat** .
2. Touch the name of the friend to invite.

The friend you invited and the current participants will receive an invitation to a group chat. Each one who accepts the invitation will join the group chat. In a group chat, everyone can see everyone else's messages. Group chats appear at the top of your Friends list, with a group chat icon.

To chat on or off-the-record


Your Google Talk messages are stored, so you can review them later and even search for them, in the Chats folder in Gmail. If you'd rather not store the messages in a chat, you can chat off-the-record.

- ▶ While chatting, touch the **Menu Key**  > **Chat off record** .

To return to on-the-record chatting, touch the **Menu Key**  > **Chat on record** .

To end a chat

When you've finished your conversation, it's easy to end a chat session.

- ▶ From your Friends list, touch and hold the friend you want to stop chatting with. In the Context menu that opens, touch **End chat** .



OR

- ▶ From a chat screen, touch the **Menu Key**  > **End chat** .

Changing and Monitoring Online Status

Google Talk allows you to change how you appear to others; you can change your online status and status messages, as well as the picture that appears next to your name on your friends' list.

To change your online status

1. From the Home Screen, touch the **Apps Key**  > **Talk** .
2. Touch your email address at the top of your Friends list.
3. In the Set status screen that opens, touch your current status, then touch the new status you want to set.








NOTE Touch the checkbox to indicate whether you are available for video/voice chat.

4. Touch **Done**.

Your status and any message you've entered appear in your Friends' lists and in other locations where your status or status message are displayed.



Status Icons



Icons in Google Talk, Gmail, and other applications indicate the Google Talk status for you and your friends.

	Available: Signed into Google Talk and available to chat
	Away: Signed into Google Talk but not active
	Busy: Signed into Google Talk but too busy to chat
	Signed out of Google Talk
	Invisible: Signed into Google Talk but appear signed out to others
	Video Chat: Video chat is available
	Voice Chat: Voice chat is available

To change your status message

In addition to the standard status icons described in the table above, you can also enter a status description to go with your status.

1. From the Home Screen, touch the **Apps Key**  > **Talk** .
2. Touch your email address at the top of your Friends list.
3. Touch the message text field and enter the text you want displayed with your status.
4. Touch **Done**.

NOTE Any status descriptions that you've entered previously are added to your status message list at the bottom of the screen, so you can easily touch them to set them in the future without retyping. To clear your list and start over, touch the **Menu Key**  > **Clear custom messages** .

To change your picture

1. Touch your email address at the top of your Friends list.
2. Touch your picture at the top left of the screen.
3. Touch **Change** to change your picture. (Or, touch **Remove** to simply remove it.)
4. Choose an image from your Gallery.
5. Crop the picture and touch **Save**.



Managing Your Friends List

Your Google Talk Friends list contains the friends you've invited to become friends or whose invitations you've accepted in Google Talk. Friends can invite each other to chat in Google Talk and see each others' online status in Google Talk and other applications, such as in Gmail.

The Google Talk Friends list is sorted by your friends' online status: active chats, online, busy, away, and offline. Within each grouping, friends are listed alphabetically.

To add a friend to your Friends list

You can invite anyone with a Google Account to become your friend in Google Talk, so you can chat with each other and stay up-to-date with each others' online status.

1. From the Friends list, touch the **Menu Key**  > **Add friend** .
2. Enter your friend's Gmail address then touch **Send invitation**.

To view and accept an invitation to become a friend

When a contact invites you to become a friend in Google Talk, you receive a notification in the Status Bar and the invitation appears in your Friends list.

1. Touch the invitation from either the Status Bar or the Friends list.
2. Touch **Accept** to chat with the contact, or **Cancel** if you don't want to chat with and share your Google Talk status with the sender.

To view a list of pending invitations to friends

- ▶ From the Friends list, touch the **Menu Key**  > **More**  > **Invites**.

All the friends to whom you've extended invitations to become friends on Google Talk appear in the list until they accept or cancel your invitation.

To view all friends or only those most popular with you



By default, only the friends that you frequently chat with (the most popular) are shown in the Friends list. But you can view all friends instead.

- ▶ In the Friends list, touch the **Menu Key**  > **All friends** .

To switch back to just the friends with whom you chat most frequently, touch **Most popular**  in the Options menu.



To add a friend to the 'Most popular' group



You can set a friend to always appear in your Most popular Friends list.

1. From the Friends list, touch and hold a friend's name.
If you don't see the friend's name, touch the **Menu Key**  > **All friends** .
2. Touch **Always show friend** in the Context menu that opens.
To remove a friend from this list, touch and hold the friend's name from the Friends list. In the Context menu that opens, touch **Hide friend**.

To block a friend

You can block a friend from sending you messages. When blocked, your friend will be removed from your Friends list.

1. From the Friends list, touch and hold the friend's name.
If you don't see the friend, touch the **Menu Key**  > **All friends** .
2. Touch **Block friend** in the Context menu that opens.



You can view a list of your blocked friends by opening your Friends list and touching the **Menu Key**  > **More**  > **Blocked**. You can unblock a friend by touching the friend's name in the blocked list then touching **OK** in the dialog box that opens.

Changing Google Talk Settings



You can configure Google Talk to send you a notification with the contents of each message that you receive in a chat, and also to sound a ringtone or vibrate the phone.

You can also configure Google Talk to sign you in automatically when you turn on your phone, and you can set whether the mobile indicator is displayed next to your name in other people's Friends lists.

To configure notifications for new Google Talk messages



1. From the Friends list, touch the **Menu Key**  > **Settings** .
2. Checkmark **Invitation notifications** to receive a notification in the Status Bar when friend invitation(s) are received.
3. Touch **Notifications** in the Text chat settings and Voice & video chat settings sections to receive a notification in the Status Bar when a new chat message arrives.
4. Touch **Ringtone** in the Text chat settings and Voice & video chat settings sections to open a list of the ringtones that will ring to notify you of a new chat.
5. Touch **Vibrate** in the Text chat settings and Voice & video chat settings sections to choose the vibration setting when you receive notification of a new chat.

To show or hide the mobile indicator to friends



1. From the Friends list, touch the **Menu Key**  > **Settings** .
2. Checkmark **Mobile indicator** (or remove the checkmark).


If **Mobile indicator** is checkmarked, your friends see an outline of an Android™ next to your name in their Friends list when you're signed into Google Talk on an Android phone.

To set whether you sign into Google Talk automatically

1. From the Friends list, touch the **Menu Key**  > **Settings** .
2. Checkmark **Sign in automatically** (or remove the checkmark).
When **Sign in automatically** is checkmarked, you are signed into Google Talk when you turn on your phone.



To set Google Talk to change your status

1. From the Friends list, touch the **Menu Key**  > **Settings** .
2. Checkmark **Automatic away status** (or remove the checkmark).

When **Automatic away status** is checkmarked, your status will automatically be changed to Away  when the screen is turned off.

The Phone Application

The phone features of your device include many ways to make calls.



- ▶ Touch the **Home Key**  and then the **Phone Key**  in the Quick Keys bar at the bottom of the screen.



The **Phone** application has four tabs across the top of the screen: **Dial**, **Call log**, **Contacts**, and **Groups**. Using these tabs, you can dial manually or make calls automatically from information you've stored in your phone.

Dial








This tab allows you to dial a phone number manually using the dial keypad. You can also call voicemail or call with the Voice dial feature using this keypad and even use the voice dialing feature.

Call log






This tab displays the history of all of your calls. From here you can call or contact any of the entries. To delete an entry, touch and hold the entry and then touch **Remove from call log** in the Context menu that appears, then touch **OK**. To delete your Call log, touch the **Menu Key**  > **Clear all**  > **OK**.

NOTE You can also selectively delete entries from the Call log. Touch the **Menu Key**  > **Clear**  > touch the checkboxes to the left of the entries to delete > **Delete** > **OK**.

Contacts

This tab displays your Contacts list. From here you can call or contact any of the entries based on the saved information or manage your Contacts list. Touch the **Menu Key**  to open an Options menu to select **New contact** , **Delete** , **Send** , **Share** , **Backup now** , or **More**  (Display options, Speed dials, Accounts, Import/Export, My profile).

Groups


This tab displays your contacts by group for each account type you have set up, starting with Favorites, followed by a list of recent frequent contact. From here you can call or contact any of the entries based on the saved information or manage your list. For additional options, touch the **Menu Key**  to open an Options menu to select **New group** , **Send** , **Share** , or **Delete** .

To add a Contact to your list of favorites:

1. Touch the **Contacts** tab and then the Contact entry you want to add to your Favorites.
2. Touch the grey star next to the Contact's name. The star turns blue and the entry is added to your Favorites.

To remove a Favorite, touch the blue star in either the Contacts list or Favorites list. The star turns grey and the entry is removed from your Favorites.



Frequent list


The **Phone** application generates a list of the phone numbers called most frequently from your phone. This dialing shortcut list is displayed horizontally below the **Phone** application tab. Touch any of the entries to prepend it on the dial pad, then touch the **Call Key**  to call it.

Voice Dialer



Call a Contact by Voice Dialing

You can call numbers directly by saying the contact's name or number.

1. From the Home Screen, touch the **Apps Key**  > **Voice Dialer** .
2. Say "Call" or "Dial" then a name or a phone number.
Or, you can say "Redial" to redial the last number dialed.
3. If a list of results is displayed, touch the one you want to use.

NOTE You can also access this feature by touching the **Voice Dialer Key**  on the **Phone** application dial pad.



Open an Application using Voice Dialer

1. From the Home Screen, touch the **Apps Key**  > **Voice Dialer** .
2. Say "Open" and then an application name.
3. If a list of results is displayed, touch the one you want to use.
The device opens the corresponding application.

Camera

To open the **Camera** application, from the Home Screen touch the **Apps Key**

 > **Camera** .

TIP If you haven't locked your phone with a security lock sequence, from the locked screen, simply press the **Power/Lock Key** , then drag the **Camera icon**  downward.

Getting to know the viewfinder

Brightness – Defines and controls of the amount of light entering the lens. Slide the brightness indicator along the bar, toward “-” for a lower brightness image, or toward “+” for a higher brightness image.


Zoom – Zoom in or zoom out. The **Volume Keys** will also adjust the zoom.

Swap Lens – Allows you to swap between the rear camera lens and the front camera lens.



Mode Switch – Allows you to switch between Camera mode and Video mode. Slide this icon down for Video mode and up for Camera mode.

Capture – Touch to take a photo.


Gallery – Accesses your saved photos from within Camera mode. Simply touch this icon and your Gallery will appear on the screen. Touch the **Camera icon**  in the upper right corner to return to Camera mode.





Settings – Opens the Camera settings menu. See Photo options.









Flash Mode – Allows you to set the flash mode.

NOTE The default resolution is 5M (2560x1920).

Photo options

You can make adjustments to optimize your shot. The following options are available when you touch **Settings**  on the viewfinder screen:


- ▶ **Focus** : Allows you to change the Focus mode to Auto or Face tracking.
- ▶ **Image size** : Allows you to change the image size to 5M(2560x1920), 3M(2048x1536), W3M(2240x1344), 2M(1600x1200), 1M(1280x960), W1M(1280x768), VGA(640x480), or QVGA(320x240).
- ▶ **Scene mode** : Adjusts for better image capture in different environments. Choose from Normal, Portrait, Landscape, Sports, Sunset, and Night.
- ▶ **ISO** : Controls the camera's sensitivity to light. Choose from Auto, 400, 200 and 100.

- ▶ **White balance** : Improves color qualities under different lighting conditions. Choose from Auto, Incandescent, Sunny, Fluorescent, and Cloudy.
- ▶ **Color effect** : Applies artistic effects to pictures. Choose from None, Mono, Sepia and Negative.
- ▶ **Timer** : Allows you to set a delay timer for the camera. This is ideal if you want to be in the picture. Choose from Off, 3 sec, 5 sec, or 10 sec.
- ▶ **Shot mode** : Allows you to select the Shot mode for the picture. Choose from Normal, Continuous shot, or Panorama.
- ▶ **Shutter sound** : Allows you to select the Shutter sound for the Camera. Choose from Tone 1, Tone 2, Tone 3, or Tone 4.
- ▶ **Auto review** : Allows you to briefly view the picture after taking it. Choose from Off, on On, 2 sec, or 5 sec.
- ▶ **Tag location** : Allows you to add location information to the picture. This is ideal for geotagging purposes. Choose from Off or On.
- ▶ **Storage** : Allows you to select where to store your pictures. Choose from Internal memory or SD card.


TIP You can close all of the setting icons to give a clearer viewfinder screen. Just touch the center of the viewfinder once. To recall the options, touch the screen again.

Using the focus mode

You can select from the following focus options:

- ▶ **Auto** sets the camera to focus automatically on the object you touch on the screen before touching **Capture** .
- ▶ **Face tracking** sets the camera to automatically detect and focus on human faces. When Face tracking is set, touching the screen does not activate the focus box.

Taking a quick photo

1. Open the **Camera** application.
2. Holding the phone horizontally, point the lens toward the subject you want to photograph.
3. Touch the subject on the screen and a focus box will appear in the viewfinder.
4. When the focus box turns green, the camera has focused on your subject.
5. Touch **Capture**  to take the picture.

Once you've taken the photo

If **Auto review** is set to On, your captured photo will appear on the screen until you touch an option or icon to proceed.

NOTE Simply touch the screen to redisplay photo options if they recede from the screen.

The following options are available after taking a photo if **Auto review** is set to On.

NOTE If **Auto review** is set to Off, these options can be accessed while viewing the photo in the **Gallery** application.

- Share** Touch to share your photo using **SmartShare**, **Backup Assistant+**, **Bluetooth**, **Email**, **Gmail**, **Google+**, **Messaging**, **Picasa**, **Social+**, or any other application you've downloaded that supports this feature. Choose one of the Share options, then complete as necessary.
- Set as** Touch to use the image as a **Contact icon** or **Wallpaper**. Then complete as necessary.
- Rename** Touch to edit the name of the selected picture. Enter the name, then touch **OK**.



Touch to delete the image, then touch **OK** to confirm.

Touch to take another photo immediately. Your current photo will be saved to your Gallery.

Touch to view the Gallery of your saved photos.


Viewing your saved photos

You can access your saved photos from Camera mode. Just touch the image thumbnail at the bottom right corner of the Camera screen.


TIP Slide your finger left or right to view other photos or videos.

While viewing a photo, touch the screen to access the following options:

Zoom Touch the zoom icons to zoom in  and out .

Share  Touch to open a dialog box to select which application to use to share the photo.



Delete  Touch to delete the photo, then touch **Confirm Delete**.

More  Touch to open an Options menu that includes the following additional options.

NOTE Touching the **Menu Key**  displays and closes the photo options icons.

- ▶ **Slide Show** Touch to see your photos played in a slideshow.
- ▶ **Rename** Touch to open the keyboard to rename the photo for easy identification.
- ▶ **Details** Touch to display information about the photo (e.g., file type, file size, etc.).
- ▶ **Set as** Touch to set the photo as the icon identifying a contact or set it as your phone wallpaper.
- ▶ **Crop** Touch to open a cropping box tool that allows you to manually crop the photo. Use your finger to move or resize the cropping box to encompass only the part of the photo you want to see, then touch **Save**.
- ▶ **Rotate Left** Touch to rotate the photo counter-clockwise.
- ▶ **Rotate Right** Touch to rotate the photo clockwise.

Video Camera


To open the **Video Camera** application, from the Home Screen touch the **Apps Key**  > **Camera** . Slide the **Mode Switch** icon down for Video mode.

Getting to know the viewfinder

Brightness – Defines and controls of the amount of light entering the lens. Slide the brightness indicator along the bar, toward “-” for a lower brightness video, or toward “+” for a higher brightness video.

Zoom – Zoom in or zoom out. The **Volume Keys** will also set the zoom. Set the zoom before starting a video. You cannot change the zoom setting during recording.

Swap Lens – Allows you to swap between the rear camera lens and the front camera lens.

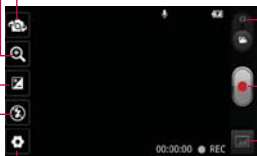

Mode Switch – Allows you to switch between Camera mode and Video mode. Slide down for Video mode and up for Camera mode.


Capture – Touch to start recording video.






Gallery – Accesses your saved photos and videos from Video camera mode.


Settings – Opens the Video settings menu. See Video options.

Flash Mode – Allows you to set the flash mode.






Video options

You can make adjustments to optimize your video. The following options are available when you touch **Settings**  on the viewfinder screen:

- ▶ **Video size** : Allows you to select the video size for the video. Choose from Full HD (1920x1080), HD (1280x720), TV (720x480), VGA (640x480), QVGA (320x240) (MMS), QCIF (176x144) (MMS)
- ▶ **White balance** : Improves color qualities under different lighting conditions. Choose from Auto, Incandescent, Sunny, Florescent, and Cloudy.
- ▶ **Color effect** : Applies artistic effects to videos. Choose from None, Mono, Sepia, and Negative.
- ▶ **Audio recording** : Allows you to select if you want to record audio for the video. Choose from On or Mute.
- ▶ **Auto review** : Allows you to briefly view the video after taking it. Choose from Off, On, 2 sec, or 5 sec.

- ▶ **Storage** : Allows you to select where to store your videos. Choose from Internal memory or SD card.

Recording a quick video

1. Open the **Camera** application.
2. Slide the **Mode Switch** icon  down to change to Video mode. The camera Mode Switch icon changes to  and **Capture** changes to .
3. The Video camera's viewfinder will appear on the screen.
4. Hold the phone horizontally and point the lens toward the subject of the video.
5. Touch **Capture**  once to start recording.
6. The record dot at the bottom of the viewfinder turns red and the video length timer begins counting.
7. Touch  on the screen to stop recording.

After recording a video

If **Auto review** is set to On, a still image representing your video will appear on the screen until you touch an option or icon to proceed.

NOTE Simply touch the screen to redisplay the video options if they recede from the screen.

The following options are available if **Auto review** is set to On.

NOTE If **Auto review** is set to Off, these options can be accessed while viewing the video in the **Gallery** application.

Play Touch to play the video you just recorded.

Share Touch to share your video using **SmartShare**, **Backup Assistant+**, **Bluetooth**, **Email**, **Gmail**, **Messaging** or **YouTube**. Choose one of the Share options, then complete as necessary.

Rename Touch to edit the name of the selected video. Enter the name, then touch **OK**.



Touch to delete the video you just made, and confirm by touching **OK**. The viewfinder will reappear.

Touch to shoot another video right away. Your current video will be saved in your Gallery.

Touch to view the Gallery of your saved videos.

Watching your saved videos


1. In the viewfinder, touch the image thumbnail at the bottom right corner of the Camera screen.
2. Your video will appear on the screen.
3. Touch the play icon to play it automatically.

Your Photos and Videos

Adjusting the volume when viewing a video

To adjust the volume of a video while it is playing, use the **Volume Keys** on the left side of the phone.

Setting a photo as wallpaper

1. Touch the photo you want to set as wallpaper to open it.
2. Touch **More**  > **Set as** > **Wallpaper**.
3. Crop the photo, if necessary, then touch **Save**.

Gallery

Opening Gallery and Viewing Your Albums

Open the **Gallery** application to view albums of your pictures and videos.

To open Gallery and view your albums

- ▶ From the Home Screen, touch the **Apps Key**  > **Gallery** .

OR



- ▶ Open Gallery from the **Camera** application by touching the thumbnail image at the bottom right corner of the screen.

The **Gallery** application presents the pictures and videos saved in your phone, including those you've taken with the **Camera** application and those you downloaded from the web or other locations.

If you have a Picasa™ account synchronized with one of your phone's Google™ Accounts, you'll also see your Picasa web albums in your Gallery.


Gallery Views

When you open the **Gallery** application from the applications screen, it displays the Main Gallery in Album view.

- ▶ Touch the **Calendar view switch**  to switch from the Main Gallery to Calendar view.
- ▶ Touch an album in the Main Gallery to open that album in Grid view.
- ▶ Drag the **Album view switch**  to the right return the images to stack view (from Grid view) and drag the switch to the left to return the images to grid view (from Stack view).





Main Gallery Calendar View Album in Stack View Album in Grid View


- ▶ Touch an album to open it and view its contents.
The pictures and videos in the album are displayed in random order (except from Camera).
- ▶ Touch a picture or video in an album to view it.
- ▶ Return to the main Gallery screen by touching the **Gallery icon**  at the top left corner or the screen.

Working with Albums


Albums are groups of images and videos in folders on your microSD card and in Picasa web albums.

To open an album and view its contents

- ▶ From the Home Screen, touch the **Apps Key**  > **Gallery**  and touch the album whose contents you want to view.

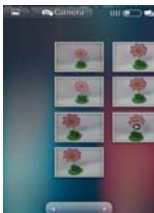


Album in Grid View

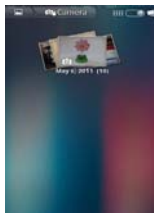


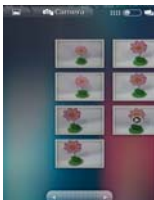
Album in Stack View

- ▶ In Album grid view, use the slider bar at the bottom of the screen to scroll horizontally through your pictures and videos.
- ▶ In Album grid view, you can also scroll through an album by swiping the screen left or right.
- ▶ In Album stack view, the date of the images in view is displayed, so you can scroll by date.
- ▶ In Album stack view, you can use the spread gesture to quickly cycle the images in the stack between your two fingertips.

To change how the contents of an album are displayed

You can view the images and videos in your albums in a random grid (except from Camera) or in stacks, sorted by the date and the location where they were taken. You can switch album views with the **Album view switch**  at the top right of the screen.

- ▶ Drag the **Album view switch**  to the right to view the contents of the album in stacks.



Album in Grid View



Album in Stack View

- ▶ Drag the **Album view switch**  to the left to view the album contents in a chronological grid (except from Camera) again.


Pinch peek

While browsing your images in stacks (in the Main Gallery view or Album stack view), you can use a spread gesture to open up the contents of an image stack. Photos contained within that stack are then smoothly cycled between your two fingertips.



To switch to calendar view




Calendar view displays a calendar with your thumbnail images displayed on the date(s) you took pictures making it quick and easy to find pictures taken on a specific day (e.g., a holiday).

You can switch to calendar view from the Main Gallery view by touching the **Calendar view switch** .

- ▶ Slide your finger left or right on the screen to scroll sequentially month by month.
- ▶ Touch the Month tab at the top of the screen to go to a specific date. Use the Date wheel to scroll to the month and year you want, then touch **Set**.

To Work with Batches of Pictures or Videos

In addition to working with whole albums and with individual pictures, you can select one or more pictures or videos in an album to work on them in batches. For example, to send a few pictures from an album to a friend.





1. From the Home Screen, touch the **Apps Key**  > **Gallery** .
2. Open the album that contains the pictures and videos you want to work with as a batch.
3. Touch the **Menu Key** .
4. Touch the pictures you want to work with to checkmark them. Touch a checkmarked item to remove the checkmark.

You can checkmark all items or remove all checkmarks, by touching **Select All** or **Deselect All** at the top of the screen.





5. Touch **Share**  or **Delete** , then complete as necessary.

To share an album

You can share the entire contents of one or more albums or individual images or videos from an album.





1. From the Home Screen, touch the **Apps Key**  > **Gallery** .
2. Touch the **Menu Key** .
3. Checkmark or uncheckmark the album(s) you want to share.
4. Touch **Share**  at the bottom left corner of the screen and touch the application you would like to use to share the selected albums.
5. Enter the necessary information and share it.

To get details about an album

1. From the Home Screen, touch the **Apps Key**  > **Gallery** .
2. Touch the **Menu Key** .
3. Checkmark or uncheckmark the album(s) you want to see details about.
4. Touch **More**  at the bottom right corner of the screen, then touch **Details** in the dialog box.

To delete an album



You can delete an album and its contents from your microSD card.

1. From the Home Screen, touch the **Apps Key**  > **Gallery** .
2. Touch the **Menu Key** .
3. Checkmark or uncheckmark the album(s) you want to delete.
4. Touch **Delete**  at the bottom center of the screen. Touch **Confirm Delete** in the dialog box.

Working with Pictures

Use the **Gallery** application to view pictures that you've taken with the **Camera** application, downloaded, copied onto your microSD card or that are stored in Picasa web albums.

To view and browse pictures



1. From the Home Screen, touch the **Apps Key**  > **Gallery** .
2. Open an album, then touch a picture.




- ▶ Turn the phone to view the picture in vertical (portrait) or horizontal (landscape) orientation. The picture is displayed (but not saved) in the new orientation.

- ▶ Touch the picture to view navigation, zoom, and other control buttons.
- ▶ To zoom, touch a zoom icon (+ or -), use the pinch-to-zoom method, or just double-tap the screen.
- ▶ When the picture is zoomed in, you can drag the picture to view parts that are not in view.
- ▶ When the picture is zoomed to fit in the window, drag left or right to view the next or previous picture in the album.

To watch a slideshow of your pictures

- ▶ While viewing a picture, touch the screen to view the control buttons then touch **More**  > **Slide show**.
- ▶ Touch the screen, or touch the **Back Key** , to end the slideshow.


To rotate a picture

1. Touch a picture you want to rotate.
2. Touch **More** . A dialog box opens with tools for working with the picture.



3. Touch **Rotate Left** or **Rotate Right**.
The picture is saved with the new orientation.


To use a picture as a contact icon or as Home screen wallpaper

1. Touch the picture you want to use.
2. Touch **More** . A dialog box opens with tools for working with the picture.

3. Touch **Set as**.
4. Touch **Contact icon** to set the picture to identify a Contact entry or touch **Wallpaper** to set the picture as your wallpaper.
 - ▶ If you choose to set the selected picture as a contact icon, the Contacts application will open. Touch the Contact that you want to identify with the picture, then touch **Save**.
 - ▶ If you decide to set the picture as your wallpaper, crop it, if necessary, then touch **Save**.

To crop a picture

You can crop and save pictures that are stored on your microSD card.

1. Touch the picture you want to crop.
2. Touch **More** . A dialog box opens with tools for working with the picture.
3. Touch **Crop**.


The cropping box appears on top of the picture.

4. Use the cropping box to select the portion of the picture to keep; the rest of the photo will be discarded.
 - ▶ Drag from the inside of the cropping box to move it.
 - ▶ Drag an edge of the cropping box to resize it to any proportion.
 - ▶ Drag a corner of the cropping box to resize it with fixed proportions.




5. Touch **Save** to save a copy of the picture as you cropped it. The original uncropped version remains in your phone's memory.

To get details about a picture

1. Touch the picture you want.
2. Touch **More** . A dialog box opens with tools for working with the picture.
3. Touch **Details**.

To delete a picture

You can delete a picture from your microSD card.


1. Touch the picture you want to delete.
2. Touch **Delete** , then touch **Confirm Delete** in the dialog box that opens.

Working with Videos

Use the **Gallery** application to play videos that you've taken with the **Camera** application and to share them with friends.

To play videos



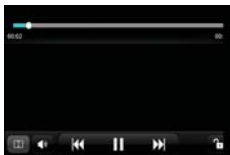

- ▶ Open a Gallery album then touch a video.
The video plays in the orientation you recorded it in.







- ▶ Touch the screen while the video is playing to view the playback controls.

To share a video

You can share your videos in a variety of ways, including sending it by email or multimedia message (MMS), or via SmartShare, or a Bluetooth device. You even have the option to share your videos publicly by uploading it to the YouTube™ website.



1. From the Home Screen, touch the **Apps Key**  > **Gallery** , then touch an album.
2. While viewing an album, touch the **Menu Key** .
3. Touch to checkmark the video(s) you want to share.
4. Touch **Share**  at the bottom left corner of the screen.
5. In the dialog box that opens, touch the application you would like to use to share the selected videos.
6. Enter the necessary information and share it.


To delete a video






1. From the Home Screen, touch the **Apps Key**  > **Gallery** , then touch an album.
2. While viewing an album, touch the **Menu Key** .
3. Touch to checkmark the video(s) you want to delete.
4. Touch **Delete**  at the bottom center of the screen.
5. Touch **Confirm Delete**.



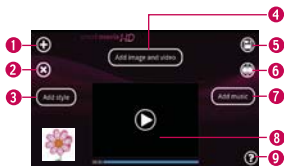




Video Producer

You can make your own movie using your images/video and music.

1. From the Home Screen, touch the **Apps Key**  > **Video Producer** .
2. Select the desired options to create a movie.



- 1 Add Media**  Touch this icon add images and/or video to your movie.
 - ▶ Touch **Images** to add images, then touch the image(s) you want to add.
 - ▶ Touch **Videos** to add video footage, then touch the video(s) you want to add.
 - ▶ Touch **Done**  to exit after all of the media files have been added.
- 2 Delete Media**  Touch this icon to remove the selected image(s) and/or video(s).
 - ▶ Touch an image or video in the added media contents section, touch **Delete Media** , then touch **Delete selected** (or **Delete all**).
- 3 Add Style** Touch this icon to select the desired movie style.
 - ▶ Touch the up or down arrow to scroll through and select the style you want.
- 4 Added Contents** Displays all of the selected image(s) and/or video(s) for your movie.
 - ▶ Swipe left and right to scroll through all of the files you've added.
- 5 Save**  Touch this icon to save the movie file.




- 6 **Edit**  Touch this icon to edit the movie file.
 - ▶ Swipe left and right to select the footage to edit.
 - ▶ Touch the **Overlay Text** icon  to insert text.
 - ▶ Touch the **Overlay Image** icon  to insert selected graphic(s).
 - ▶ Touch the **Trim Video** icon  to trim segments from your video footage.
 - ▶ Touch the **Done** icon  to exit when you're finished editing.
- 7 **Add Music** Touch this button to set the background music.
- 8 **Preview**  Touch this icon to play your movie.
- 9 **Help**  Touch this icon to view information on how to use the **Video Producer** application.

Market

Opening Android Market and Finding Applications

Open the **Android Market** application to browse and search for free and paid applications.

To open the Android Market application

- ▶ From the Home Screen, touch the **Apps Key**  > **Market**  or touch the **Market icon**  from the Home screen.

When you open the **Android Market** application for the first time, you must read and accept the terms of service to continue.



To get help with Android Market

Android Market Help web pages are available from all of the Android Market screens.

- ▶ Touch the **Menu Key**  > **Help** .

The **Browser** application opens to the Android Market Help page, with links to many help topics.

To browse for applications

You can browse applications by category and sort them in different ways.

1. On the Android Market homepage, touch a category along the left side of the screen, which include **Apps**, **Music**, **Books**, and **Movies**. The **Games** category is displayed to the right of these categories.
2. Swipe horizontally across the screen. The subcategories bar is displayed near the top of the screen to identify the content. Scroll through the choices, then touch the one you want to explore.



Touch the right or left side of the subcategories bar to scroll the screen.

3. Touch an application to open its details screen.

 




To open a screen with details about an application

- ▶ At any time while browsing through Android Market, touch an application to open its details screen.


The Application details screens include a description, ratings, comments, and related information about the application. From this screen, you can download, install, uninstall, rate the application, and more.

To search for applications

1. Touch the **Search Icon**  at the top right of the screen or touch the **Search Key** .
2. Enter all or part of an application's name or description, or the developer's name you want to search for, then touch **Search**  next to the search box or touch the Search button on the keypad.
3. Touch a search result to open that application's details screen.

To return to the Android Market home page

You can return directly to the Android Market homepage from most other screens in Android Market.

- ▶ Touch the **Market icon**  at the top left corner of the screen.

Downloading and Installing Applications

When you find an application you want, you can install it on your phone.

To download and install an application

NOTE Before you can download a paid application, you must set up a billing arrangement.

1. Find an application you want and open its details screen.

In the application's details screen, you can read more about the application, including its cost, overall rating, and comments by users. Scroll down to the Developer Info section to view more applications by this developer, visit the developer's website, or send the developer an email message.



Download button

2. Touch **Download** or **Install** (for free applications) or the **Price** button (for paid applications).

The screen will display if the application requires access to your data or control of any functions on your phone. The Market application tells you what it can access if you continue with the download.

WARNING!

Read this screen carefully. Be especially cautious with applications that have access to many functions or to a significant amount of your data. Once accept on this screen, you are responsible for the results of using this item on your phone.

3. If you agree to the application's access requirements, touch **Accept & Download** (for free applications) or **Accept & buy** (for paid applications.)

- ▶ If you selected a paid application, you're redirected to the Google™ Checkout screen to pay for the application before it's downloaded to your phone.
- ▶ If you selected a free application (or after touching **Accept & buy** in Google Checkout), you receive a series of notifications as the application is downloaded and then installed on your phone.

When the application is installed, you can touch the notification to open the application or open it by touching its icon in the Applications screen.

If you have another Android™ phone, you can download a paid application to that phone using the same Android Market account, at no additional charge.

To create a Google Checkout account

You must have a Google Checkout account associated with your Google Account to purchase items from Android Market.

- ▶ On your computer, go to <http://checkout.google.com> to establish a Google Checkout account.

OR

- ▶ The first time you use your phone to buy an item from Android Market, you're prompted to enter your billing information to set up a Google Checkout account.

WARNING!

After you've used Google Checkout once to purchase an application from Android Market, the phone remembers your password, so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission.

Music

Transferring Music Files to Your Phone

The **Music** application plays audio files that are stored on your phone's microSD card. Copy audio files from your computer onto the microSD card before you open the **Music** application.

NOTE The LG USB driver needs to be installed on your PC before connecting your phone to transfer music.

To copy music files onto the phone's microSD card

1. Connect the phone to your computer with a USB Cable. If the default connection mode is not set to **Mass storage**, open the Notifications panel and touch **USB connected > Mass storage**. Your computer will prompt you with different actions to take. Choose to open the folder to view files.
 - ▶ Use the computer to organize your audio files, then create a music folder at the top level of the microSD card.
2. Use the computer to copy music and other audio files into the folder that you created on the microSD card.

- ▶ You can use subfolders on the microSD card to organize your music files or you can simply copy the audio files to the top level of the microSD card.
3. Open the Notifications panel and touch **USB connected > Charge only**. Then disconnect the USB Cable from the phone.

Opening Music and Working with Your Library

After you've copied some music onto your microSD card you can open the **Music** application and view your library of music files, sorted in one of six ways.

To open Music and view your music library


- ▶ From the Home Screen, touch the **Apps Key**  > **Music Player** .

The **Music Player** application searches the microSD card for music files you copied to your card, then builds a catalog of your music based on the information contained in each music file. This can take from a few seconds to several minutes, depending on how many files you have copied onto the microSD card.

When the catalog is complete, the Music library screen opens with tabs at the top of the screen that you can touch to view your music library organized by Songs, Albums, Artists, Playlists, or Folders.



To search for music in your library

1. Open the main Library screen then touch the **Search Key** .
2. Start typing the name of the artist, album, or track you're looking for. Matching songs are displayed in the list below the search box.
3. Touch a matching song to play it or touch a matching album or artist to view a list of associated songs.

To delete a song from the microSD card

You can delete music from the storage card.

- ▶ Touch and hold a song in a Library list. In the Context menu that opens, touch **Delete**.

OR

- ▶ On the Playback screen, touch the **Menu Key**  > **Delete** .

You can also delete music files from the microSD card when your phone is connected to the computer. To do this, browse for the music files you want to delete and delete them from the folder.



Playing Music

You can listen to music using the phone's built-in speaker, through a wired headset, or through a wireless Bluetooth stereo headset that supports the A2DP profile.

To play music

- ▶ Touch a song in your library to listen to it.

OR

- ▶ While viewing a list of tracks in an album, touch the **Menu Key**  > **Play all** .

The Playback screen opens and the song you touched or the first song in the album or other playlist starts to play. Your music continues to play even when you switch applications or receive a phone call. The tracks in the current playlist play in order until it reaches the end, then stops. If you choose a repeat option, playback only stops when you stop it.












You can return to the Playback screen from most other screens in the **Music Player** application by touching the currently playing song at the bottom of the screen.

You can return to the Playback screen from any other application by opening the Notifications panel and touching the ongoing music notification.

To control playback

The Playback screen contains several icons that you can touch to control the playback of songs, albums, and playlists:

	Touch to pause playback.
	Touch to resume playback.
	Touch to skip to the next track in the album, playlist, or shuffle.
	Opens the Volume window to control the Media volume.
	Touch to restart the current track or skip to the previous track in the album, playlist, or shuffle.
	Touch to open the current playlist.
	Touch to play the current playlist in shuffle mode (tracks are played in random order).
	Touch to set repeat mode to repeating all songs, repeat current song, or repeat off.
	Touch to set the Dolby Mobile setting, which enhances your music listening.






To control playback volume

In addition to the techniques for setting media volume, you can control the volume of music in the **Music Player** application.

- ▶ Press the phone's up/down **Volume Keys**.
A panel opens to show the current media volume.
Some headsets include their own volume controls or ways to pause and resume playback or to skip tracks.

To play your tracks in a party shuffle

When you turn on Party shuffle, the **Music Player** application plays tracks from your microSD card in random order until Party shuffle is turned off.

- ▶ In a Library screen, touch the **Menu Key**  > **Party shuffle** .
The **Music Player** application creates a playlist of tracks selected randomly from your microSD card and starts playing them.
- ▶ View the current playlist that Party Shuffle is playing by touching the **Playlist icon**  on the Playback screen.
- ▶ Add a track to the end of the Party Shuffle playlist by touching and holding the name of a track in your library. In the Context menu that opens, touch **Add to playlist** > **Current playlist**.
- ▶ To stop Party Shuffle, touch the **Menu Key**  > **Party shuffle off** .

To customize settings in the Playback or a Library screen


Touch the **Menu Key**  > **More**  > **Settings** in a Playback. Touch the **Menu Key**  > **Settings**  in a Library screen.

- ▶ **Show notification** Shows the controller on the Notification Bar.
- ▶ **Sleep timer** Turns off the player automatically. Touch the following options to apply sleep timer: **Off**, **After 10 minutes**, **After 20 minutes**, **After 30 minutes**, **After 1 hour**, **After 2 hours**
- ▶ **Dolby Mobile** Applies the following sound effect (Dolby) options: **Off**, **Neutral**, **Expansive**, **Bass Boost**, **Treble Boost**, **Vocal Boost**.

NOTE This is only available when an ear jack is plugged in.

Landscape view

When holding the phone in landscape orientation, the **Music Player** application screen changes to fit the screen as shown below:

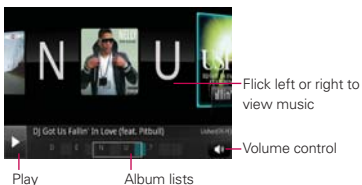


To use a song as a ringtone

You can set a song to be used as your phone ringtone in place of one of the ringtones that come with the phone.

- ▶ Touch and hold a song in a Library list. In the Context menu that opens, touch **Use as ringtone**.

OR

- ▶ On the Playback screen, touch the **Menu Key**  > **More**  > **Use as ringtone**.

NOTE This adds the song to your ringtone list. Access the **Contacts** application to set it for a specific Contact entry.

Working with Playlists




You can create playlists to organize your music files into sets of songs, which you can play in the order you set or in a shuffle.

To create a playlist

1. Open the **Music Player** application and touch the **Playlists** tab
2. Touch **New playlist**.
3. Enter a name for the playlist and touch **Save**.

The new playlist is added to the Playlists library.

To add a song to a playlist

1. While viewing a list of tracks in the Library, touch and hold a song to display a Context menu.
2. Touch **Add to playlist**.
3. Touch the name of the playlist to add the song to.
You can also add the song that is playing in the Playback screen to a playlist by touching the **Menu Key**  > **Add to playlist**  or touching  > **Save as playlist** to save all the songs in the current playlist as a playlist.

To remove a song from a playlist





1. Open a playlist.
2. Touch and hold the song you want to remove then touch **Delete** in the Context menu that appears.

To delete or rename a playlist

1. Open the Playlist library.
2. Touch and hold the playlist to display a Context menu.
3. Touch **Delete** > **OK** or **Rename** > enter new name > **Save**.

SmartShare







To turn SmartShare on and allow sharing contents

1. From the Home Screen, touch the **Apps Key**  > **SmartShare** .
2. Touch the **Menu Key**  > **Settings** .
3. Mark the settings checkbox(es) as necessary.
 - ▶ Touch the **Discoverable** checkbox to enable (checkmark) the setting to allow your device to be visible to other devices.
 - ▶ Touch the **Always accept request** checkbox to enable (checkmark) the setting to automatically accept sharing requests from other devices.
 - ▶ Touch the **Receive files** checkbox to enable (checkmark) the setting to automatically allow upload files to your phone from other devices.
4. Under the My shared contents section, touch to checkmark the types of content you would like to share. Choose from **Pictures**, **Videos**, and **Music**.
5. SmartShare is now activated and ready to share contents.

To share contents from the remote content library to other devices


Allows your renderer device (e.g., TV) play multimedia contents from your remote content library (e.g., PC).

NOTE Make sure that the DLNA functionality of your devices is properly configured (e.g., TV and PC).

1. From the Home Screen, touch the **Apps Key**  > **SmartShare** .
2. Touch **To**  at the top right of the screen and select the device from the renderer device list.
3. Touch **From**  at the top left of the screen and select the device from the remote content library.
4. You can browse the content library.
5. Touch a content thumbnail or touch the **Menu Key**  > **Play** .

To share contents from your phone to your renderer device (e.g., TV)




NOTE Make sure that your renderer device is properly configured.

1. While browsing your pictures or videos using the **Gallery** application, touch and hold a file to enable multiple file selection, then checkmark each file you want to share.
2. Touch **Share** , then touch **SmartShare**.
3. **SmartShare** is automatically launched with the selected files.
4. Select the device from renderer device list to play the files.

NOTE The procedure steps are the same regardless of the application source or file type. Follow the same steps to share music files using the Music Player, to share pictures from the Gallery, and to share video files using the Video Player.

- NOTICE**
- Check that your device is connected with your home network using a Wi-Fi connection to use this application.
 - Some DLNA enabled devices (e.g., TV) support only the DMP feature of DLNA and will not appear in the renderer device list.
 - Your device might not be able to play some contents.




To download contents from the remote content library

1. From the Home Screen, touch the **Apps Key**  > **SmartShare** .
2. Touch **From**  at the top left of the screen and select the device from the remote content library.
3. You can browse the content library.
4. Touch and hold a content thumbnail, then touch **Download** in the Context menu.

NOTICE Not all content types are supported.

To upload contents from the remote content library

NOTE Make sure that the microSD card is correctly mounted and the **Receive files** checkbox is marked in the SmartShare settings menu.

1. From the Home Screen, touch the **Apps Key**  > **SmartShare** .
2. Touch **From**  at the top left of the screen and select **My phone** in the remote content library.
3. You can browse the content library.
4. Touch and hold a content thumbnail and touch **Upload** in the Context menu.

5. Select a remote content library device to upload the selected content.



NOTICE Some DLNA enabled devices do not support DMS upload functionality and will not be uploaded. Not all content types are supported.

Video Player

You can play a wide variety of videos using the Video Player. The Video Player supports the following file formats: 3gp/3g2, mp4/m4v, avi, wmv, mov, mkv, flv, asf, divx (Codec: MPEG4, H.263, Sorenson H.263, H.264, VC-1, DivX/XviD).








- ▶ Supported file formats are dependent on the software version of the phone.

To open the Video Player application

1. From the Home Screen, touch the **Apps Key**  > **Video Player** .
2. Touch the video you want to play.

Playback controls






Touch the screen to display the playback controls. The following options allow you to control the video playback:

	Pause playback.
	Play a video file.
	Touch and hold to fast-forward playback.
	Touch to start playing the video from the beginning. Touch and hold to rewind playback.
	Touch to activate or deactivate the Dolby Mobile setting, which enhances your music listening.
	Touch to display a slider bar to increase or decrease the media volume.
	Touch to lock the Video Player screen so that the video playback controls are not displayed when the screen is touched.

NOTE • You can also flip the device over to pause the video playing. This is only available when the **Pause** option is checked in the Gestures menu.

Video Player list options

The following options are available from the Video Player list screen:


- ▶ **Storage** Touch the **Menu Key**  > **Storage** , then select **Backup Assistant Plus** or **Device**.
- ▶ **Delete** Touch the **Menu Key**  > **Delete** , then touch each video to delete. When all files to be deleted have been checkmarked, touch **Delete** > **OK** to confirm.
- ▶ **DivX VOD** Touch the **Menu Key**  > **DivX(R) VOD Register DivX** before using this video on demand feature.


YouTube™

Opening YouTube and Watching Videos

You can browse, search for, view, upload, and rank YouTube videos on your phone with the **YouTube** application.

To open the YouTube application

- ▶ From the Home Screen, touch the **Apps Key**  > **YouTube** .



Touch a video to watch it or touch the **Menu Key**  to take other actions on the video.



To watch and interact with YouTube videos






- ▶ Touch a video to play it.



- ▶ Touch the screen to view the Playback controls. You can pause and play the video or drag the slider to the point in the video you want to watch.
- ▶ Touch the **Back Key**  to stop playback and return to the videos list.
- ▶ Touch the **Menu Key**  for the following options: **Home**, **Browse**, **Search**, **My Channel**, **Upload**, and **Settings**.

For details about these features, visit the YouTube website.

To search for videos




1. Touch the **Search icon**  at the top of the YouTube screen, touch the **Search Key** , or touch the **Menu Key** , then touch **Search**.
2. Enter the text to search for or touch the **Microphone Icon**  to search by voice.
3. Touch a suggestion below the search box or touch the **Search Icon** .
4. Scroll through the search results and touch a video to watch it.

To share your videos on YouTube

You can record and share a video using the **YouTube** application. First, you must create a YouTube account and sign into it on your phone.

You can also share the videos you record with the **Camera** application by uploading them to YouTube.

1. Touch the **Record video icon**  at the top right of main YouTube screen.

2. If you want to set any configurations manually, touch the screen to open the video camera settings.
3. Point the lens to frame the scene where you want to start.
4. Touch the **Record** icon  to start recording.
5. Touch the **Stop** icon  to stop recording.
6. Touch the **Upload** icon .





The YouTube Upload details screen is displayed.

7. Enter a title, description, and tags for your video.
8. If you want to share the video with everyone, touch the **Privacy** field and then touch **Public**. If not, touch **Private**.
9. Touch **Upload**.



Voice Recorder


The **Voice Recorder** application records audible files for you to use in a variety of ways. Use your recordings to simply remind you about something you don't want to forget (like a grocery list) or record sound effects that you can attach to a message or set as a ringtone for calls.


Record a Voice Memo

1. From the Home Screen, touch the **Apps Key**  > **Voice Recorder** .
2. Touch **Record**  at the bottom center of the screen to start recording.
3. Speak into the microphone.
4. When you're finished, touch **Stop**  at the bottom right of the screen.




The recording is automatically saved to your recordings list.

- ▶ Touch **Play**  at the bottom right of the screen to listen to your recording.
- ▶ Touch **Record**  at the bottom center of the screen to record a new voice memo.

- ▶ Touch **List**  at the bottom left of the screen to view your list of recordings.









NOTE Touch the **Menu Key**  on the Voice Record screen, then touch **Storage** to designate where the audio file will be stored or touch **MMS mode** (or **General Mode**) to set the audio file size mode.

Play a Voice Memo

1. From the Home Screen, touch the **Apps Key**  > **Voice Recorder** .
2. Touch **List**  at the bottom left of the screen.
3. Touch the voice memo you want to play.

NOTE You can send the voice memo to others by touching and holding a voice memo and touching **Share**.

Managing your Voice Memos

1. From the Home Screen, touch the **Apps Key**  > **Voice Recorder** .
2. Touch **List**  at the bottom left of the screen.
3. Touch the **Menu Key**  for the following options.
 - ▶ Touch **Sort by**  to choose how to display the list, either by date or by name.
 - ▶ Touch **Share**  to send via Backup Assistant+, Bluetooth, Email, Gmail, Messaging, or other compatible applications you have downloaded.
 - ▶ Touch **Delete**  to delete voice memo(s). Touch the voice memo(s) to delete and then touch **Delete** > **OK**.
 - ▶ Touch **Delete all**  to delete all of the voice memos in the list and touch **OK** to confirm.

Calendar

Viewing Your Calendar and Events

Open the **Calendar** application to view events you've created or that others have invited you to.



When you first set up your phone, you configured it to use an existing Google Account or you created a new account. The first time you open the **Calendar** application on your phone, it displays any existing calendar events from your Google Account on the web.

You can add additional accounts with Google Calendar or Microsoft Exchange calendars to your phone, and configure them to display in Calendar.

When you first set up the **Calendar** application to synchronize events on your phone, it includes events from the previous month through one year in the future. Subsequently, Calendar keeps a year's worth of future events synchronized between your phone and the web, plus any later events that you add to your calendar using Calendar on your phone.

NOTE If you have a lot of entries in your Calendar, you can use the Pinch-to-zoom gesture in Agenda view to compress your calendar entries into task bars to get an overall view. Use the spread gesture to expand your calendar entries to the normal view.

To open the Calendar application

- ▶ From the Home Screen, touch the **Apps Key**  > **Calendar** .

Events from each account you've added to your phone and configured to synchronize calendars is displayed in Calendar.

Events from each calendar account are displayed in a different color.


To change your calendar view








- ▶ Touch the **Month** tab , the **Week** tab , the **Day** tab  or the **Agenda** tab  above the calendar.

Each view displays the events in your calendar for the period of time specified.

- ▶ To view more information about an event in the Agenda, Day, or Week view, touch the event.
- ▶ To view the events of a day in Month view, touch a day. The event will be displayed below the calendar. Touch the event to view its details.

Using the Calendar Options menu

From any of the Calendar views, touch the **Menu Key**  to access the following menu options:


- ▶ Touch **Go to**  to go directly to a specific calendar date.
- ▶ Touch **Search**  to search for a Calendar event or text within an event.
- ▶ Touch **Sync now**  to sync all of your Calendar accounts.
- ▶ Touch **New event**  to create a new Calendar event.
- ▶ Touch **Calendars**  to access your Calendar accounts.
- ▶ Touch **Settings**  (in Month, Week, and Day view only) to customize how you use your Calendars.
- ▶ Touch **More**  (in Agenda view only) to select **Delete** and **Settings** for the Agenda calendar.

Working in Agenda View

Agenda view is a list of your events in chronological order by day. A week's worth of events is displayed. To show earlier Agenda events, touch **Tap to look for more** at the top of your agenda list. To show later Agenda events touch **Tap to look for more** at the bottom of your agenda list. All-day and multi-day events are listed at the start of each day.

To switch to Agenda view

- ▶ Touch the **Agenda** tab above the calendar.

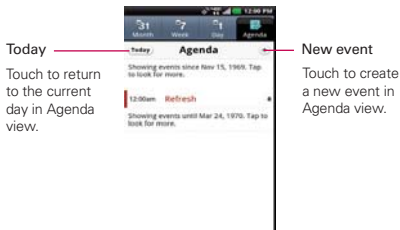

To learn more about events in Agenda view

- ▶ Touch an event.


A screen with details about the event opens.

Working in Day View

Day view displays a list of the events of one day, in a table of one-hour rows. The current time will be designated as a horizontal red line. If it's a day of commemoration (e.g., a holiday) it is listed below the current date. All-day and multi-day events are displayed at the top. Part of the title of each event is displayed in the row that corresponds to when it occurs.

To switch to Day view


- ▶ Touch the **Day** tab above the calendar.

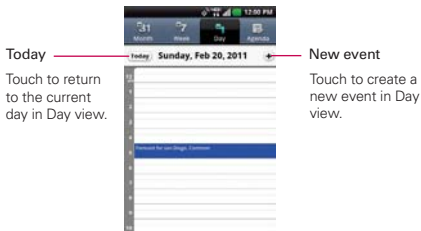

To learn more about events in Day view

- ▶ Touch an event to view its details.
- ▶ Touch and hold an event to open a Context menu to view, edit, delete, or copy the event. Also allows you to create another new event in the same time slot for juggling multiple events.

To add an event in Day view

- ▶ Touch and hold an empty spot or an event in the day to open a Context menu then touch **New event** to create a new event at that time.
- ▶ Touch the **New event** icon  at the top right side of the screen.

Working in Week View

Week view displays a chart of the events of one week. All-day and multi-day events are displayed at the top. The current time is designated as a horizontal red line. Commemoration days (e.g., holidays) are listed below the day and date.

To switch to Week view

- ▶ Touch the **Week** tab above the calendar.

Today

Touch to return to the current day in Week view.




New event

Touch to create a new event in Week view.

To learn more about events in Week view

- ▶ Touch an event to view its details.
- ▶ Touch and hold an event to open a Context menu to view, edit, or delete the event. Also allows you to create another new event in the same time slot for juggling multiple events.

To add an event in Week view


- ▶ Touch and hold an empty spot or an event in the week to open a Context menu then touch **New event** to create a new event at that time.
- ▶ Touch the **New event** icon  at the top right side of the screen.

Working in Month View

Month view displays a chart of the events of the month. Segments of each day with scheduled events are green in the day's vertical bar.

To switch to Month view

- ▶ Touch the **Month** tab above the calendar.

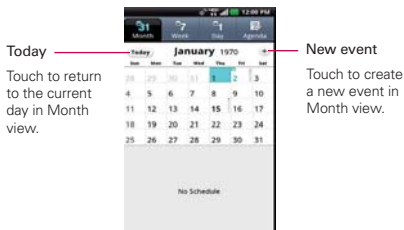

To view more information about events in Month view

- ▶ Touch a day to display the events below the calendar. You can then touch the event to view more information about it.

To add an event in Month view


- ▶ Touch the **New event** icon  at the top right side of the screen.



Viewing Event Details

You can view more information about an event in a number of ways, depending on the current view.

To view information about an event

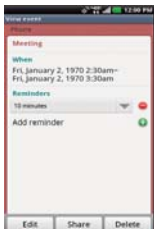- ▶ In Agenda, Day, or Week view, touch an event to view its details.
- ▶ In Month view, touch a day to display the events below the calendar. Then touch an event to view its details.





Touch the **Reminders** field to change reminder settings, touch **Add reminder**  to add another reminder, or touch **Remove reminder**  to remove the reminder.

If you have permission to change events, you can touch **Edit** to edit the event, touch **Delete** to delete the event, or touch **Share** to share it.

Creating an Event

You can use the **Calendar** application on your phone to create events that appear on your phone and in Google Calendar on the web.

To create an event

1. In any Calendar view, touch the **Menu Key**  > **New event**  to open an Event details screen for a new event.

You can also touch and hold a spot in Day or Week view. In the Context menu that opens, touch **New event** to open the Event details screen with that day and time already entered.

2. Add details about the event.



Enter a name, time, and optional additional details about the event.

If you have more than one calendar, you can choose the calendar to which to add the event.

Touch **Add reminder**  to add more reminders.

3. Invite guests to the event.

In the **Guests** field, enter the email addresses of everyone you want to invite to the event. Separate multiple addresses with commas (,). If the people to whom you send invitations use Google Calendar, they'll receive an invitation in Calendar and by email.

4. Touch the **Menu Key**  > **Show extra options**  to add details about the event.
5. Touch **Save** to save the event.

The event is added to your calendar.



Editing or deleting an event

You can edit or delete an event that you created on the phone or on the web. You can also edit or delete events created by others, if they have given you permission.

To edit an event

1. Touch an event to view its details.
2. Touch **Edit**.

The Event Details screen opens.

3. Touch the **Menu Key**  > **Show extra options**  to add or edit additional event details.
4. Make your changes to the event.
5. Touch **Save** to save the event.

To delete an event

There are a number of ways to delete an event.


- ▶ In Agenda view, touch an event to view its details. Touch **Delete** > **OK**.
- ▶ In Day, Week, or Month view, touch and hold the event > **Delete event** > **OK**.

If the event repeats, you're asked whether you want to delete just that occurrence, this and all future occurrences, or all past and future occurrences in your Calendar.

Setting an Event Reminder

You can set one or more reminders for an event, whether or not you created the event or have permission to edit its other details.

To set an event reminder

1. Touch an event to view its details.
2. If no reminder is set, touch **Add reminder**  to automatically add a reminder for 10 minutes before the event.


If a reminder is already set, touch **Add reminder**  to set more reminders for the event.

3. In the dialog box that opens, touch the length of time before the event that you want to be reminded of it.

When the time comes, you receive a notification about the event.

You can use Google Calendar on the web to configure additional reminder settings.



To delete an event reminder


1. Touch an event to view its details.
2. Touch **Remove reminder**  next to the reminder field.

Calculator

Allows you to perform simple mathematical calculations.

To open and use the Calculator

- ▶ From the Home Screen, touch the **Apps Key**  > **Calculator** .

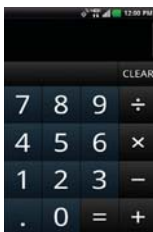

Basic Panel



Advanced Panel



- ▶ Enter numbers and arithmetic operators on the Basic panel.
- ▶ Drag the Basic panel to the left to open the Advanced panel.
- ▶ Touch and hold the Calculator's display to open a Context menu where you can copy what you've entered and access other tools.

- ▶ Touch **Clear** to delete the last number or operator you entered. Touch and hold **Clear** to delete all of the entered information.

Alarm/Clock

You use the **Alarm/Clock** application to access the Alarm, Timer, World Clock, and Stopwatch functions. These functions are accessed through the tabs across the top of the screen.

To open the Clock application


- ▶ From the Home Screen, touch the **Apps Key**  > **Alarm/Clock** .
- ▶ Touch the **Alarm** tab at the top of the screen if necessary.

Setting Alarms

You can set an alarm by modifying an existing alarm or by adding a new one.

To set an alarm

1. Touch **New alarm** or touch an existing alarm to modify it.

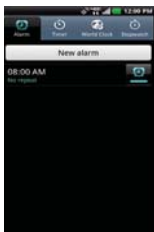

2. Scroll the time wheel to set the alarm time.
 - ▶ Enter the alarm time manually by scrolling the hour (or minutes) field.
 - ▶ Scroll to **AM** or **PM** to set for morning or afternoon.
3. Touch the day(s) when you want the alarm to sound in the **Repeat** field. If you don't touch the Repeat setting, the alarm sounds only the one day you set it.
4. Touch **Snooze duration** to open a dialog box to set the amount of time

to wait before sounding the alarm again if it is not dismissed. You can set the alarm to ring repeatedly from 5 minutes up to 1 hour.

5. Touch **Vibration** to checkmark the setting and have the phone vibrate, in addition to playing the ringtone.
6. Touch **Alarm tone** to select a ringtone for the alarm, then touch **OK**. The ringtone plays briefly when you select it.
7. Touch **Puzzle lock** to checkmark the setting, which requires you to wake up enough to solve a simple puzzle to dismiss the alarm.
8. Touch **Memo** to enter a name for the alarm.
9. When you're finished, touch **Save**.

When the alarm sounds

- ▶ Touch **Stop** or use the gesture feature of simply flipping the device over to stop the alarm.
- ▶ Touch **Snooze** to stop the alarm for the snooze duration you set.

NOTE If **Puzzle lock** is set to On, using the gesture feature of flipping the device over will snooze the alarm instead of turning it off

Setting the Timer

The **Timer** application can be used to alert you with an audible signal when a set amount of time has passed.

1. Open the **Alarm/Clock** application and touch the **Timer** tab.
2. Set the time by scrolling Hour, Minute and/or Second on the time wheel.
3. Touch **Vibrate** to checkmark the setting and have the phone vibrate when the set time expires.
4. Touch **Alert Tone** to select an alert tone for the timer, then touch **OK**.
5. Touch **Start** to begin the time countdown.
6. Once the alarm sounds, touch **Stop** to stop the timer.




Setting the World Clock

This feature allows you to set up a list of cities to easily check current times in other time zones with a quick glance.

1. Open the **Alarm/Clock** application and touch the **World Clock** tab.
2. Touch **New City** and search through the available cities for the one you want.

Using Menu Options

Touch the **Menu Key**  to select the World Clock menu options.

- ▶ Touch **New city**  to select another city for your list.
- ▶ Touch **Delete**  to select a city to delete from your list.
- ▶ Touch **Delete all**  to remove all cities from your list.



Using the Stopwatch

This feature allows you to use your phone as a Stopwatch.

1. Open the **Alarm/Clock** application and touch the **Stopwatch** tab.
2. Touch **Start** to start timing and touch **Stop** to stop the time.
You can use the Lap function by touching **Lap** to record lap times.
3. Touch **Reset** to reset the Stopwatch or **Resume** to resume it.

Polaris Office

Polaris Office 3.0 is a professional Mobile Office Solution which enables users to conveniently view or edit various types of office documents including Word, Excel, and PowerPoint file extensions anywhere, anytime, using their mobile device.

To access this application, from the Home Screen touch the **Apps Key** , then touch **Polaris Office** .

Managing Files

Polaris Office 3.0 provides mobile users with the convenience of managing files including copying, moving, and deleting files and folders right on the device. Local folders are displayed on the main screen for easy access and file selection.

Viewing Files

Mobile users now have the convenience of being able to view a wide variety of file types including Microsoft Office documents, Adobe PDF and images right on their mobile device. When viewing these documents using Polaris Office 3.0, the objects and layout remain unchanged from their original documents.

Editing Microsoft Office Files

Mobile users also have the convenience of being able to create, edit, and save Word, Excel and PowerPoint documents on their mobile device. Saved Documents generated or modified using Polaris Office 3.0, are not distorted from the originals.









ShareGenie

ShareGenie allows you to view, edit, and share files easily. You can send images, videos, music, and documents (including APK files) between other Lucid devices.

- ▶ **Images** You can share image files with ShareGenie using the Gallery application.
- ▶ **Videos** You can watch the videos you've recorded.
- ▶ **Music** Displays the music files you've downloaded in your phone and allows you to listen to them using the applications you choose.
- ▶ **Documents** You can view and edit your documents (Windows Office files including doc, ppt, and xls).

NOTE ShareGenie needs to be On to send and receive files. Wireless networks need to be turned Off while ShareGenie is On.

To open the ShareGenie application

1. From the Home Screen, touch the **Apps Key**  > **ShareGenie** .
2. Touch file type you want to work with in ShareGenie.
 - ▶ **Gallery**  for images.
 - ▶ **Video**  for video files.
 - ▶ **Music**  for music.
 - ▶ **Folder**  for documents.
3. Select the file(s) to send.
 - ▶ Touch each file to checkmark and select individually.
 - ▶ Touch **Select multiple**  at the upper right corner of the screen to display buttons to **Select all** or **Deselect all**.
4. Touch the **Menu Key**  to choose the action to take.
 - ▶ Touch **Send** to select the receiver for the selected file(s).
 - ▶ Touch **Delete** to delete the selected file(s).
 - ▶ Touch **More** to view the file details or adjust the settings.

Settings

The **Settings** application contains most of the tools for customizing and configuring your phone. All of the settings in the **Settings** application are described in this section. For settings specific to the **Browser** application, see the Browser section.

To open the Settings application

- ▶ From the Home Screen, touch the **Menu Key**  > **Settings** .

OR

- ▶ From the Home Screen, touch the **Apps Key**  > **Settings** .

Wireless & networks

The **Wireless & networks** settings allow you to configure and manage wireless radio communications. These settings include Airplane mode.

Airplane mode Checkmark indicates all wireless radio communications are turned off.

Wi-Fi Checkmark to turn on Wi-Fi functionality to connect to available Wi-Fi networks.

Wi-Fi settings

▶ Wi-Fi settings

These settings allow you to set up and manage wireless access points.

Wi-Fi Checkmark to turn on Wi-Fi so you can connect to Wi-Fi networks.

Notify Me Notifies you when Wi-Fi is available when launching applications.

Push button request Touch to configure new wireless networks automatically.

Optimize Wi-Fi usage Touch to set **Automatically turn on Wi-Fi while charging phone** to set the device to automatically turn on Wi-Fi when connected to a power supply **When launching applications**,

connect to known Wi-Fi networks when Wi-Fi is off to set the device to automatically turn on and connect Wi-Fi when applications are launched.

▶ **Wi-Fi networks**

Add Wi-Fi network Allows you to add a Wi-Fi network by entering its Network SSID (the name it broadcasts) and security type.

Wi-Fi Direct settings

▶ **Wi-Fi Direct settings**

Wi-Fi Direct Turn on Wi-Fi Direct

Device Name Allows you to change your device name.

Password Allows you to set the password for the connection with Wi-Fi devices.

Discoverable mode Checkmark to make your device discoverable on other Wi-Fi devices.

▶ **Wi-Fi Direct devices** Displays the available devices on Wi-Fi Direct.

Bluetooth Checkmark to turn on Bluetooth functionality to connect to Bluetooth devices.

Bluetooth settings

▶ **Bluetooth settings**

Bluetooth Checkmark to turn on Bluetooth so you can connect to Bluetooth devices.

Device name Allows you to view and edit the name your phone displays to other Bluetooth devices when trying to pair.

Discoverable Checkmark to make your phone discoverable to other Bluetooth devices for 120 seconds.

Scan for devices Touch to search for and display information about nearby Bluetooth devices.

▶ **Bluetooth devices**

Displays a list of Bluetooth devices that you've previously configured and those detected when the phone last scanned for Bluetooth devices.

Tethering Allows you to configure your phone's mobile data connection to share it via USB.

VPN settings

▶ **VPN settings**

Add VPN Allows you to add different types of Virtual Private Networks (VPNs).

▶ **VPNs** Displays the list of VPNs that you've previously configured.

Mobile networks

▶ **Mobile networks settings**

System select Change the network mode and CDMA roaming mode.

▶ **Data Settings**

Data enabled Checkmark to enable data access over the Mobile network. Remove the checkmark to prevent your phone from transmitting data on any mobile network. This is useful if you are traveling in an area where you do not have a mobile data plan and want to avoid charges for data use on the local carriers' mobile network(s). Disabling this setting does not prevent your phone from transmitting data on other wireless networks, such as Wi-Fi or Bluetooth.

Global data roaming access Allows you to set up data services while roaming.

Network type and strength Allows you to see the current network type and the signal strength.

Access Point Name Allows you to view and manage your Access Points.

Call settings

Use Call settings to configure phone call settings.

Voicemail

Voicemail service Allows you to select your carrier's voicemail service or another service, such as Google Voice™.

Voicemail settings If you are using your carrier's voicemail service, this option allows you to enter the phone number to use for listening to and managing your voicemail. You can enter a comma (,) to insert a pause into the number. For example, to add a password after the phone number. If you are using Google Voice, this opens a screen where you can view the Google Voice number or sign out of Google Voice.

Other call settings

Call forwarding Allows you to enable and disable call forwarding and enter the phone number you want to forward calls to.

Quick text Checkmark to enable or disable the Quick text messages used when you want to ignore a call and send the caller a specified text message response instead.

Quick text settings Allows you to edit, add, and delete the Quick text messages used in place of answering a call.

Show dialpad Allows you to select which type of calls will automatically display the dialpad.

Auto retry Opens a dialog box to enable or disable Auto Retry mode. You can configure the phone to automatically redial a number after a certain amount of time.

TTY mode Opens a dialog box to set TTY mode to communicate with other TTY devices.

Hearing aids Checkmark enables hearing aid compatibility.

DTMF tones Opens a dialog box to set the length of DTMF tones.

Voice privacy Checkmark enables enhanced privacy mode.

Assisted dialing Allows you to configure the Assisted dialing options when you are traveling outside your home country.

Auto answer Checkmark enables Auto Answer with Handsfree.

Sound

Use the Sound settings to configure how and at what volume the phone rings and vibrates when the phone rings, you receive a notification, an alarm sounds, or when you play music or other media with audio, as well as other related settings.

General

Silent mode Checkmark to silence all sounds (including call and notification ringtones) except the audio from music, videos, and other media and any alarms you have set. (You must silence media and alarms in their own applications.)

Volume Opens a dialog box where you can set the volume of ringtones that sound when you receive a phone call or notification, media (music, videos, and so on), and alarms. If you uncheckmark the option to use the same volume for both calls and notifications, you can set the notification ringtone volume independently.

Quiet time Allows you to turn off all sounds except alarms and media between certain periods of time and on desired days.

Incoming calls

Phone ringtone Opens a dialog box where you can select the ringtone to sound when you receive a phone call. Touch a ringtone to listen to it.

Notifications

Notification sound Opens a dialog box where you can select the ringtone to sound when you receive a notification. Touch a ringtone to listen to it.

Ringtone with vibration Allows you to set vibration feedback for calls and notifications.

ERI Sound Checkmark to enable ERI Alert sound.

Feedback

Audible touch tones Checkmark to hear tones when you use the dialpad to dial a number.

Audible selection Checkmark to play a sound when you touch buttons, icons, and other on-screen items that react to your touch.

Screen lock sounds Checkmark to play a sound when the screen is locked or unlocked.

Haptic feedback Checkmark to have the phone vibrate briefly when you touch on-screen buttons and perform other actions.

Emergency tone Opens a dialog box where you can configure how the phone reacts when you place an emergency call.

Display

Use the Display settings to configure brightness and other screen settings.

Brightness Opens a dialog box for adjusting the brightness of the screen. For the best battery performance, use the dimmest comfortable brightness.

Auto-rotate screen Checkmark to automatically switch the orientation of the screen as you turn the phone sideways.

Animation Opens a dialog box where you can set whether you want to enjoy animated transitions for some effects (such as opening menus), for all supported effects (including when navigating from screen to screen), or to use the phone without any optional animation effects (this setting does not control animation in all applications).

Screen timeout Opens a dialog box to set how long to wait after you touch the screen or press a key before the screen darkens. For the best battery performance, use the shortest convenient timeout.

Front key power save Deactivate front key backlight when screen is touched.

Sensor settings

Motion sensor calibration Reset calibration for motion sensor.

Power Saver

Turn Power Saver on Select the level you want to turn on the Power Saver.

Power Saver tips Touch to access some tips for Power Saver.

Power Saving items

Wi-Fi Turn off WiFi

Bluetooth Turn off Bluetooth

GPS Turn off GPS

Animation effect Turn off Animation effect

Battery

Battery use Touch to see the amount of battery used.

Gesture

Gesture settings

Help Displays a guide on using the Gesture feature of your device.

Home screen

Relocation item Press and hold an item and tilt the device to move it to other Home screens.

Incoming call

Mute Flip the device to mute the incoming call.

Alarm

Snooze Flip the device to snooze the alarm.

Video Player

Pause Flip the device to pause the video.

Gallery

Previous/next item Tap on left or right side of the device to move to other items.

Text input field

Move cursor Tap on any side of the device to move the cursor while typing.

Location

Use the Location settings to set your preferences for using and sharing your location when you search for information and use location-based applications, such as Maps.

My location

E911 E911 Location cannot be turned off on any mobile phone. Intended for personal safety in urgent situations, this setting cannot be altered by the user.

Verizon Location Services Checkmark to enable Verizon Wireless and third party authenticated and validated location services to access certain location information available through this and/or the network.

Standalone GPS Services Checkmark to enable your phone's standalone global positioning system (GPS) satellite receiver to pinpoint your location to within an accuracy as close as several meters ("street level"). Actual GPS accuracy depends on a clear view of the sky and other factors.

Google location services Checkmark to use information from Wi-Fi and mobile networks to determine your approximate location, used while searching in Google Maps and other applications. When you checkmark this option, you're asked whether you consent to sharing your location anonymously with Google's location service.

Security

Use the Security settings to configure how to help secure your phone and its data.

Screen unlock

Set up screen lock Opens a set of screens that guides you through drawing a screen unlock pattern or setting a PIN or password.

Security lock timer Opens a dialog box to set the delay before the security lock automatically turns on.

SIM card lock

Set up SIM card lock Opens a screen to set if you want to require a PIN to use the And, if set, allows you to change the PIN.

Passwords

Visible passwords Checkmark to briefly show each character of passwords as you enter them so that you can see what you enter.

Device administration

Device administrators Add or remove device administrators.

Credential storage

Use secure credentials Checkmark to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the secure credential storage, this setting is dimmed.

Install from SD card Touch to install a secure certificate from a microSD card.

Set password Opens a dialog box where you can set or change the password for your secure credential storage. Your password must have at least 8 characters.

Clear storage Deletes all secure certificates and related credentials and erases the secure storage's own password, after prompting you to confirm that you want to do this.

Encryption

Data Encryption Opens a screen that encrypts data on the device for security.


Applications

You use the Applications settings menu to view details about the applications installed on your phone, manage their data, force them to stop, and to set whether you want to permit installation of applications that you obtain from websites and email.

Unknown sources Checkmark to permit installation of applications that you obtain from websites, email, or other locations other than Android Market™.

WARNING!

To protect your phone and personal data, download applications only from trusted sources, such as Android Market.

Manage applications Opens a list of all the applications and other software installed on your phone, along with their sizes. Touch the **Menu**  and touch **Sort by size** to display applications in order by size.

Touch an application to open its Application Info screen.

Running services Allows you to view and control currently running services and applications. This option displays which processes each running service needs and how much memory it's using.

Storage use View storage used by applications.

Battery use Opens the list of items that have been using the battery.

Development Allows you to set options for application development.

▶ Development screen

The Development screen contains settings that are useful for developing Android™ applications. For full information, including documentation of the Android APIs and development tools, see the Android developer website (<http://developer.android.com>).

USB debugging Checkmark to permit debugging tools on a computer to communicate with your phone via a USB connection.

Stay awake Checkmark to prevent the screen from dimming and locking when it is connected to a charger or to a USB device that provides power. Don't use this setting with a static image on the phone for long periods of time, or the screen may be marked with that image.

Allow mock locations Checkmark to permit a development tool on a computer to control where the phone believes it is located, rather than using the phone's own internal tools for this purpose.

Accounts & sync


Use the Accounts & sync settings menu to add, remove, and manage your Google™ and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules and whether all applications can synchronize user data automatically.

Gmail™, Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details.

General sync settings

Background data Checkmark to permit applications to synchronize data in the background, whether or not you're actively working in them.

Removing the checkmark can save battery power and lowers (but does not eliminate) data use.

Auto-sync Checkmark to permit applications to synchronize, send, and receive data on their own schedule. If you remove the checkmark, you must touch an account in the list on this screen and touch the **Menu Key**  > **Sync now** to synchronize data for that account. Synchronizing data automatically is disabled if **Background data** is uncheckmarked.

Backup Assistant Plus Allows you to manage the Backup Assistant Plus settings.

Manage accounts

List of all Google Accounts and other accounts you've added to the phone. If you touch an account in this screen, its account screen opens.

Storage

Use the Storage settings to monitor the used and available space on your phone and on your microSD card, to manage your microSD card, and if necessary, to reset the phone, erasing all of your personal information.

Backup Assistant Plus Storage

Total space Lists the total amount of space on Backup Assistant Plus Storage.

Available space Lists the amount of space you have available on Backup Assistant Plus Storage.

Subscribe now Touch to subscribe for Backup Assistant Plus Storage.

SD card

Total space Lists the total amount of space on any microSD card installed in your phone.

Available space Lists the amount of space you have available on any microSD card installed in your phone.

Unmount SD card Unmounts the microSD card from your phone so that you can format the card or safely remove. This setting is dimmed if there's no microSD card installed, if you've already unmounted it, or if you've mounted the microSD card on your computer.

Erase SD card Permanently erases everything on the microSD card and

prepares it for use with your phone. You must unmount the microSD card before you can format it.

Internal Memory

Total space Lists the total amount of space on any internal memory installed in your phone.

Available space Lists the amount of internal phone storage available.

Erase internal memory Erase all data on the phone's internal memory, such as music and photos.

System Memory

Available space Lists the amount of space you have available on the system memory.

Backup and restore

Back up my data Back up application data, Wi-Fi passwords, and other settings to Google servers.

Automatic restore If you reinstall an application, this setting restores backed up settings or other data.

Personal data

Factory data reset Erases all data on phone.

Language & keyboard

Use the Language & keyboard settings to select the language for the text on your phone and for configuring the on-screen keyboard, including words that you've added to its dictionary.

Select language Opens a dialog box to choose a language to use on your phone.

Input method Opens a dialog box to choose the text input method.

Swype Opens the Swype settings.

How to Swype Opens a dialog box to view on-screen tutorial help.

Personal dictionary Opens a dialog box to enter words for your personal Swype dictionary.

Preferences View and modify Swype options.

Audio feedback Checkmark to enable Swype sounds.

Vibrate on keypress Checkmark to vibrate each time you touch the keyboard.

Show tips Checkmark to display tips for using the Swype input method.

Auto-spacing Checkmark to enable automatic spacing when you pause briefly between words.

Auto-capitalization Checkmark to enable automatic capital letters for the first letter in sentences.

Show complete trace Checkmark to show the Swype path.

Word suggestion Opens a dialog box to enable Word prediction, Auto correction, and Show suggested word.

Speed vs. accuracy Opens a dialog box to set whether you want a speedier response or more accuracy.

Reset Swype's dictionary Checkmark to reset the Swype dictionary back to the default.

Version Displays the Swype software version.

Language Options Opens a dialog box to choose a language to use on your phone.

LG Keyboard

The LG Keyboard settings apply to the on-screen keyboard. The correction and capitalization features affect only the English version of the keyboard.

▶ Keyboard layout

Keyboard layout Opens a dialog box to choose the default type of keyboard.

Writing language Opens a dialog box to choose one or more languages to use on your phone.

Word suggestion

▶ QWERTY

Prediction Checkmark to enable word predictions while typing.

Spell correction Checkmark to check spelling before suggesting words.

Auto correction Checkmark to correct the spelling automatically when tapping on the space button.

▶ **3x4 keypad**

Prediction Checkmark to enable word predictions while typing.

Spell correction Checkmark to check spelling before suggesting words.

Auto correction Checkmark to correct the spelling automatically when tapping on the space button.

▶ **Common settings**

Auto punctuation Checkmark to automatically insert a period when the space key is tapped twice.


Voice Input Checkmark to enable the text by voice device function.

▶ **Touch feedback**

Sound feedback Checkmark to enable the phone to play a brief sound each time you touch a key on the on-screen keyboard.

Vibrate feedback Checkmark to enable vibration when keys are touched.

User dictionary Allows you to view and edit your user dictionary.

User dictionary Allows you to view, add, and remove words from your user dictionary. Touch a word to edit or delete it. Touch the **Menu Key**  > **Add** to add a word.

Voice input & output

Voice input

Voice recognizer settings

Language Displays a dialog box to select the voice synthesizer language. The default is English (US).

SafeSearch Opens a dialog box to select the level of filtering to be used in Google search by voice.

Block offensive words Checkmark to allow the device to automatically hide recognized offensive voice results.

Personalized recognition Checkmark to improve speech recognition accuracy.

Google Account dashboard Opens the Google Account web page to manage your collected data.

Voice output

▶ Text-to-speech settings

You use the Text-to-speech settings to configure the Android text-to-speech synthesizer for applications that can take advantage of it, such as TalkBack. If you don't have speech synthesizer data installed, only the **Install voice data** setting is available.

Listen to an example Plays a brief sample of the speech synthesizer, using your current settings.

Always use my settings Allows the phone to use your default settings and override the application settings.

▶ Default settings

Default Engine Allows you to set the default speech synthesis engine to be used for spoken text.

Install voice data If your phone does not have speech synthesizer data installed, this option connects to Android Market and guides you through the process of downloading and installing the data. This setting is not available if the data is already installed.

Speech rate Allows you to select how quickly you want the synthesizer to speak.

Language Allows you to select the language of the text you want the synthesizer to read. This is particularly useful in combination with the **Always use my settings** option to ensure that text is spoken correctly in a variety of applications.

▶ Engines

Pico TTS Allows you to view and configure the settings for the Pico TTS engine.

Connectivity

► USB connection mode

Default connection mode Opens a dialog box to choose the default connection mode when connecting your phone to a PC via USB. Choose from Charge Only, Mass Storage, or Internet Connection.

Always ask Checkmark to have the phone ask you to choose which USB connection mode it should connect with to a PC.

Auto-launch

Car Home Automatically start Car Home when the phone is mounted on car cradle.

Desk Home Automatically start Desk Home when the phone is mounted on desk cradle.

Accessibility

You use the Accessibility settings menu to configure any accessibility plug-ins you have installed on your phone.

Accessibility Allows you to enable all installed accessibility plug-ins.

Date & time

Use the Date & time settings menu to set your preferences for how dates are displayed.

Automatic Use network-provided values.

Set date If you do not use the Automatic setting, you can set your own date.

Select time zone If you do not use the Automatic setting, you can set your own time zone.

Set time If you do not use the Automatic setting, you can set your own time.

Use 24-hour format Checkmark to display the time using 24-hour time format — for example, 13:00 rather than 1:00 pm.

Select date format Opens a dialog box to select the format for displaying dates.

About phone

About phone includes information about your phone.

Software update Allows you to check for Android system software updates.

Network Displays current network information including your network carrier, network type and strength, service state, mobile network state, and IMS registration status.

Phone identity Displays the phone's identity information including model number, phone number, PRL version, ERI version, IMEI, ICC ID, lifetime call counter, and warranty date code.

Battery Provides access to battery functionality.

Battery status Displays the battery status as Charging or Discharging.

Battery level Displays the battery level as a percentage of fully charged.

Battery use Opens a list of the applications and operating system components that have used and are currently using battery power. Touch an application in the list to view details about its power use and, if available, touch an on-screen button to open a settings or information screen for that component or application.

Up time Displays the length of time since the phone was currently turned on.

Hardware information Displays the Wi-Fi MAC address and Bluetooth address.

Software information Displays the software information, including Android version, Baseband version, Kernel version, Build version, and SW version.

Legal information Allows you to view legal information about the software included with your phone.

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones.

Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

*American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving – driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

Violation of the instructions may cause minor or serious damage to the product.

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- For those host devices that utilize a USB port as a charging source, check the host device's user manual for the USB-IF logo or some other means to ensure that it has completed the USB-IF compliance program.
- Do not use your device for long periods of time while a part of your body is making direct contact with it. The temperature of the product may increase during normal operation and this may result in harming or burning your skin.

- Your phone is an electronic device that generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your phone during or immediately after operation.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.

- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Caution: Avoid potential hearing loss.

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: www.audiology.org

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD USA 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nih.gov

Internet: <http://www.nidcd.nih.gov/health/hearing>

National Institute for Occupational Safety and Health

Hubert H. Humphrey Bldg.

200 Independence Ave., SW

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674)

Internet:

<http://www.cdc.gov/niosh/topics/noise/default.html>

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data does not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;

- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect, if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA

will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/cgb/cellular.html>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same

phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly

precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones (<http://www.fda.gov>), under “C” in the subject index, select Cell Phones > Research.

Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety/>)

International Commission on Nonionizing Radiation Protection (<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)

Health Protection Agency (<http://www.hpa.org.uk/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are

reading an address book or business card, or writing a “to-do” list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip - dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it’s a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a “Good Samaritan” in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR

(Specific Absorption Rate)

This model phone meets the Government's requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station

antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 1.14 W/kg and when worn on the body, as described in this user's manual, is 1.17 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on FCC ID ZNFVS840.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the example to the left, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their

hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you’re talking on a cell phone, it’s recommended that you turn the BT (Bluetooth) mode off for HAC.

According to HAC policy(KDB 285076), we state this handset has not been rated for hearing aid compatibility with respect to the WiFi capability.

For information about hearing aids and digital wireless phones

Wireless Phones and Hearing Aid Accessibility

<http://www.accesswireless.org/Home.aspx>

FCC Hearing Aid Compatibility and Volume Control

http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html

DivX Mobile

ABOUT DIVX VIDEO: DivX[®] is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified[®] device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified[®] device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified[®] to play DivX[®] video up to HD 720p, including premium content.


DivX[®], DivX Certified[®] and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.




Dolby Mobile License notice











Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Please check to see if any problems you have encountered with your phone are described in this section before taking the phone in for service or calling a service representative.


Category	Sub-Category	Question	Answer
BT	Bluetooth Devices	What are the functions available via Bluetooth?	Connecting to Stereo/Mono Headset, Car Kit, FTP server is possible. When it's connected to another phone via Bluetooth, you can receive Contacts data.
BT	Bluetooth device	If my Bluetooth device is connected, can I listen to my music through my 3.5mm wired headphones?	When a Bluetooth device is connected, all system sounds are played over the headset. As a result, you will not be able to listen to music through your wired headphones.
Data	Contacts Backup	How can I back up Contacts?	The Contacts data can be synchronized between your phone and Gmail™.
Data	Synchronization	Is it possible to set up one-way-sync with Gmail?	Only two-way synchronization is available.
Data	Synchronization	Is it possible to synchronize all the Email folders?	The Inbox is automatically synchronized. You can view other folders by touching the Menu Key  and selecting Folders .
Data	Synchronization	Is it possible to transfer Contacts data from a feature phone to an Android™ phone?	Yes, if your contacts can be extracted into a .CSV file. How to transfer: 1. Create ".CSV" file with the contacts on your current phone (you may be able to use the PC suite software provided by LGE). 2. Log into Gmail with your PC. 3. Click Contacts . 4. Click Import . 5. Attach the ".CSV" file. 6. Your contacts will then be synchronized between your Android phone and Gmail.
Google™ Service	Gmail Log-In	Should I have to log into Gmail whenever I want to access Gmail?	Once you log into Gmail, you don't need to log in Gmail again.
Google Service	Google Account	Is it possible to filter emails?	No, email filtering is not supported via the phone.
Phone Function	YouTube™	Is it possible to play YouTube videos?	Yes, YouTube videos are supported but may have to be viewed through the YouTube application (and not the Browser).






Category	Sub-Category	Question	Answer
Phone Function	Email	What happens when I execute another application while writing an email?	Your email will automatically be saved as a draft.
Phone Function	Ringtone	Is there a file size limitation for when I want to use an .MP3 file as a ringtone?	There is no file size limitation.
Phone Function	Message Time	My phone does not display the time of receipt for messages older than 24 hours. How can I change this?	You will only be able to see the times for messages received the same day.
Phone Function	microSD Card	Is it possible to save applications to the microSD card?	Some applications can be saved to the microSD card. 1. From the Home Screen, touch the Menu Key  > Settings > Applications > Manage applications. 2. Touch an application > Move to SD card.
Phone Function	microSD Card	What is the maximum supported size for a memory card?	32GB memory cards are compatible.
Phone Function	Navigation	Is it possible to install another navigation application on my phone?	Any application that is available on Android Market™ and is compatible with the hardware can be installed and used.
Phone Function	Synchronization	Is it possible to synchronize my contacts from all my email accounts?	Only Gmail and MS Exchange server (Company Email Server) contacts can be synchronized.
Phone Function	Wait and Pause	Is it possible to save a contact with Wait and Pause in the numbers?	If you transferred a contact with the Wait & Pause functions saved into the number, those functions will not be recognized. You will need to re-save each number. How to re-save numbers with Wait and Pause: 1. From the Home Screen, touch the Phone Key  (in the Quick Keys bar). 2. Dial the number, then touch the Menu Key  . 3. Touch Add 2-sec pause or Add wait. 4. Enter the remaining number(s) and continue saving the number as necessary.

Category	Sub-Category	Question	Answer
Phone Function	Security	What are the phone's security functions?	You are able to set the phone to require the entry of an unlock sequence (pattern, PIN, or password) before the phone can be accessed or used.
Phone Function	Unlock Pattern	What should I do if I forgot my Unlock Pattern?	After attempting the Unlock Pattern 5 times, you can touch the Forget Pattern? option and use your Google Account information to unlock your phone.
Phone Function	Unlock Pattern	What should I do if I forgot the Unlock Pattern and I didn't create a Google Account on the phone?	<p>Without entering the Unlock Pattern, you will not be able to access your phone.</p> <p>Caution: If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset.</p> <p>How to perform a factory reset:</p> <ol style="list-style-type: none"> 1. Turn the power off. 2. Touch and hold the following keys at the same time for 12 seconds: Power/Lock Key  + the down Volume Key. 3. Release the keys when you see the screen message "Permanently Erase User Data & Reset Settings?", press the Power Key to confirm and any other key to cancel." 4. Press the Power/Lock Key  to confirm (or press any other key to cancel). When you press the Power/Lock Key  to confirm, a pop-up appears asking "Are you sure you want to continue with erase?". 5. Press the Power/Lock Key  and your phone will be restored to the factory settings. To cancel, press any other key.

Category	Sub-Category	Question	Answer
Phone Function	Unlock Pattern	How do I create the Unlock Pattern?	<ol style="list-style-type: none"> 1. From the Home Screen, touch the Menu Key . 2. Touch Settings > Security. 3. Touch Set up screen lock (under the Screen unlock section of the settings). 4. Touch Pattern. The first time you do this, a short tutorial about creating an unlock pattern appears. 5. Set up by drawing your pattern once > Continue, draw again > Confirm.
Phone Function	Speed Dial	Is Speed Dialing supported?	<p>Yes. You can set Speed Dials as well as save a contact directly on your Home screen.</p> <p>To set a Speed Dial:</p> <ol style="list-style-type: none"> 1. Open the Contacts application, then touch the contact you want. 2. Touch the Menu Key  > More > Speed dials. 3. Touch the phone number you want, then touch the Speed Dial to set. <p>To set a Direct Dial shortcut to your Home screen:</p> <ol style="list-style-type: none"> 1. From the Home Screen, touch the Menu Key  > Add. 2. Touch Shortcuts > Direct Dial. 3. Select a contact from your Contacts List.
Phone Function	Memory	Is it possible to save a picture to the internal memory while taking a picture?	<p>Pictures, along with Music and Video files, cannot be saved to the internal memory. They are saved to your microSD card.</p>
Phone Function	Memory	Will I know when my memory is full?	<p>Yes, you will receive a notification.</p>
Phone Function	Language Support	Is it possible to change the language?	<p>The phone has multi-lingual capabilities.</p> <p>To change the language:</p> <ol style="list-style-type: none"> 1. From the Home Screen, touch the Menu Key  > Settings. 2. Touch Language & keyboard > Select language. 3. Touch the desired language.

Category	Sub-Category	Question	Answer
Phone Function	Language Support	Which languages are supported when using Android Market?	The Market application supports English and Spanish. Third party applications may not support all languages.
Phone Function	VPN	How do I set up a VPN?	VPN access configuration is different according to each company. To configure VPN access from your phone, you must obtain the details from your company's network administrator.
Phone Function	Screen time out	My screen turns off after only 15 seconds. How can I change the amount of time for the backlight to turn off?	<ol style="list-style-type: none"> 1. From the Home Screen, touch the Menu Key . 2. Touch Settings > Display > Screen timeout. 3. Touch the preferred screen backlight timeout time.
Phone Function	Wi-Fi & 4G	When Wi-Fi and 4G are both available, which service will my phone use?	<p>When using data, your phone may default to the Wi-Fi connection (if Wi-Fi connectivity on your phone is set to On). However, there will be no notification when your phone switches from one to the other.</p> <p>To know which data connection is being used, use the 4G or Wi-Fi icon at the top of your screen.</p>
Phone Function	Home screen	Is it possible to remove an application from the Home screen?	Yes. Just touch and hold the icon until the trash can icon appears at the bottom-center of the screen. Then, without lifting your finger, drag the icon to the trash can.
Phone Function	Application	I downloaded an application and it causes a lot of errors. How do I remove it?	<ol style="list-style-type: none"> 1. From the Home Screen, touch the Menu Key . 2. Touch Settings > Applications > Manage applications. 3. Touch the application > Uninstall.

Category	Sub-Category	Question	Answer
Phone Function	Camera	My phone's camera does not take pictures and says "No SD Card or SD card is not ready!". Why doesn't it work?	<p>A microSD card must be inserted in order to use the phone's camera.</p> <p>Verify that the microSD card is mounted on the device.</p> <p>Touch the Menu Key  > Settings > Storage > Mount SD card</p>
Phone Function	Alarm	Can I use music files for my alarm?	<p>Yes. After saving a music file as a ringtone, you can use it for your alarm.</p> <ul style="list-style-type: none"> • Touch and hold a song in a library list. In the Context menu that opens, touch Use as phone ringtone. • In an alarm clock setting screen, select the music as a ringtone.
Phone Function	Alarm	Will my alarm be audible or will it go off if the phone is turned off?	No, this is not supported.
Phone Function	Alarm	If my Ringer Volume is set to Off or Vibrate , will I hear my alarm?	Your alarm is programmed to be audible even in these scenarios.
Phone Spec	Battery Time	What is the maximum amount of time my phone's battery will last before I need to recharge it?	<p>Talk time : Approx. 455 mins</p> <p>Standby : Approx. 20 days</p>
Phone Spec	Band	Which wireless bands are supported by the phone?	Your phone is able to operate on the 800Mhz and 1900MHz bands.

Category	Sub-Category	Question	Answer
Recovery Solution	Factory Reset	How do I perform a factory reset?	<ol style="list-style-type: none"> 1. From the Home Screen, touch the Menu Key . 2. Touch Settings > Privacy > Factory data reset. <p>NOTE Touch the checkbox to also erase all contents from your microSD card when the phone is reset.</p> <ol style="list-style-type: none"> 3. Read the warning and touch Reset phone. 4. Touch Erase everything. <p>Attention:</p> <p>If a factory reset is performed, all installed application and user data will be erased. Please remember to back up any important data before performing a factory reset.</p>
Recovery Solution	Factory Reset	How can I perform a factory reset if I can't access the phone's setting menu?	<p>How to perform a factory reset:</p> <ol style="list-style-type: none"> 1. Turn the power off. 2. Touch and hold the following keys at the same time for 12 seconds: Power/Lock Key  + the down Volume Key. 3. Release the keys when you see the screen message "Permanently Erase User Data & Reset Settings?", press the Power Key to confirm and any other key to cancel." 4. Press the Power/Lock Key  to confirm (or press any other key to cancel). When you press the Power/Lock Key  to confirm, a pop-up appears asking "Are you sure you want to continue with erase?". 5. Press the Power/Lock Key  and your phone will be restored to the factory settings. To cancel, press any other key. <p>Attention:</p> <p>If a factory reset is performed, all installed applications and user data will be erased. Please remember to back up any important data before performing a factory reset.</p>

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S., including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.

- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE:

If you experience any problems with either the Bluetooth headset or the mobile handset, in each case as may be covered by this limited warranty, you need only return the affected device. For example, if a problem exists with the Bluetooth headset, please DO NOT return your mobile handset with the headset. Likewise, if a problem exists with the mobile handset, please DO NOT return the Bluetooth Headset with the handset.

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets, P.O. Box 240007, Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.

Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

123

10 Driver Safety Tips 210

A

Adding a Contact to Your Favorites 91

Adding application icons to the Home screen 38

Adding Contacts 89

Airplane mode 64

Alarm/Clock 171

and Sharing Contacts 89

Answering or Rejecting Calls 64

Applications 34, 35

B

Backup Assistant Plus 83

Bookmark 75

Browser 73

C

Calculator 170

Calendar 162

Calendar & Alarm icons 28

Call a Contact by Voice Dialing 125

Call icons 28

Calling Your Contacts 68

Call log 123

Camera 126

Caution: Avoid potential hearing loss. 200

Changing and Monitoring Online Status 118

Changing Browser settings 76

Changing Google Talk Settings 121

Changing Messaging Settings 110

Changing Weather Settings 82

Charging the Phone 21

Charging with USB 21

Chatting with Friends 116

Checking the Weather 80

Communication 87

Composing and Sending a Message 104

Connecting Quickly With Your Contacts 50

Connecting to Networks and Devices 51

Connecting to Wi-Fi Networks 51

Connectivity icons 29

Consumer Information on SAR 212

Contact History Tab 88

Contacts 87, 123

Context menus 40

Creating an Event 168

Customizing the Applications screen 36

Customizing the Home Screen 46, 47

D

DivX Mobile 216

Dolby Mobile License notice 216

Downloading and Installing Applications 146

E

Editing Contact Details 92

Editing or deleting an event 169

Email 97

Email and Messaging icons 28

Entertainment 126

Exchanging Messages 107

Exporting 89

F

FAQ 217

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices 214

FDA Consumer Update 203

Frequent List 63

Front View 15

G

Gallery 132

Getting answers about how to use phone 27

Getting Answers About How to Use the Phone 27

Getting to Know the Home Screen 30
Gmail 101
Google Account 26
Groups 123

H

Home screen 31
Home screen canvases 31

I

Important Customer Information 1
Importing 89
Index 227
Installing the Battery and microSD Card 18
Instant List 62
Internet 75

J

Joining Contacts 96

L

Landscape view 153
LIMITED WARRANTY STATEMENT 224
Listening to Your Voicemail 72
Locking the Screen 44

M

Managing Multiple Calls 70
Managing Notifications 41
Maps 79
Market 144
Messaging 106
microSD Card 59
microSD Card Settings 59
Mini canvas view 31
Mobile Hotspot 57
Music 148

N

Network icons 29

O

Open an Application using Voice Dialer 125
open Google Talk and sign in 115
Opening and Closing the Applications screen 36
Opening Android Market and Finding Applications 144
Opening and Switching Applications 37
Opening Email and the Accounts Screen 97
Opening Gallery and Viewing Your Albums 132
Opening Gmail and Your Inbox 101
Opening Music and Working with Your Library 149

Optimizing Battery Life 22
Options During a Call 69
Options menus 40

P

Page content settings 77
Phone 123
Phone Overview 15
Phone's Status Icons 28
Photo options 126
Photo Tab 88
Pinch peek 135
Placing and Ending Calls 61
Playing Music 150
Polaris Office 173

Q

Quick Keys 30

R

Reading Your Messages 99
Rear View 16
Replying to or Forwarding a Message 105

S

Safety 193
Safety Information 197
Searching for a Contact 91
Searching Your Phone and the Web 42, 43
Selecting an Instant list entry 63

- Selecting Which Contacts are Displayed 95
 - Separating Contact Information 97
 - Sequence matches 62
 - Setting Alarms 171
 - Setting an Event Reminder 169
 - Settings 176
 - Setting the Timer 172
 - Setting the World Clock 173
 - Setting Up Your Device 25
 - ShareGenie 174
 - Smart Movie HD 142
 - SmartShare 27, 155
 - Sound icons 28
 - Specifications 216
 - Stopwatch 173
 - Swype Text Entry Tips 114
 - System icons 29
- T**
- Table of Contents 7
 - Talk 115
 - Technical Details 10
 - Text Input Methods 33
 - The Basics 15
 - The Phone application 123
 - TIA Safety Information 193
 - Tools 162
 - Top View and Side Views 17
 - Touchscreen 32
 - Transferring Music Files to Your Phone 148
 - Turning the phone off 23
 - Turning the phone on 23
 - Turning the Phone On and Off 23
- U**
- USB Autorun 54
 - Using the Swype Keyboard 114
- V**
- Video Camera 130
 - Video options 130
 - Video player 157
 - Viewing Event Details 167
 - Viewing Your Calendar and Events 162
 - Voice Dialer 68, 69, 124
 - Voice Mail 100
 - Voice Recorder 160
- W**
- Wi-Fi Direct connection 53
 - Working in Day View 164
 - Working in Month View 166
 - Working in Week View 165
 - Working with Albums 134
 - Working with Conversations in Batches 106
 - Working with Menus 40
 - Working with Pictures 137
 - Working with Playlists 153
 - Working with the Call Log 66
 - Working with Videos 140
 - Work with Batches of Pictures or Videos 136
 - Writing Your Messages 99
- Y**
- Your Photos and Videos 132
 - YouTube™ 158