

SPH-m370

User Guide

©2011 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are trademarks of their respective owners.



Important Messages

IMPORTANT: If the account type you want to set up is not in the device database, you will be asked to enter more details. You should get all pertinent information for the email account such as incoming and outgoing server settings before you proceed.

WARNING: Use only Sprint-approved or manufacturer-approved batteries and chargers with your device. The failure to use a Sprint-approved or manufacturer-approved battery and charger may increase the risk that your device will overheat, catch fire or explode, resulting in serious bodily injury, death or property damage.

Table of Contents

Get Started.....	8
Set Up Your Phone	8
Activate Your Phone.....	11
Set Up Voicemail.....	12
Sprint Account Information and Help.....	12
Sprint Account Passwords.....	12
Manage Your Account	13
Sprint Support Services	14
Phone Basics	15
Your Phone’s Layout.....	15
Key Functions	15
Turn Your Phone On and Off	18
Your Home Screen	18
Status Bar	18
Phone.....	23
Displaying Your Phone Number	23
Making and Answering Calls	23
Making Calls	24
Dialing Options	25
Answering Calls	25
Missed Call Notification	27
Calling Emergency Numbers	27
In-Call Options	28
End-of-Call Options	29
Saving a Phone Number.....	29
Finding a Phone Number	30
Dialing and Saving Phone Numbers with Pauses	30
Abbreviated Dialing.....	31
Dialing From the Contacts List.....	32
Three-Way Calling.....	33

Speed Dialing	34
Plus (+) Code Dialing.....	34
Viewing History.....	34
History Options	35
Making a Call from History.....	36
Saving a Number from History.....	36
Prepending a Number from History	37
Erasing History	37
Phone Settings.....	38
Display.....	38
Volume	40
Ringers	41
Selecting Ringer Types.....	41
Getting New Ringers.....	43
Phone Information	44
Lock Phone	45
Locking and Unlocking Your Phone.....	45
Changing the Lock Code	45
Location.....	45
Parental Controls.....	46
Using Parental Controls.....	46
Customize Parental Controls Restrictions	47
Reset/Delete.....	48
Reset Settings	48
Reset Phone	48
Delete Stuff	48
Change Lock Code	49
Others.....	49
Abbreviated Dialing.....	49
Call Answer.....	50
Accessibility	50
Airplane Mode.....	52
Data	52

Contact Match.....	52
Roaming	53
Language.....	54
Contacts.....	54
TTY Options.....	55
Navigation Keys.....	55
Contacts.....	57
Get Started With Contacts.....	57
Access Contacts	57
Add a Contact.....	58
Save a Phone Number	60
Edit a Contact.....	61
Add or Edit Information for a Contact	61
Assign Speed Dial Numbers	61
Assigning a Picture to an Entry.....	63
Assigning Secret Contact Entries	64
Delete a Contact	64
Send Contacts via Bluetooth	64
Accounts and Messaging.....	66
Text Entry	66
ABC Mode	66
Entering Numbers, Symbols, and Smiley's.....	67
Messages	68
Message Settings	68
Managing Preset Messages	69
Text Messaging and MMS.....	70
Compose Text Messages	70
Receiving Text Messages.....	72
Replying to Text Messages	72
Preset Messages	73
Applications and Entertainment	74
Applications.....	74
Downloading Games, Ringers, and More	75

Accessing the Download Menus.....	75
Downloading an Item.....	75
My Stuff Manager.....	76
GPS Services.....	77
Activating Location Mode.....	77
Sprint Family Locator.....	78
Shopping.....	78
Web and Data.....	80
Getting Started with Web and Data Service.....	80
Your User Name.....	80
Launching a Web Connection.....	80
Data Connection Status and Indicators.....	81
Navigating the Web.....	81
Data Services FAQs.....	82
Browser.....	83
Opening the Browser Menu.....	83
Camera.....	85
Taking Pictures.....	85
Displaying the Status.....	86
Using the Timed Mode.....	86
Camera Settings.....	86
Shooting Mode.....	86
Adjusting the Resolution.....	91
Adjusting the White Balance.....	92
Adjusting Color Tones.....	92
Adjusting the Quality.....	93
Adjusting the Shutter Sound.....	94
Adjusting the Grid.....	94
Adjusting the Brightness.....	95
Erasing Pictures.....	95
Sending a Picture.....	96
Assigning Photos.....	97
Tools and Calendar.....	98

Alarm	98
Calendar	100
Viewing the Calendar.....	100
Viewing the Current Day’s Schedule	100
Adding a Schedule.....	101
Viewing the Task List.....	102
Viewing the Countdown	103
Managing the Schedule Alerts	104
Erasing a Day’s Events.....	104
Erasing All Events.....	104
Bluetooth	105
Turning Bluetooth On and Off.....	105
Using the Bluetooth Settings Menu	105
Pairing Bluetooth Phones	106
Updating Phone.....	106
Voice Service	106
Automatic Speech Recognition (ASR).....	106
Calculator	109
Tip Calculator.....	110
Eco Calculator	110
Device Self Service	111
World Time	111
Memo Pad.....	112
Voice Memos.....	113
Recording a Current Call	113
Recording Voice Memos.....	113
Playing Voice Memos	114
Erasing Voice Memos.....	114
Editing Voice Memos	115
Check Voice Memo Information.....	115
Send a Voice Memo Message	115
Index	116

Get Started

This section gives you all the information you need to set up your phone and Sprint service the first time.

[Set Up Your Phone](#)

[Activate Your Phone](#)

[Set Up Voicemail](#)

[Sprint Account Information and Help](#)

Set Up Your Phone

You must first install and charge the battery to begin setting up your phone.

Important: Close your phone before removing the cover and inserting the battery.

1. Install the battery.
 - Insert a coin or other flat object into the slot at the bottom of the battery compartment cover and lift the cover up gently.



- Insert the battery, contacts end first, and gently press the battery into place.



- Replace the battery compartment cover, making sure all the tabs are secure and there are no gaps around the cover.



Note: When you insert the battery, your phone may power on automatically.

2. Insert the USB cable into the phone's Charger/Accessory jack.



3. Plug the charging head into a standard AC power outlet.

Always use a Sprint-approved or Samsung-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

Note: The front LED turns red to indicate the battery is currently charging.


- ▶ Plug the flat end of the charger into the phone's charger jack and the other end into an electrical outlet. The phone turns on and indicates its charge state via the battery icon.

Warning! While the device is charging, if the screen does not function due to an unstable power supply, unplug the USB power adapter from the power outlet or unplug the USB cable from the device.

With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely run down.

- Plug the AC adapter into an electrical outlet. Fully charging a battery may take up to three hours.

Note: Your phone's battery should have enough charge for the phone to turn on and find a signal, run the setup application, set up voicemail, and make a call. You should fully charge the battery as soon as possible.

4. Open your phone then press and hold  to turn the phone on.



- If your phone is activated, it will turn on, search for Sprint service, and begin the setup application.

Activate Your Phone

- If you purchased your phone at a Sprint Store, it is probably activated and ready to use.
- If you received your phone in the mail and it is for a new Sprint account or a new line of service, it is designed to activate automatically. To confirm your activation, make a phone call.
- If you received your phone in the mail and you are activating a new phone for an existing number on your account, you can activate on your computer online or directly on your phone.

To activate on your computer:



- ▶ Go to www.sprint.com/activate and follow the instructions.

To activate on your phone:

Note: For security reasons, you will need your Sprint phone number and PIN to use this activation method.

1. Turn on your new phone. (Make sure the old one is turned off.) Your phone will automatically attempt Hands-Free Activation.
2. Follow the on-screen prompts to complete the activation process.
3. After you have completed the wizard, make a phone call to confirm your activation.


If your phone is still not activated or you do not have access to the Internet, contact Sprint Customer Service at 1-888-211-4727 for assistance.

Tip: Do not press  while the phone is being activated. Pressing  cancels the activation process.

Note: If you are having difficulty with activation, contact Sprint Customer Service by dialing 1-888-211-4727 from any other phone.

Set Up Voicemail

Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off. You should set up your Sprint Voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access.

1. From standby mode, press and hold  to dial your voicemail number.
2. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Note: Voicemail Password – Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

Sprint Account Information and Help

Find out about account passwords and information about managing your account and finding help.

[Sprint Account Passwords](#)

[Manage Your Account](#)

[Sprint Support Services](#)

Sprint Account Passwords

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your data services account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to sprint.com. (Click **Sign in/Sign up** and then click **Sign up now!** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service) you can get a sub-account password at sprint.com.

Voicemail Password

You'll create your voicemail password when you set up your voicemail. See [Set Up Voicemail](#) for more information on your voicemail password.

Data Services Password

With your Sprint phone, you may elect to set up an optional data services password to control access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to sprint.com or call Sprint Customer Service at **1-888-211-4727**.







Manage Your Account




Manage your Sprint account from your computer, your Sprint phone, or any other phone.

Online: sprint.com

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other products like games, ring tones, screen savers, and more.

From Your Sprint Phone

- Press    to check minute usage and account balance.
- Press    to make a payment.

- Press    to access Sprint Customer Care.

From Any Other Phone

- Sprint Customer Service: **1-888-211-4727**.
- Business Customer Service: **1-888-788-4727**.

Sprint Support Services

The Sprint Support Services at your fingertips include Sprint 411 and Sprint Operator Services.

Sprint 411

Sprint 411 gives you access to a variety of services and information, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

- ▶ Press    .

Sprint Operator Services

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

- ▶ Press  .

- For more information or to see the latest in products and services, visit us online at sprint.com.

Phone Basics

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. The topics in this section will introduce the basic functions and features of your phone.

[Your Phone's Layout](#)

[Turn Your Phone On and Off](#)

[Your Home Screen](#)

Your Phone's Layout

The illustrations and descriptions below outline your phone's basic layout.



Key Functions

- **Status Bar Icons** provide information about your phone's status and options, such as signal strength, roaming, ringer setting, messaging, and battery charge.

- **Display Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the greeting.
- **Navigation Key** allows you to scroll through the phone's menu options and acts as a shortcut key from standby mode.
- **Softkeys** let you select softkey actions or menu items corresponding to the bottom left and bottom right lines on the Display Screen.
- **TALK Key** allows you to place or receive calls, answer Call Waiting, use 3-Way Calling, or activate Voice Dial.
- **Keypad** lets you enter numbers, letters, and characters, and select menu items. Press and hold keys for speed dialing.
- **Microphone** allows other callers to hear you clearly when you are speaking to them.
- **BACK/Clear Key** deletes characters and numbers from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu. This key also allows you to return to the previous screen in a data session.
- **END/POWER Key** lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input. When you receive an incoming call, press to mute the ringer or ignore the call.
- **MENU/OK** lets you access the phone's menus and selects the highlighted choice when navigating through a menu.
- **Earpiece** lets you hear the caller and automated prompts.



- **Volume Button** allows you to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call.
- **Charger/Accessory Jack** allows you to connect the phone charger or an optional USB cable (included).
- **Camera** contains the hardware enabling you to capture pictures.
- **Headset Jack** allows you to plug in a headset for convenient, hands-free conversations.




- **Front-facing Camera** lets you capture pictures with the phone closed.

CAUTION! Inserting an accessory into the incorrect jack may damage the phone.

Turn Your Phone On and Off

Turning your phone on and off is as simple as pressing and holding the **End** key, which also serves as your phone's power button.

Turn Your Phone On

- ▶ Press and hold .

Turn Your Phone Off

- ▶ Press and hold .

Your screen remains blank while your phone is off (unless the battery is charging).

Your Home Screen















The home screen is the starting point for your phone's applications, functions, and menus.

















 

 
 
 
 






Status Bar







  


 
The status bar at the top of the home screen provides phone and service status information on the right side and notification alerts on the left.

Icon	Description
------	-------------

	Signal Strength – Shows your current signal strength. (More bars = stronger signal.)
	No Service – Your phone cannot find a usable signal.
	Roaming – Your phone is “roaming” off the Nationwide Sprint Network.
	1x Data Status – 1x data service is available. When active, the icon is animated.
	3G/2G Data Sending – 3G/2G data service is transmitting data.
	3G/2G Data Receiving – 3G/2G data service is receiving data.
	3G/2G Data Dormant – 3G/2G data service is currently dormant.
	Battery – Shows your current battery charge level. (Icon shown is fully charged.)
	Low battery – Shows your current battery charge level is low.
	Location On – Your phone’s location feature is on and available for location-based services such as GPS Navigation.
	Location Off – Your phone’s location feature is off. Your location is available only for 911
	Key Mute – Your phone’s key tones are muted. This icon appears during a call.
	Speaker – Your phone’s speakerphone feature is enabled.
	Vibrate – The ringer is set to vibrate only.

	Ringer and Vibrate – Your phone has the ringer volume set and the vibrate option checked (enabled).
	Ringer – Your phone has the ringer volume set at a level between 1 - 8 is selected.
	Ringer Off – Ringer is turned off and vibrate mode is disabled.
	Ringer Off and Vibrate – Your phone has the ringer deactivated and the vibrate option checked (enabled).
	Silence All – Your phone has the ringer deactivated and the vibrate option unchecked (disabled). No sound is made by the phone.
	1 Beep – Your phone is set to beep when you receive an incoming call.
	1 Beep and Vibrate – Your phone is set to beep and vibrate when you receive an incoming call.
	TTY – Your phone is operating in TTY mode.
	Alarm – An alarm has been set on your phone.
	Missed Alarm – You have missed an alarm event.
	Calendar Event – You have a pending event scheduled.
	Multiple Alerts – You have multiple alert messages.
	Self Timer – The self-timer function is enabled.

	Auto – The white balance has been set to Automatic. Use this for taking pictures indoors or outdoors using automatic white balance settings.
	Daylight – The white balance has been set to Sunny. Use this for taking pictures or movies outdoors on bright sunny days.
	Cloudy – The white balance has been set to Cloudy. Use this for taking pictures or movies outdoors under cloudy conditions.
	Incandescent – The white balance has been set to Tungsten. Use this for taking pictures or movies indoors under normal lighting conditions.
	Fluorescent – The white balance has been set to Fluorescent. Use this for taking pictures or movies indoors under fluorescent lighting conditions.
	Manual – The white balance has been set to Manual. Use this for taking pictures indoors or outdoors using your own custom settings.
	Record - A voice memo is recording.
	Pause – A voice memo is paused.
	Play – A voice memo is playing.
	BG application + 1 – Indicates that more than one application is currently running and one has been minimized and placed in the background.
	Bluetooth Enable – The Bluetooth technology is active and enabled.
	Phone Connected – The Bluetooth phone is connected.
	BT Headset Connected – The Bluetooth Headset is connected and visible.

	Bluetooth Hidden – The phone is hidden to other Bluetooth phones and not transmitting its information.
	Text Message – You have new text messages.
	Voicemail – You have new voicemail messages.
	Missed Call – You have missed an incoming call.
	Missed Text Message – You have new unread text or email messages.
	Missed Voicemail – You have new unheard voicemail messages.
	Missed Scheduler – You have missed a scheduled event.
	Locked Message – You have new text messages that must be unlocked using your PIN code.
	Urgent Message – You have new messages marked as Urgent.
	Missed Call Alert – You have missed a call alert.

Phone

With the Sprint National Network and your phone, you can enjoy clear calling across the country.


[Displaying Your Phone Number](#)

[Making and Answering Calls](#)

[Viewing History](#)

Displaying Your Phone Number

You will find your phone number displayed in the Phone Information menu.

- ▶ Press  > **Settings/Tools** > **Settings** > **Phone Information** > **Phone Number/ User ID**. (Your phone number and other information about your phone and account will be displayed.)

Making and Answering Calls

There are several convenient ways to make and answer calls from your phone, choose in-call and end-of-call options, and save and find phone numbers.

[Making Calls](#)

[Dialing Options](#)

[Answering Calls](#)

[Missed Call Notification](#)

[Calling Emergency Numbers](#)

[In-Call Options](#)

[End-of-Call Options](#)

[Saving a Phone Number](#)

[Finding a Phone Number](#)

[Dialing and Saving Phone Numbers with Pauses](#)

[Abbreviated Dialing](#)

[Dialing From the Contacts List](#)

 
Speed Dialing

Plus (+) Code Dialing

Making Calls

Making calls is as easy as entering a phone number and pressing the **Talk** key.

1. Enter a phone number from standby mode. (If you make a mistake while dialing, press **BACK** to erase the numbers.)
2. Press **TALK**. (To make a call when you are roaming and Call Guard is enabled, highlight **Roam Call** and press **TALK**.)

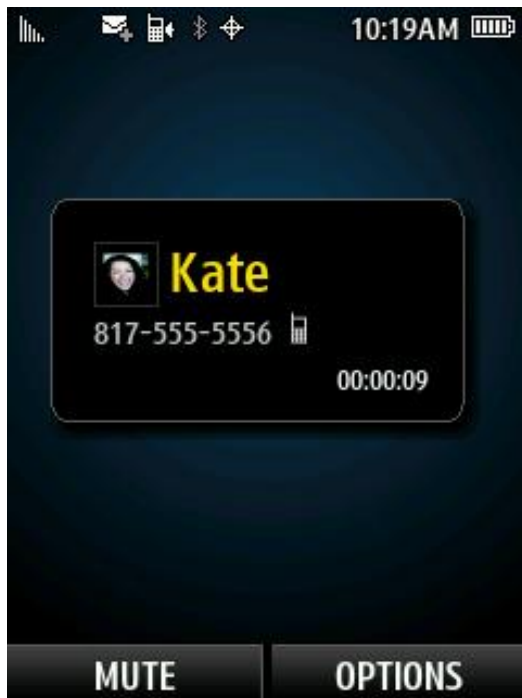

3. Press **END** or close the phone when you are finished.

Tip: To redial your last outgoing call, press **TALK** twice. To redial other recent numbers, press **TALK**, highlight a number, and press **TALK** again.

You can also place calls from your phone by speed dialing numbers from your Contacts using your History listings and Voice Services.

Dialing Options

When you enter numbers in standby mode, such as when you are making a call, several dialing options are available on the phone's screen via the Options menu.

To initiate an option:

- ▶ Press **OPTIONS** (right softkey).
 - **Save:** Enter a seven-digit or ten-digit number (phone number and area code) and press **OPTIONS** (right softkey) > Save to save the phone number in your Contacts.
 - **Hard Pause:** Enter a seven-digit or ten-digit number (phone number and area code) and press **OPTIONS** (right softkey) > **Hard Pause**. This inserts a pause between the dialed phone number and the next entered digits.

Note: Use this feature to navigate through automated menus. If you know the number sequence required to connect you to the right destination, enter a Hard Pause between each number. A Hard Pause entry displays a “p”.

Example: (214) 555-7777p1p2p3

- **2-Sec Pause:** Enter a seven-digit or ten-digit number (phone number and area code) and press **OPTIONS** (right softkey) > **2-Sec Pause**. This inserts a longer pause between the dialed phone number and the next entered digits.

Note: Use this feature to navigate through automated menus. If you know the number sequence required to connect you to the right destination and the menu prompts require more time to accept your number choice, enter a 2-Sec Pause between each number. A 2-Sec Pause entry displays a “t”.

Example: (214) 555-7777t5t6t7

Answering Calls

There are several convenient ways to answer calls on your phone.

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)



2. You can also press **TALK** to answer an incoming call. (Depending on your settings, you may also answer incoming calls by opening the phone or by pressing any number key.)

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. You may also see the caller's phone number, if available.

If you set **CALL ANSWER** to **Talk Key**, you also see the following options. To select an option, press the corresponding softkey.

- **Answer** to answer the incoming call.
- **Silence** to set the ringer to silent mode.
- **Send to Voicemail** redirects the call to your voicemail.
- **Ignore with Text** to immediately send the caller a text message.

Answering a Roam Call with Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide Sprint Network.

- ▶ Select **Answer** to answer the call.

Note: When your phone is off, calls go directly to voicemail.

Ending a Call

- ▶ Close the phone or press .

Missed Call Notification

When you do not answer an incoming call, your screen displays the Missed Call log.

To display the Missed Call entry from the notification screen:

- ▶ Highlight the entry and press . (To dial the phone number, press .)

To display a Missed Call entry from standby mode:

1. Press  > **History**.
2. Highlight an entry and press .

Calling Emergency Numbers

You can place emergency calls to 911, even if your phone is locked or your account is restricted.

Note: When you place an emergency call, your phone automatically enters Emergency mode.

To view options during an emergency call:

- ▶ Press **OPTIONS** (right softkey) to view the following:
 - **My Phone #** (left softkey) to display your MSID and device phone number during an emergency call.

Note: You must highlight MSID and press  to view the MSID number.

- **Unlock** (right softkey) to unlock your phone (appears only if the phone is locked).

To exit Emergency mode:

1. Press  to end a 911 call.

2. Press  and  to exit.

Enhanced 911 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important: Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

In-Call Options

Pressing **OPTIONS** (right softkey) during a call displays a list of available in-call features.



To select an option, press the corresponding keypad number or highlight the option and press



. The following options may be available through the **Options** menu:

- **Speaker On** to route the phone's audio through the speaker or through the earpiece.

Note: After selecting this option, the menu item changes to **Speaker Off**. Select this option to disable the speaker.

- **Contact Details** to display the detail screen of the current caller.
- **3-Way Call** to initiate a 3-way call.
- **Contacts** to display your Contacts list.
- **Voice Memo** to record the current call.
- **Phone Info** to display your phone information.
- **Key Mute** to silence the key tones.

Note: After selecting this option, the menu item changes to **Key Unmute**. Select this option to unmute the keys.

- **Messages** to display your current messages (Voicemail, text messages, etc.).
- **Recent History** to view your call histories.
- **Tools** to access the Tools menu.

WARNING: Because of higher volume levels, do not place the phone near your ear during speakerphone use.

End-of-Call Options

After you receive a call from or make a call to a phone number that is not in your Contacts, at the end of the call the phone displays the phone number and the duration of the call. Press **OPTIONS** (right softkey) > **Save** to add the new number to your Contacts.



You can also send a text message to the recent caller. Press **SEND MSG** (left softkey). The caller's phone number or saved contact name automatically displays in the recipient field.


Note: The End-of-Call options are not displayed for calls identified as No ID or Restricted.


Saving a Phone Number

You can store up to 4600 phone numbers and 600 Contacts entries in your phone. Each entry's name can contain 64 characters. Your phone automatically sorts the Contacts entries alphabetically. See [Contacts](#) for more information.

To save a number from standby mode:

1. Enter a phone number and press **OPTIONS** (right softkey) > **Save**.
2. Highlight **New Contact** or **Existing Contact** and press .
3. Highlight a label and press .


4. Use the keypad to enter the new contact name and press  to save the new entry.
or

Search for an existing contact name and press  to save the new number.

5. Press **DONE** (left softkey).

Finding a Phone Number

You can find a phone number in your contacts by searching Contacts for entries by name.


1. Press **CONTACTS** (right softkey) and enter the first letter or letters of an entry. (The more letters you enter, the more specific the search.)
2. To display an entry, highlight it and press . To dial a number, highlight it and press



Dialing and Saving Phone Numbers with Pauses


You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** sends the next set of numbers when you press .
- **2-Second Pause** automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine two-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Press **OPTIONS** (right softkey) > **Hard Pause** or **2-Sec Pause**.
3. Enter additional numbers.
4. Press  to dial the number.


or

Press **OPTIONS** (right softkey) > **Save** to save the number in your Contacts.


Note: When dialing a number with a hard pause, press  to send the next set of numbers.

Abbreviated Dialing


Abbreviated Dialing is similar to speed dialing. You can use either of the following abbreviated dialing features.

- **Contacts Match** retrieves any number saved in your Contacts by entering only the last four digits of the number. Press  to dial the retrieved number.
- **Abbreviated Dialing** retrieves any number saved in your Contacts when you enter the prepended 5 to 6 digits (area code and prefix) to any 4 or 5 digits entered.



To activate Abbreviated Dialing:

1. Press  > **Settings/Tools** > **Settings** > **Others** > **Abbreviated Dialing**.
2. Select **On** or **Off**.

To activate the Contacts Match feature:

1. Press  > **Settings/Tools** > **Settings** > **Others** > **Contacts Match**.
- Select **On** or **Off**.

To place a call using Contacts Match:

1. Enter the last four or five digits of a Contact entry's phone number.
The contact number matching the entered digits displays at the bottom of the screen.
2. Highlight the contact and press . (If there is more than one matched number in your Contacts, highlight a name and then press  to place a call.)

Tip: You can also view the contact details or enter a pause by pressing **OPTIONS** (right softkey) and the appropriate choice after step 1 above.

To place a call using Prepend Abbreviated Dialing:

1. Enter the last four to six digits of a Contact entry's phone number.
The contact number matching the entered digits displays at the bottom of the screen.

- Highlight the contact and press **TALK**. (If there is more than one matched number in your Contacts, highlight a name and then press **TALK** to place a call.)

 
Dialing From the Contacts List

You can dial phone numbers directly from your Contacts list.

- Press **MENU OK** > **CONTACTS**.
- Highlight the contact you want to call and press **MENU OK** to dial the entry's default phone number.
- Highlight a phone number and press **TALK**.

or

- Press **MENU OK** > **CONTACTS**.
- Press and hold the contact you want to call. You will see a blue option wheel in the top right corner of the screen.
- Use your navigation keys to select an option (defined below).

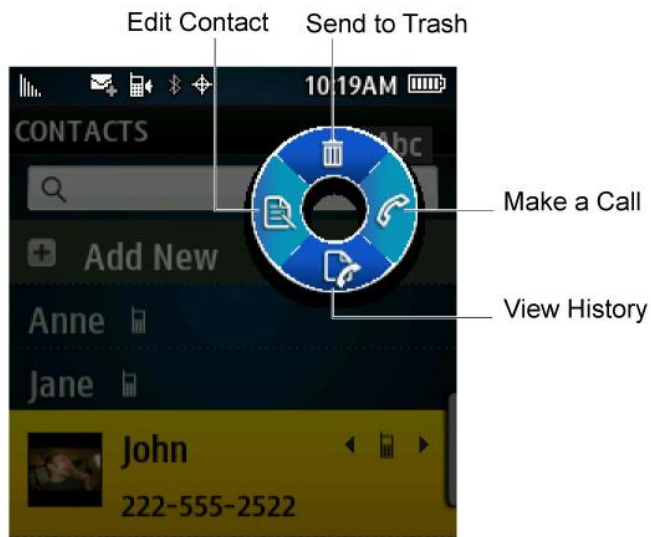


- Highlight the **Make a Call** option and press **MENU OK**.

Three-Way Calling

With 3-Way calling, you can talk to two people who are on two different phone lines at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Place your call to the first recipient.
2. Once you have established the connection, press **OPTIONS** (right softkey) > **3-way call**. (Your first call is automatically put on hold.)
3. Select one of the following:
 - **Contacts** to choose a caller from your Contacts list.
 - **Recent History** to use your History list to locate a call recipient
 - **Enter phone number** to manually enter the call recipient's phone number.
4. Press **TALK** after you highlight the appropriate contact or enter the phone number.
5. When you're connected to the second party, press **JOIN** (right softkey) to combine both calls into a single 3-way call.

 Note: If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

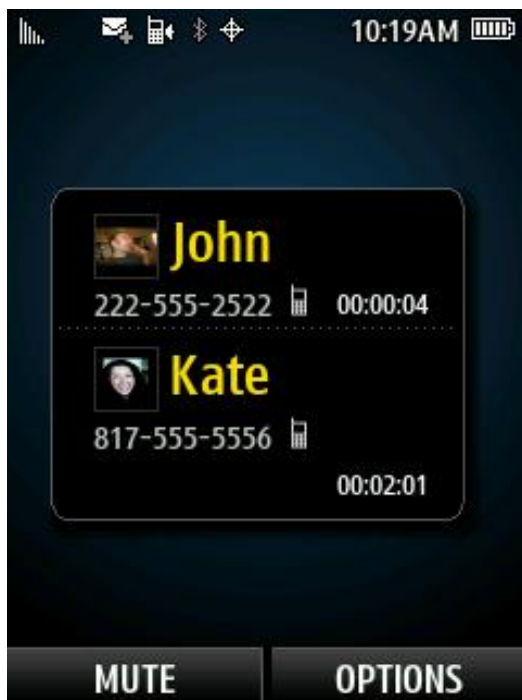

Speed Dialing

You can store up to 98 numbers in your phone's speed dial memory. Dial speed dial entries using one keypress for locations 2–9 or two key presses for locations 10–99.

To use One-Touch Dialing for speed dial locations 2–9:



- ▶ Press and hold the appropriate key for approximately two seconds. The display confirms that you have dialed the number when it shows “connecting...”.

To use Two-Touch Dialing for speed dial locations 10–99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. The display confirms that you have dialed the number when it shows “**connecting...**”.

Plus (+) Code Dialing

When placing international calls, Plus Code Dialing automatically enters the international access code for your location (for example, 011 for international calls made from the U.S.).

 
1. Press and hold  until you see a “+” on the display screen.
2. Dial the country code and phone number, and then press . (The phone automatically prepends the access code for international dialing, followed by the country code and phone number.)

Viewing History

History is a list of the last 240 phone numbers (or Contacts entries) for calls you placed, accepted, or missed. History makes redialing a number fast and easy. It is continually updated as your phone automatically adds new numbers to the beginning of the list and removes the oldest entries from the bottom of the list.

Each entry contains the phone number (if it is available) and Contacts entry name (if the number is in your Contacts). Duplicate calls (same number and type of call) may only appear once on the list.

1. Press  > **History**.

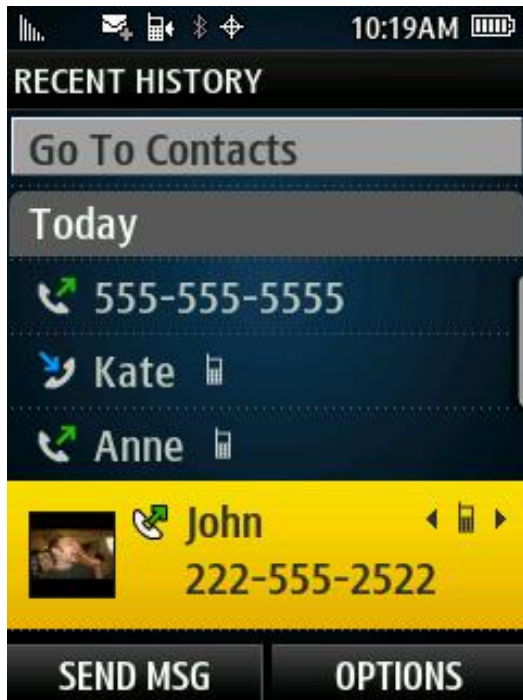

2. Highlight an entry and press .

Shortcut: You can also press **TALK** from standby mode to display your recent calls.

Note: History records only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in history.

If you return a call from the voicemail menu, it will not be included in your phone's history.

History Options

The options available in your phone's history menu include adding entries to create a new group, saving phone numbers, viewing contact details, and deleting history entries.

1. Press  > **History**.

2. Press **OPTIONS** (right softkey) to display the following options:

- **New Group** to select entries from your history and add them to a new group.
- **Save** to save the number to a new or existing entry.



Note: This option displays only when the highlighted number has not been saved as a new contact or appended to an existing one.

- **Contact Details** to view contact information.

Note: This option displays only when the highlighted number is saved to the list of Contacts.

- **Delete** to delete the entry.
- **Delete All** to delete all entries.

To access options for a specific entry:

1. Press  > **History**.
2. Highlight a specific entry and press .
3. Press **OPTIONS** (right softkey) to display the following options:
 - **Delete** to delete the entry.
 - **Delete All** to delete all entries.
 - **Prepend** to add numbers to the beginning of the selected number.

Note: You can only use this procedure for unsaved numbers. See [Prepending a Number from History](#) for more information.

- **Save Contact** to save the number to a new or existing entry.



Note: This option displays only when the number has not been saved as a new contact or appended to an existing one.

- **Contact Details** to view contact information.

Note: This option displays only when the number is saved to the list of Contacts.

Making a Call from History

You can make a call directly from your History list.


1. Press  > **History**.
2. Highlight an entry and press .

Note: You cannot make calls from History to entries identified as No Caller ID or Restricted.


Saving a Number from History

You can save a number from your History list by creating a new contact entry or by adding the number to an existing contact.

1. Highlight a History entry and press **OPTIONS** (right softkey) > **Save**.
2. Select **New Contact** to create a new Contacts entry for the number or **Existing Contact** to save the number to an existing entry.

3. Use the keypad to enter the **Name** and press .

or




- Highlight an existing Contacts entry and press .

After you have saved the number, your phone displays the new Contacts entry. See [Get Started With Contacts](#) for more information.

Prepending a Number from History


If you need to make a call from History and you are outside your local area code, you can add the appropriate prefix by prepending the number.

Note: You can only use this procedure for unsaved numbers in your History. To add a prefix to an existing contact number, you must access the EDIT CONTACT screen. See [Edit a Contact](#) for more information.

1. Press  > **History**.
2. Highlight an entry and press .
3. Press **OPTIONS** (right softkey) > **Prepend**.
4. Enter the prefix and press  to call the number.

Erasing History

You can erase individual History entries through the Options menu.

1. Press  > **History**.
2. Press **OPTIONS** (right softkey) > **Delete All**.
3. If you are certain you want to erase the History, select **DELETE** (left softkey).

or

Select **CANCEL** (right softkey) to return to the previous menu.

Phone Settings

This section provides an overview of the items you can change using your phone's **Settings** menu.

Display

Volume

Ringers

Phone Information

Lock Phone

Location

Parental Controls

Reset/Delete


Others

Display



You can customize the display screen on your phone such as by choosing wallpaper for the main screen and outer screen, changing the brightness and backlight control settings, choosing picture ID for your contacts, choosing the menu style, and by displaying either English or Spanish language.

Changing the Main Screen

You can change the display on the main screen by selecting from a choice of wallpaper or foregrounds.



1. Press  > **Settings/Tools** > **Settings** > **Display** > **Main Screen**.
2. Select **Wallpaper** or **Foregrounds**.

To select a Wallpaper:

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Main Screen** > **Wallpaper**.
2. Select **No Image**, **Take New Picture**, **My Albums**, **Downloaded**, or **Preloaded** and press .



Accounts and Messaging

To select a Foreground:

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Main Screen** > **Foreground**.
2. Select **Clock/Calendar**, **Greeting** or **None** and press .

Changing the Outer Screen


You can customize the outer screen by choosing wallpaper or contrast.

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Outer Screen**.
2. Select **Wallpaper** or **Contrast** and press .



Changing the Picture ID

Select Picture IDs for your contacts, unsaved numbers, or private numbers.



To assign a picture ID to a contact:

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Picture ID** > **Contacts**.
2. Select any of the following options:
 - **All Contacts** to assign the selected picture to all entries in your contacts list.
 - **One Contact** to assign the picture to a single entry in your contacts list.

To assign a picture ID to unsaved numbers:



1. Press  > **Settings/Tools** > **Settings** > **Display** > **Picture ID** > **Unsaved Numbers**.
2. Select **No Image**, **Take New Picture** (see [Taking Pictures](#)), **My Albums**, **Downloaded** or **Preloaded** and press .

To assign a picture ID to private or unknown numbers:

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Picture ID** > **Private/Unknown**.
2. Select **No Image**, **Take New Picture** (see [Taking Pictures](#)), **My Albums**, **Downloaded** or **Preloaded** and press .

Changing the Backlight Control



Select how long the display screen and keypad remain backlit after you press any key.

1. Press  > **Settings/Tools** > **Settings** > **Display** > **Backlight Control**.
2. Select **Backlight Dim**, **Backlight Off**, or **Java Backlight**.
3. Highlight a time setting and press .

Note: Long backlight settings reduce the battery's talk and standby times.

Changing the Brightness

Adjust your screen's contrast (brightness) to suit your surroundings.


1. Press  > **Settings/Tools** > **Settings** > **Display** > **Brightness**.
2. Press your navigation key left or right to adjust the screen contrast and press .

Applying PowerSave Mode

PowerSave Mode preserves the battery charge life and automatically turns off the screen after a certain period of time when you leave it idle. Activating this feature applies the following settings:

- **Backlight Dim** is set to **Always Dim**.
- **Backlight Off** is set to **15 seconds**.
- **Keypad light** is set to **Off**.


To activate PowerSave Mode:

1. Press  > **Settings/Tools** > **Settings** > **Display** > **PowerSave Mode**.
2. Press **On** to activate the feature.
3. Read the feature definitions and press **DONE** (left softkey).

Volume

Adjust your phone's volume settings to suit your needs and your environment.

1. Press  > **Settings/Tools** > **Settings** > **Volume**.

2. Select **Incoming Ringer Volume**, **Playback Volume**, or **Key Beeps**.
3. Using the navigation key, choose a volume level.
4. Press .

Ringers

Ringers help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

Selecting Ringer Types

Getting New Ringers


Selecting Ringer Types

Your phone provides a variety of ringer options that allow you to customize your ring settings for incoming calls, voicemail, messages, your alarm/calendar, power up and power down, and the ringer that sounds your phone's battery alert. These also allow you to identify incoming calls by the ring.

Selecting Ringer Types for Incoming Calls

- ▶ Press  > **Settings /Tools**> **Settings** > **Ringers** > **Incoming Calls**.

To assign a ringer to All Contacts:


1. Select **Contact Entries** > **All Contacts**.
2. Select **Downloaded**, **Preloaded**, or **No Ringer**.
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign a ringer.

To assign a ringer to One Contact:

1. Select **Contact Entries** > **One Contact**.
2. Highlight a single contact and press **ASSIGN** (left softkey).
3. Select one of the following: **Default Ringer**, **Downloaded**, **Preloaded** or **No Ringer**.
4. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.



5. Press  to assign a ringer.

To assign ringers to Unsaved Numbers or Private /Unknown:

1. Select **Unsaved Numbers** or **Private / Unknown**.
2. Select **Downloaded, Preloaded, or No Ringer**.
3. Use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign a ringer.



Selecting Ringer Types for Voicemail

To select a ringer type for voicemail messages:

1. Press  > **Settings/Tools** > **Settings** > **Ringers** > **Voicemail**.
2. Select **Downloaded, Preloaded, or No Ringer**.
3. Select a category and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign a ringer.

Selecting Ringer Types for Messages


To select a ringer that notifies you when a message has arrived:

5. Press  > **Settings/Tools** > **Settings** > **Ringers** > **Messages**.
6. Select **Downloaded, Preloaded, or No Ringer**.
7. Select a category and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
8. Press  to assign a ringer.

Selecting Ringers for Alarm/Calendar


To assign a ringer to your phone's alarm and calendar:

1. Press  > **Settings/Tools** > **Settings** > **Ringers** > **Alarm/Calendar**.

2. Select **Downloaded**, **Preloaded**, or **No Ringer**.
3. Select a category and then use your navigation key to scroll through the available ringers. A sample ringer will sound as you highlight each option.
4. Press  to assign a ringer.


Selecting a Ringer for Power Up/Power Down

To customize your ringer for when you power up or power down your phone

1. Press  > **Settings/Tools** > **Settings** > **Ringers** > **Power Up/Down**.
2. Select **On** or **Off**.


Selecting a Ringer for the Battery Alert

 
To select a ringer to alert you when your battery needs charging:



1. Press  > **Settings/Tools** > **Settings** > **Ringers** > **Battery Alert**.
2. Select **On** or **Off**.

Getting New Ringers

A wide variety of ringers is available from the Sprint Digital Lounge, and you can access them right from your phone. (Additional charges may apply, but some are free.)

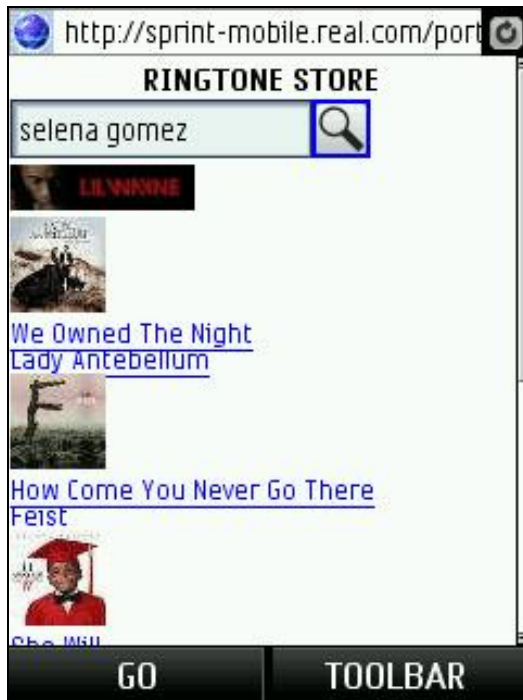1. Press  > **My Stuff** > **Ringers**.
2. Select **Get New Ringers**. (The browser starts and displays the Ringers menu.)




3. Use your navigation key and keypad to search through the available ringers. When you find one you want, highlight it and press .
4. To make a purchase, highlight **Buy** and press  > **DOWNLOAD**.
5. When the download is finished, select an option to continue:
 - **Listen** to listen to the ringer.
 - **Set As** to assign the ringer to a call or message type or to a specific contact.
 - **Shop** to browse for other items to download.

Phone Information

Your phone provides information specific to your phone, such as the phone number, memory status, an icon glossary, your phone's software version, and information about your account.

- ▶ Press  > **Settings/Tools** > **Settings** > **Phone Information**.

The following information is available:

Phone Number/User ID displays your phone number and identification information. Press  to view your **Phone Number/User ID**, **Memory Status**, **Icon Glossary**, **Version**, **Advanced**, or **My Account**. Press **DONE** (left softkey) when finished viewing the information.

Lock Phone

When your phone is locked you can only receive incoming calls and make calls to 911, Sprint Customer Service, or special numbers.

Locking and Unlocking Your Phone


Changing the Lock Code

Locking and Unlocking Your Phone

Lock and unlock your phone by entering a lock code.

Locking Your Phone

Lock your phone by entering your lock code.

1. Press  > **Settings/Tools** > **Settings** > **Lock Phone** and enter your lock code.
2. Select **Lock Now**.


Unlocking Your Phone

You must enter your lock code to unlock your phone.

1. From standby mode, press **UNLOCK** (right softkey).
2. Enter your lock code.

Changing the Lock Code

You can change your lock code through the Lock Phone settings menu.

1. Press  > **Settings/Tools** > **Settings** > **Lock Phone** and enter your lock code.
2. Select **Change Lock Code**, and then enter and reenter your new lock code.

Calling in Lock Mode

You can only place emergency calls when in lock mode.

To call an emergency number from lock mode:

- ▶ Press .




Location



Your phone is equipped with a Location feature for use in connection with location-based services.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Turning Location on will allow the network to detect your position using GPS technology, making some Sprint applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your phone's Location feature:

1. Press  > **Settings/Tools** > **Settings** > **Location**. (The Location disclaimer displays.)
2. Read the disclaimer and press .
3. Highlight **On** or **Off** and press .
4. Press **DONE** (left softkey).

When you turn the Location feature on, the phone displays the  icon. When you turn Location off, the phone displays the  icon.

Parental Controls

Parental Controls provide restrictions to various phone services such as Voice, Messaging, Data, and Camera. These restrictions are governed by an independent Parental Code that is separate from the previously mentioned [Lock code](#).

[Using Parental Controls](#)

[Customize Parental Controls Restrictions](#)

Using Parental Controls


With your phone's parental controls settings, you can disable certain phone services without turning off your phone. You can restrict access to all data services, including Web and text messaging. Disabling data services will avoid any charges associated with these services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable data services again at any time.

To enable Parental Controls:

1. Press  > **Settings/Tools** > **Settings** > **Parental Controls**.


2. Use the navigation keys to toggle Parental Controls **On**.
3. If this is your first time to setup these controls, you will be asked to setup a parental lock code that manages the areas that will be locked via this menu.
 - Enter a new four-digit Lock code.
 - Re-enter the new code and press **Done** (left softkey).

To disable Parental Controls:

1. Press  > **Settings/Tools** > **Settings** > **Parental Controls**.
2. Use the navigation keys to toggle Parental Controls **Off**.
3. Enter your four-digit code and press **Done** (left softkey).

Changing the Parental Control Code


You can change your parental control code.

1. Press  > **Settings/Tools** > **Settings** > **Parental Controls** > **Change Parental Control Code**.
2. Enter a new four-digit Lock code into the keypad.
3. Re-enter the new Lock code and press **Done** (left softkey).

Customize Parental Controls Restrictions

Customize your parental controls options, such as preventing outgoing calls, restricting text messaging, Web access, or camera use.

Note: The Parental Control Restrictions that you set on your phone do not reflect those configured on [Sprint.com](#). For online configuration information, sign in to [My Sprint](#), select the **My Preferences** tab, and select a control feature within **Limits and Restrictions**.

3. Press  > **Settings/Tools** > **Settings** > **Parental Controls** > **Restriction**.
4. Read the disclaimer and press **CONTINUE** (left softkey)
5. Select any of the following buttons to either activate or deactivate an option.
 - **Voice Calls** to lock the phone and prevent outgoing calls. Incoming calls can still be received.

- **Text Messaging** to restrict access to the Messaging folder including Text and Picture messages. You can also choose specific contacts allowed for the user to access.
- **Web** to restrict access to all data features such as Internet and other data usage.
- **Camera** to restrict access to the Camera functionality.
- **Force Location On** to protect GPS activity. Set the feature to **On** to always enable the GPS feature or **Off** to never allow access to GPS capabilities.


6. Press  to return to the previous page.

Reset/Delete

Resetting the phone restores all default settings to your phone.


Reset Settings

You can choose to reset only the phone settings. These are any preferences you have set to personalize your phone.

1. Press  > **Settings/Tools** > **Settings** > **Reset/Delete** and enter your Lock code.
2. Select **Reset Settings**. (You will see a disclaimer.)
3. If you are certain that you would like to restore all factory settings, press **RESET** (left softkey).


Reset Phone

Resetting your phone restores all settings and tools to their default state.

1. Press  > **Settings/Tools** > **Settings** > **Reset/Delete** and enter your Lock code.
2. Select **Reset Phone**. (You will see a disclaimer.)
3. If you are certain that you would like to restore all factory settings, press **RESET** (left softkey).

Delete Stuff


You can choose specific content to delete, rather than resetting the entire phone to its default state.

1. Press  > **Settings/Tools** > **Settings** > **Reset/Delete** and enter your Lock code.
2. Select **Delete Stuff**.

3. Choose from **Text Messages, Call Logs, Cookies and Cache, Downloaded Content, Contacts, or Pictures**.
4. Press **DONE** (left softkey) to delete the information from your phone.

Change Lock Code

You can change your lock code in the Reset/Delete menu as well as through the menu. See [Lock Phone](#) for additional information.

1. Press  > **Settings/Tools > Settings > Lock Phone** and enter your lock code.
2. Select **Change Lock Code**, and then enter and reenter your new lock code.

Others

You can customize additional settings on your phone such as Abbreviated Dialing assignments, call answer and airplane mode settings, Roaming options, Navigation Key shortcut customizations, your phone's Language display, data settings, Contact Match, accessibility, and TTY options.

[Abbreviated Dialing](#)

[Call Answer](#)

[Accessibility](#)

[Airplane Mode](#)

[Data](#)

[Contact Match](#)

[Roaming](#)

[Language](#)

[Contacts](#)

[TTY Options](#)

[Navigation Keys](#)

Abbreviated Dialing


With Abbreviated Dialing, making phone calls is quick and easy.

To activate Abbreviated Dialing:

3. Press  > **Settings/Tools > Settings > Others > Abbreviated Dialing**.



4. Select **On** or **Off**.

To activate the Contact Match feature:

2. Press  > **Settings/Tools** > **Settings** > **Others** > **Contact Match**.
3. Select **On** or **Off**.

Call Answer

Select how to answer incoming calls on your phone: whether you want to press the **Talk** key, to press any number key, or simply to open the phone.


1. Press  > **Settings/Tools** > **Settings** > **Others** > **Call Answer**.
2. Highlight an option and press .
 - **Any Key** to allow you to answer an incoming call by opening the phone or by pressing any key.
 - **Talk Key** to require you to press to answer all incoming calls.
 - **Flip Open** to require you to flip open the phone to answer incoming calls.

Accessibility


Your phone's Accessibility settings let you take advantage of the built-in automatic speech recognition software.

Voice Recognition


You can use your phone's built-in automatic speech recognition (ASR) software to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone, and ASR will recognize your voice and complete tasks by itself.

1. Press  > **Settings/Tools** > **Settings** > **Others** > **Accessibility** > **Voice Recognition**.
2. Select **Confirmation** and select an option.
 - **Automatic** to ask for confirmation only when the system is not sure what you said.
 - **Always Confirm** to always ask for confirmation.
 - **Never Confirm** to never ask for confirmation.


To adapt the system to your voice:

1. Press  > **Settings/Tools > Settings > Others > Accessibility > Voice Recognition.**
2. Select **Adaptation > Adapt Voice.**
3. Press **START** (left softkey) and repeat each word, phrase, or telephone number you hear.


To reset the adaptation:

1. Press  > **Settings/Tools > Settings > Others > Accessibility > Voice Recognition.**
2. Select **Adaptation > Reset Voice > Yes** (left softkey).


To change the Audio mode:

1. Press  > **Settings/Tools > Settings > Others > Accessibility > Voice Recognition.**
2. Select **Audio Modes** and select an option.
 - **Expert Mode** to sound a beep only.
 - **Prompt Mode** to prompt for required information.



To view information about the software:

1. Press  > **Settings/Tools > Settings > Others > Accessibility > Voice Recognition.**
2. Select **About.**

Voice Guide



Voice Guide provides audible output of selected menu items. For example, in **GRID VIEW** of the main menu, if you highlight , you will hear “Contacts”.

To enable Voice Guide:

1. Press  > **Settings/Tools > Settings > Others > Accessibility > Voice Recognition > About.**
2. Highlight **On** and press .

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Camera, Calculator, Calendar, and Voice Memos, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online information.

1. Press  > **Settings/Tools** > **Settings** > **Others** > **Airplane Mode**.
2. Read the disclaimer and press **OK** (left softkey).
3. Highlight **On**, **Off**, or **On Power Up** and press .

Note: While in Airplane Mode, your phone's standby screen will display "Phone off."


Data

Data settings on your phone help prevent accidental connections to the Web.

Net Guard

When you first connect to the Web, the Net Guard will be displayed to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.


To change your Net Guard settings:

- ▶ Press  > **Settings/Tools** > **Settings** > **Others** > **Data** > **Net Guard**.
 - Select **On** to activate the Net Guard.
 - Select **Off** to deactivate the Net Guard.

Note: When enabled, the Net Guard appears only once as long as you have not turned the phone off and on.

 
Update Data Profile

If you choose to change your user name and select a new one online, you must then update the user name on your phone.



- ▶ Press  > **Settings/Tools** > **Settings** > **Others** > **Data** > **Update Data Profile**. (To cancel, press before completing the update.)

Contact Match

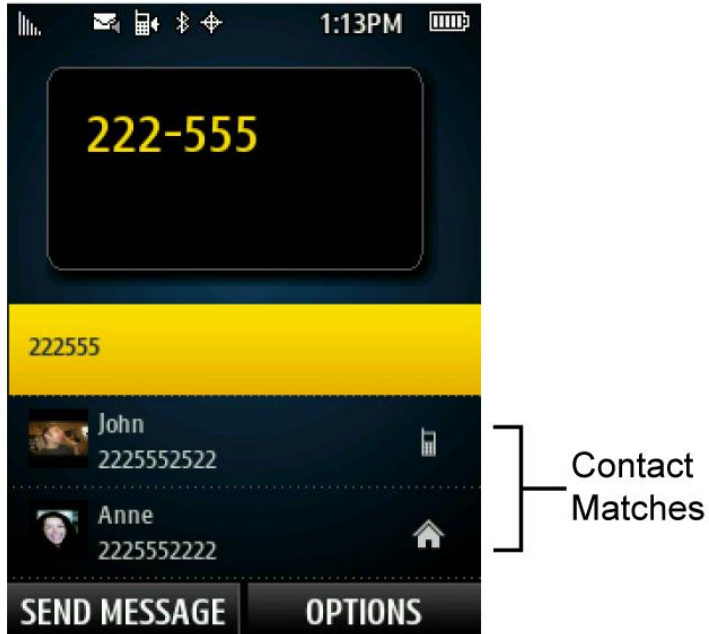The Contact Match feature allows you to choose whether or not contacts matching the numbers you enter into the keypad display under the entry screen. This feature is turned on by default.



To turn Contact Match off:

1. Press  > **Settings/Tools > Settings > Others > Contact Match.**
2. Highlight **Off** and press .



Roaming

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the Nationwide Sprint Network. However, you may not be able to access certain features, such as data services, depending on the available network.

Data Roam Guard

Depending on service availability and roaming agreements, your phone may be able to access data services while roaming on certain digital systems. You can set your phone to alert you when you are roaming off the Nationwide Sprint Network and try to use data services such as messaging.

To set your Data Roam Guard notification:

1. Press  > **Settings/Tools > Settings > Others > Roaming > Roaming Guards > Domestic > Data.**
2. Highlight **On** or **Off** and press .



To use data services when Data Roam Guard is active:

- ▶ When a pop-up notification appears informing you that data roam charges may apply, press **DONE** (left softkey) to connect.

Setting Roam Mode



Your phone allows you to control your roaming capabilities. By using the Roaming menu option, you can determine which signals your phone accepts. Choose from three different settings on your dual-band phone to control your roaming experience.

Note: If you're on a call when you leave the Nationwide Sprint Network, your call is dropped. If your call is dropped in an area where you think Sprint service is available, turn your phone off and on again to reconnect to the network.

1. Press  > **Settings/Tools** > **Settings** > **Others** > **Roaming** > **Roaming Mode**.
2. Highlight an option and press .
 - **Automatic** to seek service on the Nationwide Sprint Network. When Sprint service is unavailable, the phone searches for an alternate system.
 - **Sprint Only** to access only the Nationwide Sprint Network and prevent roaming on other networks.


Language

You can choose to display your phone's onscreen menus in English or in Spanish.

1. Press  > **Settings/Tools** > **Settings** > **Others** > **Language**.
2. Highlight **English** or **Español** and press .

Contacts

You can use the Contacts settings menu to both set up and view information pertaining to your Contacts list.


1. Press  > **Settings/Tools** > **Settings** > **Others** > **Contacts**.
2. Select one of the following options:
 - **Speed Numbers** to view all numbers assigned to the speed dial list.
 - **Hide/Show Secret** to view the list of hidden contacts.

- **My Name Card** to enter information into a new personal name card or view information in your existing name card.
- **Services** to access shortcut dialing numbers for customer services.

TTY Options

A TTY (also known as a TDD or Text Telephone) is a telecommunications phone that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone. Your phone is compatible with select TTY phones. Please check with the manufacturer of your TTY phone to ensure that it is compatible with digital cell phones. Your phone and TTY phone will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY phone, contact your TTY phone manufacturer to purchase the connector cable.

To turn TTY Mode on or off:

1. Press  > **Settings/Tools** > **Settings** > **Others** > **TTY Options**. (You will see an informational message.)

2. Highlight **TTY Full**, **TTY + Talk**, or **TTY + Hear** and press .

or

- Highlight **TTY Off** and press .

To access the state Telecommunications Relay Service (TRS) for assistance with TTY calls:

- ▶ Dial     and press  to reach an operator.

For additional information about Sprint Relay Services and TTY compatibility, call Sprint Relay Customer Service at 1-800-676-3777 or visit www.sprintrelay.com.





For additional technical support you may call 1-888-987-4357, or access the following website:

www.samsung.com/us/consumer/learningresources/mobile/accessibility/pop_accessibility.html.

Navigation Keys

Your phone offers you the option of assigning shortcuts to favorite or often-used functions from the navigation keys. Pressing the navigation key to the assigned direction in standby mode will launch your personally designated shortcuts.

1. Press  > **Settings/Tools** > **Settings** > **Others** > **Navigation Keys**.

2. Highlight a navigation key direction (**Left Navigation, Right Navigation, Up Navigation, Down Navigation**) and press .
3. Highlight a shortcut and press . (If there are additional levels available, press  before selecting your shortcut.)
4. Press  to return to standby mode.

Contacts

This section shows you how to manage your daily contacts by storing their names and numbers in your Contacts list.

[Get Started With Contacts](#)

[Add a Contact](#)

[Save a Phone Number](#)

[Edit a Contact](#)

[Send Contacts via Bluetooth](#)

Get Started With Contacts

Your phone automatically sorts the Contacts entries alphabetically. Your phone can store up to 600 Contacts entries. Contacts entries can store up to a total of 4200 phone numbers, and each entry's name can contain 64 characters.

 
Access Contacts

There are a two ways to access and display Contacts.

- ▶ From the Home screen, press **Contacts**.


or


Press  > **Contacts**.

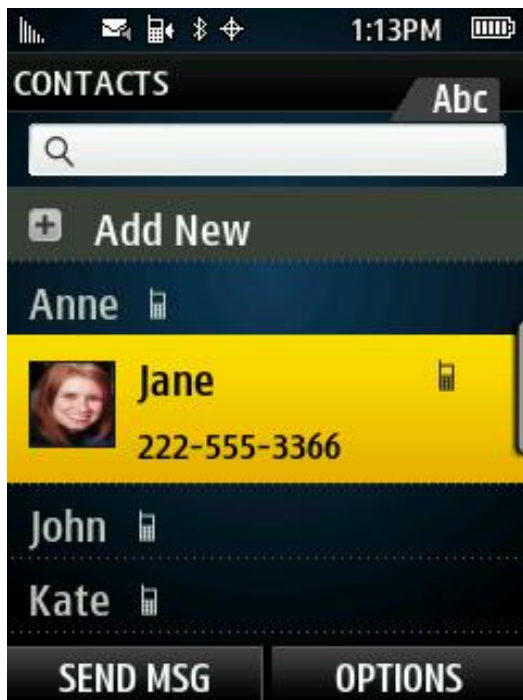




Add a Contact

 You can add a contact by choosing the **Add New** option from the Contacts screen.

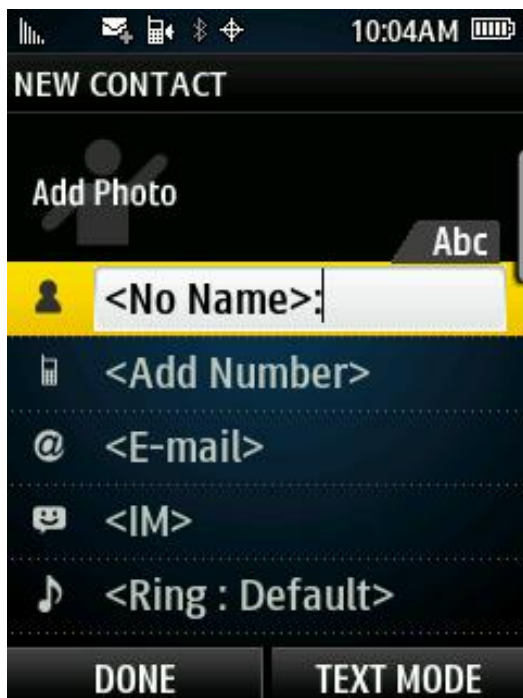1. Press  > **Contacts** > **Add New**.
2. Press **New Contact**.



3. Enter a name for the new entry and press . See [Compose Text Messages](#) for more information.
4. Enter a phone number and press .
5. Highlight a label for the entry (**Mobile, Home, Work, Pager, Fax, or Others**) and press .
6. Highlight the additional option or options you want to add:
 - **Add Photo** to assign a picture to the entry.
 - **Add Number** to add a phone number to the entry.
 - **Email** to add an email address.
 - **IM** to add an Instant Messenger address to the entry.
 - **Ring** to assign a custom ring tone to the entry. This custom ring tone will be played when an incoming call from this entry is announced.
 - **URL** to add a website's URL to the entry.
 - **Address** to enter a physical address for the contact.
 - **Birthday** to add a birth date to the entry's information card.
 - **Memo** to add a note, street address, or other information.
 - **Job Title** to add the entry's business or organization position title.
 - **Organization** to enter business information such as an organization name.
7. To assign a speed dial number, highlight the new phone number and press **OPTIONS** (right softkey) > **Set Speed Dial**.

After saving the number, your phone displays the new entry.

Contacts List Options

To display a Contacts entry:

1. From the Home screen, press **CONTACTS** (right softkey).


or

Press  > **Contacts**.

2. Highlight an entry and press .



Tip: You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

To access a Contacts entry's options:

1. Display an entry and press **OPTIONS** (right softkey).
2. Highlight an option and press .
 - **New Group** to create a new group in which to assign contacts.
 - **Edit Contact** to display the contact details screen and edit the current information.
 - **Delete Contact** to remove the contact from the Contacts.
 - **Contact History** to display the call and messaging history related to that contact.
 - **Send Contact** to forward the contact information to a Bluetooth.
 - **Set as Secret** to hide the contact's information during an incoming call.
 - **Settings** to modify the entire contact information.
 - **Speed Numbers** to view all numbers assigned to the speed dial list.
 - **Hide/Show Secret** to view the list of hidden contacts.
 - **My Name Card** to enter information into a new personal name card or view information in your existing name card.
 - **Services** to access shortcut dialing numbers for customer services. See [Sprint Support Services](#) for more information.



Save a Phone Number

Save a number from standby mode by entering the number and accessing the Options menu. You can also label the number by type, such as mobile, home, work, pager, fax, or others.

1. Enter a phone number and press **OPTIONS** (right softkey) > **Save**.
2. Highlight **New Contact** or **Existing Contact** and press .
3. Highlight a label for the entry (**Mobile**, **Home**, **Work**, **Pager**, **Fax**, or **Others**) and press .

4. Enter the new contact name and press **DONE** (left softkey) to save the new entry.

or

1. Search for an existing contact name and press  to save the new number.
2. Highlight a label for the entry (**Mobile, Home, Work, Pager, Fax, or Others**) and press .

Edit a Contact

Once you've added a contact, you can add or edit any of the information in the entry, assign a caller ID picture, assign speed dial numbers and secret contact entries, or delete a contact.

[Add or Edit Information for a Contact](#)

[Assign Speed Dial Numbers](#)

[Assigning a Picture to an Entry](#)

[Assigning Secret Contact Entries](#)

[Delete a Contact](#)




Add or Edit Information for a Contact

Once you've entered a contact into your phone, you can add to or edit that contact's information.

1. From the Home screen, press **CONTACTS** (right softkey).

or

Press  > **Contacts**.

2. Highlight an entry and press .
3. Highlight the information you wish to edit (**Name, Ringer, etc.**) and press .
4. Add or edit the information and press .
5. Press **DONE** (left softkey) to save your changes.

Assign Speed Dial Numbers

Your phone can store up to 98 phone numbers in speed dial locations. (For details on how to make calls using speed dial numbers.

You can assign speed dial numbers when you add a new Contacts entry, when you add a new phone number to an existing entry, or when you edit an existing number.

To assign a speed dial number to a new phone number:

1. Add a phone number to a new or to an existing Contacts entry.
2. Press **OPTIONS** (right softkey) > **Set Speed Dial**.
3. Enter a number that you want to display or use your navigation keys to scroll up and down through the available locations.
4. Highlight an available speed dial location and press **ASSIGN** (right softkey).
5. Press **DONE** (left softkey) to return to the **CONTACT DETAILS** screen.

To assign a speed dial number to an existing phone number:

 
1. Display a Contacts entry.
2. Press **OPTIONS** (right softkey) > **Edit Contact**.
3. Highlight a phone number and press **OPTIONS** (right softkey) > **Set Speed Dial**.
4. Enter a number that you want to display or use your navigation keys to scroll up and down through the available locations.
5. Highlight a speed dial location and press **ASSIGN** (right softkey).

Note: Location 1 is automatically assigned to Voicemail.

6. Press **DONE** (left softkey) to return to the **CONTACT DETAILS** screen.

Finding Speed Dial Numbers


1. Press  > **Contacts**.
2. Press **OPTIONS** (right softkey) > **Settings** > **Speed Numbers**.

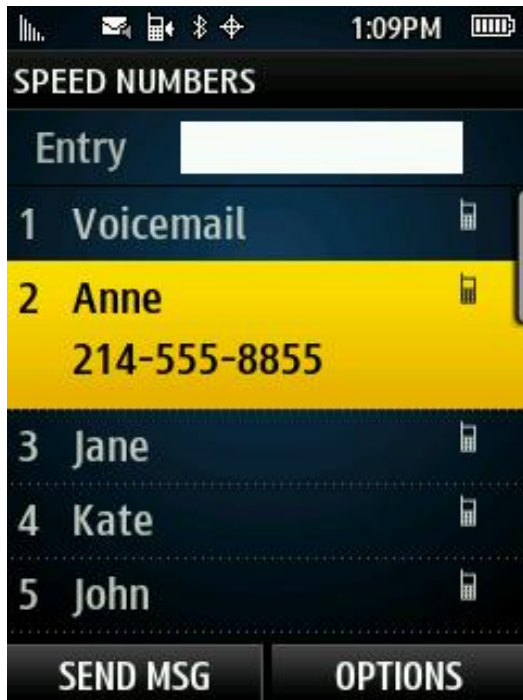

3. Scroll through speed dial entries.

or

1. Enter the number of a speed dial location using your keypad.

2. To display an entry, highlight it and press .

3. Press **DONE** (left softkey) to return to the SPEED NUMBERS screen.

Assigning a Picture to an Entry

Assign a picture to display each time a certain contact calls you.

1. Display a Contacts entry.

2. Press **OPTIONS** (right softkey) > **Edit Contact**.

3. Highlight **Add Photo** and press **ADD** (right softkey) to display the ADD PHOTO menu.

4. Highlight an option, such as **Get New Screen Saver**, **None**, **Take New Picture**, **My Albums**, or **Screen Saver**.

5. Highlight a picture using the navigation keys and press **ASSIGN** (left softkey).

- If you selected **Take New Picture**, the camera will launch. Take a new picture and press **ASSIGN** (left softkey). See [Taking Pictures](#) for more information.
- If you selected **My Albums**, tap the desired picture and press **ASSIGN** (left softkey).

6. Press **DONE** (left softkey) to save the picture assignment.

Assigning Secret Contact Entries

Making an entry secret hides its phone number(s) and requires your lock code to edit the entry. The phone numbers and other information are replaced with “(SECRET).”

To make an entry secret:

1. Display a Contacts entry.
2. Press **OPTIONS** (right softkey) > **Set as Secret**.

To make an entry public:

1. Display a Contacts entry.
2. Press **OPTIONS** (right softkey) > **Set as Not Secret**.
3. Press **DONE** (left softkey) to save the new setting.

To hide a secret entry:

1. Display the Contacts list.
2. Press **OPTIONS** (right softkey) > **Settings** > **Hide Secret**.
3. Enter your LOCK CODE. The secret contact entry is hidden.

To unhide a secret entry:

1. Display a Contacts entry.
2. Press **OPTIONS** (right softkey) > **Settings** > **Show Secret**.
3. Enter your LOCK CODE. The secret contact entry is displays in your Contacts list.


Delete a Contact

You can delete contacts from your contacts list.

1. Display a Contacts entry.
2. Press **OPTIONS** (right softkey) > **Delete Contact**.
3. Press **DELETE** (left softkey) to confirm the deletion.

Send Contacts via Bluetooth

With the Bluetooth capabilities on your phone, you can transmit contact information to another Bluetooth-compatible phone.

1. Highlight a Contacts entry from the Contacts list.
2. Press **OPTIONS** (right softkey) > **Send Contact**.
3. Scroll up or down the Contact entry list using the Up and Down Navigation Keys.
4. Highlight an entry and press . A checkmark displays on the left side of the selected Contact entry. You can select multiple entries using the same process.
5. Press **SEND CONTACTS** (left softkey)
6. Highlight a paired Bluetooth phone to use and press **SELECT** (left softkey) > **Yes**.

Accounts and Messaging

With text messaging, you can send and receive instant text messages between your wireless phone and another messaging-ready phone. When you receive a new message, a notice will automatically display on your phone's screen.


Text Entry

Messages



Text Messaging and MMS








Text Entry

Text entry settings allow you to customize your text entry by selecting options such as Auto Capital, Auto-Space, Predictive Language, or Word Completion.

1. Press  > **Settings/Tools** > **Settings** > **Text Entry**.
2. Select from **Auto-Capital**, **Auto-Space**, **Predictive Language**, **Personal Dictionary**, **Word Choice List**, **Word Prediction**, **Word Completion**, **Use My Words**, and **Help**.





 







ABC Mode

In Abc mode, also known as multi-tap entry, you press keys one, two, three, or four times to enter the letters you see on the keypad. For example, press  once for "a," twice for "b", or three times for "c"; or press  once for "p," twice for "q," three times for "r," or four times for "s."

 1. Press  > **Messages** > **Send Message**. See [Compose Text Messages](#) for more information.
2. From the text entry screen, press **OPTIONS** > **Text Mode** > **Abc**.
3. Press the corresponding keys repeatedly until the correct letter appears. (For example, to enter the word "Bill," press  twice,  three times,  three times, and  three times again.) (If you make a mistake, press  to erase a single character. Press and hold  to erase an entire word.)

By default, the first letter of an entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.


Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
 1	. @ ? ! - , & : ' / ; \$ 1	
 2	A B C 2	a b c 2
 3	D E F 3	d e f 3
 4	G H I 4	g h i 4
 5	J K L 5	j k l 5
 6	M N O 6	m n o 6
 7	P Q R S 7	p q r s 7
 8	T U V 8	t u v 8
 9	W X Y Z 9	w x y z 9
 0	0	
 Space	Space	
 Shift	Shift	Caps Lock Unshift


Entering Numbers, Symbols, and Smiley's

You can easily enter number, symbols, and emoticons into your text message by using the following procedures.

To enter numbers:


1. Press  > **Messages** > **Send Message**. See [Compose Text Messages](#) for more information.
2. From the text entry screen, press **OPTIONS** > **Text Mode** > **123**.
3. Press the appropriate key indicated on the display.

To enter symbols:

1. Press  > **Messages** > **Send Message**. See [Compose Text Messages](#) for more information.
2. From the text entry screen, press **OPTIONS** > **Text Mode** > **Symbols**.

3. Press the appropriate key indicated on the display.

To enter “emoticons” (smiley's):

1. Press  > **Messages** > **Send Message**. See [Compose Text Messages](#) for more information.
2. From the text entry screen, press **OPTIONS** > **Text Mode** > **Smiley's**.
3. Press the appropriate key indicated on the display.

Messages

Your phone's advanced messaging capabilities let you send and receive many different kinds of text messages without placing a voice call.

Message Settings


Managing Preset Messages

Message Settings

Your phone's messaging settings include message notification, providing a callback number and customized signature with your message, the option to reset the messaging envelope, and the auto-combination setting to view messages in a single thread.



Setting Message Notification

When you receive a message, your phone notifies you by displaying an icon on your display screen. You can also choose to be notified with a message notification on your display screen.

1. Press  > **Messages** > **Settings** > **Notification**.
2. Select **Message & Icon** or **Icon Only**.



Setting a Callback Number

You can add a phone number in the heading which informs the recipient of alternate means to respond to the message.

1. Press  > **Messages** > **Settings** > **Callback Number**.
2. Select **None**, (your phone number), or **Other** and press .



Adding a Customized Signature

Add a customized signature to each message you send.

1. Press  > **Messages** > **Settings** > **Signature**.
2. Select **On** or **Off** to activate or deactivate the Signature function.
3. Enter a signature and press .
4. Press **DONE** (left softkey).



Resetting the Envelope

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.

1. Press  > **Messages** > **Voicemail** > **Clear Envelope**.
2. Highlight **Yes** or **No** and press .

Using Auto Combination


You can display single messages from the same thread into multi-segment messages. The messages would then display a single message.

1. Press  > **Messages** > **Settings** > **Auto Combination**.
2. Highlight **On** or **Off** and press .


Managing Preset Messages

Your phone is loaded with 20 preset messages to help make sending text messages easier. Customize or delete these messages, such as “Where are you?”, “Call me”, and “Meet me at” to suit your needs, or add your own messages to the list.


To delete a preset message:

1. Press  > **Messages** > **Settings** > **Preset Messages**. (You will see the list of preset messages.)
2. Press **OPTIONS** (right softkey).
3. Select **Delete**.
4. Select **Yes** to delete the message. The message is deleted from the list of Preset Messages.

To edit a preset message:

1. Press  > **Messages** > **Settings** > **Preset Messages**. (You will see the list of preset messages.)
2. Highlight a message and press **EDIT** (left softkey).
3. Edit the message. See [Compose Text Messages](#) for more information.
4. Press **DONE** (left softkey). Your new message is added to the beginning of the list.

To add a new preset message:

1. Press  > **Messages** > **Settings** > **Preset Messages**. (You will see the list of preset messages.)
2. Press **OPTIONS** (right softkey).
3. Select **Add New**.
4. Enter a new message. See [Compose Text Messages](#) for more information.
5. Press **DONE** (left softkey). Your new message is added to the beginning of the list.

Text Messaging and MMS

With text messaging, you can send and receive instant text messages between your wireless phone and another messaging-ready phone.

Note: See your service plan for applicable charges for messaging.

[Compose Text Messages](#)

[Receiving Text Messages](#)

[Replying to Text Messages](#)

[Preset Messages](#)

Compose Text Messages

Quickly compose and send text messages on your phone.

- ▶ Press  > **Messages** > **Send Message**.


To select a single recipient:

- ▶ Highlight a contact from the **Go to Contacts** list and press .

or

Press **NEW ADDR** (right softkey) to enter new recipient information.

To select multiple recipients:

1. Press **MULTIPLE** (left softkey) to select multiple contacts.
2. Highlight an entry and press . Repeat the process for each entry in the list.
3. Press **CONTINUE** (left softkey).

 
To compose a message:

1. From a screen where you can enter text, press **OPTIONS** (right softkey) to change the text input mode.
2. Select one of the following options:
 - **Text Mode** (See [Text Entry](#) for more information.)
 - **Predictive Text** to enter text using a predictive text system that reduces the number of key presses required while entering a word.
 - **Abc** to use multi-tap entry – press once for “a,” twice for “b,” three times for “c”.
 - **123** to enter numbers by pressing the numbers on the keypad.
 - **Symbols** to enter symbols.
 - **Smiley’s** to enter “emoticons”.
 - **Text Settings** to turn **On** or **Off** the following: **Auto-Capital**, **Auto-Space**, **Predictive Language**, **Word Choice List**, **Word Prediction**, **Word Completion**, and **Use My Words**.
 - **Add Preset Message** to enter preprogrammed messages.

Note: See your service plan for applicable charges for text messaging and SMS voice messaging.


- **Add/Change Recipient** to add a new recipient using the **NEW ADDR** key (right softkey) or change the current message recipient to one currently saved in the Contacts List.
- **Add/Change Attachment** to change or add a new attachment. To add, select one of the following: **My Albums**, **Take new picture** or **Voice**. Change the current attachment by selecting or de-selecting it from the CHANGE ATTACHMENTS screen.
- **Add/Change Subject Line** to enter a new subject or modify the existing subject text.

- **Save as Draft** to save the message in the Messages folder before sending it to the recipient.
- **Mark as Urgent** to assign a high importance to the message.
- **Set Callback #** to add a phone number in the heading informing the recipient of alternate means to respond to the message.
 - **None**
 - (Your phone number)
 - **Other**

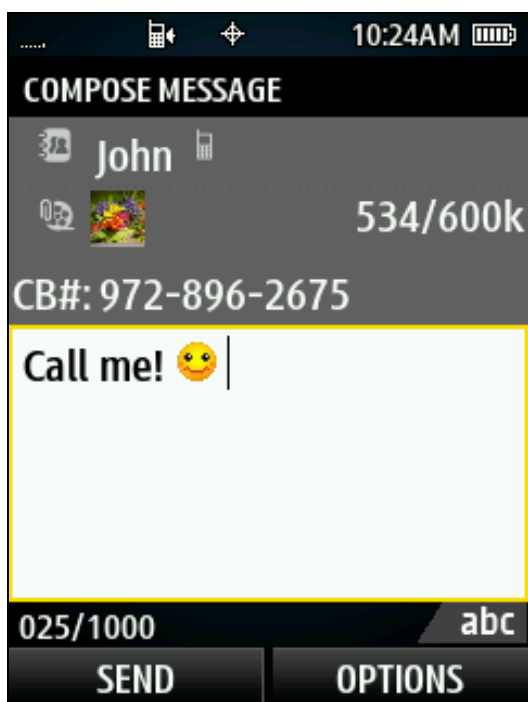

Receiving Text Messages

When you receive a text message, you will hear an announcement tone and an icon is displayed at the top of the screen.

1. Press **Messages** (left softkey) > **Messages**.
2. Select the newly received text message and press .

Replying to Text Messages

It's easy to reply to text messages you receive on your phone.

1. While the message is open, press **REPLY** (left softkey).

2. Compose your reply.
 - To type a message, use your keypad to enter your message. Use the right softkey to select an input mode.
 - To use a preset message, press **OPTIONS** (right softkey) > **Add Preset Message**. Highlight a message using the navigation keys and press
 - To enter a smiley, press **OPTIONS** (right softkey) > **Text Mode** > **Smiley's**.
 - Press the number that corresponds with the desired emoticon (from your keypad).
3. Review your reply and press **SEND** (left softkey). (You may select additional messaging options by pressing **OPTIONS** [right softkey] to set the callback number or the message priority to Mark as Urgent.)

Preset Messages

Preset messages make it easy to compose text messages.

To add or edit preset messages:

- ▶ Press **Messages** (left softkey) > **Settings** > **Preset Messages** > **OPTIONS** (right softkey) > **Add New**.

or

Highlight a preset message and press **EDIT** (left softkey)

Applications and Entertainment

All your phone's features, such as applications, downloading games, ringers, and more, and shopping are accessible through the Applications list.

[Applications](#)

[Downloading Games, Ringers, and More](#)



[GPS Services](#)

[Shopping](#)


Applications

You can access a wide variety of applications in many different categories with your phone and data service.

To get started with applications:

1. Press  > **My Stuff** > **Applications**.
2. Highlight **Get New Application** to download new content or **My Stuff Manager Applications** to view previously downloaded content and press .
3. Select **Run** when the download finishes.
4. Follow the instruction to customize your application and then use the navigation key or press **Menu** (right softkey) to explore your options.

To run applications after they've been loaded:

1. Press  > **My Stuff** > **Applications** > [application]. (The selected application will launch.)
2. Use your navigation key or the **TOOLBAR** softkey to explore your options. Web and Data Services

Important Privacy Message: Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't

comfortable with the third-party application's policies, don't use the application.

Downloading Games, Ringers, and More

You have access to a dynamic variety of downloadable content, such as games, ringers, screen savers, and other applications. (Additional charges may apply.)

Accessing the Download Menus

Downloading an Item


My Stuff Manager

Follow the basic steps below to access and download these items.

Note: If you have not used the **BACK** button then you cannot access the **FORWARD** button.

Accessing the Download Menus

Your phone's My Stuff menu gives you access to Games, Ringers, Screen Savers and Applications.

1. Press  > **My Stuff**.
2. Select a download category (Games, Ringers, Screen Savers, or Applications) and then select **Get New**. (The browser will start and take you to the corresponding download menu.)

To access the download menus from the Web browser:

1. From the home page, select **Downloads**.
2. Select **Games**, **Ringers**, **Screen Savers**, or **Applications** to go to the corresponding download menu.

You can search for available items to download in a number of ways:

- **Featured** displays a selection of featured items.
- **Categories** allows you to narrow your search to a general category. (There may be several pages of available content in a list. Select Next 9 to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search.

Downloading an Item


Once you've selected an item, highlight it and press **Menu/OK**, or press **OK** (left softkey) to download it. You will see a summary page for the item including its title, the vendor, the

download details, the file size, and the cost. Links allow you to view the License Details page, which outlines the price, license type, and length of license for the download, and the Terms of Use page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy**. (The item will download automatically. When you see the New Download screen, you have successfully downloaded the item to your phone.)

Note: If you have not previously purchased an item, you will be prompted to create your purchasing profile.

2. Select an option to continue:
 - Select **Use/Run/View** to assign the downloaded item (or to start, in the case of a game or an application). Your data session will end, and you will be redirected to the appropriate phone menu screen.
 - Select **Set as** to assign a ringer or wallpaper to a phone function.
 - Select **Settings** to configure downloaded games or applications.
 - Select **Shop** to browse for other items to download.
 - Press  to close the browser and return to standby mode.

My Stuff Manager

Whether you purchase your content from your phone or from your online account management page at www.sprint.com, My Stuff Manager stores all of your purchases and you may download them to your phone from there.



This is a storage area on the Nationwide Sprint Network that allows you to store all your purchased files. The files remain in My Stuff Manager until their license terms have expired – even after you have downloaded the content to your phone.

This provides you with a convenient place to access information about your downloaded files without having to store the information in your phone's memory.


To access My Stuff Manager:

- ▶ Press  > **My Stuff** > [**Application Manager, Games, Ringers, Screen Savers, or Applications**].

To download purchased content from My Stuff:

1. From the **My Stuff** display, highlight an item and press . (You will see the information page for the selected item.)
2. Highlight **Download** and press . (The item will download automatically. When you see the **New Download** screen, you have successfully downloaded the item to your phone.)

Select an option to continue:

- Select **Use/Run/View** to assign the downloaded item (or to start, in the case of a game or an application). Your data session will end, and you will be redirected to the appropriate phone menu screen.
- Select **Set** as to assign a ringer or wallpaper to a phone function.
- Select **Settings** to configure downloaded games or applications.
- Select **Shop** to browse for other items to download.
- Press  to close the browser and return to standby mode.

For complete information and instructions on downloading Games, Ringers, Screen Savers, and Applications, visit the Digital Lounge at sprint.com.

GPS Services




Your phone's built-in GPS capability gives you access to Sprint Family Locator.

Activating Location Mode

Sprint Family Locator

Activating Location Mode

Before using any of the location-based services, you must turn on your phone's location mode.

1. Press  > **Settings/Tools** > **Settings** > **Location**. (You will see the **Location** disclaimer.)
2. Read the disclaimer and press .
3. Highlight **On** and press .

Sprint Family Locator

Sprint Family Locator uses GPS technology to locate your child's phone and display the location on an interactive map.

Note: Sprint Family Locator service requires an additional monthly fee. Visit www.sprint.com/familylocator for complete details.

You may also use Sprint Family Locator with any computer with an Internet connection. You can also sign up for Sprint Family Locator online at www.sprint.com/familylocator.

To activate Sprint Family Locator from your phone:

1. Press  > **Web**.

Note: If Net Guard is enabled and displayed, press **OK** (right softkey) to continue and launch the Web. See [Net Guard](#) for more information.

 
2. Enter <http://SFL.sprint.com/m> into your phone's browser and follow the directions within the Family Locator Web page.

Shopping

The Shopping application is a direct link to downloadable content, such as games, ringtones, screen savers, and other applications. (Additional charges may apply.)

Follow the basic steps below to access and download these items.

- ▶ Press  > **Shopping**.

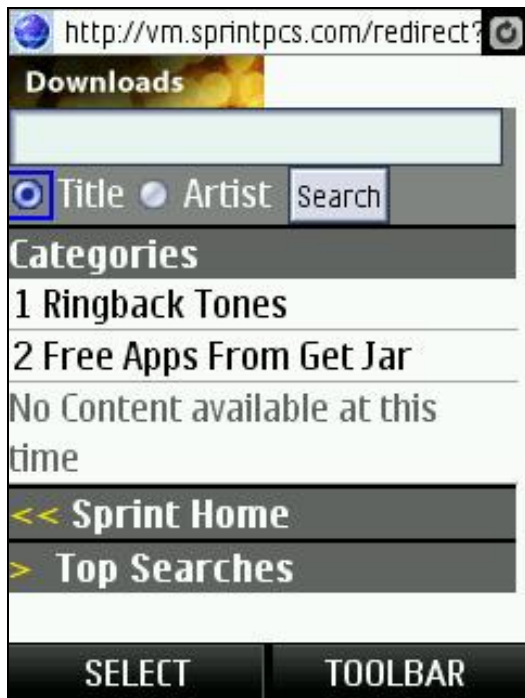

Web and Data

With your Sprint service, you are ready to start enjoying the advantages of data services and Web access from your phone. This section will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your phone.

Getting Started with Web and Data Service


Your User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com." (For example, the third John Smith to sign up for Sprint data services might have jsmith003@sprintpcs.com as his user name.)

When you use data services, your user name is submitted to identify you to the Nationwide Sprint Network. Your user name will be automatically programmed into your phone. You don't have to enter it.



Finding Your User Name

If you aren't sure *what your user name is*, you can easily find it on your phone.

- ▶ Press  > **Settings /Tools> Settings > Phone Information > Phone Number/User ID.**

Updating Your User Name

If you choose to change your user name and select a new one online, you must then update the user name on your phone.

- ▶ Press  > **Settings /Tools> Settings > Others > Data > Update Data Profile.** (To cancel, press  before completing the update.)

Launching a Web Connection

You can access the Web from your phone.



- ▶ Press  > **Web.** (*Your data connection starts and you see the SprintWebSM home page.*)

While connecting, you may see an animation and a "Connecting" message.

Data Connection Status and Indicators

Your phone displays *the current status of your data* connection through indicators at the top of the screen.

The following symbols are used:

Icon	Description
	Your phone is on and is connected to the Sprint 2G data network. When the arrows are white, your phone is transferring data (for example, when you are opening a Web page) and you can receive calls.
	When the arrows are gray, your phone is connected to the network but is not currently transferring data (for example, when you are viewing a Web page that is completely open), and you can receive calls. If you do not see an indicator, your phone does not have a current data connection.

Note: If Net Guard is enabled and displayed, press **OK** to continue and launch the Web.

Tip: To change the default launch page to the last page you viewed, press **TOOLBAR > OPTIONS > Advanced > Startup page** and select **The last page I viewed**.


Navigating the Web

Navigating through *menus and websites during a data* session is easy once you've learned a few basics. Here are some tips for getting around:

Softkeys

During a data session, the bottom line of your phone's display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkeys directly below the phone's display screen.

To use softkeys:

- ▶ Press a softkey. (If you see an additional pop-up menu when you press the softkey, select the menu items using your keypad [if they're numbered], or by highlighting the option and pressing .

Tip: Depending on which websites you visit, the labels on the softkeys may change to indicate their function.

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some websites.

To scroll line by line through websites:

- ▶ Press the navigation key up and down.

To scroll page by page through websites:

- ▶ Press the volume buttons on the side of the phone.

Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

To select onscreen items:

- ▶ Use the navigation key to highlight an item, and then press the left softkey (or press



Tip: You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK."

If the items on a page are numbered, you can use your keypad (number keys) to select an item. Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

To select links:

- ▶ Highlight the link and press the appropriate softkey.

Going Back

To go back one page:

- ▶ Press **BACK** the key on your phone.

Going Home

To return to the home page from any other page:

- ▶ Press **TOOLBAR** (right softkey) > **MY HOMEPAGE**.

Data Services FAQs

Check our list of FAQs to answer questions you may have about your phone's data services.

How will I know when my phone is ready for data service?

Your user name (for example, bsmith01@sprintpcs.com) will be displayed when you press > **Settings /Tools**> **Settings** > **Phone Information** > **Phone Number/User ID**.



How do I sign in for the first time?

You are automatically signed in to access data services when you turn on your phone.

How do I know when my phone is connected to data services?

Your phone automatically connects when you use data service or an incoming message arrives. You will also see the indicator.

Can I make calls and use data services at the same time?

You can receive calls while data is active. You can place an outgoing call anytime, but it will interrupt any in-progress data session.

When is my data connection active?

Your connection is active when data is being transferred. Outgoing calls are allowed. When active, the indicator is animated on the display screen.



When is my data connection dormant?

If your phone receives no data for 10 seconds, the connection goes dormant. When the connection is dormant, you can make and receive voice calls. (The connection may become active again quickly.) If your phone receives no data for an extended period, the connection will terminate.

Can I sign out of data services?

You can sign out without turning off your phone; however, you will not be able to browse the Web or use other data services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time.

To sign out:

1. Press  > **Settings /Tools> Settings > Others > Data > On/Off.**
2. Press **NEXT** (left softkey) > **Disable Vision** and press 

Browser

The browser menu offers additional options to expand your use of the Web on your phone. Although the home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific websites, are not available. For these and other functions, you will need to use the browser menu.

Opening the Browser Menu

The browser menu or toolbar may be opened anytime you have an active data session, from any page you are viewing.

To open the browser toolbar:

- ▶ Press **TOOLBAR** (right softkey). (You will see the browser menu.)

Options available under the browser menu include:

- **BACK** to visit the previous page.
- **FORWARD** to move forward a page.

Note: You can also use the key for deleting text (like a BACKSPACE key) when you are entering text.

- **MY HOMEPAGE** returns the browser to the SprintWebSM home page.
- **MY PAGES** accesses your favorite and recently viewed Web pages.
- **SEARCH** launches the Google[®] search engine.
- **OPTIONS** accesses the Browser options:
 - **Set a Homepage** to set the current page as your browser homepage.
 - **Font size** allows use of a slider to adjust the current text size displayed within the browser. Press **Save** to store your new setting.
 - **Send this page to** copies the current Web address and attaches it to an outgoing text message.
 - **Clear private data** allows you to delete the current browsing history, browser cache, cookies, and stored passwords.
 - **Help** provides browser shortcut information.
 - **Advanced** allows you to access additional Browser menu options such as: **Icon Row**, **Startup page**, **Page info**, **Images on/off**, **Virtual mouse**, **Redirect prompt**, **Send referrer**, **Turn on error logging**, **Certificates**, **Reset browser setting**, **Reset browser**, and **About Browser** prompt.

Restarting the Web Browser

If the Web browser seems to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.

1. Press **TOOLBAR** (right softkey) to open the browser menu.
2. Select **OPTIONS > Advanced > Reset Browser Settings**.


Camera

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.

Taking Pictures

 
You can activate the phone's camera mode to take pictures whether the phone is open or closed.



To take a picture with the phone open:

1. Press  > **Photos** > **Camera** to activate camera mode. Additional camera options are available through the camera mode **OPTIONS** (right softkey) menu.

Shortcut: To activate camera mode menu, you can also press the camera key () twice or press and hold the side camera button to open the camera function.

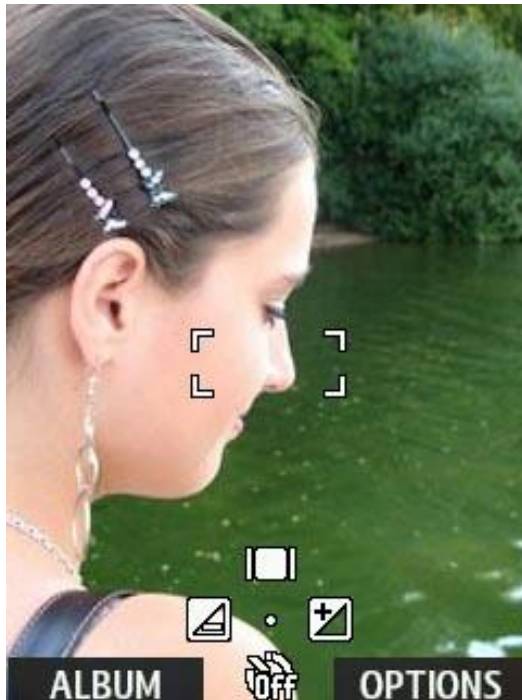

2. Using the phone's display screen as a viewfinder, aim the camera lens at your subject.



3. Press  until the shutter sounds. (Your phone automatically saves the picture to the Album.)
4. Press  to return to camera mode to take another picture.

To take a picture with the phone closed:

Note: The keys are locked when the phone is closed. Press and hold the camera key and volume key together to unlock the keys.

1. Press  > **Photos** > **Camera** to activate camera mode.
2. Point the camera lens at yourself with the phone closed. (You can check the picture framing through the external display screen.)
3. Press  to take the picture. (Your phone automatically saves the picture.)

Displaying the Status

The Status feature allows you to zoom in on an object when you take a picture.

- ▶ From camera mode, press the navigation key up and select an option:
 - **Status off** removes the status information from the screen.
 - **Status on** displays the status icons that reflect your current settings.

Using the Timed Mode

The Timed Mode feature allows you to take a photo within a 5 or 10 second window of time.

- ▶ From camera mode, press the navigation key down and select an option:
 - **off** removes the status information from the screen.
 - **5** gives you a five second time delay before the shutter automatically captures the photo.
 - **10** gives you a ten second time delay before the shutter automatically captures the photo.

Camera Settings

When the phone is open and in camera mode, press **OPTIONS** (right softkey) to display additional camera settings and options:

Shooting Mode


You can choose from five different shooting modes with your phone's camera.

Note: **Single Shot** is the default camera function that allows you to take one shot at a time.





Taking Continuous Shots

The Continuous shots feature allows you to take either 5 or 10 shots in a continuous sequence. When you take continuous shots, you will see a slider that indicates the shot number sequence.

 
1. From camera mode, press **OPTIONS** (right softkey) > **SHOOTING MODE** > **Continuous**.
2. Highlight an option and press :
 - **Off** to deactivate the multiple shots option.
 - **5** to take a series of five pictures
 - **10** to take a series of 10 pictures.

Note: The **Continuous** setting will automatically set the shot image size to 240 x 320.

3. Using the phone's display screen as a viewfinder, aim the camera lens at your subject.
4. Press  until the shutter sounds. (Your phone automatically saves the picture to the Album.)
5. Press  to return to camera mode to take another picture.


or

Press **OPTIONS** (right softkey) > **Review Album** to review your continuous shot frames.

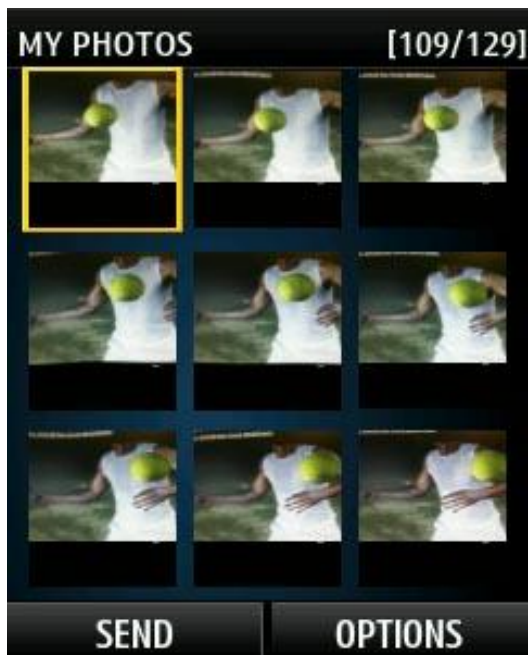


Taking Mosaic Shots

The Mosaic shots feature allows you to take 4 shots in a continuous sequence.

1. From camera mode, press **OPTIONS** (right softkey) > **SHOOTING MODE** > **Mosaic**.
2. Highlight an option and press :
 - **Off** to deactivate the multiple shots option.
 - **4** to take a series in mosaic format.

Note: The Mosaic setting will automatically set the shot image size to 480 x 640.

3. Move the camera toward the desired direction.
4. Press  to take the pictures.



Note: Your phone automatically saves the pictures in your Album. The Mosaic shots will display as one photo split into a four-part grid



Taking Panorama Shots

This feature allows you to take landscape-oriented or panoramic photos. You can also move the camera left to right or up and down for a wider range of the desired image. The camera will capture a minimum of 2 and a maximum of 8 shots to produce a panoramic image.

1. From camera mode, press **OPTIONS** (right softkey) > **SHOOTING MODE** > **Panorama**.

2. Highlight an option and press :

- **Off** to deactivate the panoramic option.
- **On** to activate the panoramic option.

Note: The Panoramic setting will automatically set the shot image size to 240 x 320.

3. Move the camera toward the desired direction.

4. Press  only once to begin the panoramic photo process.

5. Move the camera slowly from left to right, ensuring that the red frame evenly surrounds the screen during each automated shot.

Note: The camera will not capture a photo unless the red frame evenly surrounds the screen.

6. After completion, your phone will compile the separate shots into one image and save it to your Album.

7. Press **OPTIONS** (right softkey) > **Review Album** to view your panoramic photo.



Taking Night Shots

Night shots allow you to activate low light image capture. Enabling this feature allows you to take better quality photos in low light conditions.

1. From camera mode, press **OPTIONS** (right softkey) > **SHOOTING MODE** > **Night Shot**.

2. Highlight an option and press :

- **Off** to deactivate the night shot option.
- **On** to activate the night shot option.

3. Move the camera toward the desired direction.

 
4. Press  to take the photo.



Adjusting the Resolution

You can adjust the resolution of the photos you take.

1. From camera mode, press **OPTIONS** (right softkey).
2. Use the right navigation key and highlight **Resolution**.

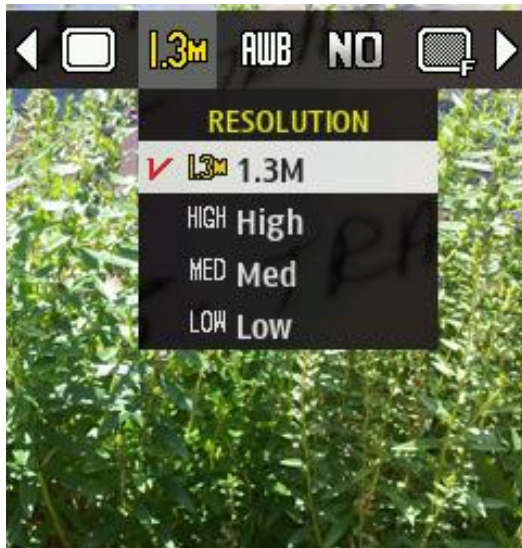

3. Select **1.3M**, **High**, **Med**, or **Low**.

Adjusting the White Balance

You can adjust the white balance setting on your phone's camera.

1. From camera mode, press **OPTIONS** (right softkey).
2. Use the right navigation key and highlight **WHITE BALANCE**.



 
3. Select one of the following:
 - **Auto** – The white balance has been set to Automatic. Use this for taking pictures indoors or outdoors using automatic white balance settings.
 - **Daylight** – The white balance has been set to Sunny. Use this for taking pictures or movies outdoors on bright sunny days.
 - **Cloudy** – The white balance has been set to Cloudy. Use this for taking pictures or movies outdoors under cloudy conditions.
 - **Incandescent** – The white balance has been set to Tungsten. Use this for taking pictures or movies indoors under normal lighting conditions.
 - **Fluorescent** – The white balance has been set to Fluorescent. Use this for taking pictures or movies indoors under fluorescent lighting conditions.
 - **Manual** – The white balance has been set to Manual. Use this for taking pictures indoors or outdoors using your own custom settings.

Adjusting Color Tones

Select a color tone for your photos.

1. From camera mode, press **OPTIONS** (right softkey).

2. Use the right navigation key and highlight **EFFECT**.

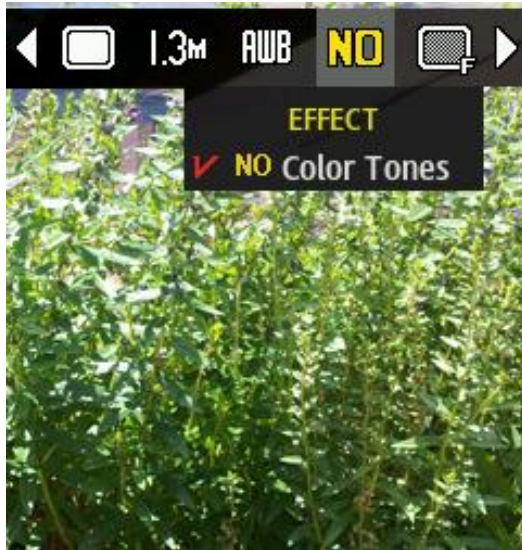


3. Use your right and left navigation keys to view the color previews.
4. Select a color tone.

Adjusting the Quality

Your phone's camera quality settings include **Fine**, **Normal**, and **Economy**.

 1. From camera mode, press **OPTIONS** (right softkey).
2. Use the right navigation key and highlight **QUALITY**.

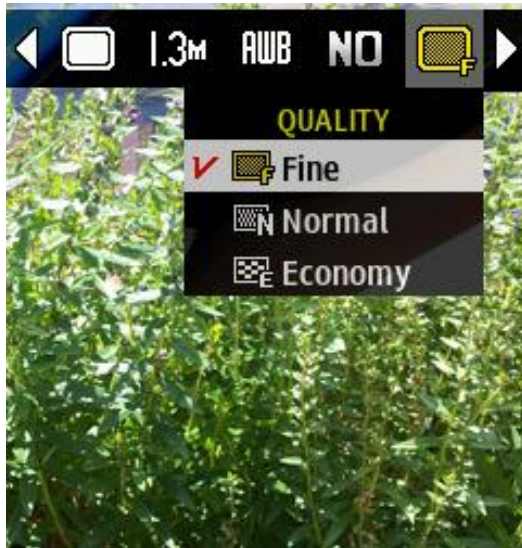

3. Select **Fine**, **Normal**, or **Economy**.

Adjusting the Shutter Sound

You can choose how the shutter will sound as you snap a picture.

1. From camera mode, press **OPTIONS** (right softkey).
2. Use the right navigation key and highlight **Shutter Sound**.



3. Select **Off**, **Shutter1**, **Shutter2** or **Shutter3**.

Adjusting the Grid

This feature allows you to adjust the camera's grid.

1. From camera mode, press **OPTIONS** (right softkey).
2. Use the right navigation key and highlight **Grid**.



3. Select **Off** or **On**.

Adjusting the Brightness

This feature allows you to adjust the brightness of the picture.

- ▶ From camera mode, press the navigation key left or right. (You will see the gauge bar.)
 - Press the right to increase the brightness or the left navigation key to decrease it.

Erasing Pictures

This feature allows you to delete the photo you just captured, or to delete multiple photos at the same time.

To erase the last photo taken:

1. Take a picture. See [Taking Pictures](#) for more information.
2. With the picture displayed, press **OPTIONS** (right softkey) > **Erase**.

To erase multiple photos:

1. Press  > **Photos** > **My Photos**.



2. Select **OPTIONS** (right softkey).
3. Select **Delete** and select an option:
 - **Focused Item** to delete the selected photo.
 - **ALL** to delete all photos in **My Photos**.

Sending a Picture

Once you have taken a photo, you can use the messaging capabilities of your phone to instantly share it with family and friends.


To send a photo to a Contact:

1. Take a picture.
2. With the picture displayed, press **SEND** (left softkey).
3. Select a listed contact or one of the following options:
 - **Go to Contacts** to select a recipient from your phonebook entries.
 - **MULTIPLE** (left softkey) to select multiple contacts from the list of recent recipients.
 - **NEW ADDR** (right softkey) to enter a new Phone Number or Email Address.
4. Press **CONTINUE** (left softkey).
5. Compose a message in the space provided.

6. Press **OPTIONS** (right softkey) to display a list of optional sending, marking, and text input choices. (**Text Mode**, **Add Preset Message**, **Add/Change Recipient**, **Add/Change Attachment**, **Add/Change Subject**, **Save as Draft**, **Mark as Urgent**, and **Set Callback #.**)
7. Press **SEND** (left softkey).

Assigning Photos

After taking a picture, assign it as a wallpaper or as a picture ID for a Contacts entry.

1. Take a picture.
2. With the picture displayed, press **OPTIONS** (right softkey) > **Assign** and select an option.
 - **Picture ID** to assign the picture to a Contacts entry.
 - Select one of the following options:
 - **Contacts**
 - **Unsaved Numbers**
 - **Private / Unknown**
 - **Wallpaper** to assign the picture as a screen saver.
3. Highlight an entry and press  to assign the picture.

Tools and Calendar

Learn how to use many of your phone's productivity-enhancing features, such as the alarm, calendar, Bluetooth, voice service, calculator, phone self service, world time, memo pad, and voice memo.

[Alarm](#)

[Calendar](#)

[Bluetooth](#)

[Updating Phone](#)

[Voice Service](#)

[Calculator](#)

[Phone Self Service](#)


[World Time](#)

 
[Memo Pad](#)




[Voice Memos](#)

Alarm

Your phone comes with a built-in alarm clock that has multiple alarm capabilities.

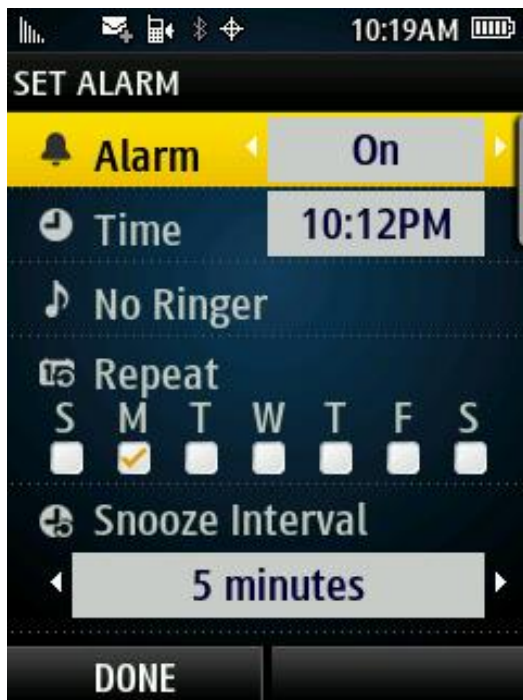1. Press  > **Settings/Tools** > **Tools** > **Alarm**.
2. Press **CREATE NEW** (left softkey).



3. Highlight the **ALARM** field to turn the alarm on or off.
4. Select a time for the alarm.
 - Select **AM** or **PM** by pressing the right softkey.
5. Select a ringer type for the alarm by highlighting the ringer field and pressing .
 - To select a ringer menu, press  > **Downloaded** for downloaded ringers, **Preloaded** for preprogrammed ringers, or **No Ringer** for ringer sound.
6. Select a repeating status for the alarm by highlighting the repeat field and pressing .
 - **Highlight Daily, Once**, or select individual days of the week and press **DONE** (left softkey).
7. Select a **Snooze Interval** using the right and left navigation keys.
 - Select an interval of **5 minutes**, **10 Minutes**, **15 Minutes**, **20 Minutes**, or **Off** to disallow the Snooze feature.
8. Select a **Volume** level using the right and left navigation keys.
9. Press **DONE** (left softkey).

Calendar

Your phone's Calendar tool helps you organize your time and you can set it to remind you of important events.

Viewing the Calendar

You can view the calendar in several different ways, including month or day view.

- ▶ Press  > **Settings/Tools** > **Tools** > **Calendar** > **Scheduler**.



Viewing the Current Day's Schedule

Your phone comes in handy for checking your current day's schedule.

- ▶ Press  > **Settings/Tools** > **Tools** > **Calendar** > **Today**.




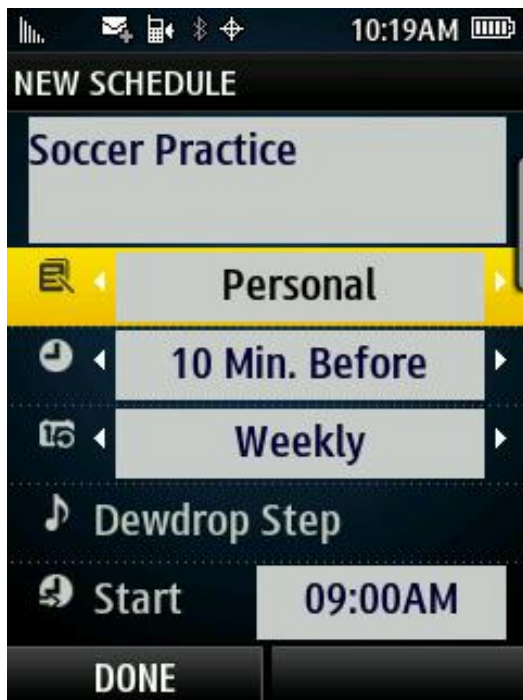 
Jumping to Another Date

- ▶ Press **OPTIONS** (right softkey) > **Jump to date**.

Adding a Schedule



Use your phone's scheduler to add events to your calendar.

1. Press  > **Settings/Tools** > **Tools** > **Calendar** > **Scheduler**.
2. Highlight the day to which you would like to add an event and press **OPTIONS** (right softkey) > **Add New**.
3. Enter the event title information and press **NEXT** (left softkey).



4. Select an event type using your navigation keys to scroll left or right.
5. Select an alarm time for the event using your navigation keys to scroll left or right. You can choose **No Alarm**, **On Time**, **10 Min. Before**, **30 Min. Before**, or **1 Hour Before**.

Note: The default alarm time is **10 Min. Before**.

6. Select a repeating status for the event using your navigation keys to scroll left or right.
7. Select a ringer type for the alarm by highlighting the ringer field and pressing .
 - To select a ringer menu, press  > **Downloaded** for downloaded ringers, **Preloaded** for preprogrammed ringers, or **No Ringer** for ringer sound.
8. Select a **Start** and **End** time and date for the event.
9. Select **Go to Contact** to select one or more contacts to associate with this event.
10. Press **DONE** (left softkey) to save the event.

Viewing the Task List

The Task List displays a summary of your upcoming events in chronological order. Each entry displays its relative priority, due time, due date, and whether or not the task was missed.

- ▶ Press  > **Settings/Tools > Tools > Calendar > Task List**.



Viewing the Countdown

The Countdown List displays the number of days that remain until specific scheduled events. If the event itself was missed or ignored through your event alerts, that event displays the number of days passed since the scheduled time.

- ▶ Press  > Settings/Tools > Tools > Calendar > Countdown.



Jumping to Another Date

- ▶ Press **OPTIONS** (left softkey) > **Jump to date**.



Managing the Schedule Alerts

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary. There are several ways your phone alerts you to scheduled events:

- By playing the assigned ringer type.
 - By illuminating the backlight.
 - By flashing the LED.
1. To silence the alarm and reset the schedule, press any key except the navigation keys.
 2. To view additional options, press the appropriate option:
 - **Snooze** silences the alarm and schedules it to replay again in 10 minutes.
 - **View** displays the event detail screen.
 - **Dismiss** (right softkey) stops the alarm and eliminates any further notices about the event.


Erasing a Day's Events

You can delete events scheduled for a specific time and date.

1. Press  > **Settings/Tools** > **Tools** > **Calendar** > **Scheduler**.
2. Highlight the day for which you would like to erase events and press .
3. Highlight the event you want to erase and press **OPTIONS** (right softkey) > **Delete**.
4. Select **Yes** (left softkey) or **No** (right softkey).

Erasing All Events

You have the option of deleting all events scheduled before a specific time and date.

1. Press  > **Settings/Tools** > **Tools** > **Calendar** > **Scheduler**.
2. Press **OPTIONS** (right softkey) > **Delete All**.
3. Select **Yes** (left softkey) or **No** (right softkey).



Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth phones, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 30 feet.



Turning Bluetooth On and Off

Before using Bluetooth, you must turn it on. By default, your phone's Bluetooth feature is set to **Off**. Turning Bluetooth on makes your phone "discoverable" by other in-range Bluetooth phones.

To turn Bluetooth on:

1. Press  > **Settings/Tools** > **Tools** > **Bluetooth**.
2. Highlight **On** and press  to enable Bluetooth.

To turn Bluetooth off:


1. Press  > **Settings/Tools** > **Tools** > **Bluetooth**.
2. Highlight **Off** and press  to enable Bluetooth.

Using the Bluetooth Settings Menu

The Bluetooth menu allows you to set up many of the characteristics of your phone's Bluetooth service. These include:

- Entering or changing the name your phone uses for Bluetooth communication.
- Setting your phone's visibility (or "discoverability") for other Bluetooth phones.
- Displaying your phone's Bluetooth address.

To access the Bluetooth Settings menu:




1. Press  > **Settings/Tools** > **Tools** > **Bluetooth**.
2. Set your Bluetooth options.
 - Highlight **My Bluetooth Info** and press **EDIT** (left softkey) to rename your phone for Bluetooth.
 - Select **Visibility** > **Always Visible**, **Visible for 3 Min**, or **Hidden** to set your Bluetooth visibility.

- Select **My Bluetooth Info** to display your phone's Bluetooth profiles and address.

Pairing Bluetooth Phones

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth phone. When you pair phones, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your phone with another Bluetooth phone:


1. Press  > **Settings/Tools** > **Tools** > **Bluetooth** > **Add New** > <**Search**>. (Your phone will display a list of discovered in-range Bluetooth phones.)
2. Highlight a phone and press .
3. Enter the PIN code and press .

Note: Due to different specifications and features of other Bluetooth-compatible phones, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible phones

Updating Phone

From time to time, software updates may be available for your phone.

To download software updates to your phone:

1. Press  > **Settings/Tools** > **Tools** > **Update Phone**.
2. Press **Update Firmware** to update your phone's software version or **Update PRL** to update the list of geographic areas your phone can use during roaming. (Your phone automatically downloads and installs any available updates. You may be required to power your phone off and back on to complete the software upgrade.)

Voice Service

Your phone's voice service capabilities make it possible for you to complete tasks such as dialing a phone number in your Contacts simply by talking into your phone.

Automatic Speech Recognition (ASR)

You can use your phone's built-in automatic speech recognition (ASR) software to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone, and ASR will recognize your voice and complete tasks by itself.

Activating ASR

- ▶ Press and hold .


The screen displays “Say a command” and the phone prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts.

Available ASR commands include:

- **Call** <name or #> to call an entry in your Contacts list or a spoken phone number.
- **Send Text** <Name or #> to send a text message to the spoken name or phone number.
- **Lookup** <Name> to lookup the spoken contact name.
- **Go To** <Menu> to jump directly to menu items or applications.
- **Check** <Item> to check your phone’s status.

Tip: Use ASR in a quiet environment so it can accurately recognize your commands.

Making a Voice Call with ASR


1. Press and hold .
2. If you hear “Say a command,” say “**Call**.”
3. If you hear “Say the name or number,” say a name or a phone number.
4. If you hear “Which location?,” say a number type (for example, “Mobile”).

Tip: You can skip steps 3 and 4 by saying a name and location after “Call” without pausing (for example, “**Call John Jones mobile**”).

Note: If ASR does not recognize the name or number, it will find the most likely matches and display a list of up to three names or numbers. You will hear “Did you say...” followed by the name or number. You can confirm by saying “**Yes**.” Say “**No**” to change the selection.

Opening Menus with ASR


You can jump directly to many menu items or applications by saying “Go to” followed by a menu option.

1. Press and hold .
2. If you hear “Say a command,” say “**Go To**.”
3. If you hear “Which shortcut?,” say an application name (for example, “Messages”).
4. The phone opens the selected menu.

Checking Phone Status Using ASR


You can use ASR to obtain information about your phone:

- **Status**
- **Time**
- **Signal Strength**
- **Network**
- **Battery**
- **My Phone Number**


1. Press and hold .
2. If you hear “Say a command,” say “**Check.**”
3. If you hear “Which status item?,” say a command.

ASR Options


To change ASR confirmation:

1. Press and hold .
2. Press **SETTINGS** (right softkey) > **Confirmation** and select an option.
 - **Automatic** to ask for confirmation only when the system is not sure what you said.
 - **Always Confirm** to always ask for confirmation.
 - **Never Confirm** to never ask for confirmation.

To adapt the system to your voice:


1. Press and hold .
2. Press **SETTINGS** (right softkey) > **Adaptation** > **Adapt Voice**.
3. Press **START** (left softkey) and repeat each word, phrase, or telephone number you hear.

To reset the adaptation:

1. Press and hold .

2. Press **SETTINGS** (right softkey) > **Adaptation** > **Reset Voice** > **Yes** (left softkey).

To change the ASR mode:



1. Press and hold .
2. Press **SETTINGS** (right softkey) > **Audio Modes** and select an option.
 - **Expert Mode** to sound a beep only.
 - **Prompt Mode** to prompt for required information.


Calculator

Your phone comes with a built-in calculator and handy tip and eco-calculators for figuring tip percentages and miles-per-gallon.

1. Press  > **Settings/Tools** > **Tools** > **Calculator** > **Calculator**.



2. Enter numbers using your keypad.
 - Press  to enter decimal points.
 - Press  to change the sign from positive to negative.
 - Press **CLEAR** (right softkey) to clear all numbers.

3. Press  for the calculation result.

Tip Calculator

With the tip calculator, you can configure the tip percentage you owe on a bill.

1. Press  > **Settings/Tools** > **Tools** > **Calculator** > **Tip Calculator**.




2. Use your keypad and navigation key to enter the **Bill (\$)** amount, **Tip (%)**, and **# Paying**.

The **Tip (\$)** displays the amount you pay for a tip and **You pay** displays the total amount you pay on the bill.

Eco Calculator

Your phone comes with an eco calculator that allows you to configure the amount you pay per gallon of fuel and the resulting efficiency of your car's mileage.

To calculate your car's price of fuel per gallon:

1. Press  > **Settings/Tools** > **Tools** > **Calculator** > **Eco Calculator**.
2. Press **Create** (left softkey).

or

Press **OPTIONS** (left softkey) > **Create**.




3. Use your keypad and navigation key to enter the **Distance (mi)**, **Fuel (\$)**, **(gallon)**, and **Price (\$/gallon)** amounts.

The calculator displays the **(\$/mile)** and **(gallon/mile)** efficiency amounts.

Device Self Service

This built-in service on your phone allows you to activate your phone manually via a Web-enabled UI.

1. Press  > **Settings/Tools** > **Tools** > **Device Self Service**.
2. Follow the onscreen prompts to manually activate your new phone.

World Time

Your phone gives you the capability to view the time in over 50 different locations around the world.

1. Press  > **Settings/Tools** > **Tools** > **World Time**.





2. Use your right or left navigation keys to scroll through the list of cities.
3. Press **SET DST** (left softkey) to turn Daylight Savings Time **On** or **Off**.



Memo Pad

Your phone comes with a memo pad that you can use to compose and store reminders and notes to help keep you organized.

To compose a memo:


1. Press  > **Settings/Tools > Tools > Memo Pad > Add New.**
2. Type your note using the keypad and press .

To read a saved note:

1. Press  > **Settings/Tools > Tools > Memo Pad.**
2. Highlight a note and press .

To delete saved notes:

1. Press  > **Settings/Tools > Tools > Memo Pad.**

2. Highlight a note and press .
3. Press **OPTIONS** (right softkey) > **Delete** > **Yes** (left softkey).

Voice Memos

Use your phone's Voice Memo feature to record brief memos to remind you of important events, phone numbers, or grocery list items and to record conversations during a call.

Note: Your phone can store 1 minute of memos during a call and 2 minutes within the **Tools** menu.


Recording a Current Call

 
With your phone's Voice Memo feature, you can record a phone call while you are on the call.

1. While on a call, press **OPTIONS** (right softkey) > **Voice Memo** to begin recording the call.
2. To pause the recording, press **PAUSE** (left softkey), or press **STOP** (left softkey) to stop recording.

Recording Voice Memos

Recording Voice Memos is as easy as speaking into your phone.

1. Press  > **Settings/Tools** > **Tools** > **Voice Memo** > **Record**.
2. Begin recording after the voice prompt.

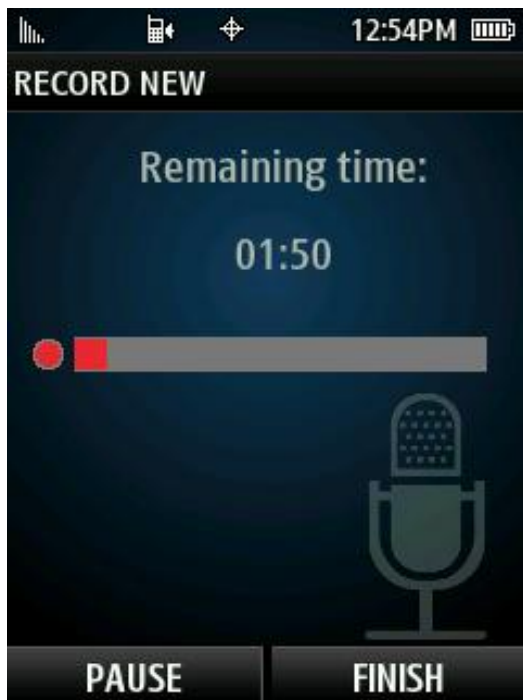


To end the recording of your memo:

- ▶ Press or **FINISH** (right softkey).


Playing Voice Memos

You can play and review the voice memos you have recorded.


1. Press  > **Settings/Tools** > **Tools** > **Voice Memo** > **Review**.
2. Highlight the Memo you want to play and press **REVIEW** (left softkey).

Erasing Voice Memos

You can erase voice memos that you have previously recorded.


1. Press  > **Settings/Tools** > **Tools** > **Voice Memo** > **Review**.
2. Highlight the Memo you want to erase and press **OPTIONS** (right softkey) > **Delete** > **DELETE** (left softkey).

To erase all voice memos:

1. Press  > **Settings/Tools** > **Tools** > **Voice Memo** > **Review**.
2. Press **OPTIONS** > **Delete All** > **DELETE** (left softkey).


Editing Voice Memos

You can edit the titles or captions you assign to voice memos.

1. Press  > **Settings/Tools > Tools > Voice Memo > Review.**
2. Highlight the Memo you want to edit, and press **OPTIONS** (right softkey) > **Edit Caption.**
3. Enter the new title and press **DONE** (left softkey).



Check Voice Memo Information

You can check information about your voice memos such as length, and time and date of the recording.

1. Press  > **Settings/Tools > Tools > Voice Memo > Review.**
2. Highlight the Memo whose information you want to view and press **OPTIONS** (right softkey) > **Info.**
3. Check the information and press **DONE** (left softkey).

Send a Voice Memo Message

You can even send a voice memo as a message.

1. Press  > **Settings/Tools > Tools > Voice Memo > Review.**
2. Highlight the Memo you want to send and press **OPTIONS** (right softkey) > **Send Message.**
3. Select the message recipient and press . See [Compose Text Messages](#) for more information.

Index

- 911 Calls, 27
- Abbreviated Dialing, 49
- AC Adapter, 10
- Accessibility, 50
 - Voice Guide, 51
 - Voice Recognition, 50
- Account, 12
 - Managing, 13
 - Passwords, 12
 - Support, 14
- Accounts, 66
- Activation, 11
- Airplane Mode, 52
- Alarm
 - Ringers, 42
 - Setting, 98
- Answering Calls, 25
 - Roam Enabled, 27
- Applications, 74
 - Downloading, 75
 - My Stuff, 76
- ASR
 - Activating, 107
 - Checking Phone Status with, 108
 - Making Calls with, 107
 - Opening Menus with, 107
 - Options, 108
- Backlight Control, 40
- Battery
 - Install, 8
 - Replacing, 9
- Bluetooth, 105
 - Pairing, 106
 - Sending Contacts via, 64
 - Settings, 105
 - Turning Off, 105
 - Turning On, 105
- Brightness, 40
 - PowerSave Mode, 40
- Browser, 83

- Opening, 83
- Options, 84
- Toolbar, 83
- Calculator, 109
 - Eco, 110
 - Tip, 110
- Calendar, 100
- Call Answer, 50
- Camera, 85
 - Erasing Pictures, 95
 - Sending Pictures, 96
 - Settings, 86
 - Shooting Modes, 86
 - Taking Pictures, 85
- Clear Envelope, 69
- Contact Match, 52
- Contacts, 57
 - Accessing, 57
 - Adding, 58
 - Assigning Pictures, 63
 - Contact Match, 52
 - Delete, 64
 - Edit, 61
 - Finding a Phone Number, 30
 - History, 35
 - List Options, 59
 - Saving a Phone Number, 29, 60
 - Sending via Bluetooth, 64
 - Set a Secret, 64
 - Speed Dialing, 61
- Data, 52
 - FAQs, 82
 - Net Guard, 52
 - Update Profile, 52
- Data Services
 - Password, 13
- Dialing Options, 25
 - Pauses, 25
- Display, 38
 - Backlight Control, 40
 - Brightness, 40
 - Main Screen, 38
 - Outer Screen, 39
 - Picture ID, 39

- Emergency Numbers, 27
 - Calling, 27
- Finding a Phone Number, 30
- Get Started, 8
- GPS Services, 77
 - Activating Location Mode, 77
 - Sprint Family Locator, 78
- History
 - Calling from, 36
 - Contacts, 35
 - Erasing, 37
 - Prepending a Number from, 37
 - Saving a Number from, 36
- Home Screen, 18
- In Call Options, 28
- Key Functions, 15
- Language, 54
- Location, 45
- Lock Code, 45
- Lock Phone, 45
- Making Calls, 24
- Memo Pad, 112
- Messaging, 66
 - Composing, 70
 - Multi-Segment, 69
 - Preset, 69
 - Receiving, 72
 - Replying, 72
 - Ringers, 42
- Missed Call
 - Notification, 27
- My Stuff
 - Applications, 76
- Navigation Keys, 55
- Parental Controls, 46
 - Restrictions, 47
- Phone, 23
 - Answering Calls, 25
 - Basics, 15
 - Dialing Options, 25
 - Layout, 15
 - Lock Code, 45
 - Making Calls, 24
 - Reset, 48

- Settings, 38
 - Vision Username, 44, 49
- Phone Lock, 45
- Phone Unlock, 45
- Pictures
 - Erasing, 95
 - Sending, 96
- Power Off, 18
- Power On, 18
- PowerSave Mode, 40
- Preset Messages, 69
 - Adding, 73
 - Editing, 73
 - Managing, 69
- Reset Phone, 48
- Ringers, 41
 - Alarm, 42
 - Battery Alert, 43
 - Get New, 43
 - Incoming Calls, 41
 - Messages, 42
 - Power Off, 43
 - Power On, 43
- Roaming, 53
 - Data Guard, 53
 - Setting, 54
- Saving a Phone Number, 29
- Set Up Your Device, 8
- Settings, 38
 - Bluetooth, 105
 - Contacts, 54
 - Language, 54
 - Location, 45
 - Lock Phone, 45
 - Others, 49
 - Parental Controls, 46
 - Phone, 38
 - Phone Information, 44
 - Reset/Delete, 48
 - Ringers, 41
 - Volume, 40
- Signature, 68
- Speed Dialing, 61
- Sprint

- 411, 14
- Account Support, 14
- Operator Services, 14
- Sprint Family Locator, 78
- Status Bar
 - Data Connection, 81
 - Icons, 18
 - Location, 15
- TDD
 - Options, 55
- Text Entry
 - Signature, 68
- Tools, 98
 - Alarm, 98
 - Bluetooth, 105
 - Calculator, 109
 - Calendar, 100
 - Memo Pad, 112
 - Update Phone, 106
 - Voice Service, 106
 - World Time, 111
- TTY
 - Options, 55
 - Text Telephone, 55
 - Turning Off, 55
 - Turning On, 55
- Turn Device Off, 18
- Turn Device On, 18
- Unlock Phone, 45
- Update
 - Firmware, 106
 - Phone, 106
 - PRL, 106
- Update Data Profile, 52
- USB Cable, 10
- Vision Username, 44, 49
- Voice Guide
 - Accessibility, 51
- Voice Memos
 - Erasing, 114
 - Recording, 113
- Voice Recognition
 - Accessibility, 50
- Voice Service, 106

- ASR, 106
- Voicemail
 - Password, 13
 - Setup, 12
- Volume, 40
- Web, 80
 - FAQs, 82
 - Launching a Connection, 80
 - Navigating, 81
 - Status and Indicators, 81
 - Your User Name, 80
- World Time, 111
- Your Phone Number, 23