



Toledo i3210W
Toledo i3200R



S5211
S5211-1U

Version 1.2

Copyright

Copyright © TYAN Computer Corporation, 2008. All rights reserved. No part of this manual may be reproduced or translated without prior written consent from TYAN Computer Corp.

Trademark

All registered and unregistered trademarks and company names contained in this manual are property of their respective owners including, but not limited to the following.

TYAN, Toledo i3210W, Toledo i3200R are trademarks of TYAN Computer Corporation.

Intel®, Quad-Core Intel® Xeon® processor 3300 and 3200 series, Dual-Core Intel® Xeon® processor 3100 and 3000 series, Intel® Core™2 Extreme / Quad processor Q6000 sequence / Duo processor E6000 sequence, and combinations thereof are trademarks of Intel Corporation.

Phoenix, Phoenix-AwardBIOS are trademarks of Phoenix Technologies.

Microsoft, Windows are trademarks of Microsoft Corporation.

SuSE, is a trademark of Novell.

IBM, PC, AT, and PS/2 are trademarks of IBM Corporation.










 
Notice

Information contained in this document is furnished by TYAN Computer Corporation and has been reviewed for accuracy and reliability prior to printing. TYAN assumes no liability whatsoever, and disclaims any express or implied warranty, relating to sale and/or use of TYAN products including liability or warranties relating to fitness for a particular purpose or merchantability. TYAN retains the right to make changes to product descriptions and/or specifications at any time, without notice. In no event will TYAN be held liable for any direct or indirect, incidental or consequential damage, loss of use, loss of data or other malady resulting from errors or inaccuracies of information contained in this document.

Table of Contents

Check the box contents!	3
Chapter 1: Introduction	
1.1 Congratulations	5
1.2 Hardware Specifications	5
Chapter 2: Board Installation	
2.1 Board Image	8
2.2 Block Diagram	10
2.3 Board Parts, Jumpers and Connectors	12
2.4 Tips on Installing Motherboard in Chassis	20
2.5 Installing the Memory	21
2.6 Installing the Processor and Cooling Fan	24
2.7 Attaching Drive Cables	27
2.8 Installing Add-in Cards	28
2.9 Installing Optional SO-DIMM Modules	29
2.10 Connecting External Devices	30
2.11 Installing the Power Supply	31
2.12 Finishing Up	31
Chapter 3: BIOS Setup	
3.1 About the BIOS	33
3.2 Main BIOS Setup	35
3.3 Main Menu	36
3.4 Advanced Menu	43
3.5 Security Menu	62
3.6 Power Menu	63
3.7 Boot Menu	64
3.8 Exit Menu	65
Chapter 4: Diagnostics	
4.1 Beep Codes	67
4.2 Flash Utility	67
4.3 Phoenix BIOS Post Code	68
Appendix: SMDC Information	71
Glossary	73
Technical Support	81

Check the box contents!

	1x S5211/S5211-1U motherboard
	1 x Ultra-DMA-133/100/66/33 IDE cable
	3 x Serial ATA power cables
	6 x Serial ATA cables
	2 x USB2.0 cable
	1 x S5211/S5211-1U user's manual
	1 x S5211/S5211-1U Quick Reference guide
	1 x TYAN driver CD
	1 x I/O shield
	1 x Serial Port cable

If any of these items are missing, please contact your vendor/dealer for replacement before continuing with the installation process.

NOTE

Chapter 1: Introduction

1.1 - Congratulations

You have purchased one of the most powerful server solutions available. The Toledo i3210W/i3200R (S5211/S5211-1U) is a flexible Intel® platform for multiple applications, based on the Intel® 3210 (S5211) or 3200 (S5211-1U) MCH and ICH9R chipsets.

Designed to support the family of Intel® Socket 775 processors and 8GB of DDR2 800/667 memory, the S5211/S5211-1U has integrated Dual Ethernet LAN's, a built-in 32MB XGI Z9S video controller and six SATA-II ports. This motherboard represents the best choice for a server platform product.

Remember to visit TYAN's Website at <http://www.TYAN.com>. There you can find information on all of TYAN's products with FAQs, online manuals and BIOS upgrades.

1.2 - Hardware Specifications

Processor

- Single LGA775 socket
- Support Intel® processors
 - Quad-Core Intel® Xeon® processor 3300 and 3200 series
 - Dual-Core Intel® Xeon® processor 3100 and 3000 series
 - Intel® Core™ 2 Extreme
 - Intel® Core™ 2 Quad processor Q6000 sequence
 - Intel® Core™ 2 Duo processor E6000 sequence
- 1333/1066/800 FSB supported

Expansion Slots

S5211

- Two (2) PCI-E x 16 slots (w/x8 bus)
 - Two (2) PCI-X 1.0 64/133 slots
 - Two (2) 32/33 PCI 2.3 slots
- S5211-1U
- One (1) PCI-E slot (w/x8 bus)

Integrated SATA II (ICH9R)

- Supports six SATA-II ports running at 3.0Gb/s
- RAID 0/1/5/10 capable (Windows driver support only)

Integrated LAN Controllers

- Two (2) Intel i82573 GbE NICs (1*82573V+1*82573L)
 - operating at independent PCI-E x1 interface

Integrated I/O

- One IDE connector
- Six SATA (3Gb/s) ports
- Six USB 2.0 ports (2 at rear, 4 via cable)
- Two COM ports (1 at rear, 1 via cable)
- Tyan 2x9 front-panel pin header
- Tyan 2x6 front-panel pin header for LAN LED and ID LED/Switch (reserved for OEM only)
- 2x7 pin Fan header (reserved for OEM only)
- 2x3 pin LCM header (reserved for OEM only)
- 200pin vertical SO-DIMM for optional TYAN IPMI SMDC

Integrated USB IDE (CY7C68300C)

- Single Ultra ATA channels for dual ATA devices

Chipset

- Intel® 3210 (S5211) or 3200 (S5211-1U) MCH
- ICH9R South Bridge
- PXH-V 64-bit PCI Hub (S5211)
- SMSC SCH5027 Super I/O chip
- EZ-USB AT2 (CY7C68300C) Ultra ATA controller

Integrated 2D PCI Graphics

- XGI Z9S
- 32MB DDR2 frame buffer memory

Memory

- Four 240-pin DDR2 DIMM sockets
- Supports Un-buffered ECC DIMMs
- Maximum of 8GB DDR2-800/667

System Management

- SMSC SCH5027 and EMC6D103 with hardware monitoring
- One (1) 3+1-pin CPU fan header with tachometer monitoring and smart FAN control (by SCH5027)
- Five (5) 3+1-pin system fan headers with tachometer monitoring, three (3) of them support smart FAN control
- Temperature and voltage monitoring
- Watchdog timer support
- Port 80 code display LED

Back Panel I/O Ports

- Stacked PS/2 mouse & keyboard ports
- Stacked 2 USB ports & RJ45 port for OPMA
- One 9-pin COM port
- One 15-pin VGA port
- Two side-by-side RJ-45 ports

Optional Modules

- M3295, IPMI 2.0 Remote System Management card
 - Renesas H8S2167 BMC controller
 - BT, KCS, logging support
 - IPMI-over-LAN
 - Remote power on/off and reset
- M3296, IPMI 2.0 Remote System Management card
 - KIRA100 (Single chip KVM/IP + IPMI processor)
 - 32MB SDRAM, 8MB Flash, 8MB Video RAM
 - Video output over LAN (1280x1024)
 - USB 2.0 High Speed Interface
 - LPC, GPIO, SMBUS
 - 10/100 Mbps Ethernet Interface for direct RJ45 connection

BIOS

- Phoenix BIOS on 8Mbit LPC Flash ROM
- Serial Console Redirect
- USB boot supported
- Supports ACPI
- PnP, DMI2.0, WfM2.0 power management
- S0/S1/S4/S5 states supported

Power Supply

- ATX 12V
- Universal 24-pin + 8-pin power connectors

Regulatory

- FCC Class B (DoC)
- European Community CE (DoC)
- BSMI

Form Factor

- ATX footprint
- 12" x 9.6" (305mm x244mm)

Chapter 2: Board Installation

You are now ready to install your motherboard. The mounting hole pattern of the Toledo i3210W/i3200R (S5211/S5211-1U) matches the ATX specification. Before continuing with installation, confirm that your chassis supports an ATX motherboard.

How to install our products right... the first time


The first thing you should do is reading this user's manual. It contains important information that will make configuration and setup much easier. Here are some precautions you should take when installing your motherboard:

- (1) Ground yourself properly before removing your motherboard from the antistatic bag. Unplug the power from your computer power supply and then touch a safely grounded object to release static charge (i.e. power supply case). For the safest conditions, TYAN recommends wearing a static safety wrist strap.
- (2) Hold the motherboard by its edges and do not touch the bottom of the board, or flex the board in any way.
- (3) Avoid touching the motherboard components, IC chips, connectors, memory modules, and leads.
- (4) Place the motherboard on a grounded antistatic surface or on the antistatic bag that the board was shipped in.
- (5) Inspect the board for damage.

The following pages include details on how to install your motherboard into your chassis, as well as installing the processor, memory, disk drives and cables.


NOTE**DO NOT APPLY POWER TO THE BOARD IF IT HAS BEEN DAMAGED.**

2.1- Board Image

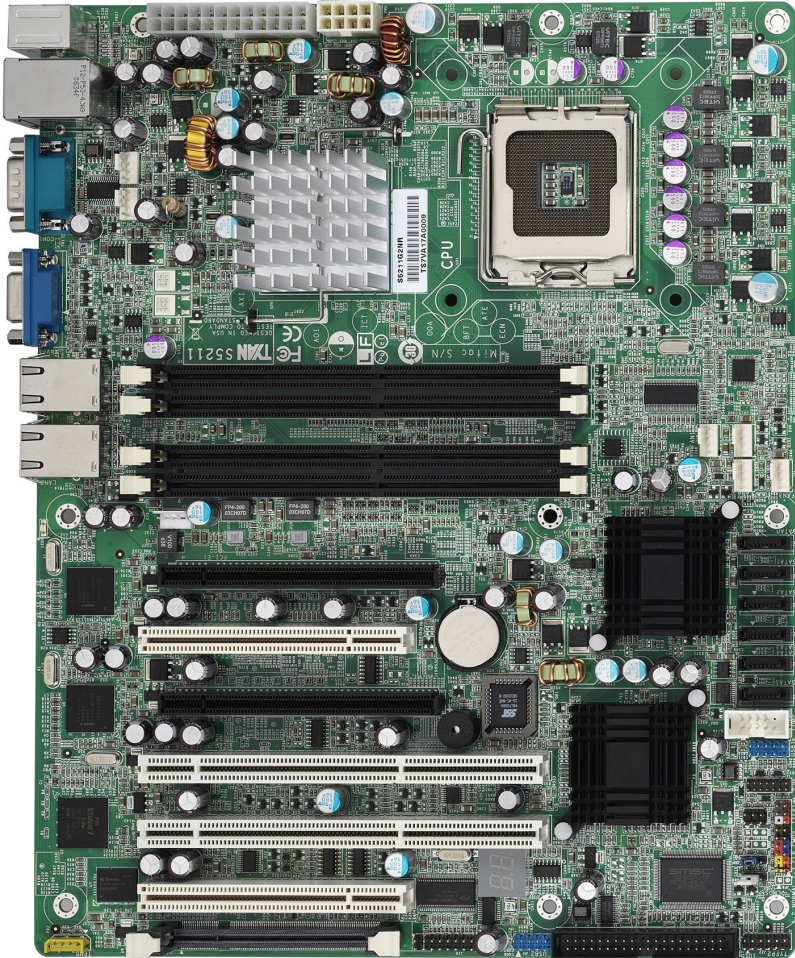

Toledo i3210W S5211


This picture is representative of the latest board revision available at the time of publishing. The board you receive may or may not look exactly like the above picture.

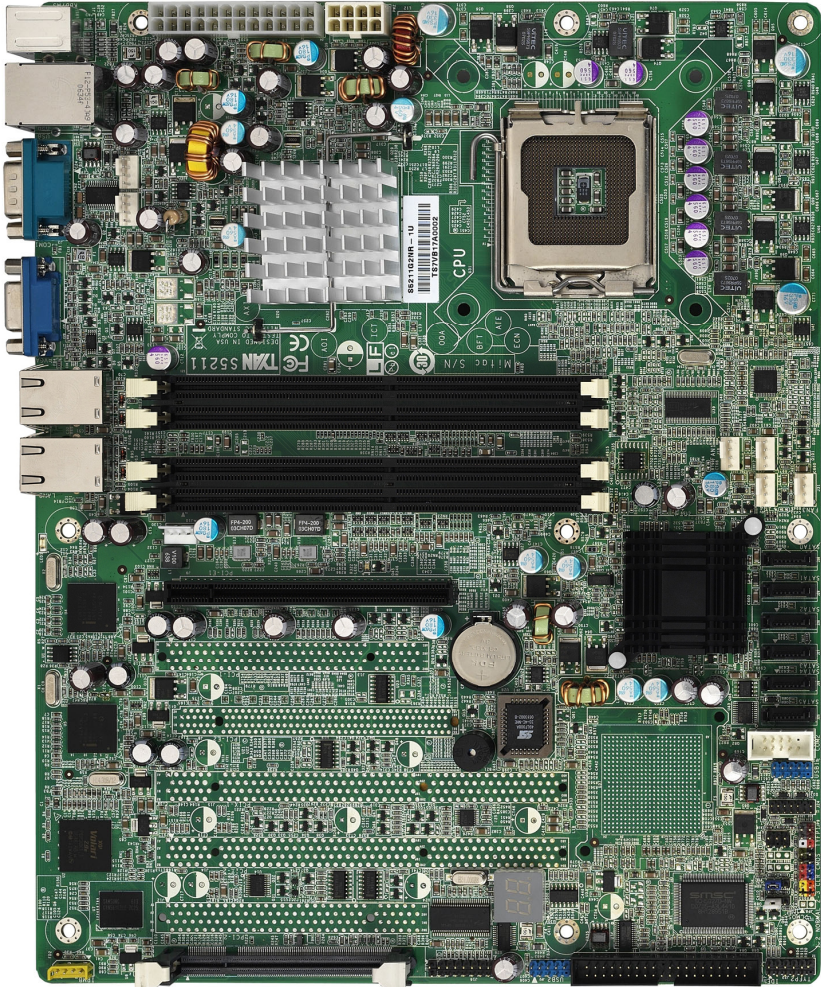

Toledo i3200R S5211-1U


This picture is representative of the latest board revision available at the time of publishing. The board you receive may or may not look exactly like the above picture.

2.2 - Block Diagram

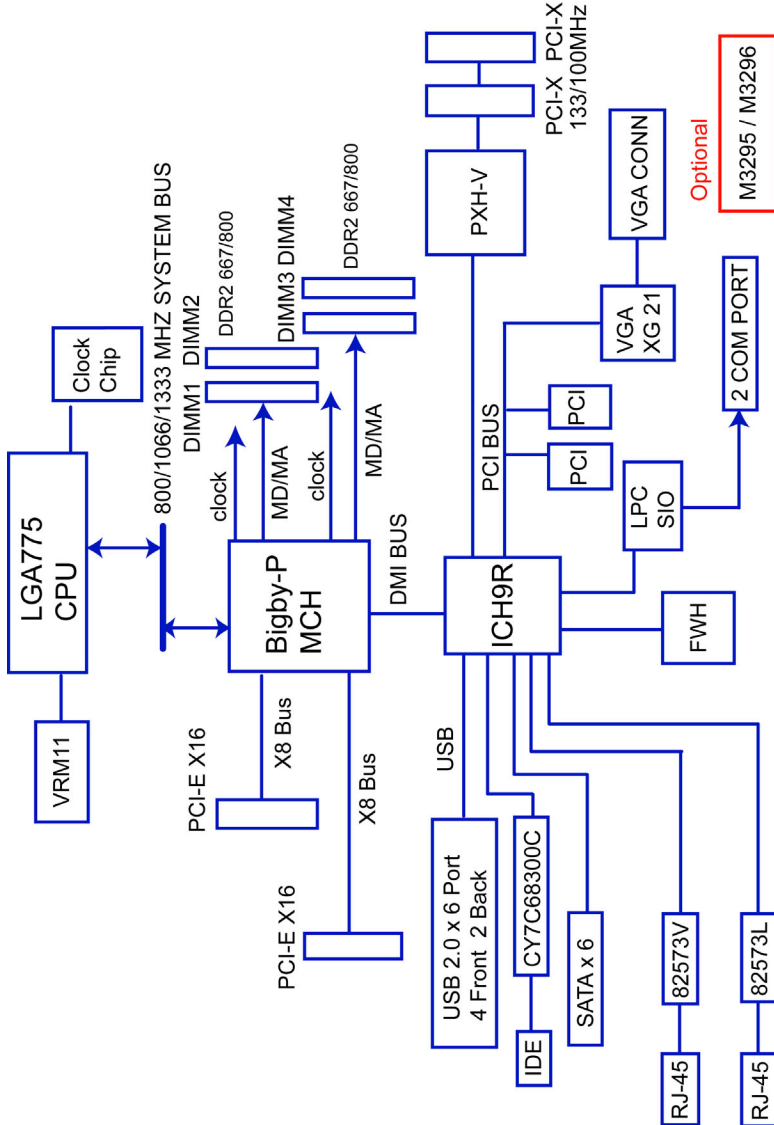

Toledo i3210W S5211

2.3 - Board Parts, Jumpers and Connectors

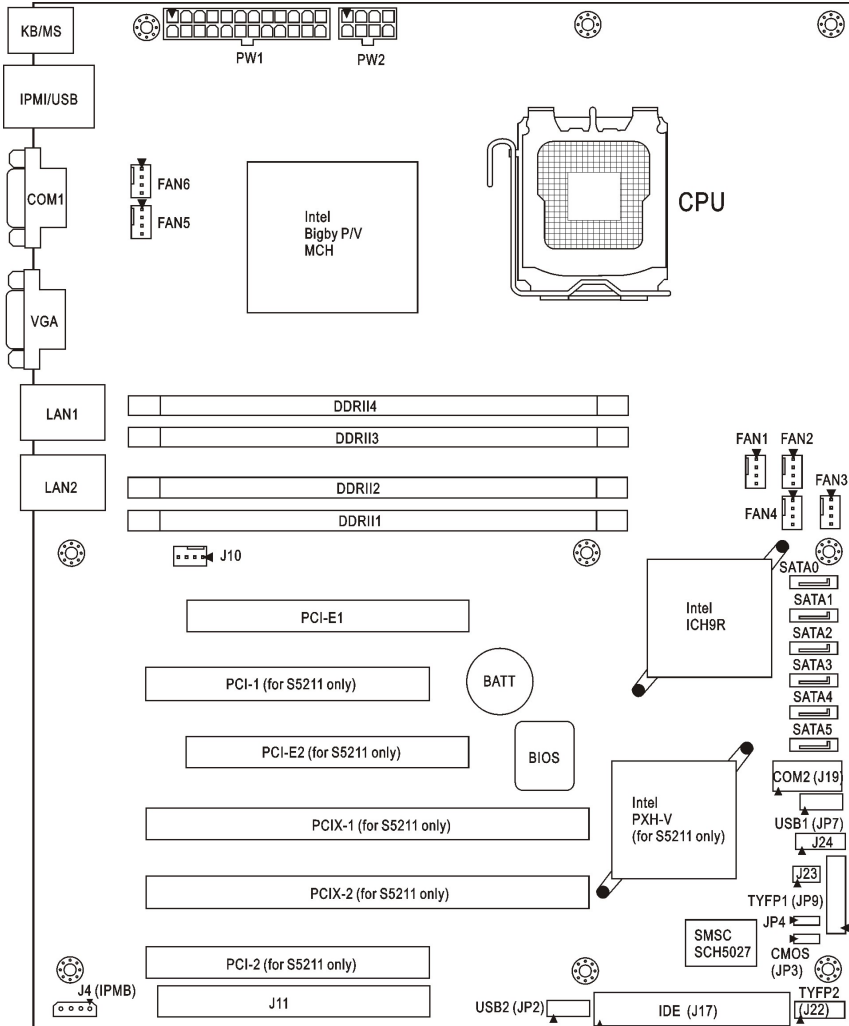


This diagram is representative of the latest board revision available at the time of publishing. The board you receive may not look exactly like the above diagram.


Jumper Legend

	OPEN - Jumper OFF, without jumper cover
	CLOSED – Jumper ON, with jumper cover


Jumper/Connector	Function
COM2 (J19)	COM2 Header
FAN1/2/3/4/5/6	4-pin Fan Connector
USB1 (JP7) / USB2 (JP2)	USB Front Panel Connector
TYFP1 (JP9)	18-pin Front Panel Connector
TYFP2 (J22)	12-pin Front Panel Connector (reserved for OEM only)
J23	LCM Connector (reserved for OEM only)
IPMB (J4)	IPMB Connector
J11	IPMI Connector (for TYAN M3295/M3296)
J10	Riser Power Connector
J24	Barebone Fan Connector (reserved for OEM only)
JP4	PCI-X Speed Select Jumper
CMOS (JP3)	Clear CMOS Jumper

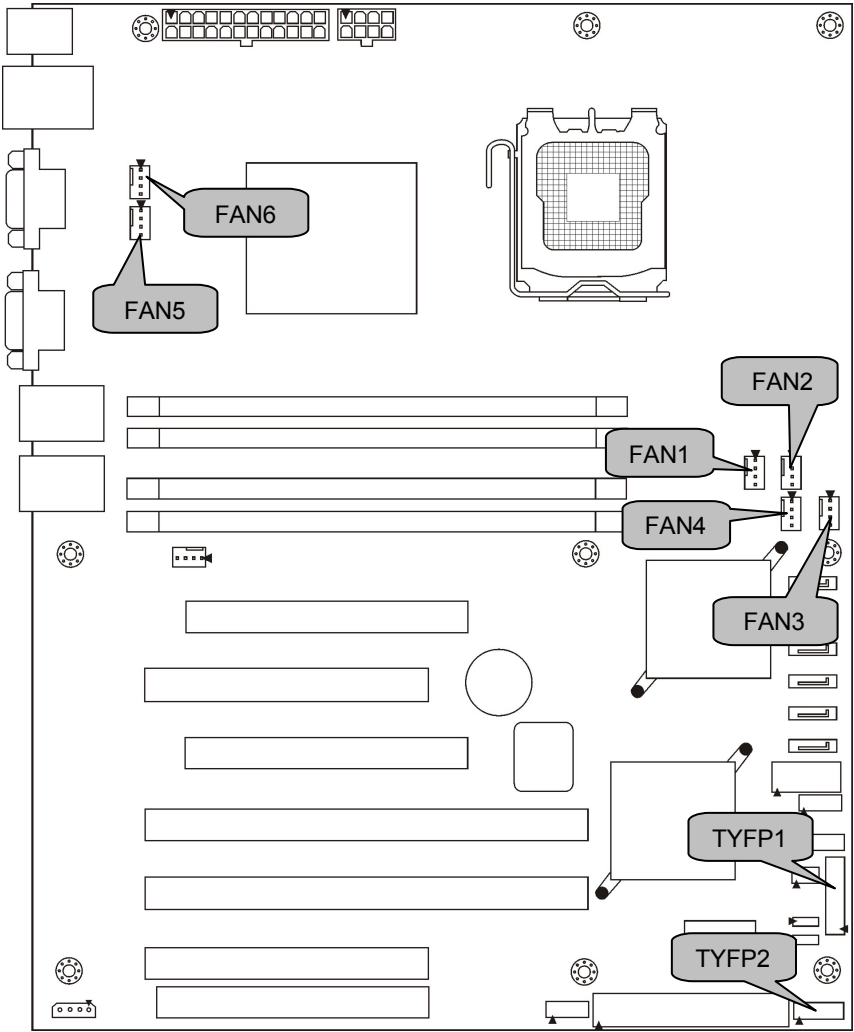

FAN1/2/3/4/5/6: 4-pin Fan Connector
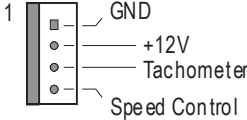
<p>4-pin Fan</p> 	<p>Use these headers to connect the 4-pin cooling fans to your motherboard to keep the system stable and reliable.</p> <p>These connectors support the tachometer monitoring and auto fan speed control.</p>
--	--


TYFP2 (J22): TYFP2 Connector (reserved for OEM only)

	<table border="1"> <thead> <tr> <th>Pin</th> <th>Signal</th> <th>Pin</th> <th>Signal</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>LAN1 LED+</td> <td>2</td> <td>LAN1 LED-</td> </tr> <tr> <td>3</td> <td>LAN2 LED+</td> <td>4</td> <td>LAN2 LED-</td> </tr> <tr> <td>5</td> <td>NC</td> <td>6</td> <td>NC</td> </tr> <tr> <td>7</td> <td>ID LED+</td> <td>8</td> <td>ID LED-</td> </tr> <tr> <td>9</td> <td>ID SW+</td> <td>10</td> <td>ID SW-</td> </tr> <tr> <td>11</td> <td>Key Pin</td> <td>12</td> <td>Reserved</td> </tr> </tbody> </table>	Pin	Signal	Pin	Signal	1	LAN1 LED+	2	LAN1 LED-	3	LAN2 LED+	4	LAN2 LED-	5	NC	6	NC	7	ID LED+	8	ID LED-	9	ID SW+	10	ID SW-	11	Key Pin	12	Reserved
Pin	Signal	Pin	Signal																										
1	LAN1 LED+	2	LAN1 LED-																										
3	LAN2 LED+	4	LAN2 LED-																										
5	NC	6	NC																										
7	ID LED+	8	ID LED-																										
9	ID SW+	10	ID SW-																										
11	Key Pin	12	Reserved																										


TYFP1 (JP9): Front Panel Header

The Front Panel Header is used to connect some control or signal wires from motherboard to chassis, such as HDD LED, power LED, power button, and reset button.

Chassis Intrusion #	18	17	SMBUS Clock
GND	16	15	SMBUS Data
Key Pin	14	13	+5VSB
Warning LED -	12	11	NMI
Warning LED+	10	9	GND
GND	8	7	Reset SW+
PWR SW #	6	5	GND
PWR LED-	4	3	HDD LED-
PWR LED+	2	1	HDD LED+

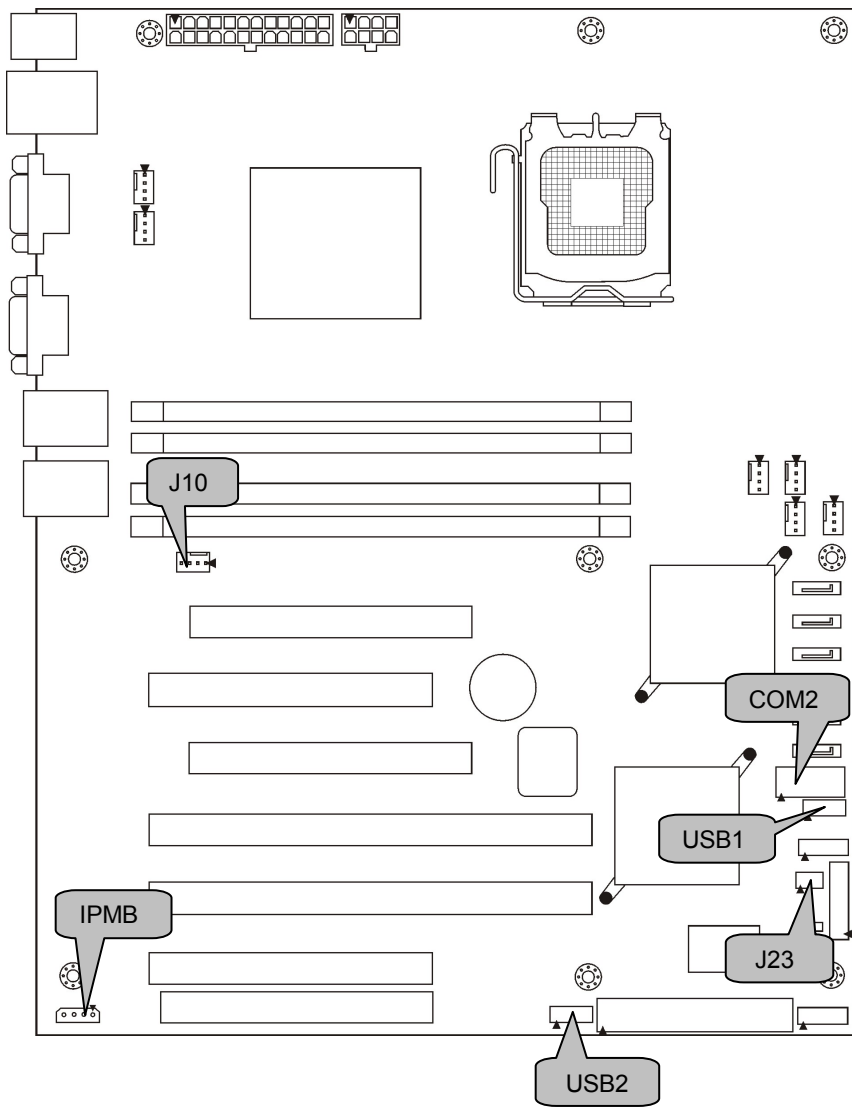

 
USB1 (JP7) / USB2 (JP2): USB Front Panel Connector



Pin	Signal	Pin	Signal
1	PWR	2	PWR
3	USB_A-	4	USB_B-
5	USB_A+	6	USB_B+
7	GND	8	GND
9	Key Pin	10	GND

Use these headers to connect to the USB devices via the enclosed USB cable.

COM2 (J19): COM2 Header




Use these pin definitions to connect a port to COM2.

**TYAN does not provide cable for this header. It is designed for OEM use only.*


Pin	Signal	Pin	Signal
1	DCD	2	DSR
3	Rx	4	RTS
5	Tx	6	CTS
7	DTR	8	RI
9	GND	10	NC

 IPMB (J4): IPMP Connector




Pin	Signal	Pin	Signal
1	IPMB_SDA	2	GND
3	IPMB_SCLK	4	NC

J10: Riser Power Connector

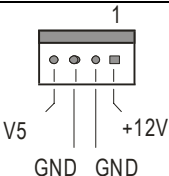


Pin	Signal	Pin	Signal
1	+12V	2	GND
3	GND	4	V5

 J23: LCM Header (reserved for OEM only)



Pin	Signal	Pin	Signal
1	V5	2	RX
3	Key Pin	4	GND
5	V5DUAL	6	TX

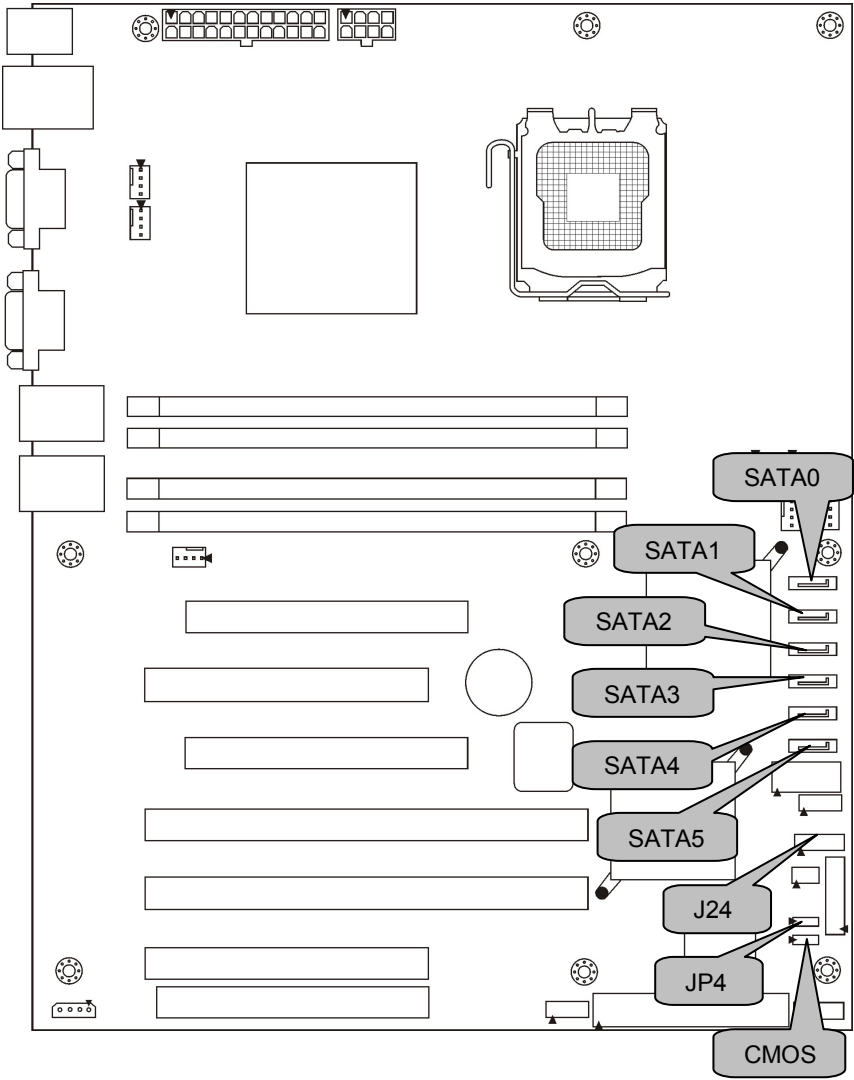

J24: Barebone Fan Connector (reserved for OEM only)

	<table border="1"> <thead> <tr> <th>Pin</th> <th>Signal</th> <th>Pin</th> <th>Signal</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>FAN1_TACH</td> <td>2</td> <td>FAN6_TACH</td> </tr> <tr> <td>3</td> <td>FAN2_TACH</td> <td>4</td> <td>Reserved</td> </tr> <tr> <td>5</td> <td>FAN3_TACH</td> <td>6</td> <td>Reserved</td> </tr> <tr> <td>7</td> <td>FAN4_TACH</td> <td>8</td> <td>Reserved</td> </tr> <tr> <td>9</td> <td>FAN5_TACH</td> <td>10</td> <td>Reserved</td> </tr> <tr> <td>11</td> <td>GND</td> <td>12</td> <td>Key Pin</td> </tr> <tr> <td>13</td> <td>GND</td> <td>14</td> <td>PWM</td> </tr> </tbody> </table>	Pin	Signal	Pin	Signal	1	FAN1_TACH	2	FAN6_TACH	3	FAN2_TACH	4	Reserved	5	FAN3_TACH	6	Reserved	7	FAN4_TACH	8	Reserved	9	FAN5_TACH	10	Reserved	11	GND	12	Key Pin	13	GND	14	PWM
Pin	Signal	Pin	Signal																														
1	FAN1_TACH	2	FAN6_TACH																														
3	FAN2_TACH	4	Reserved																														
5	FAN3_TACH	6	Reserved																														
7	FAN4_TACH	8	Reserved																														
9	FAN5_TACH	10	Reserved																														
11	GND	12	Key Pin																														
13	GND	14	PWM																														

SATA0/1/2/3/4/5: SATA RAID Connector

	<p>Connects to the Serial ATA ready drives via the Serial ATA cable.</p> <table border="1"> <thead> <tr> <th>Pin 1</th> <th>Pin 2</th> <th>Pin 3</th> <th>Pin 4</th> <th>Pin 5</th> <th>Pin 6</th> <th>Pin 7</th> </tr> </thead> <tbody> <tr> <td>GND</td> <td>TXP</td> <td>TXN</td> <td>GND</td> <td>RXN</td> <td>RXP</td> <td>GND</td> </tr> </tbody> </table>	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	GND	TXP	TXN	GND	RXN	RXP	GND
Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7									
GND	TXP	TXN	GND	RXN	RXP	GND									

JP4: PCI-X Speed Select Jumper

	Pin 1-2 Closed: 133MHz (Default)
	Pin 2-3 Closed: 100MHz max.

CMOS (JP3): Clear CMOS Jumper

<p>Normal (Default)</p>	<p>Use this jumper when you have forgotten your system/setup password or need to clear the system BIOS settings.</p> <p>How to clear the CMOS data</p> <ul style="list-style-type: none"> - Power off system and disconnect the power supply from the AC source - Use jumper cap to close Pin 2 and 3 for several seconds to Clear CMOS - Replace jumper cap to close Pin 1 and 2 - Reconnect the power supply to the AC source - Power on system
<p>Clear</p>	


2.4 - Tips on Installing Motherboard in Chassis

Before installing your motherboard, make sure your chassis has the necessary motherboard support studs installed. These studs are usually metal and are gold in color. Usually, the chassis manufacturer will pre-install the support studs. If you are unsure of stud placement, simply lay the motherboard inside the chassis and align the screw holes of the motherboard to the studs inside the case. If there are any studs missing, you will know right away since the motherboard will not be able to be securely installed.

Some chassis' include plastic studs instead of metal. Although the plastic studs are usable, TYAN recommends using metal studs with screws that will fasten the motherboard more securely in place.

Below is a chart detailing what the most common motherboard studs look like and how they should be installed.

Mounting the Motherboard

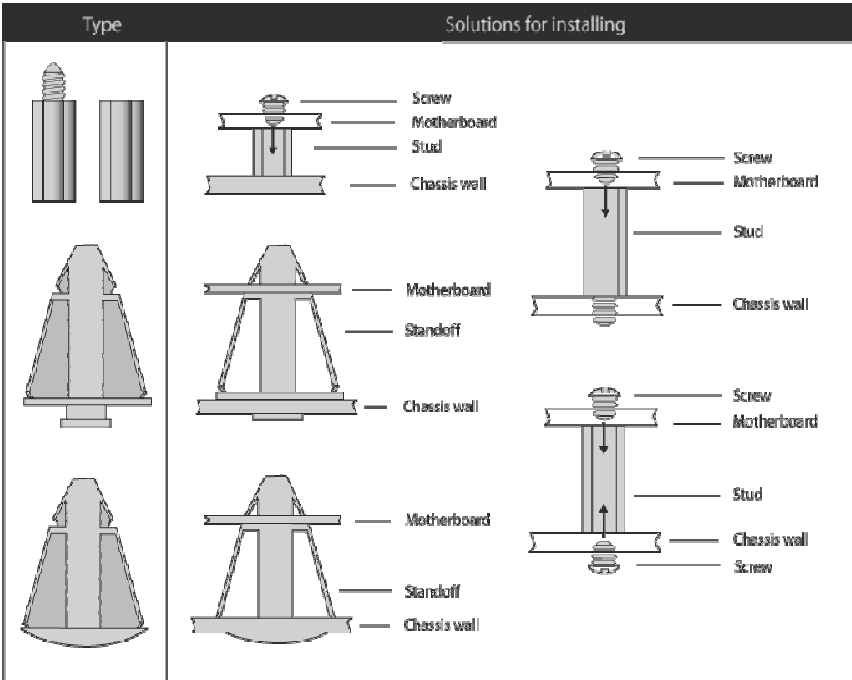

2.5 - Installing the Memory

Before installing memory, ensure that the memory you have is compatible with the motherboard and processor. Only DDRII-800/667 DIMM modules are required. Check the TYAN Web site at: www.tyan.com for details of the type of memory recommended for your motherboard.

The following diagram shows common types of DDRII memory modules.



Key points to note before installing memory:

For optimal dual-channel DDRII operation, always install memory in pairs beginning with DDRII1 and DDRII3. Memory modules of the same type and density are required for dual-channel DDRII operation. Mismatched memory may cause system instability.

- Only **DDRII 800/667 un-buffered ECC** memory modules are supported.
- All installed memory will automatically be detected and no jumpers or settings need changing.

Refer to the following table for supported DDRII populations.
(Note: X indicates a populated DIMM slot)

Mode	Channel A		Channel B		Notes
	DDRII1	DDRII2	DDRII3	DDRII4	
Single Channel	Populated	Empty	Empty	Empty	
	Empty	Populated	Empty	Empty	
	Populated	Populated	Empty	Empty	
	Empty	Empty	Populated	Empty	
	Empty	Empty	Empty	Populated	
	Empty	Empty	Populated	Populated	
Dual Channel Symmetric	Populated	Empty	Populated	Empty	1
	Populated	Empty	Empty	Populated	1
	Populated	Empty	Populated	Populated	2
	Empty	Populated	Populated	Empty	1
	Empty	Populated	Empty	Populated	1
	Empty	Populated	Populated	Populated	2
	Populated	Populated	Populated	Empty	2
	Populated	Populated	Empty	Populated	2
Dual Channel Asymmetric	Populated	Populated	Populated	Populated	3
	Populated	Empty	Populated	Empty	4
	Populated	Empty	Empty	Populated	4
	Populated	Empty	Populated	Populated	4
	Empty	Populated	Populated	Empty	4
	Empty	Populated	Empty	Populated	4
	Empty	Populated	Populated	Populated	4
	Populated	Populated	Populated	Empty	4
	Populated	Populated	Empty	Populated	4
Populated	Populated	Populated	Populated	4	


Note:

1. The same size DIMM is populated in each channel. For example, Channel A has one 256MB DIMM and Channel B has one 256MB DIMM.
2. The same total amount of memory is populated in each channel. For example, Channel A has one 512MB DIMM and Channel B has two 256MB DIMMs.
3. The same total amount of memory is populated in each channel. For example, Channel A has two 256MB DIMMs and Channel B has two 256MB DIMMs.
4. The total amount of memory populated in each channel is not the same. For example, Channel A has one 256MB DIMM and Channel B has two 256MB DIMMs. Another example is Channel A has two 256MB DIMMs and Channel B has two 512MB DIMMs.


Memory Installation Procedure

Follow these instructions to install memory modules into the S5211/S5211-1U.


1. Press the locking levers in the direction shown in the following illustration.

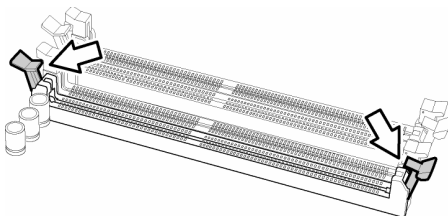

2. Align the memory module with the socket. The memory module is keyed to fit only one way in the socket.

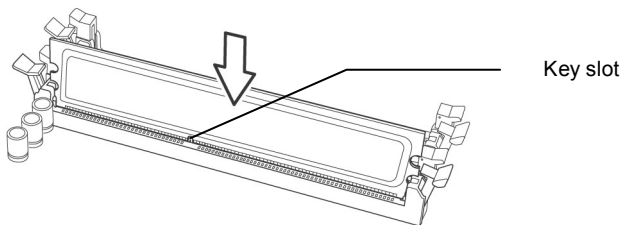

3. Seat the module firmly into the socket by gently pressing down until it sits flush with the socket. The locking levers pop up into place.

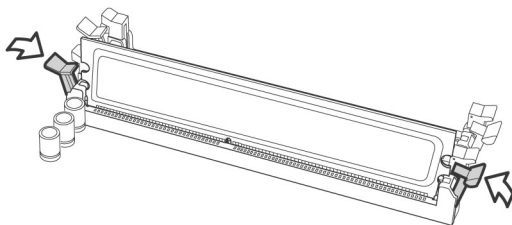


2.6 - Installing the Processor and Cooling Fan

Your S5211/S5211-1U supports the latest processor technologies from Intel. Check the TYAN website for latest processor support: <http://www.tyan.com>


Processor Installation (LGA 775 Socket)

The processor should be installed carefully. Make sure you are wearing an antistatic strap and handle the processor as little as possible. Follow these instructions to install your processor and heat sink.


1. Locate the processor socket on the motherboard and lift the locking lever to a fully open position.

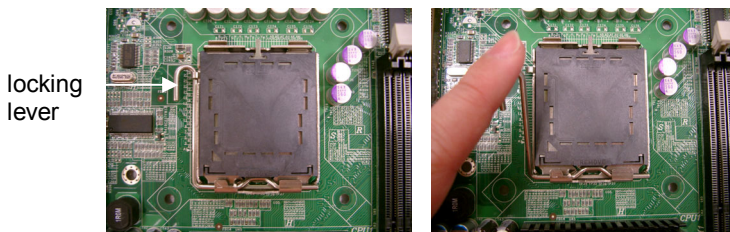

2. Lift the load plate to a fully open position.

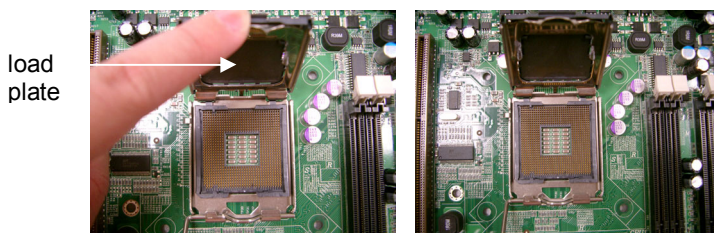


3. Insert the processor into the socket and make sure that pin 1 is correctly located.

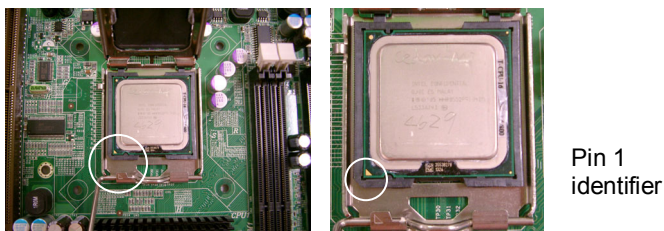


4. Remove the PnP cap from the load plate.

PnP cap

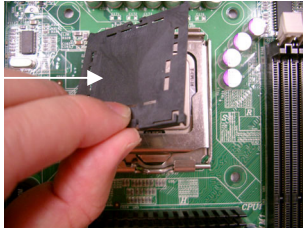

5. Replace the load plate and return the locking lever to the locking position.

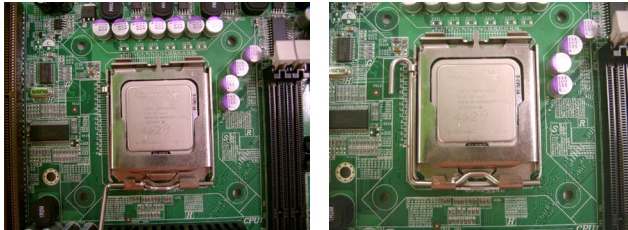


6. The CPU installation is now complete.

Cooling Fan Installation


After you have installed the processor, the heatsink should be installed to ensure that the processor runs efficiently and does not overheat. Use the heatsink supplied for best results.

Follow these instructions to install the heatsink shown.

1. Take out the heatsink from the package. Turn the heatsink upside down and you can see that the heatsink has already applied a layer of thermal compound.

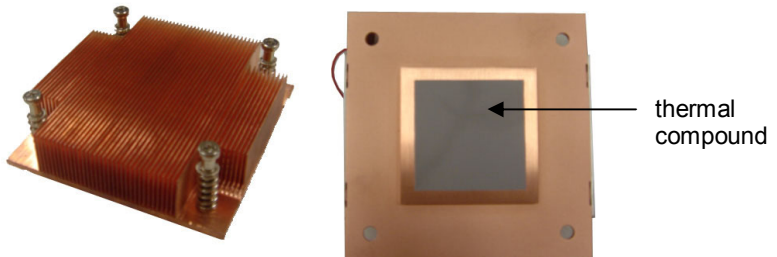


2. Turn the board upside down and insert the heat sink spring mechanism as shown.

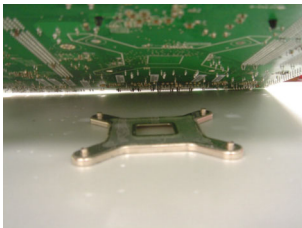

3. Align the heatsink with the four holes around the processor socket.



4. Press the heatsink down until the four screws are securely seated in the holes.

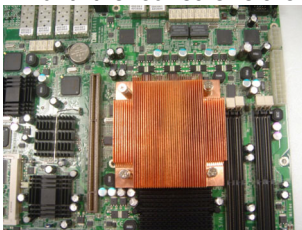


5. Use screw drive to secure the four screws.

2.7 - Attaching Drive Cables

Attaching IDE Drive Cable

Attaching the IDE drive cable is simple. These cables are “keyed” to only allow them to be connected in the correct manner. TYAN motherboards have two on-board IDE channels, each supporting two drives. **The black connector designates the Primary channel, while the white connector designates the Secondary channel.**

Attaching IDE cables to the IDE connectors is illustrated below:

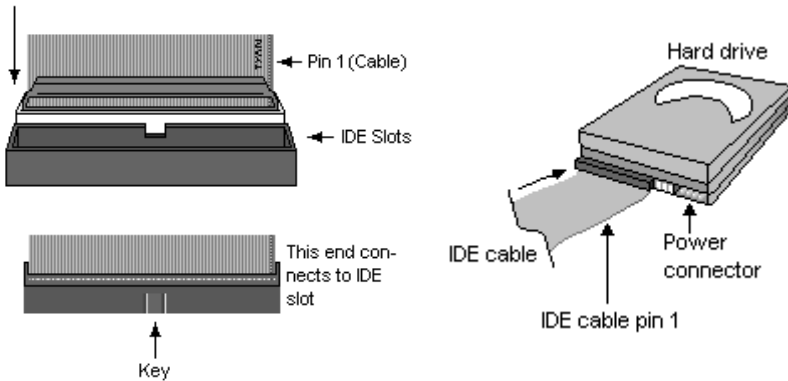

Simply plug in the BLUE END of the IDE cable into the motherboard IDE connector, and the other end(s) into the drive(s). Each standard IDE cable has three connectors, two of which are closer together. The BLUE connector that is furthest away from the other two is the end that connects to the motherboard. The other two connectors are used to connect to drives.

Note: Always remember to properly set the drive jumpers. If only using one device on a channel, it must be set as Master for the BIOS to detect it.

TIP: Pin 1 on the IDE cable (usually designated by a colored wire) faces the drive's power connector.


Attaching Serial ATA Cables

The Toledo i3210W (S5211) and Toledo i3200R (S5211-1U) is also equipped with 6 Serial ATA (SATA) channels.

Connections for these drives are also very simple.

There is no need to set Master/Slave jumpers on SATA drives.


The following pictures illustrate how to connect an SATA drive

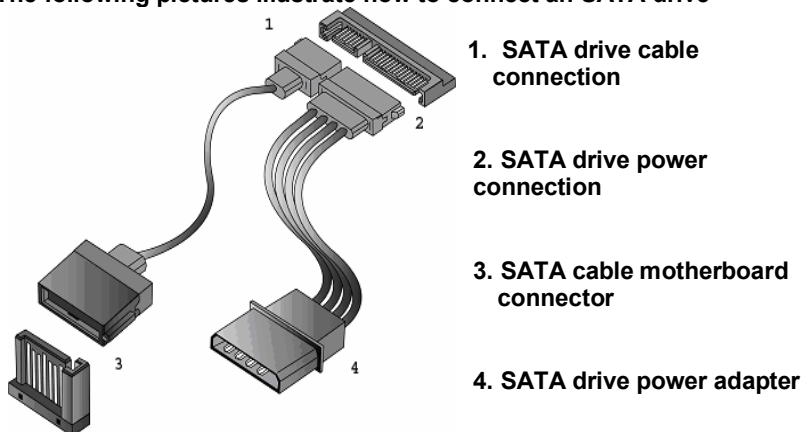


2.8 - Installing Add-In Cards

Before installing add-in cards, it's helpful to know if they are fully compatible with your motherboard. For this reason, we've provided the diagrams below, showing the slots that appear on your motherboard.

 
PCI-E x16 slot (w/ x8 bus)



PCI-X 1.0 64/133 slot

 

32/33 PCI 2.3 slot

 

NOTE


YOU MUST ALWAYS unplug the power connector from the motherboard before performing system hardware changes. Otherwise you may damage the board and/or expansion device.

Simply find the appropriate slot for your add-in card and insert the card firmly. Do not force any add-in cards into any slots if they do not seat in place. It is better to try another slot or return the faulty card rather than damaging both the motherboard and the add-in card.


2.9 - Installing Optional SO-DIMM modules

Your S5211/S5211-1U motherboard is equipped with an optional proprietary SO-DIMM connector. The 200-pin vertical SO-DIMM connector can be used for **TYAN M3295/M3296** expansion cards to provide such features as additional TYAN SMDC modules support. For details of available expansions cards, visit the TYAN website at <http://www.tyan.com>. To install a SO-DIMM expansion card:


1. Open the spring levers as shown.

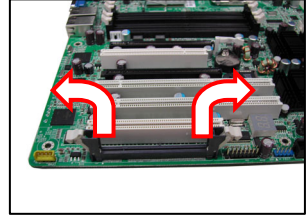


2. Insert the SO-DIMM card as shown, making sure that the card is the right way up. The card will fit in only one way and the screw holes in the card should line up exactly with the mounting posts on the motherboard.

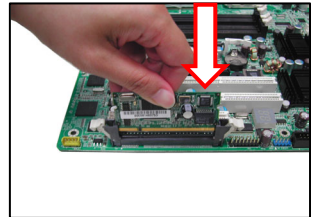

3. Push the SO-DIMM card down into place and make sure the spring levers click into place as shown.

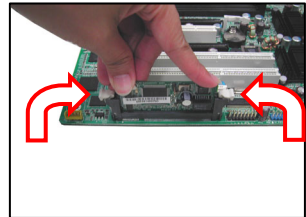


NOTE: The SO-DIMM expansion cards will fit in the slot only one way. Make sure that you align the slot in the card with the key in the card slot.

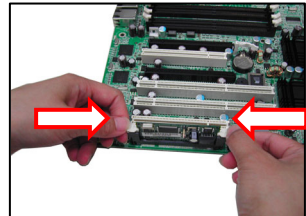

4. Removal of a SO-DIMM card is a reversal of the installation procedure. Push out the spring levers as shown and pull the card out of the socket.

2.10 - Connecting External Devices


The following diagram will detail the rear port stack for this S5211/S5211-1U motherboard:

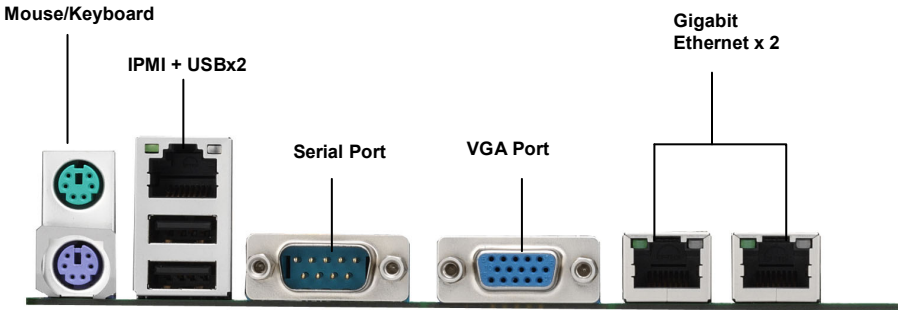

NOTE: Peripheral devices can be plugged straight into any of these ports but software may be required to complete the installation.

Onboard LAN LED Color Definition

The three onboard Ethernet ports have green and yellow LEDs to indicate LAN status. The chart below illustrates the different LED states.

10/100/1000 Mbps LAN Link/Activity LED Scheme			
		Left LED	Right LED
10 Mbps	Link	Slow Blinking Green	Off
	Active	Blinking Green	Off
100 Mbps	Link	Slow Blinking Green	Green
	Active	Blinking Green	Green
1000 Mbps	Link	Slow Blinking Green	Orange
	Active	Blinking Green	Orange
No Link		Off	Off

2.11 - Installing the Power Supply

There are two power connectors on your mainboard. The board requires that you use an EPS12V power supply that has a 24-pin and an 8-pin power connector. Please be aware that ATX 2.x, ATX12V and ATXGES power supplies are **not** compatible with the motherboard and can damage.

EPS12V (24-pin)



EPS12V (8-pin)



Applying power to the board

1. Connect the EPS 12V 8-pin power connector.
2. Connect the EPS 12V 24-pin power connector.
3. Connect power cable to power supply and power outlet

NOTE

YOU MUST unplug the power supply before plugging the power cables to motherboard connectors.

2.12 - Finishing Up

Congratulations on making it this far! You're finished setting up the hardware aspect of your computer. Before closing up your chassis, make sure that all cables and wires are connected properly, especially IDE cables and most importantly, jumpers. You may have difficulty powering on your system if the motherboard jumpers are not set correctly.

In the rare circumstance that you have experienced difficulty, you can find help by asking your vendor for assistance. If they are not available for assistance, please find setup information and documentation online at our website or by **calling your vendor's support line**.

NOTE

Chapter 3: BIOS Setup

3.1 About the BIOS

The BIOS is the basic input/output system, the firmware on the motherboard that enables your hardware to interface with your software. This chapter describes different settings for the BIOS that can be used to configure your system. The BIOS section of this manual is subject to change without notice and is provided for reference purposes only. The settings and configurations of the BIOS are current at the time of print, and therefore may not match exactly what is displayed on screen.

This section describes the BIOS setup program. The setup program lets you modify basic configuration settings. The settings are then stored in a dedicated, battery-backed memory (called NVRAM) that retains the information when the power is turned off.

This motherboard's BIOS is a customized version of the industry-standard BIOS for IBM PC AT-compatible personal computers. The BIOS provides critical, low-level support for the system's central processing unit (CPU), memory, and I/O subsystems.

This BIOS has been customized by adding important features such as virus and password protection, power management, and chipset "tuning" features that control the system. This section will guide you through the process of configuring the BIOS for your system setup.

Starting Setup

The BIOS is immediately activated when you turn on the computer. The BIOS reads system configuration in CMOS RAM and begins the process of checking out the system and configuring it through the Power-On-Self-Test (POST). When these preliminary tests are complete, the BIOS searches for an operating system on one of the system's data storage devices (hard drive, CD-ROM, etc). If one is found, the BIOS will launch that operating system and hand control over to it. You can enter the BIOS setup by pressing the **[Delete]** key when the machine boots up and begins to show the memory count.

Setup Basics

The table below shows how to use the setup program with the keyboard.

Key	Function
Tab	Moves from one selection to the next
Left/Right Arrow Keys	Changes from one menu to the next
Up/Down Arrow Keys	Moves between selections
Enter	Opens highlighted section
PgUp/PgDn Keys	Changes settings.

Getting Help

Pressing [F1] displays a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window, press [ESC] or the [F1] key again.

In Case of Problems

If you discover that you have trouble booting the computer after making and saving the changes with the BIOS setup program, restart the computer by holding the power button down until the computer shuts off (usually within 4 seconds); resetting by pressing CTRL-ALT-DEL; or clearing the CMOS.

The best advice is to only alter settings that you thoroughly understand. In particular, do not change settings in the Chipset section unless you are sure of the outcome. TYAN or your system manufacturer has carefully chosen the chipset defaults for best performance and reliability. Even a seemingly small change to the Chipset setup options may cause the system to become unstable or unusable.

Setup Variations

Not all systems have the same BIOS setup layout or options. While the basic look and function of the BIOS setup remains more or less the same for most systems, the appearance of your Setup screen may differ from the charts shown in this section. Each system design and chipset combination requires a custom configuration. In addition, the final appearance of the Setup program depends on the system designer. Your system designer may decide that certain items should not be available for user configuration, and remove them from the BIOS setup program.

3.2 Main BIOS Setup

When you enter PhoenixBIOS CMOS Setup Utility, the following screen will appear as below:



The main menu contains the following menu items:

Main

Use this menu for basic system configuration.

Advanced

Use this menu to set the Advanced Features available on your system.

Security

Use this menu to configure security settings for your system.

Power

Use this menu to configure power options for your system.

Boot

Use this menu to configure boot options for your system.

Exit

This contains the various BIOS exit options.

3.3 Main

In this section, you can alter general features such as the date and time, as well as access to the IDE configuration options. Note that the options listed below are for options that can directly be changed within the Main Setup screen. Users use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.



System Time / Date setup

System Time: Adjusts the system clock.

HHHours (24hr. format): MMMinutes : SSSeconds

System Date: Adjusts the system date.

MMMonths : DDDays : YYYYYears


Installed Memory/Available to OS/Used by devices

This displays the amount of system memory allocated to OS or used by devices. (read only)

3.3.1 SATA Port 1~6

Computer detects the hard disk drive type for each drive.

Press [Enter] to view advanced details of the corresponding drive.

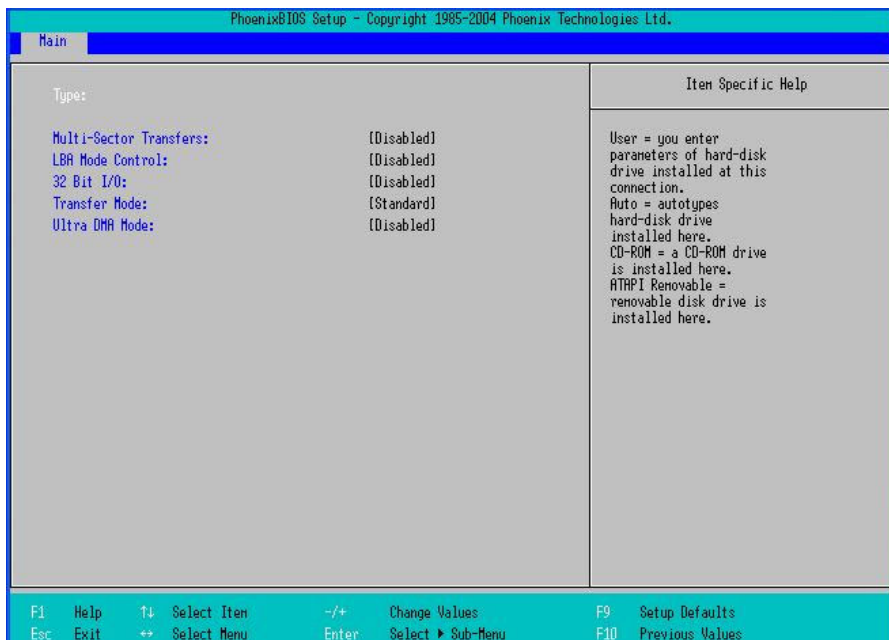

The system displays advanced details like the number of heads/cylinders/sectors on the detected disk and the maximum storage capacity of the disk.

This option lets you set the following hard disk parameters:

Type

Selects the type of device connected to the system.

Options: **Auto** / CD/DVD / Not Installed / ARMD

Multi-Sector Transfers

This option allows you to specify the number of sectors per block for multiple sector transfers.

Options: Disabled / 2 Sectors / 4 Sectors / 8 Sectors / **16 Sectors**

LBA Mode Control

Enables or disables LBA Mode.

In LBA Mode, instead of referring to a cylinder, head and sector number, each sector is instead assigned a unique "sector number". In essence, the sectors are numbered 0, 1, 2, etc. up to (N-1), where N is the number of sectors on the disk. In order for LBA to work, it must be supported by the BIOS and operating system, but since it is also a new way of talking to the hard disk, the disk must support it as well. All newer hard disks do in fact support LBA, and when auto detected by a BIOS supporting LBA, will be set up to use that mode.

When LBA is turned on, the BIOS will enable geometry translation. This translation may be done in the same way that it is done in Extended CHS or large mode, or it may be done using a different algorithm called LBA-assist translation. The translated geometry is still what is presented to the operating system for use in Int 13h calls. The difference between LBA and ECHS is that when using ECHS the BIOS translates the parameters used by these calls from the translated geometry to the drive's logical geometry. With LBA, it translates from the translated geometry directly into a logical block (sector) number.

LBA has in recent years become the dominant form of hard disk addressing. Since the 8.4 GB limit of the Int13h interface was reached, it became impossible to express the geometry of large hard disks using cylinder, head and sector numbers, translated or not, while remaining below the Int13h limits of 1,024 cylinders, 256 heads and 63 sectors. Therefore, modern drives are no longer specified in terms of classical geometry, but rather in terms of their total number of user data sectors and addressed using LBA.

Options: Disabled / **Enabled**

32 Bit I/O

Enables or disables 32 bit data transfer mode.

Enabling this option causes the PCI hard disk interface controller to bundle together two 16-bit chunks of data from the drive into a 32-bit group, which is then transmitted to the processor or memory. This results in a small performance increase.

Options: Enabled / **Disabled**

Transfer Mode

These modes determine the speed at which data is transferred to and from the drive. The Auto option automatically determines the correct transfer rates.

Options: Auto / Standard / Fast PIO 1 / Fast PIO 2 / Fast PIO 3 / Fast PIO 4 / FPIO 3 / DMA 1 / **FPIO 4 / DMA 2**

Ultra DMA Mode

Enables or disables Ultra DMA Mode.

Ultra DMA (UDMA, or, more accurately, Ultra DMA/33) is a protocol for transferring data between a hard disk drive through the computer's data paths (or bus) to the computer's random access memory (RAM). The Ultra DMA/33 protocol transfers data in burst mode at a rate of 33.3 MBps (megabytes per second), twice as fast as the previous Direct Memory Access (DMA) interface.

Ultra DMA support in your computer means that it will boot (start) and open new applications more quickly. It will also help users of graphics-intensive and other applications that require large amounts of access to data on the hard drive. Ultra DMA uses Cyclical Redundancy Checking (CRC), offering a new level of data protection.


Because the Ultra DMA protocol is designed to work with legacy application PIO and DMA protocols, it can be added to many existing computers by installing an Ultra DMA/33 Peripheral Component Interconnect adapter card. Ultra DMA uses the same 40-pin Integrated Drive Electronics interface cable as PIO and DMA.

Options: Disabled / Mode 0 / Mode 1 / Mode 2 / **Mode 5**

3.3.2 Memory Cache

This setting allows you to tweak the various cache settings for optimal performance of your system.

Press [Enter] to display the various cache settings.

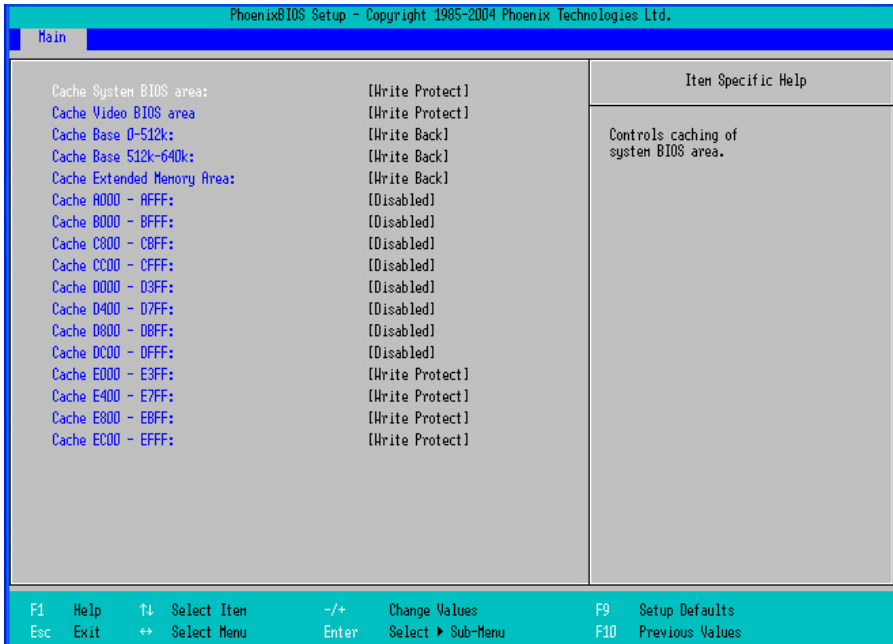

Cache System BIOS Area

This feature is only available when the system BIOS is shadowed. It enables or disables the caching of the system BIOS ROM at F0000h-FFFFFFh via the L2 cache. This greatly speeds up accesses to the system BIOS. However, this does not necessarily make the system perform better because the OS does not need to access the system BIOS often.

As such, it would be a waste of L2 cache bandwidth to cache the system BIOS instead of data that are more critical to the system's performance. In addition, if any program writes into this memory area, it will result in a system crash. So, it is recommended that you write protect this area for optimal system performance.

Options: NULL / **Write Protect**

Cache Video BIOS Area

This feature is only valid when the video BIOS is shadowed. It enables or disables the caching of the video BIOS ROM at C0000h-C7FFFh via the L2 cache. This greatly speeds up accesses to the video BIOS. However, this does not necessarily make the system perform better because the OS bypasses the BIOS and uses the graphics driver to access the video card's hardware directly.

As such, it would be a waste of L2 cache bandwidth to cache the video BIOS instead of data that are more critical to the system's performance. In addition, if any

program writes into this memory area, it will result in a system crash. So, it is recommended that you write protect this area for optimal system performance.

Options: NULL / **Write Protect**

Cache Base 0-512K

Control caching of 512K base memory.

Options: Write Through / **Write Back**

Cache Base 512-640K

Control caching of 512K-640K base memory.

Options: Write Through / **Write Back**

Cache Extended Memory Area

Control caching of system memory above one megabyte.

Options: Write Through / **Write Back**

Cache A000-AFFF~ Cache DC00-DFFF


Control caching of the memory blocks.

Options: **Disabled** / Write Back/ Write Through / Write Protect

3.3.3 Boot Features

This setting allows you to tweak the various boot settings for optimal performance of your system.

Press [Enter] to display the various boot features.

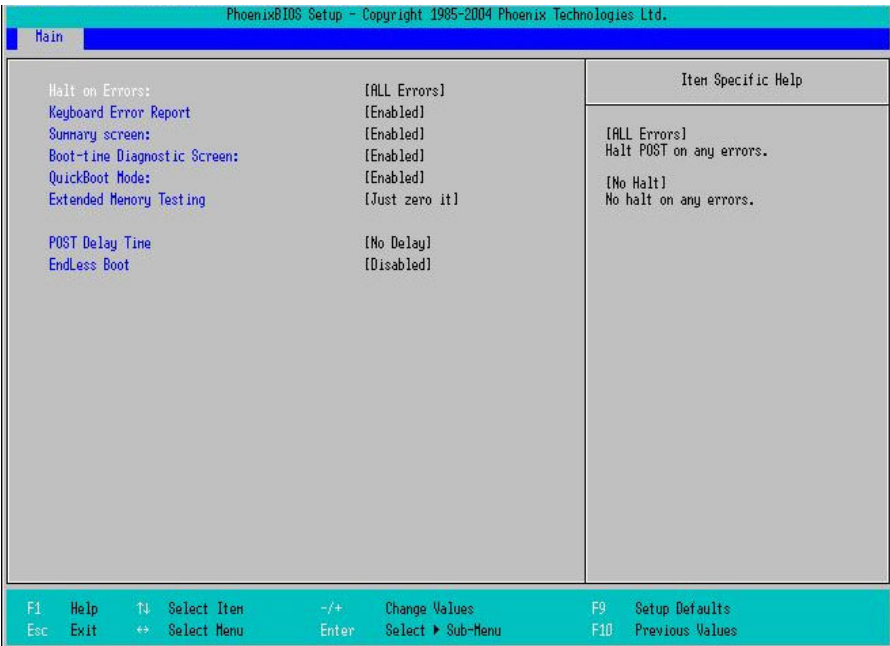

Halt on Errors

Select [No Errors] if users don't want to stop POST with any error.

Options: **All Errors** / No Halt / All, But Keyboard

Keyboard Error Report

Enabled BIOS keyboard error report; BIOS will display the keyboard error message & save the event in DMI.

Disabled BIOS keyboard error report; BIOS will not warn & display the error message.

Options: **Enabled** / Disabled

Summary Screen

Enables or disables the display of the summary screen during boot up.

When Summary Screen is Enabled (the default), a Phoenix BIOS Setup Utility summary screen appears during system boot after the power-on self-test (POST). The summary screen lists many of the system setup settings. When this option is set to Disabled, the summary screen does not appear.

Options: **Enabled** / Disabled

Boot-time Diagnostic Screen

This feature is used to display the diagnostic screen during the boot process.

Options: **Enabled** / Disabled

QuickBoot Mode

Allows the system to skip certain tests while booting. This will decrease the time needed to boot the system.

Options: Disabled / **Enabled**

Extended Memory Testing

Determines the tests that will be run on extended memory (memory above 1MB) during boot up.

Options: Normal / **Just zero it** / None

POST Delay Time

This item will set delay time before option ROM scan.

Options: **No Delay** / 40 Sec / 60 Sec / 80 Sec / 100 Sec / 120 Sec / 140 Sec / 160 Sec


Endless Boot

If enabled, system will only try to boot up from PXE. If PXE boot is failed, system will keep on trying until reaching PXE server.

Options: Enabled / **Disabled**

3.4 Advanced

This section facilitates configuring advanced BIOS options for your system.

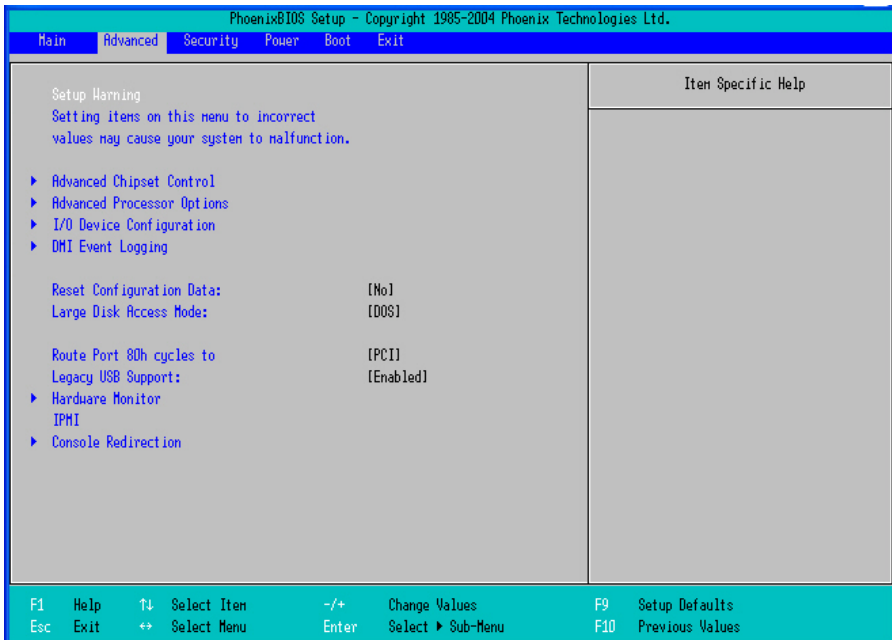

NOTE: When an IPMI card is installed, the Hardware Monitor submenu is disabled and the IPMI submenu is enabled, and vice versa.

Reset Configuration Data

If you install a new piece of hardware or modify your computer's hardware configuration, the BIOS will automatically detect the changes and reconfigure the ESCD (Extended System Configuration Data). Therefore, there is usually no need to manually force the BIOS to reconfigure the ESCD.

However, sometimes, the BIOS may not be able to detect the hardware changes. A serious resource conflict may occur and the operating system may not even boot as a result. This is where the Reset Configuration Data BIOS feature comes in.

This BIOS feature allows you to manually force the BIOS to clear the previously saved ESCD data and reconfigure the settings. All you need to do is enable this BIOS feature and then reboot your computer. The new ESCD should resolve the conflict and allow the operating system to load normally.

Please note that the BIOS will automatically reset it to the default setting of No after reconfiguring the new ESCD. So, there is no need for you to manually disable this feature after rebooting.

Options: Yes / **No**

Large Disk Access Mode

This option determines whether a hard drive with more than 1024 cylinders, more than 16 heads and or more than 64 tracks per sector is present on the system. Set this option to **DOS** if such a hard drive is present. Else, set this option to [Other]. Virtually, all modern hard disks have these characters so leave this option at [DOS], unless you know otherwise.

Options: **DOS** / Other

Route Port 80h cycles to

This feature allows you to route Port 80h I/O cycles to LPC or PCI bus.

Options: **PCI** / LPC


Legacy USB Support:

Enables support for legacy USB.

Options: **Enabled** / Disabled

3.4.1 Advanced Chipset Control

This section allows you to fine tune the chipset configuration.

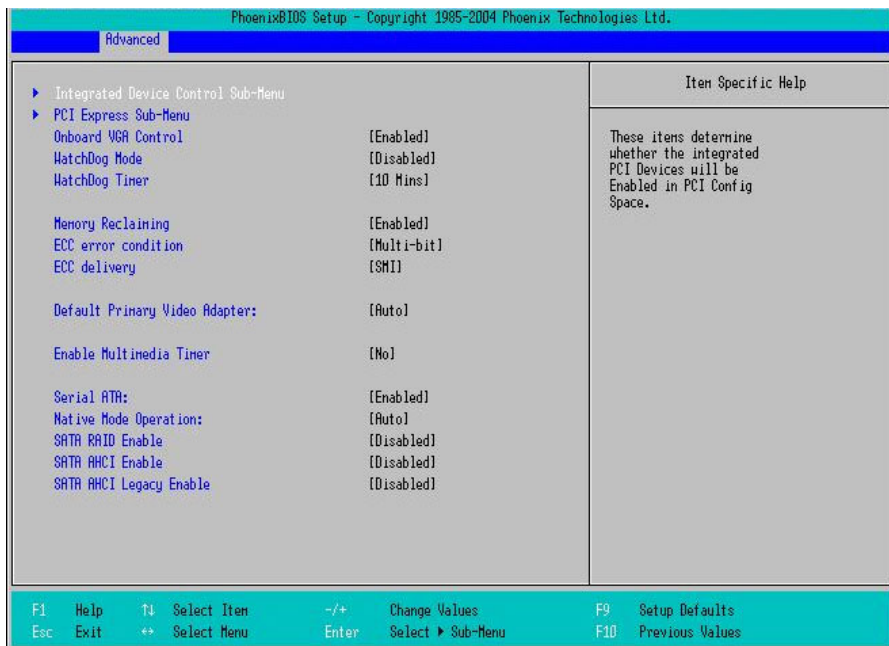

Onboard VGA Control

It allows you to enable or disable the onboard XGI Z9S PCI VGA.

Options: **Enabled** / Disabled

WatchDog Mode

This feature allows you to enable the watchdog function.

POST: Watchdog timer counting, start at Power on, stop at OS Boot

OS: Start at OS Boot

Power on: Start at power on

Options: **Disabled** / POST / OS / Power on

Watchdog Timer

This feature allows you to enable watchdog timer.

Options: 2 Mins / 4 Mins / 6 Mins / 8 Mins / **10 Mins**

Memory Reclaiming

It allows you to enable or disable the system memory remap function.

Options: **Enabled** / Disabled

ECC Error Condition

Select ECC Error Condition to be detected.

Options: **Multiple bit** / None / Single bit / Both

ECC Delivery

When an ECC error occurs, it generates an interrupt. Select the type of interrupt to report: [NMI Non-maskable], [SMI System Management], [SCI System Control].
Options: **SMI** / NMI / SCI / None

Default Primary Video Adapter

This feature is used to select the priority of initialing VGA card (PCI VGA or PCI-E VGA).
Options: **Auto** / PCI

Enable Multimedia Timer

It is used to enable/disable Multimedia Timer support.
Options: **No** / Yes

Serial ATA

This feature is used to enable the SATA function.
Options: Enabled / **Disabled**

Native Mode Operation

This feature is used to choose Native Mode for ATA. However, certain OS is not supported under Native Mode.
Options: **Auto** / Serial ATA

SATA RAID Enable

When this option is enabled, the Silicon Image RAID BIOS is loaded on system start up, allowing for configuration of hardware RAID arrays. With the SATA RAID ROM option disabled, the drives attached to the controller can only act independently of one another.
Options: Enabled / **Disabled**

SATA AHCI Enable

This item allows you to enable the SATA AHCI functionality.
Options: **Disabled** / Enabled

SATA AHCI Legacy Enable

[Enabled]: SATA and PATA drives are auto-detected and placed in Legacy Mode.
[Disabled]: SATA and PATA drives are auto-detected and placed in Native IDE mode.
Options: **Disabled** / Enabled

3.4.1.1 Integrated Device Control Sub-Menu



USB Dev #29

Controls the USB device by selecting the listed USB functions.
Options: **Fun #0, 1, 2, 3, 7** / Disabled

USB Dev #26

Controls the USB device by selecting the listed USB functions.
Options: **Fun #0, 1, 2, 7** / Disabled

3.4.1.1.1 LAN Control Sub-Menu



LAN1 / LAN2

Enables the onboard LAN controller.


Options: **Enabled** / Disabled

Option ROM Scan

Initializes device expansion ROM.


Options: **Disabled** / Enabled

3.4.1.2 PCI Express Sub-Menu

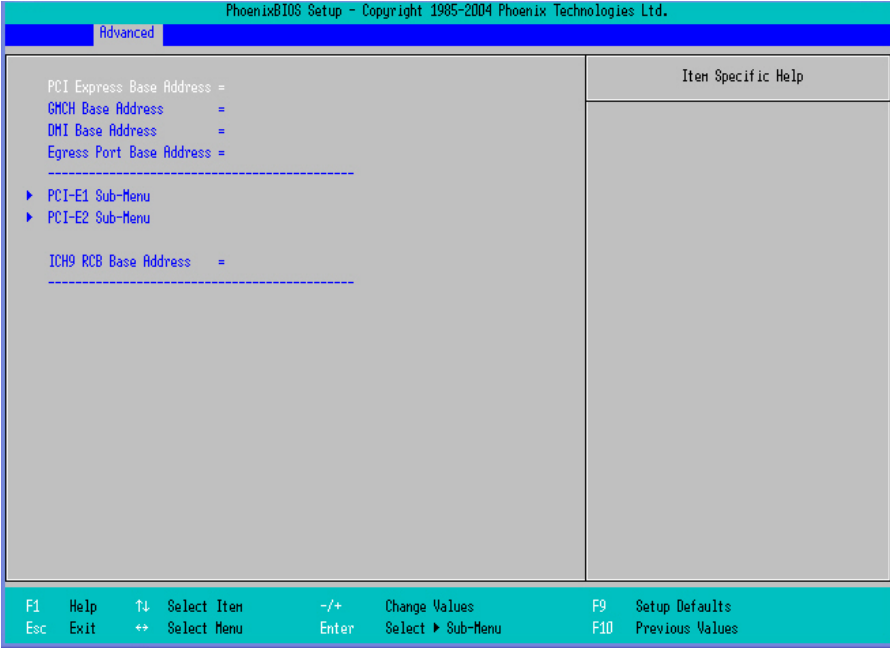

PCI Express Base Address / GMCH Base Address / DMI Base Address / Egress Port Base Address / ICH9 RCB Base Address
Read only.

3.4.1.2.1 PCI-E1/E2 Sub-Menu

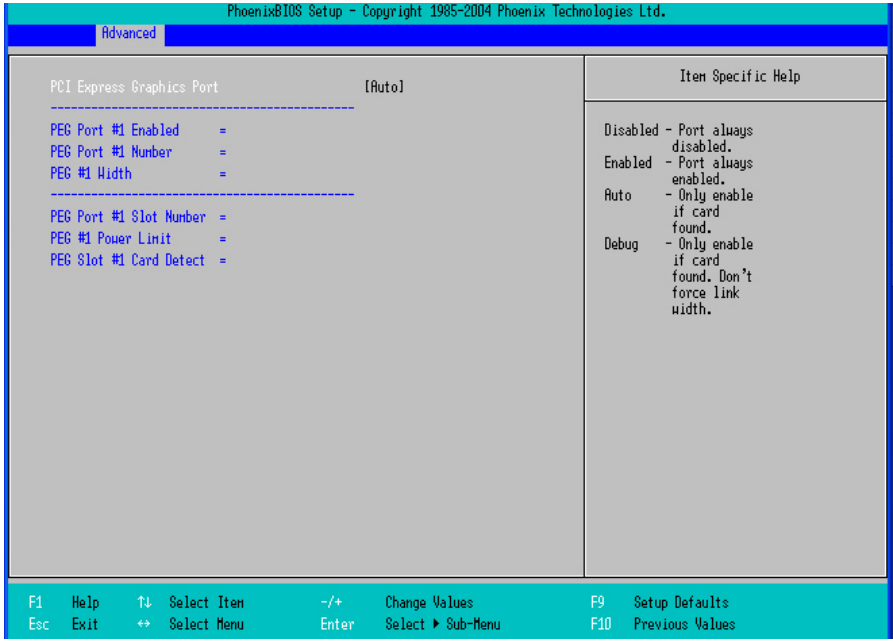

PCI Express Graphics Port

This feature is used to control the PCI Express Graphics port.


Options: **Auto** / Enabled / Disabled / Debug

PEG Port #1(#2) Enabled / PEG Port #1 (#2) Number / PEG #1 (#2) Width / PEG Port #1 (#2) Slot Number / PEG #1 (#2) Power Limit / PEG #1 (#2) Slot Card Detect

Read only.

3.4.2 Advanced Processor Options

This section allows you to fine-tune the processor options.

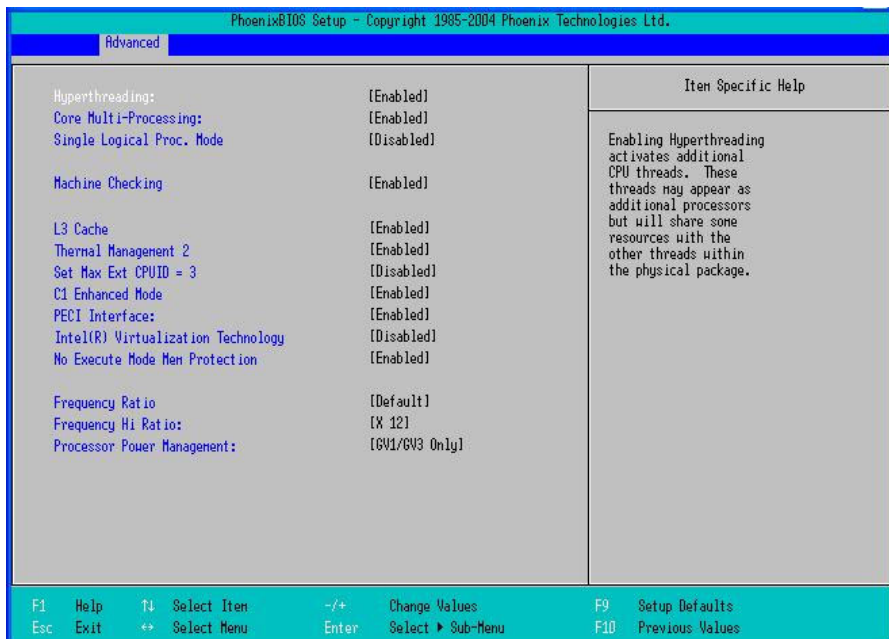

Hyperthreading

Enable this only if you have an Intel Hyper Threading processor.

Enabling Hyperthreading activates additional CPU threads. These threads may appear as additional processors but will share some resources with the other threads within the physical package.

Options: **Enabled** / Disabled

Core Multi-processing

Determines whether the second core is enabled.

[Disabled]: the second core is disabled

[Enabled]: the second core is enabled

Options: **Disabled** / Enabled

Single Logical Proc. Mode

Multiple Core Processor. Only single thread and core is enabled.

Options: **Disabled** / Enabled

Machine Checking

Microsoft windows & new linux kernel support the Machine check architectures. This enables Machine check exception reporting for all implementation-defined errors.

Options: **Enabled** / Disabled

L3 Cache

Enable / Disable CPU L3 Cache.

Options: **Disabled** / **Enabled**

Thermal Management 2

Select between TM1 and TM2.

Options: **Disabled** / Enabled

Set Max Ext CPUID = 3

Sets Max CPUID extended function value to 3.

Options: **Disabled** / Enabled

C1 Enhanced Mode

This feature is used to enable the C1 Enhanced mode.

Options: **Enabled** / Disabled

PECI Interface

It is used to enable/disable the Platform Environment Control Interface (PECI).

Options: Disabled / **Enabled**

Intel® Virtualization Technology

Intel Virtualization Technology is a set of platform features that support virtualization of platform hardware and multiple software environments.

Options: **Disabled** / Enabled

No Execute Mode Protection

This feature is used to enable the function of No Execute Mode Protection.

Options: **Enabled** / Disabled

Frequency Ratio

Select the internal frequency multiplier of the CPU.

Options: BIOS CPU Detect / **Default**

Frequency Hi Ratio

Select the Hi ratio for the Intel Speedstep CPU. Selecting unsupported ratios will cause hang. Clear CMOS to recover.

Options: BIOS CPU Detect / **x10**


Processor Power Management

Thermal Management throttles the processor back as it reaches its maximum operating temperature. Throttling reduces the number of processing cycles, thereby diminishing the heat dissipation of the CPU. This cools the unit. Once the CPU has reached a safe operating temperature, thermal throttling is automatically disabled, and normal full speed processing begins again.

Options: **GV1/GV3 only** / Disabled

3.4.3 I/O Device Configuration

This setting allows you to configure I/O devices.

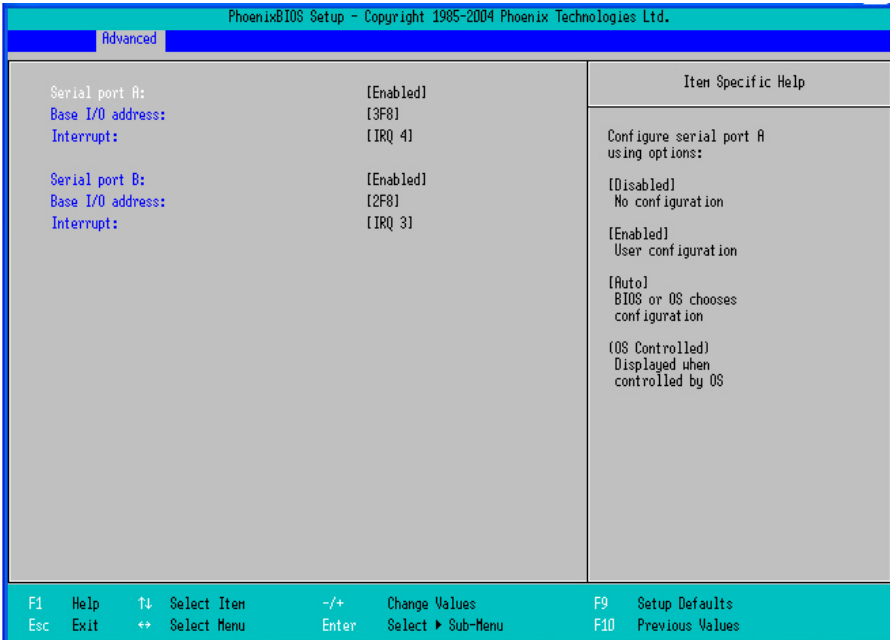

Serial Port A/B:

This defines how the serial port A/B is detected and configured.

Options: Disabled / **Enabled** / Auto

Base I/O Address:

Set the base I/O address for serial port A/B.

Options: **3F8** / 2F8 / 3E8 / 2E8


Interrupt:

Set the interrupt for serial port A/B.

Options: IRQ3 / **IRQ4**

3.4.4 DMI Event Logging

This section allows you to fine tune the DMI Event Logging configuration.

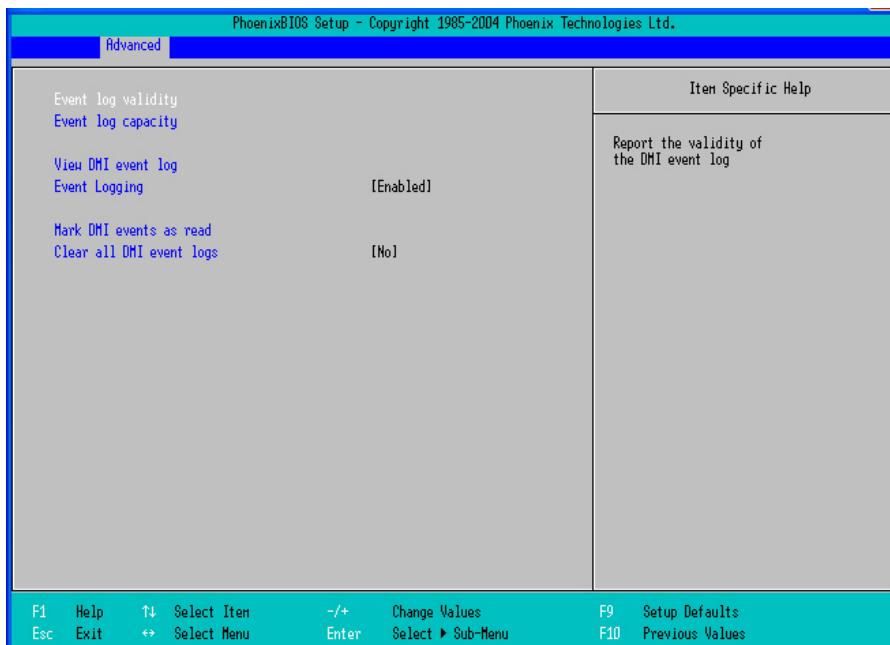

Event Log Capacity

It reports the space available in the DMI event log. If set to [Full], the event log has no more available space to store DMI events. (read only)

Event Log Validity

It reports the validity of the DMI event log. (read only)

View DMI Event Log

It allows you to view the contents of the DMI event log. (read only)

Event Logging

Select [Enabled] to allow logging of DMI events.

Options: **Enabled** / Disabled

Mark DMI Events as Read

Press [Enter] to mark DMI events as read.


Clear all DMI Event logs

When set to [Enabled], BIOS event log will be cleared.

Options: **Disabled** / Enabled

3.4.5 Hardware Monitor

This section allows you to fine tune the Hardware Monitor configuration.

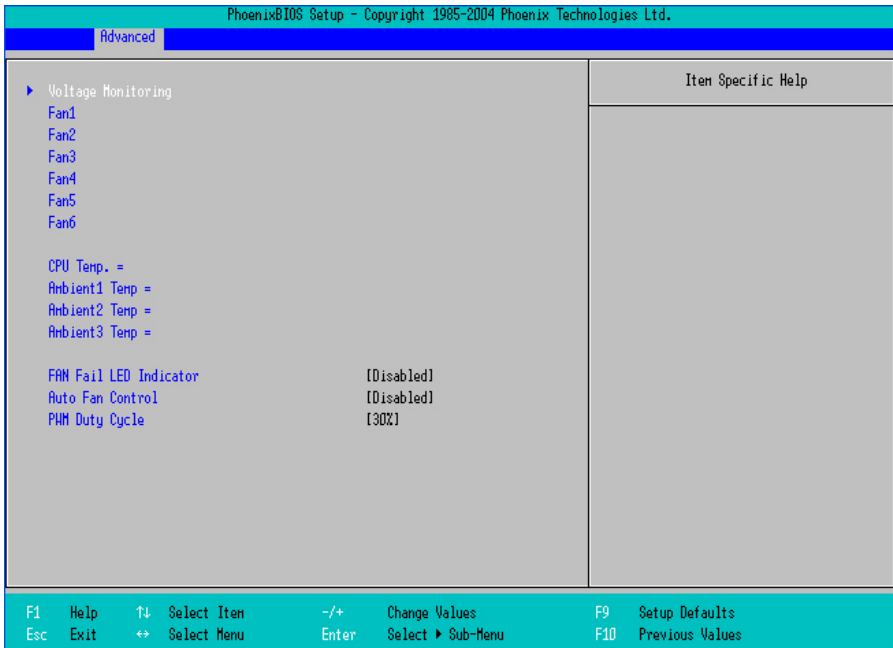

Fan1/Fan2/Fan3/Fan4/Fan5/Fan6/CPU Temp. / Ambient 1 (2, 3) Temp.
Items can not be modified in user mode. Read only.

FAN Fail LED Indicator

When it is set to [Enabled], the LED will be on when the FAN failed.

Options: **Disabled** / Enabled

Auto Fan Control:

This feature is used to set function of Auto Mode Fan Control.

Options: Enabled / **Disabled**


PWM Duty Cycle

This item allows you to set minimum PWM Duty Cycle.

Options: 0% / 30% / **40%** / 50%

Note: This item is usually hidden and will appear when **Auto Fan Control** is set to [Enabled].


3.4.5.1 Voltage Monitoring Sub-Menu

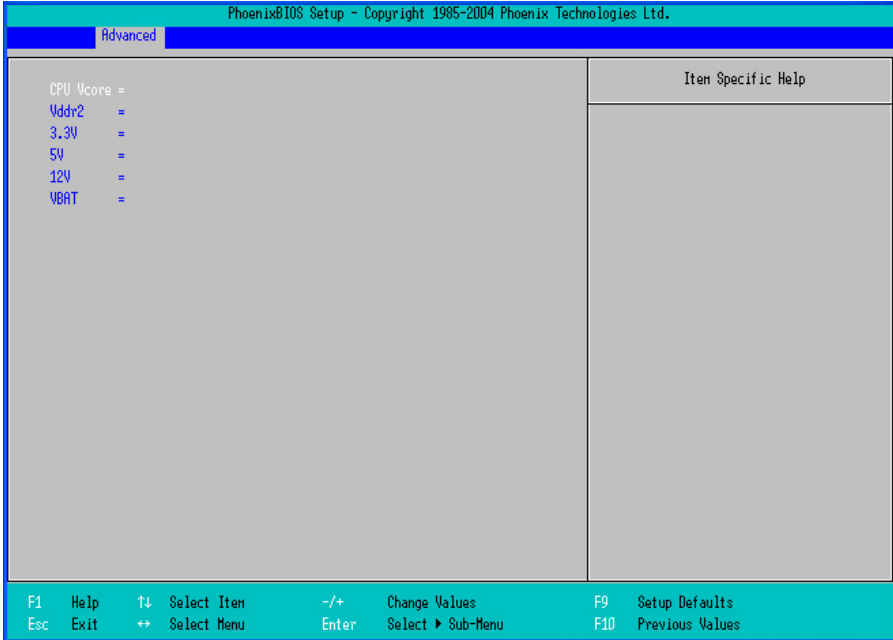

All items on this submenu can not be modified in user mode. Read only.

3.4.6 IPMI

This section allows you to configure the IPMI settings.

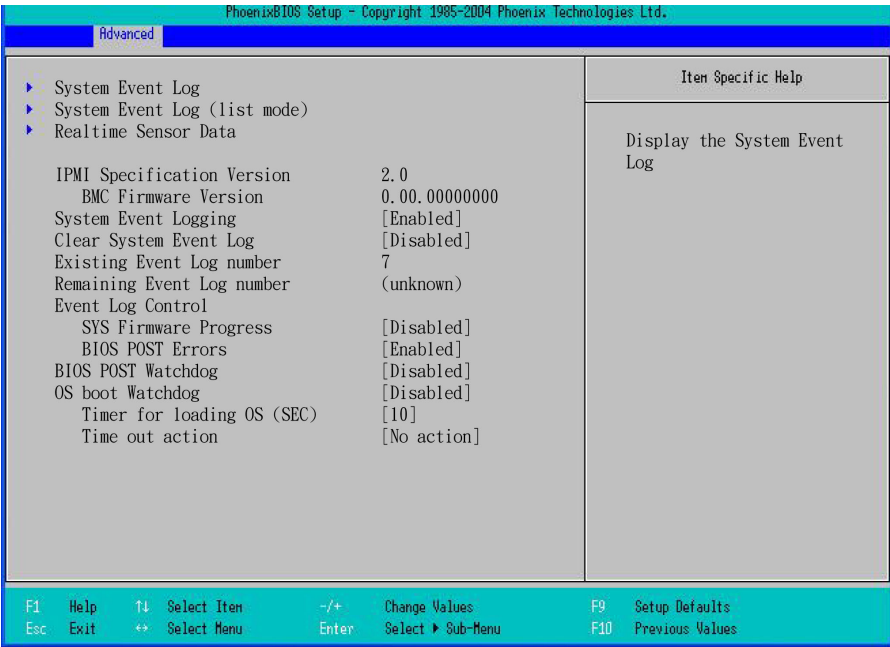

IPMI Specification Version / BMC Firmware Version

It displays the version of the IPMI Specification and BMC Firmware. (Read only)

System Event Logging

Select [Enabled] to allow logging of system events.

Options: **Enabled** / Disabled

Clear System Event Log

When set to [Enabled], system event log will be cleared.

Options: **Disabled** / Enabled

Existing Event Log number / Remaining Event Log number

It displays the number of existing event logs and remaining event logs. (Read only)

SYS Firmware Progress

It records the continual development of BIOS POST.

Options: **Disabled** / Enabled

BIOS POST Errors

Enabled -> BIOS will halt & display error message if there is any POST error .

Disabled -> BIOS will not halt if there is any POST error.

Options: Disabled / **Enabled**

BIOS POST Watchdog

Select [Disabled] if users don't want to stop POST with any error.

Options: **Disabled** / Enabled

OS Boot Watchdog

Disable or select Watchdog Timer count mode.

Options: **Disabled** / mSecond / Second / Minute

Timer for loading OS (SEC)

Watch dog timer value.


Options: **10** - 255

Time Out Action

Select what to do when Watchdog time out.

Options: **No Action** / System Reset

3.4.6.1 System Event Log Sub-Menu

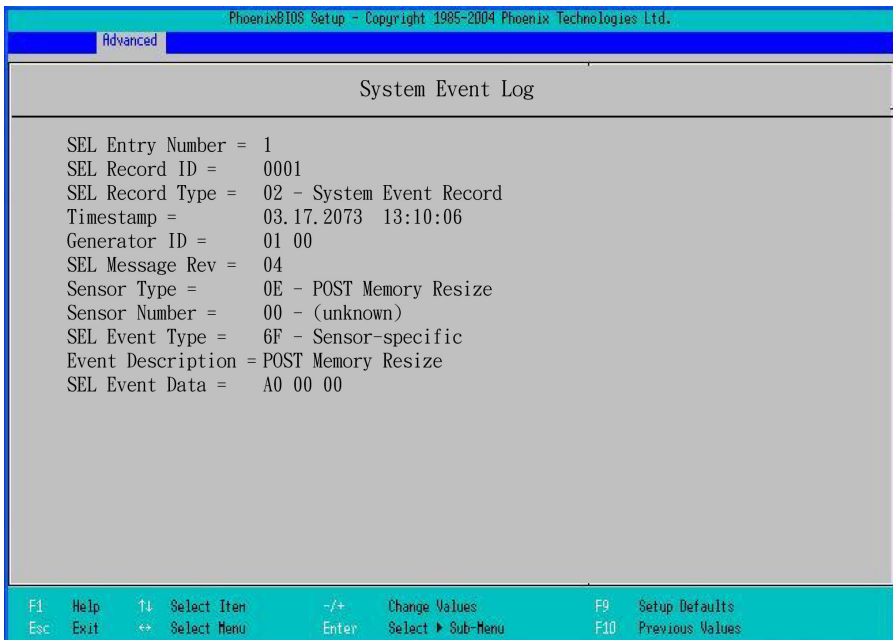

All items on this submenu can not be modified in user mode. Read only.

3.4.6.2 System Event Log (list mode) Sub-Menu

PhoenixBIOS Setup - Copyright 1985-2004 Phoenix Technologies Ltd.

Advanced

System Event Log (list mode)

Event ID	Sensor Name	Sensor Type	Date/Time Stamp
▶ 0007	V5VSB	Voltage	03.17.2073 13:10:08
Lower Critical Going Low, Assertion			

F1 Help F4 Select Item +/- Change Values F9 Setup Defaults
 Esc Exit ← Select Menu Enter Select ▶ Sub-Menu F10 Previous Values

PhoenixBIOS Setup - Copyright 1985-2004 Phoenix Technologies Ltd.

Advanced

[0007 V5VSB Voltage 03.17.2073 13:10:08]

SEL Entry Number = 7
 SEL Record ID = 0007
 SEL Record Type = 02 - System Event Record
 Timestamp = 03.17.2073 13:10:06
 Generator ID = 20 00
 SEL Message Rev = 04
 Sensor Type = 02 - Voltage
 Sensor Number = 57 - V5VSB
 SEL Event Type = 01 - Threshold
 Event Description = Lower Critical Going Low, Assertion
 SEL Event Data = 52 81 B5

F1 Help F4 Select Item +/- Change Values F9 Setup Defaults
 Esc Exit ← Select Menu Enter Select ▶ Sub-Menu F10 Previous Values

All items on this submenu can not be modified in user mode. Read only.

3.4.6.3 Realtime Sensor Data Sub-Menu


PhoenixBIOS Setup - Copyright 1985-2004 Phoenix Technologies Ltd.					
Advanced					
Realtime Sensor Data					
Sensor Type	Sensor Name	Sensor Data	Sensor Units	Lower Limit	Upper Limit
Temp	LocalTemp2	0.00	degrees C	0.00	59.00
	H1_THERM	0.00	degrees C	0.00	75.00
	LocalTemp1	0.00	degrees C	0.00	59.00
	VTIN2	0.00	degrees C	0.00	70.00
	H0_THERMP	0.00	degrees C	0.00	75.00
	VTIN1	29.00	degrees C	0.00	70.00
	SYS_TEMP	-127.00	degrees C	0.00	70.00
Voltage	H0_DDR1I_1.8Run	0.00	Volts	1.58	2.02

F1	Help	↑	Select Item	-/+	Change Values	F9	Setup Defaults
Esc	Exit	↔	Select Menu	Enter	Select ▶ Sub-Menu	F10	Previous Values

All items on this submenu can not be modified in user mode. Read only.

3.4.7 Console Redirection

This section allows you to configure the Console Redirection.

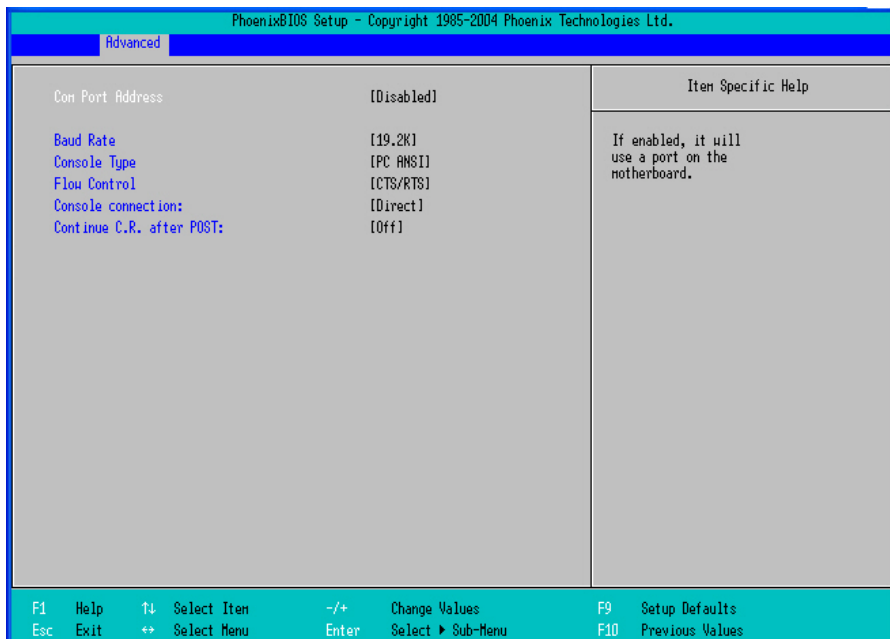

Com Port Address

Selects Com Port on BMC or motherboard.

Options: **Disabled** / On-board COM A / On-board COM B

Baud Rate

Enables the specified baud rate.

Options: **19.2K** / 300 / 1200 / 2400 / 9600 / 38.4K / 57.6K / 115.2K

Console Type

Enables the specified console type.

Options: **VT100** / VT100, 8bit / PC-ANSI 7bit / PC ANSI / VT100+ / VT-UTF8

Flow Control

Enables Flow Control.

Options: **None** / XON/XOFF / CTS/RTS

Console Connection

It indicates whether the console is connected directly to the system or a modem is used to connect.

Options: **Direct** / via Modem

Continue C.R. after POST

Enables Console Redirection after OS has loaded.

Options: **Off** / On

3.5 Security

These settings allow you to configure the security options for your system.



Supervisor / User Password Is

The system displays the current supervisor and user passwords.

Set Supervisor Password

This option allows the supervisor to set the supervisor password to restrict access to the BIOS settings.

Set User Password

This option allows the user to set the user password.

Diskette access

This option allows the user to control access to diskette drives.

Options: **Supervisor** / Disabled

Fixed disk boot sector

This option allows the user to write protect boot sector on hard disk to protect against viruses.

Options: **Normal** / Write Protect

Password on boot

When enabled, the system will ask for a password at every boot. The system will continue booting only if the correct password is entered. If the wrong password is entered three times, the system will automatically shut down.

Options: **Disabled** / Enabled

3.6 Power

Use this screen to select options for the Power Settings Configuration.



Resume On Time

When enabled, this allows the system to be worked up at a specified time. This time is specified by the Resume Time parameter.

Options: **Off** / On

Resume Time

This option allows the user to specify the time when the system is to wake up.

Power On By PCI/PCI-X

This option allows you to power on the system by PCI or PCI-X card. When enabled, an input signal from PME on the PCI card awakens the system from a S5 state.

Options: Enabled / **Disabled**

After Power Failure

Sets the mode of operation if an AC/Power Loss occurs. The two modes are:
[Enabled]: restores the previous power state before loss occurred.

[Disabled]: keeps the power off until the power button is pressed.

Options: Power On / Stay Off / **Last State**


Chassis Intrusion Detect

This feature is used to enable/disable the function: when chassis open event is detected, BIOS will record the event.

Options: **No** / Yes

3.7 Boot

Use this screen to select options for the Boot Settings Configuration.

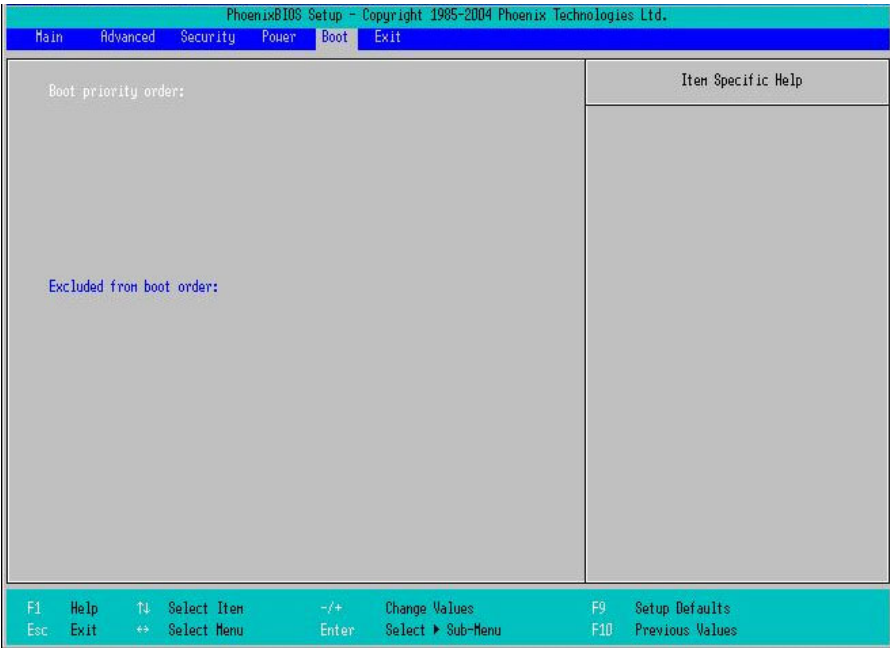

Boot Priority Order

It shows the boot priority for installed devices.

Excluded from boot order

It lists devices to be excluded from boot order.

3.8 Exit

These settings set the exit options on your system.



Exit Saving Changes

This exits BIOS setup after saving the changes made.

Exit Discarding Changes

This exits BIOS setup after discarding the changes made.

Load Setup Defaults

This loads the factory default values.

Discard Changes

This discards all changes made without exiting BIOS setup.

Save Changes

This saves all changes made without exiting BIOS setup.

NOTE

Chapter 4: Diagnostics

Note: if you experience problems with setting up your system, always check the following things in the following order:

Memory, Video, CPU

By checking these items, you will most likely find out what the problem might have been when setting up your system. For more information on troubleshooting, check the TYAN website at <http://www.tyan.com>.

4.1 Beep Codes

Fatal errors, which halt the boot process, are communicated through a series of audible beeps. For example, if the BIOS POST can initialize the video but an error occurs, an error message will be displayed. If it cannot display the message, it will report the error as a series of beeps.

The most common type of error is a memory error.

Before contacting your vendor or TYAN Technical Support, be sure that you note as much as you can about the beep code length and order that you experience. Also, be ready with information regarding add-in cards, drives and O/S to speed the support process and come to a quicker solution.

4.2 Flash Utility

Every BIOS file is unique for the motherboard it was designed for. For Flash Utilities, BIOS downloads, and information on how to properly use the Flash Utility with your motherboard, please check the TYAN web site: <http://www.tyan.com/>

Note: Please be aware that by flashing your BIOS, you agree that in the event of a BIOS flash failure, you must contact your dealer for a replacement BIOS. There are no exceptions. TYAN does not have a policy for replacing BIOS chips directly with end users. In no event will TYAN be held responsible for damages done by the end user.

4.3 Phoenix BIOS Post Code

Code	Beeps / Description	Code	Beeps / Description
02h	Verify Real Mode	32h	Test CPU bus-clock frequency
03h	Disable Non-Maskable Interrupt (NMI)	33h	Initialize Phoenix Dispatch Manager
04h	Get CPU type	36h	Warm start shut down
06h	Initialize system hardware	38h	Shadow system BIOS ROM
08h	Initialize chipset with initial POST values	3Ah	Autosize cache
09h	Set IN POST flag	3Ch	Advanced configuration of chipset registers
0Ah	Initialize CPU registers	3Dh	Load alternate registers with CMOS values
0Bh	Enable CPU cache	42h	Initialize interrupt vectors
0Ch	Initialize caches to initial POST values	45h	POST device initialization
0Eh	Initialize I/O component	46h	2-1-2-3. Check ROM copyright notice
0Fh	Initialize the local bus IDE	48h	Check video configuration against CMOS
10h	Initialize Power Management	49h	Initialize PCI bus and devices
11h	Load alternate registers with initial POST values	4Ah	Initialize all video adapters in system
12h	Restore CPU control word during warm boot	4Bh	QuietBoot start (optional)
13h	Initialize PCI Bus Mastering devices	4Ch	Shadow video BIOS ROM
14h	Initialize keyboard controller	4Eh	Display BIOS copyright notice
16h	1-2-2-3. BIOS ROM checksum	50h	Display CPU type and speed
17h	Initialize cache before memory autosize	51h	Initialize EISA board
18h	8254 timer initialization	52h	Test keyboard
1Ah	8237 DMA controller initialization	54h	Set key click if enabled
1Ch	Reset Programmable Interrupt Controller	58h	2-2-3-1. Test for unexpected interrupts
20h	1-3-1-1. Test DRAM refresh	59h	Initialize POST display service
22h	1-3-1-3. Test 8742 KBD Controller	5Ah	Display prompt "Press F2 to enter SETUP"
24h	Set ES segment register to 4 GB	5Bh	Disable CPU cache
26h	Enable A20 line	5Ch	Test RAM between 512 and 640 KB
28h	Autosize DRAM	60h	Test extended memory
29h	Initialize POST Memory Manager	62h	Test extended memory address lines
2Ah	Clear 512 KB base RAM	64h	Jump to UserPatch1
2Ch	1-3-4-1. RAM failure on address	66h	Configure advanced cache registers
2Eh	1-3-4-3. RAM failure on data bits of low byte of	67h	Initialize Multi Processor APIC

Code	Beeps / Description	Code	Beeps / Description
	memory bus		
2Fh	Enable cache before system BIOS shadow	68h	Enable external and CPU caches
30h	1-4-1-1. RAM failure on data bits of high byte of memory bus	69h	Setup System Management Mode (SMM) area
6Ah	Display external L2 cache size	A2h	Check key lock
6Bh	Load custom defaults (optional)	A4h	Initialize typematic rate
6Ch	Display shadow-area message	A8h	Erase F2 prompt
6Eh	Display possible high address for UMB recovery	AAh	Scan for F2 key stroke
70h	Display error messages	ACH	Enter SETUP
72h	Check for configuration errors	Aeh	Clear Boot flag
76h	Check for keyboard errors	B0h	Check for errors
7Ch	Set up hardware interrupt vectors	B2h	POST done - prepare to boot operating system
7Eh	Initialize coprocessor if present	B4h	One short beep before boot
80h	Disable onboard Super I/O ports and IRQs	B5h	Terminate QuietBoot (optional)
81h	Late POST device initialization	B6h	Check password (optional)
82h	Detect and install external RS232 ports	B9h	Prepare Boot
83h	Configure non-MCD IDE controllers	BAh	Initialize DMI parameters
84h	Detect and install external parallel ports	BBh	Initialize PnP Option ROMs
85h	Initialize PC-compatible PnP ISA devices	BCh	Clear parity checkers
86h	Re-initialize onboard I/O ports.	BDh	Display MultiBoot menu
87h	Configure Motherboard Devices	BEh	Clear screen (optional)
88h	Initialize BIOS Data Area	BFh	Check virus and backup reminders
89h	Enable Non-Maskable Interrupts (NMIs)	C0h	Try to boot with INT 19
8Ah	Initialize Extended BIOS Data Area	C1h	Initialize POST Error Manager (PEM)
8Bh	Test and initialize PS/2 mouse	C2h	Initialize error logging
8Ch	Initialize floppy controller	C3h	Initialize error display function
8Fh	Determine number of ATA drives (optional)	C4h	Initialize system error handler
90h	Initialize hard-disk controllers	C5h	PnPnd dual CMOS (optional)
91h	Initialize local-bus hard-disk controllers	C6h	Initialize notebook docking (optional)
92h	Jump to UserPatch2	C7h	Initialize notebook docking late
93h	Build MPTABLE for multi-processor boards	C8h	Force check (optional)

Code	Beeps / Description	Code	Beeps / Description
95h	Install CD ROM for boot	C9h	Extended checksum (optional)
96h	Clear huge ES segment register	D2h	Unknown Interrupt
97h	Fixup Multi Processor table	80h	Chipset Init
98h	1-2. Search for option ROMs.	81h	Bridge Init
99h	Check for SMART Drive (optional)	82h	Initialize the CPU
9Ah	Shadow option ROMs	83h	Initialize system timer
9Ch	Set up Power Management	84h	Initialize system I/O
9Dh	Initialize security engine (optional)	85h	Check force recovery boot
9Eh	Enable hardware interrupts	86h	Checksum BIOS ROM
9Fh	Determine number of ATA and SCSI drives	87h	Go to BIOS
A0h	Set time of day	89h	Set Huge Segment
88h	Initialize Multi Processor	92h	Initialize Run Time Clock
8Ah	Initialize OEM special code	93h	Initialize video
8Bh	Initialize PIC and DMA	8Fh	Initialize System Management Mode
8Ch	Initialize Memory type	94h	Output one beep before boot
8Dh	Initialize Memory size	95h	Boot to Mini DOS
8Eh	Shadow Boot Block	96h	Clear Huge Segment
90h	System memory test	97h	Boot to Full DOS
91h	Initialize interrupt vectors		

Appendix: SMDC Information

Overview

Tyan Server Management Daughter Card (SMDC) is a powerful yet cost-efficient solution for high-end server management hardware packages. Tyan's goal is to provide remote system monitoring and control even when the operating system is absent or simply fails. This empowers Tyan's server board with advanced industrial-standard features.

Tyan SMDC is a snap-in card that provides essential server management solution. It enables any IT Manager by providing multi-interfaces to access the hardware remotely and perform **monitor**, **control** and **diagnose** activities effectively.

Tyan SMDC is not a peripheral card. Unlike regular peripheral card such as AGP card, Network card or SCSI card, SMDC does not require any hardware specific driver. As long as a standby power comes into the system, SMDC will begin looking after the system.

Tyan SMDC provides diversified methods to communicate with the hardware. IT manager has the flexibility to choose among *Keyboard Controller Style (KCS)*, *Block Transfer (BT)* style, Intelligent Chassis Management Bus (ICMB), Intelligent Platform Management Bus (IPMB), Emergency Management Port (EMP) and standard IPMI-Over-LAN communication as defined in latest IPMI 1.5 specification.

Tyan SMDC is compatible with all IPMI-compliance software as well as Tyan System Operator™ (TSO) software package.

By adding SMDC, Tyan's server board becomes a highly manageable and IPMI compatible system with all the advanced features suggesting in IPMI Spec.

More detailed information on Tyan's SMDC card can be found on our website: <http://www.tyan.com>

Features of Tyan Server Management



Monitor various system components remotely
-such as fans, processor temperature, and more



Remote power on and power off



Console redirect
-the ability to view system remotely



Alert and error actions
-such as audible beep, e-mail, power down and reboot



SMDC runs on stand-by power
-the SMDC will continue to function, even if the system is not powered on

How SMDC and TSO Work

The brief descriptions below will help explain how these items function.

	<p>Agent – a system with SMDC installed The SMDC is installed in the Agent system that uses a compatible/supported Tyan motherboard.</p>
	<p>Manager – manages the Agent The Manger is set up to manage the Agent that has the SMDC. The Manager and Agent should be located in the same place.</p>
	<p>Console – communicates with Manager The Console is used to monitor and control the Agent through the Manager.</p>

Glossary

ACPI (Advanced Configuration and Power Interface): a power management specification that allows the operating system to control the amount of power distributed to the computer's devices. Devices not in use can be turned off, reducing unnecessary power expenditure.

AGP (Accelerated Graphics Port): a PCI-based interface which was designed specifically for demands of 3D graphics applications. The 32-bit AGP channel directly links the graphics controller to the main memory. While the channel runs at only 66 MHz, it supports data transmission during both the rising and falling ends of the clock cycle, yielding an effective speed of 133 MHz.

ATAPI (AT Attachment Packet Interface): also known as IDE or ATA; a drive implementation that includes the disk controller on the device itself. It allows CD-ROMs and tape drives to be configured as master or slave devices, just like HDDs.

ATX: the form factor designed to replace the AT form factor. It improves on the AT design by rotating the board 90 degrees, so that the IDE connectors are closer to the drive bays, and the CPU is closer to the power supply and cooling fan. The keyboard, mouse, USB, serial, and parallel ports are built-in.

Bandwidth: refers to carrying capacity. The greater the bandwidth, the more data the bus, phone line, or other electrical path, can carry. Greater bandwidth, then, also results in greater speed.

BBS (BIOS Boot Specification): is a feature within the BIOS that creates, prioritizes, and maintains a list of all Initial Program Load (IPL) devices, and then stores that list in NVRAM. IPL devices have the ability to load and execute an OS, as well as provide the ability to return to the BIOS if the OS load process fails for some reason. At that point, the next IPL device is called upon to attempt loading of the OS.

BIOS (Basic Input/Output System): the program that resides in the ROM chip, and provides the basic instructions for controlling your computer's hardware. Both the operating system and application software use BIOS routines to ensure compatibility.

Buffer: a portion of RAM which is used to temporarily store data, usually from an application, though it is also used when printing, and in most keyboard drivers. The CPU can manipulate data in a buffer before copying it, all at once, to a disk drive. While this improves system performance --- reading to or writing from a disk drive a single time is much faster than doing so repeatedly --- there is also the possibility of losing your data should the system crash. Information stored in a buffer is temporarily stored, not permanently saved.

Bus: a data pathway. The term is used especially to refer to the connection between the processor and system memory, and between the processor and PCI or ISA local buses.

Bus mastering: allows peripheral devices and IDEs to access the system memory without going through the CPU (similar to DMA channels).

Cache: a temporary storage area for data that will be needed often by an application. Using a cache lowers data access times, since the needed information is stored in the SRAM instead of in the slow DRAM. Note that the cache is also much smaller than your regular memory: a typical cache size is 512KB, while you may have as much as 4GB of regular memory.

Cache size: refers to the physical size of the cache onboard. This should not be confused with the cacheable area, which is the total amount of memory which can be scanned by the system in search of data to put into the cache. A typical setup would be a cache size of 512KB, and a cacheable area of 512MB. In this case, up to 512KB of the main memory onboard is capable of being cached. However, only 512KB of this memory will be in the cache at any given moment. Any main memory above 512MB could never be cached.

Closed and open jumpers: jumpers and jumper pins are active when they are “on” or “closed”, and inactive when they are “off” or “open”.

CMOS (Complementary Metal-Oxide Semiconductors): chips that hold the basic startup information for the BIOS.

COM port: another name for the serial port, which is called as such because it transmits the eight bits of a byte of data along one wire, and receives data on another single wire (that is, the data is transmitted in serial form, one bit after another). Parallel ports transmit the bits of a byte on eight different wires at the same time (that is, in parallel form, eight bits at the same time).

DDR (Double Data Rate): is a technology designed to double the clock speed of the memory. It activates output on both the rising and falling edge of the system clock rather than on just the rising edge, potentially doubling output.

DIMM (Dual In-line Memory Module): faster and more capacious form of RAM than SIMMs, and do not need to be installed in pairs.

DIMM bank: sometimes called DIMM sockets, because the physical slot and the logical unit are the same. That is, one DIMM module fits into one DIMM socket, which is capable of acting as a memory bank.

DMA (Direct Memory Access): channels that are similar to IRQs. DMA channels allow hardware devices (like soundcards or keyboards) to access the

main memory without involving the CPU. This frees up CPU resources for other tasks. As with IRQs, it is vital that you do not double up devices on a single line. Plug-n-Play devices will take care of this for you.

Doze mode: in this mode, only the CPU's speed is slowed.

DRAM (Dynamic RAM): widely available, very affordable form of RAM which has the unfortunate tendency to lose data if it is not recharged regularly (every few milliseconds). This refresh requirement makes DRAM three to ten times slower than non-recharged RAM such as SRAM.

ECC (Error Correction Code or Error Checking and Correcting): allows data to be checked for errors during run-time. Errors can subsequently be corrected at the same time that they're found.

EEPROM (Electrically Erasable Programmable ROM): also called Flash BIOS, is a ROM chip which can, unlike normal ROM, be updated. This allows you to keep up with changes in the BIOS programs without having to buy a new chip. TYAN's BIOS updates can be found at <http://www.tyan.com>

ESCD (Extended System Configuration Data): a format for storing information about Plug-n-Play devices in the system BIOS. This information helps properly configure the system each time it boots.

Fault-tolerance: a term describing a system where one component can quickly be replaced without causing a loss of service, such as in a RAID system.

Firmware: low-level software that controls the system hardware.

Form factor: an industry term for the size, shape, power supply type, and external connector type of the Personal Computer Board (PCB) or motherboard. The standard form factors are the AT and ATX, although TYAN also makes some Baby-AT and ATX Footprint boards.

Global timer: onboard hardware timer, such as the Real-Time Clock (RTC).

Handshaking: a process where two devices initiate communications. One device, typically the server, sends a message to another device, typically a client, in order to request establishment of a communications channel. The two devices will then exchange messages back and forth in order to settle on a communications protocol.

HDD: stands for Hard Disk Drive, a type of fixed drive.

H-SYNC: controls the horizontal synchronization/properties of the monitor.

IC (Integrated Circuit): the formal name for the computer chip.

IDE (Integrated Device/Drive Electronics): a simple, self-contained HDD interface. It can handle drives up to 8.4 GB in size. Almost all IDEs sold now are in fact Enhanced IDEs (EIDEs), with maximum capacity determined by the hardware controller.

I/O (Input/Output): the connection between your computer and another piece of hardware (mouse, keyboard, etc.)

Initial Program Load (IPL): a feature built into BBS-compliant devices, describing those devices as capable of loading and executing an OS, as well as being able to provide control back to the BIOS if the loading attempt fails.

IPL: see Initial Program Load.

IRQ (Interrupt Request): an electronic request that runs from a hardware device to the CPU. The interrupt controller assigns priorities to incoming requests and delivers them to the CPU. It is important that there is only one device hooked up to each IRQ line; doubling up devices on IRQ lines can lock up your system. Plug-n-Play operating systems can take care of these details for you.

ISA (Industry Standard Architecture): a slower 8- or 16-bit bus (data pathway).

Latency: the amount of time that one part of a system spends waiting for another part to catch up. This is most common when the system sends data out to a peripheral device, and it waiting for the peripheral to send some data back (peripherals tend to be slower than onboard system components).

Mirroring: see RAID.

NVRAM: ROM and EEPROM are both examples of Non-Volatile RAM, memory that holds its data without power. DRAM, in contrast, is volatile.

OEMs (Original Equipment Manufacturers): Compaq or IBM package other companies' motherboards and hardware inside their case and sell them.

Parallel port: transmits the bits of a byte on eight different wires at the same time (that is, in parallel form, eight bits at the same time).

PCI (Peripheral Component Interconnect): a 32 or 64-bit local bus (data pathway) which is faster than the ISA bus. Local buses are those which operate within a single system (as opposed to a network bus, which connects multiple systems).

PCI PIO (PCI Programmable Input/Output) modes: the data transfer modes used by IDE drives. These modes use the CPU for data transfer (in contrast,

DMA channels do not). PCI refers to the type of bus used by these modes to communicate with the CPU.

PCI-to-PCI bridge: allows you to connect multiple PCI devices onto one PCI slot.

PM timers (Power Management timers): software timers that count down the number of seconds or minutes until the system times out and enters sleep, suspend, or doze mode.

PnP (Plug-n-Play): a design standard that has become ascendant in the industry. Plug-n-Play devices require little set-up to use. Novice end users can simply plug them into a computer that is running on a Plug-n-Play aware operating system (such as Windows 98), and go to work. Devices and operating systems that are not Plug-n-Play require you to reconfigure your system each time you add or change any part of your hardware.

PXE (Preboot Execution Environment): one of four components that together make up the Wired for Management 2.0 baseline specification. PXE was designed to define a standard set of preboot protocol services within a client, towards the goal of allowing networked-based booting to boot using industry standard protocols.

RAID (Redundant Array of Independent Disks): a way for the same data to be stored in different places on many hard drives. By using this method, the data is stored redundantly, also the multiple hard drives will appear as a single drive to the operating system. RAID level 0 is known as striping, where data is striped (or overlapped) across multiple hard drives, but offers no fault-tolerance. RAID level 1 is known as mirroring, which stores the data within at least two hard drives, but does not stripe. RAID level 1 also allows for faster access time and fault-tolerance, since either hard drive can be read at the same time. RAID level 0+1 is both striping and mirroring, providing fault-tolerance, striping, and faster access all at the same time.

RAIDIOS: stands for RAID I/O Steering, a type of RAID technology from Intel. RAIDIOS is a specification used to enable an embedded I/O controller, embedded on the motherboard, to be used as just an I/O controller or to be the I/O component of a hardware RAID subsystem. The RAIDIOS circuit allows an I/O Processor (either embedded on the motherboard or on an add-in card) to configure the I/O controller and service the I/O controller's interrupts. The I/O controller and the I/O Processor together are two of the primary components of a hardware RAID subsystem.

RAM (Random Access Memory): technically refers to a type of memory where any byte can be accessed without touching the adjacent data, is often used to refer to the system's main memory. This memory is available to any program running on the computer.

ROM (Read-Only Memory): a storage chip which contains the BIOS; the basic instructions required to boot the computer and start up the operating system.

SATA (Serial ATA): is an evolutionary replacement for the Parallel ATA physical storage interface. Serial ATA is a drop-in solution in that it is compatible with today's software and operating systems. It will provide for systems which are easier to design, with cables that are simpler to route and install, smaller cable connectors, and lower voltage requirements.

SDRAM (Synchronous Dynamic RAM): called as such because it can keep two sets of memory addresses open simultaneously. By transferring data alternately from one set of addresses and then the other, SDRAM cuts down on the delays associated with non-synchronous RAM, which must close one address bank before opening the next.

Serial port: called as such because it transmits the eight bits of a byte of data along one wire, and receives data on another single wire (that is, the data is transmitted in serial form, one bit after another).

SIMM (Single In-line Memory Module): formally the most common form of RAM for motherboards. They must be installed in pairs, and do not have the carrying capacity or the speed of DIMM modules.

Sleep/Suspend mode: in this mode, all devices except the CPU shut down.

SRAM (Static RAM): unlike DRAM, this type of RAM does not need to be refreshed in order to prevent data loss. Thus, it is faster and more expensive.

SSI (Server System Infrastructure): an industry initiative intended to provide ready-to-use design specifications for common server hardware elements (chassis, power supplies, and racks) to promote and support server industry growth.

Standby mode: in this mode, the video and hard drives shut down; all other devices continue to operate normally.

Striping: see RAID

UltraDMA-33/66/100: a fast version of the old DMA channel. UltraDMA is also called UltraATA. Without proper UltraDMA controller, your system cannot take advantage of higher data transfer rates of the new UltraDMA/UltraATA hard drives.

USB (Universal Serial Bus): a versatile port. This one port type can function as a serial, parallel, mouse, keyboard or joystick port. It is fast enough to

support video transfer, and is capable of supporting up to 127 daisy-chained peripheral devices.

VGA (Video Graphics Array): the PC video display standard

V-SYNC: controls the vertical scanning properties of the monitor.

NOTE

Technical Support

If a problem arises with your system, you should first turn to your dealer for direct support. Your system has most likely been configured or designed by them and they should have the best idea of what hardware and software your system contains. Hence, they should be of the most assistance for you. Furthermore, if you purchased your system from a dealer near you, take the system to them directly to have it serviced instead of attempting to do so yourself (which can have expensive consequences).

If these options are not available for you then Tyan Computer Corporation can help. Besides designing innovative and quality products for over a decade, Tyan has continuously offered customers service beyond their expectations. Tyan's website (www.tyan.com) provides easy-to-access resources such as in-depth Linux Online Support sections with downloadable Linux drivers and comprehensive compatibility reports for chassis, memory and much more. With all these convenient resources just a few keystrokes away, users can easily find the latest software and operating system components to keep their systems running as powerful and productive as possible. Tyan also ranks high for its commitment to fast and friendly customer support through email. By offering plenty of options for users, Tyan serves multiple market segments with the industry's most competitive services to support them.

"Tyan's tech support is some of the most impressive we've seen, with great response time and exceptional organization in general" - Anandtech.com

Please feel free to contact us directly for this service at techsupport@tyan.com

Help Resources:

1. See the beep codes section of this manual.
2. See the TYAN website for FAQ's, bulletins, driver updates, and other information: <http://www.tyan.com>
3. Contact your dealer for help BEFORE calling TYAN.
4. Check the TYAN user group: alt.comp.periphs.mainboard.TYAN

Returning Merchandise for Service

During the warranty period, contact your distributor or system vendor FIRST for any product problems. This warranty only covers normal customer use and does not cover damages incurred during shipping or failure due to the alteration, misuse, abuse, or improper maintenance of products.

NOTE: A receipt or copy of your invoice marked with the date of purchase is required before any warranty service can be rendered. You may obtain service by calling the manufacturer for a Return Merchandise Authorization (RMA) number. The RMA number should be prominently displayed on the outside of the shipping carton and the package should be mailed prepaid. TYAN will pay to have the board shipped back to you



Notice for the USA

Compliance Information Statement (Declaration of Conformity Procedure) DoC

FCC Part 15: This device complies with part 15 of the FCC Rules

Operation is subject to the following conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received including interference that may cause undesired operation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Plug the equipment into an outlet on a circuit different from that of the receiver.
 - Consult the dealer on an experienced radio/television technician for help.

Notice for Canada

This apparatus complies with the Class B limits for radio interference as specified in the Canadian Department of Communications Radio Interference Regulations. (Cet appareil est conforme aux norms de Classe B d'interference radio tel que specifie par le Ministere Canadien des Communications dans les reglements d'ineteference radio.)



Notice for Europe (CE Mark)

This product is in conformity with the Council Directive 89/336/EEC, 92/31/EEC (EMC).

CAUTION: Lithium battery included with this board. Do not puncture, mutilate, or dispose of battery in fire. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by manufacturer. Dispose of used battery according to manufacturer instructions and in accordance with your local regulations.

Document #: D1890-120