




icoffee®
by REMINGTON®

Customer Care Guide

iCoffee[®]

by REMINGTON[®]

STEAMBREW[™] TECHNOLOGY

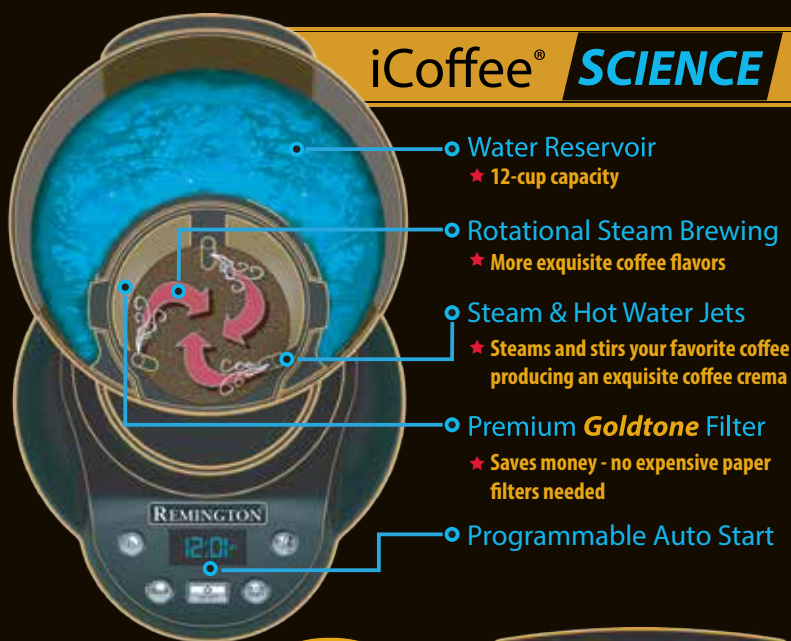

★ Watch your favorite coffee being steamed and stirred producing deliciously exquisite coffee crema

TABLE OF CONTENTS

Section 1) Brewer Overview	9
.....	
Section 2) Preparing Your Brewer	10
.....	
Section 3) Using Your Brewer	11
.....	
Section 4) Cleaning & Maintenance	12
.....	
Section 5) Troubleshooting	13
.....	
Section 6) Warranty	14
.....	


IMPORTANT SAFEGUARDS

.....
When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions before using.
2. Do not touch hot surfaces. Use appropriate handles.
3. Do not overfill the water reservoir.
4. Do not open brew-lids while brewing is in progress. Scalding may occur if either lid is opened.
5. Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
6. Use only water in this appliance! Do not put any other liquids or foods in the water reservoir except as instructed in the Cleaning Instructions in this guide.
7. Do not operate any appliance with damaged plug or cord or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest Remington Repair Center for examination, repair, or electrical or mechanical adjustment.
8. Do not use outdoors.
9. Do not use the iCoffee Brewer for other than its intended use.
10. For best operation, plug the appliance into its own electrical outlet on a dedicated circuit to prevent flickering of lights, blowing of fuses or tripping the circuit breaker.
11. Always fill water reservoir first, then plug cord into the wall outlet. To disconnect turn controls to off, then remove plug from wall outlet.
- 12. To protect against fire, electric shock and injury do not place cord, plug or the appliance in water or any other liquids.**
- 13. Do not place on or near a hot gas or electric burner, or in a heated oven.**
- 14. Do not use paper filters.** The use of accessory attachments not recommended by Remington may result in fire, electrical shock or injury to the user.
15. Turn off and unplug the Brewer before cleaning or maintenance. Allow to cool before putting on or taking off parts and before cleaning the appliance.
16. To disconnect, press the power button on the Brewer to 'OFF' status and then remove the plug from the wall outlet..
17. The glass carafe is designed for use with the iCoffee warming plate only. It must never be used on the range top.
18. Do not set a hot carafe on a wet or cold surface.
19. Do not use a cracked carafe or a carafe having a loose or weakened handle.
20. Do not clean carafe or warming plate with cleansers, steel wool pads, or other abrasive pads/ materials.
21. Do not clean the brew viewing window with cleaners, steel wool pads, or other abrasive pads or abrasive materials.
22. Close supervision is necessary when appliance is used by or near children.



- A)** Power Button
- B)** Auto Start Button
- C)** Minute & Music Button
- D)** Display Panel
- E)** Carafe with Lid
- F)** Pause & Serve
- G)** Rotational SteamBrew™ Viewing Window
- H)** Water Reservoir Lid
- I)** Carafe Water / Coffee Level Indicator
- J)** Warming Plate
- K)** Hour Button
- L)** Non-Skid / No-Mark Rubber Feet
- M)** Set Clock Button

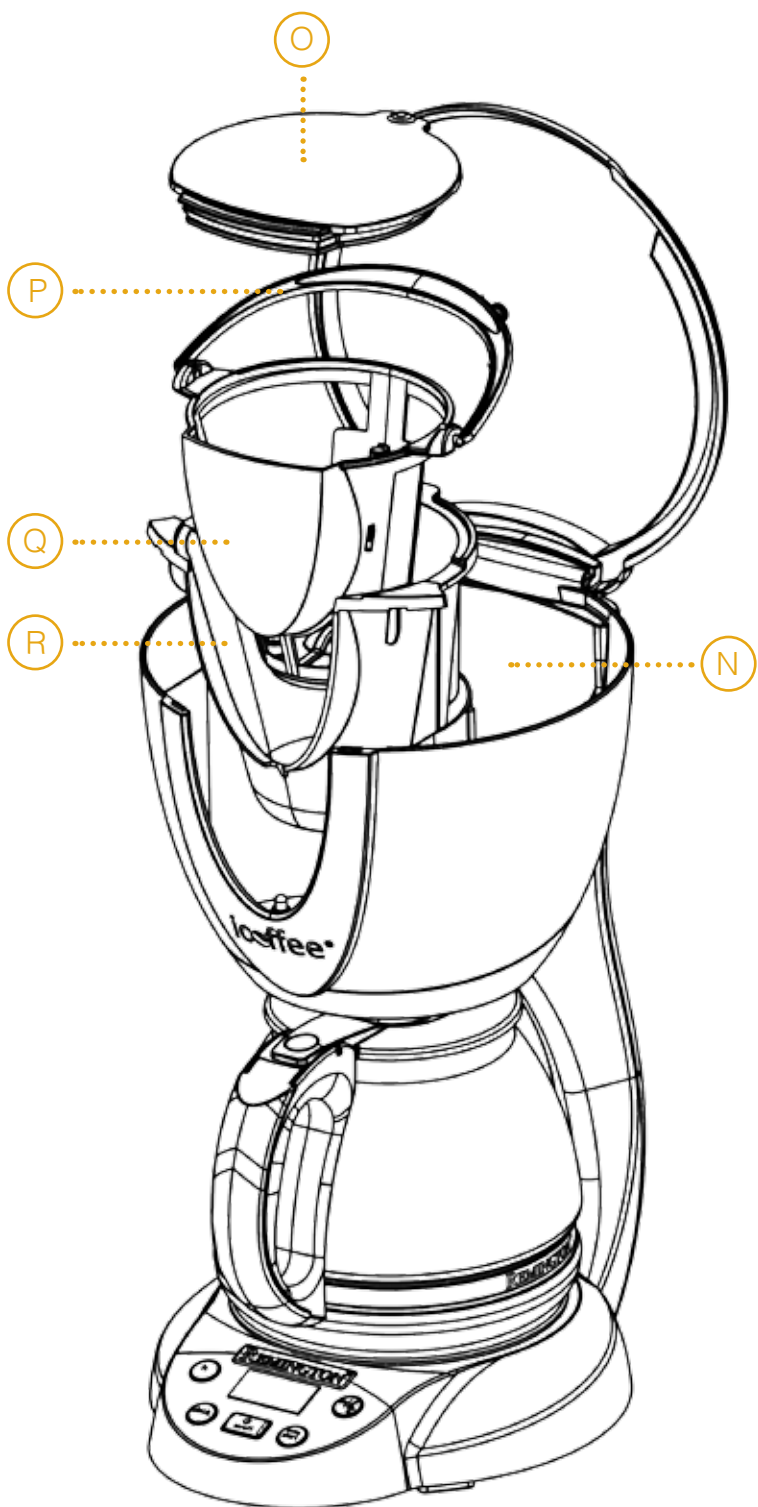

N) Water Reservoir

.....

O) Brew Basket Lid

.....

P) Brew Basket Handle

.....

Q) Brew Basket

.....

R) Drip Basket

.....

Section 2

PREPARING YOUR Brewer

Step 1- Remove Labels & Clean

Remove all adhesive tape and labels from Brewer surfaces. Clean the carafe, carafe lid and removable drip and brew baskets.

Step 2 - Plug in & Set Clock

Plug power cord into outlet. A flashing message “SET CLOCK” and 12:01 am will be displayed. This is the Brewer asking for its clock to be set.

Press the  (hour) or  (minute) flashing buttons until the correct time and am or pm indicator is shown.

Now press the clock  button to lock in the correct time-of-day.

The clock can be set at any time when the Brewer is not brewing or in the auto start delayed brewing mode

by pressing the clock  button.



Note: Clock should be set before brewing or using the auto start feature.

Step 3 - Clean & Sanitize Brewer

Fill carafe to 12 cup mark and pour into water reservoir. Ensure drip and brew baskets are pushed down and firmly seated. Insert brew basket lid. Close water reservoir lid. Place carafe on warming plate and press the ON/OFF button. Brewer display will show “HEATING WATER” and an animation indicating brewing/sanitizing cycle is in progress. To halt brewing/sanitizing cycle, press ON/OFF again.

Note: If brew basket lid is not firmly inserted into the brew basket the brewing/sanitizing process will not start. Instead the display will prompt, “Put Lid On.”

Note: If water reservoir is empty the brewing/sanitizing process will not start. Instead the display will prompt, “Add H2O.”

If brew basket lid is opened during the brewing/sanitizing it will stop, you will be alerted by a tone and the message “Put Lid On” will be displayed. Brewer will remember where it was in the brewing/sanitizing cycle for 20 minutes. If 20 minutes have passed before the lid is closed, brew cycle will end.

When brewing/sanitizing is complete the end-of-brewing Mozart tone will sound and the “HEATING WATER” message on the display will be turned off. Now press the ON/OFF button to end the brewing/sanitizing cycle.

Brewing Coffee

Fill reservoir with desired amount of water and add an appropriate amount of your favorite ground coffee to the brew basket. Ensure drip basket and brew basket are pushed down and firmly seated. Insert brew basket lid into the brew basket. Close water reservoir lid. Place carafe on warming plate and press the ON/OFF button. Display will show "HEATING WATER" and an "ON" animation indicating brewing is in progress. To halt brewing, press ON/OFF again.

Note: If brew basket lid is not in place the brewing process will not begin. You will be alerted by a tone, and the display will prompt, "Put Lid On."

Note: If water reservoir is empty the brewing process will not begin. You will be alerted by a tone and the display will prompt, "Add H2O."

Note: If brew basket lid is removed while brewing is under way, brewing will pause, you will be alerted by a tone, and the message "Put Lid On" will be displayed. The iCoffee brewer will remember where it was in the SteamBrew™ cycle for 20 minutes. If 20 minutes have passed before the lid is closed, the SteamBrew™ cycle will end.

Note: When brewing is complete the end-of-brewing Mozart tone will sound and the "HEATING WATER" message on the display will be turned off and the brewing animation will end. The "ON" indicates carafe warming plate is on and will remain on (for up to two hours).

Note: The Mozart tone can be turned off/on if desired by pressing the minute/music  button when Brewer is not brewing or in the auto start delayed brewing mode.

Programming Auto Start (Delayed Brewing)

The iCoffee brewer can be programmed to start brewing at a pre-selected time. To set the auto start time, press the auto start  button.

The display will show the current auto start time along with the message "SET AUTO START." Press the  (hour) and  (minute) buttons

until the desired auto start time is shown. **Make sure that the time is set correctly for am or pm auto start.** Now press the auto start button again (or simply wait for 10 seconds) to turn on auto start. The auto start button will light up. To turn off auto start, press the auto start button again.

Note: If brew basket lid is not inserted into the brew basket, or if there is no water in the Brewer reservoir, the auto start time cannot be set nor can the auto start feature be turned on. Instead the display will prompt to "Put Lid On" or "Add H2O."

Note: The auto start button must be pressed again each day to activate the delayed brewing feature. This prevents iCoffee from brewing when not specifically desired.

Cleaning & Descaling

The iCoffee Brewer must be cleaned when you notice that the brewing time has increased considerably. The condition is caused by build-up of lime and mineral deposits in the heater from hard tap water. The frequency of cleaning depends on the hardness of tap water used. The following table gives a suggested cleaning schedule.

Cleaning & Descaling	
Type of Water	Cleaning Frequency
Soft Water	Every 80 brew cycles
Hard Water	Every 40 brew cycles
Purified Water	Every 100 cycles

Descaling Procedure

1. Fill the iCoffee Brewer water reservoir with household white vinegar to the 4-cup level mark.
2. Turn on the Brewer to heat and circulate the vinegar into system.
3. Carefully watch the vinegar level in the reservoir until the vinegar level disappears,
4. AND IMMEDIATELY TURN OFF THE Brewer.
5. Let the vinegar sit in the Brewer heater for 30 minutes to dissolve the internal mineral scale.
6. After 30 minutes, empty the carafe then fill the reservoir with plain water to the 12-cup mark, AND TURN BACK ON THE Brewer.
7. When the water level in the reservoir has emptied,
8. TURN OFF THE Brewer.
9. Discard the vinegar in the glass carafe.
10. Your iCoffee brewer is now Sanitized, Descaled and ready to Brew Great Coffee.

Cleaning Brew Basket

1. Remove drip basket and brew basket together.
2. Rinse drip basket.
3. Discard used coffee grounds and fully rinse brew basket.
4. Place the brew basket, brew basket lid, and drip basket in the top rack of the dish-washer if desired.

Cleaning Carafe

1. Fill carafe with a solution of equal parts of tap water and white household vinegar. Let stand for one hour.
2. Discard the solution and wash and rinse carafe.



Do not use harsh abrasives that may scratch the carafe; scratches may cause the carafe to break.

Pause & Serve

Note: Removing carafe for more than 15 seconds may cause brew basket to overflow.

Potential Problems	Probable Cause
"ON" light does not illuminate	• Unplugged • Power outage • Check GFCI Reset Button on outlet
Coffee is not brewing	• Unplugged • Power outage • The water reservoir is empty • The brew basket is not properly inserted • Carafe is not placed all the way onto the warming plate • Brew basket lid is not inserted
Brewer only brews water	• No grounds in brew basket • The brew basket is not properly inserted
Brewer brews coffee slowly	• Brewer needs vinegar cleaning
Brew basket overflows	• Too many grounds placed in the brew basket • Coffee is too finely ground • Carafe lid not on carafe • The brew basket is not properly inserted • Carafe was removed from the warming plate for longer than 15 seconds • Carafe is not placed all the way onto warming plate
Burning coffee smell	• Empty carafe was left on hot warming plate • Coffee was spilled on warming plate
Coffee is not hot	• Power outage • The automatic shut-off function has been activated after 2 hours
Coffee tastes irregular	• Coffee too finely ground • Coffee to water grounds ratio is unbalanced • Coffee brewer needs to be fully cleaned

Section 6

WARRANTY

Please log onto iCoffee.com to register your iCoffee SteamBrew warranty and receive the latest news and rewards.

Limited One Year Warranty

Remington warrants that your brewer will be free of defects in materials or workmanship under normal home use for one year from the date of purchase. It is recommended that you fill out and return the warranty card enclosed with your Brewer so that your purchase information will be stored in our system. Remington will, at its option, repair or replace the Brewer without charge upon its receipt of proof of the date of purchase. If a replacement Brewer is necessary to service this warranty, the replacement Brewer may be new or reconditioned. If a replacement Brewer is sent, a new limited one year warranty will be applied to replacement Brewer.

This warranty only applies to Brewers operated in the United States and Canada. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and, in the case of Canada, from province to province.

What is not covered by the Limited Warranty?

THIS WARRANTY DOES NOT COVER CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND DOES NOT COVER INCIDENTAL COSTS AND EXPENSES RESULTING FROM ANY BREACH OF THIS WARRANTY, EVEN IF FORESEEABLE. Some states or provinces do not allow the exclusion of limitations of incidental or consequential damages, so the above limitation or exclusion may not apply to you depending on the state or province of purchase.

Nor does this warranty cover damages caused by services performed by anyone other than Remington or its authorized services providers, use of parts other than genuine Remington parts, or external causes such as abuse, misuse, inappropriate power supply or acts of God.

Other Limitations

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER EXPRESS WARRANTY, WHETHER WRITTEN OR ORAL. IN ADDITION, REMINGTON HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES WITH RESPECT TO YOUR ICOFFEE Brewer, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Some states or provinces do not allow disclaimers of such implied warranties or limitations on how long an implied warranty lasts, so the above limitation may not apply to you depending on the state or the province of purchase.

How do I obtain warranty service?

Remington Brewers are high-quality appliances and, with proper care, are intended to provide years of satisfying performance. However, should the need arise for warranty servicing, simply log onto icoffee.com and click on the warranty service link to obtain an Authorization Return number (ATR) so that we may further assist you.

iCoffee.com - Remington iCoffee - 28165 Ave Crocker - Valencia, CA 91355

SHORT CORD INSTRUCTIONS: A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.

Longer detachable power-supply or extension cords are available and may be used if care is exercised in their use.

If an extension cord is used, 1) the marked electrical rating of the extension cord should be a least as great as the electrical rating of the appliance; 2) the cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

 
NOTICE: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit full in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

OPERATING NOTICE: Overflow of coffee in the brew basket can occur under any or a combination of any of the following conditions: 1) the use of too finely ground coffee; 2) using the gold tone filter in conjunction with a paper filter, 3) not properly cleaning coffee grounds from the gold tone filter mesh screen. or; 4) removing carafe for more than 15 seconds during brewing cycle.

DO NOT IMMERSE THE ICOFFEE BREWER IN WATER OR ANY OTHER LIQUID

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS.

WARNING



RISK OF FIRE OR
ELECTRIC SHOCK

DO NOT OPEN

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BOTTOM COVER. NO USER SERVICEABLE PARTS ARE INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

WARNING TO USERS AND PARENTS: DO NOT permit children to use brewer unless there is adult supervision. Brewer dispenses very hot liquid.

15

iCoffee
Remington
28165 Ave Crocker
Valencia, CA 91355

For Household Use Only
Designed by Remington in California
Made in China
© 2013 Remington
All Rights Reserved

www.iCoffee.com | 661 257 0810





View step-by-step
video at
www.icoffee.com

How to brew with your icoffee brewer...

Using the handle, remove the brew basket from the brewer



Remove the lid from the brew basket



Add your ground-coffee (start by using the same amount you normally use)
...adjust taste by using less or more coffee the next time you brew



Put the lid on the brew basket



Return the basket it to its original position inside brewer



Add water to the rear-reservoir, close lid



Press start to begin the brew process (or) program for delayed brewing



See other side for
cleaning instructions





View step-by-step
video at
www.icoffee.com

How to clean your icoffee brewer...

Taking time to properly clean the brew and drip baskets will ensure that your icoffee brewer works flawlessly.

Using the handle, remove the brew basket from the brewer and set aside



Remove the drip basket from the brewer by pulling up on the tabs



Turn the basket upside down over trash container and tap to remove grounds



Rinse out the drip basket and insert back into the brewer in original position



Remove the lid and rinse off or place on top rack in the dishwasher



Using water, rinse the brew basket thoroughly by:

- Flushing the rotational jets
- Rinsing all the exterior screens
- Rinsing the inside of brew basket
- Or, place it on the top rack in the dishwasher



PLEASE READ

- You may notice a finely extracted coffee essence (sediment) in your cup and carafe after brewing. **This is normal**, and a result of our patented SteamBrew™ Extraction Technology which eliminates any bitter and acidic aftertaste, ensuring only rich and “Impossibly Smooth” tasting coffee. If you prefer less finely extracted coffee essence, please use the optional filter.
- Before brewing, we suggest you adjust the amount of coffee you normally use. iCoffee users have reported adjusting the amount they use by adding more or using less coffee in the SteamBrew™ basket to achieve the strength and flavor they prefer.
- Please use medium to coarse ground coffee in the SteamBrew™ Premium Gold Tone Filter. Avoid using a fine or extra fine grind. The SteamBrew™ Premium Gold Tone Filter forever eliminates disposable paper filters.

If you prefer less finely extracted coffee essence (sediment), place the optional filter in carafe as shown.



To clean, remove and rinse thoroughly with water.