


sx2100

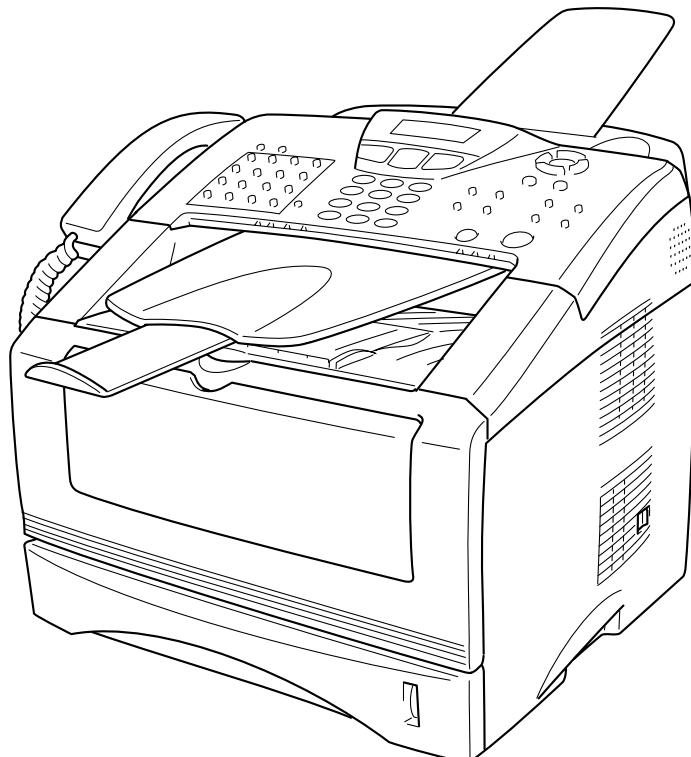

User's Guide

Thank you for selecting an Imagistics solution for your document production and management needs. The following information will help you get the most productive and reliable use out of your system.

Imagistics brand supplies are designed for Imagistics copiers, printers and fax machines to ensure maximum product performance and quality. Substituting other supplies may result in inferior image quality and machine malfunction. To order supplies call the Imagistics Supply Line at 1-800-462-6797. For faster service, please have your machine model and serial number available before calling.

Should your sx2100 develop a problem that cannot be remedied by using the maintenance or troubleshooting procedures outlined in this manual, please contact the Imagistics National Diagnostic Center at 1-800-243-5556.

Model Number: sx2100

Serial Number:* _____






*** The serial number is on the back of the unit.**

Safety precautions

To use the machine safely

Save these instructions for later reference.

⚠ WARNING

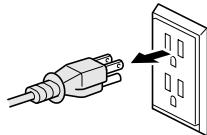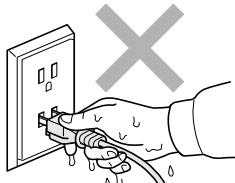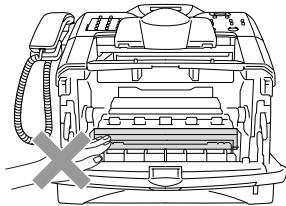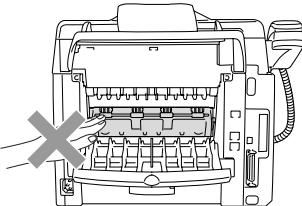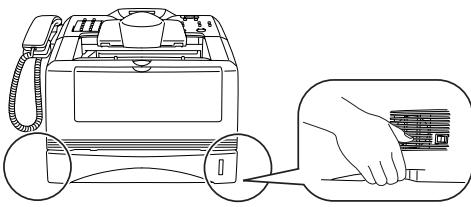	<p>There are high voltage electrodes inside the machine. Before you clean the machine or clear a paper jam, make sure you have unplugged the power cord from the AC power outlet.</p> 		<p>Do not handle the plug with wet hands. Doing this might cause an electrical shock.</p> 
	<p>After you use the machine, some internal parts are extremely HOT! To prevent injuries, be careful not to put your fingers in the area shown in the illustration.</p>  		
	<p>When you move the machine, grasp the side handholds that are at the bottom as shown in the illustration.</p> 		

- Use caution when installing or modifying telephone lines. Never touch telephone wires or terminals that are not insulated unless the telephone line has been disconnected at the wall jack. Never install telephone wiring during a lightning storm. Never install a telephone wall jack in a wet location.
- This product must be installed near an AC power outlet that is easily accessible. In case of emergencies, you must disconnect the power cord from the AC power outlet in order to shut off power completely.
- To reduce the risk of shock or fire, use only a No. 26 AWG or larger telecommunication line cord.



Caution

- Lightning and power surges can damage this product! We recommend that you use a quality surge protection device on the AC power line and on the telephone line, or unplug the lines during a lightning storm.

IMPORTANT SAFETY INSTRUCTIONS	
	<p>When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:</p> <ol style="list-style-type: none">1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.3. Do not use the telephone to report a gas leak in the vicinity of the leak.4. Use only the power cord provided with the machine. <p>SAVE THESE INSTRUCTIONS</p>


Choosing a location

Place your machine on a flat, stable surface that is free of vibration and shocks, such as a desk. Put the machine near a telephone wall jack and a standard, grounded AC power outlet. Choose a location where the temperature remains between 50°F and 90°F (10°-32.5°C).



Caution

- Avoid placing your machine in a high-traffic area.
- Do not place near heaters, air conditioners, water, chemicals, or refrigerators.
- Do not expose the machine to direct sunlight, excessive heat, moisture, or dust.
- Do not connect your machine to electrical outlets controlled by wall switches or automatic timers.
- Disruption of power can wipe out information in the machine's memory.
- Do not connect your machine to electrical outlets on the same circuit as large appliances or other equipment that might disrupt the power supply.
- Avoid interference sources, such as speakers or the base units of cordless phones.

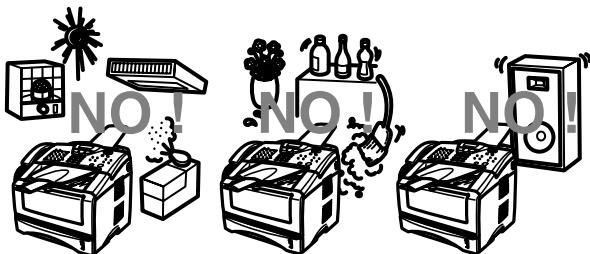

Quick Reference Guide

Sending faxes

Automatic Transmission

- 1 If it is not illuminated in green, press  (Fax).
- 2 Load the original document.
- 3 Enter the fax number using One-Touch, Speed Dial, Search or the dial pad.
- 4 Press **Start**.

Transmission from ADF

You can send faxes in real time.

- 1 If it is not illuminated in green, press  (Fax).
- 2 Load the original document.
- 3 Press **Menu, 3, 2, 5**.
- 4 Press  or  to select On, and then press **Enter**.
—OR—
For the next transmission only, press  or  to select Next Fax Only, and then press **Enter**.
- 5 For the next fax only, press  or  to select Next Fax:On, and then press **Enter**.

6 Press **1** if you want to choose more settings and the LCD will return to the **TX Settings** menu.

—OR—

7 Press **2** to fax.

8 Enter the fax number.

Receiving faxes

Select Answer Mode

- 1 Press **Menu, 0, 1**.
- 2 Press  or  to select Fax Only, Manual, Fax/Tel or External TAM and then press **Enter**.

Storing numbers

Storing One-Touch Dial numbers

- 1 Press **Menu, 3, 3, 1**.
- 2 Press the One-Touch key where you want to store the number.
- 3 Enter a number (up to 20 digits), and then press **Enter**.
- 4 Enter a name (or leave it blank), and then press **Enter**.
- 5 Press **Stop**.

Storing Speed Dial numbers

- 1 Press **Menu**, **3, 3, 2**.
- 2 Enter a three-digit Speed Dial number, and then press **Enter**.
- 3 Enter a number (up to 20 digits), and then press **Enter**.
- 4 Enter a name (or leave it blank), and then press **Enter**.
- 5 Press **Stop**.

Dialing operations

One-Touch Dialing/Speed Dialing

- 1 If it is not illuminated in green, press  **(Fax)**.
- 2 Load the original document.
- 3 Press the One-Touch key of the number you want to call
—OR—
Press **Search/Speed Dial**, press **#**, and then press the three-digit Speed Dial number.
- 4 Press **Start**.

Using Search

- 1 If it is not illuminated in green, press  **(Fax)**.
- 2 Press **Search/Speed Dial**, and then enter the first letter of the name you're looking for.
- 3 Press  or  to search the memory.
- 4 Press **Start**.

Making copies

Single copy

- 1 Press  **(Copy)** to illuminate it in green.
- 2 Load the original document.
- 3 Press **Start**.

Sorting multiple copies

- 1 Press  **(Copy)** to illuminate it in green.
- 2 Load the original document.
- 3 Use the dial pad to enter the number of copies you want (up to 99).
- 4 Press **Options** and  or  to select **Stack/Sort**, and then press **Enter**.
- 5 Press  or  to select **Sort** (or **Stack**) and then press **Enter**.
- 6 Press **Start**.

Table of Contents

1

Introduction	1-1
Using this Guide	1-1
Finding information	1-1
Symbols used in this Guide	1-1
Machine part names and operations	1-2
Control panel overview	1-4
Back light color shows the machine status	1-6
About fax machines	1-8
Custom features	1-8
Do you have Voice Mail on the phone line?	1-8
Why should there be problems?	1-8
How can you avoid possible problems?	1-8
Fax tones and handshake	1-9
ECM (Error Correction Mode)	1-10
Connecting the machine	1-10
Connecting an external telephone	1-10
Connecting an external telephone answering	
machine (TAM)	1-11
Sequence	1-11
Connections	1-12
Recording outgoing message (OGM) on an	
external TAM	1-13
Special line considerations	1-14
Two-line phone system	1-14
Converting telephone wall outlets	1-14
Installing machine, external two-line TAM and	
two-line telephone	1-15
Multi-line connections (PBX)	1-16
If you are installing the machine to work	
with a PBX	1-16
Custom features on your phone line	1-16

2

Loading paper and original documents	2-1
About paper	2-1
Paper specifications for each paper tray	2-1
Recommended paper	2-2
Choosing acceptable paper	2-3
How to load paper	2-4
To load paper or other media in the paper tray	2-4
To load paper or other media in the manual	
feed tray	2-6
Using the automatic document feeder (ADF)	2-7

On-screen programming	3-1
User-friendly programming	3-1
Menu table	3-1
Memory Storage	3-1
Navigation keys	3-2

Getting started	4-1
Initial Setup	4-1
Setting the Date and Time	4-1
Setting the Machine ID	4-2
Entering text	4-3
Inserting spaces	4-3
Making corrections	4-3
Repeating letters	4-3
Special characters and symbols	4-4
Setting Tone and Pulse dialing mode	4-4
System Setup	4-5
Setting the Mode Timer	4-5
Setting the Paper Type	4-5
Setting the Paper Size	4-6
Setting the Ring Volume	4-7
Setting the Beeper Volume	4-7
Setting the Speaker Volume	4-8
Setting the Handset Volume	4-8
Choosing the setting for Hearing Assist	4-9
Setting Hearing Assist (For the Hard of Hearing)	4-10
Turning on Automatic Daylight Savings Time	4-10
Save Toner	4-11
Sleep Timer	4-11
Setting the LCD Contrast	4-12
Setting the Tray Use for Copy mode	4-12
Setting the Tray Use for Fax mode	4-13
Setting the Tray Use for Printing Reports	4-13

RX Settings	5-1
Basic receiving operations	5-1
Choosing the Answer Mode	5-1
To select or change your Answer Mode	5-2
Setting the Ring Count	5-2
Setting the F/T Ring Time (Fax/Tel mode only)	5-3
Ext. Tel. RX	5-4
Printing a reduced incoming fax (Auto Reduction)	5-5
Printing a fax from the memory	5-5
Setting the Print Density	5-6

Advanced receiving operations	5-7
Operation from extension telephones.....	5-7
For Fax/Tel mode only.....	5-7
Changing the remote codes	5-8
Polling.....	5-9
Setting up Polling Receive	5-9
Setting up Sequential Polling Receive	5-9
Setting the Receive TTI	5-10
Setting the Substitute RX	5-10
Telephone services	5-11
Unique Ring.....	5-11
What does your telephone company's 'Unique Ring' do?	5-11
What does sx2100's 'Unique Ring' do?	5-11
Do you have Voice Mail?.....	5-12
Before you choose the ring pattern to register	5-12
Registering the Unique Ring pattern	5-13
Turning off the Unique Ring	5-13
Caller ID.....	5-14
Viewing Caller ID List	5-15
Clearing a Caller ID stored in the memory	5-15
Printing Caller ID List.....	5-15
Call Waiting	5-16

6

TX Settings	6-1
How to enter Fax mode	6-1
How to dial.....	6-1
Manual dialing	6-1
One-Touch dialing	6-2
Speed Dialing	6-2
Search	6-2
How to fax.....	6-3
Manual transmission.....	6-3
Automatic transmission	6-3
Out of Memory message	6-4
Sending a fax at the end of a conversation	6-4
Basic sending operations	6-5
Sending faxes using multiple settings	6-5
Contrast.....	6-5
Fax Resolution.....	6-6
Manual and automatic fax Redial	6-7
Dual Access	6-7
Real Time Transmission.....	6-8
Checking job status	6-9

Canceling a fax in progress	6-9
Canceling a scheduled job.....	6-9
Advanced sending operations	6-10
Composing the electronic Cover Sheet	6-10
Composing your own comments	6-11
Cover sheet for the next fax only.....	6-12
Send a cover sheet for all faxes	6-13
Using a printed cover sheet.....	6-13
Broadcasting.....	6-14
Overseas Mode	6-15
Delayed Send	6-16
Delayed Batch Transmission	6-16
Setting up Polled Transmission	6-17
Memory Security.....	6-18
Setting up the password	6-18
Turning Memory Security on	6-19
Turning Memory Security off	6-19

7

Auto Dial numbers and dialing options	7-1
Storing numbers for easy dialing	7-1
Storing One-Touch Dial numbers	7-1
Storing Speed Dial numbers.....	7-3
Changing One-Touch and Speed Dial numbers.....	7-4
Setting up Groups for Broadcasting.....	7-5
Dialing operations	7-6
Access codes and credit card numbers.....	7-6
Pause	7-7
Tone or Pulse	7-7
Telephone (voice) operations	7-7
Making a telephone call	7-7

8

Remote Fax Options	8-1
Fax Forwarding.....	8-1
Programming a Fax Forwarding number.....	8-1
Setting Remote Retrieval.....	8-2
Local Print.....	8-2
Using R R Passcode.....	8-3
Remote commands.....	8-4
Retrieving fax messages	8-5

Printing reports	9-1
Fax settings and journal	9-1
Customizing the Job Status Report.....	9-1
Setting the Journal Interval.....	9-2
Printing reports	9-3
How to print a report.....	9-3

Making copies	10-1
Using the machine as a copier	10-1
Enter Copy mode.....	10-1
Making a single copy	10-2
Making multiple copies	10-2
Out of Memory message	10-3
Using the Copy keys(Temporary settings)	10-4
Enlarge/Reduce.....	10-5
Copy Mode (type of original document).....	10-7
Contrast.....	10-8
Options	10-9
N in 1 copy (Page Layout).....	10-10
Sorting copies.....	10-12
Changing the default copy settings	10-13
Copy Mode	10-13
Contrast	10-13

Important information	11-1
Standard telephone and FCC Notices	
These notices are in effect on models sold and used only in the United States.....	11-1
Federal Communications Commission (FCC)	
Declaration of Conformity (USA only)	11-3
Important	11-4
Important – about the interface cable	11-4
Industry Canada Compliance Statement	
(Canada only)	11-4
For your safety.....	11-4
Disconnect device	11-4
LAN connection	11-4
International ENERGY STAR® Compliance	
Statement	11-5
Laser safety	11-5
FDA regulations	11-6
Important safety instructions.....	11-7
Trademarks	11-9
Shipment of the machine	11-9

Troubleshooting and routine maintenance	12-1
Troubleshooting	12-1
Error messages	12-1
Original document jams	12-4
Paper jams.....	12-5
If you are having difficulty with your machine	12-11
Improving the print quality.....	12-15
Compatibility	12-18
Packing and shipping the machine	12-19
Routine maintenance.....	12-22
Cleaning the scanner.....	12-22
Cleaning the printer	12-23
Cleaning the drum unit.....	12-24
Replacing the toner cartridge.....	12-25
How to replace the toner cartridge.....	12-26
Replacing the drum unit.....	12-30
Page Counter	12-33

Optional accessories	13-1
Memory board.....	13-1
Installing the optional memory board.....	13-2
Network (LAN) board	13-4
Before starting installation	13-5
Step 1: Hardware installation.....	13-5
Step 2: Connecting the Network board to an Unshielded Twisted Pair 10BASE-T or 100BASE-TX Ethernet Network	13-8
LED.....	13-8
Test switch.....	13-9
Lower Tray.....	13-9

Glossary	G-1
-----------------------	------------

Specifications	S-1
Product description	S-1
General	S-1
Print media.....	S-2
Copy	S-2
Fax.....	S-3
Scanner	S-4
Printer	S-5
Interfaces	S-5
Computer requirements	S-6

<i>I</i>	Index	I-1
<i>R</i>	Remote Retrieval Access card	R-1

1 Introduction

Using this Guide

Thank you for buying an Imagistics sx2100. Your sx2100 is simple to use, with LCD screen instructions to guide you through programming it. You can make the most of your machine by taking a few minutes to read this Guide.

Finding information

All the chapter headings and subheadings are listed in the Table of Contents. You will be able to find information about a specific feature or operation by checking the Index at the back of this Guide.

Symbols used in this Guide


Throughout this Guide you will see special symbols alerting you to important warnings, notes and actions. To make things clearer and to help you press the correct keys, we used special fonts and added some of the messages that will appear in the LCD.

Bold	Bold typeface identifies specific keys on the machine control panel.
<i>Italics</i>	Italicized typeface emphasizes an important point or refers you to a related topic.
Courier New	Courier New typeface identifies the messages on the LCD of the machine.

-  Warnings inform you what to do to avoid possible personal injury.
-  Cautions specify procedures you must follow or avoid to prevent possible damage to the machine.
-  Notes tell you how you should respond to a situation that may arise or give tips about how the current operation works with other features.
-  Improper Setup alerts you to devices and operations that are not compatible with the machine.


Machine part names and operations

■ Front view

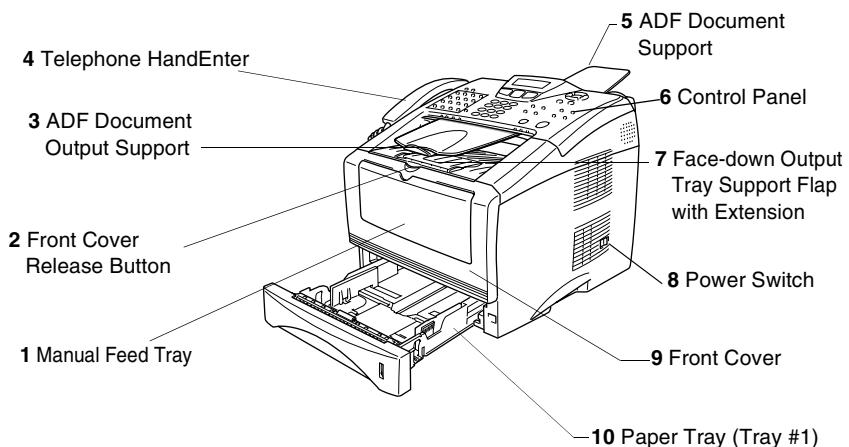


No.	Name	Description
1	Manual Feed Tray	Load paper here.
2	Front Cover Release Button	Press it to open the front cover.
3	ADF Document Output Support	The original documents come out here.
4	Telephone Handset	For telephone calls.
5	ADF Document Support	Load the original document here.
6	Control Panel	Use the keys and display to control the machine.
7	Face-down Output Tray Support Flap with Extension (Support Flap)	Unfold it to prevent the printed paper from sliding off the machine.
8	Power Switch	Switch the machine on or off.
9	Front Cover	Open to install a toner cartridge or drum unit.
10	Paper Tray (Tray #1)	Load paper here.

■ Back view

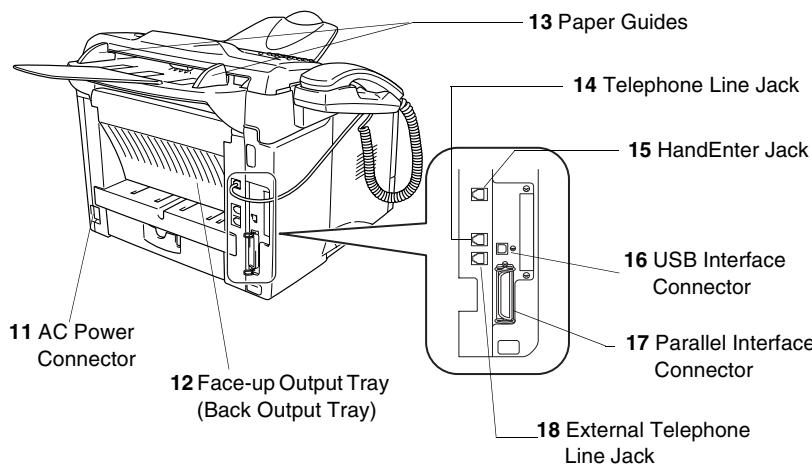

No.	Name	Description
11	AC Power Connector	Connect the AC Power Connector here.
12	Face-up Output Tray (Back Output Tray)	Open it when thicker paper is placed in the Manual feed tray.
13	Paper Guides	Use to fit the width of the document.
14	Telephone Line Jack	Plug the line cord supplied with the machine into here.
15	Handset Jack	Plug in the handset curled cord here.
16	USB Interface Connector	Connect the USB Cable here.
17	Parallel Interface Connector	Connect the Parallel Cable here.
18	External Telephone Line Jack	Plug in the external telephone line here.

Control panel overview

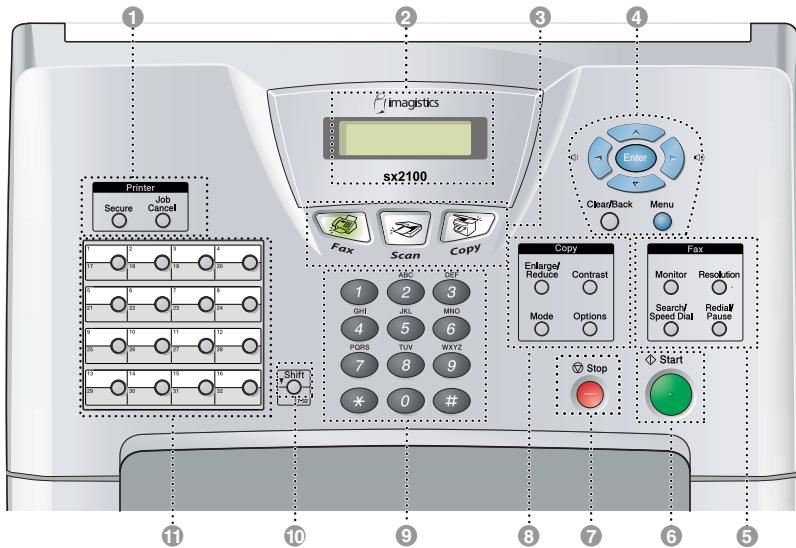

① Print keys:

Secure

Lets you print out data saved in memory by entering your four-digit password.

Job Cancel

Clears data from the printer memory.

② Liquid Crystal Display (LCD)

Displays messages on the screen to help you to set up and use your machine. The LCD will change color depending on the machine status.

③ Mode keys:



Fax

Lets you access Fax mode.



Copy

Lets you access Copy mode.



Scan

Lets you access Scan mode.

(See Software User's Guide on the CD-ROM.)

④ Navigation keys:

Menu


Lets you access the Menu to program.

Enter

Lets you store your settings in the machine.

Clear/Back

Deletes entered data or lets you exit the menu by pressing repeatedly.

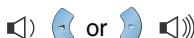

Press to scroll forward or backward to a menu selection.

When using the speaker, telephone handset or ring, you can press these keys to adjust the volume in fax mode.



Press to scroll through the menus and options.

Also, you can use these keys to do a numerical search for the names of stored numbers in fax mode.

5 Fax and telephone keys:

Monitor

Lets you dial telephone and fax numbers without lifting the handset.

Resolution

Sets the resolution when you send a fax.

Search/Speed Dial

Lets you look up numbers that are stored in the dialing memory. It also lets you dial stored numbers by pressing # and a three-digit number.

Redial/Pause

Redials the last number you called. It also inserts a pause in auto dial numbers.

6 Start

Lets you start sending faxes, making copies or scanning.

7 Stop

Stops a fax, copy and scan operation or exits from the menu.

8 Copy keys

(Temporary settings):

Enlarge/Reduce

Lets you reduce or enlarge copies depending upon the ratio you select.

Contrast

Lets you make a copy that is lighter or darker than the original document.

Mode

Lets you select the copy quality for your type of original document.

Options

You can quickly and easily select temporary settings for copying.

9 Dial Pad

Use these keys to dial telephone or fax numbers and as a keyboard for entering information into the machine.

The # key lets you temporarily switch the dialing mode during a telephone call from Pulse to Tone.

10 Shift

To access memory locations 17 through 32 in the One-Touch keys hold down the Shift key.

11 One-Touch keys

These 16 keys give you instant access to 32 previously stored auto dial numbers.

Back light color shows the machine status

The LCD back light will change color depending on the machine status.

LCD	Machine status	Description
 Off	Sleep Mode	The power switch is off or the machine is in Sleep mode.
 Orange	Initializing	The machine is being initialized after you switched it on.
	Warming Up in Sleep mode	The machine is warming up for printing in Sleep mode.
	Menu in Operation	The Menu is in use.
	Receiving Data from the Computer	The machine is either receiving data from the computer, processing data in the memory, or printing data.
	Data Remaining in Printer Memory	Print data remains in the machine memory.
 Green	Warming Up	The machine is warming up for printing.
	Ready	The machine is ready for use.
	Receiving Fax Data	The machine is either receiving fax data, processing data in memory, or printing data.

LCD	Machine status	Description
Red	Service error	<p>Follow the steps below.</p> <ol style="list-style-type: none"> 1. Turn off the power switch. 2. Wait a few seconds, and then turn it back on and try to print again. <p>If you cannot clear the error and still see the Red back light color after turning the machine back on, please call the Imagistics National Diagnostics Center at 1-800-243-5556 (In USA).</p>
	Cover open	The cover is open. Close the cover. (See <i>Error messages</i> on page 12-1.)
	Toner empty	Replace the toner cartridge with a new one. (See <i>Replacing the toner cartridge</i> on page 12-25.)
	Paper error	Put paper in the tray or clear the paper jam. Check the LCD message. (See <i>Troubleshooting</i> on page 12-1.)
	Out of memory	Memory is full. (See <i>Error messages</i> on page 12-1.)
	Other errors	Check the LCD message. (See <i>Troubleshooting</i> on page 12-1.)



When the power switch is off or the machine is in Sleep mode, the LCD back light is off.

About fax machines

Custom features

Do you have Voice Mail on the phone line?

If you have Voice Mail on the phone line where you will install your new machine, *there is a strong possibility that Voice Mail and the machine may conflict with each other while receiving incoming calls.*

Why should there be problems?

Since both the machine and Voice Mail will pick up the call, after the number of rings you have set, each of them has the ability to keep the other from receiving calls.

For example, if your Voice Mail is set to answer after two rings and your machine is set to answer after four, your Voice Mail will stop your machine from receiving faxes.

If you set Voice Mail and the machine to answer after the same number of rings, there is no way of knowing which one will answer first. It is important to remember that neither Voice Mail nor the machine can pass the call back to the other after the call has been answered.

How can you avoid possible problems?

A very good way to avoid problems like the one mentioned, *is to get a second phone number on your present phone line.*

Many people with Voice Mail choose an alternative service, which is called “Unique Ring”, and they are very satisfied with it. (See *Unique Ring* on page 5-11.)

Another way to avoid possible problems is to replace your Voice Mail with an answering machine. Your machine is designed to work with an answering machine or TAM (telephone answering machine).

(See *Connecting an external telephone answering machine (TAM)* on page 1-11.)

Fax tones and handshake

When someone is sending a fax, the machine sends fax calling tones (CNG tones). These are quiet, intermittent beeps every 4-seconds. You will hear them after you dial and press **Start** and they will continue for about 60 seconds after dialing. During that time, the sending machine must begin the “handshake”, or connection, with the receiving machine.

Each time you use automatic procedures to send a fax, you are sending CNG tones over the phone line. You will soon learn to listen for these quiet beeps each time you answer a phone on your fax line, so you will know if you are receiving a fax message.

The receiving fax responds with fax receiving tones, which are loud, chirping sounds. A receiving fax chirps for about 40 seconds over the phone line, and the LCD shows **Receiving**.

If your machine is set to the **Fax Only** mode, it will answer every call automatically with fax receiving tones. If the other person hangs up, your machine will continue to send the “chirps” for about 40 seconds, and the LCD continues to show **Receiving**. To cancel receiving, press **Stop**.

The fax ‘handshake’ is the time in which the sending machine’s CNG tones and the receiving machines “chirps” overlap. This must be for at least 2 to 4 seconds, so both machines can understand how each is sending and receiving the fax. The handshake cannot begin until the call is answered, and the CNG tones only last for about 60 seconds after the number is dialed. So it is important for the receiving machine to answer the call in as few rings as possible.



When you have an external Telephone Answering Machine (TAM) on your fax line, your TAM will decide the number of rings before the call is answered.

Pay special attention to the directions for connecting a TAM in this chapter. (See *Connecting an external telephone answering machine (TAM)* on page 1-11.)

ECM (Error Correction Mode)

The Error Correction Mode (ECM) is a way for the machine to check a fax transmission while it is in progress. If the machine detects errors during fax transmission, it resends the pages of the fax that had an error. ECM transmissions are only possible between fax machines that both have this feature. If they do, you may send and receive fax messages that are continuously being checked by the machine.

Your machine must have enough memory for this feature to work.


Connecting the machine

Connecting an external telephone

Your machine is equipped with a handset that you can use as a regular phone. However, you can also connect a separate telephone (or telephone answering device) directly to your machine.

Connect the telephone's line cord to the jack labeled EXT. on the back side of the machine.

When this phone (or TAM) is in use, the LCD shows Ext. Tel in Use, and, if the fax handset is lifted, an alarm sounds. To disconnect a call on the external phone and switch to the fax, press **Monitor**.

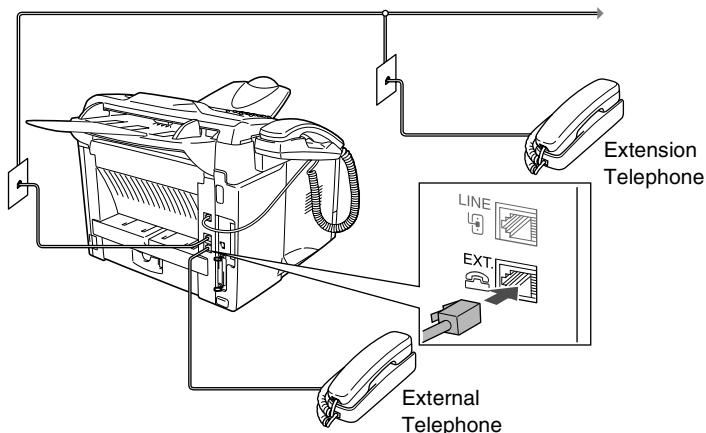

Whenever this phone (or TAM) is in use, the LCD shows Ext. Tel in Use.

Connecting an external telephone answering machine (TAM)

Sequence

You may choose to connect an answering device. However, when you have an **external** TAM on the same telephone line as the machine, the TAM answers all calls and the machine “listens” for fax calling (CNG) tones. If it hears them, the machine takes over the call and receives the fax. If it does not hear CNG tones, the machine lets the TAM continue playing your outgoing message so your caller can leave you a voice message.

The TAM must answer within four rings (the recommended setting is two rings). The machine cannot hear CNG tones until the TAM has answered the call, and with four rings there are only 8 to 10 seconds of CNG tones left for the fax “handshake”. Make sure you carefully follow the instructions in this guide for recording your outgoing message. We do not recommend using the toll saver feature on your external answering machine if it exceeds five rings.

 *If you do not receive all your faxes, reduce the Ring Delay setting on your external TAM.*


 *If You Subscribe to your Telephone Company’s Unique Ring Service:*

You may connect an external TAM to a separate wall jack only if you subscribe to your telephone company’s Unique Ring service, have registered the unique ring pattern on your machine, and use that number as a fax number. The recommended setting is four rings on the external TAM when you have the telephone company’s Unique Ring Service.

 *If You Do Not Subscribe to Unique Ring Service:*

You must plug your TAM into the EXT. jack of your machine. If your TAM is plugged into a wall jack, both your machine and the TAM will try to control the phone line. (See illustration on the next page.)

 **Do not connect a TAM elsewhere on the same phone line**
(unless you have the Unique Ring service).

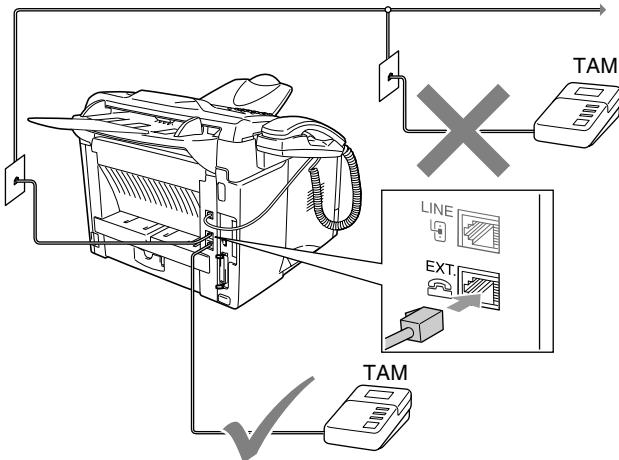

Connections

The external TAM must be plugged into the back of the machine, into the jack labeled EXT. Your machine cannot work properly if you plug the TAM into a wall jack (unless you are using Unique Ring).

- 1 Plug the telephone line cord from the wall jack into the back of the machine, in the jack labeled LINE.
- 2 Plug the telephone line cord from your external TAM into the back of the machine, in the jack labeled EXT. (Make sure this cord is connected to the TAM at the TAM's telephone *line* jack, and not its telephone jack.)
- 3 Set your external TAM to four rings or less. (The machine's Ring Count setting does not apply.)
- 4 Record the outgoing message on your external TAM.
- 5 Set the TAM to answer calls.
- 6 Set the Answer Mode to External TAM.
(See *Choosing the Answer Mode* on page 5-1.)

Recording outgoing message (OGM) on an external TAM

Timing is important in recording this message. The message sets up the ways to handle both manual and automatic fax reception.

- 1 Record 5 seconds of silence at the beginning of your message. (This allows your machine time to listen for the fax CNG tones of automatic transmissions before they stop.)
- 2 Limit your speaking to 20 seconds.
- 3 End your 20-second message by giving your Fax Receive Code for people sending manual faxes. For example:

*“After the beep, leave a message or send a fax by pressing * 51 and Start.”*

 We recommend beginning your OGM with an initial 5-second silence because the machine cannot hear fax tones over a resonant or loud voice. You may try omitting this pause, but if your machine has trouble receiving, then you must rerecord the OGM to include it.

Special line considerations


Two-line phone system

A two-line phone system is nothing more than two separate phone numbers on the same wall outlet. The two phone numbers can be on separate jacks (RJ11) or combined into one jack (RJ14). Your machine must be plugged into an RJ11 jack. RJ11 and RJ14 jacks may be equal in size and appearance and both may contain four wires (black, red, green, yellow). To test the type of jack, plug in a two-line phone and see if it can access both lines. If it can, you must separate the line for your machine. (See *Ext. Tel. RX* on page 5-4.)

Converting telephone wall outlets

There are three ways to convert to an RJ11 jack. The first two ways may require assistance from the telephone company. You can change the wall outlets from one RJ14 jack to two RJ11 jacks. Or, you can have an RJ11 wall outlet installed and slave or jump one of the phone numbers to it.


The third way is the easiest: Buy a triplex adapter. You can plug a triplex adapter into an RJ14 outlet. It separates the wires into two separate RJ11 jacks (Line 1, Line 2) and a third RJ14 jack (Lines 1 and 2). If your machine is on Line 1, plug the machine into L1 of the triplex adapter. If your machine is on Line 2, plug it into L2 of the triple adapter.

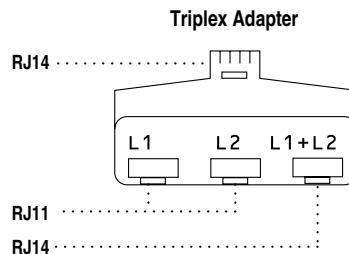

Installing machine, external two-line TAM and two-line telephone

When you are installing an external two-line telephone answering machine (TAM) and a two-line telephone, your machine must be isolated on one line at both the wall jack and at the TAM. The most common connection is to put the machine on Line 2, which is explained in the following steps. The back of the two-line TAM must have two telephone jacks: one labeled L1 or L1/L2, and the other labeled L2. You will need at least three telephone line cords, the one that came with your machine and two for your external two-line TAM. You will need a fourth line cord if you add a two-line telephone.

- 1 Place the two-line TAM and the two-line telephone next to your machine.
- 2 Plug one end of the telephone line cord for your machine into the L2 jack of the triplex adapter. Plug the other end into the LINE jack on the back of the machine.
- 3 Plug one end of the first telephone line cord for your TAM into the L1 jack of the triplex adapter. Plug the other end into the L1 or L1/L2 jack of the two-line TAM.
- 4 Plug one end of the second telephone line cord for your TAM into the L2 jack of the two-line TAM. Plug the other end into the EXT. jack on the left side of the machine.

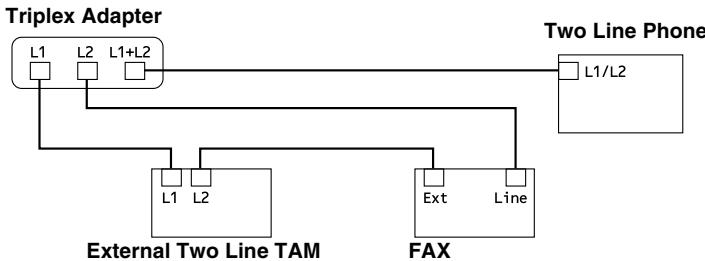

You can keep two-line telephones on other wall outlets as always. There are two ways to add a two-line telephone to the machine's wall outlet. You can plug the telephone line cord from the two-line telephone into the L1+L2 jack of the triplex adapter. Or, you can plug the two-line telephone into the TEL jack of the two-line TAM.

Multi-line connections (PBX)

Most offices use a central telephone system. While it is often relatively simple to connect the machine to a key system or a PBX (Private Branch Exchange), we suggest that you contact the company that installed your telephone system and ask them to connect the machine for you. It is advisable to have a separate line for the machine.

If the machine is to be connected to a multi-line system, ask your installer to connect the unit to the last line on the system. This prevents the unit from being activated each time a telephone call is received.

 As with all fax units, this machine must be connected to a two wire system. If your line has more than two wires, proper connection of the machine cannot be made.

If you are installing the machine to work with a PBX

- 1 It is not guaranteed that the unit will operate correctly under all circumstances with a PBX. Any cases of difficulty should be reported first to the company that handles your PBX.
- 2 If all incoming calls will be answered by a switchboard operator, it is recommended that the Answer Mode be set to Manual. All incoming calls should initially be regarded as telephone calls.

Custom features on your phone line

If you have Voice Mail, Call Waiting/Caller ID, RingMaster, an answering service, an alarm system or other custom feature on one phone line it may create a problem with the operation of your machine. (See *Custom features* on page 1-8 and *If you are having difficulty with your machine* on page 12-11.)

About paper

Paper specifications for each paper tray

	Manual feed tray	Paper tray	Optional Lower tray
Paper types	Plain paper, Bond paper, Recycled paper, Envelope, Labels, and Transparency	Plain paper, Recycled paper, and Transparency*	Plain paper, Recycled paper, and Transparency*
Paper weights	16 to 43 lb (60 to 161 g/m ²)	16 to 28 lb (60 to 105 g/m ²)	16 to 28 lb (60 to 105 g/m ²)
Paper sizes	Width: 2.75 to 8.66 in. (69.8 to 220 mm) Height: 4.57 to 16.0 in. (116 to 406.4 mm)	A4, Letter, Legal, B5 (ISO), Executive, A5, A6, B6 (ISO)	A4, Letter, Legal, B5 (ISO), Executive, A5, B6 (ISO)
Number of sheets	Single Sheet	250 sheets (20 lb or 80 g/m ²)	250 sheets (20 lb or 80 g/m ²)

* Up to 10 sheets



When printing transparencies, remove each one from the face-down output tray after it exits the machine.

Recommended paper

Plain Paper:	Imagistics 471-1 Letter
	Imagistics 462-2 Legal
Transparency:	3M CG 3300
Labels:	Avery laser label # 5160

- Before you buy a large amount of paper, please test some to make sure that the paper is suitable.
- Use paper that is made for plain-paper copying.
- Use paper that is 20 to 24 lb (75 to 90 g/m²).
- Use neutral paper. Do not use acidic or alkaline paper.
- Use long-grain paper.
- Use paper with a moisture content of approximately 5%.



Caution

Do not use ink jet paper. It may cause a paper jam and damage your machine.

Choosing acceptable paper

We recommend that you test paper (especially special sizes and types of paper) on the machine before purchasing large quantities.

- Avoid feeding label sheets that are partly used or your machine will be damaged.
- Avoid using coated paper, such as vinyl coated paper.
- Avoid using preprinted or highly textured paper, or paper with an embossed letterhead.


For optimum printing, use a recommended type of paper, especially for plain paper and transparencies. For more information on paper specifications, call your nearest authorized sales representative or the place where you purchased your machine.

- Use label or transparencies that are designed for use in *laser* printers.
- For the best print quality, we recommend using long-grained paper.
- If you are using special paper and the paper has problems feeding from the paper tray, try again using the manual feed tray.
- You can use recycled paper in this machine.

How to load paper


To load paper or other media in the paper tray

- 1 Pull the paper tray completely out of the machine.

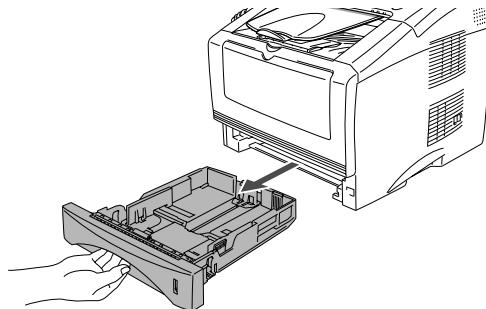


- 2 While pressing the paper guide release lever, slide the adjusters to fit the paper size.

Check that the guides are firmly in the slots.

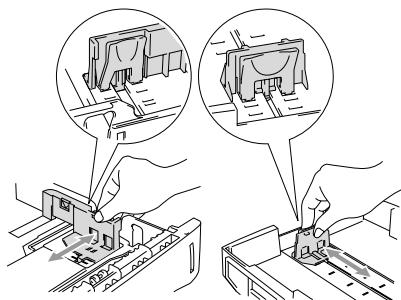


 For Legal size paper, press the universal guide release button and pull out the back of the paper tray.

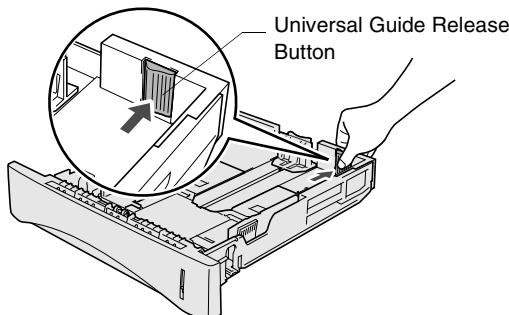


- 3** Fan the stack of paper well to avoid paper jams and misfeeds.
- 4** Put paper in the paper tray.

Check that the paper is flat in the tray, below the maximum paper mark, and that the paper guide is flush against the paper stack.

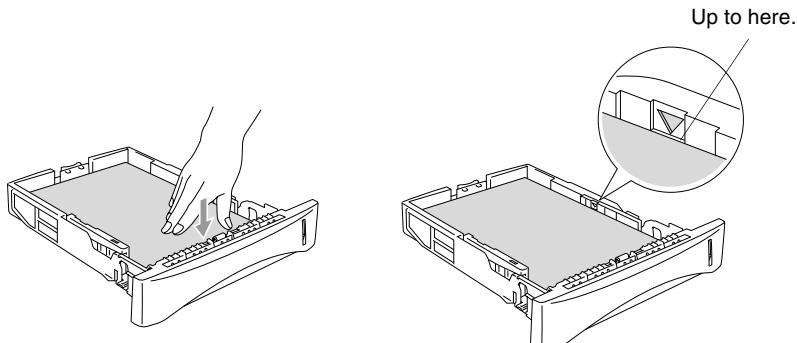

- 5** Put the paper tray firmly back in the machine and unfold the support flap before you use the machine.

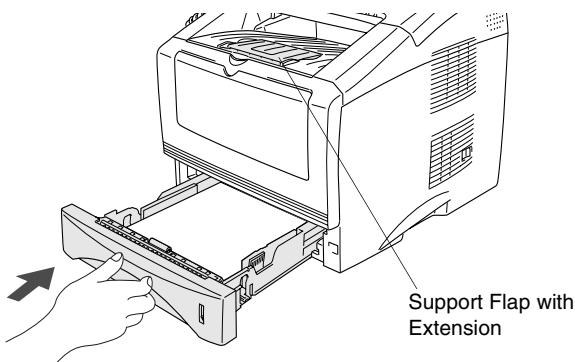


 When you put paper in the paper tray, please remember the following:

- The side to be printed on must be face down.
- Put the leading edge (top of the paper) in first and push it gently into the tray.
- To copy or receive faxes on Legal size paper, unfold the support flap extension.


To load paper or other media in the manual feed tray

 When printing envelopes and labels you should only use the manual feed tray.

- 1 Open the manual feed tray. Slide the paper guides to fit the paper size.

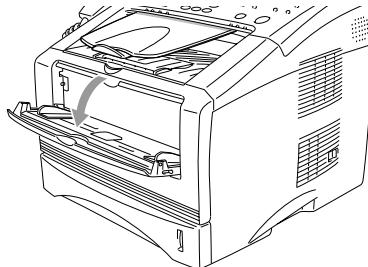

- 2 Using both hands put paper in the manual feed tray until the front edge of the paper touches the paper feed roller. Hold the paper in this position until the machine automatically feeds the paper in for a short distance, and then let go off the paper.

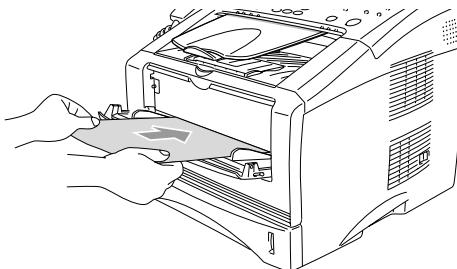


 When you put paper in the manual feed tray, please remember the following:

- The side to be printed on must be face up.
- Put the leading edge (top of the paper) in first and push it gently into the tray.
- Make sure that the paper is straight and in the proper position on the manual feed tray. If it is not, the paper may not be fed properly, resulting in a skewed printout or a paper jam.
- Do not put more than one sheet of paper or envelope in the manual feed tray at any one time, or it may cause a jam.


Using the automatic document feeder (ADF)

You can send faxes, copy and scan from the ADF (automatic document feeder).

- Make sure original documents written with ink are completely dry.
- The original documents to be faxed must be from 5.8 to 8.5 inches wide and 3.9 to 14 inches long.
- Make sure you place the original documents **face down, top edge first**.
- Adjust the paper guides to fit the width of your original documents.

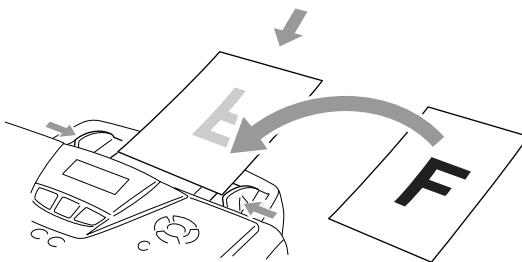

- The ADF can hold up to 30 pages and feeds each sheet individually. Use standard (20 lb or 75 g/m²) paper.
- Always fan the original documents before putting them in the ADF, and then stagger the pages in the ADF as shown:

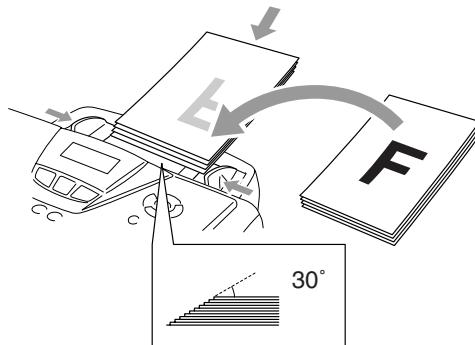

- 🚫 **DO NOT** use paper that is curled, wrinkled, folded, ripped, stapled, paper clipped, pasted or taped. **DO NOT** use cardboard, newspaper or fabric.
- 🚫 **DO NOT** pull on the original document while it is in progress.

3 On-screen programming

User-friendly programming

Your machine is designed to be easy to use with LCD on-screen programming using the navigation keys. User-friendly programming helps you take full advantage of all the menu selections your machine has to offer.

Since your programming is done on the LCD, we have created step-by-step on-screen instructions to help you program your machine. All you need to do is follow the instructions as they guide you through the menu selections and programming options.

Menu table

You can probably program your machine without the User's Guide. But to help you understand the menu selections and options that are found in the machine programs, use the Menu table on page 3-4.

 You can program your machine by pressing **Menu** followed by the menu numbers.

For example to set Resolution to Fine:


Press **Menu, 3, 2, 2** and  or  to select Fine.

Press **Enter**.

Memory Storage

If there is a power failure, you will not lose your menu settings because they are stored permanently. Temporary settings (such as Overseas Mode, and so on) will be lost. You may also have to reset the date and time.

Navigation keys

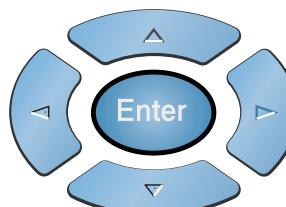

Clear/Back



Menu



- * Access the menu
- * Go to the next menu level
- * Accept an option
- * Exit the menu by pressing repeatedly
- * Go back to the previous menu level
- * Scroll through the current menu level
- * Go back to the previous menu level
- * Go forward to the next menu level
- * Exit the menu

You can access the menu mode by pressing **Menu**.

When you enter the menu, the LCD scrolls.

Press **1** for Page Counter menu

—OR—

Press **2** for System Setup menu

—OR—

Press **3** for Fax menu

—OR—

Press **4** for Copy menu

—OR—

Press **5** for Printer menu

—OR—

Press **6** for Print Reports menu

—OR—

Press **7** for LAN menu

(Only if the optional LAN board is installed.)

—OR—

Press **0** for Initial Setup menu

—OR—

You can scroll more quickly through each menu level by pressing the arrow for the direction you want:  or .

Set ▲▼ & Enter
1. Page Counter

Set ▲▼ & Enter
2. System Setup

Set ▲▼ & Enter
3. Fax

Set ▲▼ & Enter
4. Copy

Set ▲▼ & Enter
5. Printer

Set ▲▼ & Enter
6. Print Reports

Set ▲▼ & Enter
7. LAN

Set ▲▼ & Enter
0. Initial Setup

Then set an option by pressing **Enter** when that option appears on the LCD.

The LCD will then show the next menu level.

Press  or  to scroll to your next menu selection.


Press **Enter**.

When you finish setting an option, the LCD shows **Accepted**.

 Use  to scroll backward if you passed your choices or want to save keystrokes.

The current setting is always the option with “*”.

To access the menu, press  **Menu**.

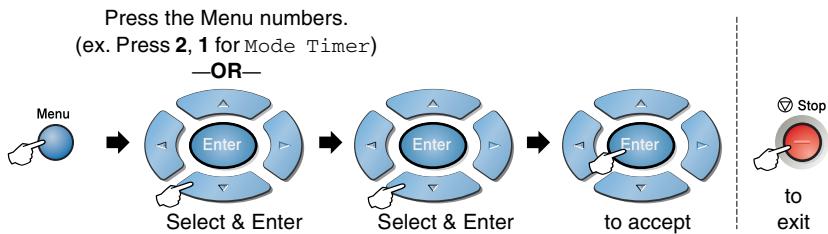

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
1. Page Counter	—	—	Total Copy Print List/Fax	Let you check number of total pages the machine has printed so far.	12-33
2. System Setup	1. Mode Timer	—	0 Sec 30 Secs * 1 Min 2 Mins 5 Mins Off	Sets how long the machine will stay in Copy or Scan mode before returning to Fax mode.	4-5
	2. Paper Type	— (Without the optional lower tray) 1. Upper Tray (With the optional lower tray)	Thin Plain * Thick Thicker Transparency	Sets the type of paper in upper tray.	4-5
	2. Lower Tray (With the optional lower tray)	Thin Plain * Thick Thicker Transparency	Sets the type of paper in lower tray.	4-5	
	3. Paper Size	— (Without the optional lower tray) 1. Upper Tray (With the optional lower tray)	A4 Letter * Legal Executive A5 A6 B5 B6	Sets the size of paper in upper tray.	4-6
	2. Lower Tray (With the optional lower tray)	A4 Letter * Legal Executive A5 B5 B6	Sets the size of paper in lower tray.	4-6	




The factory settings are shown in Bold with “*”.

To access the menu, press  **Menu**.

Press the Menu numbers.
(ex. Press **2, 1** for Mode Timer)


—OR—

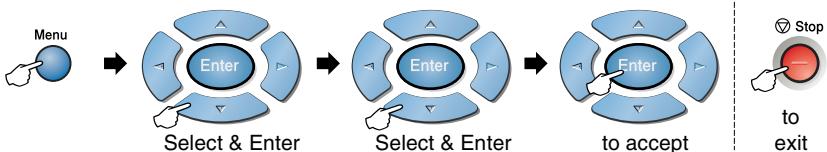

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2. System Setup (Continued)	4. Volume	1. Ring	High Med * Low Off	Adjusts the ring volume.	4-7
		2. Beep Vol.	High Med * Low Off	Adjusts the volume level of the beeper.	4-7
		3. Speaker	High Med * Low Off	Adjusts the speaker volume.	4-8
		4. Handset	High Low *	Adjusts the handset volume.	4-8
		5. Hearing Assist	On (Permanent/ Temporary) Off *	For the hearing-impaired, you can set the volume to the Hearing Assist:On setting on a permanent or temporary basis.	4-10
	5. Auto Daylight	—	On * Off	Change for Daylight Savings Time automatically.	4-10
	6. Ecology	1. Save Toner	On Off *	Increases the life of the toner cartridge.	4-11
		2. Sleep Timer	—	Conserves power.	4-11
	7. LCD Contrast	—	- □ ■ + - □ □ ■ * - ■ □ □ +	Adjusts the contrast of the LCD.	4-12

 The factory settings are shown in Bold with “*”.

To access the menu, press  **Menu**.

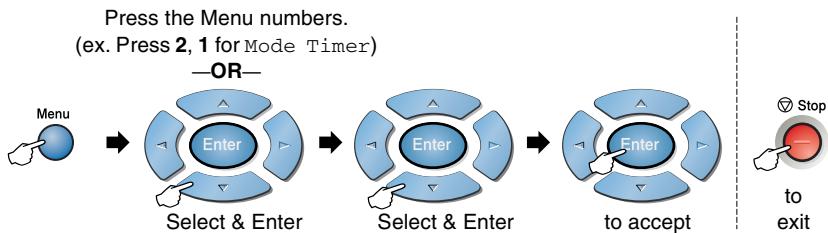

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
2. System Setup (Continued)	8. Tray Use:Copy (This setting only appears if you have the optional lower tray)	—	Upper Tray Lower Tray Auto *	Selects the tray that will be used for Copy mode.	4-12
	9. Tray Use:Fax (This setting only appears if you have the optional lower tray)	—	Upper Tray Lower Tray Auto * Auto Separation	Selects the tray that will be used for Fax mode.	4-13
	0. Tray Use:Rprt (This setting only appears if you have the optional lower tray)	—	Upper Tray Lower Tray Auto *	Selects the tray that will be used for printing reports.	4-13
3. Fax	1. RX Settings (In Fax mode only)	1. Ring Count	04 03 02 01 * 00	Sets the number of rings before the machine answers in Fax Only or Fax/Tel mode.	5-2
		2. F/T Ring Time	70 40 30 20 *	Sets the pseudo/double-ring time in Fax/Tel mode.	5-3
		3. Ext. Tel. RX	On * Semi Off	Receives fax messages without pressing the Start key.	5-4
		4. Remote Code	On * (* 51, #51) Off	You can answer all calls at an extension or external phone and use codes to turn the machine on or off. You can personalize these codes.	5-8




The factory settings are shown in **Bold** with *****.

To access the menu, press  **Menu**.

Press the Menu numbers.
(ex. Press **2, 1** for Mode Timer)

—OR—

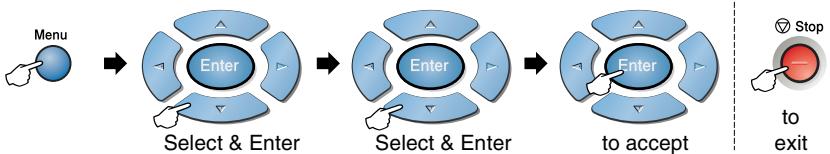

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
3.Fax (Continued)	1.RX Settings (In Fax mode only) (Continued)	5.Auto Reduction (If you have the optional lower tray, see page 3-15.)	On *	Reduces the size of incoming faxes.	5-5
		6.Print Density	- □□□■ + - □□■□ + - □■□□ + * - □□□□ + - ■□□□ +	Makes printouts darker or lighter.	5-6
		7.Poll RX	On Off *	Sets up your machine to poll another fax machine.	5-9
		8.Receive TTI	On Off *	Prints the received time and date on the top of the received faxes.	5-10
		9.Substitute RX	On *	Automatically stores any incoming faxes in its memory if it runs out of paper.	5-10
	2.TX Settings (In Fax mode only)	1.Contrast	Auto * Light Dark	Changes the lightness or darkness of faxes you send.	6-5
		2.Resolution	Standard * Fine EX-Fine Photo	Sets the default resolution for outgoing faxes.	6-6
		3.Delayed Send	—	Set the time of day in 24 hour format that the delayed faxes will be sent.	6-16
		4.Batch TX	On Off *	Combines delayed faxes to the same fax number at the same time of day into one transmission.	6-16




The factory settings are shown in **Bold** with “*”.

To access the menu, press  **Menu**.

Press the Menu numbers.

(ex. Press **2, 1** for Mode Timer)

—OR—

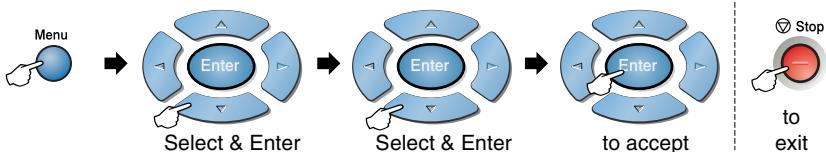

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
3.Fax (Continued)	2.TX Settings (Continued) (In Fax mode only)	5.TX from ADF	Off *On Next Fax Only	You can send a fax without using the memory.	6-8
		6.Poll	On Off *	Sets up the original document on your machine to be retrieved by another fax machine.	6-17
		7.Cover Sheet	Next Fax Only On Off * Print Sample	Automatically sends a Cover Sheet you have programmed.	6-10
		8.Cover Message	—	You can set up your own comments for fax Cover Sheet.	6-11
		9.Overseas Mode	On Off *	Adjusts for overseas transmissions, which can sometimes cause problems.	6-15
	3.Dialer Setting	1.One-Touch	—	Stores One-Touch Dial numbers, so you can dial by pressing one key (and Start).	7-1
		2.Speed Dial	—	Stores Speed Dial numbers, so you can dial by pressing only a few keys (and Start).	7-3
		3.Setup Groups	—	Sets up a Group number for Broadcasting.	7-5




The factory settings are shown in Bold with “*”.

To access the menu, press  **Menu**.

Press the Menu numbers.
(ex. Press **2, 1** for Mode Timer)

—OR—

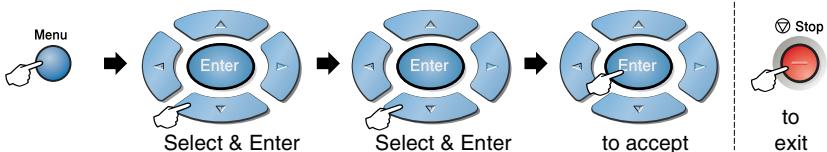


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
3.Fax (Continued)	4.Setup Reports	1.Job Status Rpt	Incomplete * Inc+Image All All+Image	Initial setup for Job Status Report and Journal.	9-1
		2.Journal	Every 7 Days Every 2 Days Every 24 Hours Every 12 Hours Every 6 Hours Every 50 Faxes * Off		9-2
	5.Remote Fax Opt	1.RMT RTV/ FX FWD	Off * Remote Retrieve Fax Forward	Storing incoming faxes in memory for remote retrieval. —OR— Sets the machine to forward fax messages.	8-1
		2.Print Fax	—	Prints incoming faxes stored in the memory.	5-5
	6.View/ Del.Jobs	—	—	Checks which jobs are in the memory or cancels a delayed fax or polling job.	6-9



The factory settings are shown in **Bold** with “*”.

To access the menu, press  **Menu**.

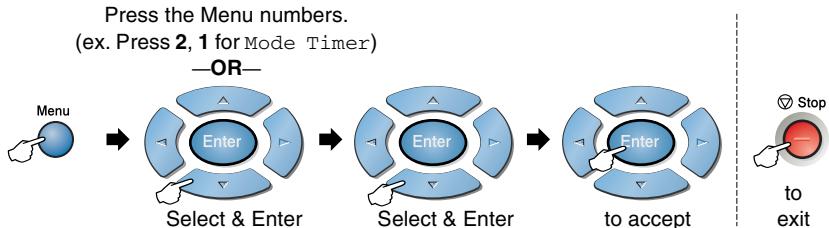

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
3.Fax (Continued)	0.Miscellaneous	1.Mem Security	—	Prohibits most settings except receiving faxes into memory.	6-18
		2.Compatibility	High * Normal Basic	Adjusts the transmissions that are having problems.	12-18
		3.Unique Ring	Off * Set (On)	Uses the Telephone Company's Unique Ring subscriber service to register the ring pattern with the machine.	5-13
		4.Caller ID	Display# Print Report	View or print a list of the last 30 Caller IDs stored in the memory.	5-15
4.Copy	1.Copy Mode	—	Text Photo Auto *	Selects the Copy resolution for your type of original document.	10-13
	2.Contrast	—	- □□□■ + - □□□□ + - □□■□ + * - □■□□ + - ■□□□ +	Adjusts the contrast for copies.	10-13




The factory settings are shown in Bold with “*”.

To access the menu, press  **Menu**.

Press the Menu numbers.
(ex. Press **2, 1** for Mode Timer)

—OR—

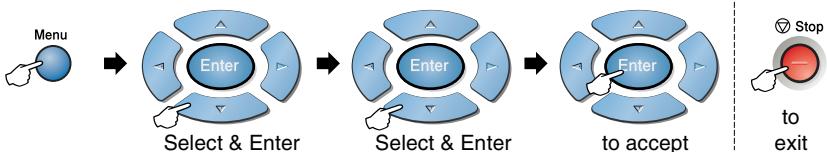


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
5. Printer	1. Emulation	—	Auto * HP LaserJet BR-Script 3	Selects the Emulation mode.	See Software User's Guide.
	2. Print Options	1. Internal Font	—	Prints a list of the machine's internal fonts or current printer settings.	
		2. Configuration	—		
	3. Reset Printer	—	—	Returns the machine to the default settings.	
6. Print Reports	1. Help List	—	—	You can print these lists and reports.	9-3
	2. Dialer Dir	—	—		
	3. Journal	—	—		
	4. Job Status Rpt	—	—		
	5. Mach. Settings	—	—		
	6. Order Form	—	—	You can print a supplies order form that you can fax to request new supplies.	9-3
0. Initial Setup	1. Answer Mode	—	Fax Only * Fax/Tel External TAM Manual	You can choose the answer mode that best suits your needs.	5-1 5-2
	2. Date/Time	—	—	Put the date and time on the LCD and in headings of faxes you send.	4-1
	3. Machine ID	—	Fax Tel Name	Program your name and fax number to appear on each page you fax.	4-2 4-3
	4. Tone/Pulse	—	Tone * Pulse	Selects the dialing mode.	4-4
	0. Language	—	English * French	Allows you to change the LCD Language for your country.	See Quick Setup Guide



The factory settings are shown in **Bold** with “*”.

To access the menu, press  **Menu**.

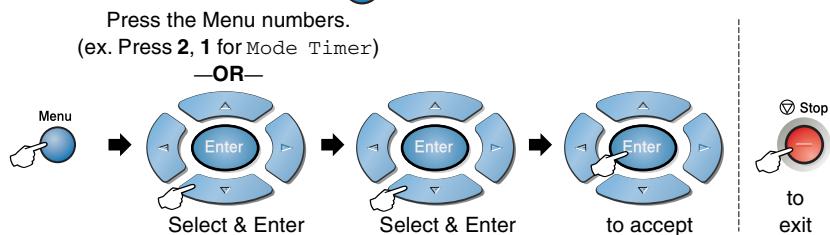

 If you installed optional LAN board, the LCD shows the following LAN menu.


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
7.LAN (option)	1.Setup TCP/IP	1. BOOT Method	Auto * Static RARP BOOTP DHCP	You can choose the BOOT method that best suits your needs.	See Network User's Guide on the CD-ROM.
		2. IP Address	[000-255]. [000-255]. [000-255]. [000-255]	Enter the IP address.	
		3. Subnet Mask	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Subnet mask.	
		4. Gateway	[000-255]. [000-255]. [000-255]. [000-255]	Enter the Gateway address.	
		5. Host Name	BRN_XXXXXX	Enter the Host name.	
		6. WINS Config	Auto * Static	You can choose the WINS configuration mode.	
		7. WINS Server	Primary * Secondary	Specifies the IP address of the primary or secondary server.	
		8. DNS Server	Primary * Secondary	Specifies the IP address of the primary or secondary server.	
		9. APIPA	On * Off	Automatically allocates the IP address from the link-local address range.	

 The factory settings are shown in Bold with “*”.

To access the menu, press  **Menu**.

Press the Menu numbers.
(ex. Press **2, 1** for Mode Timer)

—OR—

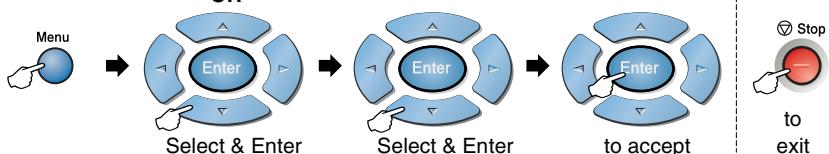


Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
7.LAN (option) (Continued)	2.Setup Internet	1. Mail Address	(60 characters)	Enter the mail address.	See Network User's Guide on the CD-ROM.
		2. SMTP Server	[000-255]. [000-255]. [000-255]. [000-255]	Enter the SMTP server address.	
		3. POP3 Server	[000-255]. [000-255]. [000-255]. [000-255]	Enter the POP3 server address.	
		4. Mailbox Name	(up to 20 characters)	Enter the mail box name.	
		5. Mailbox Pwd	Password:*****	Enter the password to login to the POP3 server.	
	3.Setup Mail RX	1. Auto Polling	On * Off	Automatically checks the POP3 server for new messages.	
		2. Poll Frequency	10Min (00-60)	Sets the interval for checking for new messages on the POP3 server.	
		3. Header	All Subject+From+To None *	Selects the contents of the mail header to be printed.	
		4. Del Error Mail	On * Off	Deletes error mails automatically.	
		5. Notification	On MDN Off *	Sends notification messages.	



The factory settings are shown in Bold with “*”.

To access the menu, press  **Menu**.

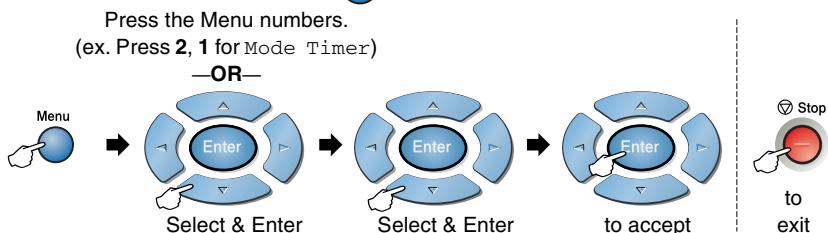

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
7.LAN (option) (Continued)	4.Setup Mail TX	1.Sender Subject	—	Displays the subject that is attached to the Internet Fax data.	See Network User's Guide on the CD-ROM.
		2.Size Limit	On Off *	Limits the size of E-mail original documents.	
		3.Notification	On Off *	Sends notification messages.	
	5.Setup Relay	1.Rly Broadcast	On Off *	Relays original documents to another fax machine.	
		2.Relay Domain	RelayXX:	Registers the Domain name.	
		3.Relay Report	On Off *	Prints the Relay Broadcast Report.	
	6.Setup Misc.	1.Netware	On * Off	Select On to use the machine on a Netware network.	
		2.Net Frame	Auto * 8023 ENET 8022 SNAP	Lets you specify the frame type.	
		3.AppleTalk	On * Off	Select On to use the machine on a Macintosh network.	
		4.DLC/LLC	On * Off	Select On to use the machine on a DLC/LLC network.	
		5.Net BIOS/IP	On * Off	Select On to use the machine on a Net BIOS/IP network.	




The factory settings are shown in Bold with “*”.

To access the menu, press  **Menu**.

Press the Menu numbers.
(ex. Press **2, 1** for Mode Timer)

—OR—

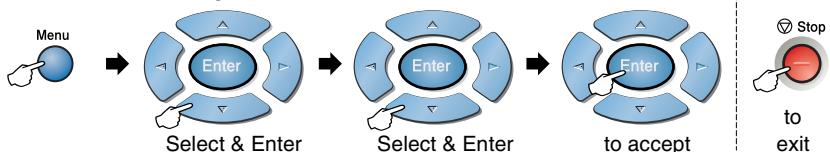

Main Menu	Submenu	Menu Selections	Options	Descriptions	Page
7.LAN (option) (Continued)	6.Setup Misc. (Continued)	6.Ethernet	Auto * 100B-FD 100B-HD 10B-FD 10B-HD	Selects Ethernet link mode.	See Network User's Guide on the CD-ROM.
		7.Time Zone	GMT-05:00 *	Sets the time zone for your country.	
	7.Scan to E-mail	-	PDF * TIFF	Scans the original into your E-mail application as a file attachment.	
	8.Fax Server TX	-	On Off *	You can store prefix/suffix address in the machine and can send e-mail for a faxserver service system automatically.	

With the optional paper lower tray

Main Menu	Submenu	Menu Selections	Options 1	Options 2	Descriptions	Page
3.FAX	1.RX Settings (In Fax mode only)	5.Auto Reduction	Upper Tray Lower Tray	On * Off	Reduces the size of incoming faxes.	5-5



The factory settings are shown in Bold with “*”.

4 Getting started

Initial Setup

Setting the Date and Time

Your machine displays the date and time and if you set up the Machine ID it prints on every fax you send. If there is a power failure, you may have to reset the date and time. All other settings will not be affected.

- 1** Press **Menu**, **0**, **2**.
- 2** Enter the last two digits of the year.
Press **Enter**.
- 3** Enter two digits for the month.
Press **Enter**.
(For example, enter 09 for September, or 10 for October.)
- 4** Enter two digits for the day.
Press **Enter**.
(For example, enter 06 for 6th.)
- 5** Enter the time in 24-Hour format.
Press **Enter**.
(For example, enter 15:25 for 3:25 P.M.)
- 6** Press **Stop**.

Initial Setup
2.Date/Time

The LCD now shows the date and time whenever the machine is in Standby mode.

Setting the Machine ID

You should store your name or company name and fax number so they are printed on all fax pages that you send.

- 1** Press **Menu, 0, 3.**
- 2** Enter your fax number (up to 20 digits).
Press **Enter**.
- 3** Enter your telephone number (up to 20 digits).
Press **Enter**.
(If your telephone number and fax number are the same, enter the same number again).
 - The telephone number you enter is only used for Cover Sheet features. (See *Composing the electronic Cover Sheet* on page 6-10.)
 - You cannot enter a hyphen.
- 4** Use the dial pad to enter your name (up to 20 characters).
Press **Enter**.
(See *Entering text* on page 4-3.)
- 5** Press **Stop**.
The LCD will show the date and time.
 - If the Machine ID has already been programmed, the LCD will ask you to press **1** to make a change or **2** to exit without changing.

Initial Setup
3.Machine ID

Entering text

When you are setting certain menu selections, such as the Machine ID, you may need to type text into the machine. Most number keys have three or four letters printed above them. The keys for **0**, **#** and ***** do not have printed letters because they are used for special characters.

By pressing the appropriate number key repeatedly, you can access the character you want.

Press Key	one time	two times	three times	four times
2	A	B	C	2
3	D	E	F	3
4	G	H	I	4
5	J	K	L	5
6	M	N	O	6
7	P	Q	R	S
8	T	U	V	8
9	W	X	Y	Z

Inserting spaces

To enter a space in a fax number, press  once between numbers. To enter a space in a name, press twice between characters.

Making corrections

If you entered a letter incorrectly and want to change it, press  to move the cursor under the incorrect character. Then press **Clear/Back**. The letter above the cursor will be deleted. Re-enter the correct character.

Repeating letters

If you need to enter a character that is on the same key as the previous character, press  to move the cursor to the right before you press the key again.

Special characters and symbols

Press *****, **#** or **0**, and then press  or  to move the cursor under the special character or symbol you want. Then press **Enter** to select it.

Press *	for	(space) ! " # \$ % & ' () * + , - . / €
Press #	for	: ; < = > ? @ [] ^ _
Press 0	for	É À È Ê Î Ç Õ Ö 0

NOTICE (USA only)

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or electronic device to send any message via a telephone fax machine unless such messages clearly contain, in a margin at the top or bottom of each transmitted page, or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity or other individual sending the message and the telephone number of the sending machines or such business, other entity or individual.

In order to program this information into your machine, complete the steps described on page 4-2.


Setting Tone and Pulse dialing mode

- 1 Press **Menu, 0, 4.**
- 2 Press  or  to select **Pulse** (or **Tone**). Initial Setup
4.Tone/Pulse
- 3 Press **Enter**.
- 3 Press **Stop**.

System Setup

Setting the Mode Timer

The machine has three temporary mode keys on the control panel: Fax, Copy and Scan. You can change the number of seconds or minutes the machine takes after the last Copy or Scan operation before it returns to Fax mode. If you select Off, the machine stays in the mode you used last.

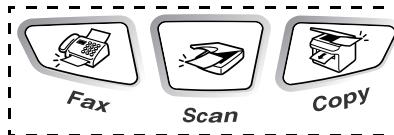

- 1 Press **Menu, 2, 1**.
- 2 Press or to select 0 Sec, 30 Secs, 1 Min, 2 Mins, 5 Mins or Off.
- 3 Press **Enter**.
- 4 Press **Stop**.

System Setup
1.Mode Timer

Setting the Paper Type

To get the best print quality, set the machine for the type of paper you are using.

- 1 Press **Menu, 2, 2**.
—OR—
If you have the optional paper tray, press **Menu, 2, 2, 1** to set the paper type for Upper Tray or **Menu, 2, 2, 2** to set the paper type for Lower Tray.
- 2 Press or to select Thin, Plain, Thick, Thicker or Transparency.
- 3 Press **Enter**.
- 4 Press **Stop**.

You can select Transparency only when A4, Letter or Legal is selected in **Menu, 2, 3** for Upper Tray and Lower Tray.

System Setup
2.Paper Type

Paper Type
1.Upper Tray

Setting the Paper Size

You can use eight sizes of paper for printing copies: A4, letter, legal, executive, A5, A6, B5 and B6 and three sizes of paper for printing faxes: A4, letter and legal. When you change the size of paper in the machine, you will need to change the setting for Paper Size at the same time so your machine can fit an incoming fax or reduced copy on the page.

1 Press **Menu, 2, 3.**

—OR—

System Setup
3.Paper Size

If you have the optional paper tray,
press **Menu, 2, 3, 1** to set the paper
size for Upper Tray or **Menu, 2, 3,**

Paper Size
1.Upper Tray

2 to set the paper size for Lower Tray.

2 Press  or  to select A4, Letter, Legal, Executive,
A5, A6, B5 or B6.

Press **Enter**.

3 Press **Stop**.

-  **■** If you are using the optional paper tray, paper size A6 is not available.
- If you select Transparency in **Menu, 2, 2**, you can only select A4, Letter or Legal.

Setting the Ring Volume

You can turn the ring **Off** or you can select the ring volume level.

- 1** Press **Menu, 2, 4, 1.**
- 2** Press  or  to select (Low, Med, High or Off).
- Press **Enter.**
- 3** Press **Stop.**

Volume
1.Ring

—OR—

You can adjust the ring volume when your machine is idle (not being used). In Fax  mode, press  or  to adjust the volume level. Every time you press these keys, the machine will ring so you can hear the active setting as the LCD shows it. The volume changes with each key press. The new setting will stay until you change it again.

Setting the Beeper Volume

You can change the beeper volume. The default setting is **Med**. When the beeper is on, the machine beeps every time you press a key or make a mistake and after a fax is sent or received.

- 1** Press **Menu, 2, 4, 2.**
- 2** Press  or  to select your option (Low, Med, High or Off).
- Press **Enter.**
- 3** Press **Stop.**

Volume
2.Beep Vol.

Setting the Speaker Volume

You can adjust the machine's one-way speaker volume.

- 1** Press **Menu**, **2**, **4**, **3**.
- 2** Press  or  to select (Low, Med, High or Off).
Press **Enter**.
- 3** Press **Stop**.

Volume
3 . Speaker

—OR—

In Fax  mode, you can adjust the speaker volume by pressing **Monitor**, and then selecting a speaker volume level.

Press  or  to adjust the volume level. The LCD shows the setting you are choosing. Each key press changes the volume to the next setting. The new setting will remain until you change it again.

Setting the Handset Volume

- 1** Press **Menu 2**, **4**, **4**.
- 2** Press  to select High or Low, and then press **Enter**.
- 3** Press **Stop**.

Volume
4 . Handset

—OR—

You can adjust the handset volume any time you are talking on the telephone. There are two handset volume levels, Low and High. The default setting is Low.

Press  or  to adjust the volume level. The LCD shows the setting you are choosing. The new setting will remain until you change it again.

Choosing the setting for Hearing Assist

Before you begin to use the machine, you must decide if you need to set the handset volume to Hearing Assist:On for a user who is hearing-impaired. The Hearing Assist volume level complies with FCC standards.

Hearing Assist:Off

This default setting is appropriate if *none* of the users are hearing-impaired. During a conversation, users can press Volume  or  on the control panel to adjust the volume to Low or High. When the handset is replaced, the handset volume will remain until you change it again.

Hearing Assist:On—Temporary

This setting is appropriate if *some* of the users are hearing-impaired. During a conversation, users can press Volume  or  on the control panel to adjust the volume to Low, High or Hearing Assist. When the handset is replaced, the handset volume returns to the default setting of Low.

Hearing Assist:On—Permanent

Choose Hearing Assist:On—Permanent if *all* of the users are hearing-impaired. During a conversation, users can press Volume  or  on the control panel to adjust the volume to Low, High or Hear Assist. When the handset is replaced, the handset volume returns to the default setting of Hearing Assist.

 When you press Volume  or  on the control panel to adjust the volume, the LCD shows the setting you are choosing. Each key press changes the volume to the next setting.



WARNING

It is important that you do NOT choose Permanent unless ALL the users are hearing-impaired. Otherwise, the default setting of Hearing Assist may damage the hearing of some users.

Setting Hearing Assist (For the Hard of Hearing)

Please carefully read *Choosing the setting for Hearing Assist* on page 4-9 before you do the following steps:

- 1 Press **Menu, 2, 4, 5.**
- 2 If *none* of the users are hearing-impaired, press  or  to select **Off**, and then press **Enter** and go to Step 4.
—OR—
If *some* or *all* of the users are hearing-impaired, select **On**, and then press **Enter**.
- 3 If all the users are hearing-impaired, press  or  to select **Permanent**, and then press **Enter**.
—OR—
If only *some* of the users are hearing-impaired, select **Temporary**, and then press **Enter**.
- 4 Press **Stop**.

Volume
5.Hearing Assist

Turning on Automatic Daylight Savings Time

You can set the machine to change automatically for Daylight Savings Time. It will reset itself forward one hour in the Spring and backward one hour in the Fall. Make sure you have set the correct day and time in the Date/Time setting.

- 1 Press **Menu, 2, 5.**
- 2 Press  or  to select **On** (or **Off**).
Press **Enter**.
- 3 Press **Stop**.

System Setup
5.Auto Daylight

Save Toner

You can conserve toner using this feature. When you set Save Toner to On, print appears somewhat lighter. The default setting is Off.

- 1 Press **Menu, 2, 6, 1.**
- 2 Press  or  to select On (or Off).
- 3 Press **Enter.**
- 4 Press **Stop.**

Ecology
1. Save Toner

Sleep Timer

Setting the Sleep Timer reduces power consumption by turning off the fuser inside the machine, while it is idle. You can choose how long the machine is idle (from 00 to 99 minutes) before it goes into sleep mode. The timer is automatically reset when the machine receives a Fax or PC data, or makes a copy. The default setting is 05 minutes. If you try to print or copy in sleep mode, there will be a short delay while the fuser warms up to working temperature.

- 1 Press **Menu, 2, 6, 2.**
- 2 Use the dial pad to enter the length of time the machine is idle before it goes into sleep mode (00 to 99).
- 3 Press **Enter.**
- 4 Press **Stop.**

 ■ If you want to turn sleep mode off, press **Secure** and **Job Cancel** simultaneously and  or  to select Off in Step 2.

■ If the machine is in Sleep Mode when you change the Sleep Timer, the new setting will take effect the next time the machine copies, prints or is restarted.

Setting the LCD Contrast

You can change the contrast to help the LCD look lighter or darker.

- 1 Press **Menu**, **2**, **7**.
- 2 Press  to increase the contrast.

System Setup
7. LCD Contrast

—OR—

Press  to decrease the contrast.

Press **Enter**.

- 3 Press **Stop**.

Setting the Tray Use for Copy mode

If your machine does not have the optional Lower Tray, you can skip this setting. The default setting of **Auto** allows ^{*1}your machine to choose the paper from the optional Lower Tray when paper is out in Upper Tray or ^{*2}when the size of the original document will fit best on the paper in Lower Tray.

- 1 Press **Menu**, **2**, **8**.
- 2 Press  or  to select Upper Tray, Lower Tray or **Auto**.
- 3 Press **Enter**.
- 4 Press **Stop**.

System Setup
8. Tray Use:Copy



- *1 Copies will automatically be printed from Lower Tray only if the Paper Size setting for Lower Tray is the same as Upper Tray.
- *2 Copies will automatically be printed from Lower Tray if the Paper Size setting for Lower Tray is different than Upper Tray and this paper size is more suitable for the scanned original document.

Setting the Tray Use for Fax mode

If your machine does not have the optional Lower Tray, you can skip this setting. The default setting of **Auto** allows your machine to choose the paper from the optional Lower Tray if Upper Tray is out of paper or if incoming faxes will fit best on the paper in Lower Tray. **Auto Separation** allows the machine always to print the first page of the fax document from Upper Tray.

All the remaining pages are printed from the Lower Tray.

1 Press **Menu, 2, 9**.

System Setup
9.Tray Use:Fax

2 Press  or  to select **Upper** Tray, **Lower** Tray, **Auto** or **Auto Separation**.

3 Press **Enter**.

4 Press **Stop**.



If **Tray Use** is set to **Auto** and **Auto Reduction** is turned on, incoming faxes will be printed from the tray that is set for **Auto Reduction**. (See *Printing a reduced incoming fax (Auto Reduction)* on page 5-5.)

Setting the Tray Use for Printing Reports

If your machine doesn't have the optional Lower Tray, you can skip this setting.

The default setting of **Auto** allows your machine to choose the optional Lower Tray if Upper Tray is out of paper or if reports will fit best on the paper in Lower Tray.

1 Press **Menu, 2, 0**.

System Setup
0.Tray Use:Rprt

2 Press  or  to select **Upper** Tray, **Lower** Tray, or **Auto**.

3 Press **Enter**.

4 Press **Stop**.

5 RX Settings

Basic receiving operations

Choosing the Answer Mode

There are four different Answer Modes for your machine. You can choose the mode that best suits your needs.

LCD	How it works	When to use it
Fax Only (automatic receive)	The machine automatically answers every call as a fax.	For dedicated fax lines.
Fax/Tel (fax and telephone)	The machine controls the line and automatically answers every call. If the call is a fax it will receive the fax. If the call is not a fax it will ring (pseudo/double ring) for you to pick up the call.	Use this mode if you expect to receive lots of fax messages and few telephone calls. You can <i>not</i> have an answering machine on the same line, even if it is on a separate wall jack on the same line. You can <i>not</i> use the telephone company's Voice Mail in this mode.
External TAM (with an external answering machine)	The external answering device (TAM) automatically answers every call. Voice messages are stored on the external TAM. Fax messages are printed.	Use this mode if you have an external answering machine on your phone line. The TAM setting works only with an external answering machine. Ring Delay and F/T Ring Time do not work in this setting.
Manual (manual receive) (with Unique Ring)	You control the phone line and must answer every call yourself.	Use this mode if you don't receive many fax messages, with Unique Ring, or if are using a computer on the same line. If you answer and hear fax tones, wait until the machine takes over the call, then hang up. (See <i>Ext. Tel. RX</i> on page 5-4.)

To select or change your Answer Mode

- 1 Press **Menu, 0, 1.**
- 2 Press  or  to select Fax Only, Fax/Tel, External TAM or Manual.
- 3 Press **Enter.**
- 4 Press **Stop.**

Initial Setup
1.Answer Mode

12/10 11:53 Fax
Res:Standard

Current Answer Mode

Fax: Fax Only

F/T: Fax/Tel

TAM: External TAM

Mnl: Manual

Setting the Ring Count

The Ring Count sets the number of times the machine rings before it answers in Fax Only or Fax/Tel mode. If you have extension phones on the same line as the machine or subscribe to the telephone company's Unique Ring service, keep the Ring Count setting of 4.

(See *Ext. Tel. RX* on page 5-4 and *Operation from extension telephones* on page 5-7.)

- 1 If it is not illuminated in green, press  (**Fax**).

- 2 Press **Menu, 3, 1, 1.**

- 3 Press  or  to select how many times the line rings before the machine answers (00-04).

RX Settings
1.Ring Count

Press **Enter.**


(If you select 00, the line will not ring at all.)

- 4 Press **Stop.**

Setting the F/T Ring Time (Fax/Tel mode only)

If you set the Answer Mode to Fax/Tel, you will need to decide how long the machine will signal you with its special pseudo/double-ring when you have a *voice* call. (If it's a fax call, the machine prints the fax.)

This pseudo/double-ring happens after the initial ringing from the phone company. Only the machine rings and no other phones on the same line will ring with the special pseudo/double-ring. However, you can still answer the call on any extension phone on the same line as the machine. (See *Operation from extension telephones* on page 5-7.)

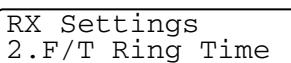- 1 If it is not illuminated in green, press  (Fax).
- 2 Press **Menu**, **3, 1, 2**.

RX Settings
2 . F/T Ring Time
- 3 Press  or  to select how long the machine will ring to alert you that you have a voice call (for 20, 30, 40 or 70 seconds).
Press **Enter**.
- 4 Press **Stop**.
 Even if the caller hangs up during the pseudo/double-ringing, the machine will continue to ring for the set time.

Ext. Tel. RX

When you use this feature, you do not have to press **Start** or the Fax Receive Code ***5 1** when you answer a fax call and hear calling beeps. Just hold the handset and wait a few seconds. When you see **Receiving** on the LCD or when you hear “chirps” through the handset of an extension phone connected to another wall jack, just replace the handset. Your machine does the rest. Selecting **On** allows the machine to receive fax calls automatically, even if you lift the handset of an extension or external phone. Selecting **Semi** lets the machine receive the call only if you have answered it at the machine. Selecting **Off** means you will have to activate the machine yourself, by pressing **Start** or by pressing ***5 1** if you are not at your machine.

(See *Operation from extension telephones* on page 5-7 and *For Fax/Tel mode only* on page 5-7.)

 If you have set the feature to **On**, but your machine does not automatically connect a fax call when you lift an external or extension phone handset, press the Fax Receive code ***5 1**.

At the machine, lift the handset and then press **Start**.

 If you send faxes from a computer on the same phone line and the machine intercepts them, set **Ext. Tel. Rx** to **Off**.

1 If it is not illuminated in green, press  **(Fax)**.

2 Press **Menu, 3, 1, 3**.

3 Use  or  to select **On**, **Semi**, or **Off**.

RX Settings
3 .Ext. Tel. RX

Press **Enter**.

4 Press **Stop**.

Printing a reduced incoming fax (Auto Reduction)

If you choose **On**, the machine automatically reduces each page of an incoming fax to fit on one page of letter, legal or A4 size paper, regardless of the paper size of the original document. The machine calculates the reduction ratio by using the page size of the original document and your Paper Size setting (**Menu, 2, 3**).

- 1 If it is not illuminated in green, press  **(Fax)**.
- 2 Press **Menu, 3, 1, 5**.
- 3 If you have the optional paper lower tray, press  or  to select **Upper Tray** or **Lower Tray**.
Press **Enter**.
- 4 Use  or  to select **On** (or **Off**).
Press **Enter**.
- 5 Press **Stop**.

 If you receive faxes that are split onto two pages, turn on this setting. But if the original document is too long, the machine may print it on two pages.

RX Settings
5 .Auto Reduction

Printing a fax from the memory

If you use Remote Retrieve or Fax Forward feature (**Menu, 3, 5, 1**), you can still print a fax from the memory when you are at your machine.

- 1 Press **Menu, 3, 5, 2**.
- 2 Press **Start**.
- 3 After printing has finished, press **Stop**.

Remote Fax Opt
2 .Print Fax

Setting the Print Density

You can adjust print density, making your printed pages darker or lighter.

1 If it is not illuminated in green, press  (Fax).

2 Press **Menu**, **3, 1, 6**.

3 Press  to make the print darker.

—OR—

Press  to make the print lighter.

RX Settings
6 . Print Density

Press **Enter**.

4 Press **Stop**.

Advanced receiving operations

Operation from extension telephones

If you answer a fax call on an extension telephone, or an external telephone in the EXT. jack, you can make your machine take the call by using the Fax Receive Code. When you press the Fax Receive Code ***51**, the machine starts to receive a fax.

(See *Ext. Tel. RX* on page 5-4.)

If the machine answers a voice call and pseudo/double-rings for you to take over, use the Telephone Answer Code **#51** to take the call at an extension phone. (See *Setting the F/T Ring Time (Fax/Tel mode only)* on page 5-3.)

If you answer a call and no one is on the line, you should assume that you're receiving a manual fax.

- At an extension phone (on a separate telephone wall jack), press ***51**, wait for fax-receiving tones (chirps), and then hang up.
- At an external phone (connected to the machine's EXT jack), press **#51** and wait for the phone to be disconnected before you hang up (the LCD shows **Receiving**).

Your caller will have to press **Start** to send the fax.

For Fax/Tel mode only

When the machine is in Fax/Tel mode, it will use the F/T Ring Time (pseudo/double-ringing) to alert you to pick up a voice call.

If you're at the machine, you can lift the handset to answer.

If you're at an extension phone, you will need to lift the handset during the F/T Ring Time and then press **#51** between the double rings. If no one is on the line, or if someone wants to send you a fax, send the call back to the machine by pressing ***51**.

Changing the remote codes

Remote Codes might not work with some telephone systems. The preset Fax Receive Code is ***51**. The preset Telephone Answer Code is **# 51**.

 If you are always disconnected when accessing your external TAM remotely, try changing the Fax Receive Code and Telephone Answer Code to another three-digit code (such as **###** and **999**).

- 1** If it is not illuminated in green, press  **(Fax)**.
- 2** Press **Menu, 3, 1, 4**.
- 3** Press  or  to select **On** (or **Off**).
Press **Enter**.
- 4** Enter the new Fax Receive Code.
Press **Enter**.
- 5** Enter the new Telephone Answer Code.
Press **Enter**.
- 6** Press **Stop**.

RX Settings
4 . Remote Code

Polling

Polling is the process of retrieving faxes from another fax machine. You can use your machine to 'poll' other machines, or you can have someone poll your machine.

Everyone who is involved in Polling needs to set up their fax machines for Polling. When someone polls your machine to receive a fax, they pay for the call. If you poll someone's fax machine to receive a fax, you pay for the call.

 Some fax machines do not respond to the Polling feature.

Setting up Polling Receive

Polling Receive is when you call another fax machine to receive a fax from it.

1 If it is not illuminated in green, press  (Fax).

2 Press **Menu, 3, 1, 7**.

3 Press  or  to select On (or Off).

RX Settings
7. Poll RX

Press **Enter**.

4 Enter the fax number you are polling.

5 Press **Start**.

The LCD shows Dialing.

Setting up Sequential Polling Receive

Your machine can ask for faxes from several fax units in a single operation (Sequential Polling Receive). Afterwards, a Sequential Polling Report will be printed.

1 If it is not illuminated in green, press  (Fax).

2 Press **Menu, 3, 1, 7**.

3 Press  or  to select On (or Off).

RX Settings
7. Poll RX

Press **Enter**.

4 Enter the fax machines you want to poll using One-Touch, Speed Dial, a Group or the dial pad. You must press **Enter** between each fax number.

5 Press **Start**. Your machine will poll each number or Group number in turn to receive a fax.

Setting the Receive TTI

You can put the receive time and data on the top of each received fax.

1 If it is not illuminated in green, press  (Fax).

2 Press **Menu, 3, 1, 8.**

3 Press  or  to select On (or Off).

RX Settings
8 .Receive TTI

Press **Enter**.

4 Press **Stop**.

 The received time and data are not put into PC-FAX and Internet Fax data.

Setting the Substitute RX

When the paper tray is empty, toner is used up or any other error occurs so that the machine cannot print, if you choose On, incoming faxes will be stored into memory. If you choose Off, incoming fax calls will not be automatically answered until the problem resolves.

1 If it is not illuminated in green, press  (Fax).

2 Press **Menu, 3, 1, 9.**

3 Press  or  to select On (or Off).

RX Settings
9 .Substitute RX

Press **Enter**.

4 Press **Stop**.

 ■ Even if you select Off, if the error occurs during fax reception, the machine will continue receiving the faxes and store into memory.
■ Even if you select Off, if the Remote Retrieve, Fax Forward or Mem Security is selected, the machine will store the faxes into memory.

Telephone services

Your machine supports the Unique Ring telephone service that some telephone companies offer.

-  If you have Call Waiting Caller ID, Voice Mail, RingMaster, an answering service, an alarm system or other custom features on your telephone line, it may affect the way your machine works. (See *Custom features* on page 1-8 and *If you are having difficulty with your machine* on page 12-11.) If you have Voice Mail on your phone line, please read the following carefully.

Unique Ring

The term “Unique Ring” is used to identify a phone company service that is given *many names, depending on the telephone company you are using*. For example, this service may be called SmartRing, RingMaster, Teen-Ring, Indent-a-Call or Indent-a-Ring.

What does your telephone company’s ‘Unique Ring’ do?

Your telephone company’s Unique Ring service allows you to have more than one number on the same phone line. **If you need more than one phone number, it is cheaper than paying for an extra line.** Each phone number has its own unique ring pattern, so you will know which phone number is ringing. This is one way you can have a separate phone number for your machine.

-  Please call your telephone company for availability and rates.

What does sx2100’s ‘Unique Ring’ do?

The sx2100 machine has a Unique Ring feature that allows you to use your machine to take full advantage of the telephone company’s Unique Ring service. The new phone number on your line can just receive faxes.

-  You must pay for your telephone company’s Unique Ring service before you program the machine to work with it.

Do you have Voice Mail?

If you have Voice Mail on the phone line that you will install your new machine on, *there is a strong possibility that Voice Mail and the machine will conflict with each other while receiving incoming calls.* **However, the Unique Ring feature allows you to use more than one number on your line, so both Voice Mail and the machine can work together without any problems.** If each one has a separate phone number, neither will interfere with the other's operations.

If you decide to get the Unique Ring service from the telephone company, you will need to follow the directions below to 'register' the new Unique Ring pattern they give you. This is so your machine can recognize its incoming calls.

-  You can change or cancel the Unique Ring pattern at any time.
- You can switch it off temporarily, and turn it back on later. When you get a new fax number, make sure you reset this feature.

Before you choose the ring pattern to register

You can only register one Unique Ring pattern with the machine. Some ring patterns cannot be registered. The ring patterns below are supported by your machine. Register the one your telephone company gives you.

Ring Pattern	Rings	
1	long-long	
2	short-long-short	
3	short-short-long	
4	very long (normal pattern)	

-  If the ring pattern you received is not on this chart, **please call your telephone company and ask for one that is shown.**

- The machine will only answer calls to its registered number.
- The first two rings are silent on the machine. This is because the fax must «listen» to the ring pattern (to compare it to the pattern that was ‘registered’). (Other telephones on the same line will ring.)
- If you program the machine properly, it will recognize the registered ring pattern of the ‘fax number’ within 2 ring patterns and then answer with a fax tone. When the ‘voice number’ is called, the machine will not answer.

Registering the Unique Ring pattern

Very important!

After you have set the Unique Ring feature to ON, the answer mode is set to Manual automatically. Unless you have a TAM or Voice Mail set up on the Unique Ring number, Manual mode means you must answer all the calls yourself. You cannot change the answer mode to any other mode while the Unique Ring is set to on.

- 1 Press **Menu, 3, 0, 3.**
- 2 Press  or  to select Set.
Press **Enter**.
- 3 Press  or  to select the stored ring pattern you want to use.
Press **Enter**.
(You will hear each pattern as you scroll through the four patterns. Make sure you choose the pattern that the telephone company gave you.)
- 4 Press **Stop**.

Miscellaneous
3. Unique Ring

Turning off the Unique Ring

- 1 Press **Menu, 3, 0, 3.**
- 2 Press  or  to select Off.
Press **Enter**.
- 3 Press **Stop**.

Miscellaneous
3. Unique Ring



If you turn off Unique Ring, the machine will stay in Manual answer mode. You will need to set the Answer Mode again. (See *To select or change your Answer Mode* on page 5-2.)

Caller ID



The Caller ID feature lets you use the Caller ID subscriber service offered by many local telephone companies. This service provides you, by means of the LCD, the name or telephone number of your caller as the line rings.

After a few rings, the LCD shows the telephone number of your caller (and name, if available). Once you pick up the handset, the Caller ID information disappears from the LCD, but the call information remains stored in the Caller ID memory.

- You will see the first 16 characters of the number (or name).
- Out of Area display means call originated outside your Caller ID service area.
- Private Call display means the caller has intentionally blocked transmission of information.

You can print a list of Caller ID information received by your machine. (See *Printing Caller ID List* on page 5-15.)

Caller ID service varies with different carriers. Call your local telephone company to determine the kind of service available in your area.

Viewing Caller ID List

Caller ID memory stores information for up to thirty calls. When the thirty-first call comes in, information about the first call is erased. You can scroll through Caller ID information to review those calls made to your machine.

- 1 Press **Menu, 3, 0, 4.**
- 2 Press  or  to select **Display#.**
Press **Enter.**
If the name was not received, it will not be displayed.
- 3 Press  or  to scroll through the Caller ID memory to select the Caller ID you want to view, and then press **Enter.** The LCD shows the caller's name or number and the date and time of the call.
- 4 Press  to return to the Caller ID listing.
—OR—
Press **Stop.**

Miscellaneous
4.Caller ID

Clearing a Caller ID stored in the memory

For effective use of the memory, we recommend that you clear the Caller IDs stored in memory by pressing **Clear/Back** when the LCD shows each caller ID number or name.

Printing Caller ID List

- 1 Press **Menu, 3, 0, 4.**
- 2 Press  or  to select **Print Report.**
Press **Enter.**
- 3 Press **Start.**
- 4 After printing has finished, press **Stop.**

Miscellaneous
4.Caller ID

Call Waiting

The Call Waiting feature lets you use the Call Waiting subscriber service offered by many local telephone companies. This feature enables you to take a second call on your machine, without disconnecting the first caller.

- 1 To answer a Call Waiting signal while you are talking on the phone, ask the other party if you can put them on Hold to catch the other call.
- 2 Press **Search/Speed Dial** to switch to the second call.
- 3 To switch back to the first call, press **Search/Speed Dial** again.




Either caller can hang up at any time. However, if you hang up you will disconnect both callers.

6 TX Settings

How to enter Fax mode

Before sending faxes, make sure  (Fax) is illuminated in green. If not, press  (Fax) to enter Fax mode. The default setting is Fax.

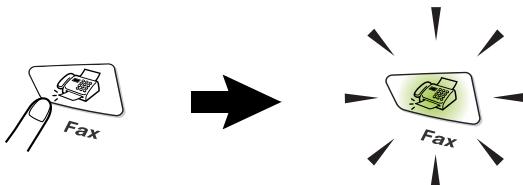

How to dial

There are four ways to dial.

Manual dialing


Press all of the digits of the phone or fax number.



One-Touch dialing


Press the One-Touch Key of the location you want to call. (See *Storing One-Touch Dial numbers* on page 7-1.)

To dial One-Touch numbers 17 to 32, hold down **Shift** as you press the One-Touch Key.

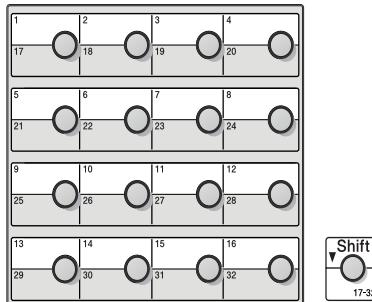


Speed Dialing

Press **Search/Speed Dial**, **#**, and then the three digit Speed Dial number. (See *Storing Speed Dial numbers* on page 7-3.)

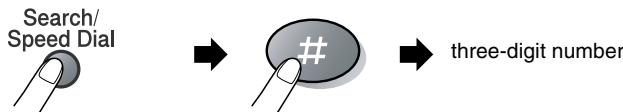

Search

You can search for names you have stored in the One-Touch and Speed Dial memories. Press **Search/Speed Dial** and the navigation keys to search. (See *Storing One-Touch Dial numbers* on page 7-1 and *Storing Speed Dial numbers* on page 7-3.)

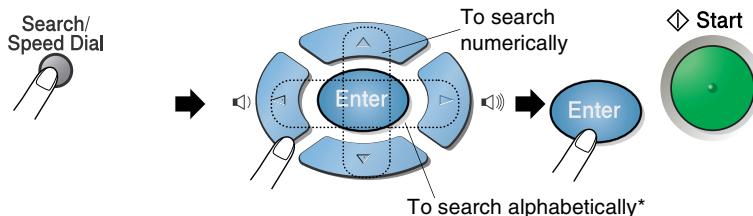

* To search alphabetically, you can use dial pad to enter the first letter of the name you are looking for.

How to fax

Manual transmission

Manual transmission lets you hear the dialing, ringing and fax-receiving tones while sending a fax.

- 1 If it is not illuminated in green, press  (Fax). Load the original document.
- 2 Pick up the handset and listen for a dial tone.
- 3 Enter the fax number using the dial pad, One-Touch, Speed Dial or Search.
(See *One-Touch dialing* on page 6-2 and *Speed Dialing* on page 6-2.)
- 4 When you hear the fax tone, press **Start**.
- 5 Replace the handset.

Automatic transmission

This is the easiest way to send a fax.

 You must not pick up the handset phone or press **Monitor** to listen for a dial tone.

- 1 If it is not illuminated in green, press  (Fax). Load the original document.
- 2 Enter the fax number using the dial pad, One-Touch, Speed Dial or Search.
(See *One-Touch dialing* on page 6-2 and *Speed Dialing* on page 6-2.)
- 3 Press **Start**.

Out of Memory message

If you get an Out of Memory message while scanning the first page of a fax, press **Stop** to cancel the fax. If you get an Out of Memory message while scanning a subsequent page, you will have the option to press **Start** to send the pages scanned so far, or to press **Stop** to cancel the operation.

Sending a fax at the end of a conversation

At the end of a conversation you can send a fax to the other party before you both hang up.

- 1** Ask the other party to wait for fax tones (beeps) and then to press **Start** before hanging up.
- 2** If it is not illuminated in green, press  (Fax). Load the original document.
Press **Start**.
- 3** Replace the handset.

Basic sending operations

Sending faxes using multiple settings

When you send a fax you can choose any combination of these settings: cover sheet, contrast, resolution, overseas mode, delayed fax timer, polling transmission or real time transmission. After each setting is accepted, the LCD will ask if you want to enter more settings:

Press **1** to select more settings. The LCD will return to the TX Settings menu.

Other Settings
1 . Yes 2 . No

—OR—

Press **2** if you have finished choosing settings and go to the next step.

Contrast

If your original document is very light or very dark, you may want to set the contrast.

Use **Light** to send a light original document.

Use **Dark** to send a dark original document.

1 If it is not illuminated in green, press  (Fax). Load the original document.

2 Press **Menu, 3, 2, 1.**

TX Settings
1 . Contrast

3 Press  or  to select **Auto**, **Light** or **Dark**.

Press **Enter**.

4 Press **1** if you want to choose more settings and the LCD will return to the TX Settings menu.

—OR—

Press **2** if you have finished choosing settings for this page, and then go to Step 5.

5 Enter a fax number.

6 Press **Start**.

Fax Resolution

When you have an original document in the ADF you can use the **Resolution** key to change the setting temporarily (for this fax only).

If it is not illuminated in green, press  (Fax). Press

Resolution repeatedly until the LCD shows the setting you want.

—OR—

You can change the default setting.

1 If it is not illuminated in green, press  (Fax).

2 Press **Menu, 3, 2, 2.**

3 Press  or  to select the resolution you want.

TX Settings
2.Resolution

Press **Enter**.

4 Press **Stop**.

Standard: Suitable for most typed original documents.

Fine: Good for small print and transmits a little slower than Standard resolution.

EX-Fine: Good for small print or artwork and transmits slower than Fine resolution.

Photo: Use when the original document has varying shades of gray. This has the slowest transmission time.

Manual and automatic fax Redial

If you are sending a fax manually and the line is busy, press **Redial/Pause**, and then press **Start** to try again. If you want to make a second call to the last number dialed, you can save time by pressing **Redial/Pause** and **Start**.

Redial/Pause only works if you dialed from the control panel.

If you are sending a fax automatically and the line is busy, the machine will automatically redial one time after five minutes.

Dual Access

You can dial a number, and begin scanning the fax into memory—even when the machine is receiving, sending or printing a fax from memory. The LCD shows the new job number.

 If you get an *Out of Memory* message while scanning the first page of a fax, press **Stop** to cancel scanning. If you get an *Out of Memory* message while scanning a subsequent page, you can press **Start** to send the pages scanned so far, or press **Stop** to cancel the operation.

- 1 If it is not illuminated in green, press  **(Fax)**. Load the original document.
- 2 Enter the fax number.
- 3 Press **Start** to send the fax.

The machine starts scanning the first page and the LCD shows the job number (#XXX) of the fax. You can repeat Steps 1 to 3 for the next fax.

Real Time Transmission

When you are sending a fax, the machine will scan the original documents into the memory before sending. Then, as soon as the phone line is free, the machine will start dialing and sending.

If the memory becomes full, the machine will send the original document in real time (even if TX from ADF is set to Off).

Sometimes, you may want to send an important original document immediately, without waiting for memory transmission. You can set TX from ADF to On for all original documents or for the next fax only.

1 If it is not illuminated in green, press  (Fax). Load the original document.

2 Press **Menu, 3, 2, 5**.

3 To change the default setting, press  or  to select On (or Off).

TX Settings
5.TX from ADF

Press **Enter**.

Go to Step 5.

—OR—

For the next fax transmission only, press  or  to select Next Fax Only.

Press **Enter**.

4 Press  or  to select Next Fax:On (or Next Fax:Off).

Press **Enter**.

5 Press **1** if you want to choose more settings and the LCD will return to the TX Settings menu.

—OR—

Press **2** if you have finished choosing settings.

6 Enter the fax number.

7 Press **Start** to send the fax.

Checking job status

Check which jobs are still waiting in the memory to be sent. (If there are no jobs, the LCD shows No Jobs Waiting.)

- 1** Press **Menu, 3, 6.**
- 2** If you have more than one job waiting, press  or  to scroll through the list.
- 3** Press **Stop.**

Fax
6.View/Del. Jobs

Canceling a fax in progress

If you want to cancel a fax, while the machine is scanning, dialing or sending it, press **Stop.**

Canceling a scheduled job

You can cancel a fax job that is stored and waiting in the memory. (See *Checking job status* on page 6-9.)

- 1** Press **Menu, 3, 6.**
Any jobs that are waiting will appear on the LCD.
- 2** If you have more than one job waiting, press  or  to select the job you want to cancel.
Press **Enter.**
—OR—
If you only have one job waiting, go to Step 3.
- 3** Press **1** to cancel.
To cancel another job go to Step 2.
—OR—
Press **2** to exit without canceling.
- 4** Press **Stop.**

Advanced sending operations

Composing the electronic Cover Sheet

The Cover Sheet is created at the receiving machine. Your Cover Sheet includes the name stored in the One-Touch or Speed Dial memory. If you're dialing manually, the name is left blank.

The Cover Sheet shows your Machine ID and the number of sheets you're sending. (See *Setting the Machine ID* on page 4-2.) If you have Cover Sheet set to On (**Menu, 3, 2, 7**), the number of sheets is left blank.

You can select a comment to include on your Cover Sheet.

1. Comment Off
2. Please Call
3. Urgent
4. Confidential

Instead of using one of the preset comments, you can enter two personal messages of your own, up to 27 characters long. Use the chart on page 4-3 for help entering characters.

(See *Composing your own comments* on page 6-11.)

5. (User Defined)
6. (User Defined)

Most of the TX Settings settings are temporary to allow you to make changes for each fax you send. However, when you set up your Cover Sheet and Cover Sheet Comments, you are changing the default settings so they will be available while faxing.

Composing your own comments

You can set up two comments of your own.

- 1** If it is not illuminated in green, press  (Fax).
- 2** Press **Menu, 3, 2, 8**.
- 3** Press  or  to choose 5 or 6 for your own comment.

TX Settings
8.Cover Message
- Press **Enter**.
- 4** Use the dial pad to enter your customized comment.
Press **Enter**.
(See *Entering text* on page 4-3.)
- 5** Press **1** if you want to choose more settings and the LCD will return to the TX Settings menu.
—OR—
Press **2** to exit.

Cover sheet for the next fax only

This feature does not work without first setting the Machine ID. So make sure it has been set. (See *Setting the Machine ID* on page 4-2.) If you only want to send a Cover Sheet with a particular fax, this Cover Sheet will include the number of sheets in your original document.

- 1** If it is not illuminated in green, press  **(Fax)**. Load the original document.
- 2** Press **Menu, 3, 2, 7**.
- 3** When LCD shows Next Fax Only.

TX Settings
7.Cover Sheet

Press **Enter**.
- 4** Press  or  to select Next Fax:On (or Next Fax:Off).
Press **Enter**.
- 5** Press  or  to select one of the standard or your own comments.
Press **Enter**.
- 6** Enter two digits to show the number of pages you are sending.
Press **Enter**.
(For example, press **0, 2** for 2 pages or enter **0 0** to leave the number of sheets blank. If you make a mistake, press  to back up and re-enter the number of sheets.)
- 7** Press **1** if you want to choose more settings and the LCD will return to the **TX Settings** menu.
—OR—
Press **2** if you have finished choosing settings.
- 8** Enter the fax number you're calling.
- 9** Press **Start**.

Send a cover sheet for all faxes

This feature does not work without the Machine ID. Please be sure it has been set before continuing. (See *Setting the Machine ID* on page 4-2.)

You can set the machine to send a cover sheet whenever you send a fax. The number of sheets in your fax is not included when you use this setting.

- 1 If it is not illuminated in green, press  (Fax).
- 2 Press **Menu, 3, 2, 7**.
- 3 Press  or  to select **On**.
Press **Enter**.
- 4 If you selected **On**, Press  or  to select one of the standard or your own comments.
Press **Enter**.
- 5 Press **1** if you want to choose more settings and the LCD will return to the **TX Settings** menu.
—OR—
Press **2** to exit if you have finished choosing settings.

TX Settings
7.Cover Sheet

Using a printed cover sheet

If you prefer to use a printed cover sheet that you can write on, you can print the sample sheet and attach it to your fax.

- 1 If it is not illuminated in green, press  (Fax).
- 2 Press **Menu, 3, 2, 7**.
- 3 Press  or  to select **Print Sample**.
Press **Enter**.
- 4 Press **Start**. Your machine prints a copy of your cover sheet.
- 5 Press **Stop**.

TX Settings
7.Cover Sheet

Broadcasting

Broadcasting is when the same fax message is automatically sent to more than one fax number. You can include Groups, One-Touch, Speed Dial numbers, and up to 50 manually dialed numbers in the same broadcast.

Press **Enter** between each of the numbers. Use **Search/Speed Dial** to help you choose the numbers easily. To set up Group dial numbers, see *Setting up Groups for Broadcasting* on page 7-5.

After the broadcast is finished, a Broadcast Report will be printed to let you know the results.

- 1** If it is not illuminated in green, press  (Fax). Load the original document.
- 2** Enter a number using One-Touch, Speed Dial, a Group number, Search or manual dialing using the dial pad.
(Example: Group number)
- 3** When the LCD displays the fax number or name of the other party, press **Enter**.
You will be asked to press the next number. Enter the next number.
(Example: Speed Dial number)
- 4** When the LCD displays the fax number or name of the other party, press **Enter**.
- 5** Enter another fax number.
(Example: Manual dialing using the dial pad.)
- 6** Press **Start**.



- If you did not use up any of the numbers for Groups, access codes or credit card numbers, you can 'broadcast' faxes to as many as 382 different numbers.
- The available memory will vary depending on the types of jobs in the memory and the number of locations used for broadcasting. If you broadcast to the maximum numbers available, you will not be able to use Dual Access and Delayed fax.
- Enter the long dialing sequence numbers as you would normally, but remember that each One-Touch and Speed Dial number counts as one number, so the number of locations you can store becomes limited.
- If the memory is full, press **Stop** to stop the job or if more than one page has been scanned, press **Start** to send the portion that is in the memory.

Overseas Mode

If you are having difficulty sending a fax overseas due to possible interference on the phone line, we recommend that you turn on the Overseas Mode. After you send a fax using this feature, the feature will turn itself off.

1 If it is not illuminated in green, press  (Fax). Load the original document.

2 Press **Menu, 3, 2, 9.**

3 Press  or  to select On (or off).

TX Settings
9.Overseas Mode

Press **Enter**.

4 Press **1** if you want to choose more settings and the LCD will return to the TX Settings menu.

—OR—

Press **2** if you have finished choosing settings.

5 Enter the fax number you're calling.

6 Press **Start**.

Delayed Send

During the day you can store up to 50 faxes in the memory to be sent within 24 hours. These faxes will be sent at the time of day you enter in Step 3.

1 If it is not illuminated in green, press  (Fax). Load the original document.

2 Press **Menu, 3, 2, 3.**

3 Enter the time you want the fax to be sent (in 24-hour format).

TX Settings
3.Delayed Send

Press **Enter**.

(For example, enter 19:45 for 7:45 PM.)

Press **1** to leave the original documents waiting in the ADF.

—OR—

Press **2** to scan the original document into memory.

4 Press **1** if you want to choose more settings and the LCD will return to the TX Settings menu.

—OR—

Press **2** if you have finished choosing settings.

5 Enter the fax number.

6 Press **Start**.

Delayed Batch Transmission

Before sending the delayed faxes, your machine will help you economize by sorting all the faxes in the memory by destination and scheduled time. All delayed faxes that are scheduled to be sent at the same time to the same fax number will be sent as one fax to save transmission time.

1 If it is not illuminated in green, press  (Fax).

2 Press **Menu, 3, 2, 4.**

3 Press  or  to select On (or Off).

TX Settings
4.Batch TX

Press **Enter**.

4 Press **Stop**.

Setting up Polled Transmission

Polled Transmission is when you set up your machine to wait with an original document so another fax machine can call and retrieve it.

- 1 If it is not illuminated in green, press  (Fax). Load the original document that is going to be retrieved.
- 2 Press **Menu, 3, 2, 6.**
- 3 Press  or  to choose On (or Off).
Press **Enter**.
- 4 Press **1** for Doc to leave the paper original document waiting in the ADF.

TX Settings
6.Poll

—OR—

Press **2** for Memory to scan the original document into the memory.

- 5 Press **1** if you want to choose more settings and the LCD will return to the TX Settings menu.
—OR—
- 6 Press **2** if you have finished choosing settings, and go to step 6.

- 6 Press **Start**.

If you chose Memory in Step 4, the machine starts scanning the original document.

- If you press **1** in Step 4, the original document remains in the ADF until your machine is polled. If you must use your machine before the polled transmission occurs, you must first cancel this job.
- If you press **2** in Step 4, the original document will be stored and can be retrieved from any other fax machine until you delete the fax in memory by using the Canceling a Job setting. (See *Canceling a scheduled job* on page 6-9.)

Memory Security

Memory Security lets you prevent unauthorized access to the machine. You will not be able to continue to schedule Delayed Send or Polling jobs. However, any pre-scheduled Delayed Send Faxes will be sent when you turn Memory Security On, so they will not be lost.

If you have selected Remote Retrieve or Fax Forward (**Menu, 3, 5, 1.**) before you turn Memory Security On, then Fax Forwarding or Remote Retrieval will continue to work.

While Memory Security is On the following operations are available:

- Receiving faxes into memory (limited by memory capacity)
- Fax Forwarding
- Remote Retrieval

While Memory Security is On the following operations are NOT available:

- Sending faxes
- Printing received faxes
- Copy
- PC printing
- PC scanning

 To print the faxes in memory, turn Memory Security Off.

Setting up the password

- 1 Press **Menu, 3, 0, 1.**
- 2 Enter a 4-digit number for the password.
Press **Enter**.
If you are entering the password for the first time, the LCD shows **Verify**.
- 3 Re-enter the password.
Press **Enter**.

Miscellaneous
1.Mem Security

Turning Memory Security on

- 1 Press **Menu**, **3, 0, 1**.
- 2 Press  or  to select **Set Security**.
- 3 Press **Enter**.

Miscellaneous
1. Mem Security

The machine goes offline and the LCD shows **Secure Mode**.

 If there is a power failure, the data in the memory will remain for up to 4 days.

Turning Memory Security off

- 1 Press **Menu**.
Enter the registered 4-digit password and press **Enter**.
- 2 Memory Security is automatically turned off and the LCD shows the Date and Time.

 If you enter the wrong Password, the LCD shows **Wrong Password** and stays offline. The machine will stay in Secure Mode until the registered password is entered.


Storing numbers for easy dialing

You can set up your machine to do three types of easy dialing: One-Touch, Speed Dial and Groups for Broadcasting faxes.

 *If you lose electrical power, the auto dial numbers that are in the memory will not be lost.*

Storing One-Touch Dial numbers

Your machine has 16 One-Touch keys where you can store 32 fax or phone numbers for automatic dialing. To access numbers 17 to 32, hold down **Shift** as you press the One-Touch key. When you press a One-Touch key the LCD shows the name, if you stored it, or the number. (See *One-Touch dialing* on page 6-2.)

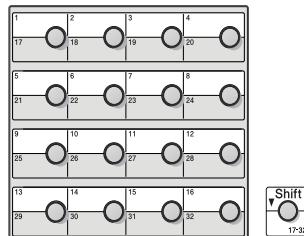

One-Touch keys are the 16 keys (numbers 1–32) located on the left side of the control panel.

- 1 Press **Menu, 3, 3, 1.**
- 2 Press the One-Touch key where you want to store a number.

Dialer Setting
1. One-Touch

If you have not installed the optional Network board, go to Step 4.

—OR—

If you have installed the optional Network board, the machine will ask you if the One-Touch key is for a fax/telephone number or an E-mail address. Go to Step 3.

3 Press  or  to select Fax/Tel.

One-Touch
Fax/Tel

Press **Enter**.

4 Enter the phone or fax number (up to 20 digits).

Press **Enter**.

—OR—

If you purchased the optional Network board, you can enter an E-mail address, then press **Enter**.

■ If you want to enter a pause in the dialing sequence (for example, to access an outside line), press **Redial/Pause** as you are entering the digits.

Each key press of **Redial/Pause** enters a 3.5 second pause when the number is dialed, displayed by a dash on the screen.

5 Use the dial pad to enter the name (up to 15 characters).

Press **Enter**.

(You can use the chart on page 4-3 to help you enter letters.)

—OR—

Press **Enter** to store the number without a name.

6 Go to Step 2 to store another One-Touch number.

—OR—

Press **Stop**.

When you dial an auto dial number, the LCD shows the name and number you have stored, or, if you have not stored a name, only the number you have stored.

Storing Speed Dial numbers

You can store Speed Dial numbers, so that when you dial you will only have to press a few keys (**Search/Speed Dial**, **#**, the three-digit number, and **Start**). The machine can store 300 Speed Dial numbers.

- 1 Press **Menu, 3, 3, 2.**
- 2 Use the dial pad to enter a three-digit Speed Dial location number (001-300).
(For example, press **005**.)

Dialer Setting
2.Speed Dial

Press **Enter**.

If you have not installed the optional Network board, go to Step 4.

—OR—

If you have installed the optional Network board, the machine will ask you if the Speed Dial is for a fax/telephone number or an E-mail address. Go to Step 3.

- 3 Press  or  to select Fax/Tel.

Speed Dial
Fax/Tel

Press **Enter**.

- 4 Enter the phone or fax number (up to 20 digits).

Press **Enter**.

—OR—

If you purchased the optional Network board, you can enter an E-mail address, then press **Enter**.

- 5 Use the dial pad to enter the name (up to 15 characters).

Press **Enter**.

(You can use the chart on page 4-3 to help you enter letters.)

—OR—

Press **Enter** to store the number without a name.

- 6 Go to Step 2 to store another Speed Dial number.

—OR—

Press **Stop**.

Changing One-Touch and Speed Dial numbers

If you try to store a One-Touch or Speed Dial number where a number has already been stored, the LCD will show the name that has been stored there (or number) and will ask you to do one of the following:

- 1 Press **1** to change the stored number.

#005:MIKE
1.Change 2.Exit

—OR—

Press **2** to exit without making a change.

- 2 Enter a new number.

Press **Enter**.

- To erase the whole number or whole name, press **Clear/Back** repeatedly until all digits or letters are deleted.

To erase one digit or letter, use  or  to position the cursor under it, and then press **Clear/Back**.

- If you want to insert characters, use  or  to position the cursor where you want to insert them, and then type.

- 3 Follow the directions beginning at Step 5 in Storing One-Touch Dial numbers and Storing Speed Dial numbers. (See *Storing One-Touch Dial numbers* on page 7-1 and *Storing Speed Dial numbers* on page 7-3.)

Setting up Groups for Broadcasting

Groups, which can be stored on a One-Touch key or a Speed Dial location, allow you to send the same fax message to many fax numbers by pressing only a One-Touch key and **Start** or **Search/Speed Dial**, #, the three-digit location and **Start**.

First, you will need to store each fax number as a One-Touch or Speed Dial number. Then, you can combine them into a Group, *Each Group uses up a One-Touch key or a Speed Dial location*. Finally, you can have up to six small Groups, or you can assign up to 331 numbers to one large Group.

(See *Storing Speed Dial numbers* on page 7-3 and *Changing One-Touch and Speed Dial numbers* on page 7-4.)

- 1 Press **Menu, 3, 3, 3.**
- 2 Decide where you wish to store the Group.

Dialer Setting
3. Setup Groups

—AND—

Press a One-Touch key.

—OR—

Press **Search/Speed Dial** and enter the three-digit location, and then press **Enter**.

(For example, press One-Touch key 2 for Group 1.)

- 3 Use the dial pad to enter the Group number.

Setup Groups
Setup Group:GR1

Press **Enter**.

(For example, press **1** for Group 1.)

- 4 To include One-Touch or Speed Dial numbers in the Group, enter them as if you were dialing.

For example, for One-Touch key 05, press One-Touch key **05**.

For Speed Dial location 009, press **Search/Speed Dial**, then press **009** on the dial pad. The LCD shows *** 005, #009**.

- 5 Press **Enter** to accept the numbers for this Group.

- 6 Use the dial pad and the chart on page 4-3 to enter a name for the Group.

Press **Enter**.

(For example, **NEW CLIENTS**)

7 Press **Stop**.

 You can print a list of all One-Touch and Speed Dial numbers. (See *Printing reports* on page 9-3.) Group numbers will be marked in the column of 'Group'.

Dialing operations

You can use the machine to make voice telephone calls by dialing manually or by using Search, One-Touch Dial or Speed Dial memory. (For instructions, see *How to dial* on page 6-1.) You can use the handset to make and receive calls.

When you dial a Quick-Dial number, the LCD shows the name you have stored, or if you have not stored a name, the fax number you have stored.

Access codes and credit card numbers

Sometimes you may want to choose from several long distance carriers when you make a call. Rates may vary depending on the time and destination. To take advantage of low rates, you can store the access codes or long-distance carriers and credit card numbers as One-Touch and Speed Dial numbers. You can store these long dialing sequences by dividing them and setting them up on separate keys in any combination. You can even include manual dialing using the dial pad.

The combined number will be dialed in the order that you entered it as soon as you press **Start**.

(See *Storing One-Touch Dial numbers* on page 7-1.)

For example, you can store '555' on One-Touch key 03 and '7000' on One-Touch key 02. If you press One-Touch key **03**, One-Touch key **02**, and **Start**, you will dial '555-7000'.

To temporarily change a number, you can substitute part of the number with manual dialing using the dial pad.

For example, to change the number to 555-7001 you could press One-Touch key **03** and then press **7001** using the dial pad.

 If you must wait for another dial tone or signal at any point in the dialing sequence, store a pause there in the number by pressing **Redial/Pause**. Each key press adds a 3.5-second delay.

Pause

Press **Redial/Pause** to insert a 3.5-second pause between numbers. If you are dialing overseas, you can press **Redial/Pause** as many times as needed to increase the length of the pause.

Tone or Pulse

If you have a Pulse dialing service, but need to send Tone signals (for example, for telephone banking), follow the instructions below. If you have Touch Tone service, you will not need this feature to send tone signals.

- 1** Lift the handset.
- 2** Press **#**. Any digits dialed after this will send tone signals.
- 3** When you hang up, the machine will return to the Pulse dialing service.

Telephone (voice) operations

Making a telephone call

- 1** Pick up the handset.

—OR—

Press **Monitor**.

- 2** When you hear a dial tone, dial the call using the dial pad, One-Touch, Speed Dial and Search.

 If you pressed **Monitor** to dial, pick up the handset when the other person answers. (The speaker works only one way. The other person will not be able to hear you unless you pick up the handset.)

To hang up, replace the handset.

8 Remote Fax Options

Fax Forwarding

Programming a Fax Forwarding number

When Fax Forwarding is selected, your machine stores the received fax in the memory. Then it dials the fax number you have programmed and forwards the fax message.

- 1 Press **Menu, 3, 5, 1.**
- 2 Press  or  to select **Fax Forward**.

Remote Fax Opt
1.RMT RTV/FX FWD

Press **Enter**.

The LCD will ask you to enter the fax number to which faxes will be forwarded.

- 3 Enter the forwarding number (up to 20 digits), using a One-Touch key or using **Search/Speed Dial** and the three-digit location.

 If you store a group on a One-Touch key or a Speed Dial location, the faxes will be forwarded to several fax numbers.

- 4 Press **Enter**.
- 5 Press  or  to select **On** (or **Off**) and press **Enter**.

Local Print
On

If you set **Local Print** to **On**, the fax will be also print at your machine.

- 6 Press **Stop**.

- When the line is busy, the machine will automatically redial up to 30 times at one hour intervals. (If you forward the faxes to an e-mail address, the machine will retry to send them up to 100 times at five minute intervals.) If redialing was failed, the fax data will remain in the memory. In the case, you can set the machine to forward the remaining data again. Press **Menu, 3, 5, 1**, select **Fax Forward**. When the LCD asks if you want to forward the remaining fax data, select **Yes** and press **Enter**.
- If there are faxes in the memory when you turn **RMT RTV/FX FWD** to **off**, the LCD will ask if you want to erase the faxes in the memory.

Setting Remote Retrieval

You can call your machine from any fax machine using touch tone and use a Remote Retrieval Passcode and other button presses to retrieve fax messages. *Cut out the Remote Retrieval Access Card on the last page and keep it in your wallet as an aid.* Before you use the remote access and retrieval features, you have to set up your own code. The default code is inactive code (---*).

- 1 Press **Menu, 3, 5, 1.** The screen prompts you to choose a fax setting.
- 2 Press  or  to select **Remote Retrieve**, and then press **Enter**.
- 3 Enter a three-digit code using numbers 0 - 9, * or #. Press **Enter**. (The preset '*' cannot be changed.)
- 4 Press  or  to select **On** (or **Off**) and press **Enter**.
- 5 Press **Stop**.

Remote Fax Opt
1.RMT RTV/FX FWD

RMT RTV/FX FWD
Passcode:---*

Local Print
On



If there are faxes in memory when you turn RMT RTV/FX FWD to Off. The screen prompts you to print faxes in memory.

Print Fax
1.Yes 2.No

If you press **1**, all fax data is printed and erased and then RMT RTV/FX FWD is turned Off.

If you press **2**, the screen prompts you to erase faxes in memory.

Erase All Fax?
1.Yes 2.No

Local Print

If you have selected **Remote Retrieve** or **Fax Forward** and set **Local Print** to **On**, your machine *automatically* prints faxes as they are received into memory. This is a safety feature in case the power goes out so you won't lose your message.

Using R R Passcode

- 1** Dial your fax number from a telephone or another fax machine using touch tone.
- 2** When your machine answers, immediately enter your R R Passcode (3 digits followed by *).
- 3** The machine signals if it has received fax messages:
1 long beep — Fax messages
No beeps — No fax messages
- 4** The machine gives two short beeps, which tells you to enter a command. The machine will hang up if you wait longer than 30 seconds to enter a command. The machine will beep three times, if you enter an invalid command.
- 5** Press **90** to reset the machine when you have finished.
- 6** Hang up.

Remote commands

Follow the commands below to access features when you are away from the machine. When you call the machine and enter your R R Passcode (3 digits followed by *), the system will give two short beeps and you must enter a remote command.

Remote commands	Operation details
95 Change the Remote Retrieval / Fax Forwarding	
1 Off	You can select OFF after you have retrieved or erased all your messages.
2 Remote Retrieval	If you hear one long beep, the change has been accepted. If you hear three short beeps, you cannot change it because the conditions have not been met (for example, registering a fax forwarding).
96 Retrieve a fax	
2 Retrieve all faxes	Enter the number of a remote fax machine to receive stored fax messages. (See <i>Retrieving fax messages</i> on page 8-5.)
3 Erase faxes from the memory	If you hear one long beep, you can erase fax messages from the memory.
97 Check the receiving status	
1 Fax	You can check whether your machine has received any faxes. If it has, you will hear one long beep. If not, you will hear three short beeps.
98 Change the Answer Mode	
1 External TAM	If you hear one long beep, you can change the Answer Mode.
2 Fax/Tel	
3 Fax Only	
90 Exit	After a long beep, you can exit Remote Retrieval.

Retrieving fax messages

- 1** Dial your fax number.
- 2** When your machine answers, immediately enter your R R Passcode (3 digits followed by *). If you hear one long beep, you have messages.
- 3** As soon as you hear two short beeps, use the dial pad to press **962**.
- 4** Wait for the long beep, and then use the dial pad to enter the number of the remote fax machine where you want your fax messages sent to followed by ## (up to 20 digits).
 -  You cannot use * and # as dial numbers. However, press # if you want to store a pause.
- 5** Hang up after you hear your machine beep. Your machine will call the other machine, which will then print your fax messages.

9 Printing reports

Fax settings and journal

You need to set up the Job Status Report and Journal Interval in the menu table.

Press **Menu, 3, 4, 1.**

—OR—

Press **Menu, 3, 4, 2.**

Setup Reports
1.Job Status Rpt

Setup Reports
2.Journal

Customizing the Job Status Report

You can use the Job Status Report as proof that you sent a fax. This report lists the time and date of transmission and whether the transmission was successful (OK). If you select All or All+Image, the report will print for every fax you send.

If you send a lot of faxes to the same place, you may need more than the job numbers to know which faxes you must send again. Selecting All+Image or Inc+Image will print a section of the fax's first page on the report to help you remember.

 When the feature is Incomplete, the Report will only print if there is a transmission error. (NG).

1 Press **Menu, 3, 4, 1.**

Job Status Rpt
Incomplete

2 Press  or  to select

Incomplete, Inc+Image, All or
All+Image.

Press **Enter**.

3 Press **Stop**.

Setting the Journal Interval

You can set the machine to print the Journal at specific intervals (every 50 faxes, 6, 12 or 24 hours, 2 or 7 days). If you set the interval to **Off**, you can print the report by following the Steps on the next page.

The default setting is **Every 50 Faxes**.

1 Press **Menu, 3, 4, 2**.

2 Press  or  to choose an interval. Press **Enter**.

(If you choose 7 days, the LCD will ask you to choose a day on which to begin the 7-day countdown.)

Setup Reports
2.Journal

Journal
Every 50 Faxes

3 Enter the time to begin printing in 24-hour format.

Press **Enter**.

(For example: enter 19:45 for 7:45 PM.)

4 Press **Stop**.

 If you select 6, 12, 24 hours, 2 or 7 days, the machine will print the report at the selected time and then erase all jobs from its memory. If the machine's memory becomes full with 200 jobs before the time you selected has passed, the machine will print the Journal early and then erase all jobs from memory. If you want an extra report before it is due to print, you can print it without erasing the jobs from memory.

 If you select **Every 50 Faxes**, the machine will print the Journal when the machine has stored 50 jobs.

Printing reports

Five reports are available:

1. Help List	Prints the Help List so you can see at-a-glance how to quickly program your machine.
2. Dialer Dir	Lists names and numbers stored in the One-Touch and Speed Dial memory, in numerical order.
3. Journal	Lists information about the last incoming and outgoing faxes. (TX means Transmit.) (RX means Receive.)
4. Job Status Rpt	Prints a Transmission Verification Report for your last transmission.
5. Mach. Settings	Lists your settings.
6. Order Form	You can print a supplies order form that you can fax to request new supplies.

How to print a report

- 1 Press **Menu**, **6**.
- 2 Press  or  to select the report you want.
Press **Enter**.
—OR—
Enter the number of the report you want to print.
For example, press **1** to print the Help List.
- 3 Press **Start**.


10 Making copies

Using the machine as a copier

You can use your machine as a copier, making up to 99 copies at a time.


Enter Copy mode

Before making copies, make sure that  (Copy) is illuminated in green. If it is not, press  (Copy) to enter **Copy** mode. The default setting is Fax. You can change the number of seconds or minutes that the machine stays in Copy mode after a copy operation. (See *Setting the Mode Timer* on page 4-5.)

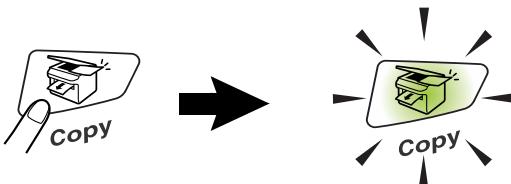

The printable area of your machine begins at approximately 0.17 in. (4.32 mm) from both sides and 0.12 in. (3 mm) from the top or bottom of the paper.

Ex: Letter (Original) → Letter (Paper)

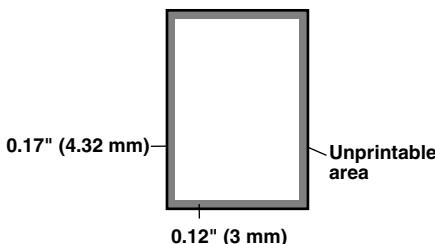

 While the machine is copying, incoming faxes will be received into the memory instead of being printed.

Making a single copy

- 1** Press  **(Copy)** to illuminate it in green. Place the original document face down in the ADF.
- 2** Press **Start**.
Do **NOT** pull on the original document while copying is in progress.
 To stop copying and eject the original document, press **Stop**.

Making multiple copies

- 1** Press  **(Copy)** to illuminate it in green. Place the original document face down in the ADF.
- 2** Use the dial pad to enter the number of copies you want (up to 99).
- 3** Press **Start**.
 To sort the copies, press the **Options** key. (See *Sorting copies* on page 10-12.)

Out of Memory message

If the memory becomes full while you are making copies, the LCD message will guide you through the next step.

Out of Memory

If the Out of Memory message appears, press **Stop** to cancel or **Start** to copy scanned pages. You will need to clear some jobs from the memory before you can continue.

 To gain extra memory, you can turn off Fax Storage.

—OR—

Print the faxes that are in the memory. (See *Printing a fax from the memory* on page 5-5.)

When you get an Out of Memory message, you may be able to make copies if you first print incoming faxes in the memory to restore the memory to 100%.


 Then if this error message appears more than once you may wish to consider increasing the memory size. For more information on how to increase the memory size, see *Memory board* on page 13-1.

Using the Copy keys (Temporary settings)

When you want to change the settings only for the next copy, use the Temporary Copy Keys.

You can improve your copies by using the Temporary Copy Keys: Enlarge/Reduce, Contrast, Mode, and Options. These settings are *temporary*, and the machine returns to Fax mode 1 minute after it finishes copying. If you want to use these temporary settings again, place the next original document in the ADF within that time. However, if you have set the Mode Timer for Copy and Scan modes 0 to 30 seconds, the machine returns to the default settings after the number of seconds that has been set for Mode Timer. (See *Setting the Mode Timer* on page 4-5.)

Temporary Copy Keys —

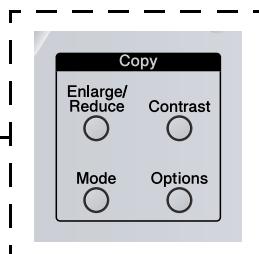

Enlarge/Reduce

You can select the following enlargement or reduction ratios.

Auto sets the machine to calculate the reduction ratio that fits the size of your paper.

Custom (25 – 400%) allows you to enter a ratio from 25% to 400%.

Press Enlarge/Reduce .	100%
	104% (EXE → LTR)
	141% (A5 → A4)
	200%
	Auto
	Custom (25 – 400%)
	50%
	70% (A4 → A5)
	78% (LGL → LTR)
	83% (LGL → A4)
	85% (LTR → EXE)
	94% (A4 → LTR)
	97% (LTR → A4)

- 1 Press  **(Copy)** to illuminate it in green. Place the original document face down in the ADF.
- 2 Use the dial pad to enter the number of copies you want (up to 99).
- 3 Press **Enlarge/Reduce**.

4 Press  or  to select the enlargement or reduction ratio you want.

Press **Enter**.

—OR—

You can select **Custom** (25 – 400%) and press **Enter**.

Use the dial pad to enter an enlargement or reduction ratio from 25% to 400%.

Press **Enter**.

(For example, press **5 3** to enter 53%.)

5 Press **Start**.

—OR—

Press other temporary copy keys for more settings.



Page layout Copy Options (2in1, 4in1 (P) or 4in 1 (L)) are not available with **Enlarge/Reduce**.

Copy Mode (type of original document)

You can select the Copy Mode for your type of original document. The default setting is **Auto**.

- 1** Press  **(Copy)** to illuminate it in green. Place the original document face down in the ADF.
- 2** Use the dial pad to enter the number of copies you want (up to 99).
- 3** Press **Mode**.
- 4** Press  or  to choose the type of original document (Auto, Text or Photo).

Press **Enter**.

- 5** Press **Start**.

—OR—

Press other Temporary Copy keys for more settings.

Auto : Suitable for original documents that contain both text and photographs.

Text : Suitable for original documents containing only text.

Photo : Suitable for copying photographs.

Contrast

You can adjust copy contrast to make copies darker or lighter.

- 1** Press  **(Copy)** to illuminate it in green. Place the original document face down in the ADF.
- 2** Use the dial pad to enter the number of copies you want (up to 99).
- 3** Press **Contrast**.
- 4** Press  to make a copy darker.
—OR—
Press  to make a copy lighter.
Press **Enter**.
- 5** Press **Start**.
—OR—
Press other Temporary Copy keys for more settings.

Options

Use the **Options** key to set the following copy settings only for the next copy.

Press Copy Options	Menu Selections  +  select	Options  +  select	Factory Setting	Page
Options 	Page Layout	Off(1 in 1) 2 in 1 4 in 1(P) 4 in 1(L)	Off (1 in 1)	10-10
	Stack/Sort	Stack Sort	Stack	10-12

After you choose your settings by pressing **Enter**, the LCD shows Press Start.

Press **Start** if you're finished choosing settings.

—OR—

Press **Options** and  or  to select more settings.

N in 1 copy (Page Layout)

You can save paper by copying either two or four pages onto one page. Please make sure paper size is set to A4, Letter or Legal.


- 1 Press  **(Copy)** to illuminate it in green. Place the original document face down in the ADF.
- 2 Use the dial pad to enter the number of copies you want (up to 99).
- 3 Press **Options** and  or  to select **Page Layout**.
Press **Enter**.
- 4 Press  or  to select **2 in 1**, **4 in 1 (P)**, **4 in 1 (L)**, (or **Off** (**1 in 1**)).
Press **Enter**.
- 5 Press **Start** to scan the original document.



- (**P**) means **Portrait** and (**L**) means **Landscape**.
- For **2 in 1**, **4 in 1 (P)** or **4 in 1 (L)**, you cannot use the **Enlarge/Reduce** setting.

2 in 1



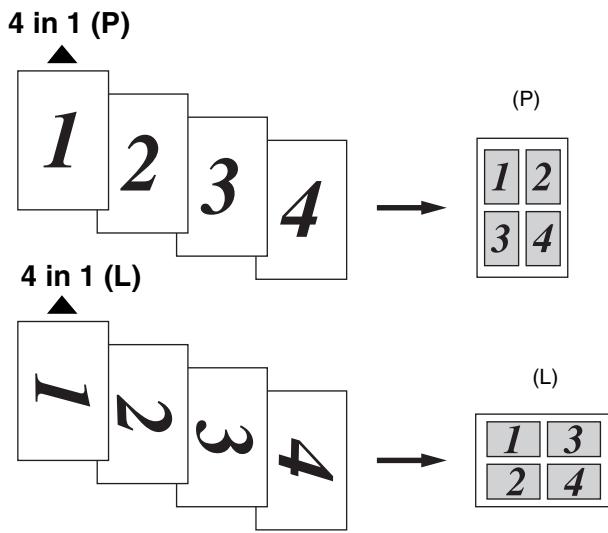

Sorting copies

You can sort multiple copies. Pages will be printed in the order 123, 123, 123, and so on.

- 1** Press  **(Copy)** to illuminate it in green. Place the original document face down in the ADF.
- 2** Use the dial pad to enter the number of copies you want (up to 99).
- 3** Press **Options** and  or  to select **Stack/Sort**.
Press **Enter**.
- 4** Press  or  to select **Sort**.
Press **Enter**.
- 5** Press **Start**.
—OR—
Press other Temporary Copy keys for more settings.

Changing the default copy settings

You can adjust the copy settings. These settings will stay until you change them again.

Copy Mode

- 1 Press **Menu, 4, 1.**
- 2 Press  or  to select Text, Photo or Auto.
Press **Enter**.
- 3 Press **Stop**.

Copy Mode
Auto

Contrast

You can change the contrast to help an image look lighter or darker.

- 1 Press **Menu, 4, 2.**
- 2 Press  to make darker.
—OR—
Press  to make lighter.
Press **Enter**.
- 3 Press **Stop**.

Contrast
-□□■□□+

11 Important information

Standard telephone and FCC Notices

These notices are in effect on models sold and used only in the United States.

This equipment is hearing-aid compatible.

When programming emergency numbers or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
- Perform these activities in the off-peak hours, such as early morning or late evening.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the backside of this equipment is a label that contains, among other information, a product identifier in the format US: AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

You may safely connect this equipment to the telephone line by means of a standard modular jack, USOC RJ11C.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 06 is a REN of 0.6). For earlier products, the REN is separately shown on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact Imagistics. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, call your telephone company or a qualified installer.

WARNING

For protection against the risk of electrical shock, always disconnect all cables from the wall outlet before servicing, modifying or installing the equipment.

This equipment may not be used on coin service lines provided by the telephone company or connected to party lines.

Imagistics cannot accept any financial or other responsibilities that may be the result of your use of this information, including direct, special or consequential damages. There are no warranties extended or granted by this original.



WARNING

This machine has been certified to comply with FCC standards, which are applied to the USA only. A grounded plug should be plugged into a grounded AC power outlet after checking the rating of the local power supply for the machine to operate properly and safely.

Federal Communications Commission (FCC) Declaration of Conformity (USA only)

Responsible Party: Imagistics International Inc.

100 Oakview Drive Trumbull, CT 06611, U.S.A.

TEL: (203) 365-7000

declares, that the products

Product Name: sx2100

comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Call the dealer or an experienced radio/TV technician for help.

Important

Changes or modifications not expressly approved by Imagistics International Inc. could void the user's authority to operate the equipment.

Important – about the interface cable

A shielded interface cable should be used to ensure compliance with the limits for a Class B digital device.

Industry Canada Compliance Statement (Canada only)

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

For your safety

To ensure safe operation the supplied three-pin plug must be inserted only into a standard three-pin AC power outlet that is effectively grounded through the normal household wiring.

The fact that the equipment operates satisfactorily does not imply that the power is grounded and that the installation is completely safe. For your safety, if in any doubt about the effective grounding of the power, call a qualified electrician.

Disconnect device

This product must be installed near a grounded AC power outlet that is easily accessible. In case of emergencies, you must disconnect the power cord from the AC power outlet in order to shut off power completely.

LAN connection

Caution: Connect this product to a LAN connection that is not subjected to overvoltages.

International ENERGY STAR® Compliance Statement

The purpose of the International ENERGY STAR® Program is to promote the development and popularization of energy-efficient office equipment.

As an ENERGY STAR® Partner, Imagistics International Inc. has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.



Laser safety

This equipment is certified as a Class I laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the equipment does not produce hazardous laser radiation.

Since radiation emitted inside the equipment is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation.

FDA regulations

U.S. Food and Drug Administration (FDA) has implemented regulations for laser products manufactured on and after August 2, 1976. Compliance is mandatory for products marketed in the United States. The following label on the back of the machine indicates compliance with the FDA regulations and must be attached to laser products marketed in the United States.

Manufactured:

Imagistics International Inc.

100 Oakview Drive Trumbull, CT 006611, U.S.A.

This product complies with FDA radiation performance standards, 21 CFR Subchapter J.

⚠ WARNING

Use of controls, adjustments or performance of procedures other than those specified in this guide may result in hazardous invisible radiation exposure.

⚠ WARNING

Changes or modifications not expressly approved by Imagistics International Inc. may void the user's authority to operate the equipment.

Internal laser radiation

Max. Radiation Power 5 mW

Wave Length 760 - 810 nm

Laser Class Class IIIb (Accordance with 21 CFR Part 1040.10)

Important safety instructions

- 1** Read all of these instructions.
- 2** Save them for later reference.
- 3** Follow all warnings and instructions marked on the product.
- 4** Switch off and unplug the power cord before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 5** Do not use this product near water.
- 6** Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- 7** Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should never be placed in a built-in installation unless proper ventilation is provided.
- 8** This product should be operated from the type of power source indicated on the label. If you are not sure of the type of power available, call your dealer or local power company.
Use only the power cord supplied with this machine.
- 9** This product is equipped with a 3-wire grounded plug, a plug having a third (grounded) pin. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounded plug.
- 10** Do not allow anything to rest on the power cord. Do not place this product where people can walk on the cord.
- 11** If an extension cord is used with this product, make sure that the total ampere ratings on the products plugged into the extension cord do not exceed the extension cord ampere rating. Also, make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes (USA only).
- 12** Do not place anything in front of the machine that will block received faxes. Do not place anything in the path of received faxes.

13 Wait until pages have exited the machine before picking them up.

14 Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts resulting in the risk of fire or electric shock. Never spill liquid of any kind on the product. Do not attempt to service this product yourself because opening or removing covers may expose you to dangerous voltage points and other risks and may void your warranty. Refer all servicing to the Imagistics Diagnostics Center.

15 Unplug this product from the wall outlet and refer servicing to Authorized Service Personnel under the following conditions:

- When the power cord is damaged or frayed.
- If liquid has been spilled into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- If the product has been dropped or the cabinet has been damaged.
- If the product exhibits a distinct change in performance, indicating a need for service.

16 To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).

17 To reduce the risk of fire, electric shock and injury to persons, note the following:

- Do not use this product near appliances that use water, a swimming pool or in a wet basement.
- Do not use the machine's telephone during an electrical storm (there is the remote possibility of an electrical shock) or to report a gas leak in the vicinity of the leak.
- Use only the power cord indicated in this guide.

Trademarks

Imagistics is a registered trademark of Imagistics International Inc.

The Imagistics logo is a registered trademark of Imagistics International Inc.

© 2004 Imagistics International Inc. All rights reserved.

Windows, Microsoft and Windows NT are registered trademarks of Microsoft in the U.S. and other countries.

Macintosh and QuickDraw are trademarks or registered trademarks of Apple Computer Inc.

Postscript and Postscript Level 3 are registered trademarks or trademarks of Adobe Systems Incorporated.

PaperPort and OmniPage are registered trademarks of ScanSoft, Inc.

Each company whose software title is mentioned in this guide has a Software License Agreement specific to its proprietary programs.

All other brand and product names mentioned in this User's Guide are registered trademarks of their respective companies.

Shipment of the machine

If for any reason you must ship your machine, carefully package the machine to avoid any damage during transit. We recommend that you save and use the original packaging. The machine should also be adequately insured with the carrier.

12 Troubleshooting and routine maintenance

Troubleshooting

IMPORTANT

For technical help, you must call the country where you bought the machine. Calls must be made **from within** that country.

Error messages

As with any sophisticated office product, errors may occur. If this happens, your machine identifies the problem and displays an error message. The most common error messages are shown below.

You can correct most problems by yourself.

ERROR MESSAGES		
ERROR MESSAGE	CAUSE	ACTION
Change Drum	The drum unit is the end of its life.	Replace the drum unit with a new one and reset the drum counter.
Change Drum Soon	The drum unit is near the end of its life.	Use the drum unit until you have a print quality problem; then replace the drum unit with a new one.
	The drum counter was not reset.	If LCD still shows this message after replacing the drum unit with new one, follow the steps below. 1. Open the front cover, and then press Clear/Back . 2. Press 1 to reset.
Check Original	The original documents were not inserted or fed properly, or original document scanned from ADF was longer than about 36 inches (90cm).	See <i>Original document jams</i> on page 12-4.
Check Paper Upper Tray Empty Lower Tray Empty	The machine is out of paper or paper is not properly loaded in the paper tray. —OR— The paper is jammed in the machine.	Refill the paper in the paper tray, or remove the paper and load it again. —OR— See <i>Paper jams</i> on page 12-5.
Check Paper Size	When you see this error, the paper in the paper tray does not match the paper size you set in Menu, 2, 3 .	Load the appropriate size paper or change the default setting. (See <i>Setting the Paper Size</i> on page 4-6.)

ERROR MESSAGES		
ERROR MESSAGE	CAUSE	ACTION
Comm. Error	Poor phone line quality caused communication error.	Try the call again. If problem continues, call Telephone Company to check your phone line.
Connection Fail	You tried to poll a fax machine that is not in Polled Waiting mode.	Verify the other party's polling setup.
Cover Open Pls Close Cover	The front cover was not completely closed.	Close the front cover for the drum unit.
Disconnected	The other party or other party's fax machine terminated the call.	Try to transmit or receive again.
Error Scanning Turn off and on the machine, then try again.	The machine cannot scan the original document correctly.	Please remove the original document from the ADF. Turn the machine power on and off, and then try again.
Fuser Error Turn off and on. Leave the machine for 10 min.	The temperature inside of the machine is too hot or too cool.	Turn the machine power off and on again, and then leave the machine for 10 minutes. If the LCD still shows Fuser Error or changes to Machine Error, call Imagistics Customer Service.
Fuser Open	The jam clear cover (fuser cover) is open.	Please close the jam clear cover (fuser cover). (See <i>Paper jams</i> on page 12-5.)
Machine Error XX	The machine has a mechanical problem.	Imagistics Diagnostics Center In USA: 1-800-243-5556
No Response/Busy	The number you dialed does not answer or is busy.	Verify the number and try again.
Not Registered	You tried to access a One-Touch or Speed Dial number that is not programmed.	Set up the One-Touch or Speed Dial number. (See <i>Storing One-Touch Dial numbers</i> on page 7-1 and <i>Storing Speed Dial numbers</i> on page 7-3.)
Out of Memory	You can't store data in the memory.	(Fax sending in process) Press Stop and wait until the other operations in progress finish and then try again. —OR— Clear the data in the memory. (See <i>Out of Memory</i> message on page 10-3.)


ERROR MESSAGES		
ERROR MESSAGE	CAUSE	ACTION
Out of Memory	You can't store data in the memory.	<p>(Copy operation in process) Press Stop and wait until the other operations in process finish and then try again.</p> <p>—OR—</p> <p>Clear the data in the memory. (See <i>Out of Memory message</i> on page 10-3.)</p> <p>—OR—</p> <p>Add an optional memory board. (See <i>Memory board</i> on page 13-1.)</p> <p>(Printing operation in process) Reduce print resolution. (See <i>Print Quality</i> on page 2-5 in <i>Software User's Guide</i> on the CD-ROM.)</p> <p>—OR—</p> <p>Clear the data in the memory. (See <i>Out of Memory message</i> on page 10-3.)</p> <p>—OR—</p> <p>Add an optional memory. (See <i>Memory board</i> on page 13-1.)</p>
Paper Jam	The paper is jammed in the machine.	See <i>Paper jams</i> on page 12-5.
Please Wait Wait for a while	The temperature of the drum unit or toner cartridge is too hot. The machine will pause its current print job and go into cooling down mode. During the cooling down mode, you will hear the cooling fan running while the display on the machine shows Please Wait, and Wait for a while.	You must wait 20 minutes for it to cool.
Pls Open Cover	A page, piece of paper or paper clip, etc. may be jammed inside the machine.	<p>Open the front cover. If you see any jammed paper or other item, gently pull it out, then close the front cover. If the error message remains, open and close the front cover again. If the machine cannot reset itself and return to the date and time prompt, it will display Machine Error XX.</p> <p>Please call Imagistics Diagnostics Center and tell them the Machine Error number: In USA: 1-800-243-5556</p>
Toner Empty	Toner cartridge is not installed. —OR— Toner is used up and printing is not possible.	<p>Reinstall the toner cartridge. —OR—</p> <p>Replace the toner cartridge with a new one. (See <i>Replacing the toner cartridge</i> on page 12-25.)</p>
Toner Low	If the LCD shows Toner Low, you can still print. But the toner is depleted and the machine is telling you that the toner will soon run out.	Order a new toner cartridge now.
UR Mode in Use	The machine is set to Unique Ring mode. You can not change the Answer Mode from Manual to another mode.	Set Unique Ring to Off. (See <i>Turning off the Unique Ring</i> on page 5-13.)

Original document jams

If the original document is jammed follow the steps below.

Original document was not inserted or fed properly, or was too long.

- 1 Open the control panel cover.
- 2 Carefully pull the original document toward the front of the machine.

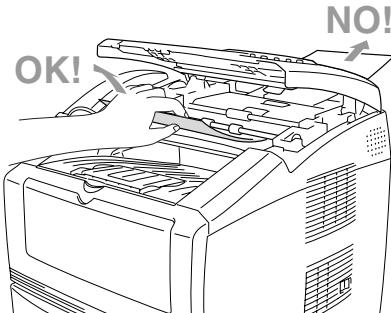


- 3 Close the control panel cover.
- 4 Press **Stop**.

Paper jams

To clear paper jams, please follow the steps in this section.

⚠ WARNING

Before you clear a paper jam, make sure you have switched off and unplugged the machine. After you have just used the machine, some parts inside the machine are extremely hot. When you open the front cover or back output tray of the machine, never touch the shaded parts shown in the following diagram.

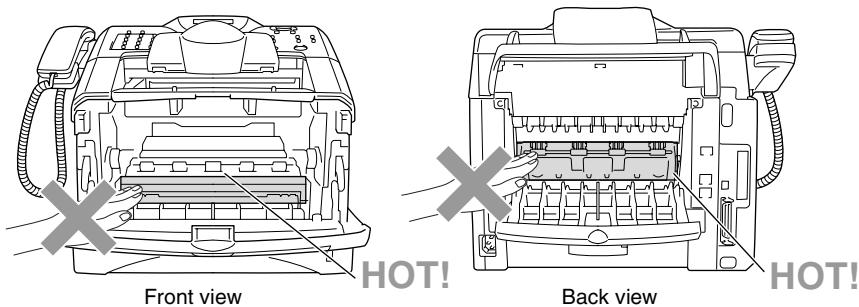


Clear the jammed paper as follows.


If the jammed paper is removed completely by using the information in the following steps, you can install the paper tray first, and then close the front cover and the machine will resume printing automatically.

-  ■ If a paper jam occurs when using the optional lower tray unit, check for correct installation of the upper paper tray.
- Always remove all paper from the paper tray and straighten the stack when you add new paper. This helps prevent multiple sheets of paper from feeding through the machine at one time and reduces paper jams.


- 1 Pull the paper tray completely out of the machine.
- 2 Pull the jammed paper up and out of the machine.

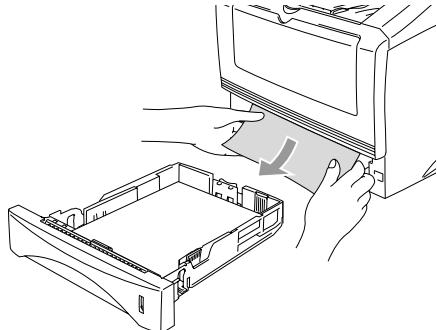

- 3 Press the cover release button and then open the front cover.

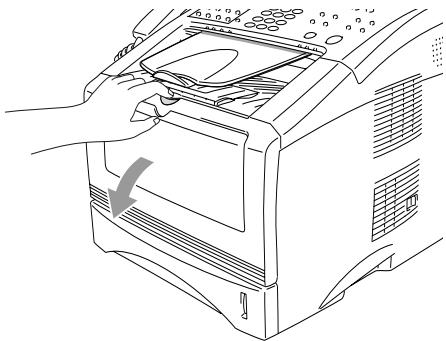


4 Pull out the drum unit and toner cartridge assembly. Pull the jammed paper up and out of the machine. If you cannot remove the drum unit and toner cartridge assembly easily at this time, do not use extra force. Instead, pull the edge of the jammed paper out of the paper tray. If the jammed paper can not be pulled out easily, turn the jam dial towards you as you gently pull the paper out.

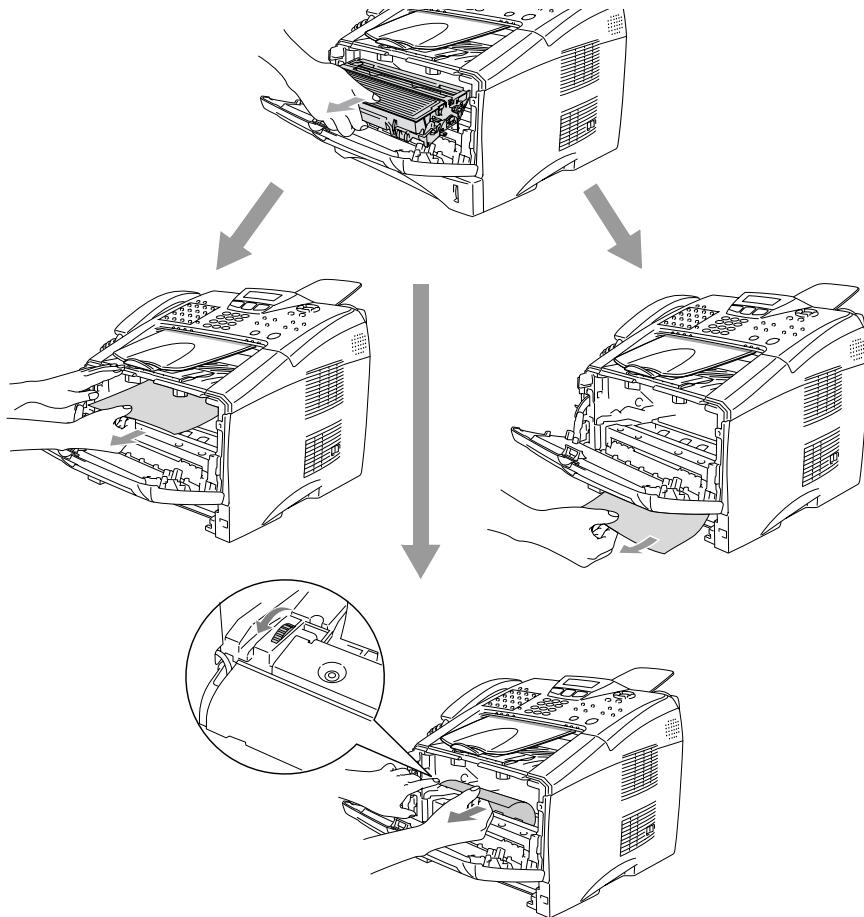


⚠ WARNING

To prevent damage to the machine caused by static electricity, do not touch the electrodes shown in the following diagram.

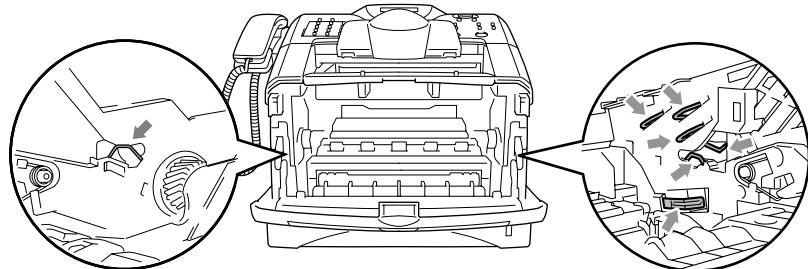


5 Open the back output tray. Pull the jammed paper out of the fuser unit. If the paper jam can be cleared, go to Step 7.

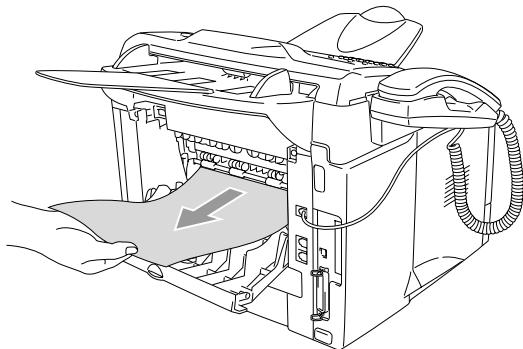


 If you have to pull the paper toward the back of the machine, the fuser may get dirty with toner powder and it may scatter on the next printouts. Print a few copies of the test page until the scattering of toner stops.

⚠️ WARNING

After you have just used the machine, some internal parts of the machine are extremely **HOT!** Wait for the machine to cool down before you touch the internal parts of the machine.

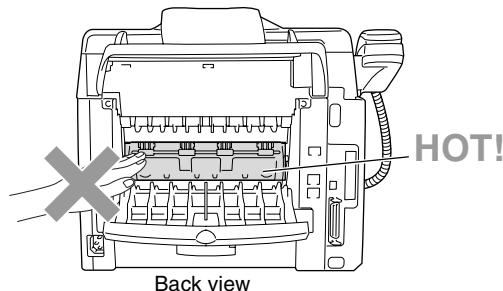


- 6 Open the jam clear cover (fuser cover). Pull the jammed paper out of the fuser unit.

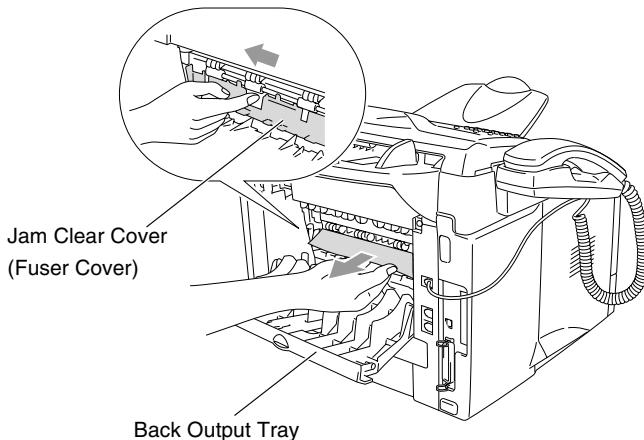

- 7 Close the jam clear cover (fuser cover). Close the back output tray.

8 Push the lock lever down and take the toner cartridge out of the drum unit. Take out the jammed paper if there is any inside the drum unit. Then put the toner cartridge back in the drum unit.

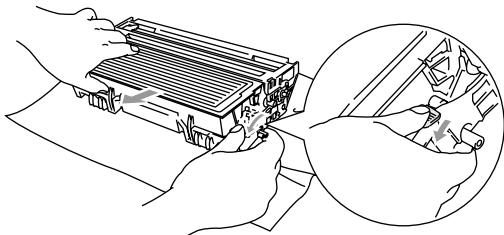

9 Put the drum unit and toner cartridge assembly back in the machine.

10 Put the paper tray in the machine.

11 Close the front cover.

If you are having difficulty with your machine

If you think there is a problem with the way your faxes look, *make a copy first*. If the copy looks good, the problem is probably not your machine. Check the chart below and follow the troubleshooting tips.

DIFFICULTY	SUGGESTIONS
Printing or Receiving Faxes	
Condensed print and horizontal streaks or the top and bottom of sentences are cut off.	If your copy looks good, you probably had a bad connection, with static or interference on the telephone line. If the copy looks bad, clean the scanner area. If there is still a problem, call Imagistics National Diagnostics Center at 1-800-243-5556.
Vertical black lines when receiving.	Sometimes you may see vertical streaks/black lines on the faxes you receive. Your machine's primary corona wire for printing may be dirty, or the sending party's fax scanner may be dirty. Clean your primary corona wire (see <i>Cleaning the drum unit</i> on page 12-24). Ask the sender to make a copy to see if the problem is with the sending machine. Try receiving from another fax machine. If the problem continues, call Imagistics National Diagnostics Center at 1-800-243-5556.
Horizontal streaks; lines are missing.	You may get a fax with horizontal streaks or with missing lines. Usually this is caused by a poor telephone connection. Ask the other party to send the fax again.
Received faxes appear as split or blank pages.	If the received data is divided and printed on two pages or if you get an additional blank page, make sure that auto reduction setting is turned on. (See <i>Printing a reduced incoming fax (Auto Reduction)</i> on page 5-5.)
Phone Line or Connections	
Dialing does not work	Check for a dial tone. Change Tone/Pulse setting. (See <i>Setting Tone and Pulse dialing mode</i> on page 4-4.) Check all line cord connections and that the curled handset cord is not in the EXT jack. Check the power cord connection.
The machine does not answer when called.	Make sure the machine is in the correct Answer mode for your setup. (See <i>Choosing the Answer Mode</i> on page 5-1 and <i>To select or change your Answer Mode</i> on page 5-2.) Check for a dial tone. If possible, call your machine to hear it answer. If there is still no answer, check the telephone line cord connection. Connect a standard telephone handset to the machine's telephone jack. If there is no ringing when you call your machine, ask your telephone company to check the line.
No dial tone on the handset	Press Monitor —OR—Lift the handset. If you hear no dial tone, check telephone line cord connections at the machine and wall jack. Check that handset curled cord is connected to the machine's handset jack. Test the wall jack with another single line telephone. If no dial tone on the wall outlet, call your Telephone Company.

DIFFICULTY	SUGGESTIONS
Sending Faxes	
Poor sending quality.	Try changing your resolution to Fine or EX-Fine . Make a copy to check your machine's scanner operation. If copy quality is not good, clean the scanner. (See <i>Cleaning the scanner</i> on page 12-22.)
Transmission Verification Report says 'RESULT:NG' or 'RESULT:ERROR'.	There is probably temporary noise or static on the line. Try sending the fax again. If you send a PC FAX message and get 'RESULT:NG' or, on the Transmission Verification Report, your machine may be out of memory. To gain extra memory, you can turn off Fax Storage, print fax messages in memory (see <i>Polling</i> on page 5-9) or cancel a Delayed Fax or Polling Job (see <i>Canceling a fax in progress</i> on page 6-9). If the problem continues, ask the telephone company to check your phone line.
Vertical black lines when sending.	If the copy you made shows the same problem, your scanner is dirty. (See <i>Cleaning the scanner</i> on page 12-22.)
The other party does not receive my fax.	Send a manual fax so you can listen to make sure the other party's machine is answering. Press Monitor (or lift the handset) and dial the number. Wait to hear fax receiving tones, and then press Start .
Handling Incoming Calls	
Double-ring in Fax/Tel Mode	The machine knows the incoming call is not a fax so it is signaling you to answer the telephone call. Pick up the machine's handset or answer from an extension or external phone and then press your machine's Telephone Answer Code (default setting is # 51).
Machine 'Hears' Voice as CNG Tone.	If your machine is set to Ext. Tel. RX On , it is more sensitive to sounds. Your machine may mistakenly interpret certain voices or music on the line as a calling fax machine and respond with fax receiving tones. Deactivate the fax by pressing Stop . Try avoiding this problem by turning Ext. Tel. RX to Off . (See <i>Ext. Tel. RX</i> on page 5-4.)
Transferring a Fax Call to the machine.	If you answered at the machine, press Start and hang up immediately. If you answered on an external or extension phone, press your Fax Receive Code (default setting is (#51)). When your machine answers, hang up.
Menu Setting Difficulties	
The machine beeps when you try to access the RX Settings and TX Settings menus.	Make sure that machine is in Fax mode. If the Fax  key is not illuminated, press it to turn on Fax mode. RX Settings setting (Menu, 3, 1) and TX Settings setting (Menu, 3, 2) are available only when the machine is in Fax mode.
Copy Quality Difficulties	
Vertical streaks appear in copies.	Sometimes you may see vertical streaks on your copies. Either the scanner or the primary corona wire for printing is dirty. Clean them both. (See <i>Cleaning the scanner</i> on page 12-22 and <i>Cleaning the drum unit</i> on page 12-24.)
Printer Difficulties	
The machine does not print.	<p>Check the following:</p> <ul style="list-style-type: none"> The machine is plugged in and power switch turned on. The toner cartridge and drum unit are installed properly. (See <i>Replacing the drum unit</i> on page 12-30.) The interface cable is securely connected between the machine and computer. (See the Quick Setup Guide.) Check to see if LCD is showing an error message. (See <i>Error messages</i> on page 12-1.)
The machine prints unexpectedly or it prints garbage.	Reset the machine or turn it off and then on again. Check the primary settings in your application software to make sure it is set up to work with your machine.






DIFFICULTY	SUGGESTIONS
The machine prints first couple of pages correctly, then some pages have text missing.	Your computer is not recognizing the printer's input buffer full signal. Please make sure to connect the machine cable correctly.
The machine cannot print full pages of an original document. Out of Memory message occurs.	Reduce the printing resolution. Reduce the complexity of your original documents and try again. Reduce the graphic quality, the number of font sizes within your application software or add an optional memory. (See <i>Memory board</i> on page 13-1.)
My headers or footers appear when I view my document on the screen but do not appear when I print them.	Most laser printers have a restricted area that will not accept print. Usually these are the first two lines and last two lines, leaves 62 printable lines. Adjust the top and bottom margins in your document to allow for this.
Scanning Difficulties	
TWAIN errors appear while scanning.	Make sure the TWAIN driver is selected as the primary source. In PaperPort®, click Scan in the File menu and select the TWAIN driver.
Software Difficulties	
Cannot install software or print.	Run the Multi-Function Suite Repair and Install program on the CD-ROM. This program will repair and reinstall the software.
Cannot perform '2 in 1 or 4 in 1' printing.	Check that the paper size setting in the application and in the printer driver are the same.
Cannot print when using Adobe Illustrator.	Try to reduce the print resolution.
When using ATM fonts, some characters are missing or some characters are printed in their place.	If you are using Windows® 95/98/98SE/Me, select 'Printer Settings' from the 'Start' menu. Select the properties of the 'Imagistics sx2100 (USB) Printer'. Click 'Spool Setting' on the 'Details' tab. Select 'RAW' from 'Spool Data Format'.
"Unable to write to LPT1" or "LPT1 already in use" Error Message appears.	<ol style="list-style-type: none"> 1. Make sure the machine is plugged in and power switch turned on and that it is connected directly to the computer using an IEEE-1284 bi-directional parallel cable. The cable must not go through another peripheral device (such as a Zip Drive, External CD-ROM Drive, or Switch box). 2. Make sure the machine is not displaying an error message on the LCD Display. 3. Make sure no other device drivers, which also communicate through the parallel port, are running automatically when you boot up the computer (such as, drivers for Zip Drives, External CD-ROM Drive, etc.) Suggested areas to check: (<i>Load=, Run=command lines in the win.ini file or the Setup Group</i>) 4. Check with your computer manufacturer to confirm that the computer's parallel port settings in the BIOS are set to support a bi-directional machine; i.e. Parallel Port Mode – ECP
"MFC is Busy" Error Message appears.	
'MFC Connect Failure'	<p>If the machine is not connected to your PC and you have loaded the Imagistics software, the PC will show 'MFC Connect Failure' each time you restart Windows®. You can ignore this message or you can turn it off as follows. Double-click "\tool\WarnOFF.REG" from the supplied CD-ROM.</p> <p>The Scan key on the machine's control panel will not work unless you restart your PC with the machine connected. To turn it back on, double-click "\tool\WarnON.REG" from the supplied CD-ROM.</p>

DIFFICULTY	SUGGESTIONS
Paper Handling Difficulties	
The machine does not load paper. The LCD shows Check Paper or Paper Jam .	Check to see if the Check Paper or Paper Jam message appears on the LCD. If it is empty, load a new stack of paper into the paper tray. If there is paper in the paper tray, make sure it is straight. If the paper is curled, you should straighten it. Sometimes it is helpful to remove the paper, turn the stack over and put it back into the paper tray. Reduce the amount of paper in the paper tray, and then try again. Check that the manual feed mode is not selected in the printer driver.
The machine does not feed paper from the manual feed tray.	Reinsert the paper firmly, load one sheet at a time. Make sure that manual feed mode is selected in the printer driver.
How can I load envelopes?	You can load envelopes from the manual feed tray. Your application software must be set up to print the envelope size you are using. This is usually done in the Page Setup or Document Setup menu of your software. Refer to your software application manual.
What paper can I use?	You can use plain paper, envelopes, transparencies and labels that are made for laser machines. (See <i>About paper</i> on page 2-1.)
How can I clear paper jams?	See <i>Paper jams</i> on page 12-5.
Print Quality Difficulties	
Printed pages are curled.	Thin or thick paper below the standard can cause this problem. Make sure you select the Paper Type that suits the media type you use. (See <i>Setting the Paper Type</i> on page 4-5 and <i>Media Type</i> on page 2-4 in <i>Software User's Guide</i> on the CD-ROM.)
Printed pages are smeared.	The Paper Type setting may be incorrect for the type of print media you are using. —OR— The print media may be too thick or have a rough surface. (See <i>Setting the Paper Type</i> on page 4-5 and <i>Media Type</i> on page 2-4 in <i>Software User's Guide</i> on the CD-ROM.)
Printouts are too light.	Set Toner Save mode to off in the Advance tab in the printer driver. (See <i>Toner Save Mode</i> on page 2-6 in <i>Software User's Guide</i> on the CD-ROM.)
Network Difficulties	
I cannot print over the Network	Make sure that your machine is plugged into the AC power outlet and is On Line and in Ready mode. Press the Test switch. Then the current settings of the network board are printed. Verify that the cabling and Network connections are good. If possible, try connecting the machine to a different port on your hub using a different cable. Check to see if there is any LED activity. The network board has a two color LED for diagnosing problems.

Improving the print quality

This section provides information on the following topics:

Examples of poor print quality	Recommendation
 <p>Faint</p>	<p>Check the printer's environment. Conditions such as humidity, high temperatures, and so on may cause this print fault. (See <i>Choosing a location</i> on page iii.)</p> <p>If the whole page is too light, Toner Save mode may be on. Turn off Toner Save mode in the printer Properties tab of the driver.</p> <p>—OR—</p> <p>If your machine is not connected to a computer, turn off Toner Save mode in the machine itself. (See <i>Save Toner</i> on page 4-11.)</p> <p>Try installing a new toner cartridge. (See <i>Replacing the toner cartridge</i> on page 12-25.)</p> <p>Try installing a new drum unit. (See <i>Replacing the drum unit</i> on page 12-30.)</p>
 <p>Gray background</p>	<p>Make sure that you use paper that meets the recommended specifications. (See <i>About paper</i> on page 2-1.)</p> <p>Check the printer's environment - high temperatures and high humidity can increase the amount of background shading. (See <i>Choosing a location</i> on page iii.)</p> <p>Use a new toner cartridge. (See <i>Replacing the toner cartridge</i> on page 12-25.)</p> <p>Use a new drum unit. (See <i>Replacing the drum unit</i> on page 12-30.)</p>
 <p>Ghost</p>	<p>Make sure you use paper that meets our specifications. Rough-surfaced paper or thick print media may cause this problem.</p> <p>Make sure that you choose the appropriate media type in the printer driver. (See <i>About paper</i> on page 2-1.)</p> <p>Try using a new drum unit. (See <i>Replacing the drum unit</i> on page 12-30.)</p>
 <p>Toner specks</p>	<p>Make sure that you use paper that meets our specifications. Rough-surfaced paper may cause the problem. (See <i>About paper</i> on page 2-1.)</p> <p>The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 12-30.)</p>
 <p>Hollow print</p>	<p>Make sure that you use paper that meets our specifications. (See <i>About paper</i> on page 2-1.)</p> <p>Choose Thick paper mode in the printer driver, or use thinner paper than you are currently using.</p> <p>Check the printer's environment because conditions such as high humidity can cause hollow print. (See <i>Choosing a location</i> on page iii.)</p>
 <p>All black</p>	<p>You may clear the problem by cleaning the primary corona wire inside the drum unit by sliding the blue tab. Make sure you return the blue tab to the home position (▲). (See <i>Cleaning the drum unit</i> on page 12-24.)</p> <p>The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 12-30.)</p>

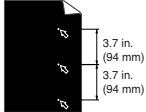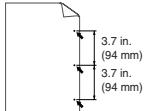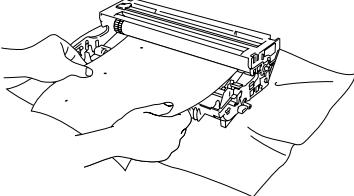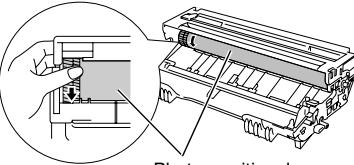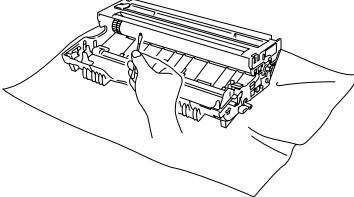Examples of poor print quality	Recommendation
 <p>White Spots on black text and graphics at 3.7 in. (94 mm) intervals</p>  <p>Black Spots at 3.7 in. (94 mm) intervals</p>	<p>If the problem is not solved after printing a few pages, the drum unit may have glue from label stock on the OPC drum surface.</p> <p>Clean the drum unit as follows:</p> <ol style="list-style-type: none"> <li data-bbox="426 287 1014 330">1 Position the print sample in front of the drum unit, and find the exact position of the poor print.  <li data-bbox="426 561 1014 604">2 Turn the drum unit gear by hand while looking at the surface of the OPC drum. <p>! Do not touch the photosensitive drum with your fingers.</p>  <p>Photosensitive drum</p> <li data-bbox="426 874 1014 942">3 When you have located the mark on the drum that matches the print sample, wipe the surface of the OPC drum with a cotton swab until the dust or paper powder on the surface comes off.  <p>! Do not try to clean the surface of the photosensitive drum with a sharp object. (e.g. ball-point pen, paper clip etc.)</p> <p>The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 12-30.)</p>

Examples of poor print quality	Recommendation
 <p>Black toner marks across the page</p>	<p>The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 12-30.)</p> <p>Make sure that you use paper that meets our specifications. (See <i>About paper</i> on page 2-1.)</p> <p>If you use label sheets for laser printers, the glue from the sheets may sometimes stick to the OPC drum surface. To clean the drum unit, follow the steps in the previous page.</p> <p>Do not use paper that has clips or staples because they will scratch the surface of the drum.</p> <p>If the unpacked drum unit is in direct sunlight or room light, the unit may be damaged.</p>
 <p>White lines across the page</p>	<p>Make sure that you use paper that meets our specifications. A rough surfaced paper or thick print media can cause the problem.</p> <p>Make sure that you select the appropriate media type in the printer driver.</p> <p>The problem may disappear by itself. Try printing multiple pages to clear this problem, especially if the printer has not been used for a long time.</p> <p>The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 12-30.)</p>
 <p>Lines across the page</p>	<p>Clean the inside of the printer and the primary corona wire in the drum unit. (See <i>Cleaning the drum unit</i> on page 12-24.)</p> <p>The drum unit may be damaged. Put in a new drum unit. (See <i>Replacing the drum unit</i> on page 12-30.)</p>
 <p>Black lines down the page</p> <p>Printed pages have toner stains down the page.</p>	<p>Clean the primary corona wire of the drum unit.</p> <p>Make sure the primary corona wire cleaner is at the home position (▲).</p> <p>The drum unit may be damaged. Install a new drum unit. (See <i>Replacing the drum unit</i> on page 12-30.)</p> <p>The toner cartridge may be damaged. Put in a new toner cartridge. (See <i>Replacing the toner cartridge</i> on page 12-25.) Make sure that a torn piece of paper is not inside the printer covering the scanner window.</p> <p>The fixing unit may be smudged. Call Imagistics National Diagnostics Center at 1-800-243-5556.</p>
 <p>White lines down the page</p>	<p>You may clear the problem by wiping the scanner window with a soft cloth. (See <i>Cleaning the printer</i> on page 12-23.)</p> <p>The toner cartridge may be damaged. Put in a new toner cartridge. (See <i>Replacing the toner cartridge</i> on page 12-25.)</p>
 <p>Page skewed</p>	<p>Make sure the paper or other print media is loaded properly in the paper tray and that the guides are not too tight or too loose against the paper stack.</p> <p>Set the paper guides correctly.</p> <p>If you are using the manual feed tray. (See <i>How to load paper</i> on page 2-4.)</p> <p>The paper tray may be too full.</p> <p>Check the paper type and quality. (See <i>About paper</i> on page 2-1.)</p>

Examples of poor print quality	Recommendation
 Curl or wave	<p>Check the paper type and quality. High temperatures and high humidity will cause paper to curl.</p> <p>If you do not use the printer very often, the paper may have been in the paper tray too long. Turn over the stack of paper in the paper tray. Also, try fanning the paper stack and then rotating the paper 180° in the paper tray.</p> <p>Try printing using the straight-through output path. (See <i>How to load paper</i> on page 2-4.)</p>
 Wrinkles or creases	<p>Make sure that paper is loaded properly.</p> <p>Check the paper type and quality. (See <i>About paper</i> on page 2-1.)</p> <p>Try printing using the straight-through output path. (See <i>How to load paper</i> on page 2-4.)</p> <p>Turn over the stack of paper in the tray or try rotating the paper 180° in the input tray.</p>

 The drum unit is a consumable item and it is necessary to replace it periodically.

Compatibility

If you are having difficulty sending or receiving a fax due to possible interference on the phone line, we recommend that you adjust the Equalization for compatibility with your phone line. The machine adjusts the modem speed for fax operations.


- 1 Press **Menu, 3, 0, 2.**
- 2 Press  or  to select
Normal, Basic (or High).
- Press **Enter**.
- 3 Press **Stop**.

Miscellaneous
2.Compatibility


Packing and shipping the machine

Whenever you transport the machine, use the packing materials that came with your machine. If you do not pack the machine correctly, you may void your warranty.

- 1 Turn the machine power switch off.
- 2 Unplug the machine from the telephone wall jack.
- 3 Unplug the machine from the AC power outlet.
- 4 Unplug the parallel and USB cable from the machine, if it is connected.
- 5 Open the front cover.
- 6 Remove the drum unit and toner cartridge assembly. Leave the toner cartridge installed in the drum unit.

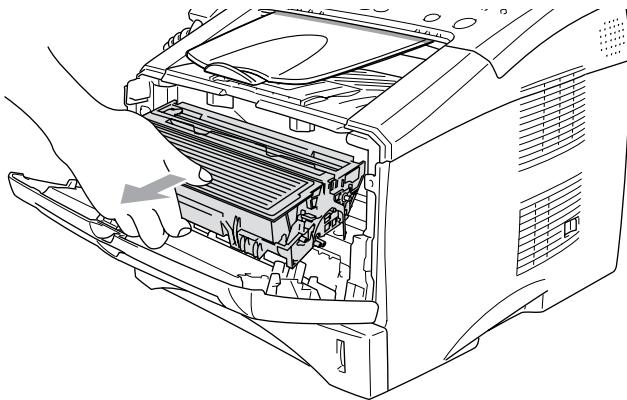


7 Place the drum unit and toner cartridge assembly into the plastic bag and seal the bag.

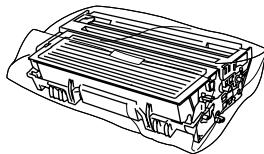


8 Close the front cover. Fold down the face-down output tray flap. Remove the telephone line cord, ADF document output support, ADF document support, handset and handset curled cord.

9 Wrap the machine in the plastic bag and place it in the original carton with the original packing material.

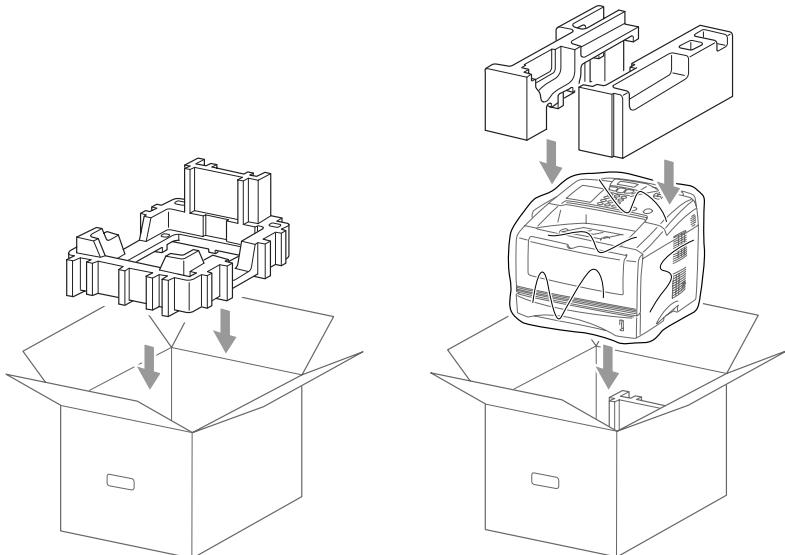

10 Pack the drum unit and toner cartridge assembly, telephone line cord, AC cord, handset, handset curled cord and printed materials in the original carton as shown below:

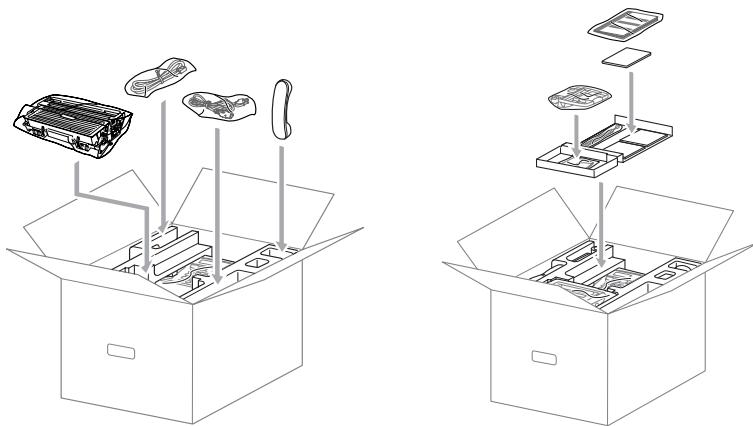


11 Close the carton and tape it shut.

Routine maintenance

Cleaning the scanner

- 1 Turn the machine power switch off and unplug the machine from the AC power outlet.
- 2 Lift the control panel cover.
- 3 Clean the white bar and the glass cover.

Moisten a small piece of clean soft, lint-free cloth with isopropyl alcohol and carefully remove dirt from the glass cover and the white bar of the scanner.

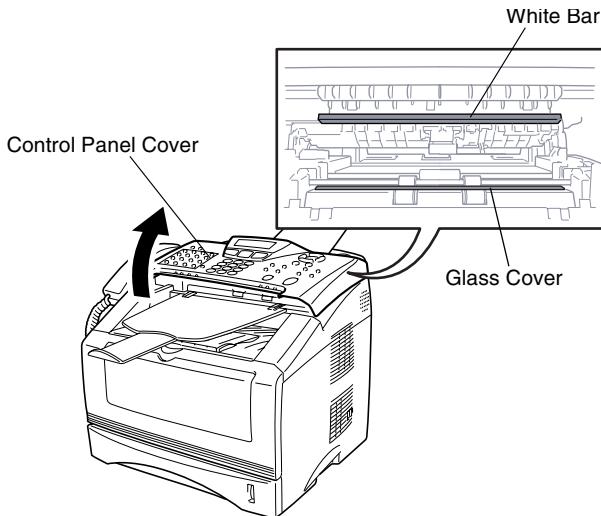

- 4 Close the control panel cover.

Cleaning the printer


! Caution

- Do *not* use isopropyl alcohol to remove dirt from the control panel. It may crack the panel.
- Do *not* use isopropyl alcohol to clean the laser scanner window.
- Do *not* touch the scanner window with your finger.
- The drum unit contains toner, so handle it carefully. If toner scatters and your hands or clothes get dirty, immediately wipe or wash it off with cold water.


- 1 Turn the machine power switch off, unplug the machine from the AC outlet and telephone cord and open the front cover.
- 2 Remove the drum unit and toner cartridge assembly.

⚠ WARNING

Just after you have used the machine, some internal parts of the machine are extremely **HOT!** When you open the front cover of the machine, never touch the shaded parts shown in the diagram below.

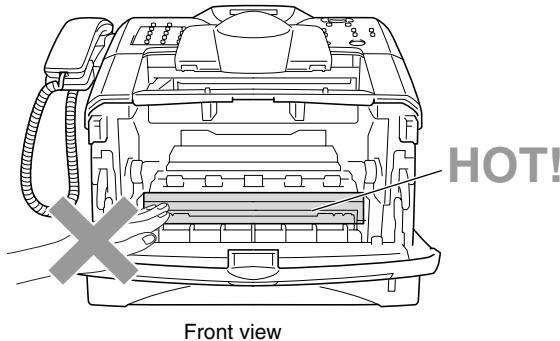


3 Gently clean the scanner window by wiping it with a clean soft dry cloth. Do *not* use isopropyl alcohol.

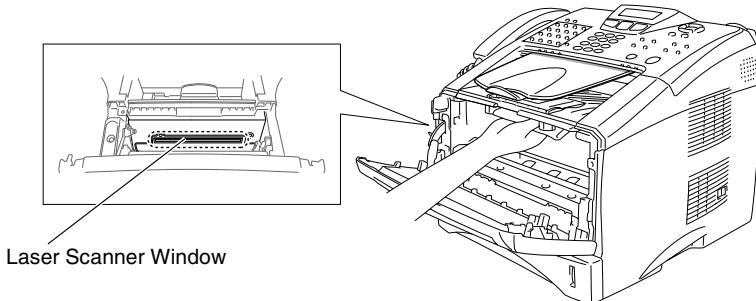

Cleaning the drum unit

We recommend placing the drum unit and toner cartridge assembly on a cloth or large disposable paper to avoid spilling and scattering toner.

- 1** Clean the primary corona wire inside the drum unit by gently sliding the blue tab from right to left several times.
- 2** Return the blue tab and snap it into the Home position (▼).

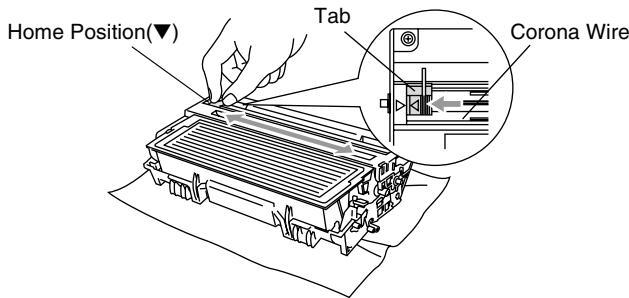

Caution

If the blue tab is not at Home position (▼), printed pages may have vertical stripes.

- 3** Reinstall the drum unit and toner cartridge assembly into the machine. (See *Replacing the drum unit* on page 12-30.)
- 4** Close the front cover.
- 5** Plug in the power cord *first*, then the telephone cord.

Replacing the toner cartridge

When the toner cartridge is running low, the LCD shows **Toner Low**.

 It is a good idea to keep a new toner cartridge ready for use when you see the **Toner Low** warning.


Discard the used toner cartridge according to local regulations, keeping it separate from domestic waste. Be sure to seal the toner cartridge tightly so toner powder does not spill out of the cartridge. If you have questions, call your local waste disposal office.

We recommend that you clean the machine when you replace the toner cartridge.


How to replace the toner cartridge

⚠ WARNING

Just after you use the machine, some internal parts of the machine will be extremely **HOT!** So, never touch the shaded parts shown in the illustration.

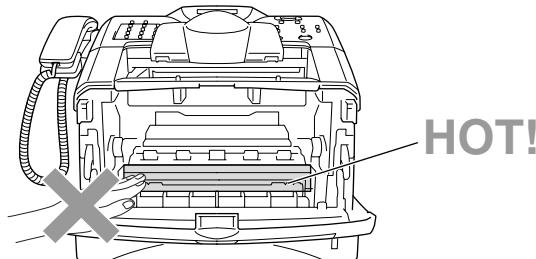


- 1 Open the front cover and pull out the drum unit.

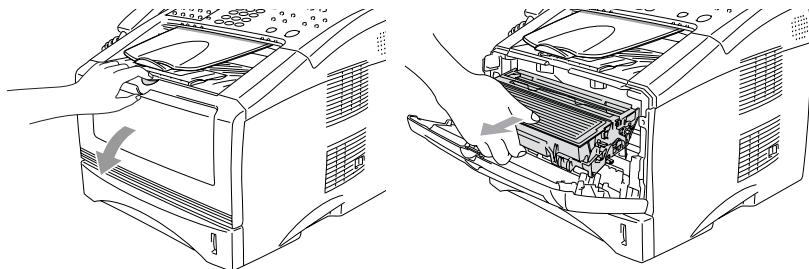


⚠ Caution

- Place the drum unit on a drop cloth or large piece of disposable paper to avoid spilling and scattering the toner.
- To prevent damage to the machine from static electricity, do not touch the electrodes shown below.

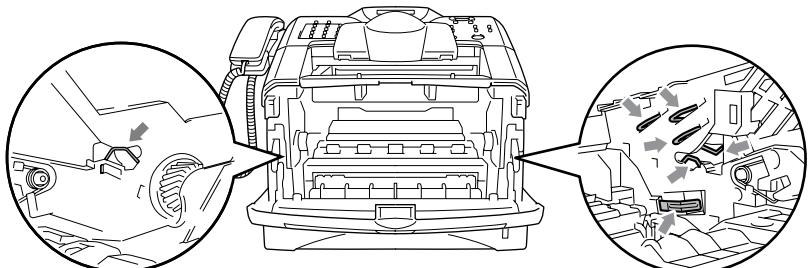

2 Hold down the lock lever on the right and pull the toner cartridge out of the drum unit.

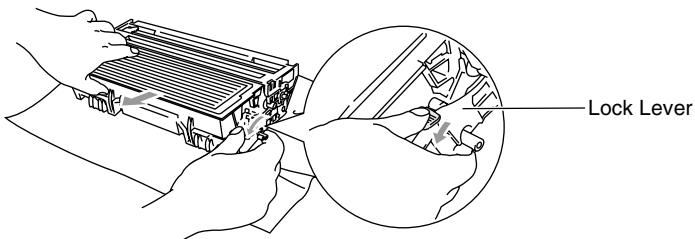

! Caution


Handle the toner cartridge carefully. If toner scatters on your hands or clothes, immediately wipe it off or wash it with cold water.

3 Unpack the new toner cartridge. Place the used toner cartridge into the aluminum bag and discard it according to local regulations.


! Caution

- Wait to unpack the toner cartridge until immediately before you install it in the machine. If a toner cartridge is left unpacked for a long period of time, the toner life is shortened.
- Imagistics strongly recommends that you do not refill the toner cartridge provided with your machine. We also strongly recommend that you continue to use only Genuine Imagistics Brand replacement toner cartridges (**484-5**). Using or attempting to use potentially incompatible toner and/or toner cartridges in your machine may cause damage to the machine itself and/or it may result in unsatisfactory print quality. Our warranty coverage does not apply to any problem that was caused by the use of unauthorized third party toner and toner cartridges. To protect your investment and guarantee your print quality please continue to replace consumed toner cartridges with only Genuine Imagistics Branded Supplies.


4 Gently rock the toner cartridge from side to side five or six times to distribute the toner evenly inside the cartridge.

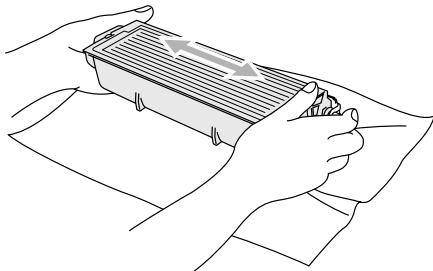


5 Remove the protective cover.

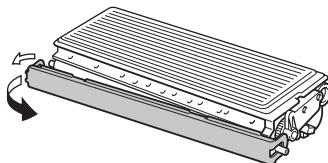


6 Insert the new toner cartridge in the drum unit until it clicks into place. If you put it in properly, the lock lever will lift automatically.

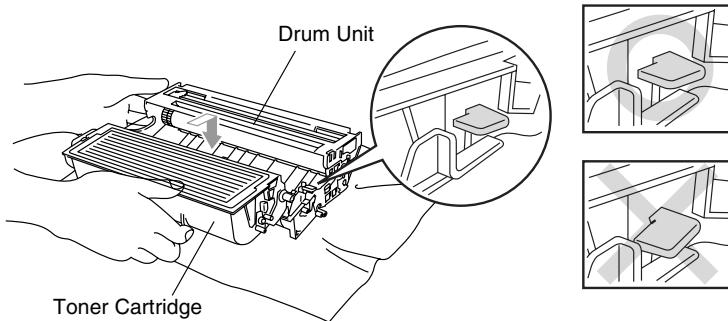

7 Clean the primary corona wire inside the drum unit by gently sliding the blue tab from right to left several times. Return the blue tab to the Home position (▼) before reinstalling the drum unit and toner cartridge assembly.

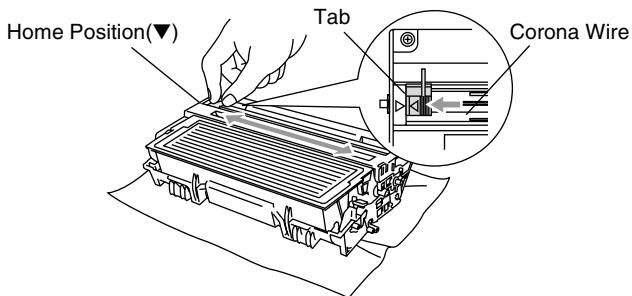

8 Reinstall the drum unit and toner cartridge assembly and close the front cover.

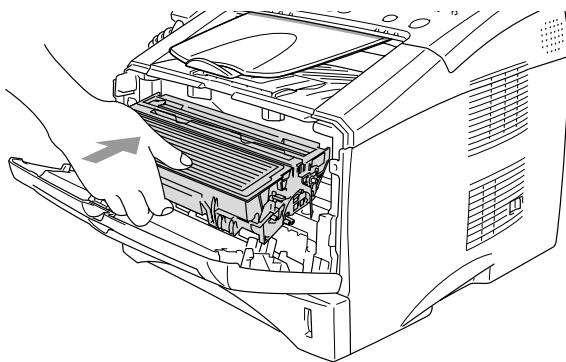

Replacing the drum unit

The machine uses a drum unit to create print images on paper. If the LCD shows Change Drum Soon, the drum unit is near the end of its life and it is time to purchase a new one.

Even if the LCD shows Change Drum Soon, you may be able to continue printing without having to replace the drum unit for a while. However, if there is a noticeable deterioration in the output print quality (even before Change Drum Soon appears), then the drum unit should be replaced. You should clean the machine when you replace the drum unit. (See *Cleaning the drum unit* on page 12-24.)



Caution

When removing the drum unit, handle it carefully because it contains toner. If toner scatters and your hands or clothes get dirty, immediately wipe or wash with cold water.




The drum unit is a consumable item, and it is necessary to replace it periodically. There are many factors that determine the actual drum life, such as temperature, humidity, type of paper and how much toner you use for the number of pages per print job. Because we have no control over the many factors that determine the actual drum life, we cannot guarantee a minimum number of pages that will be printed by your drum.




WARNING

Just after you have used the machine, some internal parts of the machine are extremely **HOT!** So, never touch the shaded parts shown in the illustration.

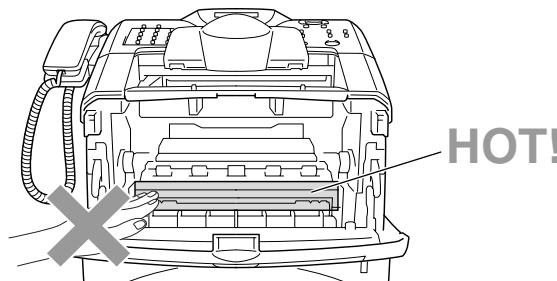


Follow these steps to replace the drum unit:

- 1 Press the cover release button and then open the front cover.
- 2 Remove the old drum unit and toner cartridge assembly. Place it on a drop cloth or disposable paper to avoid scattering toner.

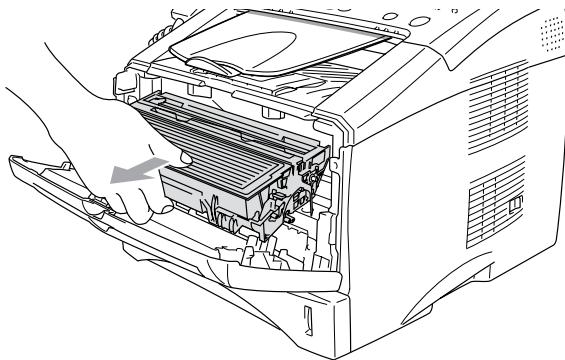


Caution

To prevent damage to the printer from static electricity, do not touch the electrodes shown below.

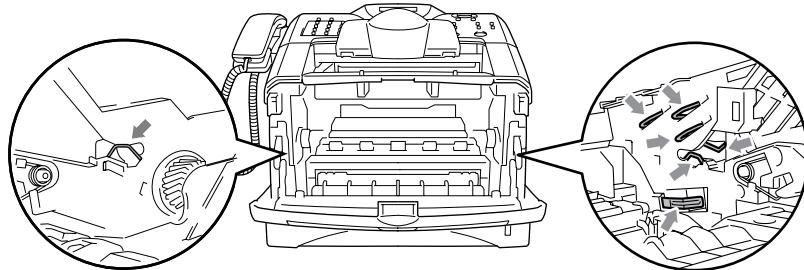

3 Hold down the lock lever on the right and pull the toner cartridge out of the drum unit. (See *Replacing the toner cartridge* on page 12-25.)

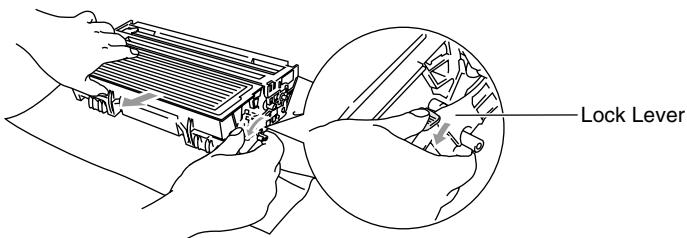

 Discard the used drum unit according to local regulations, keeping it separate from domestic waste. Be sure to seal the drum unit tightly so toner powder does not spill out of the unit. If you have questions, call your local waste disposal office.

4 Wait to unpack the new drum unit until immediately before installing it. Place the old drum unit into the plastic bag and discard it according to local regulations.

5 Reinstall the toner cartridge into the new drum unit. (See *Replacing the toner cartridge* on page 12-25.)

6 Reinstall the new drum unit, keeping the front cover *open*.

7 Press **Clear/Back**.

8 Press **1** and when the LCD shows Accepted, and close the front cover.

Replace Drum?
1. Yes 2. No

 **Caution**

If toner scatters and your hands or clothes get dirty, immediately wipe it off or wash it with cold water.

Page Counter

You can see number of total pages, copy pages, print pages and List/Fax (total fax print + total list print) pages that your machine has printed.

1 Press **Menu**, **1**.

2 The LCD shows number of pages for
Total.

Press  or  to see Copy, Print and List/Fax.

3 Press **Stop**.

Page Counter
Total :123456

13 Optional accessories

Memory board

The memory board is installed on the main controller board inside the machine. When you add the optional memory board, it increases the performance for both copier and printer operations.

Optional Memory	
32 MB	TECHWORKS 12457-0001
64 MB	TECHWORKS 12458-0001
128 MB	TECHWORKS 12459-0001

In general, the DIMM must have the following specifications:

Type: 100 pin and 32 bit output
CAS Latency: 2 or 3
Clock Frequency: 100MHz or more
Capacity: 32, 64, 128 MB
Height: 1.4 inches (35 mm) or less
Parity: NONE
DRAM Type: SDRAM 4 Bank

Some DIMMs might not work with this machine.

Installing the optional memory board



⚠ WARNING

- DO NOT touch the surface of the main board within 15 minutes after turning off the power.
- Before installing the optional memory board, make sure there are no faxes in the memory.
- Do NOT unplug any internal connectors.



- 1 Disconnect the telephone line cord and handset curled cord from the machine, turn the machine power switch off, unplug the machine power cord from the AC power outlet, and then disconnect the interface cable.

⚠ WARNING

Turn the machine power switch off, before installing (or removing) the memory board.

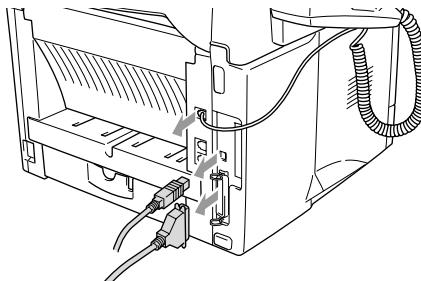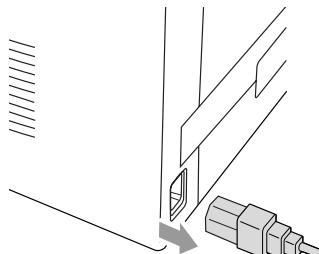

- 2 Remove the side cover. Loosen the two screws, and then remove the metal shield plate.

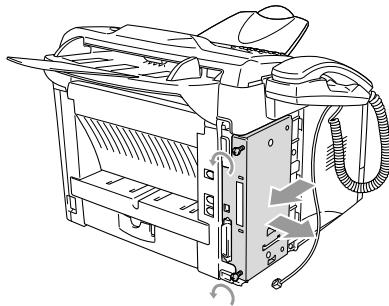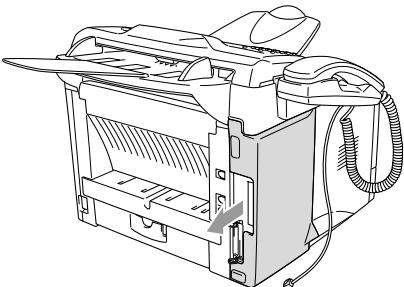


- 3 Unpack the DIMM and hold it by the edges.

⚠️ WARNING

DIMM boards can be damaged by even a small amount of static electricity. Do not touch the memory chips or the board surface. Wear an antistatic wrist strap when you install or remove the board. If you do not have an antistatic wrist strap, frequently touch the bare metal on the printer.

- 4 Hold the DIMM with your fingers on the side edges and your thumb on the back edge. Line up the notches on the DIMM with the DIMM slot. (Check that the locks on each side of the DIMM slot are open or facing outwards.)

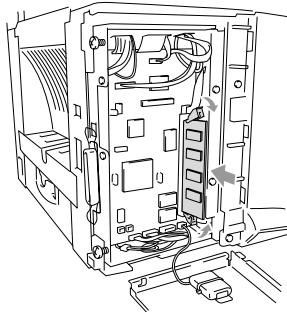

- 5 Press the DIMM straight into the slot (press firmly). Make sure the locks on each side of the DIMM click into place. (To remove a DIMM, you must release the locks.)
- 6 Put the metal plate back on and secure the metal plate with the two screws.
- 7 Put the side cover back on.
- 8 Reconnect any additional interface cables that you removed.
- 9 Reconnect the power cable and then turn on the machine power switch.
- 10 Reconnect the telephone line cord and handset curled cord.

 To check that you have installed the DIMM correctly, print the printer settings by using the selection in the driver and check the printout to make sure it shows the additional memory.


Network (LAN) board

When you add the optional Network (LAN) Board, you can connect your machine into the network to use the Internet FAX, Network Scanner, Network Printer and Network Management operations.

WARNING

DO NOT touch the surface of the main board within 15 minutes after turning off the power.

For more details about how to configure the Network board, please see the Network User's Guide on the CD-ROM supplied with the machine.

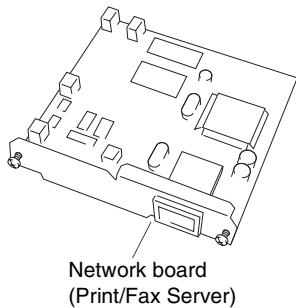

Before starting installation

Be careful when handling the Network board. There are many delicate electronic components that are susceptible to damage from static electricity. To avoid such damage, use the following precautions when handling the board.

- Leave the Network board in its anti-static bag until you are ready to install it.
- Make sure that you are adequately grounded before touching the Network board. Use an anti-static wrist strap and a grounding mat if possible. If you do not have an anti-static wrist strap, touch the bare metal surface on the back of the machine before handling the Network board.
- Avoid moving around the work area in order to eliminate static charge build-up.
- If possible, do not work on a carpeted area.
- Do not flex the board and do not touch the components on the card.

Tools Required:

Phillips Screwdriver 

Step 1: Hardware installation



WARNING



DO NOT touch the surface of the main board within 15 minutes after turning off the power.

- Do NOT unplug any internal connectors.



1 Disconnect the telephone line cord and handset curled cord from the machine, turn the machine power switch off, unplug the machine power cord from the AC power outlet, and then disconnect the interface cable.

⚠️ WARNING


Turn the machine power switch off, before installing (or removing) the Network board.

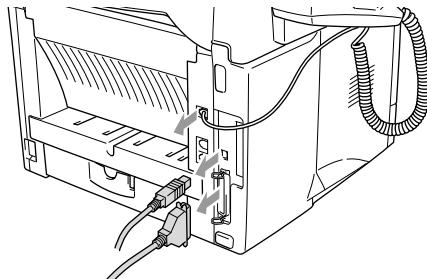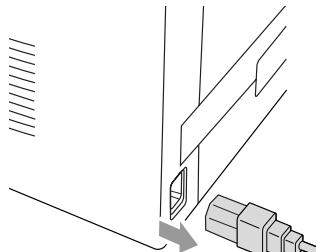


- 2 Remove the side cover. Loosen the two screws, and then remove the metal shield plate.

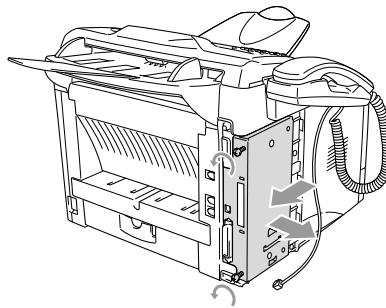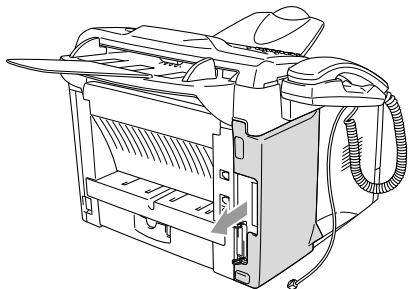

- 3 Loosen the two screws, and then remove the metal cover plate.

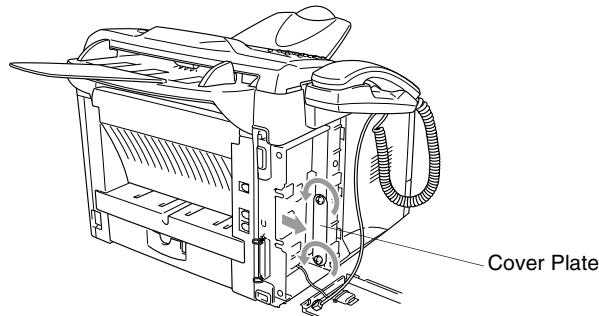

4 Plug the Network board into connector P1 located on the main board as shown in the illustration (press firmly) and secure the Network board with the two screws.

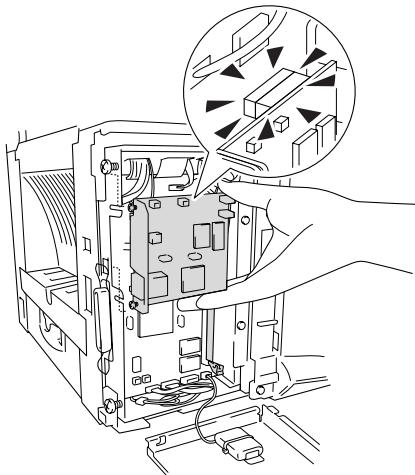

5 Put the metal shield plate back on and secure it with the two screws.

6 Put the side cover back on.

7 Reconnect any additional interface cables that you removed.


8 Reconnect the power cable and then turn on the machine power switch.

9 Reconnect the telephone line cord and handset curled cord.

10 Press the Test switch and print a network configuration page. (See *Test switch* on page 13-9.)

Step 2: Connecting the Network board to an Unshielded Twisted Pair 10BASE-T or 100BASE-TX Ethernet Network

To connect the Network board to a 10BASE-T or 100BASE-TX Network, you must have an Unshielded Twist Pair Cable. One side of the cable must be connected to a free port on your Ethernet hub and the other side must be connected to the 10BASE-T or 100BASE-TX connector (an RJ45 Connector) of the Network board.

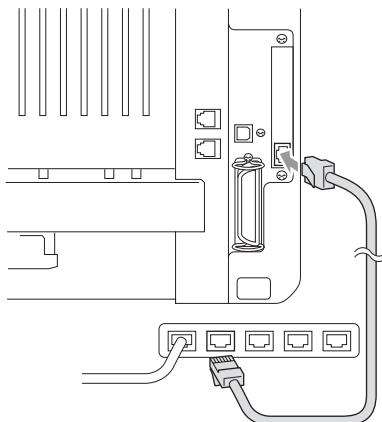

Verifying successful hardware Installation:

Plug in the AC power cord. After initialization and warm-up (this may take several seconds), the machine will come to a Ready state.

LED

No light:

If both of the two LEDs are off, then the print server is not connected to the network.

Link/Speed LED is orange: Fast Ethernet

This Link/Speed LED will be orange if the print server is connected to a 100BASSETX Fast Ethernet network.

Link/Speed LED is green: 10 BASE T Ethernet

This Link/Speed LED will be green if the print server is connected to a 10 BASE T Ethernet.

Active LED is yellow:


The Active LED will blink if the print server is connected to the network.

- >If there is a valid connection to the network, the LED will blink orange or green.

Test switch

Short push: Prints the network configuration page.

Long push (more than 5 seconds): Reset the network configuration back to the default settings.

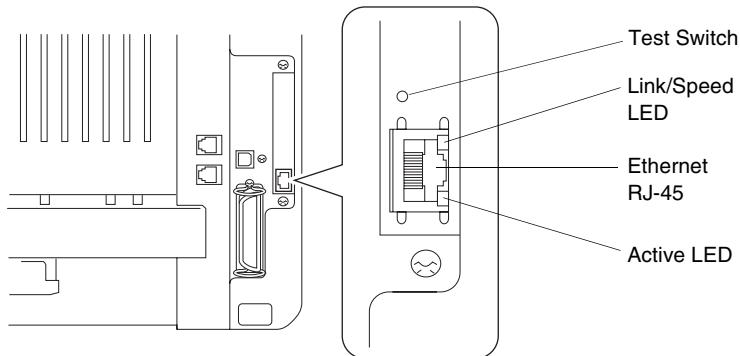

- To set up the machine on the Network, see the *NC-9100h Network User's Guide* on the CD-ROM.

Lower Tray

You can purchase the Paper Lower Tray accessory (**6429779**) to use as a third paper source. Lower Tray holds up to 250 sheets of 20 lb (80 g/m²) paper.

Paper Lower Tray	Holds approx. 250 sheets of 20 lb (80 g/m ²)
Basis Weight	16 to 28 lb (60 to 105 g/m ²)
Moisture Content	4% to 6% by weight
We Recommend: Cut sheet:	Imagistics 471-1 Letter Imagistics 462-2 Legal

G Glossary

ADF (Automatic Document Feeder) The original document can be placed in the ADF and scanned one page at a time automatically.

Automatic fax transmission Sending a fax without picking up the handset of the machine (or pressing **Monitor**).

Automatic Redial A feature that enables your machine to redial the last fax number if the fax did not go through because the line was busy.

Auto Reduction Reduces the size of incoming faxes.

Batch Transmission As a cost savings feature, all delayed faxes to the same fax number will be sent as one transmission.

Beeper The sound the keys make when they are pressed, an error occurs, or a fax has been received or sent.

Beeper volume Volume setting for the beep when you press a key or make an error.

Broadcasting The ability to send the same fax message to more than one location.

Caller ID A subscriber service purchased from the telephone company that lets you see the number (or name) of the party calling you. Your machine stores the latest callers so you can print a Log and view caller information.

Call Waiting A subscriber service from the telephone company that lets you answer a second call without disconnecting the first caller.

CNG tones The special tones (beeps) sent by fax machines during automatic transmission to tell the receiving machine that they are from a fax machine.

Communication error (or Comm. Error) An error during fax sending or receiving, usually caused by line noise or static.

Coding Method Method of coding the information contained in the original document. All fax machines must use a minimum standard of Modified Huffman (MH). Your machine is capable of greater compression methods, Modified Read (MR), Modified Modified Read (MMR) and JBIG, if the receiving machine has the same capability.

Compatibility Group The ability of one fax unit to communicate with another. Compatibility is assured between ITU-T Groups.

Contrast Setting to compensate for dark or light original documents, by making faxes or copies of dark original documents lighter and light original documents darker.

Cover Sheet Prints a page at the other party's fax machine that contains the sender and recipient's name and fax number, number of page and comment. You can generate an electronic cover sheet at the other end with pre-programmed information from memory or you can print a sample cover sheet to fax with your original documents.

Cover Sheet Message The comment that is on the Cover Sheet. This is a programmable feature.

Delayed Send Sends your fax at a later time that day.

Dialer Directory A listing of names and numbers stored in One-Touch and Speed Dial memory, in numerical order.

Drum Unit A printing device for the machine.

Dual Access Your machine can scan outgoing faxes or scheduled jobs into memory at the same time it is sending a fax or receiving or printing an incoming fax.

ECM (Error Correction Mode) Detects errors during fax transmission and resends the pages of the fax that had an error.

EXT . TEL . RX Enables your machine to respond to CNG tones if you interrupt a fax call by answering it.

Extension phone A telephone on the fax number that is plugged into a separate wall jack.

External phone A telephone that is plugged into the EXT jack of your machine.

F/T Ring Time The length of time that the machine rings (when the Answer Mode setting is Fax/Tel) to notify you to pick up a voice call that it answered.

Fax Forwarding Sends a fax received into the memory to another pre-programmed fax number.

Fax Receive Code Press this code (*** 51**) when you answer a fax call from an extension or external phone to transfer the call to the machine.

Fax Storage You can print stored faxes later at your machine, or retrieve them from another location using the Remote Retrieval operations.

Fax/Tel You can receive faxes and telephone calls. Do not use this mode if you are using a telephone answering device (TAM).

Fax tones The signals sent by sending and receiving fax machines while communicating information.

Fine resolution Resolution is 203 x 196 dpi. It is used for small print and graphs.

Feature mode Programming mode for changing your machine's settings.

Gray scale The shades of gray available for copying and faxing photographs.

Group number A combination of One-Touch, Speed Dial numbers that are stored as a Speed Dial number for Broadcasting.

Help list A printout of the complete features that you can use to program your machine when you do not have the User's Guide with you.

Interval The pre-programmed time period between automatically printed Journal. You can print Journal on demand without interrupting this cycle.

Job Status Report A listing for each transmission, that shows its date, time and number.

Journal Report Lists information about the last 200 incoming and outgoing faxes. TX means Transmit. RX means Receive.

LCD (liquid crystal display) The display screen on the machine that shows interactive messages during On-Screen Programming and shows the date and time when the machine is idle.

Machine ID The stored information that appears on the top of faxed pages. It includes the sender's name and fax number.

Machine Settings List A printed report that shows the current settings of your machine.

Manual fax When you lift the handset of the machine or press **Monitor** so you can hear the receiving fax machine answer before you press **Start** to begin transmission.

Multi-Function Suite Turns your machine into a printer and a scanner and enables PC faxing using the machine.

OCR (optical character recognition) The bundled ScanSoft® TextBridge® software application converts an image of text to text you can edit.

One-Touch Keys on the machine control panel where you can store numbers for easy dialing. You can store a second number on each key if you press **Shift** and the One-Touch key together.

Out of Paper Reception Receives faxes into the machine's memory when the machine is out of paper.

Overseas Mode Makes temporary changes to the fax tones to accommodate noise and static on overseas phone lines.

Pause Allows you to place a 3.5 second delay in the dialing sequence stored on Speed Dial numbers. Press **Redial/Pause** as many times as needed for longer pauses.

Photo resolution A resolution setting that uses varying shades of gray for the best representation of photographs.

Polling The process of a fax machine calling another fax machine to retrieve waiting fax messages.

Pulse A form of rotary dialing on a telephone line.

R R Passcode Your own four-digit code that allows you to call and access your machine from a remote location.

Real Time Transmission When memory is full, you can send faxes in real time.

Remote Retrieval Access The ability to access your machine remotely from a touch tone phone.

Resolution The number of vertical and horizontal lines per inch. See: Standard, Fine, Extra Fine and Photo.

Ring Count The number of rings before the machine answers in Fax mode.

Ring Volume Volume setting for the machine's ring.

Save Toner A process that causes less toner to be affixed to the page to extend the life of the toner assembly. This will make the receiving **document** significantly lighter.

Scanning The process of sending an electronic image of a paper original document into your computer.

Speed Dial A pre-programmed number for easy dialing. You must press the **Search/Speed Dial** key and then #, and the three digit code to start the dialing process.

Standard resolution 203 x 98 dpi. It is used for regular size text and quickest transmission.

Super fine resolution 203 x 392 dpi. Best for very small print and line art.

TAM (telephone answering machine) You can connect an external TAM to the EXT. jack of your machine.

Telephone Answer Code (Fax/Tel mode) When the machine answers a voice call, it pseudo/double-rings. You can pick up at an extension phone by pressing this code (#51).

Temporary Settings You can select certain options for each fax transmission and copy without changing the default settings.

Tone A form of dialing on the telephone line used for Touch Tone telephones.

Toner cartridge An accessory that holds toner for the drum unit on laser models.

Transmission The process of sending faxes over the phone lines from your machine to the receiving fax machine.

True Type fonts The fonts that are used in the Windows® operating systems. If you install the TrueType fonts, more types of fonts will be available for Windows® applications.

Unique Ring A subscriber service purchased from the telephone company that provides another phone number on an existing phone line. The machine uses the new number to simulate a dedicated fax line.

View/Del jobs You can check which jobs are waiting in memory and cancel jobs individually.

S Specifications

Product description

Five performance modes are available for **5 in 1** model fx2100: Printer, Copier, Scanner, Fax and PC-Fax (via your PC).

General

Standard Memory Capacity	32 MB
Optional Memory	1 DIMM slot; Memory expandable up to 160 MB via 64 MB or 128 MB DIMM
Automatic Document Feeder (ADF)	Up to 30 sheets
Paper Tray	250 sheets (20 lb)
Manual Feed Tray	Single sheet (20 lb)
Printer Type	Laser
Print Method	Electrophotography by semiconductor laser beam scanning
LCD (Liquid Crystal Display)	16 characters × 2 lines
Warm-up	Max. 18 seconds at 73.4°F (23°C)
Power Source	120V AC 50/60Hz
Power Consumption	Average Operating (Copying): 400 W or less (25°C) Peak: 1090 W or less Sleep: 9 W or less Standby: 75 W or less (25°C)
Dimensions (WDH)	17.0 x 17.8 x 13.2 (in.)
Weight	Without Drum/Toner Unit: 25.6 lb
Noise Level	Sound Pressure Copying : 53 dBA Standby : 30 dBA

General (continued)

Temperature	Operating: 50 - 90.5°F Storage: 32 - 104°F
Humidity	Operating: 20 to 80% (without condensation) Storage: 10 to 90% (without condensation)

Print media

Paper Input	Paper Tray <ul style="list-style-type: none">■ Paper type: Plain paper, recycled paper and transparencies, envelopes (Manual Feed Tray)■ Paper size: A4, Letter, Legal, B5, Executive, A5, A6, B6 (ISO) Weight: 16 - 28 lb (Paper Tray) For more details, see <i>Paper specifications for each paper tray</i> on page 2-1.■ Maximum paper tray capacity: Approx. 250 sheets of 20 lb plain paper
	Manual Feed Tray <ul style="list-style-type: none">■ Paper size: Width: 2.75 - 8.66" Height: 4.57 - 16.00" Weight: 16 - 43 lb
Paper Output	Up to 150 sheets of plain paper (Face down print delivery to the output tray)

Copy

Color/Monochrome	Monochrome
Copy Speed	Up to 21 copies/minute (Letter paper)
Multiple Copies	Stacks or Sorts up to 99 pages
Enlarge/Reduce	25% to 400% (in increments of 1%)
Resolution	Max. 300 x 600 dpi

Fax

Compatibility	ITU-T Group 3
Coding System	MH/MR/MMR/JBIG
Modem Speed	33600-2400 bps Automatic Fallback
Original Size	ADF Width: 5.8" to 8.5" ADF Height: 3.9" to 14.0"
Scanning Width	8.16 inches
Printing Width	8.16 inches
Gray Scale	256 levels
Polling Types	Standard, Sequential
Contrast Control	Automatic/Light/Dark (manual setting)
Resolution	<ul style="list-style-type: none">Horizontal 203 dot/inchVertical<ul style="list-style-type: none">Standard 98 line/inchFine, Photo 196 line/inchSuper fine 392 line/inch
One-Touch Dial	32 (16 × 2)
Speed Dial	300 locations
Automatic Redial	One time after 5 minutes
Auto Answer	0, 1, 2, 3 or 4 rings
Communication Source	Public switched telephone network.
Memory Transmission	Up to 500* pages
Out of Paper Reception	Up to 500* pages

* "Pages" refers to the "ITU-T Test Chart #1" (a typical business letter, Standard resolution, JBIG code). Specifications and printed materials are subject to change without prior notice.

Scanner

Color/Monochrome	Monochrome
TWAIN Compliant	Yes (Windows® 95/98/98SE/Me/2000 Professional and Windows NT® Workstation Version 4.0) Mac OS® 8.6-9.2/Mac OS® X 10.1/10.2.1-10.3 or greater
WIA Compliant	Yes (Windows® XP)
Resolution	Up to 9600 × 9600 dpi (interpolated)* Up to 300 × 600 dpi (optical) * Maximum 1200 x 1200 dpi scanning with Windows® XP (resolution up to 9600 x 9600 dpi can be selected by using the scanner utility)
original document Size	ADF Width: 5.8" to 8.5" ADF Height: 3.9" to 14.0"
Scanning Width	8.16 inches
Gray Scale	256 levels

 Scanning directly to a networked PC is available with Windows® 98/98SE/Me/2000 Professional and XP.

 Mac OS® X scanning is supported in Mac OS® X 10.1/10.2.1-10.3 or greater.

Printer

Emulation	PCL6 (Printing System for Windows® emulation mode of HP LaserJet) and BR-Script (PostScript® 3™ language emulation)
Printer Drivers	Windows® 95/98/98SE/Me/2000 Professional/XP and Windows NT® Workstation Version 4.0 driver supporting Native Compression mode and bi-directional capability
	Apple® Macintosh® QuickDraw® Driver and PostScript (PPD) for Mac OS® 8.6-9.2/Mac OS® X 10.1/10.2.1-10.3 or greater
Resolution	HQ1200 (Max. 2400 × 600 dpi)
Print Quality	Normal printing mode
	Economy printing mode (saves toner usage)
Print Speed	Up to 21 pages/minute letter size (when loading paper from paper tray)
First Print	Less than 10 seconds (using letter size paper in paper tray)

Interfaces

Interface	Recommended Cable
Parallel	A bi-directional shielded parallel cable that is IEEE 1284 compliant and no longer than 6 feet.
USB	A Hi-Speed USB 2.0 cable that is no longer than 6 feet.

 Please make sure that you use a Hi-Speed USB 2.0 certified cable if your computer uses a Hi-Speed USB 2.0 interface.

 Even if your computer has a USB 1.1 interface you can connect the machine.

Computer requirements

Minimum System Requirements								
Computer Platform & Operating System Version		Processor Minimum Speed	Minimum RAM	Recommended RAM	Available Hard Disk Space			
					Driver	Application Software*1		
Windows® Operating System	95, 98, 98SE	Pentium 75MHz	24 MB	32 MB	80 MB	100 MB		
	Me	Pentium 150MHz	32 MB	64 MB				
	NT® Workstation 4.0	Pentium 75MHz						
	2000 Professional	Pentium 133MHz	64 MB	128 MB				
	XP	Pentium 233MHz	128 MB	256 MB		180 MB		
Apple® Macintosh® Operating System	Mac OS® 8.6 - 9.2 (Printing, Scanning and PC-FAX Send Only)	All base models meet minimum Requirements	32 MB	64 MB	50 MB	200 MB		
	Mac OS® X 10.1/10.2.1-10.3 or greater (Printing, Scanning*2, PC-FAX Send and Remote Setup Only)		128 MB	160 MB				
NOTE: USB is not supported under Windows® 95 or Windows NT® WS 4.0. All registered trademarks referenced herein are the property of their respective companies.								



■ *¹ Application software is different for Windows® and Macintosh®.

■ *² Scanning is supported in 10.2.1 - 10.3 or greater.

I Index

A

- Access codes, storing and dialing 7-6
- ADF (automatic document feeder) 2-7
- ADF cover 12-4
- Answer Mode
 - External TAM 5-1
 - Fax Only 5-1
 - Fax/Tel 5-1
 - Manual 5-1
- Answering machine (TAM)
 - connecting 1-11
- Auto Dial 7-1
 - Access codes and credit card numbers
 - setting up/dialing 7-6
- Broadcasting 6-14
 - using Groups 6-14
- Group dial
 - changing 7-5
 - setting up Groups for
 - Broadcasting 7-5
- One-Touch dial
 - changing 7-4
 - setting up 7-1
 - using 6-2, 6-14
- Search 6-2
- Speed Dial
 - changing 7-4
 - setting up 7-3
 - using 6-2, 6-14
- Automatic
 - fax receive 5-1
 - Ext. Tel. RX 5-4
 - fax redial 6-7

transmission 6-3

B

- Back light 1-6, 1-7
- Broadcasting 6-14
 - setting up Groups for 7-5

C

- Caller ID 5-14
- Out of Area 5-14
- print list 5-15
- Private Call 5-14
- view list 5-15
- Canceling
 - Fax Forwarding 8-4
 - fax jobs in memory 6-9
 - jobs awaiting redial 6-9
 - Remote Retrieval 8-4
- Cleaning (routine maintenance)
 - drum unit 12-24
 - printer 12-23
 - scanner 12-22
- CNG tones 1-9
- Computer requirements S-6
- Connecting
 - external TAM 1-11
 - external telephone 1-10
 - two-line external TAM or telephone 1-15
- Contrast key (copying) 10-8
- Copy
 - Contrast key 10-8
 - Copy Mode (type of original document) 10-7
 - default settings, changing 10-13

Enlarge/Reduce key	10-5
enter Copy mode	10-1
keys	10-4
multiple	10-2
Options key	10-9
page layout	10-10
paper	2-1
single	10-2
sort	10-12
temporary settings	10-4
tray use	4-12
Copy Mode (copying)	10-7
Cover Sheet	
composing	6-10
custom comments	6-11
for all faxes	6-13
for next fax only	6-12
printed form	6-13
Credit card numbers, storing and dialing	7-6
Custom telephone features	
.....	1-16, 12-12

D

Date and Time	4-1
Delayed Batch Transmission	
.....	6-16
Delayed Send	6-16
Dialing	
a pause	7-7
access codes and credit card numbers	7-6
automatic fax redial	6-7
Groups	6-14
stored numbers	7-1
Drum unit	
replacing	12-30
Dual Access	6-7

E	
ECM (Error Correction Mode)	
.....	1-10
Ecology	
Save Toner	4-11
Sleep Time	4-11
Enlarge/Reduce key (copying)	
.....	10-5
Envelopes	2-6
Equalization	12-18
Error messages on LCD	
Check Paper	12-1
Comm. Error	12-2
Machine Error	12-2
Not Registered	12-2
Out of Memory	12-2, 12-3
while scanning a document	
.....	10-3
Ext. Tel. RX	5-4
Extension telephones	
using	5-7
External telephone	
connecting	1-10

F

Fax codes	
Fax Receive Code	5-4, 5-7
Telephone Answer Code	
.....	5-7
Fax Forwarding	
changing remotely	8-4
programming a number	8-1
Fax, stand-alone	
Answer Mode	5-1
receiving	
compatibility	12-18
difficulties	12-11
Polling	5-9
reducing to fit on paper	
.....	5-5

Remote Retrieval	8-4
retrieving from a remote site	8-5
Ring Count, setting	5-2
Sequential RX	5-9
using fax codes	5-7
sending	
at end of conversation ..	6-4
automatic	6-3
Broadcasting	6-14
canceling from memory	6-9
compatibility	12-18
contrast	6-5
delayed	6-16
difficulties	12-12
enter Fax mode	6-1
from ADF	2-7
from memory (Dual Access)	6-7
manual	6-3
overseas	6-15
Real Time Transmission	6-8
resolution	6-6
Fax/Tel mode	5-1
answering at extension	
phones	5-7
double-ringing (voice calls)	5-3
Fax Receive Code	5-8
receiving faxes	5-7
setting F/T Ring Time	5-3
setting Ring Count	5-2
Telephone Answer Code ..	5-7
FCC notices	11-1

G

Gray scale	S-3, S-4
Groups for Broadcasting	
storing	7-5

H

Hearing aid compatible	4-9
HELP	
Help List	9-3
LCD messages	3-1
navigation keys	3-2

I

Interfaces	S-5
------------------	-----

J

Jacks	
convert to RJ11 jack	1-14
EXT. jack	
external telephone	1-10
TAM (answering machine)	1-11
triplex adapter	1-14
Jams	
original document	12-4
paper	12-5

L

LAN Configuration	3-11
LCD (liquid crystal display)	
LCD Contrast	4-12
machine status	1-6, 1-7
programming	3-1

M

Maintenance, routine	12-22
Manual	
answer	5-1
dialing	7-7
transmission	6-3
Manual feed tray	2-6
Memory Security	6-18, 6-19
Memory Storage	3-1
Menu table	3-1

Mode keys		resolution	S-5
Copy	10-1	specifications	S-5
Fax	6-1	Printer drivers	S-5
Scan	1-4		
Multi-line connections (PBX)		R	
.....	1-16	Redial/Pause	6-7
		Reducing	
		copies	10-5
		long faxes	5-5
		Reports	9-1, 9-3
		Dialer Dir	9-3
		Help List	9-3
		Job Status	9-1, 9-3
		Journal	9-3
		Mach. Settings	9-3
		Resolution	
		copy	S-2
		fax (Standard, Fine, SuperFine, Photo)	S-3
		print	S-5
		scan	S-4
		setting for next fax	6-6
		Ring Count, setting	5-2
		S	
		Safety instructions	i, 11-7
		Setting Remote Retrieval	8-2
		commands	8-4
		getting your faxes	8-3, 8-4, 8-5
		R R Passcode	8-3
		Setup	
		Date and Time	4-1
		Machine ID (fax header)	4-2
		Shipping the machine	11-9, 12-19
		Sleep Timer	4-11
		Speed Dial	
		changing	7-4
		storing	7-3
		O	
One-Touch dial			
changing	7-4		
storing	7-1		
Options key (copying)		
	10-9		
		P	
Page Counter	Page Counter	12-33
Paper	Paper	2-1, 2-3, S-2
how to load	2-4	how to load	2-4
jams	12-5	jams	12-5
size	4-6	size	4-6
size of original document	2-7	size of original document	2-7
type	4-5		
Phone line			
connections	1-12		
difficulties	12-11		
multi-line (PBX)	1-16		
two-line phone system	1-14		
Polling	Polling	5-9
receiving	5-9	receiving	5-9
sending	6-17	sending	6-17
sequential receiving	5-9	sequential receiving	5-9
Power			
failure	3-1		
Print			
area	10-1		
difficulty	12-11		
fax from memory	5-5		
improving the print quality	12-15		
jams	12-5		

T

TAM (telephone answering machine), external	1-11, 1-15, 5-1
Answer Mode	5-1
connecting	1-12
recording OGM	1-13
with two-line jack	1-15
Text, entering	4-3
special characters	4-4
Tone signals on Pulse line	
	7-7
Toner cartridge	
conserving	4-11
replacing	12-25, 12-26
Tray use, setting	
copy	4-12
fax	4-13
Troubleshooting	12-1
error messages on LCD	12-1
if you are having difficulty	
	12-11
incoming calls	12-12
network	12-14
paper handling	12-14
phone line	12-11, 12-18
print quality	12-14
printing	12-12
receiving or printing faxes	
	12-11
scanning	12-13
sending faxes	12-12
software	12-13
Two-line phone system	1-14

V


Volume, setting	
beeper	4-7
ring	4-7
speaker	4-8

U

Unique Ring	5-11
setting ring pattern	
	5-12, 5-13
turning off	5-13

R Remote Retrieval Access card

If you plan to receive fax messages while away from your machine, carrying the Remote Retrieval Access Card printed below will serve as a convenient reminder of the retrieval procedures. Simply cut out the card and fold it to fit your wallet or organizer. Keeping it handy will help you derive the full benefit of your machine's Fax Forwarding and Remote Retrieval features.

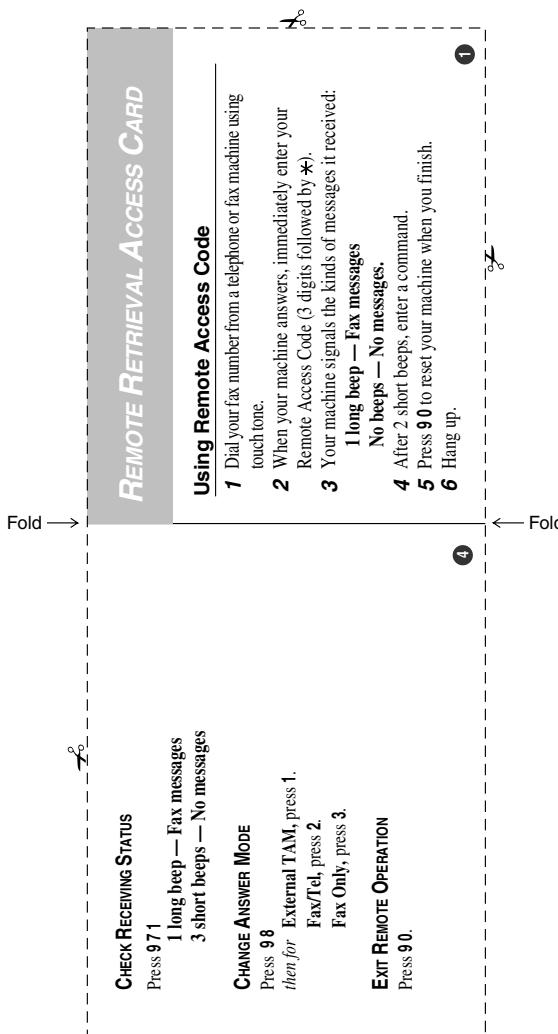

Changing R R Passcode

- 1 Press **Menu**, **3**, **5**, **1**.
- 2 Press **9** or **0** to select Remote Retrieve and then press **Enter**.
- 3 Enter a three-digit number from 000 to 999.
- 4 The ***** cannot be changed.
- 5 The ***** cannot be changed.
- 6 Press **Enter**.
- 7 Press **9** or **0** to select Local Print On (or Off) and then press **Enter**.
- 8 Press **Stop**.

Remote Commands

Remote Rtrv/Fax FORWARDING SETTING

Press **9**, **5**.

then to

Turn feature off, press **1**.

Select Remote Rtrv, press **2**.

Select Fax Forwarding, press **3**.

RETRIEVE A FAX

Press **9**, **6**.

then to

Retrieve all faxes, press **2**.

then enter the number of remote fax machine, and press **#**. After the beep, hang up and wait.

Erase all fax messages, press **3**.

2

3

EQUIPMENT ATTACHMENT LIMITATIONS (Canada only)

NOTICE

This product meets the applicable Industry Canada technical specifications.

NOTICE

The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.



www.imagistics.com

Imagistics International Inc.
100 Oakview Drive
Trumbull, CT 06611

The information contained in this manual is subject to change without notice to incorporate improvements made to the products listed in this manual.

Imagistics and the Imagistics logo are trademarks of Imagistics International Inc., registered in the U.S. Patent and Trademark Office and/or other jurisdictions.

©Imagistics International Inc. 2004
Printed in USA
Part Number LF6396001



LF6396001

www.imagistics.com