

Tillotson®

CROSS REFERENCE CATALOG

Tillotson Carburetors

Marvel-Schebler/Tillotson Division, Borg-Warner Corporation
761 Berdan Avenue, Box 6598, Toledo, Ohio 43612



Transportation
Equipment

FORM S-517
REV. 5-75

Litho in U.S.A.

ALLIS-CHALMERS

BEAIRD-POULAN, INC. (Cont.)

BEAIRD-POULAN, INC. (Cont.)

1603033	014499	Mixture Screw	3415	0788	Screw	3702	HL-124B	Carburetor
1603034	014602	Needle & Seat	3416	08646	Shutter	3703	HL-152A	Carburetor
1603036	014499	Mixture Screw	3420	02232	Plug Screw	3704	HL-164A	Carburetor
1603037	011103	Spring	3422	09821	Shaft & Lever	3705	HL-180A&B	Carburetor
1603038	03114	Washer	3423	09626	Shutter	3706	HS-23A	Carburetor
1603039	010511	Ring	3424	08805	Spring	3706	HS-30A	Carburetor
1603041	015000	Bracket	3425	09698	Diaph.	3707	HL-253A	Carburetor
1603042	015005	Screw & Lockwasher	3426	09676	Gasket	3708	HL-258A	Carburetor
1603043	014995	Clamp	3427	02395	Plug Screw	3712	0992	Lockwasher
1603044	014997	Nut	3428	09697	Mixture Screw	3717	08942	Screw & Lockwasher
1603045	014998	Screw	3429	08793	Spring	3718	013249	Body
1603046	015004	Shaft & Lever	3430	05322	Ball	3719	013253	Shaft & Lever
1603047	014324	Spring	3431	09761	Idle Tube	3720	013247	Connection
1603048	014320	Shutter	3435	010141	Needle & Seat	3721	012305	Screw
1603050	GS-199	Gasket Set	3436	010165	Gasket	3722	012930	Gasket
1603051	RK-1HR	Repair Kit	3437	09708	Lever	3723	012798	Mixture Screw
1603061	014319	Gasket	3443	010004	Washer	3724	012802	Mixture Screw
1605110	HL-262A	Carburetor	3448	010135	Shaft & Lever	3725	04920	Washer
1605242	015022	Body	3449	09678	Clip	3726	013254	Shaft & Lever
1605243	02531	Welch Plug	3450	01974	Screw	3727	011503	Spring
1605244	04784	Ball	3451	08942	Screw & Lockwasher	3728	013248	Connection
1605245	08805	Spring	3456	010093	Clip	3729	RK-582	Repair Kit
1605246	013540	Shaft & Lever	3457	010090	Pump Diaph.	3732	012174	Washer
1605247	013547	Shutter	3459	010098	Screw & Lockwasher	3733	012356	Spring
1605248	08942	Screw & Lockwasher	3461	010100	Inlet Check Valve	3735	012593	Connection
1605249	012473	Gasket	3462	010097	Outlet Check Valve	3737	012607	Mixture Screw
1605250	012475	Diaph.	3464	RK-151	Repair Kit	3738	012608	Mixture Screw
1605251	013549	Diaph. Cover	3465	010588	Cup Plug	3739	012084	Check Valve
1605252	012930	Gasket	3466	02531	Welch Plug	3741	012595	Shaft & Lever
1605253	014230	Pump Diaph.(Pulse)	3467	010794	Shaft & Lever	3743	012597	Shaft & Lever
1605254	014229	Pump Diaph.(Valve)	3468	012475	Diaph.	3744	012599	Body
1605255	013335	Pump Body	3469	012473	Gasket	3745	013030	Body
1605256	010098	Screw & Lockwasher	3470	010798	Mixture Screw	3746	013026	Check Valve
1605257	011516	Screen	3471	010589	Seal Ring	3747	012035	Gasket
1605258	010529	Gasket	3472	010530	Strainer Screen	3748	012626	Shaft & Lever
1605259	010527	Strainer Cover	3473	010580	Needle & Seat	3749	012601	Body
1605260	010571	Screw	3474	010513	Control Lever	3751	GS-155	Gasket Set
1605261	011498	Mixture Screw	3475	010581	Pinion Screw	3752	RK-877	Repair Kit
1605262	08793	Spring	3476	010578	Spring	3753	GS-4HL	Gasket Set
1605264	011401	Packing	3477	010793	Shaft	3754	RK-64HL	Repair Kit
1605265	05095	Screw	3478	08983	Lever	3756	013502	Stop Lever
1605266	0788	Spring	3479	08988	Lockwasher	3757	013504	Shaft & Lever
1605276	010513	Control Lever	3480	06393	Screw	3759	013505	Body
1605268	013406	Pinion Pin	3481	06396	Lockwasher	3760	010531T	Thin Pump Diaph.
1605269	013269	Screw	3482	03804	Washer	3761	012884	Screen
1605270	013546	Needle & Seat	3483	010805	Mixture Screw	3762	012345	Ring
1605271	010165	Gasket	3484	010783	Lever	3763	013372	Welch Plug
1605272	011503	Spring	3485	010529	Gasket	3764	012809	Welch Plug
1605273	012225	Mixture Screw	3486	010527	Strainer Cover	3765	04784	Ball
1605275	011428	Washer	3487	010526	Diaph.Cover	3766	013300	Shaft & Lever
1605277	012510	Check Valve	3488	010571	Screw	3767	013263	Shutter
1605278	012781	Lever Asm.	3489	010880	Gasket	3768	013215	Gasket
1605279	011755	Nut	3490	012698	Diaph.	3769	013278	Diaph.
1605280	012145	Screw & Lockwasher	3491	010525	Pump Body	3770	013216	Cover
1605281	07844	Washer	3492	010775	Spring	3771	013652	Diaph.
1605282	013543	Shaft & Lever	3493	GS-122	Gasket Set	3772	013218	Gasket
1605283	09678	Clip	3494	RK-12HL	Repair Kit	3773	013167	Cover
1605284	0992	Lockwasher	3495	011007	Body	3774	011441	Screw & Lockwasher
1605285	01974	Screw	3496	010617	Mixture Screw	3775	013267	Mixture Screw
1605286	013541	Spring	3497	010624	Mixture Screw	3776	013395	Lever
1605287	013534	Shutter	3498	RK-316	Repair Kit	3777	013210	Pinion Pin
1605289	GS-197	Gasket Set	3499	09780	Bushing	3778	013269	Screw
1605290	RK-848	Repair Kit	3501	012054	Body	3779	013396	Needle
16051111	013647	Flange Gasket	3502	012053	Shaft & Lever	3780	012727	Screen
4730551	OW-449	Fuel Strainer	3503	011883	Shutter	3781	013268	Mixture Screw
4981104	OW-355	Cover	3504	012051	Shaft & Lever	3782	013296	Shaft & Lever
4981105	OW-352	Screen	3505	010392	Clip	3783	013219	Clip
4981106	06096	Gasket	3506	058	Screw	3784	010280	Screw & Lockwasher
49811078	06137	Strainer Bowl	3507	010393	Connection	3785	013518	Spring
4981108	OW-462	Thumb Nut	3508	012121	Body	3786	04119	Shutter
49811094	OW-446	Wire & Stud	3509	012271	Body	3787	GS-1HS	Gasket Set
49811102	OW-432	Shut Off Valve	3510	010781	Shaft & Lever	3788	RK-1HS	Repair Kit
			3511	011498	Mixture Screw	3789	014035	Needle & Seat
			3512	010784	Mixture Screw	3790	014020	Control Lever
			3513	011401	Packing	3791	RK-789	Repair Kit
			3514	011428	Washer	3792	OW-497	Fuel Tank Filter
			3515	012120	Shaft & Lever	3793	014720	Body
3402	HL-5A	Carburetor	3516	011494	Mixture Screw	34003	013318	Elbow
3403	HL-277A	Carburetor	3517	011272	Mixture Screw	34015	HS-58A	Carburetor
3404	HL-84B	Carburetor	3518	GS-145	Gasket Set	34016	HS-59A	Carburetor
3404	HL-84A	Carburetor	3519	RK-447	Repair Kit	34017	014930	Gov. Valve
3405	HL-91AX	Carburetor	3701	HL-125A	Carburetor	34018	015308	Gov. Valve
3413	05454	Friction Pin	3701	HL-125B	Carburetor	34019	014887	Screw
3414	05095	Screw	3701	HL-125C	Carburetor	34021	014390	Shaft

BEAIRD-POULAN, INC.

BEAIRD-POULAN, INC.(Cont.)

BOMBARDIER (Cont.)

BOMBARDIER (Cont.)

34022	GS-1HS	Gasket Set	403 0002	HR-1A	Carburetor	404 0038	012354	Gasket
34023	RK-3HS	Repair Kit	403 0003	HR-4A	Carburetor	404 0039	014319	Gasket
34024	010404	Gasket	403 0004	HD-4A	Carburetor	404 0040	08304	Gasket
34025	HL-276A	Carburetor	403 0005	HL-233B	Carburetor	404 0041	012930	Gasket
34026	015309	Body	403 0006	HR-7A	Carburetor	404 0042	010531T	Pump Diaph.
34027	GS-211	Gasket Set	403 0007	HD-8A	Carburetor	404 0043	014230	Pump Diaph. (Pulse)
34028	RK-880	Repair Kit	403 0008	HD-8B	Carburetor	404 0044	014229	Pump Diaph. (Valve)
34032	011460	Filter Element	403 0009	HD-8B	Carburetor	404 0046	013335	Pump Body
34033	HL-284A	Carburetor	403 0011	HR-17B	Carburetor	404 0047	010098	Screw & Lockwasher
34037	RK-67HL	Repair Kit	403 0012	HR-16B	Carburetor	404 0048	014142	Screw
34038	RK-12HL	Repair Kit	403 0013	HD-20A	Carburetor	404 0049	010530	Strainer Screen
34039	RK-19HL	Repair Kit	403 0014	HD-21A	Carburetor	404 0050	010529	Gasket
34042	015083	Welch Plug	403 0015	HD-22A	Carburetor	404 0051	010527	Strainer Cover
34043	014679	Gasket	403 0016	HR-37A	Carburetor	404 0052	010571	Screw
34044	015094	Diaph.	403 0017	HR-40A	Carburetor	404 0053	011498	Mixture Screw
34045	014680	Diaph. Cover	403 0018	HR-17C	Carburetor	404 0054	014239	Mixture Screw
34046	014695	Gasket	403 0019	HD-69A	Carburetor	404 0055	014247	Mixture Screw
34047	014694	Gasket	403 0020	HR-73A	Carburetor	404 0056	08793	Spring
34048	014693	Diaph.	403 0022	HR-77A	Carburetor	404 0057	011428	Washer
34049	014619	Pump Body	403 0023	HR-75A	Carburetor	404 0058	03114	Washer
34051	015089	Screw & Lockwasher	403 0024	HR-76A	Carburetor	404 0059	011401	Packing
34052	015589	Mix. Screw	403 0025	HD-22B	Carburetor	404 0060	014311	Mixture Screw
34053	013270	Screw	403 0026	HD-20B	Carburetor	404 0061	014321	Mixture Screw
34054	011431	Spring	403 0027	HD-21B	Carburetor	404 0062	014323	Mixture Screw
34055	015651	Control Lever	403 0028	HD-66A	Carburetor	404 0063	010511	Ring
34056	015084	Pin	403 0029	HD-72A	Carburetor	404 0064	05095	Screw
34057	013396	Needle	403 0031	HR-112A	Carburetor	404 0065	012177	Screw
34058	015138	Spring	403 0032	HD-81A	Carburetor	404 0066	011811	Screw
34059	016177	Master Screw	403 0033	HD-83A	Carburetor	404 0067	0788	Spring
34061	015091	Shaft & Lever	403 0034	HD-98A	Carburetor	404 0068	011103	Spring
34062	010592	Spring	403 0035	HD-99A	Carburetor	404 0069	010513	Control Lever
34063	014867	Shutter	403 0036	HD-100A	Carburetor	404 0070	014020	Control Lever
34064	GS-1HU	Gasket Set	403 0037	HD-101A	Carburetor	404 0071	010581	Pinion Screw
34065	RK-1HU	Repair Kit	403 0039	HR-128A	Carburetor	404 0072	013406	Pinion Pin
34066	015658	Check Valve	403 0040	HR-132A	Carburetor	404 0073	013269	Screw
34068	016389	Pump Body	403 0041	HR-131A	Carburetor	404 0075	013546	Needle & Seat
34069	016827	Mix. Screw	403 0042	HR-134A	Carburetor	404 0076	014053P	Needle & Seat
34071	016828	Screw	403 0043	HR-135A	Carburetor	404 0077	014237	Needle & Seat
34072	016829	Nozzle	403 0044	HR-133A	Carburetor	404 0079	010165	Gasket
34073	013015	Ball	403 0045	HR-136A	Carburetor	404 0081	011503	Spring
34074	016872	Shaft & Lever	403 0046	HR-137A	Carburetor	404 0082	013434	Spring
34075	012038	"E" Ring	403 0047	HD-107A	Carburetor	404 0084	012225	Mixture Screw
34076	016390	Spring	403 0048	HD-109A	Carburetor	404 0086	012084	Check Valve
34077	RK-3HU	Repair Kit	403 0049	HD-108A	Carburetor	404 0087	012510	Check Valve
34078	DG-1HU	Dia. & Gasket Set	403 0050	HD-110A	Carburetor	404 0088	014334	Check Valve
34079	015655	Dia. Cover	403 0051	HR-143A	Carburetor	404 0089	014578	Check Valve
34082	HS-149A	Carburetor	403 0053	HD-123A	Carburetor	404 0097	014005	Shaft & Lever
34083	016989	Shaft & Lever	403 0054	HR-149A	Carburetor	404 0098	014012	Shaft & Lever
34084	016985	Mixture Screw	403 0057	HR-152A	Carburetor	404 0099	013997	Shaft & Lever
34085	013692	Diaphragm	403 0058	HD-100AX	Carburetor	404 0100	014332	Shaft & Lever
34086	013434	Spring	403 0060	HR-155A	Carburetor	404 0101	014243	Shaft & Lever
34087	016984	Mixture Screw	403 0063	HR-161A	Carburetor	404 0102	09678	Cup
34088	016256	Shaft & Lever	403 0064	HD-134A	Carburetor	404 0103	013219	Cup
34089	016543	Spring	403 0065	HD-138A	Carburetor	404 0104	014118	Cup
34091	016218	Shutter	403 0066	HR-164A	Carburetor	404 0105	0992	Lockwasher
34092	RK-7HS	Repair Kit	403 0067	HRM-3A	Carburetor	404 0106	01974	Screw
34093	DG-1HS	Dia. & Gasket Set	403 0074	HR-168A	Carburetor	404 0109	013998	Spring
34094	016532	Sleeve	403 5001	FP-6	Fuel Pump Asm.	404 0110	014115	Spring
44400	MD-50A	Carburetor	403 8000	FPT-1A	Fuel Pump Asm.	404 0111	014324	Spring
142595	HL-203A	Carburetor	404 0010	02531	Welch Plug	404 0112	012283	Shutter
608571	012475	Diaph.	404 0011	04326	Welch Plug	404 0114	013534	Shutter
610592	HL-9B	Carburetor	404 0012	05454	Pin	404 0116	013745	Shutter
627556	013909	Spring	404 0013	04784	Ball	404 0117	014320	Shutter
633681	012339	Needle & Seat	404 0014	08805	Spring	404 0119	GS-1HL	Gasket Set
633710	011460	Filter Element	404 0017	013540	Shaft & Lever	404 0120	GS-1HL	Gasket Set
633748	012347	Welch Plug	404 0018	014002	Shaft & Lever	404 0121	GS-1HR	Gasket Set
641501	OW-497	Fuel Tank Filter	404 0019	014309	Shaft & Lever	404 0122	GS-1HD	Gasket Set
642591	HL-201A	Carburetor	404 0020	014328	Shaft & Lever	404 0126	RK-32HL	Repair Kit
642593	HL-202A	Carburetor	404 0021	013777	Shaft & Lever	404 0127	RK-3HL	Repair Kit
642595	HL-203A	Carburetor	404 0022	09195	Shutter	404 0128	RK-3HL	Repair Kit
650777	GS-2HL	Gasket Set	404 0023	013163	Shutter	404 0129	RK-3HL	Repair Kit
650779	RK-26HL	Repair Kit	404 0024	013547	Shutter	404 0130	RK-1HR	Repair Kit
			404 0025	014232	Shutter	404 0131	RK-2HD	Repair Kit
			404 0026	014325	Shutter	404 0132	010588	Cup Plug
			404 0027	010280	Screw & Lockwasher	404 0134	012305	Screw
			404 0028	08942	Screw & Lockwasher	404 0135	058	Screw
			404 0029	02232	Plug Screw	404 0136	014007	Lever Assm.
000 0110	014540	Jet (.037)	404 0030	012473	Gasket	404 0137	06396	Lockwasher
000 0111	015538	Jet (.038)	404 0031	014120	Gasket	404 0138	06393	Screw
000 0112	013266	Jet (.039)	404 0032	012475	Diaphragm	404 0139	0675	Plug Screw
000 0115	016709	Jet (.051)	404 0033	014248	Diaphragm	404 0140	013138	Jet (.036)
000 0116	016594	Jet (.053)	404 0034	010526	Diaphragm Cover	404 0141	014246	Jet (.120)
000 0117	016682	Jet (.054)	404 0035	013549	Diaphragm Cover	404 0142	013094	Gasket
000 0118	015430	Jet (.058)	404 0036	HD-100A	Carburetor	404 0143	06076	Gasket
000 0119	016618	Jet (.060)	404 0037	014249	Diaphragm Cover	404 0144	0676	Gasket

BOMBARDIER

BOMBARDIER (Cont.)

404 0146 04920 Washer
 404 0147 013853 Gland
 404 0148 014244 Stop Pin
 404 0149 012958 Lockwasher
 404 0150 014220 Diaphragm
 404 0151 014221 Diaphragm
 404 0152 013721 Gasket
 404 0153 08315 Screw & Lockwasher
 404 0154 014200 Pump Body
 404 0155 014418 Pump Cover
 404 0157 014580 Sleeve
 404 0158 014478 Cup
 404 0159 014602P Needle & Seat
 404 0160 RK-3HL Repair Kit
 404 0162 RK-1HR Repair Kit
 404 0163 014598 Leak Detector
 404 0164 0244 Pipe Plug
 404 0165 014642 Diaph. Cover
 404 0166 014643 Gasket
 404 0167 014644 Diaphragm
 404 0168 014645 Pump Body
 404 0169 014683P Needle & Seat
 404 0170 014646 Gasket
 404 0171 014647 Diaphragm
 404 0172 014688 Valve Body
 404 0173 014687 Screw & Lockwasher
 404 0174 013683 Gasket
 404 0175 GS-1HD Gasket Set
 404 0176 RK-1HD Repair Kit
 404 0177 GS-1HR Gasket Set
 404 0178 GS-1HR Gasket Set
 404 0179 015009 Jet (.120)
 404 0180 015010 Shutter
 404 0181 011516 Screen
 404 0182 014937 Strainer Cover
 404 0183 015120 Line Connector
 404 0184 RK-1HD Repair Kit
 404 0186 014966 Shaft & Lever
 404 0187 014962 Shutter
 404 0188 014877 Diaph. Cover
 404 0189 014878 Pump Body
 404 0190 014880 Diaphragm
 404 0191 014881 Gasket
 404 0192 014971 Mixture Screw
 404 0193 014879 Valve Body
 404 0194 014882 Screw
 404 0195 014883 Diaphragm
 404 0196 014884 Gasket
 404 0197 014969 Shaft & Lever
 404 0198 014961 Shutter
 404 0199 GS-1HR Gasket Set
 404 0200 RK-2HR Repair Kit
 404 0202 014964 Mixture Screw
 404 0203 GS-1HR Gasket Set
 404 0206 RK-2HR Repair Kit
 404 0207 014834 Gasket
 404 0208 GS-1HD Gasket Set
 404 0210 015185 Shaft & Lever
 404 0211 015455 Elbow Connector
 404 0212 015194 Gasket
 404 0213 015188 Valve Body & Strainer
 404 0214 015336 Bracket
 404 0215 014995 Clamp
 404 0216 014998 Screw
 404 0217 014997 Nut
 404 0218 015223 Shaft & Lever
 404 0219 014348 Spring
 404 0220 055 Screw
 404 0221 GS-1HD Gasket Set
 404 0222 RK-1HD Repair Kit
 404 0223 015100 Plug Screw
 404 0224 014349 Bracket
 404 0225 015223 Shaft & Lever
 404 0226 RK-1HD Repair Kit
 404 0227 015192 Jet (.081)
 404 0228 RK-1HD Repair Kit
 404 0229 014632P Needle & Seat
 404 0232 015340 Shaft & Lever
 404 0234 RK-2HR Repair Kit
 404 0235 015218 Screen
 404 0238 015358 Shaft
 404 0239 0702 Gland
 404 0244 014617 Connector
 404 0246 015365 Shaft & Lever
 404 0247 015455 Elbow Connector

BOMBARDIER (Cont.)

404 0248 015361 Screw Asm.
 404 0249 014993 Jet
 404 0250 015336 Bracket
 404 0251 015384 Screw
 404 0252 015223 Shaft & Lever
 404 0253 012101 Jet (.045)
 404 0254 011763 Jet (.049)
 404 0255 011764 Jet (.051)
 404 0256 012027 Jet (.047)
 404 0260 010404 Gasket
 404 0261 GS-1HR Gasket Set
 404 0262 RK-2HR Repair Kit
 404 0264 015000 Bracket
 404 0265 015005 Screw & Lockwasher
 404 0267 015604 Shaft & Pin Asm.
 404 0268 014621 Shutter
 404 0271 015596P Needle & Seat
 404 0272 RK-1HD Repair Kit
 404 0273 RK-1HD Repair Kit
 404 0274 015605 Jet (.042)
 404 0276 GS-1HR Gasket Set
 404 0277 RK-1HR Repair Kit
 404 0280 012284 Jet (.043)
 404 0281 DG-1HD Diaph. & Gasket Set
 404 0282 DG-1HD Diaph. & Gasket Set
 404 0283 015818 Jet (.040)
 404 0284 015817 Jet (.044)
 404 0285 015596 Needle & Seat
 404 0286 015676 Shaft & Lever
 404 0287 015864 Mixture Screw
 404 0288 015865 Shaft
 404 0289 015908 Shaft & Lever
 404 0290 014920 Jet (.096)
 404 0291 RK-1HD Repair Kit
 404 0292 015454 Elbow Connector
 404 0293 RK-2HR Repair Kit
 404 0294 RK-1HR Repair Kit
 404 0295 GS-1HR Gasket Set
 404 0296 RK-2HD Repair Kit
 404 0297 RK-1HD Repair Kit
 404 0298 GS-1HD Gasket Set
 404 0299 016036 Shaft & Lever
 404 0300 016038 Shaft & Lever
 404 0301 GS-1HL Gasket Set
 404 0302 RK-3HL Repair Kit
 404 0303 014988 Screw & Lockwasher
 404 0304 015912 Screw & Lockwasher
 404 0305 015984 Shutter
 404 0306 015988 Spring
 404 0307 016103 Shutter
 404 0308 016104 Gasket
 404 0309 016106 Shaft & Lever
 404 0310 016156 Shaft & Lever
 404 0311 GS-3HD Gasket Set
 404 0312 RK-5HD Repair Kit
 404 0313 DG-1HD Diaph. & Gasket Set
 404 0313 RK-4HD Repair Kit
 404 0314 016233 Shaft & Lever
 404 0315 010301 Screen
 404 0316 016292 Diaph. Cover
 404 0317 016196 Shaft & Lever
 404 0318 016290 Jet (.076)
 404 0319 015348 Diaph. Cover
 404 0320 016281 Shaft & Lever
 404 0322 016198 Nozzle Check Valve
 404 0326 016321 Bracket
 404 0327 016328 Bracket
 404 0335 014705 Float
 404 0336 015487 Cover
 404 0337 016322 Screw
 404 0338 016326 Cover
 404 0339 016329 Shaft & Lever
 404 0340 016330 Elbow
 404 0341 016331 Shaft & Lever
 404 0342 016332 Bracket
 404 0343 016357 Shaft & Lever
 404 0344 016367 Jet
 404 0346 016398 Jet (.052)
 404 0347 016527P Needle & Seat
 404 0348 01102 Plug Screw
 404 0349 016580 Lever
 404 0350 015941 Diaph. Cover
 404 0351 016466 Shutter
 404 0352 016517 Noz.Chk.Valve Asm.
 404 0353 016578 Bracket

BOMBARDIER (Cont.)

404 0354 016594 Jet (.053)
 404 0355 016614 Shaft & Lever
 404 0356 RK-6HD Repair Kit
 404 0358 014584 Diaph. Cover
 404 0359 016198 Nozzle Check Valve
 404 0360 016537 Shaft & Lever
 404 0361 016605 Shaft & Lever
 404 0362 016618 Jet (.060)
 404 0363 016624 Nozzle Check Valve
 404 0364 RK-3HR Repair Kit
 404 0365 014326 Screw
 404 0366 014499 Mix. Screw
 404 0367 014648 Valve Body
 404 0368 016373 Diaph. Cover
 404 0369 016581 Choke Shaft
 404 0370 016625 Choke Shaft
 404 0371 RK-4HR Repair Kit
 404 0372 RK-7HD Repair Kit
 404 0373 016675 Nozzle Check Valve
 404 0374 016676 Jet (.073)
 404 0375 016667 Diaph. Cover
 404 0377 016648 Jet (.125)
 404 0378 016679 Nozzle Check Valve
 404 0379 016682 Jet (.054)
 404 0381 016720 Nozzle Check Valve
 404 0382 RK-5HR Repair Kit
 404 0385 016708 Jet (.048)
 404 0388 015338 Jet (.056)
 404 0389 015333 Connector Tee
 404 0390 014989 Connector Tube
 404 0391 016837 Jet (.067)
 404 0393 RK-70HL Repair Kit
 404 0394 015430 Jet (.058)
 404 0399 016947 Nozzle
 404 0398 016869 Shaft & Lever
 404 0404 016635 Flange Gasket
 404 0407 016644 Screw & Lockwasher
 404 0410 016636 Metering Module Gasket
 404 0412 016643 Shaft & Lever
 404 0413 016620 Clip
 404 0415 016645 Venturi
 404 0416 GS-1HRM Gasket Set
 404 0417 RK-1HRM Repair Kit
 404 0418 DG-1HRM Diaph. & Gasket Set
 T-2 02531 Welch Plug
 T-3 05454 Friction Pin
 T-4 08805 Spring
 T-5 012452 Shaft & Lever
 T-6 09195 Shutter
 T-7 010280 Screw & Lockwasher
 T-8 02232 Plug Screw
 T-9 012473 Gasket
 T-10 012475 Diaph.
 T-13 012930 Gasket
 T-14 012698 Diaph.
 T-17 010530 Strainer Screen
 T-18 010529 Strainer Gasket
 T-19 010527 Strainer Cover
 T-22 08793 Spring
 T-28A 013406 Pinion Pin
 T-29 012655 Needle & Seat
 T-29B 014053 Needle & Seat
 T-30 012656 Gasket
 T-32 012454 Mix. Screw
 T-37 013394 Lever
 T-38 012145 Screw & Lockwasher
 T-39 07844 Washer
 T-40 011755 Nut
 T-41 012456 Shaft & Lever
 T-43 0992 Lockwasher
 T-44 01974 Screw
 T-45 010775 Spring
 T-46C 014013 Shutter
 T-49 RK-519 Repair Kit
 Z-SK-1532A HL-208A Carburetor
 Z-SK-1532B HL-209A Carburetor
 Z-SK-1532C HL-210A Carburetor
 E-17642 015818 Jet (.040)
 E-19810 015817 Jet (.044)
 E-20973 014580 Sleeve

J. I. CASE CO.

CHRYSLER OUTBOARD (Cont.)

CHRYSLER OUTBOARD (Cont.)

A-11200	OW-432	Shut Off Valve	110061	MD-115A	Carburetor	390431	FP-7	Fuel Pump
C-16145	FS-1	Filter	128061	MD-124A	Carburetor	404943	04777	Metering Cup
41931	OW-487	Fuel Strainer	130069	012419	Mix. Screw	432061	CO-8A	Carburetor
41932	OW-351	Cover	137061	OM-13A	Carburetor	433061-1	WB-17B	Carburetor
41933	06137	Strainer Bowl	141061	OM-16A	Carburetor	433473	06011	Res. Cup
41934	OW-487	Fuel Strainer	148061	MD-118A	Carburetor	434061-1	WB-16B	Carburetor
B-51975	07759	Strainer Bowl	154061	OM-19A	Carburetor	435061-1	WB-15B	Carburetor
B-51976	08227	Gasket	170061	MD-116EX	Carburetor	440061	TC-1A	Carburetor
B-51977	07762	Strainer Screen	174061	HL-130A	Carburetor	441061	TC-2A	Carburetor
51978	07766	Wire & Thumb Nut	174061-1	HL-189A	Carburetor	441069	016253	Jet (.110)
B-51979	07769	Shut Off Valve	175061-1	HL-232A	Carburetor	441069-1	016264	Jet (.106)
53256	OW-480	Fuel Strainer	178061	WB-2A	Carburetor	901473	06893	By Pass Fuel Res.
B-59393	08227	Gasket	178061-2	WB-2C	Carburetor	901473-1	05242	Metering Cup
74668	010841	Strainer Cover	178061-1	WB-2B	Carburetor	2659587	OM-31A	Carburetor

CHRYSLER OUTBOARD

10000	GS-1WB	Gasket Set	191061	OM-21A	Carburetor	2766061	HL-88A	Carburetor
10001	RK-1WB	Repair Kit	197061	MT-91A	Carburetor	2766061-1	HL-23B	Carburetor
10002	RK-2WB	Repair Kit	197061-1	MT-91B	Carburetor	2781061	MD-99A	Carburetor
10003	RK-3WB	Repair Kit	198061	MT-92A	Carburetor	2782061	HL-2A	Carburetor
10004	RK-4WB	Repair Kit	203061	OM-23A	Carburetor	2788061	HL-60A	Carburetor
10005	RK-5WB	Repair Kit	213061	OM-22A	Carburetor	2788061-1	HL-132A	Carburetor
10006	GS-1CO	Gasket Set	223070	012213	Mix. Screw	2788061-2	HL-132B	Carburetor
10007	RK-1CO	Repair Kit	229061	HL-122A	Carburetor			
10008	RK-2CO	Repair Kit	230069	013389	Mix. Screw			
10009	GS-1HL	Gasket Set	232061	011503	Spring			
10010	GS-4HL	Gasket Set	235061	HL-169A	Carburetor			
10011	RK-10HL	Repair Kit	236061	HL-173A	Carburetor			
10012	RK-31HL	Repair Kit	246061	HL-306A	Carburetor	1523/1	GS-145	Gasket Set
10014	RK-48HL	Repair Kit	250061	HS-10A	Carburetor	1523/2	RK-440	Repair Kit
10016	RK-56HL	Repair Kit	250061-1	HS-10B	Carburetor	1523/7	010579	Diaph.
10019	RK-7WB	Repair Kit	267061	OM-26A	Carburetor	1523/9	05095	Screw
10020	RK-6WB	Repair Kit	268061	OM-27A	Carburetor	1523/19	010513	Control Lever
10021	GS-1MD	Gasket Set	268061-1	OM-27B	Carburetor	1523/20	010527	Strainer Cover
10022	RK-1MD	Repair Kit	286061	MD-144A	Carburetor	1523/21	010529	Strainer Gasket
10023	GS-1TC	Gasket Kit	287061	OM-28A	Carburetor	1523/22	010530	Strainer Screen
10024	RK-1TC	Repair Kit	287500	013438	Bowl	1523/23	010531	Diaph.
10025	GS-2WB	Gasket Set	288061	MD-140A	Carburetor	1523/24	010542	Gasket
10027	RK-10WB	Repair Kit	288061-1	MD-143A	Carburetor	1523/25	010571	Screw
10028	DG-2HL	Diaph. & Gasket Set	288061-2	MD-143B	Carburetor	1523/26	010578	Spring
10053	RK-11WB	Repair Kit	288061-3	MD-143C	Carburetor	1523/27	010580	Needle & Seat
11000	0702	Gland	291061	MT-97A	Carburetor	1523/28	010581	Screw
11001	02510	Gasket	292431	FP-3	Fuel Pump Asm.	1523/30	010775	Spring
11002	016083	Jet (.098)	293061	OM-29A	Carburetor	1523/31	010880	Gasket
11003	0703	Packing Nut	295061	MD-139A	Carburetor	1523/32	011401	Packing
11004	09112	Packing	295061-1	MD-142A	Carburetor	1523/34	011428	Washer
11005	012227	Screw	295061-2	MD-142B	Carburetor	1523/36	011498	Mix. Screw
11008	014589	Choke Lever Asm.	295061-3	MD-142C	Carburetor	1523/37	011751	Mix. Screw
28061	MD-59A	Carburetor	302070	014154	Mix. Screw	1523/38	011883	Shutter
40861	CO-5A	Carburetor	303061	MD-137A	Carburetor	1523/39	012065	Shaft & Lever
46061	OM-5A	Carburetor	305061-2	WB-10D	Carburetor	1523/41	012068	Body
46973	06011	Idle Fuel Restriction	305061-3	WB-10E	Carburetor	1523/42	010526	Diaph. Cover
55061	MD-93A	Carburetor	307061	WB-3A	Carburetor	1523/56	010525	Pump Body
66061	MD-109A	Carburetor	309061	WB-4B	Carburetor	1523/71	013405	Washer
66789	OW-497	Fuel Tank Filter	309061-1	WB-4C	Carburetor	1523/72	013404	Bushing
67061	MD-94A	Carburetor	310061	WB-4A	Carburetor	2192/3	OW-497	Fuel Tank Filter
67061-2	MD-111A	Carburetor	311061	WB-5A	Carburetor	DA311	07766	Wire & Thumb Nut
75061-1	MD-112A	Carburetor	311061-1	WB-5B	Carburetor	DA312	07759	Strainer Bowl
76061	MD-89C	Carburetor	314412	08921	Shaft & Lever	DA313	08227	Gasket
77061	MD-108A	Carburetor	316061-1	WB-9B	Carburetor	DA656	HL-172B	Carburetor
78061	MD-113A	Carburetor	316061-3	WB-9D	Carburetor	DA-671	013404	Bushing
78061-1	MD-113B	Carburetor	318061	MD-145A	Carburetor	DD631T	OW-497	Fuel Tank Filter
79061	MD-114A	Carburetor	328061	WB-3B	Carburetor	55511	HS-57A	Carburetor
83943	04239	By-Pass Fuel Rest.	32061-1	WB-3C	Carburetor			
84069	012313	Jet (.078)	333061-1	WB-8B	Carburetor			
84500	07759	Strainer Bowl	333061-3	WB-8D	Carburetor			
84617	08227	Gasket	335061	WB-6A	Carburetor			
A84650	07766	Wire & Nut	336061	WB-10A	Carburetor			
85061	WB-1A	Carburetor	338061	CO-4A	Carburetor	AF-3778R	OW-483	Fuel Strainer
85061-1	WB-1B	Carburetor	343061	CO-3A	Carburetor	AF-3876	07770	Cover
85061-2	WB-1C	Carburetor	348061	CO-3A	Carburetor	AF-3877R	07762	Screen
87061	MD-116A	Carburetor	353061-1	WB-12B	Carburetor	AF-3879R	07772	Wire & Stud
87061-1	MD-116B	Carburetor	354061-1	WB-11B	Carburetor	AF-3880R	07765	Cup & Thumb Nut
89061	OM-20A	Carburetor	355061-1	WB-7B	Carburetor	AL-2087-T	OW-418	Fuel Strainer
89500	08902	Strainer Bowl	372061-1	WB-13B	Carburetor	AL-2117-T	OW-432	Shut Off Valve
A89650	08899	Clamp Wire & Nut Asm.	373061-3	WB-13D	Carburetor	AL-2118-T	OW-446	Wire & Stud
90061	OM-7B	Carburetor	372061-2	WB-13C	Carburetor	AL-2119-T	OW-462	Thumb Nut
93061	OM-11A	Carburetor	373061-1	WB-14B	Carburetor	AM-306-T	OW-426A	Fuel Strainer
93061-1	OM-12A	Carburetor	373069	014191	Jet (.0937)	F-3643-R	01102	Screw
93473	08802	Metering Cup	387061	CO-2A	Carburetor	F-3644-R	08227	Gasket
93943	04239	Metering Cup	388061	CO-4D	Carburetor	F-3645-R	07759	Bowl
98061	OM-9A	Carburetor	390061	CO-1A	Carburetor	L-884-T	OW-363	Bowl

DANARM

JOHN DEERE

JOHN DEERE (Cont.)

L-885-T	OW-352	Screen	23939
L-893-T	OW-355	Cover	23965
M-727-T	OW-351	Cover	23977
			23990
			23991
			29903
			30319
			35181
			35182
			35183
			35184
			35185
			35186
			35187
			35191
			35192
			35193
			36200
			36246
			36910
			37369
			37485
			B-37510
			37639
			38118
			38119
			38120
			38121
			38122
			38307
			38308
			38309
			38311
			38312
			38313
			38314
			38315
			38316
			38319
			38321
			38322
			38323
			38324
			38325
			38326
			38327
			38328
			38332
			38333
			38335
			38466
			38467
			38468
			38469
			38471
			38472
			38473
			38474
			38475
			38476
			38477
			38378
			38380
			38381
			38482
			38483
			38484
			38485
			38486
			38487
			38501
			38524
			38525
			38526
			39192
			39193
			40429
			40430
			40431
			40432
			40433
			40434
			40435
			40436
			40476

DESA IND.

INCLUDES REMINGTON ARMS

DESA IND. (Cont.)

0240	Screw	41532
09040	Lever	41925
09041	Lever	42772
04594	Pin	42787
09043	Idle Tube	42788
05322	Ball	42789
09300	Body	42790
01499	Lead Shot	42791
08881	Screw	42792
07921	Idle Tube	42793
05725	Spring	42815
01410	Lead Shot	42816
02405	Shutter	43049
08597	Clip	43049-A
08830	Shaft & Lever	43078
08559	Shutter	43080
07922	Nozzle	43100
MD-40A	Carburetor	43100-A
03426	Idle Tube	43128
ME-4A	Carburetor	43133
09053	Body	43134
MD-17A	Carburetor	43135
ME-3AX	Carburetor	43136
01830	Lever	43137
07951	Gasket	43138
07953	Bowl	43139
07952	Valve	43140
04119	Shutter	43141
09112	Packing	43142
02658	Gasket	43143
06806	Lever	43144
07901	Pin Screw	43145
07925	Pin	43146
07925	Spring	43147
07993	Pin	43148
07995	Link	43149
08018	Needle & Seat	43150
GS-114	Gasket Set	43151
08421	Shaft	43152
08189	Shutter	43153
08283	Shaft	43154
08285	Shutter	43155
08404	Mix. Screw	43156
08423	Nozzle	43157
08427	Screw	43158
08455	Shaft & Lever	43159
08531	Shaft & Lever	43159-A
08561	Body	43160
08717	Spring	43161
RK-244	Repair Kit	43162
054	Screw	43163
0164	Screw	43164
0212	Gasket	43165
0244	Pipe Plug	43166
0759	Lockwasher	43167
0992	Lockwasher	43168
08317	Screw & Lockwasher	43172
01675	Lockwasher	43174
05829	Mix. Screw	43175
04216	Cover	43176
08215	Float	43196
05425	Clip	43197
06905	Idle Tube	43227
06941	Valve & Seat	43282
07198	Gasket	43283
GS-112	Gasket Set	43647
07369	Shutter	43649
07417	Shaft & Lever	43650
07781	Body	43651
RK-213	Repair Kit	43652
RK-286	Repair Kit	43784
09285	Pin	43785
09287	Body	43786
09290	Shaft & Lever	43787
08599	Lever	43873
03444	Lever	44074
07929	Bowl	47510
RK-253	Repair Kit	48093
09716	Body	48175
GS-118	Gasket Set	48176
RK-267	Repair Kit	48177
GS-128	Gasket Set	48178
RK-133	Repair Kit	48390
09350	Repair Kit	48444
0124	Pin	48445
OW-400	Fuel Strainer	
OW-497	Fuel Tank Filter	
ME-3B	Carburetor	
09899	Needle & Seat	
010025	Shaft & Lever	
010076	Body	
01974	Screw	
09780	Bushing	
010073	Shaft & Lever	
010172	Bracket	
09625	Shutter	
09626	Shutter	
HP-4A	Carburetor	
HP-4B	Carburetor	
010404	Gasket	
010322	Shaft & Lever	
HP-2A	Carburetor	
HP-2B	Carburetor	
RK-145	Repair Kit	
010097	Outlet Check Valve	
010051	Nozzle	
09775	Mix. Screw	
09834	Connection	
010171	Shaft & Lever	
010175	Shaft & Lever	
010141	Needle & Seat	
09698	Diaph.	
010100	Inlet Check Valve	
09695	Pin Screw	
010179	Cover	
010180	Body	
010181	Pump & Cover	
010183	Body	
02232	Plug Screw	
02983	Plug Screw	
06076	Gasket	
08793	Spring	
08805	Spring	
09618	Shutter	
09676	Gasket	
09678	Clip	
09679	Plug Screw	
09681	Gasket	
09683	Spring	
09689	Screw & Lockwasher	
09697	Mix. Screw	
09699	Mix. Screw	
09708	Lever	
09930	Gasket	
09938	Seat	
010004	Washer	
010005	Screw	
010090	Diaph.	
010093	Clip	
010094	Spring	
010095	Plunger	
010176	Pin	
010178	Body	
0648	Gasket	
09884	Cap	
010287	Shaft & Lever	
ME-7A	Carburetor	
07944	Spring	
OW-304	Bowl	
OW-222	Gasket	
010336	Shaft & Lever	
010165	Gasket	
010337	Shaft & Lever	
010079	Lever	
06393	Screw	
GS-102	Gasket Set	
RK-157	Repair Kit	
RK-156	Repair Kit	
RK-161	Repair Kit	
OM-3A	Carburetor	
09780	Bushing	
ME-3A	Carburetor	
08612	Knob	
010228	Screw	
010615	Mix. Screw	
010732	Mix. Screw	
010057	Screw	
HL-17A	Carburetor	
03943	Plug Screw	
04326	Welch Plug	

DESA IND. (Cont.)

48448	06569	Gasket	62670
48449	06613	Shutter	62672
48450	07815	Nut	62673
48452	010277	Gasket	62675
48455	01276	Gasket	63770
48457	08736	Spring	63771
48458	010278	Screw & Lockwasher	63865
48459	010302	Shutter	63866
48461	010312	Pin	63867
48462	010344	Packing	63868
48464	010825	Bowl	63869
48465	010638	Idle Tube	63870
48467	010635	Shaft & Lever	63871
48468	010636	Shaft & Lever	63872
48469	010631	Mix. Screw	63873
48526	010634	Screw	63874
48573	010385	Gasket	63876
48599	010640	Body	63877
48601	010318	Float	63878
48602	06095	Washer	63879
48603	010341	Needle & Seat	63881
48604	02817	Gasket	63882
48605	GS-109	Gasket Set	63883
48606	RK-312	Repair Kit	63884
48607	010627	Nozzle	63885
48680	HL-10A	Carburetor	64331
48905	010730	Gasket	64445
48980	HL-12A	Carburetor	64446
49125	OW-497	Fuel Tank Filter	64447
49133	010588	Cup Plug	64448
49134	010898	Shaft & Lever	64449
49135	08942	Screw & Lockwasher	64450
49136	010579	Diaph.	64451
49137	012473	Gasket (Replaces 010542)	64452
49138	010526	Cover	64453
49139	010783	Lever	64454
49140	010880	Gasket	64455
49141	010531	Diaph.	64456
49142	010525	Body	64457
49143	010530	Screen	64458
49144	010529	Gasket	64459
49145	010527	Cover	64460
49146	010571	Screw	64461
49147	010617	Mix. Screw	64462
49148	010589	Seal Ring	64463
49149	010580	Needle & Seat	64464
49150	010513	Lever	64465
49151	010581	Pin Screw	64466
49152	010578	Spring	64467
49153	010624	Mix. Screw	64468
49154	010864	Shaft & Lever	64469
49155	010897	Shaft & Lever	64470
49156	010775	Spring	64471
49157	010379	Lever	64472
49158	GS-122	Gasket Set	64473
49159	RK-315	Repair Kit	64477
49160	010862	Shaft & Lever	64512
49490	HL-42A	Carburetor	64513
49582	HL-43A	Carburetor	64514
49595	011488	Shaft & Lever	64553
49804	010865	Body	64629
49824	011457	Shaft & Lever	64630
49946	HL-42B	Carburetor	64673
49947	HL-43B	Carburetor	64674
49949	010401	Packing	64677
49984	011428	Washer	64827
49985	011495	Adj. Screw	64921
49986	011716	Mix. Screw	65062
49989	RK-392	Repair Kit	65300
60215	011851	Needle & Seat	65301
60222	RK-409	Repair Kit	65314
60223	RK-60HL	Repair Kit	65320
60743	HL-118A	Carburetor	65326
60744	01248	Lever Asm.	65335
61453	HL-137A	Carburetor	65336
61493	012229	Choke Lever	65337
61859	HL-126A	Carburetor	65338
61868	GS-145	Gasket	65408
61869	RK-502	Repair Kit	65620
61904	010280	Screw & Lockwasher	65716
62661	012473	Gasket	65717
62662	011503	Spring	65723
62664	012489	Shutter	65730
62666	012698	Diaph.	65731
62669	012084	Check Valve	65733

DESA IND. (Cont.)

012475	Diaph.	66368
012799	Shaft	66566
012801	Shaft & Lever	66567
RK-547	Repair Kit	66770
HL-161A	Carburetor	66771
HL-159A	Carburetor	66772
04920	Washer	66773
012930	Gasket	66775
011046	Lever	66776
011498	Mix. Screw	66898
011814	Screw	66910
011815	Cover	66921
011816	Pump Body	66922
012420	Mix. Screw	67061
012566	Screw	67017
012918	Screen	67368
013179	Spring	67472
012476	Diaph.	67473
013180	Shaft & Lever	67474
013184	Shaft & Lever	100081A
013183	Spring	101088B
013182	Body	101109A
013181	Shaft & Lever	103211
GS-2HL	Gasket Set	104982
RK-25HL	Repair Kit	105031
HS-7A	Carburetor	105033
012884	Screen	T-674091
012345	Ring	
013372	Welch Plug	
012809	Welch Plug	
04784	Shutter	
013300	Shaft & Lever	
013263	Shutter	101.150.030
013215	Gasket	101.150.100
013278	Diaph.	101.150.110
013216	Cover	101.150.150
011441	Screw & Lockwasher	101.150.180
013217	Diaph.	101.150.410
013218	Gasket	101.150.470
013167	Cover	101.150.480
013267	Mix. Screw	101.150.520
013270	Screw	107.150.041
011431	Spring	107.150.210
013395	Lever	107.150.230
013210	Pinion Pin	107.150.240
013269	Screw	107.150.270
013396	Needle	109.150.201
012727	Screen	113.150.030
013268	Mix. Screw	113.150.040
013296	Shaft & Lever	113.150.110
013219	Clip	113.150.150
010280	Screw & Lockwasher	113.150.180
013518	Spring	113.150.190
GS-192	Gasket Set	113.150.210
RK-623	Repair Kit	113.150.251
RK-1HS	Repair Kit	113.150.261
013565	Needle & Seat	113.150.270
012089	Shutter	113.150.280
RK-620	Repair Kit	113.150.310
013278	Diaph.	113.150.320
013887	Screw	113.150.340
HS-19A	Carburetor	113.150.470
013857	Mix. Screw	113.150.510
013858	Mix. Screw	115.150.070
RK-1HS	Repair Kit	115.150.080
013652	Diaph.	115.150.140
010531T	Thin Pump Diaph.	115.150.210
014419	Gasket	115.150.260
HL-159A	Carburetor	115.150.300
HS-7A	Carburetor	115.150.520
HS-38A	Carburetor	115.150.550
HS-53A	Carburetor	115.150.560
HS-74A	Carburetor	122.151.000
014404	Shaft & Lever	122.151.300
013619	Shutter	144.151.250
GS-206	Gasket Set	144.151.300
RK-779	Repair Kit	144.151.310
HS-80A	Carburetor	144.151.315
HS-53A	Carburetor	144.151.320
015330	Primer Valve Asm.	144.151.470
014820	Primer Bulb Asm.	144.151.480
013327	Connection	144.151.510
RK-1HS	Repair Kit	
014779	Mix. Screw	
RK-827	Repair Kit	

DESA IND. (Cont.)

RK-965	Repair Kit	
RK-948	Repair Kit	
RK-3HS	Repair Kit	
015094	Diaph.	
014693	Diaph.	
014679	Gasket	
014694	Gasket	
015944	Screw	
015945	Screw	
015996	Mix. Screw	
HS-107A	Carburetor	
GS-2HU	Gasket Set	
RK-2HU	Repair Kit	
014465	Filter Element	
HS-108A	Carburetor	
015083	Welch Plug	
RK-3HS	Repair Kit	
RK-1HS	Repair Kit	
GS-1HS	Gasket Set	
0120	Screw	
010098	Screw & Lockwasher	
06062	Screw & Lockwasher	
06396	Lockwasher	
02531	Welch Plug	
03208	Lever Pin	
06490	Pin	
HL-251A	Carburetor	
		DOLMAR
02531	Welch Plug	
012473	Gasket	
012475	Control Diaph.	
011494A	High Speed Mix.Screw	
010530	Fuel Strainer	
06393	Screen	
011716A	Idle Mix. Screw	
08793	Spring	
GS-155	Gasket Set	
013340	Lever	
RK-27HL	Repair Kit	
012884	Screen	
012345	Ret. Ring	
012930	Gasket	
HL-176A	Carburetor	
013372	Welch Plug	
012809	Welch Plug	
013278	Diaph.	
013652	Diaph.	
012727	Screen	
013396	Inlet Needle	
RK-1HS	Repair Kit	
014146	Choke Shaft & Lever	
013263	Choke Shutter	
013218	Gasket	
013395	Control Lever	
013518	Spring	
04119	Throttle Shutter	
013215	Gasket	
013376	Idle Adjustment	
013374	Main Adjustment	
04784	Ball	
014020	Lever	
014229	Fuel Pump Dia.	
RK-5HL	Repair Kit	
014053	Inlet Needle	
014810	Throttle Shaft	
GS-158	Gasket Set	
014893	Gov. Valve	
010404	Gasket	
HS-148A	Carburetor	
016986	Shaft & Lever	
016989	Shaft & Lever	
016256	Shaft & Lever	
016543	Spring	
014532	Sleeve	
016218	Shutter	
016985	Mix. Screw	
013692	Spring	
016984	Mix. Screw	

FORD MOTOR CO.

HARLEY-DAVIDSON MOTOR CO.(Cont.)

CONN-9155A	OW-499	Fuel Strainer	27274-67	014266	Lever	27697-66R	013853	Gland
2N-9155B	OW-481S	Fuel Strainer	27276-63	012826	Shaft & Lever	27698-61	0676	Gasket
NAA -9155B	OW-486S	Fuel Strainer	27276-66	014050	Shaft	27699-55	010347	Mix. Screw
NCA-9155D	OW-488S	Fuel Strainer	27277-66R	014297	Shaft & Lever	27699-59	07972	Main Adj.Screw
APN-9158A	09964	WheelScrew & Lckwshr.	27295-66R	RK-697	Repair Kit	27700-55	0705	Packing
2N-9161	07846	Screen	27317-63	012284	Jet (.043)	27700-61	0702	Gland
CONN-9161A	012750	Screen	27347-69	012392	Spring	27700-63	012822	Screw
9N-9162	OW-363	Bowl	27352-66	013772	Mix. Screw	27701-55	07282	Packing Nut
CONN-9162A	09337	Strainer Bowl	27353-66	010511	Ring	27701-61	0703	Packing Nut
2N-9166	OW-447	Wire & Thumb Nut	27354-66	03114	Washer	27702-55	09159	Nozzle
APN-9194	09551	Valve Stem Kit	27407-66	05322	Ball	27702-60	09070	Nozzle
B-9447	0278	Flange Gasket	27411-67R	08304	Gasket	27703-55	06076	Gasket
B-9510A	XF	Carburetor	27413-63	010165	Gasket	27704-61	01102	Plug Screw
B-9510T	X	Carburetor	27415-61	07903	Gasket	27704-66	0675	Plug Screw
A-9590T	RK-332	Repair Kit	27593-66	012956	Nut	27705-61	08850	Nozzle
311272	OW-494	Fuel Strainer	27595-66	015397	Fulcrum Pin	27705-66	014049	Spring
311274	012750	Screen	27596-66	013269	Screw	27705-66A	015253	Spring
311275	011341	Gasket	27597-66	013774	Needle & Seat	27706-57	010519	Spring
311276	011339	Bowl	27597-67	014853	Needle & Seat	27706-63	012823	Spring
311277	011344	Wire & Thumb Nut	27598-66	013744	Gasket	27706-66	013738	Spring
			27599-66	013434	Spring	27707-57	07824	Seal
			27601-63	010529	Gasket	27707-66	013740	Seal
			27613-66	013406	Pinion Pin	27708-55	010444	Shaft
			27615-66	011394	Jet (.057)	27708-57	010844	Shaft
			27616-66	011396	Jet (.061)	27708-66	013782	Shaft & Lever
			27617-66	011765	Jet (.053)	27708-67	014297	Shaft & Lever
			27618-66	011722	Jet (.055)	27709-55	08597	Clip
			27619-66	011395	Jet (.059)	27710-55	010446	Lever & Swivel
12 706 PL	012706	Nut	27619-66R	014313	Jet (.089)	27710-59	011691	Lever & Wire Connection
13 013 PL	OW-418	Fuel Strainer	27620-66	011385	Jet (.063)	27711-55	010445	Lever
13 842 PL	OW-432	Shut Off Valve	27622-66	011764	Jet (.051)	27712-55	03804	Washer
13 843 PL	OW-363	Bowl	27624-66	011763	Jet (.049)	27712-66	013746	Washer
13 845 PL	OW-352	Screen	27640-66	06076	Gasket	27713-55	09067	Lever
13 846 PL	OW-355	Cover	27643-71	014645	Pump Body	27713-59	08490	Throttle Stop Lever
13 847 PL	OW-447	Wire & Thumb Nut	27644-66	04920	Washer	27714-55	08646	Shutter
13 848 PL	06096	Gasket	27658-66	013789	Check Valve	27714-61	012146	Shutter
			27661-66	09484	Seal	27714-63	012283	Shutter
			27667-71	015937	Lever Assembly	27714-66	013745	Shutter
			27668-66	013742	Relief Valve	27715-55	010393	Connection
			27669-66	013775	Spring	27715-59	011686	Choke & Wire Conn.
			27670-55	05454	Friction Pin	27715-61	012328	Connection
			27671-66	08805	Spring	27715-66	013534	Shutter
			27672-55	09158	Shaft & Lever	27715-67	014225	Connection
			27672-59	011692	Shaft & Lever	27716-55	010392	Washer
			27672-61	012330	Shaft & Lever	27716-61	012174	Washer
			27672-63	012811	Shaft & Lever	27716-67	014294	Connection
			27673-55	05088	Shutter	27717-59	05095	Screw
			27673-66	013741	Shutter	27717-66	012177	Screw
			27674-63	012818	Shutter	27718-61	012334	Shaft & Lever
			27674-63A	09558	Shutter	27718-63	012806	Shaft & Lever
			27674-66	014816	Shutter	27718-66	013777	Shaft & Lever
			27675-55	08880	Gasket	27718-67	014296	Shaft & Lever
			27678-61	03311	Plug Screw	27719-60	02672	Bushing
			27679-61	07896	Plug Screw	27720-61	08942	Screw & Lockwasher
			27680-55	012144	Float	27721-55	GS-106	Gasket Set
			27680-61	011294	Repair Kit	27721-61	GS-116	Gasket Set
			27680-63	012813	Float	27722-55	RK-164	Repair Kit
			27681-55	011564	Pin	27722-59	RK-397	Repair Kit
			27682-55	010471	Cover	27722-60	RK-467	Repair Kit
			27683-55	08658	Gasket	27722-61	RK-472	Repair Kit
			27684-61	012616	Fuel Bowl	27725-61	09644	Shutter
			27685-61	011859	Pinion Screw	27726-61	09678	Clip
			27688-55	08765	Mix. Screw	27727-61	09780	Bushing
			27688-61	012318	Mix. Screw	27728-61	010079	Lever
			27688-63	011825	Mix. Screw	27729-61	012111	Clip
			27688-66	013787	Mix. Screw	27730-61	013618	Spring
			27688-71	015698	Mix. Screw	27730-63	012821	Shaft & Lever
			27689-55	08793	Spring	27730-66	014048	Shaft & Lever
			27689-61	011103	Spring	27730-67	014268	Choke Shaft Assem.
			27690-61	06569	Gasket	27731-61	011072	Seal
			27691-55	09068	Spring	27731-65	013507	Spring
			27691-59	0788	Spring	27732-61	01974	Screw
			27692-55	08875	Idle Tube	27732-63	010571	Screw
			27692-60	011127	Idle Tube	27733-61	0992	Lockwasher
			27692-61	012320	Idle Tube	27734-62	010911	Screen
			27693-55	09120	Needle & Seat	27735-61	06062	Screw & Lockwasher
			27693-59	011688	Needle & Seat	27736-65	07847	Washer
			27693-61	012325	Needle & Seat	27740-61	012321	Mix. Screw
			27693-63	012339	Needle & Seat	27740-63	010513	Control Lever
			27693-66	014053	Needle & Seat	27740-66	014020	Control Lever
			27694-55	02510	Gasket	27740-70R	013589	Inlet Lever
			27695-66R	013854	Mix. Screw	27742-61	012326	Spring
			27696-63	010581	Screw	27743-61	012327	Stop Screw
			27696-66	013269	Screw	27744-61	012332	Screw
			27697-61	09112	Packing	27745-66R	013855	Mix. Screw

GALE PRODUCTS
(SEE OUTBOARD MARINE)

GRAVELY CORP.

HARLEY-DAVIDSON MOTOR CO.

27746-66	010301	Screen	14864-A	05570	Pipe Adapter	28057	0702	Gland
27747-66	010050	Cup	27619-A	OW-304	Bowl	28058	0703	Nut
27759-66	012761	Lever	27619-B	OW-448	Fuel Strainer	28062	0737	Spring
27760-63	010525	Pump Body	27643-BS	M-1BR	Carburetor	28063	0759	Lockwasher
27760-66	013785	Pump Assembly	38643-BS	YC-10A	Carburetor	28064	0788	Spring
27760-71	014992	Shaft and Lever	68910-BS	OW-469G	Fuel Strainer	28065	0802	Screen
27760-71A	015959	Shaft and Lever	59613	YC-10A	Carburetor	28066	0849	Screw
27761-63	012930	Gasket	201772-BS	OW-400	Fuel Strainer	28068	01102	Plug Screw
27775-74	08942	Screw & Lockwasher	203745-BS	OW-469B	Fuel Strainer	28069	01108	Screw
27804-63	014336	Diaph. Cover	203745	OW-432	Shut Off Valve	28070	01115	Screen
27804-66	013772	Pump Body	236037	OW-418	Fuel Strainer	28072	01400	Gasket
27804-66A	014871	Pump Body	377138	OM-24A	Carburetor	28073	01434	Screw
27804-66R	014117	Diaph. Cover	377422-D	OM-25A	Carburetor	28078	01449	Lead Shot
27805-63	010527	Strainer Cover	377657	MD-132A	Carburetor	28079	08317	Screw
27806-63	012473	Gasket	377657	MD-132B	Carburetor	28082	01592	Screw
27806-66	013731	Gasket				28084	01794	Cover
27806-66R	014120	Gasket				28085	01845	Gasket
27807-63	010098	Screw & Lockwasher				28086	01942	Shaft
27808-63	010530	Strainer Screen				28091	02232	Plug Screw
27809-63	012698	Diaphragm				28092	02656	Gland
27809-63A	014229	Pump Diaphragm				28094	02695	Nut
	014230	Pump Diaphragm				28096	02698	Screw
27810-63	011428	Washer				28097	0244	Plug
27811-63	011401	Packing				28098	02817	Gasket
27812-63	02232	Plug Screw				28100	03075	Main Adj. Needle
27812-66	013771	Screw	NP 121	MD-50A	Carburetor	28102	03208	Pin
27812-66R	014142	Screw	15037	0705	Packing	28106	03444	Lever
27813-63	011503	Spring	18330A	MS-94A	Carburetor	28110	07870	Connection
27814-66	01Q278	Screw & Lockwasher	18330B	MS-94A	Carburetor	28111	03517	Pin
27815-63	012084	Check Valve	19123-A	MS-86A	Carburetor	28113	03738	Screw
27816-63	012475	Diaphragm	19123-B	MS-86AX	Carburetor	28114	07958	Screw
27816-66R	014248	Diaphragm	19345	OW-473	Fuel Strainer	28119	04107	Lever
27816-66	013790	Diaphragm	19404	MS-107A	Carburetor	28122	04123	Shaft
27817-71	014248	Diaphragm	22401	09397	Body	28123	04139	Screw
27818-66	013094	Gasket	24929	06485	Gasket	28124	04283	Float
27821-63	012370	Jet (.041)	25050	04119	Shutter	28125	04567	Shaft
27819-63	014540	Jet (.037)	25450	07421	Gasket	28126	04594	Pin
27820-63	013266	Jet (.039)	25725	06096	Gasket	28129	08317	Screw & Lockwasher
27822-63	012284	Jet (.043)	26198	02409	Screw	28130	04920	Washer
27823-66R	011482	Jet (.081)	26199	02410	Gasket	28131	05088	Shutter
27824-71	014348	Spring	26200	0337	Gasket	28132	05243	Float
27825-71	014118	Clip	26496	03076	Screw	28139	05566	Lever
27826-71	014997	Nut	26781	07870	Connection	28143	05605	Needle & Seat
27827-71	014998	Screw	26910	011101	Mixture Screw	28146	05680	Connection
27828-71	014995	Clamp	27426	MS-45H	Carburetor	28150	05792	Seat
27829-71	014999	Bracket	28047	051	Screw	28152	05794	Body
27830-71	013683	Gasket	28048	058	Screw	28153	05795	Needle & Seat
27831-71	011516	Screen	28049	0120	Screw	28154	05935	Pin
27832-71	014578	Check Valve	28050	0124	Pin	28160	06146	Valve
27833-71	014993	Jet (.089)	28051	0138	Screw	28162	06440	Body
27833-74	016995	Jet (.0635)	28053	0379	Pin	28163	06701	Packing
27834-71	013853	Gland	28054	0675	Screw	28164	06702	Washer
27835-71	014247	Mixture Screw	28055	0676	Gasket	28165	06780	Screw
27836-71	010079	Lever	28056	0685	Gasket	28175	08318	Shutter
27837-71	014647	Diaphragm						
27838-71	014646	Gasket						
27839-71	015219	Spring						
27840-71	015218	Screen						
27841-71	015596	Needle & Seat						
27842-71	013406	Pinion Pin						
27843-71	014239	Mixture Screw						
27844-71	014937	Strainer Cover						
27845-71	014644	Diaphragm						
27846-71	014643	Gasket						
27847-71	015455	Elbow Connector						
27848-71	015941	Diaphragm Cover						
27849-71	014120	Gasket						
27850-71	015010	Shutter						
27851-71	015052	Shaft						
27852-71	014988	Screw & Lockwasher						
27853-71	015384	Screw						
27854-71	014687	Screw & Lockwasher						

HOMELITE
(Including Terry Industries)

HOMELITE (Cont.)

28177	OW-352	Screen	A54964
28178	OW-355	Cover	54984
28179	OW-363	Bowl	54988A
28180	OW-446	Wire & Stud	55285
28181	OW-446	Wire & Stud	55171
28182	OW-447	Wire & Nut	55172
28183	OW-460	Cup & Nut	A55285
28185	OW-462	Cup & Nut	55306
29071	0225	Gasket	55307
29726	0890	Float	55308
30818	02531	Welch Plug	55309
30819	05591	Gasket	55310
30821	0244	Plug	55312
30830	01892	Quadrant Asm.	55313
30833	0240	Screw	55314
31853	08595	Mix. Screw	55315
31854	07895	Needle & Seat	55316
31855	07804	Float	55317
31856	08846	Screw & Nut	A55320
A33141	010541	Body	A55321
33146	MT-44A	Carburetor	55322
A33146-A	MT-44B	Carburetor	55323
33339	010524	Body	55324
33340	010521	Cover	55325
33341	010500	Needle & Seat	55344
33342	09100	Nozzle	55345
33343	09649	Shaft & Lever	55346
33344	09307	Lever	55556
33345	08690	Lever	A55556A
33346	010518	Shaft	A55582
33347	010519	Spring	55583
33348	08656	Float	55612
33349	08796	Pinion Pin	55745
33350	02519	Welch Plug	55746
33351	010520	Mix. Screw	55747
33352	07972	Mix. Screw	55748
33353	07282	Packing Nut	55749
33354	08875	Idle Tube	55750
33355	08658	Gasket	55751
33356	010543	Body	55752
A33364	MT-53A	Carburetor	55753
A33364-1	MT-53A	Carburetor	55754
33609	011131	Shaft	55756
33610	011133	Body	55759
34020	012371	Pin	55760
39717	02681	Connection	A55761
40168	05791	Nozzle	55762
41263	OW-469	Fuel Strainer	A55762
42737	017147	Nozzle & Orifice Asm.	55763
44343	RK-378	Repair Kit	55764
50590	RK-2HS	Repair Kit	55765
50677	HS-130A	Carburetor	A55766
A-51347	016692	Governor Valve Asm.	55767
A-51348	016694	Check Valve & Jet	A55767
53209	E-22404	Idle Adj. Needle	55768
53210	E-22405	Main Adj. Needle	55769
53468	013220	Gasket	A-55786
53565	015559	Spring	A55819
53566	015561	Shutter	55836
53567	015557	Shaft	55837
A54264-A	HS-35B	Carburetor	55838
A54264	HS-35A	Carburetor	55881
A54264-1	HS-35B	Carburetor	56066
A54417	HS-40A	Carburetor	A56067
54439	014415	Lever	56175
54440	013692	Spring	56224
54441	013708	Diaph. Cover	A-56308
54442	013959	Mix. Screw	56312
54443	014372	Mix. Screw	A56484
54444	014374	Check Valve	56619
54445	014377	Shaft & Lever	56624
54446	RK-749	Repair Kit	56627
A54445A	014803	Shaft & Lever	56630
54599	014375	Shaft	A56639
A54617	HS-45A	Carburetor	A56641-1
A54617A	HS-45C	Carburetor	56642
54697	013374	Mix. Screw	A56643
54698	013376	Mix. Screw	56644
54699	014546	Shaft	56649
54700	014547	Shaft	A56760
54751	RK-788	Repair Kit	A56770
A54766	HS-48A	Carburetor	A56769
54920	014905	Filter Element	A56769-1

HOMELITE (Cont.)

OW-808	Fuel Tank Filter	A56800
014904	Screen	56831
RK-929	Repair Kit	A56960
HP-1B	Carburetor	A57012
010002	Lever	57062
010003	Clip	57063
HP-1B	Carburetor	57093
09834	Connection	A57353
010067	Shaft & Lever	A57354
09625	Shutter	57429
010063	Pin	A57433
010051	Nozzle	A57440
010041	Body	A57440
010090	Pump Diaph.	A57728
010100	Inlet Check Valve	57729
010097	Outlet Check Valve	A-57798
010098	Screw & Lockwasher	A-57798A
010065	Shaft & Lever	A57806
010101	Pump & Cover	57818
010115	Body	57819
010116	Cover	57820
010093	Clip	57821
010094	Spring	57824
010095	Plunger	57827
010165	Gasket	57829
GS-102	Gasket Set	57830
RK-137	Repair Kit	57831
010071	Body	57833
01757	Body	57842
HP-15B	Carburetor	57843
HP-15B	Carburetor	A57877
010761	Body	57897
01407	Tube	57919
01410	Lead Shot	57920
010513	Control Lever	57922
010525	Pump Body	57923
010526	Cover	57960
010527	Strainer Cover	57960A
010529	Gasket	57962
010530	Screen	57963
010531	Diaph.	57964
010542	Gasket	57978
010571	Screw	57979
010578	Spring	57987
010579	Diaph.	58001
010580	Needle & Seat	58019
010581	Screw	58021
010581	Screw	58046
010588	Cup Plug	A58102
010589	Seal Ring	58191
010608	Shaft & Lever	58193
010610	Shaft & Lever	58194
011221	Screw	58288
010617	Mix. Screw	A58360
011216	Mix. Screw	A58360A
011228	Body	58380R
HL-4A	Carburetor	58386
010802	Shaft & Lever	58388
GS-122	Gasket Set	58396
RK-301	Repair Kit	A58403
RK-316	Repair Kit	A58524
010880	Gasket	58525
HL-27B	Carburetor	58526
HL-28B	Carburetor	58527
011267	Spring	58528
011768	Lever	58529
HL-62B	Carburetor	58530
011777	Air Horn Ring	A58531
HL-46B	Carburetor	A58532
010119	Inlet Seat Insert	A58533
012436	Check Valve	58534
011716	Mix. Screw	58535
011773	Spring	58536
011782	Shaft & Lever	A58562
013108	Shaft & Lever	58569
011785	Welch Plug	58680
011786	Body	58681
011789	Mix. Screw	58727
RK-402	Repair Kit	A58767
HL-82A	Carburetor	A58767B
011922	Body	58971
013130	Shaft & Lever	58972
013130	Shaft & Lever	58973

HOMELITE (Cont.)

HL-101A	Carburetor
012629	Body
HL-82A	Carburetor
HL-62AX	Carburetor
011856	Pump Diaph.
012108	Body
RK-444	Repair Kit
HL-104A	Carburetor
HL-105A	Carburetor
HL-62AX	Carburetor
012135	Shaft & Lever
HL-104A	Carburetor
HL-105A	Carburetor
012339	Needle & Seat
010531T	Thin Pump Diaph.
HL-117A	Carburetor
HL-117B	Carburetor
HL-119A	Carburetor
012344	Screen
012345	Ring
012347	Cup Plug
012464	Body
012473	Gasket
012489	Shutter
012475	Diaph.
012476	Cover
012629	Body
012488	Mix. Screw
GS-154	Gasket Set
RK-491	Repair Kit
HL-123AX	Carburetor
RK-509	Repair Kit
GS-155	Gasket Set
RK-498	Repair Kit
012497	Shaft & Lever
012498	Diaph. Cover
RK-482	Repair Kit
RK-523	Conversion Kit
012582	Nozzle
012479	Needle & Seat
GS-153	Gasket Set
012283	Shutter
012591	Shaft
RK-509	Repair Kit
RK-512	Repair Kit
012296	Screw
012630	Mix. Screw
010525	Pump Body
HL-117C	Carburetor
RK-527	Repair Kit
012698	Diaph.
012700	Nozzle
012698	Diaph.
HL-141A	Carburetor
HL-141B	Carburetor
013652	Diaph.
GS-158	Gasket Set
012708	Diaph.
GS-158	Gasket Set
HL-142A	Carburetor
012503	Needle & Seat
011814	Screw
011815	Cover
012918	Screen
012920	Mix. Screw
012930	Gasket
012932	Pump Body
012919	Shaft & Lever
012921	Shaft & Lever
013228	Diaph. Cover
GS-163	Gasket Set
RK-554	Repair Kit
012916	Mix. Screw
HL-150A	Carburetor
013001	Spring
013050	Mix. Screw
RK-566	Repair Kit
012489	Shutter
HS-1A	Carburetor
HS-4C	Carburetor
GS-174	Gasket Set
RK-592	Repair Kit
011431	Spring

HOMELITE (Cont.)

HOMELITE (Cont.)

HOMELITE (Cont.)

58974	012727	Screen	63694	014132	Spring	A71468	MD-23B	Carburetor
58975	013167	Cover	A63695	014035	Needle & Seat	71490	08864	Body
58976	013209	Lever	A63696	014131	Pump Asm.	71491	RK-248	Repair Kit
58977	013210	Pinion Pin	63697	014134	Shaft & Lever	71492	07903	Gasket
58978	013215	Gasket	63698	014136	Shaft & Lever	71493	06062	Screw
58979	013216	Cover	63699	014144	Check Valve	71494	05454	Pin
58980	013217	Pump Diaph.	63711	DG-IHS	Diaph.& Gasket Set	71495	03860	Spring
58980R	013652	Diaph.	63789	RK-717	Repair Kit	71496	07912	Screw
58981	013218	Gasket	63846	014304	Check Valve Asm.	71497	01946	Lever
58982	013219	Clip	63880	GS-196	Gasket Set	71498	08700	Shaft
58983	013262	Needle	63920	OW-802	Fuel Tank Filter	71499	08862	Shutter
58984	013263	Shutter	64083-1	014465	Felt Filter	71500	05430	Screw
58985	013267	Mix. Screw	A64452	HL-249A	Carburetor	71500Terry	0120	Screw
58986	013268	Mix. Screw	A64465	HS-46A	Carburetor	71503	07901	Pinion Screw
58987	013297	Spring	64622	013406	Pinion Pin	71504	08699	Bowl
58988	013278	Diaph.	64623	013534	Shutter	71505	03311	Plug Screw
58989	013296	Shaft & Lever	64624	013541	Spring	71506	07896	Plug Screw
58990	013300	Shaft & Lever	64625	013547	Shutter	71507	06910	Mix. Screw
58991	012809	Welch Plug	A64626	014566	Shaft & Lever	71508	05725	Spring
58992	013269	Screw	A64627	014568	Shaft & Lever	71509	05095	Screw
58993	013270	Screw	A64628	014569	Needle & Seat	71510	08837	Idle Tube
58994	013372	Welch Plug	64629	GS-207	Gasket Set	71510Terry	07921	Idle Tube
58995	013267	Screw	64648	014575	Shaft & Lever	71511	07900	Gasket
58996	013268	Screw	64758	RK-797	Repair Kit	71512	08597	Body
58998	013270	Screw	A64779	013565	Needle & Seat	71513	02510	Gasket
A59251	OW-497	Fuel Tank Filter	A64839	HL-259A	Carburetor	71513-1	013094	Gasket
59253	011460	Filter Element	A65578	HS-56A	Carburetor	71515	08828	Nozzle
59265	013506	Pump Body	A65578-A	HS-73A	Carburetor (Service)	71516	02395	Plug Screw
59268	013519	Spring	65603	013434	Spring	71517	08702	Shaft & Lever
59400	013021	Mix. Screw	65604	014896	Mix. Screw	71518	08647	Spring
59401	HL-181A	Carburetor	65606	RK-836	Repair Kit	71519	05204	Screw
A59427	HL-141C	Carburetor	A65717	HL-261A	Carburetor	71520	08598	Lever
A59427A	HL-141D	Carburetor	65798	014887	Screw	71521	06393	Screw
59460	013518	Spring	65799	014943	Shaft	71522	06396	Lockwasher
59499	013021	Mix. Screw	65800	013299	Lever	71523	GS-117	Gasket Set
59500	012884	Screen	A65801	014900	Gov. Valve Asm.	71524	RK-248	Repair Kit
59503	RK-615	Repair Kit	A65891	014957	Gov. Valve Asm.	71525	08725	Shaft & Lever
A59504	HS-4A	Carburetor	65895	GS-221	Gasket Set	71715	MD-22B	Carburetor
A59504A	HS-4B	Carburetor	65895	GS-IHS	Gasket Set	A71716	MD-22B	Carburetor
A59504B	HS-4C	Carburetor	65896	RK-846	Repair Kit	71743	08878	Body
A59504C	HS-4D	Carburetor	A67130	HL-273A	Carburetor	72144	MD-56A	Carburetor
A59535	HS-5A	Carburetor	67477	015290	Mix. Screw	A72146	MD-56A	Carburetor
A59535A	HS-5B	Carburetor	67478	015293	Shutter	72402	09393	Idle Tube
A59535B	HS-5C	Carburetor	A67479	015292	Check Valve	72403	02658	Gasket
59550	012884	Screen	A67480	015295	Shaft & Lever	72404	08279	Nozzle
59716	013395	Lever	67524	RK-908	Repair Kit	72449	09297	Body
59717	013396	Needle	A67819A	HS-86B	Carburetor	72786	08646	Shutter
A59887	HS-13A	Carburetor	67866	GS-IHS	Gasket Set	72812	09780	Bushing
59916	013396	Needle	67869	RK-IHS	Repair Kit	72838	H-1A	Carburetor
A59928A	HL-197B	Carburetor	67870	RK-3HS	Repair Kit	72838-A	H-2A	Carburetor
60051	05322	Ball	A67887A	HS-92B	Carburetor	72839	H-6A	Carburetor
A61848	MD-88A	Carburetor	67892	015572	Shutter	72840A	HP-1B	Carburetor
A61945	MT-64A	Carburetor	67981	RK-4HS	Repair Kit	73067	02232	Screw
A61963	011185	Fuel Pump Body Asm.	67994	015619	Shutter	73068	02983	Screw
61985	011017	Shaft	A67995	015413	Shaft & Lever	73069	09826	Screw
61986	011127	Idle Tube	68284	016081	Nozzle Check Valve	73070	09698	Diaph.
61987	011128	Nozzle	68297	015405	Plug Screw	73071	09676	Gasket
61988	011130	Body	A68363	HS-96A	Carburetor	73072	09689	Screw & Lockwasher
A61997	MT-67A	Carburetor	68397	015821	Choke Lever	73074	09699	Mix. Screw
62010	RK-358	Repair Kit	68656	GS-1HL	Gasket Set	73075	08793	Spring
62034	011264	Shaft	68657	GS-2HL	Gasket Set	73077	09817	Connection
62035	011125	Shaft & Lever	68658	RK-12HL	Repair Kit	73078	010141	Needle & Seat
62036	011265	Body	68659	RK-17HL	Repair Kit	73079	09708	Lever
62286	012062	Lever & Swivel	68660	RK-20HL	Repair Kit	73080	09695	Pinion Screw
A62422	MT-88A	Carburetor	68661	RK-21HL	Repair Kit	73081	09688	Screw
A62566	MT-99A	Carburetor	68662	RK-22HL	Repair Kit	73082	09683	Spring
62609	010393	Wire	68663	RK-23HL	Repair Kit	73083	09775	Mix. Screw
62610	014440	Shaft & Lever	68664	RK-24HL	Repair Kit	73084	09700	Nozzle
63026	RK-642	Repair Kit	A69153	016058	Shaft	73085	09679	Plug Screw
63027	013591	Pin	69154	015289	Check Valve	73086	09678	Clip
63028	013651	Shutter	69285	E22416	Gasket	73088	01974	Screw
63029	013819	Mix. Screw	69453	016572	Nozzle Check Valve	73089	GS-100	Gasket Set
63030	013682	Shaft & Lever	69651	016813	Shaft & Lever	73090	RK-102	Repair Kit
A63049	HL-117C	Carburetor	69785	016589	Mix. Screw	A73192	H-6A	Carburetor
A63269	HL-204A	Carburetor	69788	014949	Inlet Tension Spring	A73200	H-2A	Carburetor
A63345	013981	Shaft & Lever	69792	017089	Screw	73251	09938	Seat
A63448	HS-26A	Carburetor	69793	017091	Check Valve	73262	09821	Shaft & Lever
A63585	HL-222A	Carburetor	69794	017094	Gov. Valve	73263	09626	Shutter
63590	014030	Diaph.& Gasket Set	69820	017200	Jet (.026)	73264	08805	Spring
63676	014075	Mix. Screw	69981	012656	Gasket	73265	09614	Cover
63677	014076	Mix. Screw	69983	017270	Fuel Pump Body	73266	09681	Gasket
63679	RK-713	Repair Kit	69985	017268	Needle & Seat	73267	09884	Cap
63691	014020	Control Lever	71152	MD-22A	Carburetor	73268	0648	Gasket
63692	014065	Diaph. Cover	71153	MD-23B	Carburetor	AA73269	09939	Screw & Nut
63693	014128	Lever	71155	05591	Gasket	73270	06076	Gasket

HOMELITE (Cont.)

HOMELITE (Cont.)

HOMELITE (Cont.)

73271	09819	Shaft & Lever	76403	09067	Lever	90810	012396	Nozzle
73272	09618	Shutter	76404	09068	Spring	90811	012424	Shaft
AA73274	09838	Body	76405	010367	Mix. Screw	90812	GS-152	Gasket Set
73423	09957	Shaft & Lever	76406	011518	Shutter	90813	RK-478	Repair Kit
73424	09958	Seat	76407	011801	Lever	90814	010300	Bushing
73435	09930	Gasket	76409	011804	Shaft & Lever	90821	012436	Check Valve
73426	09942	Shaft & Lever	76424	RK-403	Repair Kit	90890	012614	Lever
73427	05006	Pin	76446	010492	Bowl	90891	010439	Lever
73428	RK-114	Repair Kit	A76723	MT-81B	Carburetor	90892	09602	Spring
73517	MD-78A	Carburetor	A77092	011023	Pump & Cover	90892A	012669	Spring
73529	08989	Shaft	77093	011027	Body	90901	012611	Shaft
73591	09655	Shaft & Lever	77094	011025	Cover	90914	012628	Body
73616	010004	Washer	77095	011026	Diaph.	90920	012627	Body
73617	010005	Screw	77125	RK-324	Repair Kit	90943	012146	Shutter
73709	MD-88A	Carburetor	77126	GS-124	Gasket Set	A90945	012639	Shaft & Lever
73724	07993	Pin	77134	010970	Body	A90953	MD-120A	Carburetor
73726	08717	Spring	A77141	011027	Body	90961	012702	Lever
73735	09619	Shutter	77247-1	011240	Lever	90997	012770	Spring
73736	09903	Shaft & Lever	77247-1A	013286	Stop Lever	91013	012661	Shaft & Lever
73737	010240	Body	77342	GS-145	Gasket Set	91231	012149	Pump Cover
73738	08698	Bowl	77343	RK-378	Repair Kit	91246	013290	Screw
73762	HP-6A	Carburetor	77392	RK-420	Repair Kit	91252	RK-586	Repair Kit
73762	HP-6B	Carburetor	77394	08817	Choke Lever	91407	013612	Jet (.0465)
A73762	HP-6C	Carburetor	A77400	011972	Shaft & Lever	112137	HL-246A	Carburetor
73823	010281	Body	77426	011503	Spring	A121915	016058	Shaft
A73824	010179	Cover	77427	011883	Shutter	121916	013622	Needle
A73825	010282	Pump & Cover Asm.	A77429	012084	Check Valve	121917	013621	Needle
A73826	010283	Body Asm.	77430	012089	Shutter	121918	RK-3HS	Repair Kit
A73827	010299	Body	77437	012223	Shaft & Lever	A121928	014950	Valve
73830	RK-158	Repair Kit	A77438	012225	Mix. Screw	121930	015289	Valve
73831	010394	Shaft	A77439	012226	Body	122211	016488	Screen
73832	010358	Lever	77451	012244	Spring	122212	016489	Spring
74060	010404	Gasket	A77452	012266	Body	122213	016490	Valve
A74455-1	013104	Shaft & Lever	77454	RK-454	Repair Kit	122214	016491	Shaft
74528	08989	Shaft	A77455-1	013104	Shaft & Lever	122215	016492	Lever
A74576	HP-19B	Carburetor	A77456	012278	Body	122216	016493	Shaft
74577	HP-19B	Carburetor	77466	09195	Shutter	122217	016494	Screw
74585	GS-106	Gasket Set	77467	012590	Shaft & Lever	122218	016495	Screw
74586	RK-297	Repair Kit	77487	013831	Shaft & Lever	122219	016496	Screen
74605	010605	Body	78047	HL-59A	Carburetor	H1251002	HD-7AX	Carburetor
74678	09428	Shutter	78057AT	MD-56A	Carburetor			
74718	010580	Shutter	78221	010730	Gasket			
74719	010581	Body	78521	011494	Mix. Screw			
74863A	010970	Body	78531	RK-400	Repair Kit			
74864	010894	Cover	80012	0120	Screw			
74865	010893	Diaph.	80022	08315	Screw	17 10 111-01	012781	Lever Assembly
74867	07283	Screen	80264	010280	Screw & Lockwasher	50-10748	011913	Body
74962	010915	Gasket	80275	011441	Screw & Lockwasher	50-10749	010588	Cup Plug
A75449	MD-104A	Carburetor	80591	08942	Screw & Lockwasher	50-10750	02531	Welch Plug
75513	011153	Plug Screw	80658	010280	Screw & Lockwasher	50-10751	011912	Shaft & Lever
75514	09399	Nozzle	83000	0992	Lockwasher	50-10752	09626	Shutter
75515	011156	Idle Tube	83008	08942	Screw & Lockwasher	50-10753	010280	Screw & Lockwasher
75520	011157	Body	83008Terry	06396	Lockwasher	50-10756	02232	Plug Screw
75521	09561	Needle & Seat	83029	08315	Screw	50-10757	010542	Diaph. Gasket
A75527	011216	Screw	83084	08988	Lockwasher	50-10758	010579	Diaph.
A75528	011218	Lever & Roller	84021	04742	Washer	50-10759	011904	Cover
A75528-1	013105	Lever	84050	03804	Washer	50-10760	010880	Pump Gasket
A75530	011221	Screw	90200	012044	Lever	50-10761	010531	Pump Diaph.
75532	011226	Shutter	A-90250-1	MD-120AT	Carburetor	50-10762	011903	Pump Body
A75533	011228	Body	A90250	MD-120B	Carburetor	50-10763	010098	Screw & Lockwasher
75623	RK-357	Repair Kit	A90250B	MD-120C	Carburetor	50-10764	010530	Strainer Screen
A75624A	013287	Shaft & Lever	A90340	0W-483	Fuel Strainer	50-10765	010529	Strainer Gasket
75731	010775	Spring	90622	07759	Strainer Bowl	50-10766	010527	Strainer Cover
75732	010776	Pin	90623	08227	Gasket	50-10767	010571	Screw
75733	011401	Packing	90624	07762	Strainer Screen	50-10768	011716	Mix. Screw
75734	011404	Shutter	90625	07766	Wire & Thumb Nut	50-10769	08793	Spring
75735	011428	Washer	90626	012407	Shutter	50-10770	011428	Washer
75736	011498	Mix. Screw	90626A	09148	Shutter	50-10771	011401	Packing
75739	011510	Mix. Screw	90639	012385	Lever	50-10772	011907	Screw
A75740	011509	Shaft & Lever	90644A	012703	Shaft & Lever	50-10773	011103	Spring
A75741	011511	Shaft & Lever	90644B	012790	Shaft & Lever	50-10774	010580A	Needle & Seat
A75742	011643	Body	90646	012386	Spring	50-10775	010165	Gasket
75755	010965	Spring	90647B	012668	Spring	50-10776	010513	Control Lever
75756	011580	Spring	90647C	012762	Spring	50-10777	010581	Pinion Screw
A75758	011582	Lever	90664	011685	Lever	50-10778	010578	Spring
75766	013104	Shaft & Lever	90665	012406	Swivel	50-10779	011494	Mix. Screw
A75767	011643	Body	90666	010392	Washer	50-10780	011909	Shaft & Lever
A75834	MT-83A	Carburetor	90803	0212	Gasket	50-10781	09780	Bushing
75868	011934	Adapter Check Valve	90804	012150	Gasket	50-10782	011907	Clip
75868	011934	Adapter Check Valve	90805A	012405	Pump Asm.	50-10783	010999	Spring
75885	011882	Shaft & Lever	90806	08736	Spring	50-10784	08646	Shutter
A76330	MT-81A	Carburetor	90807	012395	Idle Tube	50-10785	GS-145	Gasket Set
76401	08765	Adj. Screw	90808	012404	Needle & Seat	50-10786	RK-425	Repair Kit
76402	09066	Screw	90809	012393	Jet (.051)	50-10932-A	HL-133A	Carburetor

HUSQVARNA (SWEDEN)

50-10932-E	HL-220A	Carburetor	105709
50-10932G	HL-220AX	Carburetor	106071
50-11206-04	014540	Jet (.037)	106072
50-11830-01	OW-497	Fuel Tank Filter	106073
50-12036-01	HS-27A	Carburetor	107179
50-12036-02	HS-27B	Carburetor	107264
50-12036-03	HS-27C	Carburetor	107269
50-12036-04	HS-27D	Carburetor	107381
50-12036-05	HS-76A	Carburetor	107382
50-12200-01	012884	Screen	107384
50-12201-01	012345	Ring	107385
50-12202-01	013372	Welch Plug	107386
50-12203-01	012809	Welch Plug	107387
50-12204-01	04784	Ball	107388
50-12205-01	08805	Spring	107389
50-12206-01	014112	Shaft & Lever	107810
50-12207-01	013263	Shutter	137866
50-12208-01	013215	Gasket	108590
50-12209-01	013278	Diaph.	112320
50-12210-01	013216	Cover	126060
50-12212-01	013652	Diaph.	203704
50-12213-01	013218	Gasket	304424
50-12214-01	013167	Cover	305878
50-12216-01	013959	Mix. Screw	307799
50-12217-01	08793	Spring	308455
50-12218-01	013270	Screw	308456
50-12219-01	011431	Spring	308457
50-12220-01	013395	Lever	308458
50-12221-01	013210	Pinion Pin	308459
50-12222-01	013269	Screw	310994
50-12223-01	013396	Needle	313806
50-12224-01	012727	Screw	314322
50-12225-01	011503	Spring	314324
50-12226-01	014252	Mix. Screw	314330
50-12228-01	015871	Shaft & Lever	314333
50-12229-01	013219	Clip	314335
50-12230-01	010280	Screw & Lockwasher	314336
50-12231-01	013297	Spring	314353
50-12232-01	015634	Shutter	314348
50-12234-01	GS-1HS	Gasket Set	314356
50-12509-01	013220	Gasket	314363
50-12546-01	015015	Cup	314364
50-12690-01	013692	Spring	314368
50-12685-01	013959	Mix. Screw	314375
50-12689-01	014259	Mix. Screw	314376
NPN	RK-2HS	Repair Kit	314383

INTERNATIONAL HARVESTER

398113-R91	OW-805	Fuel Strainer
398749-R1	OW-432	Shut Off Valve
398750-R1	OW-352	Screen
398751-R1	06096	Gasket
398752-R1	OW-304	Bowl
398753-R1	014657	Clamp Wire Asm.
398754-R1	014654	Thumb Nut Asm.

JACOBSEN MFG. CO.

100547	OW-418	Fuel Strainer
102339	07646	Float
102340	07649	Float Bowl
102606	B-8A	Carburetor
102737	B-9A	Carburetor
102801	B-10A	Carburetor
103652	MT-4A	Carburetor
103754	MD-49A	Carburetor
103941	GS-117	Gasket Set
103942	RK-268	Repair Kit
104216	MT-26A	Carburetor
104327	B-12A	Carburetor
104400	MT-36A	Carburetor
104647	MT-54A	Carburetor
104659	MT-52A	Carburetor
104869	MT-58A	Carburetor
104899	MT-59A	Carburetor
104910	MT-60A	Carburetor
105057	MT-59AX	Carburetor
105278	MT-70A	Carburetor
105707	MT-74A	Carburetor

MT-72A	Carburetor	403528
MT-86A	Carburetor	403656
MT-85A	Carburetor	405902
MT-84A	Carburetor	406360
MT-3B	Carburetor	406502
MT-58B	Carburetor	407590
MT-59B	Carburetor	407616
GS-106	Gasket Set	446255
07648	Needle & Seat	472602
09145	Needle & Seat	472604
011659	Needle & Seat	500068
RK-160	Repair Kit	500069
RK-188	Repair Kit	500070
RK-311	Repair Kit	500071
RK-389	Repair Kit	500159
RK-423	Repair Kit	500160
B-10A	Carburetor	545159
OW-480	Fuel Strainer	545160
HL-138A&B	Carburetor	545161
HJ-2A	Carburetor	545162
08950	Cover	545163
04742	Washer	545164
07198	Gasket	545165
010031	Screw	545166
0703	Packing Nut	545167
01102	Screw	545168
02395	Plug Screw	545169
07896	Plug Screw	590017
07804	Float	590018
08793	Spring	
08028	Gasket	
0705	Packing	
0788	Spring	
02510	Gasket	
04119	Shutter	
04119	Shutter	
04920	Washer	
05454	Friction Pin	
05413	Washer	A-832
06076	Gasket	A-1566
06924	Nut	A-1578
06945	Housing	A-1579
06953	Mix. Screw	D-250
07282	Packing Nut	D-251
07283	Screen	D-254
07391	Shutter	D-255
07460	Float Pin	D-256
07646	Float	D-257
07759	Strainer Bowl	D-258
07972	Mix. Screw	D-259
08227	Gasket	D-260
08646	Shutter	D-261
08656	Float	D-262
08658	Gasket	D-263
08765	Mix. Screw	D-264
08781	Shutter	D-265
08793	Spring	D-266
08796	Pinion Pin	D-269
08875	Idle Tube	D-270
0880	Gasket	D-271
08913	Lever	D-272
08919	Nozzle	D-273
08921	Shaft	D-274
08925	Shaft & Lever	D-327
09648	Shaft	D-328
09649	Shaft & Lever	D-330
010347	Mix. Screw	D-331
010947	Shaft & Lever	D-334
011140	Inlet Screen	D-673-8
011308	Cover	D-1320
011431	Spring	D-1337
011565	Screw	D-1338
011575	Lever	D-1339
011579	Shutter	D-1340
011584	Shaft & Lever	D-1342
011586	Spring	D-1343
011600	Shaft & Lever	D-1344
011564	Pinion Pin	X-14-4
GS-149	Gasket Set	X-14-8
011932	Body	X-15-1
011928	Float	X-18-2
010730	Gasket	X-19-1
06393	Screw	X-49-23
09417	Screw & Lockwasher	X-49-24

09421	Screw	
05095	Screw	
08317	Screw & Lockwasher	
09421	Screw	
08315	Screw & Lockwasher	
08942	Screw & Lockwasher	
09417	Screw & Lockwasher	
06396	Lockwasher	
02519	Welch Plug	
02531	Welch Plug	
013416	Needle & Seat	
013417	Diaph.	
013509	Shaft & Lever	
013511	Shaft & Lever	
GS-179	Gasket Set	
RK-627	Repair Kit	
09408	Shutter	
010578	Spring	
010911	Screen	
011401	Packing	
011428	Washer	
011442	Shutter	
013022	Diaph. Cover	
013031	Control Lever	
013403	Gasket	
013406	Pinion Pin	
013512	Adj. Screw	
011441	Screw & Lockwasher	
013269	Screw	

KIEKHAEFER
(SEE MERCURY MARINE)

KOHLER CO.

07479	Lever	
07480	Shaft	
0648	Gasket	
0225	Gasket	
07487	Screw	
07486	Screw	
07490	Body	
07491	Cover	
06472	Float	
0700	Float Pin	
06458	Cover	
06460	Gasket	
07488	Needle & Seat	
02150	Gasket	
07484	Nozzle	
02817	Gasket	
07485	Screw	
0676	Gasket	
07489	Shaft & Lever	
01115	Screen	
02661	Bushing	
02531	Welch Plug	
07481	Shutter	
05670	Screw	
07503	Gasket Set	
08052	Screw	
08051	Mix. Screw	
08049	Nozzle	
08053	Body	
RK-339	Repair Kit	
MK-1C	Carburetor	
OW-400	Fuel Strainer	
06096	Gasket	
OW-304	Bowl	
OW-352	Screen	
OW-445	Wire & Nut	
OW-462	Thumb Nut	
OW-355	Cover	
OW-432	Valve	
054	Screw	
01108	Screw	
0121	Screw	
0992	Lockwasher	
0759	Lockwasher	
05204	Screw	
08942	Screw & Lockwasher	

153435	07718	Repair Kit	210401	08656	Float	33-053-08	HR-78A	Carburetor
153436	GS-130	Gasket Set	210405	08793	Spring	33-087-01	01537	Lever Asm.
153458	07168	Nozzle	210413	09100	Nozzle	33-155-02	015546	Connection
153458-1	07579	Nozzle	210467	07759	Bowl	33-420-01	015004	Shaft & Lever
153460-2	N-9A	Carburetor	210468	08227	Gasket	34-053-08	RK-79A	Carburetor
153460-4	N-8A	Carburetor	A-230528	0W-485	Fuel Strainer	34-053-09	RK-49B	Carburetor
153461	06833	Gasket	A-231614	E-12A	Carburetor	34-155-01	015664	Connector, Fuel Return
153463	03257	Screw	231620	013004	Shaft & Lever	44-053-01	HD-80A	Carburetor
153464	0788	Spring	231621	011523	Float			
153467	07162	Lever	231622	011653	Needle & Seat			
153468	051	Screw	231623	013006	Shaft & Lever			
153469	05095	Screw	231624	RK-383	Repair Kit			
153471	01858	Lever	232583	011562	Mix. Screw			
153473	08317	Screw & Lockwasher	232985	08880	Gasket	48730	HS-63BX	Carburetor
153474	04333	Needle & Seat	232964	07762	Strainer Screen	48730A	HL-93A	Carburetor
153475	0337	Gasket	232965	07765	Nut	48741	011204	Spring
153477	07176	Shaft	232967	07769	Shut Off Valve	48756	012135	Shaft & Lever
153478	04280	Gasket	232970	09337	Strainer Bowl	48757	011883	Shutter
153479	03911	Pin	232971	010165	Gasket	48758	05454	Friction Pin
153480	07177	Bearing	232972	011526	Gasket	48759	08805	Spring
153481	04283	Float	232973	011563	Mix. Screw	48761	010530	Strainer Screen
153483	07178	Body	232985	08880	Gasket	48762	010529	Strainer Gasket
153484	0675	Plug Screw	232986	01065	Gasket	48763	011498	Mix. Screw
153485	04906	Venturi	232987	011401	Packing	48767	05095	Screw
153485-1	04677	Venturi	232988	011428	Washer	48768	010580	Needle & Seat
153486	02656	Gland	232989	011431	Spring	48769	012138	Mix. Screw
153486-1	06250	Gland	232990	011526	Gasket	48770	08793	Spring
153491	04878	Shaft	232991	011528	Shutter	48771	011428	Washer
153492	02406	Shutter	232992	011561	Plug Screw	48772	011401	Packing
153494	01434	Screw	232993	011563	Mix. Screw	48773	012136	Shaft & Lever
153495	0703	Nut	232994	011564	Pinion Pin	48774	010775	Spring
153496	0705	Packing	232995	013002	Cover	48775	012143	Lever
153497-1	03369	Pin	232996	011565	Screw	48776	012145	Screw & Lockwasher
153499	04099	Spring	232997	013004	Shaft & Lever	48777	07844	Washer
153500	04594	Stop Screw	234219	011525	Cover	48778	011755	Nut
153504	01102	Plug Screw	234243	05454	Pin	48779	012089	Shutter
153507	07166	Shutter	234244	08793	Spring	48780	010280	Screw & Lockwasher
153508	06251	Mix. Screw Asm.	234245	08805	Spring	48781	GS-145	Gasket Set
153510	06252	Mix. Screw	234341	08942	Screw & Lockwasher	48782	012140	Body
153512	07167	Lever	240225-A	YB-1A	Carburetor	48784	RK-450	Repair Kit
153587	08446	Plug	240228	08234	Float	50670	011816	Pump Body
200227	08718	Nozzle	240231	08249	Gasket	50687-1	HL-63A	Carburetor
200248	RK-246	Repair Kit	240235	0120	Screw	50687-B1	HL-63B	Carburetor
200249	RK-252	Repair Kit	240239	08235	Shutter	50687-B2	HL-63C	Carburetor
200255	08720	Body	240240	05430	Screw	50687-C	HL-63D	Carburetor
200355-A	07972	Mix. Screw	240241-A	06741	Lever	50687-D	HL-63E	Carburetor
210069	07908	Shutter	240242	08250	Plug	50687-E	HL-63F	Carburetor
210084-A	08361	Lever	240245	08231	Lever	50779-C	012340	Body
210227	08593	Nozzle	240246	08232	Lever	50785	011813	Air Cleaner Stud
210228	07804	Float	240247	08229	Body	50786A	012035	Gasket
210229	07901	Pinion Screw	240248	08240	Nozzle	50789	011819	Shaft & Lever
210230	06459	Cap	240250	RK-349	Repair Kit	50795	011812	Strainer Element
210231	08628	Screen	240250-1	RK-350	Repair Kit	50796	011815	Cover
210232	07903	Gasket	240374	08231	Lever	50797	011814	Screw
210233	08631	Spring	240375-A	08241	Lever	50798	02817	Gasket
210234	08170	Shutter	240377	03311	Plug Screw	50799	011811	Screw
210235-A	08881	Mix. Screw	240379	08236	Shaft	50803A	012857	Shaft & Lever
210236	0702	Gland	240380	0124	Pin	50804	011809	Lever
210237	02395	Plug Screw	240382	08237	Shaft	50806	GS-3HL	Gasket Set
210238	08626	Shaft	240385-A	08242	Shaft & Lever	50807	RK-61HL	Repair Kit
210239	07908	Shutter	240386-A	08245	Body	51149-1	HL-19A	Carburetor
210240	07896	Plug Screw	240387	08233	Gasket	51161-C	010730	Gasket
210241-A	08601	Needle & Seat	240388-A	08246	Body	51504	011052	Strainer Element
210244-A	08332	Bowl	240389	03489	Welch Plug	51546	011046	Lever
210245-A	08630	Shaft & Lever	240391	GS-136	Gasket Set	51548	HL-19B	Carburetor
210247-A	08604	Body	B-240460	YB-2A	Carburetor	51548-4	HL-19C	Carburetor
210248	RK-288	Repair Kit	B-240460	YB-2B	Carburetor	51549	011049	Washer
210249-A	08455	Shaft & Lever	240466	09416	Body	51582	010588	Cup Plug
210250	03208	Pin	240467	09409	Venturi	51583	02531	Welch Plug
210251	08454	Shaft	240468	09408	Shutter	51584	02519	Welch Plug
210252	05454	Friction	240484-A	09412	Body	51585	011047	Shaft & Lever
210253	03860	Spring	240509	010237	Body	51586	011275	Spring
210254	07912	Screw	240762	09411	Nozzle	51587	09626	Shutter
210277	08739	Body	240767	03076	Mix. Screw	51588	012343	Body
210278	08529	Shutter	240768	02656	Gland	51588C	012343	Body
210279	04119	Shutter	240769	02672	Bushing	51589	02232	Plug Screw
210300	08423	Nozzle	240771	RK-350	Repair Kit	51590A	012475	Diaph.
210301	03739	Shutter	240874	010236	Reed	51591A	012473	Gasket
210302	06910	Mix. Screw	240875	010235	Shutter	51592	010526	Cover
210306	08768	Body	33-049-01	013094	Gasket	51593	011115	Spring
210307	08682	Idle Tube	33-053-02	HR-22A	Carburetor	51595	010531T	Thin Pump Diaph.
210376	08658	Gasket	33-053--5	HR-41A	Carburetor	51596	010525	Body
210386	06494	Needle & Seat	33-053-06	HR-38A	Carburetor	51597	010098	Screw & Lockwasher
210400	08646	Shutter	33-053-07	HR-50A	Carburetor	51599	010527	Strainer Cover

Mc CULLOCH CORP.

51701	010571	Screw	57653	012347	Cup Plug	83431	015388	Body
51702	013208	Mix. Screw	57693	010776	Pin	83450	HL-103E	Carburetor
51703	010589	Seal Ring	57694	0124	Pin	83477	015278	Mix. Screw
51704	011102	Gasket	57696	01449	Lead Shot	83479	014887	Screw
51705	0788	Spring	57893	012527	Lever	83544	RK-917	Repair Kit
51706	011044	Bracket	57972-A	HL-63ET	Carb.(Belgium)	83545	GS-221	Gasket Set
51707-A	012339	Needle & Seat	57973-A	HL-87DT	Carb.(Belgium)	83546	015273	Shaft & Lever
51708	010165	Gasket	61159	011460	Filter Element	83547	015277	Mix. Screw
51709	010513	Control Lever	63026	013871	Washer	83548	010404	Gasket
51710	010581	Pinion Screw	63945	014147	Gasket	83549	014942	Gov. Valve Asm.
51711	010578	Spring	65585	012035	Gasket	83717	015270	Shaft & Lever
51712	011016	Mix. Screw	65586	010730	Gasket	83723	015389	Body
51714	011054	Shaft & Lever	65591	012473	Gasket	83724	015279	Diaph. Cover
51714-A	011380	Shaft & Lever	65592	012930	Gasket	83725	015276	Shaft & Lever
51715	09780	Bushing	65611	012084	Check Valve	83726	RK-916	Repair Kit
51716	09678	Clip	65856	014549	Choke	83727	GS-218	Gasket Set
51717	01974	Screw	65857	014563	Spring	83728	015259	Shaft & Lever
51718	011152	Lever	66167	012475	Diaph.	83729	014374	Check Valve
51718-1	010379	Lever	66287	HS-43C	Carburetor	83731	013603	Cover
51719	06393	Screw	66346	HL-63G	Carburetor	83732	014796	Gasket
51720	08646	Shutter	66401	010531-T	Thin Pump Diaph.	84024	015269	Body
51721	08942	Screw & Lockwasher	66402	014425	Body	84025	015263	Shaft & Pinion Asm.
51722	GS-135	Gasket Set	66403	014424	Body	84026	013547	Shutter
51723	RK-344	Repair Kit	66404	011503	Spring	84027	013549	Diaph. Cover
51984	HL-19D	Carburetor	66405	014423	Mix. Screw	84029	014230	Pump Diaph.(Pulse)
51984-B	HL-19E	Carburetor	66422	RK-28HL	Repair Kit	84030	014229	Pump Diaph.(Valve)
51984C	HL-19F	Carburetor	66620	012884	Screen	84031	013335	Pump Body
52807	HC-13A	Carburetor	66621	013372	Welch Plug	84032	014020	Control Lever
52807-2	HC-13A	Carburetor	66622	012809	Welch Plug	84033	013406	Pinion Pin
52889	013187	Lever Asm.	66623	012727	Screen	84034	015261	Needle & Seat
52927	013088	Body	66625	013270	Screw	84035	012370	Jet (.041)
52928	010588	Cup Plug	66626	011431	Spring	84036	06076	Gasket
52929	05454	Friction Pin	66627	013518	Spring	84037	0675	Plug Screw
52930	08805	Spring	66628	013167	Cover	84038	012510	Check Valve
52931	013087	Shaft & Lever	66629	013218	Gasket	84039	015267	Shaft & Lever
52932	011418	Cover	66630	013652	Diaph.	84040	015264	Spring
52933	011441	Screw & Lockwasher	66631	013216	Cover	84041	013534	Shutter
52935	011498	Mix. Screw	66632	013278	Diaph.	84042	GS-181	Gasket Set
52936	08793	Spring	66633	013215	Gasket	84043	RK-6HL	Repair Kit
52937	011428	Washer	66634	013374	Mix. Screw	84057	012284	Jet (.043)
52938	011401	Packing	66635	013376	Mix. Screw	84058	013266	Jet (.039)
52939	011497	Connection	66636	013210	Pinion Pin	84059	014540	Jet (.037)
52940	05095	Screw	66637	013396	Needle	84351	HL-63G	Carburetor
52941	013094	Gasket	66638	013395	Lever	85360	016032	Shaft & Lever
52942	013095	Needle & Seat	66639	014549	Shutter	85361	016030	Shaft & Lever
52943	011494-A	Mix. Screw	66640	014521	Shaft & Lever	85916	HS-111A	Carburetor
52947	011500	Shaft & Lever	66641	010280	Screw & Lockwasher	85991	RK-6HL	Repair Kit
52948	010775	Spring	66642	04119	Shutter	85992	GS-4HL	Gasket Set
52949	GS-166	Gasket Set	66643	014539	Shaft & Lever	85993	016061	Check Valve
52950	RK-569	Repair Kit	66644	013269	Screw	85994	015074	Gov. Valve Asm.
52953	011493	Screen	66646	013219	Clip	85994	015226	Gov. Valve Asm.
53164	012698	Diaph.	66647	013220	Gasket	85995	010530A	Strainer Screen
53193	RK-458	Repair Kit	66697	HS-43D	Carburetor	86169	016173	Mix. Screw
53565	012829	Gasket	67131	011400	Body	86170	016174	Mix. Screw
53679-B	OW-497	Fuel Tank Filter	67132	013959	Mix. Screw	87223	011825	Screw
53715	013863	Body	67133	013692	Spring	87224	012932	Fuel Pump Body
53717	012830	Strainer Element	67134	014252	Mix. Screw	87225	016262	Diaph. Cover
53718	012852	Mix. Screw	67136	013297	Spring	87226	016277	Spring
53719	RK-546	Repair Kit	67138	RK-796	Repair Kit	87227	016273	Shaft & Lever
53811	012866	Body	67916	011503	Spring	87228	016276	Shaft & Lever
53813	011883	Shutter	68890	012700	Check Valve	87229	016288	Check Valve
53814	012854	Shaft & Lever	69373	HS-70A	Carburetor	87230	016274	Shaft & Lever
53815	012860	Shaft & Lever	69602	013821	Connector Tube	87232	013541	Spring
53817	012861	Body	69856	HL-272A	Carburetor	87809	HS-127B	Carburetor
53824	012868	Body	75872	011499	Needle & Seat	87922	016428	Shaft & Lever
55511	011275	Spring	76291	HC-9A	Carburetor	88367	0240	Screw
55512	011380	Shaft & Lever	76332	011499	Needle & Seat	88368	03114C	Washer
55513	GS-148	Gasket Set	76334	010165	Gasket	88369	04326C	Welch Plug
55514	RK-344	Repair Kit	76347	012423	Gasket	88370	010511	Ring
55874	HL-103A	Carburetor	76395	011976	Shutter	88371	011103	Spring
55874-1	HL-103B	Carburetor	76398	012351	Field Fix Kit	88372	011516	Screen
55874-B	HL-103C	Carburetor	76445	012350	Diaph.	88373	013406	Pinion Pin
55874-C	HL-103D	Carburetor	81313	014436	Body	88374	013683	Gasket
55880	012292	Body	81384	MD-138A	Carburetor	88375	013744	Gasket
55880-A	012342	Body	81384-A	MD-138B	Carburetor	88376	013853	Gland
57182	HL-87A	Carburetor	81397	014315	Mix. Screw	88377	014020	Control Lever
57182-A2	HL-87B	Carburetor	81398	014317	Mix. Screw	88378	014118C	Clip
57182-B	HL-87C	Carburetor	81399	014318	Body	88379	014120	Gasket
57182-C	HL-87D	Carburetor	81584	MD-141A	Carburetor	88380	014142	Screw
57282-A	012341	Body	81598	012689	Nozzle	88381	014239	Mix. Screw
57282	012863	Body	81946	014435	Body	88382	014349	Bracket
57574	010531	Pump Diaph.	81947	014432	Idle Tube	88383	014643	Gasket
57651	012344	Screen	81948	014433	Shutter	88384	014644	Diaph.
57652	012345	Ring	83400	HL-19F	Carburetor	88385	014645	Pump Body

88386	014646	Gasket	522-037M91	013789	Check Valve	1037-509M1	013434	Spring
88387	014647	Diaph.	523-106M91	HD-49A	Carburetor	1037-510M1	014648	Body
88388	014648	Valve Body	523-906M1	HD-49A	Carburetor	1037-511M1	014647	Diaph.
88389	014687	Screw & Lockwasher	523-930M91	HR-54B	Carburetor	1037-512M1	014646	Gasket
88390	014920	Jet (.096)	526-657M91	HR-123A	Carburetor	1037-513M1	014247	Mix. Screw
88391	014937	Strainer Cover	526-772M91	015037	Lever Asm.	1037-514M1	014499	Mix. Screw
88392	014988	Screw & Lockwasher	529-589M1	HD-120A	Carburetor	1037-515M1	013853	Gland
88393	015218	Screen	529-588M91	HR-146A	Carburetor	1037-516M1	0676	Gasket
88394	015219	Spring	532-628M91	HRM-1A	Carburetor	1037-517M1	014118	Clip
88395	015455	Elbow Connector	532-629M91	HD-136A	Carburetor	1037-518M1	09678	Clip
88396	015912	Screw & Lockwasher	532-961M91	HR-162A	Carburetor	1037-519M1	014993	Jet (.089)
88397		Gasket	532-652M91	HD-62A	Carburetor	1037-520M1	013683	Gasket
88398	014247	Mix. Screw	540-847M91	OW-444	Fuel Strainer	1037-521M1	014578	Check Valve
88399	014248	Diaph.	678-362M1	06137	Strainer Bowl(Brass)	1037-522M1	014334	Check Valve
88400	015051	Lever	836-479M91	GS-223	Gasket Set	1037-523M1	014992	Shaft & Lever
88401	015596	Needle & Seat	836-480M91	GS-199	Gasket Set	1037-524M1	015004	Shaft & Lever
88402	016198	Nozzle Check Valve	836-482M91	RK-851	Repair Kit	1037-525M1	014348	Spring
88403	016369	Shaft & Lever	836-579M91	RK-898	Repair Kit	1037-526M1	014324	Spring
88404	016371	Diaph. Cover	836-580M91	GS-227	Gasket Set	1037-527M1	013745	Shutter
88405	GS-1HD	Gasket Set	836-803M91	RK-2HR	Repair Kit	1037-528M1	14320	Shutter
88406	RK-4HD	Repair Kit	836-849M91	RK-1HD	Repair Kit	1037-529M1	014996	Bracket
88407	015984	Shutter	836-848M91	RK-14HL	Repair Kit	1037-530M1	014834	Gasket
88408	015988	Spring	836-850M91	GS-1HR	Gasket Set	1037-531M1	014319	Gasket
88409	016103	Shutter	836-851M91	GS-1HD	Gasket Set	1037-605M1	03114	Washer
88410	016412	Shaft	836-852M91	RK-2HR	Repair Kit	1037-606M1	011428	Washer
88767	016081	Nozzle Check Valve	836-979M91	RK-4HD	Repair Kit	1037-607M1	013737	Welch Plug
88768	016532	Mix. Screw	837-036M91	GS-1HRM	Gasket Set	1037-608M1	04326	Welch Plug
88769	016534	Chk.Valve&Jet(.030)	837-037M91	RK-1HRM	Repair Kit	1037-609M1	02531	Welch Plug
88770	016471	Check Valve & Jet	837-039M91	RK-7HD	Repair Kit	1037-611M91	014988	Screw
88771	016472	Chk.Valve&Jet(.029)	850-839M1	OW-480	Fuel Strainer	1037-612M91	08942	Screw
88772	016473	Chk.Valve&Jet(.028)	852-241M1	OW-418	Fuel Strainer	1037-609M1	015224	Shaft & Lever
88773	016535	Shaft & Lever	1001-510M1	OW-362	Cover	1038-146M1	013218	Screen
88774	GS-1HS	Gasket Set	1001-511M1	OW-352	Screen	1038-147M1	015219	Spring
88775	RK-4HS	Repair Kit	1001-512M1	OW-222	Gasket	1038-636M1	014962	Shutter
88776	DG-1HS	Diaph.& Gasket Set	1001-514M1	OW-363	Bowl	1038-637M1	014877	Diaph. Cover
88780	016653	Chk.Valve&Jet(.026)	1001-515M91	OW-447	Nut	1038-638M1	014881	Gasket
88781	016655	Chk.Valve&Jet(.027)	1001-516M91	OW-462	Nut	1038-639M1	014878	Pump Body
90379	014774	Lever	1001-517M91	OW-446	Wire	1038-640M1	014880	Diaph.
90430	015538	Jet (.038)	1010-469M1	06096	Gasket	1038-641M1	015036	Mix. Screw
90427	013627	Jet (.035)	1016-862M1	08227	Gasket	1038-642M1	014879	Body
100252	0992	Lockwasher	1016-918M1	08317	Screw & Lockwasher	1038-643M1	014883	Diaph.
100261	06393	Lockwasher	1018-078M1	OW-304	Bowl	1038-644M1	014884	Gasket
100362	055	Screw	1018-079M91	OW-445	Clamp	1038-645M1	014961	Shutter
103845	010045	Screw	1023-066M1	012493	Strainer Cover	1038-741M91	015450	Shaft & Lever
801503	RK-786	Repair Kit	1037-469M1	04784	Ball	1038-742M1	015487	Diaph. Cover
4620620	0676	Gasket	1037-470M1	08805	Spring	1039-551M1	015455	Elbow Connector
4800609	03894	Screw	1037-471M1	015107	Shaft & Lever	1039-552M91	015807	Shaft
4860605	08215	Float	1037-472M1	015098	Shaft & Lever	1039-553M1	014232	Shutter
			1037-473M1	015010	Shutter	1039-554M1	051	Screw
			1037-474M1	014621	Shutter	1039-555M91	014349	Bracket
			1037-475M1	014248	Diaph.	1039-556M1	014020	Control Lever
			1037-476M1	014120	Gasket	1039-557M91	015596	Needle & Seat
			1037-477M1	014705	Diaph. Cover	1039-558M1	013789	Valve
			1037-478M1	012475	Diaph.	1039-559M91	015810	Shaft & Lever
			1037-479M1	012473	Gasket	1040-195M91	015921	Shaft
			1037-480M1	013228	Diaph. Cover	1040-196M91	015918	Shaft
			1037-481M1	05322	Ball	1040-532M91	015912	Screw & Lockwasher
			1037-482M1	014643	Gasket	1040-921M1	015100	Plug Screw
			1037-483M1	012930	Gasket	1040-922M1	0240	Screw
			1037-484M1	014645	Pump Body	1040-923M1	015395	Shaft
			1037-485M1	013335	Pump Body	1040-924M1	015348	Diaph. Cover
			1037-486M1	014644	Diaph.	1040-925M1	014882	Screw
			1037-487M1	014230	Pump Diaph.(Pulse)	1040-926M91	016189	Shaft & Lever
			1037-488M1	014229	Diaph. (Valve)	1042-266M91	016522	Choke Shaft & Lever
			1037-489M1	011516	Screen	1042-267M1	016466	Choke
			1037-490M1	010529	Gasket	1042-268M1	015378	Diaph. Cover
			1037-491M1	014937	Strainer Cover	1042-269M1	015864	Screw
			1037-492M1	014239	Mix. Screw	1042-270M1	014920	Jet
			1037-493M1	014321	Mix. Screw	1042-271M1	016524	Valve
			1037-494M1	011103	Spring	1042-272M91	016520	Shaft & Lever
			1037-495M1	08793	Spring	1042-273M1	015988	Spring
			1037-496M1	010511	Ring	1042-274M1	015984	Shutter
			1037-497M1	011401	Packing	1042-275M1	015953	Gasket
			1037-498M1	05095	Screw	1042-276M91	016557	Choke Shaft & Lever
			1037-499M1	014326	Screw	1042-277M1	015424	Cover
			1037-500M1	0788	Spring	1042-278M1	014964	Screw
			1037-501M1	014994	Bracket	1042-279M91	015632	Shaft & Lever
			1037-502M1	010513	Control Lever	1043-143M91	015051	Choke
			1037-503M1	013406	Pinion Pin	1043-144M1	015794	Shaft
			1037-504M1	014683	Needle & Seat	1043-145M1	014478	Cup
			1037-505M1	014602	Needle & Seat	1043-146M91	015393	Shaft & Lever
			1037-506M1	013744	Gasket	1043-670M1	016412	Shaft
			1037-507M1	010165	Gasket	1043-671M1	016685	Cover
			1037-508M1	011503	Spring	1043-672M91	016917	Bracket
2409X	0244	Plug	1037-478M1	012475	Diaph.	1039-559M91	015810	Shaft & Lever
180-053M1	09272	Packing	1037-479M1	012473	Gasket	1040-195M91	015921	Shaft
180-055M1	OW-460	Shell	1037-480M1	013228	Diaph. Cover	1040-196M91	015918	Shaft
180-058M1	08887	Tube	1037-481M1	05322	Ball	1040-532M91	015912	Screw & Lockwasher
180-059M1	07815	Packing Nut	1037-482M1	014643	Gasket	1040-921M1	015100	Plug Screw
180-060M1	07861	Gasket	1037-483M1	012930	Gasket	1040-922M1	0240	Screw
180-061M1	08868	Control Wheel	1037-484M1	014645	Pump Body	1040-923M1	015395	Shaft
180-073M1	07847	Washer	1037-485M1	013335	Pump Body	1040-924M1	015348	Diaph. Cover
180-074M1	08886	Valve Stem	1037-486M1	014644	Diaph.	1040-925M1	014882	Screw
180-075M1	OW-317	Stud	1037-487M1	014230	Pump Diaph.(Pulse)	1040-926M91	016189	Shaft & Lever
180-076M1	06804	Screw	1037-488M1	014229	Diaph. (Valve)	1042-266M91	016522	Choke Shaft & Lever
180-077M1	08876	Element	1037-489M1	011516	Screen	1042-267M1	016466	Choke
180-079M1	OW-364	Clamp	1037-490M1	010529	Gasket	1042-268M1	015378	Diaph. Cover
180-080M1	09272	Packing	1037-491M1	014937	Strainer Cover	1042-269M1	015864	Screw
180-086M1	OW-461	Cup	1037-492M1	014239	Mix. Screw	1042-270M1	014920	Jet
180-097M1	08867	Cover	1037-493M1	014321	Mix. Screw	1042-271M1	016524	Valve
180-098M91	08888	Cover Asm.	1037-494M1	011103	Spring	1042-272M91	016520	Shaft & Lever
180-141M91	OW-482	Fuel Strainer	1037-495M1	08793	Spring	1042-273M1	015988	Spring
189-408M91	OW-800	Fuel Filter	1037-496M1	010511	Ring	1042-274M1	015984	Shutter
195-441M	01675	Washer	1037-497M1	011401	Packing	1042-275M1	015953	Gasket
231-369M91	OW-801	Fuel Filter	1037-498M1	05095	Screw	1042-276M91	016557	Choke Shaft & Lever
350-099X1	014687	Screw	1037-499M1	014326	Screw	1042-277M1	015424	Cover
519-673M91	HR-33A	Carburetor	1037-500M1	0788	Spring	1042-278M1	014964	Screw
519-674M91	HR-19A	Carburetor	1037-501M1	014994	Bracket	1042-279M91	015632	Shaft & Lever
519-732M1	014820	Primer Bulb Asm.	1037-502M1	010513	Control Lever	1043-143M91	015051	Choke
519-733M1	FS-2	Filter	1037-503M1	013406	Pinion Pin	1043-144M1	015794	Shaft
519-734M1	014832	Tee Fitting	1037-504M1	014683	Needle & Seat	1043-145M1	014478	Cup
519-735M1	014825	Primer Valve Asm.	1037-505M1	014602	Needle & Seat	1043-146M91	015393	Shaft & Lever
521-994M91	HR-54A	Carburetor	1037-506M1	013744	Gasket	1043-670M1	016412	Shaft
521-995M91	HR-55A	Carburetor	1037-507M1	010165	Gasket	1043-671M1	016685	Cover
521-996M91	HR-56A	Carburetor	1037-508M1	011503	Spring	1043-672M91	016917	Bracket

1043-673M1	016911	Screw	10-23285	08639	Plug Screw	220-125	0703	Nut
1043-674M1	016909	Valve	10-23286	08726	Screw	220-126	09112	Packing
1043-675M91	016916	Lever Asm.	10-23288	08757	Screw	220-126	0705	Packing
1043-676M1	016913	Spring	10-23290	08964	Mix. Screw	220-127	0702	Gland
1043-704M1	012177	Screw	10-25822	010742	Screw	220-128	0676	Gasket
1043-705M1	014995	Clip	10-25850	010745	Screw	220-133	07113	Idle Tube
1043-706M1	014997	Nut	10-26725	06607	Screw	220-144	0648	Gasket
1043-707M91	015005	Screw Asm.	10-28405	0675	Plug Screw	220-146	01449	Lead Shot
1043-708M1	015260	Needle	10-28408	01974	Screw	220-161	08315	Screw & Lockwasher
1043-709M1	016322	Screw	10-28845	02983	Plug Screw	221-501	09465	Body
1043-710M91	016328	Bracket Asm.	10-28846	03943	Plug Screw	221-503	03517	Pin
1043-711M1	016620	"E" Ring	10-38708	06062	Screw & Lockwasher	221-504	03519	Welch Plug
1043-712M1	016632	Plate	10-38710	06393	Screw	221-508	09469	Mix. Screw
1043-713M1	016635	Gasket	10-38712	07896	Plug Screw	221-509	08736	Spring
1043-714M1	016636	Gasket	10-38714	07901	Pinion Screw	221-510	09458	Shaft
1043-715M1	016637	Spring	10-38715	09679	Plug Screw	221-511	08646	Shutter
1043-716M91	016643	Lever Asm.	10-38768	013669	Screw	221-512	08942	Screw & Lockwasher
1043-717M1	016644	Screw	10-52120	03311	Plug Screw	221-513	06842	Lever
1043-718M1	016645	Venturi	10-52123	058	Screw	221-515	0788	Spring
1043-719M1	016922	Valve	10-52195	014906	Screw	221-519	08942	Screw & Lockwasher
1043-720M1	016923	Screw	10-52196	014908	Screw	221-601	09467	Air Horn
1043-721M1	016926	Shaft	11-20849	0703	Nut	221-604	06490	Pin
1043-722M1	016928	Plate	12-23203	01675	Lockwasher	221-605	09464	Shaft & Lever
1043-723M1	016929	Cover	12-38720	012400	Washer	221-606	08285	Shutter
1043-724M1	016930	Module	12-38721	012766	Washer	221-608	05454	Pin
1043-725M1	017002	Screw	12-52122	03804	Washer	221-609	03860	Spring
1043-727M91	016907	Shaft & Lever	13-26995	0992	Lockwasher	221-610	07912	Screw
1500-464M1	07761	Gasket	13-38711	06396	Lockwasher	221-611	06607	Screw
1500-467M1	07759	Bowl	17-20853	07460	Pin	260-308	0992	Lockwasher
1500-965M91	08055	Kit	17-23034	06490	Pin	271-913	07216	Cover
1500-966M1	07770	Cover	17-23231	03208	Lever Pin	1300-67	AJ-41A	Carburetor
1500-967M1	07765	Nut	17-23234	04594	Stop Screw	1304-97	AJ-45A	Carburetor
1500-968M1	07772	Wire & Stud	17-38719	012389	Pin	1304-97	AJ-45B	Carburetor
1500-968M1	07766	Clamp	17-38726	013660	Pin	1304-415	AJ-46A	Carburetor
1500-969M1	07769	Nut	18-31579	05425	Clip	1311-569	AJ-23A	Carburetor
1500-970M1	0705	Packing	19-20011	02531	Welch Plug	1312-578	AJ-10B	Carburetor
1503-828M1	07762	Screen	19-26724	02519	Welch Plug	1313-579	AJ-29A	Carburetor
1505-349M1	OW-432	Valve	19-32299	04326	Welch Plug	1314-581	AJ-8A	Carburetor
1505-348M1	OW-355	Cover	19-38718	011785	Welch Plug	1317-595	AJ-32A	Carburetor
			21-38717	010100	Inlet Check Valve	1318-835	AJ-34A	Carburetor
			23-38724	010300	Bushing	1319-596	AJ-33A	Carburetor
			23-39270	013865	Bushing	1320-608	AJ-36A	Carburetor
			24-20856	08736	Spring	1322-613	AJ-30B	Carburetor
			24-20869	09807	Spring	1326-869	AJ-47A	Carburetor
			24-23191	06634	Spring	1326-1119	AJ-50A	Carburetor
			24-23233	03860	Spring	1326-1604	AJ-54A	Carburetor
			24-26723	0788	Spring	1326-6104AT	AJ-54AT	Carburetor
			24-26890	011036	Spring	1327-1000	AJ-49A	Carburetor
			24-27160	011103	Spring	1327-1118	AJ-51A	Carburetor
			24-38722	013170	Spring	1328-1218	AJ-38A	Carburetor
			24-38725	013659	Spring	1329-1262	AJ-52A	Carburetor
			24-38727	013667	Spring	1329-1605	AJ-53A	Carburetor
			24-38909	013732	Spring	1330-1263	AJ-53A	Carburetor
			24-39269	013866	Spring	1330-1607	AJ-55A	Carburetor
			24-52121	013930	Spring	1333-1387	KA-2A	Carburetor
			27-20183	011034	Gasket	1333-1387A3	KA-2AT	Carburetor
			27-20848	0676	Gasket	1333-1437	KA-5A	Carburetor
			27-20851	02817	Gasket	1333-1501	KA-6A	Carburetor
			27-23167	0212	Gasket	1333-1501A1	KA-6AT	Carburetor
			27-23180	06569	Gasket	1333-1609	KA-7A	Carburetor
			27-23184	0648	Gasket	1333-1695	KA-8A	Carburetor
			27-25033	010165	Gasket	1333-1695A1	KA-8AT	Carburetor
			27-25848	010743	Gasket	1333-1700	KA-9A	Carburetor
			27-25849	010744	Gasket	1333-1700A1	KA-9AT	Carburetor
			27-25851	010746	Gasket	1333-1708	KA-10A	Carburetor
			27-26891	011390	Gasket	1333-1707A1	KA-10AT	Carburetor
			27-28406	02510	Gasket	1333-1823	KA-11A	Carburetor
			27-28409	06076	Gasket	1333-1823A1	KA-11AT	Carburetor
			27-38709	06833	Gasket	1333-1839	KA-5B	Carburetor
			27-38713	07900	Gasket	1333-1860	KA-12A	Carburetor
			27-38728	013672	Gasket	1333-1860A1	KA-12AT	Carburetor
			30-38716	010091	Ball	1333-1867	KA-13A	Carburetor
			35-49333	FS-2	Filter	1333-1867A1	KA-13AT	Carburetor
			54-28407	09678	Clip	1333-1943	KA-14A	Carburetor
			54-38723	013219	Clip	1333-1943A1	KA-14AT	Carburetor
			215-8744	015330	Primer Valve Asm.	1333-1953	KA-15A	Carburetor
			220-106	07198	Gasket	1333-1957	KA-16A	Carburetor
			220-107	06910	Mix. Screw	1333-1957A1	KA-16AT	Carburetor
			220-108	02531	Welch Plug	1333-2001	KA-17A	Carburetor
			220-111	06941	Needle & Seat	1333-2001A1	KA-17AT	Carburetor
			220-114	05425	Clip	1333-2002	KA-18A	Carburetor
			220-115	0212	Gasket	1333-2002A1	KA-18AT	Carburetor
			220-117	02395	Plug Screw	1333-2099	KA-19A	Carburetor

MASTER, DIV. OF KOEHRING CO.

M-5127	HL-41AX	Carburetor
M-5481	RK-374	Repair Kit
M-5567-1	011464	Connection
M8770	HL-122A	Carburetor
M-9001	RK-445	Repair Kit
M-11669	RK-601	Repair Kit
M-11670	RK-602	Repair Kit
M-11675	HL-174A	Carburetor
M-11676	HL-225A	Carburetor
M-11682	RK-605	Repair Kit
M-12007	TR-2	Demand Regulator
M-16085	HL-132B	Carburetor
M-16132	HL-189A	Carburetor
M-16133	RK-525	Repair Kit
M-17537	HL-247A	Carburetor
M-17542-1	RK-798	Repair Kit

MERCURY MARINE
(INCLUDES KIEKHAEFER)

27377	09458	Shaft
22581	06893	Metering Cup
046387	014489	Throttle Clusters
10-20847	051	Screw
10-20854	08315	Screw & Lockwasher
10-20857	08754	Screw
10-20858	08942	Screw & Lockwasher
10-20870	09897	Screw
10-21472	06969	Screw
10-23030	02395	Plug Screw
10-23035	010280	Screw & Lockwasher
10-23169	07001	Screw
10-23172	07005	Screw
10-23178	01102	Plug Screw
10-23179	06910	Mix. Screw
10-23192	05095	Screw
10-23201	05456	Screw
10-23265	08216	Screw

MERCURY MARINE (Cont.)

MERCURY MARINE (Cont.)

MERCURY MARINE (Cont.)

1333-2099A1	KA-19AT	Carburetor	1352-3968	KD-7A	Carburetor	1399-934	010400	Needle & Seat
1333-2170	KA-20A	Carburetor	1352-3968A	KD-7AT	Carburetor	1399-940	RK-229	Repair Kit
1333-2539	KA-21A	Carburetor	1352-4190	KD-3A-1	Carburetor	1399-960	010433	Idle Tube
1333-2539A1	KA-21AT	Carburetor	1352-4190A1	KD-3AT-1	Carburetor	1399-961	GS-107	Gasket Set
1333-2741	KA-21B	Carburetor	1352-4323	KD-7B	Carburetor	1399-962	RK-168	Repair Kit
1333-2741A1	KA-21BT	Carburetor	1352-4323A1	KD-7BT	Carburetor	1399-1036	010512	Shutter
1333-3015	KA-21C	Carburetor	1353-3747	MD-147A	Carburetor	1399-1037	RK-232	Repair Kit
1333-3015A1	KA-21CT	Carburetor	1353-3866	MD-147A1	Carburetor	1399-1038	010514	Screw
1333-3298	KA-21D	Carburetor	1354-3857	KD-3A	Carburetor	1399-1039	RK-193	Repair Kit
1333-3298A1	KA-21DT	Carburetor	1354-3857A1	KD-3AT	Carburetor	1399-1133	010738	Cover(Kiekhaefer only)
1333-3709	KA-24A	Carburetor	1357-4114	HR-66A	Carburetor	1399-1135	010739	Cover(Kiekhaefer only)
1333-3709A1	KA-24AT	Carburetor	1399-94	0702	Gland	1399-1138	010790	Needle & Seat
1334-1664A1	KB-3AT	Carburetor	1399-95	01449	Lead Shot	1399-1145	GS-123	Gasket Set
1334-1701	KB-2A	Carburetor	1399-96	06907	Idle Tube	1399-1146	RK-313	Repair Kit
1334-1701A1	KB-2AT	Carburetor	1399-97	06995	Lever	1399-1253	07216	Cover
1334-1720	KB-1A	Carburetor	1399-99	07198	Gasket	1399-1256	09464	Shaft & Lever
1334-1742	KB-4A	Carburetor	1399-100	07348	Cover	1399-1257	09465	Body
1334-1974	KB-5A	Carburetor	1399-101	07349	Lever	1399-1258	09467	Air Horn
1334-2031	KB-6A	Carburetor	1399-102	07350	Lever	1399-1259	09469	Mix. Screw
1334-2697	KB-6B	Carburetor	1399-107	08692	Shutter	1399-1260	GS-111	Gasket Set
1334-3720	KB-8A	Carburetor	1399-108	09112	Packing	1399-1261	RK-231	Repair Kit
1334-3734	KB-9A	Carburetor	1399-108	0705	Packing	1399-1270	011037	Shutter
1334-4106	KB-11A	Carburetor	1399-110A1	09805	Float	1399-1377	08646	Shutter
1334-4115	KB-12A	Carburetor	1399-113	09981	Screw	1399-1378	06482	Lever
1335-1983	KC-1A	Carburetor	1399-118	RK-107	Repair Kit	1399-1450	011389	Screw
1335-1983A1	KC-1AT	Carburetor	1399-215	07283	Screen	1399-1457	011394	Jet (.057)
1335-2081	KC-3A	Carburetor	1399-219	010106	Knob	1399-1459	011395	Jet (.059)
1335-2081A1	KC-3AT	Carburetor	1399-220	010155	Screw	1399-1461	011396	Jet (.061)
1335-2088	KC-2A	Carburetor	1399-224	010168	Screw	1399-1463	011385	Jet (.063)
1335-2088A1	KC-2AT	Carburetor	1399-393	RK-146	Repair Kit	1399-1465	011252	Jet (.065)
1335-2210	KC-4A	Carburetor	1399-433	010248	Cover	1399-1467	011397	Jet (.067)
1335-2472	KC-8A	Carburetor	1399-434	010295	Screw	1399-1469	011354	Shaft & Lever
1335-2474	KC-5A	Carburetor	1399-435	010293	Idle Tube	1399-1470	011243	Shutter
1335-2471A1	KC-5AT	Carburetor	1399-436	010301	Screen	1399-1471	011249	Screw
1335-2475	KC-6A	Carburetor	1399-437	010298	Screw	1399-1472	011254	Idle Tube
1335-2475A1	KC-6AT	Carburetor	1399-438	010291	Shaft	1399-1473	011357	Needle & Seat
1335-2476	KC-7A	Carburetor	1399-439	RK-152	Repair Kit	1399-1474	011248	Nozzle
1335-2476A1	KC-7AT	Carburetor	1399-449	010244	Shaft & Lever	1399-1475	011246	Shaft
1335-3016	KC-5B	Carburetor	1399-450	08285	Shutter	1399-1476	011244	Shutter
1335-3358	KC-5C	Carburetor	1399-451	05454	Friction Pin	1399-1477	GS-142	Gasket Set
1335-3358A1	KC-5CTA	Carburetor	1399-453	07912	Shutter	1399-1478	RK-369	Repair Kit
1335-3358A2	KC-5CTA	Carburetor	1399-521	06941	Needle & Seat	1399-1479	011387	Idle Tube
1335-3359	KC-10A	Carburetor	1399-522	04050	Needle & Seat	1399-1480	011386	Shutter
1335-3359A1	KC-10AT	Carburetor	1399-523	03369	Pin	1399-1481	RK-370	Repair Kit
1335-3379	KC-7B	Carburetor	1399-526	07113	Idle Tube	1399-1487	RK-371	Repair Kit
1335-3379A1	KC-7BT	Carburetor	1399-531	07028	Shaft	1399-1517	011480	Idle Tube
1335-3640	KC-14A	Carburetor	1399-546	RK-210	Repair Kit	1399-1518	011466	Needle & Seat
1335-3640A1	KC-14AT	Carburetor	1399-570	08215	Float	1399-1519	011483	Mix. Screw
1335-3683	KC-11A	Carburetor	1399-572	06905	Idle Tube	1399-1520	011482	Jet (.081)
1335-3683A1	KC-11AT	Carburetor	1399-574	RK-217	Repair Kit	1399-1521	011485	Nozzle
1335-4027	KC-15A	Carburetor	1399-575	RK-220	Repair Kit	1399-1522	011484	Shutter
1335-4027A	KC-15AT	Carburetor	1399-576	RK-212	Repair Kit	1399-1608	011748	Mix. Screw
1341-2404	KB-7A	Carburetor	1399-577	08307	Idle Tube	1399-1623	011721	Mix. Screw
1341-2987	KB-7B	Carburetor	1399-580	08587	Mix. Screw	1399-1624	RK-394	Repair Kit
1341-3711	KB-10A	Carburetor	1399-583	08442	Mix. Screw	1399-1625	RK-395	Repair Kit
1342-2564	MD-134A	Carburetor	1399-584	08303	Mix. Screw	1399-1626	RK-396	Repair Kit
1342-2564	MD-134B	Carburetor	1399-586	08669	Valve & Seat	1399-1649	011763	Jet (.049)
1342-2565	MD-135A	Carburetor	1399-587	GS-113	Gasket Set	1399-1651	011764	Jet (.051)
1342-2565	MD-135B	Carburetor	1399-588	RK-226	Repair Kit	1399-1653	011765	Jet (.053)
1343-2719	KA-22A	Carburetor	1399-589	RK-225	Repair Kit	1399-1655	011722	Jet (.055)
1343-3013	KA-22B	Carburetor	1399-593	08756	Needle & Seat	1399-1702	011974	Idle Tube
1343-3568	KA-22C	Carburetor	1399-597	08922	Screw	1399-1703	011975	Nozzle
1343-3727	KA-23A	Carburetor	1399-598	08193	Cover	1399-1704	RK-427	Repair Kit
1343-4183	KA-25A	Carburetor	1399-599	08624	Needle & Seat	1399-1705	RK-426	Repair Kit
1344-2722	KC-9A	Carburetor	1399-600	RK-230	Repair Kit	1399-1710	012003	Idle Tube
1344-2773	KC-9B	Carburetor	1399-601	RK-228	Repair Kit	1399-1711	012001	Shutter
1344-3021	KC-9C	Carburetor	1399-603	07646	Float	1399-1712	RK-428	Repair Kit
1344-3664	KC-13A	Carburetor	1399-604	06974	Mix. Screw	1399-1713	011957	Mix. Screw
1348-3368	KD-1A	Carburetor	1399-605	08637	Needle & Seat	1399-1714	011959	Mix. Screw
1348-3368A1	KD-1AT	Carburetor	1399-606	GS-112	Gasket Set	1399-1715	011956	Main Nozzle
1348-3547	KD-1B	Carburetor	1399-618	09968	Mix. Screw	1399-1716	011955	Shaft
1348-3547A1	KD-1BT	Carburetor	1399-619	08690	Mix. Screw	1399-1717	GS-149	Gasket Set
1348-3559	KD-1BR	Carburetor	1399-639	RK-211	Repair Kit	1399-1718	RK-429	Repair Kit
1348-3559A1	KD-1BTR	Carburetor	1399-699	09239	Shutter	1399-1719	RK-433	Repair Kit
1348-3718	KD-2A	Carburetor	1399-700A1	010232	Idle Tube	1399-1739	012057	Nozzle
1348-3718A1	KD-2AT	Carburetor	1399-701	010233	Cover	1399-1740	012046	Shutter
1349-3391	MC-146A	Carburetor	1399-702	010327	Screw	1399-1741	RK-438	Repair Kit
1352-3737	KD-4A	Carburetor	1399-810	RK-155	Repair Kit	1399-1754	012107	Strainer Screen
1352-3737A1	KD-4AT	Carburetor	1399-927	010397	Cover	1399-1760	012074	Mix. Screw
1352-3967	KD-5A	Carburetor	1399-931	010402	Mix. Screw	1399-1761	012075	Nozzle
1352-3966	KD-6A	Carburetor	1399-932	010410	Mix. Screw	1399-1762	012077	Idle Tube
1352-3966A	KD-6AT	Carburetor	1399-933	010415	Shaft	1399-1763	012078	Nozzle

MERCURY MARINE (Cont.)

MERCURY MARINE (Cont.)

MERCURY MARINE (Cont.)

1399-1764	RK-441	Repair Kit	1399-2591	RK-667	Repair Kit	1399-3797	RK-885	Repair Kit
1399-1765	012101	Jet (.045)	1399-2619	013795	Nozzle	1399-3810	015207	Jet
1399-1766	RK-442	Repair Kit	1399-2662	013867	Lever	1399-3811	013430	Jet (.070)
1399-1767	012027	Jet (.047)	1399-2709	014015	Nozzle	1399-3812	RK-886	Repair Kit
1399-1828	012199	Idle Tube	1399-2710	RK-681	Repair Kit	1399-3830	015164	Shaft & Lever
1399-1829	RK-452	Repair Kit	1399-2726	RK-688	Repair Kit	1399-3831	015161	Shutter
1399-1863	012247	Mix. Screw	1399-2733	RK-694	Repair Kit	1399-3832	GS-229	Gasket Set
1399-1864	012284	Jet (.043)	1399-2782	08364	Shutter	1399-3833	RK-887	Repair Kit
1399-1865	RK-461	Repair Kit	1399-2785	014149	Nozzle	1399-3928	015320	Strainer Screen
1399-1873	012285	Nozzle	1399-2786	RK-728	Repair Kit	1399-3937	RK-906	Repair Kit
1399-1874	RK-463	Repair Kit	1399-2966	014280	Idle Tube	1399-4025	013039	Cover
1399-1877	RK-465	Repair Kit	1399-2967	RK-753	Repair Kit	1399-4107	015533	Venturi
1399-1888	012300	Nozzle	1399-3026	014421	Jet (.036)	1399-4112	RK-897	Repair Kit
1399-1896	012370	Jet (.041)	1399-3027	014420	Nozzle	1399-4188	013627	Repair Kit
1399-1912	012210	Nozzle	1399-3028	RK-773	Repair Kit	1399-4189	RK-938	Repair Kit
1399-1913	RK-471	Repair Kit	1399-3031	014451	Idle Tube	1399-4206	RK-937	Repair Kit
1399-1930	012580	Strainer Cover	1399-3032	014481	Shutter	1399-4207	013630	Jet
1399-1962	012515	Jet (.069)	1399-3033	RK-778	Repair Kit	1399-4208	013979	Jet (.031)
1399-1963	RK-496	Repair Kit	1399-3034	014474	Nozzle	1399-4210	RK-939	Repair Kit
1399-1968	012408	Body	1399-3035	RK-775	Repair Kit	1399-4214	013967	Jet (.068)
1399-1985	012584	Nozzle	1399-3036	014463	Idle Tube	1399-4215	014188	Jet (.066)
1399-1986	RK-505	Repair Kit	1399-3037	014446	Shutter	1399-4216	014108	Jet (.064)
1399-1989	012617	Mix. Screw	1399-3038	RK-777	Repair Kit	1399-4217	014187	Jet (.062)
1399-1990	012621	Idle Tube	1399-3039	RK-774	Repair Kit	1399-4218	RK-940	Repair Kit
1399-1991	012618	Nozzle	1399-3251	014635	Jet (.034)	1399-4219	RK-941	Repair Kit
1399-1992	RK-513	Repair Kit	1399-3252	014634	Jet (.032)	1399-4225	014988	Screw & Lockwasher
1399-2009	012449	Idle Tube	1399-3392	014709	Shutter	1399-4226	015100	Plug Screw
1399-2010	012440	Nozzle	1399-3400	014745	Idle Tube	1399-4227	04784	Ball
1399-2011	012645	Jet (.071)	1399-3401	014742	Shutter	1399-4228	08805	Spring
1399-2012	012439	Shaft	1399-3403	RK-824	Repair Kit	1399-4229	015069	Shaft & Lever
1399-2013	012447	Jet (.073)	1399-3411	014711	Idle Tube	1399-4230	014621	Shutter
1399-2014	012438	Shutter	1399-3412	RK-812	Repair Kit	1399-4231	014402	Diaph. Cover
1399-2015	GS-157	Gasket Set	1399-3469	014747	Nozzle	1399-4232	05322	Ball
1399-2016	RK-510	Repair Kit	1399-3470	RK-823	Repair Kit	1399-4233	013335	Pump Body
1399-2018	012686	Nozzle	1399-3481	RK-820	Repair Kit	1399-4234	010098	Screw & Lockwasher
1399-2019	RK-520	Repair Kit	1399-3515	014729	Mix. Screw	1399-4235	011516	Screen
1399-2036	012771	Nozzle	1399-3516	014857	Idle Tube	1399-4236	014937	Strainer Cover
1399-2037	012773	Idle Tube	1399-3517	014302	Jet (.084)	1399-4239	014602	Needle & Seat
1399-2038	012774	Mix. Screw	1399-3518	014766	Jet (.082)	1399-4242	015224	Shaft & Lever
1399-2039	RK-539	Repair Kit	1399-3519	013194	Jet (.080)	1399-4243	014320	Shutter
1399-2080	012901	Body	1399-3520	014306	Jet (.0785)	1399-4244	GS-199	Gasket Set
1399-2178	012900	Idle Tube	1399-3521	014761	Nozzle	1399-4245	RK-851	Repair Kit
1399-2179	012898	Nozzle	1399-3522	014762	Plug Screw	1399-4255	RK-946	Repair Kit
1399-2180	012896	Shutter	1399-3523	GS-217	Gasket Set	1399-4412	015689	Shutter
1399-2181	RK-549	Repair Kit	1399-3524	RK-830	Repair Kit	1399-4417	015713	Cover
1399-2182	RK-551	Repair Kit	1399-3525	014874	Nozzle	1399-4418	015415	Shaft & Lever
1399-2226	012976	Nozzle	1399-3526	RK-831	Repair Kit	1399-4419	RK-871	Repair Kit
1399-2227	012975	Shutter	1399-3527	014760	Shaft	1399-4527	015787	Shaft & Lever
1399-2228	RK-560	Repair Kit	1399-3528	014759	Shutter	1399-4548	013430	Jet (.070)
1399-2237	013027	Shutter	1399-3530	014793	Shaft & Lever	1399-4697	RK-1HR	Repair Kit
1399-2238	RK-562	Repair Kit	1399-3531	013561	Float	1399-4698	014962	Shutter
1399-2371	013039	Cover	1399-3532	08332	Fuel Bowl	1399-4699	014961	Shutter
1399-2407	013266	Jet (.039)	1399-3533	012999	Mix. Screw	1399-4761	GS-10M	Gasket Set
1399-2408	013352	Nozzle	1399-3534	09034	Idle Tube	1399-4762	RK-10M	Repair Kit
1399-2409	09721	Shutter	1399-3535	013443	Needle & Seat	1399-4777	010588	Cup Plug
1399-2410	RK-598	Repair Kit	1399-3536	014787	Mix. Screw	1399-4778	010278	Screw & Lockwasher
1399-2416	011795	Shutter	1399-3537	011351	Packing	1399-4779	012251	Relief Valve
1399-2418	013356	Nozzle	1399-3538	014788	Nozzle	1399-4780	010883	Spring
1399-2534	013576	Idle Tube	1399-3539	014785	Shaft & Lever	1399-4781	016096	Shaft & Lever
1399-2535	013574	Nozzle	1399-3540	09558	Shutter	1399-4782	016093	Shutter
1399-2536	RK-622	Repair Kit	1399-3541	GS-216	Gasket Set	1399-4783	010385	Gasket
1399-2555	013580	Idle Tube	1399-3542	RK-829	Repair Kit	1399-4784	010318	Float
1399-2556	RK-628	Repair Kit	1399-3592	014939	Idle Tube	1399-4785	016097	Fuel Bowl
1399-2557	RK-629	Repair Kit	1399-3593	RK-838	Repair Kit	1399-4786	016092	Plug Screw
1399-2558	013624	Idle Tube	1399-3602	08646	Shutter	1399-4788	016086	Needle & Seat
1399-2559	RK-633	Repair Kit	1399-3603	013825	Jet	1399-4789	016091	Shaft & Lever
1399-2560	013636	Idle Tube	1399-3637	RK-844	Repair Kit	1399-4790	016088	Shutter
1399-2561	RK-632	Repair Kit	1399-3690	015109	Strainer Cover	1399-5010	0240	Screw
1399-2577	09148	Shutter	1399-3691	RK-850	Repair Kit	1399-5011	016412	Shaft
1399-2578	012146	Shutter	1399-3698	015169	Strainer Cover	1399-5012	015010	Shutter
1399-2579	012149	Pump Cover	1399-3733	014907	Idle Tube	1399-5013	015912	Screw
1399-2580	012395	Idle Tube	1399-3739	015133	Shutter	1399-5017	014645	Pump Body
1399-2581	012405	Pump Asm.	1399-3740	015141	Mix. Screw	1399-5018	014239	Screw
1399-2582	012761	Lever	1399-3741	RK-884	Repair Kit	1399-5019	014349	Bracket
1399-2583	013657	Shaft	1399-3742	015130	Strainer Screen	1399-5020	014142	Screw
1399-2584	013662	Needle & Seat	1399-3743	015129	Shutter	1399-5021	014648	Body
1399-2585	013666	Shaft & Lever	1399-3744	RK-883	Repair Kit	1399-5022	014687	Screw
1399-2586	013668	Cup	1399-3763	015143	Shutter	1399-5023	014578	Check Valve
1399-2587	013670	Nozzle	1399-3764	RK-882	Repair Kit	1399-5024	015375	Shaft
1399-2588	013673	Float Bowl	1399-3794	014303	Jet	1399-5025	014118	Clip
1399-2589	013678	Float	1399-3795	015026	Jet	1399-5026	013745	Shutter
1399-2590	GS-183	Gasket	1399-3796	013191	Jet (.076)	1399-5027	GS-1HD	Gasket Set

MERCURY MARINE (Cont.)

MITSUI & CO. (Cont.)

OUTBOARD MARINE OF CANADA
(INC. EVINRUDE MOTORS & GALE PROD.)

1399-5028	RK-4HD	Repair Kit	AC 122114-0	010280	Screw & Lockwasher	L-705	OW-418	Fuel Strainer
1399-5054	RK-20M	Repair Kit	AC 122116-0	04119	Shutter	L-705-A	OW-432	Shut Off Valve
1399-5113	015051	Lever	AC 122117-0	013375	Shaft	L-705-B	OW-363	Bowl
1399-5114	015596	Needle & Seat	AC 122118-0	013267	Mix. Screw	L-705-C	OW-462	Thumb Nut
1399-5122	016439	Relief Valve	AC 122119-0	013692	Spring	L-705-D	OW-352	Screen
1399-5123	016440	Spring	AC 122120-0	013268	Mix. Screw	L-705-E	OW-355	Cover
1399-5124	016452	Shaft & Lever	AC 122121-0	08793	Spring	L-705-F	OW-447	Wire & Thumb Nut
1399-5125	016438	Shutter	AC 122122-0	011503	Spring	L-705-G	06096	Gasket
1399-5126	016402	Float	AC 122123-0	013395	Lever	13013 PI	OW-418	Fuel Strainer
1399-5127	016408	Fuel Bowl	AC 122125-0	013218	Gasket	13842 PI	OW-432	Shut Off Valve
1399-5128	013945	Screw	AC 122126-0	012727	Screen	13843 PI	OW-363	Bowl
1399-5129	016449	Fuel Pump Body	AC 122127-0	013219	Clip	13845 PI	OW-352	Screen
1399-5130	016453	Needle & Seat Asm.	AC 122131-0	014042	Shaft & Lever	13847 PI	OW-447	Wire & Thumb Nut
1399-5131	016448	Strainer Body	AC 122132-0	013263	Shutter	13848 PI	06096	Gasket
1399-5132	016441	Screw & Lockwasher	AC 122133-0	011431	Spring	113525	HD-11A	Carburetor
1399-5133	016434	Shaft	AC 122134-0	013270	Screw	113844	015383	Spring
1399-5134	016436	Shutter	AC 122136-0	04784	Ball	113907	015630	Valve
1399-5135	GS-1BB	Gasket Set	AC 122137-0	013396	Needle	114309	08304	Gasket
1399-5136	RK-1BB	Repair Kit	AC 122138-0	013210	Pinion Pin	114310	013772	Mix. Screw
1399-5137	DG-1BB	Diaph.&Gasket Set	AC 122139-0	013269	Screw	114311	015361	Screw
1399-5138	016468	Shutter	AC 122140-0	013215	Gasket	114618	016956	Lever
1399-5139	RK-2BB	Repair Kit	AC 122141-0	013278	Diaph.	114621	014632P	Needle & Seat
1399-5194	015740	Valve	AC 122142-0	013216	Diaphragm Cover	114622	015384	Lever
1399-5195	015745	Spring	AC 122143-0	08942	Screw & Lockwasher	114643	010278	Screw & Lockwasher
1399-5196	016512	Shaft	AC 122144-0	08942	Screw & Lockwasher	114644	017110	Gasket
1399-5197	015739	Shutter	AC 122145-0	012809	Welch Plug	114645	017109	Diaphragm
1399-5198	GS-1BA	Gasket Set	AC 122146-0	013372	Welch Plug	114646	014239	Mix. Screw
1399-5199	RK-1BA	Repair Kit	AC 122147-0	015289	Check Valve	114647	06393	Screw
1399-5207	010529	Gasket	AC 131205-0	OW-497	Fuel Tank Filter	114648	06396	Lockwasher
1399-5210	016660	Shaft	AE 122000-0	HS-54B	Carburetor	114649	012761	Lever
1399-5211	016685	Diaph. Cover	AE 122116-0	08646	Shutter	130586	0702	Gland
1399-5212	016681	Elbow Connector	AE 122117-0	014800	Shaft & Lever	162432	HD-130C	Carburetor
1399-5213	015338	Jet (.056)	AE 122118-0	015170	Mix. Screw	162433	HD-129B	Carburetor
1399-5214	DG-1HD	Diaph.& Gasket Set	AE 122120-0	014797	Mix. Screw	162435	016954	Shaft & Lever
1399-5225	015339	Jet (.054)	AE 122147-0043-01	015289	Check Valve	162436	RK-9HD	Repair Kit
1399-5226	016804	Jet (.052)	AK 122000-0	HU-1B	Carburetor	162481	017118	Pump Body
1399-5227	016803	Jet (.050)	AK 122000-ORK	RK-1HU	Repair Kit	162482	017114	Shaft & Lever
1399-5414	016870	Relief Valve	AK 122110-0	015089	Screw & Lockwasher	162483	017112	Pump Assembly
1399-5415	016722	Screw	AK 122112-0	014693	Diaph.	162484	RK-11HD	Repair Kit
1399-5461	014190	Jet (.092)	AK 122113-0	015092	Spring	202943	03114	Washer
1399-5521	RK-3TC	Repair Kit	AK 122116-0	014867	Shutter	202947	08227	Gasket
1399-5749	017099	Shutter	AK 122117-0	015091	Shaft & Lever	260003	HR-32A	Carburetor
1399-5755	017173	Choke Shaft	AK 122118-0	014798	Mix. Screw	260004	HR-31A	Carburetor
1399-5756	017123	Shutter	AK 122120-0	014797	Mix. Screw	260097	011503	Ten. Spring
1399-5758	010530	Screen	AK 122122-0	015138	Tension Spring	260396	015333	Tee Fitting
1399-5800	RK-5BB	Repair Kit	AK 122123-0	014641	Control Lever	260655	04784	Choke Friction Ball
1399-5804	RK-4BB	Repair Kit	AK 122124-0	014619	Pump Body	260656	08805	Choke Friction Spring
1399-5809	017207	Shaft	AK 122125-0	014694	Gasket	260657	08942	Screw & Lockwasher
1399-5810	012407	Washer	AK 122137-0	013262	Needle	260659	055	Screw
1399-5812	017249	Shutter	AK 122138-0	015084	Pin	260662	011516	Screen
1399-5813	RK-3BA	Repair Kit	AK 122140-0	014679	Gasket	260663	010529	Gasket
1399-5827	017276	Shaft	AK 122141-0	015094	Diaph.	260664	014937	Cover
1399-5929	GS-1KA	Gasket Set	AK 122142-0	014680	Diaph. Cover	260665	010571	Screw
1399-5930	RK-2KA	Repair Kit	AK 122145-0	015083	Welch Plug	260666	0788	Spring
			AK 122146-0	012347	Cup Plug	260667	010513	Lever
			AK 131205-0	OW-802	Tank Filter	260668	013406	Pinion Pin
			AK 351205-0	OW-802	Tank Filter	260669	013269	Screw
			AQ 122000-0	HS-94A	Carburetor	260670	011103	Spring
			AQ 122000-ORK	RK-2HS	Repair Kit	260671	03114	Washer
AA 122000-0	HL-226A	Carburetor	AQ 122117-0	015771	Shaft & Lever	260672	010511	Ring
AA 122112-0	010531	Diaph.	AQ 122128-0	HS-99A	Non-Ser.Nipple	260673	0992	Lockwasher
AA 122113-0	010775	Spring	AQ 122131-0	015770	Shaft & Lever	260674	01974	Screw
AA 122116-0	012089	Shutter	AQ 131200-0	OW-802	Filter	260675	08942	Screw & Lockwasher
AA 122123-0	014020	Control Lever	AT 122000-0	HU-9A	Carburetor	260676	0244	Pipe Plug
AA 122125-0	012930	Gasket	AT 122000-ORK	RK-4HU	Repair Kit	260677	04326	Welch Plug
AA 122126-0	010530	Strainer Screen	AT 122113-0	016055	Spring	260678	014991	Shaft & Lever
AA 122129-0	0992	Washer	AT 122117-0	016054	Shaft	260679	015010	Shutter
AA 122133-0	0788	Spring	AT 122118-0	016050	Screw	260681	014120	Gasket
AA 122134-0	05095	Screw	AT 122120-0	016051	Screw	260682	014248	Diaph.
AA 122136-0	05454	Ball	AT 122123-0	015651	Lever	260683	014705	Diaph. Cover
AA 122137-0013	014035P	Needle & Seat	AT 122124-0	015857	Fuel Pump Body	260684	014834	Gasket
AA 122140-0	012473	Gasket	AW 122000-0	HS-54B	Carburetor	260685	014643	Gasket
AA 122141-0	012475	Diaphragm	AX 122000-0	HU-14A	Carburetor	260686	014644	Diaph.
AA 122145-0	012809	Welch Plug	AX 122000-ORK	RK-1HU	Repair Kit	260687	014645	Pump Body
AA 122150-0	012148	Lever	AX 122118-0	016048	Idle Screw	260688	014239	Mix. Screw
AA 122158-0	010098	Screw & Lockwasher	ECHO CS301	RK-942	Repair Kit	260689	011103	Spring
AC 122000-0	HS-25A	Carburetor	ECHO CS301	GS-231	Gasket Set	260690	03114	Washer
AC 122000-ORK	RK-2HS	Repair Kit	ECHO CS802	RK-833	Repair Kit	260691	010511	Ring
AC 122110-0	011441	Screw & Lockwasher	ECHO CS802	GS-218	Gasket Set	260692	05095	Screw
AC 122111-0	011441	Screw & Lockwasher	EP 122123-0	015651	Inlet Cont.Lever	260693	014349	Bracket
AC 122112-0	013652	Diaphragm				260694	014142	Screw
AC 122113-0	013297	Spring				260695	014683	Needle & Seat

260096	013744	Gasket	405663	014879	Body	427952	013396	Needle
260697	011503	Spring	405664	014882	Screw	427953	013395	Lever
260698	014646	Gasket	405665	015345	Shaft & Lever	427954	013210	Pinion Pin
260699	014647	Diaph.	405666	014961	Shutter	427955	011441	Screw & Lockwasher
260702	014247	Mix. Screw	405667	GS-227	Gasket Set	427956	013216	Cover
260700	014648	Body	405668	RK-898	Repair Kit	427957	013219	Clip
260701	014687	Screw & Lockwasher	405845	015424	Diaph. Cover	427959	013267	Adj. Screw
260703	013853	Gland	405846	015668	Shaft & Lever	427960	013268	Adj. Screw
260704	0676	Gasket	405854	015661	Connection	427961	013518	Spring
260705	014993	Jet (.089)	405855	05413	Washer	427962	013269	Screw
260706	013683	Gasket	405853	010301	Screen	427963	013270	Screw
260707	014578	Check Valve	405856	0379	Cotter Pin	428149	014125	Reducer
260708	014992	Shaft & Lever	425385	0759	Lockwasher	428226	014299	Screw
260709	014118	Clip	425386	0788	Spring	428414	013622	Adj. Screw
260710	014348	Spring	425387	0992	Lockwasher	428417	014456	Spring
260711	013745	Shutter	425390	01974	Screw	428419	014458	Mix. Screw
260712	RK-859	Repair Kit	425391	02232	Plug Screw	428451	013263	Shutter
260713	015103	Body	425393	012930	Gasket	428452	04784	Ball
260714	02531	Welch Plug	425401	0595	Screw	428453	08805	Spring
260715	013737	Welch Plug	425422	07759	Strainer Bowl	429904	011460	Filter Element
260716	015003	Shaft & Lever	425426	07769	Shut Off Valve	430277	016342	Mix. Screw
260717	014621	Shutter	425427	07770	Cover	430278	016343	Mix. Screw
260719	012473	Gasket	425428	07804	Float	430279	015634	Shutter
260720	012475	Diaph.	425440	08215	Float	430285	013015	Ball
260721	014584	Cover	425446	08646	Shutter	430288	014679	Gasket
260722	05322	Ball	425449	08793	Spring	430289	014680	Diaph. Cover
260723	014319	Gasket	425450	08805	Spring	430290	014693X	Diaph.
260724	012930	Gasket	425456	09626	Shutter	430291	014694	Gasket
260725	014230	Diaph.	425458	09676	Gasket	430292	014867	Shutter
260726	014229	Diaph.	425459	09678	Clip	430293	014888	Spring
260727	013335	Body	425464	09697	Adj. Screw	430294	015083C	Welch Plug
260728	010098	Screw & Lockwasher	425465	09698	Diaph.	430295	015084	Pin
260729	014321	Mix. Screw	425467	09708	Lever	430296	015089	Screw & Lockwasher
260730	08793	Spring	425469	09780	Bushing	430297	015651	Control Lever
260731	011428	Washer	425480	010090	Diaph.	430298	016389	Pump Body
260732	011401	Packing	425484	010097	Check Valve	430299	016390	Spring
260733	014326	Screw	425486	010165	Gasket	430300	016391	Mix. Screw
260734	014602	Needle & Seat	425489	010513	Control Lever	430301	016393	Screw
260735	010165	Gasket	425490	010525	Pump Body	430302	016395	Nozzle
260736	013434	Spring	425491	010526	Cover	430436	014465	Filter Element
260737	014499	Screw	425492	010527	Strainer Cover	430628	016967	Screw
260738	014334	Nozzle	425493	010529	Gasket	430629	016966	Idle Screw
260739	015122	Shaft & Lever	425494	010530	Strainer Screen	430630	015615	Shutter
260740	09678	Clip	425495	010531	Diaph.	430631	016962	Shutter
260741	014324	Spring	425496	012473	Gasket	430636	013692	Spring
260742	014320	Valve	425498	010578	Spring	430637	013270	Screw
260743	RK-871	Repair Kit	425501	010588	Cup Plug	430638	011431	Spring
260988	015036	Mix. Screw	425502	010589	Seal Ring	430650	013434	Spring
261022	014924	Shaft & Lever	425505	010775	Spring	430808	017027	Spring
261023	013741	Shutter	425506	012930	Gasket	430857	016543	Spring
261024	013742	Valve	425507	05454	Friction Pin	430858	014532	Bushing
261025	013775	Spring	425573	07903	Gasket	430874	015329	Governor Valve Asm.
261026	014248	Diaph.	425966	04119	Shutter	430898	016728	Shutter
261027	014117	Diaph Cover	425741	010571	Screw	470107	07895	Needle & Seat
261028	011045	Screw	425744	010954	Diaph. Cover	470114	09878	Shaft & Lever
261029	015152	Bracket	425747	011204	Spring	470115	09899	Needle & Seat
261030	015153	Screw	425748	08227	Gasket	470118	012339	Needle & Seat
261031	010301	Screen	426145	08942	Screw & Lockwasher	470119	010858	Shaft & Lever
261032	013774	Needle & Seat	426146	010098	Screw	470171	HL-22A	Carburetor
261033	014920	Jet (.096)	426599	012831	Pump Diaph.	470194	07766	Wire & Thumb Nut
261034	014916	Shaft & Lever	426909	010531-T	Thin Pump Diaph.	470195	010798	Adj. Screw
261036	015180	Sleeve	426910	011785	Welch Plug	470196	011122	Shaft & Lever
277004	08601	Needle & Seat	426916	07844	Washer	470197	011207	Adj. Screw
277047	07804	Float	426917	012357	Ring	470322	GS-1HL	Gasket Set
290159	015330	Primer Valve Asm.	426919	011428	Washer	470323	RK-159	Repair Kit
290295	RK-879	Repair Kit	426920	011401	Packing	470324	RK-315	Repair Kit
387061	CO-2A	Carburetor	426921	012364	Mix. Screw	470325	RK-12HL	Repair Kit
405338	015489	Shaft & Lever	426922	011503	Spring	470350	011123	Body
405650	015350	Body	426923	012360	Adj. Screw	470361	012475	Diaph.
405651	014988	Screw & Lockwasher	426924	012356	Spring	470383	010617	Screw
405652	015037	Lever Asm.	427939	013167	Cover	470486	010860	Body
405653	0240	Screw	427940	013218	Gasket	470395	010581	Pinion Screw
405654	015343	Shaft	427941	013652	Diaph.	470544	011429	Body
405655	014962	Shutter	427942	012884	Screen	470639	GS-153	Gasket Set
405656	015080	Cover	427943	012345	Ring	470734	010580	Needle & Seat
405657	014881	Gasket	427944	013372	Welch Plug	470756	HL-108A	Carburetor
405658	014880	Diaph.	427946	011431	Spring	470772	012084	Check Valve
405659	014878	Pump Body	427947	010280	Screw & Lockwasher	470773	012362	Shaft & Lever
405660	011503	Spring	427948	012809	Welch Plug	470780	012368	Body
405661	014884	Gasket	427950	013215	Gasket	470781	012363	Screw
405662	014883	Diaph.	427951	012727	Screen	470782	GS-155	Gasket Set

470783	RK-470	Repair Kit	316124	010531T	Thin Pump Diaph.	316390	015673	Spring
470860	HL-129A	Carburetor	316125	010530	Strainer Screen	316391	015861	Mix. Screw
470867	012707	Body	316126	010571	Screw	316392	015658	Check Valve
471374	013278	Diaph.	316127	010617	Adj. Screw	316393	015860	Shaft & Lever
471380	014124	Shaft & Lever	316128	05095	Screw	316394	012038	"E" Ring
471398	HS-12A	Carburetor	316129	0788	Spring	316395	015859	Spring
471419	OW-497	Fuel Tank Filter	316130	012503	Needle & Seat	316396	014867	Shutter
471497	RK-646	Repair Kit	316131	010513	Control Lever	316397	GS-1HU	Gasket Set
471515	HS-16A	Carburetor	316132	010581	Pinion Screw	316398	RK-1HU	Repair Kit
471575	HS-16B	Carburetor	316133	010578	Spring	316399	DG-1HU	Diaph. & Gasket Set
471618	014123	Check Valve	316134	010624	Adj. Screw	316401	HS-2C	Carburetor
471633	RK-712	Repair Kit	316135	06393	Screw	316402	RK-2HS	Repair Kit
471710	HS-39A	Carburetor	316136	06396	Lockwasher	316403	GS-1HS	Gasket Set
471739	014460	Shaft & Lever	316137	GS-122	Gasket Set	316404	013215	Gasket
471771	RK-1HS	Repair Kit	316138	010165	Gasket	316405	013218	Pump Gasket
471772	HS-44A	Carburetor	316139	010529	Strainer Gasket	316406	013372	Welch Plug
471775	013300	Shaft & Lever	316140	012473	Diaph. Gasket	316407	012809	Welch Plug
472330	HS-66A	Carburetor	316141	012930	Pump Gasket	316408	013278	Diaph.
473451	015496	Check Valve	316142	010589	Seal Ring	316409	013652	Pump Diaph.
473452	HS-39B	Carburetor	316148-A	OW-497	Fuel Tank Filter	316410	013376	Adj. Screw
473581	016245	Shaft & Lever	316150	011847	Body	316411	013374	Adj. Screw
473806	HS-116A	Carburetor	316151	011846	Shaft	316412	013270	Screw
473817	016258	Shaft & Lever	316152	011442	Shutter	316413	011431	Spring
473870	HU-15A	Carburetor	316153	011716	Mix. Screw	316414	013396	Needle
473952	HS-146A	Carburetor	316154	011494	Mix. Screw	316415	013395	Lever
473956	HS-147C	Carburetor	316155	08793	Spring	316416	013210	Pinion Screw
473957	016345	Shaft & Lever	316156	011428	Washer	316417	013269	Screw
473958	015094	Diaphragm	316157	011401	Packing	316418	012727	Screen
473959	016394	Shaft & Lever	316158	GS-1HL	Gasket	316419	013297	Spring
473960	RK-3HU	Repair Kit	316159	RK-410	Repair Kit	316420	010280	Screw & Lockwasher
474111	GS-1HL	Gasket Set	316163	012165	Shaft & Lever	316422	012884	Ring
474113	RK-12HL	Repair Kit	316166	012130	Insert	316423	04784	Ball
474114	RK-18HL	Repair Kit	316167	012347	Cup Plug	316424	013371	Shaft & Lever
474115	RK-1HS	Repair Kit	316168	012344	Screen	316425	013263	Shutter
474397	OW-802	Fuel Strainer	316169	012345	Ring	316426	013829	Shaft & Lever
474563	016965	Choke Shaft	316170	011493	Screen	316427	04119	Shutter
474564	016963	Shaft & Lever	316171	011847	Body	316428	013219	Clip
474565	016902	Check Valve Asm.	316172	HL-67A	Carburetor	316429	014839	Cover
474566	016904	Shaft & Lever	316173	HL-67A	Carburetor	316430	013167	Cover
474603	RK-7HS	Repair Kit	316180	HL-163A	Carburetor	316431	011441	Screw & Lockwasher
474634	017163	Shaft & Lever	316181	HL-11A	Carburetor	316432	014072	Washer
474770	014598	Leak Detector	316184	012411	Shaft	316433	014534	Shaft & Lever
487718	HD-37A	Carburetor	316185	012412	Shaft & Lever	316434	014531	Spring
487952	HR-79A	Carburetor	316186	010050	Cup	316435	014532	Sleeve
551139	07896	Plug Screw	316187	RK-487	Repair Kit	316436	014600	Needle
551142	07903	Gasket	316192	013256	Body	316437	013209	Lever
551595	02531	Welch Plug	316193	012489	Shutter	316438	016065	Shaft & Lever
590622	07895	Needle & Seat	316194	012476	Diaph. Cover	316439	014625	Shaft & Lever
590627	07804	Float	316195	011494	Mix. Screw	316443	013318	Elbow
590855	08708	Needle & Seat	316196	RK-581	Repair Kit	316445	HS-105A	Carburetor
591194	RK-272	Repair Kit	316312	011883	Shutter	316446	015587	Connector Tube
			316313	011498	Adj. Screw	316451	HS-117A	Carburetor
			316315	011503	Spring	316453	013959	Mix. Screw
			316316	012084	Check Valve	316454	014252	Mix. Screw
			316334	011908	Screw	316455	08646	Shutter
			316335	011103	Spring	316456	014625	Shaft & Lever
			316336	012420	Adj. Screw	316462	016731	Diaph. Cover
			316339	011907	Clip	316463	013846	Screw & Lockwasher
			316352	013323	Shaft & Lever	316464	016730	Shaft & Lever
			316353	013329	Cover	316468	016741	Plug
			316354	013326	Shaft & Lever	453002	012084	Check Valve
			316355	RK-593	Repair Kit	453003	011493	Screen
			316362	015200	Gov. Valve Asm.	453006	02232	Plug Screw
			316366	01102	Plug Screw	453008	012475	Diaphragm
			316367	016291	Gov. Valve Asm.	453009	011418	Cover
			316372	014679	Gasket	453010	011441	Screw & Lockwasher
			316373	015094	Diaphragm	453011	011716	Adjustment Screw
			316374	014680	Diaph. Cover	453012	011494	Adjustment Screw
			316376	014694	Gasket	453013	08793	Spring
			316377	014693	Diaphragm	453014	011428	Washer
			316378	015857	Fuel Pump Body	453016	010513	Control Lever
			316379	015651	Lever	453017	010581	Pinion Screw
			316380	015089	Screw & Lockwasher	453018	010578	Spring
			316381	015084	Screw	453019	011499	Needle & Seat
			316382	015138	Spring	453022	01974	Screw
			316383	016971	Mix. Screw	453023	0992	Lockwasher
			316384	07844	Washer	453030	013055	Idle Tube
			316385	016972	Main Nozzle	453033	013058	Adjustment Screw
			316386	DG-1HU	Diaph. & Gasket Set	453034	014060	Adjustment Screw
			316387	015083	Welch Plug	454002	02531	Welch Plug
			316388	015819	Diaph. Cover	454003	07903	Gasket
			316389	015589	Mix. Screw	454004	06062	Screw & Lockwasher
272054	013220	Gasket	316336					
295602	012410	Spring	316339					
315145	OW-497	Fuel Tank Filter	316352					
316101	HL-69A	Carburetor	316353					
316102	HL-67B	Carburetor	316354					
316103	011456	Body	316355					
316104	010526	Cover	316362					
316105	010525	Body	316366					
316106	010527	Strainer Cover	316367					
316107	011448	Shaft & Lever	316372					
316108	011589	Shaft & Lever	316373					
316109	09780	Bushing	316374					
316110	09678	Clip	316376					
316111	0992	Lockwasher	316377					
316112	01974	Screw	316378					
316113	09626	Shutter	316379					
316114	08646	Shutter	316380					
316115	05454	Friction Pin	316381					
316116	08805	Spring	316382					
316117	02232	Plug Screw	316383					
316118	010098	Screw & Lockwasher	316384					
316119	RK-315	Repair Kit	316385					
316120	010588	Cup Plug	316386					
316121	02531	Welch Plug	316387					
316122	08942	Screw & Lockwasher	316388					
316123	012475	Diaph.	316389					

AB PARTNER (Cont.)

AB PARTNER (Cont.)

ROPER CORP. (Cont.)

454005	05454	Friction Pin
454006	03860	Spring
454007	07912	Screw
454008	011314	Shaft
454009	03739	Shutter
454010	05204	Screw
454011	07804	Float
454012	07901	Pinion Screw
454013	08332	Bowl
454014	03311	Screw
454015	07896	Screw
454016	011316	Screw
454017	08736	Spring
454018	07899	Idle Tube
454019	07900	Gasket
454020	08601	Needle & Seat
454021	02510	Gasket
454022	011112	Screw
454023	0702	Gland
454024	0676	Gasket
454025	011351	Packing
454026	0703	Nut
454027	08279	Nozzle
454028	02395	Plug Screw
454029	02883	Shaft
454030	07910	Spring
454031	08597	Clip
454032	08585	Shutter
454033	06393	Screw
454034	06396	Lockwasher
454035	GS-140	Gasket Set
454038	012554	Adj. Screw
454039	01713	Idle Tube
454040	012555	Adj. Screw
454044	02983	Plug Screw
454045	011294	Float
454046	012550	Needle & Seat
454047	08586	Nozzle
455002	010688	Shaft & Lever
455003	07944	Spring
455004	010930	Lever
455005	010931	Spring
455006	09388	Shutter
455007	011189	Mix. Screw
455008	010612	Lockwasher
455009	08693	Lockwasher
455010	09142	Idle Tube
455011	07895	Needle & Seat
455012	011150	Mix. Screw
455013	01102	Plug Screw
455014	09275	Shaft
455015	09139	Shutter
455016	08942	Screw & Lockwasher
455017	0240	Screw
455018	058	Screw
455021	011057	Lever
455022	08850	Nozzle
455025	012545	Adj. Screw
455026	010154	Idle Tube
455027	012216	Needle & Seat
455028	012662	Adj. Screw
455029	011946	Nozzle
455030	012542	Shaft
455031	012548	Clip
456002	04326	Welch Plug
456003	010276	Gasket
456004	010278	Screw & Lockwasher
456005	011172	Lever
456006	011174	Shaft & Lever
456007	010750	Spring
456008	010302	Shutter
456009	010280	Screw & Lockwasher
456010	010318	Float
456011	010651	Pin
456012	011178	Bowl
456013	03943	Plug Screw
456014	011372	Screw
456015	011103	Spring
456016	06095	Washer
456017	011177	Idle Tube
456018	06569	Gasket
456019	010491	Needle & Seat

456020	010165	Gasket
456021	011318	Mix. Screw
456022	011352	Packing
456023	010649	Adapter
456024	05323	Gasket
456025	010650	Nut
456026	011465	Nozzle
456027	010277	Gasket
456028	011169	Shaft & Lever
456029	011364	Shutter
456034	012879	Adj. Screw
456035	012881	Idle Tube
456036	012877	Adj. Screw
456044	013013	Adj. Screw
456047	013155	Nozzle
456048	013157	Adj. Screw
457001	012513	Adj. Screw
457002	012514	Adj. Screw
457005	012574	Needle & Seat
460237J	08227	Gasket
460238J	08902	Bowl
460240J	08899	Wire & Nut
460275J	OM-6A	Carburetor
467008J	MD-105A	Carburetor
467249J	OM-8A	Carburetor
470240	MD-121A	Carburetor
470494	MD-105A	Carburetor
473037	MD-122A	Carburetor
473109	MD-130A	Carburetor
474108	MD-123A	Carburetor
475055	MD-129A	Carburetor
477187	HC-10A	Carburetor
477213	MD-128A	Carburetor
492058J	MD-90A	Carburetor
492099J	MD-98A	Carburetor
492107J	MD-98B	Carburetor
492133J	MD-98X	Carburetor
492267J	MD-91A	Carburetor
492321J	MD-95A	Carburetor
492385J	011351	Packing
492409J	MD-103A	Carburetor

REMINGTON ARMS
(SEE DESA IND.)

ROPER CORP.

923H	OW-497A	Fuel Tank Filter
3680R	011441	Screw & Lockwasher
3681R	013167	Cover
3682R	013218	Gasket
3683R	013652	Diaphragm
3684R	012727	Screen
3685R	013219	Clip
3686R	010280	Clip
3687R	013263	Shutter
3688R	04784	Ball
3689R	08805	Spring
3690R	013396	Needle
3691R	011503	Spring
3692R	013395	Lever
3693R	013210	Pinion Pin
3694R	014887	Screw
3695R	012809	Welch Plug
3696R	08793	Mix. Screw
3697R	013518	Spring
3698R	04119	Shutter
3699R	013270	Screw
3700R	011431	Spring
3701R	013215	Gasket
3702R	013278	Diaphragm
3703R	013216	Cover
3704R	08942	Screw & Lockwasher
4436R	016806	Jet (.028)
4435R	013621	Mix. Screw
4437R	014125	Reducer
4438R	013847	Elbow Connector
4495R	RK-3HS	Repair Kit
7285R	013621	Mix. Screw

7286R	013622	Mix. Screw
8742M	08227	Gasket
9057H	OW-802	Fuel Strainer
9565H	012884	Screen
9566H	012345	Ring
9567H	013382	Spring
9568H	013300	Shaft & Lever
9569H	013220	Gasket
9570H	014942	Gov. Valve Asm.
9571H	010404	Gasket
9572H	013267	Mix. Screw
9573H	013268	Mix. Screw
9574H	014390	Shaft & Lever
9575H	GS-1HS	Gasket Set
9576H	RK-3HS	Repair Kit

SKIL CORP.

29145	OW-497	Fuel Tank Strainer
29210	HS-14A	Carburetor
43200	08805	Spring
43201	08942	Screw
43202	013652	Diaph.
43203	011441	Screw
43204	012727	Screen
43205	013688	Shaft
43206	013215	Gasket
43207	010280	Screw & Lockwasher
43208	08781	Shutter
43209	012930	Gasket
177095	HS-18AX	Carburetor
177143	013270	Screw
177635	OW-497	Filter
177777	RK-2HS	Repair Kit
178053	012809	Welch Plug
178095	HS-50A	Carburetor
178102	012727	Screen
178110	013215	Gasket
178111	013218	Gasket
178120	013692	Spring
178121	013959	Screw
178122	014252	Mix. Screw
178123	014374	Check Valve
178124	014726	Lever
178125	013219	Clip
178134	013708	Cover
178142	014738	Spring
178149	013269	Screw
178151	013396	Needle
178153	013278	Diaphragm
178154	013652	Diaphragm
178155	013395	Lever
178693	014737	Shaft Asm.
178778	GS-1HS	Gasket Set
180053	015083	Welch Plug
180095	HU-4A	Carburetor
180111	014694	Gasket
180153	015094	Diaphragm
180154	014693	Diaphragm
180155	015651	Lever
180156	015084	Fulcrum Pin
180777	RK-1HU	Repair Kit
180778	GS-1HU	Gasket Set
181095	HS-113A	Carburetor
183129	04119	Shutter
183136	011503	Spring
183150	013210	Fulcrum Pin
183157	013167	Pump Cover
185095	HS-64A	Carburetor
185125	014841	Spring
185126	013263	Shutter
185237	012038	"E" Ring
185615	015049	Shaft Asm.
224095	HS-119A	Carburetor
270095	HL-109B	Carburetor
275095	HL-217A	Carburetor
275143	08793	Screw
281095	HL-271A	Carburetor
715304	010280	Screw & Lockwasher
715604	013846	Screw & Lockwasher

725403	013849	Screw & Lockwasher	1108 122 3210	010775	Spring	6503 120 8800	012339	Needle & Seat
735606	011441	Screw & Lockwasher	1108 122 6200	014980	Screw	6503 121 0400	010525	Pump Body
			1108 122 6200	013270	Screw	6503 121 0500	010526	Diaph. Cover
			1108 122 6700	012420	Mix. Screw	6503 121 0800	010527	Strainer Cover
			1108 122 6800	011498	Mix. Screw	6503 121 2910	09626	Shutter
			1108 122 9410	012809	Mix. Screw	6503 121 3300	013399	Shutter
			1108 129 1100	012930	Gasket	6503 121 3300	08646	Shutter
			1110 120 0600	HS-29A	Carburetor	6503 121 4700	012475	Diaph.
			1110 120 0601	HS-29B	Carburetor	6503 121 4800	010531T	Thin Pump Diaph.
			1110 120 0601	HS-29C	Carburetor	6503 121 5000	010513	Control Lever
			1110 120 0604	HS-77A	Carburetor	6503 121 7810	010530	Strainer Screen
			1110 120 0605	HS-77B	Carburetor	6503 122 2700	02232	Plug Screw
			1110 120 0606	HS-77C	Carburetor	6503 122 3020	0788	Spring
			1110 120 0607	HS-87A	Carburetor	6503 122 6200	05095	Screw
			1110 120 0609	HS-138A	Carburetor	6503 122 7700	010571	Screw
			1110 120 7100	014177	Shaft & Lever	6503 122 7710	010098	Screw & Lockwasher
			1110 120 7200	014179	Shaft & Lever	6503 122 7720	01974	Screw
			1110 121 0800	013216	Cover	6503 122 8000	010581	Pinion Screw
			1110 121 0810	013167	Cover	6503 122 8710	0992	Lockwasher
			1110 121 0811	014550	Diaph. Cover	6503 122 9300	09678	Clip
			1110 121 0815	014562	Cover	6503 122 9400	010588	Cup Plug
			1110 121 3300	04119	Shutter	6503 122 9401	012347	Cup Plug
			1110 121 4700	013278	Diaph.	6503 122 9410	02531	Welch Plug
			1110 121 4800	013652	Diaph.	6503 129 0910	012473	Gasket
			1110 121 5000	013395	Lever	6503 129 1400	010730	Gasket
			1110 121 5100	013396	Needle	6503 129 2500	010165	Gasket
			1110 121 5400	015289	Check Valve	6503 129 3010	010529	Gasket
			1110 121 7810	012727	Screen	6503 129 3500	010589	Seal Ring
			1110 121 9200	013210	Pinion Pin	6507 120 0502	HL-177A	Carburetor
			1110 122 3000	014227	Spring	6507 120 0501	HL-127A	Carburetor
			1110 122 3020	011503	Spring	6507 120 7100	012456	Shaft & Lever
			1110 122 3030	013692	Spring	6507 120 7101	013435	Shaft & Lever
			1110 122 3200	013297	Spring	6507 120 7200	012452	Shaft & Lever
			1110 122 3800	013796	Elbow Connector	6507 120 8800	012567	Needle & Seat
			1110 122 3900	013796	Elbow	6507 120 9700	GS-158	Gasket
			1110 122 4200	04784	Ball	6507 121 0110	012635	Body
			1110 122 6700	014180	Mix. Screw	6507 121 2900	09195	Shutter
			1110 122 6701	015140	Mix. Screw	6507 121 3300	012283	Shutter
			1110 122 6800	014181	Mix. Screw	6507 121 5400	012458	Check Valve
			1110 122 6801	015139	Mix. Screw	6507 122 3001	013434	Spring
			1110 122 7400	010280	Screw & Lockwasher	6507 122 6800	011498	Mix. Screw
			1110 122 7700	011441	Screw & Lockwasher	6507 122 7400	012296	Screw
			1110 122 7800	013269	Screw	6507 122 7410	058	Screw
			1110 122 7801	014887	Screw			
			1110 122 9300	013219	Clip			
			1110 122 9400	013372	Welch Plug			
			1110 122 9410	012809	Welch Plug			
			1110 129 0900	013215	Gasket			
			1110 129 1110	013218	Gasket			
			1110 129 3000	010404	Gasket			
			1111 120 0600	HS-60A	Carburetor			
			1111 120 0601	HS-60B	Carburetor			
			1111 120 7100	014946	Shaft & Lever	2-5064	08597	Clip
			1111 120 7200	014945	Shaft & Lever	2-5065	011460	Filter Element
			1111 120 8700	015226	Gov. Valve Asm.	2-5066	011461	Washer
			1111 121 5400	015636	Check Valve & Cage Asm.	2-5399	012738	Shaft & Lever
			1111 122 6700	014947	Mix. Screw	2-5400	09626	Shutter
			1113 120 0600	HU-3A	Carburetor	2-5401	08942	Screw & Lockwasher
			1113 120 7100	015659	Shaft & Lever	2-5402	05454	Friction Pin
			1113 121 0800	015655	Diaph. Cover	2-5403	08805	Spring
			1113 121 0810	015674	Pump Body	2-5412	010098	Screw & Lockwasher
			1113 121 3300	016117	Shutter	2-5413	010530	Strainer Screen
			1113 121 4700	015094	Diaph.	2-5414	010529	Strainer Gasket
			1113 121 4800	014693	Diaph.	2-5415	010527	Strainer Cover
			1113 121 5000	015651	Control Lever	2-5417	011498	Adj. Screw
			1113 121 5400	015658	Check Valve	2-5418	08793	Spring
			1113 121 9200	015084	Pin	2-5419	011428	Washer
			1113 122 3000	015673	Spring	2-5420	011401	Packing
			1113 122 3200	015092	Spring	2-5423	010580	Needle & Seat
			1113 122 6700	015656	Mix. Screw	2-5424	010165	Gasket
			1113 122 6800	015657	Mix. Screw	2-5425	010513	Lever
			1113 122 7700	015089	Screw & Lockwasher	2-5428	011751	Mix. Screw
			1113 122 9400	015083	Welch Plug	2-5429	04920	Washer
			1113 129 0900	014679	Gasket	2-5430	010779	Shaft & Lever
			1113 129 0910	014694	Gasket	2-5431	09780	Bushing
			1114 120 0600	HU-7A	Carburetor	2-5432	09678	Clip
			1114 120 7100	015998	Shaft & Lever	2-5433	0992	Lockwasher
			1115 120 0600	HS-118A	Carburetor	2-5434	01974	Screw
			1115 120 7100	016349	Throttle Shaft	2-5435	011275	Spring
			1115 120 7200	016348	Choke Shaft	2-5436	08646	Shutter
			1115 121 0800	016350	Cover	2-5437	GS-IHL	Gasket Set
			1115 121 3300	016218	Shutter	2-5445	011498	Mix. Screw

TERRY IND.
(SEE HOMELITE)

WACKER CORP.

2-5487	HL-132B	Carburetor	R-1046	014254	Needle & Seat
2-5488	010280	Screw & Lockwasher	R-1047	010165	Gasket
2-5489	04784	Ball	R-1048	GS-1HL	Gasket Set
2-5490	012473	Gasket	R-1049	RK-9HL	Repair Kit
2-5491	013572	Shaft & Lever	R-1110	011755	Nut
2-5492	012475	Diaph.	R-1111	012145	Screw & Lockwasher
2-5493	GS-4HL	Gasket Set	R-1112	07844	Washer
2-5494	RK-534	Repair Kit	T-76	01400	Gasket
2-5495	012698	Diaph.	T4F2	012089	Shutter
2-5496	012930	Gasket	T4F14	012091	Shaft & Lever
2-5497	013569	Bushing	V280	OW-480	Fuel Strainer
2-5598	HL-189A	Carburetor	V280B	OW-363	Bowl
2-5654	012884	Screen	V280C	06096	Gasket
2-5655	012345	Ring	V280C	08227	Gasket
2-5656	013372	Welch Plug	V280D	07762	Strainer Screen
2-5661	013619	Shutter	12135-2	012347	Cup Plug
2-5663	013278	Diaph.	220-103	08215	Float
2-5666	013220	Gasket	220-106	07198	Gasket
2-5676	013210	Pinion Pin	220-107	06910	Mix. Screw
2-5678	013396	Needle	220-111	06941	Valve Seat
2-5689	GS-174	Gasket Set	220-114	05425	Spring Clip
2-5690	RK-634	Repair Kit	220-115	0212	Gasket
2-5691	014408	Shutter	220-126	0705	Packing
2-5696	013958	Mix. Screw	220-127	0702	Gland
2-5698	RK-676	Repair Kit	220-128	0676	Gasket
2-5699	HS-22A	Carburetor	220-133	07113	Idle Tube
2-5713	012089	Shutter	220-144	0648	Gasket
2-5714	012347	Cup Plug	221-500	AJ-38A	Carburetor
2-5715	012091	Shaft & Lever	221-508	09469	Mix. Screw
2-5716	012420	Mix. Screw	221-510	09458	Shaft
2-5717	012093	Shaft & Lever	221-511	08646	Shutter
2-5718	RK-10HL	Repair Kit	221-513	06482	Lever
2-9043	RK-31HL	Repair Kit	221-516	011034	Gasket
2-9044	RK-10HL	Repair Kit	229-061	HL-189A	Carburetor
2-9048	GS-4HL	Gasket Set			

WHITE FARM EQUIPMENT

WAJAX EQUIP. LTD.

A6F4	HL-130A	Carburetor	10A7345	OW-426	Fuel Strainer
A6G4	GS-155	Gasket Set	10P743	OW-432	Shut Off Valve
A6H3	RK-445	Repair Kit	15P 12	OW-352	Screen
DD26	0212	Gasket	15P 14	OW-363	Bowl
G5064	08597	Clip	15P 15	OW-447	Wire & Thumb Nut
R-140	013404	Bushing	E-17	DY	Carb. Spec. 2339
R-218	012354	Gasket	F-17	DY-1A	Carburetor
R-230	013405	Washer	41793	OW-304	Bowl
R-1000	013168	Body	112180	OW-416	Fuel Strainer
R-1001	02531	Welch Plug	112884	06096	Gasket
R-1004	013164	Shaft & Lever			
R-1005	013163	Shutter			
R-1006	08942	Screw & Lockwasher			
R-1008	012473	Gasket			
R-1009	012475	Diaph.			
R-1010	010526	Diaph.			
R-1011	012930	Gasket			
R-1012	010531T	Thin Pump Diaph.			
R-1013	010525	Pump Body			
R-1014	010098	Screw & Lockwasher			
R-1015	010530	Strainer Screen			
R-1016	010529	Gasket			
R-1017	010527	Strainer Cover			
R-1018	010571	Screw			
R-1019	011498	Mix. Screw			
R-1023	05095	Screw			
R-1024	0788	Spring			
R-1025	010513	Control Lever			
R-1026	010581	Pinion Pin			
R-1027	012655	Needle & Seat			
R-1029	011503	Spring			
R-1030	012225	Mix. Screw			
R-1032	011428	Washer			
R-1033	011401	Packing			
R-1034	012084	Check Valve			
R-1035	013165	Shaft & Lever			
R-1036	09676	Gasket			
R-1039	010775	Spring			
R-1040	013160	Shutter			
R-1042	GS-170	Gasket Set			
R-1043	RK-578	Repair Kit			
R-1045	014255	Body			

GENERAL WARRANTY

The Marvel-Schebler/Tillotson Division of Borg-Warner Corporation warrants each article manufactured by it to be free from defect in material and workmanship under normal use for the purpose for which it is intended. This Warranty shall not cover any article which has been misused or neglected, operated with exotic fuel, or damaged by accident; any article which has been altered outside the Company's factory so as, in its judgment, to impair its ability to function; or the performance of any engine or equipment on or in which any article of the Company's manufacture is used.

The obligation of the Company under this Warranty is limited to the repair or replacement, at its factory, of any defective article or part thereof which may be returned to the factory, transportation charges prepaid, within 60 days as to Power Chain Saw carburetors and 90 days as to other articles, after delivery to the original user. The Company shall be the sole judge of the existence of any defect in the article so returned. No claim for charges incurred in the removal, disassembly or reinstallation of such article will be allowed. Repairs at the Company's factory to an article which, in its judgment, was free from defect, or one which is received after the warranty period, will be made and parts will be supplied at the Company's prevailing rates of charges therefor.

The Company reserves the right to incorporate any change in design, or substitute a superseding model.

The Company shall in no event be liable for consequential damage or contingent liability arising out of any total or partial failure to function of any article manufactured by it or of any engine or equipment on or in which it is used.

No express, implied or statutory warranty other than that herein set forth is made or authorized to be made by the Company.

Tillotson Carburetors

Marvel-Schebler/Tillotson Division, Borg-Warner Corporation
761 Berdan Avenue, Box 6598, Toledo, Ohio 43612

