

Fisher & Paykel

Freestanding canopy
HF60CSW2 & HF60CSX2 models

**Installation instructions
and User guide**

Safety and warnings	2
Installation instructions	3
Getting started quickly	9
Cleaning and maintenance	10
Manufacturer's Warranty	12
Customer Care	13

Important!

SAVE THESE INSTRUCTIONS

The models shown in this User Guide may not be available in all markets and are subject to change at any time. For current details about model and specification availability in your country, please visit our local website listed on the back cover or contact your local Fisher & Paykel dealer.

2 Safety and warnings

Important!

- Please read the entire set of instructions before installing the rangehood.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- There must be adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels. (A partial vacuum in the room could result in too high a concentration of gas in the air).
- You must read the details concerning the method and frequency of cleaning.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Do not flambé under the rangehood.
- Exhaust air must not be discharged into an existing flue that is used for exhausting fumes from appliances burning gas or other fuels.
- The minimum distance between the cooktop surface and the filters of the rangehood shall be 600 mm, or 650 mm if installed over a gas cooktop.
- Attention should be given to ensure that any applicable regulations concerning the discharge of exhaust air is fulfilled.
- If the supply cord of this equipment is damaged it must only be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Always switch the power off prior to installation, servicing or cleaning the rangehood.
- Never use the rangehood without the filters in place.
- A power outlet should be within 750 mm of the motor assembly and can be either on the wall, behind the chimney or in the ceiling.
- To comply with electrical safety regulations, this canopy must be plugged into a socket near the appliance. The socket must be accessible, or have an accessible isolating switch, to enable the end user to isolate the canopy from the power for the purpose of internal cleaning or maintenance.
- Ducting accessories are not supplied. All ducting must comply with local requirements and building codes.

⚠ WARNING!



Electrical Shock Hazard

All electrical work must be done in accordance with local and/or national electrical codes as applicable. For safety, this product must be earthed. If you are unfamiliar with methods of installing electrical wiring, employ the services of a qualified electrician. Turn off power at service entrance before installing wiring or servicing this product.

⚠ WARNING!




Weight Hazard

The rangehood is heavy. Please ensure adequate care is taken when installing the rangehood to prevent personal injury. The rangehood must be installed onto a solid wall, stud, beam or truss. Weight of the product is 5.5 kg.

Contents of packaging

- 1 x freestanding canopy
- 1 x installation instructions
- 2 x aluminium mesh filters
- 1 x outlet ducting collar

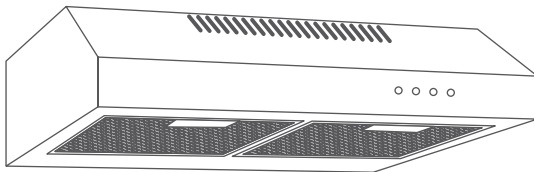

Typical equipment required

- Electric drill
- Screwdriver
- Duct tape
- Jig saw
- Ladder
- Ducting
- Tape measure
- Drill bits
- Spirit level

Accessories

Accessory	Part Number
Light bulb SES 230 V / Max. 40 W	791778
Charcoal filter	791777
Replacement aluminium filter	791779

Height of rangehood

- Where an electric cooktop is installed beneath the canopy, the distance between the top of the cooktop and the underside of the rangehood must be a minimum of 600 mm and a maximum of 750 mm.
- Where a gas fuelled cooktop is installed beneath the canopy, the distance between the top of the pot rests and the underside of the rangehood must be a minimum of 650 mm and a maximum of 750 mm.

Note: your relevant gas or local building authority may specify different height requirements. Care should be taken to comply with any applicable regulations concerning the discharge of exhaust air.

Ducting options

Recirculation

For recirculation, please purchase a charcoal filter, which is fitted onto the motor behind the aluminium filters supplied with the hood. The charcoal filter purifies the air before allowing the air to return back to the kitchen through the air vents at the front of the hood.

Note: a ducting hole is not required in the wall or ceiling if the canopy is fitted with a charcoal filter.

Ducting

For ducted installation, it is recommended that you use 125 mm diameter, rigid or semi-rigid ducting.

Efficiencies in the performance of your canopy are enhanced by the use of smooth, straight and short ducting options.

We recommend using solid, galvanised or plastic, smooth-walled ducting which helps to reduce noise and increase airflow.

The use of flexible ducting is not recommended. If there is no other option available, the flexible ducting must be pulled as tight as possible.

All ducting must comply with local requirements and building codes.

Note: we recommend an Easy Fit by Fisher & Paykel or a UNIDUCT ducting system, products that have been designed to expel air efficiently.

Preparing the rangehood for installation

- Before installing the rangehood, please carefully read through the installation instructions in full.
- Prior to drilling any holes, check that the area behind the surface to be drilled is clear of any electrical cables or pipes, etc.
- Take care when installing the rangehood as stainless steel is easily damaged during installation if scratched or knocked by tools.
- Protect the cooktop below, using cardboard or a similar protective cover, to prevent damage on installation.

Rear venting installation

- 1 Establish the desired height of the rangehood above the cooking surface according to the 'Installation height requirements' on page 4. Measure this distance from the top of the cooking surface and, using a spirit level, draw a light horizontal line on the wall. Make sure that the line can easily be erased or will be hidden after installation. This is where the bottom of the rangehood will sit (fig.1).
- 2 Mark the position of the rangehood on the wall. Using a spirit level, also mark a vertical line intersecting the horizontal line, (ensuring that the line can easily be erased or will be hidden after installation) showing the position where the centre of the rangehood will be. This is normally over the centre of the cooktop (fig.2).
- 3 Remove the grease filters (this is to make installation easier). Press inward on the catch, found on the handle, and pull the filter downward (fig.3).
- 4 Determine the position of the 133 mm diameter cutout required for rear external ducting out through the wall. From the point where the horizontal and vertical lines drawn earlier intersect, use a spirit level and pencil to mark the centre point of the cutout hole required 70 mm above the first horizontal as shown in fig.4.

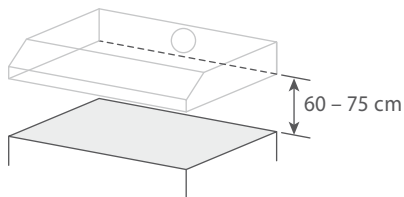


Fig.1 Establishing height of rangehood

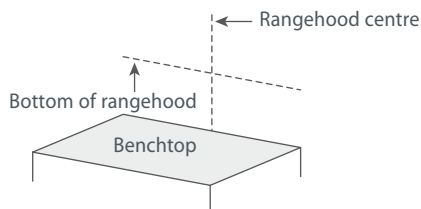


Fig.2 Marking the position of the rangehood on the wall

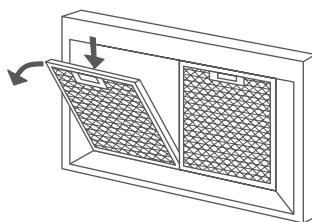


Fig.3 Removing the grease filters

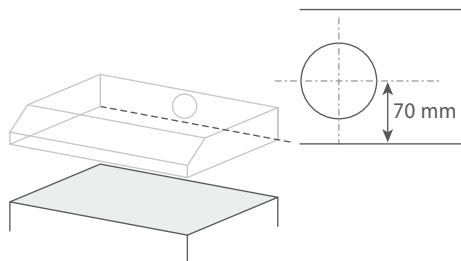


Fig.4 Measuring the cutout for air outlet diameter

6 Installation instructions

- Determine location of the fixing “keyholes” on the wall. The hood is secured to the wall by two “keyholes” located on the rear panel of the hood in the top left and right hand corners. From the point where the horizontal and vertical lines drawn earlier intercept, use a spirit level and pencil and draw another horizontal line 120 mm above the first horizontal line (ensuring that the line can easily be erased or the line will be hidden after installation) as shown in fig.5. This now indicates where the top of the “fixing keyholes” are. Where the vertical line meets the top horizontal line (just drawn), measure and mark both sides of the vertical line, showing where to drill.

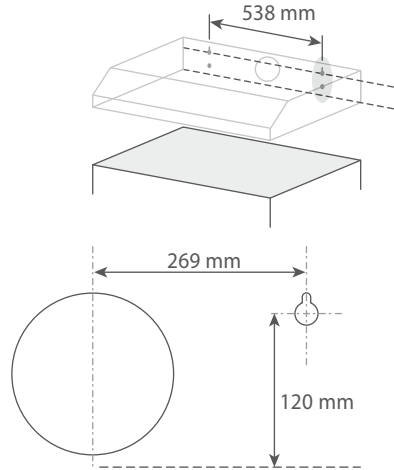


Fig.5 Determining location of the two fixing “keyholes”

- Drill holes and secure the rangehood to the wall. Depending on the wall type (concrete, drywall, etc) drill/screw appropriate fittings in the two locations just marked. The rangehood should now be able to be hung on these bolts/screws through the two keyholes in the hood.

- Create additional means of attachment. Keyholes alone are insufficient means of attachment. There are two extra holes found on each side of the back panel. Select one on each side and fit screws (with an anchor if required) to ensure proper attachment, as shown in fig.6. Ensure all fittings are secure.

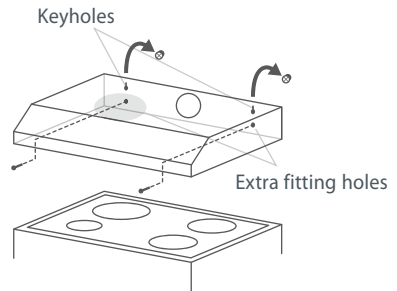


Fig.6 Creating additional means of attachment

- If ducting externally, assemble and fit ducting as per manufacturer’s instruction.
- Test the operation of the rangehood. Plug the rangehood in and test its operation on all speed levels. This will ensure that any imperfections in the installation, such as unwanted sounds or lack of suction can be addressed. Over 95% of service calls are a result of faulty installation. Please be aware that in the event of a service call for a faulty installation, you will be charged as this is not covered under the manufacturer’s warranty.

Setting your hood to recirculate

Note: an additional charcoal filter (fig.7) is required to be fitted when setting the hood to recirculation mode.

- 1 Remove the grease filters.
- 2 Locate the lever positioned on the motor casing above the left hand light fitting (fig.8).
- 3 Slide the lever across to the right hand side (fig.9) ensuring the lever is sitting beyond the moulded catch. This redirects the air back into the kitchen via the front air vent.
- 4 Fit the charcoal filter onto the clips located in the centre of the motor casing grill (fig.10).
- 5 Turn the charcoal filter to clockwise to lock the filter into position on the clips.
- 6 The hood is now set to recirculation mode. The charcoal filter is a disposable item and it is recommended to replace every 3 – 6 months depending on use.

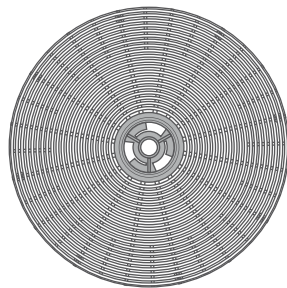


Fig.7 Charcoal filter required.

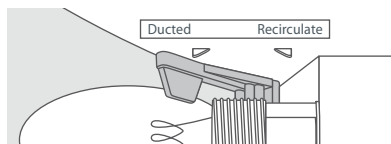


Fig.8 Lever set to external ducting position.

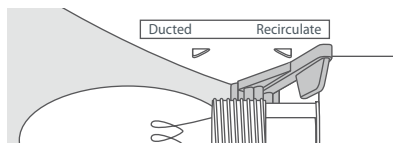


Fig.9 Lever set to recirculating position.

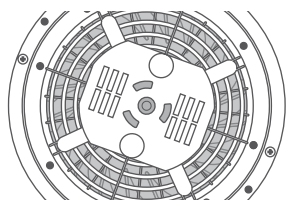
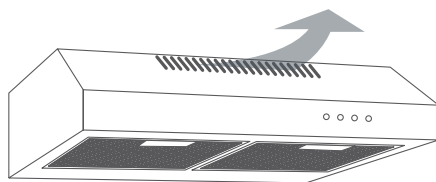


Fig.10 Locking clips on motor casing.

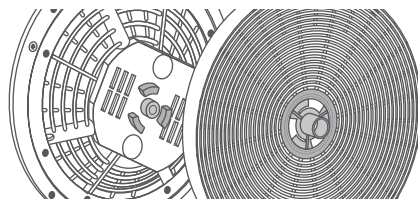


Fig.11 Attaching the charcoal filter.



Fig.12 Hook the charcoal filter onto the locking clips and turn it clockwise.

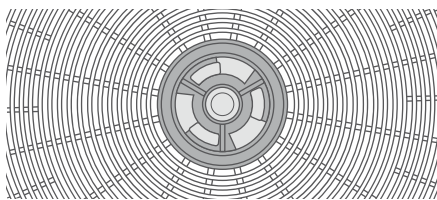


Fig.13 Charcoal filter in locked position.

Under cupboard installation

- 1 Ensure the fitted height of the rangehood above the cooking surface is in accordance with the 'Installation height requirements' on page 4.
- 2 Remove the grease filters (this is to make installation easier). Press inward on the catch, found on the handle, and pull the filter downward.
- 3 Mark the position of the rangehood (ensuring that the line can easily be erased or will be hidden after installation) showing the position where the centre of the rangehood will be. This is normally over the centre of the cooktop.
- 4 Determine the position of the 133 mm diameter cutout required for external ducting on the underside of the cabinetry. Mark the centre point of the cutout 87 mm in from the position where the back of the hood will sit under the cabinetry.
- 5 Determine location of the fixing "keyholes". The hood is secured to the underside of the cabinetry by four "keyholes" located on the top panel of the hood. From the line where the back edge of the hood will sit, measure and mark where to drill.
- 6 Drill 6 mm diameter holes and secure the rangehood to the cabinetry using the small wood screws supplied. The rangehood should now be able to be hung on these screws through the four keyholes in the hood.
- 7 Create additional means of attachment. Keyholes alone are insufficient means of attachment. There are extra holes found on top panel of the hood. Select one on each side and fit screws to ensure proper attachment, as shown in (fig.15). Ensure all fixings are secure.
- 8 If ducting externally, assemble and fit ducting as per manufacturer's instruction.
- 9 Test the operation of the rangehood. Plug the rangehood in and test its operation on all speed levels. This will ensure that any imperfections in the installation, such as unwanted sounds or lack of suction can be addressed. Over 95% of service calls are a result of faulty installation. Please be aware that in the event of a service call for a faulty installation, you will be charged as this is not covered under the manufacturer's warranty.

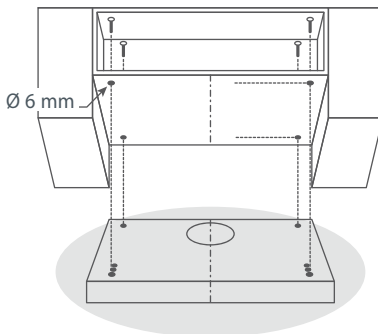


Fig.14 Finding centre line

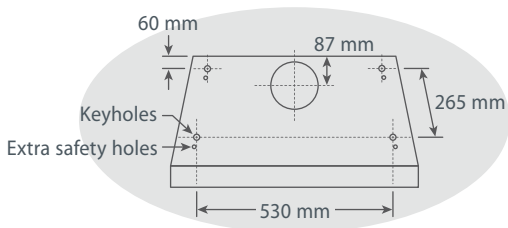


Fig.15 Mounting under cupboard

Control panel

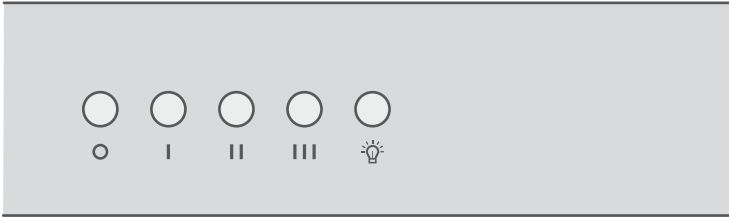


Fig.16 Slide control

○ = Fan Off

I = Fan On / Low

II = Fan On / Medium

III = Fan On / High

💡 = Lights On

💡 = Lights Off

Caution!

Never use abrasive or oil based liquid cleaners.

General maintenance

The manufacturer is not liable for any damage caused by not following these instructions.

The freestanding canopy should be cleaned regularly using warm water with soap or mild liquid detergents. This ensures that no build-up of grease occurs as these deposits are corrosive. Do not use abrasives or harsh detergents/cleaning fluids.

Note: in areas of high humidity and coastal environments cleaning should be carried out frequently.

Aluminium filters

The grease filters must be periodically cleaned (at least every two months).

Remove the grease filters and wash them either by hand using hot soapy water or place them in the dishwasher using mild detergent. Badly smoked filters may be cleaned with "cookware cleaners".

Note: some discolouration of the frame may occur.

Charcoal filters

Charcoal filters are designed to remove grease and odours from cooking vapours, prior to the cleansed air re-entering the kitchen (when the rangehood is in recirculating mode). Charcoal filters are disposable items and it is recommended that these should be replaced every three to six months depending on use.

Note:

- Fully saturated charcoal filters can become a barrier to air movement, impeding the wall canopy's performance.
- In the event of fire, fully grease laden filters could be flammable and therefore regular replacement is recommended.
- In ducted installations, conventional aluminium filters are recommended.

For replacement charcoal filters, ducting accessories, spare parts and service, please contact your local supplier or Fisher & Paykel Customer Care Centre.

Light bulb replacement

(SES 230 V / Max. 40 W)

- 1 Switch off the power to the rangehood.
- 2 Remove the aluminium mesh filters (or charcoal filters if fitted).
- 3 Unscrew the old bulb, and screw in the new replacement bulb.
- 4 Refit aluminium mesh filters.

Note: replacement bulbs are not covered by warranty.

You automatically receive a 2 year Manufacturer's Warranty with the purchase of this Product covering parts and labour for servicing within the country of purchase.

Fisher & Paykel undertakes to:

Repair or, at its option, replace without cost to the owner either for material or labour any part of the Product, the serial number of which appears on the Product, which is found to be defective within TWO YEARS of the date of purchase.

Note: this Warranty is an extra benefit and does not affect your legal rights.

This Warranty DOES NOT cover

- A** Service calls which are not related to any defect in the Product. The cost of a service call will be charged if the problem is not found to be a Product fault. For example:
 1. Correcting the installation of the Product.
 2. Instructing you how to use the Product.
 3. Replacing house fuses or correcting house wiring or plumbing.
 4. Correcting fault(s) caused by the user.
 5. Noise or vibration that is considered normal, eg drain/fan sounds, refrigeration noises or user warning beeps.
 6. Correcting damage caused by pests, eg rats, cockroaches, etc.
 7. Replacement light bulbs.
- B** Defects caused by factors other than:
 1. Normal domestic use or
 2. Use in accordance with the Product's User Guide.
- C** Defects to the Product caused by accident, neglect, misuse or Act of God.
- D** The cost of repairs carried out by non-authorized repairers or the cost of correcting such unauthorised repairs.
- E** Normal recommended maintenance as set out in the Product's User Guide.
- F** Repairs when the appliance has been dismantled, repaired or serviced by other than a Fisher & Paykel Authorised Repairer or the selling dealer.
- G** Pick-up and delivery.
- H** Transportation or travelling costs involved in the repair when the Product is installed outside the Fisher & Paykel Authorised Repairer's normal service area.

This Product has been designed for use in a normal domestic (residential) environment. This Product is not designed for commercial use (whatsoever). Any commercial use by a Customer will affect this Product's Warranty.

Service under this Manufacturer's Warranty must be provided by a Fisher & Paykel Authorised Repairer (refer to the 'Customer Care' section at the back of this book). Such service shall be provided during normal business hours. This Warranty certificate should be shown when making any claim.

For Australian Customers

This Warranty is an extra benefit and does not affect your legal rights. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Please keep this User Guide in a safe place.

Before you call for service or assistance...

Check the things you can do yourself.
Refer to your User Guide and check:

- 1 Your appliance is correctly installed.
- 2 You are familiar with its normal operation.



If after checking these points you still need assistance, please refer to your nearest Fisher & Paykel Authorised Repairer, or contact us through our local website listed on the back cover.

In New Zealand if you need assistance...*

Call your Fisher & Paykel retailer who is trained to provide information on your appliance, or if we can be of any further help, please contact our Customer Care Centre,

Toll Free: 0800 FP CARE or 0800 37 2273 **Fax:** (09) 273 0656

Email: customer.care@fp.co.nz

Postal address: PO Box 58732, Botany, Manukau 2163

If you need service...*

Fisher & Paykel has a network of independent Fisher & Paykel Authorised Repairers whose fully trained technicians can carry out any service necessary on your appliance. Your dealer or our Customer Care Centre can recommend a Fisher & Paykel Authorised Repairer in your area.

In Australia if you need assistance...*

Call the Fisher & Paykel Customer Care Centre and talk to one of our Customer Care Consultants.

Toll Free: 1 300 650 590

Fax: (07) 3826 9298

Email: customer.care@fp.com.au

Postal Address: PO Box 798, Cleveland QLD 4163

If you need service...*

Fisher & Paykel has a network of qualified Fisher & Paykel Authorised Repairers responsible for servicing only Fisher & Paykel branded appliances. Our Customer Care Centre can recommend a qualified Fisher & Paykel Authorised Repairer in your area.

*If you call, write or contact our website please provide: your name and address, model number, serial number, date of purchase and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

Product details

Fisher & Paykel Appliances, Ltd

Model/Serial No.

Date of Purchase _____ **Purchaser** _____

Dealer _____ **Suburb** _____

Town _____ **Country** _____

www.fisherpaykel.co.nz
www.fisherpaykel.com.au

Fisher & Paykel

Copyright © Fisher & Paykel 2011. All rights reserved.

The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly describes the product currently available.