

Honeywell

***VISTA-128BPT/VISTA-250BPT/
VISTA-128BPTSIA***

**Commercial Burglary
Partitioned Security System
With Scheduling**

Programming Guide

Table of Contents

Recommended Programming Procedure.....	5	Relay Voice Descriptors.....	39
Program Field Index.....	6	Relay Voice Descriptors and Custom Word Substitutes Vocabulary.....	40
VISTA-128BPT/VISTA-250BPT Programming Form.....	7	Custom Word Substitutes for VIP Module Annunciation .	41
Partition-Specific Fields.....	12	Scheduled Check-in.....	42
Programming With #93 Menu Mode.....	14	System Layout Worksheets.....	42
Zone Programming.....	15	Output Devices Worksheets.....	57
5800 Series Transmitters Loop Designations.....	19	Scheduling Menu Prompts.....	63
Expert Mode Zone Programming.....	20	Scheduling Worksheets.....	64
Report Code Programming.....	24	VISTA-128BPT Summary of Connections Diagram.....	69
Alpha Descriptors Programming.....	28	VISTA-250BPT Summary of Connections Diagram.....	70
Alpha Descriptor Vocabulary.....	31	VISTA-128BPTSIA Summary of Connections Diagram ..	71
Device Programming.....	32		
Output Programming.....	34		

SIA CP-01 Quick Reference Chart

The minimum required system for SIA CP-01 is a VISTA-128BPTSIA Control, 6160 Keypad and a UL Listed Bell.

Item	Feature	Range	Shipping Default	SIA Requirement*
*09	Entry Delay # 1	02 – 15 multiplied by 15 seconds 00 = 240 sec (4 minutes)	30 Seconds`	At least 30 Seconds **
*10	Exit Delay #1	03 – 15 multiplied by 15 seconds	60 Seconds	60 Seconds
*11	Entry Delay # 2	02 – 15 multiplied by 15 seconds 00 = 240 sec (4 minutes)	30 Seconds	At least 30 Seconds **
*12	Exit Delay #2	03 – 15 multiplied by 15 seconds	60 Seconds	60 Seconds
*28	Power Up in Previous State	0 = no 1 = yes	Yes	Yes
*57	Dynamic Signaling Priority	0 = primary dialer 1 = Communicator as first reporting destination	0 (primary dialer)	0 (primary dialer)
*84	Swinger Suppression	01-06 = 1-6 alarms	2 alarms	1 alarm
*88	Abort Window Time (for non-fire zones)	1 = 15 seconds 2 = 30 seconds 3 = 45 seconds	30 Seconds	At least 15 Seconds **
1*20	Exit Error	0 = no 1 = Bypass E/E and interior zones faulted after exit delay	1 (Enabled)	1 (Enabled)
1*21	Exit Time Reset	0=no 1=Resets Exit Delay to programmed value after zone is closed and then faulted prior to end of exit delay.	1 (Enabled)	1 (Enabled)
1*22 – 1*25	Cross Zoning	Zone 001 – 128 000, 000 = Disabled	Disabled	Enabled and two (or more) zones programmed
1*42	Call Waiting Defeat	0 = no 1 = yes	Disabled (0)	Enabled if user has call waiting
1*61	Abort Verify	0 = Disable 1 = Enable	Enabled	Enabled

Item	Feature	Range	Shipping Default	SIA Requirement*
Zone Programming Auto Stay Zone, Zone type 04 has this feature enabled by default	Auto Stay Arm or Occupied Premises	0 = Disable 1 = Enable	1 (Enabled)	Enabled
Zone Programming (Abort Window Enable)	Abort Window (for non-fire zones)	0 = no abort window 1 = yes, use abort window according to *88 selection	1 = yes	Yes (all non-fire zones)
Zone Programming (Swinger Suppression Enable)	Swinger Suppression Enable	0 = no suppression 1 = yes, suppress alarms according to *84 selection	Yes (enabled)	Yes (enabled (all zones))
Zone Programming Tamper Option	Fire Alarm Verification	For Zone Response Type 16 (Fire) tamper selection must be set to "0"	Disabled	Enabled unless sensors can self verify
-	Exit Time and Progress Annunciation/Disable for Remote Arm (Not Evaluated for SIA CP-01)	Always Enabled	Enabled	Enabled
-	Programmable Cross Zoning Time	Both zones must be faulted within 5 minutes	Per Manufacturer	Per walk path in protected premises
-	Cancel Window	5 minutes	Enabled	Not required to be programmable
-	Cancel Annunciation - Keypad displays "Alarm Cancel" when report is received	NA	Enabled	Enabled
User Authority Level 6	Duress Feature	NA	Disabled	Disabled

* Programming at installation may be subordinate to other UL requirements for the intended application.

** Combined Entry Delay and Abort Window should not exceed 1 minute.

NOTES:

- Using the Call Waiting Cancel feature on a non-Call Waiting line will prevent successful communication to the central station.
- The control unit must be installed with a local sounding device and an off-premise transmission for Contact ID communication format.
- Refer to the User Guide for procedures on Testing the System.
- During Test mode, no alarm reports are sent to the central monitoring station.

NOTE: All references to the VISTA-128BPT also pertain to the VISTA-128BPTSIA. The differences between the two panels are outlined in the supplement accompanying the VISTA-128BPTSIA. The supplement must be referred to when programming the VISTA-128BPTSIA. All references in this manual for number of zones, number of user codes, number of access cards, and the event log capacity, use the VISTA-250BPT's features. The following table lists the differences between the VISTA-128BPT/VISTA-128BPTSIA and the VISTA-250BPT control panels. All other features are identical.

Feature	VISTA-128BPT/VISTA-128BPTSIA	VISTA-250BPT
Number of Zones	128	250
Number of User Codes	150	250
Number of Access Cards	250	500
Event Log Capacity	512	1000
VistaKey Modules	8	15

The purpose of this document is to provide a quick and easy way to program your entire system. A recommended programming procedure is included, followed by a list of program fields with the corresponding program group they belong to (system-wide, partition-specific, scheduling, etc.). Two program forms are included. One contains all the programming fields, and the other contains the partition-specific fields. If you are setting up a single-partition system, the partition-specific fields become system-wide fields.

Following the program forms are system layout worksheets. We recommend that you use these sheets to plan your system before programming is performed. If you need further information about specific programming options, see the *VISTA-128BPT/VISTA-250BPT Installation and Setup Guide*.

Make sure that one two-line alpha keypad is connected to the control and is set to device address "00."

Single-Partition System

The system default is for a single-partition system. Use the VISTA-128BPT/VISTA-250BPT SINGLE PARTITION PROGRAMMING FORM when programming for single-partition usage. Follow the steps outlined in RECOMMENDED PROGRAMMING PROCEDURE of this document for proper programming procedure.

Multiple-Partition System

You must enter the number of partitions you are using in data field 2*00 to set the system for multiple partitions. Use the VISTA-128BPT/VISTA-250BPT SINGLE PARTITION and the PARTITION-SPECIFIC PROGRAM FORMS when programming the system for multiple partitions. Follow the steps outlined in RECOMMENDED PROGRAMMING PROCEDURE of this document for proper programming procedure.

SUMMARY OF PROGRAMMING COMMANDS

- **To enter program mode**, enter installer code + [8] + [0] + [0] + [0]
- **To set standard defaults**, press *97
- **To change to next page of program fields**, press *94
- **To return to previous set of fields**, press *99
- **To erase account and phone number field entries**, press [*] + field number + [*]
- **To assign zone descriptors**, press #93 + follow menu prompts
- **To add custom words**, press #93 + follow menu prompts
- **To enter Installer's Message**, press #93 + follow menu prompts
- **To exit program mode**, enter *99 OR *98: *99 allows re-access to programming mode by installer code. *98 prevents re-access to programming mode by installer code.

Standard default (*97) values are shown in brackets [], otherwise default = 0.

Recommended Programming Procedure

The following is a step-by-step procedure recommended for programming your VISTA-128BPT/VISTA-250BPT/VISTA-128BPTSIA systems.

NOTE: To program the VISTA-128BPTSIA you must use the supplement in conjunction with this manual. All items labeled "SIA Guidelines" in the manual pertain to the VISTA-128BPT and VISTA-250BPT only. All SIA related information for the VISTA-128BPTSIA is included in the supplement.

- 1. Set the keypads (and other peripheral devices) to the appropriate addresses.**
- 2. Set factory defaults by pressing *97.**

This will automatically enable keypad addresses 00-01, so be sure at least one keypad is set to one of these addresses. Address 01 is also set for Graphic/Touch-Screen Keypad.
- 3. Program system-wide (global) data fields.**

Using the programming form as a guide, enter program mode and program all system-wide programming fields. These options affect the entire system, regardless of partitions. They include control options, downloader and dialer options, RF options, event logging options, etc. Refer to the *Program Field Index* for a listing of the program fields and their function. **Note that field 2*00 (number of partitions) must be programmed before continuing.**
- 4. Program partition-specific fields.**

When the system-wide fields have been programmed, program all partition-specific programming fields by first pressing *91 to select a partition (while still in data field program mode). Then enter the first partition-specific field number *09. When you are finished, the next partition-specific field is automatically displayed. Partition-specific fields can have different values for each partition. To program the fields for the next partition, press *91, enter the desired partition number, then enter field *09. Refer to the *MECHANICS OF PROGRAMMING* section in the *VISTA-128BPT/VISTA-250BPT Installation and Setup Guide* for detailed instructions.
- 5. Use #93 Menu Mode for device programming.**

Refer to *Device Programming* in this guide to assign keypad ID numbers and default partitions for each keypad, and to selectively suppress certain keypad sounding options. Also use this mode to assign RF receivers, relay modules, the VIP module, and the ECP Communications Device.
- 6. Use #93 Menu Mode for zone programming.**

Refer to *Zone Programming* in this guide to program zone response types, assign right loop zones and wireless zones, assign zones to partitions, and to program alarm report codes.
- 7. Use #93 Menu Mode for programming outputs.**

Refer to *Output Programming* in this guide to program desired output operation.
- 8. Program Communication options.**

Refer to *System Communication* section in the *VISTA-128BPT/VISTA-250BPT Installation and Setup Guide* for detailed instructions. Then use #93 menu mode to program report codes.
- 9. Use #93 Menu Mode for programming alpha descriptors.**

Refer to *Alpha Programming* in this guide to enter zone and partition descriptors and a custom installer's message.
- 10. Use #93 Menu Mode for relay voice descriptors and custom word substitutes.**

Refer to *Relay Voice Descriptors* in this guide for further instructions for programming relay descriptors to be annunciated by the VIP module, as well as the *Custom Index* section for custom word substitutes.
- 11. Use #80 Mode for programming schedules.**

Refer to the *Scheduling Menu Prompts* in the *VISTA-128BPT/VISTA-250BPT Installation and Setup Guide* to program open/close schedules, temporary and holiday schedules, limitation of access schedules, and time-driven events.
- 12. Define user access codes.**

Refer to *User Access Codes* in the *VISTA-128BPT/VISTA-250BPT Installation and Setup Guide* to program authority level, O/C reporting option, partition assignments, and RF key assignments for each user.
- 13. Exit Programming Mode.**

Exit programming mode by pressing either *98 or *99. Additional entries of *99 are required if the exit is being done from fields 1*00 and above.

To prevent re-access to programming mode using the Installer's code, use *98. The only way to re-access programming mode is by depressing both the [*] and [#] keys at the same time within 30 seconds of power-up.

Exiting by using *99 always allows reentry into programming mode using the Installer code. Either way of exiting allows access via downloading. Note that if local programming lockout is set via downloading, programming mode cannot be entered at the keypad. In the event that local programming is required after the lock-out, setting the location in Compass will open a 24-hour window for programming when the Master code + #65-command is entered. The 24-hour window counts down and then locks out local programming until the next Master code + #65-command is entered.

Program Field Index

On the following pages, the programming fields have been arranged in numerical order. Use this index to cross-reference the fields on the programming form.

NOTE: To program the VISTA-128BPTSIA you must use the supplement in conjunction with this manual. All SIA related information for the VISTA-128BPTSIA is included in the supplement.

Field	Group	Field	Group	Field	Group
*00	System-Wide	*45	Communications	1*46	System-Wide
*04	System-Wide	*47	Communications	1*47	Partition-Specific
*05	System-Wide	*51	Communications	1*48	System-Wide
*06	Partition-Specific	*56	Communications	1*49	System-Wide
*09	Partition-Specific	*57	Communications	1*52	Partition-Specific
*10	Partition-Specific	*58	Communications	1*53	System-Wide
*11	Partition-Specific	*59	Communications	1*55	System-Wide
*12	Partition-Specific	*79	Communications	1*56	System-Wide
*13	Partition-Specific	*80	Communications	1*57	System-Wide
*14	System-Wide	*83	Communications	1*58	System-Wide
*15	System-Wide	*84	Partition-Specific	1*60	System-Wide
*16	Partition-Specific	*85	Partition-Specific	1*70	System-Wide
*17	System-Wide	*88	Partition-Specific	1*71	System-Wide
*19	System-Wide	*89	Communications	1*72	System-Wide
*20	System-Wide	*90	Partition-Specific	1*74	System-Wide
*21	System-Wide	1*07	System-Wide	1*75	System-Wide
*22	Partition-Specific	1*11	System-Wide	1*76	Partition-Specific
*23	Partition-Specific	1*15	Communications	1*77	System-Wide
*24	System-Wide	1*17	System-Wide	1*78	System-Wide
*25	System-Wide	1*18	Partition-Specific	1*79	System-Wide
*26	Communications	1*19	Partition-Specific	1*80	System-Wide
*27	Communications	1*20	System-Wide	2*00	System-Wide
*28	System-Wide	1*21	System-Wide	2*01	System-Wide
*29	Partition-Specific	1*22	System-Wide	2*02	System-Wide
*30	Communications	1*23	System-Wide	2*05	Partition-Specific
*31	Communications	1*24	System-Wide	2*06	Partition-Specific
*32	Partition-Specific	1*25	System-Wide	2*07	Partition-Specific
*33	Communications	1*26	Partition-Specific	2*08	Partition-Specific
*34	Communications	1*28	System-Wide	2*09	Partition-Specific
*35	System-Wide	1*29	System-Wide	2*10	Partition-Specific
*36	System-Wide	1*30	System-Wide	2*11	System-Wide
*37	System-Wide	1*31	System-Wide	2*18	Partition-Specific
*38	Partition-Specific	1*34	Communications	2*19	System-Wide
*39	Partition-Specific	1*35	communications	2*22	Partition-Specific
*40	Communications	1*42	Communications	2*23	Partition-Specific
*41	System-Wide	1*43	Partition-Specific	2*24	Partition-Specific
*42	Communications	1*44	System-Wide		
*44	Communications	1*45	Partition-Specific		

VISTA-128BPT/VISTA-250BPT Programming Form

Some fields are programmed for each partition (shown as shaded fields). If you are programming a multiple-partition system, see the *Partition-Specific Fields* section for programming these fields. Standard default (*97) values are shown in brackets []; otherwise, default = 0.

***00** INSTALLER CODE

Enter 4 digits, 0-9 [4140]

***04** ENABLE RANDOM TIMERS

1 2 3 4 5 6 7 8

Enter 1 to make available the randomizing of pre-programmed time driven events for each partition. [0=disable].

***05** SYSTEM EVENTS NOTIFY [0]

1=yes, (messages sent via the RS232 port).
0=no, (no messages sent).

NOTE: While in a communication session with Compass, system events will not operate.

***06** QUICK EXIT [1]

1=enable; 0=disable
Must be 0 for UL installations.

***09** ENTRY DELAY #1 [02]

00, 02-15 times 15 seconds
Maximum "03" for UL.

***10** EXIT DELAY #1 [04]

00, 02-15 times 15 seconds
Maximum "04" for UL installations.

***11** ENTRY DELAY #2 [02]

00, 02-15 times 15 seconds (must be longer than Entry Delay #1). Maximum "03" for UL installations.

***12** EXIT DELAY #2 [08]

00, 02-15 times 15 seconds (must be longer than Exit Delay #1). Maximum "04" for UL installations.

***13** ALARM SOUNDER DURATION [04]

01-15 times 2 minutes. Must be minimum 16 minutes for UL installations.

***14** RS232 INPUT [0]

Enter 1 to enable.
Enter 0 to disable.

***15** KEYSWITCH ASSIGNMENT [0]

Enter partition in which keyswitch used,
1-8; 0=disable

***16** CONFIRMATION OF ARMING DING [0]

1=enable; 0=disable.
NOTE: If using a keyfob, when the button is pressed, either for arming or disarming, the bell will ding indicating that the button is working.
Must be "1" for UL Installations.

***17** AC LOSS KEYPAD SOUNDING [0]

1=yes; 0=no

***19** RANDOMIZE AC LOSS REPORT [0]

1=10-40 min; 0=normal report (about 2 min. after AC loss).

***20** VIP MODULE PHONE CODE

Enter 01 - 09 for the first digit; enter [00], [11]
11 for "*" or 12 for "#" for the second digit.
Must be set to "0" for UL installations.

***21** PREVENT FIRE TIMEOUT [0]

1=No timeout; 0=Timeout.

***22** KEYPAD PANIC ENABLES [001]

1=enable; 0=disable 995 996 999

***23** MULTIPLE ALARMS [1]

1=yes; 0=no
Must be 1 for UL installations.

***24** IGNORE EXPANSION ZONE TAMPER [0]

1=Ignore; 0=Enable tamper for RF and V-Plexs.
Must be "0" for UL installations if using these devices.

***26** INTELLIGENT TEST REPORTING [0]

1=yes (no report sent if any other report was recently sent);
0=no (send report at programmed interval, field *27)
Must be 0 for UL installations.

***27** TEST REPORT INTERVAL [0024]

Enter interval in hours, 0001-9999; 0000=no report;
Max. 0024 for UL installations.

***28** POWER UP IN PREVIOUS STATE [1]

1=yes; 0=no; "1" for UL installations.

***29** QUICK ARM [1]

1=yes; 0=no

***30** PHONE LINECUT DETECT [0]

1=enable; 0=disable

***31** PABX ACCESS CODE

00-09; B-F (11-15)

***32** PRIM. SUBS. ACCT #

Enter 00-09; B-F (11-15) [15 15 15 15 15 15 15 15 15]

***33** PRIMARY PHONE NUMBER

Enter 0-9 for each digit. Enter #11 for *, #12 for #,
#13 for 2-second pause

- *34 SECONDARY PHONE NUMBER**

 Enter 0-9 for each digit. Enter #11 for *, #12 for #,
 #13 for 2-second pause
- *35 DOWNLOAD PHONE NO.**

 Enter 0-9 for each digit. Enter #11 for *, #12 for #,
 #13 for 2-second pause
- *36 DOWNLOAD ID NO.**

 Enter 00-09; A-F (10-15) [15 15 15 15 15 15 15 15]
- *37 DOWNLOAD COMMAND ENABLES**

 Dir ShtdwnSys ShtdwnNot UsedRmt BypRmt DisarmRmt ArmUpId PgmDwnId Pgm
 See field 1*53 for Callback disable option; [1=enable];
 0=disable. For UL installations, all entries must be "0."
- *38 PREVENT ZONE XXX BYPASS** [000]
 001-250; 000 if all zones can be bypassed
- *39 ENABLE OPEN/CLOSE REPORT FOR** [1]
 INSTALLER CODE 1=enable; 0=disable
- *40 OPEN/CLOSE REPORT FOR KEYSWITCH** [0]
 1=enable; 0=disable
- *41 NORMALLY CLOSED or EOLR (Zones 2-8)** [0]
 1=N.C.loops; 0=EOLR supervision.
 Must be "0" for UL installations.
- *42 DIAL TONE PAUSE** [0]
 0=5 seconds; 1=11 seconds; 2=30 seconds.
 Must be "0" UL Installations.
- *44 RING DETECTION COUNT** [00]
 01-14; 15=answering machine; 00=no detection.
 Must be "00" for UL Burglary.
- *45 PRIMARY FORMAT** [1]
 1 = Contact ID; 2 = 10-Digit Contact ID;
 3 = 4+2 Express
- *47 SECONDARY FORMAT** [1]
 1 = Contact ID; 2 = 10-Digit Contact ID;
 3 = 4+2 Express
- *51 DUAL REPORTING** [0]
 1=yes; 0=no If used with Split Reporting "1" option (1*34),
 alarms and alarm restores go to both primary & secondary
 numbers, while all other reports go to secondary only. If used
 with Split Reporting "2" option, alarms and alarm restores go to
 both, open/close and test messages go to secondary only,
 while all other reports go to primary.

- *56 DYNAMIC SIGNALING DELAY** [03]
 Select the delay time (00-15) times 15 seconds before sending
 to second destination.
- *57 DYNAMIC SIGNALING PRIORITY** [0]
 0=Primary dialer; 1=LRR, as first reporting destination.
- *58 LRR CENTRAL STATION #1 CATEGORY ENABLE**
 [0 0 0 0 0 0]
 Alarm Trbl Byp O/C Syst Test
 0=disable, 1=enable for reports for primary subs ID of LRR
- *59 LRR CENTRAL STATION #2 CATEGORY ENABLE**
 [0 0 0 0 0 0]
 Alarm Trbl Byp O/C Syst Test
 0=disable, 1=enable for reports for secondary subs ID of LRR
- ZONE TYPE RESTORE ENABLES**
- *79 FOR ZONE TYPES 1-8**

 1 2 3 4 5 6 7 8
 1=enable; [0=disable]
- *80 FOR TYPES 9, 10, 16, and 14**
 9 10 16 14
 1=enable; [0=disable]
- *83 FIRST TEST REPORT TIME**
 [Day 00; hour 12; min 00] Days 01-07 Hours 00-23 Min 00-
 59; 00 in all boxes = instant (Day 01= Monday)
- *84 SWINGER SUPPRESSION** [01]
 01-15 alarms
 Must be "00" (disabled) for UL.
- *85 ENABLE DIALER REPORTS FOR PANICS & DURESS**
 1=enable; [0=disable]
 995 996 999 Duress
- *88 BURG. ALARM COMM. DELAY** [1]
 1=30 seconds; 0=no delay
 Must be "0" for UL installations.
- *89 RESTORE REPORT TIMING** [0]
 0=Instant; 1=After bell timeout if zone is restored; 2=when
 system is disarmed. Must be "0" for UL installations.
- *90 SEC. SUBS. ACCT #**

 Enter 00-09; B-F (11-15) [15 15 15 15 15 15 15 15 15 15]
- 1*07 CHECK OR TRBL DISPLAY** [0]
 1=display TRBL; 0=display CHECK

1*11 ZONE BYPASS AFTER DISARM

[00000000]
1 2 3 4 5 6 7 8

1=enable; 0=disable
For each partition enter 1 to enable zones to remain bypassed after the partition is disarmed.

NOTES:

For each partition in which field 1*11 is enabled, the **USER CODE + OFF** will no longer unbyypass zones. To unbyypass ALL zones, you must enter **USER CODE + # + 64**. To unbyypass zones INDIVIDUALLY, you must enter **USER CODE + 6 + zone number**.

Any zone that was automatically bypassed by the system will be unbyypassed upon disarming of the system (e.g., STAY mode, Auto-STAY, etc.).

Vent zones and zones bypassed by a programmed Auto-Bypass schedule (Timed Driven Event) are considered "manual bypasses" and will not be unbyypassed upon disarming the system.

Zones that were in a bypassed state at the time a System Shutdown is sent from the Compass Downloading software will be unbyypassed when the System Shutdown is removed.

1*15 CANCEL VERIFY [1]

0=disable, 1=enable alarm output pulse upon kissoff of Cancel report. **NOTE:** Field 1*52 must be enabled to send a Cancel report to the central station.

1*17 LOBBY PARTITION [0]

Enter the "common lobby" partition (1-8)

1*18 AFFECTS LOBBY [0]

Enter 1 if this partition affects the common lobby; enter 0 if it does not. Must be "0" for UL installations.

1*19 ARMS LOBBY [0]

Enter 1 if arming this partition attempts to arm lobby; enter 0 if it does not. Must be "0" for UL installations.

1*20 EXIT ERROR LOGIC ENABLE [1]

0=No; 1=Bypass E/E and Interior zones faulted after exit delay. Must be "0" for UL installations.

1*21 EXIT DELAY RESET [1]

0=No; 1=Resets Exit Delay to programmed value after zone is closed and then faulted prior to end of exit delay. Must be "0" for UL installations.

FIELDS 1*22-1*25: Allow four sets of two zones each to be linked so that both must fault within a five minute period to cause an alarm. Default for these fields = [000], [000].

1*22 CROSS-ZONING PAIR ONE

1*23 CROSS-ZONING PAIR TWO

1*24 CROSS-ZONING PAIR THREE

1*25 CROSS-ZONING PAIR FOUR

1*26 PANIC BUTTON OR SPEEDKEY

[00, 00, 00, 00]
A B C D

Enter speedkey macro # (01-32) to use keys A-C for macro. Otherwise enter 00 to use as panic. For D key, enter macro # or 00 to select macro when key is pressed.

MISCELLANEOUS WIRELESS OPTIONS

Fields 1*28 - 1*31 are not applicable for UL installations.

1*28 RF TX LOW BATTERY SOUND [0]

1=immediate; 0=when disarmed

1*29 RF TX LOW BATTERY REPORTING [0]

1=enable; 0=disable

1*30 RF RCVR CHECK-IN INTERVAL [06]

02-15 times 2 hours; 00 disables supervision

1*31 RF XMITTER CHECK-IN INTERVAL [12]

02-15 times 2 hours; 00 disables transmitter supervision

1*34 COMM. SPLIT REPORTING [0]

0=no; 1=alarms and alarm restores primary, others secondary; 2=open/close, test secondary, others primary. See *51 for comments if using with dual reporting.

NOTE: Split reporting should not be used with Dynamic Signaling.

1*35 ACCESS CONTROL DIALER ENABLES

[0 0 0 0 0 0]
Trace Trbl Byp Not Used Syst Alm

1=enable; 0=disable

NOTE: When Access Control and/or Home Automation is in use, Opening Reports and Trace Reports are delayed 60 seconds.

1*42 CALL WAITING DEFEAT [0]

1=Yes; 0=No

1*43 PERM. KEYPAD BACKLIGHT [0]

1=enable; 0=disable. When disabled, display lights when any key is pressed, and turns off after period of keypad inactivity.

NOTE: This field affects only standard keypads, not graphic/touch-screen keypads.

1*44 WIRELESS KEYPAD TAMPER [0]

DETECTION
1=enable; 0=disable.

1*45 EXIT DELAY SOUNDING [1]

1=enable; 0=disable; Produces quick beeping during exit delay if enabled.

NOTE: Must be "1" for UL/ULC installations.

NOTE: See page 30, "SOUND OPTION", prompt for disabling the entry/exit beeps on individual keypads.

1*46 AUXILIARY OUTPUT MODE [0]

Enter 0 Not Used.

Enter 1 for smoke detector reset.

Enter 2 Not Used.

Enter 3 if AAV module is being used.

NOTE: Only one of the above options may be active within the system.

1*47 CHIME ON EXT. SIREN [0]

1=enable; 0=disable

1*48 WIRELESS KEYPAD ASSIGNMENT [0]
 0=disable; enter partition in which RF keypad used, 1-8.
 Must be "0" for UL installations.

1*49 SUPPRESS TX SUPERVISION SOUND [1]
 1=disable; 0=enable.
 Must be "0" for UL installations.

1*52 SEND CANCEL IF ALARM + OFF [1]
 1=no restriction; 0=within bell timeout period only
NOTE: Must be enabled "1" for an AAV session.

1*53 DOWNLOAD CALLBACK [0]
 1=callback not required; 0=callback required.
 Must be "0" for UL installations.

1*55 INTERNATIONAL DATE FORMAT [0]
 0=disable (mm/dd/yy); 1=enable (dd/mm/yy).

1*56 AC 60/50 Hz CLOCK SPEED [0]
 1=50 Hz; 0=60 Hz.

1*57 5800 RF BUTTON GLOBAL ARM [0]
 1=enable; 0=disable

1*58 5800 RF BUTTON FORCE ARM [0]
 Enter "1" to enable. If a zone is faulted after pressing button,
 keypad will beep once. Pressing the button again within 4
 seconds bypasses the zone. Enter "0" to disable.
 Must be "0" for UL installations.

1*60 ZONE 5 AUDIO ALARM VERIFICATION [0]
 Enter 1 if 2-way audio (AAV) is being used; Enter 0 if it is
 not.
 Must be "0" for UL installations.

1*70 EVENT LOG TYPES
 [1 0 0 0 1]
 Alarm Chk Byp O/C Syst
 1=enable; 0=disable

1*71 12/24 HOUR TIME STAMP FORMAT [0]
 0=12 hour; 1=24 hour

1*72 EVENT LOG PRINTER ON-LINE [0]
 0=disable; 1=enable

1*74 RELAY TIMEOUT XXX MINUTES [000]
 Enter the relay timeout, **0-127** in multiples of 2 minutes,
 desired for #80 Menu Mode time-driven event relay
 command numbers "04/09" and #93 Menu Mode Output
 Programming output command "56."

1*75 RELAY TIMEOUT YYY SECONDS [000]
 Enter the relay timeout, **0-127** seconds, desired for #80
 Menu Mode time driven event relay command numbers
 "05/10" and #93 Menu Mode Output Programming command
 "57."

1*76 ACCESS CONTROL RELAY [00]
 Relay will be pulsed for 2 seconds whenever code + [0] is
 pressed. Enter 00-96; 00=none.
 Must be "00" for UL.

1*77 LOG FIRST MAINTENANCE SIGNAL [0]
 0=No Log; 1=Log first maintenance signal from each smoke
 detector.

1*78 EXTENDED HOME CONT ENABLE [1]
 0=Limited home control command set (32 commands).
 1=Extended home control command set (255 commands).
 Home Control Automation is not allowed in UL installations.

1*79 HOME CONTROL EVENTS
 [0 0 0 0 0]
 Alarm Trbl Byp O/C Syst
 1=enable; 0=disable. Select the type of events (status
 reports) transmitted via the RS232 output.

1*80 LOG FAULTS AND RESTORES [1]
 0=Disabled
 1=Enabled

3rd Page Programming Fields (press *94)

2*00 NUMBER OF PARTITIONS [1]
 Enter 1-8

2*01 DAYLIGHT SAVING TIME [03, 11]
 START/END MONTH Start End
 00-12; if no daylight saving time, enter 00, 00

2*02 DAYLIGHT SAVING TIME [2, 1]
 START/END WEEKEND Start | End
 Enter 1-7. 1=first; 2=second; 3=third; 4=fourth; 5=last;
 6=next to last; 7= 3rd from last [1, 5]

2*05 AUTO-ARM DELAY [15]
 Enter the time between the end of the arming window and
 the start of auto-arming warning period, in values of 1-14
 times 4 minutes 00=instant; [15=no auto arm at all]. When
 this delay expires, the Auto-Arm Warning Period begins.

2*06 AUTO-ARM WARNING PERIOD [15]
 This is the time during which the user is warned to exit the
 premises prior to the auto-arming of the system (beeps every
 15 seconds; "ALERT" displayed). Enter 01-15 minutes.
 00=instant at end of arming delay.

2*07 AUTO-DISARM DELAY [15]
 This is the time between the end of the disarming window
 and the start of auto-disarming. Enter 01-14 times 4 minutes;
 00=instant at end of window; 15=no auto-disarm.

2*08 ENABLE FORCE ARM FOR AUTO-ARM [0]
 0=disable; 1=enable

2*09 OPEN/CLOSE REPORTS BY EXCEPTION [0]
 1=enable; 0=disable
 If enabled, only openings and closings occurring outside the
 scheduled opening/closing windows will trigger dialer
 reports. Opening reports will also be suppressed during the
 closing window, in order to prevent false reports when the
 user arms the system and then reenters the premises to
 retrieve a forgotten item.

2*10 ALLOW DISARMING ONLY DURING [0]
ARMING/DISARMING WINDOWS
 0=disable; 1=enable
 See system-wide field 2*11 if enabling field 2*10. This
 feature adds high security to the installation.

2*11 ALLOW DISARM OUTSIDE WINDOW [0]

IF ALARM OCCURS

Used only if field 2*10 (partition-specific field) is set to "1." If this field is enabled ("1") the system can be disarmed outside the disarm window if an alarm has occurred. If "0," disarming can only be done during the disarm window. If field 2*10 is set to "0" for a partition, this field has no effect for that partition.

2*18 ENABLE GOTO FOR THIS PARTITION [0]

1=Allow log-on from other partitions; 0=disable

2*19 USE PARTITION DESCRIPTORS [0]

0=disable; 1=enable

2*22 DISPLAY FIRE ALARMS OF OTHER PARTITIONS [0]

0=No; 1=Yes.

2*23 DISPLAY BURG, PANIC AND CO ALARMS [0]

OF OTHER PARTITIONS

0=No; 1=Yes.

2*24 DISPLAY TROUBLES OF OTHER [0]

PARTITIONS

0=No; 1=Yes

SUMMARY OF PROGRAMMING COMMANDS

- **To enter program mode** enter installer code + [8] + [0] + [0] + [0]
- **To set standard defaults** press *97
- **To change to next page of program fields** press *94
- **To return to previous set of fields** press *99
- **To erase account and phone number field entries** press [*] + field number + [*]
- **To assign zone descriptors** press #93 + follow menu prompts
- **To add custom words** press #93 + follow menu prompts
- **To enter Installer's Message** press #93 + follow menu prompts
- **To exit program mode**, enter *99 OR *98: *99 allows re-access to programming mode by installer code. *98 prevents re-access to programming mode by installer code. Note that if local programming lockout is set via downloading, programming mode cannot be entered at the keypad. In the event that local programming is required after the lock-out, setting the location in Compass will open a 24-hour window for programming when the Master code + #65-command is entered. The 24-hour window counts down and then locks out local programming until the next Master code + #65-command is entered.

Partition-Specific Fields

(Duplicate this page for each partition in the installation.)

To program these fields,

1. Press *91 to select a partition.
2. Enter a partition-specific field number (ex. *09).
3. Make the required entry.
4. Repeat steps 1-3 for each partition in the system.

PARTITION # _____ PROGRAM FIELDS

1st Page Fields

- *06** QUICK EXIT [1]
1=enable; 0=disable
Must be 0 for UL installations.
- *09** ENTRY DELAY #1 [02]
00, 02-15 times 15 seconds.
Maximum 03 for UL Listed installations.
- *10** EXIT DELAY #1 [04]
00, 02-15 times 15 seconds.
Maximum 04 for UL Listed installations.
- *11** ENTRY DELAY #2 [02]
00, 02-15 times 15 seconds.
Maximum 03 for UL installations.
- *12** EXIT DELAY #2 [08]
00, 02-15 times 15 seconds.
Maximum 04 for UL installations.
- *13** ALARM SOUNDER DURATION [04]
01-15 times 2 minutes.
Must be minimum 16 minutes for UL installations.
- *16** CONFIRMATION OF ARMING DING [0]
1=enable; 0=disable.
NOTE: If using a keyfob, when the button is pressed, either for arming or disarming, the bell will ding indicating that the button is working.
Must be "1" for UL installations.
- *22** KEYPAD PANIC ENABLES [001]
1=enable; 0=disable
995 996 999
- *23** MULTIPLE ALARMS [1]
1=yes; 0=no.
Must be 1 for UL installations.
- *29** QUICK ARM [1]
1=yes; 0=no
- *32** PRIM. SUBS. ACCT #

Enter 00-09; B-F (11-15) [15 15 15 15 15 15 15 15 15 15]
- *38** PREVENT ZONE XXX BYPASS [000]
001-250; 000 if all zones can be bypassed

- *39** ENABLE OPEN/CLOSE REPORT [1]
FOR INSTALLER CODE
1=enable; 0=disable
- *84** SWINGER SUPPRESSION [01]
01-15 alarms;
Must be "00" (disabled) for UL installations.
- *85** ENABLE DIALER REPORTS FOR PANICS & DURESS
1=enable; [0=disable]
995 996 999 Duress
- *88** BURG. ALARM COMM. DELAY [1]
1=30 seconds; 0=no delay.
Must be "0" for UL installations.
- *90** SEC. SUBS. ACCT #

Enter 00-09; B-F (11-15) [15 15 15 15 15 15 15 15 15 15]

2nd Page Fields

- 1*18** AFFECTS LOBBY [0]
Enter 1 if this partition affects the common lobby; enter 0 if it does not.
- 1*19** ARMS LOBBY [0]
Enter 1 if arming this partition attempts to arm lobby; enter 0 if it does not
- 1*26** PANIC BUTTON OR SPEEDKEY
[00, 00, 00, 00]
A B C D
Enter speedkey macro # (01-32) to use keys A-C for macro. Otherwise enter 00 to use as panic. For D key, enter macro # or 00 to select macro when key is pressed.
- 1*43** PERM. KEYPAD BACKLIGHT [0]
1=enable; 0=disable; When disabled the display lights when any key is pressed, and turns off after period of keypad inactivity.
NOTE: This field affects only standard keypads, not graphic/touch-screen keypads.
- 1*45** EXIT DELAY SOUNDING [1]
1=enable; 0=disable; Produces quick beeping during exit delay if enabled.
NOTE: Must be "1" for UL/ULC installations.
NOTE: See page 32, "SOUND OPTION", prompt for disabling the entry/exit beeps on individual keypads.

1*47 CHIME ON EXT. SIREN [0]
 1=enable; 0=disable

1*52 SEND CANCEL IF ALARM + OFF [1]
 1=no restriction; 0=within Bell Timeout period only

1*76 ACCESS CONTROL RELAY FOR PART.[00]
 Relay will be pulsed for 2 seconds whenever code + [0] is pressed. Enter 00-96; 00=none.
 Must be "00" for UL installations.

3rd Page Fields

2*05 AUTO-ARM DELAY [15]
 Enter the time between the end of the arming window and the start of auto-arming warning period, in values of 1-14 times 4 minutes 00=instant; [15=no auto arm at all]. When this delay expires, the Auto-Arm Warning Period begins.

2*06 AUTO-ARM WARNING PERIOD [15]
 This is the time during which the user is warned to exit the premises prior to the auto-arming of the system (beeps every 15 seconds; "ALERT" displayed). Enter 01-15 minutes. 00=instant at end of arming delay.

2*07 AUTO-DISARM DELAY [15]
 This is the time between the end of the disarming window and the start of auto-disarming. Enter 01-14 times 4 minutes; 00=instant at end of window; 15=no auto-disarm

2*08 ENABLE FORCE ARM FOR AUTO-ARM [0]
 0=disable; 1=enable

2*09 OPEN/CLOSE REPORTS BY EXCEPTION [0]
 1=enable; 0=disable; If enabled only openings and closings occurring outside the scheduled opening/closing windows will trigger dialer reports. Opening reports will also be suppressed during the closing window, in order to prevent false reports when the user arms the system and then re-enters the premises to retrieve a forgotten item.

2*10 ALLOW DISARMING ONLY DURING [0]
 ARMING/DISARMING WINDOWS
 See system-wide field 2*11 if enabling field 2*10. This feature adds high security to the installation.
 0=disable; 1=enable

2*18 ENABLE GOTO FOR THIS PARTITION [0]
 1=Allow log-on from other partitions; 0=disable

2*22 DISPLAY FIRE ALARMS OF [0]
 OTHER PARTITIONS
 0=No; 1=Yes

2*23 DISPLAY BURG, PANIC AND CO ALARMS [0]
 OF OTHER PARTITIONS
 0=No; 1=Yes

2*24 DISPLAY TROUBLES OF OTHER [0]
 PARTITIONS
 0=No; 1=Yes

SUMMARY OF PROGRAMMING COMMANDS

- **To enter program mode**, enter installer code + [8] + [0] + [0] + [0]
- **To set standard defaults**, press *97
- **To change to next page of program fields**, press *94
- **To return to previous set of fields**, press *99
- **To erase account and phone number field entries**, press [*] + field number + [*]
- **To assign zone descriptors**, press #93 + follow menu prompts
- **To add custom words**, press #93 + follow menu prompts
- **To enter Installer's Message**, press #93 + follow menu prompts
- **To exit program mode**, enter *99 OR *98: *99 allows re-access to programming mode by installer code. *98 prevents re-access to programming mode by installer code. Note that if local programming lockout is set via downloading, programming mode cannot be entered at the keypad. In the event that local programming is required after the lock-out, setting the location in Compass will open a 24-hour window for programming when the Master code + #65-command is entered. The 24-hour window counts down and then locks out local programming until the next Master code + #65-command is entered.

Programming With #93 Menu Mode

NOTE: The following field should be preset before beginning: 2*00 Number of Partitions. In addition, receivers should be programmed via Device programming.

After programming all system related programming fields in the usual way, press #93 while still in programming mode to display the first choice of the menu driven programming functions. Press 0 (NO) or 1 (YES) in response to the displayed menu selection. Pressing 0 will display the next choice in sequence.

NOTE: All references in this manual for number of zones, number of user codes, number of access cards, and the event log capacity, use the VISTA-250BPT's features. See page 4 of this manual for the table listing the differences between the VISTA-128BPT and the VISTA-250BPT control panels.

UL

For UL installations, verify that the audio alarm verification feature is disabled.

#93 MENU MODE KEY COMMANDS

The following is a list of commands used while in the menu mode.

#93	Enters Menu mode
[*]	Serves as ENTER key. Press to have keypad accept entry.
[#]	Backs up to previous screen.
0	Press to answer NO
1	Press to answer YES
001-009	All data entries are either 2-digit or 3-digit entries.
000	Exits menu mode, back into field programming mode, when entered at the first question for each category.

Menu selections are as follows:

PROMPT	EXPLANATION
ZONE PROG? 1 = YES 0 = NO 0	For programming the following: <ul style="list-style-type: none"> • Zone Number • Zone Response Type • Partition Number for Zone • Dialer report code for zone • Input Device Type for zone (whether RF, polling loop, etc.) • Enrolling serial numbers of 5800 Series transmitters & serial polling loop devices into the system. • Zone Attributes (e.g., Arm w/Fault, Silent, etc.)
EXPERT MODE? 1 = YES 0 = NO 0	Same as Zone Programming except: <ul style="list-style-type: none"> • Done with a minimum number of keystrokes. • Can program wireless keys using pre-defined templates. NOTE: Some of the zone attributes cannot be programmed in the Expert Mode, only in Zone Programming.
REPORT CODE PROG? 1 = YES 0 = NO 0	For programming the following: <ul style="list-style-type: none"> • Alarm report codes for zones • Restore & supervisory codes • All other system report codes
ALPHA PROG? 1 = YES 0 = NO 0	For entering alpha descriptors for the following: <ul style="list-style-type: none"> • Zone Descriptors • Installer's Message • Custom Words • Partition Descriptors • Relay Descriptors
DEVICE PROG? 1 = YES 0 = NO 0	For defining the following device characteristics for addressable devices, including keypads, RF receivers (5881), output relay modules 4204, 4286 VIP Module, and ECP Communications Device (7845i-ent). <ul style="list-style-type: none"> • Device Address • Device Type • Keypad Options (incl. partition assignment) • RF House ID • LRR Options (incl. programming communications device)

PROMPT	EXPLANATION
OUTPUT PGM? 1 = YES 0 = NO 0	For defining output relay functions.
RLY VOICE DESCR? 1 = YES 0 = NO 0	For entering voice descriptors for relays to be used with the 4286 VIP Module.
CUSTOM INDEX ? 1 = YES 0 = NO 0	For creating custom word substitutes for VIP Module annunciation.
ACCESS POINT PGM 1 = YES 0 = NO 0	For defining the parameters for each of the VistaKey access points, including which group(s) have access through an access point (door). See the <i>VistaKey-SK Installation and Setup Guide</i> for the detailed programming instructions.
ACCESS GRP PGM 1 = YES 0 = NO 0	For defining the capabilities (privileges) for each group of users. See the <i>VistaKey-SK Installation and Setup Guide</i> for the detailed programming instructions.
EVENT/ACTION PGM 1 = YES 0 = NO 0	For defining events and time windows for an access group. See the <i>VistaKey-SK Installation and Setup Guide</i> for the detailed programming instructions.

Zone Programming



If using 5800 Series transmitters, do not the install batteries until you are ready to enroll them. After enrolling the transmitter, the battery need not be removed. This is to prevent enrolling the wrong serial number.

PROMPT	EXPLANATION
ZONE PROG? 1 = YES 0 = NO 0	Press 1 to enter ZONE PROGRAMMING mode. The following screens appear. Press [*] to display the next screen. Press # to display a previous screen.
SET TO CONFIRM? 1 = YES 0 = NO 0	This prompt appears once upon entering Zone Programming Mode. If "Yes," Confirmation prompts will be displayed after the device's Serial and Loop numbers have been entered later.
ENTER ZONE NO. 000 = QUIT 010 Zone 010 entered ↑	Enter the 3-digit zone number to be programmed, as follows: Protection Zones = 001–250 Relay Zones = 601–632 ECP Device Supervisory Zones = 800–830 System Supervisory Zones = 970 (bell supervision), 988, 990 (RF receiver), 992 (duress), 997 (polling loop) Keypad Panic Zones = 995, 996, 999 NOTE: When supervising the bell output (zone 970), only one device can be connected to the alarm output (terminals 4 and 5) for UL and Fire installations. Press [*] to continue.
010 ZT P RC In L 00 1 10 00 1	This display appears, showing a summary of the zone's current programming. ZT = Zone Type, P = Partition, RC = Report Code, In = the input type of device, and L = the device's loop number to which the sensor is connected. Some devices can support more than one zone by means of individual loops (for example, 5801, 5804, 5816, 5817, etc.). If the zone is not programmed, the display appears as shown here. If you are checking a zone's programming, and it is programmed satisfactorily, press [#] to back up one step and enter another zone number, if desired. Press [*] to continue.

PROMPT	EXPLANATION																						
<p>010 ZONE TYPE PERIMETER 03</p> <p>Zone number 010 and Zone Type 03 entry shown † These are special zone types used with 5800 Series Wireless Pushbutton Units that result in arming the system in the STAY or AWAY mode, or disarming the system, depending on the selection made.</p>	<p>Each zone must be assigned a zone type, which defines the way in which the system responds to faults in that zone. Refer to the <i>Zone Type Definitions</i> section in the <i>VISTA-128BPT/VISTA-250BPT Installation and Setup Guide</i> for detailed definitions of each zone type. Enter the zone type desired (or change it, if necessary). Available zone types are listed below.</p> <p>NOTE: If changing a zone type, make sure you delete the previous zone and reprogram the entire zone.</p> <table border="0"> <tr> <td>00 = Assign for Unused Zones</td> <td>12 = Not Used</td> </tr> <tr> <td>01 = Entry/Exit #1, Burglary</td> <td>14 = CO Detector Alarm</td> </tr> <tr> <td>02 = Entry/Exit #2, Burglary</td> <td>16 = Fire With Verification</td> </tr> <tr> <td>03 = Perimeter, Burglary</td> <td>20 = Arm–STAY†</td> </tr> <tr> <td>04 = Interior Follower, Burglary</td> <td>21 = Arm AWAY†</td> </tr> <tr> <td>05 = Trouble Day/Alarm Night</td> <td>22 = Disarm†</td> </tr> <tr> <td>06 = 24 Hr. Silent Alarm</td> <td>23 = No Alarm Response (e.g., relay activation)</td> </tr> <tr> <td>07 = 24 Hr. Audible Alarm</td> <td>27 = Access Point</td> </tr> <tr> <td>08 = 24 Hr. Auxiliary</td> <td>28 = Not Used</td> </tr> <tr> <td>09 = Fire Without Verification</td> <td>29 = Momentary Exit (used with VistaKey module)</td> </tr> <tr> <td>10 = Interior Delay, Burglary</td> <td></td> </tr> </table> <p>Press [*] to continue.</p>	00 = Assign for Unused Zones	12 = Not Used	01 = Entry/Exit #1, Burglary	14 = CO Detector Alarm	02 = Entry/Exit #2, Burglary	16 = Fire With Verification	03 = Perimeter, Burglary	20 = Arm–STAY†	04 = Interior Follower, Burglary	21 = Arm AWAY†	05 = Trouble Day/Alarm Night	22 = Disarm†	06 = 24 Hr. Silent Alarm	23 = No Alarm Response (e.g., relay activation)	07 = 24 Hr. Audible Alarm	27 = Access Point	08 = 24 Hr. Auxiliary	28 = Not Used	09 = Fire Without Verification	29 = Momentary Exit (used with VistaKey module)	10 = Interior Delay, Burglary	
00 = Assign for Unused Zones	12 = Not Used																						
01 = Entry/Exit #1, Burglary	14 = CO Detector Alarm																						
02 = Entry/Exit #2, Burglary	16 = Fire With Verification																						
03 = Perimeter, Burglary	20 = Arm–STAY†																						
04 = Interior Follower, Burglary	21 = Arm AWAY†																						
05 = Trouble Day/Alarm Night	22 = Disarm†																						
06 = 24 Hr. Silent Alarm	23 = No Alarm Response (e.g., relay activation)																						
07 = 24 Hr. Audible Alarm	27 = Access Point																						
08 = 24 Hr. Auxiliary	28 = Not Used																						
09 = Fire Without Verification	29 = Momentary Exit (used with VistaKey module)																						
10 = Interior Delay, Burglary																							
<p>010 Arm w/ Fault? 1 = YES 0 = NO 0</p>	<p>If you selected response type 1, 2, 4, or 10, this prompt appears. Enter 1 to enable arming of the partition with this zone faulted. The zone must be restored (see Force Arming, the next prompt) before the exit delay expires otherwise the system starts the entry delay and must be disarmed, or an alarm occurs.</p>																						
<p>010 Force Arming? 1 = YES 0 = NO 0</p>	<p>If you entered 1 (YES) at the previous prompt, this prompt appears. Enter 1 to enable the system to automatically bypass the zone if it is faulted at the end of the exit delay.</p> <p>If you enter 0 to disable and the zone is faulted at the end of exit delay, the system either performs the exit error logic, if field 1*20 is enabled, or an alarm occurs.</p> <p>NOTE: Force Arming cannot be enabled for UL installations.</p>																						
<p>010 Vent zone ? 1 = YES 0 = NO 0</p>	<p>If you selected response type 3, this prompt appears. Enter 1 to enable the arming of the partition with this zone faulted (force arm). The zone is automatically bypassed.</p> <p>NOTE: The zone may be unbypassed simply by restoring the zone (e. g., closing the window), if the Vent Re-arm option (next prompt) for the zone is enabled.</p> <p>Enter 0 to disable.</p> <p>Press [*] to continue.</p>																						
<p>010 Vent Re-arm ? 1 = YES 0 = NO 1</p>	<p>If you entered 1 (YES) at the previous prompt, this prompt will appear. Enter 1 to enable the system to automatically unbypass the zone when it is restored (e.g., by closing the window).</p> <p>Enter 0 to disable. The zone is bypassed for the duration of the armed period regardless of the zone status.</p> <p>Press [*] to continue.</p>																						
<p>010 STAY MODE None 0</p>	<p>If you selected response type 1, 2, 3, 4, 5, or 10, this prompt will appear. Enter the STAY mode for this zone (0-2).</p> <p>0 = None. The zone is not bypassed when the partition is armed STAY.</p> <p>1 = Stay 1. The zone is automatically bypassed when the user enters [User Code] + [3] (STAY) + [1].</p> <p>2 = Stay 2. The zone is automatically bypassed when the user enters [User Code] + [3] (STAY) + [2].</p> <p>NOTE: 0 (None) cannot be selected for response types 4 and 10.</p> <p>NOTE: Response types 4 and 10 are defaulted for STAY mode 1.</p> <p>NOTE: If the user enters [User Code] + [3] (STAY) + [3], all zones assigned to Stay mode 1 and 2 in the partition are automatically bypassed.</p> <p>NOTE: If none of the zones in the partition are assigned to Stay mode 2, then when the user enters [User Code] + [3] (STAY), all zones assigned to Stay mode 1 are automatically bypassed.</p> <p>Press [*] to continue.</p>																						
<p>010 Auto-stay ? 1 = YES 0 = NO 0</p>	<p>If you selected response type 1, 2, 3, 4, 5, or 10, this prompt will appear. Enter 1 to enable. The zone is automatically bypassed if none of the entry/exit zones are opened during the exit delay time (no one exits the premises). Enter 0 to disable.</p> <p>NOTES: All zones enabled for auto-stay except types 3 and 5 have exit delay time when the partition is armed. If auto-stay is enabled, make sure at least one zone is programmed for entry/exit in the same partition otherwise this zone will be automatically bypassed every time the partition is armed.</p> <p>Press [*] to continue.</p>																						

PROMPT	EXPLANATION
010 Silent ? 1 = YES 0 = NO 1	If you selected response type 1, 2, 3, 4, 5, or 10 , this prompt will appear. Enter 1 to enable. The zone follows all the selected response type's characteristics, except in the alarm condition, the alarm output and the keypad sounder do not sound and the keypad does not display the alarm condition. Enter 0 to disable. Press [*] to continue.
010 Bypass Group 01-15 01	If you selected response type 1, 2, 3, 4, 5, or 10 , this prompt will appear. Enter the bypass group for the zone (01–15). This enables the user to bypass a group of zones by entering [User Code] + [6] (Bypass) + [*] + [Group No.] (01-15) . Enter 00 for None. Press [*] to continue.
010 ACCESS POINT (00-15) 01	If response type 27, or 29 was selected , this prompt will be displayed. Enter the access point to be controlled by the input type (00-15 for type 27; 01-15 for type 29). NOTE: If you are using the VistaKey module, the access point must match the address that was set in the module. Press [*] to continue.
010 ENTRY OR EXIT 0	If response type 27, or 29 was selected , this prompt will be displayed. Enter whether the access point is an entry or exit point. 0 = entry; 1 = exit Press [*] to continue.
010 Partition 1	Enter the partition number (1–8) you are assigning this zone to. Press [*] to continue.
010 REPORT CODE 1st 03 2nd 12 3C	Enter the report code. The report code consists of 2 hexadecimal digits, each in turn consisting of 2 numerical digits. For example, for a report code of "3C," enter 03 for "3" and 12 for "C." (Refer to the <i>System Communication</i> section in the <i>Installation and Setup Guide</i> for more information about report codes and reporting formats.) Press [*] to continue.
010 INPUT TYPE RF Xmitter 3 Input types 4 & 5 are valid for certain 5800 Series transmitters only (e.g., 5802, 5804 & 5805-6). If using input type 02 with a door/window type transmitter, only loop 1 may be used. If you selected response type 29 the input type MUST be 00.	Enter the input device type as follows: 00 = Not Used 01 = hardwired 02 = RF motion (RM type) 03 = supervised RF transmitter (RF type) 04 = unsupervised RF transmitter (UR type) 05 = RF button-type transmitter (BR type) 06 = serial number polling loop device (SL type) 07 = DIP switch-type polling loop device 08 = right loop of DIP switch type device 09 = keypad input (code + #73) 10 = Not Used 11 = VistaKey Door Status Monitor (DM) 12 = VistaKey Request to Exit (RE) 13 = VistaKey General Purpose (GP) Right loops refer to the use of the right loop on a 4190WH Zone Expander Module and/or 4278 PIR, which allow hardwired devices to be monitored by the polling loop. If you are programming hardwired or DIP switch polling loop devices, the summary display appears after completing this entry. NOTE: Input types 11 (DM), 12 (RE), and 13 (GP) should only be used with VistaKey modules. Press [*] to continue.

PROMPT	EXPLANATION
010 SMART CONTACT 1 = YES 0 = NO 0	<p>If input type 3 or 6 was selected, this prompt will be displayed. Enter 1 for devices that monitor maintenance signals (ex. 5193SD, 5193SDT) or can be used to limit fault signals in the disarmed state (ex. IS2500SN). Otherwise, enter 0.</p> <p>NOTES:</p> <ol style="list-style-type: none"> The Smart Contact option must ONLY be selected for devices that support the feature, otherwise unpredictable results may occur. if using the new 5193SD/SDT V-Plex smoke detectors (or older 5192SD/SDT with the maintenance DIP sw enabled) the "Smart" option must be selected in zone programming or when they enroll unpredictable results may occur if the smoke goes into a High Sens or Low Sens condition.
010 ANTI MASK 1 = YES 0 = NO 0	<p>If zone type is 04 (interior) or 10 (interior with delay) and input type 06 (serial poll) is selected, this prompt will be displayed. The trouble report code will be used to report the masked condition.</p>
001 Tamper Option none 0	<p>If you selected input type 1, 6, 7, or 8, this prompt displays. If the zone has a tamper switch wired in the loop in addition to a sensor contact, enter the tamper option.</p> <p>Enter 1 if the tamper switch is normally closed (wired in series) with the EOL resistor. Enter 2 if the tamper switch is normally open (wired in parallel) with the EOL resistor. Enter 0 if a tamper switch is not being used in the loop.</p> <p>NOTE: For zone response types 9 or 16 (Fire), the tamper selection must be "0" none.</p>
010 V-PLEX RELAY? 1 = YES 0 = NO	<p>If you select input type 6, this prompt is displayed. Enter 1 if using a 4101SN Relay Module for this zone. Otherwise enter 0. Press [*] to continue.</p>
010 CONS ECP ADDR (00-30) 01	<p>If you select input type 09, this prompt is displayed. Enter the ECP address of the keypad that is being used for entry/exit for this access point (00-30). Press [*] to continue.</p>
010 ACCESS POINT (01-15) 01	<p>If you select input types 06, or 11 – 13, this prompt is displayed. Enter the access point (01-15) to be controlled by the input type.</p> <p>NOTE: For input type 06, the selected address must be 00.</p> <p>NOTE: If you are using the VistaKey module, the access point must match the address that was set in the module. Press [*] to continue.</p>
010 INPUT S/N: AXXX-XXXX L 1	<p>For Serial Number entry and Loop Number entry, do one of the following:</p> <ol style="list-style-type: none"> Transmit two open and close (or close and open) sequences. For a button-type transmitter, press and release the button, wait approximately 4 seconds, then press and release the button a second time. Manually enter the 7-digit serial number printed on a label on the transmitter, using the Alpha keypad. Then press the [*] key, the cursor moves to the "L" position. You can edit the loop number, if necessary. When the loop number is acceptable, press [*]. Press key [C] to copy the last serial number enrolled (used when programming a transmitter with several input loops). <p>Press [*] to accept.</p>
010 INPUT S/N: A022-4064 L 1	<p>The cursor will then move to the Loop column (L) with the previously entered/transmitted serial number displayed. Enter the loop number (refer to 5800 Series Transmitters Loop Designations below). To Delete an Existing Serial Number, enter "0" in the loop number field. The serial number will change to "0"s. If "0" was entered in error, simply re-enter the loop number or press [#], and the serial number will return to the display. Press [*] to accept.</p>
010 INPUT S/N: A022-4064 L 1	<p>The system will then check for a duplicate serial/loop number combination. If a duplicate serial/loop number combination is found, the keypad will emit a single long beep, and display the serial number along with a "?" for the loop number, allowing you to re-enter the correct loop number. If the serial/loop number combination is not a duplicate in the system, a display appears showing the serial number and loop number entry. Press [*] to continue.</p>

5800 Series Transmitters Loop Designations

PROMPT	EXPLANATION
XMIT TO CONFIRM PRESS *TO SKIP	Confirmation Option: This prompt only appears if you answered “Yes” at the first prompt. The system enters a confirmation mode so that the operation of the actual programmed input can be confirmed. Activate the loop input or button that corresponds to this zone. At any time during this step, you may press the [*] key on the keypad to save the serial and loop number combination without confirming.
Entd A022-4063 1 Rcvd A022-4064	If the serial number transmitted <u>does not</u> match the serial number entered , a display similar to the one at the left appears. If the loop number does not match, it is also displayed. If so, activate the loop input or button on the transmitter once again. If a match is not obtained (i.e., summary display does not appear), press the [#] key twice and then enter or transmit the correct serial number.
010 ZT P RC In L 03 1 3C RF 1s	If the serial number transmitted <u>does</u> match the serial number entered, the system beeps 3 times and a summary display appears, showing that zone’s programming. Note that an “s” indicates that a transmitter’s serial number has been enrolled. Press [*] to accept the zone information.
ENTER ZONE NO. 000 = QUIT 011	The system now returns to the “ENTER ZONE NO.” prompt for the next zone. When all zones have been programmed, enter “000” to quit.

After you have enrolled each wireless device, remove ONE of the serial number labels from that device and affix it in the appropriate column on the worksheets provided later in this *Programming Guide*; then enter the other information (zone number, zone type, etc.) relevant to that device.



When you have finished programming all zones, test each using the system's Test Mode. Do not use the Transmitter ID Sniffer Mode. The system checks only for transmission of one zone on a particular transmitter, NOT the zones assigned to each additional loop, and also does not verify polling loop type zones.

Expert Mode Zone Programming

Expert mode allows you to program zones using the minimum number of screens and keystrokes.



Expert Mode Zone Programming does not provide the capability to program some of the zone's attributes, such as Arm w/Fault, Vent Zone, STAY mode, Auto-STAY, Bypass Group, etc. If you want to program a zone for any of these attributes, you must use Zone Programming.

Enter the Programming mode with **[Installer Code] + 8 0 0 0**

Before programming your zones, do the following:

1. Program field **2*00: Number of Partitions**.
2. Enable your RF Receiver in *Device Programming* menu mode.

To program your zones, press ***93** to display the "ZONE PROG?" prompt. Enter "0" (NO) to each prompt until the "EXPERT MODE?" prompt appears.

PROMPT	EXPLANATION
<pre>EXPERT MODE? 1 = YES 0 = NO 0</pre>	Press 1 to enter Expert mode.
<pre>SET TO CONFIRM? 0 = NO 1 = YES 0</pre>	This prompt appears once upon entering Expert Mode. If you select "Yes," Confirmation prompts will be displayed after the device's Serial and Loop numbers have been entered later.
<pre>Zn ZT P RC In L <u>001</u> 03 1 10 HW -</pre>	A summary display appears, showing zone 1's current programming or default values.
<pre>Zn ZT P RC In L <u>010</u> 03 1 10 RF 1s</pre>	Enter the desired 3-digit zone number and press [*] . NOTE: If you want to exit the Expert mode, enter "000" + [*] . If an "s" appears after the loop number, it indicates that the transmitter's serial number has been enrolled. Use the [D] key to enter and duplicate wireless keys (see "Entering Wireless Keys" later)
<pre>Zn ZT P RC In L 010 <u>03</u> 1 10 RF -</pre>	Enter all zone information except for Loop number, or press "C" to copy the zone information on this screen from the last saved zone (including Loop). ZT = Zone Type P = Partition RC = Report Code In = Input Device Type L = Loop number to which the sensor is connected. NOTE: Pressing the [C] copies the zone information from the last saved zone which includes the input type. Verify this information is correct for this zone. On this screen: <ul style="list-style-type: none"> • Use the [A] key to move to the right. • Use the [B] key to move to left and to back up to "ZT" field. Press [*] to accept the existing or newly-entered zone information.

PROMPT	EXPLANATION
<pre>ZN B M V A C E AD 010 - - 1 0 1 1 01</pre>	<p>Enter the remainder of the zone's information, or press the [C] key to copy the zone attributes on this screen from the last saved zone.</p> <p>B = Not Applicable M = Not Applicable V = V-plex Relay? (only used if "In" = 6) AC = Access Point (only used if ZT = 27, 29 or In = 6, 11, 12, 13) E = Entry or Exit? (only used if ZT = 27) AD = Address (only used if "In" = 9) If "In" = 9, enter the Device Address</p> <p>NOTE: Pressing the [C] copies the zone attributes from the last saved zone. Verify the attributes for this zone are correct.</p> <p>On this screen:</p> <ul style="list-style-type: none"> • Use the [A] key to move to the right. • Use the [B] key to move to left and to back up to "V" field. <p>Press [*] to accept existing information.</p>
<pre>010 INPUT S/N: L A _XX-XXXX -</pre>	<p>If you entered RM, RF, BR, UR or SL for the Input Type, this screen displays. Otherwise the summary screen for the next zone displays.</p> <p>Enter the 7-digit serial number, using one of the following methods:</p> <ol style="list-style-type: none"> Transmit two open and close (or close and open) sequences. For a button-type transmitter, press and release the button, wait approximately 4 seconds, then press and release the button a second time. OR Manually enter the 7-digit serial number printed on a label on the transmitter, using the alpha keypad. Then press the [*] key, the cursor will move to the "L" position. You can edit the loop number, if necessary. When the loop number is acceptable, press [*]. OR Press key [C] to copy the last serial number enrolled (used when programming a transmitter with several input loops). <p>Remember, you can use the [A] key to move to the right or the [B] key to move to the left. You can also use the [#] key to back up without saving.</p>
<pre>010 INPUT S/N: L A022-4064 1</pre>	<p>Press [*] to accept the serial number and advance to the "L" position (if method "a" or "c" was used), then enter the loop number.</p> <p>If necessary, press the [#] key to back up without saving, and re-enter or edit the serial number before pressing [*] to save</p> <p>The system checks for a duplicate. If a duplicate serial/loop number combination is found, the keypad will emit a single long beep, and display the serial number along with a "?" for the loop number, allowing you to re-enter the correct loop number.</p>
<pre>010 INPUT S/N: L A000-0000 1</pre>	<p>To Delete an Existing Serial Number, enter "0" in the loop number field. The serial number will change to "0"s.</p> <p>If "0" was entered in error, simply re-enter the loop number or press [#], and the serial number will return to the display.</p>
<pre>XMIT TO CONFIRM PRESS *TO SKIP</pre>	<p>The prompt to confirm appears. This prompt only appears if you answered "Yes" at the "SET TO CONFIRM?" prompt.</p> <p>The system enters a confirmation mode so that the operation of the actual programmed input can be confirmed. Activate the loop input or button that corresponds to this zone. At any time during this step, you may press the [*] key on the keypad to save the serial and loop number combination without confirming.</p>
<pre>Entd A022-4063 1 Rcvd A022-4064</pre>	<p>If the serial number transmitted <u>does not</u> match the serial number entered, a display similar to the one at the left appears. If the loop number does not match, it also is displayed.</p> <p>If so, activate the loop input or button on the transmitter once again. If a match is not obtained (i.e., summary display for the next zone does not appear), press the [#] key twice and then enter or transmit the correct serial number.</p> <p>Activate the button on the wireless key again after re-entering the serial number.</p>
<pre>Zn ZT P RC In L 011 00 1 10 00 1</pre>	<p>If the serial number transmitted <u>matches</u> the serial number entered, the system beeps 3 times and advances to the summary display for the next zone's programming.</p> <p>After all the zones have been programmed, enter 000 for the zone number to quit.</p>

After you have enrolled each wireless device, remove ONE of the serial number labels from that device and affix it in the appropriate column on the worksheets provided later in this *Programming Guide*; then enter the other information (zone number, zone type, etc.) relevant to that device.

Entering Wireless Keys

If you pressed the D key previously to enter defaults for 5804 and/or 5804BD wireless keys, the following screens appear:

PROMPT	EXPLANATION
<pre>FROM TEMPLATE 1-6 1</pre>	<p>Enter template number (1–6). 1–3 = 5804 templates; 4–6 = 5804BD templates. See the defaults provided for each template in the chart that follows these procedures. Select from templates. Press [*] to display template (template 1 shown selected). NOTE: If necessary, press [#] to back up and re-enter template number. Press [#] if you want to return to zone attributes screen.</p>
<pre>L 01 02 03 04 ZT 23 22 21 23 1</pre>	<p>When you press [*], the selected template is displayed. Top line of display represents loop numbers; bottom line represents zone type. Press [*] to accept template.</p>
<pre>PARTITION 1</pre>	<p>Enter partition number for wireless key. Press [*] to continue.</p>
<pre>ENTER ZONE NO 000 = QUIT 024</pre> <p>Example of zone number suggested by the system. This indicates that zones 24, 25, 26, and 27 are available.</p>	<p>The system searches for the highest available, consecutive 4-zone group (the four zones required for the 5804 and 5804BD), and displays the lowest zone number of the group. If you want to start at a different zone number, enter the zone desired and press [*]. If that zone number is displayed, the system has the required number of consecutive zones available, beginning with the zone you entered. If not, the system again displays a suggested zone that can be used. If the required number of consecutive zones is not available at all, the system will display "000." Press [*] to accept.</p>
<pre>024 INPUT S/N L AXXX-XXXX 1</pre>	<p>To enter the serial number: Press and release a button on the wireless key. OR Manually enter the 7-digit serial number printed on the device's label. Press [*] to accept serial number. The system checks for a duplicate. If a duplicate exists, a long error beep will sound and the serial number reverts to all "X"s allowing you to re-enter the serial number. Use the [A] key to move forward within the screen, and the [B] key to back up.</p>
<pre>XMIT TO CONFIRM PRESS *TO SKIP</pre>	<p>If you entered YES previously at the SET TO CONFIRM prompt (see first prompt following entry into the Expert Programming Mode), the display on the left appears. To confirm, activate the button on the wireless key that corresponds to this zone.</p>
<pre>Entd A022-4063 Rcvd A022-4064</pre>	<p>If the serial number transmitted <u>does not</u> match the serial number entered, a display similar to the one at the left appears. If so, activate the loop input or button on the transmitter once again. If a match is not obtained (i.e., summary display does not appear), press the [#] key and then enter the correct serial number. Activate the button on the wireless key again after re-entering the serial number.</p>
<pre>ENTER ZONE NO 000 = QUIT 028</pre>	<p>If the serial number transmitted <u>matches</u> the serial number entered, the system will beep 3 times and revert to the "Start Zone No." prompt and will show the lowest numbered zone of the next available 4-zone group (4 consecutive zones) that is available for programming. After all the wireless keys have been entered, enter 000 for the zone number to quit.</p>

After you have enrolled each wireless device, remove ONE of the serial number labels from that device and affix it in the appropriate column on the worksheets provided later in this *Programming Guide*; then enter the other information (zone number, zone type, etc.) relevant to that device.

Wireless Key Default Templates

5804				5804BD			
Template 1	Loop	Function	Zone Type	Template 4	Loop	Function	Zone Type
	1	No Response	23		1	No Response	23
	2	Disarming	22		2	No Response	23
	3	Arm AWAY	21		3	Arm AWAY	21
	4	No Response	23		4	Disarming	22
Template 2	Loop	Function	Zone Type	Template 5	Loop	Function	Zone Type
	1	No Response	23		1	No Response	23
	2	Disarming	22		2	Arm STAY	20
	3	Arm AWAY	21		3	Arm AWAY	21
	4	Arm STAY	20		4	Disarming	22
Template 3	Loop	Function	Zone Type	Template 6	Loop	Function	Zone Type
	1	24-Hour Panic	07		1	24-Hour Panic	07
	2	Disarming	22		2	Arm STAY	20
	3	Arm AWAY	21		3	Arm AWAY	21
	4	Arm STAY	20		4	Disarming	22

Report Code Programming

All report codes are entered using #93 Menu Mode Programming, either through Report Code Programming, or through Zone Programming while entering other zone information. In the VISTA-128BPT/VISTA-250BPT, reports are divided into six categories. These categories represent the main menu options in Report Code Programming. Reports and the categories in which they are found are as follows:

ALARM CODES	RESTR, SUPV. CODES (for groups of 16 zones)	SYSTEM GROUP #1
Zone Alarm Reports	Alarm Restore Trouble Trouble Restore Bypass Bypass Restore	Closing (arm AWAY) Opening (disarm) System Low Battery Low Battery Restore AC Loss AC Restore Periodic Test Power Cancel Program Tamper
SYSTEM GROUP #2	SYSTEM GROUP #3	SYSTEM GROUP #4
Arm STAY Time Set, Log Reset Telco Trouble Exit Error by Zone Recent Close	Early Open Early Close Late Open Late Close Failed to Open Failed to Close Auto-Arm Failed Schedule Change	Walk-Test Start Walk-Test End

The programming sequence that follows assumes that you will be entering all reports for the system at one time. In actuality, you may skip from one main menu option to another by pressing 0 (N) at each main menu option. To enter report codes, do the following:

Enter Program Mode: [Installer Code] + 8 0 0 0. Then press #93. Enter 0 (N) at each main menu option until the Report Code Programming option is displayed.

PROMPT	EXPLANATION
REPORT CODE PROG 1 = YES 0 = NO 0	Press 1 (Y) to enter to Report Code Programming.
Zone Alarm Reports	
PROMPT	EXPLANATION
ALARM, ID DIGIT? 1 = YES 0 = NO 0	Press [1] (Y) to enter Alarm Report Codes for zones. Press [0] (N) to skip to the next main menu option.
ENTER ZONE NO. 000 = QUIT 001	Enter the zone number for which you are entering the report code. Press [*] to continue.
001 REPORT CODE 1st 00 2nd 00 00	Enter the first digit of the Alarm report code (double-digit entry) and press [*]. Enter the 2nd digit of the Alarm Report code. Press [*] to continue.
ENTER ZONE NO. 000 = QUIT 001	Enter the zone number for which you are entering the report code. When all zone Alarm Codes have been programmed, enter 000 to Quit. Press [*] to continue.
QUIT REPORT MENU 1 = YES 0 = NO 0	If you have completely finished entering report codes, press [1] (Y) to quit Report Code Programming. If you wish to enter other system report codes, enter 0 (N). Press [*] to continue.

Restore/Supervisory Codes

PROMPT	EXPLANATION
RESTR, SUPV. CODE 1 = YES 0 = NO 0	Press [1] (Y) to enter Restore and Supervisory Codes for zones.
ENTER ZN FOR GRP 000 = QUIT 001	Enter one zone for each group of 16 zones (001-016, 017-032, etc.).
ALARM RESTORE GRP 001-016 00	Enter the first digit of the Alarm Restore Report Code for this group of zones (double-digit entry). The second digit (for two-digit reporting formats) is automatically the ID (second) digit of the Alarm Report Code for each zone (if programmed). Press [*] to continue.
TROUBLE GRP 001-016 00	Enter the first digit of the Trouble Report Code for this group of zones (double-digit entry). The second digit (for two-digit reporting formats) is automatically the ID (second) digit of the Alarm Report Code for each zone (if programmed). Press [*] to continue.
TROUBLE RESTORE GRP 001-016 00	Enter the first digit of the trouble restore code (single-digit entry) and press [*] . The second digit (for two-digit reporting formats) is automatically the ID (second) digit of the alarm report code for each zone (if programmed). Press [*] to continue.
BYPASS GRP 001-016 00	Enter the first digit of the Bypass Report Code (double-digit entry) and press [*] . The second digit (for two-digit reporting formats) is automatically the ID (second) digit of the Alarm Report Code for each zone (if programmed). Press [*] to continue.
BYPASS RESTORE GRP 001-016 00	Enter the first digit of the Bypass Restore Report Code (double-digit entry) and press [*] . The second digit (for two-digit reporting formats) is automatically the ID (second) digit of the Alarm Report Code for each zone (if programmed). Press [*] to continue.
ENTER ZN FOR GRP 000 = QUIT 017	Enter one zone for each group of 16 zones. When you are finished entering Restore and Supervisory Codes for all zone groups, enter 000 . Press [*] to continue.
QUIT REPORT MENU 1 = YES 0 = NO 0	If you have completely finished entering report codes, press [1] (Y) to quit <i>Report Code Programming</i> . If you wish to enter other system report codes, enter 0 (N). Press [*] to continue.

System Group #1 Codes

PROMPT	EXPLANATION
SYSTEM GROUP #1? 1 = YES 0 = NO 0	To enter System Group #1 codes, press 1 (Y).
CLOSE 1st 00 2nd 00	Enter the first digit of the Closing (Arm-AWAY) report. Press [*] . Enter the second digit of the report. If the user number is desired as the second digit, enter 01 (not necessary for Contact ID format). Press [*] to continue.

PROMPT	EXPLANATION
	<p>Enter the rest of the codes in the same manner. Other report codes in System Group #1 are:</p> <ul style="list-style-type: none"> • Opening (Disarm) Also, enable this if you desire Callback Requested reports (the panel answers a phone call from the downloader). • System Low Battery • Low Battery Restore • AC Loss • AC Restore • Periodic Test • Power <p>NOTE: Upon a total power failure, the control unit will ignore and not transmit alarm supervisory information for a stabilization period of 120 seconds following restoration of power. Within 60 seconds at the end of the stabilization period, the control unit shall initiate the transmission of a power restoration signal code. If this report code is enabled, this is the report that will be sent.</p> <ul style="list-style-type: none"> • Cancel • Program Tamper <p>Once you have entered these report codes, the system prompts you with the Quit menu.</p>

<p>QUIT REPORT MENU 1 = YES 0 = NO 0</p>	<p>If you have completely finished entering report codes, press 1 (Y) to quit <i>Report Code Programming</i>. If you wish to enter other system report codes, enter 0 (N). Press [*] to continue.</p>
--	--

System Group #2 Codes

PROMPT	EXPLANATION
<p>SYSTEM GROUP #2 ? 1 = YES 0 = NO 0</p>	<p>To enter System Group #2 codes, press [1] (Y).</p>
<p>STAY 1st 00 2nd 00</p>	<p>Enter the first digit of the Arm-STAY report. Press [*]. Enter the second digit of the report. If the user number is desired as the second digit, enter 01 (not necessary for Contact ID format). Press [*] to continue.</p>
	<p>Enter the rest of the codes in the same manner. Other codes in System Group #2 are:</p> <ul style="list-style-type: none"> • Time Set, Log Reset • Telco Trouble • Exit Error by Zone • Recent Close <p>Once you have entered these report codes, the system prompts you with the Quit menu.</p>

<p>QUIT REPORT MENU 1 = YES 0 = NO 0</p>	<p>If you have completely finished entering report codes, press [1] (Y) to quit <i>Report Code Programming</i>. If you wish to enter other system report codes, enter 0 (N). Press [*] to continue.</p>
--	--

System Group #3 Codes

PROMPT	EXPLANATION
<p>SYSTEM GROUP #3 ? 1 = YES 0 = NO 0</p>	<p>To enter System Group #3 codes, press [1] (Y).</p>
<p>EARLY OPEN 1st 00 2nd 00</p>	<p>Enter the first digit of the Early Opening Report Code. Press [*]. Enter the second digit of the report code. If the user number is desired as the second digit, enter 01 (not necessary for Contact ID format). Press [*] to continue.</p>

PROMPT	EXPLANATION
	<p>Enter the rest of the codes in the same manner. Other codes in System Group #3 are:</p> <ul style="list-style-type: none"> • Early Close • Late Open • Late Close • Failed to Open • Failed to Close • Auto-Arm Failed • Schedule Change <p>Once you have entered these report codes, the system prompts you with the Quit menu.</p>

<p>QUIT REPORT MENU 1 = YES 0 = NO 0</p>	<p>If you have completely finished entering report codes, press [1] (Y) to quit <i>Report Code Programming</i>. If you wish to enter other system report codes, enter 0 (N). Press [*] to continue.</p>
--	--

System Group #4 Codes

PROMPT	EXPLANATION
<p>SYSTEM GROUP #4 ? 1 = YES 0 = NO 0</p>	<p>To enter System Group #4 codes, press [1] (YES).</p>
<p>WALK TEST START 1st 00 2nd 00</p>	<p>Enter the first digit of the Walk Test Start Report Code. Press [*]. Enter the second digit of the report code. Press [*] to continue.</p> <p>Enter the rest of the codes in the same manner. Other codes in System Group #4 are:</p> <ul style="list-style-type: none"> • Walk-Test End. <p>Once you have entered these report codes, the system prompts you with the Quit menu.</p>
<p>QUIT MENU MODE? 1 = YES 0 = NO 0</p>	<p>Enter 1 to exit back to normal Programming mode. Enter 0 to stay in Menu mode.</p>

Alpha Descriptors Programming

You can program a user-friendly English language description/location for all protection zones, relays, keypad panics, polling loop short, and RF receiver supervision troubles.

Each description can be composed of a combination of words (up to three) that are selected from a vocabulary of 253 words stored in memory, and any word can have an "s" or " 's " added to it.

NOTE: Due to the use of 3-digit zone numbers, the first word of the descriptor is limited to six characters if you want it to fit on the top line of the display.

In addition, up to 60 installer-defined words can be added to those already in memory. Thus, when an alarm or trouble occurs in a zone, an appropriate description for the location of that zone will be displayed at the keypad.

A custom installer's message can be programmed for each partition which is displayed when the system is "Ready" (e.g., THE PETERSONS').

1. To program alpha descriptors, enter Programming mode, then press **#93** to display "ZONE PROG?"
2. Press **[0]** (NO) three times to display "ALPHA PROG?".
3. Press **[1]** to enter *Alpha Programming*.

There are six submenu selections that will be displayed one at a time.

Press **[1]** to select the mode desired.

Press **[0]** to display the next mode available. The alpha menu selections are:

ZONE DESCRIP?	For entering zone descriptors.
DEFAULT SCREEN?	For creating custom message; displayed when system is ready.
CUSTOM WORD?	For creating custom words for use in descriptors.
PART DESCRIP?	For creating 4-character partition names.
EXIT EDIT MODE?	Press [1] to exit back to #93 Menu Mode.

4. Refer to the sections that follow for procedures for adding alpha descriptors.

Zone Descriptors

1. **Select ZONE DESCRIPTOR mode.**

The keypad keys perform the following functions:

- [3] Scrolls both alphabet and actual words in ascending alphabetical order.
- [1] Scrolls both alphabet and actual words in descending alphabetical order.
- [2] Adds or removes an "s" or " 's " to a vocabulary word.
- [6] Switches between alphabet and actual word list; used to accept entries.
- [8] Saves the zone description in the system's memory.
- [#] [#] plus zone number displays the description for that zone.

2. **Enter the zone number to which you want to assign a descriptor.**

For example, key **[*] 001** to begin entering the description for Zone 1, (key **[*] 002** for Zone 2, **[*] 003** for Zone 3, etc.). The following is displayed: * ZN 001 A.

Note that the first letter of the alphabet appears after the zone number, and that the zone number is automatically included with the description.

3. **Enter the descriptor for that zone.**

Use one of two methods as follows:

(Assume, for example, that the desired description for Zone 1 is *BACK DOOR*.)

- a) Press **[#]** followed by the 3-digit number of the first word from the fixed dictionary shown later in this section (e.g., **[0][1][6]** for BACK).

Press **[6]** in order to accept the word and proceed, or press **[8]** to store the complete descriptor and exit;

or

- b) Select the first letter of the desired description (note that "A" is already displayed). Use the **[3]** key to advance through the alphabet and the **[1]** key to go backward.

Press **[3]** key repeatedly until "B" appears (press **[1]** to go backwards if you happen to pass it), then press **[6]** to display the first available word beginning with "B".

Press **[3]** repeatedly to advance through the available words until the word "BACK" is displayed.



To add an "s" or " 's," if you need to, press **2**. The first depression adds an "s," the second depression adds an " 's," the third depression displays no character (to erase the character), the fourth depression adds an "s," etc.

4. **Accept the word.**

To accept the word, press [6], which switches back to the alphabet list for the next word, or press [8] to store the complete descriptor and then exit.

5. **Select the next word.**

For selection of the next word (DOOR), repeat step 3a (word #061) or 3b, but selecting the word "DOOR."
To accept the word, press [6], which again switches back to alphabet list.

6. **Store the descriptor.**

When all desired words have been entered, press [8] to store the description in memory.
To review the zone descriptors, key [#] plus zone number (e.g., #001).
To edit zone descriptors, key [*] plus zone number (e.g., *001)

7. **Exit Zone Description Mode: enter 000.**

Default Screen (Custom Message Display)

Normally, when the system is in the disarmed state, the following display is present on the keypad.

```
****DISARMED****  
READY TO ARM
```

Part or the entire above message can be modified to create a custom installer message for each partition. For example, "****DISARMED****" on the first line or "READY TO ARM" on the second line could be replaced by the installation company name or phone number for service.

NOTE: There are only 16 character spaces on each of the two lines.

To create a custom display message, proceed as follows:

1. **Select Default Screen mode.**

The keypad asks for the partition number for this message.
Enter the partition number. Press [*] to accept entry.
The following display appears:

```
****DISARMED****  
READY TO ARM
```

A cursor is present at the extreme left of the first line (over the first "star"). Press [6] to move the cursor to the right and [4] to move the cursor to the left. Press [7] to insert spaces or erase existing characters.

2. **Create the message.**

For example, to replace "READY TO ARM" with the message "SERVICE 424-0177," proceed as follows:

Press [6] to move the cursor to the right, and continue until the cursor is positioned over the first location on the second line.

Press [3] to advance through the alphabet to the first desired character (in this case, "S"). Press [1] to go backward, when necessary. When the desired character is reached, press [6].

The cursor then moves to the next position, ready for entry of the next character (in this example, "E"). When the cursor reaches a position over an existing character, press [3] or [1] to advance or back up from that character in the alphabet.

Proceed in this manner until all characters in the message have been entered.

3. **Save the message.**

Store the new display message in memory by pressing [8].

4. **The system asks for a new partition number.**

Enter 0 to quit or 1-8 for a new partition number.

Custom Words

Up to 60 installer-defined words can be added to the built-in vocabulary. Each of the 60 "words" can actually consist of several words, but bear in mind that a maximum of 10 characters can be used for each word string.

1. **Select CUSTOM WORD Mode.**

The keys perform the following functions:

- [3] Advances through alphabet in ascending order.
- [1] Advances through alphabet in descending order.
- [6] Selects desired letter; moves the cursor 1 space to the right.
- [4] Moves the cursor one space to the left.
- [7] Inserts a space at the cursor location, erasing any character at that location.
- [8] Saves the new word in the system's memory.
- [*] Returns to Description Entry Mode.

2. **Enter the custom word number (01-60) you want to create.**

For example, if you are creating the first word (or word string), enter 01; when creating the second word, enter 02, and so on. A cursor now appears at the beginning of the second line.

3. Type the word using one of two methods as follows:

a) Press [#], followed by the 2-digit entry for the first letter you would like to display (e.g., 65 for "A").
When the desired character appears, press [6] to select it. The cursor will then move to the right, in position for the next character. Press [#] plus the 2-digit entry for the next letter of the word.

or

b) Press 3 to advance through the list of symbols, numbers, and letters.
Press 1 to move back through the list.

When you have reached the desired character, press [6] to select it. The cursor then moves to the right, in position for the next character.

4. Repeat step 3 to create the desired custom word (or words).

Press [4] to move the cursor to the left if necessary.

Press [7] to enter a blank (or to erase an existing character).

Each word or word string cannot exceed 10 characters.

5. Save the word by pressing [8].

This returns you to the "CUSTOM WORD?" display. The custom word (or string of words) is automatically added to the built-in vocabulary at the end of the group of words beginning with the same letter.

Custom words are retrieved as word numbers 254 to 313 for words 1 to 60, respectively, when using method 3a to enter alpha descriptors.

When using method 3b to enter alpha descriptors, each word appears at the end of the group of words that begin with the same letter as it does.

6. Repeat steps 2 through 6 to create up to a maximum of 60 custom words (or word strings).

7. Exit Custom Word Mode by entering 00 at the "CUSTOM WORD" prompt.

Partition Descriptors

1. Select "Part DESCRIPT." Mode.

The system asks for the partition number desired. Enter the number as a single-key entry 1-8.

2. Follow the same procedure as for custom words.

NOTE: The partition descriptors are limited to 4 characters (e.g., WHSE for warehouse).

Alpha Descriptor Vocabulary

(For entering alpha descriptors. To select a word, press [#] followed by the word's 3-digit number.)

NOTE: This vocabulary is not to be used for relay voice descriptors. See the *Relay Voice Descriptors* section when programming relay voice descriptors.

001 AC	• 056 DETECTOR *	107 INTERIOR	159 POLICE *	• 207 TOOL
• 002 AIR	• 057 DINING *	108 INTRUSION	160 POOL *	208 TOWER
• 003 ALARM *	058 DISCRIMINATOR	109 JEWELRY	• 161 POWER	209 TRANSMITTER
004 ALCOVE	059 DISPLAY	• 110 KITCHEN *	162 QUAD	210 TRAP
005 ALERT	060 DOCK	• 111 LAB	163 RADIO	211 TV
006 ALLEY	• 061 DOOR *	• 112 LAUNDRY *	• 164 REAR	• 212 UP
007 AMBUSH	062 DORMER	• 113 LEFT	165 RECREATION	• 213 UPPER
• 008 AREA	• 063 DOWN	114 LEVEL	166 REFRIGERATION	• 214 UPSTAIRS *
• 009 APARTMENT	• 064 DOWNSTAIRS	• 115 LIBRARY *	167 RF	• 215 UTILITY
010 ART	065 DRAWER	• 116 LIGHT	• 168 RIGHT	216 VALVE
011 ASSET	• 066 DRIVEWAY	117 LINE	• 169 ROOM *	217 VAULT
• 012 ATTIC *	067 DRUG	118 LIQUOR	170 ROOF	218 VIBRATION
013 AUDIO	• 068 DUCT	• 119 LIVING *	171 SAFE	219 VIDEO
014 AUXILIARY	• 069 EAST	• 120 LOADING	172 SCREEN	220 VOLTAGE
• 015 BABY *	070 ELECTRIC	121 LOCK	173 SENSOR	221 WALL
• 016 BACK *	• 071 EMERGENCY *	122 LOOP	• 174 SERVICE	222 WAREHOUSE
• 017 BAR	072 ENTRY	123 LOT	• 175 SHED *	223 WASH
018 BARN	• 073 EQUIPMENT	124 LOW	176 SHOCK	224 WATERLEAK
• 019 BASEMENT *	074 ESCALATOR	• 125 LOWER	• 177 SHOP *	• 225 WEST
• 020 BATHROOM *	075 EXECUTIVE	• 126 MACHINE	178 SHORT	• 226 WINDOW *
• 021 BED	• 076 EXIT *	127 MAGNETIC	179 SHOW	227 WINE
• 022 BEDROOM *	077 EXTERIOR	128 MAIDS	• 180 SIDE *	• 228 WING
023 BELL	• 078 FACTORY	129 MAIN *	181 SKYLIGHT	229 WIRELESS
024 BLOCKED	079 FAILURE	• 130 MASTER *	• 182 SLIDING *	230 WORK
• 025 BLOWER	080 FAMILY	131 MAT	• 183 SMOKE *	231 XMITTER
• 026 BOILER	• 081 FATHERS	• 132 MEDICAL *	184 SONIC	• 232 YARD *
027 BOTTOM	• 082 FENCE	133 MEDICINE	• 185 SONS	• 233 ZONE (No.)
028 BOX	083 FILE	134 MEZZANINE	• 186 SOUTH	• 234 ZONE *
029 BREAK	• 084 FIRE *	135 MICROWAVE	187 SPRINKLER	• 235 0 *
• 030 BUILDING	• 085 FLOOR *	136 MONEY	188 STAMP	• 236 1
031 BURNER	086 FLOW	137 MONITOR	• 189 STATION	• 237 1ST *
032 CABINET	087 FOIL	• 138 MOTHERS	• 190 STATUE	• 238 2
• 033 CALL	• 088 FOYER	• 139 MOTION *	191 STEREO	• 239 2ND *
034 CAMERA	089 FREEZER	140 MOTOR	192 STORE	• 240 3
035 CAR	• 090 FRONT *	141 MUD	• 193 STORAGE *	• 241 3RD *
036 CASE	091 FUR	• 142 NORTH	194 STORY	• 242 4
037 CASH	092 FURNACE	143 NURSERY	195 SUMP	• 243 4TH
038 CCTV	093 GALLERY	• 144 OFFICE *	196 SUPERVISED *	• 244 5
039 CEILING	• 094 GARAGE *	145 OIL	197 SUPERVISION	• 245 5TH
040 CELLAR	• 095 GAS	• 146 OPEN *	198 SWIMMING	• 246 6
• 041 CENTRAL	096 GATE	147 OPENING	199 SWITCH	• 247 6TH
042 CIRCUIT	• 097 GLASS	• 148 OUTSIDE	200 TAMPER	• 248 7
043 CLIP	098 GUEST	149 OVERFLOW	201 TAPE	• 249 7TH
• 044 CLOSED *	• 099 GUN *	150 OVERHEAD	202 TELCO	• 250 8
045 COIN	• 100 HALL *	151 PAINTING	203 TELEPHONE	• 251 8TH
046 COLD	• 101 HEAT	• 152 PANIC *	204 TELLER	• 252 9
047 COATROOM	102 HIGH	153 PASSIVE	• 205 TEMPERATURE	• 253 9TH
048 COLLECTION	103 HOLDUP	• 154 PATIO *	206 THERMOSTAT	254 Custom Word 1 to
049 COMBUSTION	104 HOUSE *	155 PERIMETER		313 Custom Word 60
• 050 COMPUTER	105 INFRARED	• 156 PHONE		
051 CONTACT	• 106 INSIDE *	157 PHOTO		
• 052 DAUGHTERS		158 POINT		
053 DELAYED				
• 054 DEN *				
055 DESK				

CHARACTER (ASCII) CHART

(For Adding Custom Words)

32 (space)	42 *	52 4	62 >	72 H	82 R
33 !	43 +	53 5	63 ?	73 I	83 S
34 "	44 ,	54 6	64 @	74 J	84 T
35 #	45 -	55 7	65 A	75 K	85 U
36 \$	46 .	56 8	66 B	76 L	86 V
37 %	47 /	57 9	67 C	77 M	87 W
38 &	48 0	58 :	68 D	78 N	88 X
39 '	49 1	59 ;	69 E	79 O	89 Y
40 (50 2	60 <	70 F	80 P	90 Z
41)	51 3	61 =	71 G		

NOTES: This factory-provided vocabulary of words is subject to change.

Bulleted words in **bold face type** are those that are also available for use by the 4286 VIP Module. If you are using a VIP Module, and words other than these are selected for alpha descriptors, the Voice Module will not provide announcement of those words.

Words *italicized* followed by an asterisk indicate those words supported by the 6160V Voice keypad.

Device Programming

This menu is used to program keypads, receivers, and relay modules, etc.



Device Address **00** is always set as an alpha keypad assigned to Partition 1 with no sounder suppression options, and these settings cannot be changed.

From Data Field Programming mode, press **#93** to display "ZONE PROG?" Press **[0]** repeatedly to display "DEVICE PROG?"

PROMPT	EXPLANATION										
<p>DEVICE PROG? 1=YES 0=NO 0</p>	<p>Press [1] to enter <i>Device Programming</i>.</p>										
<p>DEVICE ADDRESS 01-30, 00=QUIT 01</p>	<p>The device address identifies the device to the control. Enter the 2-digit device address number to match the device's physical address setting (01-30).</p> <p>NOTES:</p> <ul style="list-style-type: none"> • Device Address 01 is defaulted for an alpha keypad with Keypad Global arm/disarm disabled. • Device Address 04 must be used for the 4286 Voice Module, if one is utilized. If not, it can be used for another device type. <p>Press [*] to accept entry.</p>										
<p>DEVICE TYPE 00</p>	<p>Select the type of addressable device as follows:</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 33%;">00 = device not used</td> <td style="width: 33%;">06 = communications device</td> </tr> <tr> <td>01 = alpha keypad (6160, graphic/touch-screen)</td> <td>08 = Not Used</td> </tr> <tr> <td>03 = RF receiver (5881)</td> <td>09 = Not Used</td> </tr> <tr> <td>04 = output relay module (4204)</td> <td>10 = Not Used</td> </tr> <tr> <td>05 = voice (VIP) Module (4286)</td> <td>12 = Remote Interactive Service (RIS) (Only applies to VISTA-128BPT and VISTA-128BPTSIA)</td> </tr> </table> <p>Press [*] to accept entry.</p>	00 = device not used	06 = communications device	01 = alpha keypad (6160, graphic/touch-screen)	08 = Not Used	03 = RF receiver (5881)	09 = Not Used	04 = output relay module (4204)	10 = Not Used	05 = voice (VIP) Module (4286)	12 = Remote Interactive Service (RIS) (Only applies to VISTA-128BPT and VISTA-128BPTSIA)
00 = device not used	06 = communications device										
01 = alpha keypad (6160, graphic/touch-screen)	08 = Not Used										
03 = RF receiver (5881)	09 = Not Used										
04 = output relay module (4204)	10 = Not Used										
05 = voice (VIP) Module (4286)	12 = Remote Interactive Service (RIS) (Only applies to VISTA-128BPT and VISTA-128BPTSIA)										

Alpha Keypad

PROMPT	EXPLANATION
<p>01 CONSOLE PART. 1</p>	<p>If you selected device type 01 (alpha keypad), this prompt appears. Enter the addressable device's default partition number (01 to maximum number of partitions programmed for system in field 2*00). This is the primary partition for the device. Enter 9 to make this keypad a "Master" keypad for the system.</p> <p>Press [*] to accept entry.</p>
<p>01 SOUND OPTION 0</p>	<p>If you entered device type 01 (alpha keypad), this prompt appears. Keypads can be individually programmed to suppress arm/disarm beeps, entry/exit beeps and chime mode beeps. This helps prevent unwanted sounds from disturbing users in other areas of the premises.</p> <p>Enter a number 0-3 for the keypad sounding suppression options desired for the keypad as follows:</p> <ul style="list-style-type: none"> 0 = no suppression 1 = suppress arm/disarm & entry/exit beeps 2 = suppress chime mode beeps only 3 = suppress arm/disarm, entry/exit and chime mode beeps <p>Press [*] to accept entry.</p>
<p>01 KEYPAD GLBL? 0</p>	<p>If you entered device type 01 (alpha keypad), this prompt appears. Each keypad can give users with access to multiple partitions the ability to arm and disarm those partitions from it. To enable this keypad for global arming/disarming, enter 1. To prevent the ability to use this keypad for global arming/disarming, enter 0.</p> <p>Press [*] to accept entry.</p>
<p>01 AUI ? 1 = YES 0 = NO 0</p>	<p>If you selected device type 01 (alpha keypad), this prompt appears. Enter 1 (YES) if the device is an graphic/touch-screen keypad.</p> <p>Press [*] to accept entry.</p>

RF Expander

PROMPT	EXPLANATION
--------	-------------

01 RF EXPANDER HOUSE I 00	If you selected device type 03 (RF receiver), this prompt appears. Enter the 2-digit House ID (00-31). This is required if you are using a wireless keypad (5827/5804BD). Press [*] to accept entry.
---	---

Communications Device

If you selected device type 6, the 6160 Keypad functions similarly to the Programming Tool. See *Figure 1* for the functions of the keys on the 6160.

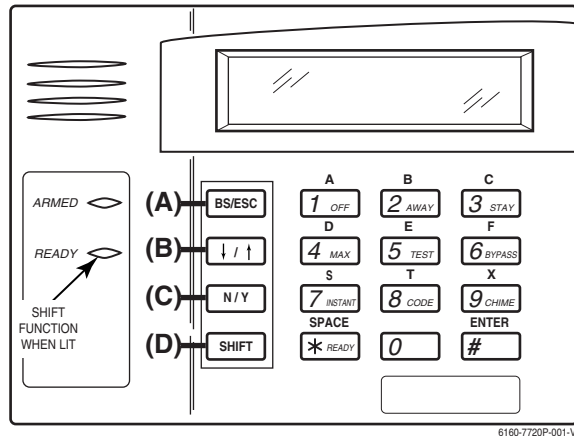


Figure 1: 6160 Key Functions for Programming Communications Device

Each key has two possible functions: a normal function and a SHIFT function. To perform a normal key function, simply press the desired key. To perform a SHIFT key function, press SHIFT key, then press desired function key.

Normal and SHIFT key Functions:

Key	Normal Key Function	SHIFT Key Function
BS/ESC	[BS]: Press to delete entry Also, can reset EEPROM defaults *	[ESC]: Press to quit Program Mode
↓/↑	[↓]: Scroll down programming	[↑]: Scroll up programming
N/Y	[N]: Press for "NO" answer	[Y]: Press SHIFT-Y for "YES" answer
SHIF T	Press before pressing a SHIFT key function. Will light READY LED. LED goes out once a key is pressed. Press again for each SHIFT function desired.	
1/A	[1]: For entering the number 1	[A]: Used for entering C.S. ID number
2/B	[2]: For entering the number 2	[B]: Used for entering C.S. ID number
3/C	[3]: For entering the number 3	[C]: Used for entering C.S. ID number
4/D	[4]: For entering the number 4	[D]: Used for entering C.S. ID number
5/E	[5]: For entering the number 5	[E]: Used for entering C.S. ID number
6/F	[6]: For entering the number 6	[F]: Used for entering C.S. ID number
7/S	[7]: For entering the number 7	[S]: Not used
8/T	[8]: For entering the number 8	[T]: Not used
9/X	[9]: For entering the number 9	[X]: No SHIFT function
/SPACE	[]: Not used	[SPACE]: Not used
0	[0]: For entering the number 0	No SHIFT function
#/ENTER	[#/ENTER]: Press to accept entries	No SHIFT function

* Active only when the "REVIEW?" prompt is displayed.

The 6160 Keypad displays the following prompts, which are sent by the Communications Device transmitter to the control.

PROMPT	EXPLANATION
DEVICE ADDRESS	Enter the device address of the communications device. The default address is 3.
ID # (1234)	Enter the 4-digit customer account number, 0001-9999 . This ID number will appear in the messages generated by the communications device. Messages generated by the panel and transmitted by the communications device will contain the ID number programmed into the panel. The communications device and the panel should have the same ID number, if possible.



If a different 4-digit customer account number is used in the communications device than is programmed into the alarm control, the communications device will transmit communication device-specific messages (power-on reset, AC fail, etc.) using the communications device customer number, and alarm messages using the control panel's customer number. If these numbers are different, you will be billed for two AlarmNet communication device accounts.

NOTE: Refer to the Communications Device's instructions for the correct prompts.

VIP Module

PROMPT	EXPLANATION
01 MODULE PART. 1	If you selected device type 05 (VIP Module) this prompt appears. Enter the partition number 1-8 in which the module is located. Press [*] to accept entry. Press 00 + [*] to exit Menu mode. Press *99 to exit Program mode.

Output Programming

The system supports up to 96 outputs. Outputs can be used to perform many different functions and actions. Each output must be programmed to begin one of four types of ACTIONS at a designated START event, and end that ACTION at a designated STOP event. The options used to start and stop these devices are described below, followed by the actual screen prompts and available entries.

The letter(s) in parentheses after each function described below, such as (A) after ACTION, are those that appear in the various summary displays of programmed data during programming.

- ACTION (A)** The "ACTION" of the device is how the device will respond when it is activated by the "START" programming. You may want the device to activate momentarily, to pulse on and off continuously, or to remain activated until some other event occurs to stop it. There are five different action choices:
- ACTIVATE for 2 SECONDS and then reset. If selected, it is not necessary to program a stop parameter.
 - ACTIVATE and REMAIN ACTIVATED until stopped by some other event.
 - PULSE ON and OFF until stopped by some other event.
 - NO RESPONSE when the device is not used.
 - TOGGLE on and off alternately with each activation of starting event. **Do not program a stop parameter as this may cause unpredictable results.**

START (STT)

The "START" programming determines when and under what conditions the device is activated. The following START options are available:

- 1) **EVENT (EV)** is the condition (alarm, fault, trouble) that must occur to a zone or group of zones (zone list) in order to activate the device. These conditions apply *only* when a zone list or zone number is used. The different choices for "EVENT" are listed below and in "Programming Relays" later in this section.

- **ALARM** Action begins upon any alarm in an assigned zone in the zone list.
- **FAULT** Action begins upon any opening of an assigned zone in the zone list.
- **TROUBLE** Action begins upon any trouble condition in an assigned zone in the zone list.
- **NOT USED** Action is not dependent upon one of the above events.

ZONE LIST (ZL) is a group of zones to which the "EVENT" applies in order to activate a particular device. Note that there are a total of 15 zone lists that can be programmed; when the selected EVENT (alarm, fault or trouble) occurs in **any** zone in the selected "Start" ZONE LIST (01-15), activation of the selected device will START.

- 2) **ZONE #** A specific zone going into alarm, fault, trouble, or restore (Event programming) can be used to start the relay action. Enter the 3-digit zone number (001-250).
- 3) **ZONE TYPE/SYSTEM OPERATION (ZT)**. If all zones to be used to start the device have the same response type, and there are no other zones of this type that are **not** to activate this device, then "ZONE TYPE" may be used instead of a "ZONE LIST" and "EVENT" to activate the device.

If a system operation, such as "DISARMING" or "ANY FIRE ALARM," is to activate the device, enter the appropriate choice under the "ZONE TYPE" option.

The "ZONE TYPE/SYSTEM OPERATION" option functions independently of the "EVENT/ZONE LIST" combination.

If a specific "ZONE TYPE" is chosen, any zone of that response type going into alarm, trouble, or fault will cause the device to activate as selected in "ACTION." If the same "ZONE TYPE" is also chosen for the STOP programming, any zone of that type that *restores* will de-activate the device.

If a "SYSTEM OPERATION" is chosen, that operation will cause the device to activate as selected in "ACTION." The different choices for "ZONE TYPE" and "SYSTEM OPERATION" are listed in "Programming Relays" later in this section, and on the Programming Form.

- 4) **PARTITION NO. (P)**. The device's "Start" ZONE TYPE/SYSTEM OPERATION may be limited to an occurrence on one partition (1-8), or any partition (0).

STOP (STP):

The "STOP" programming determines when and under what conditions the device is de-activated. The following options are available:

- 1). **RESTORE ZONE LIST (ZL)**. If a "ZONE LIST" is used as the "Stop" event, the device de-activates when **all** the zones in that list restore from a previous fault, trouble, or alarm condition. This occurs regardless of what is programmed to "START" the device; therefore, a "RESTORE ZONE LIST" is normally only used when a "ZONE LIST" is used to start the device.
- 2). **ZONE TYPE/SYSTEM OPERATION (ZT)**. Instead of using a "RESTORE ZONE LIST," you can select a specific zone (response) type or system operation action to de-activate the device.

If you choose a specific "ZONE TYPE," any zone of that response type that restores from a previous alarm, trouble, or fault condition will cause the device to de-activate.

If you choose a "SYSTEM OPERATION," that operation causes the device to de-activate. The different choices for "ZONE TYPE" and "SYSTEM OPERATION" are listed in "Programming Relays" later in this section, and in the Programming Form.

- 3) **PARTITION NO. (P)**. The device's "Stop" Zone Type/System Operation may be limited to an occurrence on one partition (1-8), or on any partition (0).

The "ZONE TYPE/SYSTEM OPERATION" option functions independently of the "RESTORE/ZONE LIST" combination.

Output Devices Programming

From Data Field Programming Mode, press **#93** to display the "ZONE PROG?" prompt. Press **[0]** (NO) to each menu option until the "OUTPUT PGM?" prompt appears. Press **[1]** (YES).

While in this mode, press **[*]** to advance to next screen. Press **[#]** to back up to the previous screen.

PROMPT	EXPLANATION
ENTER RELAY # (00=QUIT) 01	Enter the relay (output device) identification number 01-96 . This is a reference number only, used for identification purposes. The actual module address and relay number on the module are programmed in the last two prompts. Press [*] to continue.
02 A EV ZL ZT P STT 0 0 00 00 0	Press [*] to continue.
02 A ZL ZT P STOP 0 00 00 0	The keypad displays a summary STOP screen. Press [*] to continue.
02 RELAY ACTION NO RESPONSE 0	The Relay Action is the way in which the relay will respond when activated by the "start" event. Enter the desired action for this relay as follows: 0 =not used; 1 =close for 2 seconds.; 2 =stay closed; 3 =pulse on/off; 4 = toggle on and off alternately NOTE: For options 1 and 4, do not program a "Stop" parameter.
02 START EVENT NOT USED 0	An output may be activated by an Event/Zone List or Zone Number combination, and/or by a Zone Type/System Operation. For an Event/Zone List combination, enter the event code as follows: 0 =not used; 1 =alarm; 2 =fault; 3 =trouble If you are not using a Zone List to activate the relay, enter 0 . Press [*] to continue.
02 START: ZN LIST 00	A zone list is a set of zones that can be used to initiate the start or stop relay action. If a zone list is being used to start this relay action, enter the zone list number, 1-15 . If a zone list is not being used, enter 0 . Press [*] to continue.
02 START: ZONE # 000	A specific zone can be used instead of or in addition to an Event/Zone List or Zone Type/System Operation combination to start the relay action. Enter the 3-digit zone number. Press [*] to continue.
02 START: ZN TYPE NO RESPONSE 00	A Zone Type/System Operation can be used instead of or in addition to an Event/Zone List combination or a specific zone to start the relay action. If a Zone Type/System Operation is being used, enter the 2-digit code as listed in the table that follows. Press [*] to continue.

Choices for Start/Stop Zone Types and System Operations:

00 = No Response (Not Used)	23 = No Alarm Response	42 = System Battery Low
01 = Entry/Exit #1	27 = Access Point (allows more than one relay to be controlled by activation if access point request)	43 = Communication failure
02 = Entry/exit #2		44 = RF Low Battery
03 = Perimeter	28 = Not Used	45 = Polling Loop Failure
04 = Interior Follower	29 = Momentary Exit	47 = Console Failure
05 = Trouble Day/Alarm Night	31 = End of Exit Time	51 = RF Receiver Failure
06 = 24-Hr. Silent	32 = Start of Entry Time	52 = Kissoff
07 = 24-Hr. Audible	33 = Any Burglary Alarm	54 = Fire Zone Reset
08 = 24-Hr. Auxiliary	34 = Code + [#] + 71 Key Entry	55 = Disarm + 1 Minute
09 = Fire Alarm or Trouble	35 = Code + [#] + 72 Key Entry	56 = XX Minutes (enter XX in field 1*74) *
10 = Interior W/Delay	36 = At Bell Timeout **	57 = YY Seconds (enter YY in field 1*75) *
12 = Not Used	37 = 2 Times Bell Timeout **	58 = Duress
14 = CO Detector Alarm	38 = Chime	
16 = Fire With Verification	39 = Fire Alarm	60 = Audio Alarm Verification (must be selected for both START and STOP operation)
20 = Arming-STAY***	40 = Bypassing	
21 = Arming-AWAY****	41 = AC Power Fail	
22 = Disarming (Code + Off)		

- * Stop condition only
- ** Or at disarming, whichever occurs earlier
- *** The output also activates when the partition is armed in the INSTANT mode
- **** The output also activates when the partition is armed in the MAXIMUM mode



If you are using options 56 and/or 57 (usually as the STOP Zone Type), you must program data fields 1*74 and 1*75 for the respective relay timeouts for minutes and seconds.

PROMPT	EXPLANATION
02 START: ACS PT (00-15) 00	If the start zone type you selected was 27 (access point), this prompt is displayed. Enter the access point (00-15) that will start the relay action. Press [*] to continue.
02 START: PARTN ANY PARTITION 0	If the starting event will be limited to occurring on a specific partition, enter the partition number (1-8) in which the start event will occur. Enter 0 for any partition. Press [*] to continue.



Do not use a zone programmed with an RF Button (Input Type BR) to STOP a relay. The system will not deactivate the relay.

PROMPT	EXPLANATION
02 STOP: ZN LIST 00	If a zone list is being used to stop this relay action, enter the zone list number, 1-15. The restore of a zone on the zone list stops the relay. If a zone list is not being used, enter 0. Press [*] to continue.
02 STOP: ZN TYPE NO RESPONSE 00	If a Zone Type/System Operation is being used to stop the relay action, enter the 2-digit code listed in the Choices for Start/Stop System Operation chart. Press [*] to continue.
02 STOP: ACS PT (00-15) 00	If the stop zone type you selected was 27 (access point), this prompt is displayed. Enter the access point (00-15) which will stop the relay action. Press [*] to continue.
02 STOP: PARTN ANY PARTITION 0	This is the partition to which the stop condition will be limited. Enter 0 for any partition. Enter 1-8 for specific partition number. Press [*] to continue.

PROMPT	EXPLANATION																		
02 RELAY GROUP 00	Relays may be grouped for common activation by time-driven events (commands 06-10). Enter 00 (no group) or 01-15 for a specific group number. Press [*] to continue.																		
02 RESTRICTION 1=YES 0=NO 0	The system may have some devices that are not intended to be under end user control, such as relays activating fire doors or machinery. Enter 1 if the end user will be restricted from accessing this relay. Press [*] to continue.																		
02 RELAY TYPE V-PLEX 0	Enter 0 for V-Plex (polling loop) devices. Enter 1 for (ECP) relay module 4204. Enter 2 for X10 devices. Press [*] to continue.																		
02 V-PLEX ZONE # 000	For polling loop trigger outputs (4101SN), enter the protection zone number (010 - 250) linked to each output, if used. Be sure to enroll the module's serial number (see Zone Programming). Press [*] to continue.																		
02 ECP ADDRESS 00	If you selected 1 for (4204), enter the actual module's address (01-15 – 4204). Press [*] to continue.																		
02 MODULE RELAY# 0	For 4204 Relay Outputs, enter the specific relay number on that module (1-4). Press [*] to continue. The keypad will display the Start and Stop summary screens again. Press [*] to continue.																		
02 HOUSE CODE A 00	If you selected 2 for X-10 devices, enter the numerical equivalent of the House Code of the device, as follows: <table style="margin-left: 40px;"> <tr> <td>A=00</td> <td>D=03</td> <td>G=06</td> <td>J=09</td> <td>M=12</td> <td>P=15</td> </tr> <tr> <td>B=01</td> <td>E=04</td> <td>H=07</td> <td>K=10</td> <td>N=13</td> <td></td> </tr> <tr> <td>C=02</td> <td>F=05</td> <td>I=08</td> <td>L=11</td> <td>O=14</td> <td></td> </tr> </table>	A=00	D=03	G=06	J=09	M=12	P=15	B=01	E=04	H=07	K=10	N=13		C=02	F=05	I=08	L=11	O=14	
A=00	D=03	G=06	J=09	M=12	P=15														
B=01	E=04	H=07	K=10	N=13															
C=02	F=05	I=08	L=11	O=14															
02 UNIT CODE 00	Enter the numerical unit code of the X-10 device (00-15). Press [*] to continue. The keypad displays the Start and Stop summary screens again. Press [*] to continue.																		

When all relays have been programmed, enter **00** at the "ENTER RELAY NO." prompt.

If you are defining a zone list, continue to the next section. If not, enter **00 + [*]** at the next two prompts. You will then be asked "Quit Menu Mode?" Enter **1** for "Yes," **0** for "No." Then enter ***99** to exit programming completely.

Zone List Programming

After all relays have been programmed, upon entering **00** at the "ENTER RELAY NO." prompt, you are asked to enter a zone list. If a zone list number was used to start or stop a relay, you must define the zones belonging to that list as follows:

PROMPT	EXPLANATION
ENTER Zn LIST ? 00=QUIT 00	Enter the zone list number 01-15 . Enter 00 to quit.
01 ADD ZONE # 000=QUIT 000	Using 3-digit entries, enter each zone to be included in this zone list. Press [*] after you enter each zone number. When you have entered all zones, enter 000 . Press [*] to continue.
01 Del Zn LIST ? 1=YES 0=NO 0	Enter 0 to save this zone list. Enter 1 to delete it.
01 DEL ZONES ? 1=YES 0=NO 0	Enter 1 to delete one or more zones in that zone list. Enter 0 if no changes are necessary. If you enter 1 , the following screen appears; otherwise, the "Enter Zone LIST" prompt reappears.

PROMPT	EXPLANATION
01 Zn to DELETE ? 000=QUIT 000	Enter each zone number to be deleted from the zone list, pressing [*] after each number.
VIEW Zn LIST ? 00=QUIT 00	This display appears if you pressed 00 at the "Enter Zone LIST" prompt. Enter the zone list number that you wish to view. Press [*] to continue.
01 ASSIGNED ZONE 000=QUIT 000	Press [*] to scroll through all zones in that list. Enter 000 + [*] to quit. Press [1] to exit Menu Mode. Press *99 to exit Program Mode.

Relay Voice Descriptors

If you are using the 4286 VIP Module, voice descriptors can be programmed for outputs 1-32 (even though the system has 96 outputs, only 1-32 can have a Relay Voice Descriptor programmed). These descriptors are announced by the voice module when you access the relays via the # 70 Relay Access Mode over the telephone.

Each voice descriptor can consist of up to 3 words selected from the Relay Voice Descriptors and Custom Word Substitutes Vocabulary list (later in this section).



The index numbers from this vocabulary list are to be used for relay voice descriptors only. For normal system voice annunciation (e.g., alarms, troubles, status), use the highlighted words in the alpha vocabulary list in the *Alpha Programming* part of this guide.

To enter relay voice descriptors, do the following:

- From Data Field Programming mode, press #93 to display the "ZONE PROG?" prompt.
- Press [0] (NO) to each menu option until the "RLY VOICE DESCR?" prompt is displayed. Follow the instructions below. While in this mode, press [*] to advance to next screen. Press [#] to back up to previous screen.

PROMPT	EXPLANATION
RLY VOICE DESCR? 1=YES 0=NO 0	Press [1] to program voice descriptors for relays.
ENTER RELAY NO. 00=QUIT 01	Enter the 2-digit relay number (01-32) for the relay desired, or enter 00 to quit Relay Voice Descriptor Programming Mode. Press [*]
01 ENTER DESC d1	From the Relay Voice Descriptors and Custom Word Substitutes Vocabulary list, enter the 3-digit index number for the first word of the relay descriptor phrase. Press [*] to accept entry.
01 ENTER DESC d2	From the Relay Voice Descriptors and Custom Word Substitutes Vocabulary list, enter the 3-digit index number for the second word of the relay descriptor phrase. If second word is not desired, press [000]. Press [*] to accept entry.
01 ENTER DESC d3	From the Relay Voice Descriptors and Custom Word Substitutes Vocabulary list, enter the 3-digit index number for the third word of the relay descriptor phrase. If third word is not desired, press [000]. Press [*] to accept entry. The "ENTER RELAY NO." prompt appears. Enter the next relay number to be programmed. When you have programmed all output devices, enter 00 to quit. Enter *99 to exit Program Mode.

Relay Voice Descriptors and Custom Word Substitutes Vocabulary

Words *italicized* indicate those words supported by the 6160V Voice keypad.

Word	Index	Word	Index	Word	Index	Word	Index	Word	Index
Air.....	116	Daughter's.....	208	<i>Front</i>	<i>087</i>	No	165	<i>Side</i>	<i>153</i>
<i>Alarm</i>	<i>255</i>	<i>Den</i>	<i>052</i>	<i>Garage</i>	<i>023</i>	North	146	<i>Six</i>	<i>075</i>
And.....	067	<i>Detector</i>	<i>128</i>	Gas.....	138	Not	012	Sixth.....	219
Apartment.....	117	Device.....	060	Glass	139	<i>Off</i>	<i>011</i>	<i>Smoke</i>	<i>024</i>
Appliances.....	161	Dim	163	<i>Hall</i>	<i>050</i>	<i>Office</i>	<i>147</i>	Son's.....	223
Area	118	<i>Dining</i>	<i>031</i>	Heat.....	010	<i>On</i>	<i>058</i>	South	155
<i>Attic</i>	<i>119</i>	<i>Door</i>	<i>016</i>	<i>Inside</i>	<i>209</i>	<i>One</i>	<i>070</i>	Stairs	006
<i>Baby</i>	<i>120</i>	Down.....	008	<i>Kitchen</i>	<i>022</i>	<i>Open</i>	<i>148</i>	Station	156
<i>Back</i>	<i>121</i>	Downstairs	184	<i>Laundry</i>	<i>140</i>	<i>Outside</i>	<i>210</i>	<i>Storage</i>	<i>157</i>
Bar	122	Driveway	130	Left	027	<i>Panic</i>	<i>013</i>	Sun	154
<i>Basement</i>	<i>021</i>	Duct	131	<i>Library</i>	<i>141</i>	<i>Partition</i>	<i>090</i>	<i>System</i>	<i>062</i>
<i>Bathroom</i>	<i>051</i>	East	132	Light	019	<i>Patio</i>	<i>149</i>	Temperature	158
Battery.....	053	<i>Eight</i>	<i>077</i>	<i>Living</i>	<i>030</i>	Phone.....	061	<i>Third</i>	<i>159</i>
Bed.....	092	Eighth.....	221	Loading.....	142	Power.....	063	<i>Three</i>	<i>072</i>
<i>Bedroom</i>	<i>015</i>	Equipment.....	133	Lower.....	094	Pump.....	166	Tool.....	213
Blower	123	<i>Exit</i>	<i>004</i>	Machine.....	143	<i>Rear</i>	<i>088</i>	<i>Two</i>	<i>071</i>
Boiler.....	124	Factory.....	134	<i>Master</i>	<i>144</i>	Right.....	028	Up.....	025
Bright.....	162	Father's.....	211	<i>Medical</i>	<i>014</i>	<i>Room</i>	<i>018</i>	Upper.....	187
Building	125	Fence.....	135	Mother's.....	212	's	007	<i>Upstairs</i>	<i>183</i>
Burglary.....	039	Fifth.....	218	<i>Motion</i>	<i>145</i>	<i>Second</i>	<i>056</i>	<i>Utility</i>	<i>185</i>
Call.....	009	<i>Fire</i>	<i>040</i>	Nine.....	<i>078</i>	Service	150	West	215
Central.....	089	<i>First</i>	<i>136</i>	Ninth.....	222	<i>Seven</i>	<i>076</i>	<i>Window</i>	<i>017</i>
Chime.....	054	<i>Five</i>	<i>074</i>	<i>Shop</i>	<i>152</i>	<i>Seventh</i>	<i>220</i>	Wing	216
<i>Closed</i>	<i>126</i>	<i>Floor</i>	<i>029</i>	<i>Shed</i>	<i>151</i>	Sun	154	<i>Zone</i>	<i>002</i>
Computer	127	<i>Four</i>	<i>073</i>	<i>Shop</i>	<i>152</i>	<i>System</i>	<i>062</i>		
<i>Console</i>	<i>066</i>	Fourth	217			Temperature	158		
		Foyer.....	137			<i>Third</i>	<i>159</i>		
						<i>Three</i>	<i>072</i>		
						Tool.....	213		
						<i>Two</i>	<i>071</i>		
						Up.....	025		
						Upper.....	187		
						<i>Upstairs</i>	<i>183</i>		
						<i>Utility</i>	<i>185</i>		
						West	215		
						<i>Window</i>	<i>017</i>		
						Wing	216		
						Zero	069		
						<i>Zone</i>	<i>002</i>		

Custom Word Substitutes for VIP Module Annunciation

A substitute word can be programmed for each of the 60 custom words used in your alpha zone descriptions. The VIP Module announces this substitute word in place of the custom word that is displayed on the alpha keypad. For example, an alarm display of "John's Bedroom" could be announced as "Son's Bedroom," as there is no annunciation for the custom word "John." Note that if a substitute word is not assigned, the VIP Module will not annunciate the zone descriptor at all, but will only annunciate the zone number.

To enter custom word substitutes, do the following:

1. From Data Field Programming Mode, press **#93** to display the "ZONE PROG?" prompt.
2. Press **[0]** (NO) to each menu option until the "CUSTOM INDEX?" prompt is displayed.

PROMPT	EXPLANATION
CUSTOM INDEX ? 1=YES 0=NO 0	Enter [1] at this prompt.
CUSTOM WORD NO. 00=QUIT	Enter the custom word number (01-60) for which a voice substitute is desired. Enter 00 to quit this Programming Mode. Press [*] to accept entry.
01 ENTER INDEX #	Enter the 3-digit substitute word index number from the Relay Voice Descriptors and Custom Word Substitutes Vocabulary list in the <i>Relay Voice Descriptors</i> part of this section. Press [*] to accept entry. The "CUSTOM WORD NO." prompt is displayed. Enter the next custom word number to be substituted, or enter 00 to quit.

System Layout Worksheets

Before programming any security system, you should first define the installation. To help you lay out a partitioned system, use the following worksheets. This will further simplify the programming process.

NOTE: All references in this manual for number of zones, number of user codes, number of access cards, and the event log capacity, use the VISTA-250BPT's features. See page 4 of this manual for the table listing the differences between the VISTA-128BPT and the VISTA-250BPT control panels.

PARTITIONS

Partition #	Descriptor (4-char max)	Prim. Sub. #	Sec. Sub. #	Alpha Default Message (32-character maximum)
Partition 1				
Partition 2				
Partition 3				
Partition 4				
Partition 5				
Partition 6				
Partition 7				
Partition 8				
Keyswitch Arming Partition Assignment (1-8):				
Wireless Keypad Partition Assignment (1-8):				
Voice Module Partition Assignment (1-8):				
Use Partition Descriptor (yes/no)?				
Common Lobby Partition Assignment (1-8):				

COMMUNICATION OPTIONS BY PARTITION

Option	Part. 1	Part. 2	Part. 3	Part. 4	Part. 5	Part. 6	Part. 7	Part. 8
Swinger Suppression Count 00-15; 00=no suppression								
Cancel Report After Disarm								
Dialer Reports for Panic (* + 1)								
Dialer Reports for Panic (# + 3)								
Dialer Reports for Panic (* + #)								
Dialer Reports for Duress								
Burglary Alarm Communications Delay (30 sec.)								

SYSTEM DEFINITIONS BY PARTITION (enter values or yes/no)

Option	Part. 1	Part. 2	Part. 3	Part. 4	Part. 5	Part. 6	Part. 7	Part. 8
Entry Delay #1 (00, 30-225 seconds):								
Exit Delay #1 (00, 30-225 seconds):								
Entry Delay #2 (00, 30-225 seconds):								
Exit Delay #2 (00, 30-225 seconds):								
Quick Arming								
Multiple Alarms per Arming								
Console Panic for Zone 995 (* + 1)								
Console Panic for Zone 996 (# + 3)								
Console Panic for Zone 999 (* + #)								
Allow Sign-on (GOTO function)								
Non-Bypassable Zone*								
Sounder Timeout Duration for Bell (2 min. increments)								
Console Annunciation During Exit								
Confirmation of Arming Ding for Bell								
Chime on Bell								
Access Control Relay (field 1*76)								
Affects Lobby (check partitions that apply)								
Arms Lobby (check partitions that apply)								
Displays Fire Alarms of Other Partitions								
Displays Burg & Panic Alarms of Other Partitions								
Displays Troubles of Other Partitions								

*Can be any zone 001-250.

PRINTER OPTIONS

Serial printer	
12- or 24-hour Time format	
Printer On-Line (yes/no)	

EVENT LOG TYPES

Option	No	Yes
Alarm		
Trouble		
Bypass		
Open/Close		
System		

Addr	Type	Part	Sound Opt	House ID	Kypd Gbal	Graphic/Touch-Screen
00.						
01.						
02.						
03.						
04.						
05.						
06.						
07.						
08.						
09.						
10.						
11.						
12.						
13.						
14.						
15.						
16.						
17.						
18.						
19.						
20.						
21.						
22.						
23.						
24.						
25.						
26.						
27.						
28.						
29.						
30.						

Device Types:

- 00 = Device Not Used
- 01 = Alpha Console
- 03 = RF Receiver
- 04 = Output Relay Module
- 05 = Voice Module
- 06 = Communications Device
- 08 = Not Used
- 09 = Not Used
- 10 = Not Used
- 12 = Remote Interactive Service (RIS)

NOTES:

Address 04 must be used for the Voice Module, if used.

Console Sounder Options:

- 0 = No Suppression
- 1 = Suppress Arm/Disarm and Entry/Exit Beeps
- 2 = Suppress Chime Mode Beeps Only
- 3 = Suppress Arm/Disarm, Entry/Exit and Chime Mode Beeps

Defaults:

- Addresses 00 = Alpha Keypad; No Suppression
- Addresses 01 = Graphic/Touch-Screen, Keypad Global disabled

ACCESS CODES & USER DEFINITIONS FOR PARTITIONS 1 & 2

4-digit Security Code	Access Group 0; 1-8	Partition 1						Partition 2						
		3-Digit User #	Auth. Level	Open/Close	Group Bypass	RF Key	Global Arm	3-Digit User #	Auth. Level	Open/Close	Group Bypass	RF Key	Global Arm	

ACCESS CODES & USER DEFINITIONS FOR PARTITIONS 3 & 4

4-digit Security Code	Access Group 0; 1-8	Partition 3						Partition 4					
		3-Digit User #	Auth. Level	Open/Close	Group Bypass	RF Key	Global Arm	3-Digit User #	Auth. Level	Open/Close	Group Bypass	RF Key	Global Arm

ACCESS CODES & USER DEFINITIONS FOR PARTITIONS 5 & 6

4-digit Security Code	Access Group 0; 1-8	Partition 5						Partition 6					
		3-Digit User #	Auth. Level	Open/Close	Group Bypass	RF Key	Global Arm	3-Digit User #	Auth. Level	Open/Close	Group Bypass	RF Key	Global Arm

ACCESS CODES & USER DEFINITIONS FOR PARTITIONS 7 & 8

4-digit Security Code	Access Group 0; 1-8	Partition 7						Partition 8					
		3-Digit User #	Auth. Level	Open/Close	Group Bypass	RF Key	Global Arm	3-Digit User #	Auth. Level	Open/Close	Group Bypass	RF Key	Global Arm

Authority Levels: 1=Master (arm, disarm, bypass, and/or modify lower level users)
 2=Manager (arm, disarm, bypass, and/or modify lower level users)
 3=Operator A (arm, disarm, bypass)
 4=Operator B (arm, disarm)
 5=Operator C (arm, disarm only if system was armed with this code)
 6=Duress code (arm, disarm, triggers silent panic alarm)

Defaults:		
User	4-Digits	Alpha
User 1 (Installer)	4140	INSTLR
User 2	1234	MASTER

ZONE DEFINITION FOR ZONES 001-025

Zone No.	Zone Type	Part 1-8	Input Type	Arm w/Fault	Vent Zone	STAY Mode	Auto-STAY	Silent	Bypass Group	Access Point	Tamper	Serial #/ Loop	Rpt. Code	Smart Zone	Anti Mask	Zone Info (part nos.) & Alpha Descriptor (3 words max.)
1																
2																
3																
4																
5																
6																
7																
8																
9																
10																
11																
12																
13																
14																
15																
16																
17																
18																
19																
20																
21																
22																
23																
24																
25																

ZONE DEFINITION FOR ZONES 026-050

Zone No.	Zone Type	Part 1-8	Input Type	Arm w/Fault	Vent Zone	STAY Mode	Auto-STAY	Silent	Bypass Group	Access Point	Tamper	Serial # / Loop	Rpt. Code	Smart Zone	Anti Mask	Zone Info (part nos.) & Alpha Descriptor (3 words max.)
26																
27																
28																
29																
30																
31																
32																
33																
34																
35																
36																
37																
38																
39																
40																
41																
42																
43																
44																
45																
46																
47																
48																
49																
50																

ZONE DEFINITION FOR ZONES 051-075

Zone No.	Zone Type	Part 1-8	Input Type	Arm w/Fault	Vent Zone	STAY Mode	Auto-STAY	Silent	Bypass Group	Access Point	Tamper	Serial # / Loop	Rpt. Code	Smart Zone	Anti Mask	Zone Info (part nos.) & Alpha Descriptor (3 words max.)
51																
52																
53																
54																
55																
56																
57																
58																
59																
60																
61																
62																
63																
64																
65																
66																
67																
68																
69																
70																
71																
72																
73																
74																
75																

ZONE DEFINITION FOR ZONES 076-100

Zone No.	Zone Type	Part 1-8	Input Type	Arm w/Fault	Vent Zone	STAY Mode	Auto-STAY	Silent	Bypass Group	Access Point	Tamper	Serial # / Loop	Rpt. Code	Smart Zone	Anti Mask	Zone Info (part nos.) & Alpha Descriptor (3 words max.)
76																
77																
78																
79																
80																
81																
82																
83																
84																
85																
86																
87																
88																
89																
90																
91																
92																
93																
94																
95																
96																
97																
98																
99																
100																

ZONE DEFINITION FOR ZONES 101-125

Zone No.	Zone Type	Part 1-8	Input Type	Arm w/Fault	Vent Zone	STAY Mode	Auto-STAY	Silent	Bypass Group	Access Point	Tamper	Serial # / Loop	Rpt. Code	Smart Zone	Anti Mask	Zone Info (part nos.) & Alpha Descriptor (3 words max.)
101																
102																
103																
104																
105																
106																
107																
108																
109																
110																
111																
112																
113																
114																
115																
116																
117																
118																
119																
120																
121																
122																
123																
124																
125																

ZONE DEFINITION FOR ZONES 126-150

Zone No.	Zone Type	Part 1-8	Input Type	Arm w/Fault	Vent Zone	STAY Mode	Auto-STAY	Silent	Bypass Group	Access Point	Tamper	Serial # / Loop	Rpt. Code	Smart Zone	Anti Mask	Zone Info (part nos.) & Alpha Descriptor (3 words max.)
126																
127																
128																
129																
130																
131																
132																
133																
134																
135																
136																
137																
138																
139																
140																
141																
142																
143																
144																
145																
146																
147																
148																
149																
150																

ZONE DEFINITION FOR ZONES 151-175

Zone No.	Zone Type	Part 1-8	Input Type	Arm w/Fault	Vent Zone	STAY Mode	Auto-STAY	Silent	Bypass Group	Access Point	Tamper	Serial # / Loop	Rpt. Code	Smart Zone	Anti Mask	Zone Info (part nos.) & Alpha Descriptor (3 words max.)
151																
152																
153																
154																
155																
156																
157																
158																
159																
160																
161																
162																
163																
164																
165																
166																
167																
168																
169																
170																
171																
172																
173																
174																
175																

ZONE DEFINITION FOR ZONES 176-200

Zone No.	Zone Type	Part 1-8	Input Type	Arm w/Fault	Vent Zone	STAY Mode	Auto-STAY	Silent	Bypass Group	Access Point	Tamper	Serial # / Loop	Rpt. Code	Smart Zone	Anti Mask	Zone Info (part nos.) & Alpha Descriptor (3 words max.)
176																
177																
178																
179																
180																
181																
182																
183																
184																
185																
186																
187																
188																
189																
190																
191																
192																
193																
194																
195																
196																
197																
198																
199																
200																

ZONE DEFINITION FOR ZONES 201-225

Zone No.	Zone Type	Part 1-8	Input Type	Arm w/Fault	Vent Zone	STAY Mode	Auto-STAY	Silent	Bypass Group	Access Point	Tamper	Serial # / Loop	Rpt. Code	Smart Zone	Anti Mask	Zone Info (part nos.) & Alpha Descriptor (3 words max.)	
201																	
202																	
203																	
204																	
205																	
206																	
207																	
208																	
209																	
210																	
211																	
212																	
213																	
214																	
215																	
216																	
217																	
218																	
219																	
220																	
221																	
222																	
223																	
224																	
225																	

ZONE DEFINITION FOR ZONES 226-250

Zone No.	Zone Type	Part 1-8	Input Type	Arm w/Fault	Vent Zone	STAY Mode	Auto-STAY	Silent	Bypass Group	Access Point	Tamper	Serial # / Loop	Rpt. Code	Smart Zone	Anti Mask	Zone Info (part nos.) & Alpha Descriptor (3 words max.)
226																
227																
228																
229																
230																
231																
232																
233																
234																
235																
236																
237																
238																
239																
240																
241																
242																
243																
244																
245																
246																
247																
248																
249																
250																

ZONE DEFINITIONS FOR KEYPAD PANIC ZONES 995, 996, & 999

Zone No.	Zone Type	Enter yes/no for each partition-field *22								Report Code	Zone Information (part numbers) & Alpha Descriptor (3 words max.)
		1	2	3	4	5	6	7	8		
995											
996											
999											

ZONE DEFINITIONS FOR SYSTEM ZONES; 970, 988; 990 & 997

Zone No.	Zone Type	Report Code	Zone Information (part numbers) & Alpha Descriptor (3 words max.)
970			
988			
990			
997			

NOTE: When supervising the bell output (zone 970), only one device can be connected to the alarm output (terminals 4 and 5) for UL and Fire installations.

ZONE DEFINITIONS FOR RELAY SUPERVISORY ZONES 601-632

Zone No.	Zone Type	Report Code	Zone Information (part numbers) & Alpha Descriptor (3 words max.)	Zone No.	Zone Type	Report Code	Zone Information (part numbers) & Alpha Descriptor (3 words max.)
601				617			
602				618			
603				619			
604				620			
605				621			
606				622			
607				623			
608				624			
609				625			
610				626			
611				627			
612				628			
613				629			
614				630			
615				631			
616				632			

ZONE DEFINITIONS FOR SUPERVISORY OF ECP DEVICE ZONES 800-830

Zone No.	Zone Type	Report Code	Zone Information (part numbers) & Alpha Descriptor (3 words max.)	Zone No.	Zone Type	Report Code	Zone Information (part numbers) & Alpha Descriptor (3 words max.)
800				816			
801				817			
802				818			
803				819			
804				820			
805				821			
806				822			
807				823			
808				824			
809				825			
810				826			
811				827			
812				828			
813				829			
814				830			
815							

Zone Types:

00=zone not used	07=24-hour audible	20=arm stay
01=entry/exit 1	08=24-hour auxiliary	21=arm away
02=entry/exit 2	09=supervised fire	22=disarm
03=perimeter	10=interior (delay)	23=no alarm response
04=interior (follower)	12=Not Used	27=access control
05=day/night burglary	14=CO detector alarm	28=Not Used
06=24-hour silent	16=fire w/verification	29=momentary exit

Input Types:

00=Not Used	07=Dip switch-type polling loop
01=hardwired	08=right loop dip switch polling loop
02=RF motion transmitter	09=keypad input
03=supervised RF transmitter	10=Not Used
04=unsupervised RF transmitter	11=VistaKey door status monitor
05=RF button transmitter	12=VistaKey request to exit
06=serial number polling loop	13=VistaKey general purpose

Output Devices Worksheets

Applicable only if relays (4204), V-Plex or X-10 devices are used.

Output Devices – Programmed in the #93 Menu Mode in the Output Programming Section. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

- NOTES:**
1. For 4204, the Device Programming section must be programmed for the device address. Set the DIP switches on the device for that address.
 2. For V-Plex, the devices must be programmed in the Zone Programming section.
 3. For X-10 devices, use the 1361X10 transformer in place of the transformer that comes in the box with the control panel.

OUTPUT DEV #	A	S T A R T			S T O P			Relay Group	Restrict	0=V-Plex 1=4204 2=X-10	V-Plex Zone # or Dev Add 4204 or House Code for X-10	Relay # for 4204 or Unit Code for X-10
		EV/ZL	Zone	ZT / P	ZL	ZT / P						
1.												
2.												
3.												
4.												
5.												
6.												
7.												
8.												
9.												
10.												
11.												
12.												
13.												
14.												
15.												
16.												
17.												
18.												
19.												
20.												

OUTPUT DEVICES WORKSHEET (cont'd)

OUTPUT DEV #	A	S T A R T					S T O P			Relay Group	Restrict	0=V-Plex 1=4204 2=X-10	V-Plex Zone # or Dev Add 4204 or House Code for X-10	Relay # for 4204 or Unit Code for X-10
		EV/ZL	Zone	ZT / P	ZL	ZT / P	ZL	ZT / P						
21.														
22.														
23.														
24.														
25.														
26.														
27.														
28.														
29.														
30.														
31.														
32.														
33.														
34.														
35.														
36.														
37.														
38.														
39.														
40.														
41.														
42.														
43.														
44.														
45.														

OUTPUT DEVICES WORKSHEET (cont'd)

OUTPUT DEV #	A	S T A R T			S T O P			Relay Group	Restrict	0=V-Plex 1=4204 2=X-10	V-Plex Zone # or Dev Add 4204 or House Code for X-10	Relay # for 4204 or Unit Code for X-10
		EV/ZL	Zone	ZT / P	ZL	ZT / P						
46.												
47.												
48.												
49.												
50.												
51.												
52.												
53.												
54.												
55.												
56.												
57.												
58.												
59.												
60.												
61.												
62.												
63.												
64.												
65.												
66.												
67.												
68.												
69.												
70.												

OUTPUT DEVICES WORKSHEET (cont'd)

OUTPUT DEV #	A	S T A R T					S T O P			Relay Group	Restrict	0=V-Plex 1=4204 2=X-10	V-Plex Zone # or Dev Add 4204 or House Code for X-10	Relay # for 4204 or Unit Code for X-10
		EV/ZL	Zone	ZT / P	ZL	ZT / P	ZL	ZT / P						
71.														
72.														
73.														
74.														
75.														
76.														
77.														
78.														
79.														
80.														
81.														
82.														
83.														
84.														
85.														
86.														
87.														
88.														
89.														
90.														
91.														
92.														
93.														
94.														
95.														
96.														

A = DEVICE ACTION 0 = No Response; 1 = Close for 2 sec; 2 = Close and stay closed; 3 = Pulse on and off; 4 = Toggle alternately between START and STOP events

EV = EVENT 0 = Not used; 1 = Alarm; 2 = Fault; 3 = Trouble

ZL = ZONE LIST 01-15, 00 = Not Used

"START" ZONE LIST: Upon alarm, fault, trouble or restore of ANY zone in this list, device action will START.

"STOP" ZONE LIST: Upon restore of ALL zones on this list, device action will STOP. It need not be same list as used for START.

ZT = ZONE TYPE/SYSTEM OPERATION

Choices for Zone Types are:

00=zone not used	08=24-hour auxiliary	22=disarm
01=entry/exit 1	09=supervised fire	23=no alarm response
02=entry/exit 2	10=interior (delay)	26=Not Used
03=perimeter	12=Not Used	27=Not Used
04=interior (follower)	14=CO detector alarm	28=Not Used
05=day/night burglary	16=fire w/verification	29=momentary exit
06=24 hour silent	20=arm stay	
07=24-hour audible	21=arm away	

NOTE: Any zone in "ZT" for Start, going into alarm, fault, or trouble will activate the relay.
Any zone in "ZT" for Stop, that restores will stop the relay action.

Choices for System Operation are:

00 = No Response (Not Used)	27 = Access Point (allows more than one relay to be controlled by activation if access point request)	42 = System Battery Low
01 = Entry/Exit #1	28 = MLB Supervision	43 = Communication failure
02 = Entry/exit #2	29 = Momentary Exit	44 = RF Low Battery
03 = Perimeter	31 = End of Exit Time	45 = Polling Loop Failure
04 = Interior Follower	32 = Start of Entry Time	47 = Console Failure
05 = Trouble Day/Alarm Night	33 = Any Burglary Alarm	51 = RF Receiver Failure
06 = 24-Hr. Silent	34 = Code + [#] + 71 Key Entry	52 = Kissoff
07 = 24-Hr. Audible	35 = Code + [#] + 72 Key Entry	54 = Fire Zone Reset
08 = 24-Hr. Auxiliary	36 = At Bell Timeout **	55 = Disarm + 1 Minute
09 = Fire Alarm or Trouble	37 = 2 Times Bell Timeout **	56 = XX Minutes (enter XX in field 1*74) *
10 = Interior W/Delay	38 = Chime	57 = YY Seconds (enter YY in field 1*75) *
16 = Fire With Verification	39 = Fire Alarm	58 = Duress
20 = Arming-STAY***	40 = Bypassing	60 = Audio Alarm Verification (must be selected for both START and STOP operation)
21 = Arming-AWAY****	41 = AC Power Fail	
22 = Disarming (Code + Off)		
23 = No Alarm Response		

- * Stop condition only
- ** Or at Disarming, whichever occurs earlier
- *** The output also activates when the partition is armed in the INSTANT mode
- **** The output also activates when the partition is armed in the MAXIMUM mode

P = PARTITION No. 1-8, 0 = Any

ZONE LISTS FOR OUTPUT DEVICES – Programmed in the #93 Menu Mode in the Output Programming Section. Fill in the required data on the worksheet below and follow the procedure shown earlier in this *Programming Guide* as you enter the data during the displays and prompts that appear in sequence. Up to 15 zone lists may be created

NOTE: Record desired zone numbers below. More or fewer boxes than shown may be needed, as any list may include *any* or *all* of system's zone numbers.

Zone List 1: Started or stopped by zone numbers (enter 000 to end entries).

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Zone List 2: Started or stopped by zone numbers (enter 000 to end entries).

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Zone List 3: Started or stopped by zone numbers (enter 000 to end entries).

Zone List 4: Started or stopped by zone numbers (enter 000 to end entries).

Zone List 5: Started or stopped by zone numbers (enter 000 to end entries).

Zone List 6: Started or stopped by zone numbers (enter 000 to end entries).

Zone List 7: Started or stopped by zone numbers (enter 000 to end entries).

Zone List 8: Started or stopped by zone numbers (enter 000 to end entries).

Zone List 9: Started or stopped by zone numbers (enter 000 to end entries).

Zone List 10: Started or stopped by zone numbers (enter 000 to end entries).

Zone List 11: Started or stopped by zone numbers (enter 000 to end entries).

Zone List 12: Started or stopped by zone numbers (enter 000 to end entries).

Zone List 13: Started or stopped by zone numbers (enter 000 to end entries).

Zone List 14: Started or stopped by zone numbers (enter 000 to end entries).

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Zone List 15: Started or stopped by zone numbers (enter 000 to end entries).

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Scheduling Menu Prompts

To program schedules, enter Scheduling program mode by pressing **[User Code] + # + 80** to display the first choice of the menu driven programming functions. **NOTE:** Only users with an Installer or Master level user code may enter the #80 mode. Press **0** (NO) or **1** (YES) in response to the displayed menu selection. Pressing **0** will display the next choice in sequence. Menu selections are as follows:

PROMPT	EXPLANATION
<div style="border: 1px solid black; padding: 5px;"> Time Window ? 1 = YES 0 = NO 0 </div>	For defining up to 20 time windows each with a start and a stop time programmed by entering the hours and minutes.
<div style="border: 1px solid black; padding: 5px;"> O/C Schedules ? 1 = YES 0 = NO 0 </div>	For defining the daily open and close schedules for the eight partitions. Each partition can be programmed with an opening and closing window for each day of the week and holidays.
<div style="border: 1px solid black; padding: 5px;"> Holidays ? 1 = YES 0 = NO 0 </div>	For defining up to 16 holidays for which partitions they apply.
<div style="border: 1px solid black; padding: 5px;"> Timed Events ? 1 = YES 0 = NO 0 </div>	For defining up to 20 time driven events with the following parameters: <ul style="list-style-type: none"> • Time window • Action desired • Action specifier • Activation time • Days of the week
<div style="border: 1px solid black; padding: 5px;"> Access Sched. ? 1 = YES 0 = NO 0 </div>	For defining the limitation of access schedules for the user codes. Each schedule can be programmed with two window for each day of the week and holidays

#80 & #81 MENU MODE KEY COMMANDS

The following is a list of commands used while in the Menu mode.

#80 or #81	Enters Menu mode
[*]	Serves as ENTER key. Press to have keypad accept entry.
[#]	Backs up to previous screen.
0	Press to answer NO.
1	Press to answer YES.
01-09	All data entries are either 2-digit entries.
00	Exits Menu mode, returns to normal operation mode when entered at the first question for each category.

Scheduling Worksheets

Time Windows Definitions Worksheet. The system provides 20 time windows that are defined with start and stop times. They are programmed in the #80 Menu Mode. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

Time Window Number	Start Time (HH:MM)	Stop Time (HH:MM)
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

(Keep this worksheet handy, as you will be asked for a given time window number later in this section).



Because the time windows are shared among all partitions, it is important to make sure that changing a time window does not adversely affect desired actions in other partitions.

Daily Open/Close Schedule Worksheet: Using the time windows previously defined, fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

Part	Mon		Tues		Wed		Thur		Fri		Sat		Sun		Hol	
	Op	Cl	Op	Cl	Op	Cl	Op	Cl	Op	Cl	Op	Cl	Op	Cl	Op	Cl
1																
2																
3																
4																
5																
6																
7																
8																

Holiday Schedule Worksheet: The system provides up to 16 holidays that can be assigned for the system. Each holiday can be assigned to any combination of partitions. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

HOL	Partition								
	Month/Day	1	2	3	4	5	6	7	8
1	/								
2	/								
3	/								
4	/								
5	/								
6	/								
7	/								
8	/								
9	/								
10	/								
11	/								
12	/								
13	/								
14	/								
15	/								
16	/								

Time-Driven Event Worksheet: The system provides up to 20 time-driven events that can be programmed for the system. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

Sched Num.	Time Window	Day(s)								Action Desired	Action Specifier	Activation Time
		M	T	W	T	F	S	S	H			
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												
11												
12												
13												
14												
15												
16												
17												
18												
19												
20												

Below is a list of the "Action" codes (desired actions) used when programming time-driven events. Note that these codes are independent of the "relay codes" programmed during the #93 Menu Mode—Output Programming mode. **If using Time Driven Events, the following menu items must first be programmed using #93 Menu Mode - Output Programming:**

Enter Relay No. (reference identification number)	ECP Address (4204)
Relay Group (if applicable)	Relay No. (4204)
Restriction	House Code (X-10)
Relay Type (V-Plex, 4204 or X-10)	Unit Code (X-10)
Zone No. (V-Plex)	

Relay commands:

Action Specifier for commands 01-05 is Relay No.; Action Specifier for commands 06-10 is Relay Group No.

- | | |
|--|--|
| 01 = Relay On | 02 = Relay Off |
| 03 = Relay Close for 2 seconds | 04 = Relay Close XX minutes (field 1*74) |
| 05 = Relay Close YY seconds (field 1*75) | 06 = Relay Group On |
| 07 = Relay Group Off | 08 = Relay Group Close for 2 seconds |
| 09 = Relay Group Close XX minutes (field 1*74) | 10 = Relay Group Close YY seconds (field 1*75) |

Arm/Disarm commands:

Action Specifier for commands 20-24 is Partition(s). Activation times 1 (Beginning), 2 (End), 3 (During), 5 (Random Start), 6 (Random End), 7 (Random During) are the only valid choices for auto-arming and disarming functions.

- | | |
|---|---|
| 20 = Arm-Stay | 21 = Arm Away |
| 22 = Disarm | 23 = Force Arm Stay (Auto-bypass faulted zns) |
| 24 = Force Arm Away (Auto-bypass faulted zns) | 25 = Arm Instant |
| 26 = Arm Maximum | |

Bypass commands:

Action Specifier for commands 30-31 is Zone List #, Activation times 1 (Beginning), 2 (End), 3 (During), 5 (Random Start), 6 (Random End), 7 (Random During) are the only valid choices for bypass commands.

- | | |
|------------------------------|---------------------------------|
| 30 = Auto bypass - Zone list | 31 = Auto unby pass - Zone list |
|------------------------------|---------------------------------|

Open/Close Windows:

Action Specifier for commands 40-41 is Partition(s), and for 42 is Access Group. Activation time 3 (During) is the only valid choice for these commands.

- | | | |
|----------------------------|----------------------------|---------------------------|
| 40 = Enable Opening Window | 41 = Enable Closing Window | 42 = Enable Access Window |
|----------------------------|----------------------------|---------------------------|

Access Control Commands

Action Specifier for commands 55-60 is Access Point, for 61-66 is Group, for 67-72 is Partition, and for 73-74 is Trigger.

- | | |
|--|---|
| 55 = Access Point Grant | 56 = Access Point Grant with Override |
| 57 = Access Point Protect | 58 = Access Point Bypass |
| 59 = Access Point Lock | 60 = Access Point Exit |
| 61 = Access Point Group Grant | 62 = Access Point Group Grant with Override |
| 63 = Access Point Group Protect | 64 = Access Point Group Bypass |
| 65 = Access Point Group Lock | 66 = Access Point Group Exit |
| 67 = Access Point Partition Grant | 68 = Access Point Partition Grant with Override |
| 69 = Access Point Protect by Partition | 70 = Access Point Bypass by Partition |
| 71 = Access Point Lock by Partition | 72 = Access Point Exit by Partition |
| 73 = Access Point Trigger On | 74 = Access Point Trigger Off |

Additional Commands

Action Specifier for commands 77 and 78 is Group.

- 77 = Access Point Group Enable
- 78 = Access Point Group Disable

Activation time:

Refers to when the action is to take place relative to the time window.

- | | |
|--|---------------------------------------|
| 1 = Beginning of time window | 4 = Beginning and end of time window |
| 2 = End of time window | 5 = Random Start of the time window * |
| 3 = During time window active period only (On at beginning of window, off at end). | 6 = Random End of the time window * |
| | 7 = Random During the time window * |

- * The activation time of the window is randomized up to 30 minutes and is initialized by either of two methods:
 - a. **[User Code] + [#] + [41]** – Initiates the random schedule for all devices in the partition.
 - b. **[User Code] + [#] + [42]** – Initiates the random schedule for all devices in the partition with a time window within 6 PM and 5 AM.

Limitation of Access Worksheet The system provides up to eight Access Schedules that can be programmed for the system. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

Acc Sch	Mon		Tues		Wed		Thurs		Fri		Sat		Sun		Hol	
	W1	W2	W1	W2	W1	W2	W1	W2	W1	W2	W1	W2	W1	W2	W1	W2
1																
2																
3																
4																
5																
6																
7																
8																


Temporary Schedule #81 Menu Mode. The system provides a Temporary Schedule for each partition. Enter the temporary scheduling mode by pressing **[Installer Code] + [#] + [81]**. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

Partition/Windows		Mon	Tue	Wed	Thu	Fri	Sat	Sun
1	Disarm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
	Arm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
2	Disarm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
	Arm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
3	Disarm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
	Arm Window							
	Start Time HH:MM							
	Stop Time HH:MM							

Partition/Windows		Mon	Tue	Wed	Thu	Fri	Sat	Sun
4	Disarm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
	Arm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
5	Disarm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
	Arm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
6	Disarm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
	Arm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
7	Disarm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
	Arm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
8	Disarm Window							
	Start Time HH:MM							
	Stop Time HH:MM							
	Arm Window							
	Start Time HH:MM							
	Stop Time HH:MM							

VISTA-128BPT Summary of Connections Diagram


* RESIDENTIAL FIRE AND COMMERCIAL AND RESIDENTIAL BURGLARY, LOCAL AND POLICE STATION, MERCANTILE SAFE AND VAULT, CENTRAL STATION CONTROL UNIT WITH DACT ** RESIDENTIAL FIRE AND RESIDENTIAL BURGLARY CONTROL UNIT WITH DACT

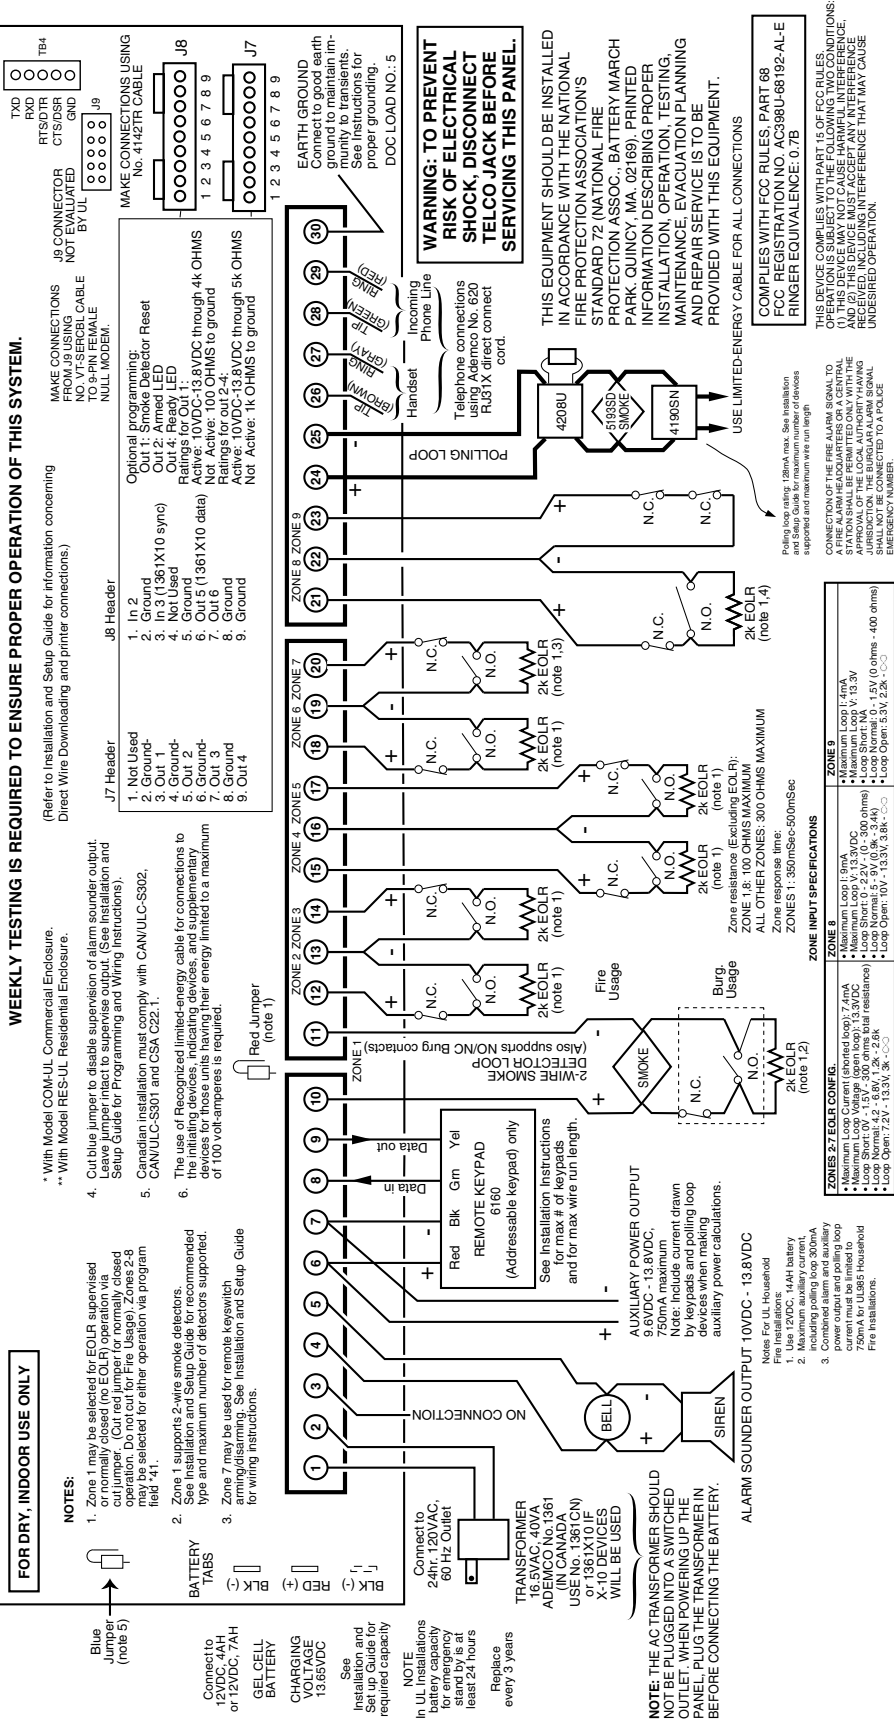

V128BPT-SOC-V1

VISTA-250BPT Summary of Connections Diagram

*** RESIDENTIAL FIRE AND COMMERCIAL AND RESIDENTIAL BURGLARY, LOCAL AND POLICE STATION, MERCANTILE SAFE AND VAULT, CENTRAL STATION CONTROL UNIT WITH DACT**
**** RESIDENTIAL FIRE AND RESIDENTIAL BURGLARY CONTROL UNIT WITH DACT**

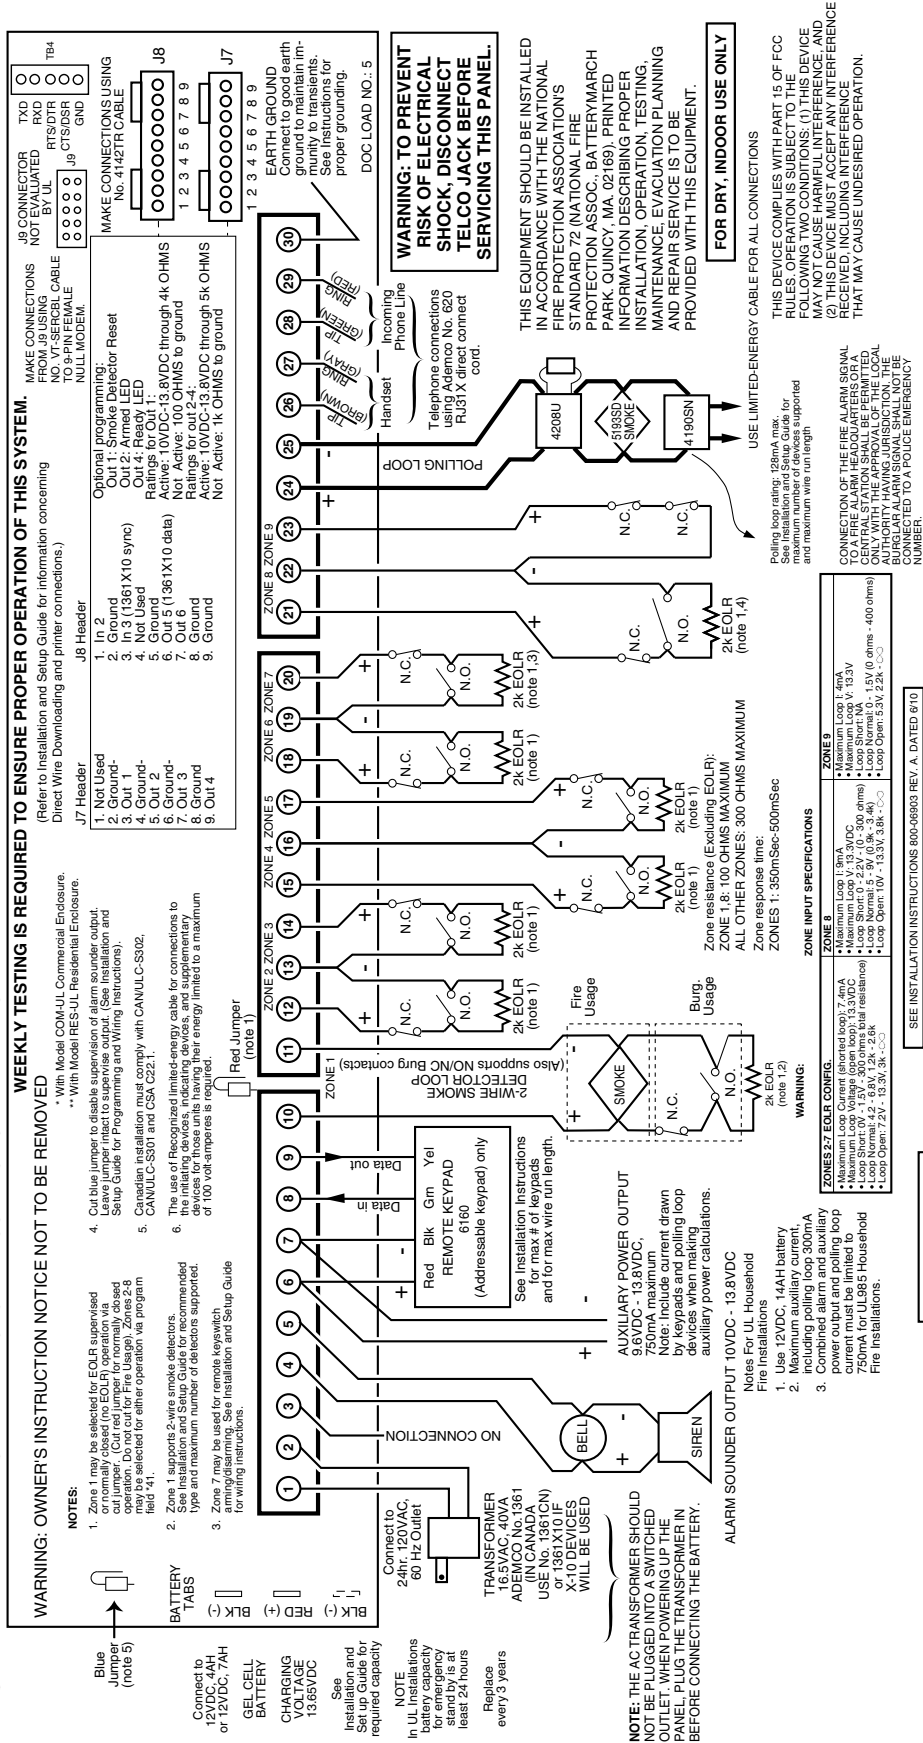

V250BPT-SOC-V1

For the latest warranty information, please go to:
www.honeywell.com/security/hsc/resources/wa

Honeywell

2 Corporate Center Drive, Suite 100
P.O. Box 9040, Melville, NY 11747
Copyright © 2010 Honeywell International Inc.

www.honeywell.com/security

