

WARING®

75TH ANNIVERSARY BLENDER



MBB1000 Series

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

CONTENTS

Important Safeguards	3
Grounding Instructions.....	5
Parts & Assembly	6
How to Use Your Blender Controls	8
Operating Instructions	9
Hints & Tips	10
Important Hot Blending Instructions	10
Cleaning & Maintenance	11

IMPORTANT UNPACKING INSTRUCTIONS

1. Place the box containing your Waring® blender on a flat sturdy surface before unpacking.
2. Open corrugated flaps.
3. Remove Instruction Book and any printed materials from top of box.
4. Pull up corrugation and remove. Remove container and padding.
CAUTION: Sharp blade inside blender container.
5. Lift corrugated insert, remove unit from box.
6. Replace all corrugated inserts in the gift box and save the box for repacking.

REPACKING INSTRUCTIONS

1. Place the unit on a large, sturdy flat surface.
2. Place unit in corrugated insert in bottom of box.
3. Place long corrugated insert over base.
4. Insert blender container and padding.
5. Close and seal box for shipping.

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.**
3. To protect against electrical hazards, do not immerse the blender base in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children or individuals with certain disabilities.
5. Do not use carbonated liquids in the blender container, or in any blending container. Using carbonated liquids in a blender container may result in injury.
6. Avoid contact with moving parts.
7. Do not operate this Waring® blender or any other appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
8. The use of attachments not recommended or sold by Waring may cause fire, electric shock, or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Keep hands and utensils out of container while blending to prevent the possibility of severe personal injury and/or damage to the blender. A rubber scraper may be used, but must be used only when the blender is not running.
12. **Blades are sharp. Handle carefully.**
13. Always operate blender with cover in place. NOTE: Use caution when the center piece of the two-piece lid is removed.

14. When blending hot liquids, remove the center piece of two-piece lid. See Hot Blending Instructions on page 8.
15. See Cleaning and Maintenance Instructions. NOT FOR WATERJET CLEANING.
16. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

GROUNDING INSTRUCTIONS

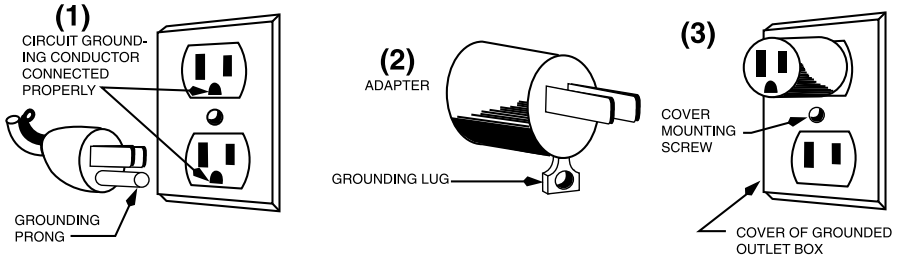

For your protection, Waring® blenders are equipped with a 3-conductor cord that has a molded 3-prong grounding-type plug, and should be used in combination with a properly connected grounding-type outlet as shown in Figure 1. If a grounding-type outlet is not available, an adapter, shown in Figure 2, may be obtained so that a 2-slot wall outlet can be used with a 3-prong plug.

Referring to Figure 3, the adapter must be grounded by attaching its grounding lug under the screw of the outlet cover plate.

CAUTION: Before using an adapter, it must be determined that the outlet cover plate screw is properly grounded. If in doubt, consult a licensed electrician. Never use an adapter unless you are sure it is properly grounded.

NOTE: Use of an adapter is not permitted in Canada.

This appliance is for 120 volts only and should not be used with a converter.

IMPORTANT: Always unplug the Waring® blender from outlet when assembling and disassembling.

PARTS & ASSEMBLY



- A. Measuring Cup (2 oz.)** – Center part of the two-piece lid is removable for adding ingredients while blending, and for releasing steam while puréeing soup. Made from copolyester and is BPA free.
- B. Lid** – Two-piece PVC lid is BPA free and dishwasher safe.
- C. Container** – Large 64 oz. copolyester inverted container with trademark cloverleaf design. Includes easy-to-read English graduations.
- D. Handle**
- E. Blades** – Stainless steel cutting blades.
- F. Base** – Die-cast metal waterfall design.
- G. Operating Lights** – Blue LED lights indicate that the blender is plugged in and ready for use.
- H. START/STOP Button** – Starts and stops speeds 1 through 10.
- I. PULSE Button** – Creates a burst of power for quick blending at 27,000 RPM.
- J. Variable Speed Control Knob** – Blend smoothies, whipped cream, soups and more.
- K. Non-Slip Rubber Feet** – Provide stable operation.

All parts that come in contact with food are BPA free.

HOW TO USE YOUR BLENDER CONTROLS

Waring has designed the controls of your new variable speed blender to be extremely user friendly. For general blending procedures, follow the instructions below.



Continuous Blending

Turn the VARIABLE SPEED CONTROL KNOB to the right to select speed 1 through 10. Press the START/STOP button to start blending. When blending is complete, press START/STOP button to stop blending.

Pulse Blending

The pulse feature overrides the maximum variable speed 10 at 27,000 RPM. To use this feature, press PULSE and release when you have achieved your desired results. Pulse blending can be used for crushing ice.

BEFORE FIRST USE

1. Follow the cleaning and maintenance instructions on page 8 before first use.
2. Thoroughly dry the container before placing it on the base.

OPERATING INSTRUCTIONS

1. When placing the container on the blender base, make sure that the unit is unplugged. Do not put the container on or take it off while the unit is running. Doing so may damage your blender.
2. Plug it into a convenient outlet. The LED lights will illuminate over the control panel when the unit has been properly plugged in.
3. Put ingredients into the container and place the cover on top. Do not fill over MAX FILL line.

NOTE: Do not use a container other than the one provided.

4. Depending on what you are blending, choose speed 1–10 or PULSE to blend ingredients to desired consistency.

FOR CONTINUOUS BLENDING

Turn the variable speed control knob clockwise to set the speed from 1 to 10 based on the ingredients you wish to blend.

Press the START/STOP button to begin blending. The LED lights above the START/STOP button will begin flashing. When you have achieved the desired results, press the START/STOP button to stop.

FOR PULSE BLENDING

Press and hold the PULSE button until ingredients have achieved the desired results. The LED lights above the PULSE button will flash when the PULSE button is pressed.

Allow blades to come to a complete stop before removing the container from the blender base.

WARNING: Never place the container on the blender base or remove it from the blender base while the motor is running.

HINTS & TIPS

- For puréeing soups- always start blending on lowest speed setting and then progress to desired speed, unless otherwise instructed in the recipe book.
- Use the PULSE feature for foods that only require short bursts of power, e.g., when blending frozen fruits or ice cubes.
- Ensure all foods are cut into cubes (approx. 1 square inch) where appropriate to achieve an even result.
- When blending multiple ingredients, place liquid ingredients in the blender container before solid ingredients, unless otherwise specified in the recipe.

IMPORTANT HOT BLENDING INSTRUCTIONS

To minimize the possibility of being scalded when blending hot materials, the following precautions and procedures must be observed.

- Hot materials are those which are 100°F (38°C) or hotter
- Limit the amount of materials processed to 1 pint
- Completely remove the center part of the two-piece lid before starting motor. (This will allow venting of the rapidly heated and expanding air inside the container when blender is running.)
- Always start blending on lowest speed setting, and then progress to desired speed.
- Never stand directly over blender when it is being started or while it is running. DO NOT put your hand on top of blender while blending. Hot steam may be escaping.

CLEANING AND MAINTENANCE

The container must be cleaned and dried after each use.

CAUTION: Never immerse blender base in water or other liquids.

CAUTION: Be extremely careful when cleaning around the blades. They are very sharp.

1. Remove the container from the blender base and remove the lid.
2. To clean the container, you can place it on the top rack of the dishwasher or clean it by hand.
3. To clean the container by hand:
 - A. Mix a few drops of dishwashing detergent with 1 cup of cool water and add it to the container. Scrub and rinse out the interior of the container and the lid to dislodge and remove as much residue as possible. Empty the container.
Add another few drops of dishwashing detergent to the container with 1 cup of cool water. Put lid on container, place container on blender base, plug the blender in and run on high speed for two minutes.
 - B. To clean the blender base, unplug the power cord. Wipe the exterior surfaces with a soft cloth or sponge dampened with cleaning solution. Rinse with clean water. Do not immerse the base in cleaning solution or water. Wipe the base with a dry towel.
4. Always wash and rinse the container prior to initial use, and whenever blender has not been used within a period of one hour.

Any other servicing should be performed by an authorized service representative.



©2013 Waring Consumer Products
150 Milford Road
East Windsor, NJ 08520

www.waringpro.com

Any other trademarks or service marks of
third parties referred to herein are the trademarks or
service marks of their respective owners.

Printed in USA

MBB1000 Series IB
13WR140113

033543