 



Dogness Smart CAM Treater Instruction

1

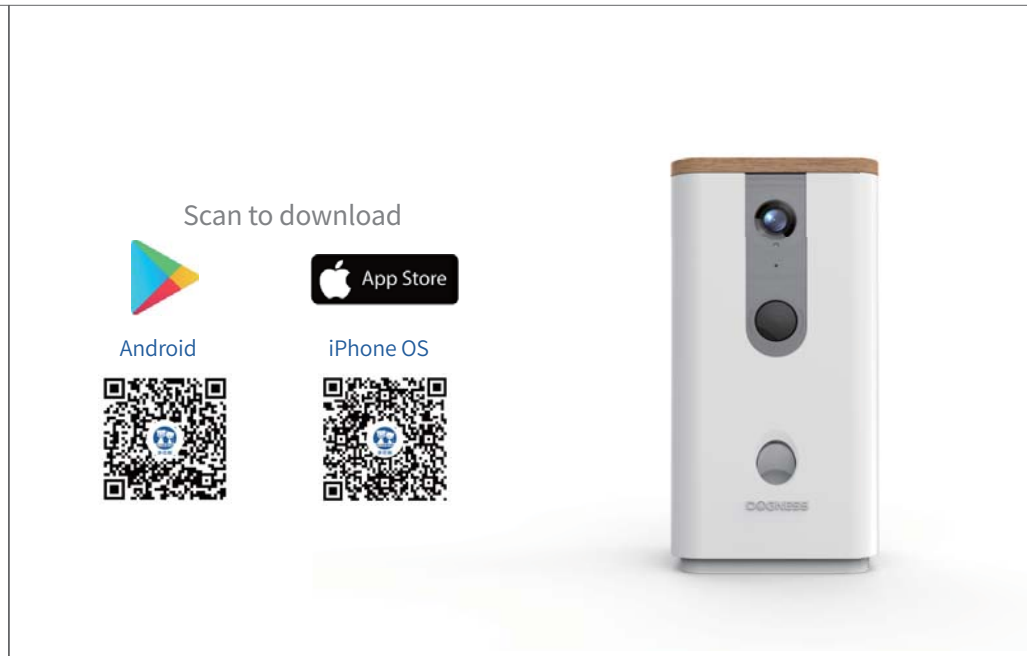


Download App and set up account

 2

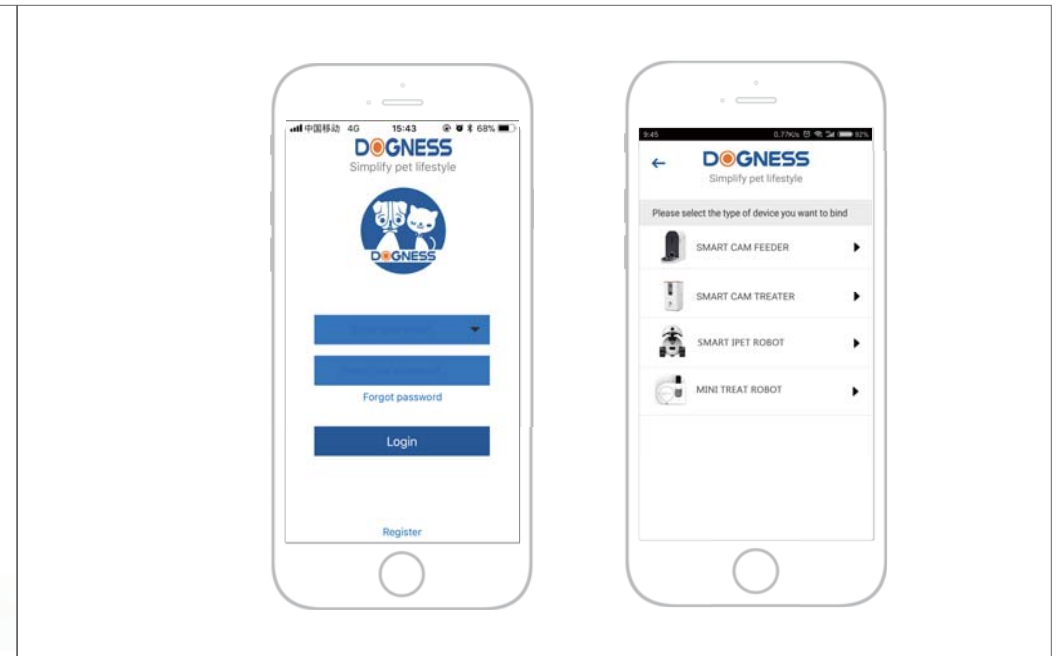


Login your account and add smart product

 3

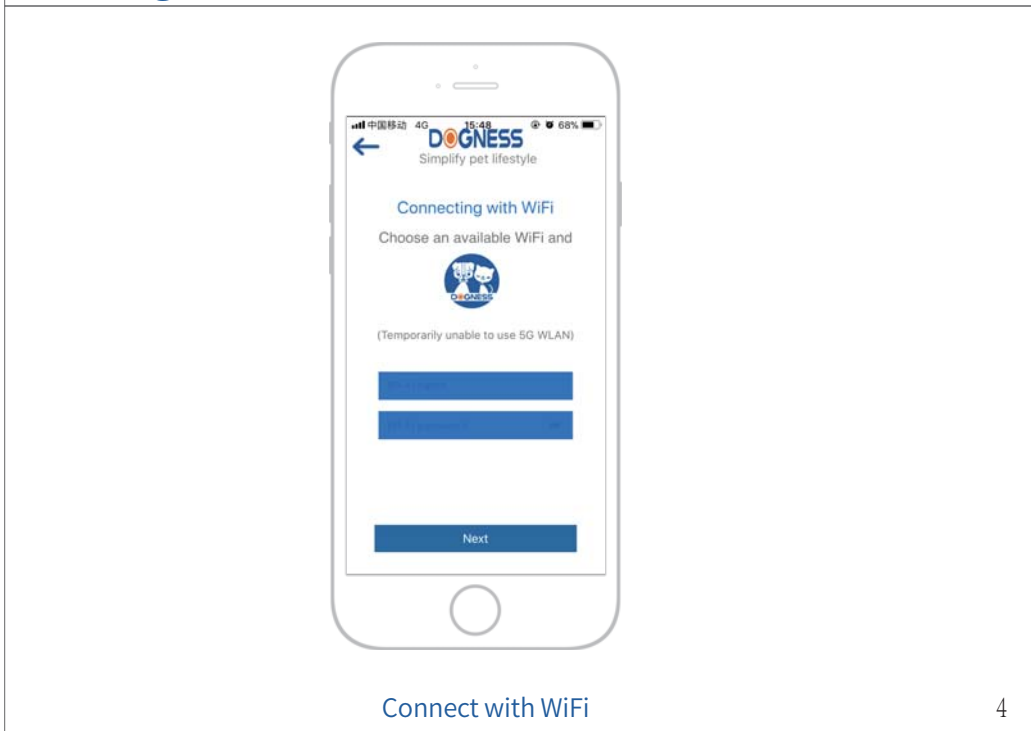


Connect with WiFi

 4

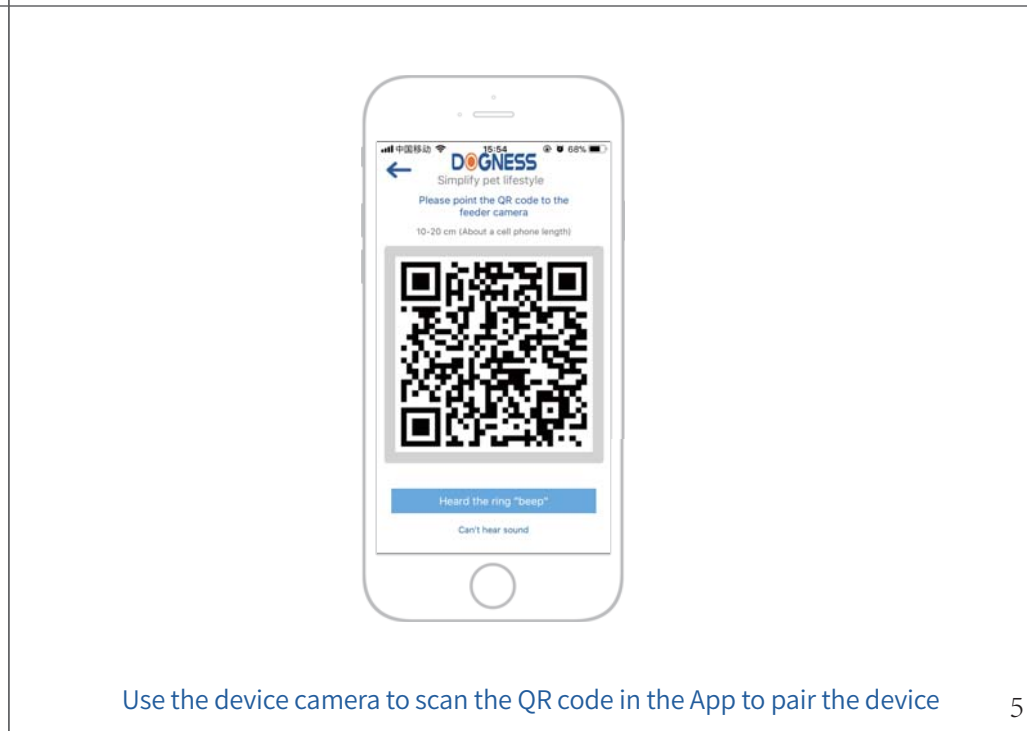

Use the device camera to scan the QR code in the App to pair the device

 5

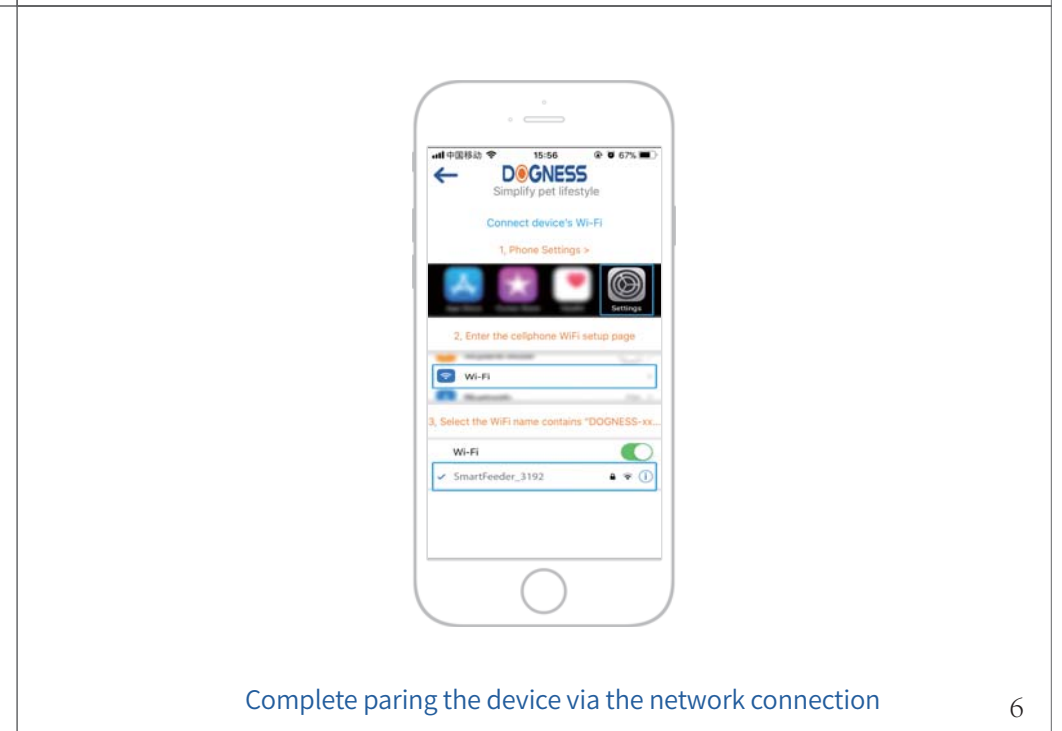


Complete pairing the device via the network connection

6




Note: Position the device within 10 meters from the WiFi source for best experience

 7

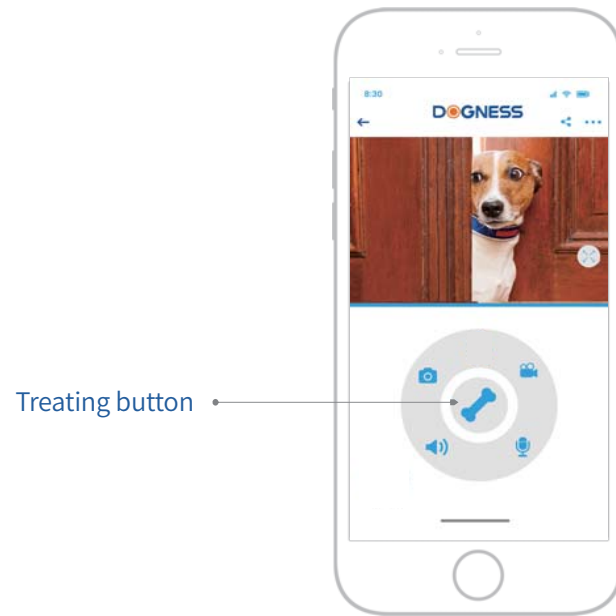

Main control

 8

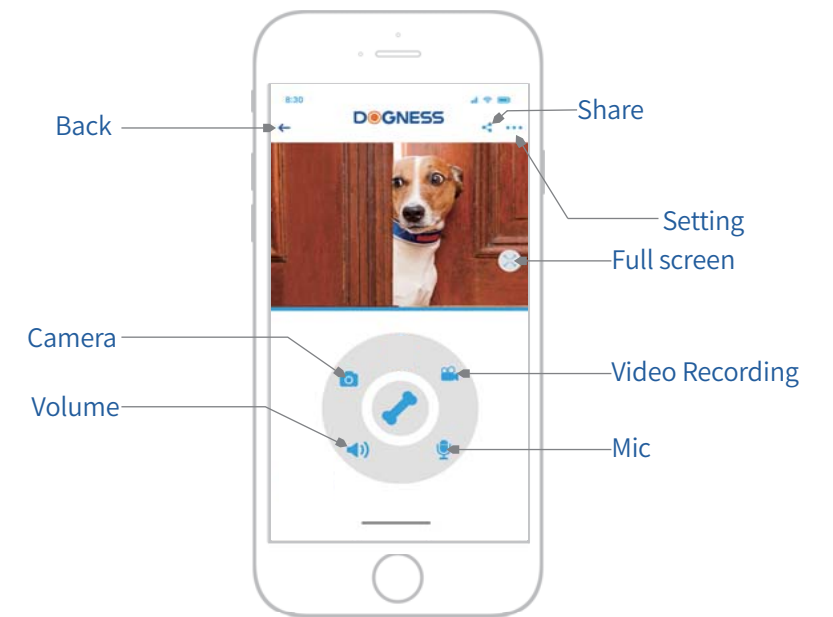

Other controls

9

Specifications:

Description: Dogness Smart CAM Treater

Product Size: L12.5*W12.5*H25 cm

Net Weight: 1.08 kg

Capacity: 4.5 lbs (around 220 g)

Product Material: ABS (except natural bamboo lid)

Camera: 165° wide angle HD with night vision

WiFi Frequency: 2.4 G

App Installation min requirement: Android 5.0 or IOS 7.0

Power Adapter:

Input : 110-240 V, 50/60 HZ, 0.4 A

Output : 5.0 V, 1000 mA

10



SET button: Short press to treat manually, hold for 5S to restore factory setting.
 Wifi Indicator light: Flashing green means connecting. Solid green means connection successful.

11



12

CAUTION:

1. Do not pull the power cord directly when plugging in or unplugging the adapter.
2. Do not put any foreign object in the device.
3. Do not disassemble this product by yourself.
4. Keep out of reach of children.
5. Do not use the adapter if the power cord is damaged or not working properly.
6. Indoor use only.
7. Dry food only for the snack container. Suggested snack size is between 5-15mm.
8. This product contains electronic components. It is not water proof. Do not place the device in wet areas.
9. Stop using the device and contact the customer service if there is a sign of malfunction such as abnormal odor, smoke, or heat.

13

FAQs:

1. Why there is no treat coming out when pressing the treat button from the App?

Answer:

- A. Probably the treat container is out of treats. Please fill in the treats.
- B. If the treat container is not empty but the App indicates no treat, please check if the food outlet is blocked or damaged. Clean the food outlet if necessary.
- C. Probably the network connection is delayed or interrupted. Please check your network connection and press the treat button again.

2. The video is not played smoothly? What should I do?

Answer: Please check your network connection and play the video again.

3. Unable to login the existing account, what should I do?

Answer: First, check if your network is connected appropriately.

Second, check if there is other user using your account.

If necessary, unload the App and re-download the App, and try again.

If you are using Android system, please try the following steps:

Mobile-> Setting-> Apps & notifications-> Dogness App-> Storage -> Clear data, then login again.

4. Forget account name, what should I do?

Answer: If there is no device in your account, suggest set up a new account. If there are smart devices in your account, please contact the customer service via the App with the ID numbers of the smart products, your account information will be re-sent to you.

5. If there is any other question, please visit following website :

<http://www.dognessnetwork.com/help/index.html>

14

FCC ID: 2AQ6Q-SP04

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.