

MANUAL


SBT1010BK

Bluetooth Speaker




SHARPER IMAGE®

SPEAKER

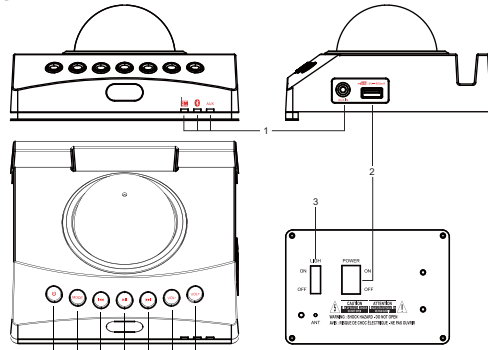

1. FUNCTION: FM Radio, Bluetooth, AUX IN. When you turn on the speaker, the default playing mode is FM Radio.
2. When turn on the speaker, the button will be with light, and the USB slot can charging to mobile phone/iPad.
3. It has separate ON/OFF button for Disco light control.
4. "STANDBY": Turn on/off speaker.
5. "MODE": Press to change playing model -- FM Radio, Bluetooth.
6. "SKIP-/TUNE-": Quickpress to skip to previous track / FM preset; press and HOLD to scan FM stations.
7. "SKIP+/TUNE+": Quickpress to skip to next track / FM preset; press and HOLD to scan FM stations.
8. "VOL-": Decrease volume.
9. "VOL+": Increase volume.
10. "PLAY/PAUSE" : In FM radio mode, quickpress to mute; press and HOLD to scan FM stations. In Bluetooth mode, quickpress to play/pause; press and HOLD to enter Bluetooth pairing. In AUX IN mode, quickpress to mute.

BUTTON ON REMOTE CONTROL

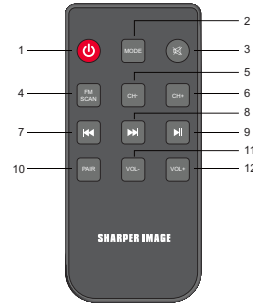

1. "STANDBY"KEY: Press to turn ON/OFF.
2. "MODE"KEY: Press to change the playing mode (FM—BT—Aux in).
3. "MUTE": Press to mute.
4. "FM SCAN": Under the playing mode of FM, press to AUTO scan.
5. "CH-"KEY: Press to FM preset.
6. "CH+"KEY : Press to FM preset.
7. "SKIP-": Quickpress for previous track. Press and HOLD for FM scan.
8. "SKIP+": Quickpress for next track. Press and HOLD for FM scan.
9. "PLAY/PAUSE": Under the playing mode of Bluetooth, press for play/pause. Under the playing mode of FM and Aux in, press for mute.
10. "PAIR": Under the playing mode of Bluetooth, press for Bluetooth pair.
11. "VOL- ": Press to decrease volume.
12. "VOL+": Press to increase volume.

OPERATION

1. Bluetooth pairing : Change the playing mode of speaker to be Bluetooth. When the Bluetooth enabled device finds the speaker, select SBT1001 from the list of found device. If required, enter the password 0000. Select OK or Yes to pair the two units. After a successful registration, a tone will sound and the buttons will stop blinking.
2. It has three LED indicator light (FM, Bluetooth, Aux-in).
Under FM playing mode, FM indicator is bright. When searching, the FM indicator will be blinking.
Under Bluetooth playing mode, Bluetooth indicator is bright. When pairing or Mute, the indicator will be blinking.
Under Aux in playing mode, Aux in indicator is bright. When MUTE, the indicator will be blinking.
3. FM can save 20 stations

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions
- 2) Keep these instructions
- 3) Read all warnings
- 4) Follow all instructions
- 5) Do not use this apparatus near water
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, hood, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/appliance combination to avoid injury from tipover.



- 13) Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is frayed, liquid has been spilled or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) WARNING: Do not touch the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

- 17) This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connected to electrical earth.
- 18) A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunlight, fire or the like.
- 19) CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- 20) The remote control supplied with this product contains a coin button cell battery. If the construction cell battery is swallowed, it can cause severe internal burns in just 12 hours and can lead to death.
- 21) Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- 22) If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



WARNING: SHOCK HAZARD - Do Not Open.
AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

CAUTION -
DISCONNECT POWER CORD BEFORE CHANGING FUSE.
REPLACE WITH SAME TYPE OF FUSE.
DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.
REPLACE ONLY WITH THE SAME OF EQUIVALENT TYPE.

ATTENTION:
DÉBRANCHER AVANT DE REMPLACER LE FUSIBLE.
UTILISER UN FUSIBLE DE RÉCHAUFFE DE MÊME TYPE.
DANGER D'EXPLOSION SI LA PILE N'EST PAS REMPLACÉE CORRECTEMENT.
NE REMPLACER QUE PAR LE MÊME TYPE OU UN TYPE ÉQUIVALENT.

WARNING
DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

CONSIGNES IMPORTANTES DE SÉCURITÉ

- 1) Lisez ces instructions.
- 2) Conservez ces instructions.
- 3) Répondez tous les avertissements.
- 4) Suivez toutes les instructions.
- 5) Ne pas utiliser cet appareil près de l'eau.
- 6) Nettoyer seulement avec un chiffon sec.
- 7) Ne pas bloquer la ventilation ouverte. Install conformément aux instructions du fabricant.
- 8) Ne pas installer auprès toute source de chaleur comme les radiateurs, registres de chaleur, poêles ou autres appareils (y compris les amplificateurs) qui produisent de la chaleur.
- 9) Ne supprimez jamais la sécurité de la fiche polarisée ou d'échouement. Un bouton polarisé a deux têtes avec une est plus large que l'autre. Une fiche de mise à la terre possède un bouton grounding large. Le tige large ou le bouton tactile est fourni pour votre sécurité. Si la fiche fournie ne rentre pas dans votre prise, consultez un électricien pour remplacer la prise électrique.
- 10) Protégez le cordon d'alimentation ne soit pié ou pincé particulièrement au niveau des bouchons, receptacles commodes, et au point où il sortent de l'appareil.
- 11) Protégez que des frictions / accessoires spécifiés par le fabricant.
- 12) Utilisez uniquement le chariot, stand, trépied, support ou table spécifiés par le fabricant ou vendus avec l'appareil. When un chariot ou un support est utilisé, faites attention lorsque vous déplacez l'ensemble chariot / support pour éviter de vous blesser plus.



- 13) Dérivez l'appareil pendant les orages ou si installé pendant de longues périodes de temps.
- 14) Contre tout risque d'explosion, le fusible a été renforcé et des objets sont interdits dans l'appareil à été exposé à la pluie ou l'humidité, ne fonction ne pas normalement, ou s'il est tombé.
- 15) ATTENTION: Le pile bouton ne contient aucun dispositif de détection, le dispositif de détection doit rester facilement accessible.
- 16) ATTENTION: Pour réduire le risque d'écoulement ou de choc électrique, n'ouvrez pas cet appareil à la pluie ou appareils mouillés. Ne doit pas être placé sur l'appareil.

- 17) Cet équipement est une classe II ou double isolation: appareil électrique. Il a été conçu de telle façon qu'il ne nécessite pas une connexion à la terre de sécurité électrique.
- 18) Batterie (batterie ou piles installées) ne doit pas être exposée à une chaleur excessive comme le soleil, le feu, etc.
- 19) ATTENTION: Danger d'explosion si la pile n'est pas remplacée correctement. Ne remplacer que par le même type ou un type équivalent.
- 20) Le compartiment batterie avec ce produit contient une pile bouton de pile de rechange. Si la pile bouton / bouton est avalé, il peut causer des brûlures / lésions graves en seulement 2 heures et peut conduire à la mort.
- 21) Gardez les piles neuves et d'occasion à partir des enfants. Si le compartiment de la batterie ne se ferme pas correctement, arrêtez d'utiliser le produit et garder les piles enfants.
- 22) Si vous pensez que les batteries peuvent avoir été avalé ou placé à l'intérieur d'une partie du corps, consultez immédiatement un médecin.



WARNING: SHOCK HAZARD - Do Not Open.
AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

CAUTION -
DISCONNECT POWER CORD BEFORE CHANGING FUSE.
REPLACE WITH SAME TYPE OF FUSE.
DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.
REPLACE ONLY WITH THE SAME OF EQUIVALENT TYPE.

ATTENTION:
DÉBRANCHER AVANT DE REMPLACER LE FUSIBLE.
UTILISER UN FUSIBLE DE RÉCHAUFFE DE MÊME TYPE.
DANGER D'EXPLOSION SI LA PILE N'EST PAS REMPLACÉE CORRECTEMENT.
NE REMPLACER QUE PAR LE MÊME TYPE OU UN TYPE ÉQUIVALENT.

WARNING
DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. "This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation."

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.