


SBT1025 User Manual

FRONT

BACK



SHARPER IMAGE
Mega Sound System

User Guide
SBT1025

In the Box


- 3.5mm to RCA Cable
- AC Power Cable

Pairing the Speaker

- Turn the speaker ON by flipping the [POWER] switch on the back panel of the speaker to the ON position.
- The speaker defaults to AUX mode. Long press the [▶/||/M] button to switch to Bluetooth mode.
- Set your Bluetooth-enabled device to search for Bluetooth devices.
- When the Bluetooth-enabled device finds the speaker, select "SBT1025" from the list of found devices.
- After a successful pairing, a tone will be heard and the Bluetooth LED will stay solid RED.

If a previously paired device is in range when the speaker is turned on, the speaker will connect to it automatically.

Location of Controls

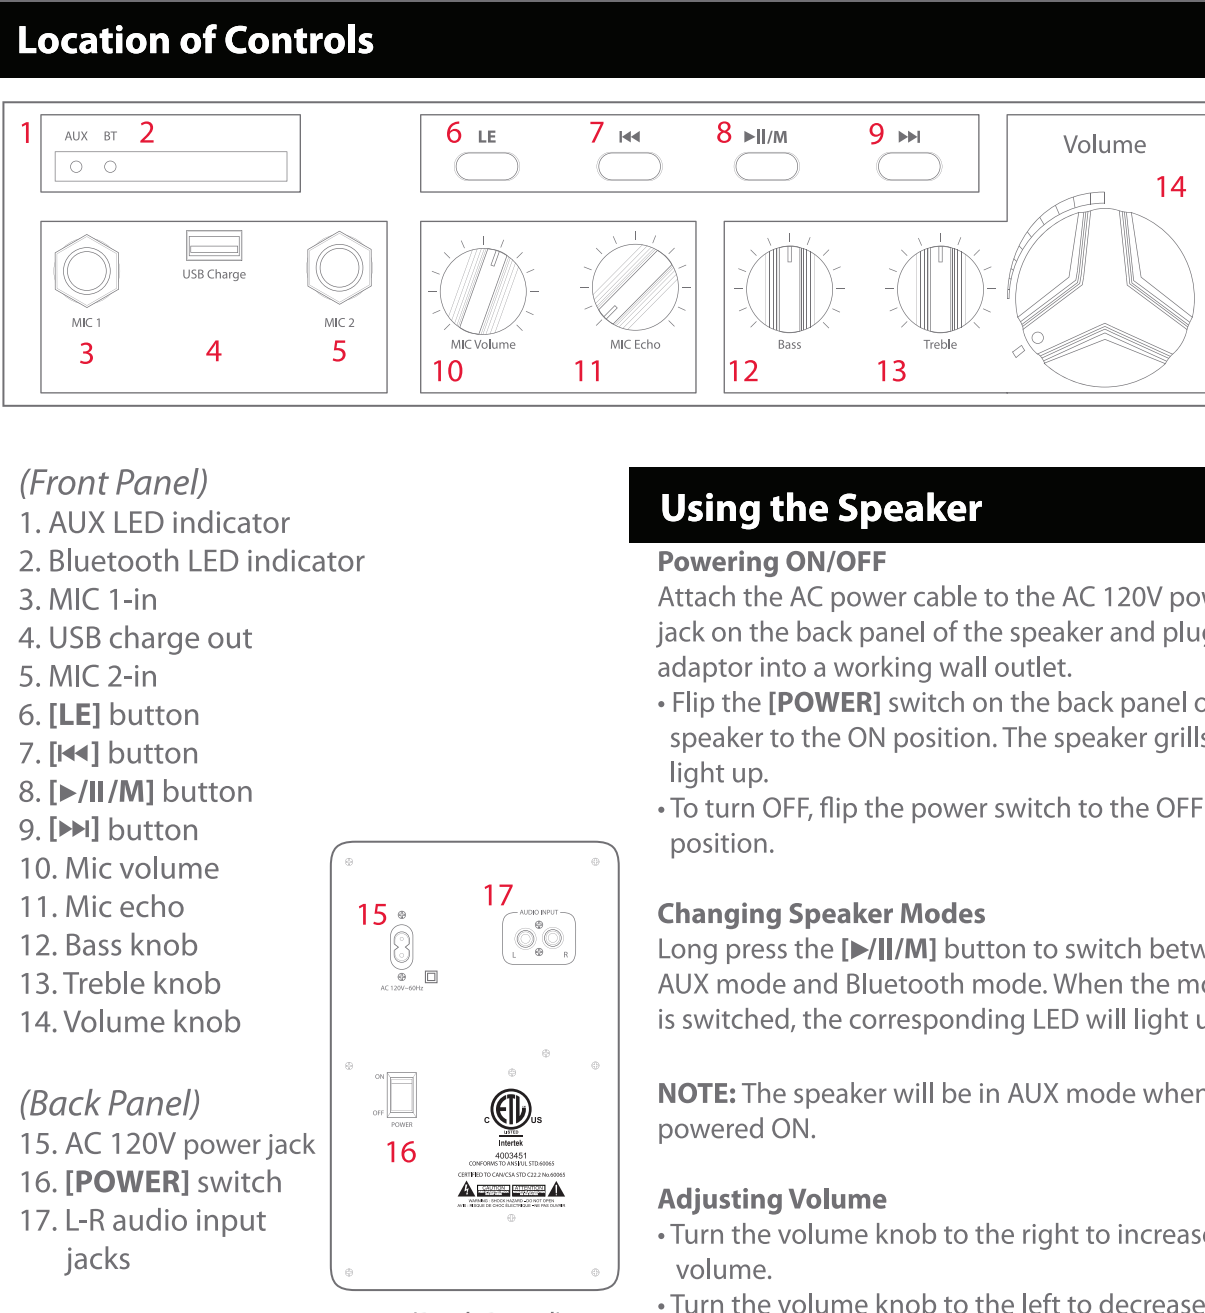

(Front Panel)

- AUX LED indicator
- Bluetooth LED indicator
- MIC 1-in
- USB charge out
- MIC 2-in
- [LE] button
- [▶/||/M] button
- [▶/||/M] button
- [▶/||/M] button
- [▶/||/M] button
- Mic volume
- Mic echo
- Bass knob
- Treble knob
- Volume knob

(Back Panel)

- AC 120V power jack
- [POWER] switch
- L-R audio input jacks

Using the Speaker

Powering ON/OFF
Attach the AC power cable to the AC 120V power jack on the back panel of the speaker and plug the adaptor into a working wall outlet.
• Flip the [POWER] switch on the back panel of the speaker to the ON position. The speaker grills will light up.
• To turn OFF, flip the power switch to the OFF position.

Changing Speaker Modes
Long press the [▶/||/M] button to switch between AUX mode and Bluetooth mode. When the mode is switched, the corresponding LED will light up.
NOTE: The speaker will be in AUX mode when powered ON.

Adjusting Volume
• Turn the volume knob to the right to increase volume.
• Turn the volume knob to the left to decrease volume.

Using the Lights
There are six light modes on the SBT1025. Press the [LE] button to cycle through flashing, multi-color flashing, responsive and strobe modes.

Adjusting Bass and Treble Volume
• Turn the bass knob to the right to increase the bass output of media playback.
• Turn the treble knob to the right to increase the treble output of media playback.

Playing Music
To enjoy music wirelessly on your speaker, make sure the speaker is properly paired to your Bluetooth-enabled device. If you are pairing the device for the first time, please consult the "Pairing the Speaker" section of this user guide.

Play/Pausing Music
• Press the [▶/||/M] button to pause media playback.
• Press the [▶/||/M] button again to resume media playback.

Skipping Songs
• Press the [◀] button to skip to the previous song.
• Press the [▶] button to skip to the next song.

Using the Mic Inputs

The speaker can support up to two mics or guitars (not included). To use a mic or guitar, plug a 1/8" microphone cable into either the MIC 1 or MIC 2 jack and the other end into a mic or guitar's input jack.

Adjusting Mic Volume
• Turn the Mic Volume knob to the right to increase mic volume.
• Turn the Mic Volume knob to the left to decrease mic volume.


Adjusting Mic Echo
• Turn the Mic Echo knob to the right to increase mic echo.
• Turn the Mic Echo knob to the left to decrease mic echo.

NOTE: Music continues to play while using microphones.

Using as a Wired Speaker


To use the speaker as a wired device, attach the 3.5mm end of the 3.5mm to RCA cable to your device's headphone jack. Attach the RED connector to the right audio jack on the back panel and the WHITE connector to the left audio jack on the back panel.

If the speaker is not already in AUX mode, long press the [▶/||/M] button to switch to AUX mode.

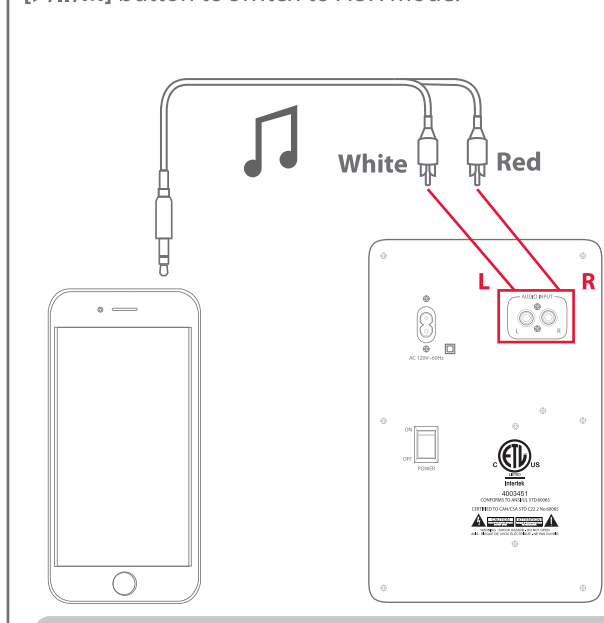


Charging USB Devices

The speaker can be used to charge USB devices such as mobile phones or tablets. To charge a device, make sure the speaker is plugged in and turned ON and attach the USB charging cable to the USB Charge port on the front panel of the speaker.

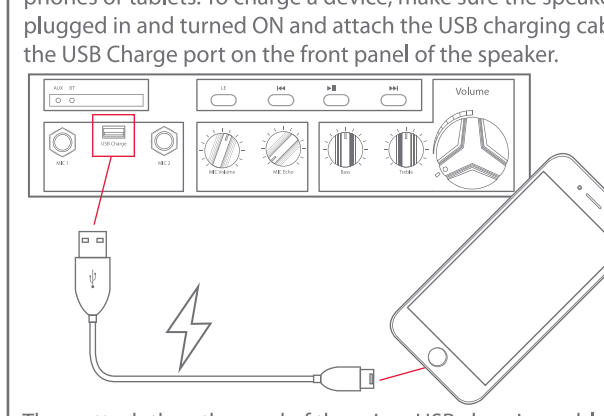

NOTE: to play music from a wired device use the AUX jack, the USB Charge port is **ONLY FOR CHARGING**. It will not play music.

Safety Instructions



WARNING: This product is not to be used near water. Do not use this product near water. Do not use this product near open flames, candles, or other heat sources. Do not use this product near heat registers, stoves, or other heat sources (including amplifiers) that produce heat. Do not use this product near a fireplace, wood stove, or other heat source. Do not use this product near a hot tub, hot water heater, or other heat source. Do not use this product near a swimming pool, hot tub, or other heat source. Do not use this product near a hot car engine, hot car exhaust, or other heat source. Do not use this product near a hot radiator, hot furnace, or other heat source. Do not use this product near a hot oven, hot stove, or other heat source. Do not use this product near a hot grill, hot broiler, or other heat source. Do not use this product near a hot toaster, hot coffee maker, or other heat source. Do not use this product near a hot hair dryer, hot curling iron, or other heat source. Do not use this product near a hot iron, hot clothes steamer, or other heat source. Do not use this product near a hot熨斗, hot clothes iron, or other heat source. Do not use this product near a hot熨斗, hot clothes iron, or other heat source.

Legal Information

READ CAREFULLY AND KEEP THIS MANUAL

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Limited Warranty

90 Days Limited Warranty
In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Call the Customer Support number located below, or go to our website portal to receive a SRO number.
- Provide proof of the date of purchase within the package (dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value. If examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:
Southern Telecom, Inc.
Attention: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:
Customer Support:
Phone: 1-877-768-8481
Monday-Friday 8AM-10PM(EST)
www.southerntelecom.com
Click on "Product Support"

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:
• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY A.I.T. INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. A.I.T. INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Sharper Image® name and logo are registered trademarks. Manufactured and marketed by Southern Telecom under license. © Sharper Image. All Rights Reserved.

SHARPER IMAGE

东莞耳神电声科技有限公司

型号: ER-287HS (STI SBT1025BK)美国说明书

设计:

技术要求

1. 检验外观是否良好,不可有异色、杂色、印刷模糊、漏字、重影、污迹、破损、断字等。
2. 适力擦拭丝印部分,应无掉油、模糊等不良现象。
3. 丝印颜色是否符合工厂或客户要求。
4. 检测材质是否符合要求。

规格: 255*330cm

审核:

材质: 128G 双铜彩色双面印刷

批准:

料号: E38-A287H-000

时间:

图号:

比例:

版次:

页次: 1/1