

 
SHARPER IMAGE®

5.1-Channel Home Theater Sound System




User Guide
SBT5200

In the Box

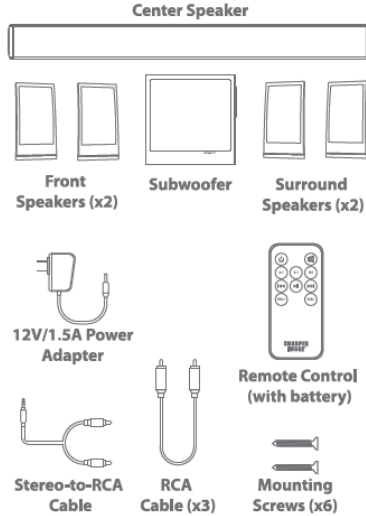


Location of Controls

 - (Back of Subwoofer)
- [MODE] Button: Change input mode
 - [VOLUME] Knob: Adjust volume
 - Audio Outputs
 - [POWER] Switch: Turn system ON/OFF
 - 12V/1.5A DC Power Jack
 - 5.1 Audio Input (Red, solid outline, Includes the 2.1 Audio Input)
 - 2.1 Audio Input (Black, dotted outline)

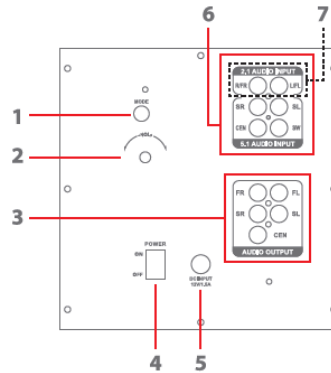

 - [] Button: Enter/leave standby mode
- [X] Button: Mute/Unmute volume
- [2.1] Button: Switch to 2.1 channel input
- [BT] Button: Enter Bluetooth pairing mode
- [5.1] Button: Switch to 5.1 channel input
- [▶] Button: Play/pause media playback
- [◀] / [▶] Buttons: Skip to previous and next tracks
- [VOL+] / [VOL-] Buttons: Adjust volume

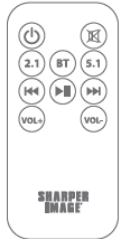


Installing/Replacing the Remote Control Batteries
To replace or install the remote control battery, push and slide the battery door out from the remote control. Replace the battery with a new CR2025 battery with the positive (+) polarity facing up.



NOTE: There is a protective plastic tab inserted into the battery door of the remote control. When using for the first time, gently pull the protection tab extending out of the remote control's battery door.

Setting Up the System

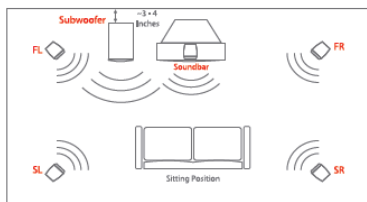

Placing the Speakers

Generally, speakers should be placed as indicated in the diagram above.

The **Front Left** (FL) and **Front Right** (FR) speakers should be at the front-left and -right of sitting position, with the **Surround Left** (SL) and **Surround Right** (SR) placed to the back-left and -right of sitting position.

The **Center Speaker** (or "Soundbar") should be placed directly in front of sitting position.

The **Subwoofer** is typically placed on the floor and in the corner of a room (or just close to a wall) to naturally amplify the bass from the speaker.

NOTE: A distance of ~3 - 4 inches between the subwoofer and the closest wall is recommended, as the sound from the subwoofer can easily become "muddy" and distorted to the ear.

Mounting the Speakers

NOTE: Mounting the speakers is not required to using the speaker system, the speakers can also be set on any flat, stable surface with enough area to place the speakers.

Remove the contents of the speaker system from its packaging and locate the **Front** and **Surround** Speakers.


On the back of all of these speakers are mounting holes that allow you to hang the speaker on a wall.



NOTE: After selecting where you would like the speakers to be placed, check that the speaker cables will be long enough to reach the subwoofer.

Using a power drill (not included), drill the supplied mounting screws into the exact location on your wall that you would like the speakers to be placed, then hook the speaker onto the screw.

To mount the **Soundbar**, select the location you would like to place the speaker, mark the location of exactly where one screw will be, then measure a distance of **30 and 5/16 inches** which will be the location of the second screw.

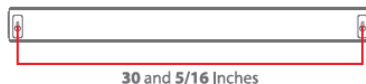


Audio Output Panel

Plugging In the Speakers


Once the speakers have been properly mounted or placed, you will need to plug them into the Audio Output panel on the back of the subwoofer. Plug the cables for each speaker into the corresponding Audio Output jack:

- FR - Front Right Speaker
- FL - Front Left Speaker
- SR - Surround Right Speaker
- SL - Surround Left Speaker
- CEN - Center Speaker

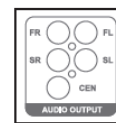

Powering the System

After the speakers have been plugged in, plug the pin of the supplied 12V/1.5A power adapter into the DC IN Jack on the back of the subwoofer. Plug the adapter into a working wall outlet.

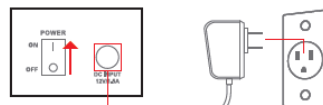

Move the [POWER] switch to the ON position to power the system. While the switch is ON, the system will be in working mode, press the [] button on the remote control to put the system in standby.

The AUX/5.1CH LED indicator on the front of the subwoofer will turn RED when powered ON.


Audio Input Panel (AUX/5.1CH)

Once the system is set up and powered ON, media-playing devices can be connected via the Audio Input panel on the back of the subwoofer:

Using the AUX/2.1CH Input

In the diagram to the left, the area outlined in **dotted-red** indicates the 2.1 Audio Input, used for a simple left and right channel input.

Using the supplied Stereo-to-RCA cable, plug the red RCA connector into the R/R jack and the white RCA connector into the L/L jack.

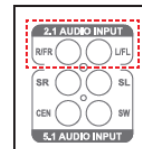

Plug the 3.5mm connector into the headphone or AUX-OUT jack on your media-playing device.

Press the [MODE] button on the back of the subwoofer or the [2.1] button on the remote control to switch to the 2.1CH input. The AUX/5.1CH LED indicator will turn RED.

Using the 5.1CH Input

NOTE: Consult the user manual for your media-playing device, as it may have different names for the connectors or channels.


Using the 3 supplied RCA cables, connect each to all 6 ports on the Audio Input panel, then plug the other ends into the corresponding audio output jacks on your media-playing device.

Press the [MODE] button on the back of the subwoofer or the [5.1] button on the remote control to switch to the 5.1CH input. The AUX/5.1CH LED indicator will turn RED.

Pairing to the System (Bluetooth)

1. After setting up the speaker, press the [MODE] button on the back of the subwoofer or the [BT] button on the remote control to switch to Bluetooth mode. A voice will be heard indicating the mode and the Bluetooth LED indicator on the front of the subwoofer will **flash BLUE**.
2. Set your mobile device to search for Bluetooth devices. When your mobile device finds the speaker, select **SBT5200** from the list of found devices.
3. After a successful pairing, a tone will be heard and the Bluetooth LED indicator will turn **solid BLUE**.

On an iOS or Android Device Go to Settings -> Bluetooth

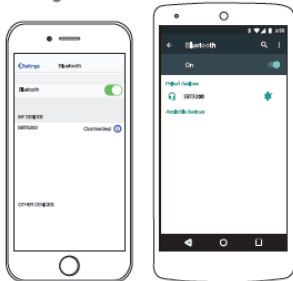

Using the System

Powering the System ON/OFF

- Move the [POWER] switch to the ON/OFF position to power the speaker ON or OFF.
- Press the [⏻] button on the remote control to enter/leave standby mode. While in standby mode, the system will be on low power and will not be functional until you leave standby.

Unpair Bluetooth

- Long press the [≡] button on the remote control to unpair any device currently paired via Bluetooth to the speaker system.

Changing Input Mode

- Press the [MODE] button on the back of the subwoofer to cycle through Auxiliary/5.1CH input and Bluetooth input.
- Press the [2.1] [5.1] [BT] buttons on the remote control to switch to your desired input.
- The LED indicator on the front of the subwoofer will display what input mode the system is currently using.

Adjusting Volume

- The [VOLUME] knob on the back of the subwoofer or the [VOL-] / [VOL+] buttons on the remote control can be used to adjust volume.
- Press the [M] button on the remote control to mute/unmute volume. While the system is muted, the LED indicators on the front of the subwoofer will **alternately flash RED and BLUE**.

NOTE: If the system is connected to a video-playing device, such as a DVD player or a smart TV, the controls for this system will **ONLY** affect the audio of playback. Pausing and resuming video, skipping scenes, etc. is still controlled by your video-playing device.

Playing Music

To enjoy music wireless on your system, make sure you are either paired to a Bluetooth-enabled device or the system is properly set up and connected to a media-playing device. Consult the previous sections of this user manual, **Audio Input Panel (AUX/5.1CH)** and **Pairing to the System (Bluetooth)** for more information.

Playing/Pausing Music

- Press the [⏸] button on the remote control to pause audio playback.
- Press the [▶] button again on the remote control to resume audio playback.

Skipping Tracks

- Press the [⏮] button on the remote control to skip to the next track.
- Press the [⏪] button on the remote control to skip to the previous track.

Legal Information

READ CAREFULLY AND KEEP THIS MANUAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Rain/Moisture Warning

- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
- Do not submerge in water.
- Do not open this product or attempt to repair the unit yourself should it not be working.

Limited Warranty

90 Days Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Call the customer support number, located below, or go to our website portal to receive an SRD number.
- Provide proof of the date of purchase within the package (dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Customer Service Dept. 36
c/o Southern Telecom
400 Kennedy Drive
Sayreville, NJ 08872

Should have any questions or problems concerning this product, please contact our customer service department:

1-877-768-8881
Monday - Friday, 8AM - 10PM (EST)

SouthernTelecom.com
Click on Product Support

Warranty Service Not Provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY A.T.I., INC. ITS AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. A.T.I., INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

2017 Sharper Image® name and logo are registered trademarks. Manufactured, marketed, and distributed under license by Southern Telecom, Inc. Brooklyn, NY 11220. © Sharper Image. All Rights Reserved.

Android, Google and the Google Play store logo are registered trademarks of Google Inc., used with permission.

Apple, iOS, and the App Store are registered trademarks of Apple Inc., registered in the U.S. and other countries.

All other trademarks and trade names are those of their respective owners.

SHARPER IMAGE®

Printed in China
v1.08/2017