

hp HP FM710 Wireless Mouse
Instructions for use



1. The package contents

Wireless mouse	1PCS
The USB receiver	1PCS
AA alkaline battery	2PCS
Instructions for use (harmful substance element table)	1PCS
Product warranty card	1PCS

2. Schematic diagram of the product (Figure 1):

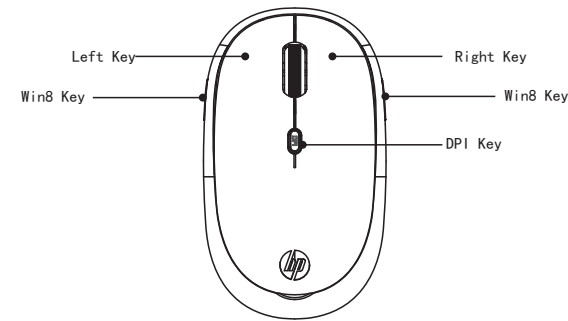 


Figure 1

3. Installation instructions

Step 1,
Remove the USB receiver from the packing, plugged into the computer's USB port.



Step 2,
According to the figure will open the mouse button, a day or two AA batteries into the battery slot (note the battery positive and negative polarity), cover the button, the power switch at the bottom of the dial to ON mouse. (Fig. 2/3/4)he ON. (Fig. 2/3/4)

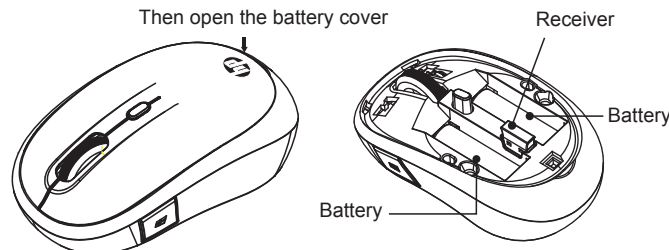 


Figure 2

Figure 3

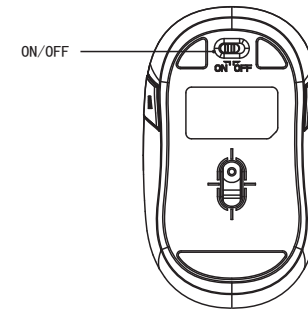 


Figure 4

Step 3,
To carry out and when not in use can also be USB receiver into the receiver slot within the mouse. (Figure 5)

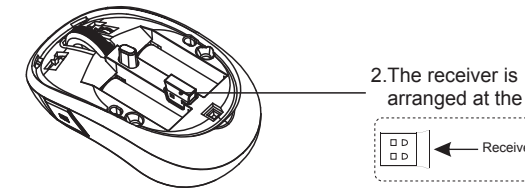 


Figure 5

DPI switch: DPI switch key and click the mouse at the top, the mouse resolution can be sequentially switched between 1000/1600DPI, DPI switching, LED lights flashing a represents the current 1000DPI, blink two times representing the current 1600DPI.

Windows8 switch: click the mouse button on the Windows, instantly reach Windows8 start the interface, click again to return to the traditional desktop interface.

Intimate tip:

1. when you do not use the mouse, the mouse can be the power switch at the bottom of the dial to OFF, prolonging the service life of the battery.
2. Note: the habit of battery life as the personal use of the mouse may be different. Do not put the battery discarded and thrown into the fire, when replacing the batteries, please the old battery into the battery recycling box.

4, support system:

Windows ME/2000/XP/Vista/Win7/Win8

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental saferecycling.